



**DETAILS AFTER REMOVAL
FROM SUPPORTS**


 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

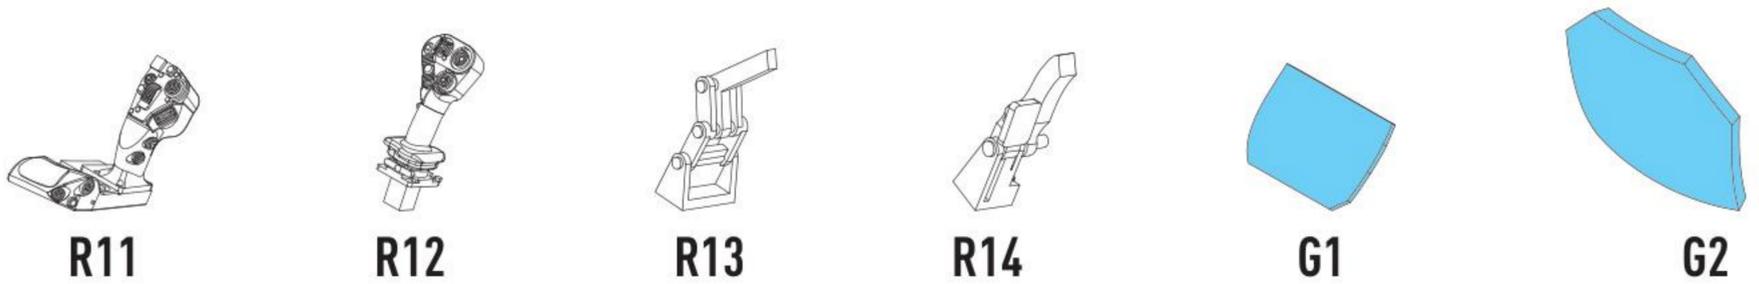


PARTS G1 AND G2 SHOULD BE COATED WITH GLOSSY VARNISH BEFORE USE

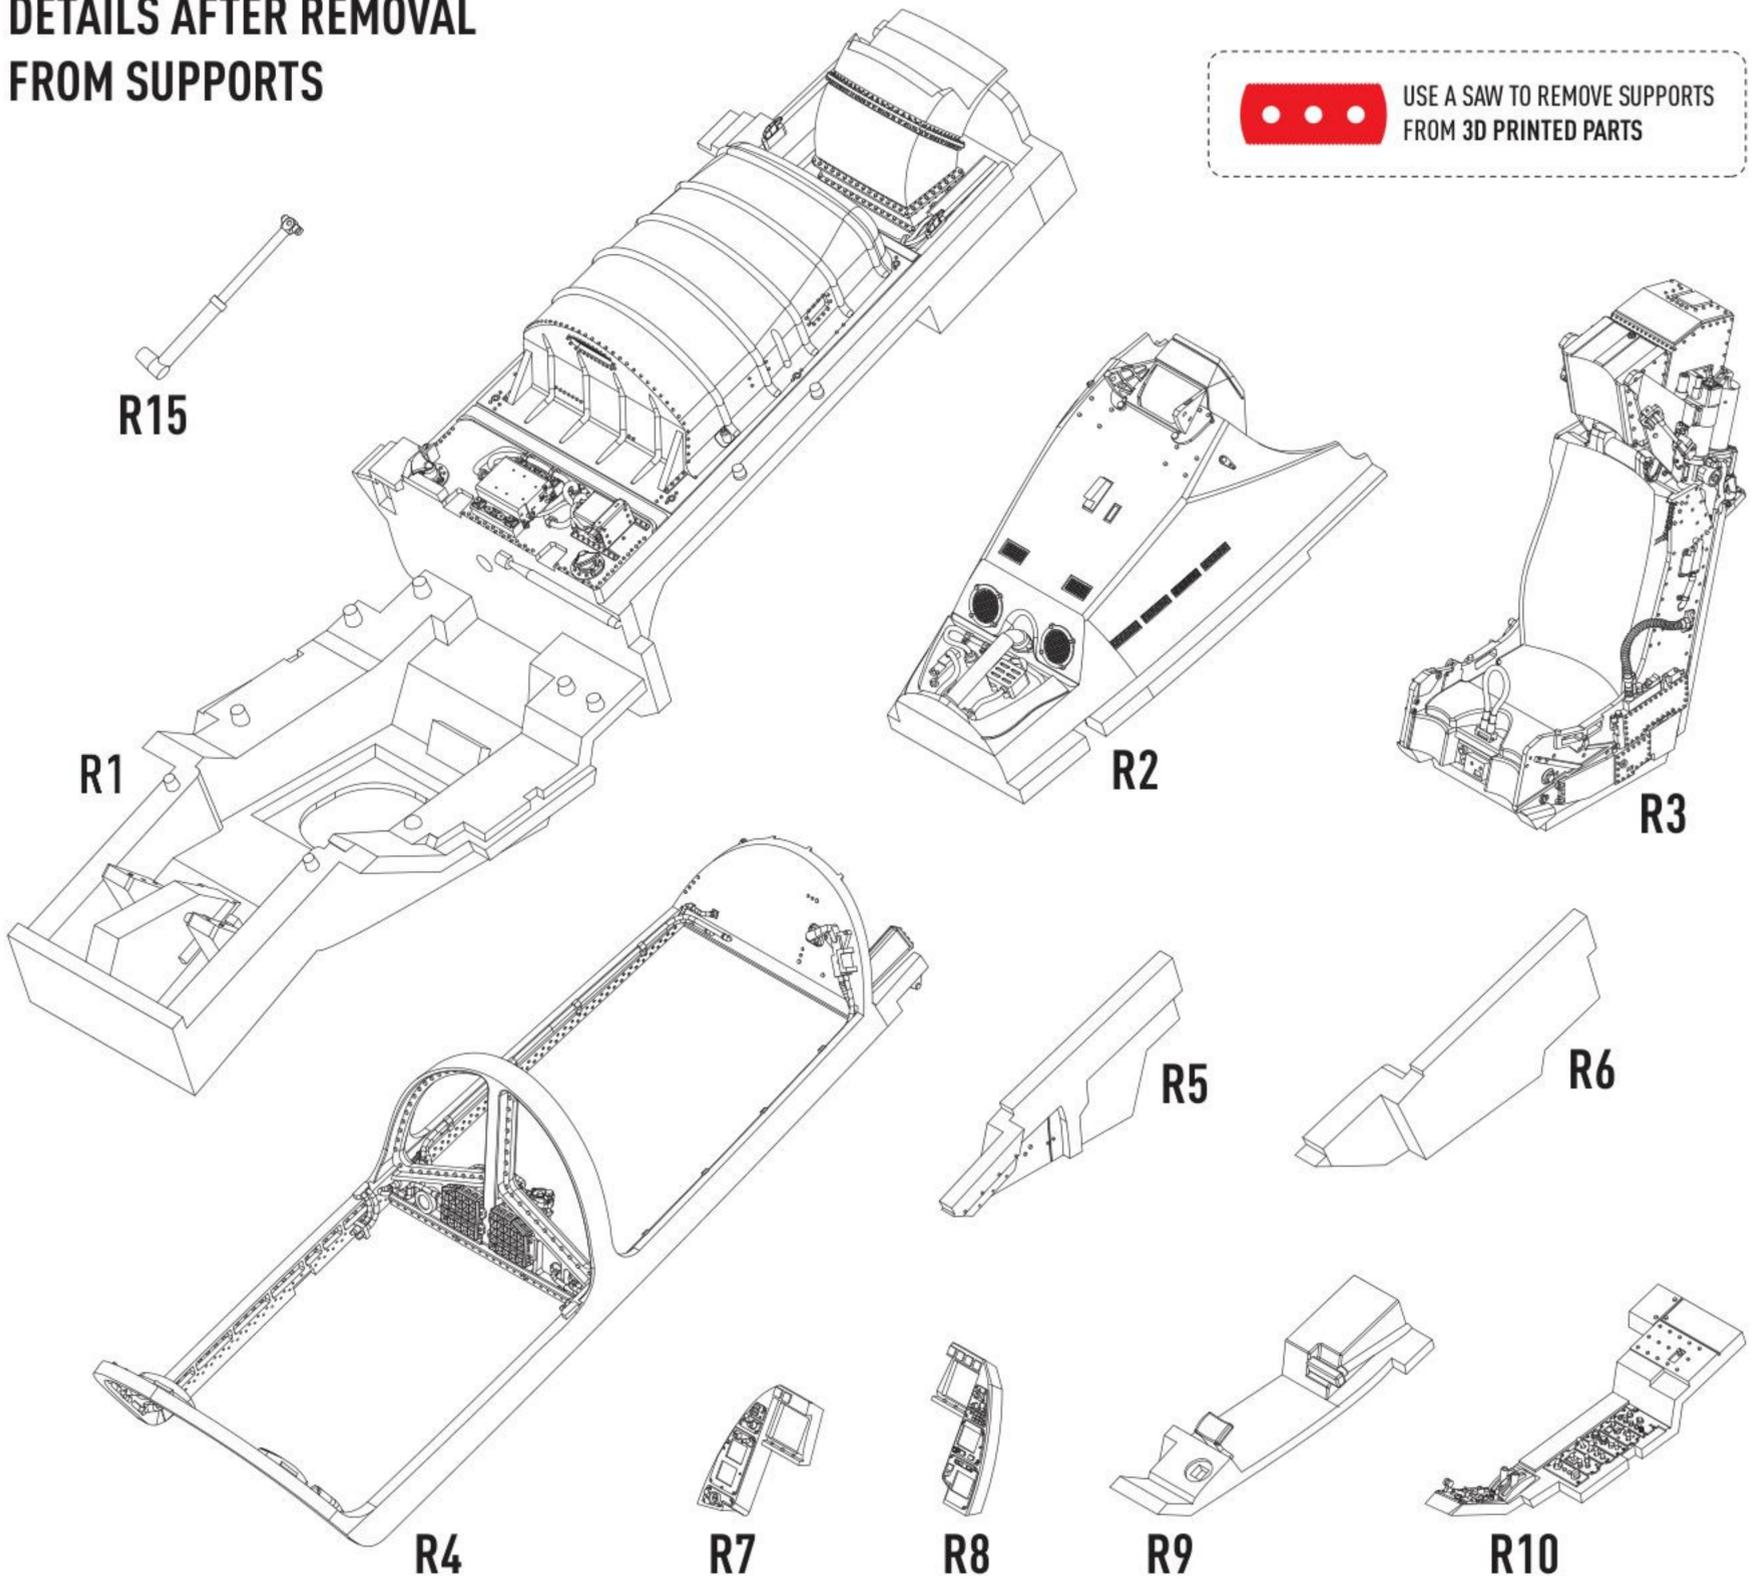


1

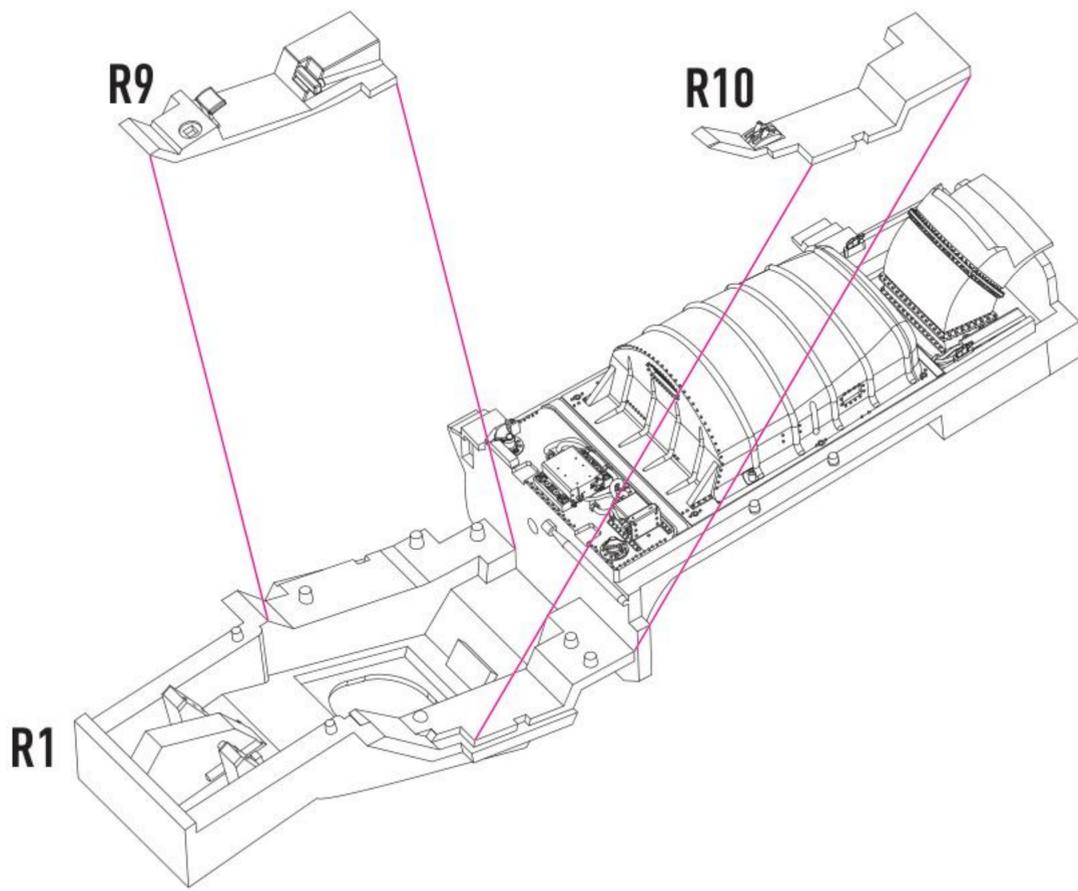


2

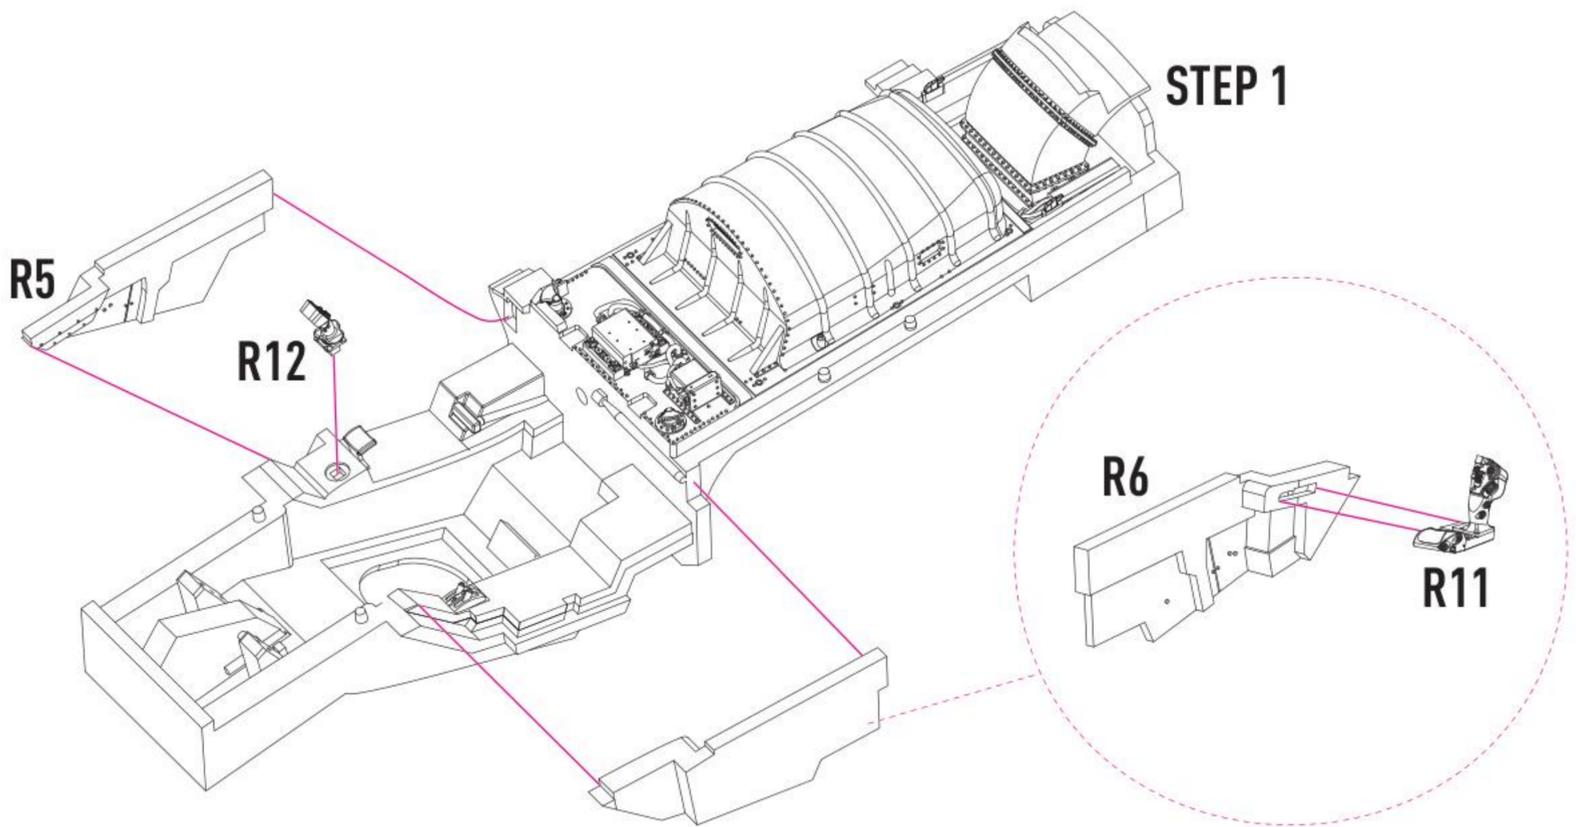

3

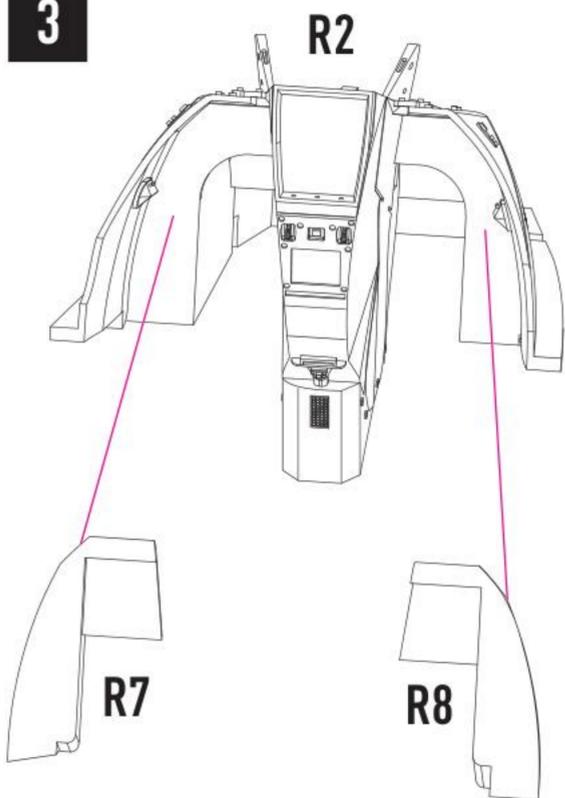


4

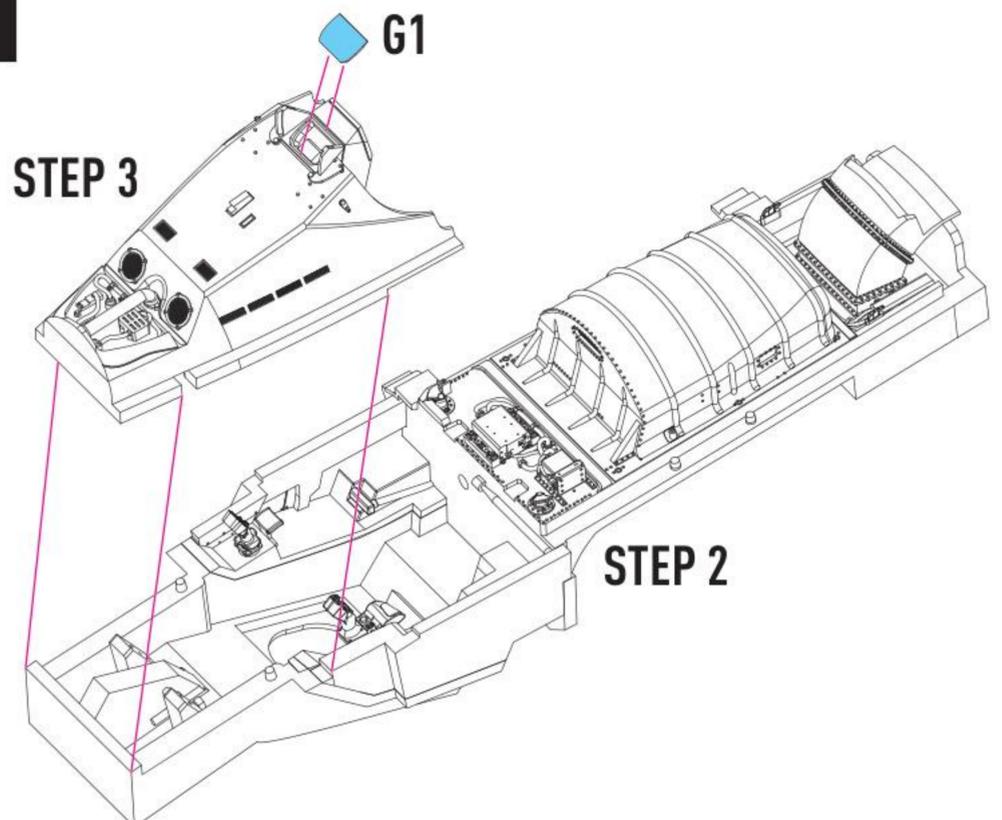


5

PART B15
FROM THE KIT

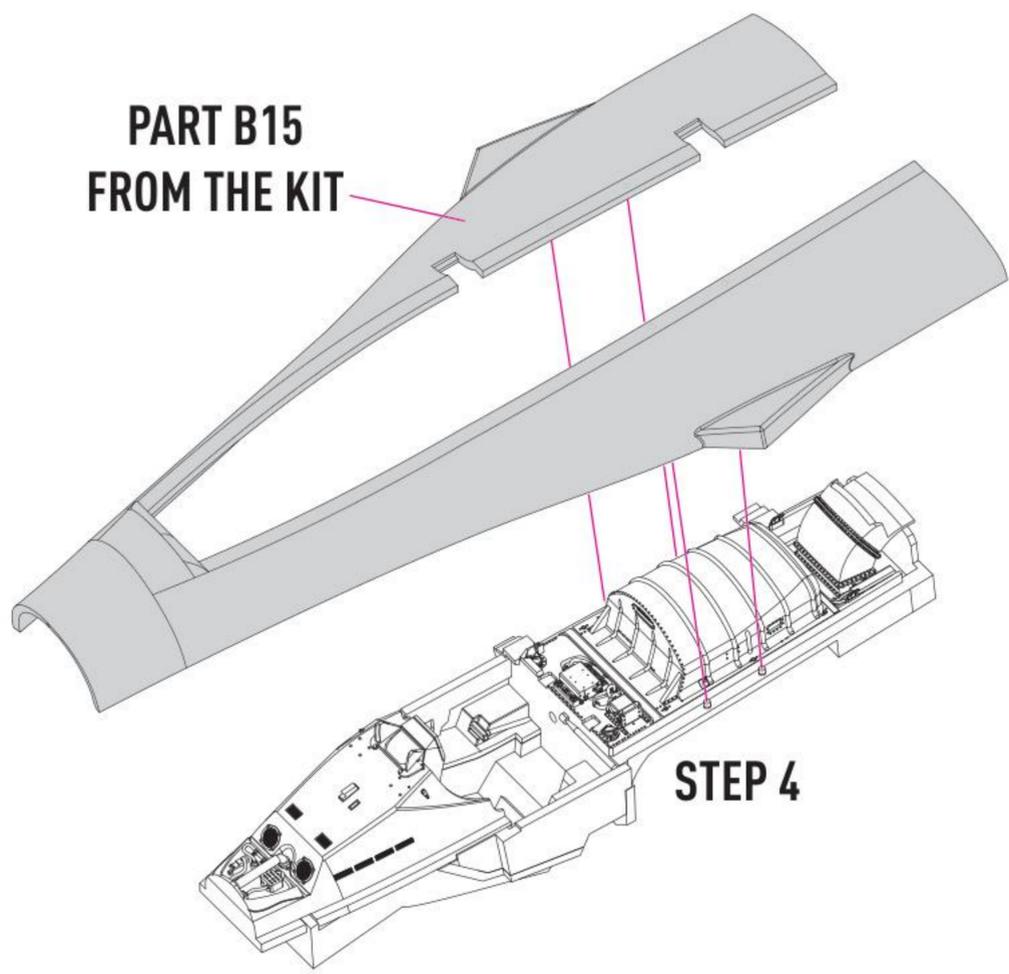


6


PART E74
FROM THE KIT

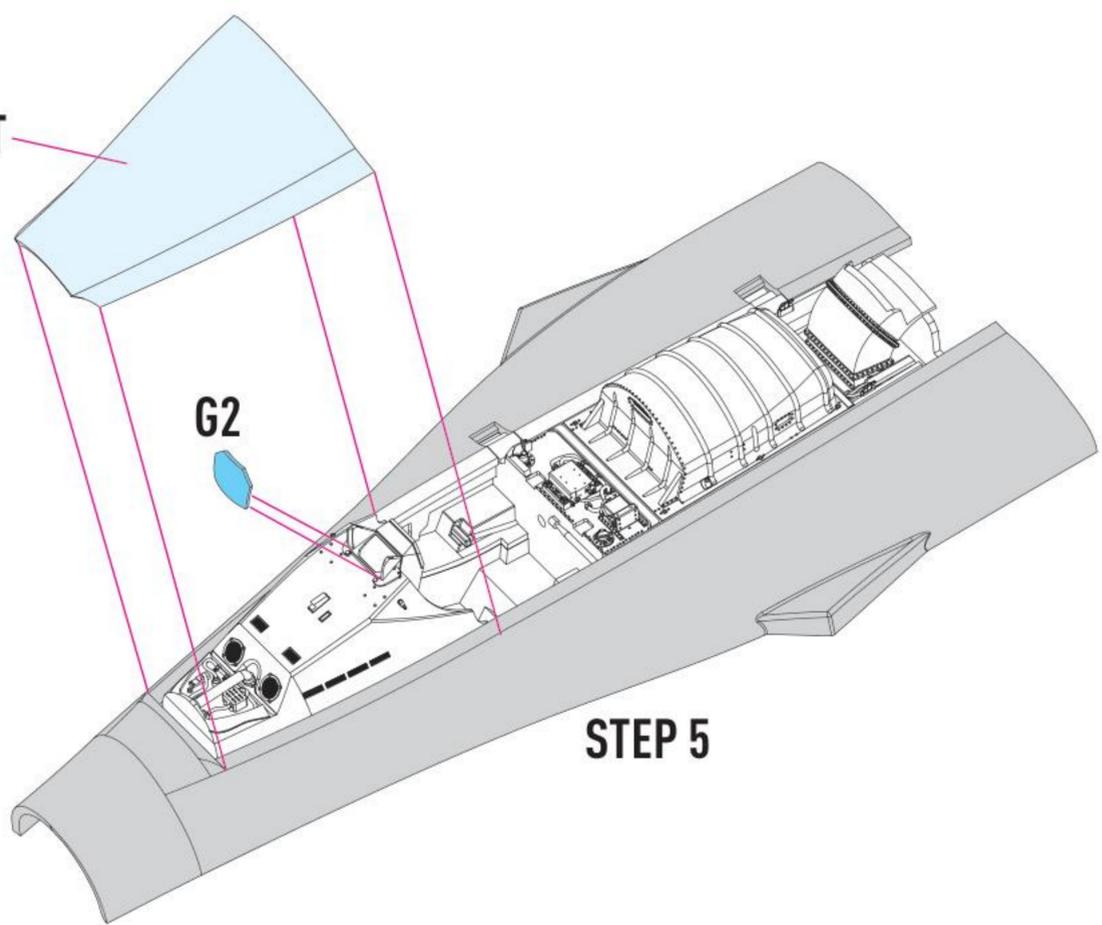



7

PART E70
FROM THE KIT

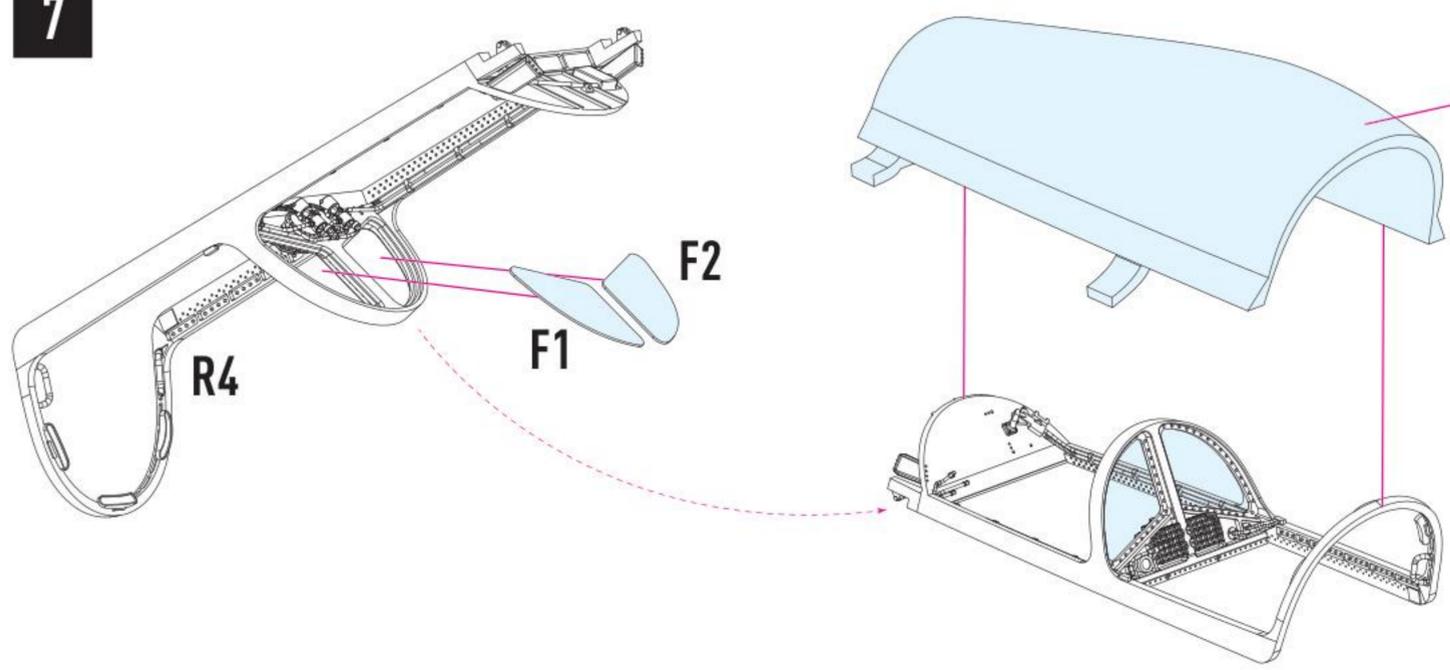


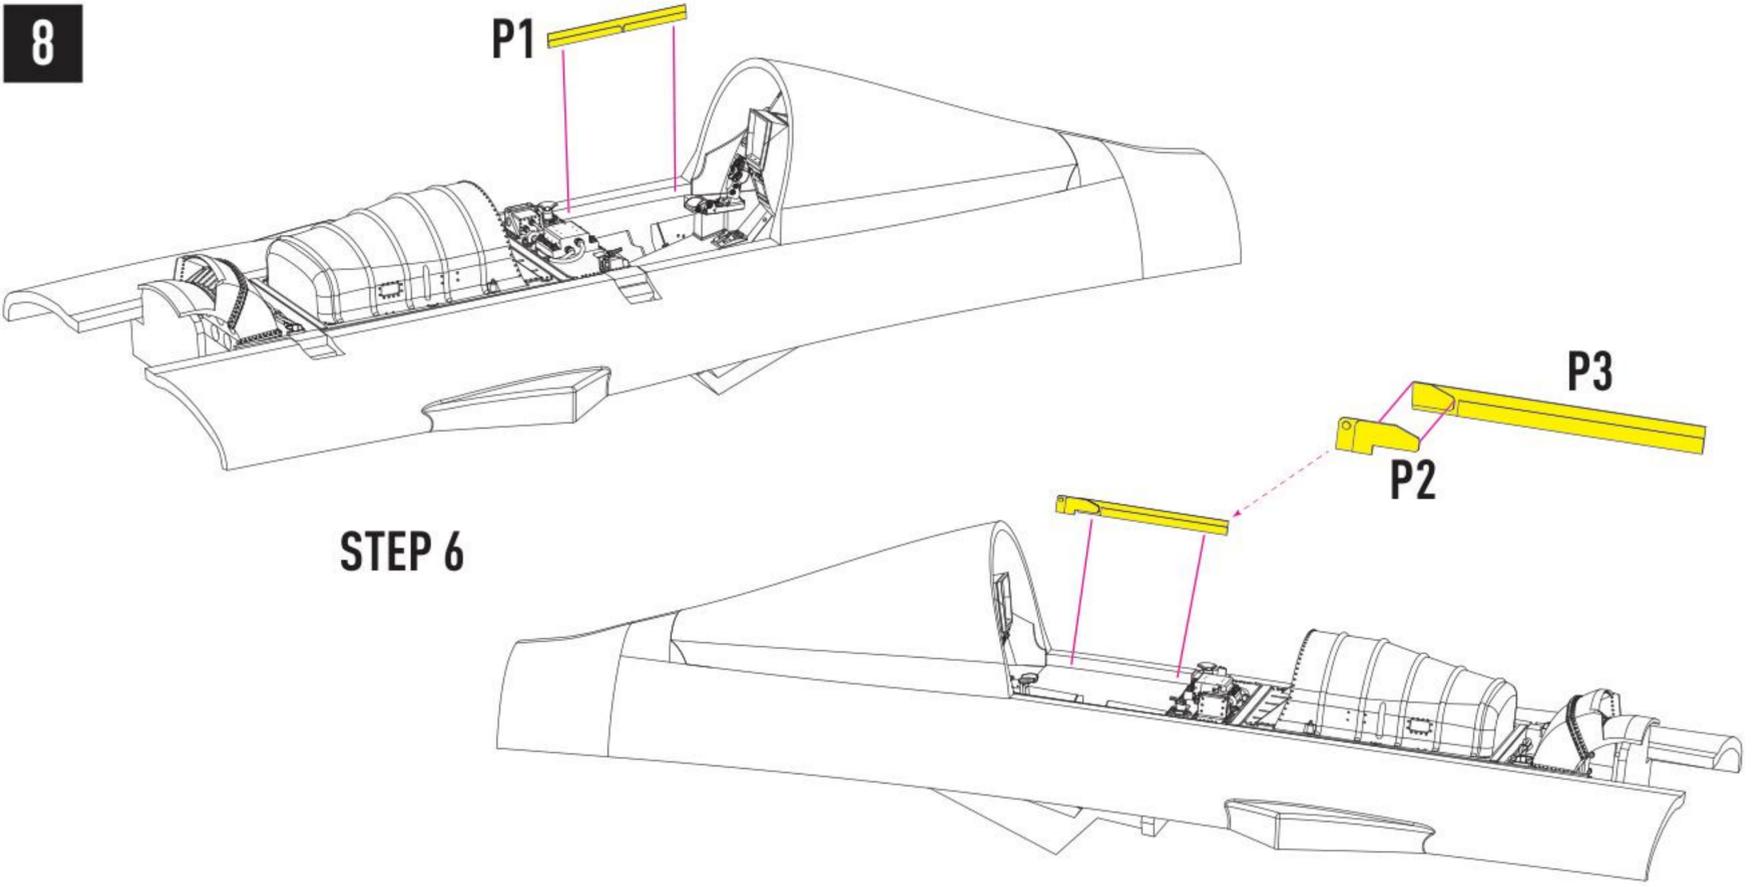


9 FOR A CLOSED COCKPIT

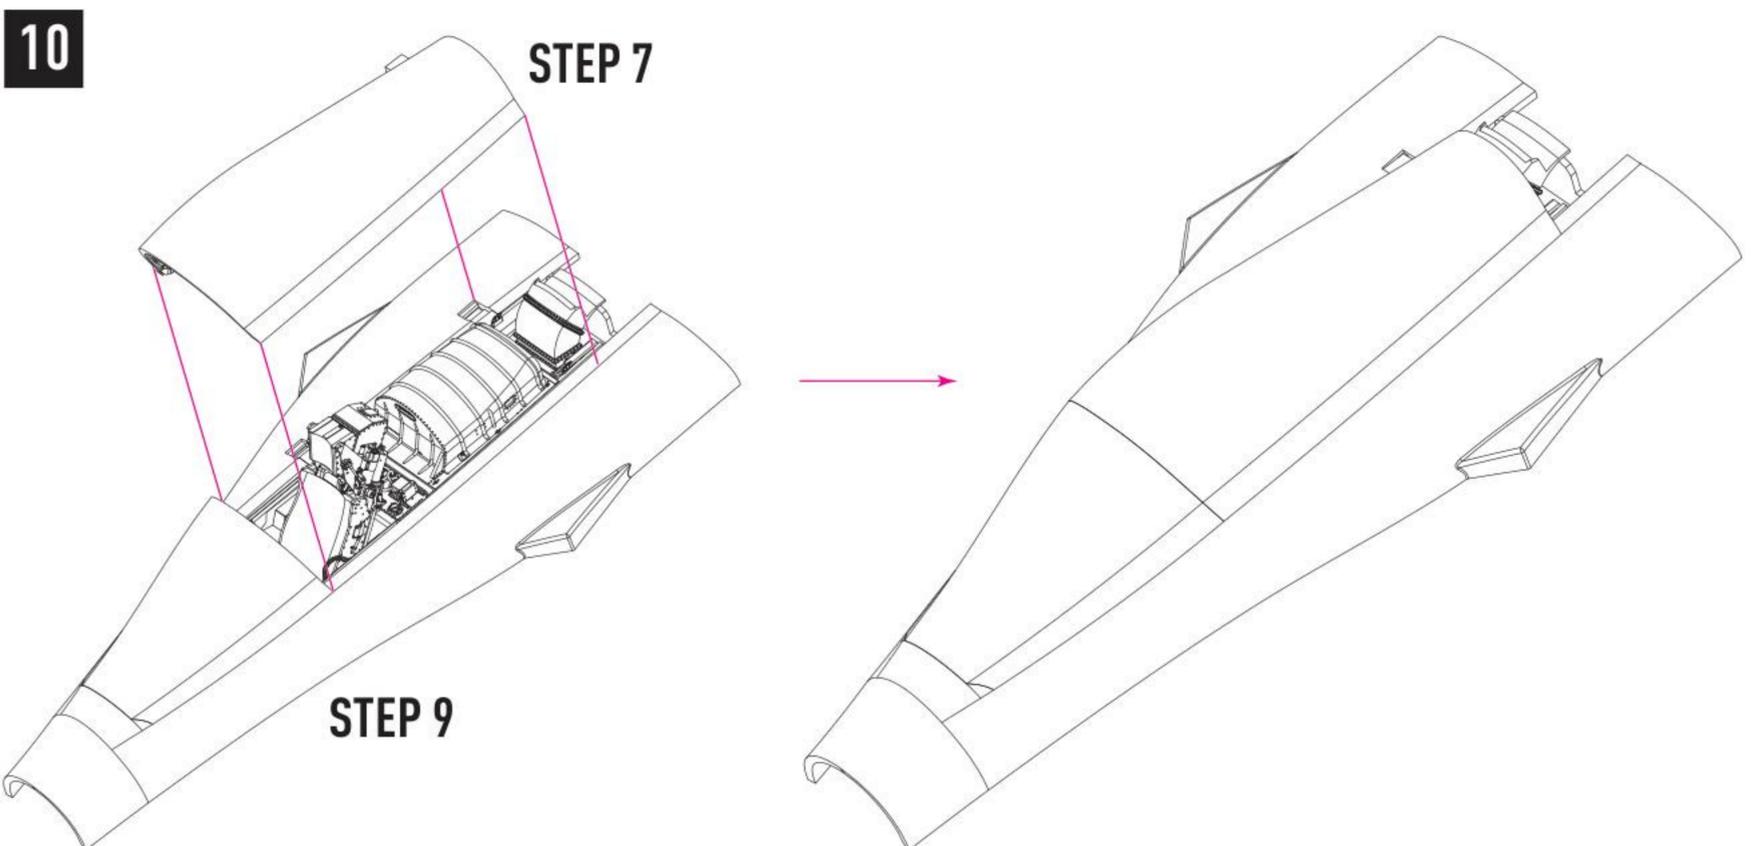
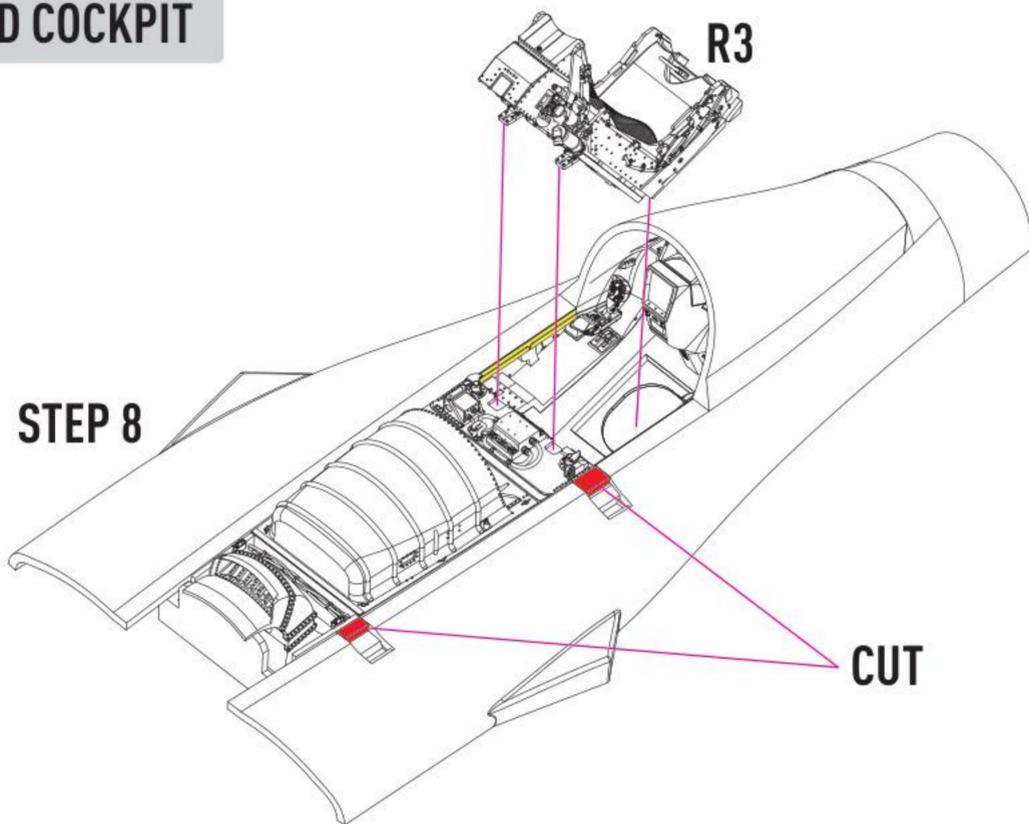


11 FOR AN OPEN COCKPIT

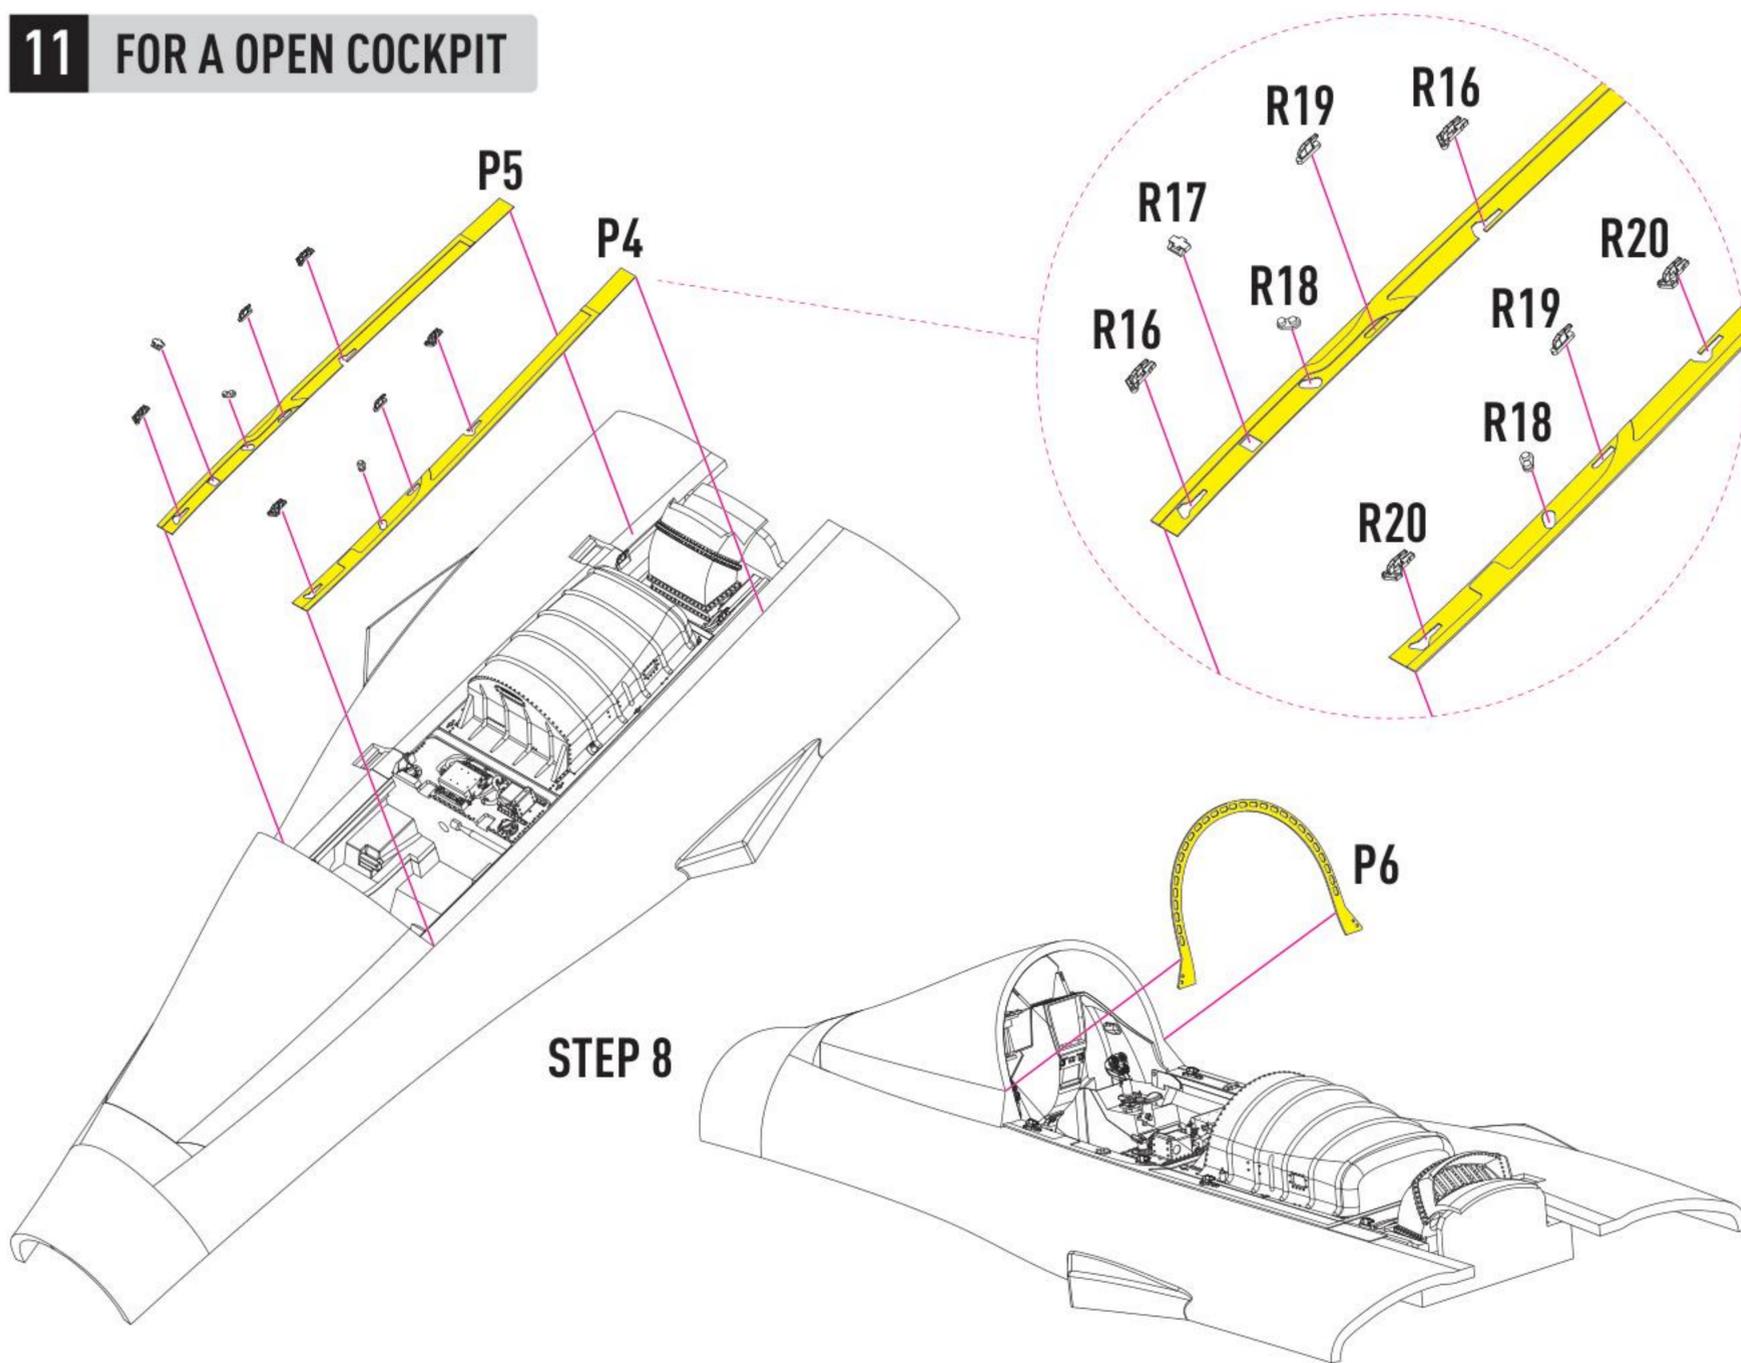


12

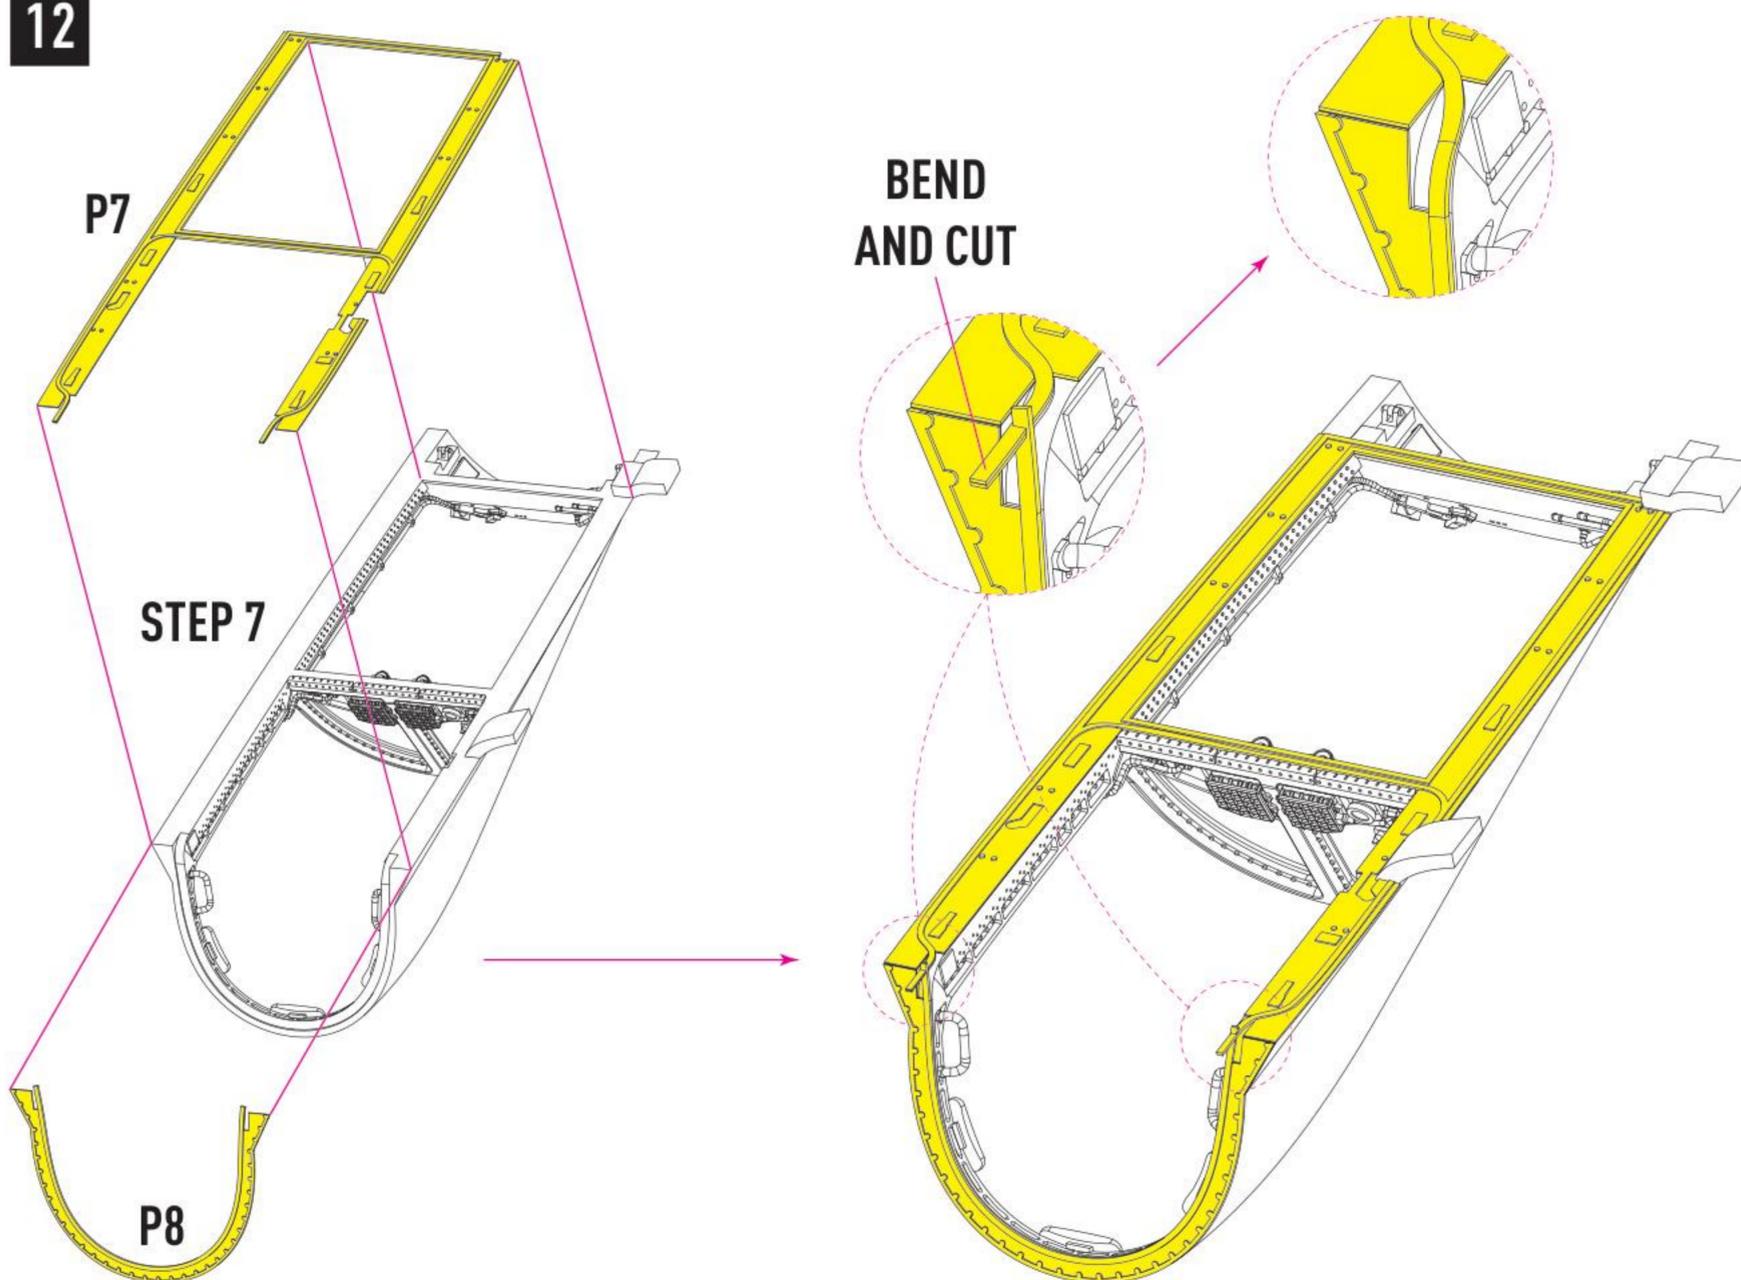

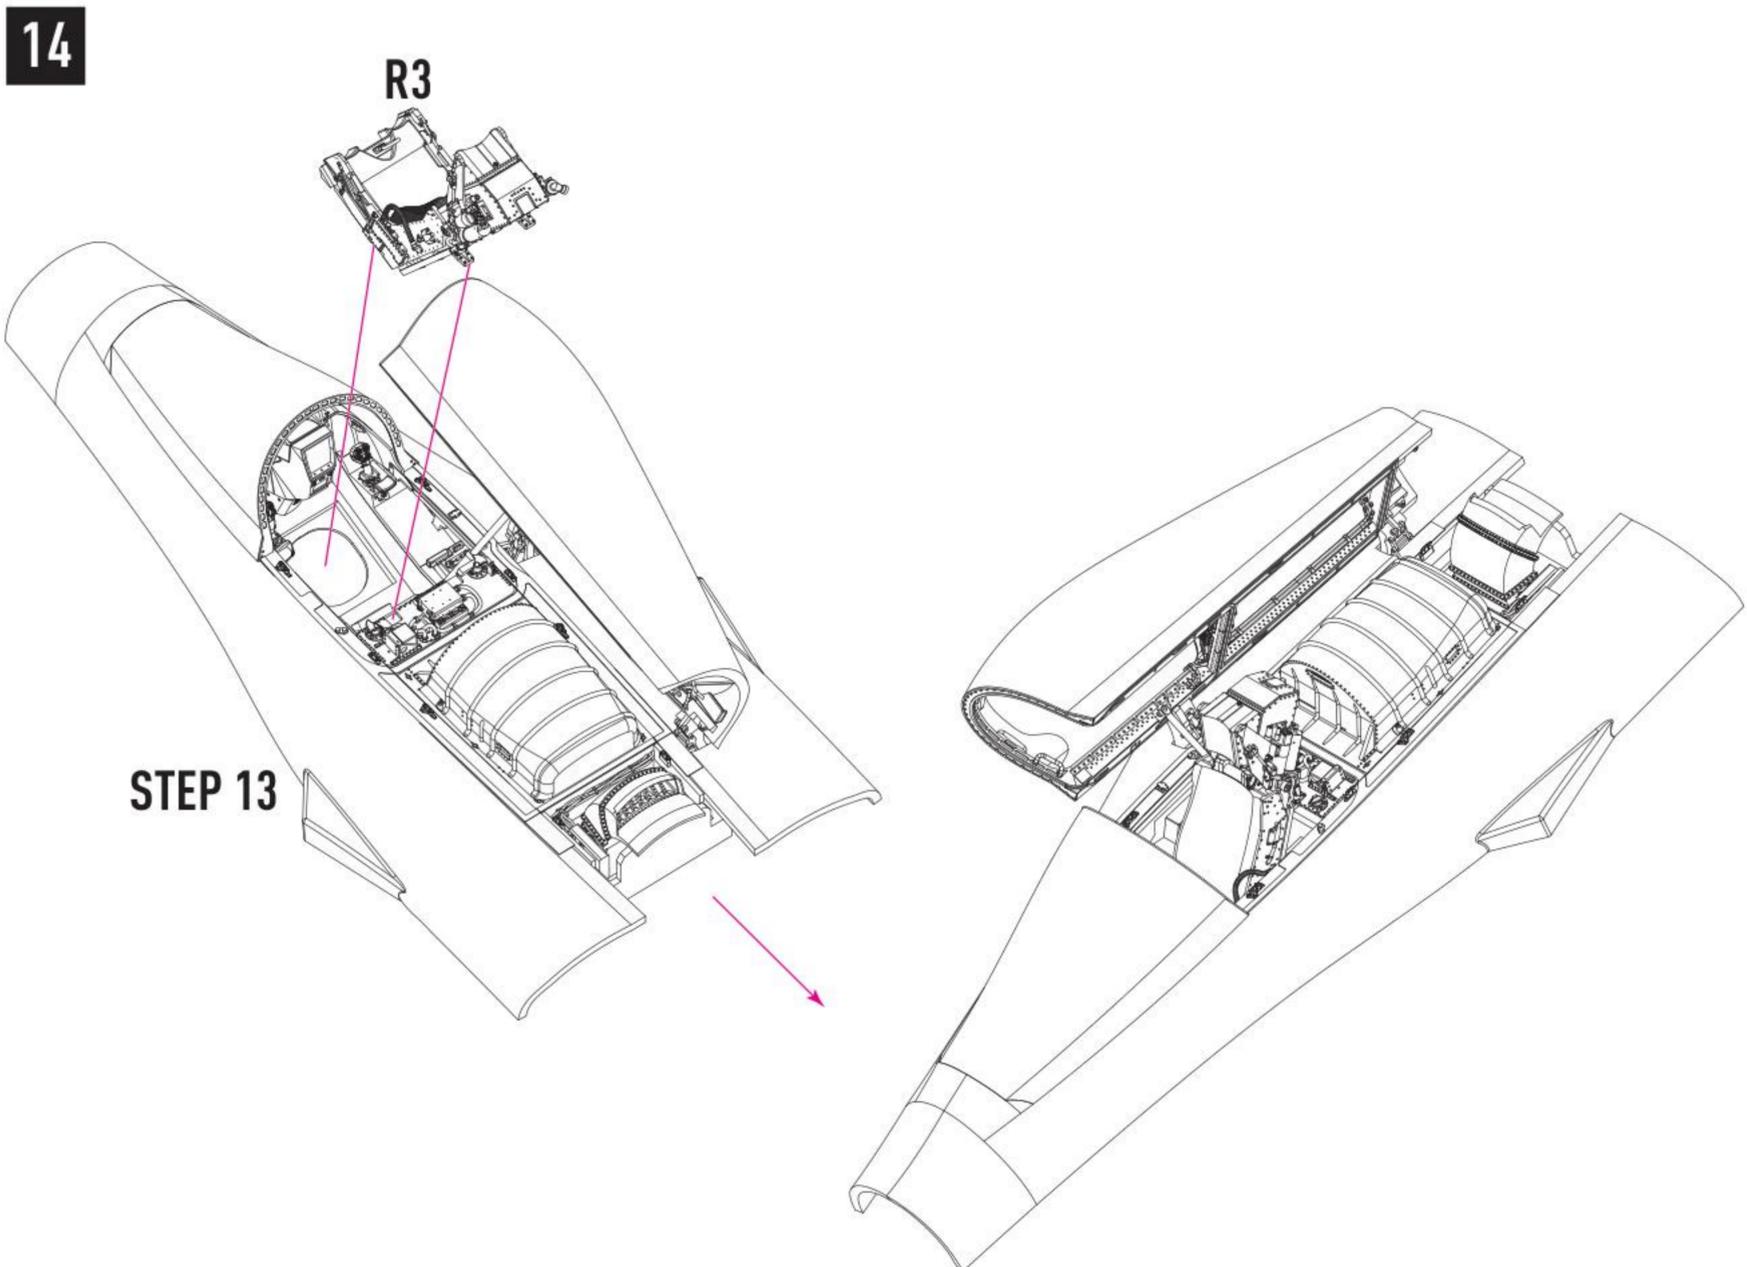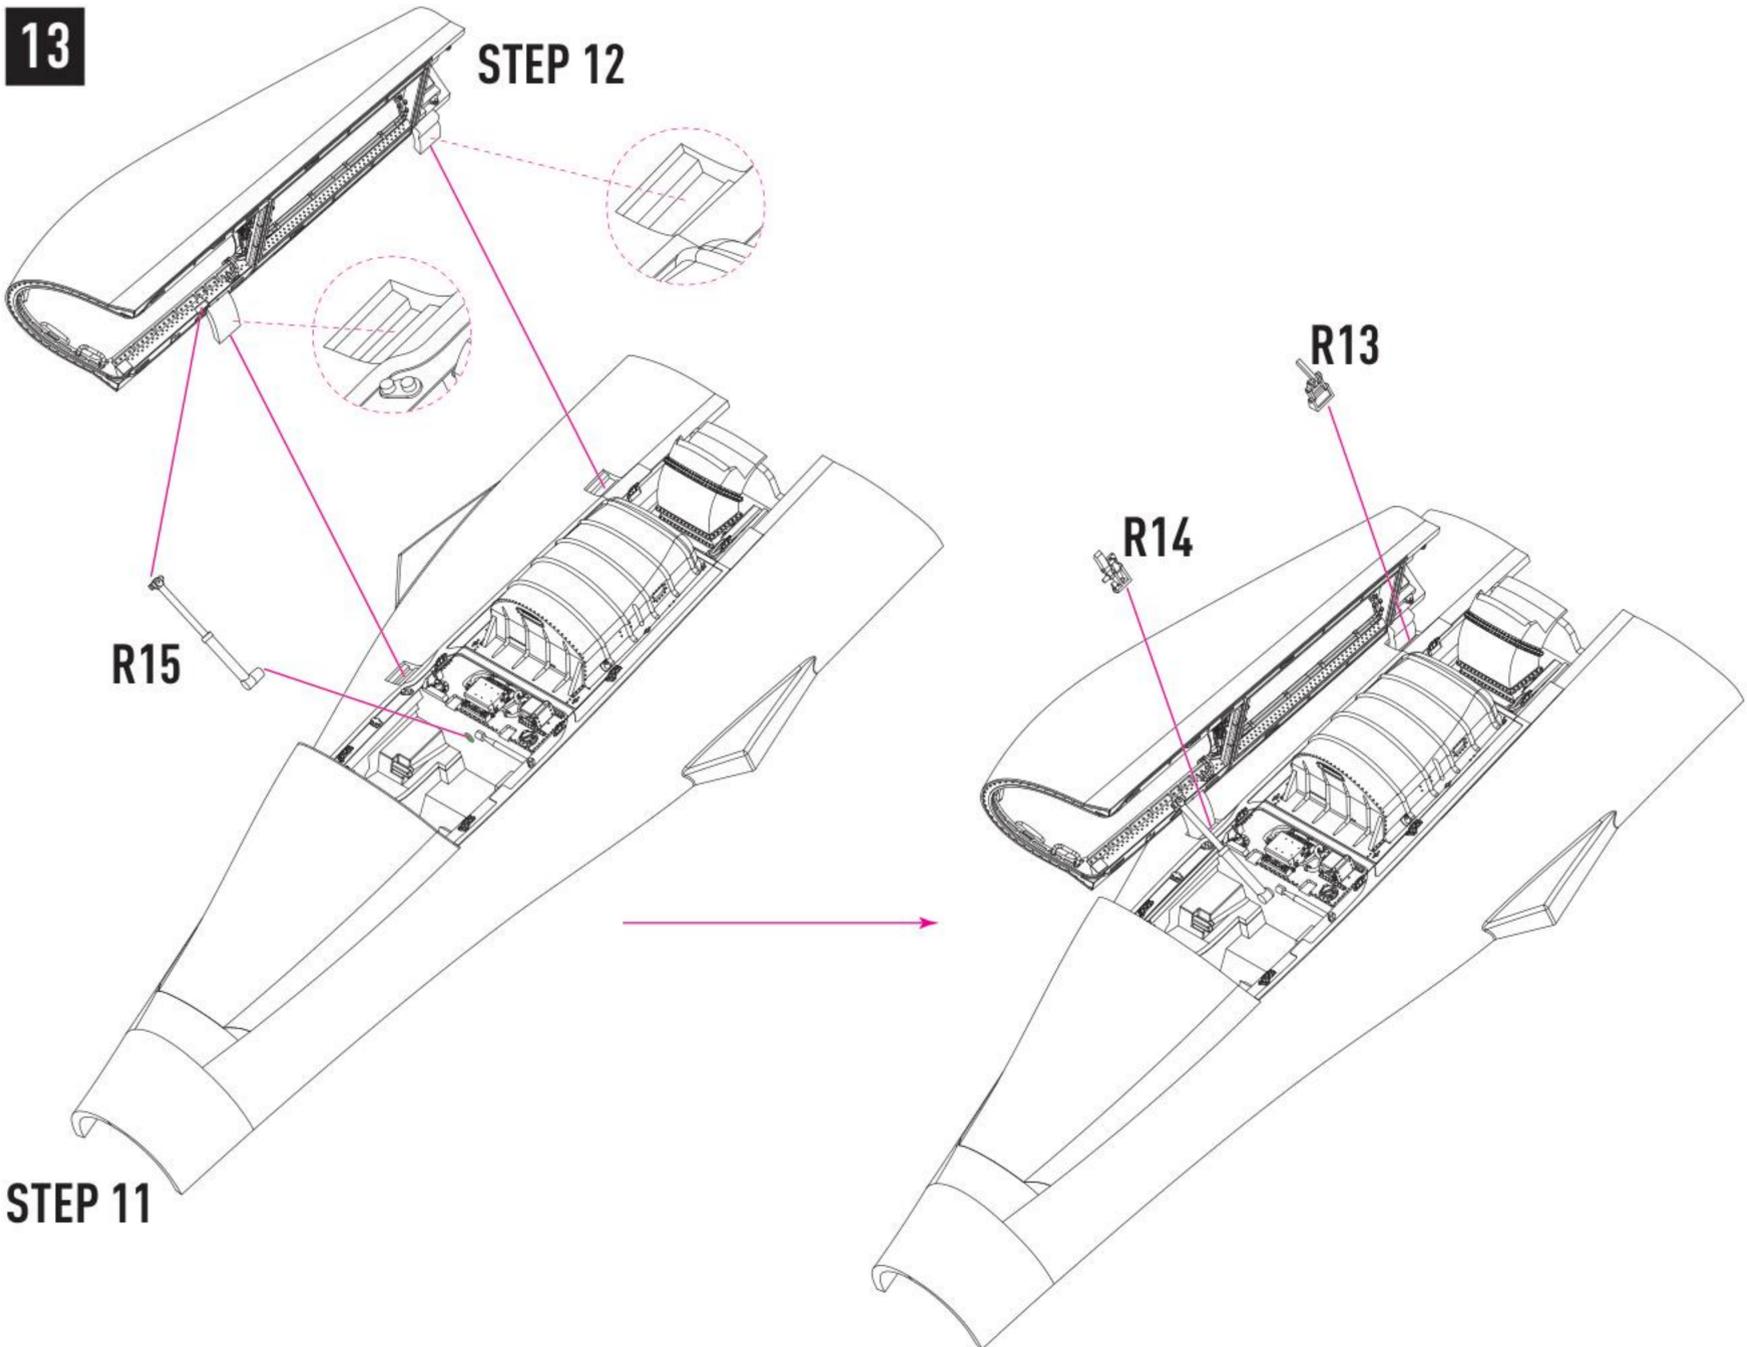

3D-DECAL INSTRUCTION

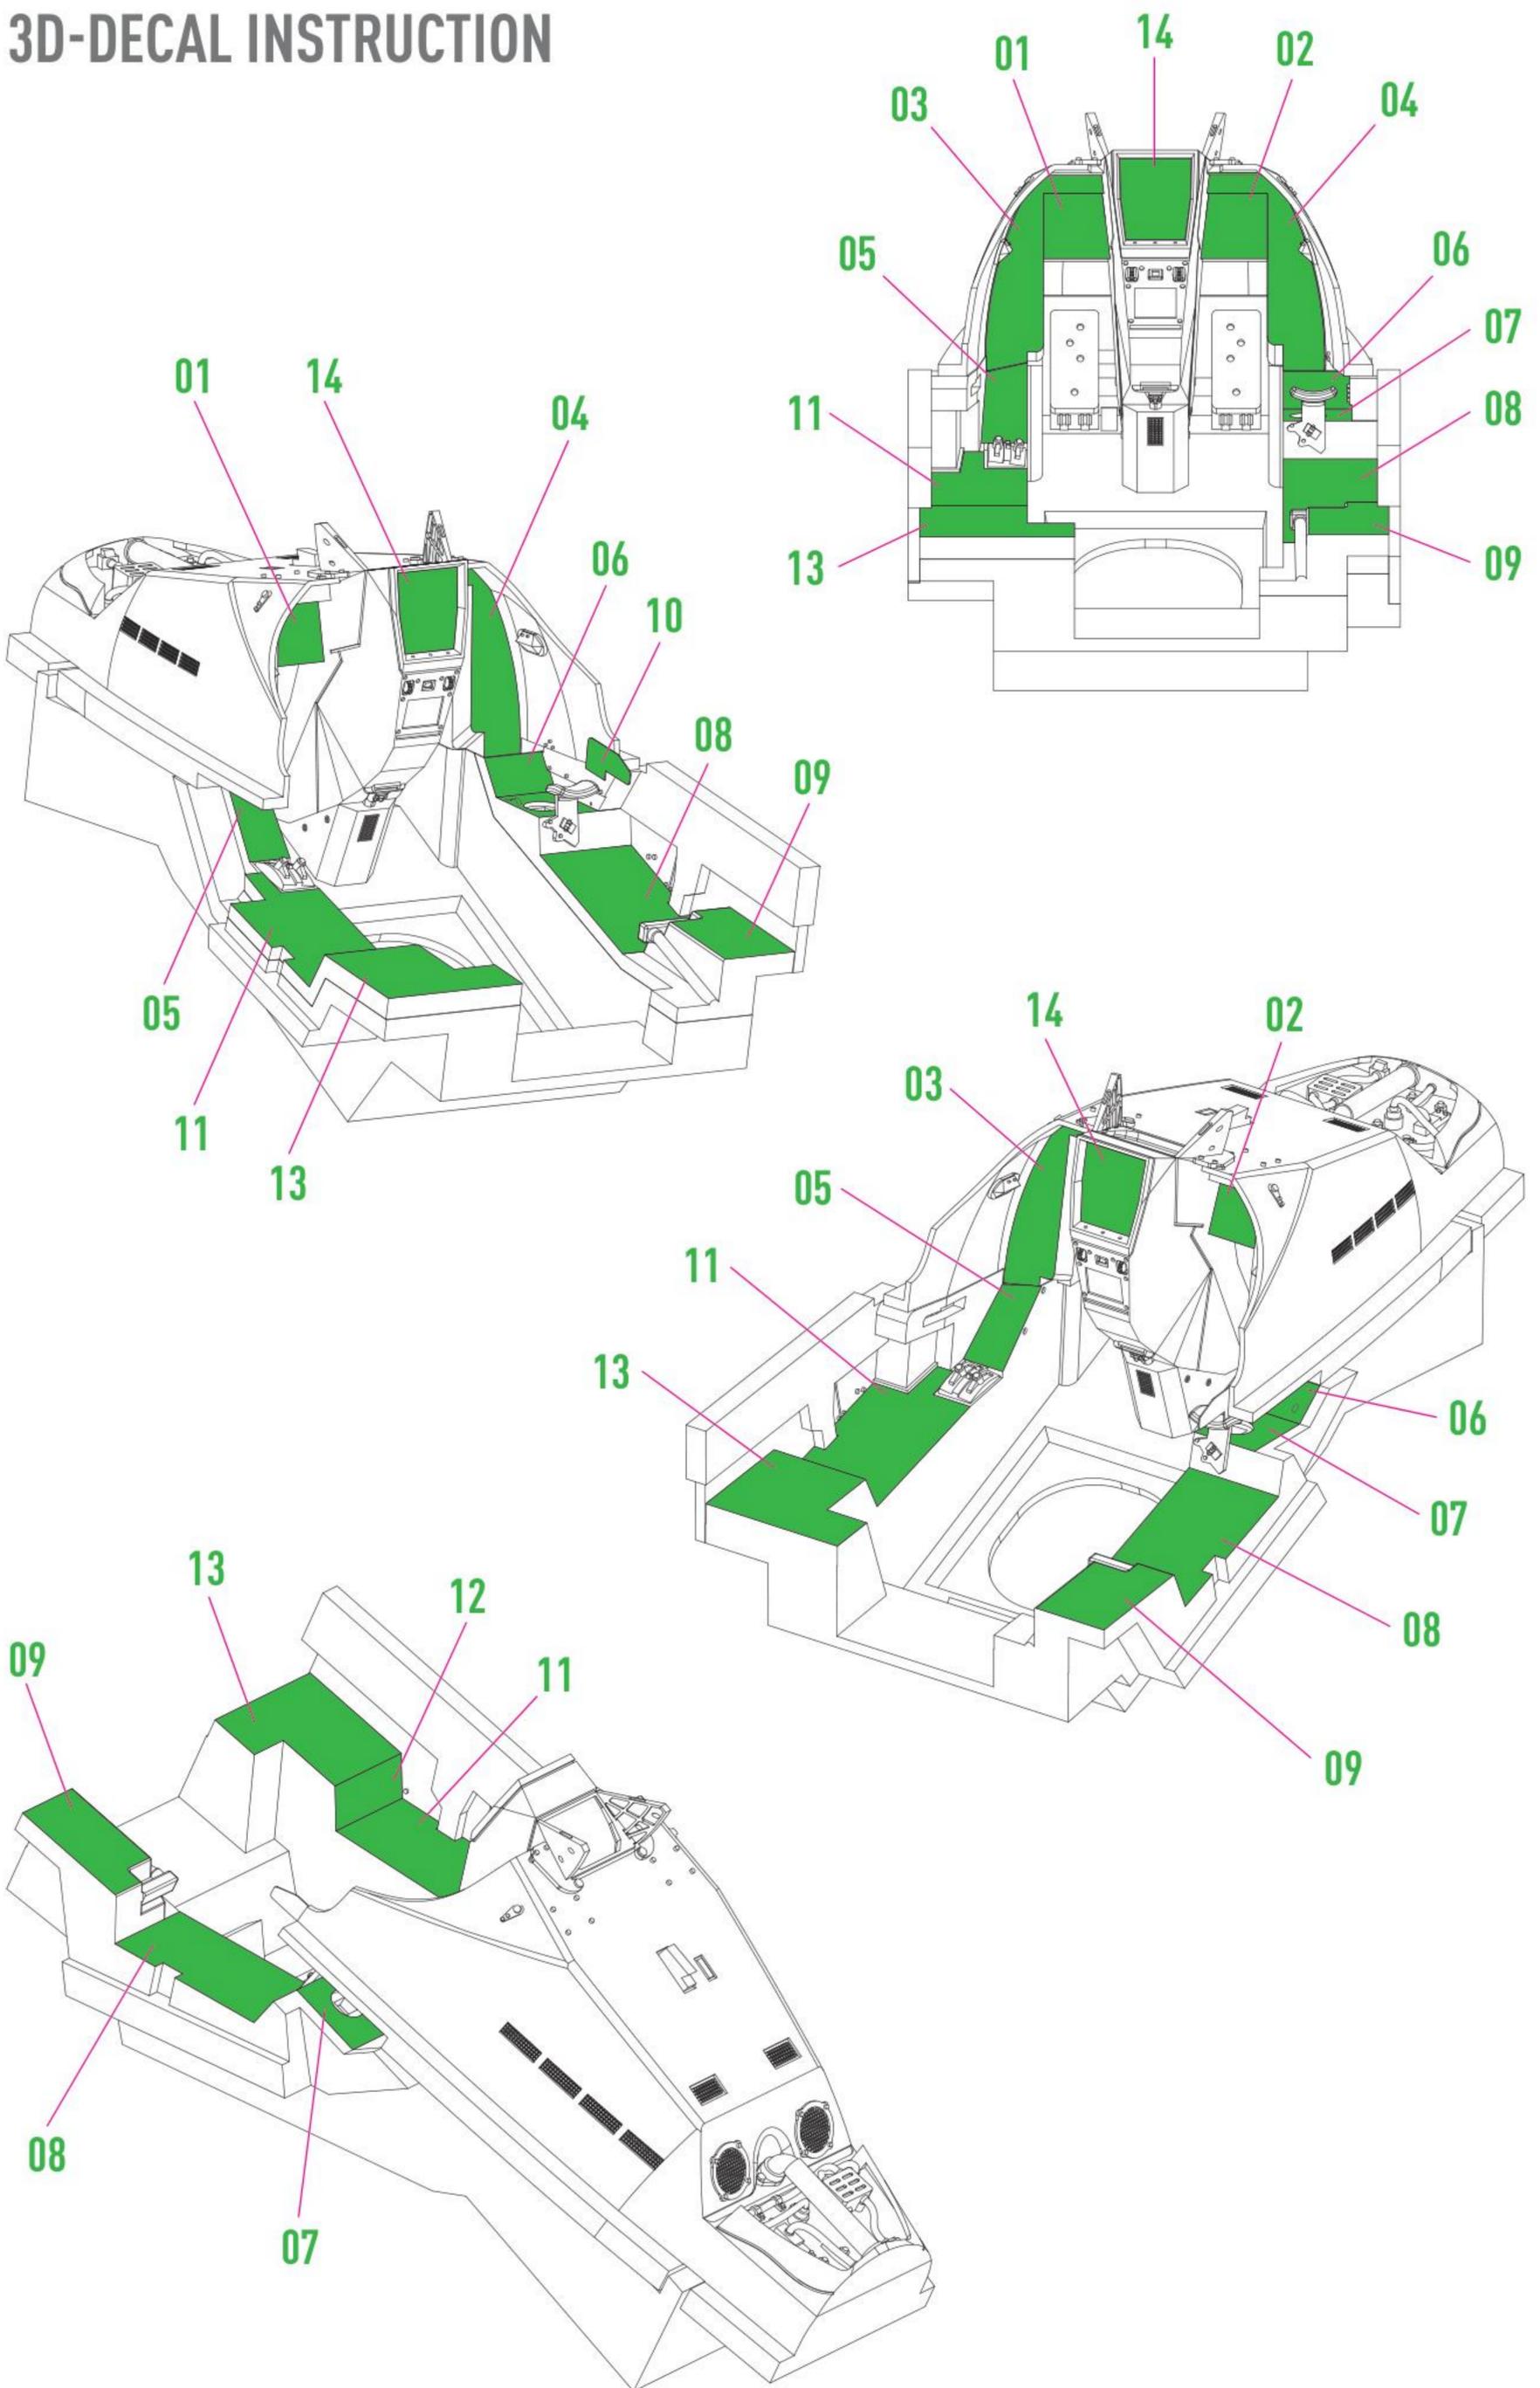

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official

 pinterest.com/reskit_official

DECAL INSTRUCTION

