

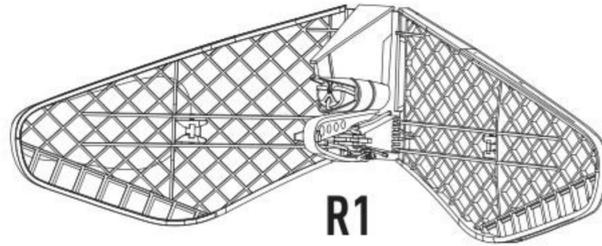
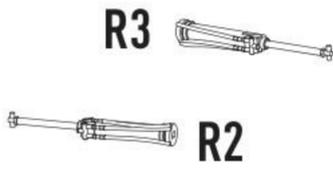


### DETAIL AFTER REMOVAL FROM SPRUES

 USE A SAW TO REMOVE SUPPORTS  
 FROM 3D PRINTED PARTS

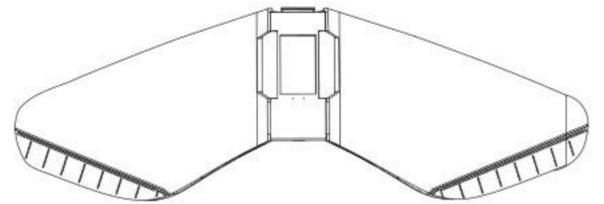

### 1 B15-B16 PARTS FROM TRUMPETER KIT

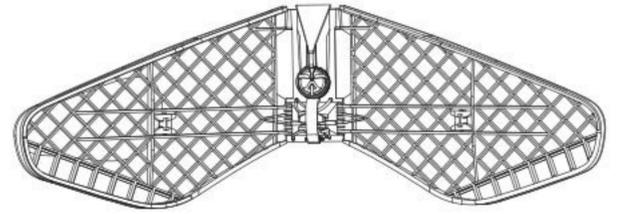