



DETAILS AFTER REMOVAL FROM SUPPORTS







USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

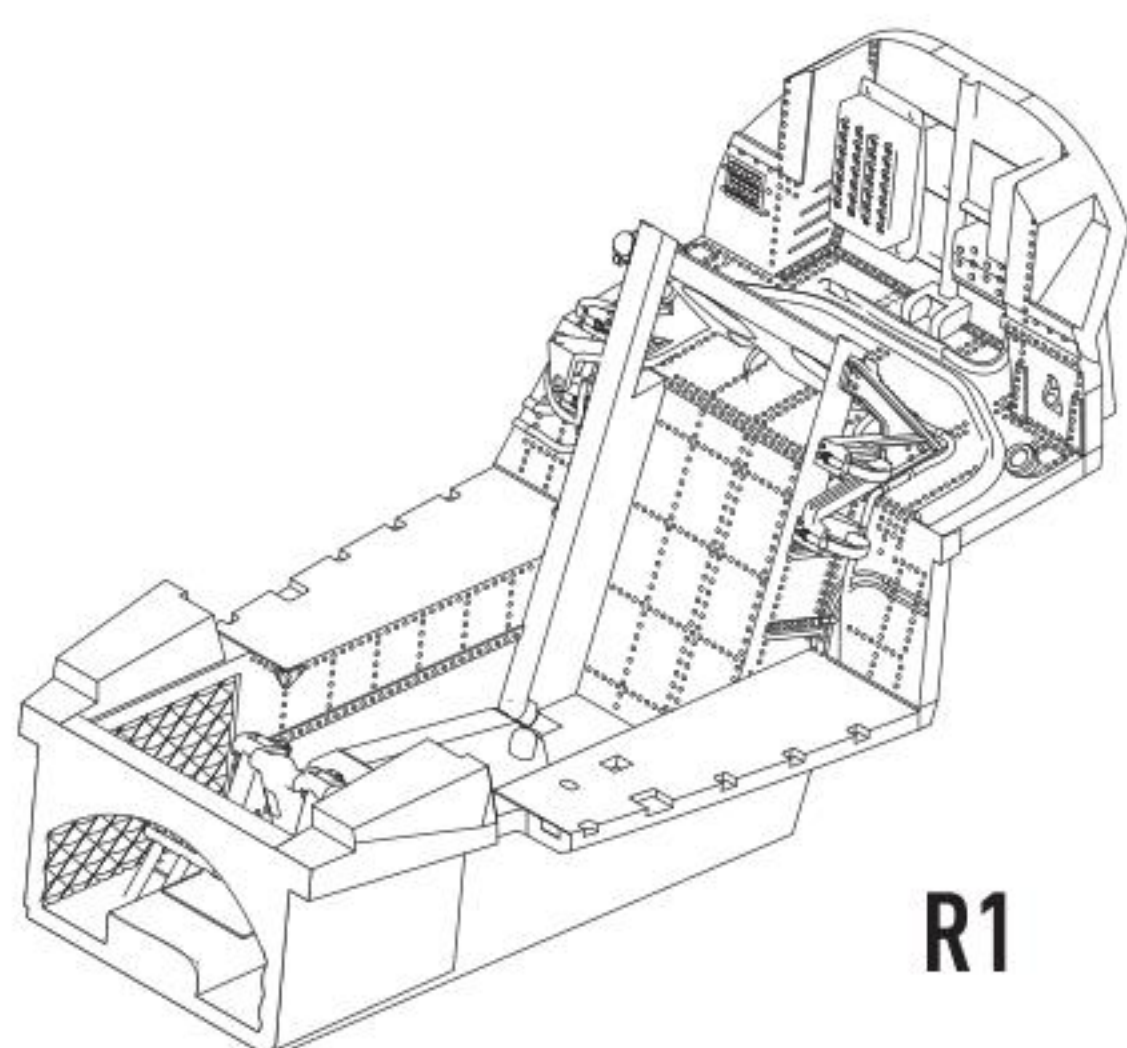



R1

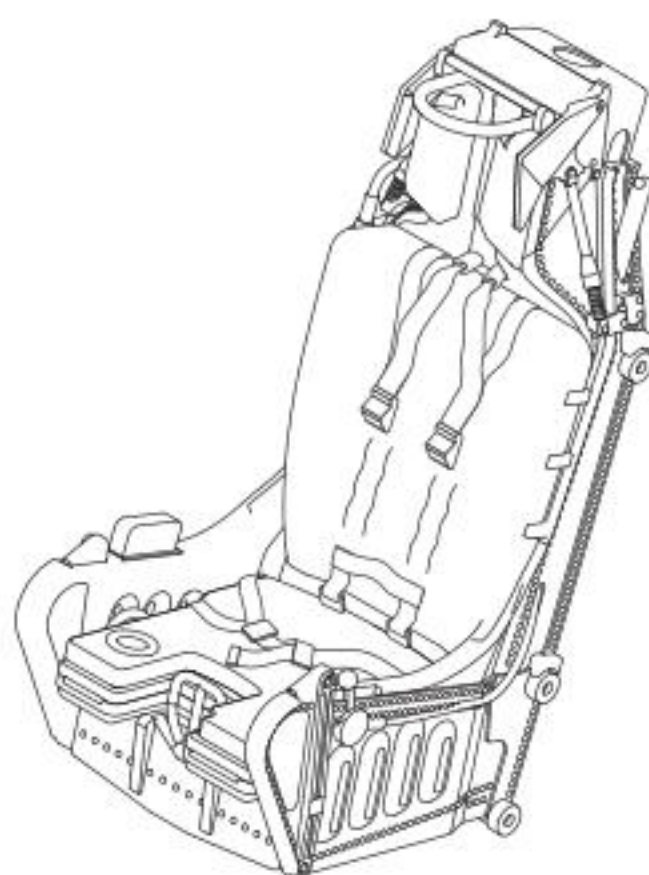



R2

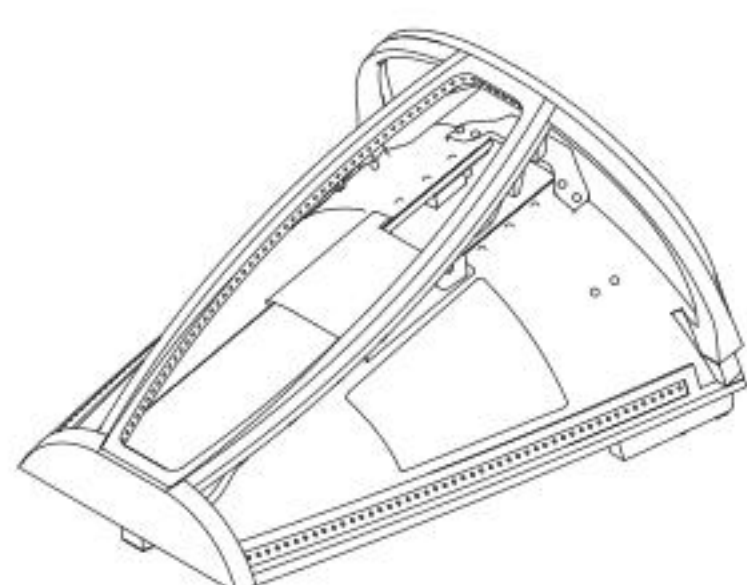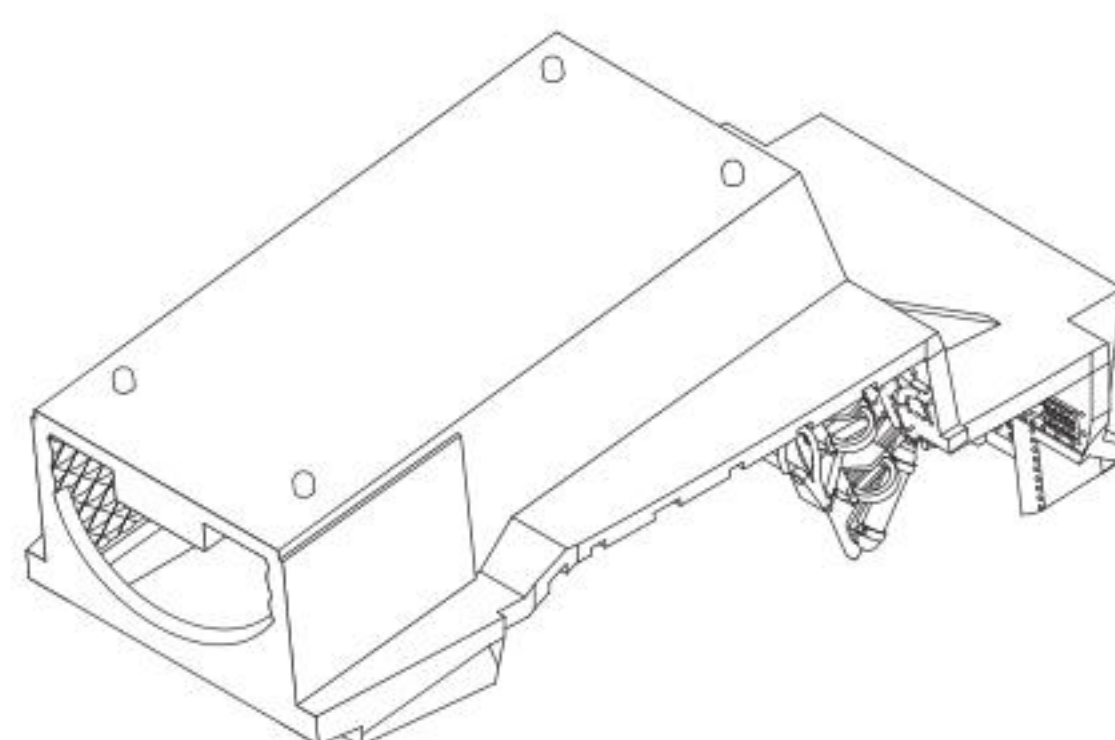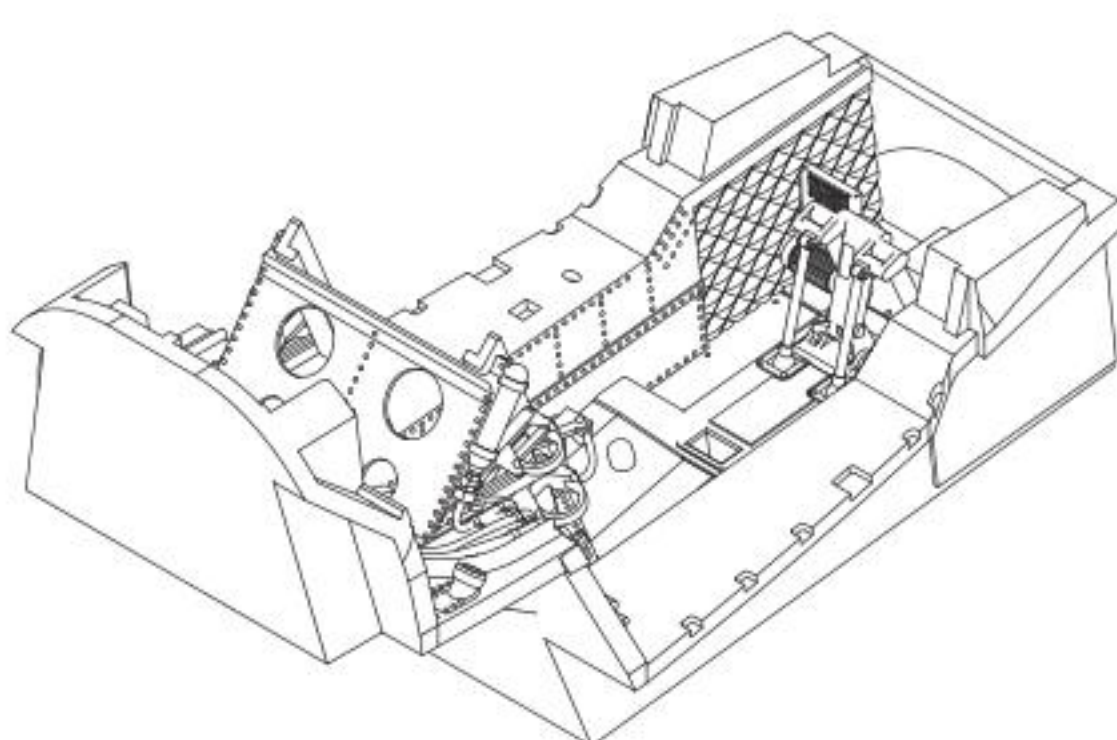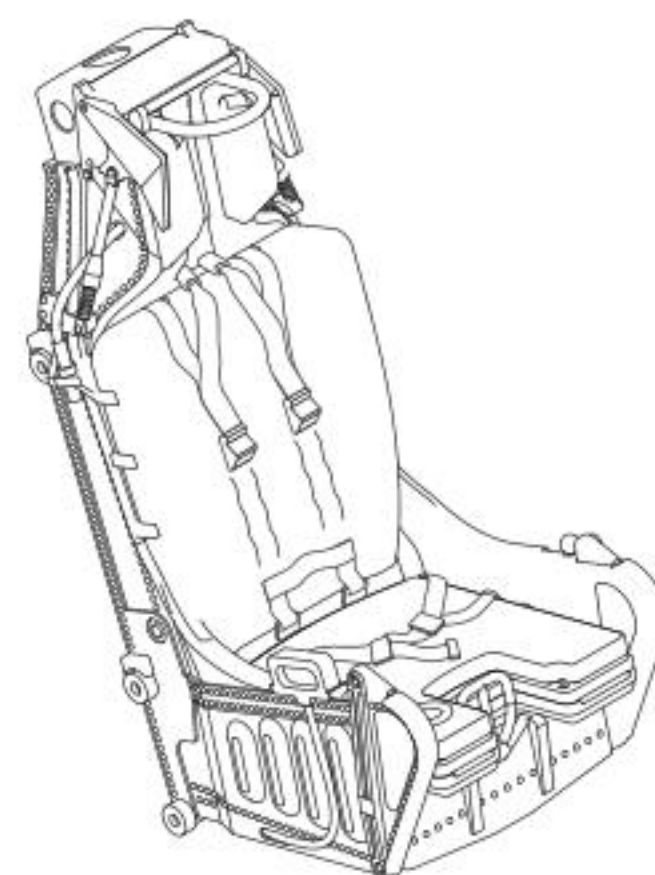




R3

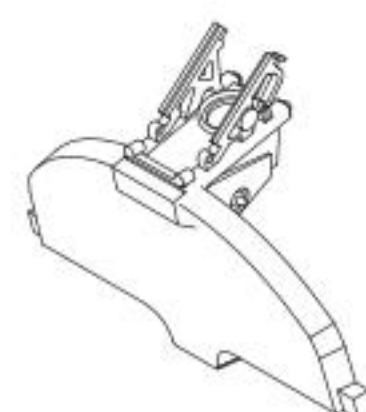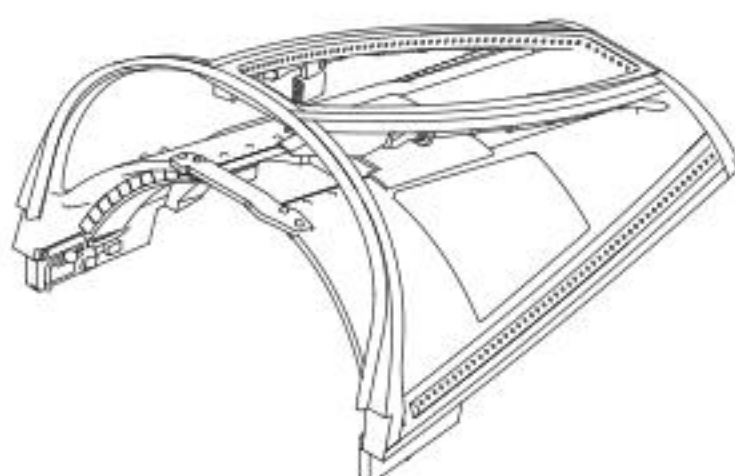


R4

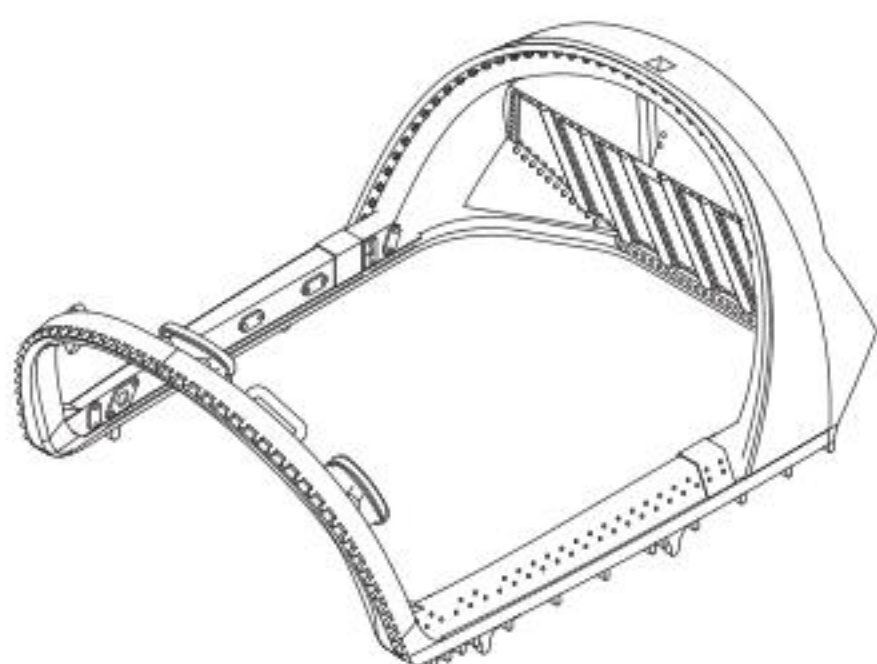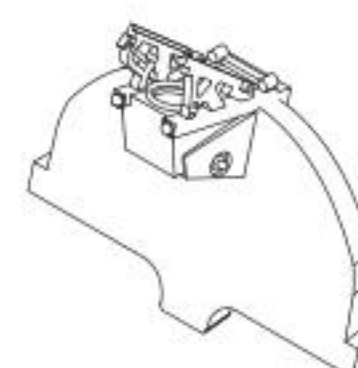

R5

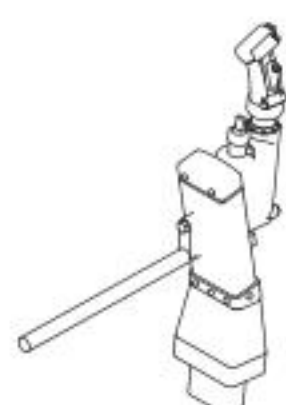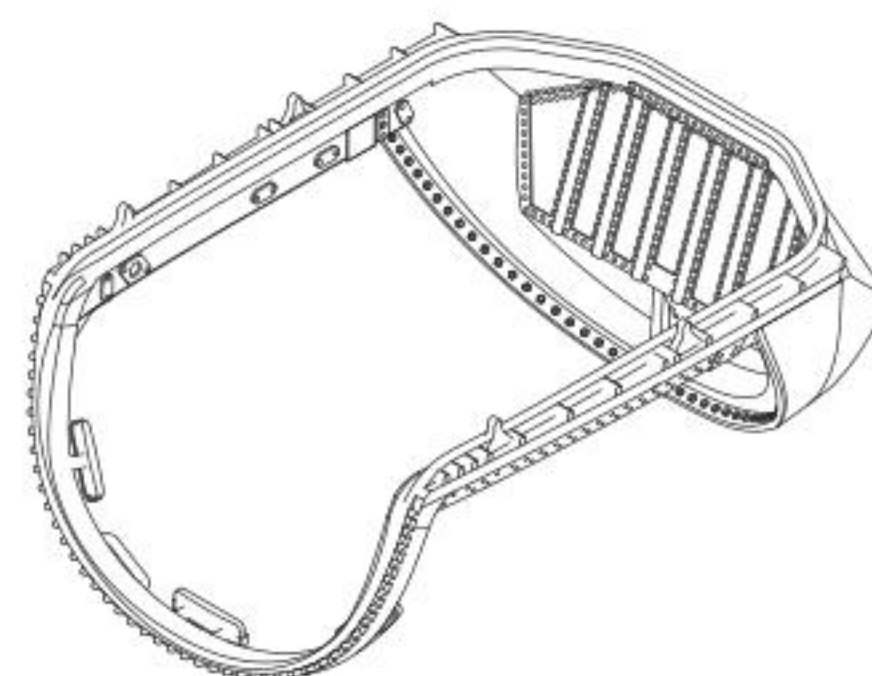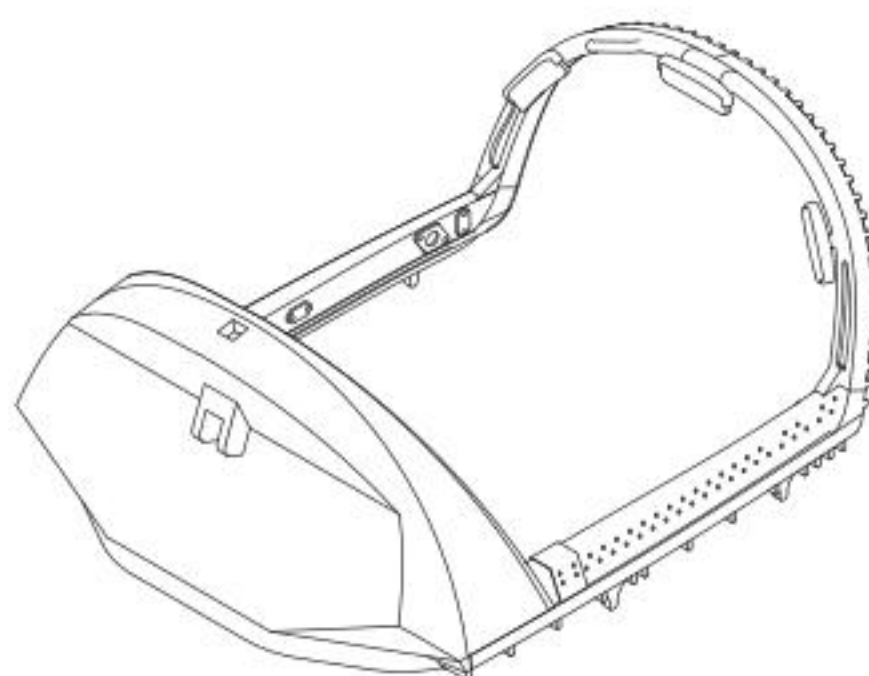

R6

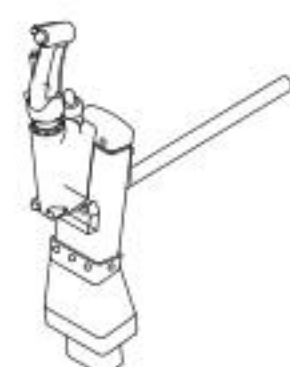



R7





R8




R9

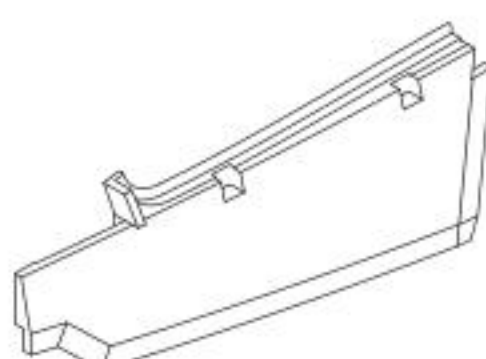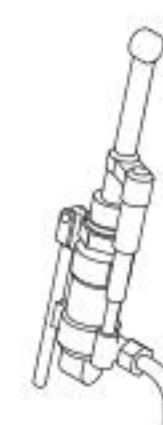

R10

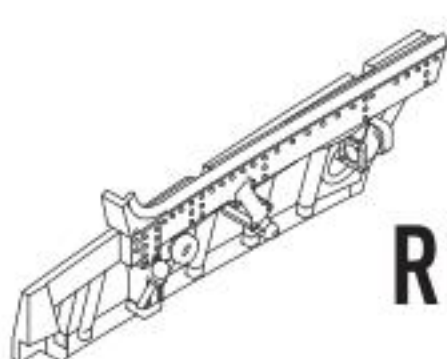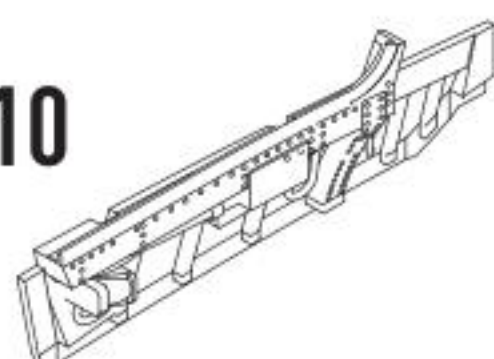

R11

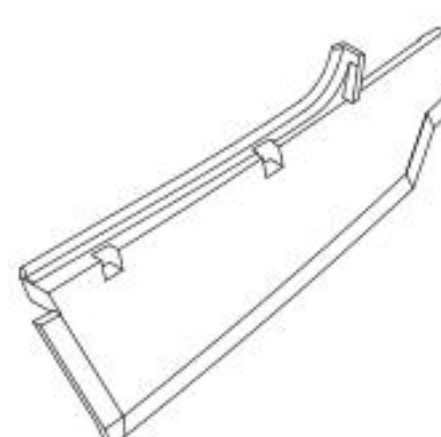


F1




F2


1

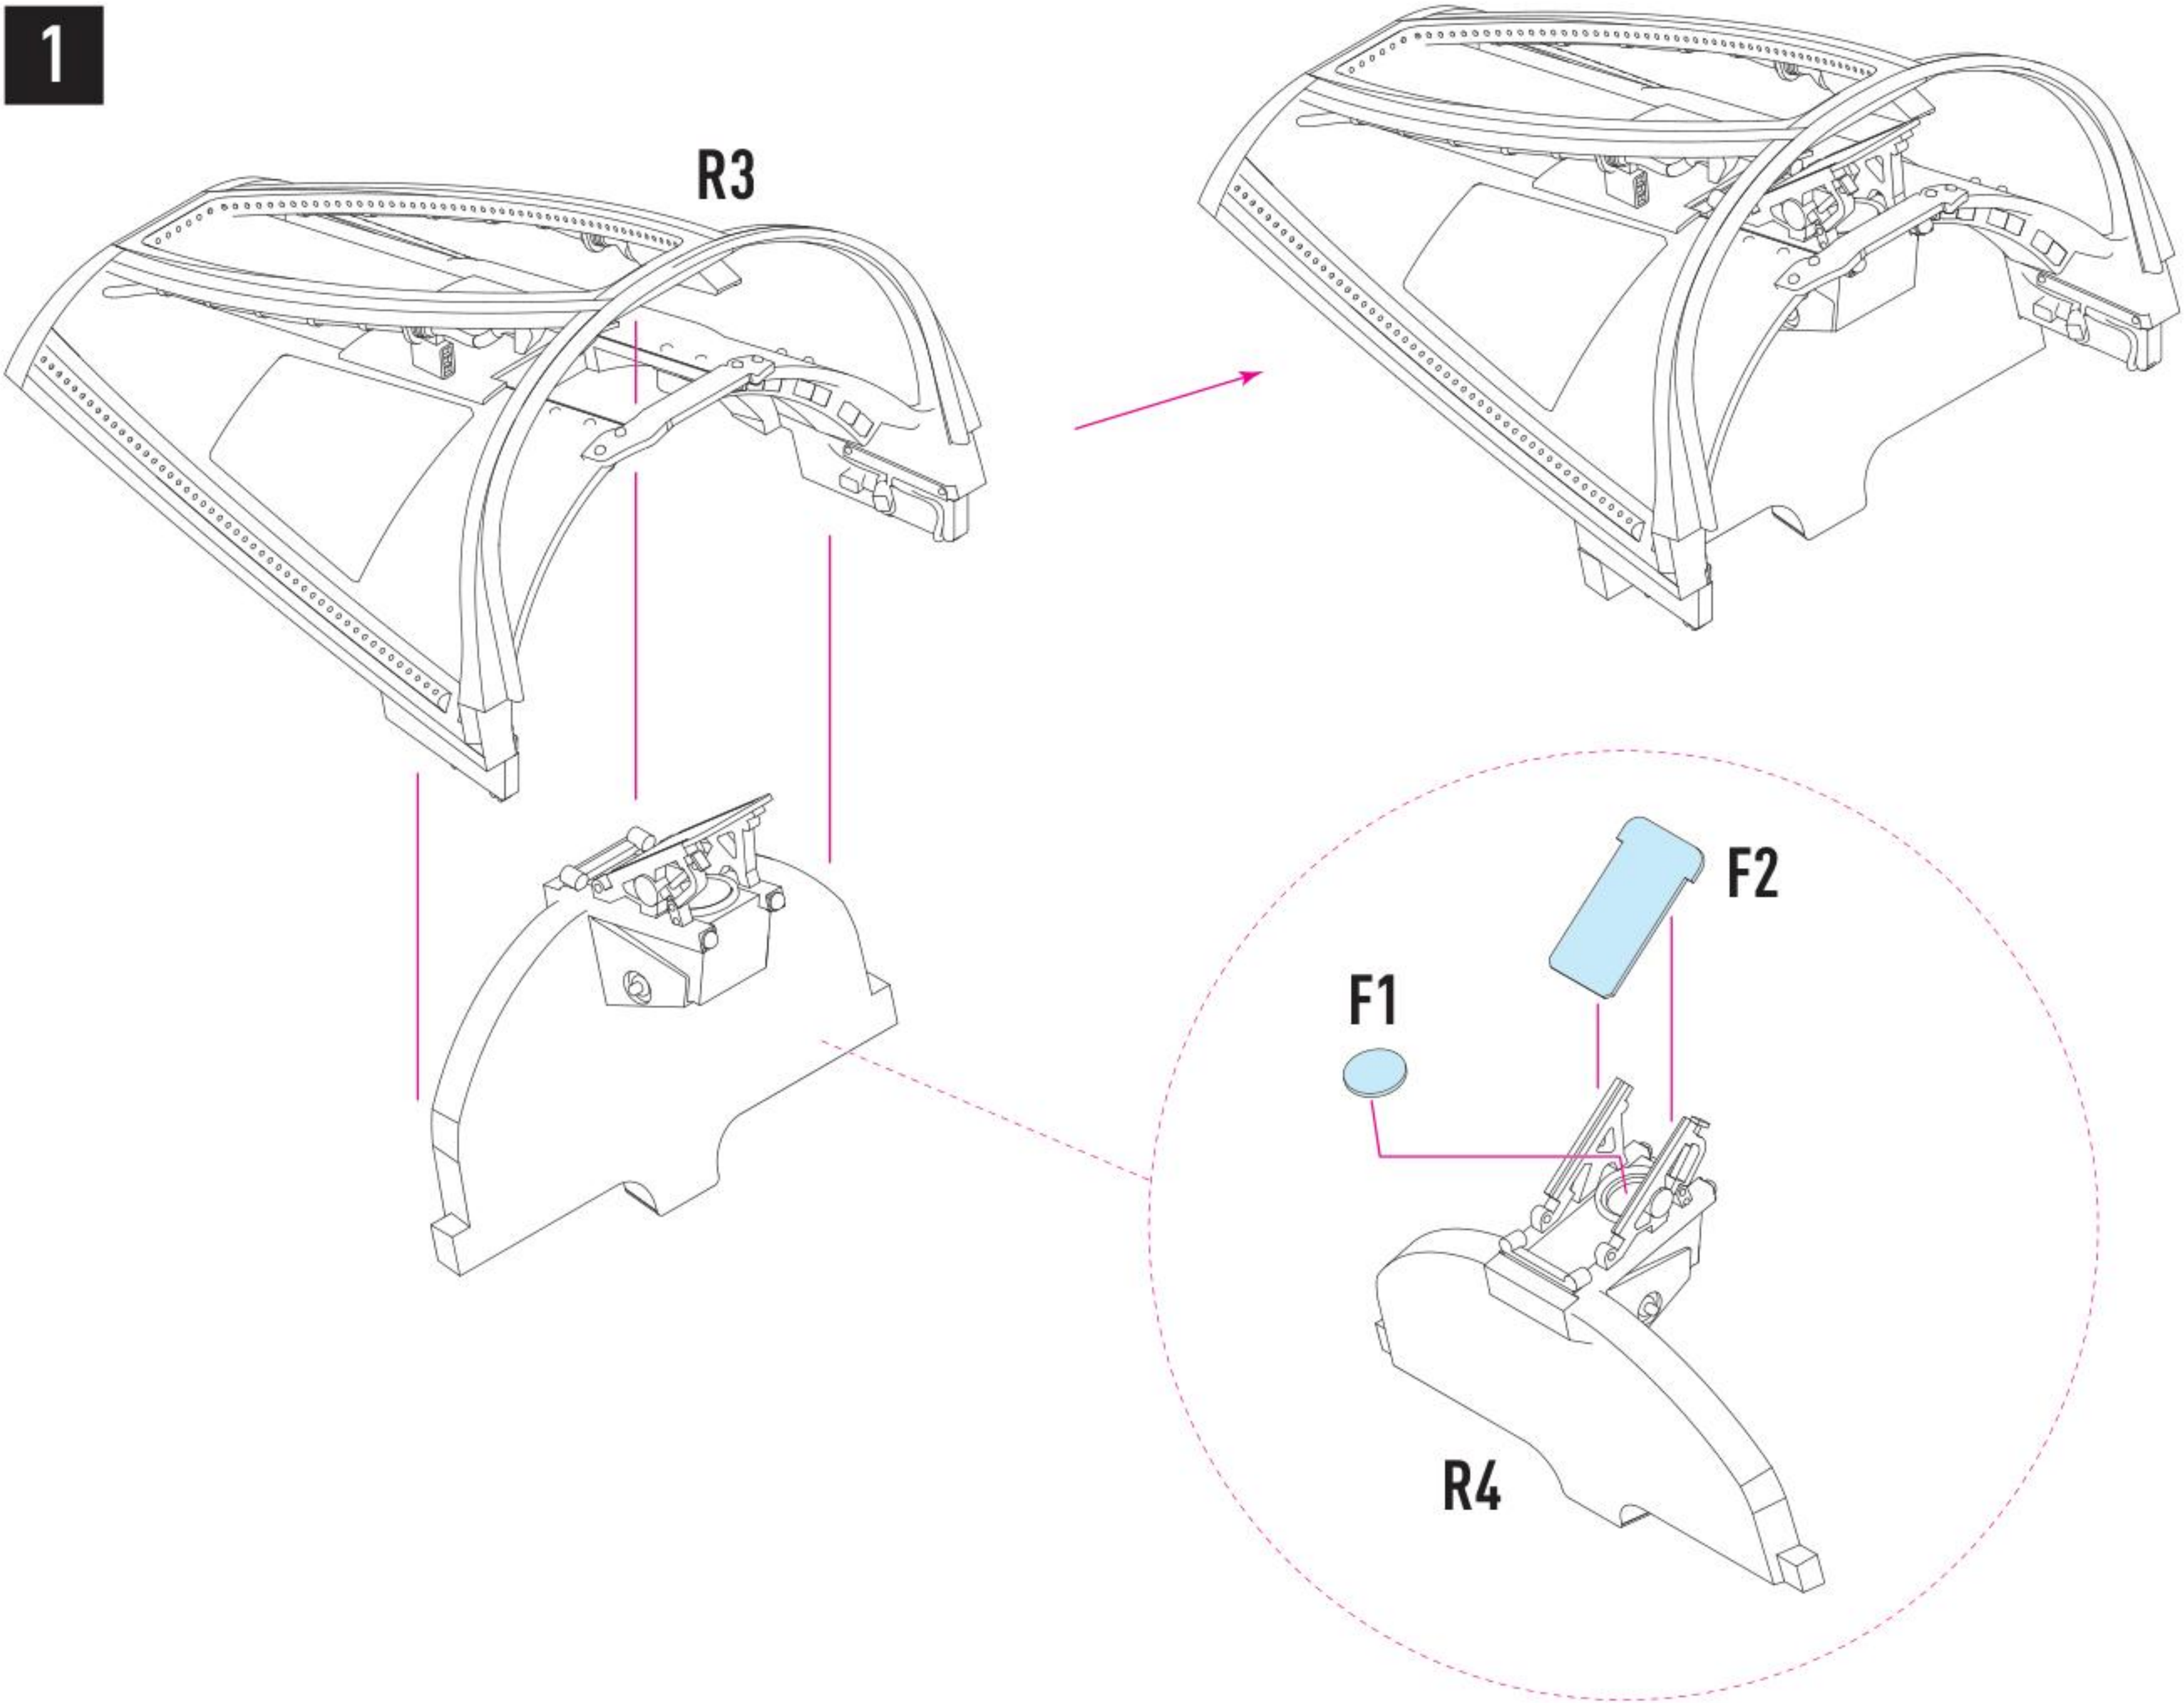


2

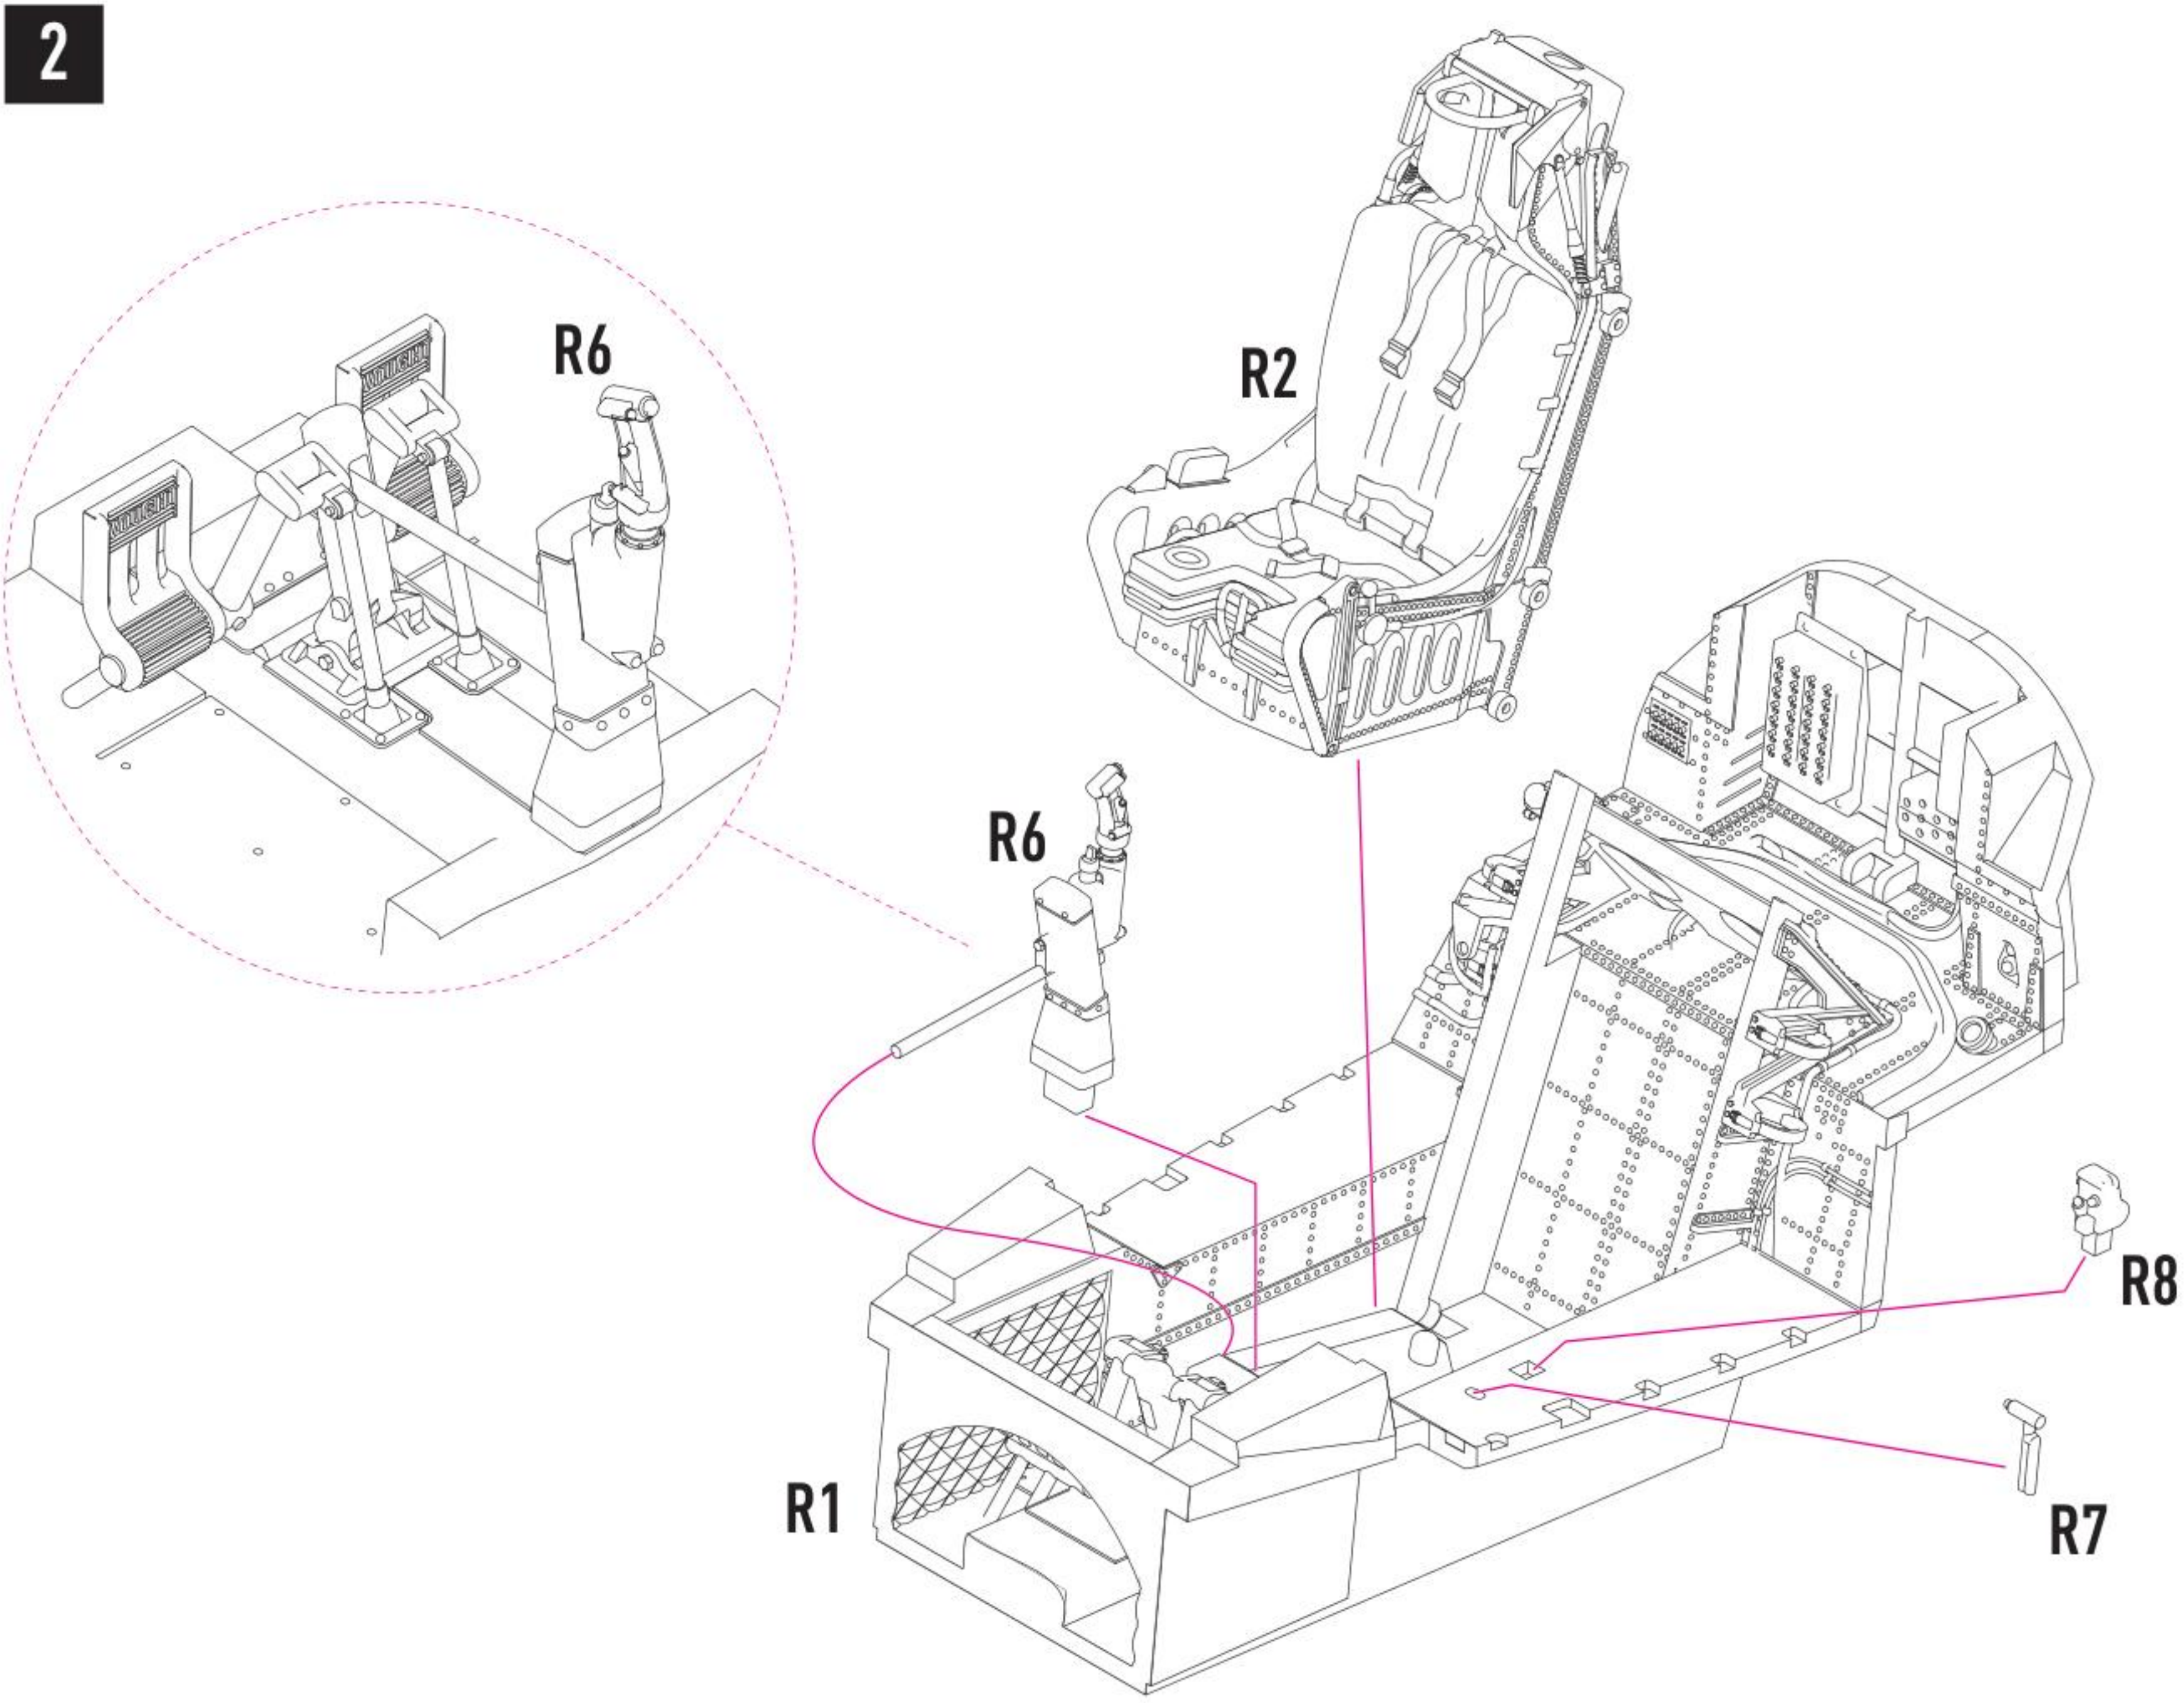


3

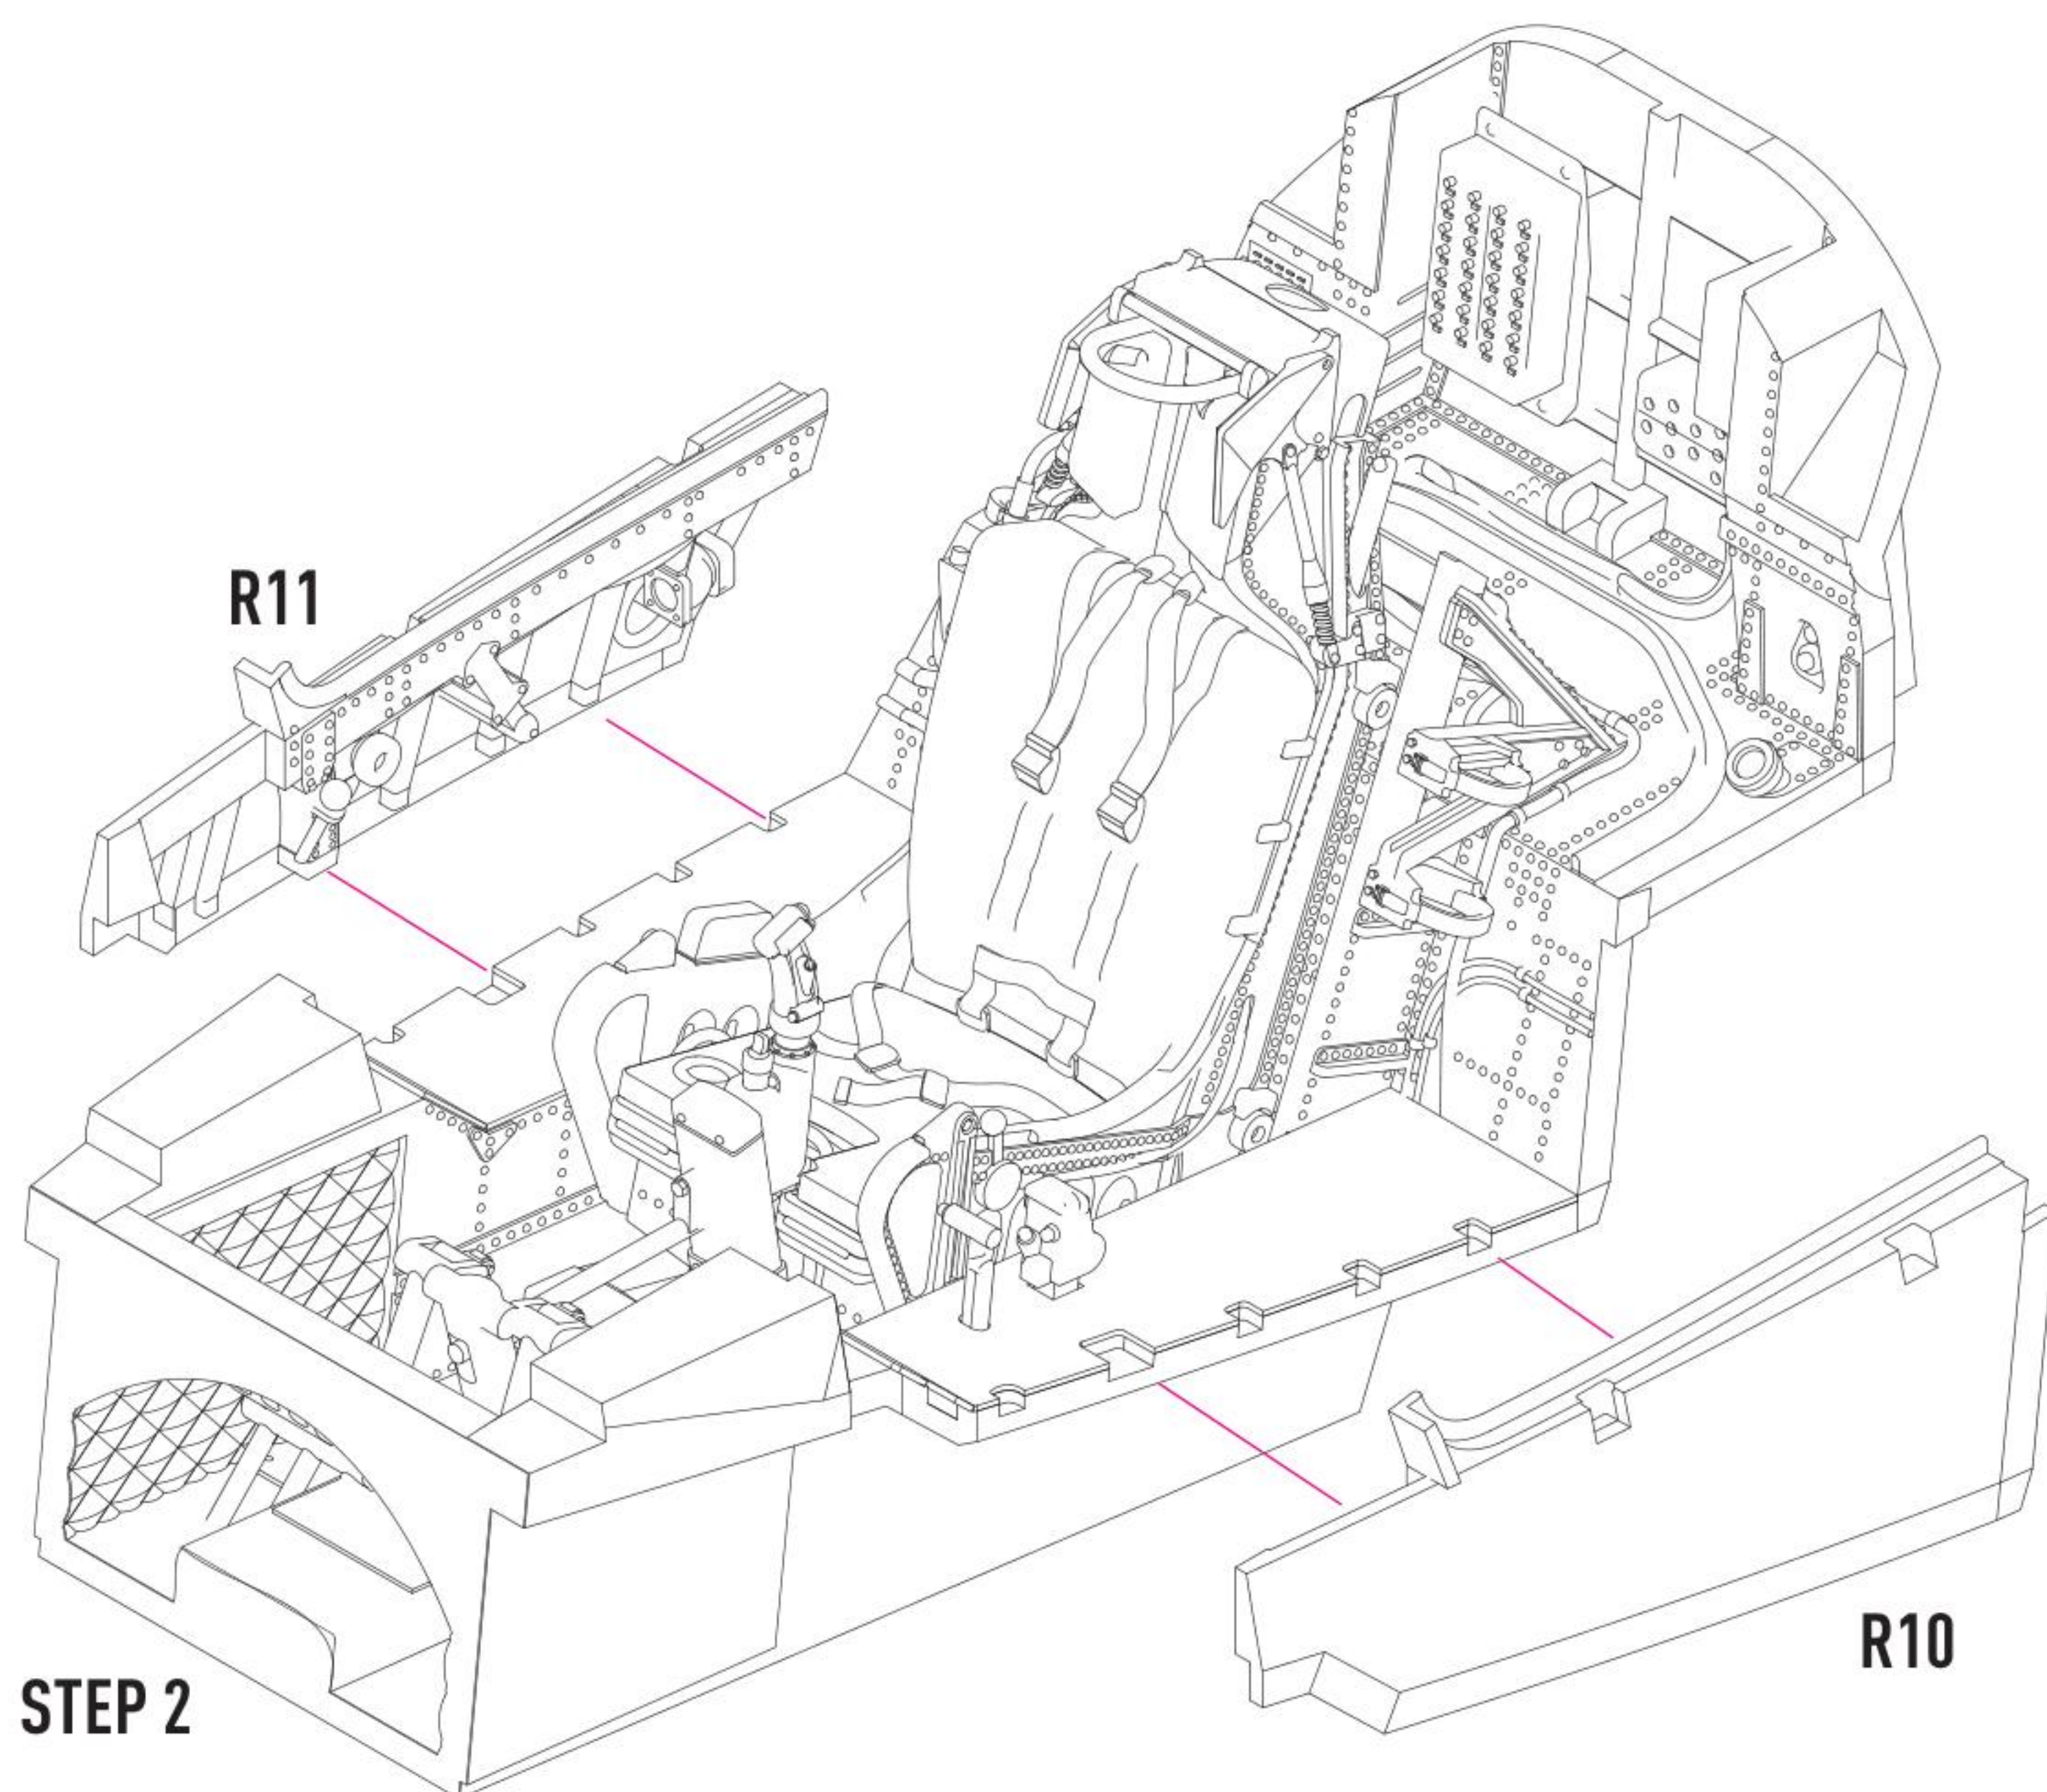


4

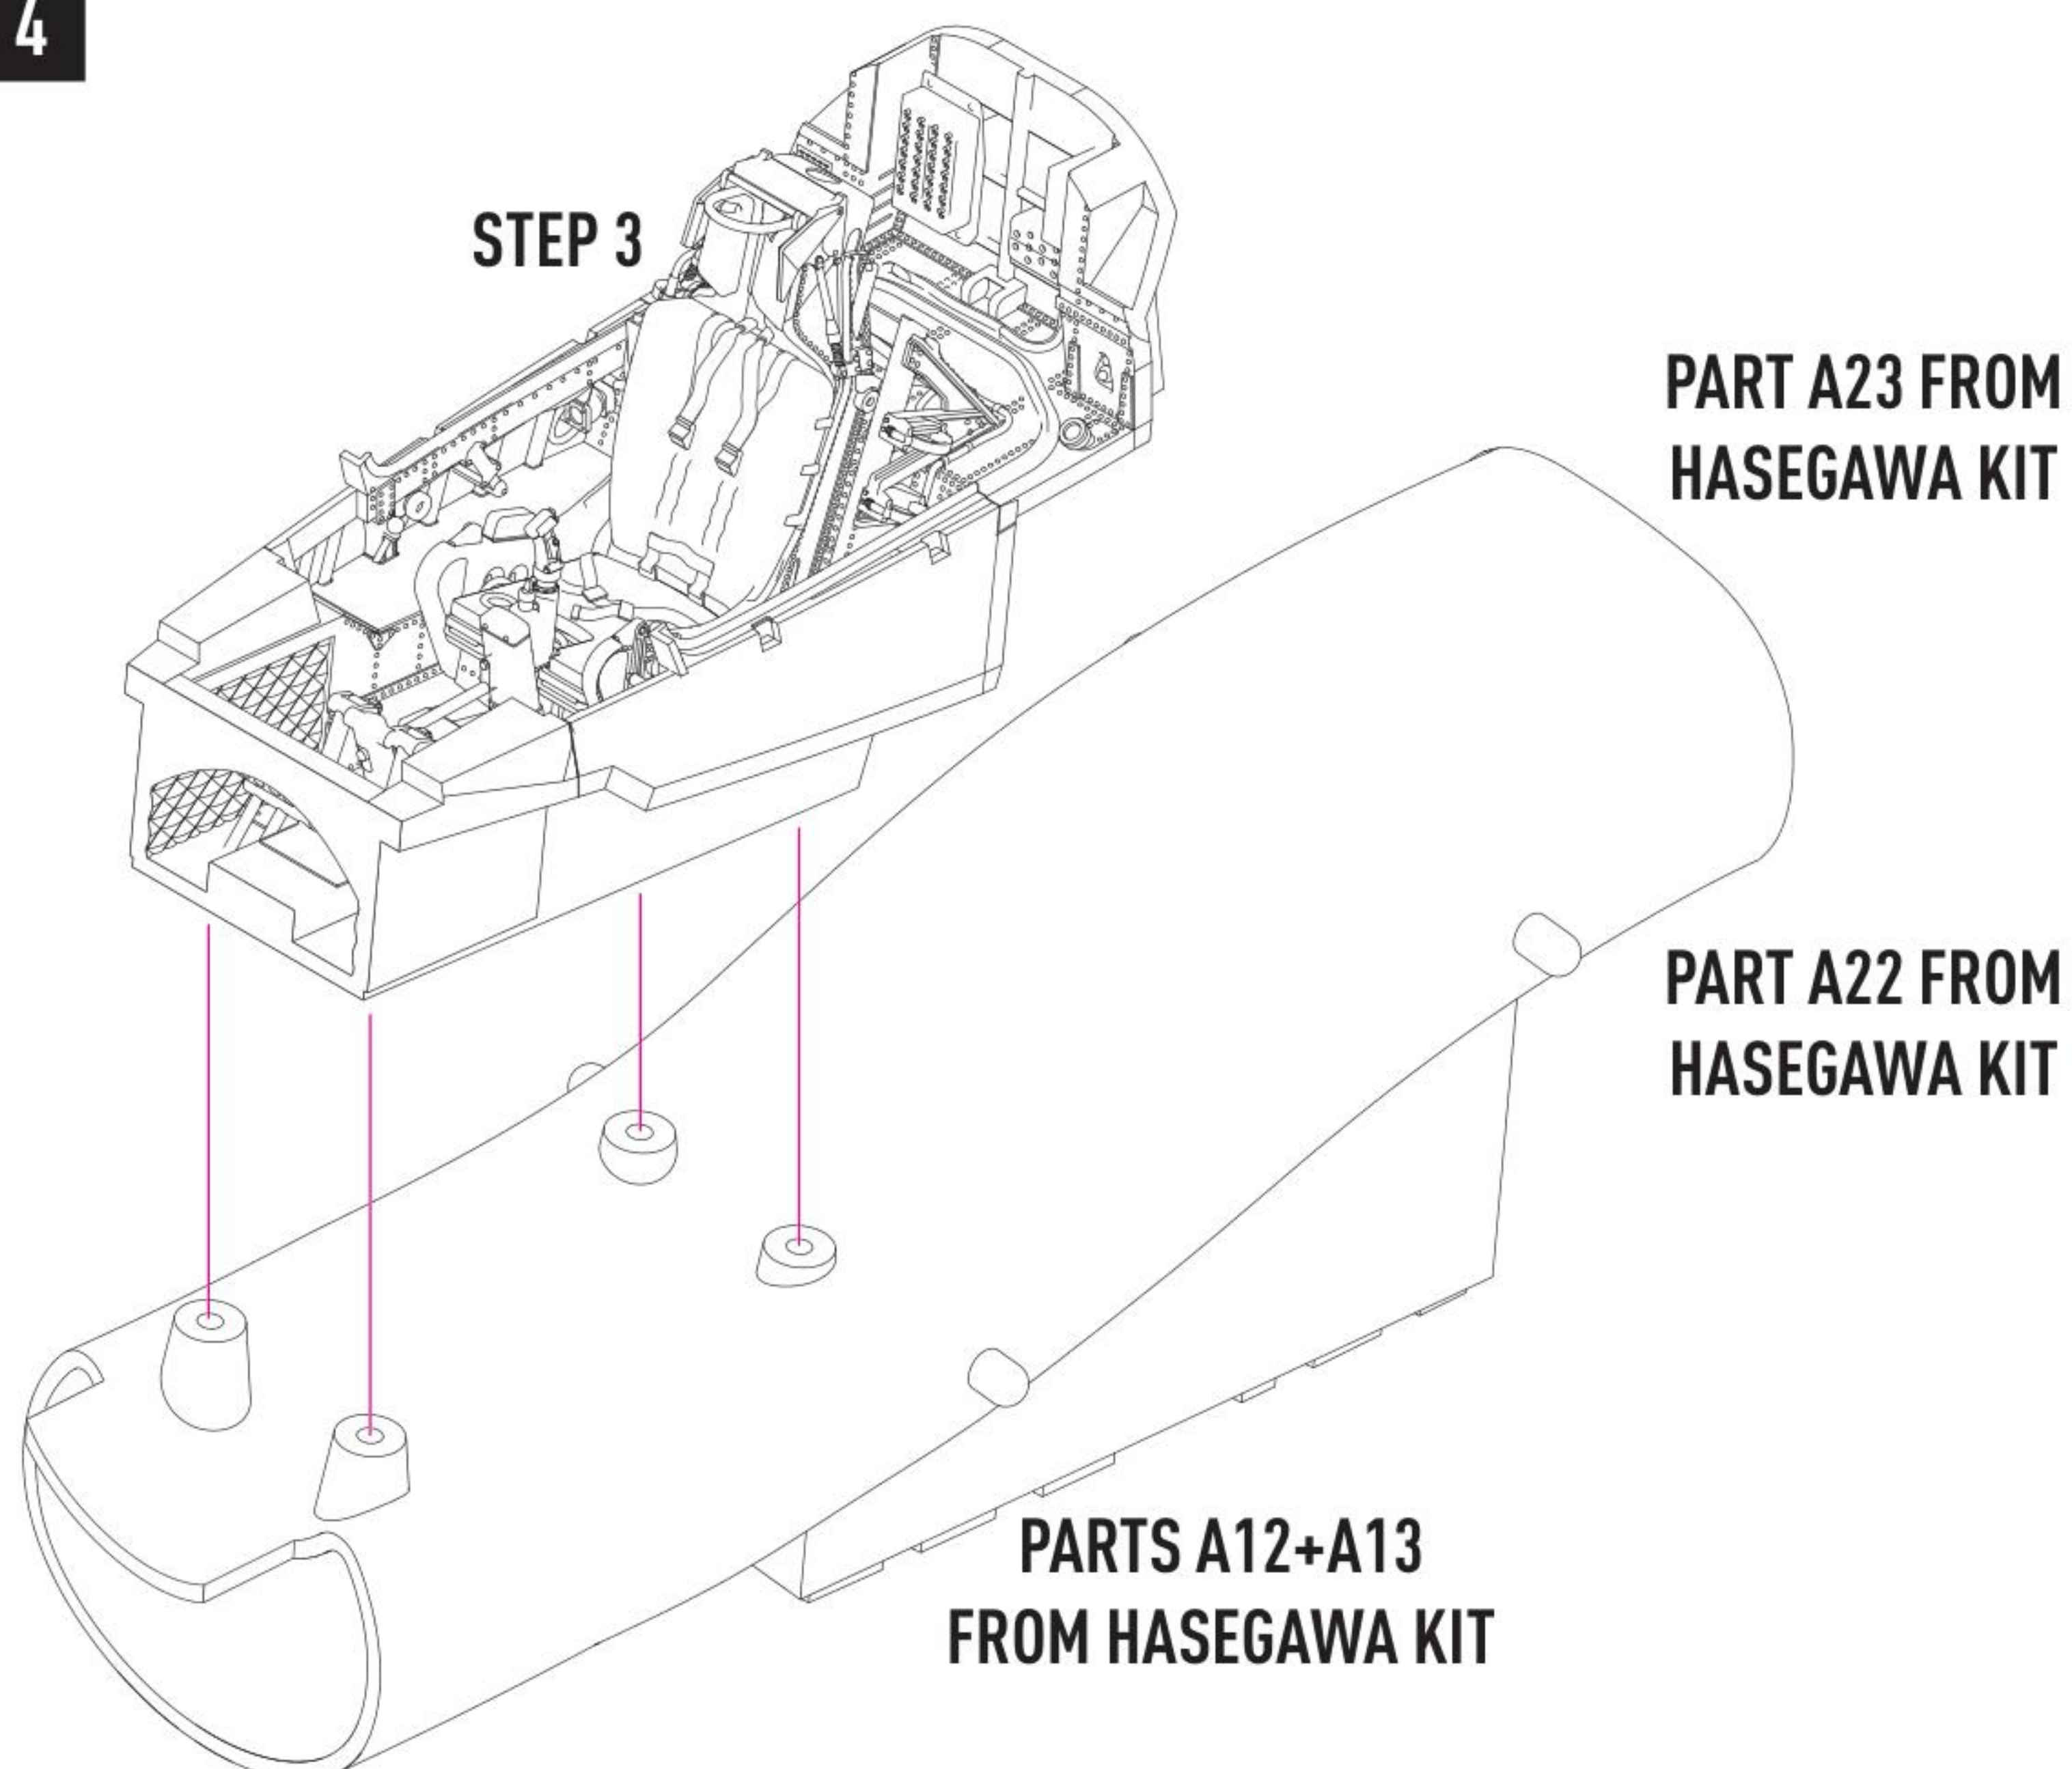


5 PREPARATION OF FUSELAGE PARTS FOR INSTALLATION OF ADDITIONAL KIT

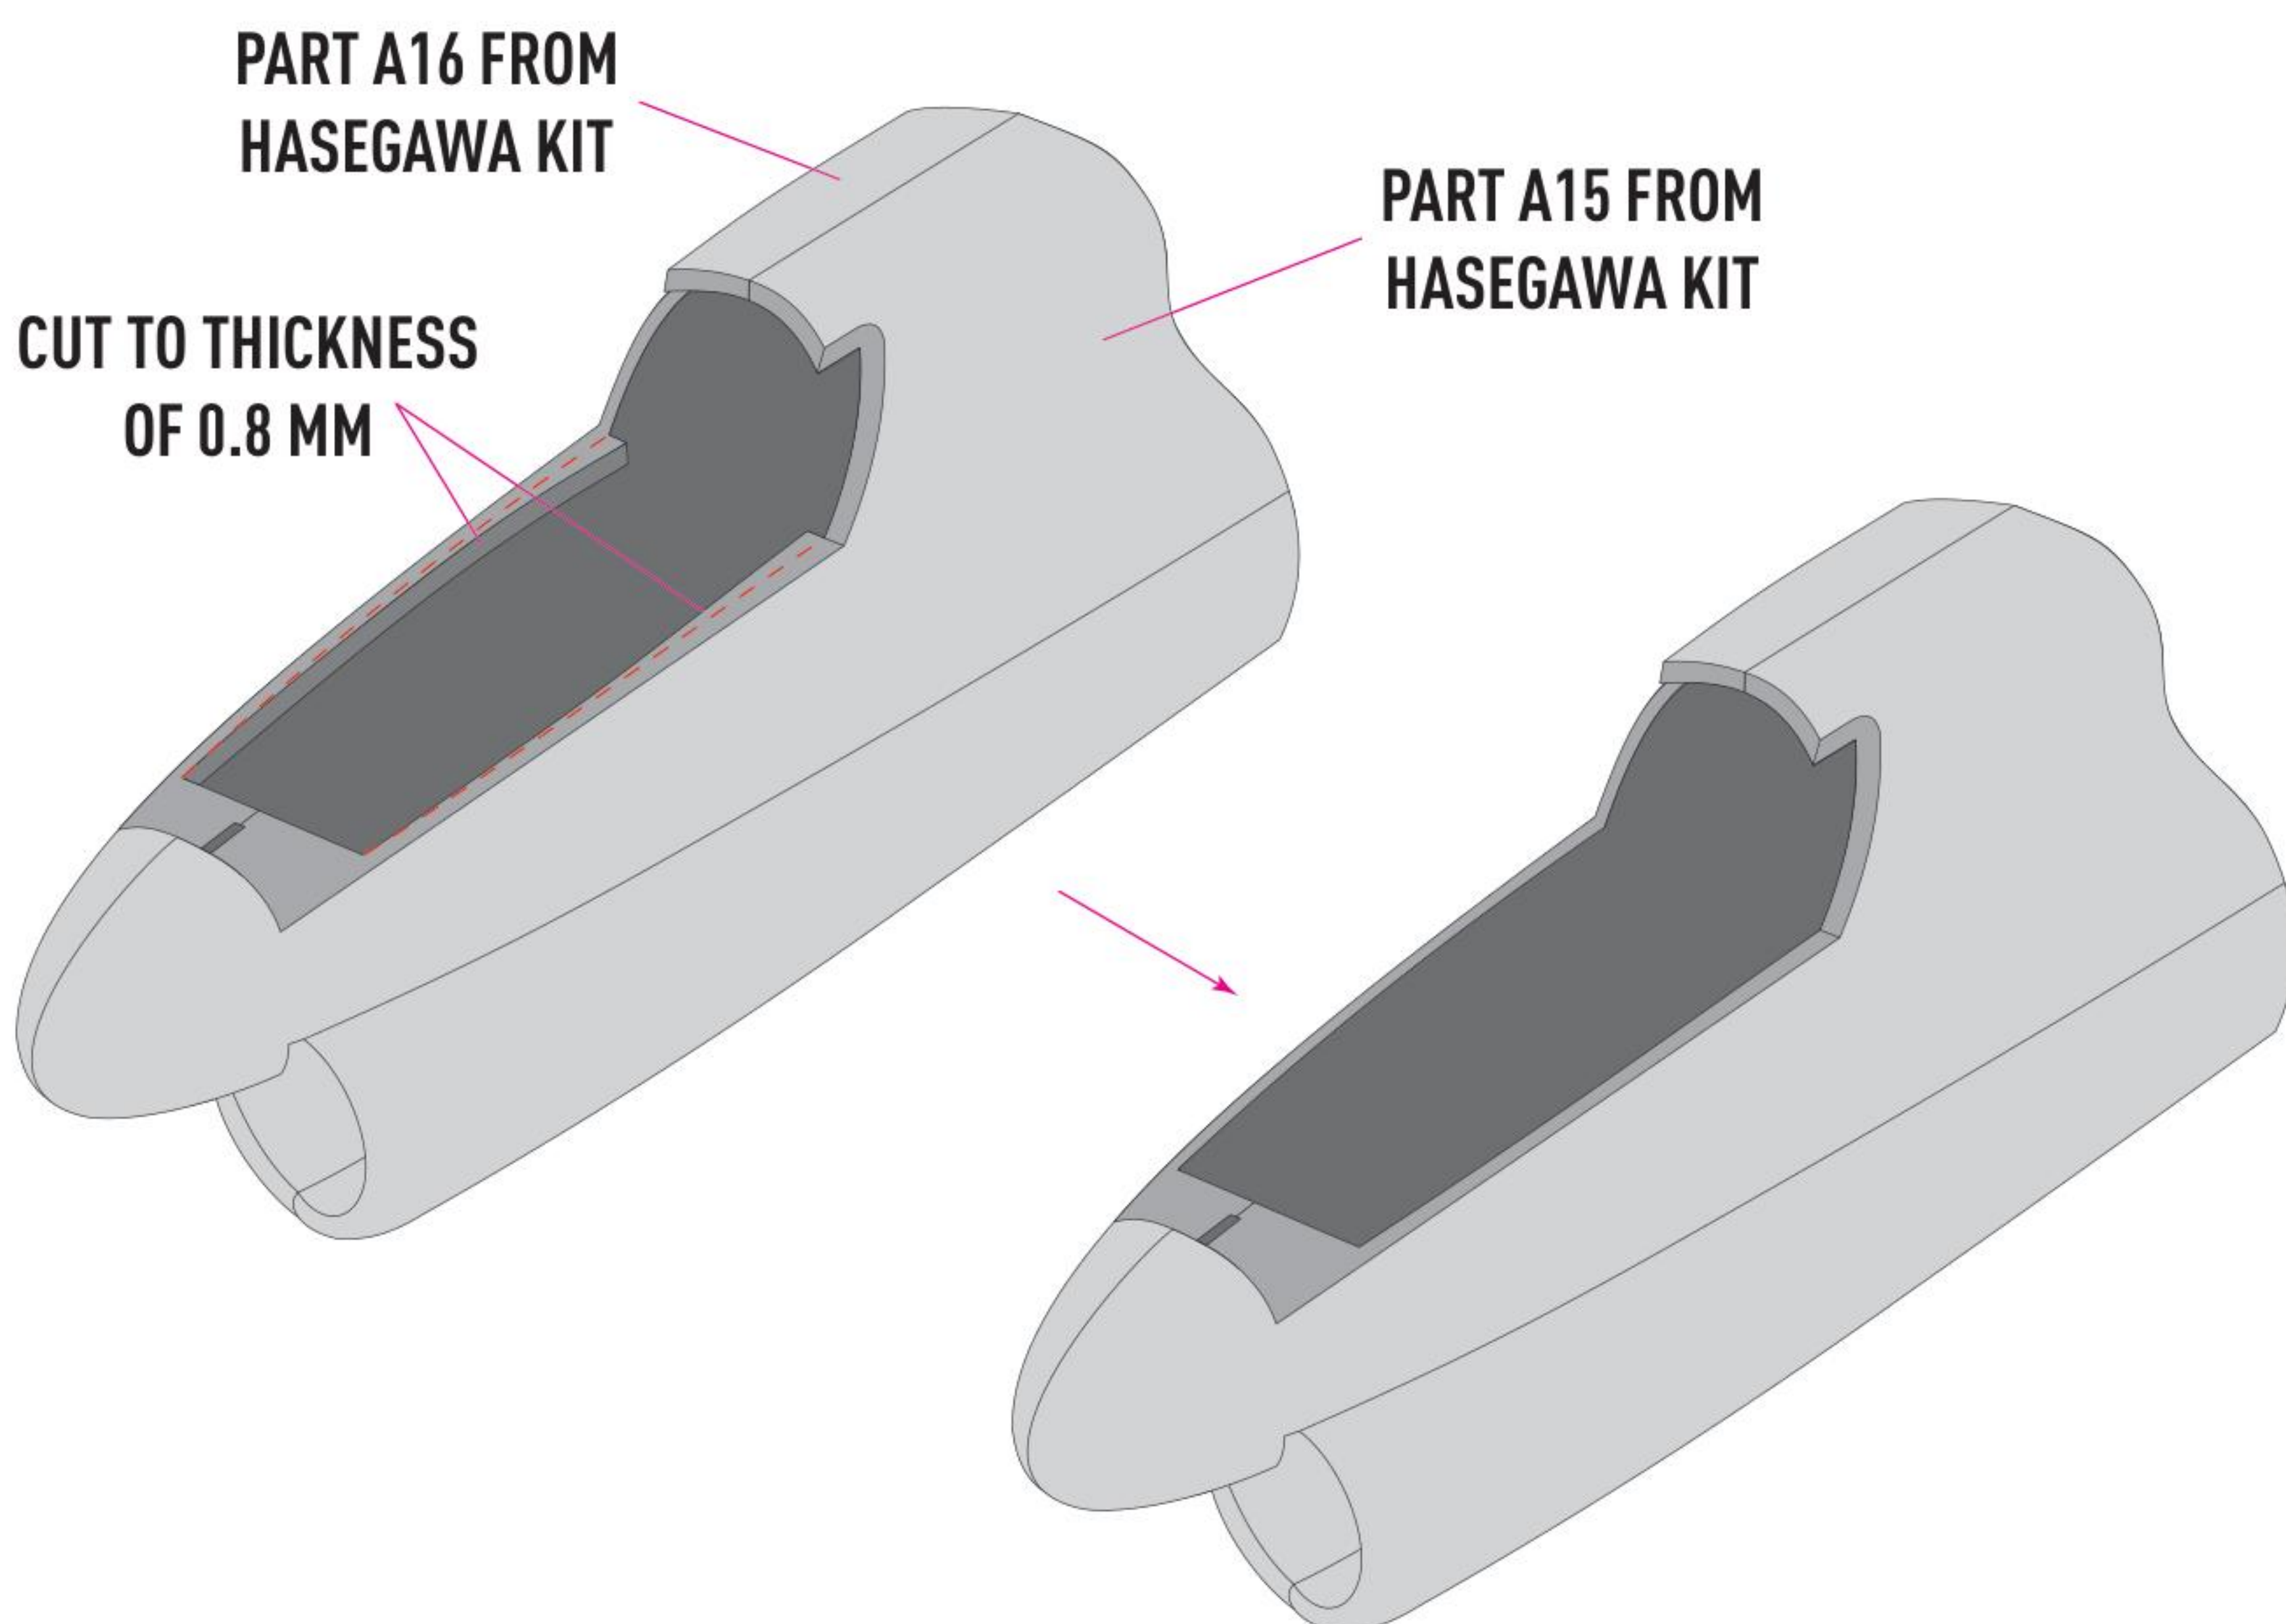


6

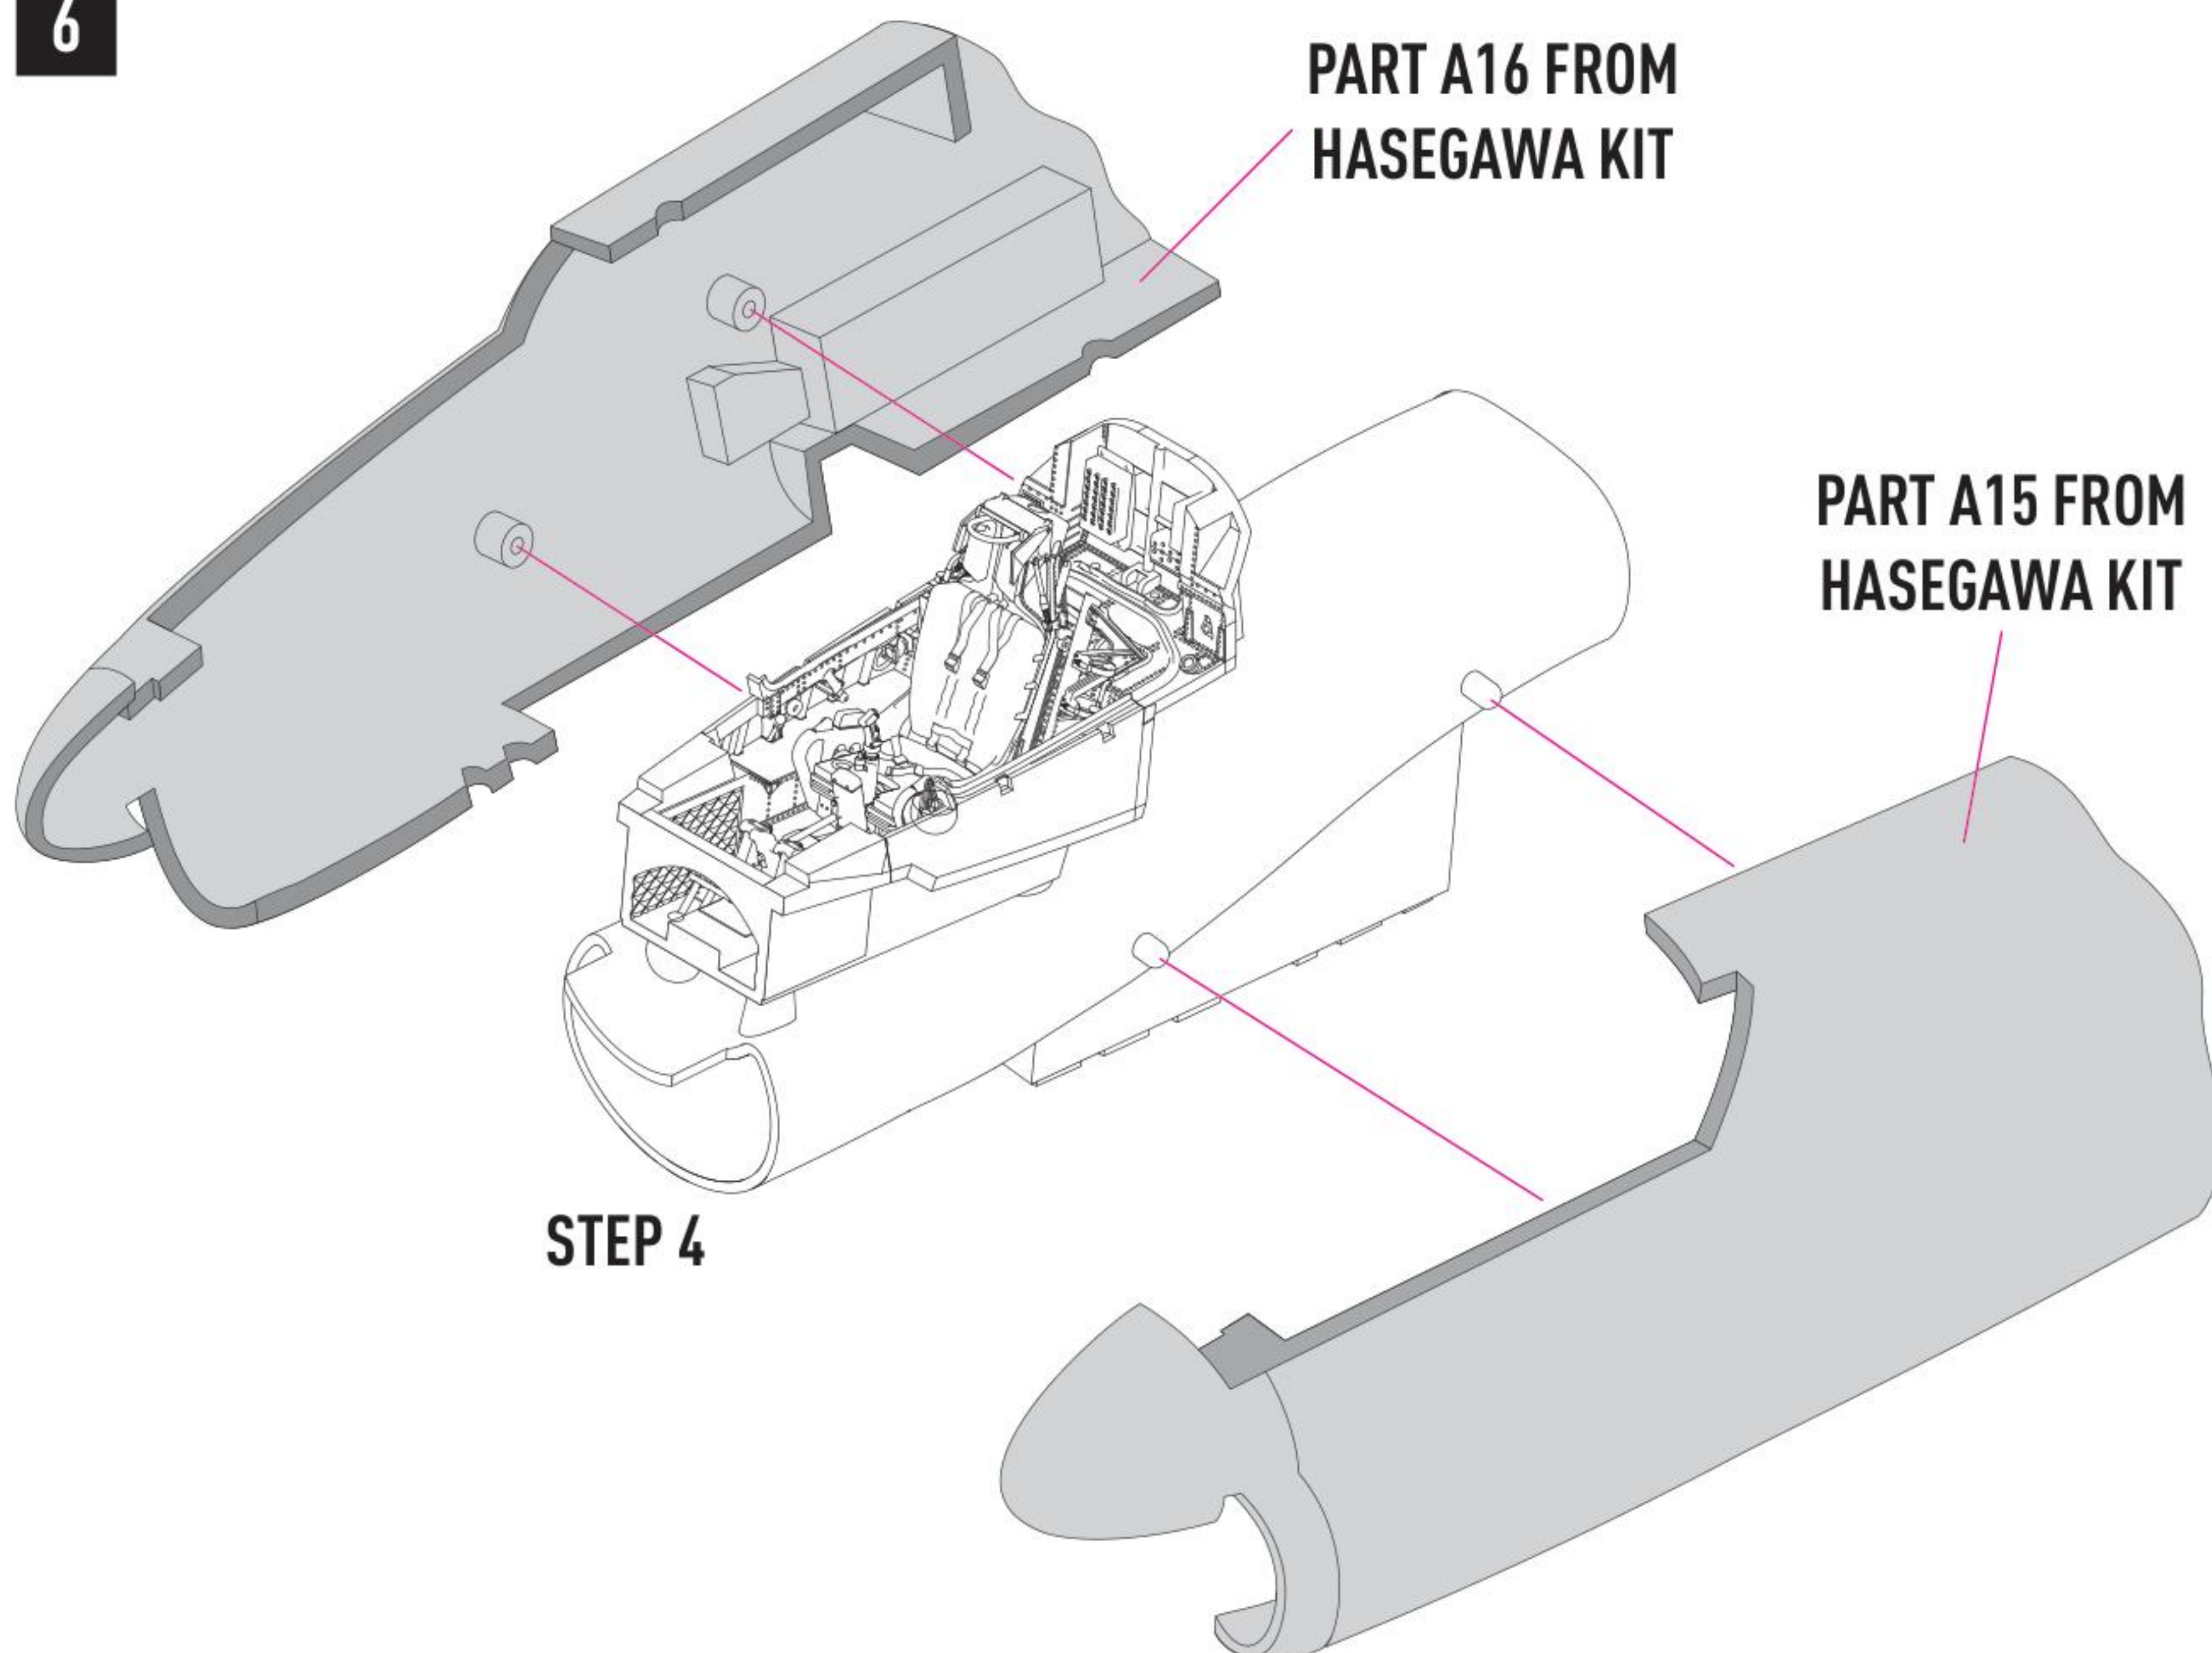


7 CLOSED CANOPY

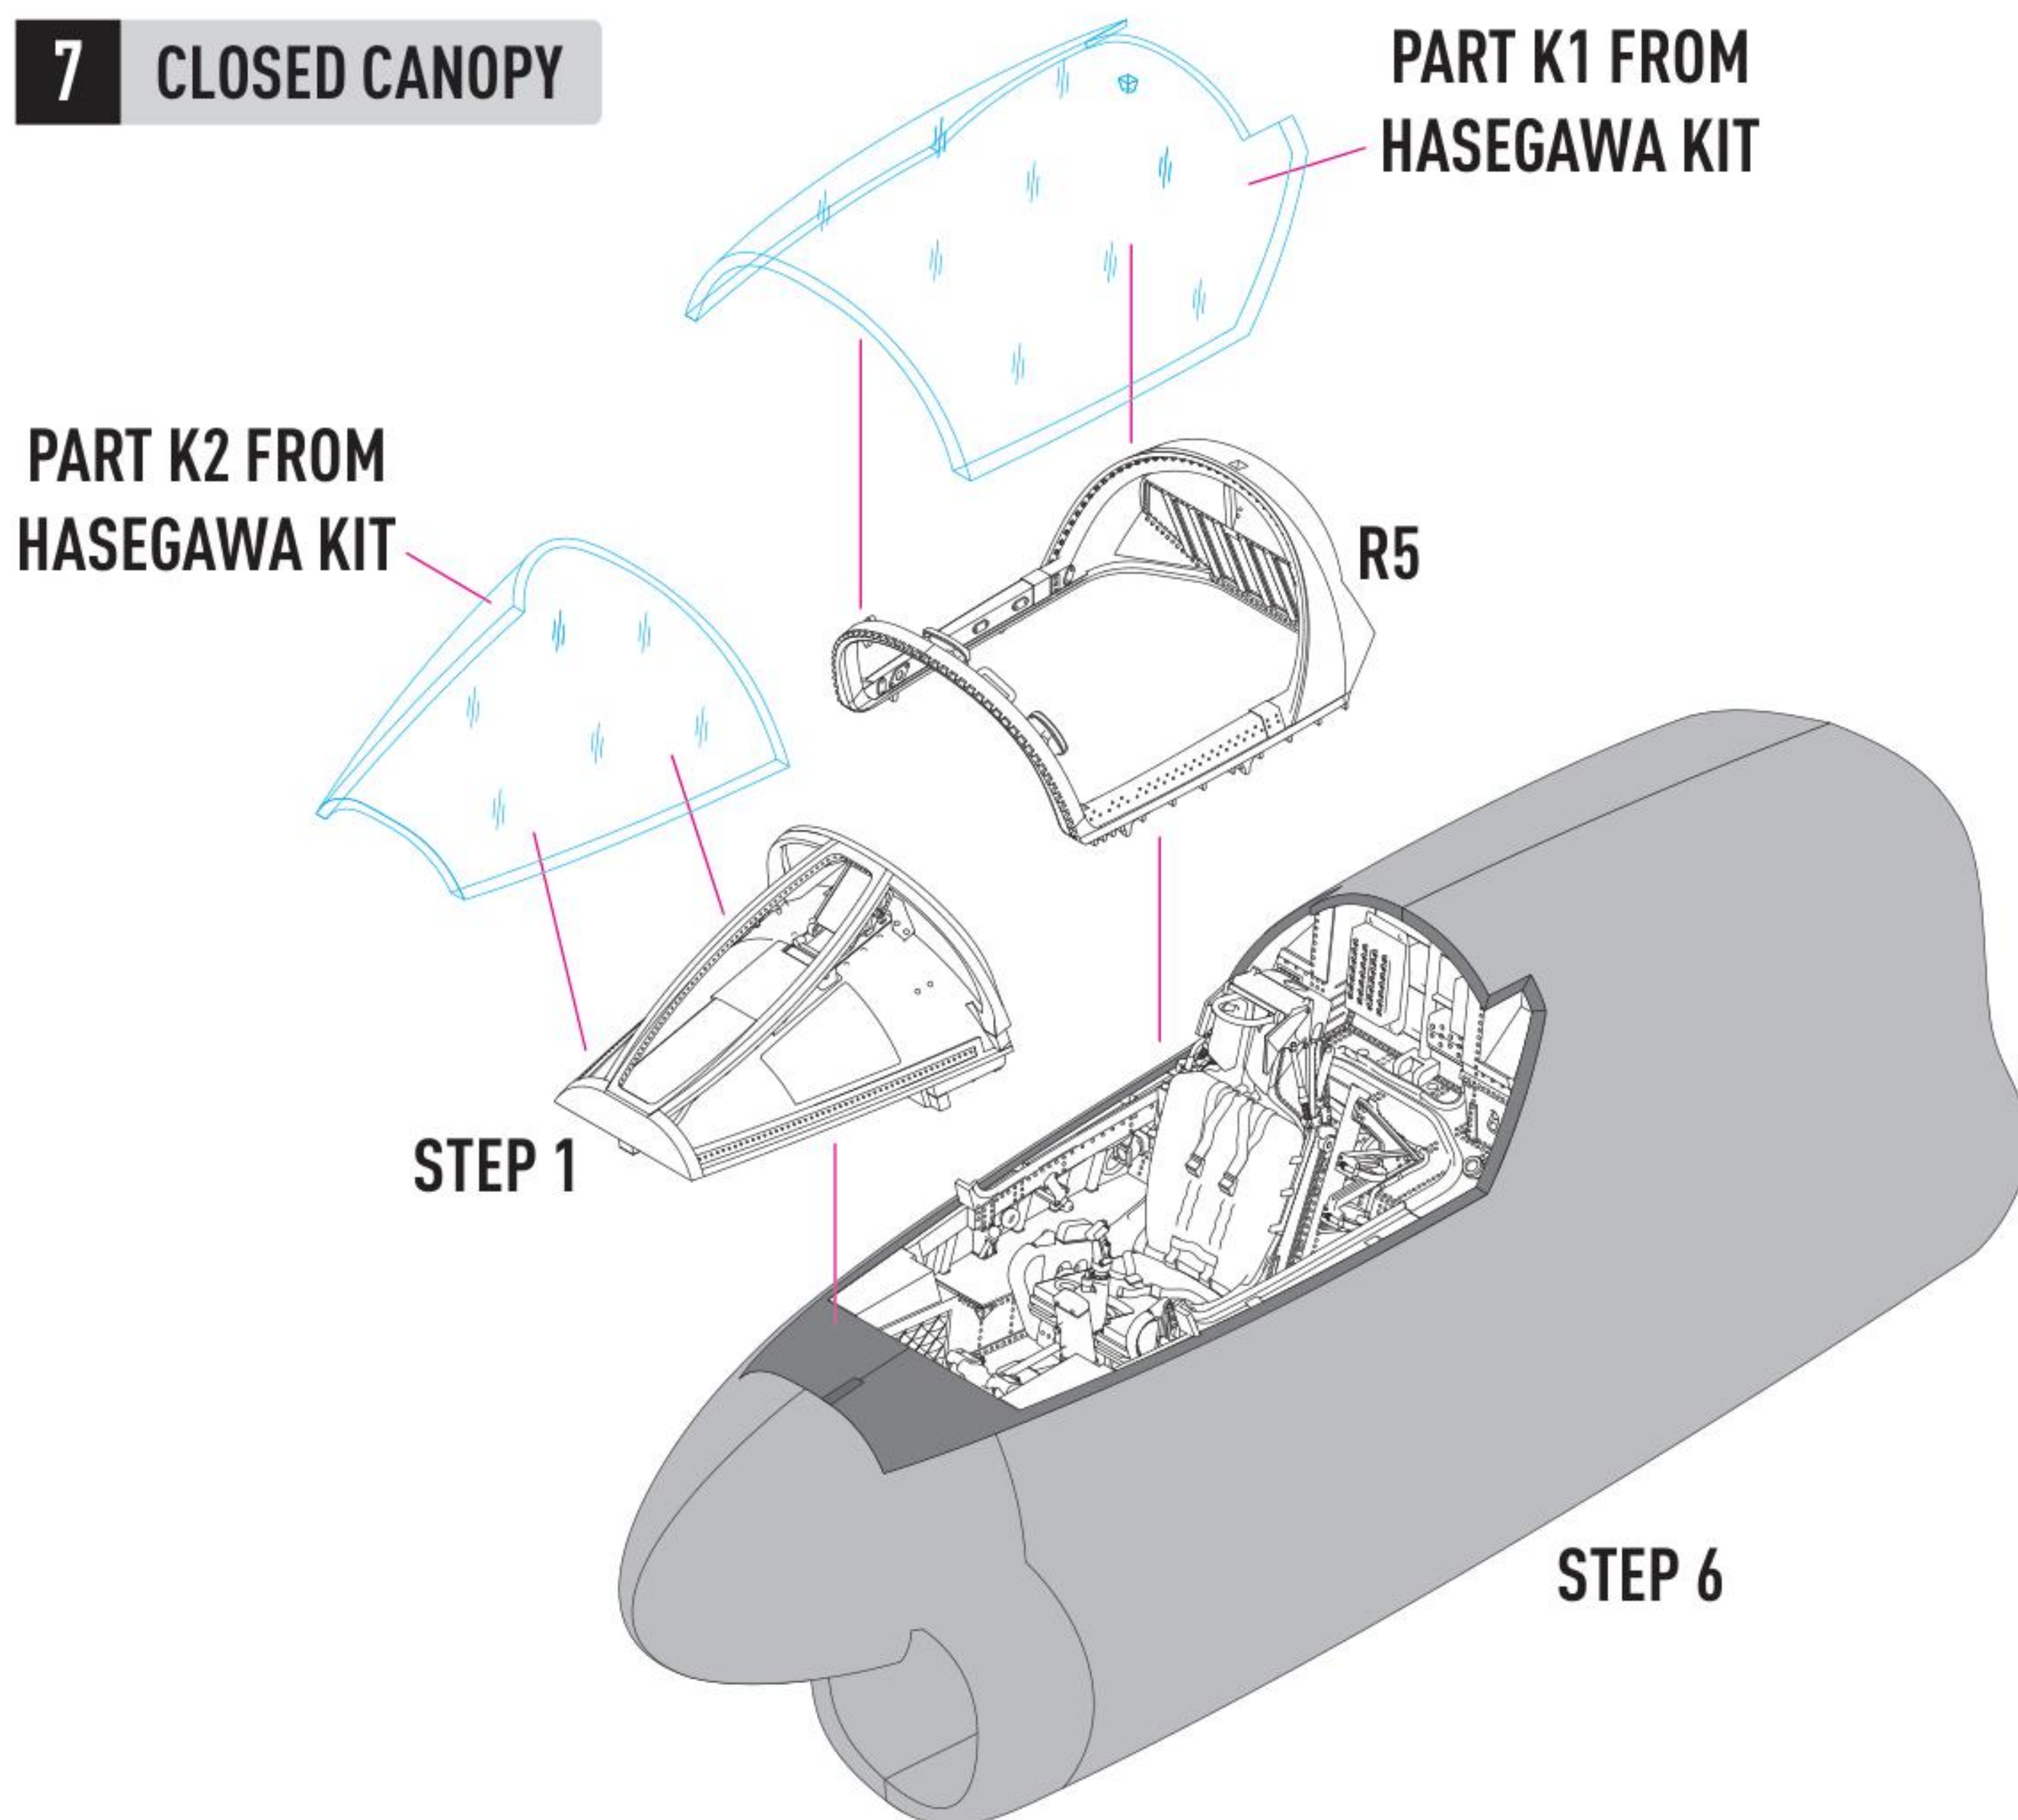


OPEN CANOPY





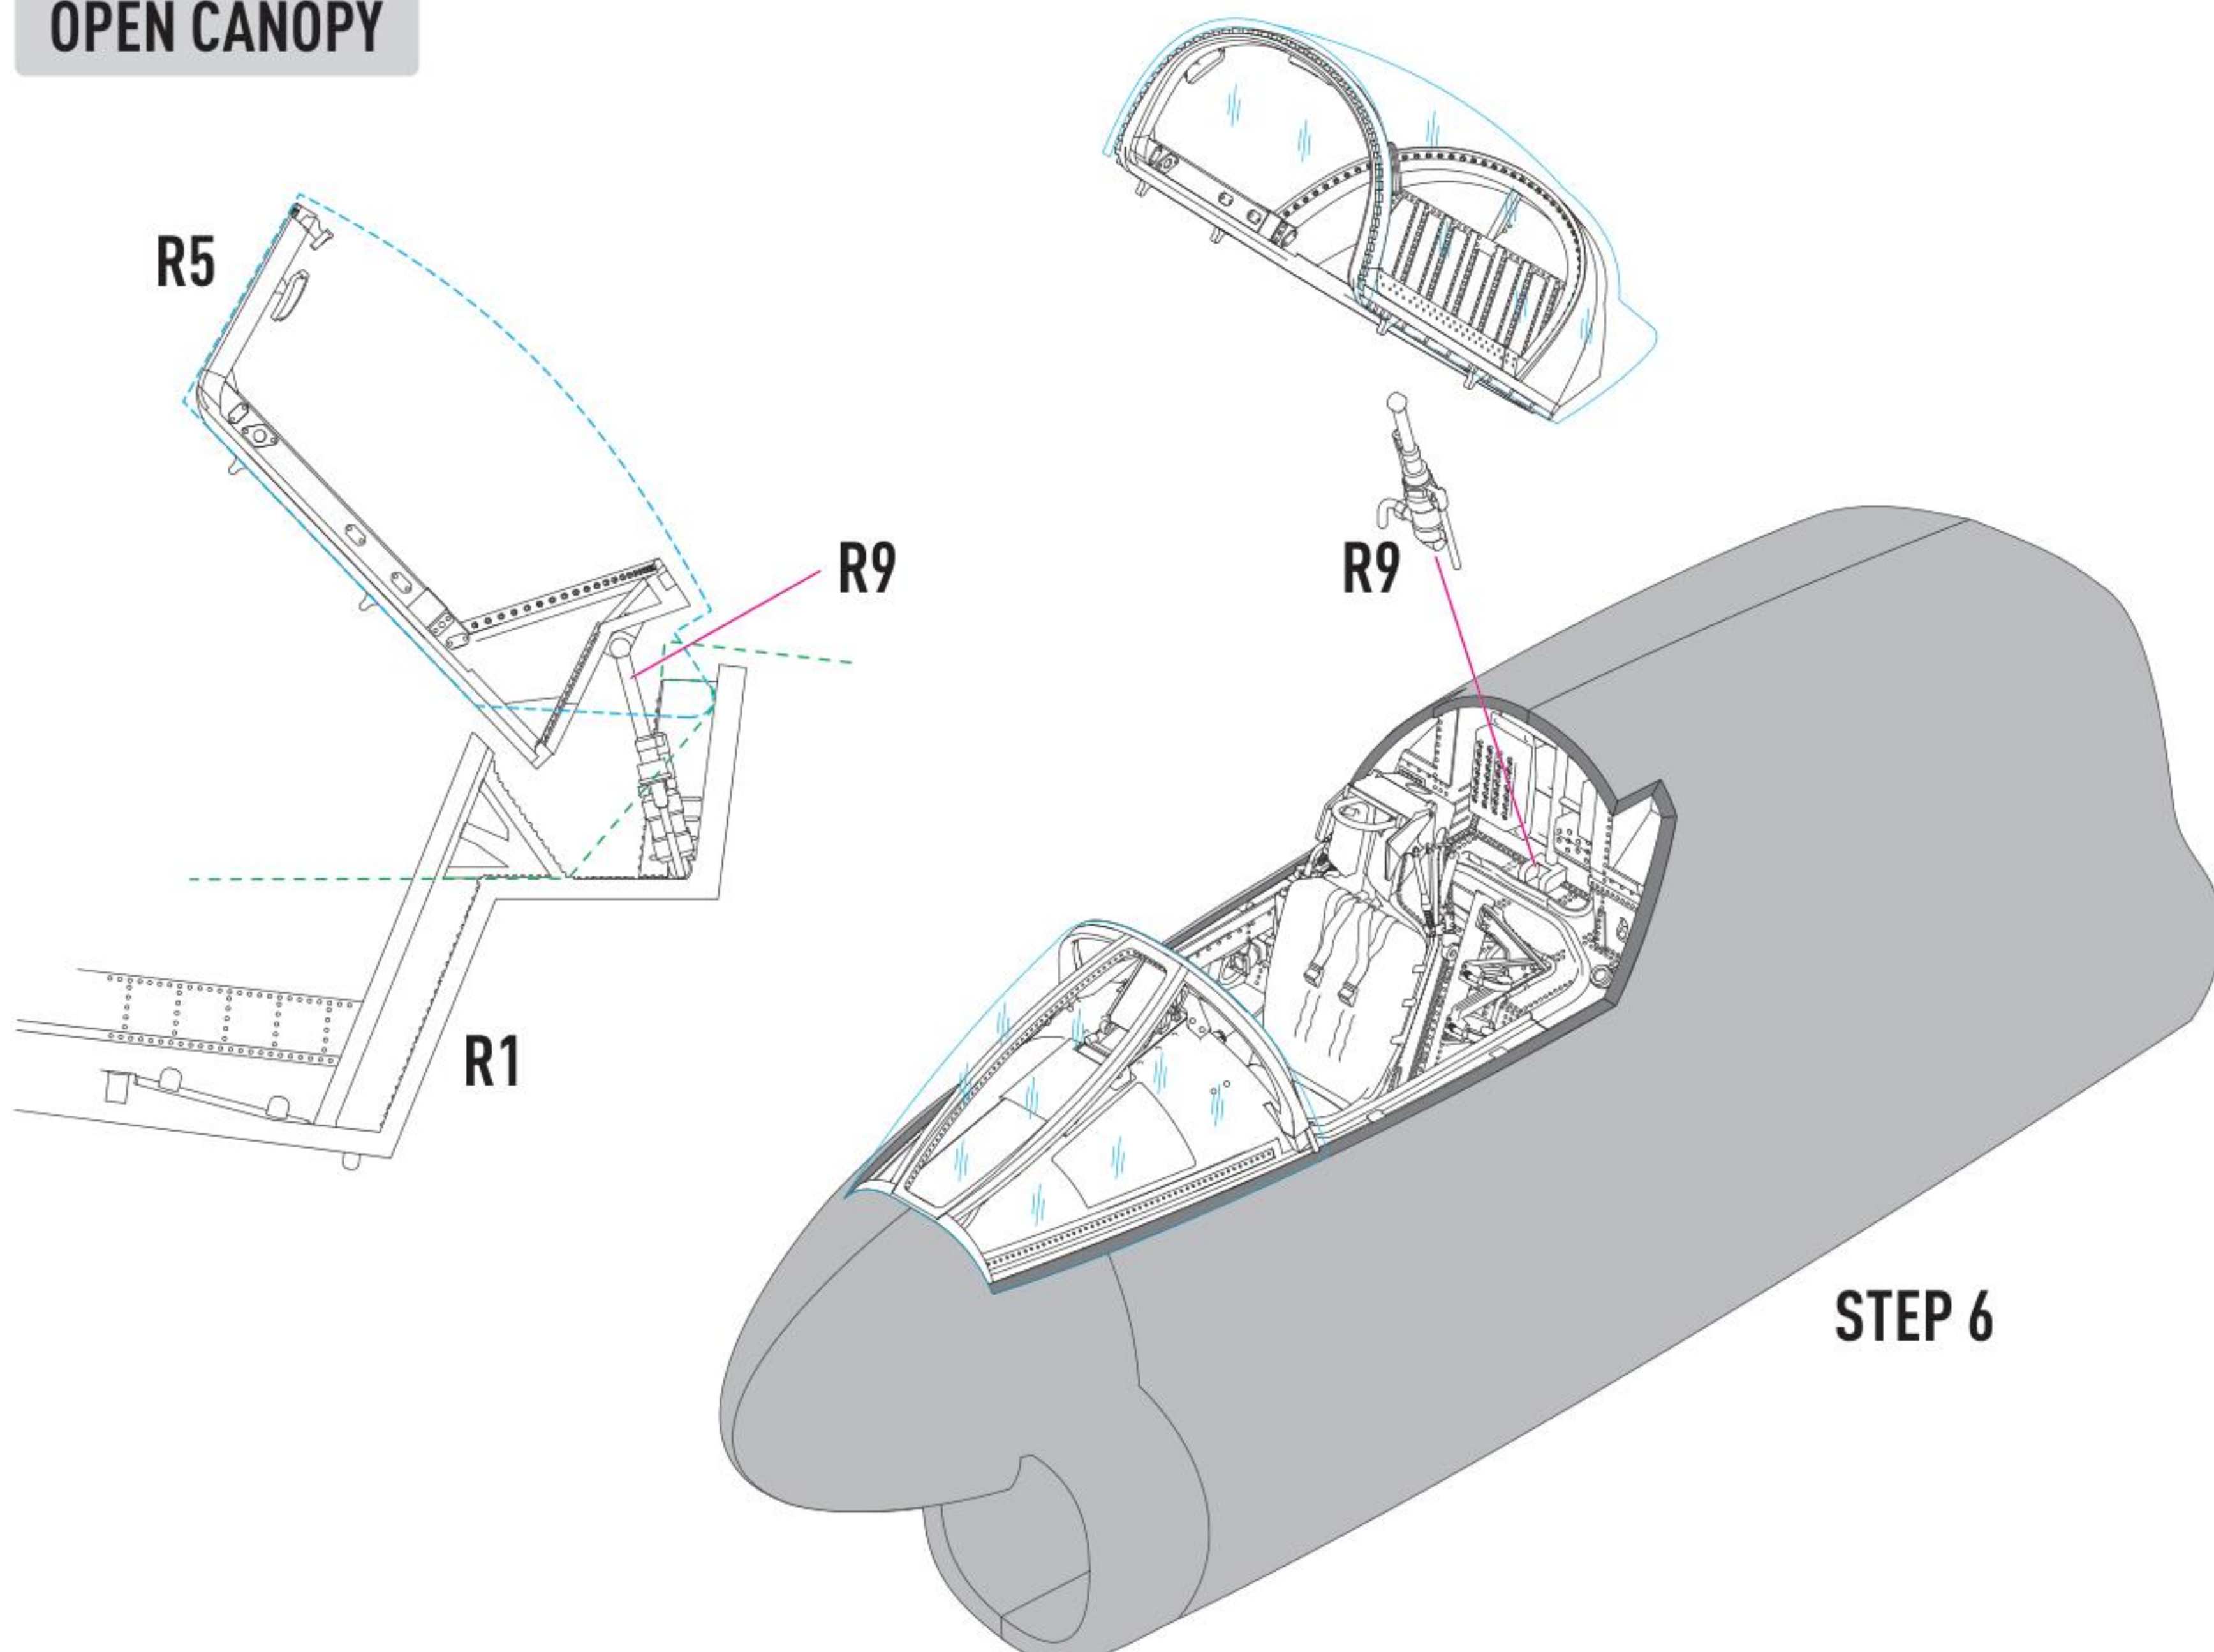


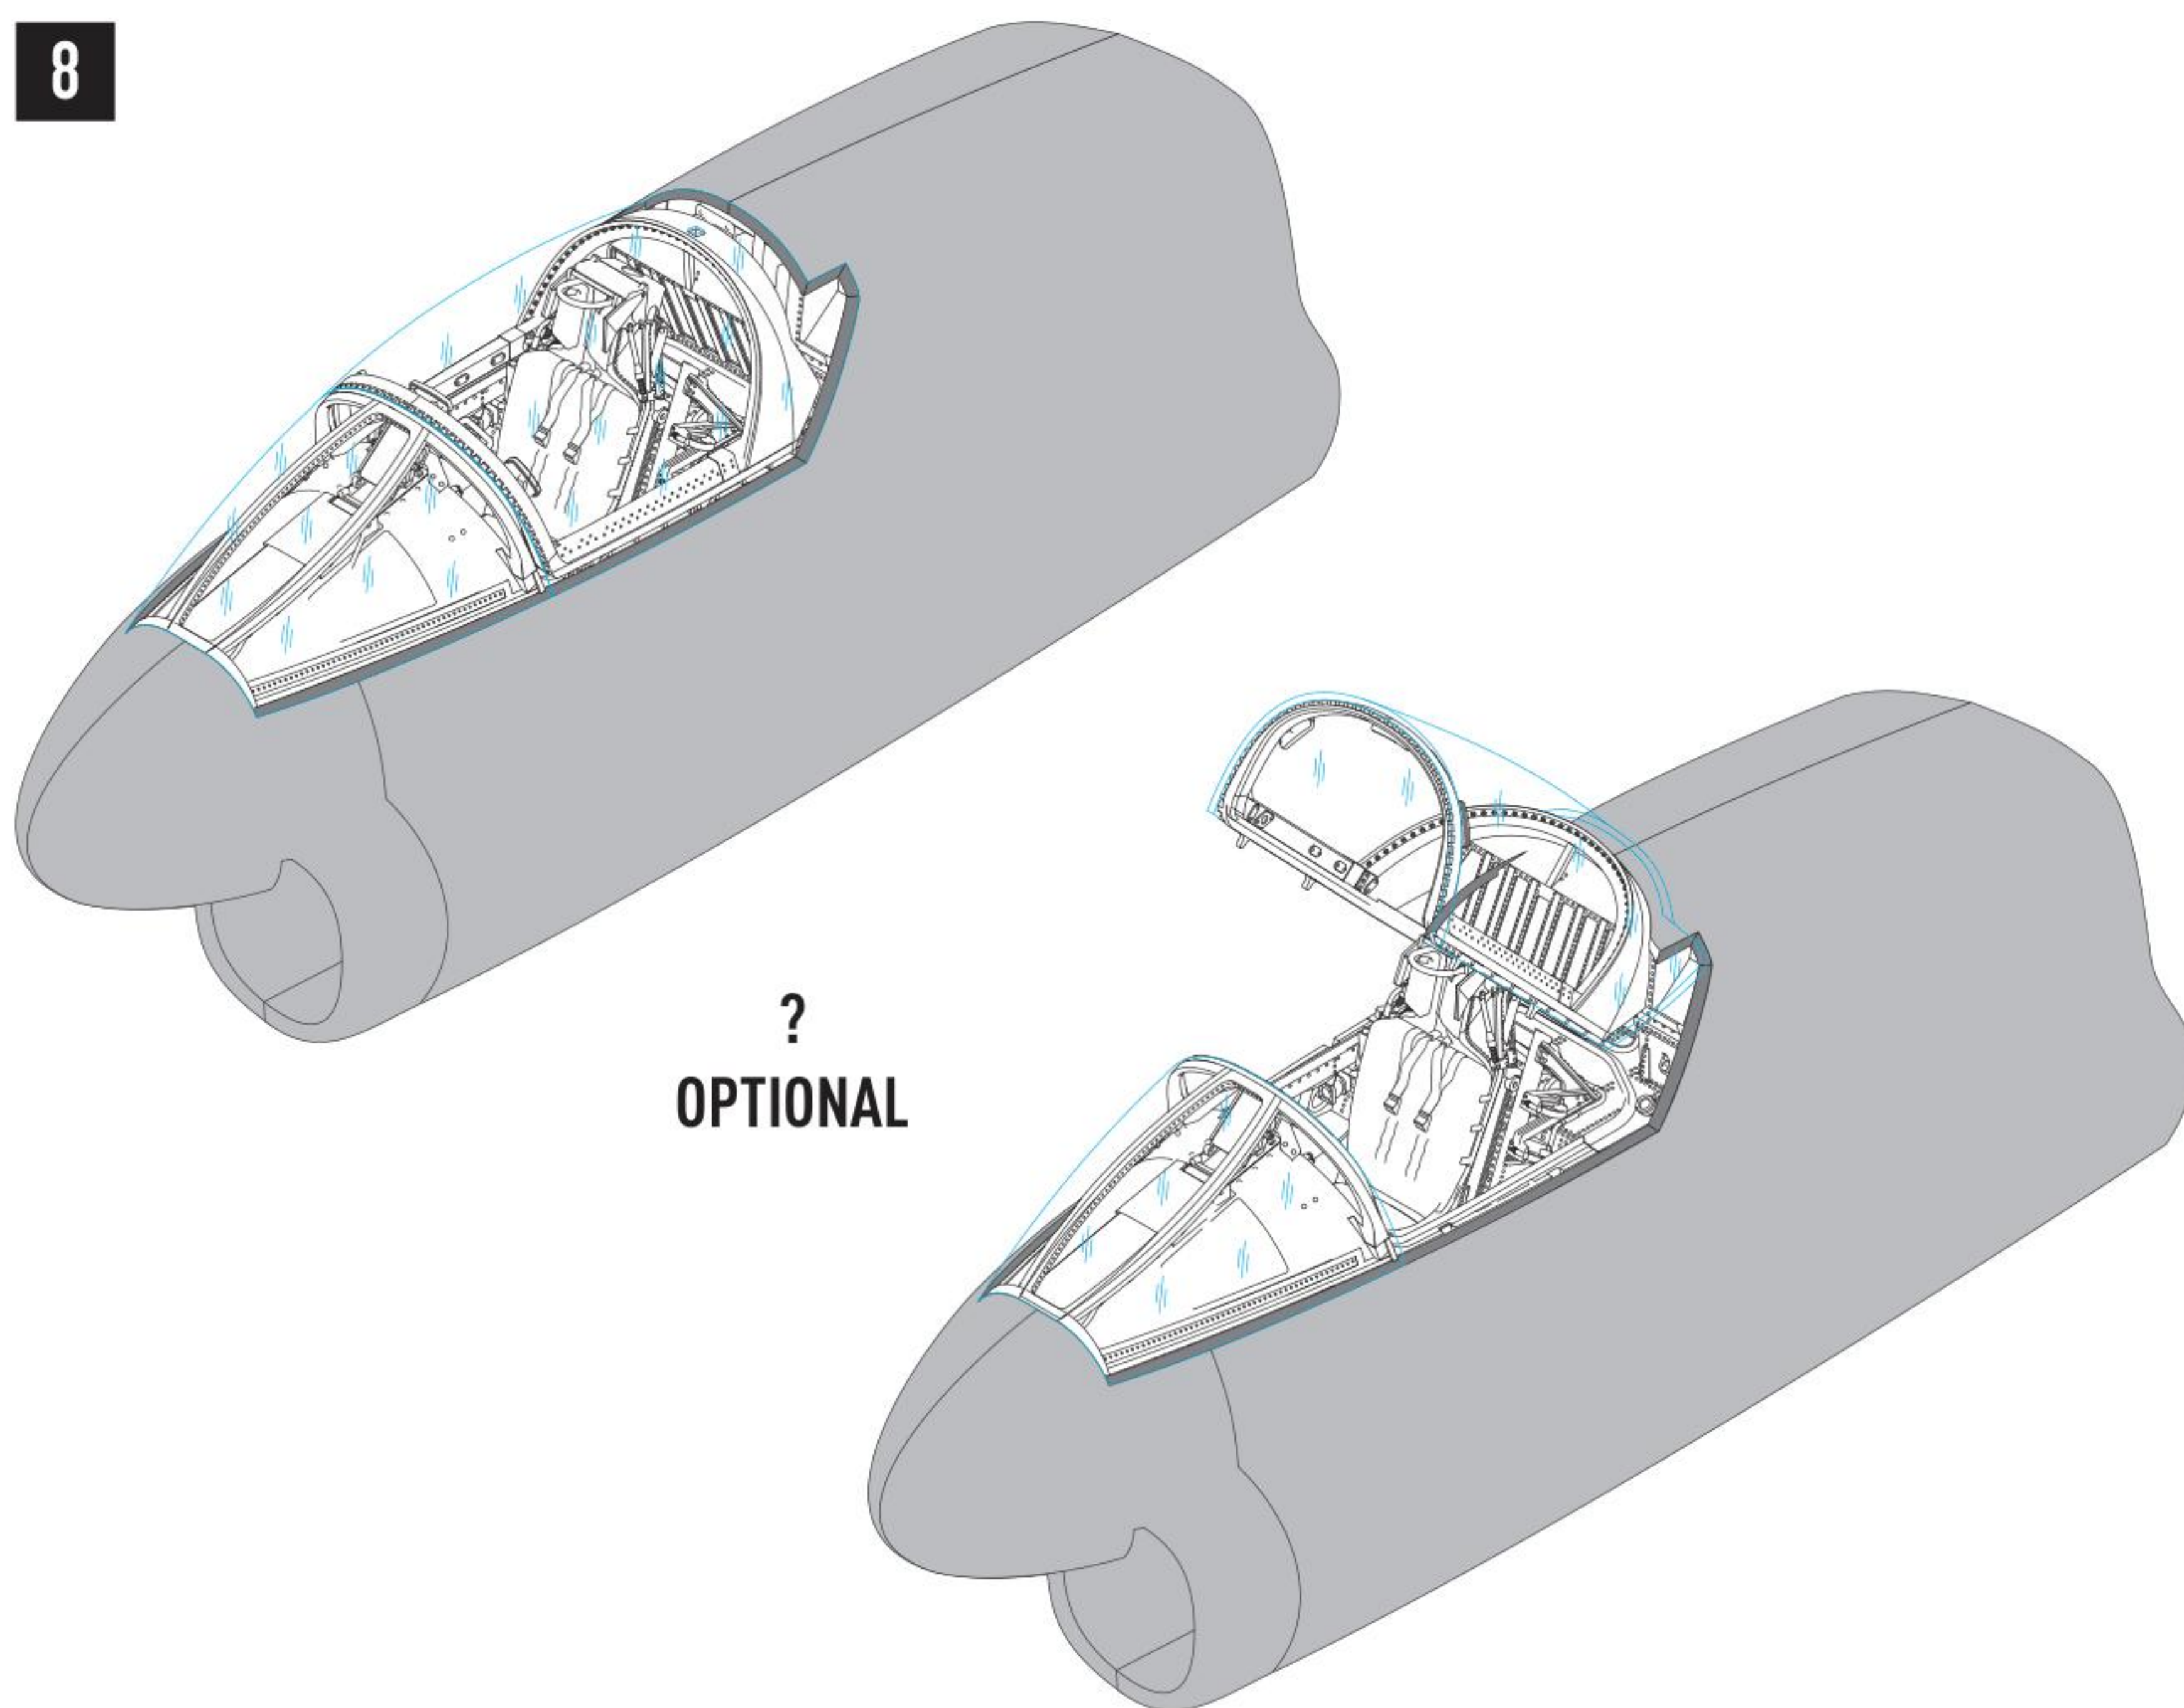

9 3D DECAL APPLICATION INSTRUCTIONS

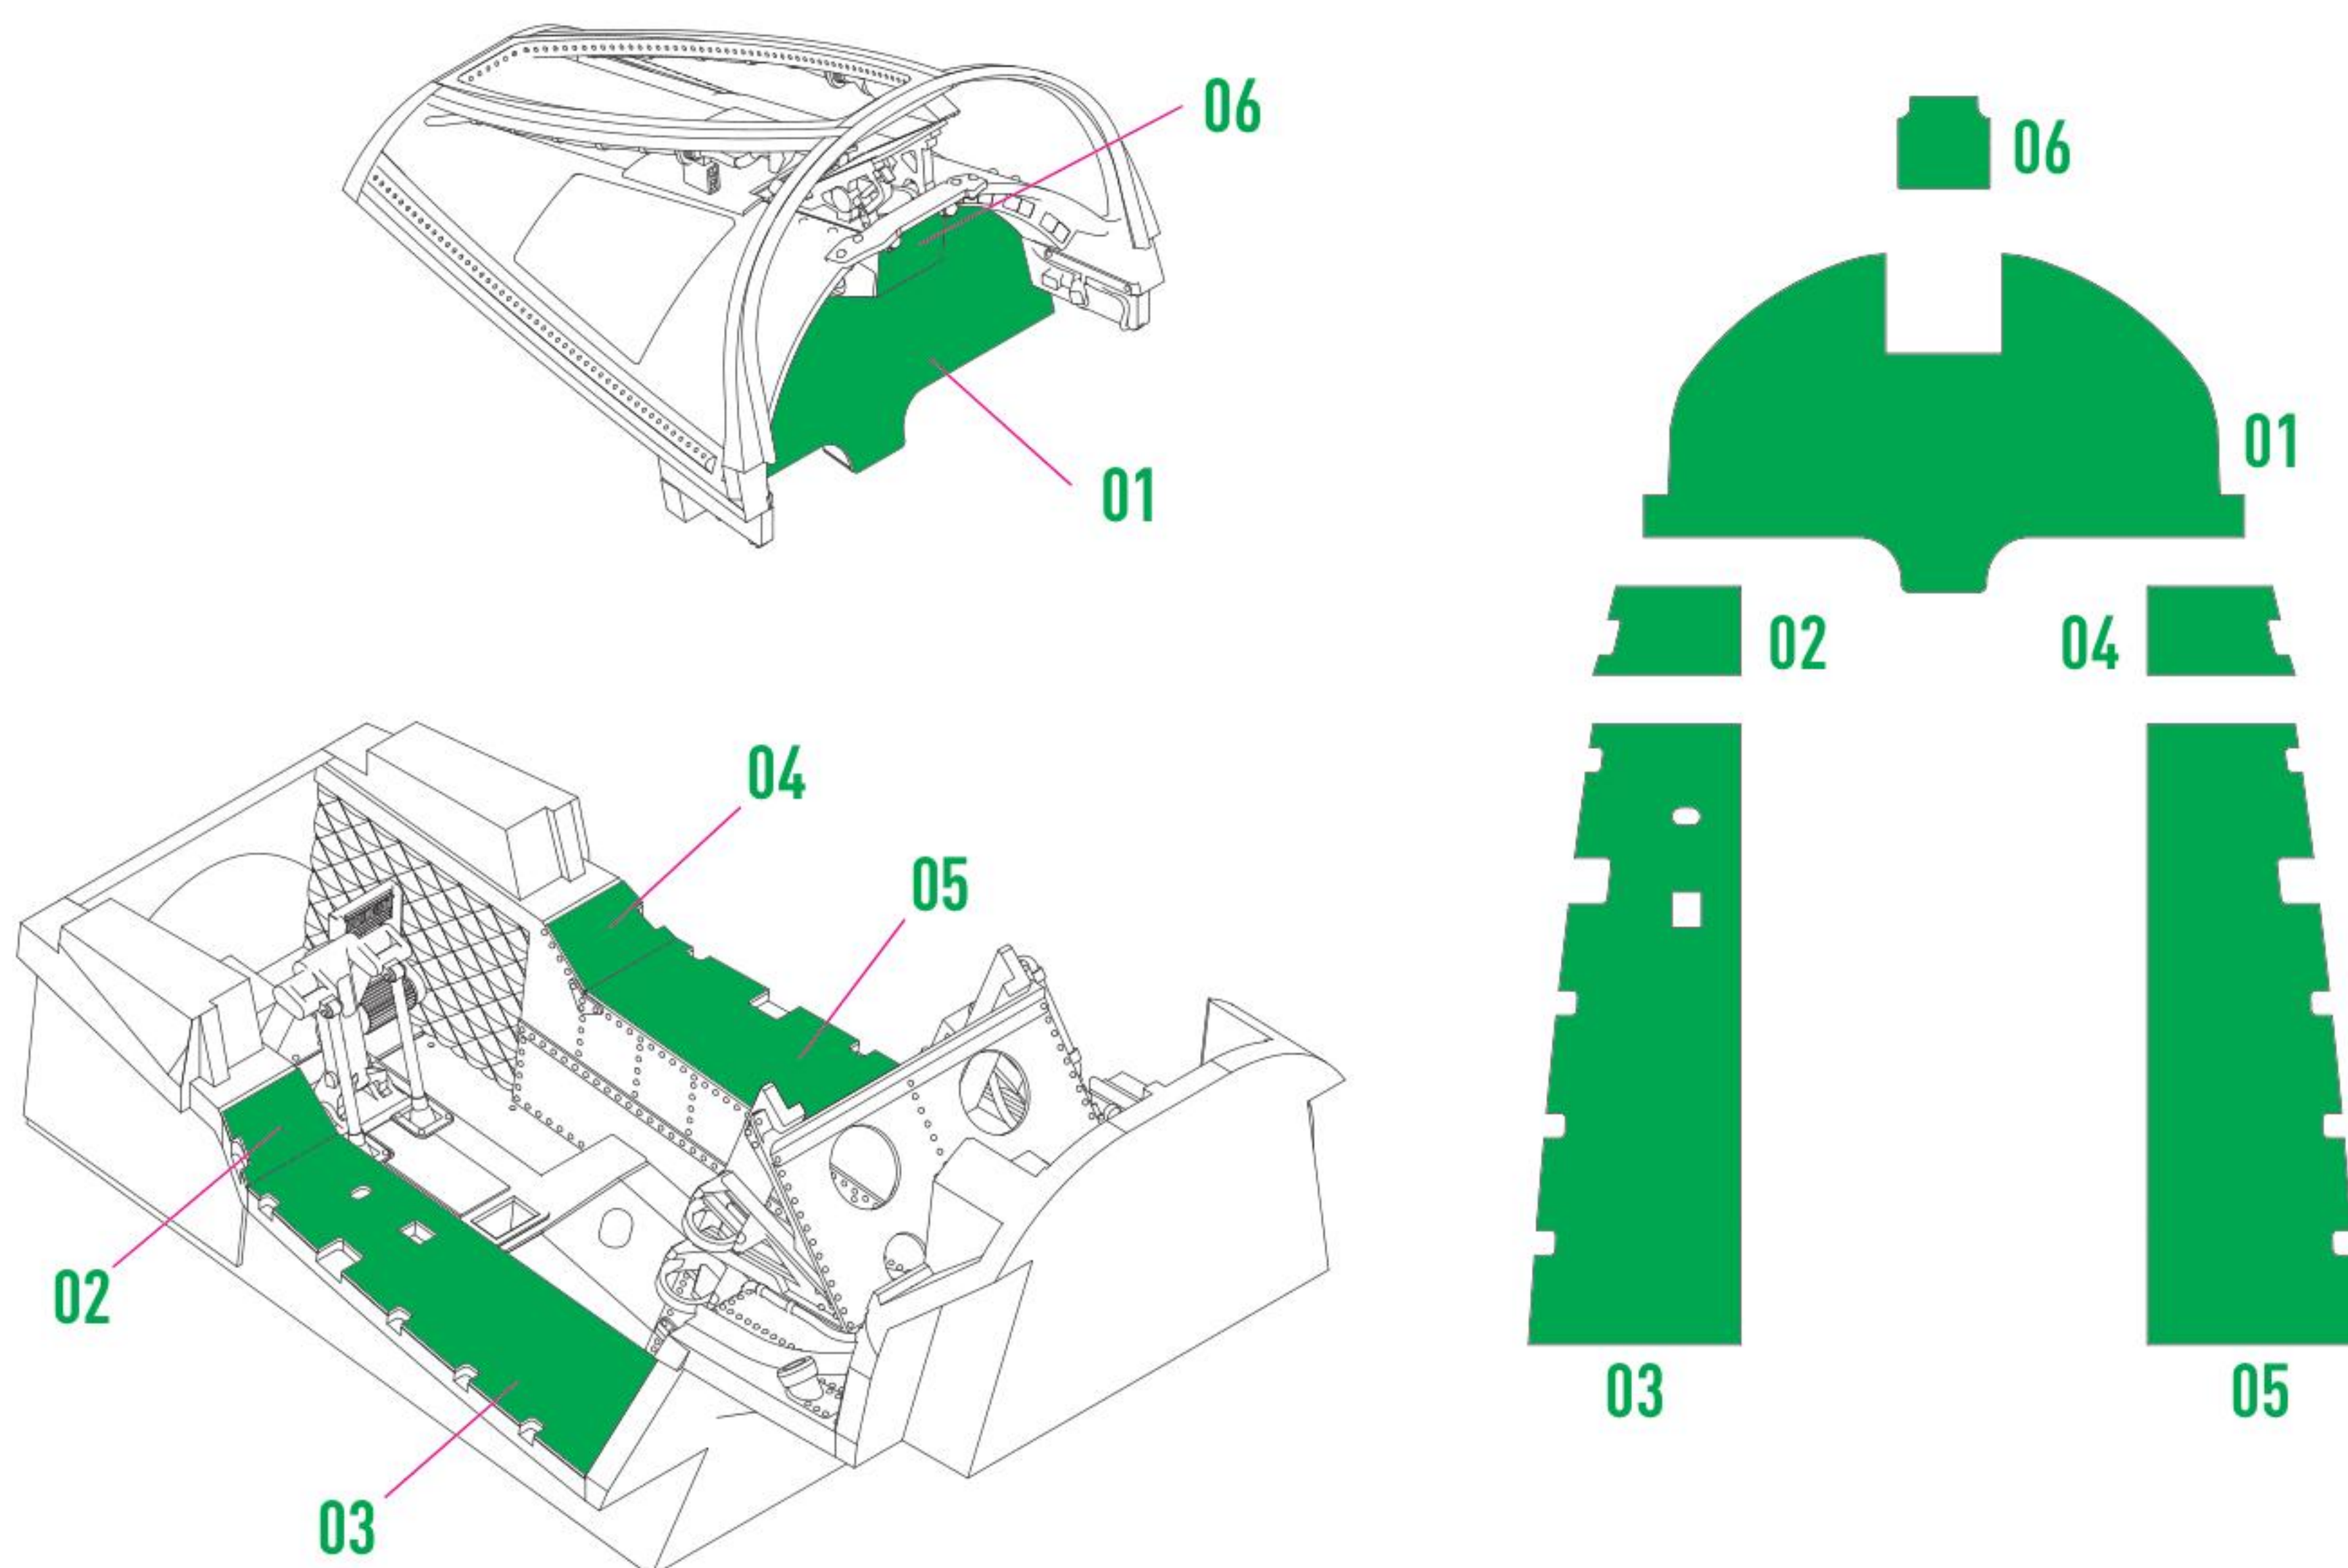

DECAL INSTRUCTION

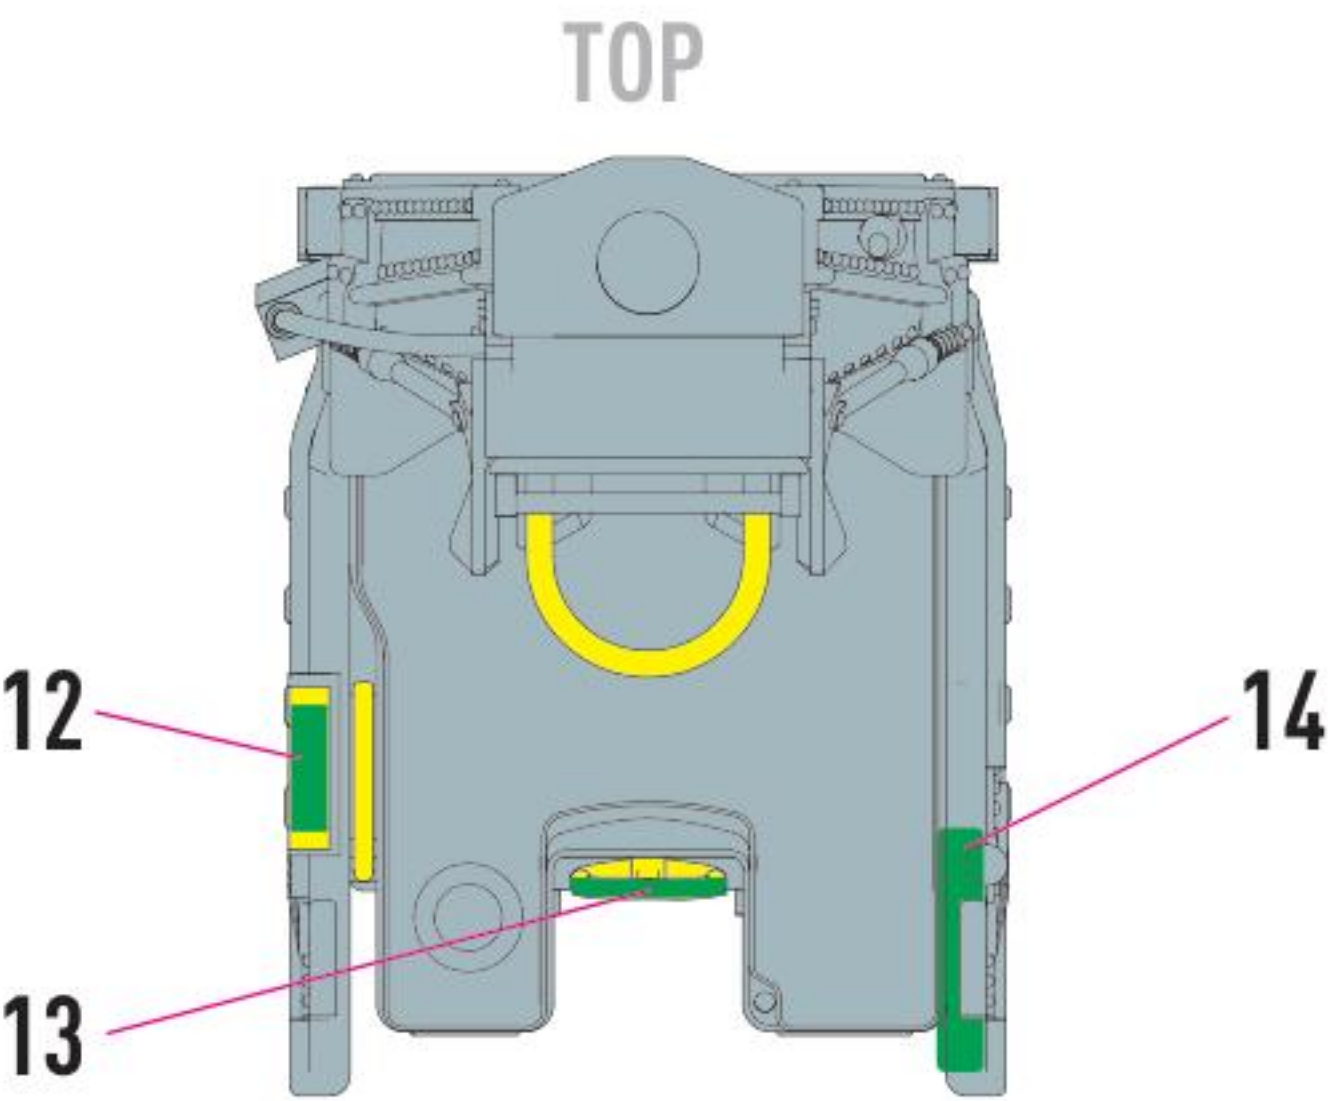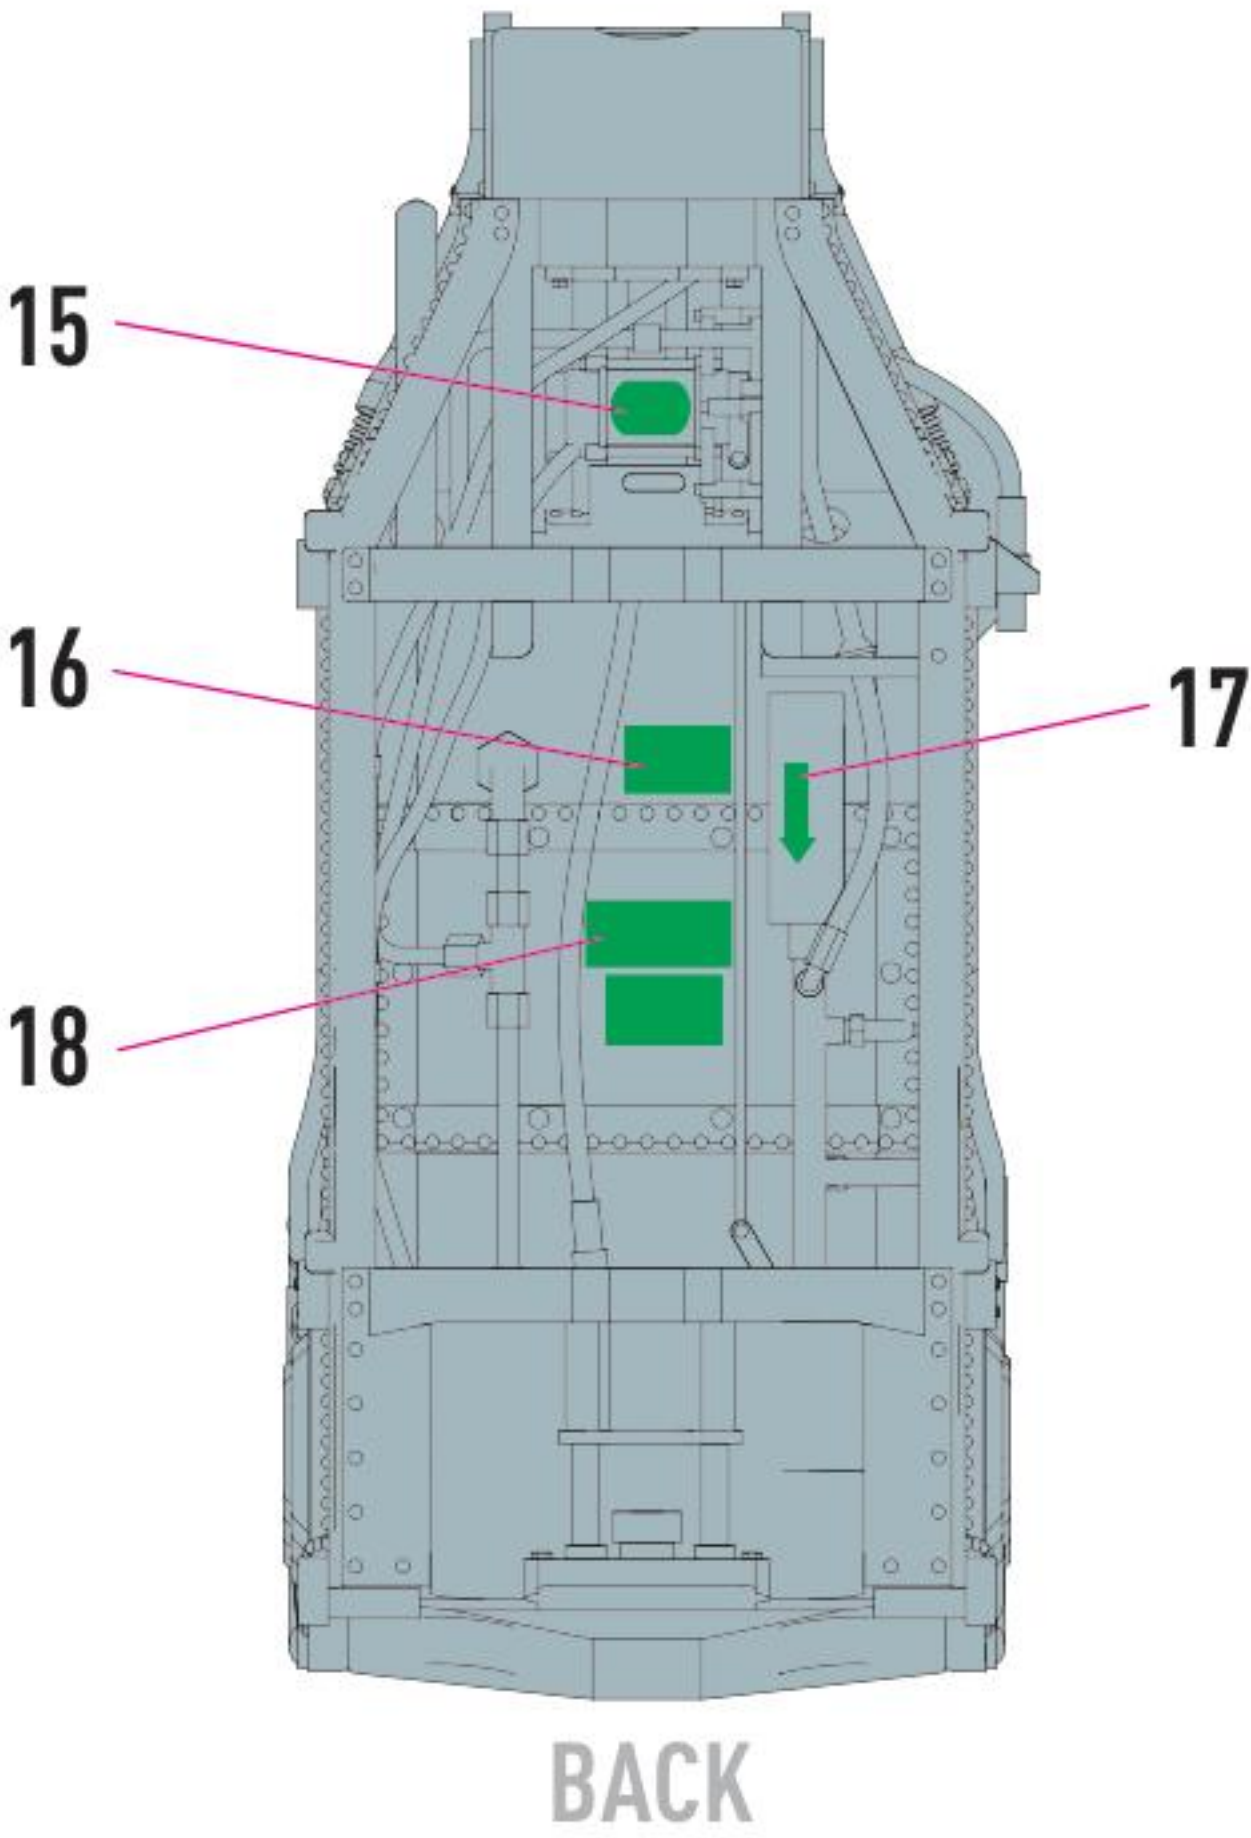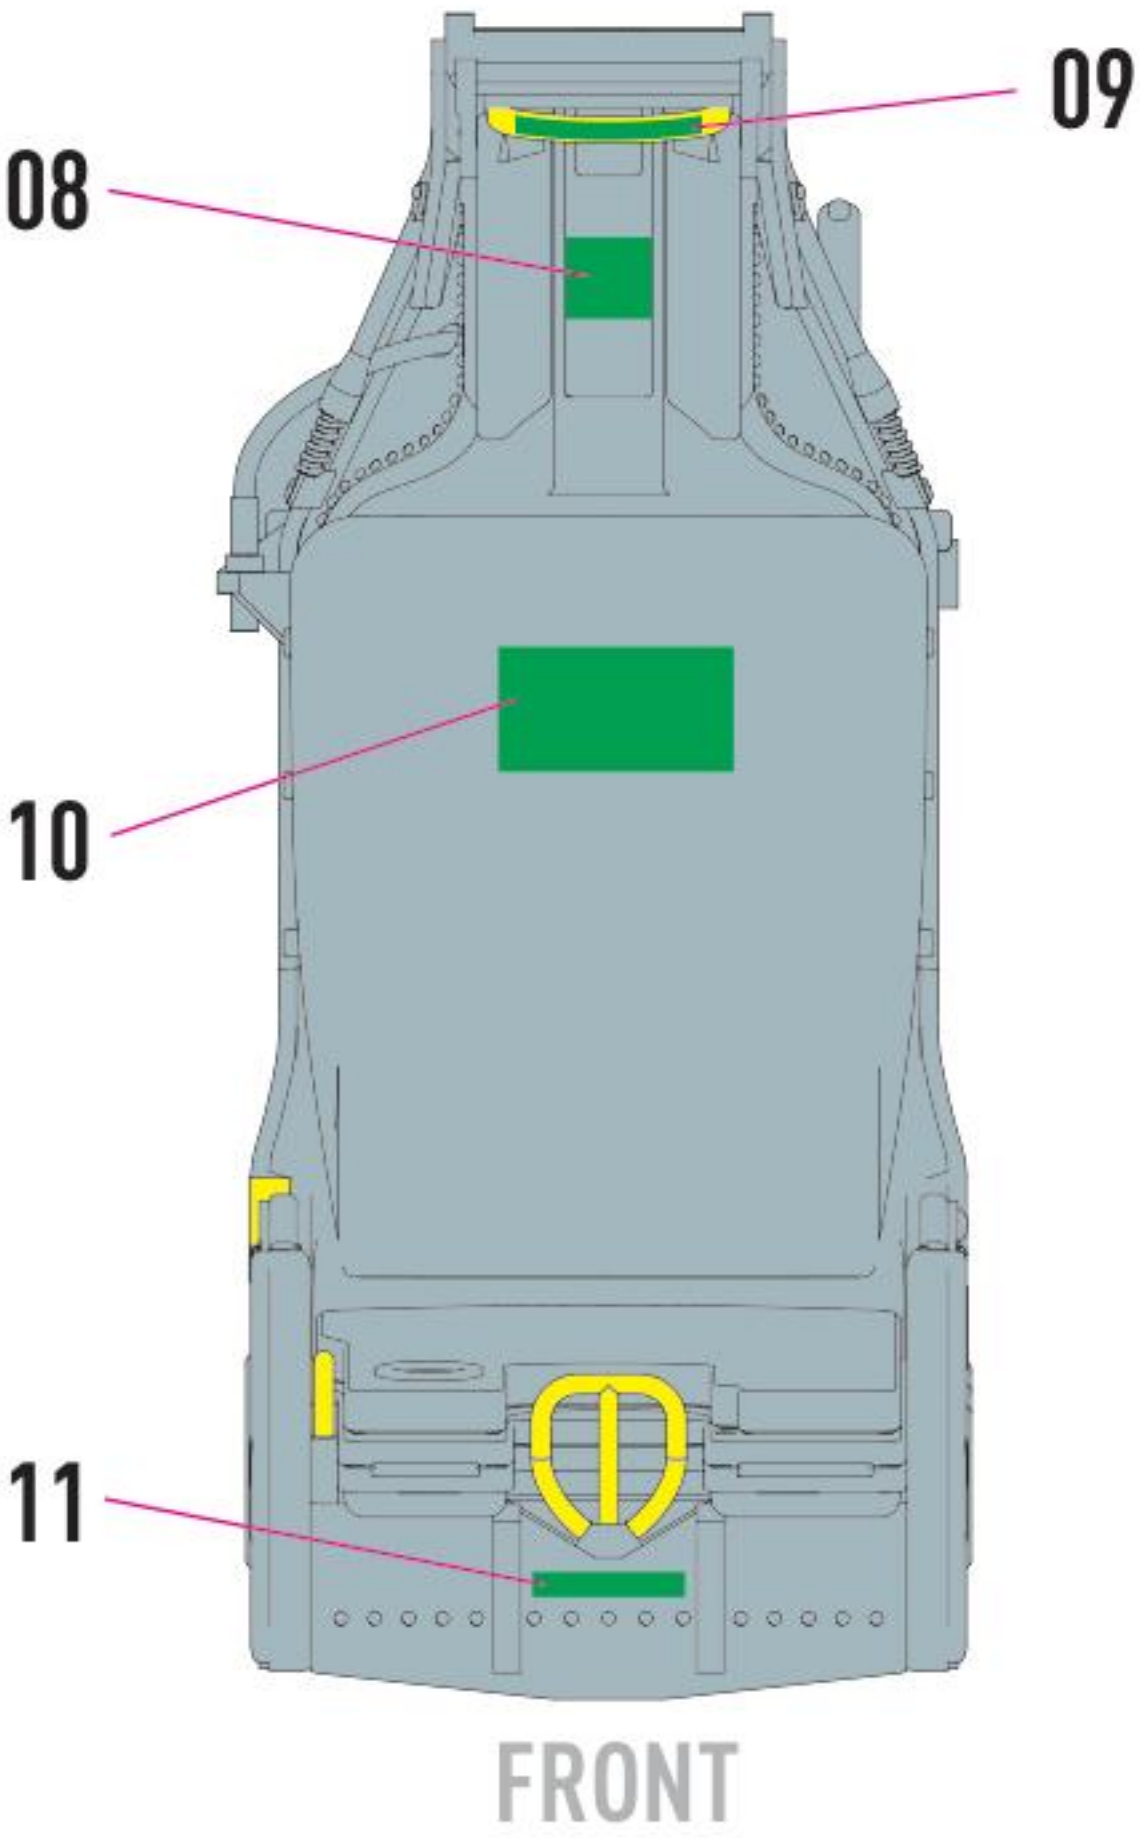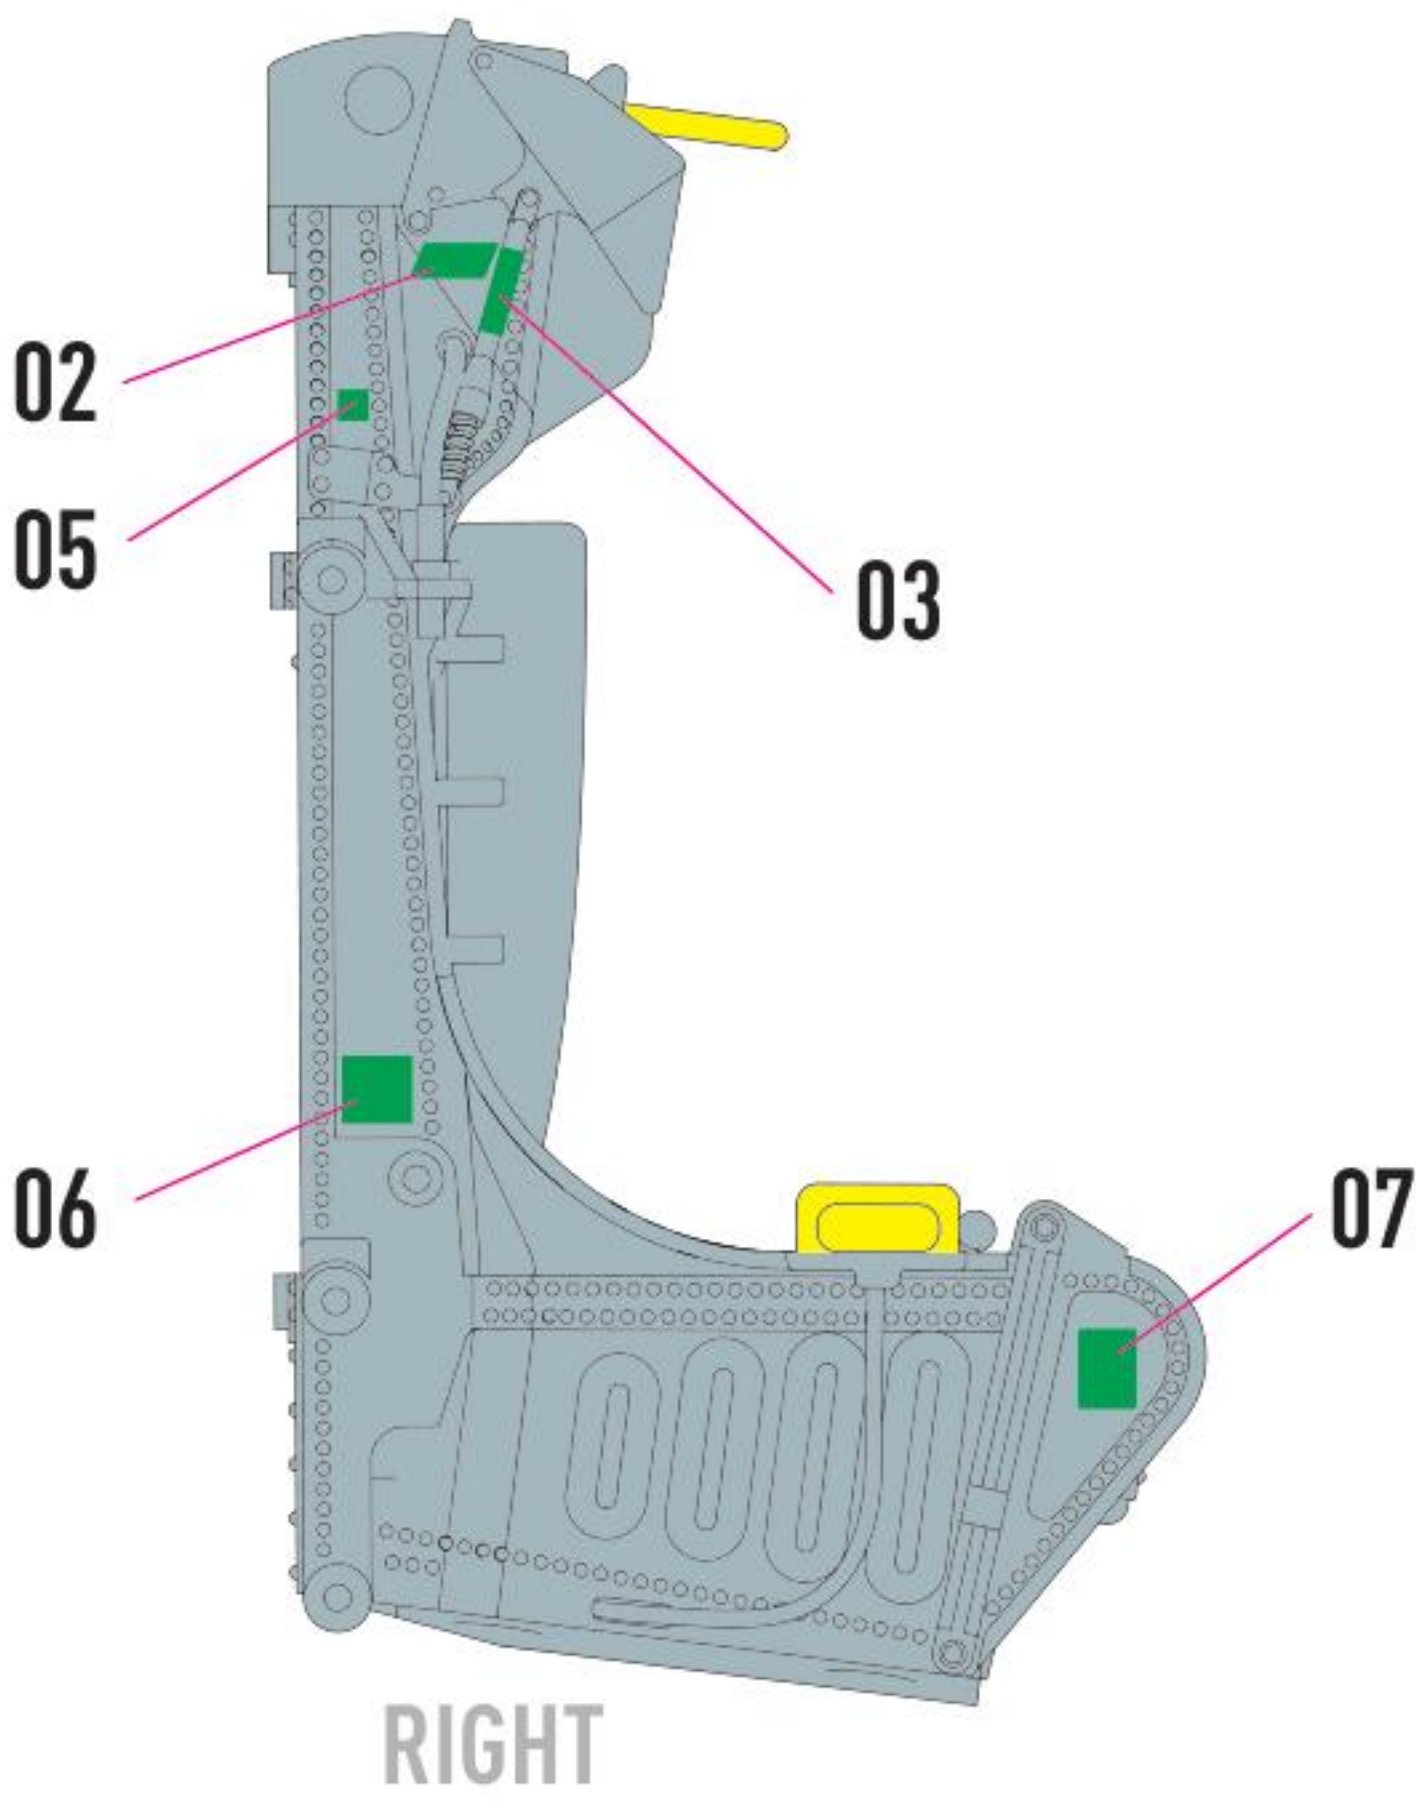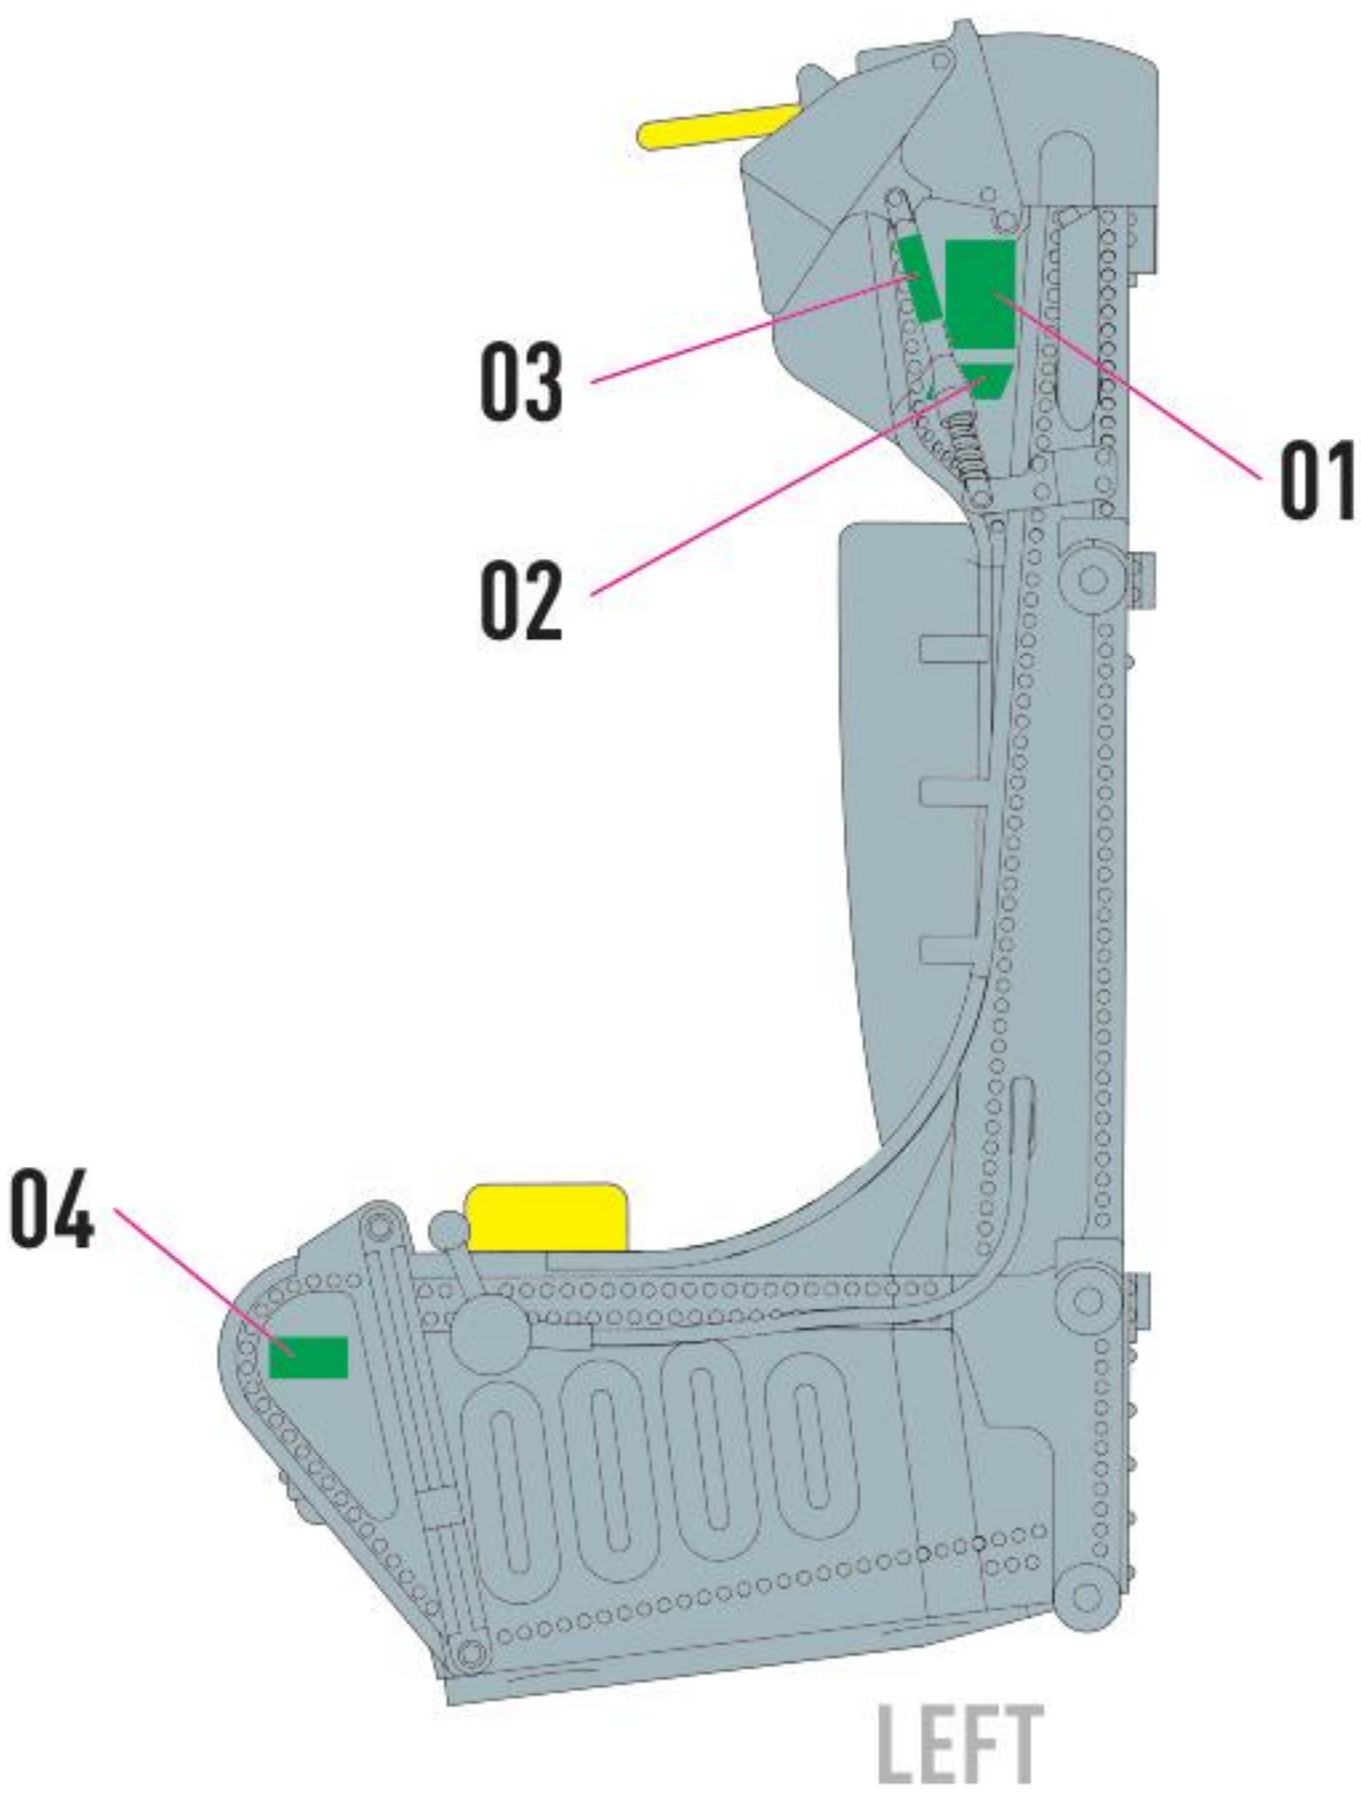

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official

 pinterest.com/reskit_official

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua