

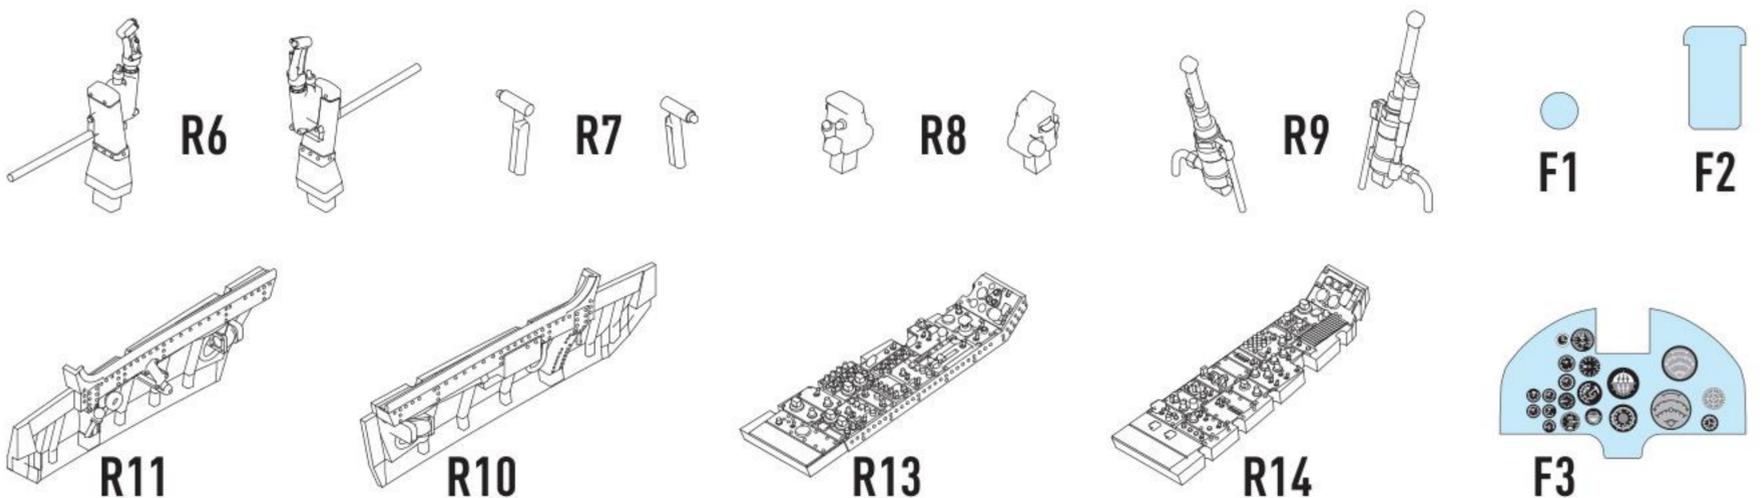
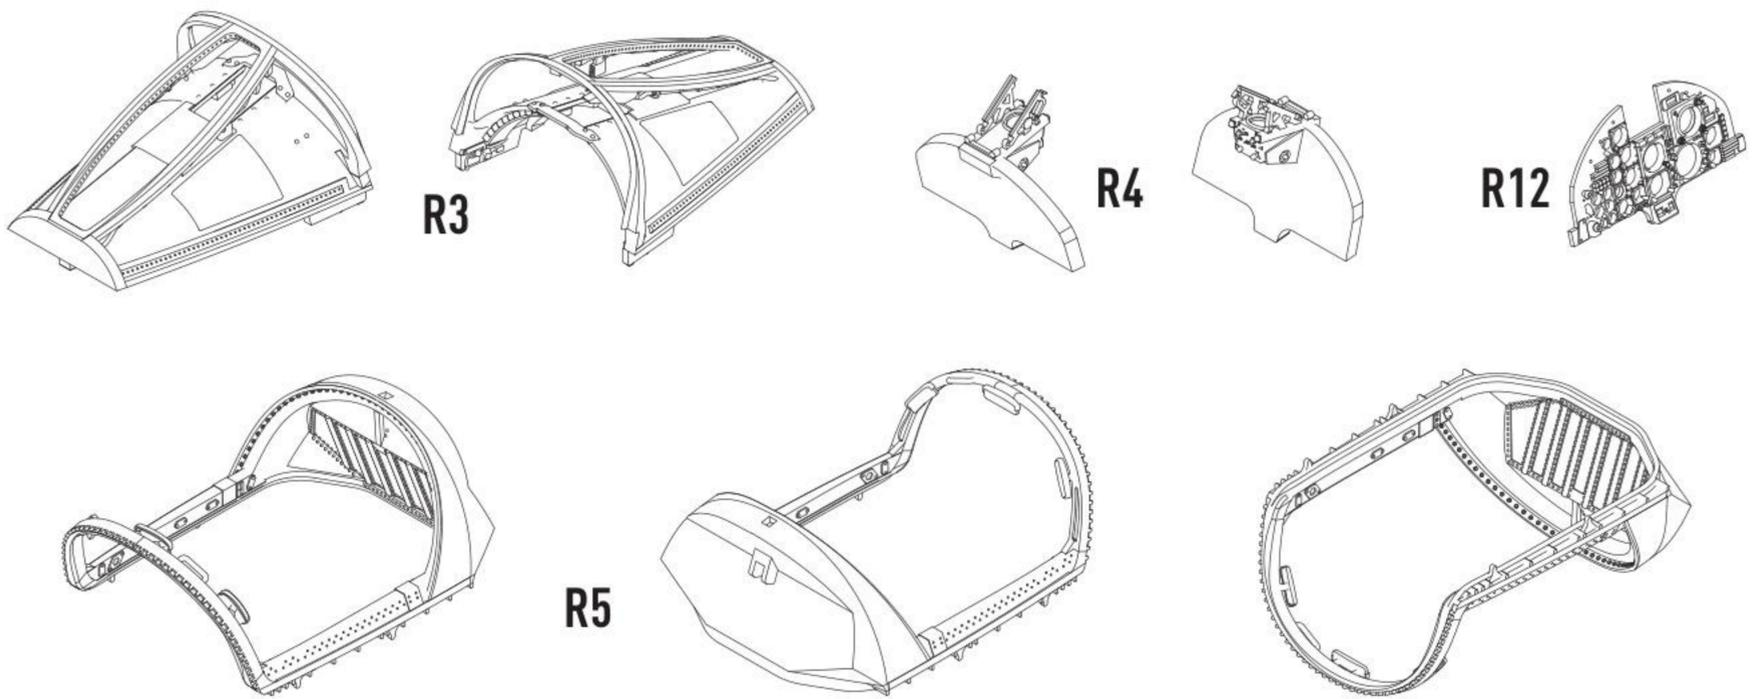


**DETAILS AFTER REMOVAL FROM SUPPORTS**


 USE A SAW TO REMOVE SUPPORTS  
 FROM 3D PRINTED PARTS

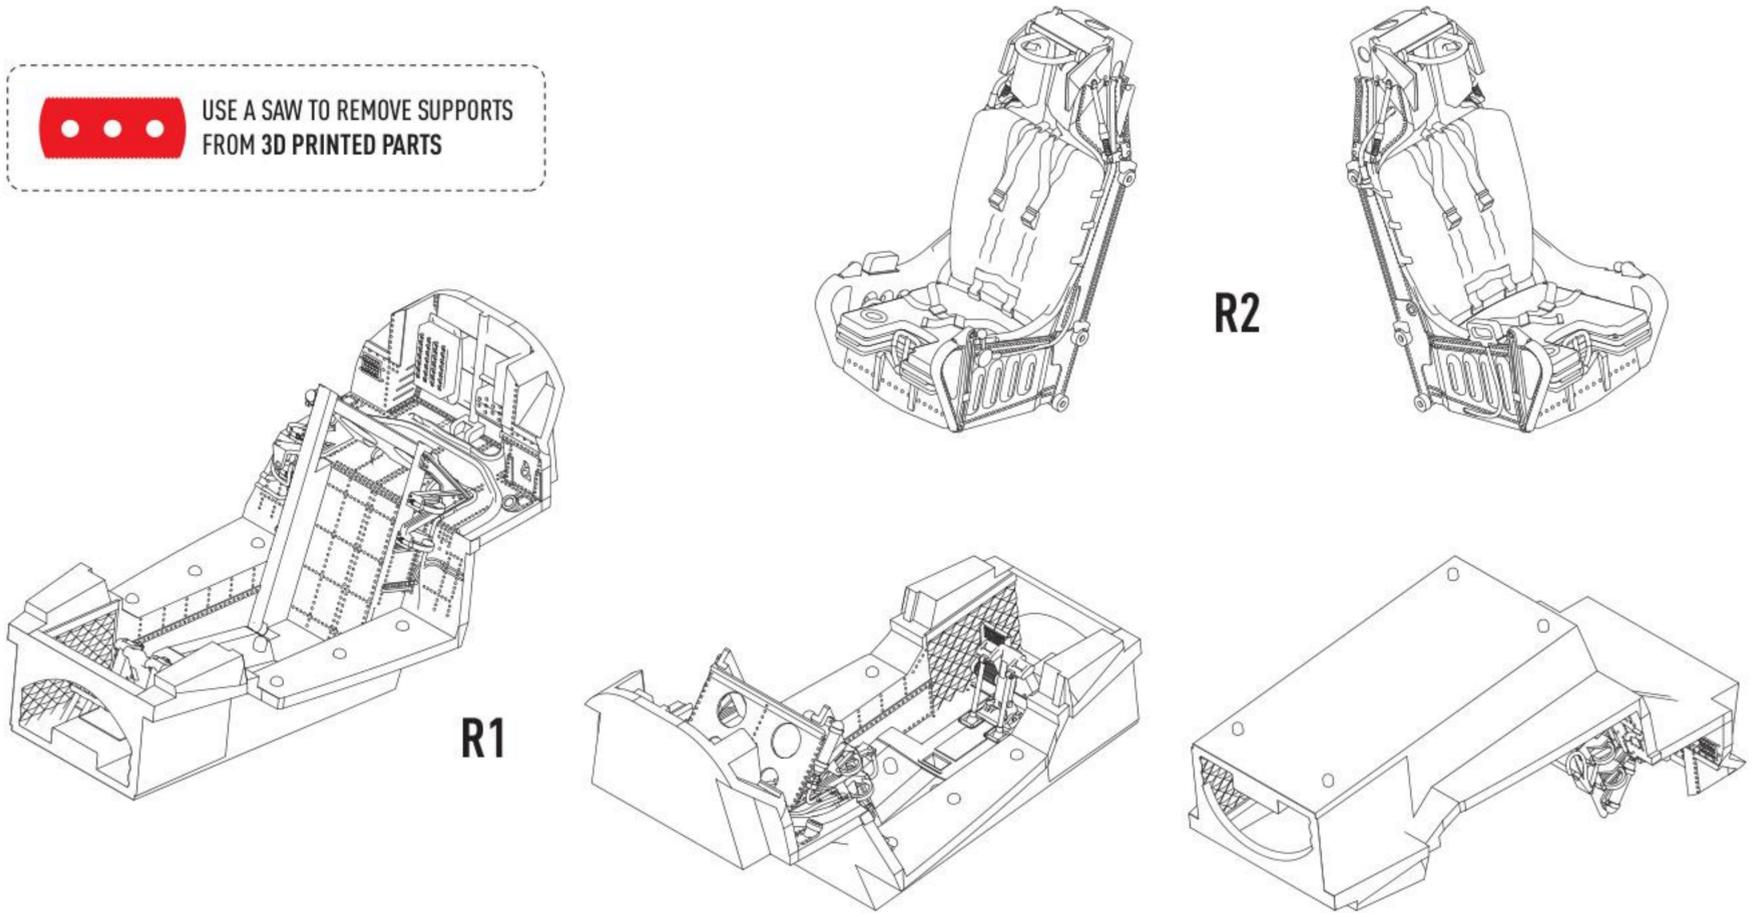


1

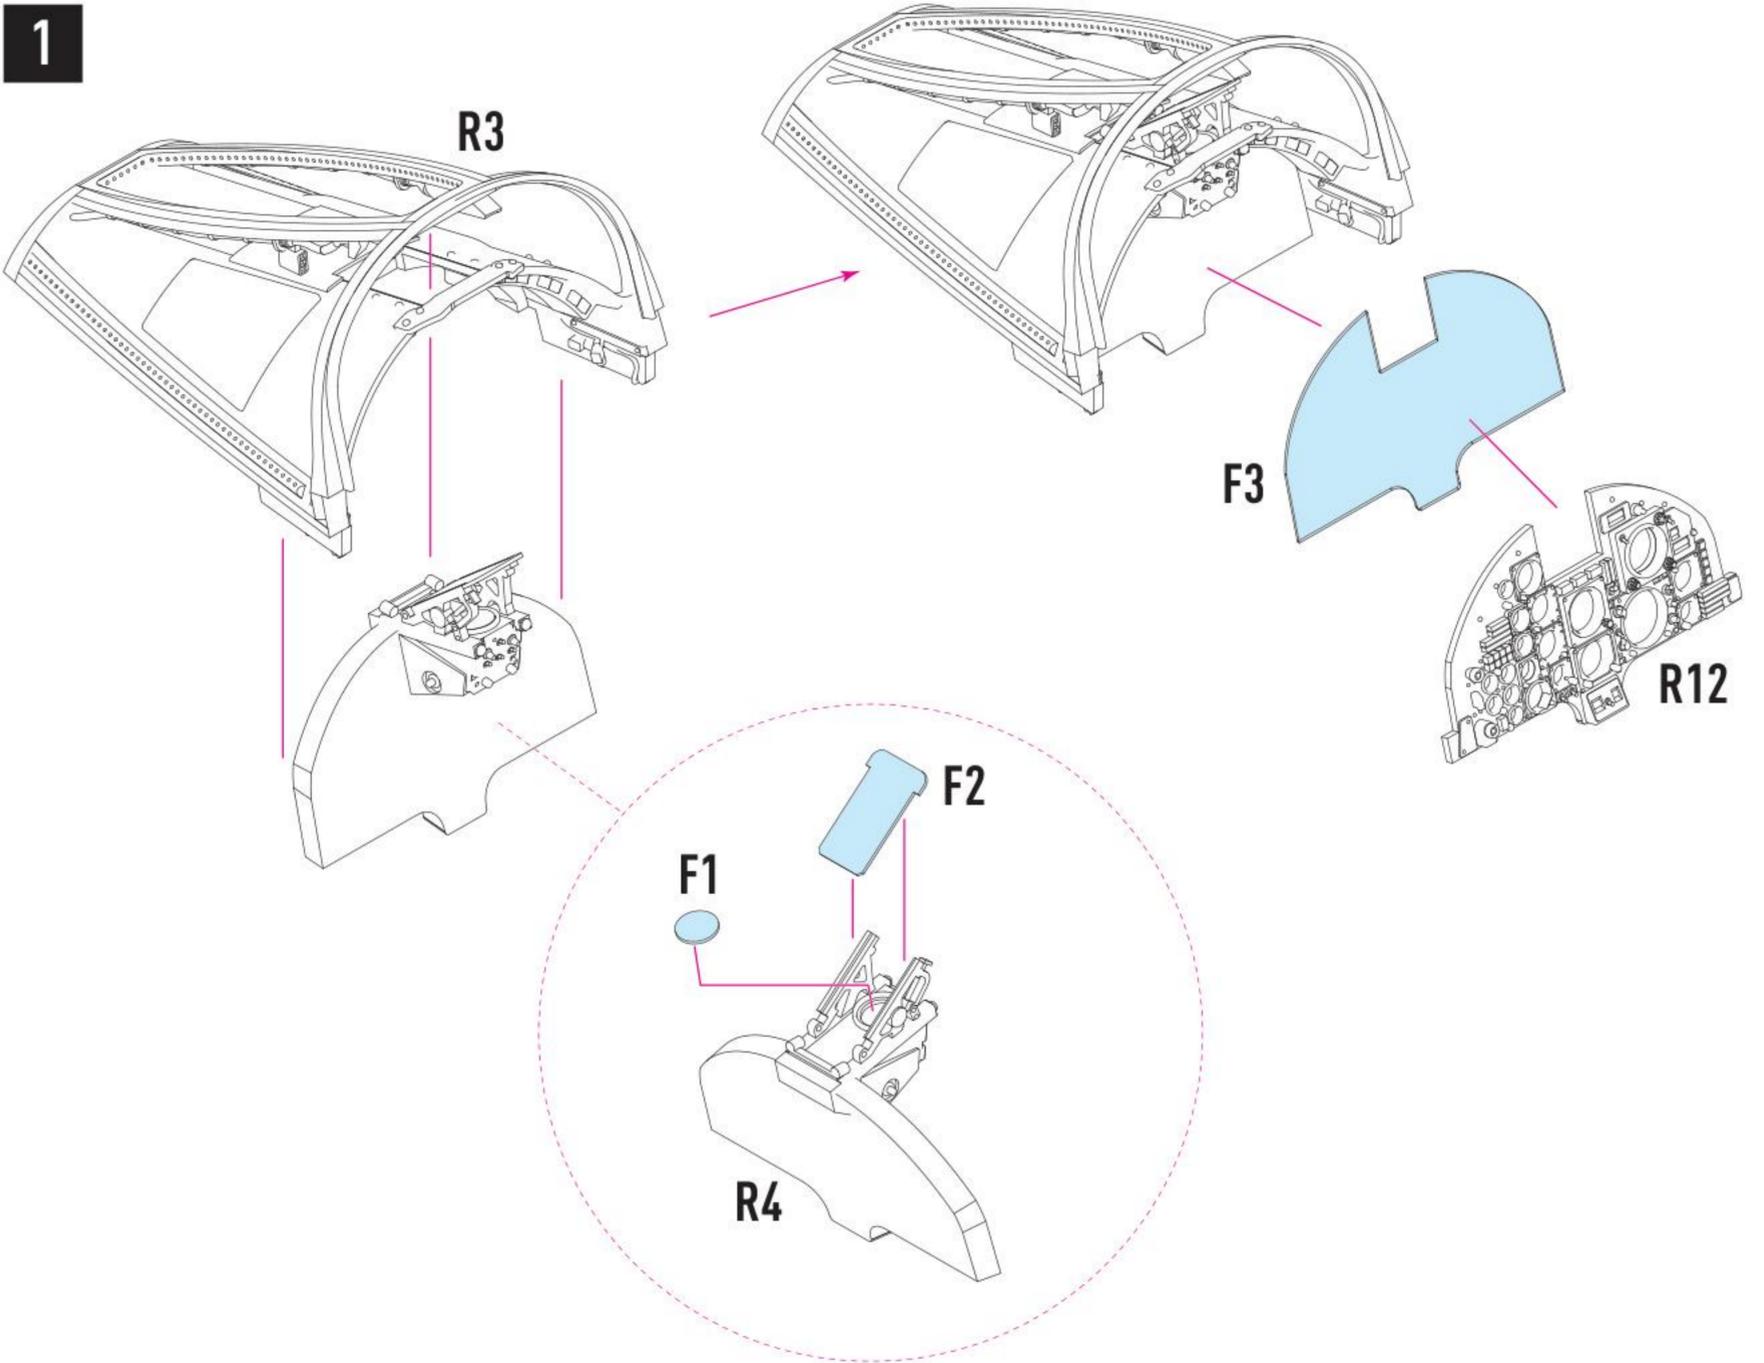

2

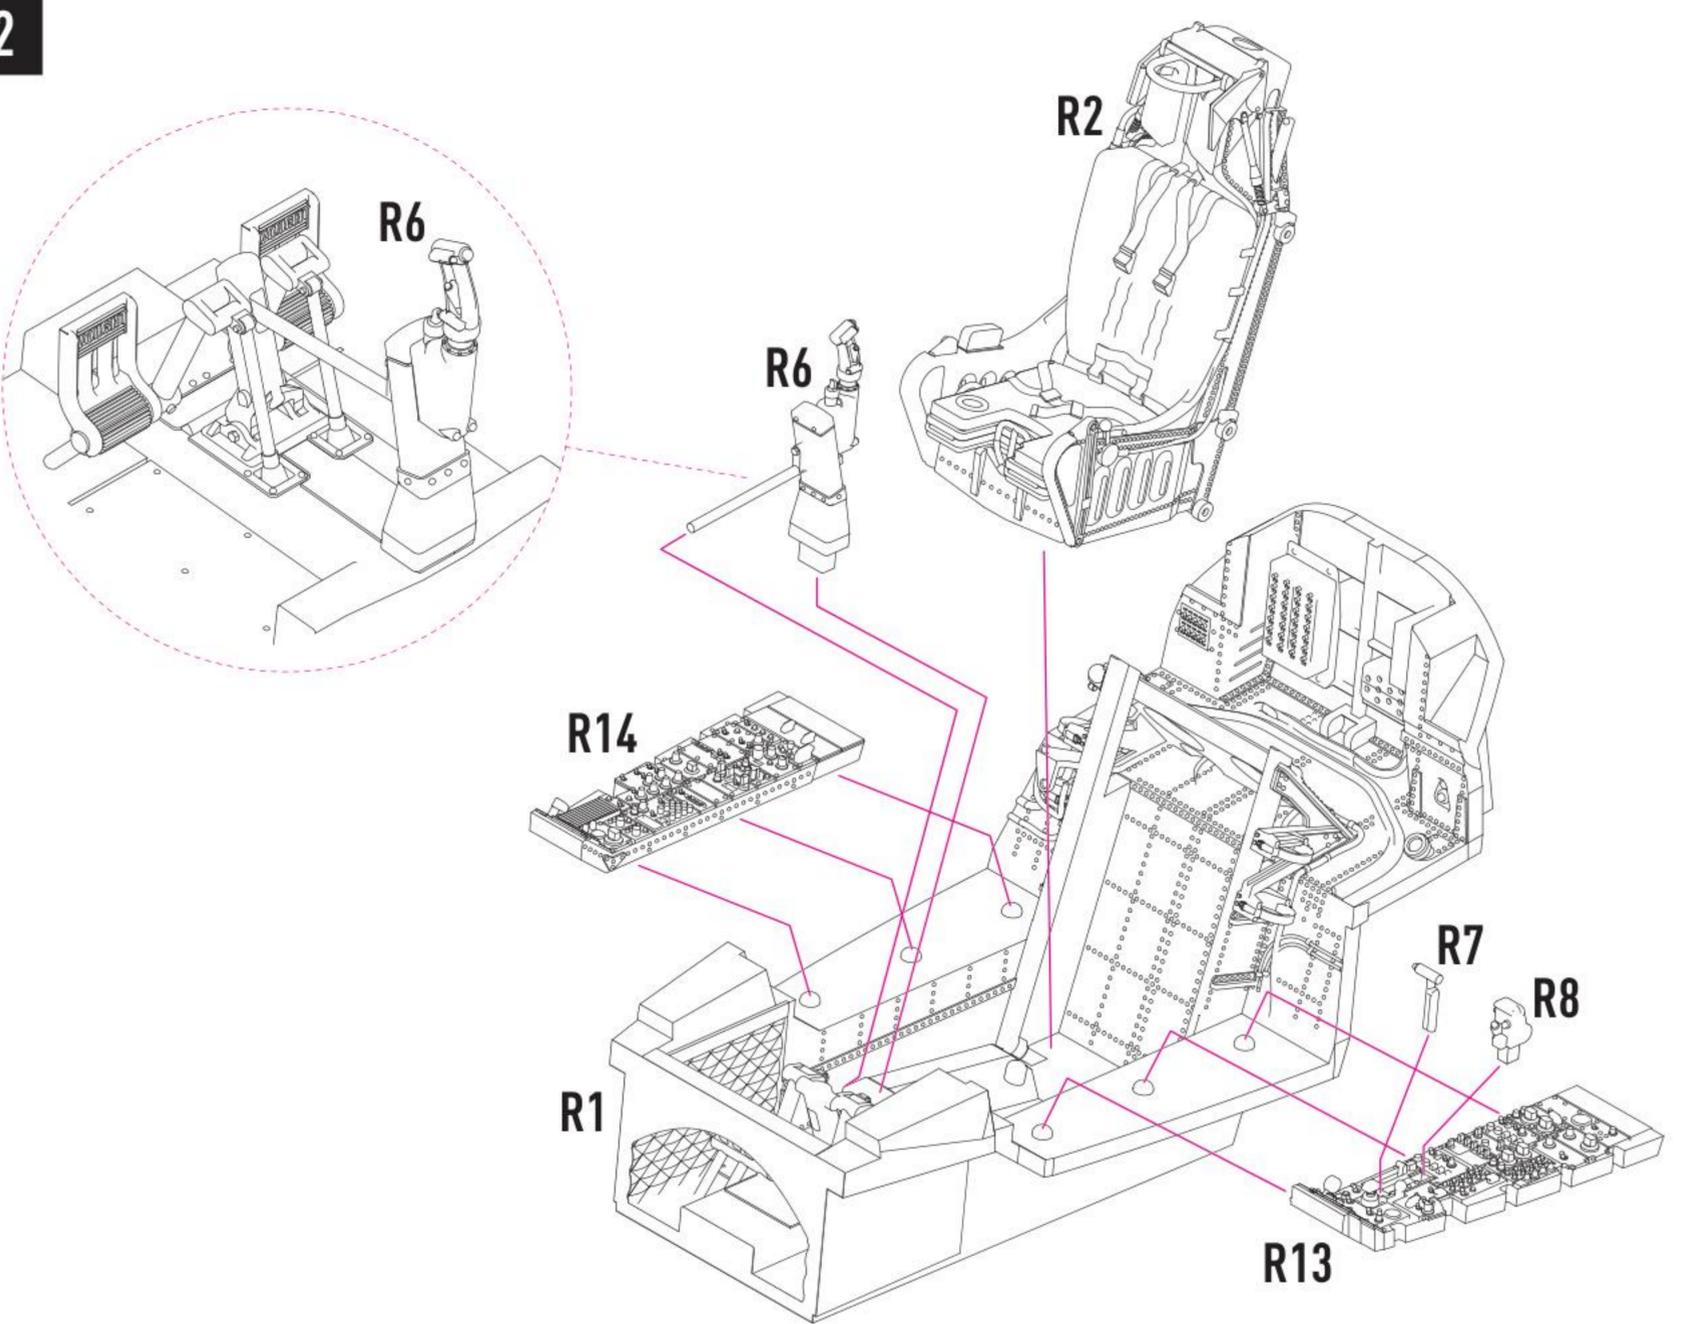


3

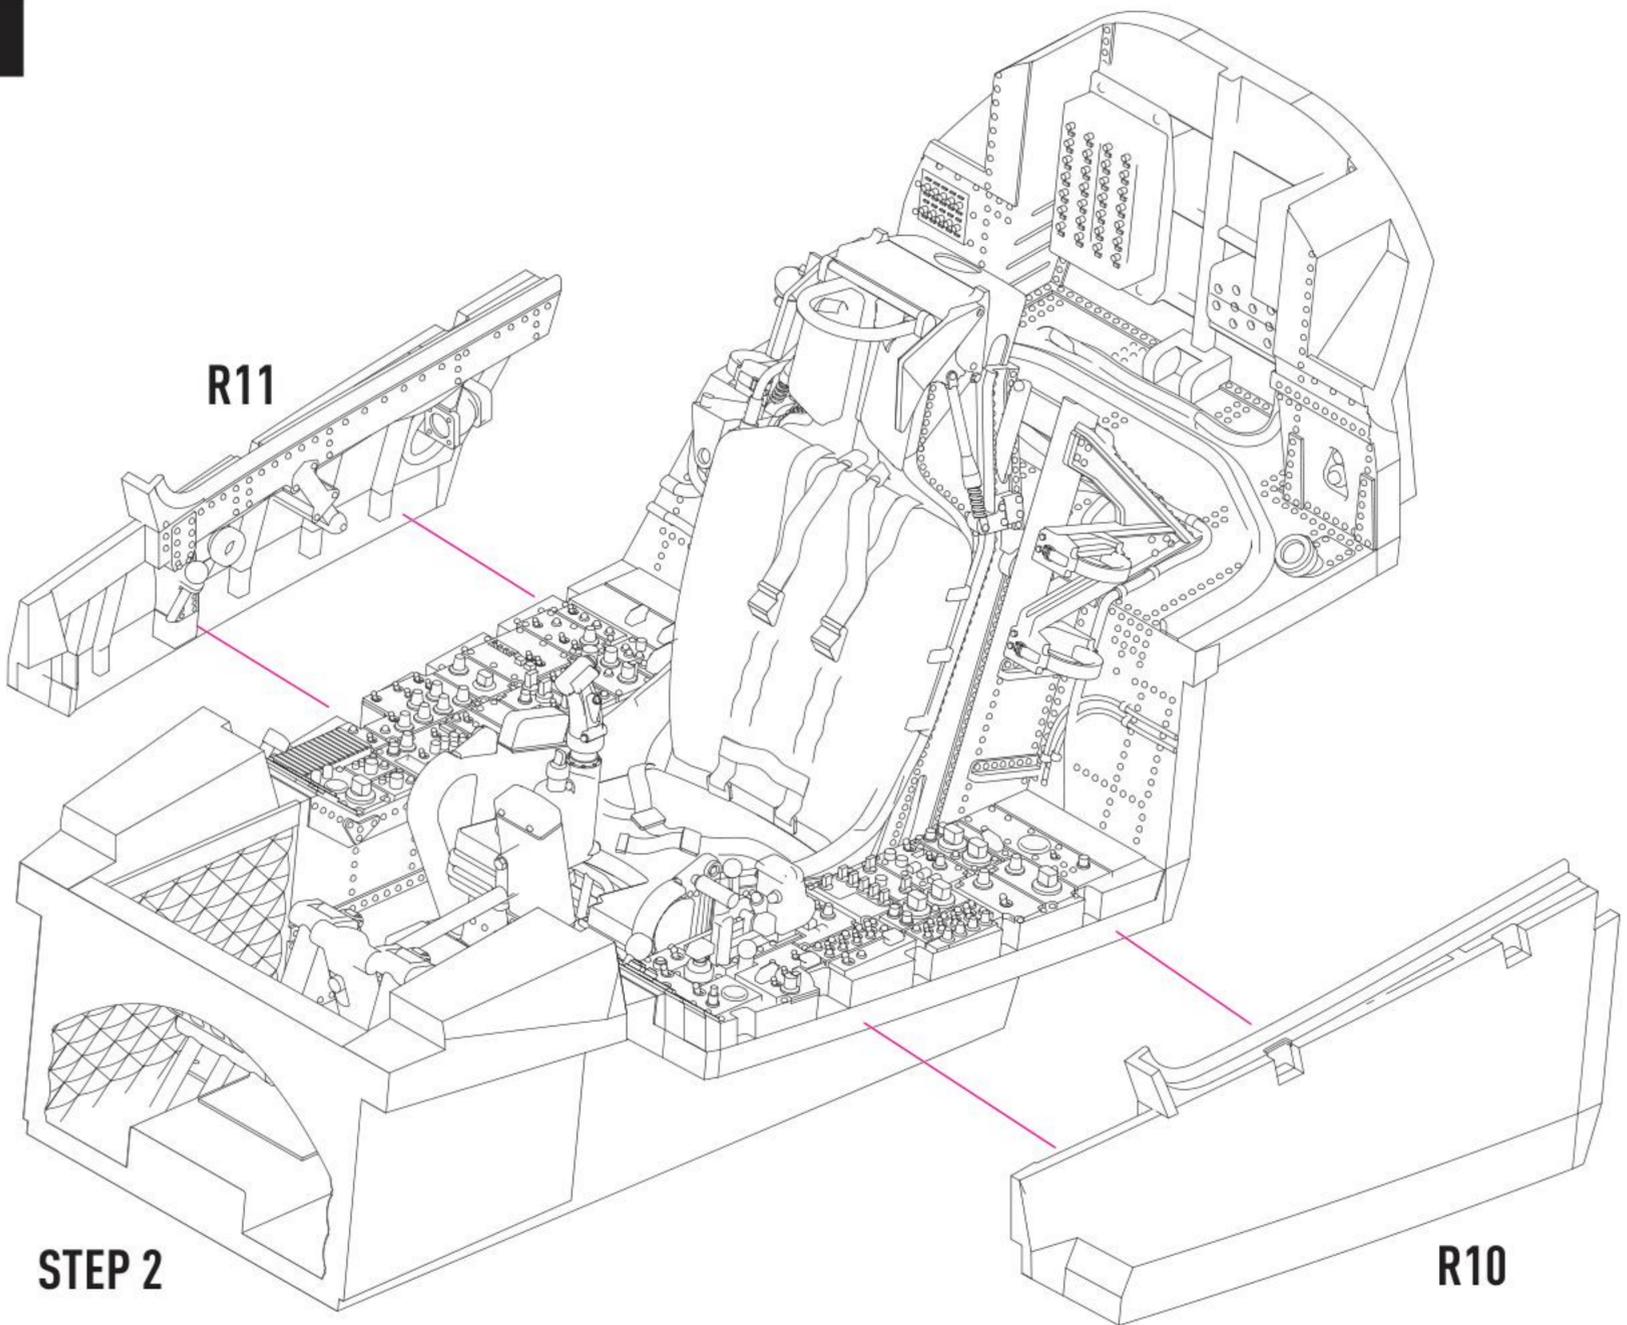

STEP 2

R10

4

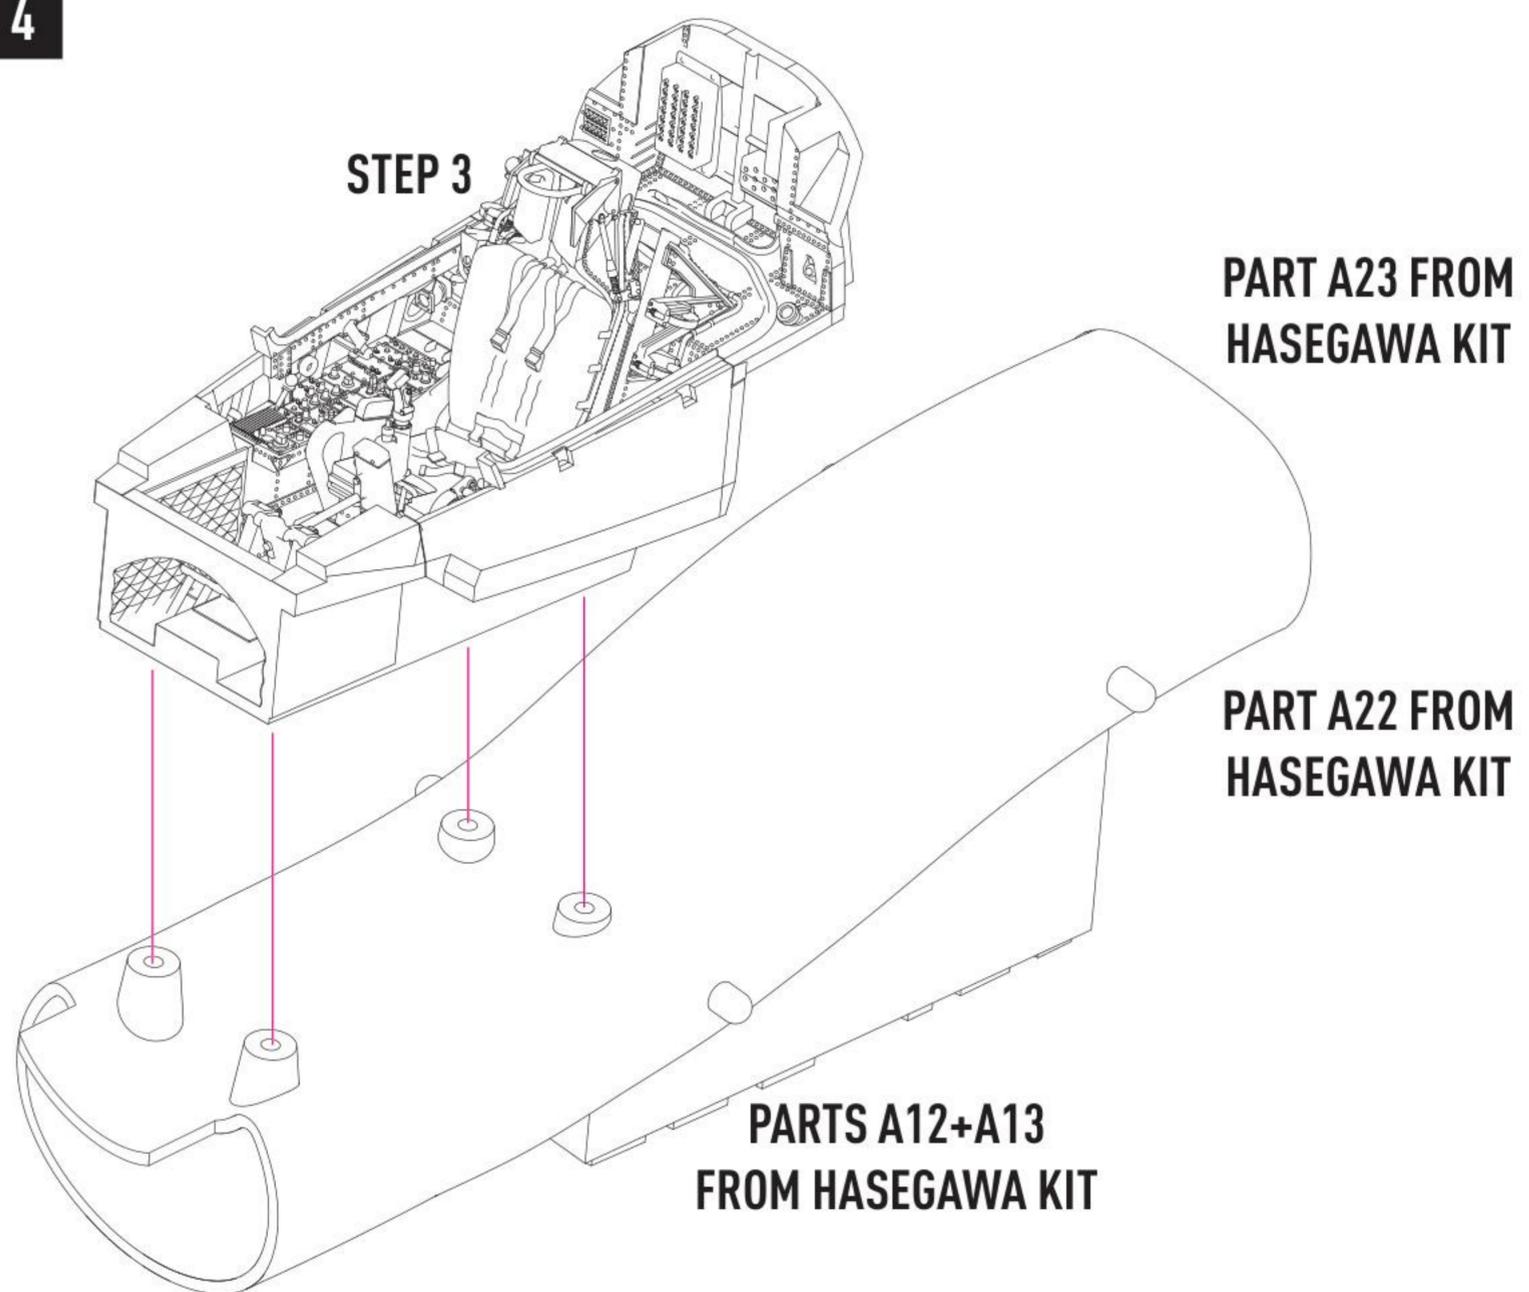



STEP 3

PART A23 FROM  
HASEGAWA KIT


PART A22 FROM  
HASEGAWA KIT

PARTS A12+A13  
FROM HASEGAWA KIT


## 5 PREPARATION OF FUSELAGE PARTS FOR INSTALLATION OF ADDITIONAL KIT

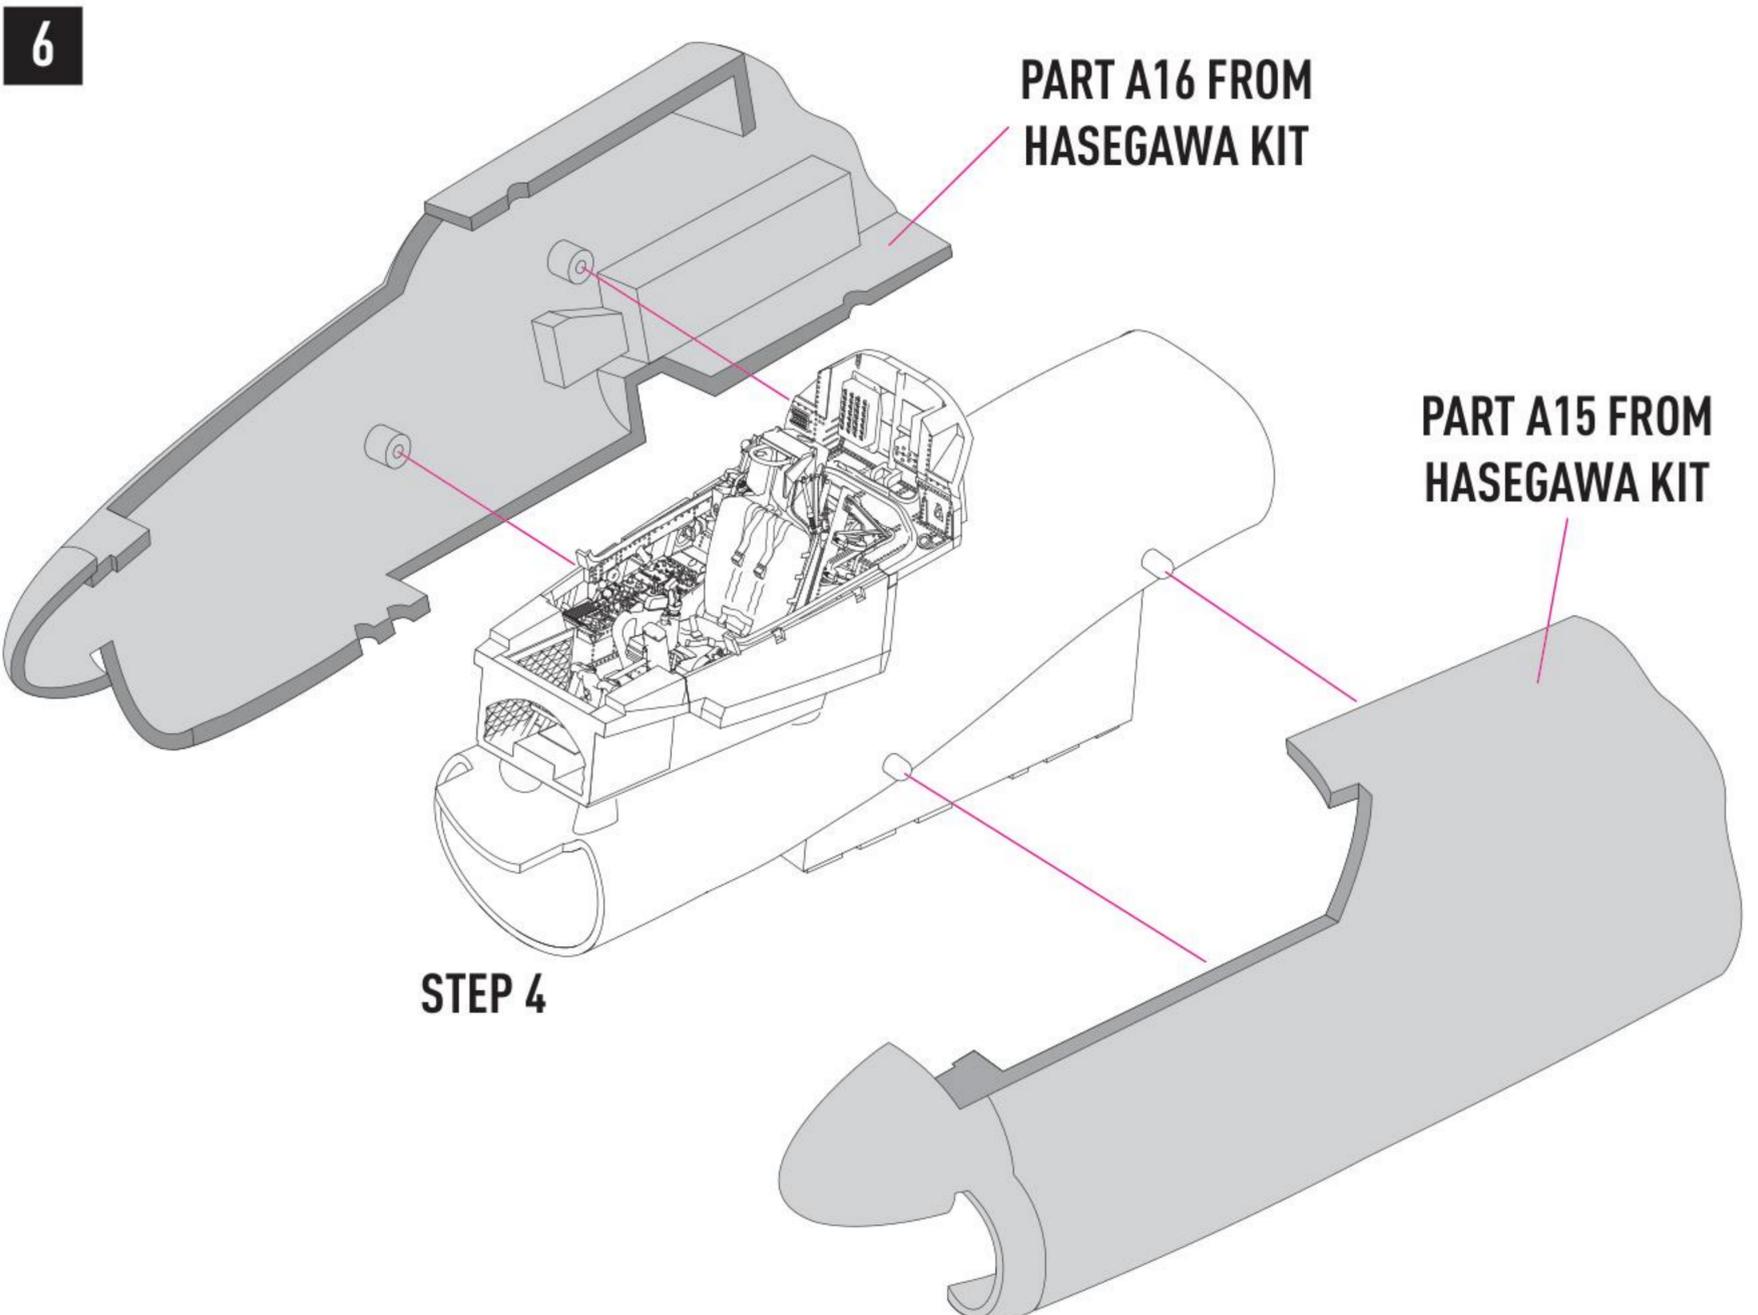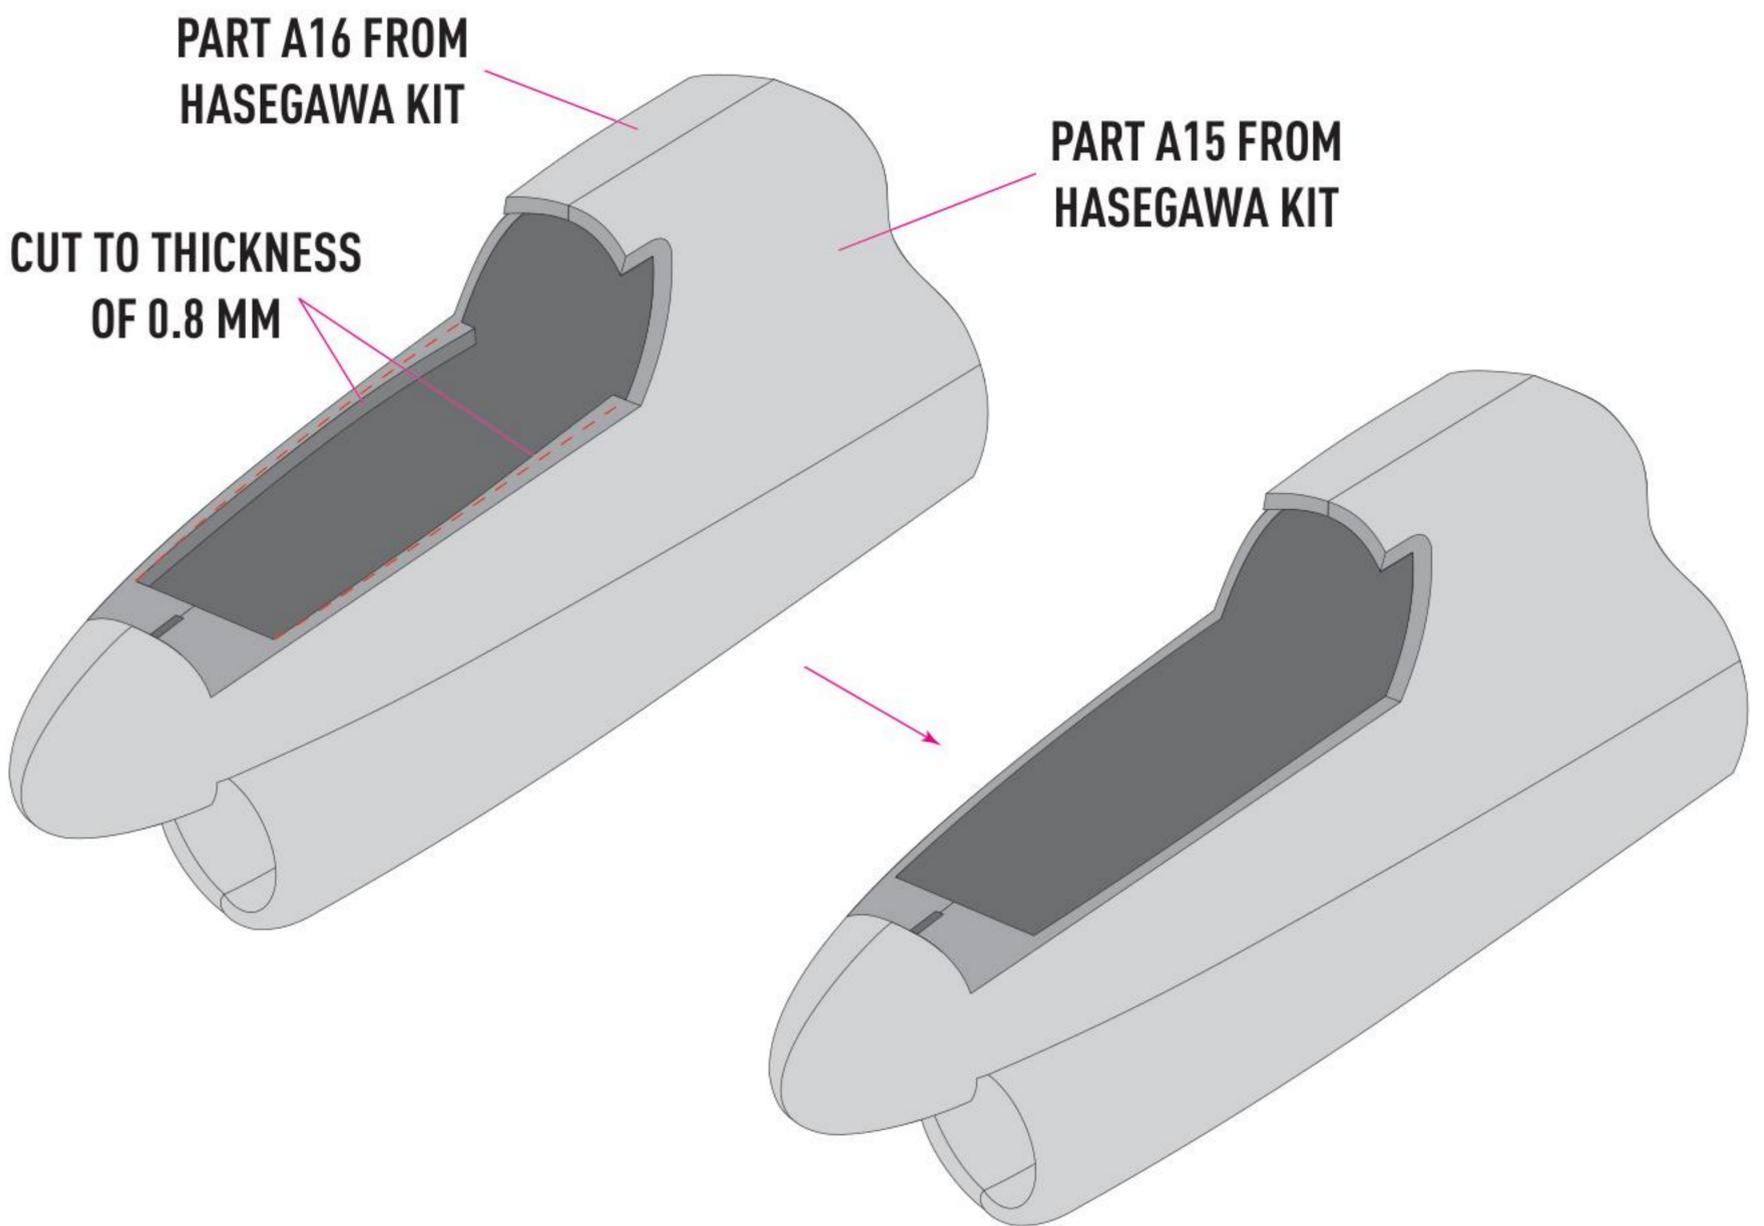


**7** CLOSED CANOPY

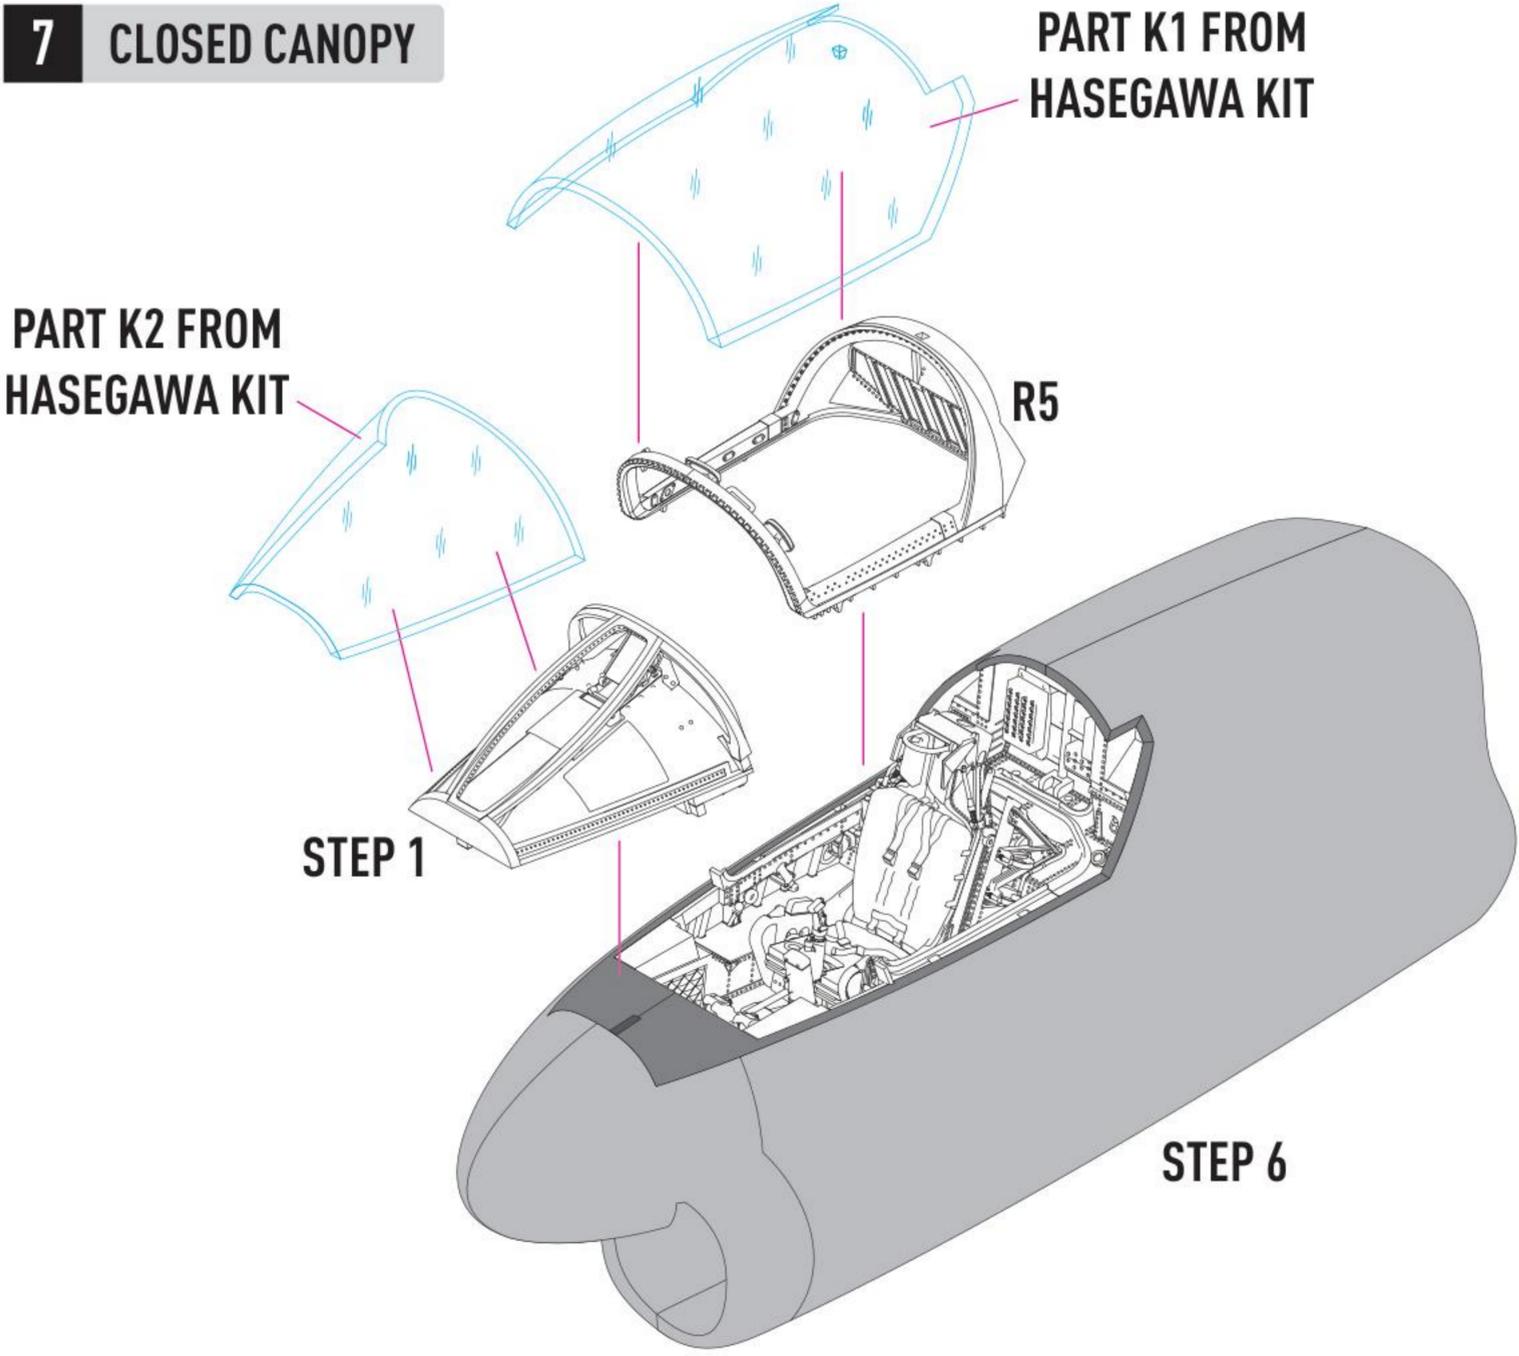


**OPEN CANOPY**





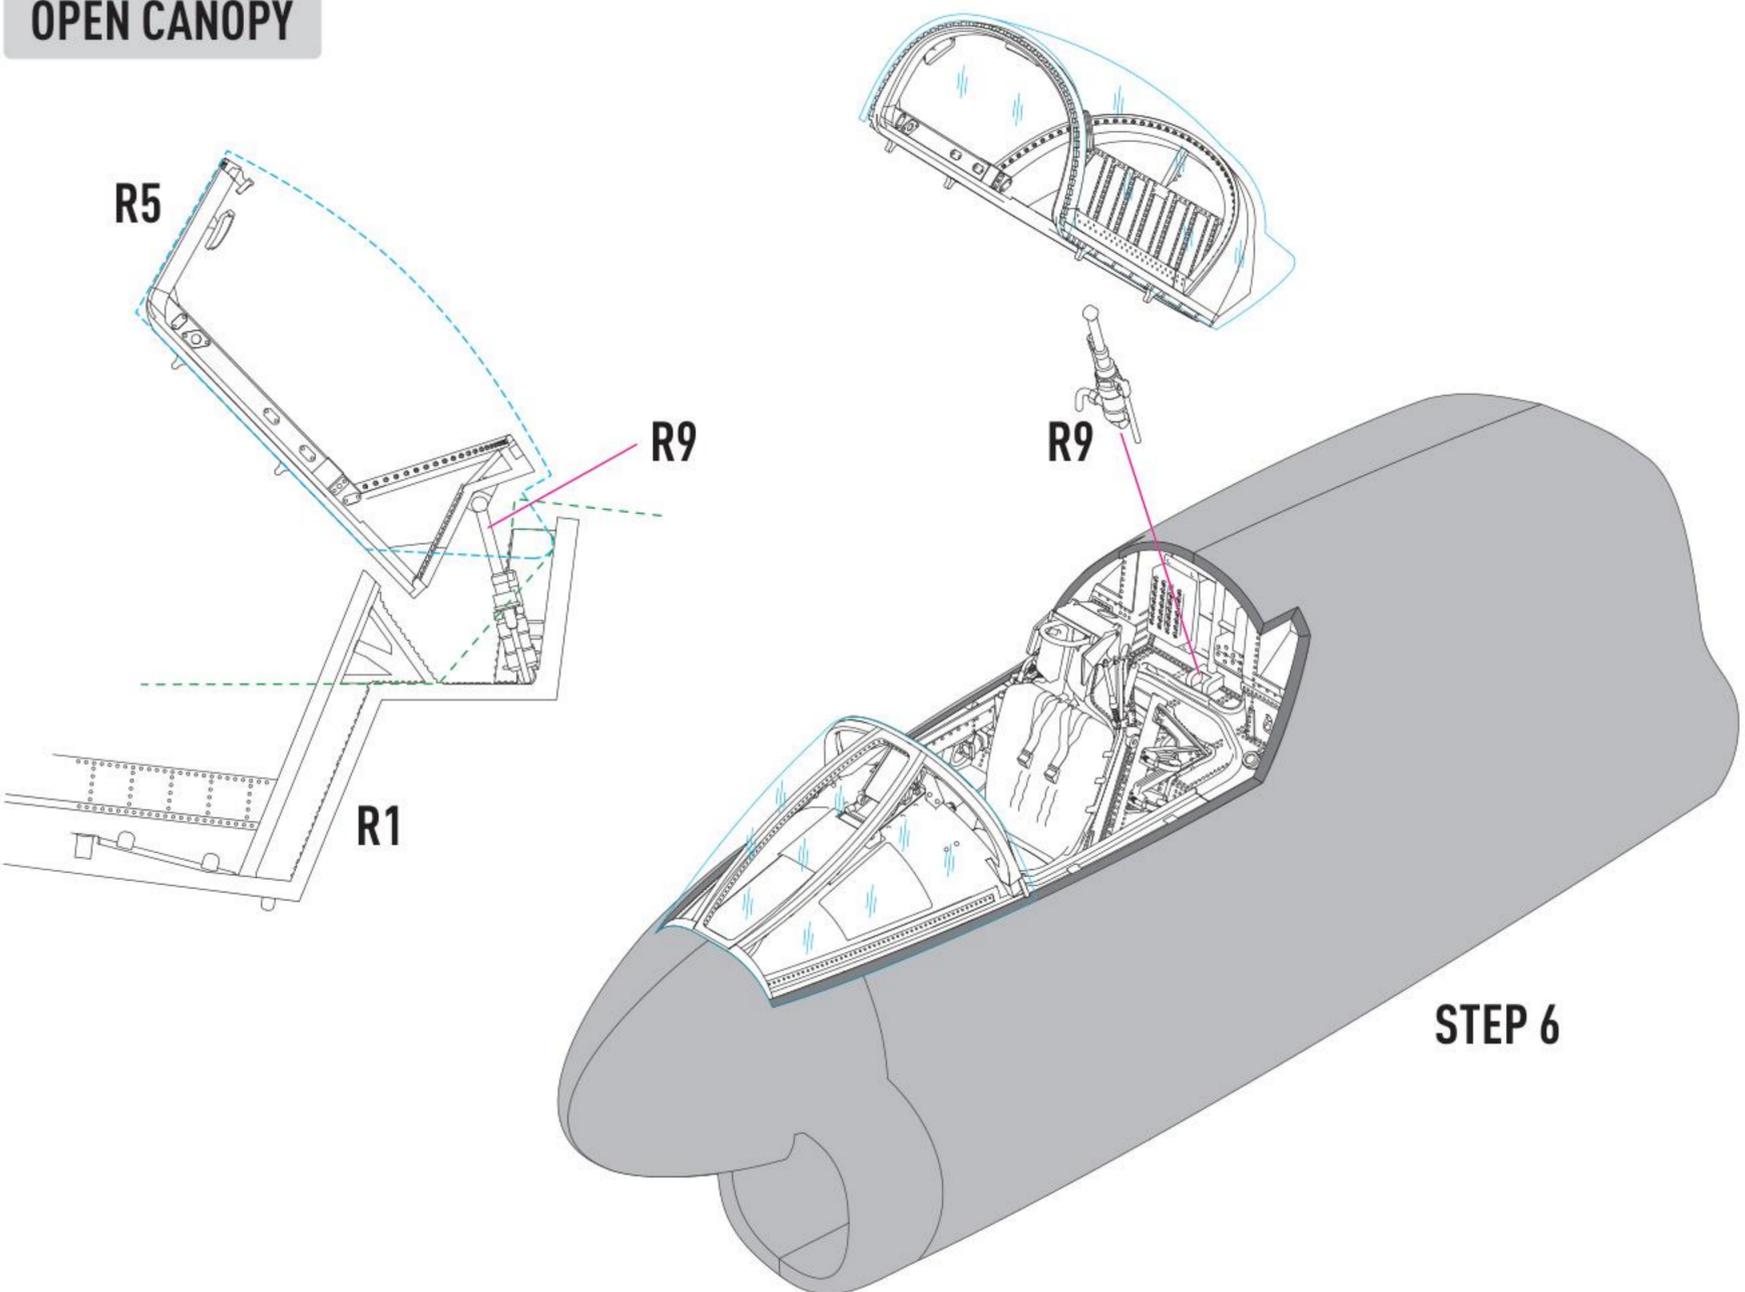


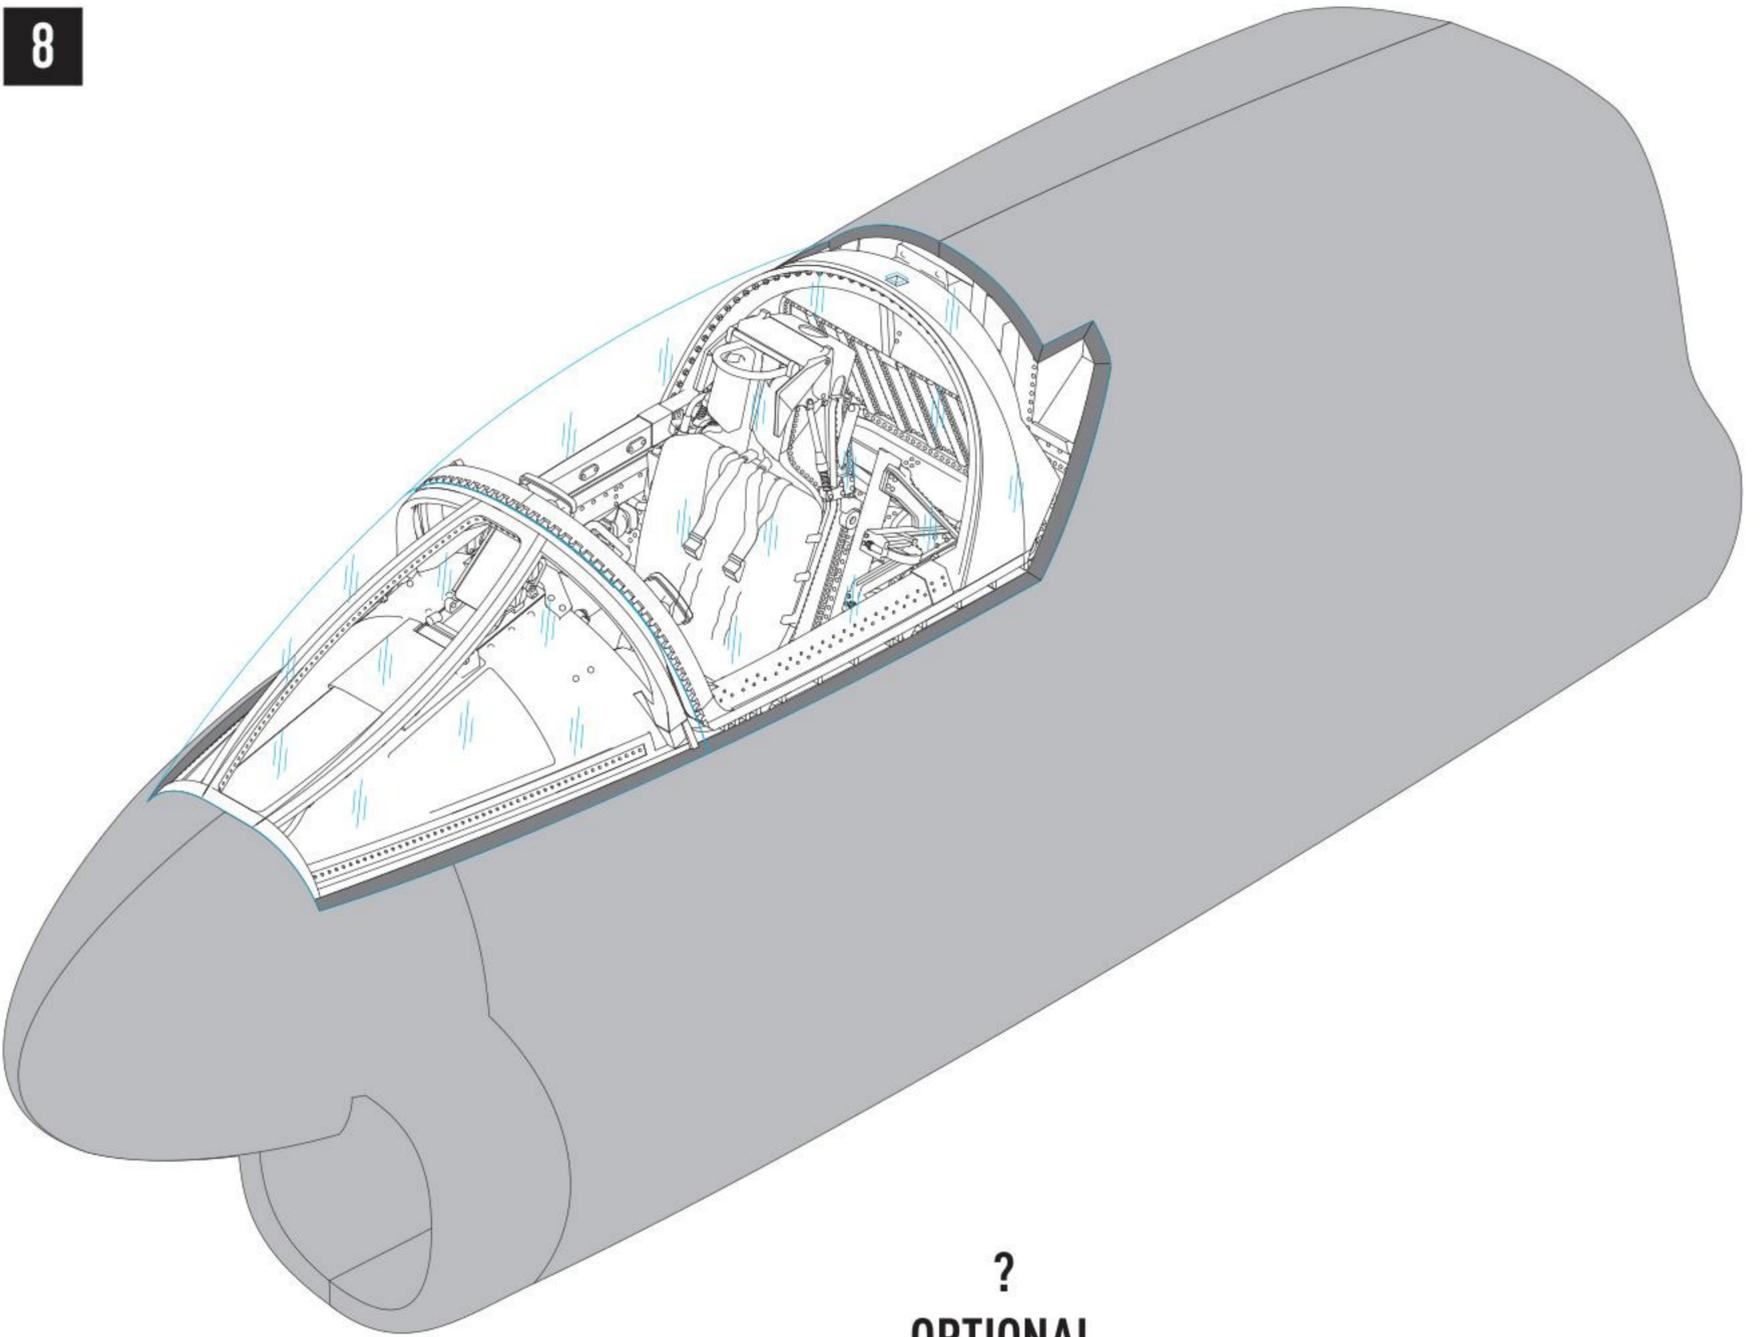

?  
OPTIONAL

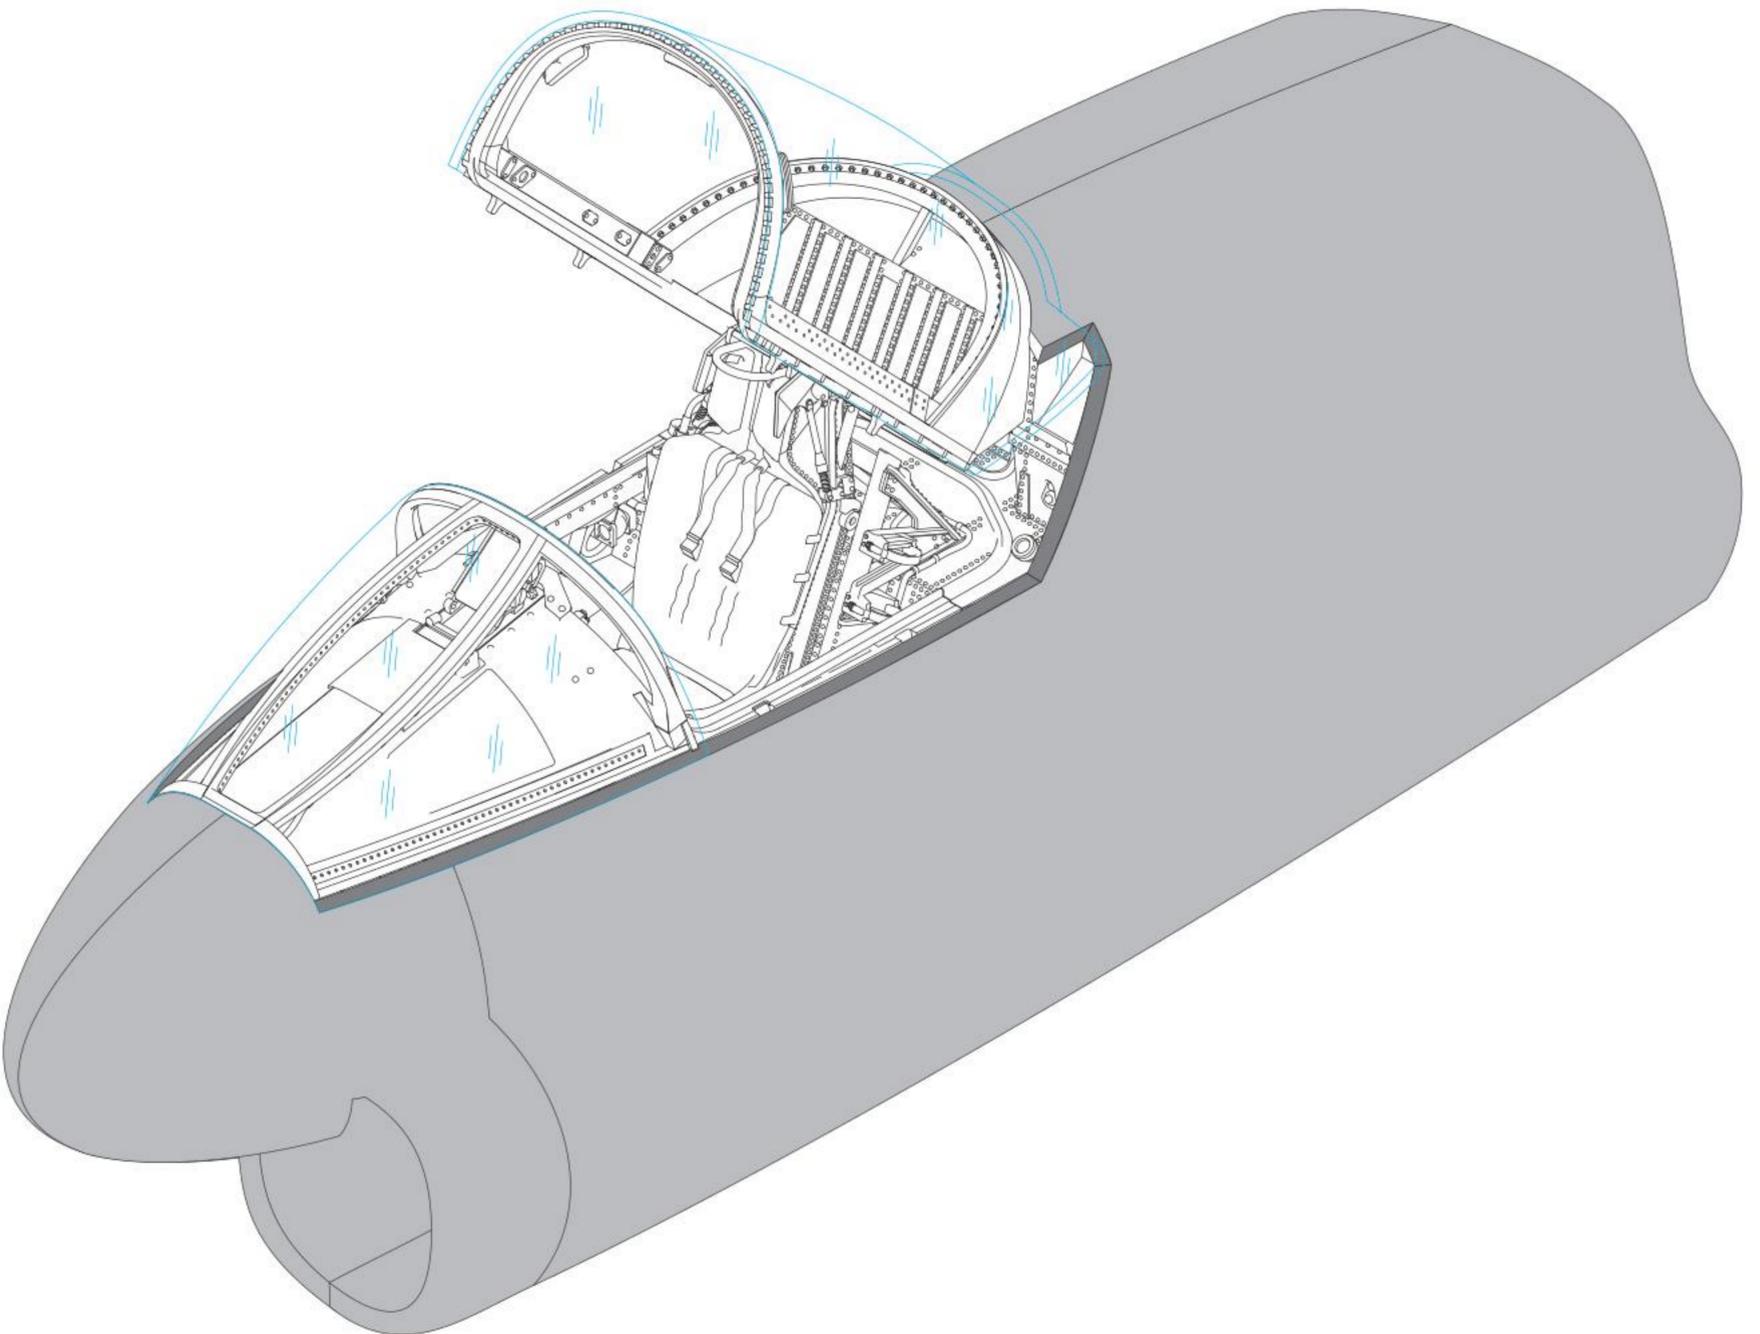

# DECAL INSTRUCTION

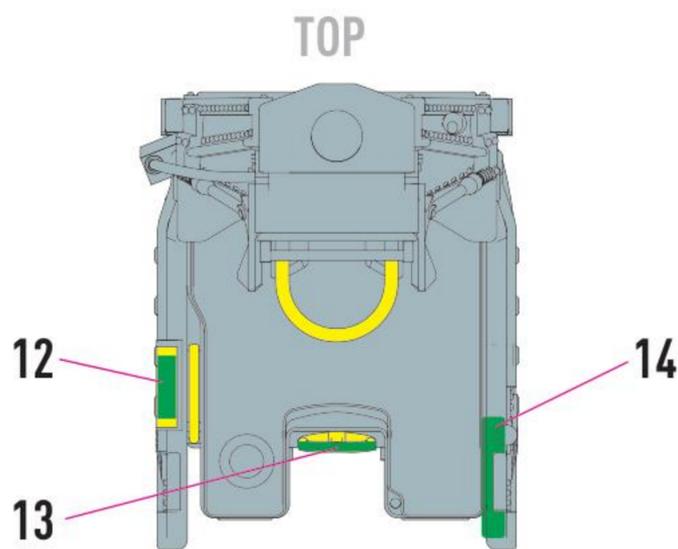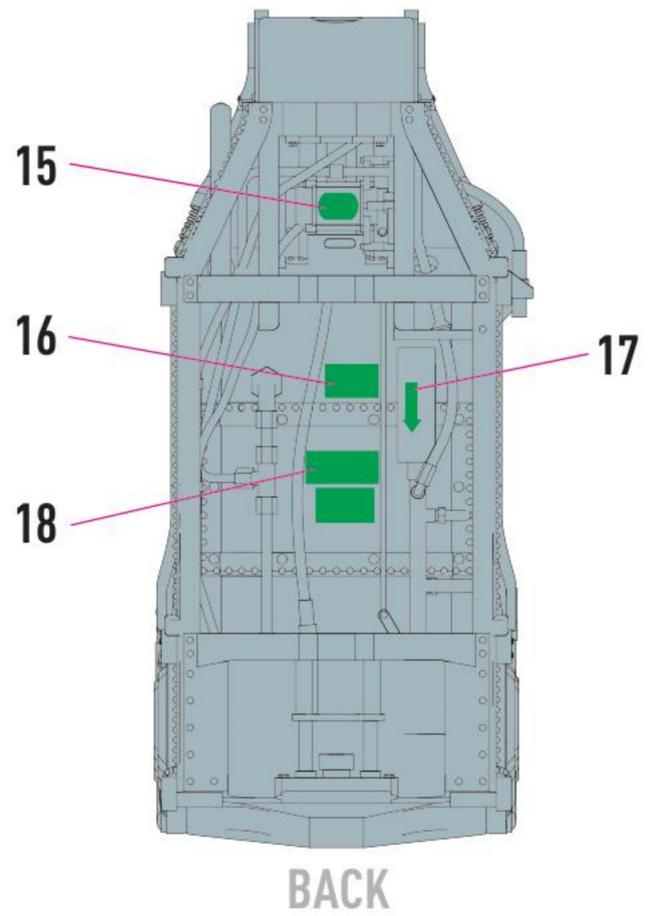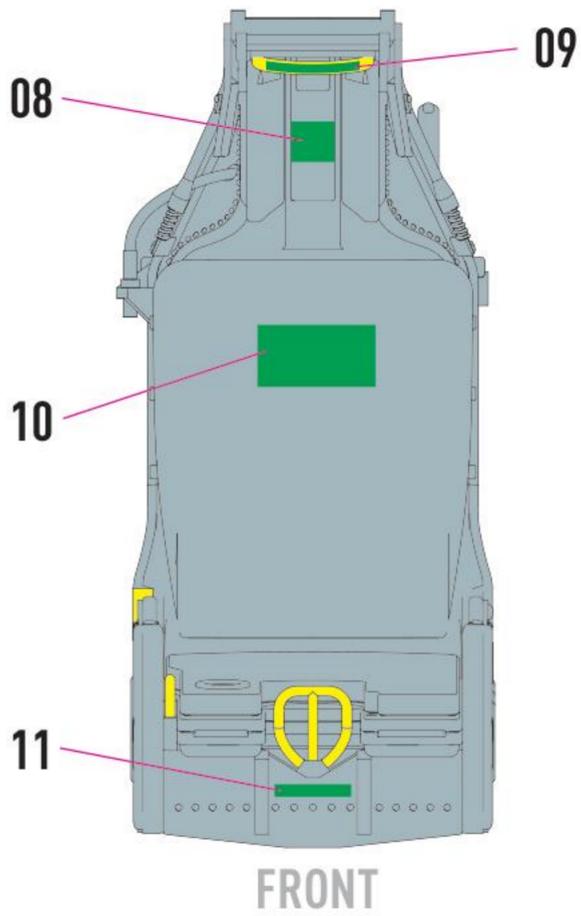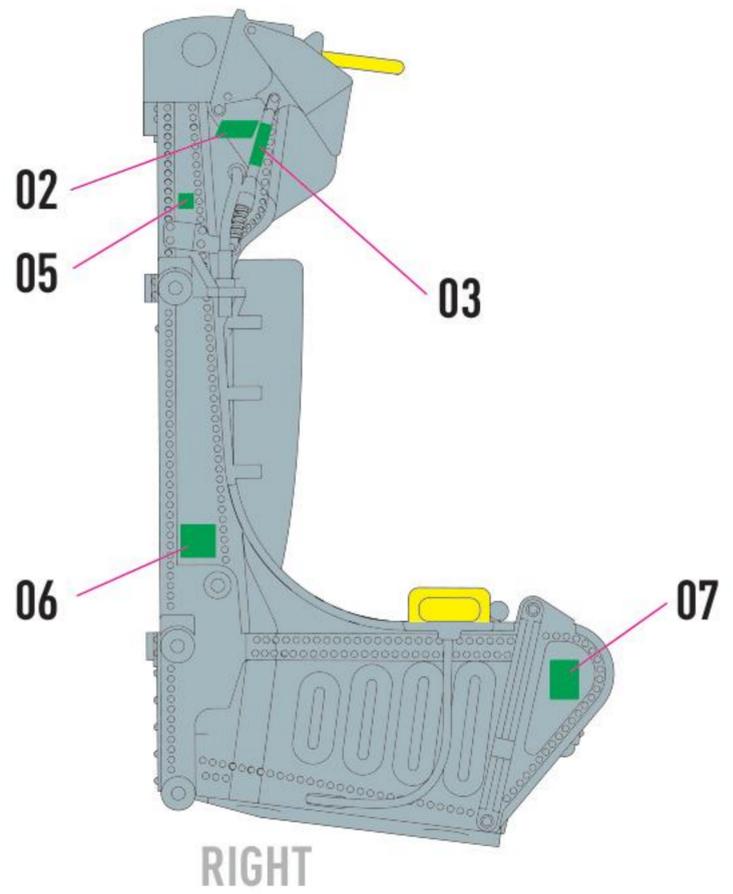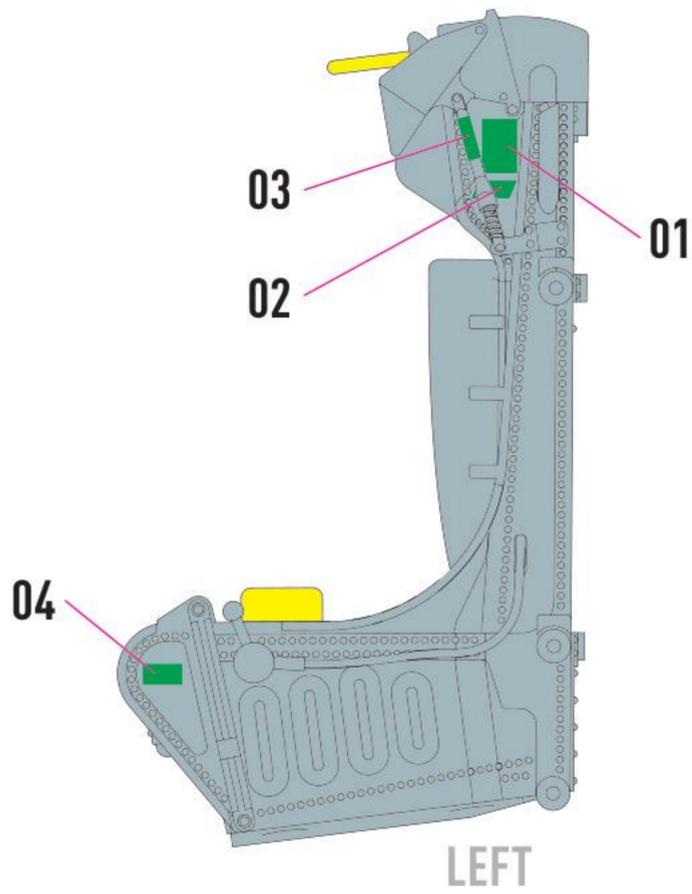

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308

**YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE**

**RESKIT-MODELS.COM**

**General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)**

**Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)**

**Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)**