

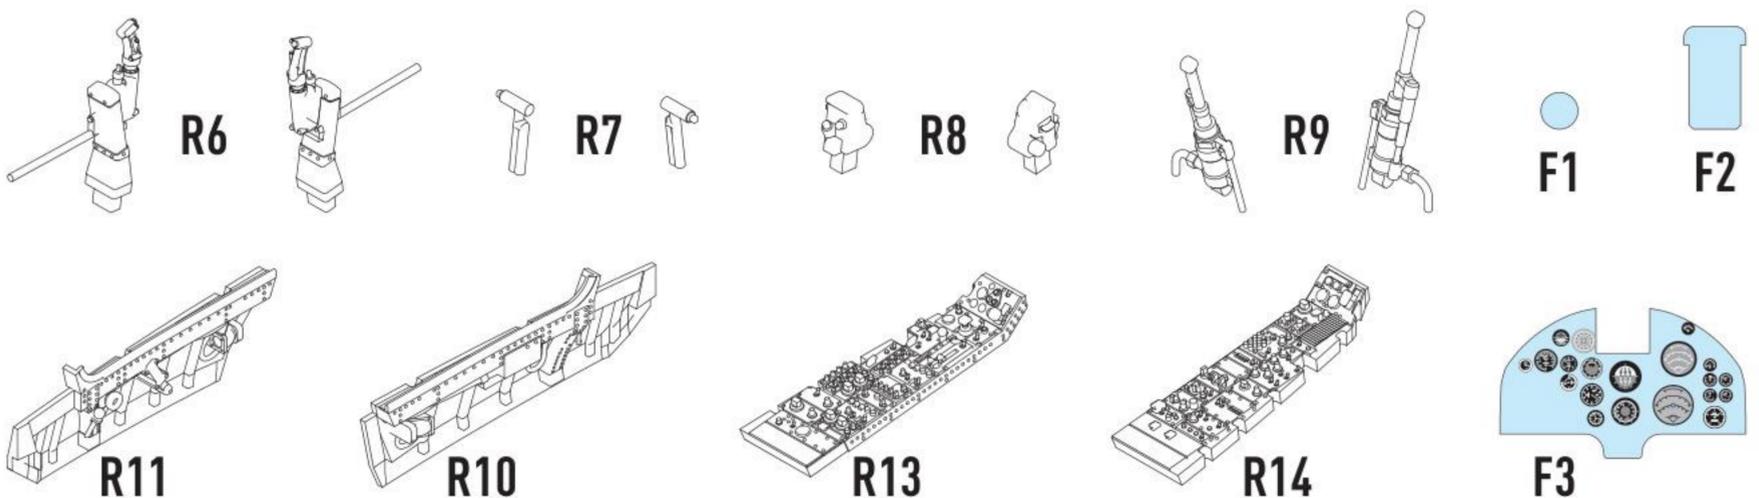
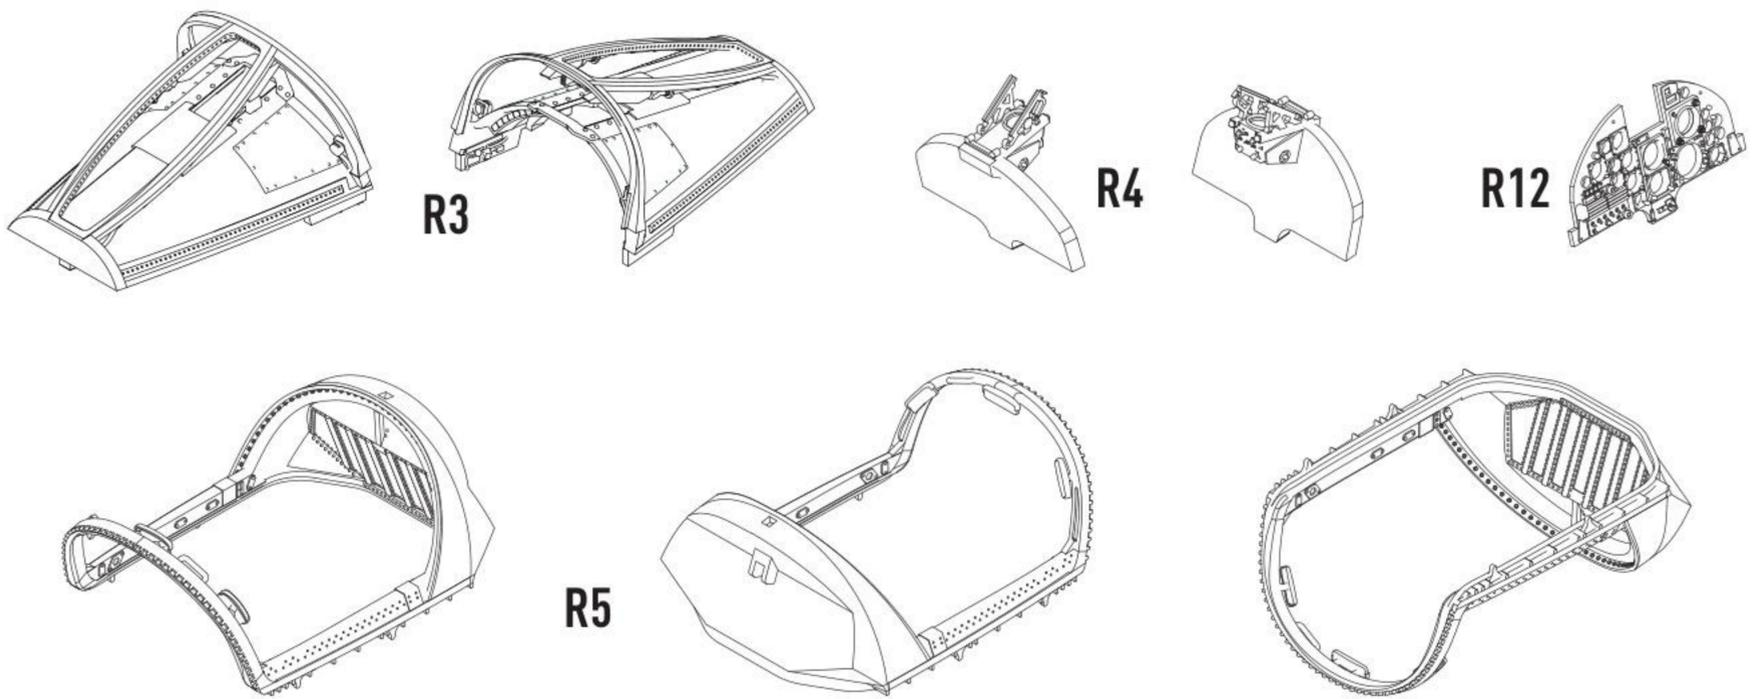


**DETAILS AFTER REMOVAL FROM SUPPORTS**


 USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

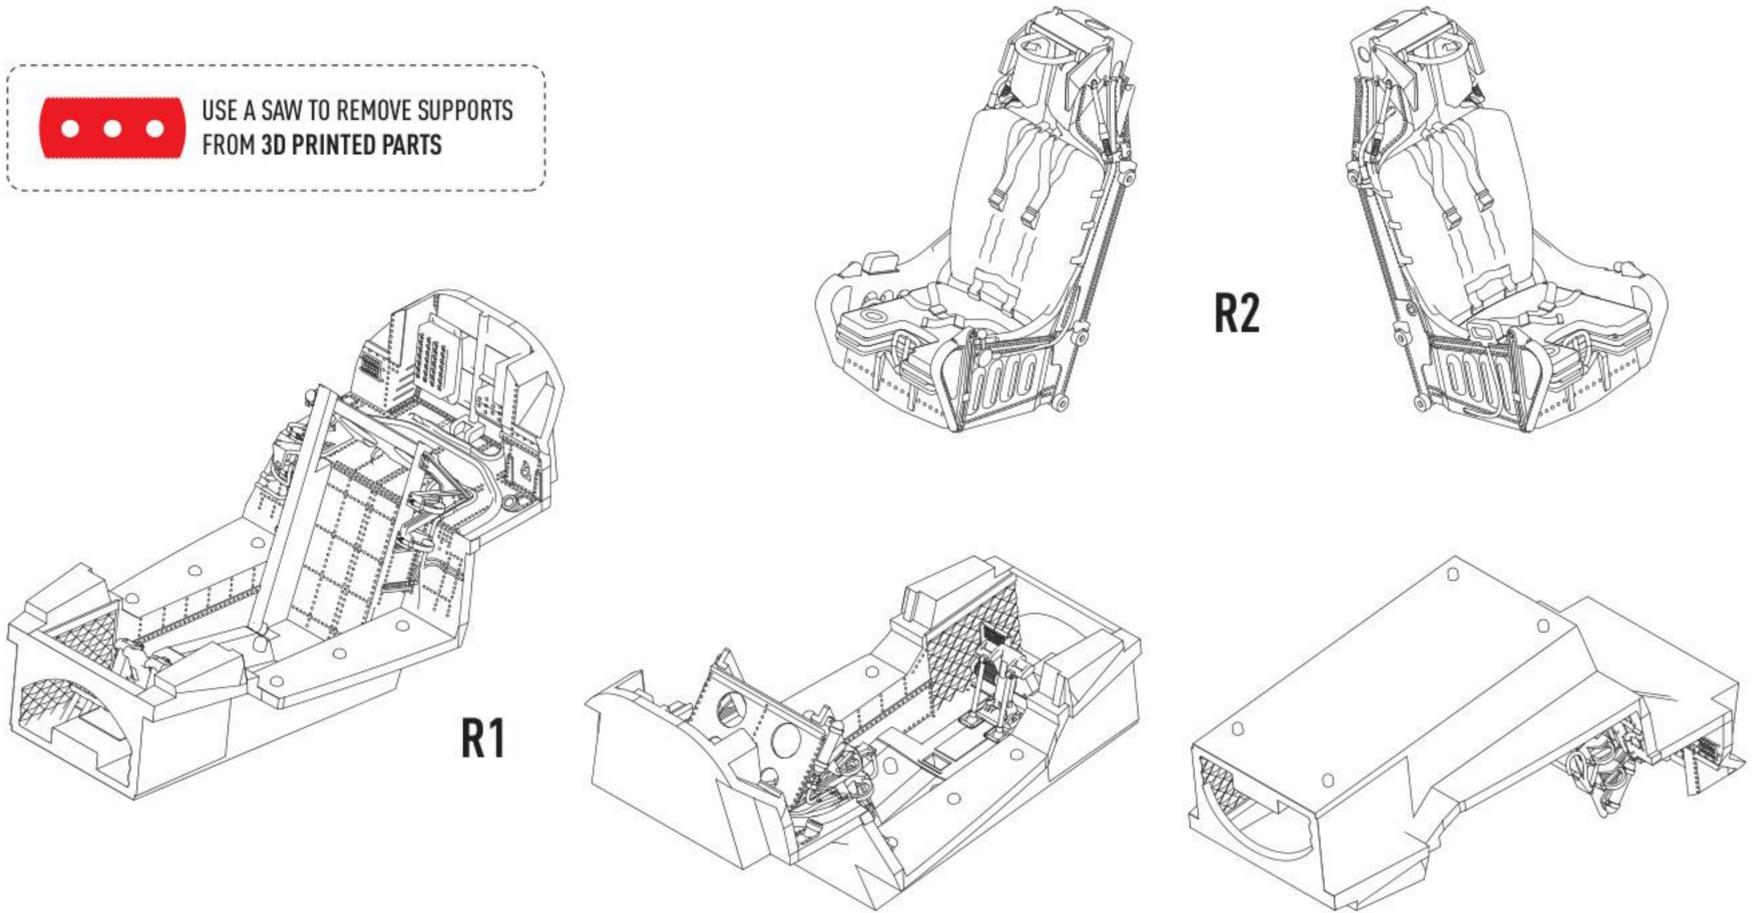


1

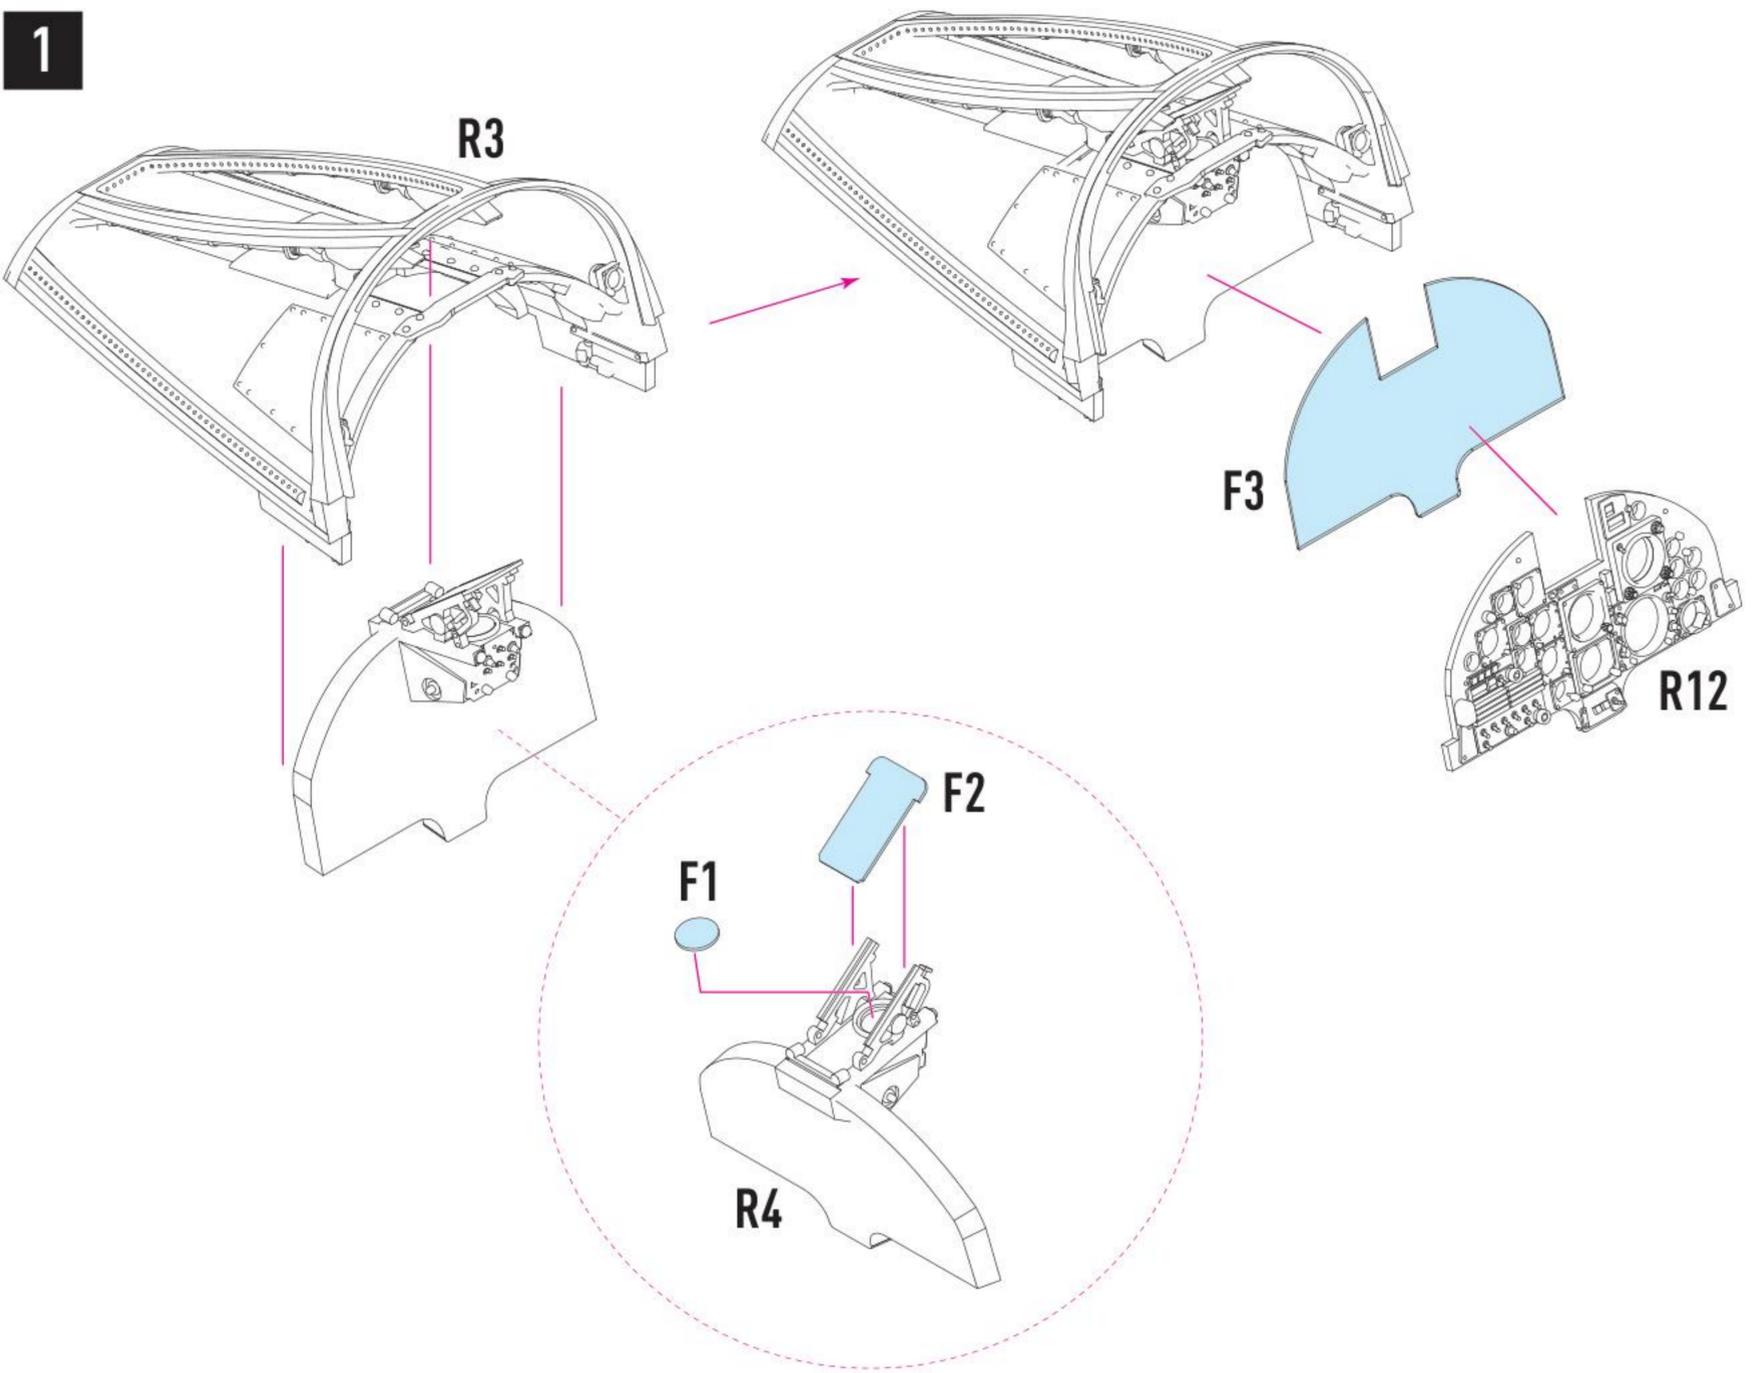


2

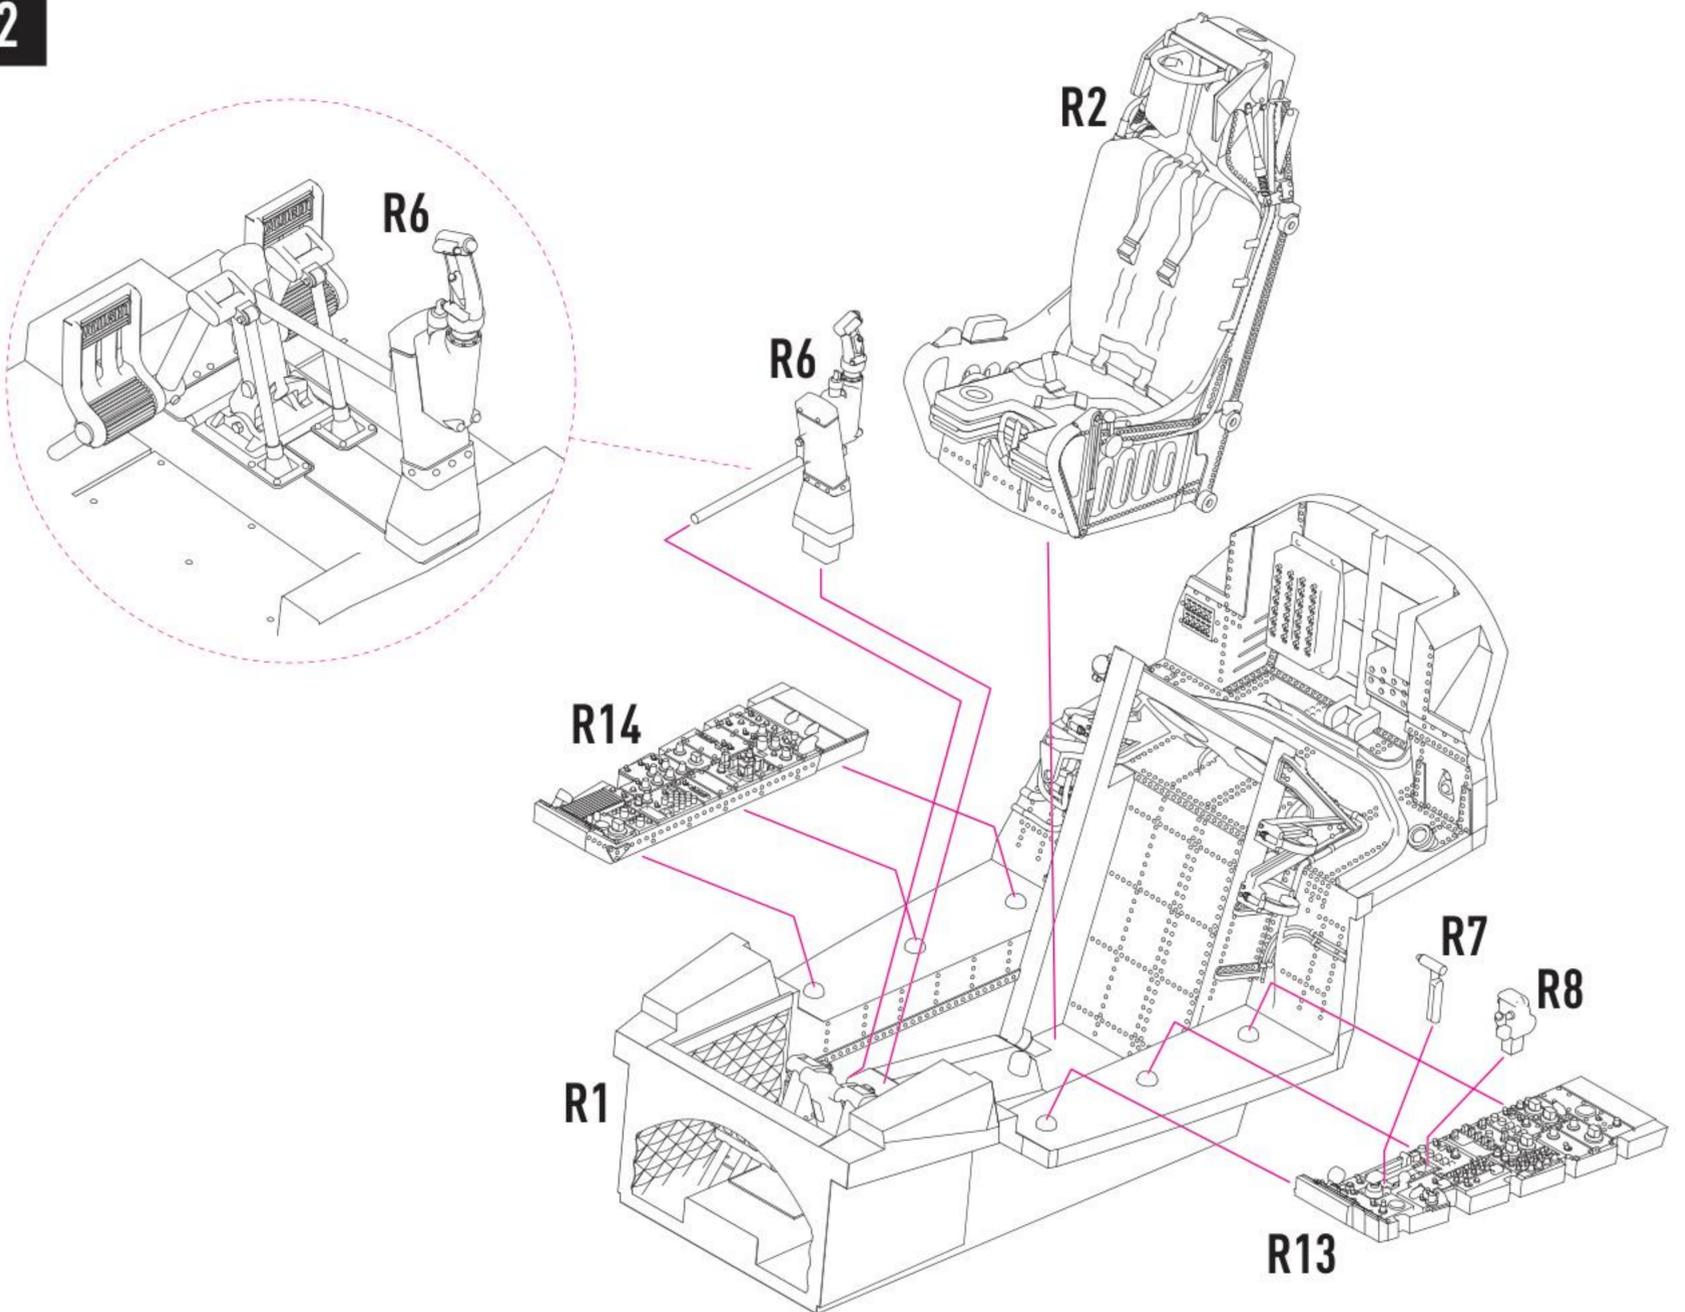



3

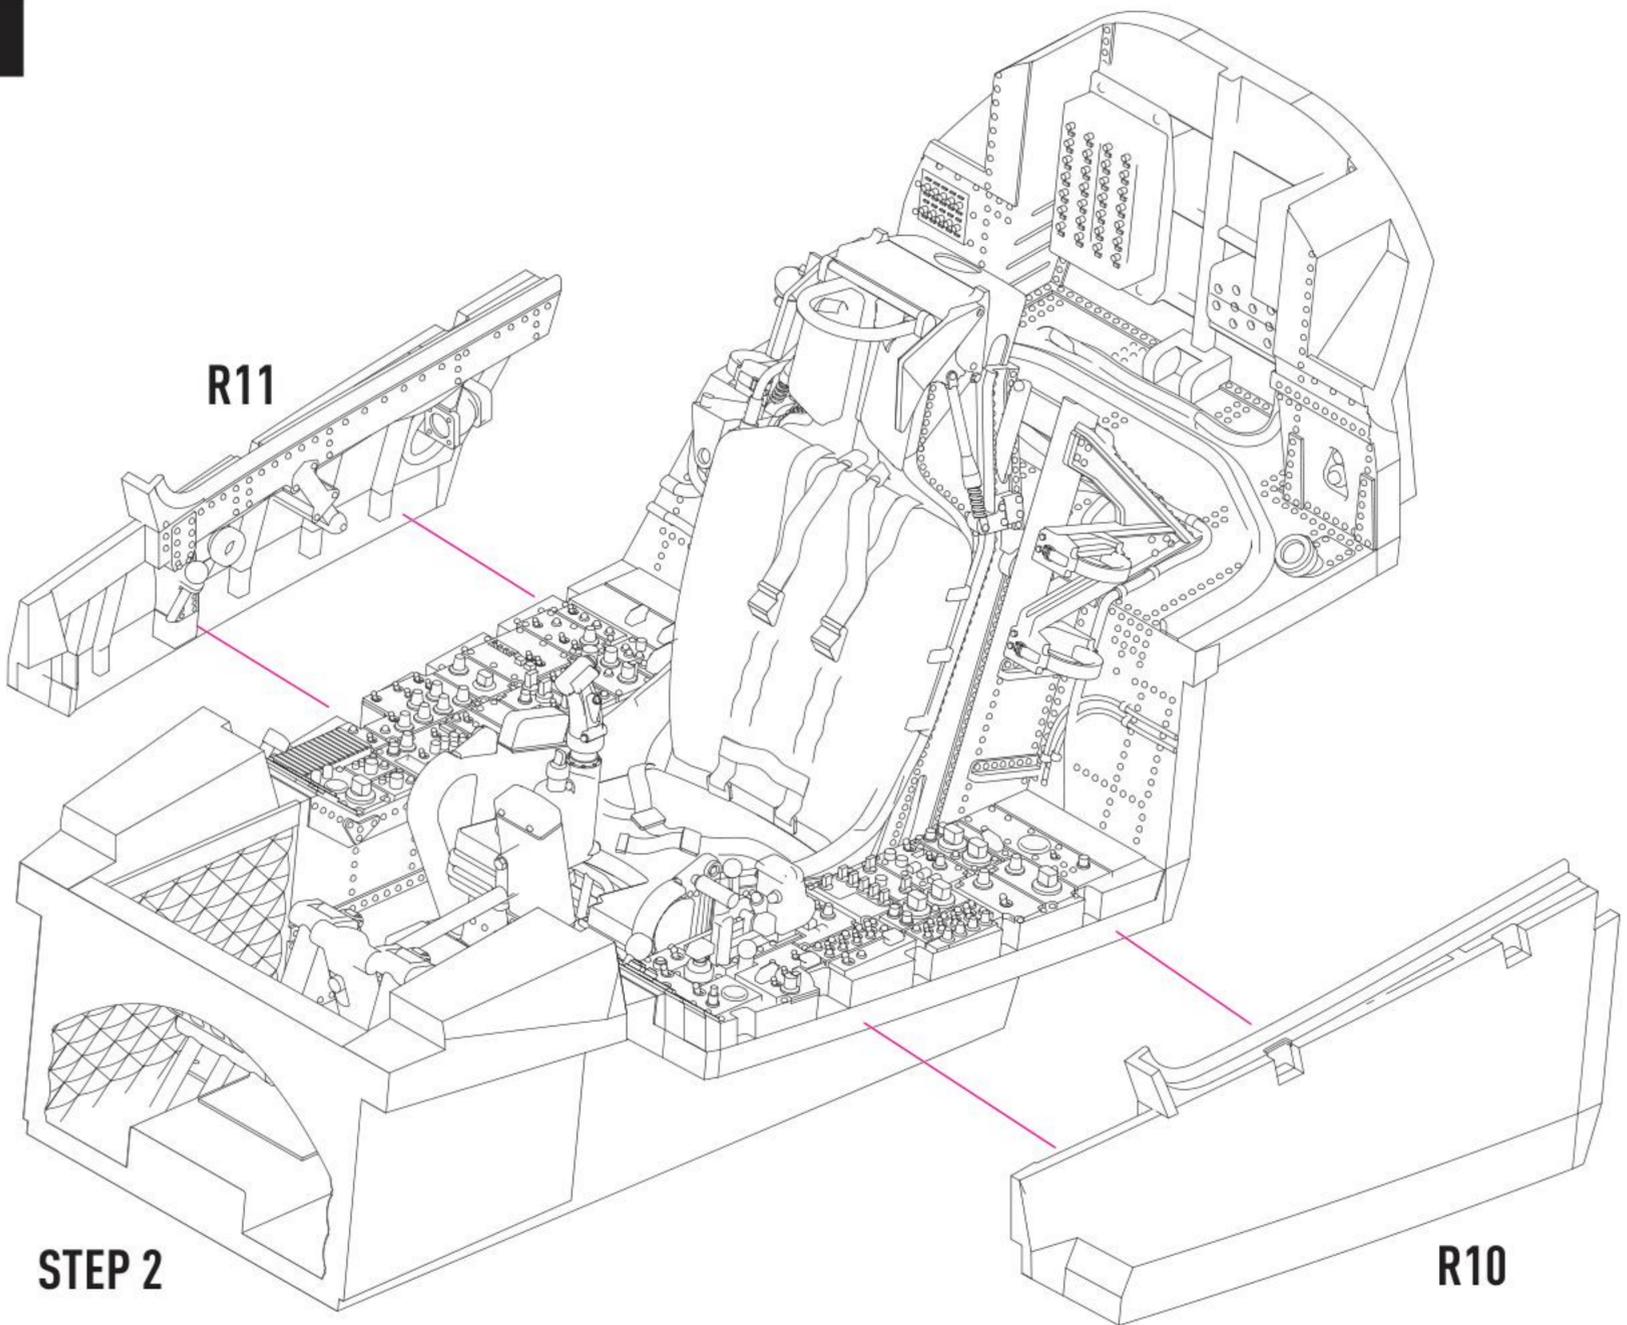


4

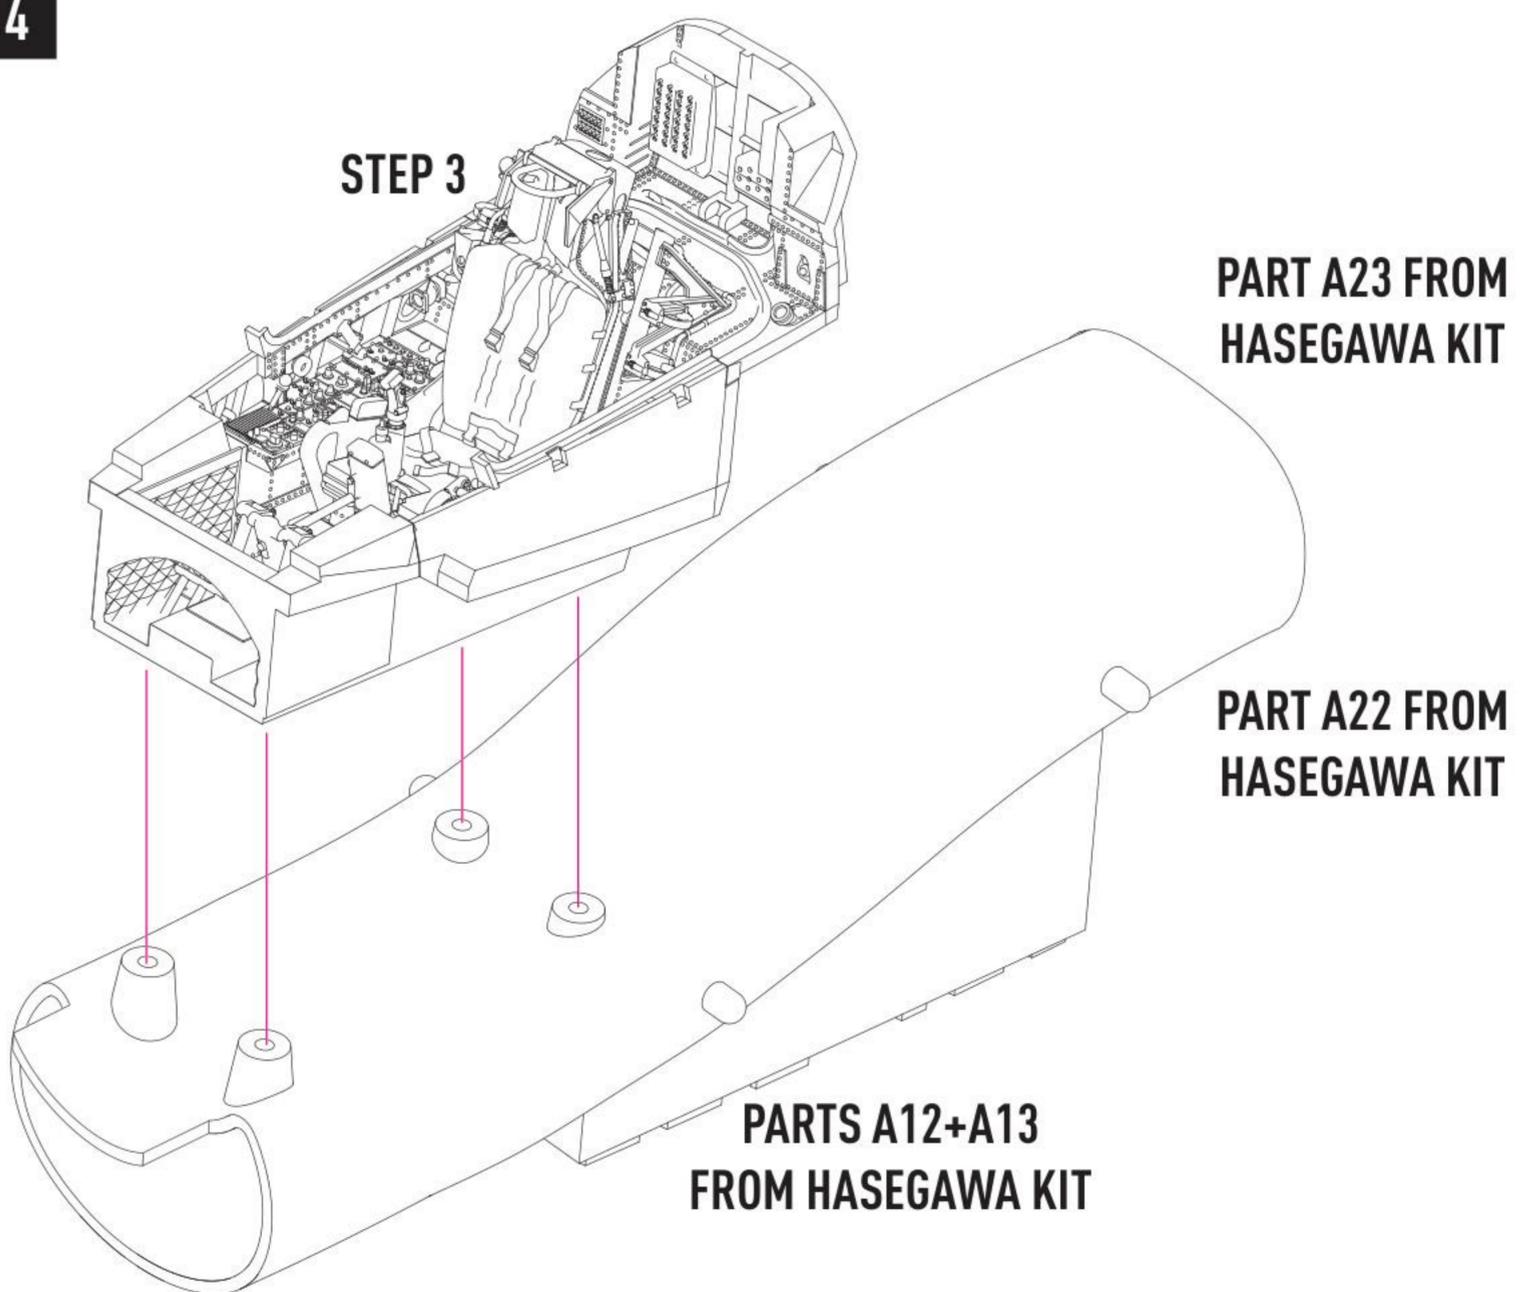


## 5 PREPARATION OF FUSELAGE PARTS FOR INSTALLATION OF ADDITIONAL KIT

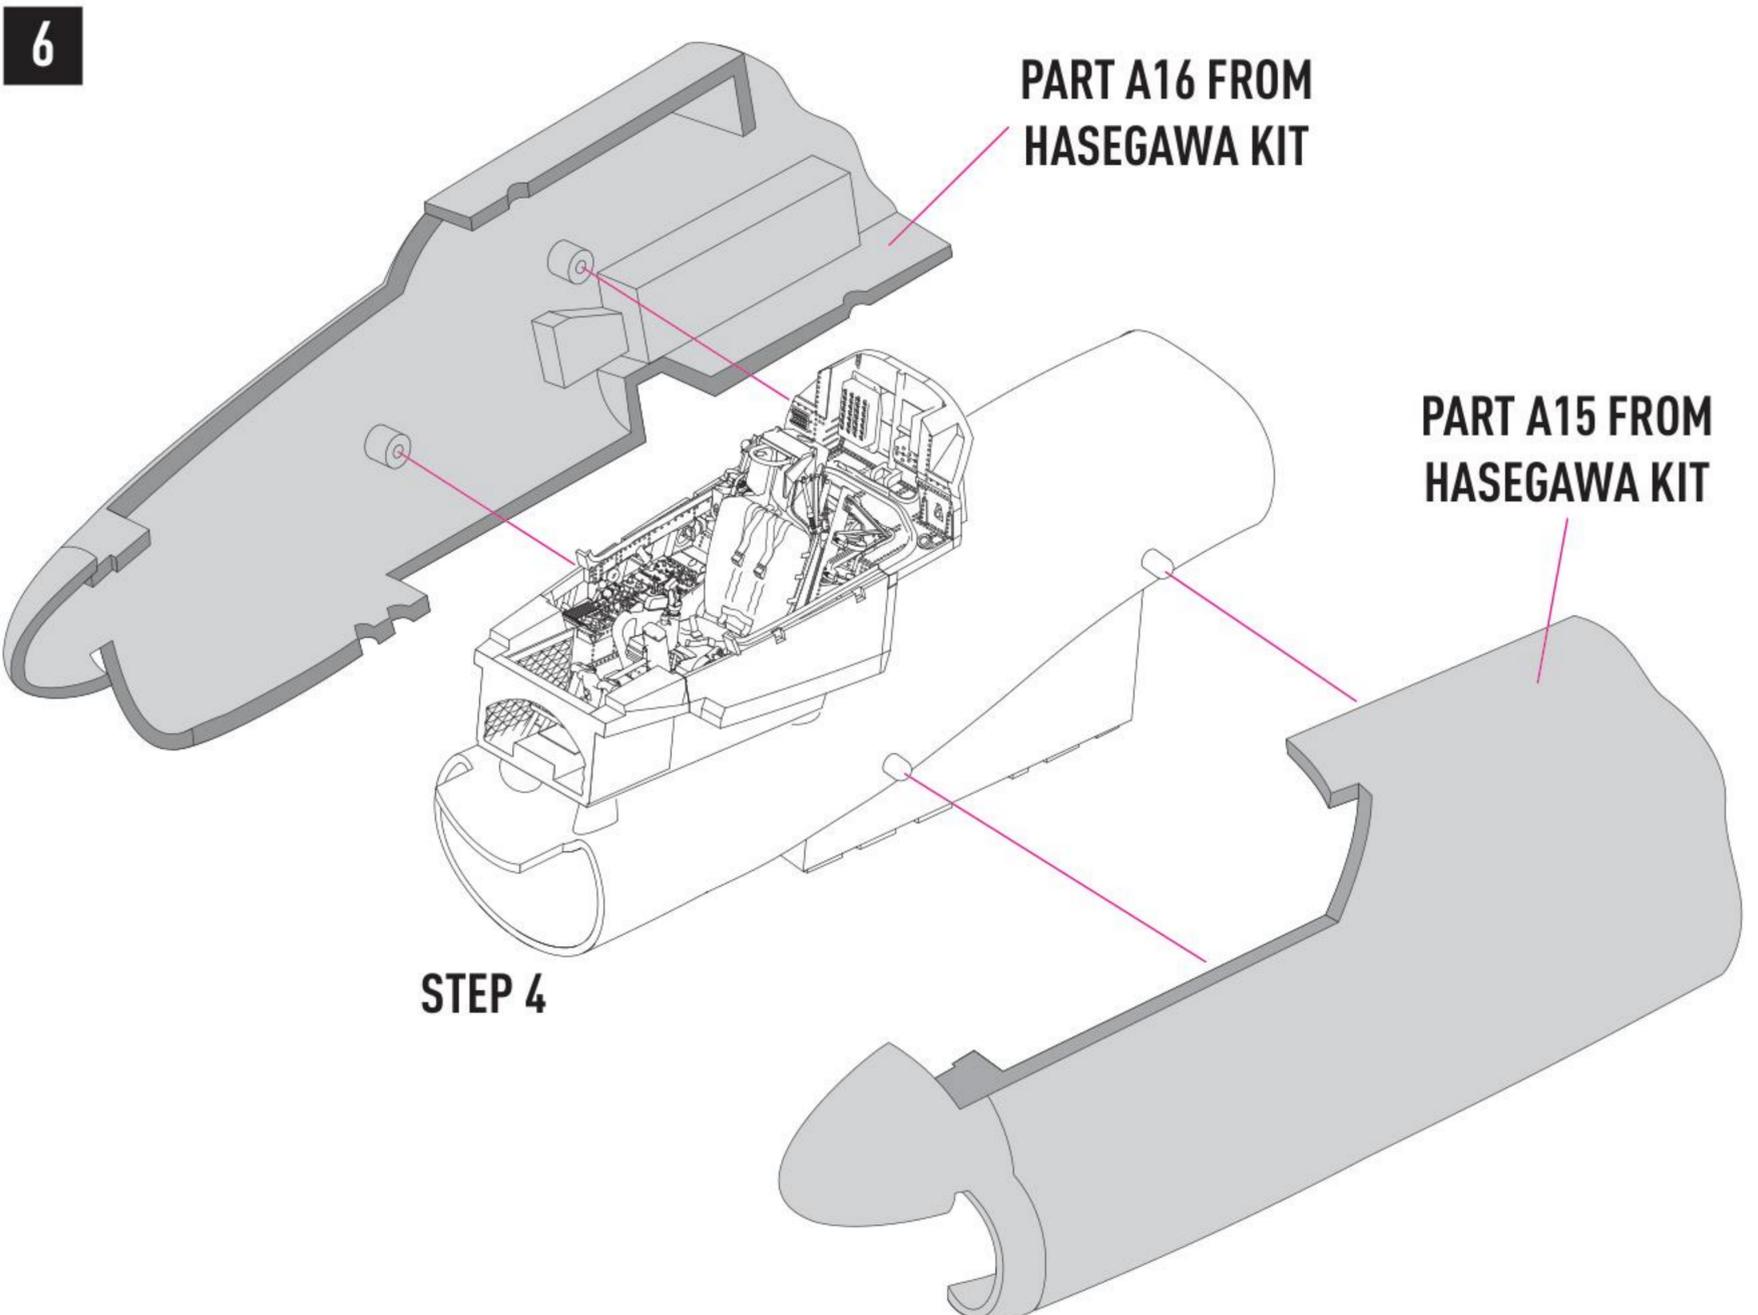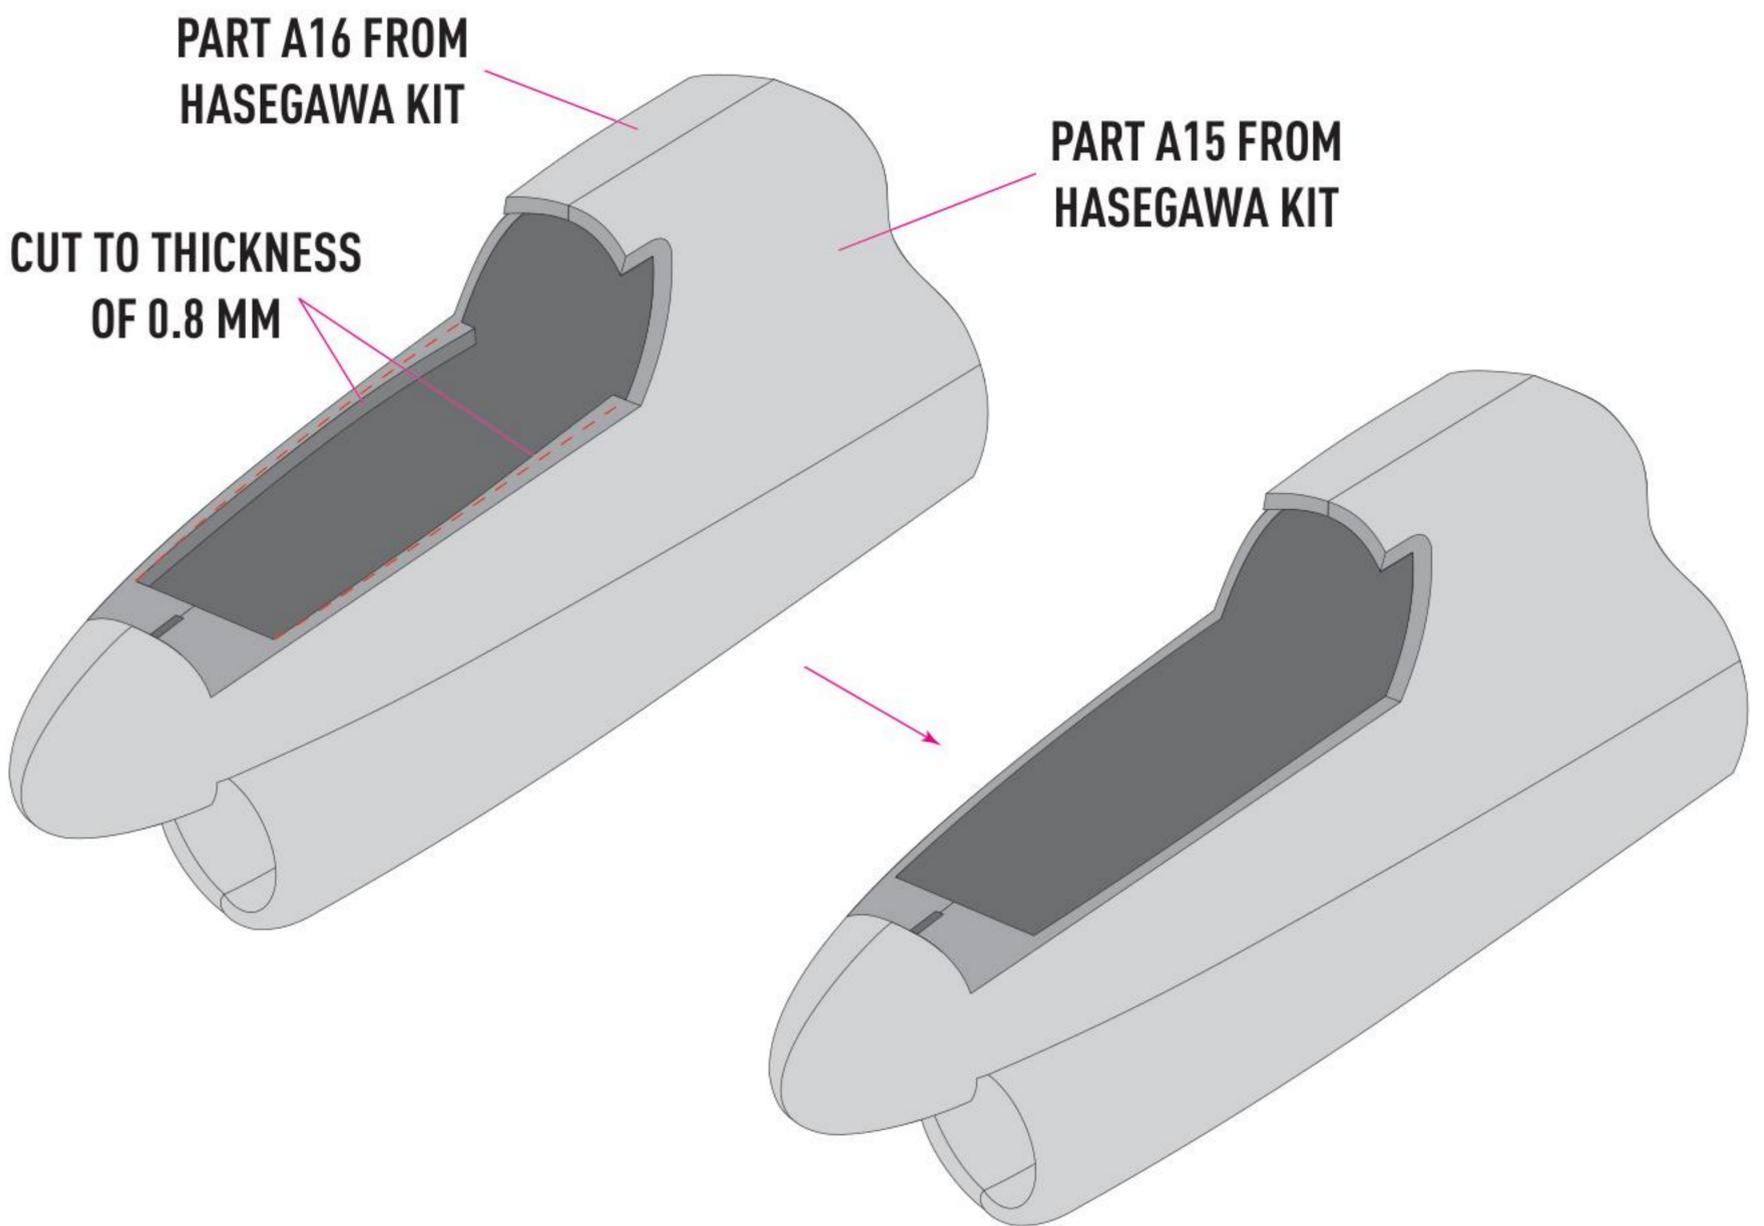


**7** CLOSED CANOPY

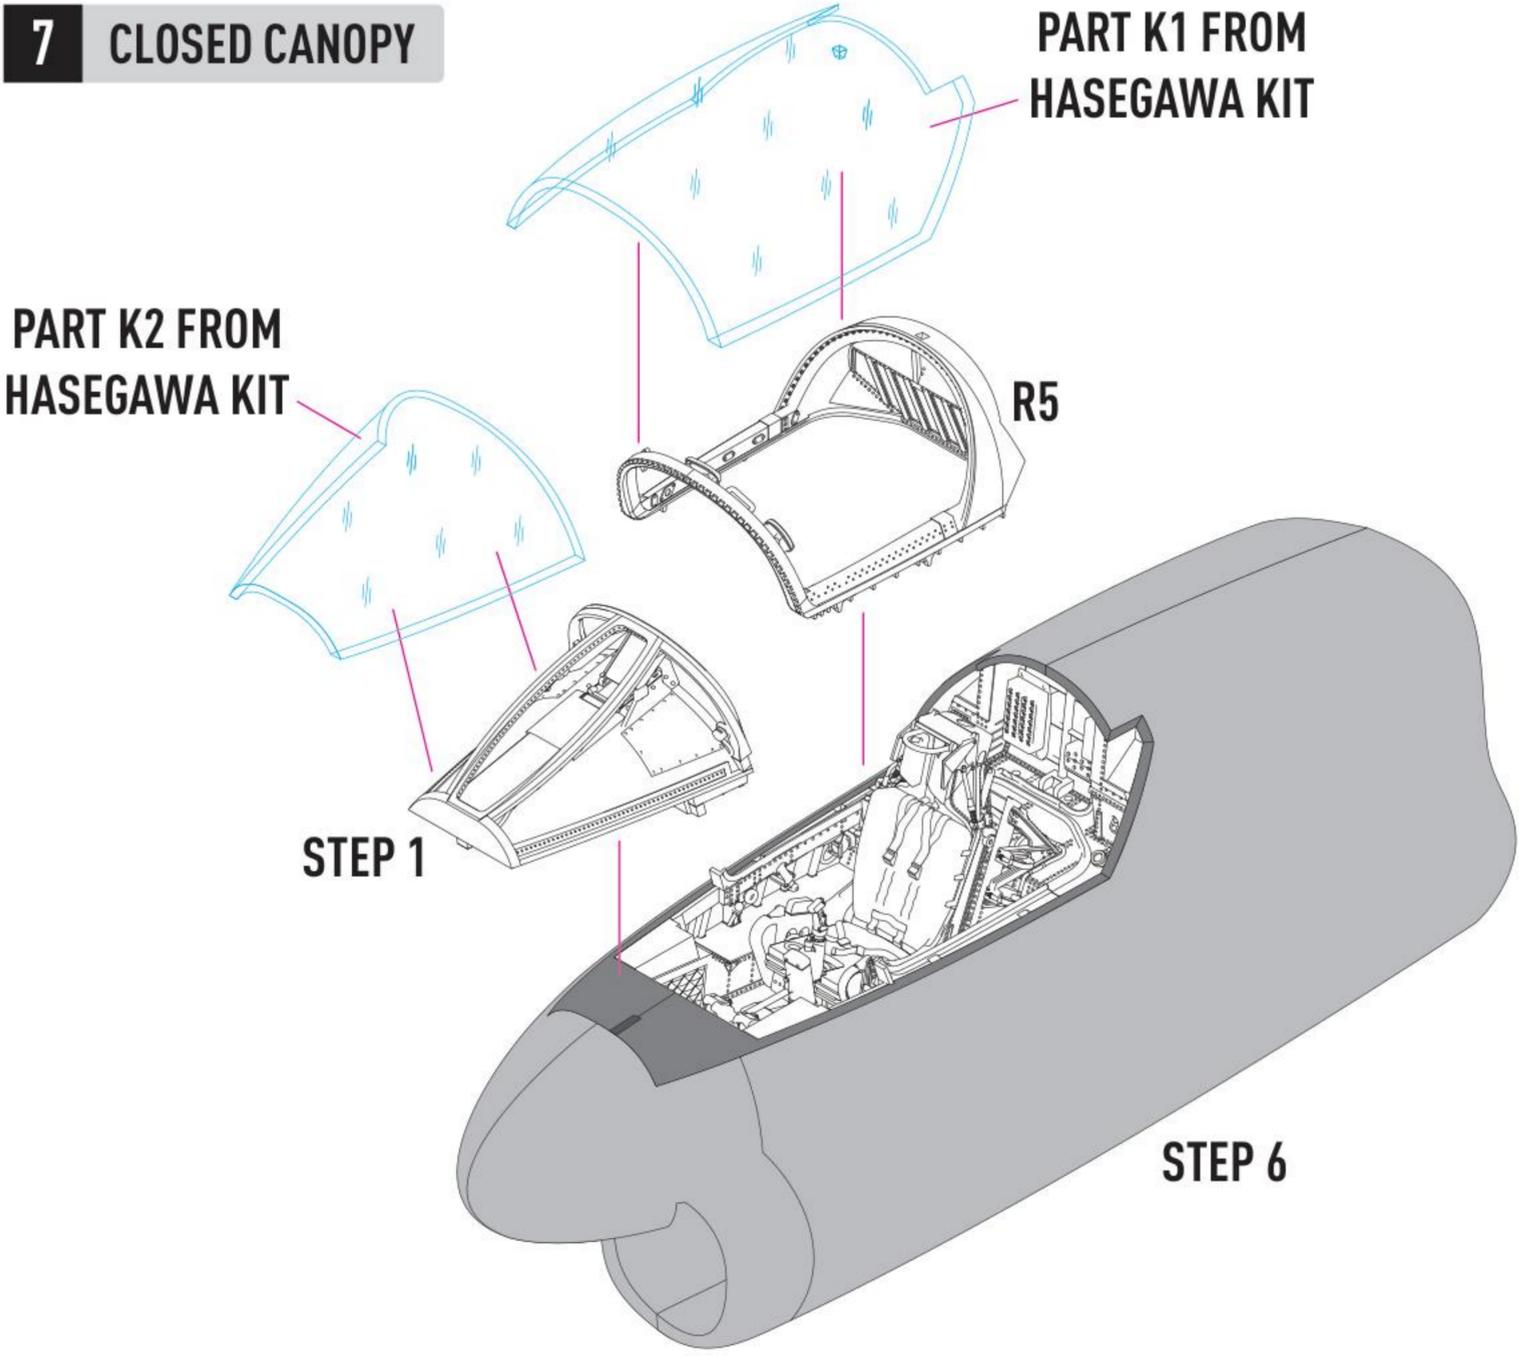


**OPEN CANOPY**





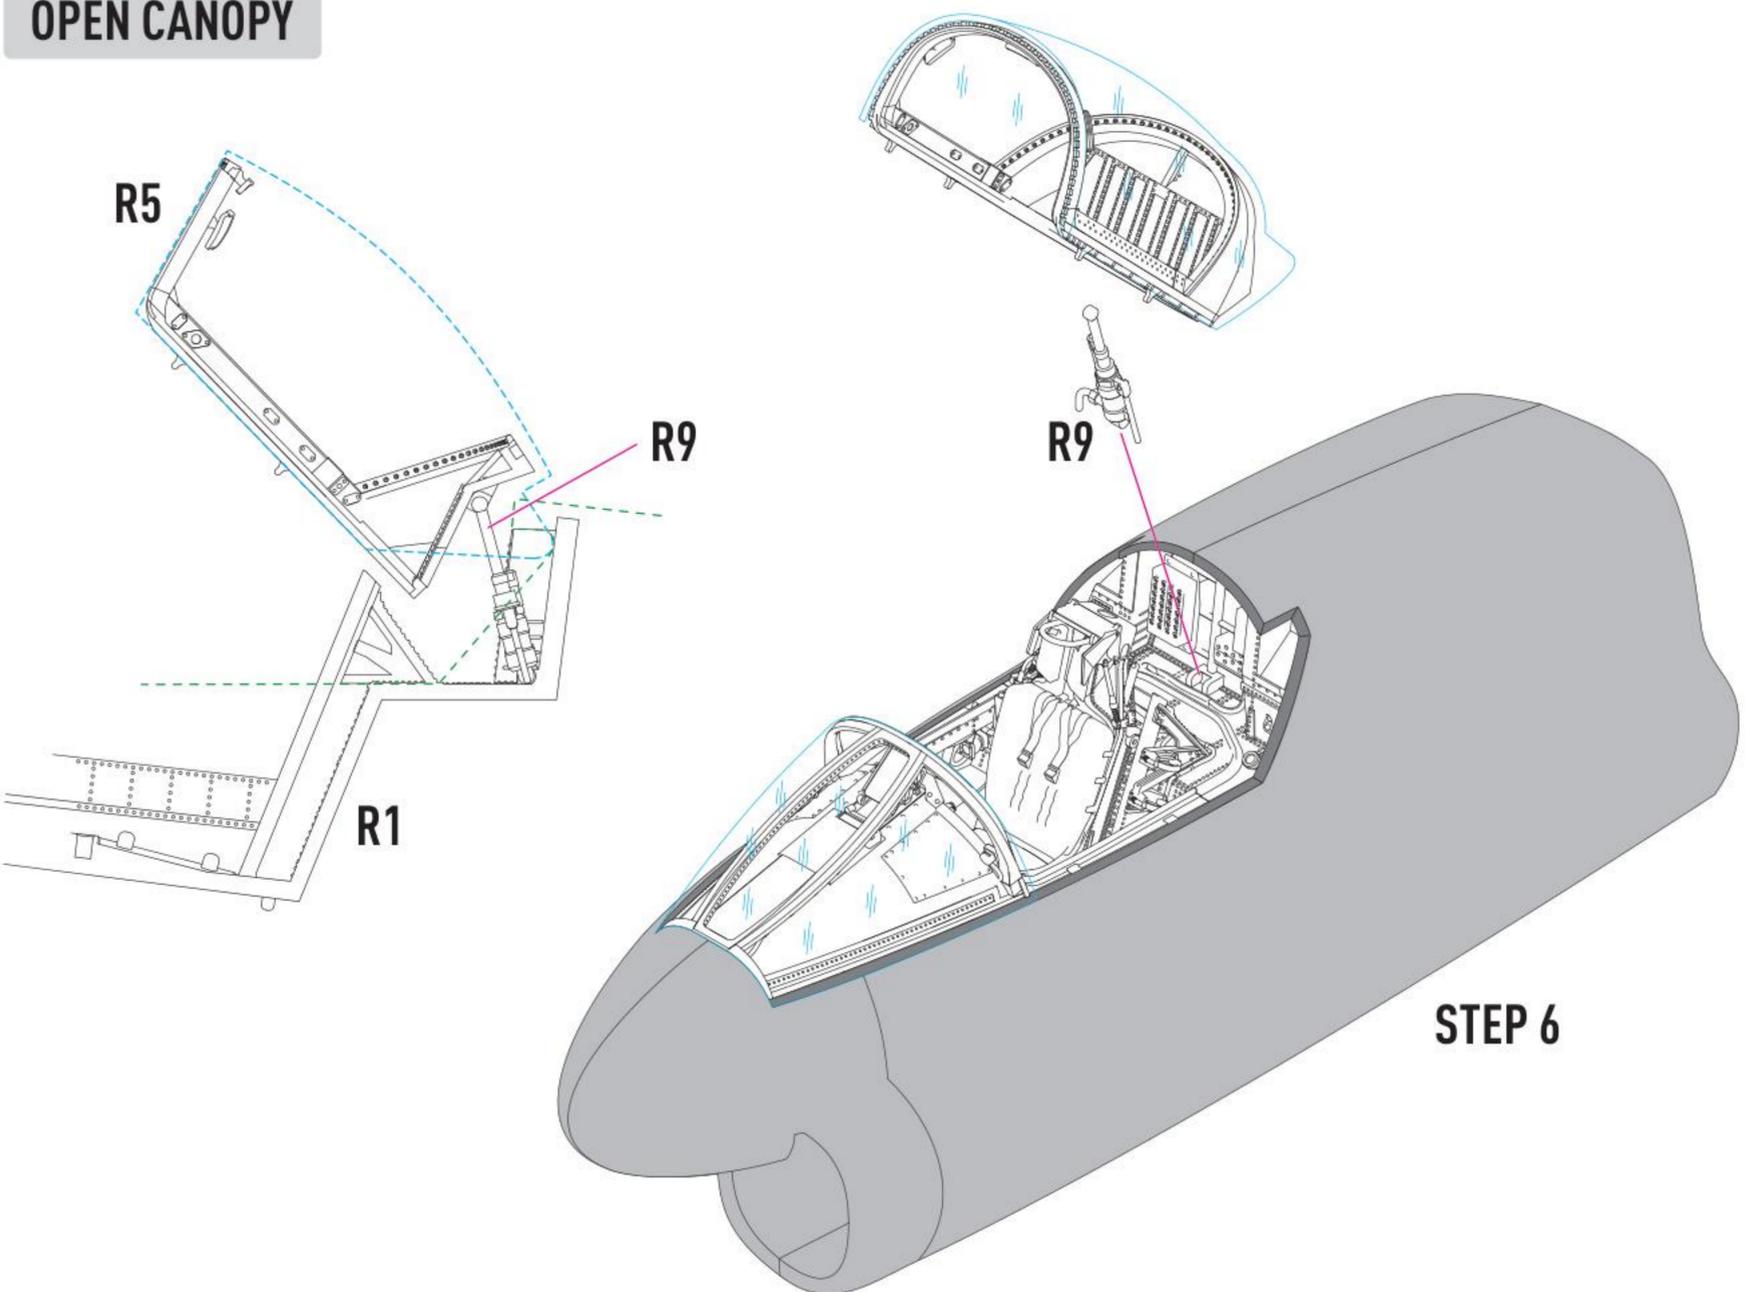


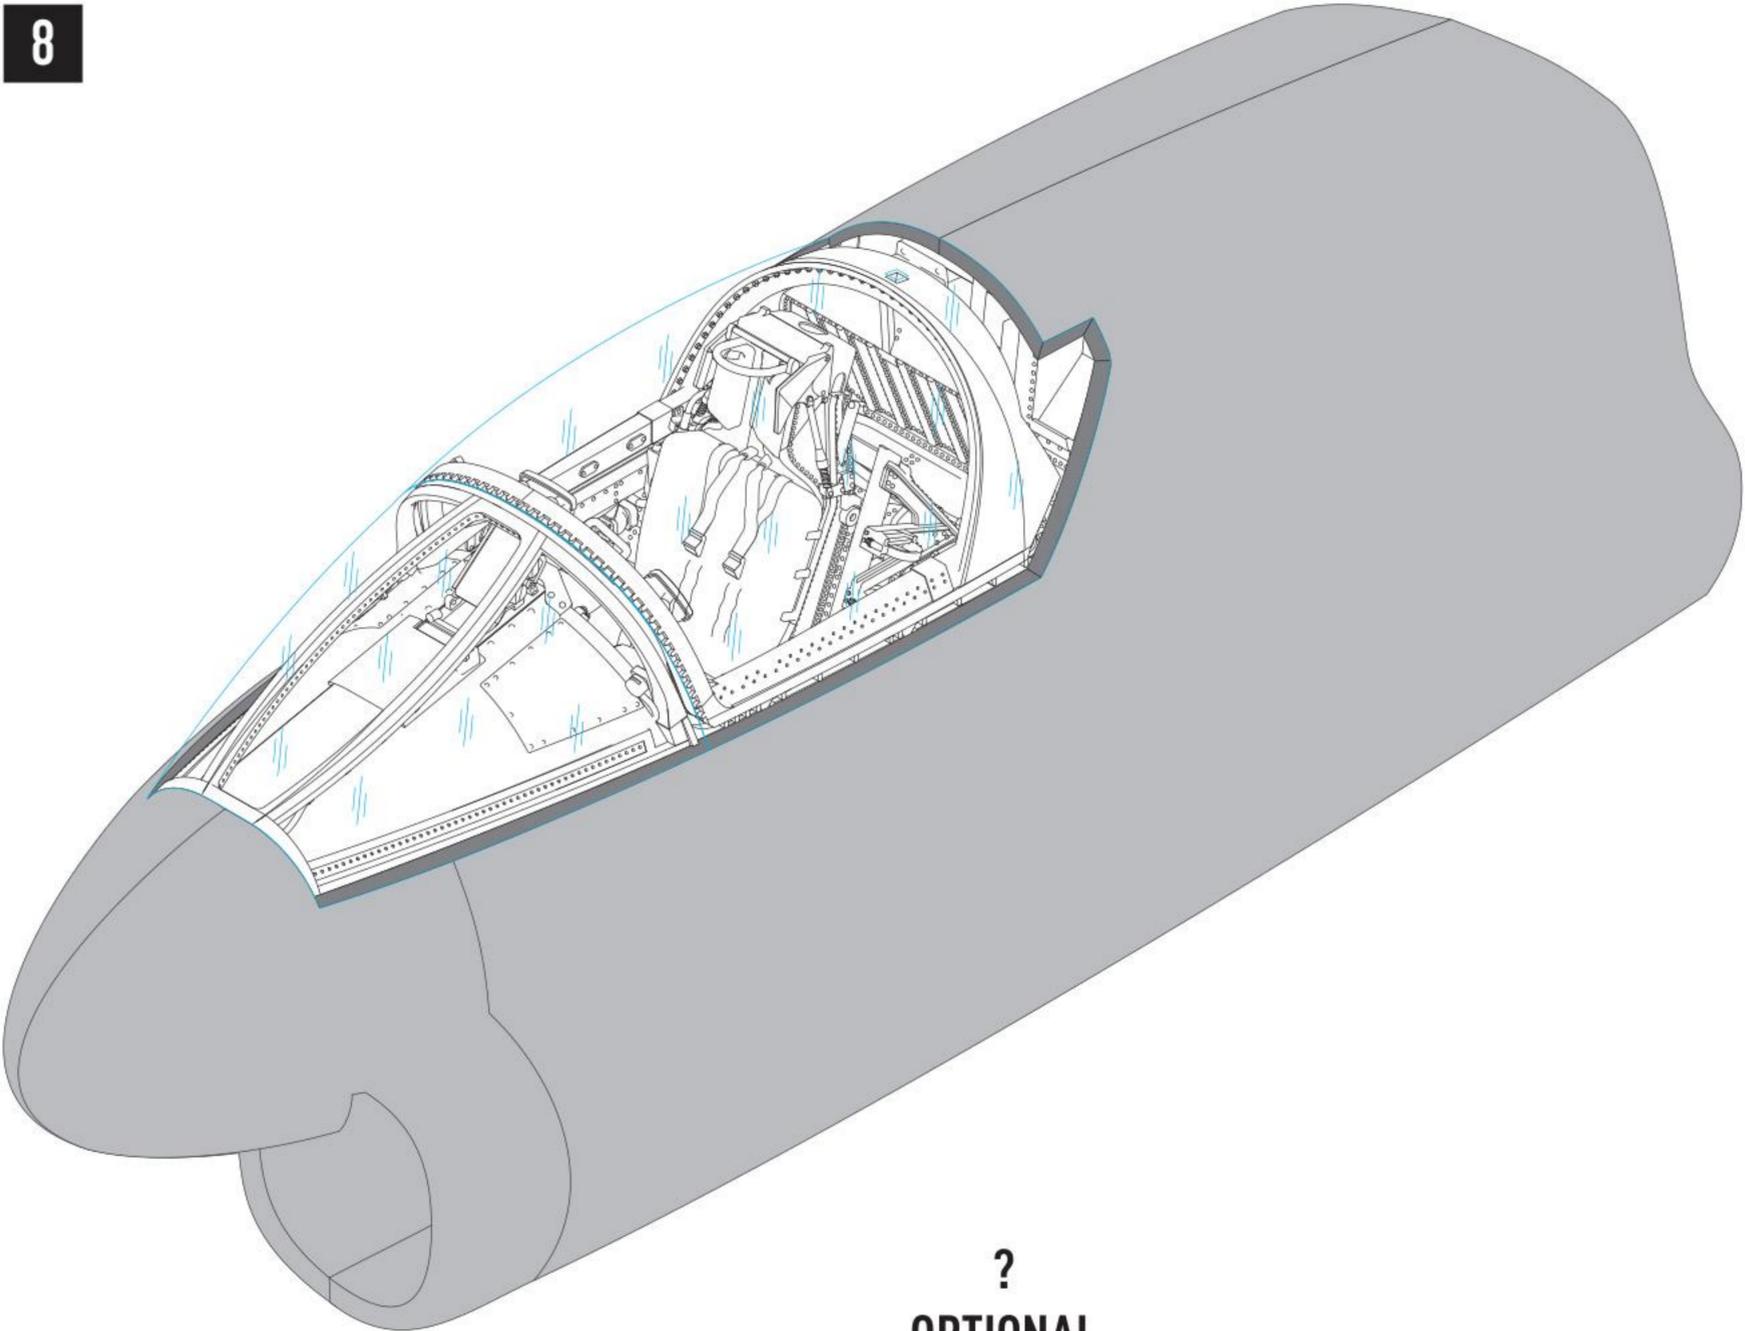

?  
OPTIONAL

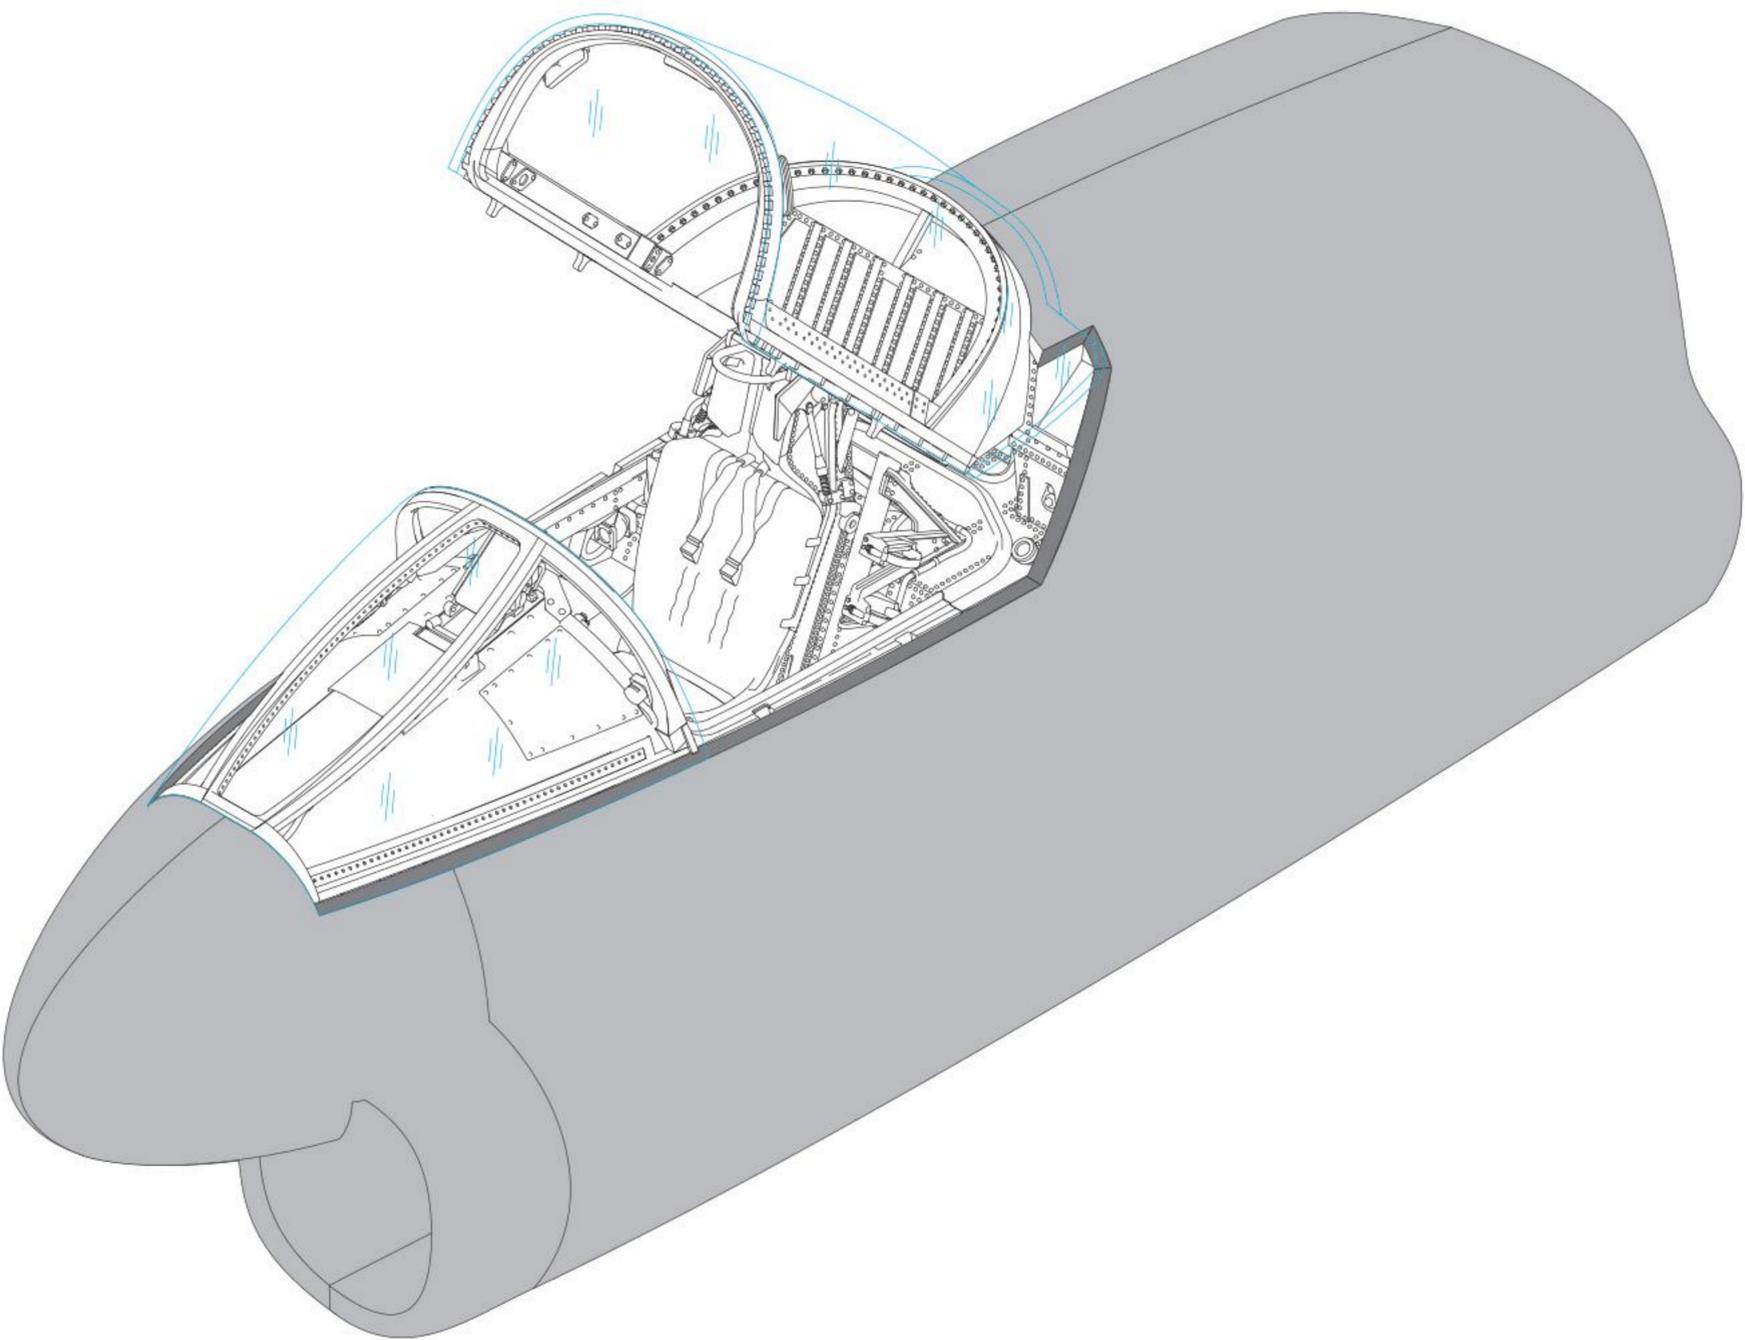

# DECAL INSTRUCTION

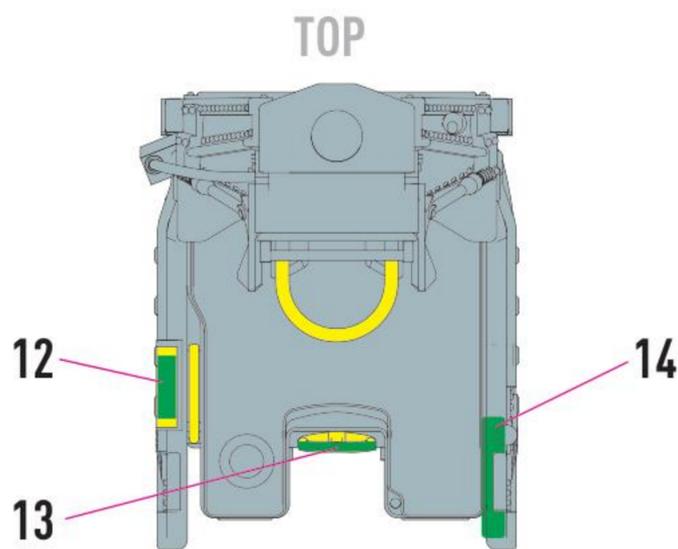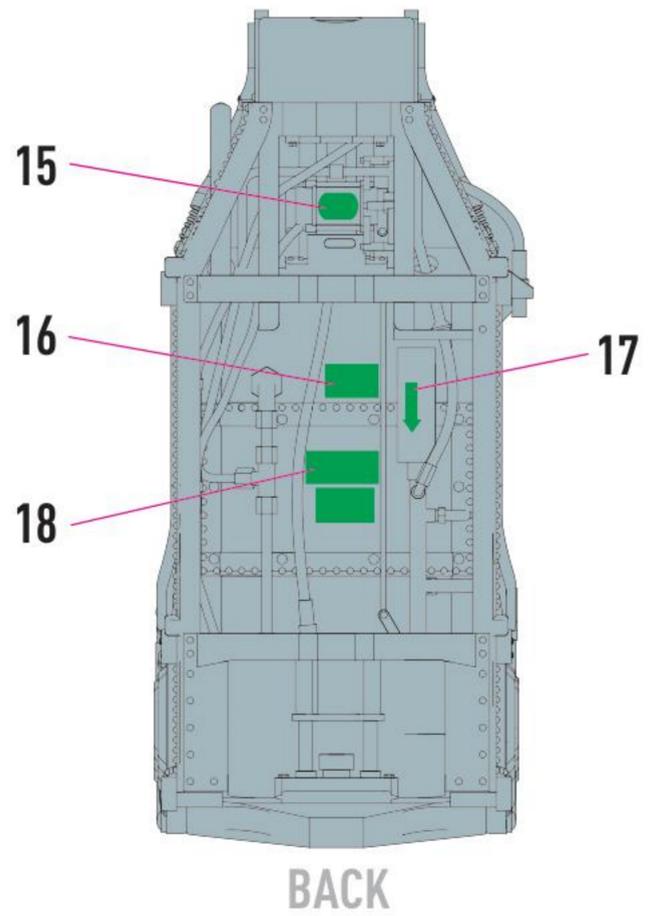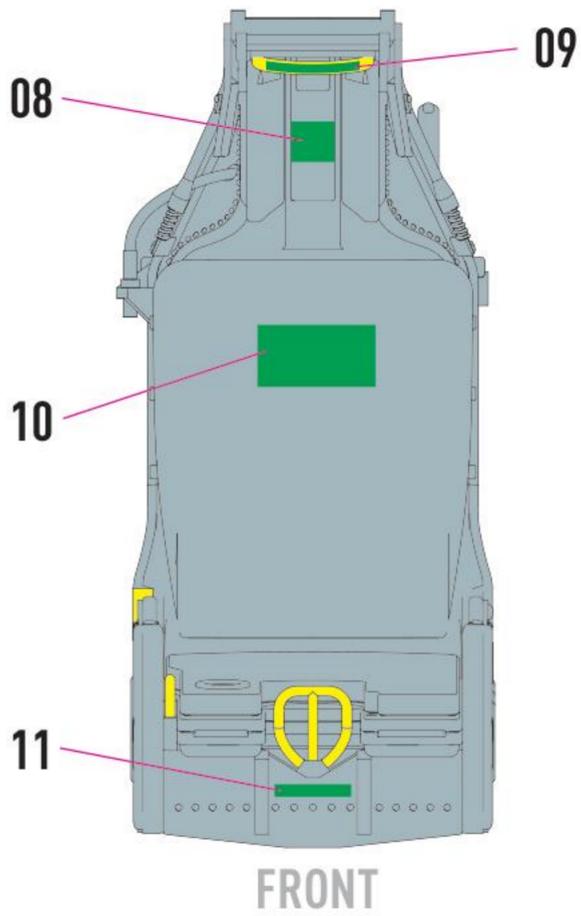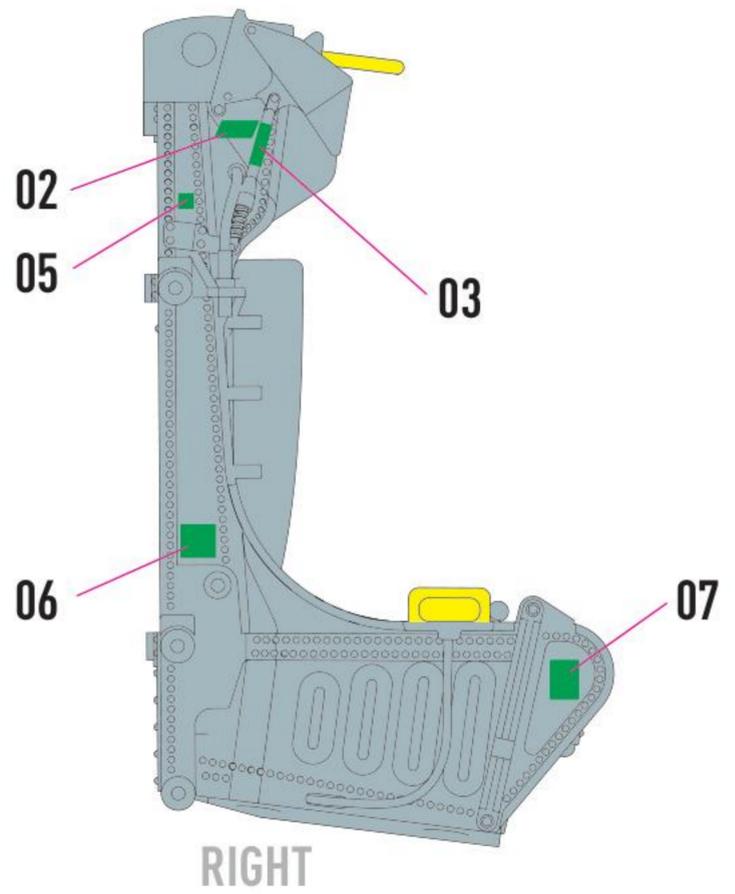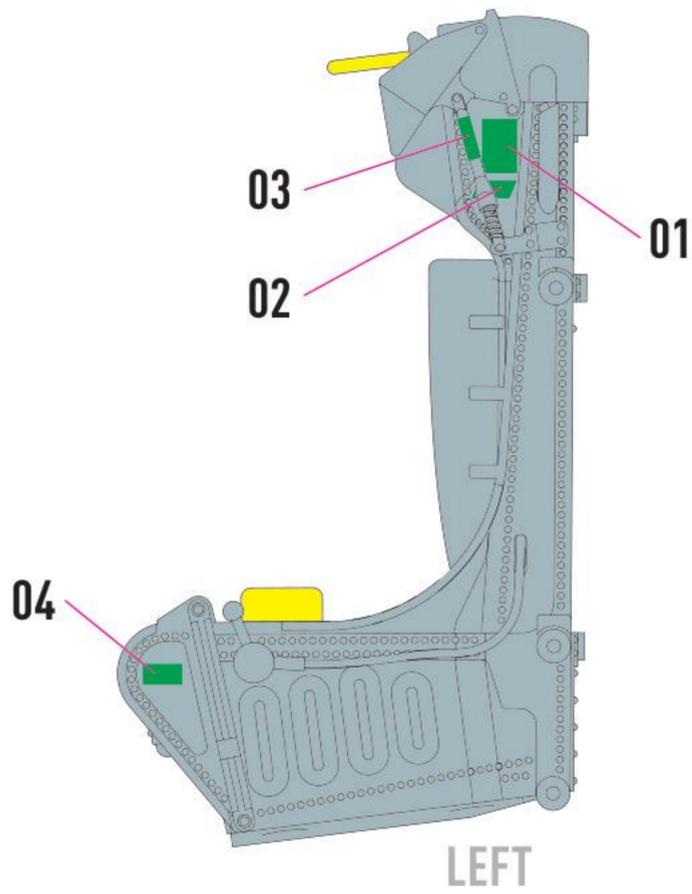

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308

general issues: [info@reskit.com.ua](mailto:info@reskit.com.ua) / claim resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)

**RESKIT-MODELS.COM**

[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit\\_official](https://www.instagram.com/reskit_official)

[pinterest.com/reskit\\_official](https://www.pinterest.com/reskit_official)

**YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE**

**RESKIT-MODELS.COM**

**General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)**

**Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)**

**Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)**