




RESIN PARTS  
FOR SCALE PLASTIC KITS

YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION **RSU48-0338**

# F-105 "THUNDERCHIEF"

## AIR INTAKES, LANDING GEARS WITH WHEELS BAYS AND WEIGHTED WHEELS SET

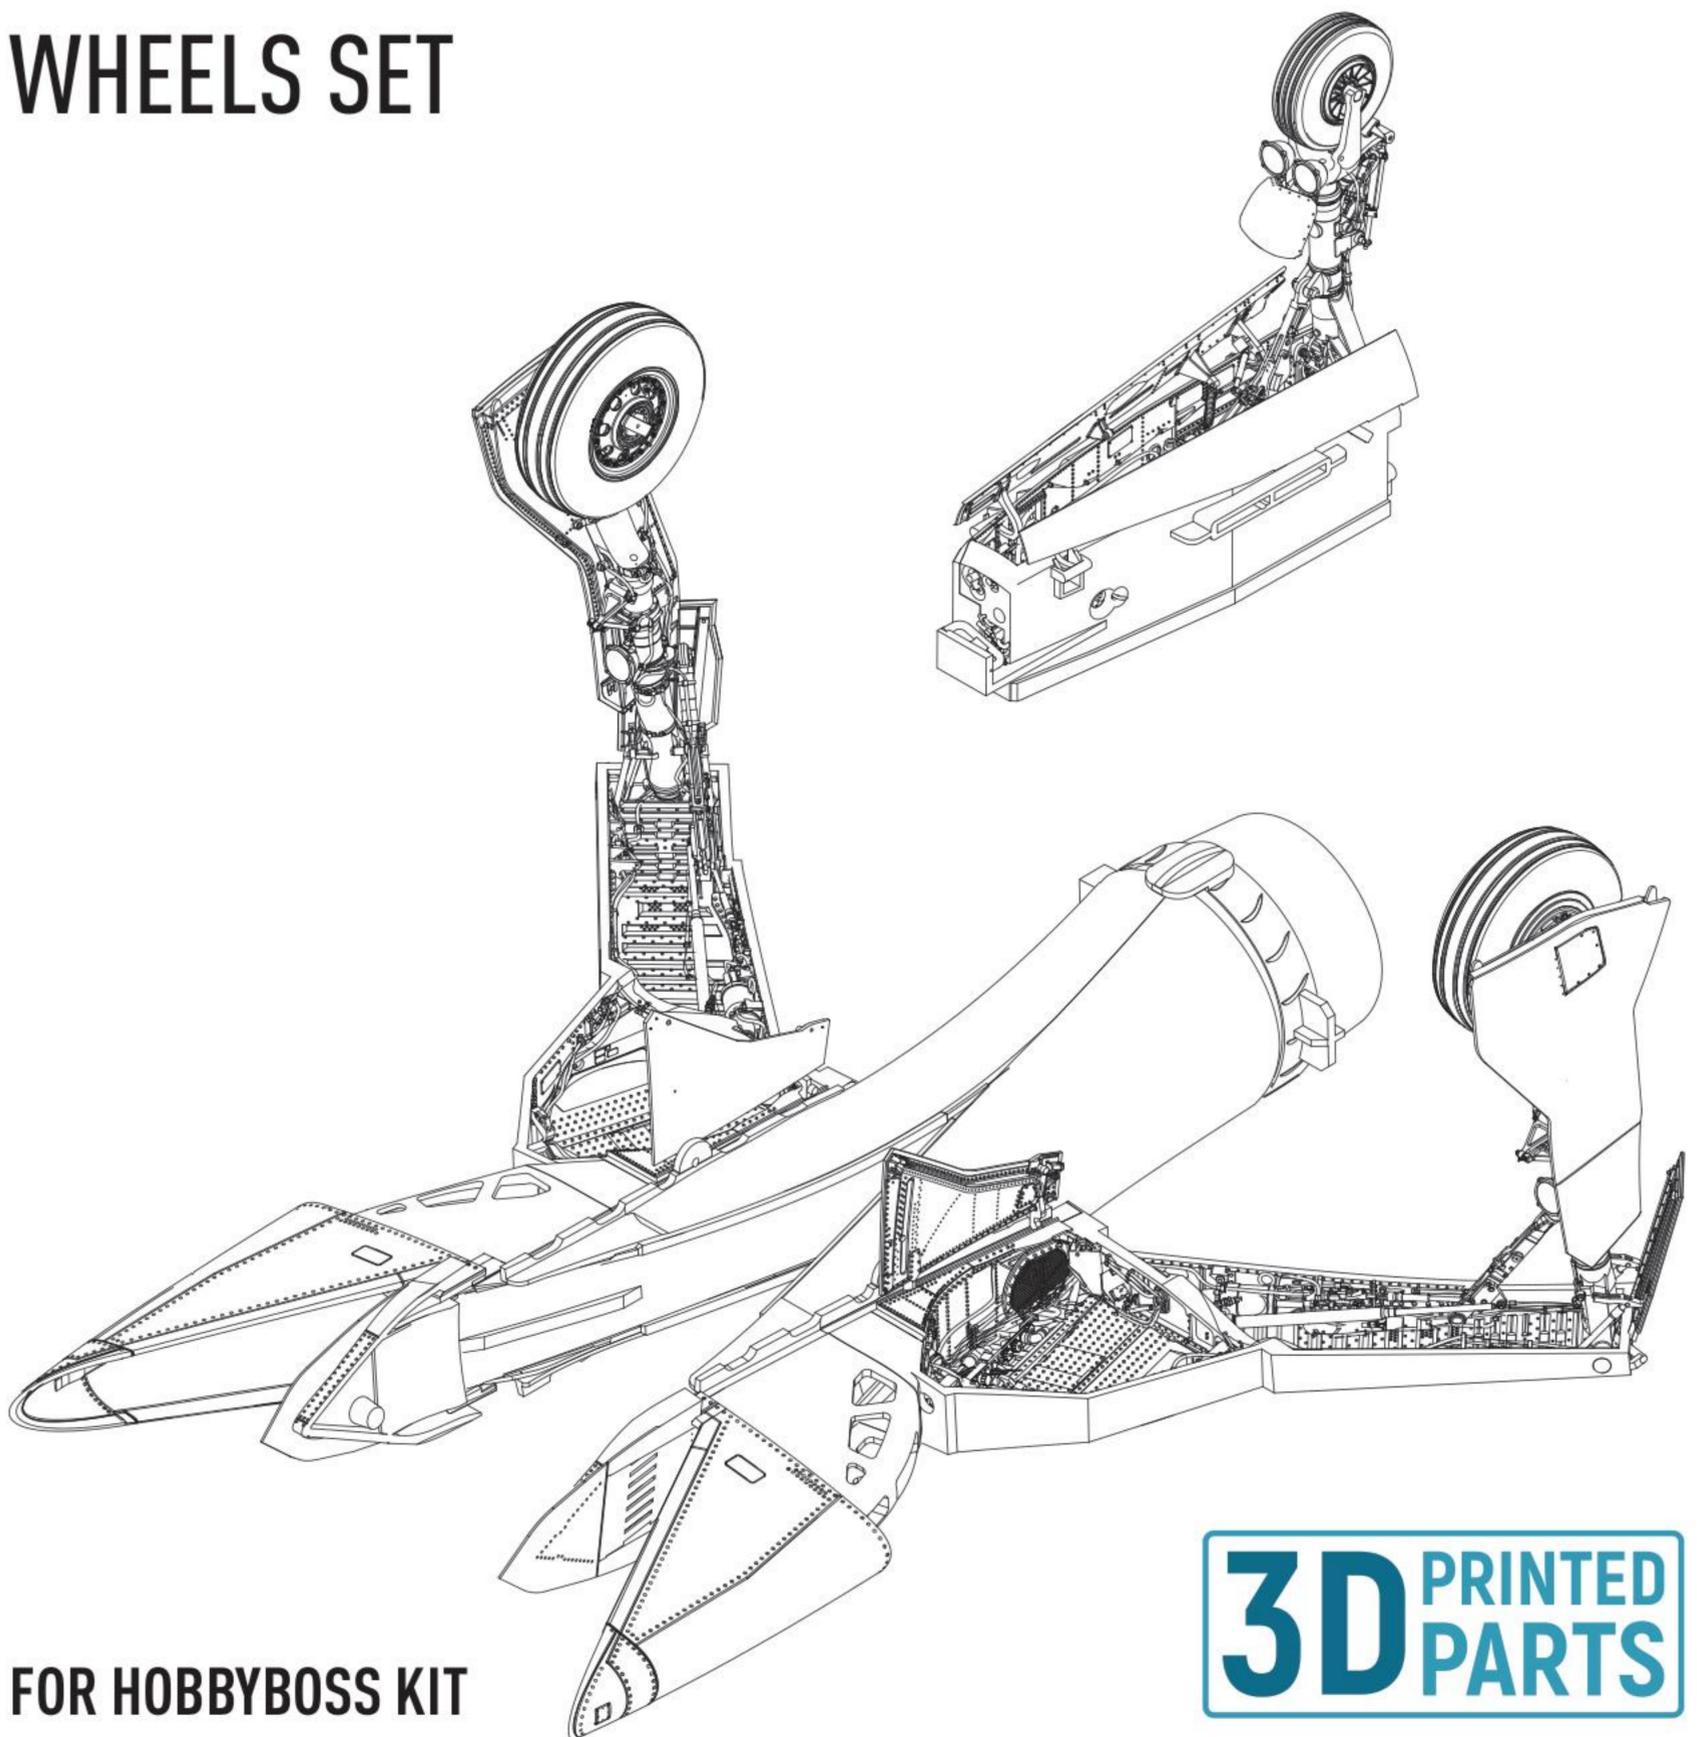

FOR HOBBYBOSS KIT

**3D PRINTED  
PARTS**

general issues: [info@reskit.com.ua](mailto:info@reskit.com.ua) / claim resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)

**RESKIT-MODELS.COM**

 [fb.com/reskit.official](https://fb.com/reskit.official)





 [instagram.com/reskit\\_official](https://instagram.com/reskit_official)

 [pinterest.com/reskit\\_official](https://pinterest.com/reskit_official)



USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL FROM SUPPORTS**

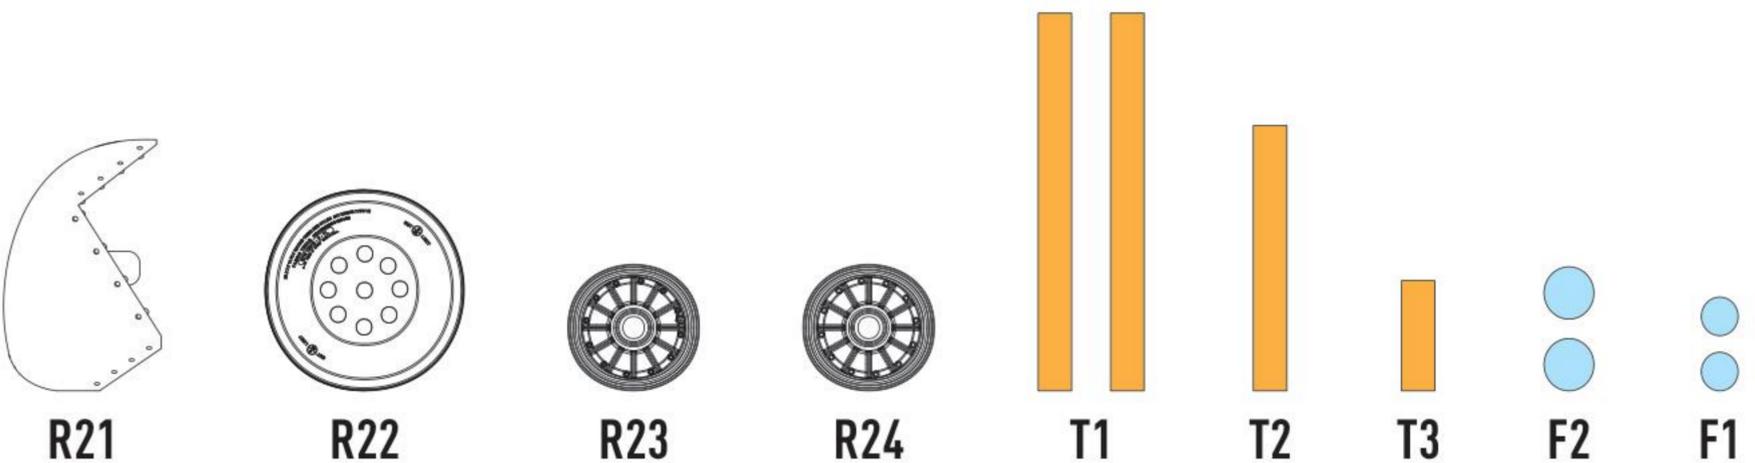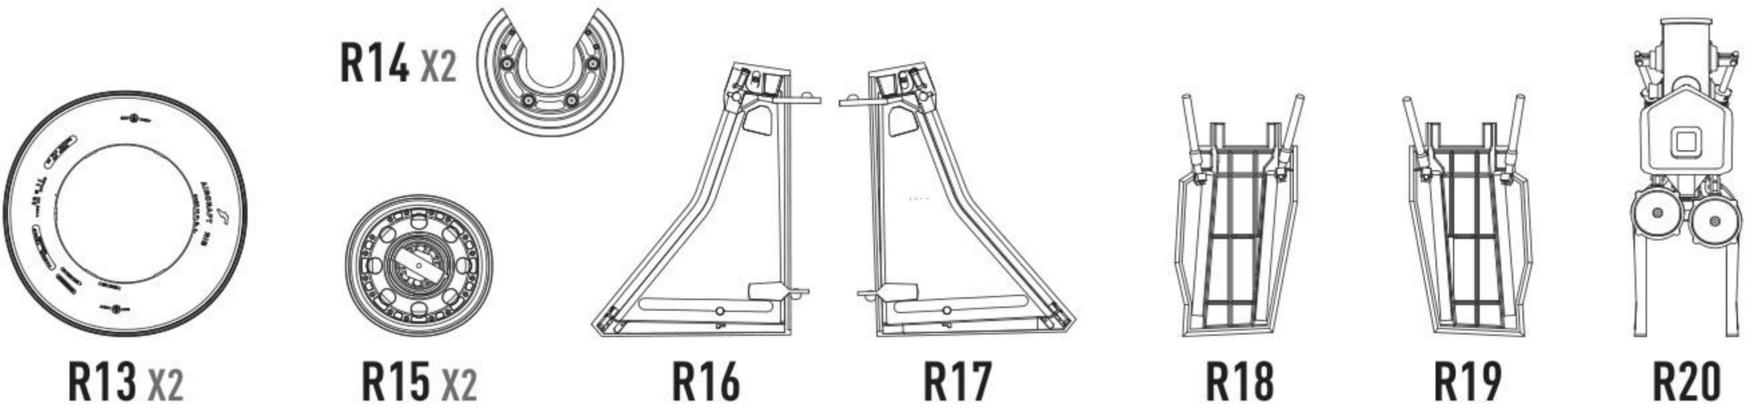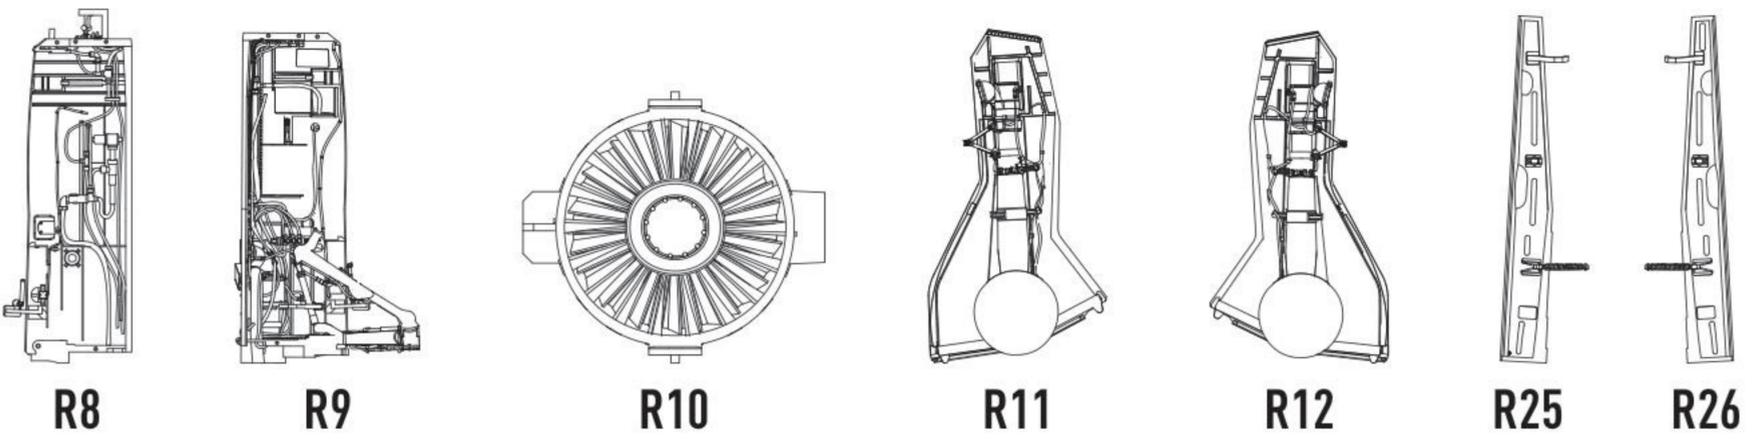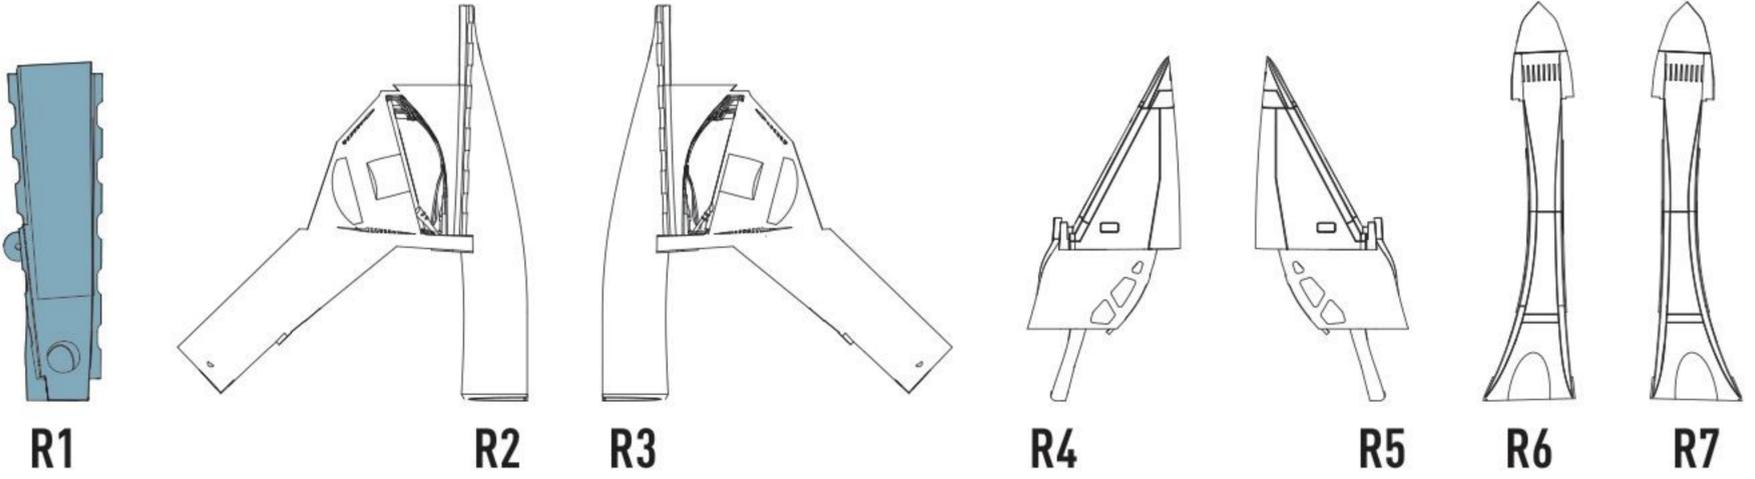


ALL ACTIONS ARE PERFORMED SYMMETRICALLY FOR LEFT AND RIGHT HALVES OF THE FUSELAGE


**1** FOR A SINGLE OPTION

CUT

PART A1 FROM F-105D  
HOBBY BOSS KIT

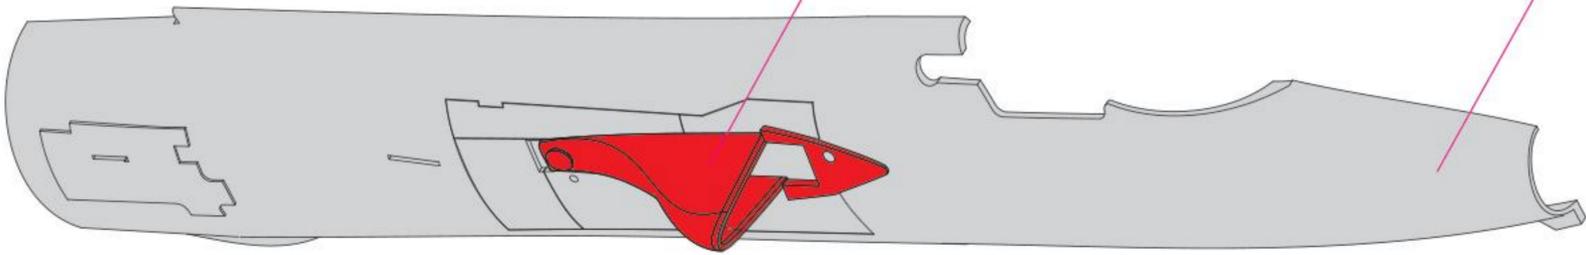


APPLY MASK ACCORDING  
TO THE STITCHING LINE

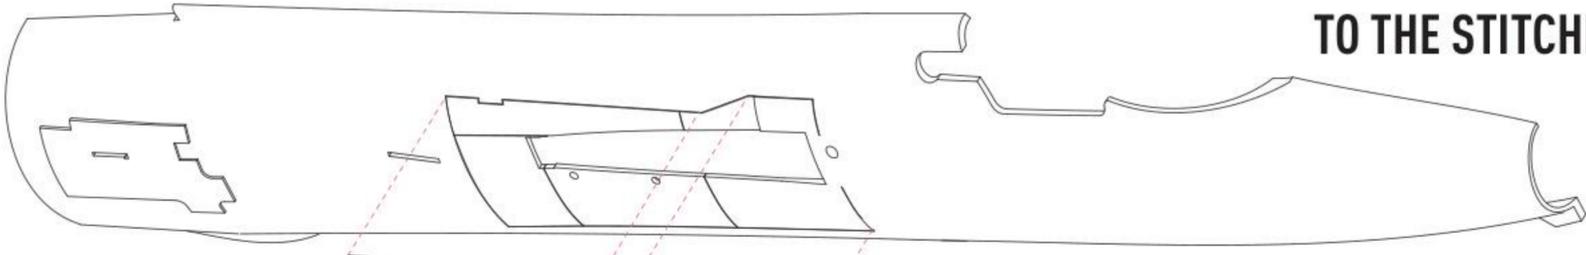

M1


CUT PLASTIC ALONG THE HOLE IN MASK  
AND THEN REMOVE MASK

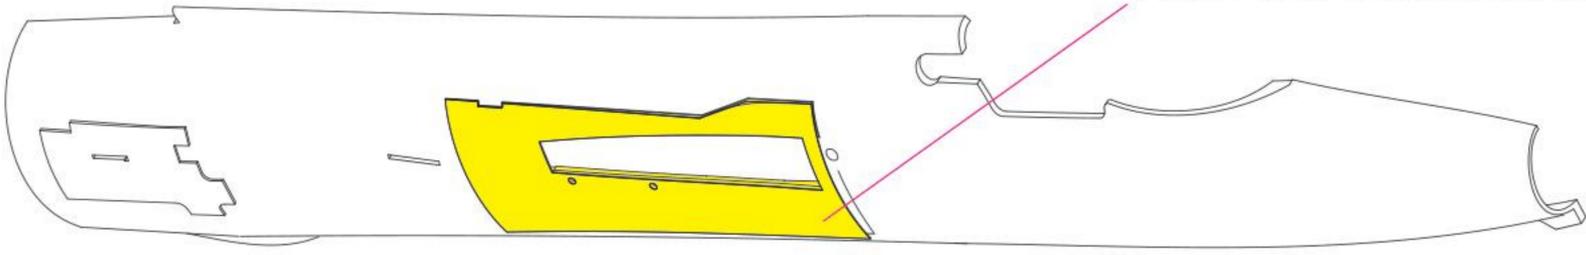


FOR THE DOUBLE VERSION

CUT

PART L22 FROM F-105G  
HOBBY BOSS KIT

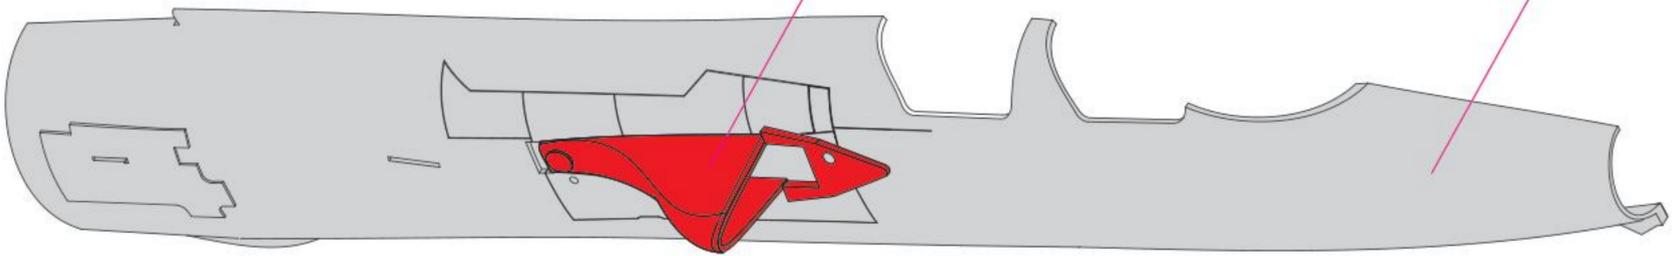


APPLY MASK ACCORDING  
TO THE STITCHING LINE

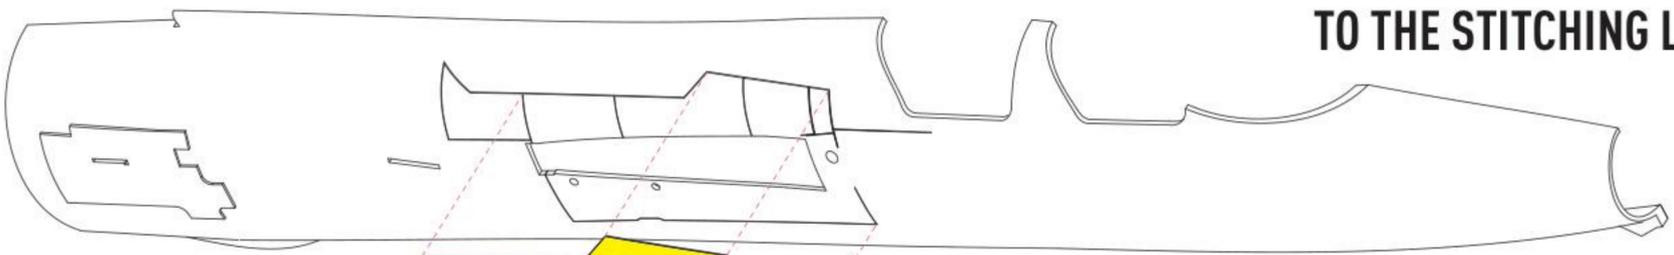


M3

CUT PLASTIC ALONG THE HOLE IN MASK  
AND THEN REMOVE MASK

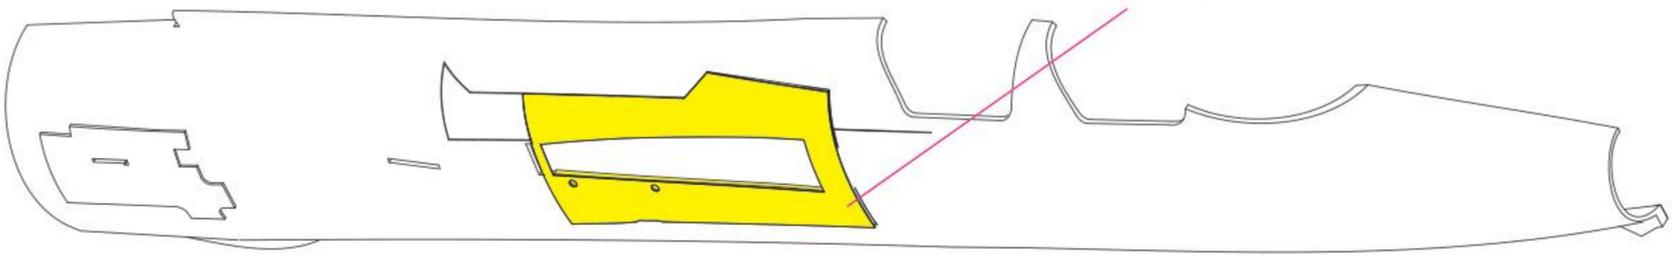


**2** THE HOLE MUST BE ADJUSTED IN SUCH A WAY THAT THE CONDUCTOR "DRIVES INTO" THE LANDING GROOVES




NO. 1 - A HOLE, THE AXIS OF WHICH MUST COINCIDE WITH THE HOLE OF THE CONDUCTOR EAR.  
NO. 2 - THE BASIC CONTACT SURFACE IS IN EACH CASTING.

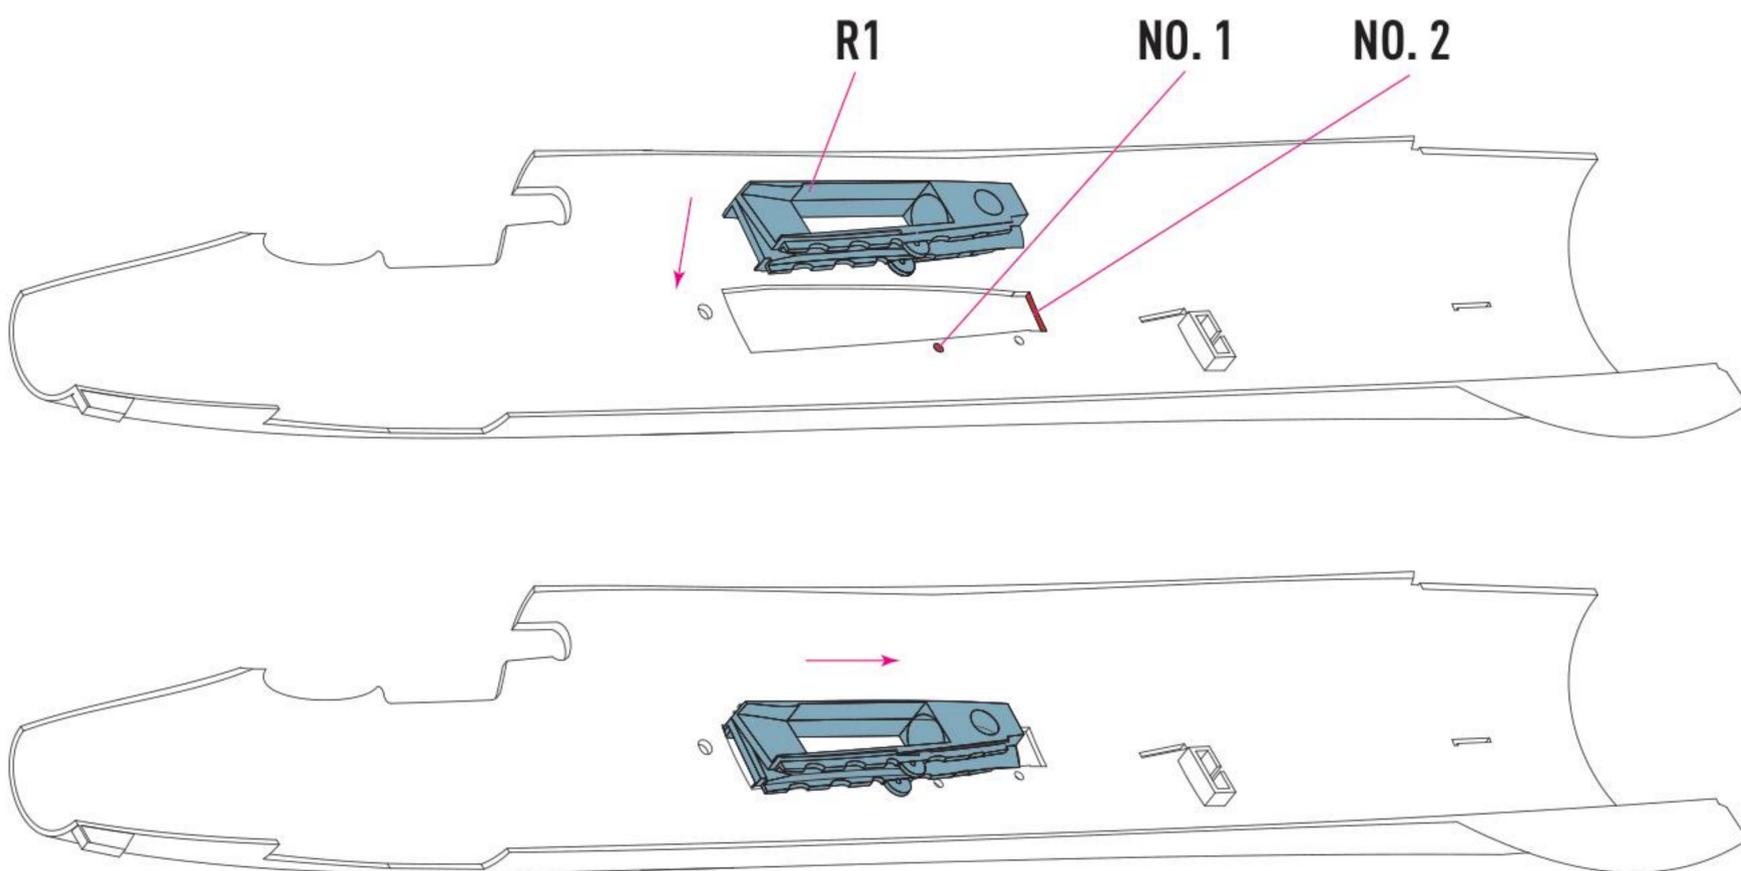

**3** AFTER THE PREPARATION OF SEATS IS COMPLETED, THE CONDUCTOR IS REMOVED AND PLACED IN HIS PLACE, USING THE SAME GUIDELINES, PART R3 IS INSTALLED

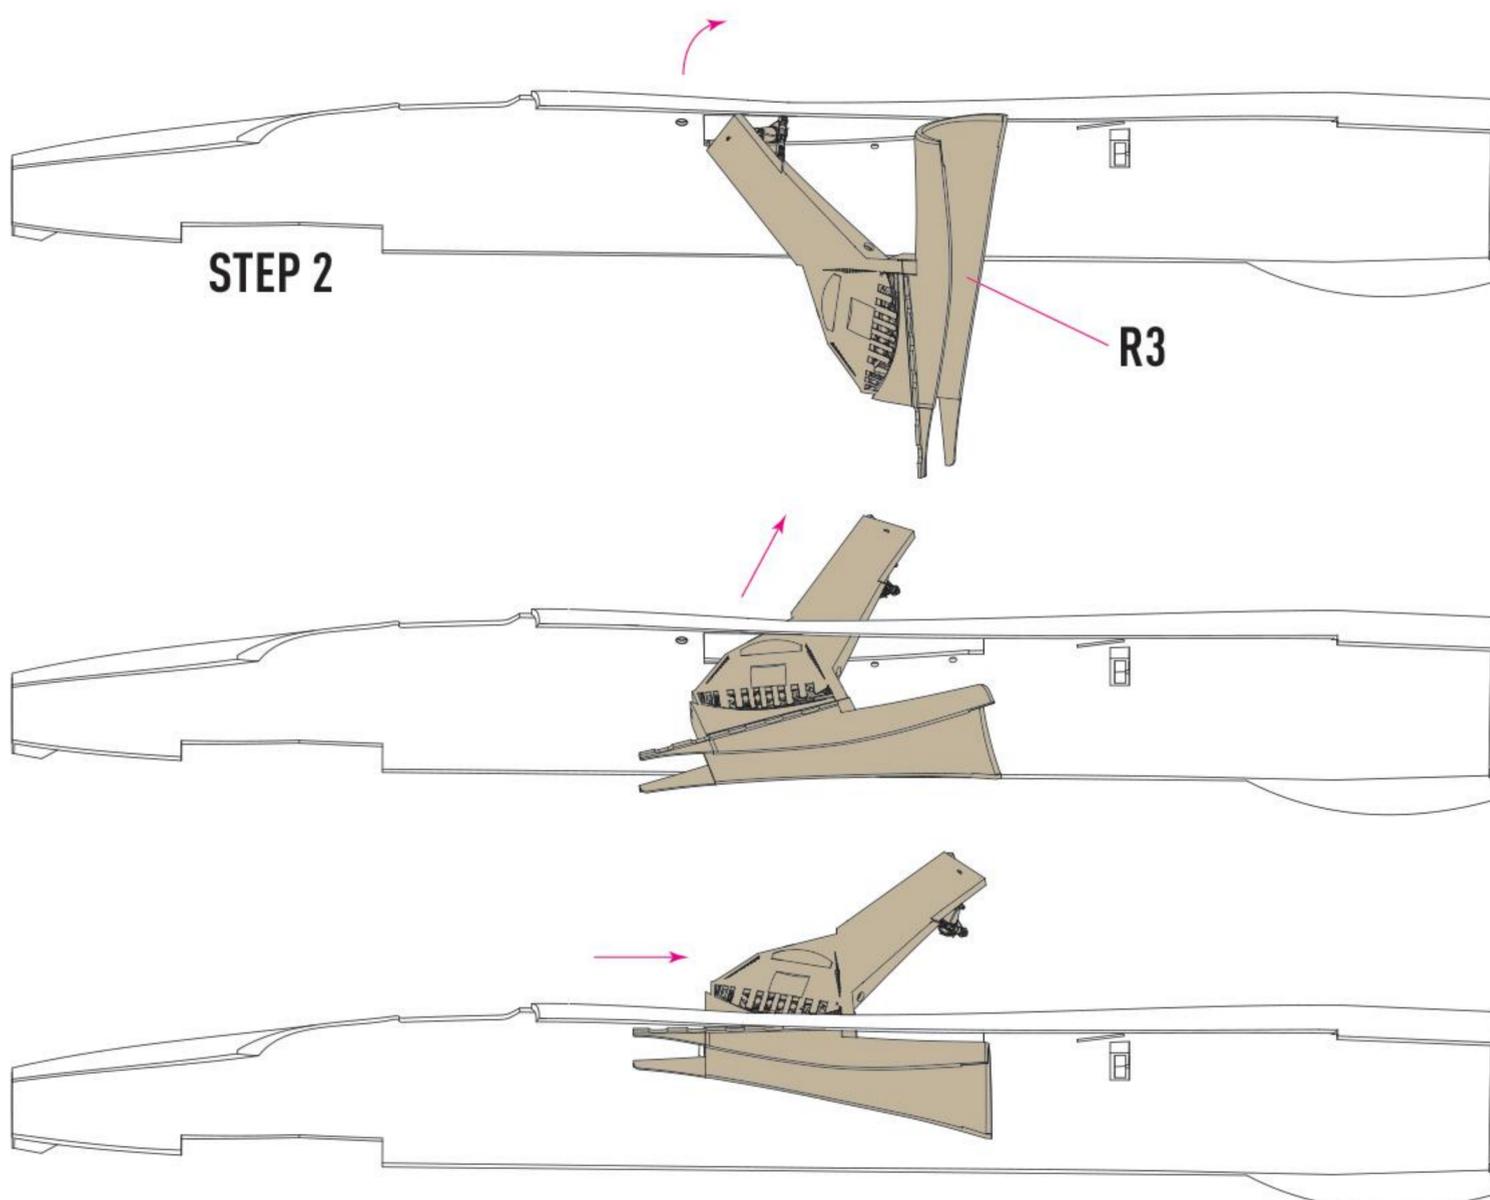


**4** BEFORE INSTALLATION, THE PART MUST BE PAINTED ACCORDING TO THE REPRODUCED PROTOTYPE

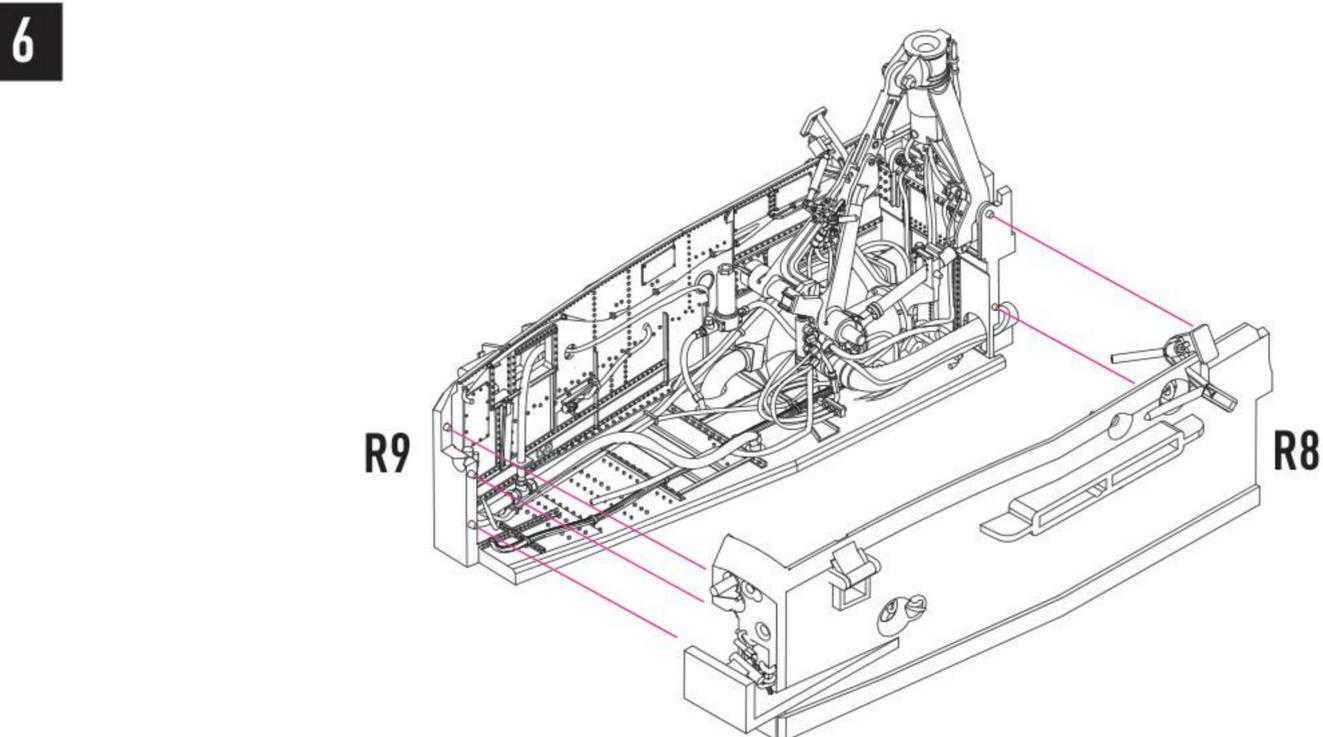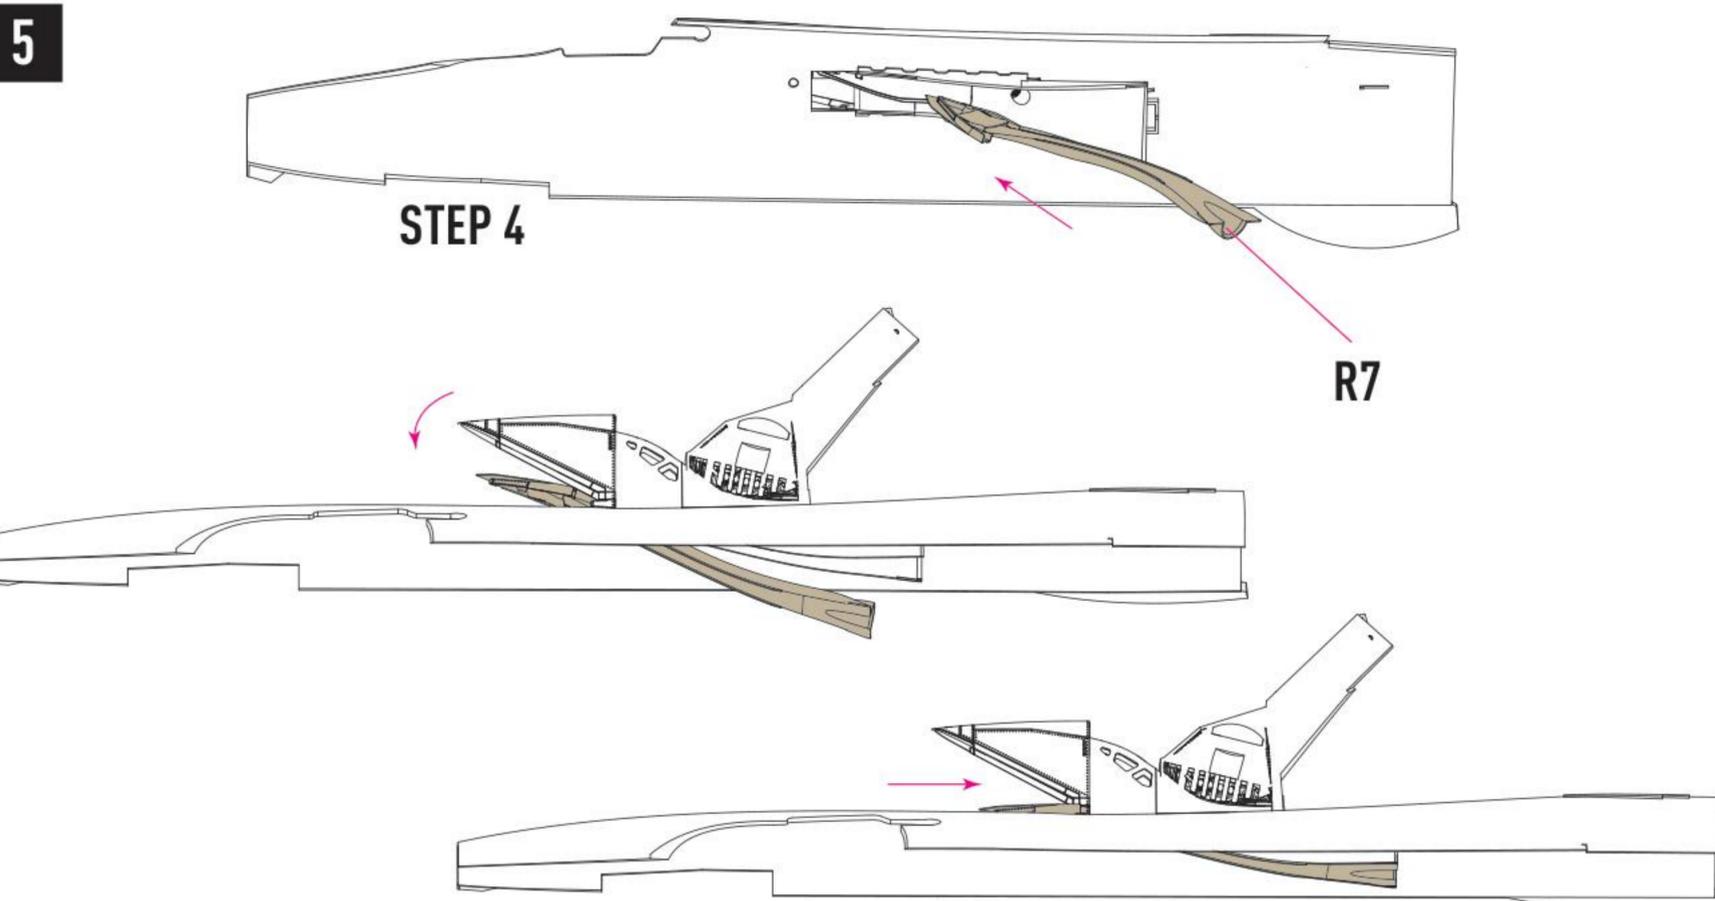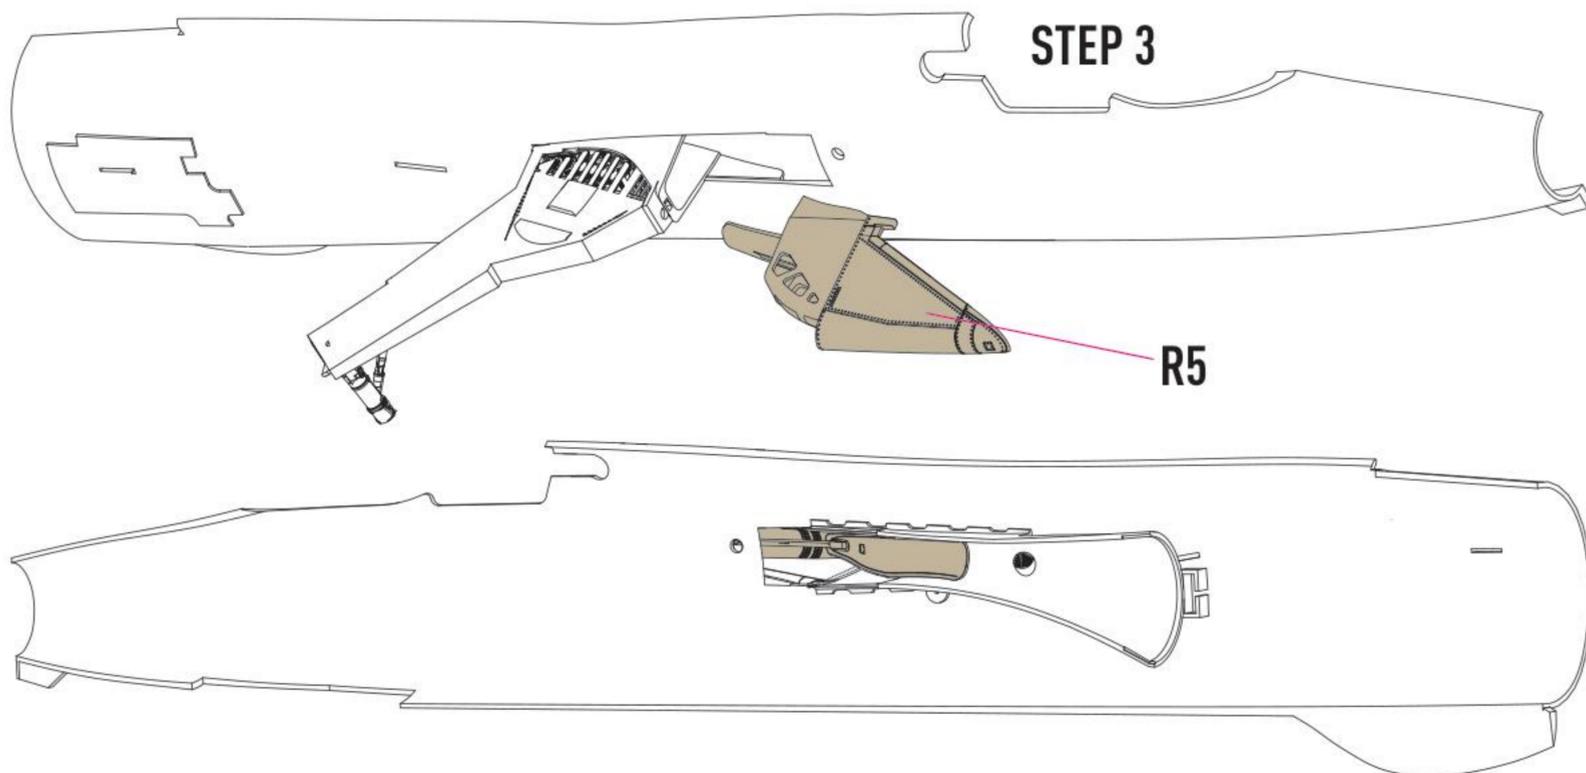


**7**

**PART A17 FROM HOBBY BOSS KIT**

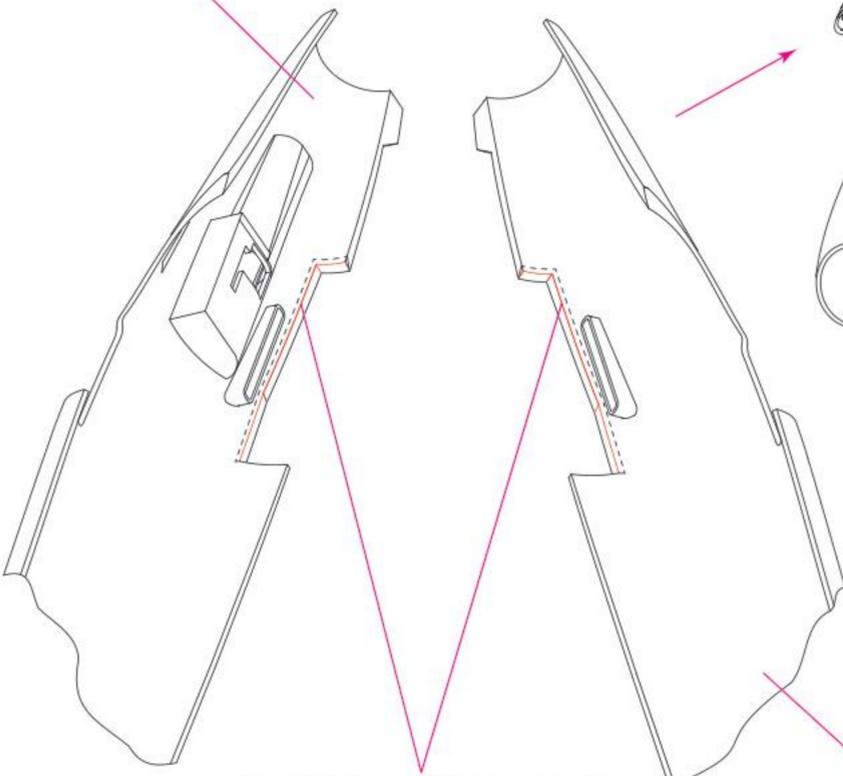


**REMOVE CHAMFER AT AN ANGLE OF 45°**

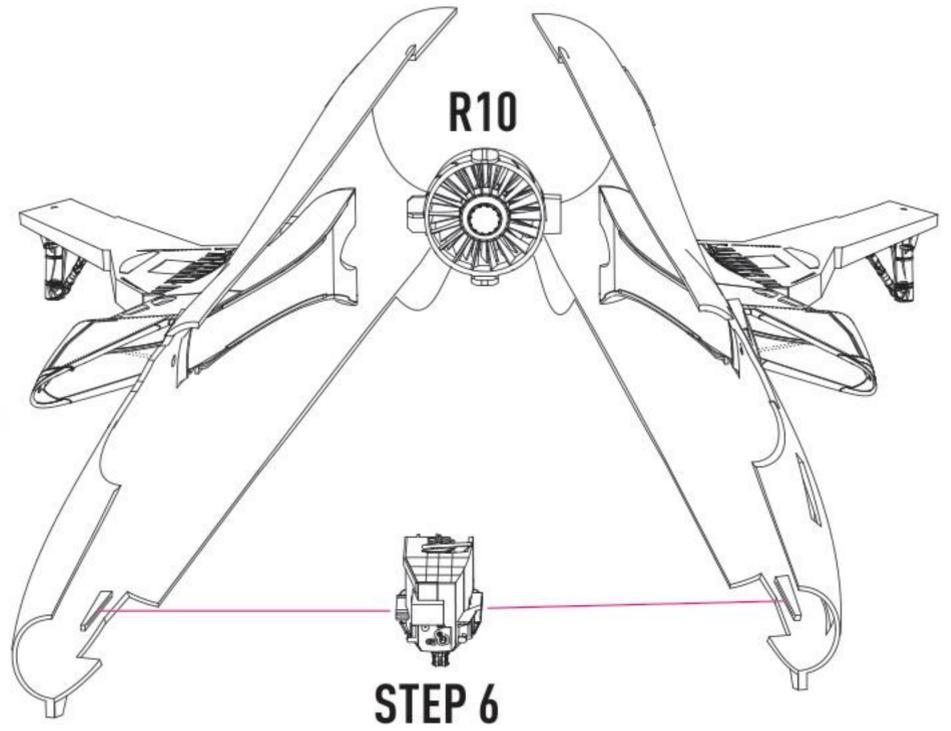


**PART A1 FROM HOBBY BOSS KIT**

**8 CUT ALONG THE STITCHING LINE THE PARTS OF THE PARTS INDICATED IN RED ON BOTH SIDES OF THE FUSELAGE OF THE MODEL**

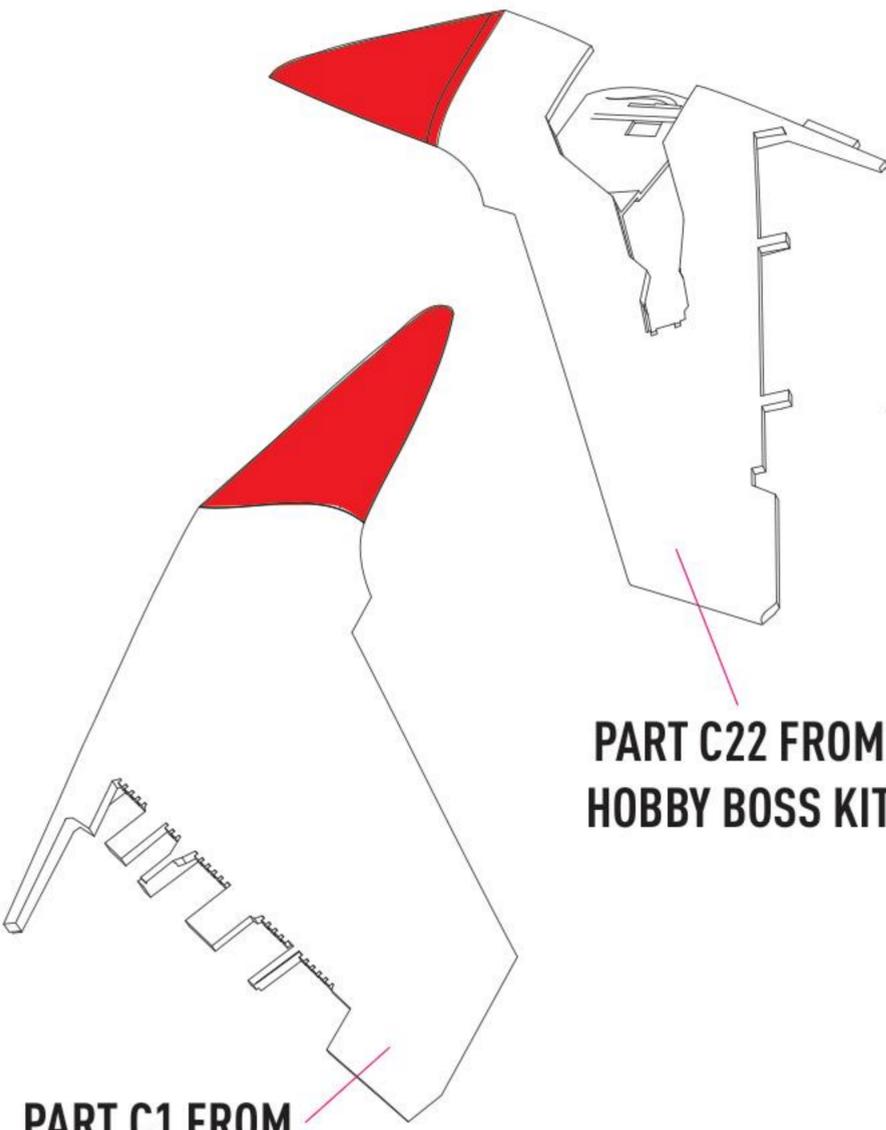


**PART C22 FROM HOBBY BOSS KIT**

**PART C1 FROM HOBBY BOSS KIT**

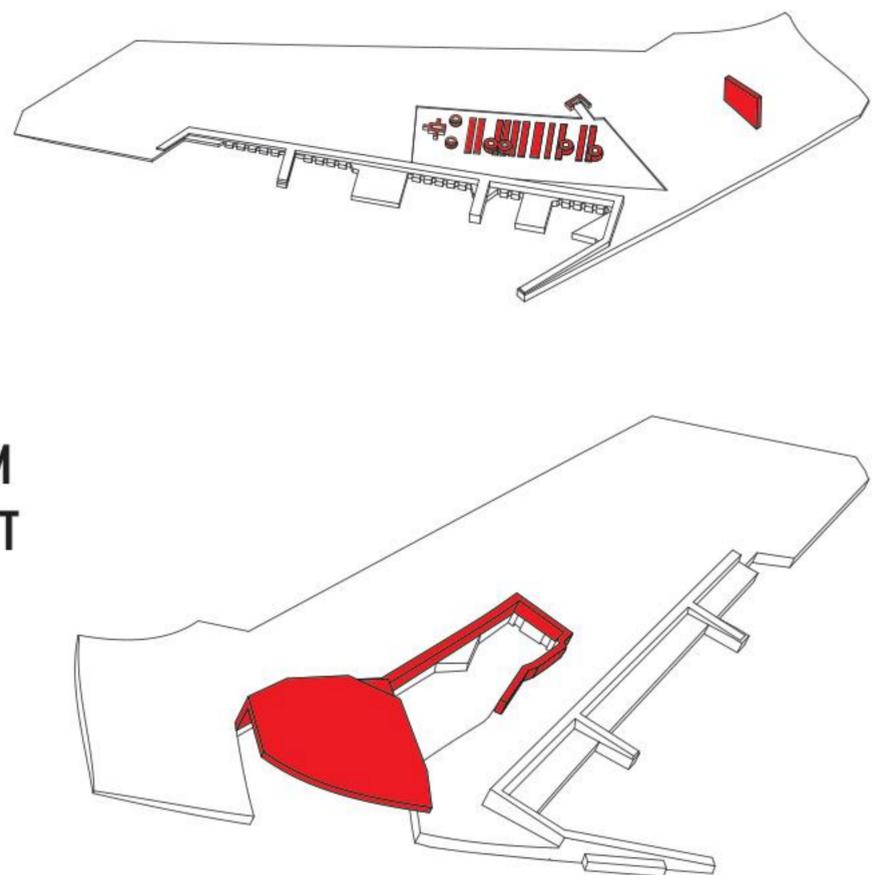


9

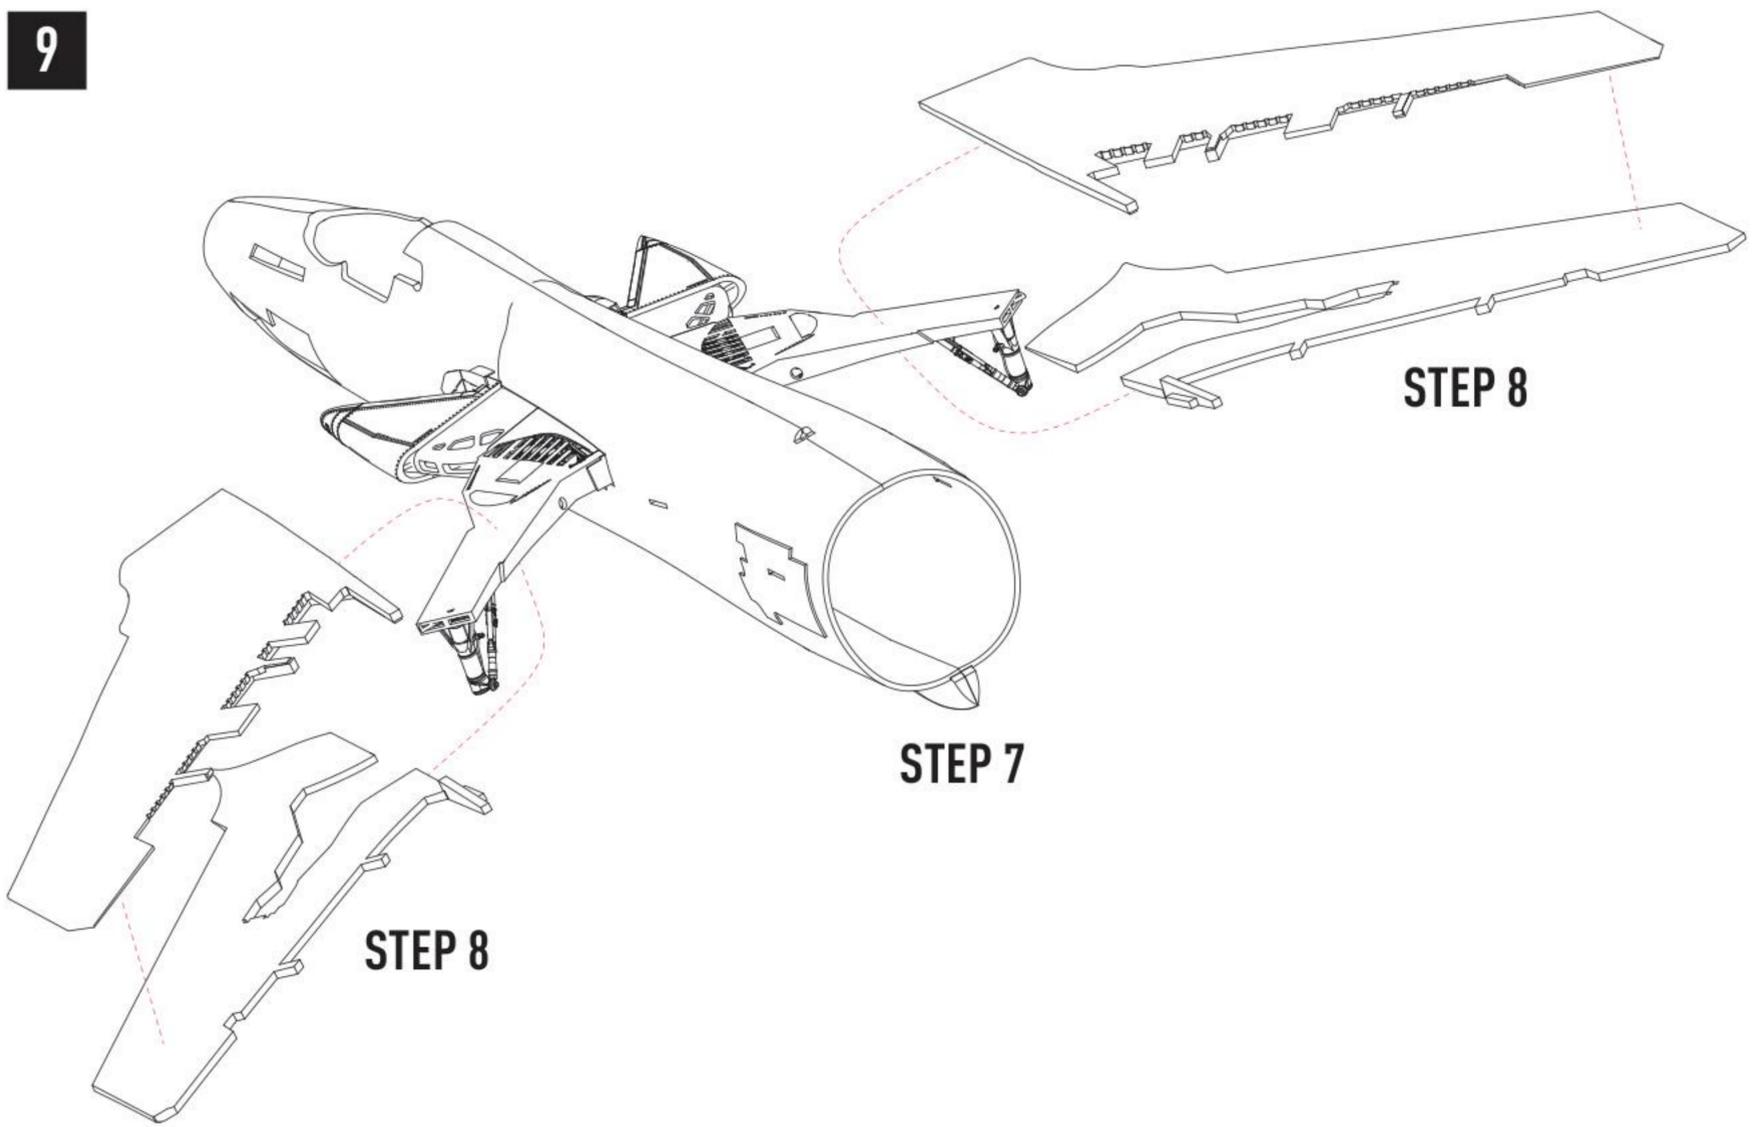


10


DRILL A HOLE IF NEEDIT  $\varnothing=1$  MM

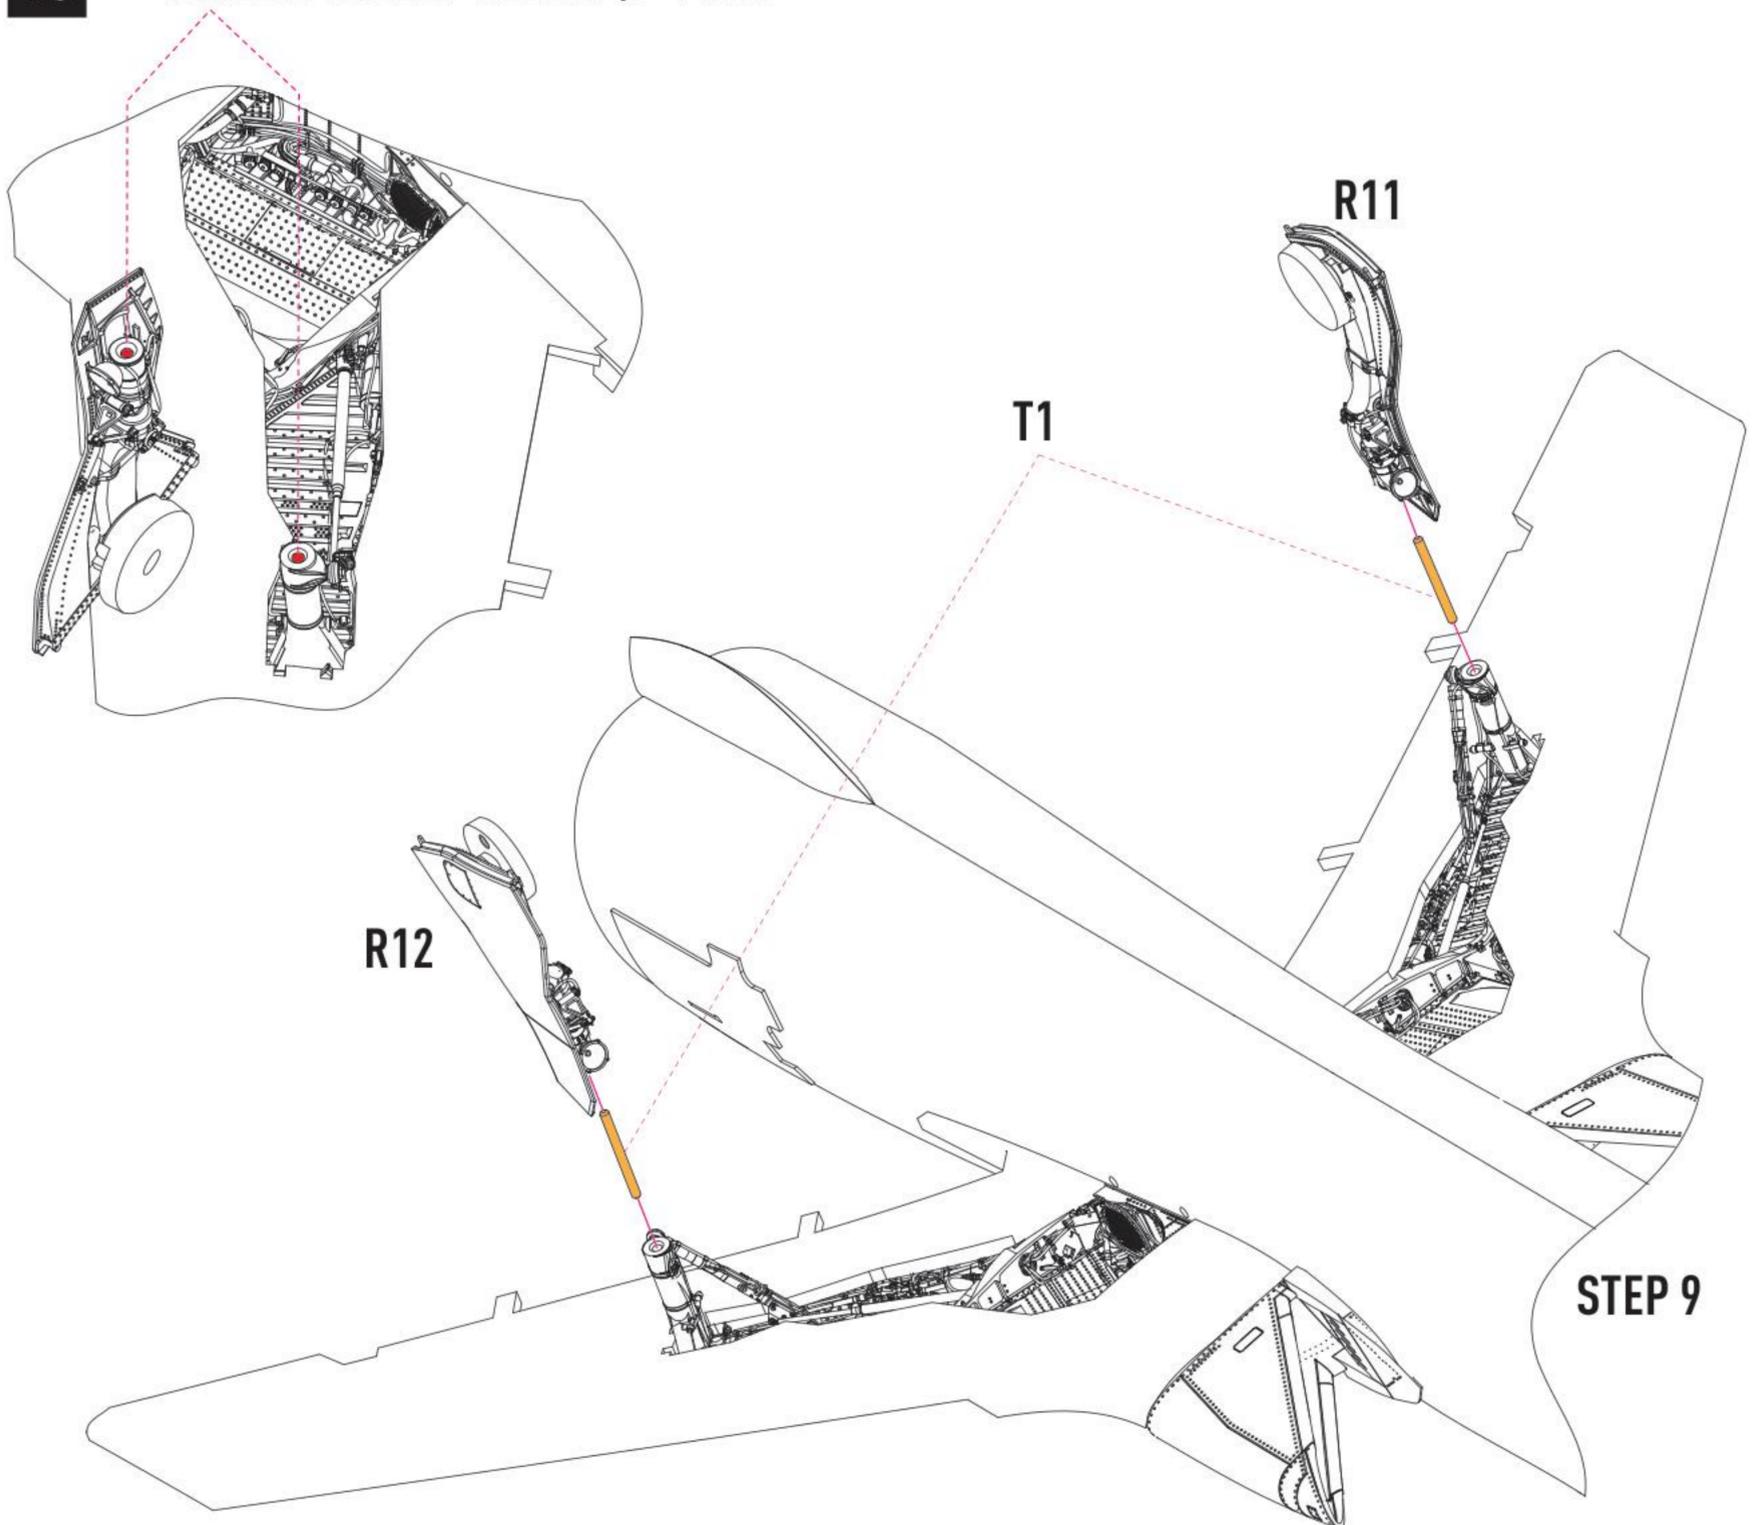


**11** PERFORM SYMMETRICALLY FOR THE LEFT SIDE

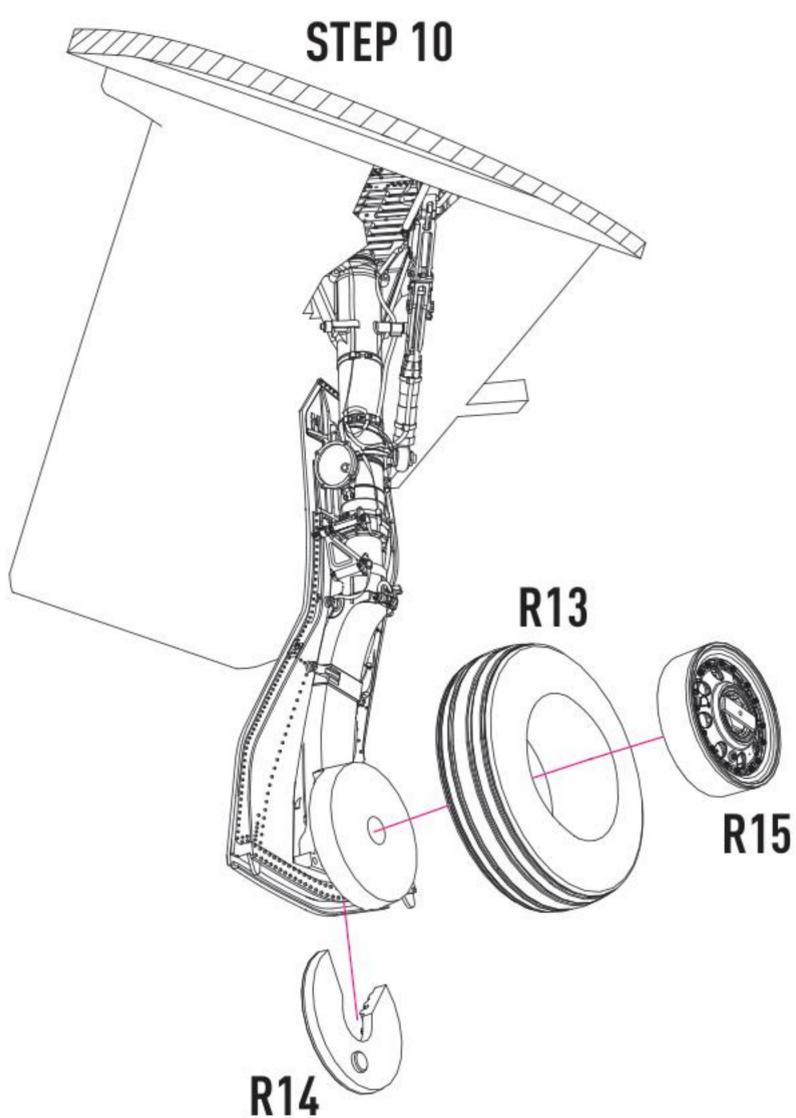


**12** PERFORM SYMMETRICALLY FOR THE LEFT SIDE

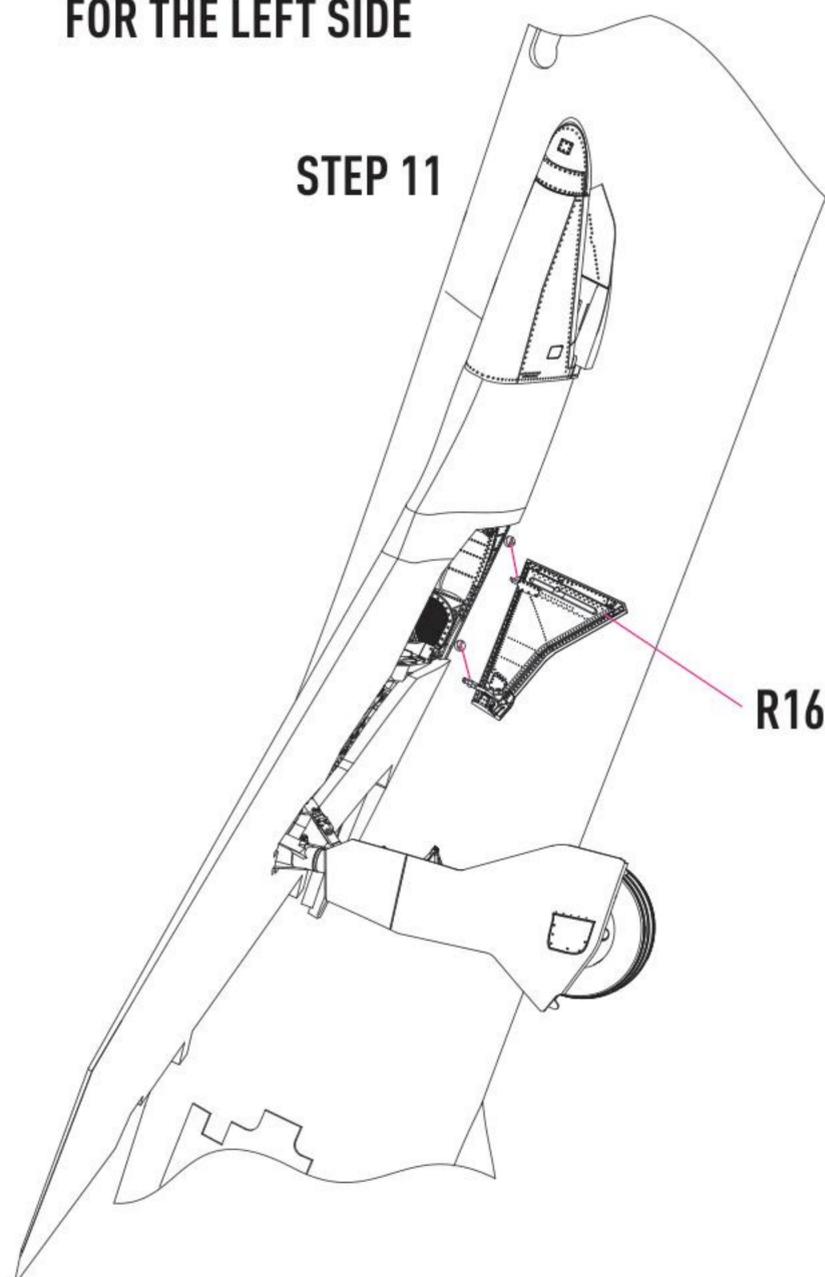


**13** PERFORM SYMMETRICALLY FOR THE LEFT SIDE

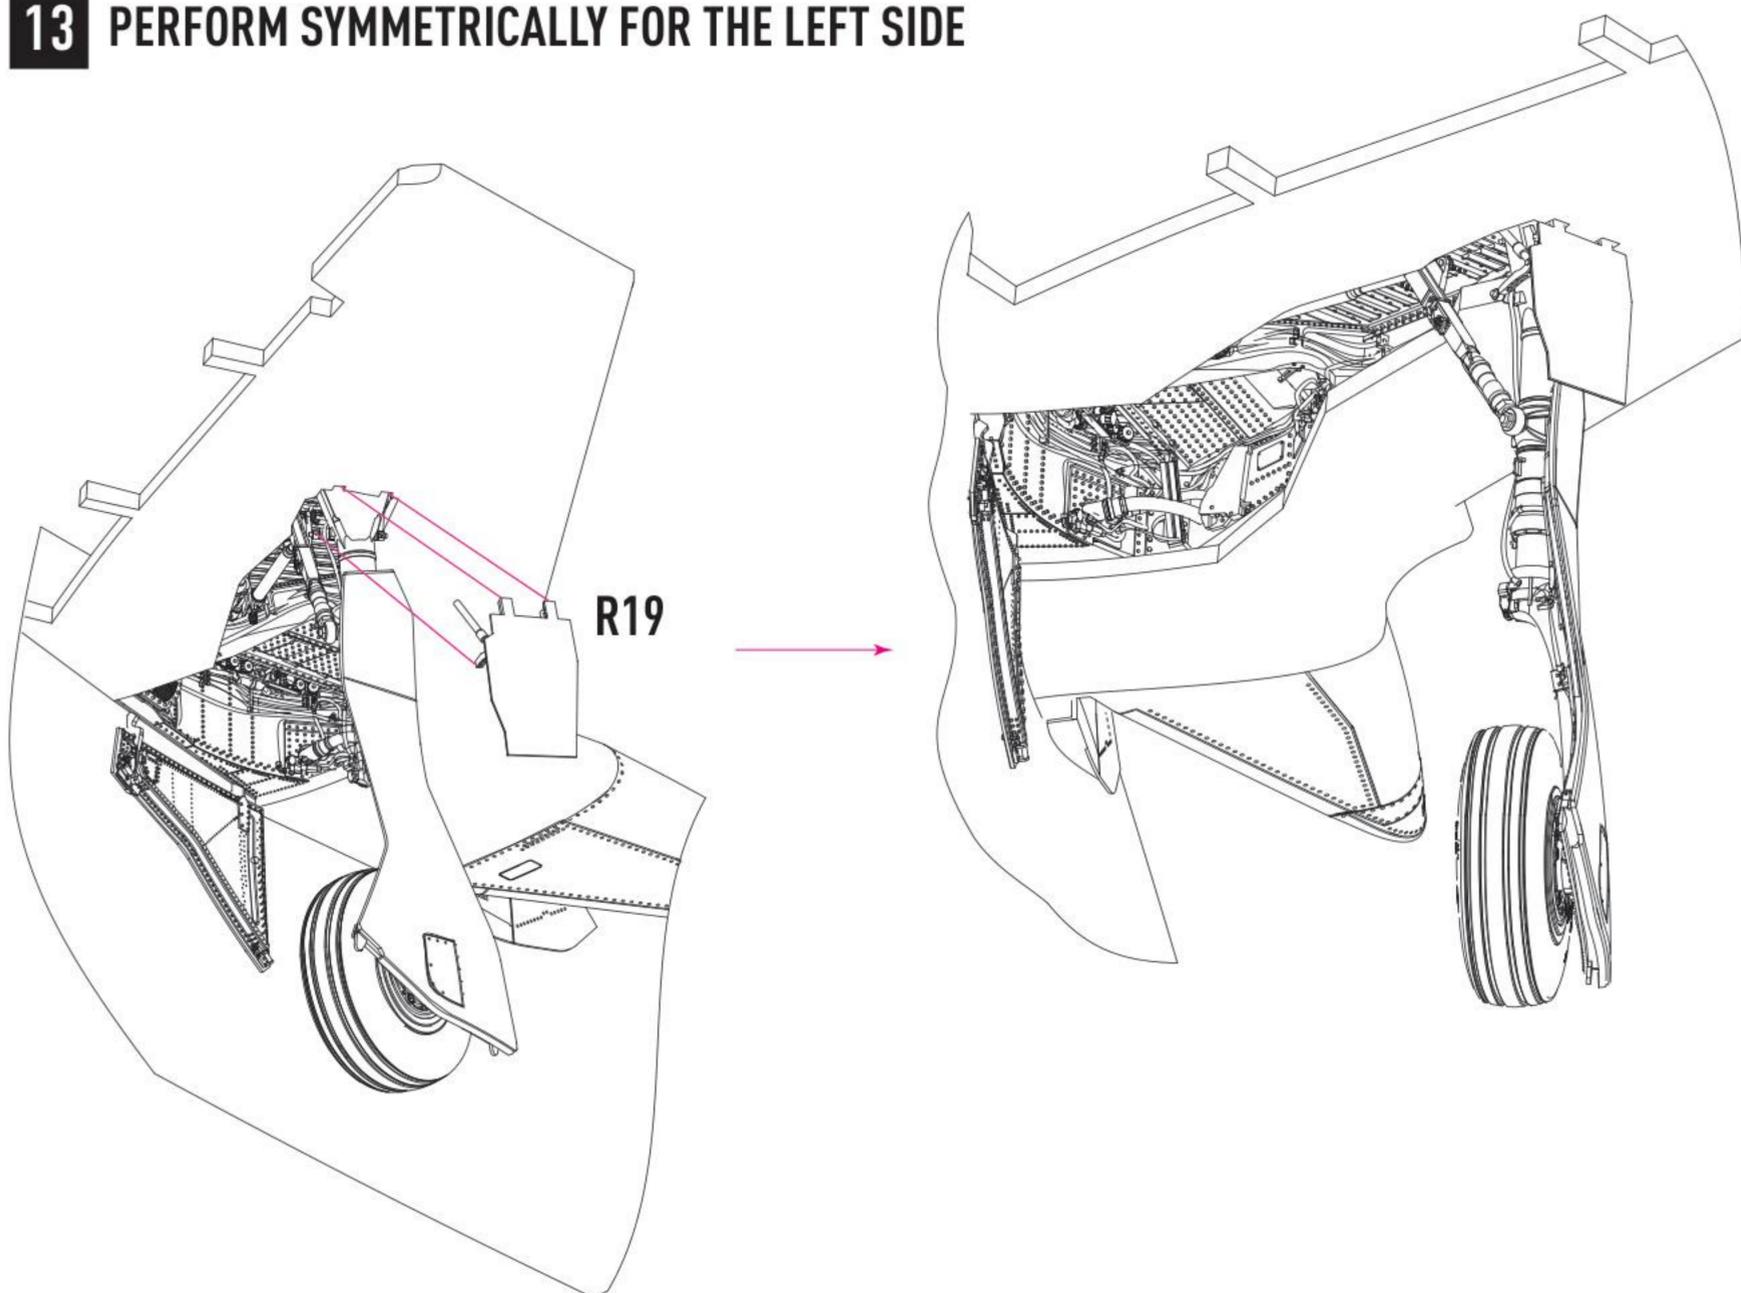




14

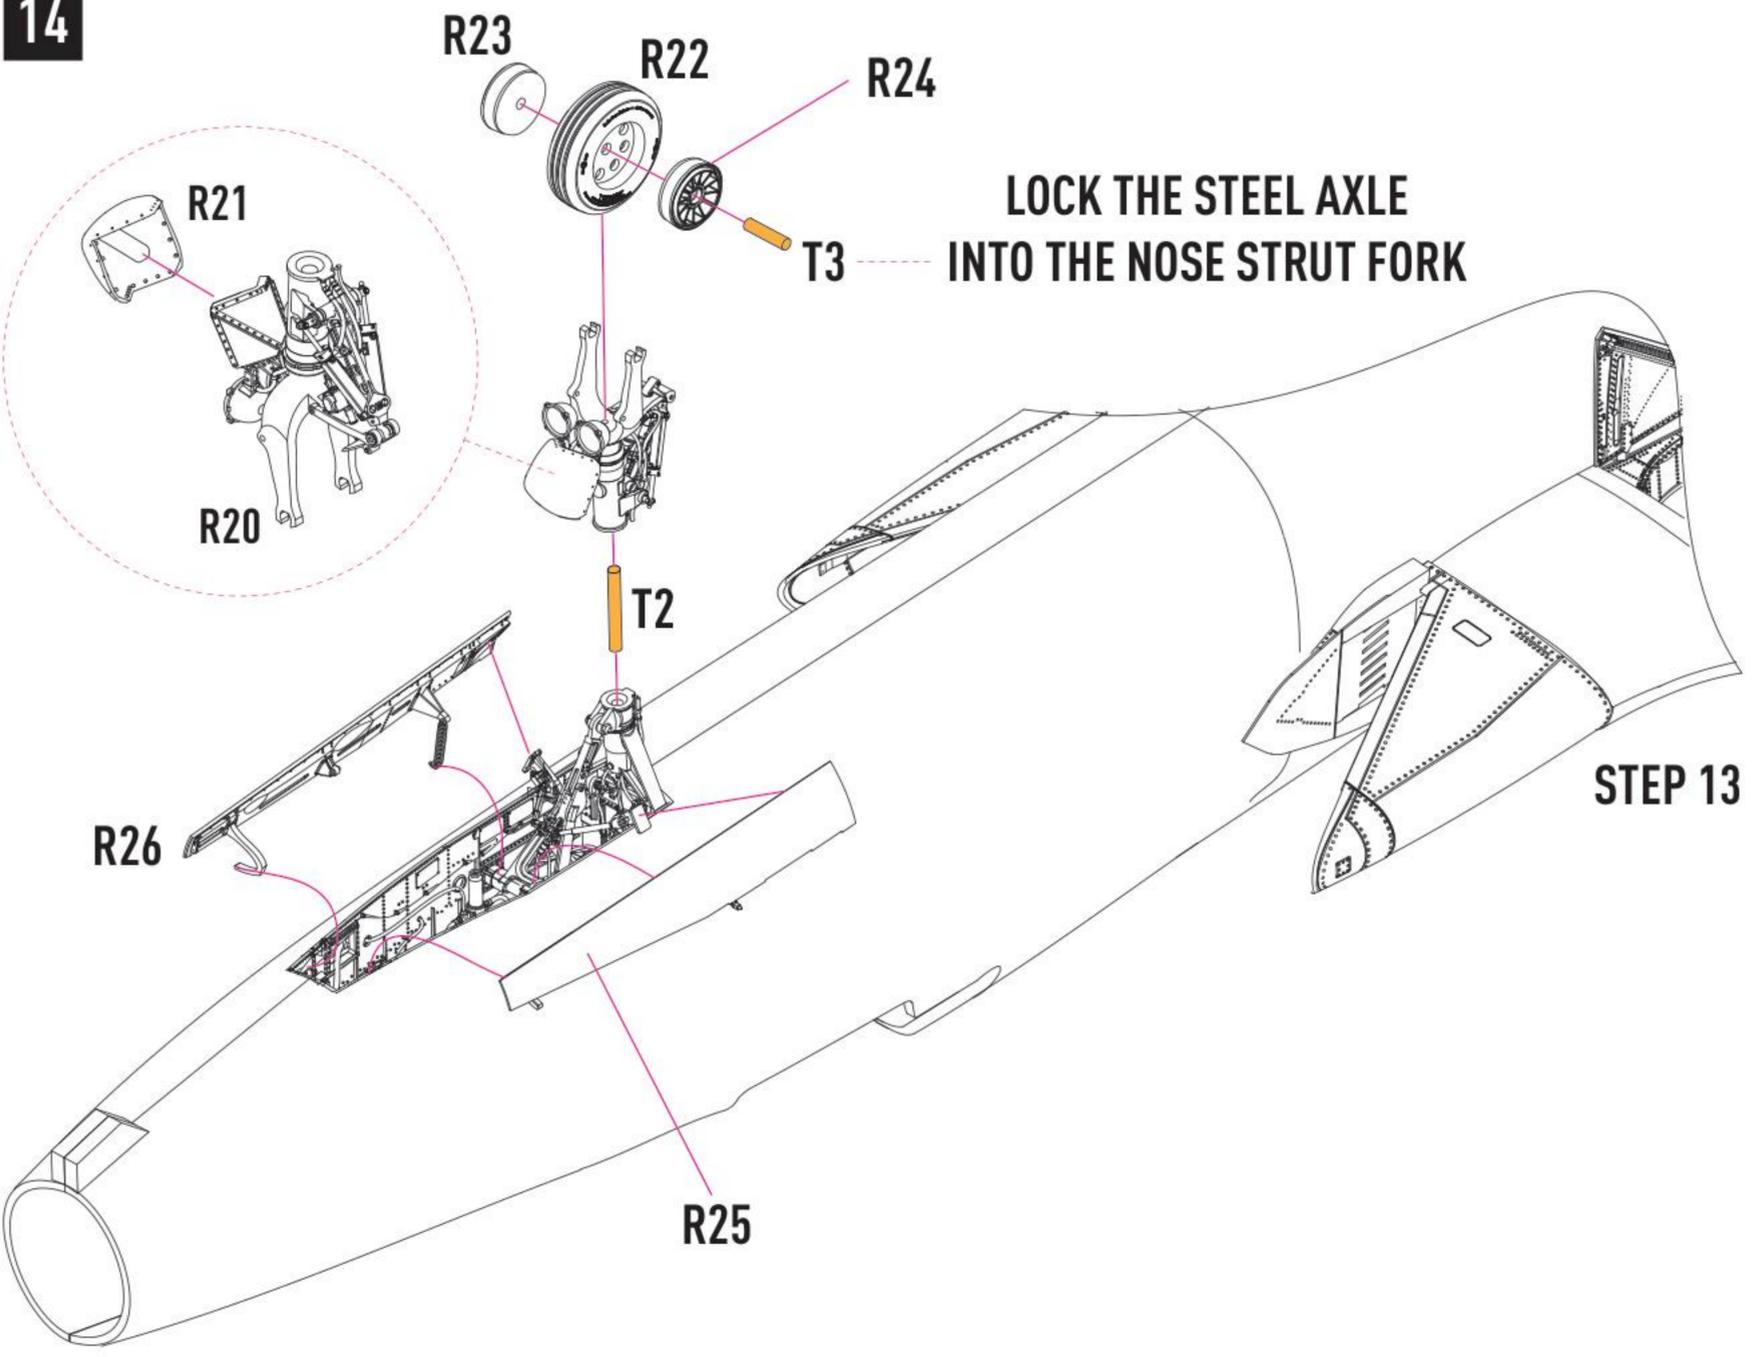

15

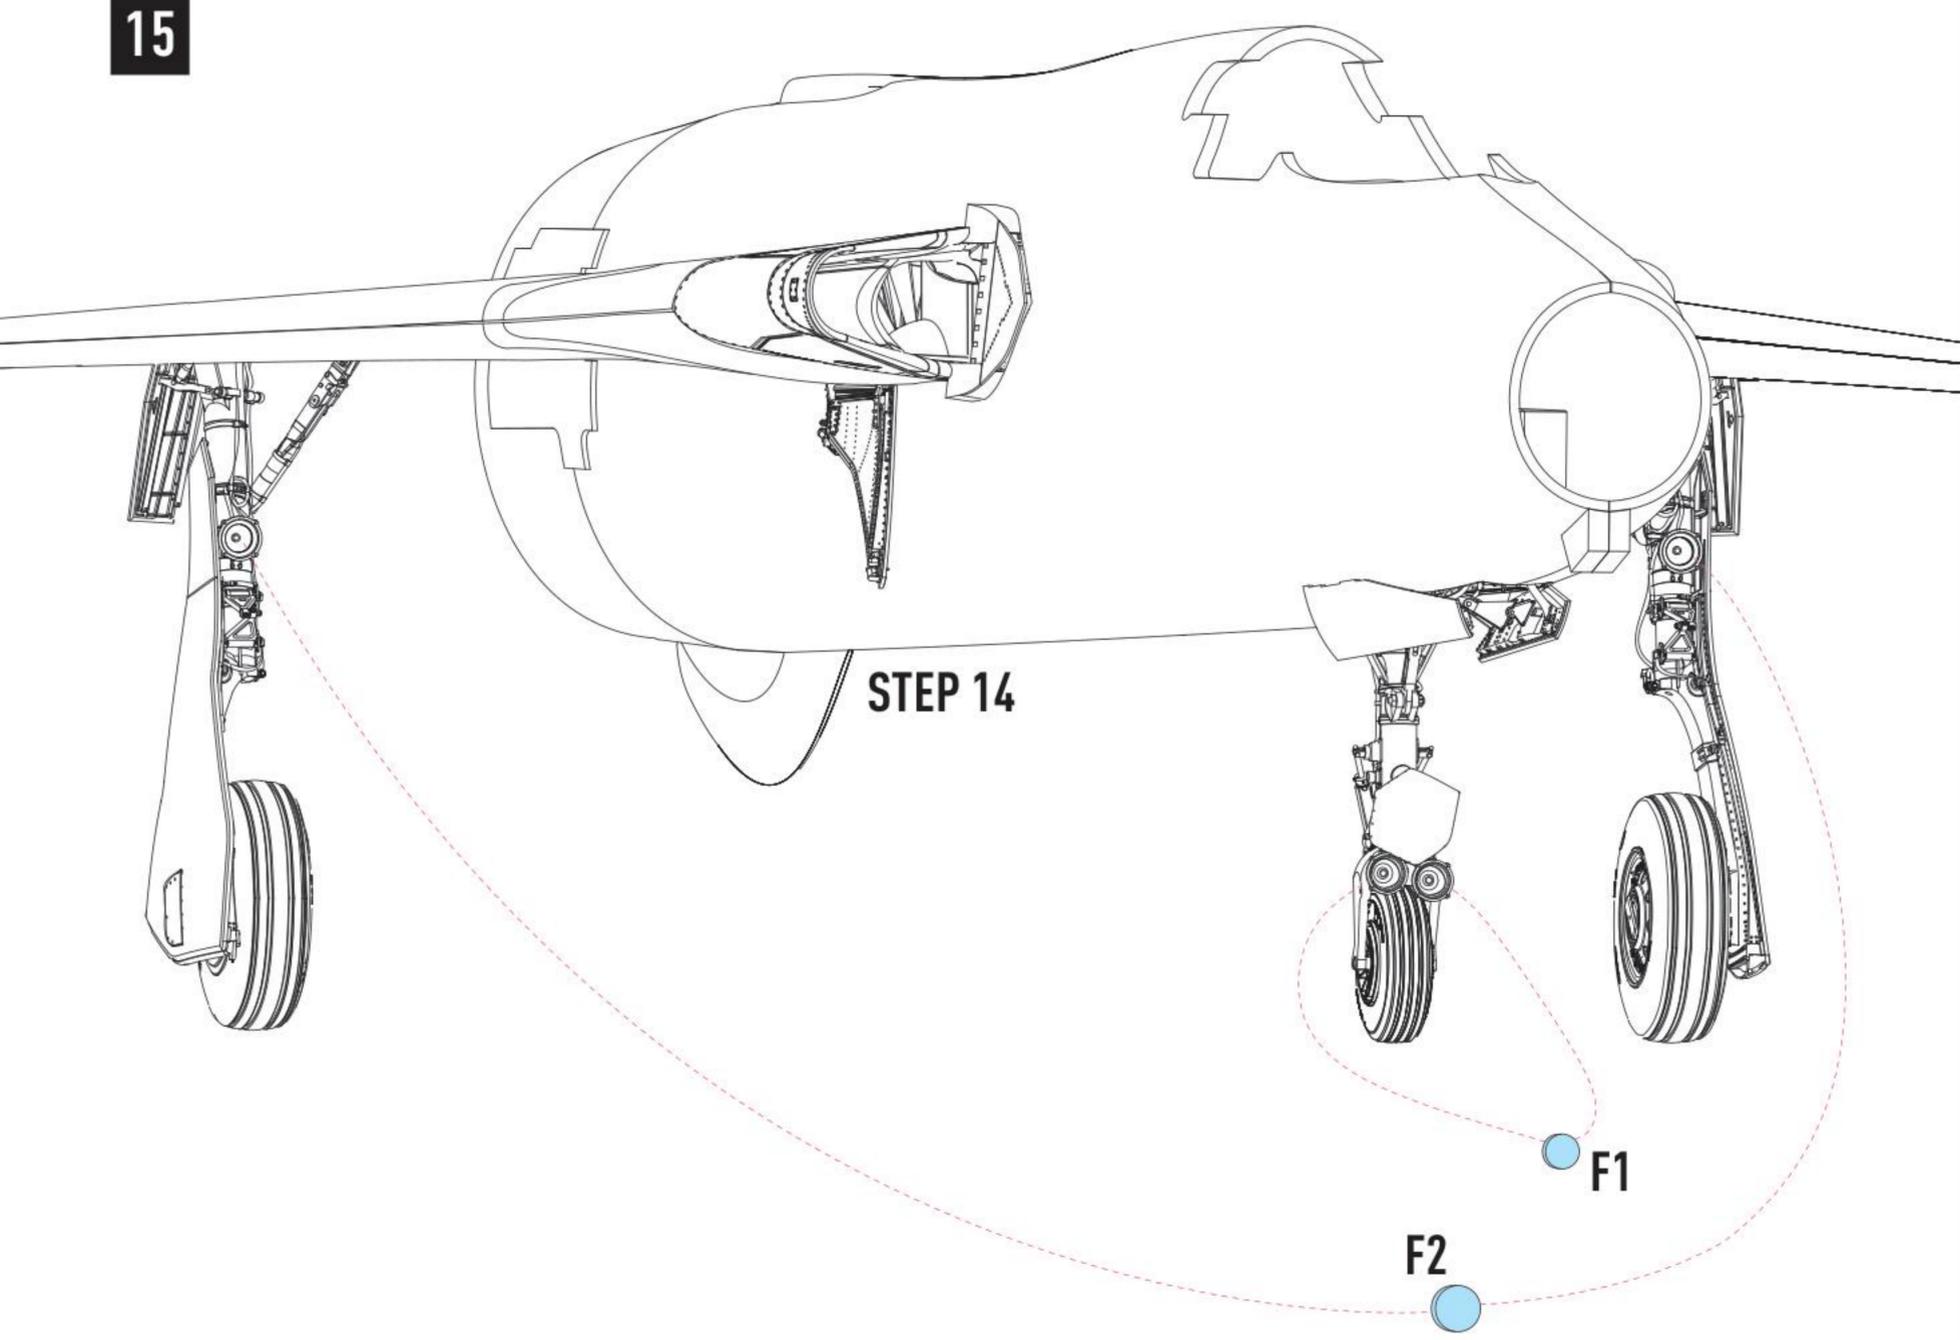

# DECALS INSTRUCTION

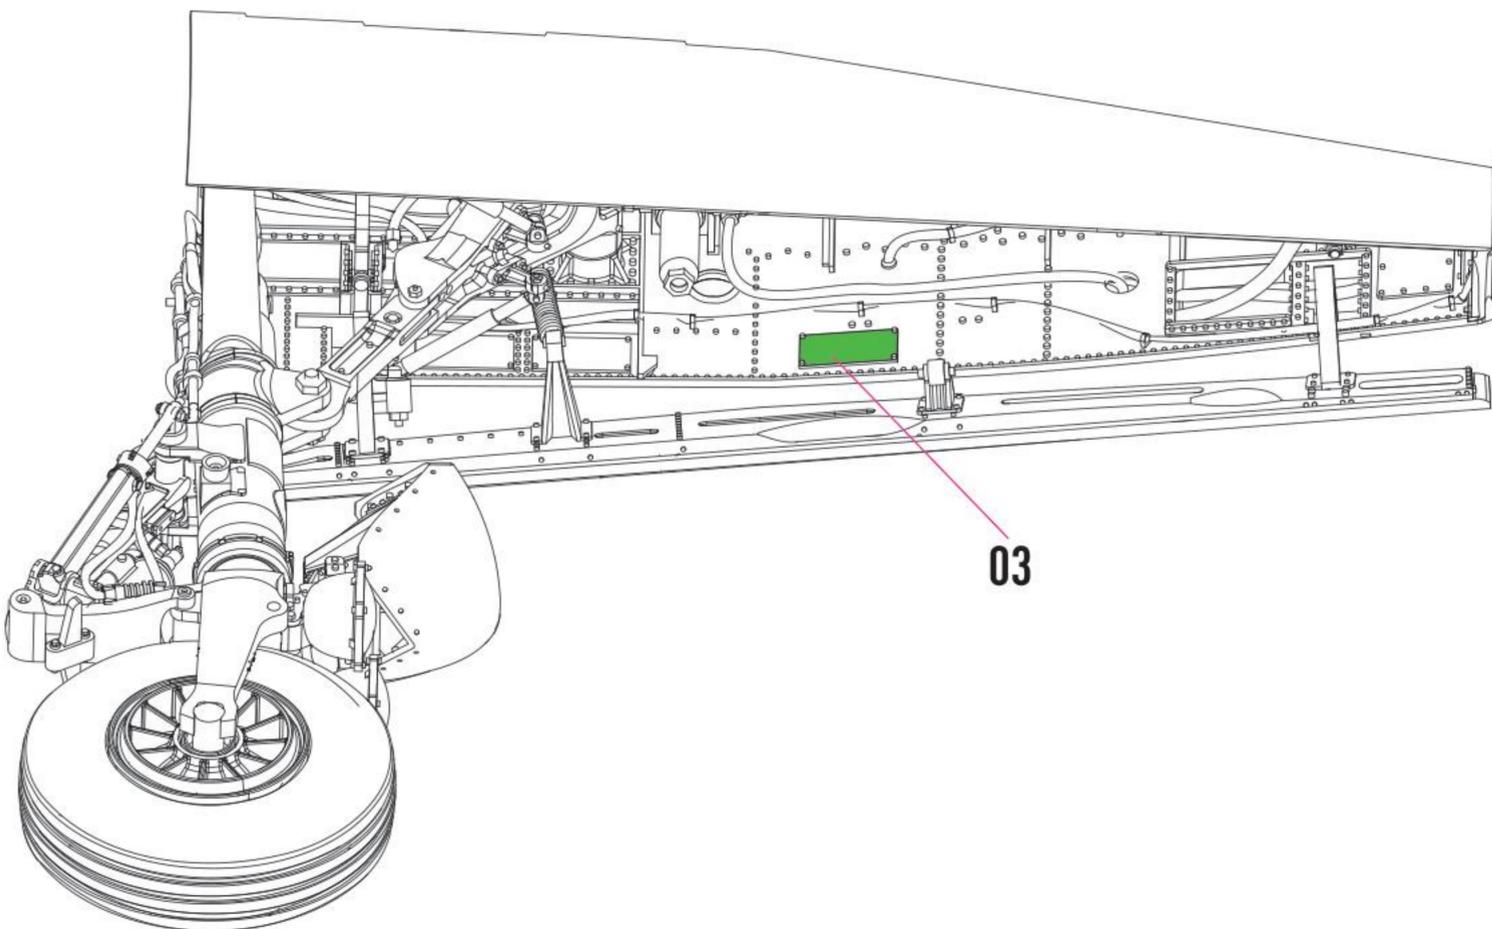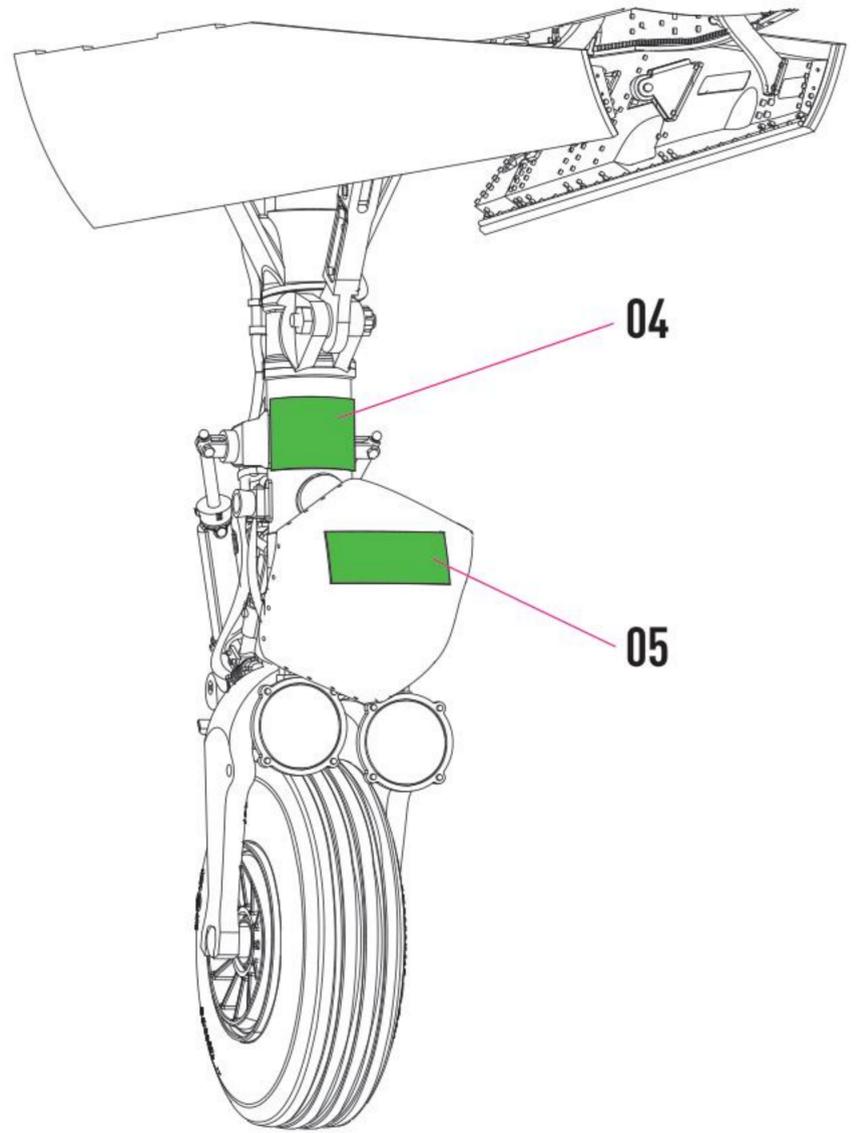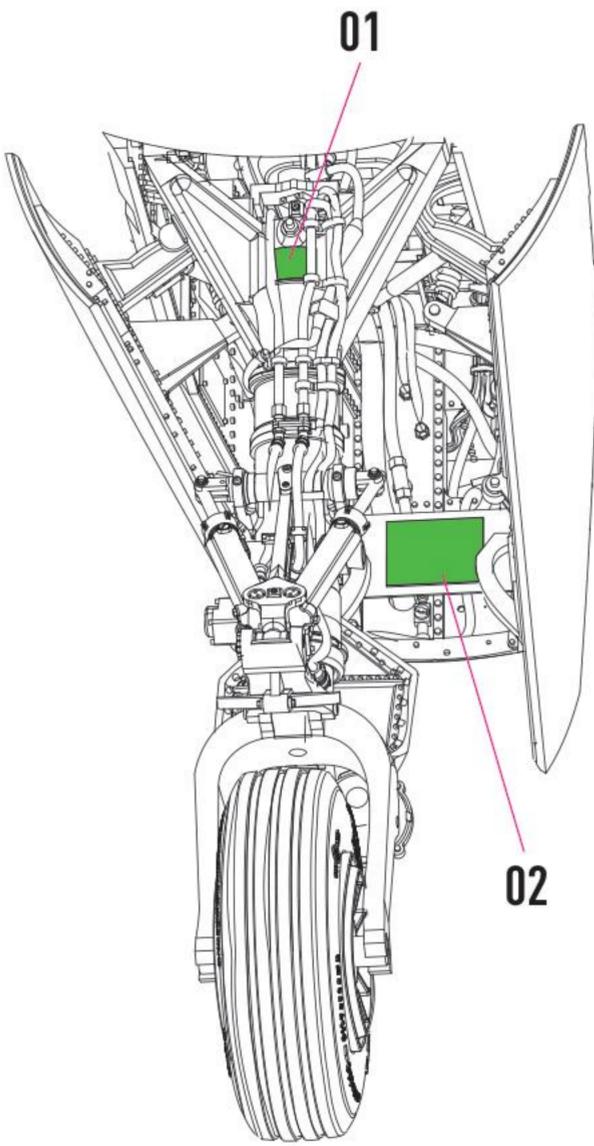

YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE

**RESKIT-MODELS.COM**

General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)

Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)

Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)