

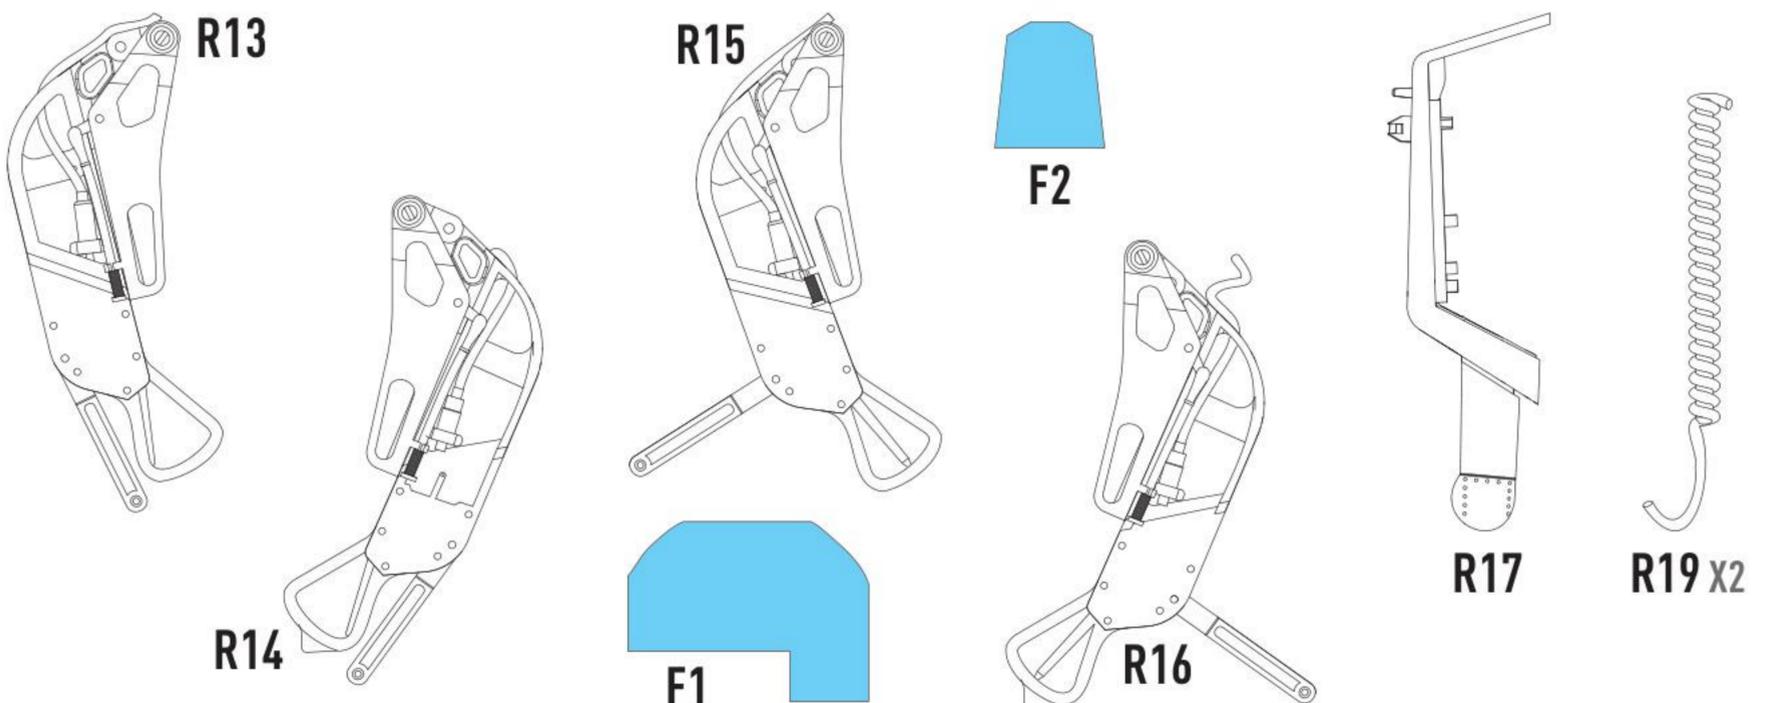
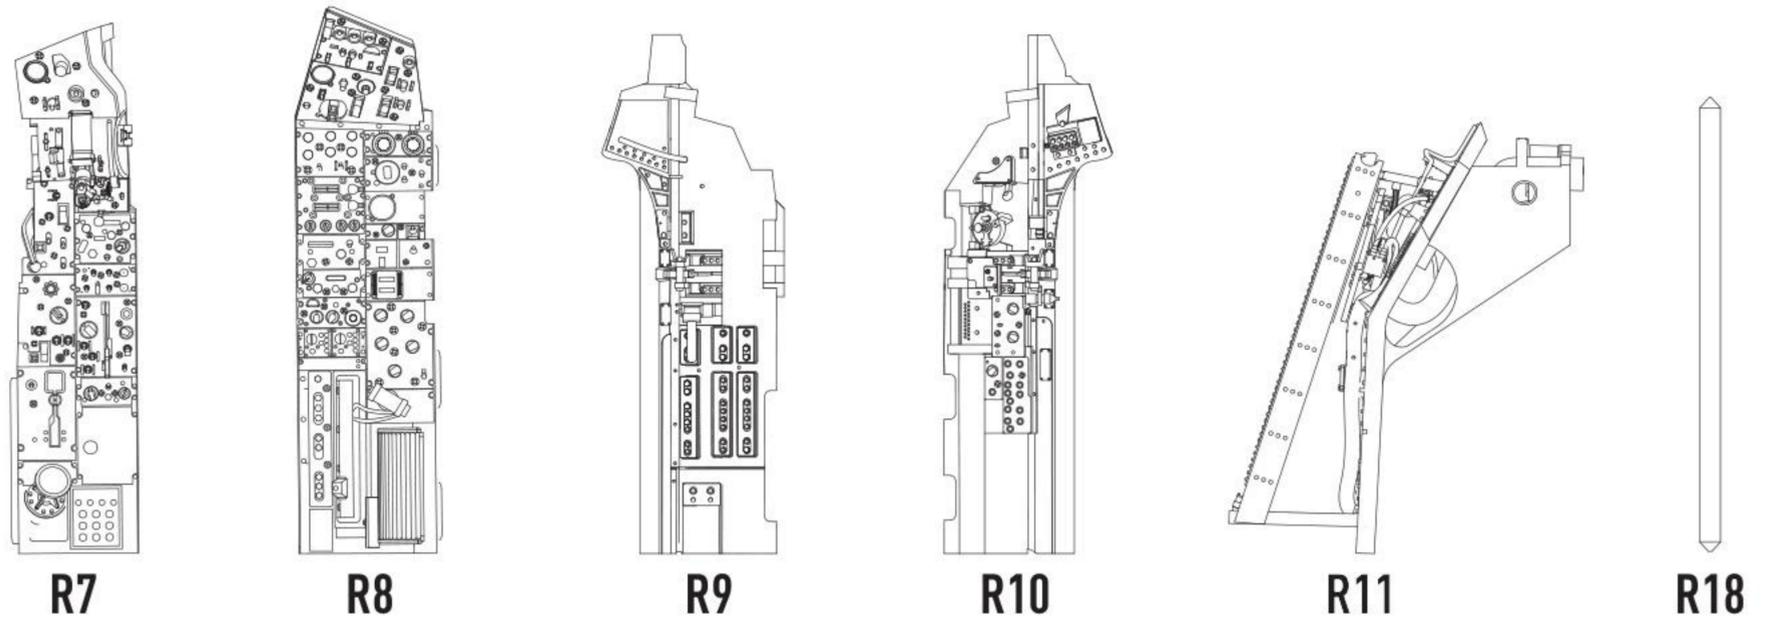



## DETAILS AFTER REMOVAL FROM SUPPORTS

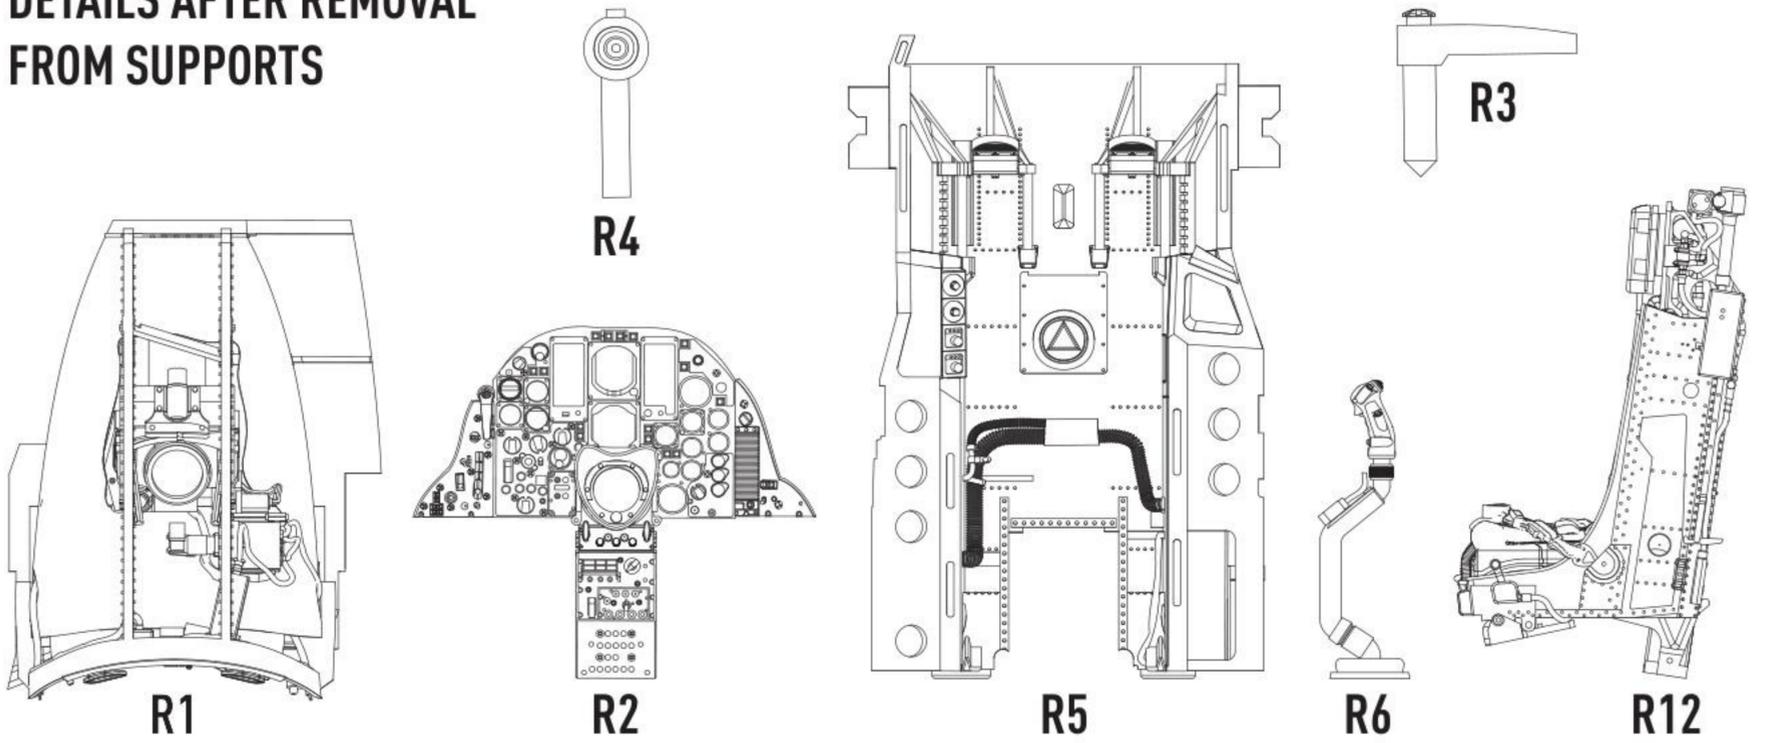


**1** APPLY WITHOUT GLUING THE TWO CASTS TOGETHER AND PASTE THE MASK.  
MARK THE PATH OF THE CONTOUR AND DELETE THE PART INDICATED IN RED



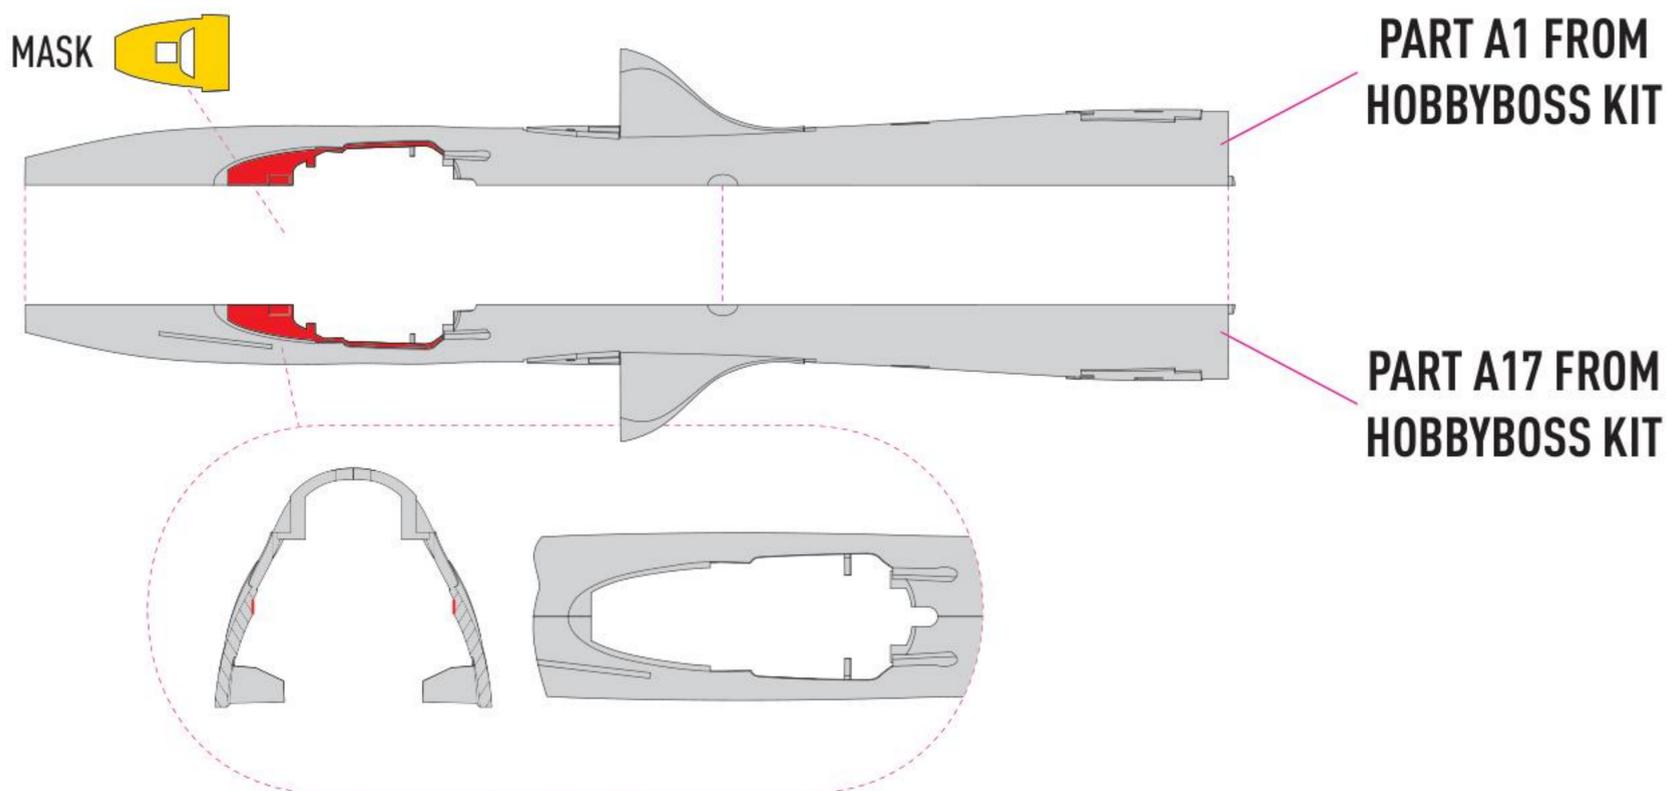


**2** CUT IN BOTH PARTS (IN THE PLACES INDICATED IN RED)  
CHAMFER NOT LESS THAN 45°

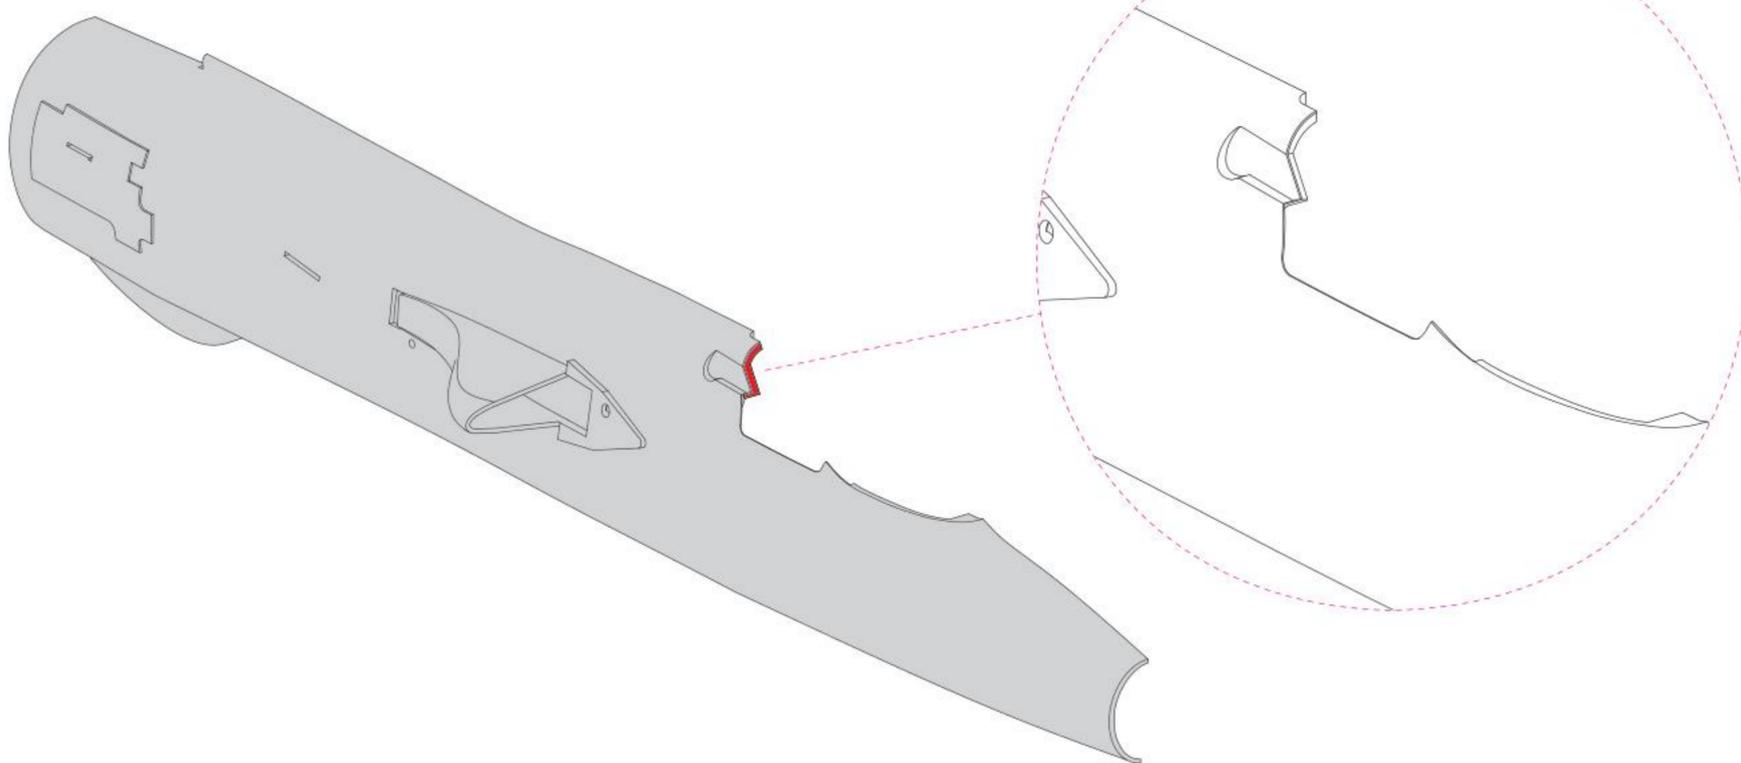


**3** IN BOTH PARTS, REMOVE THE SURFACE INDICATED IN RED.  
DO NOT DEFORM LANDING PLACES

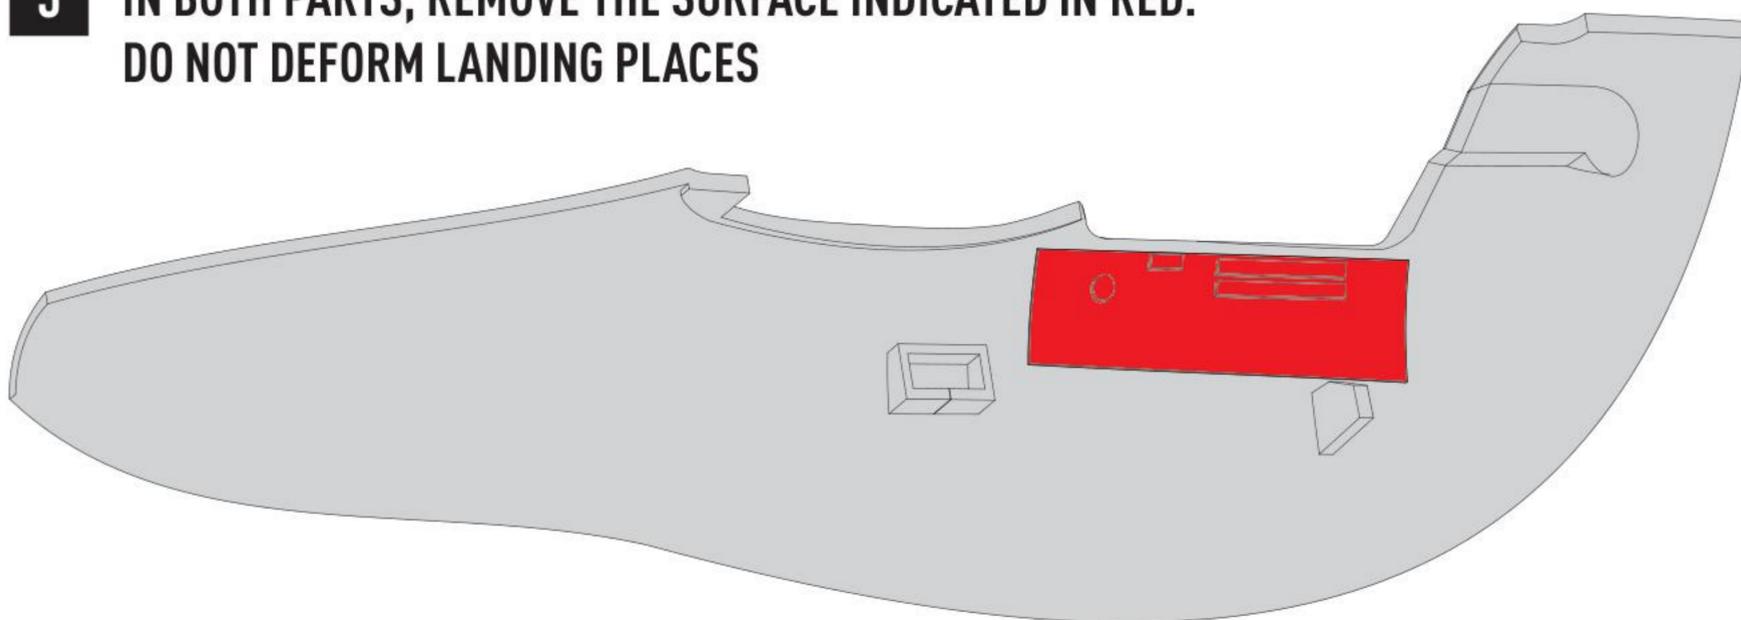

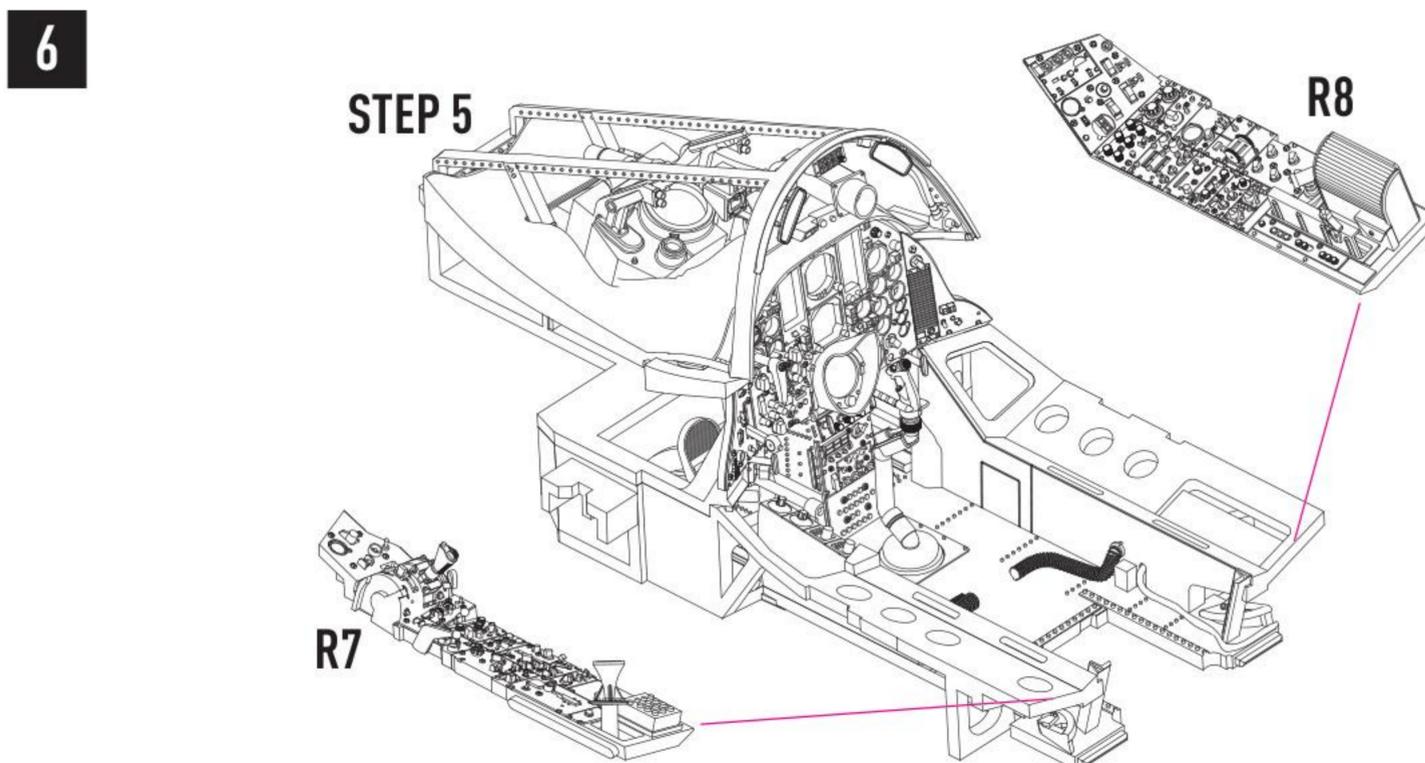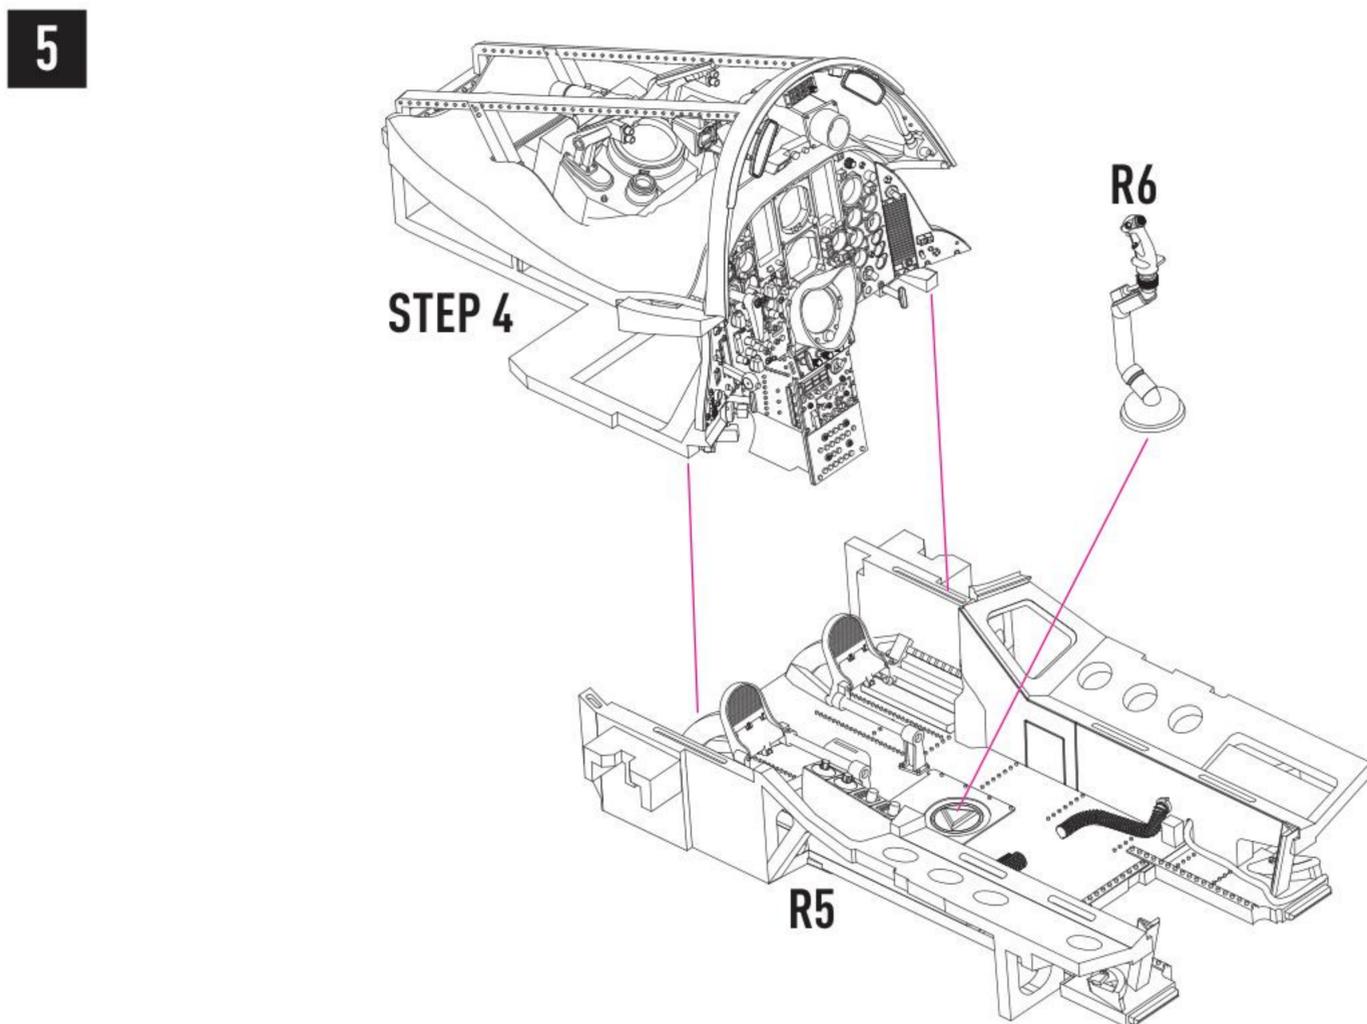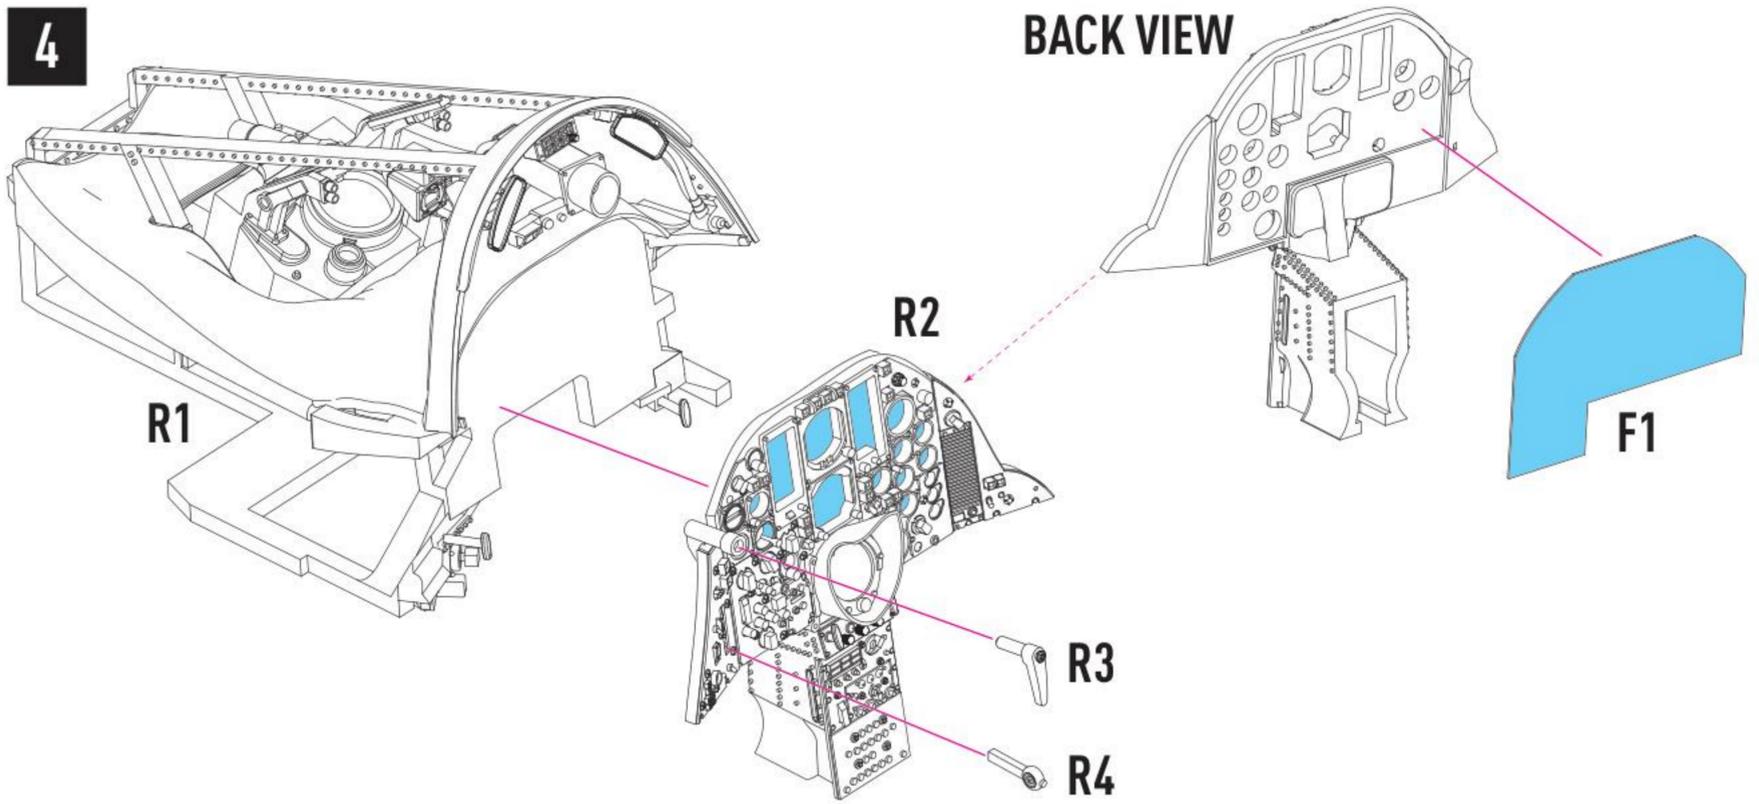


7

STEP 6

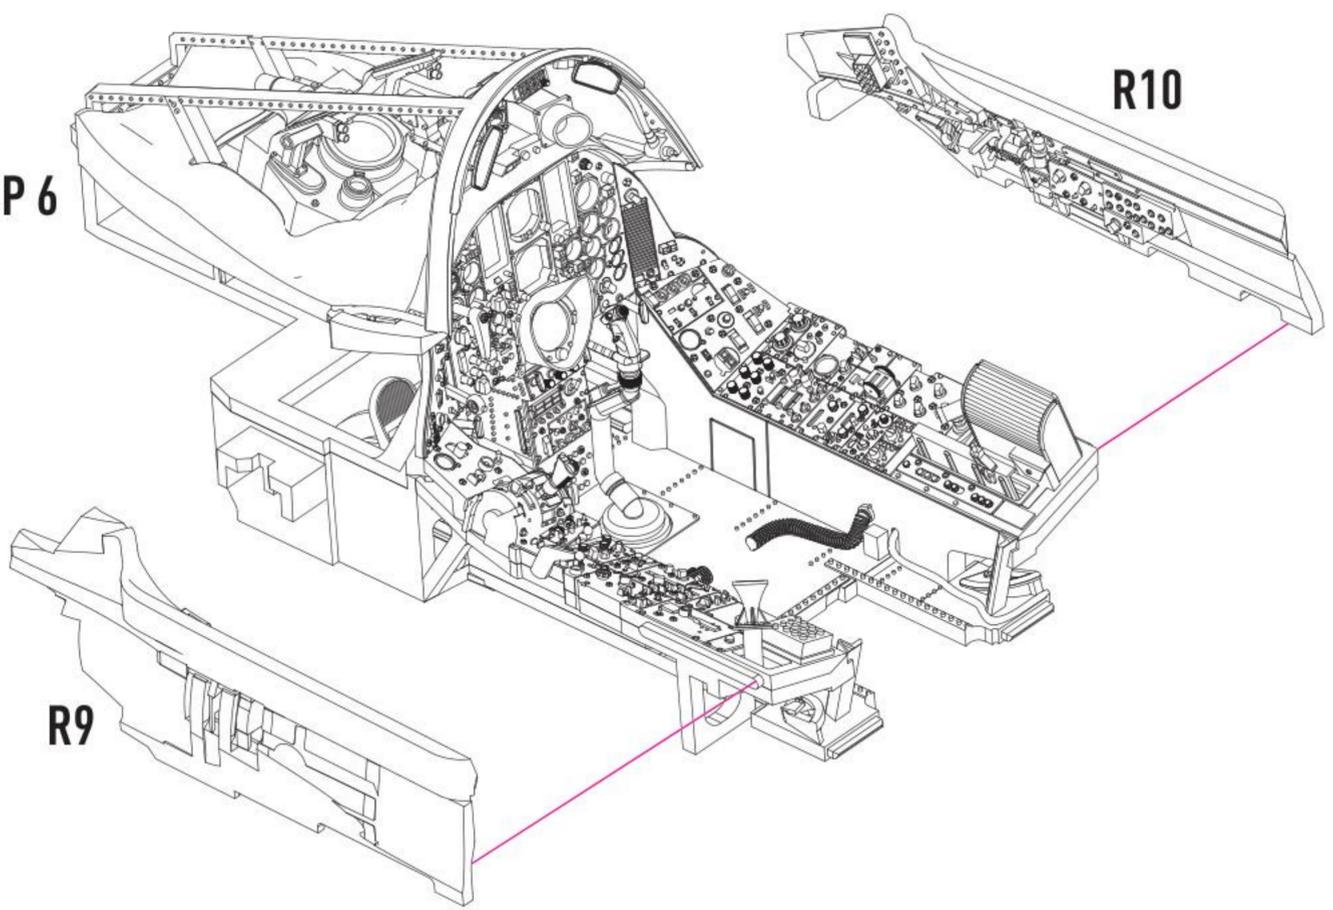


8


STEP 7

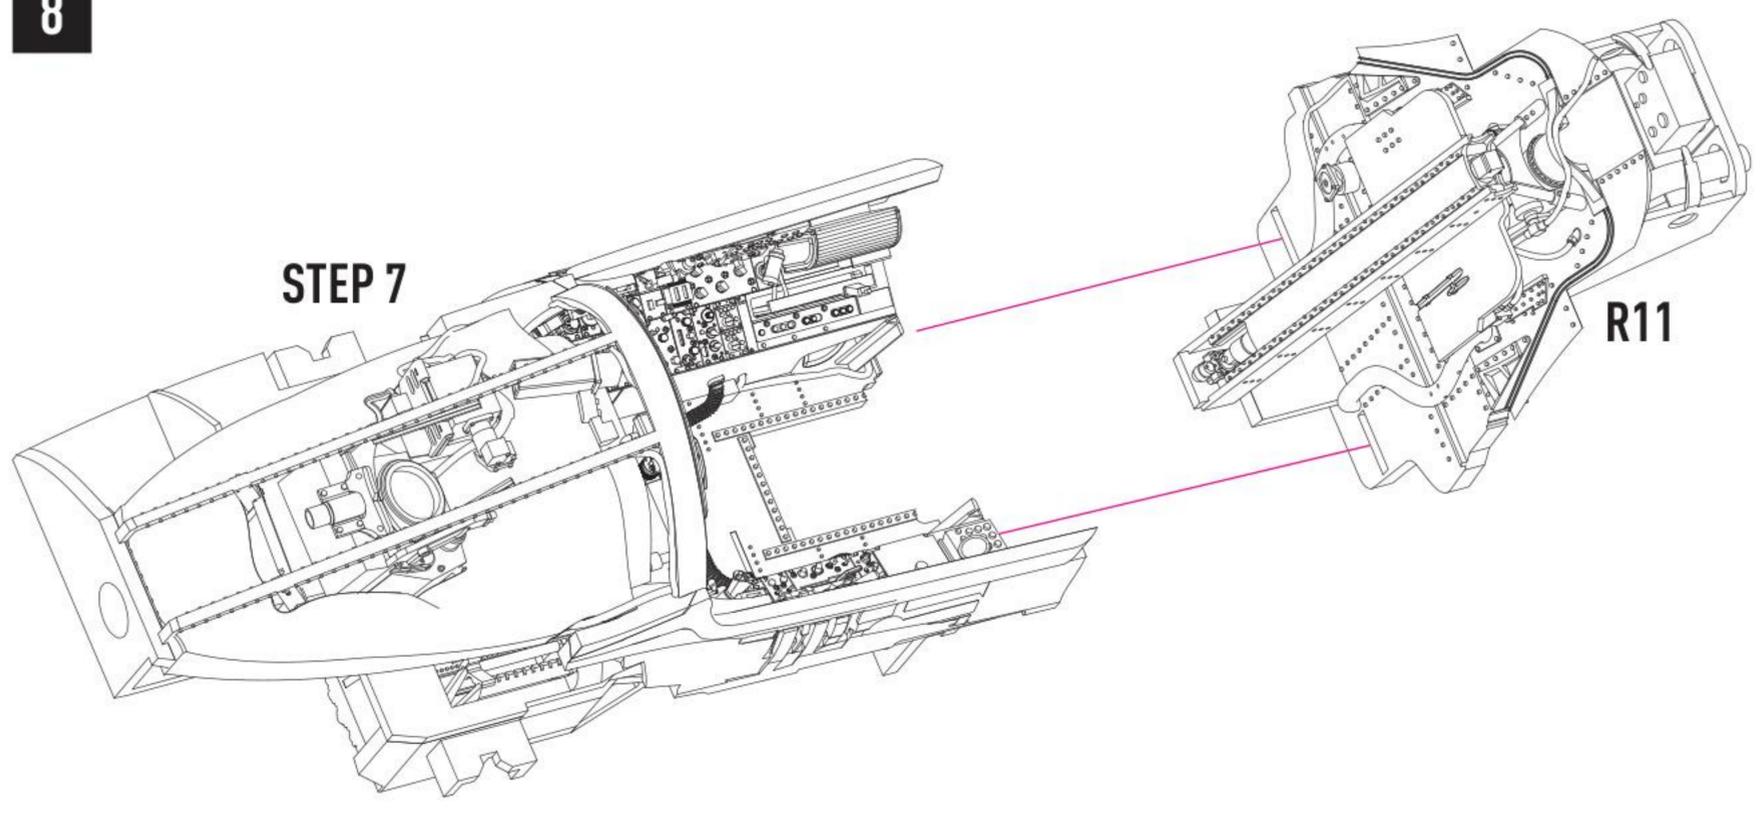


9

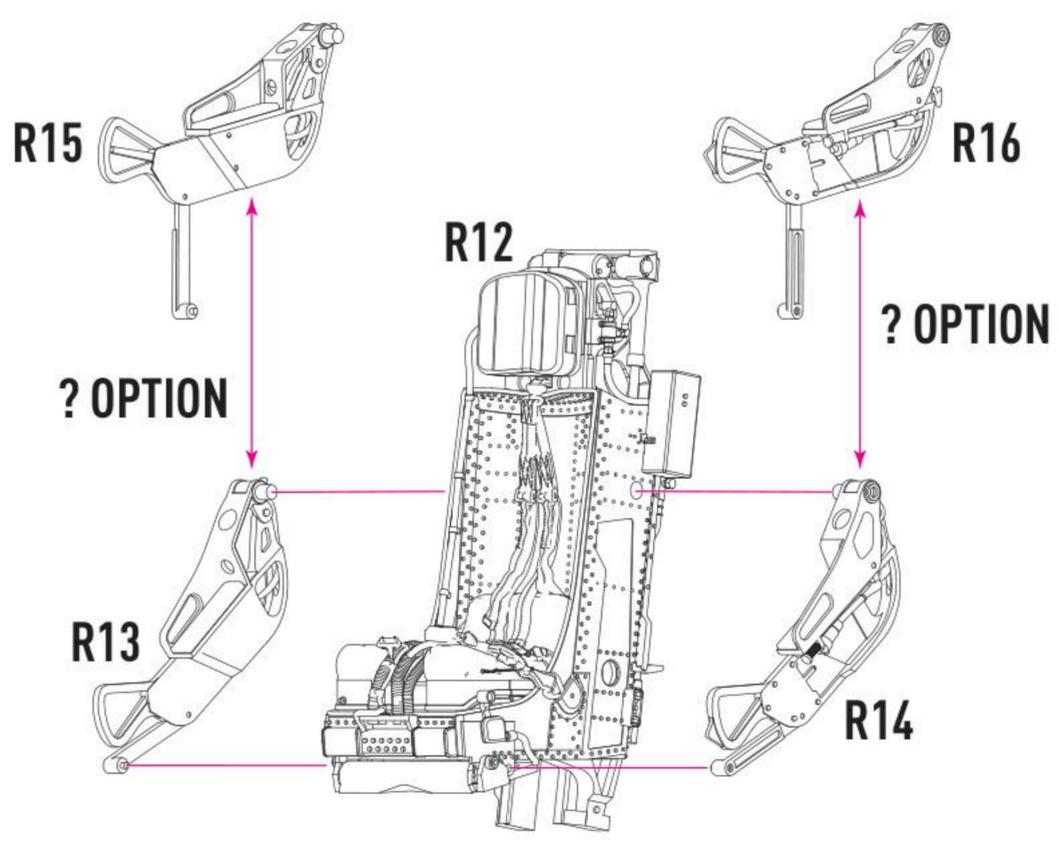


10

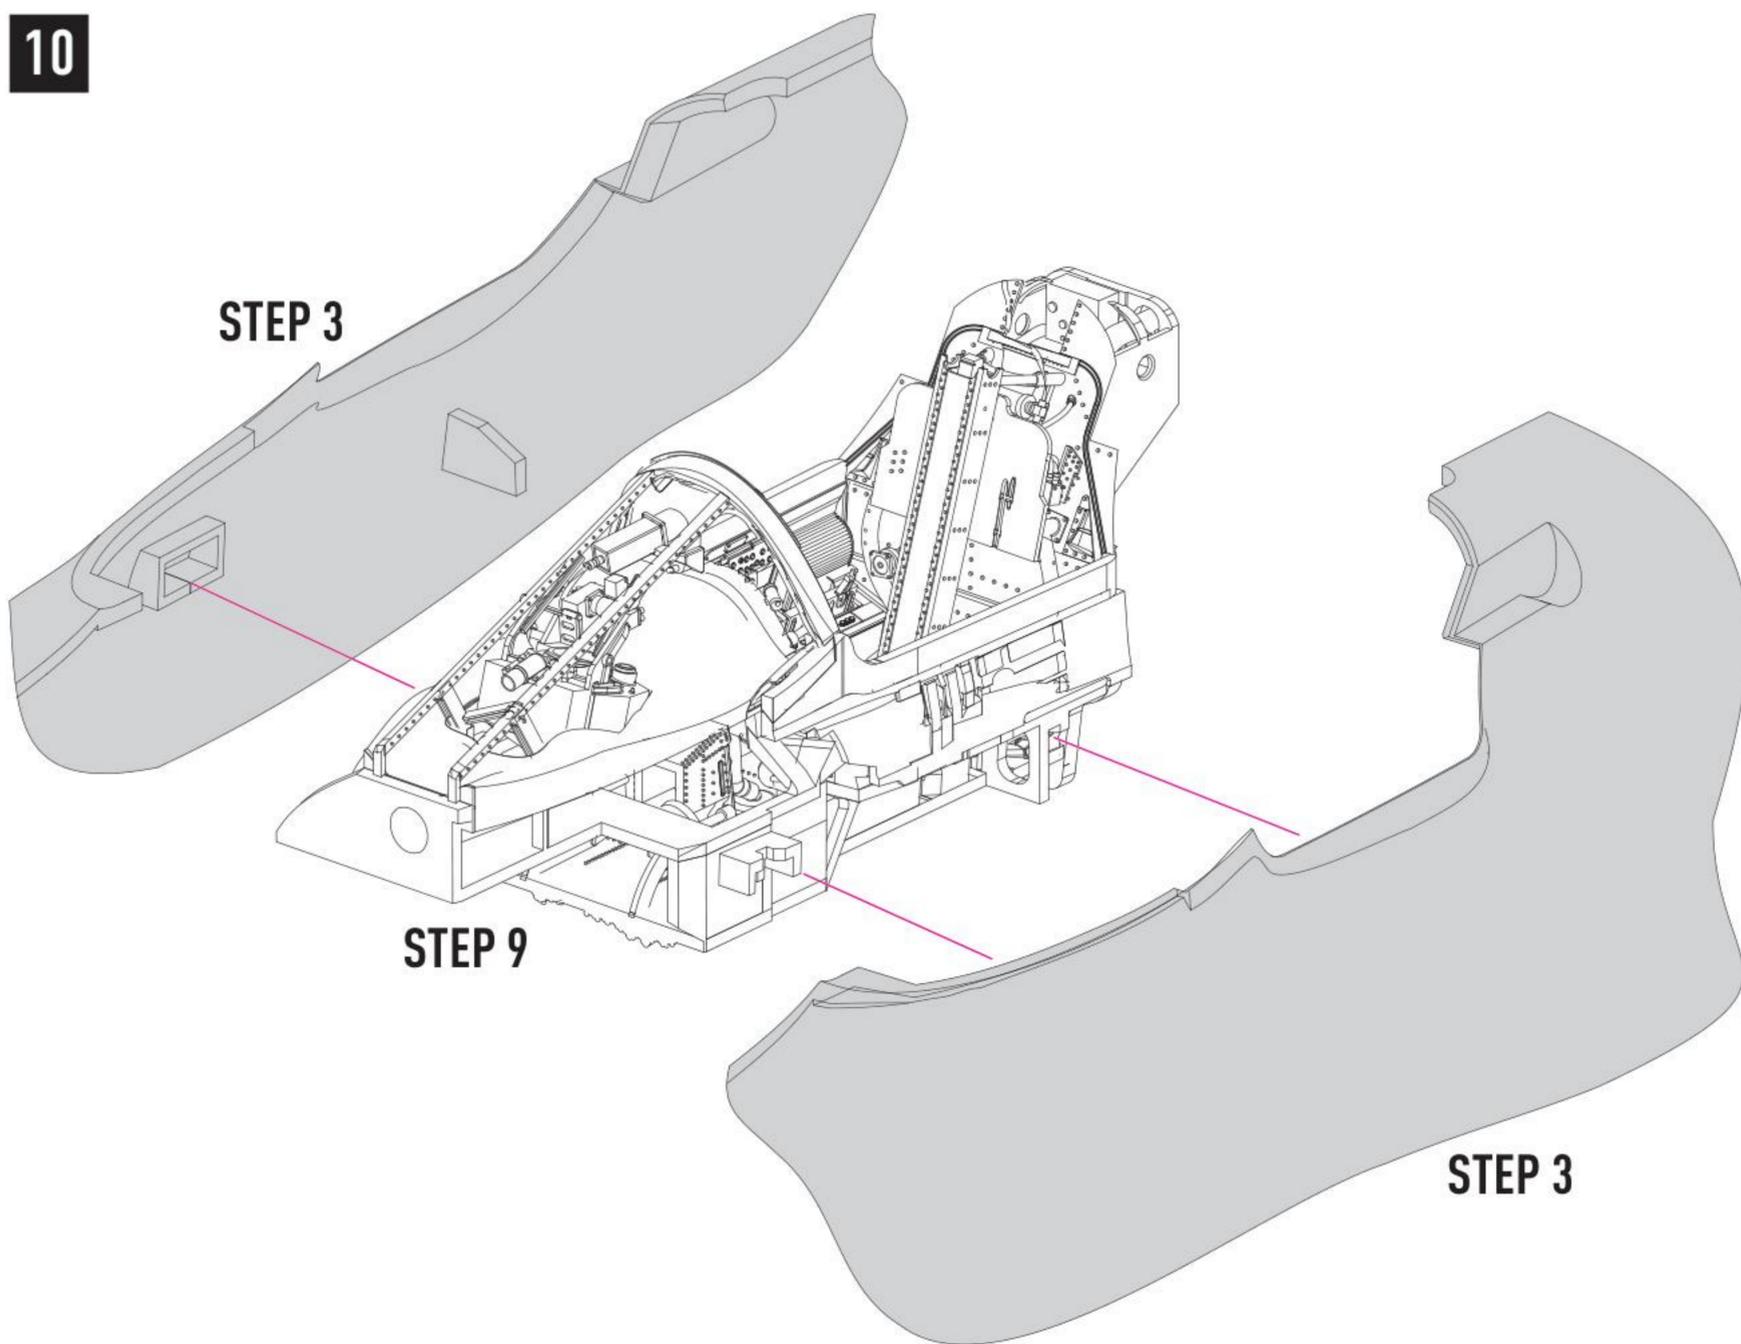


11

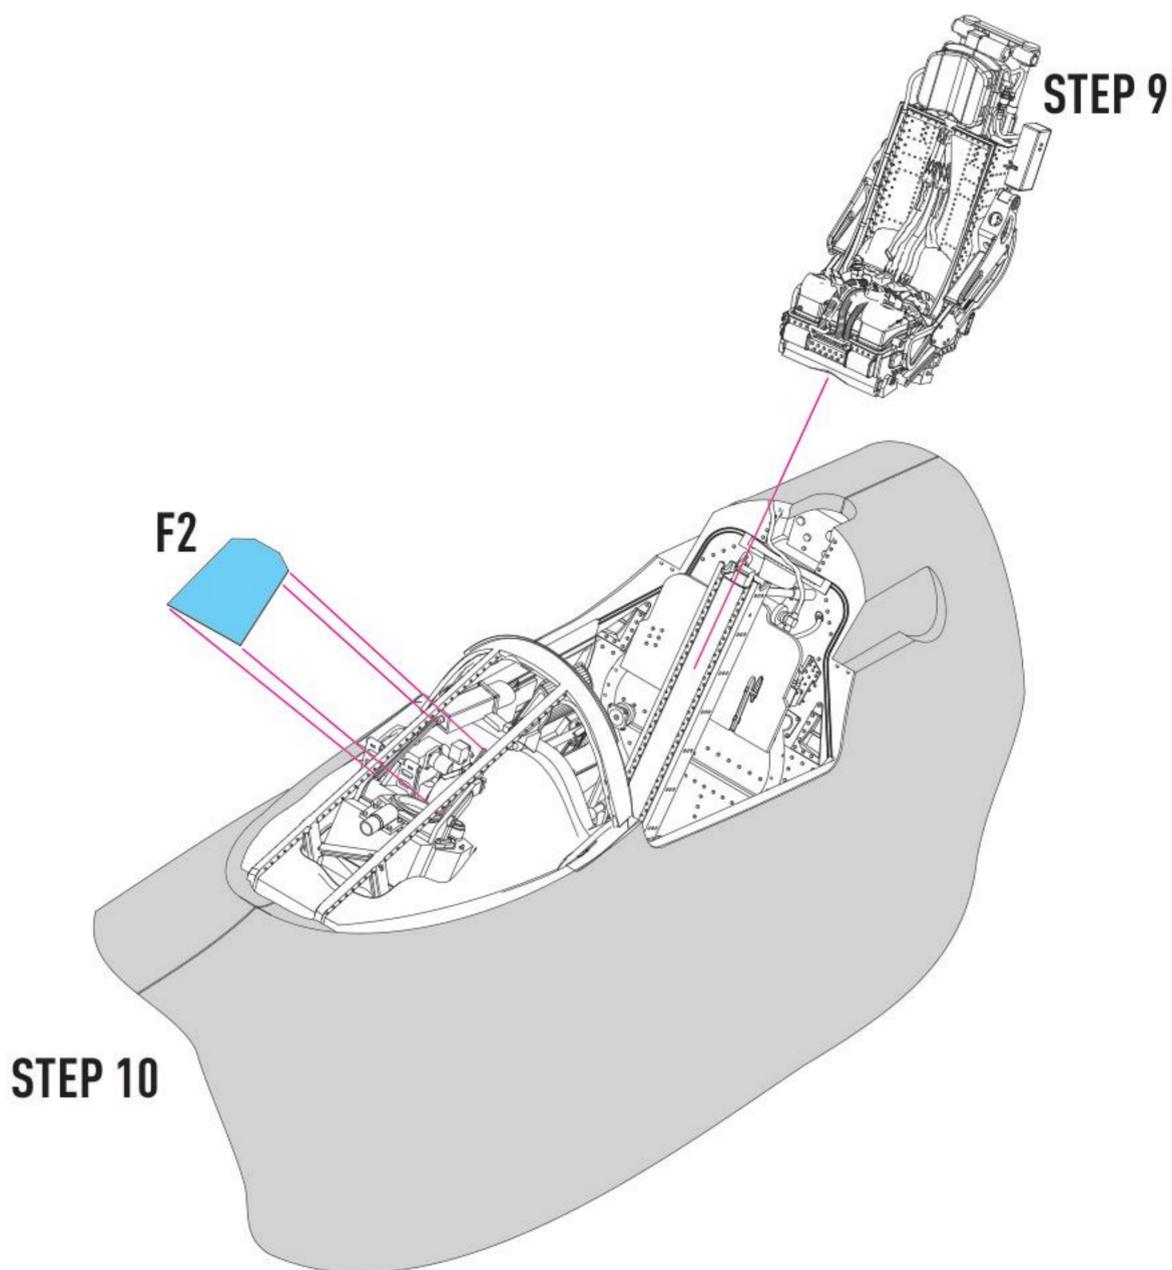


**12** FOR A OPEN COCKPIT

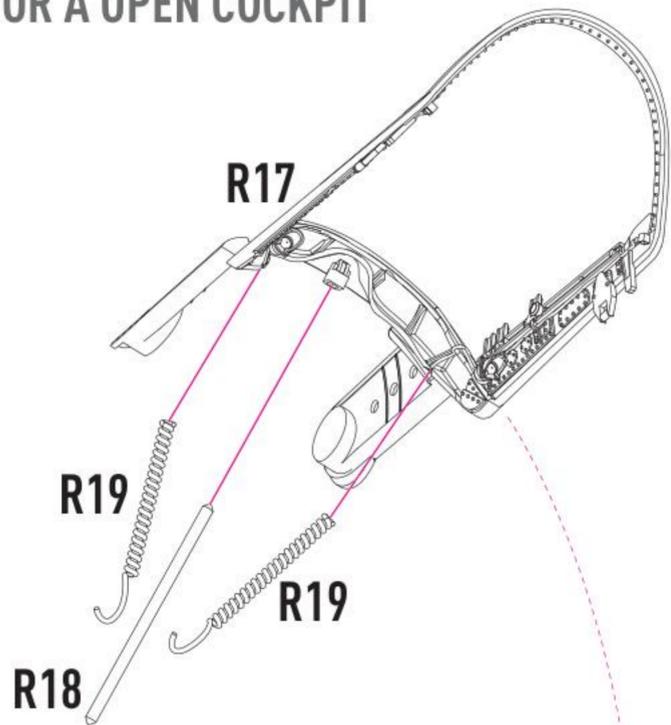




**PART M9 FROM HOBBYBOSS KIT**

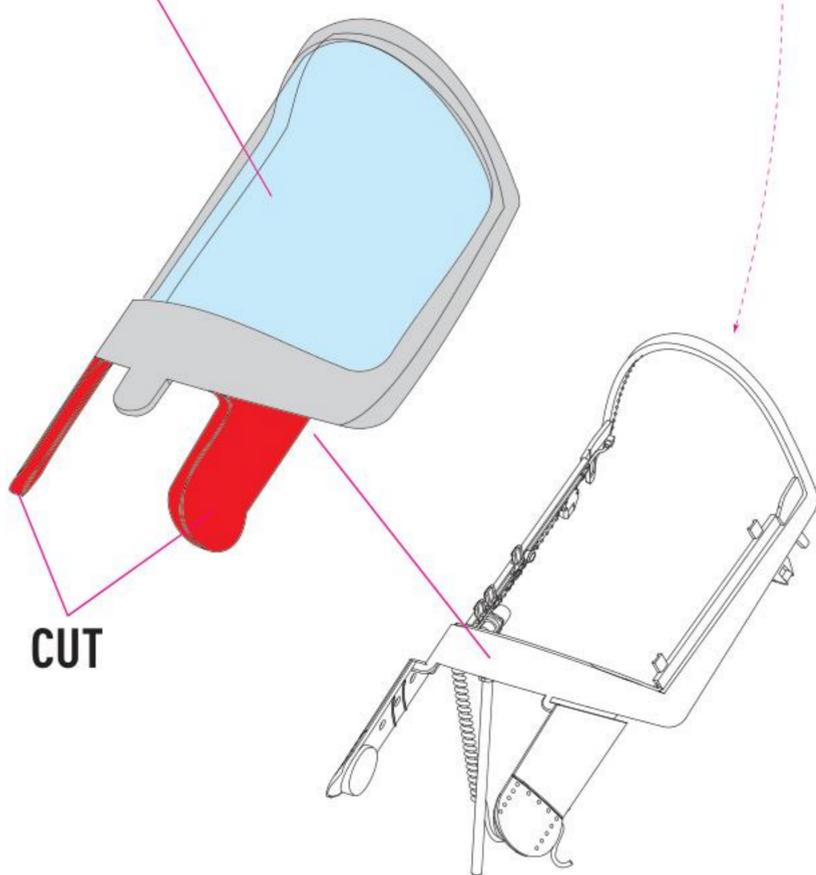






**FOR A CLOSED COCKPIT**

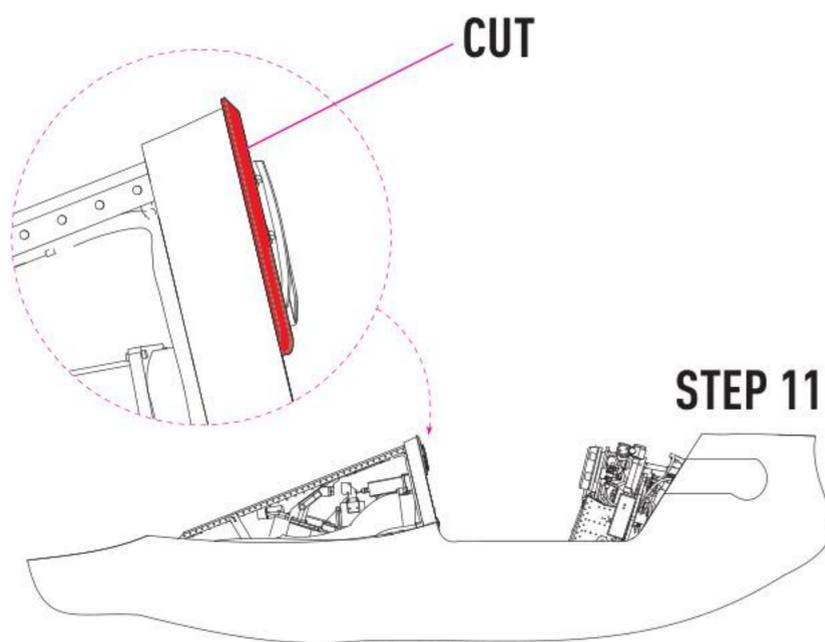

**PART M9 FROM HOBBYBOSS KIT**

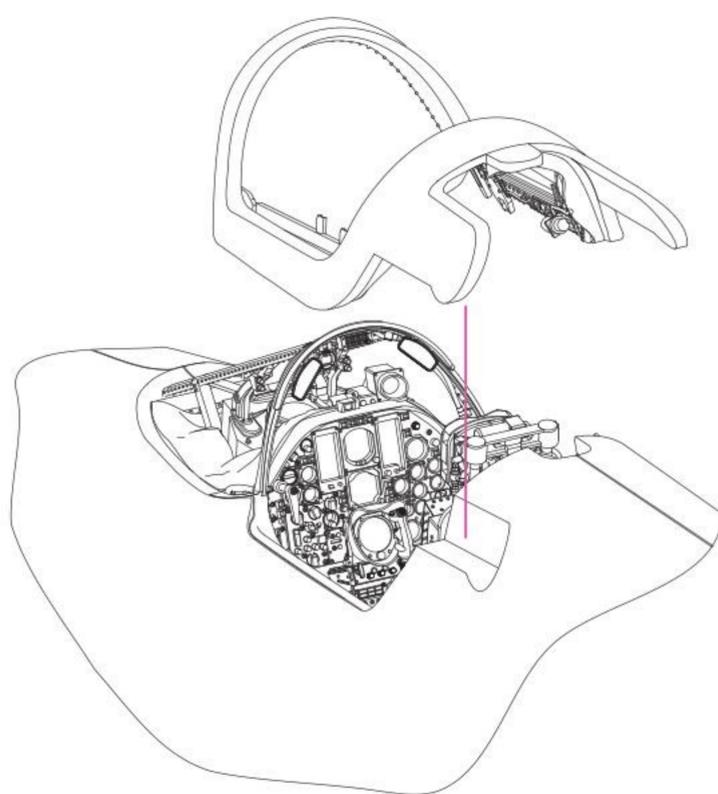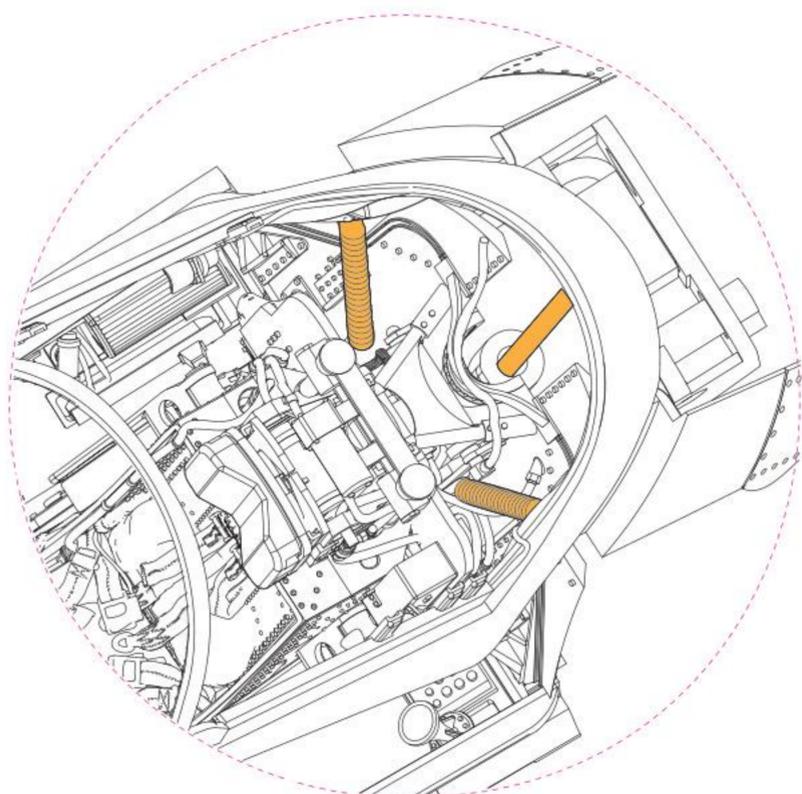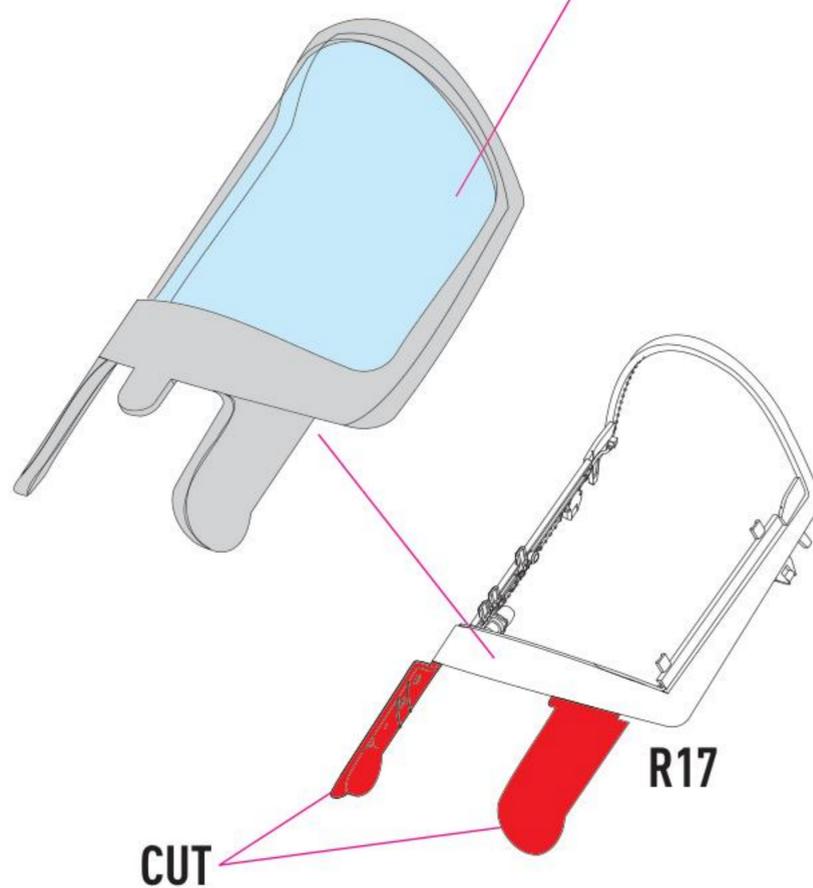

# DECAL INSTRUCTION

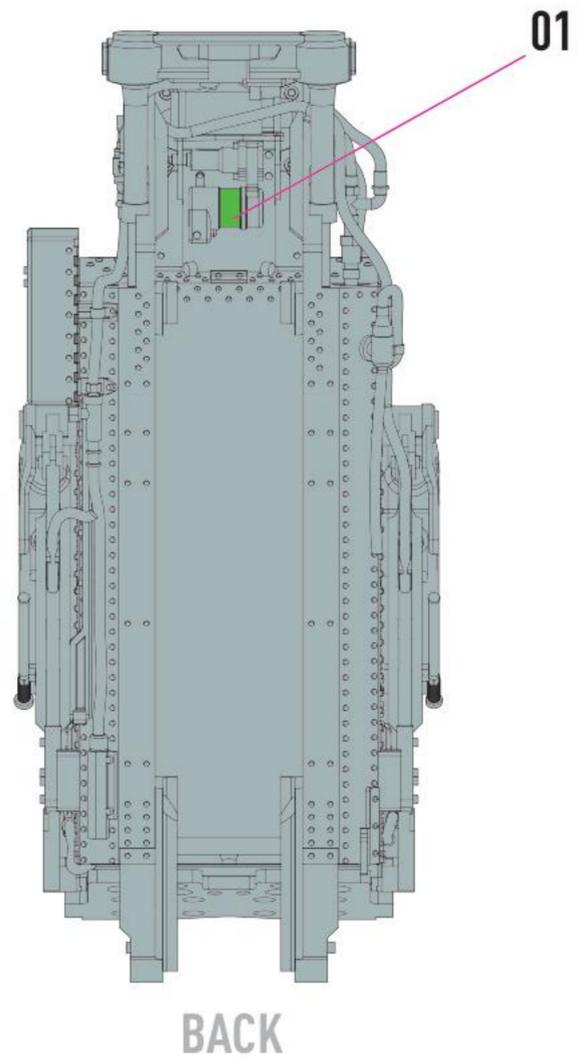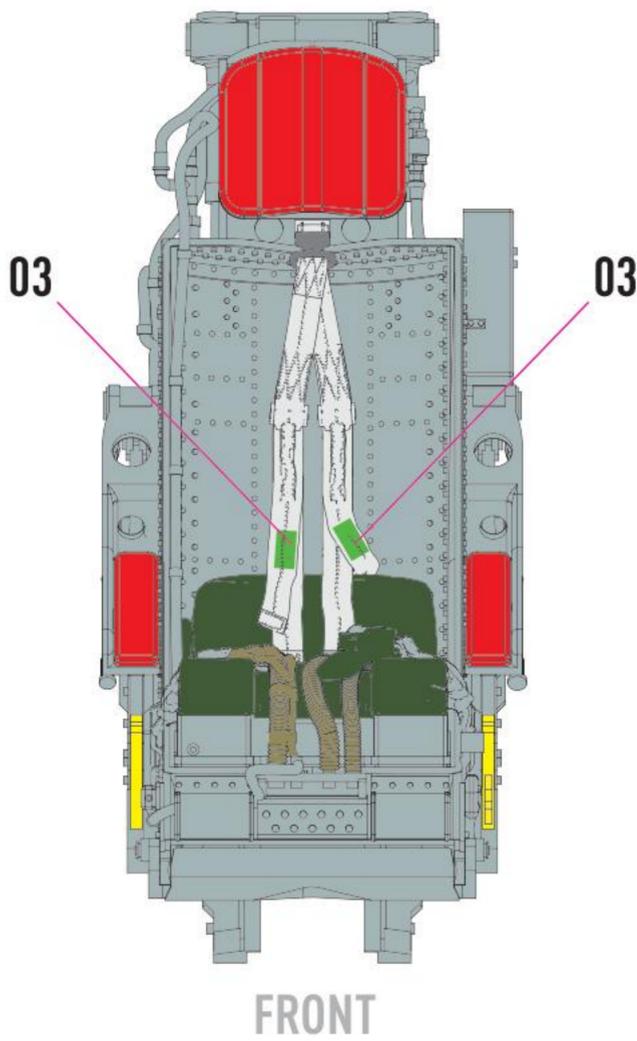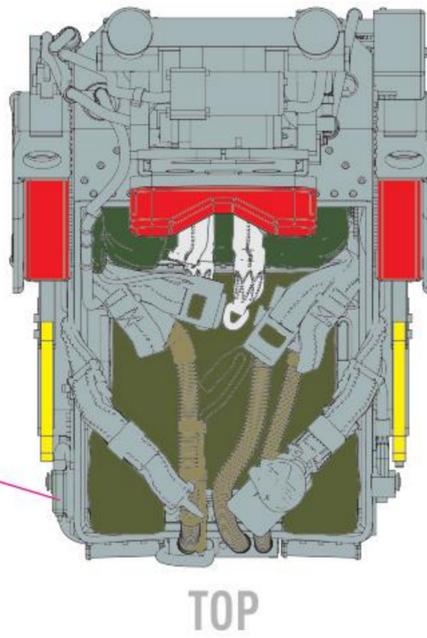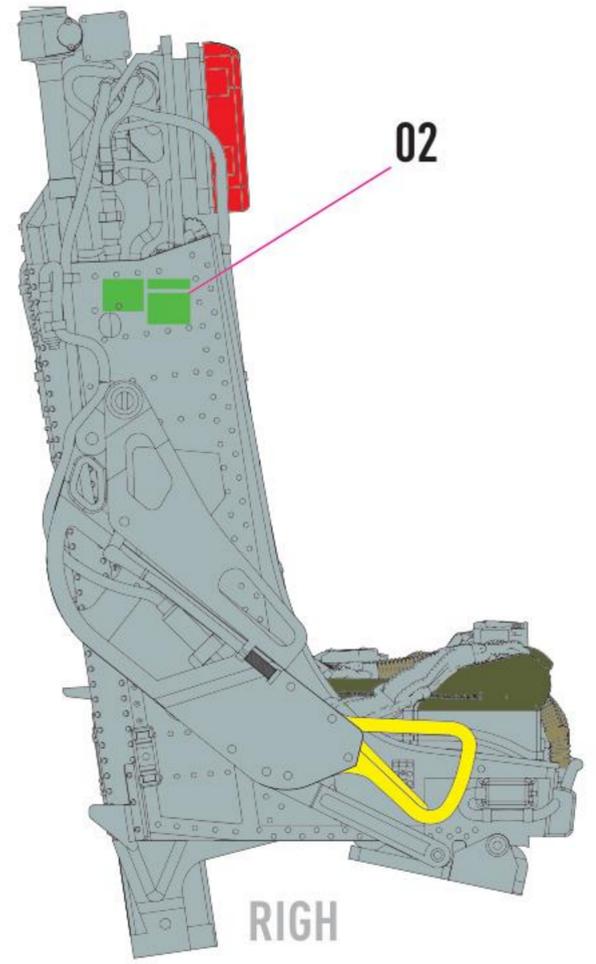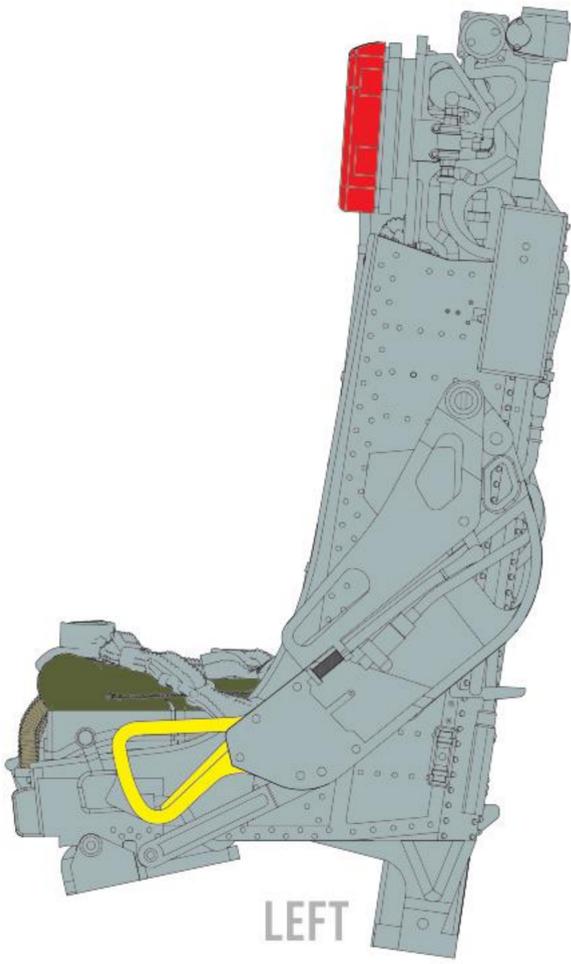

**YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE**

**RESKIT-MODELS.COM**

**General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)**

**Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)**

**Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)**