

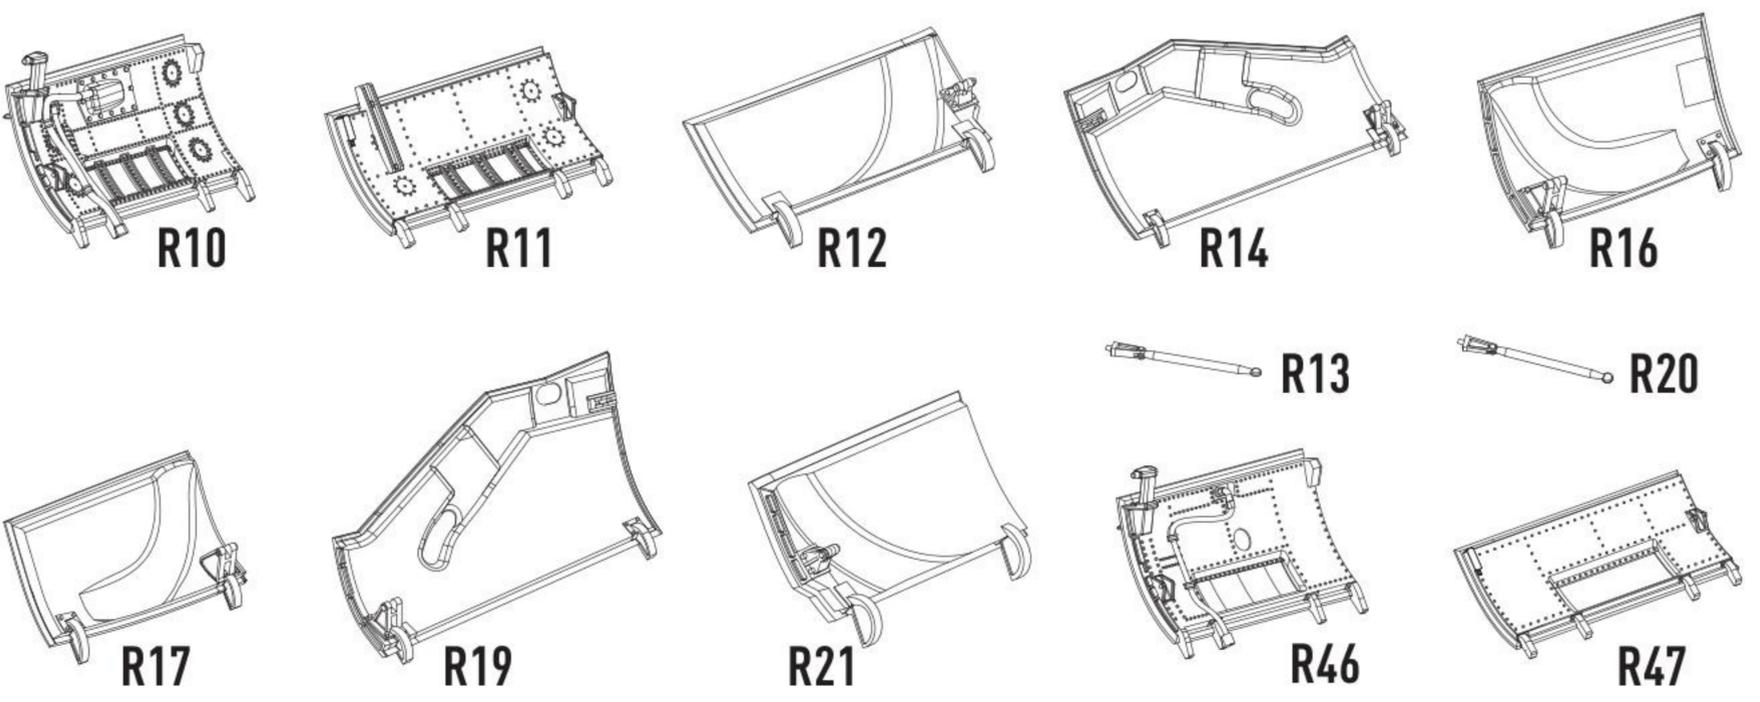
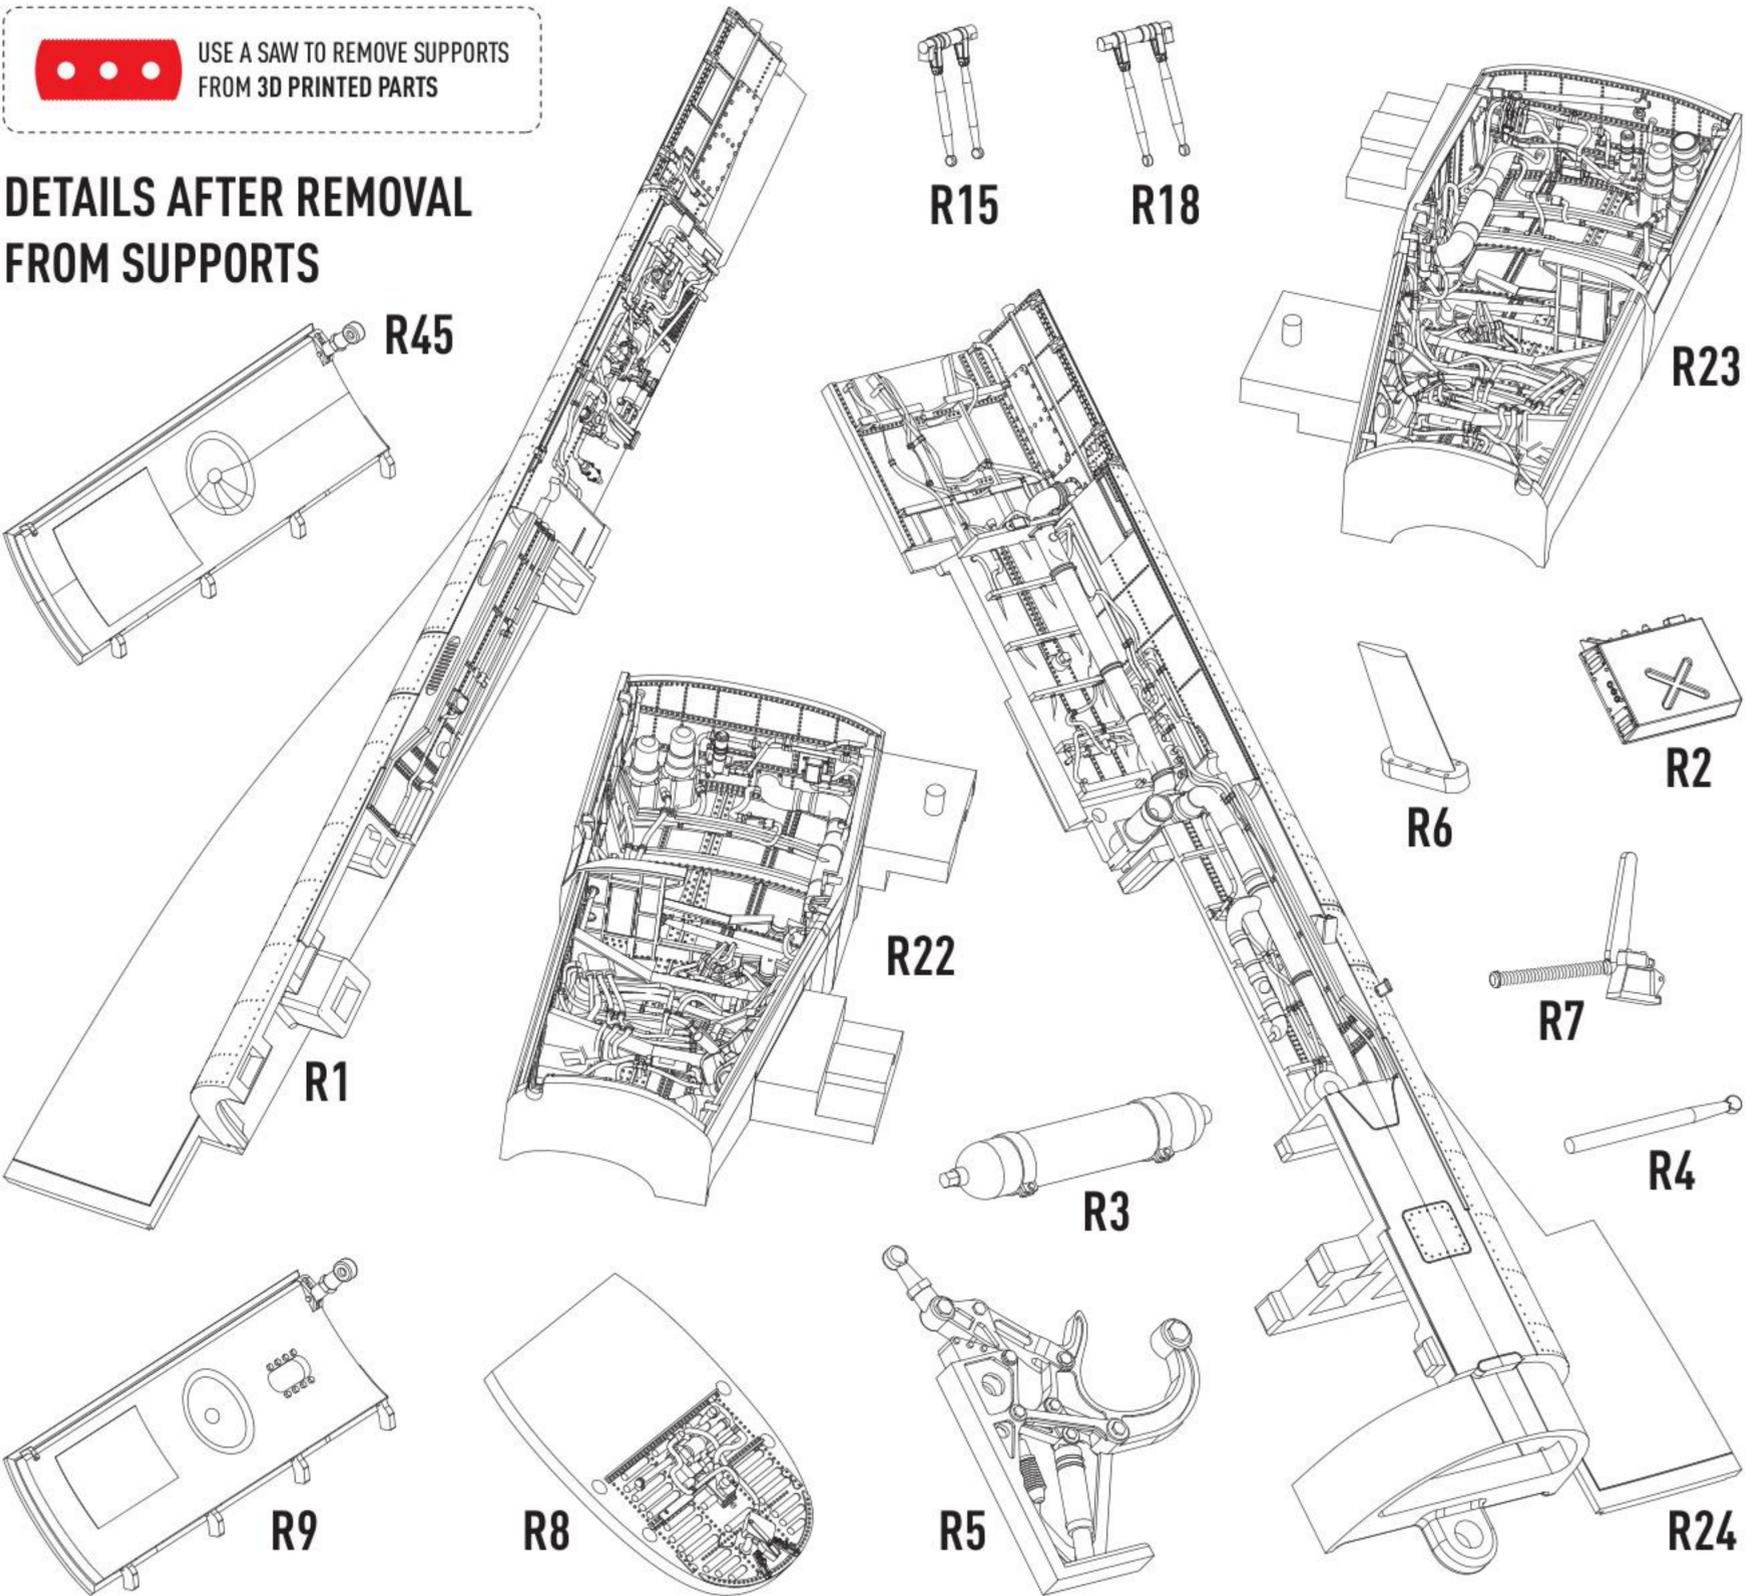



 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS

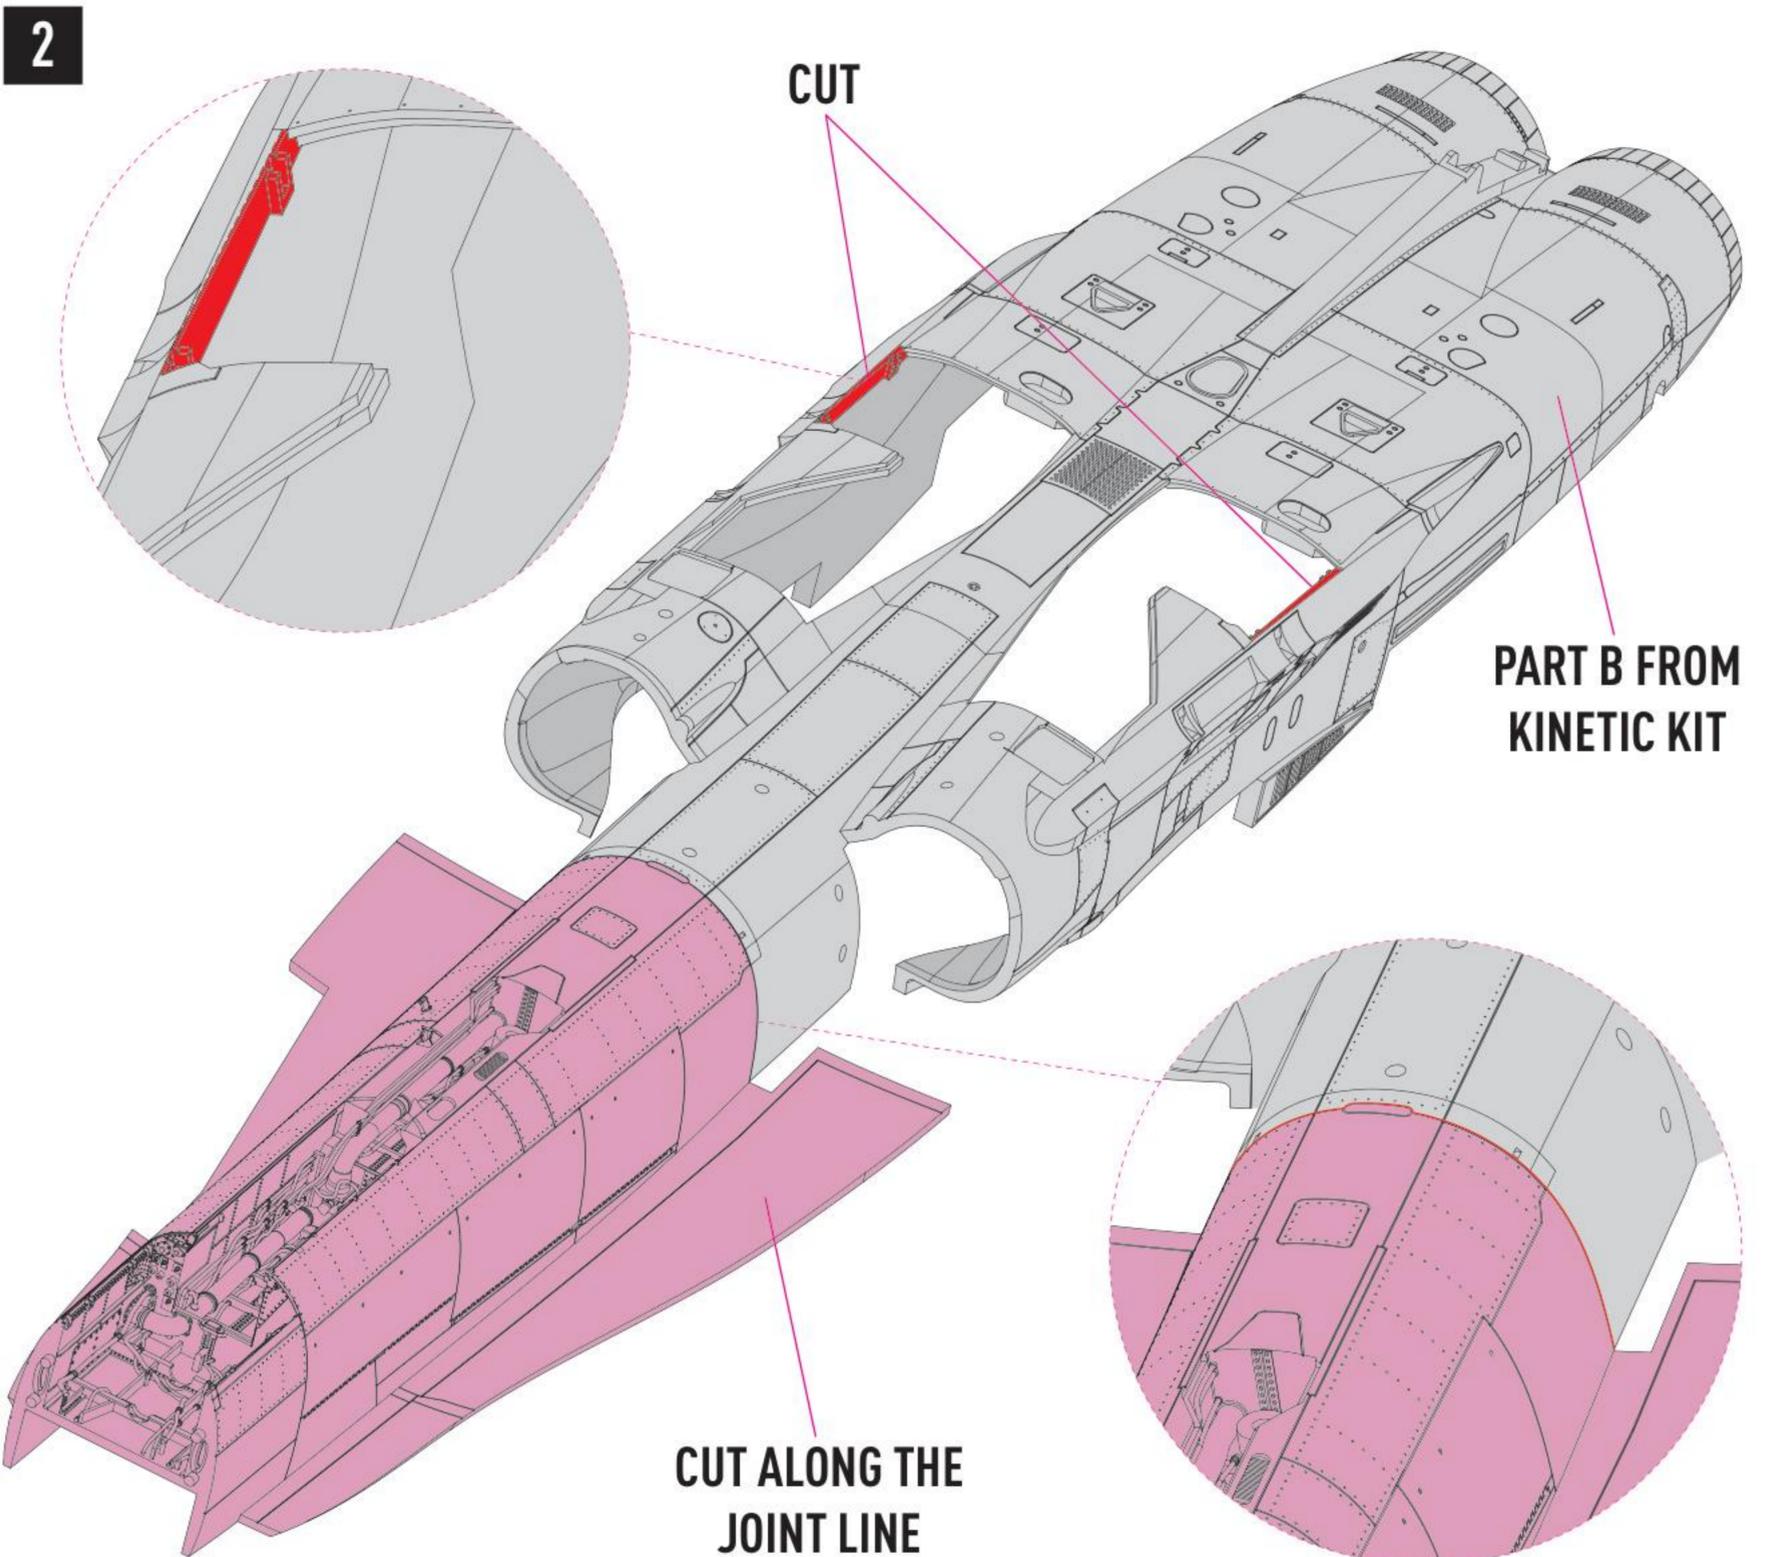



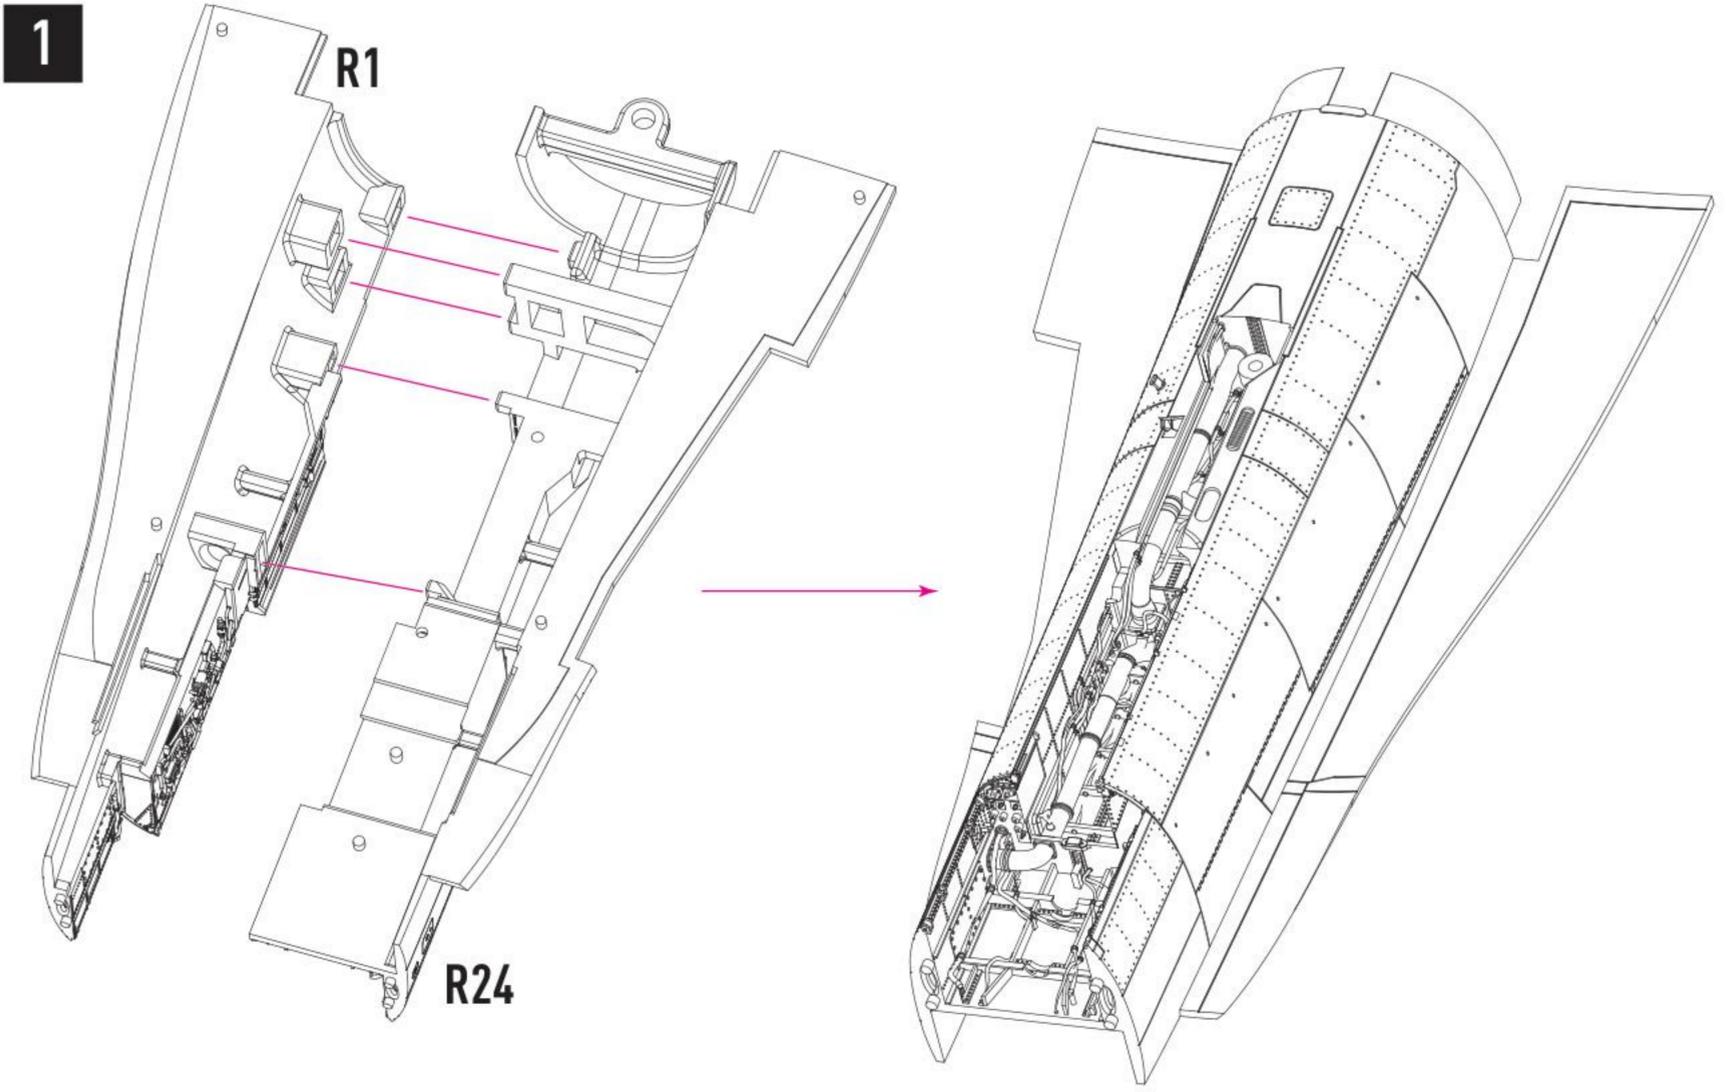


3

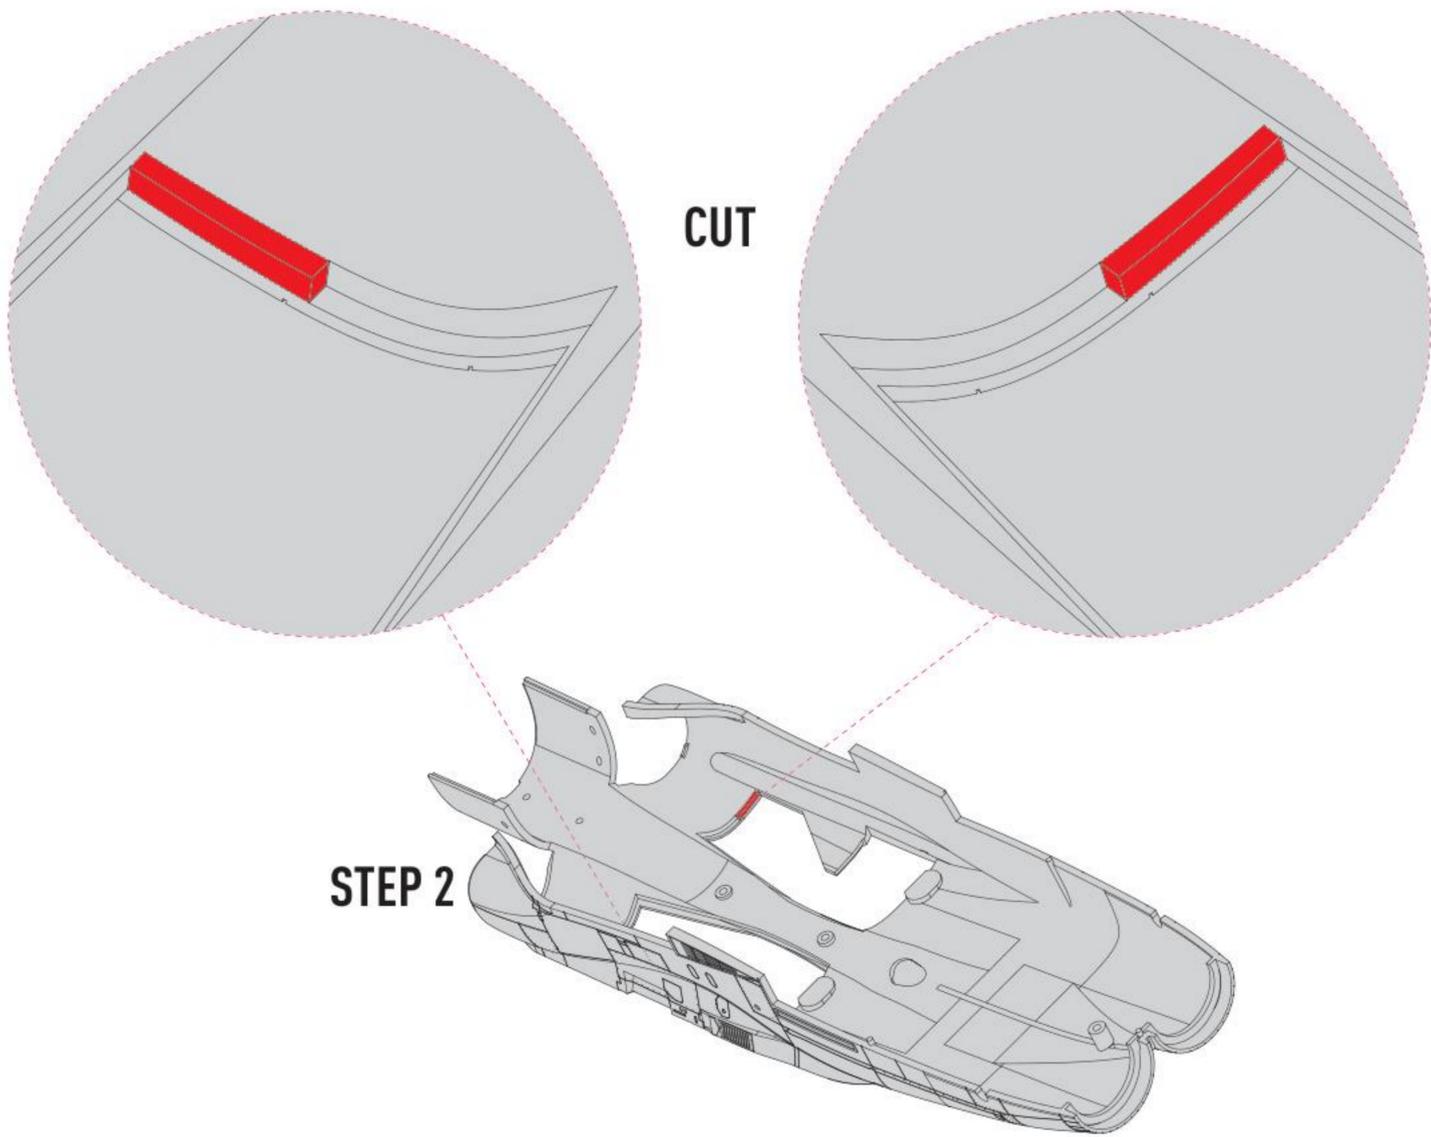


4

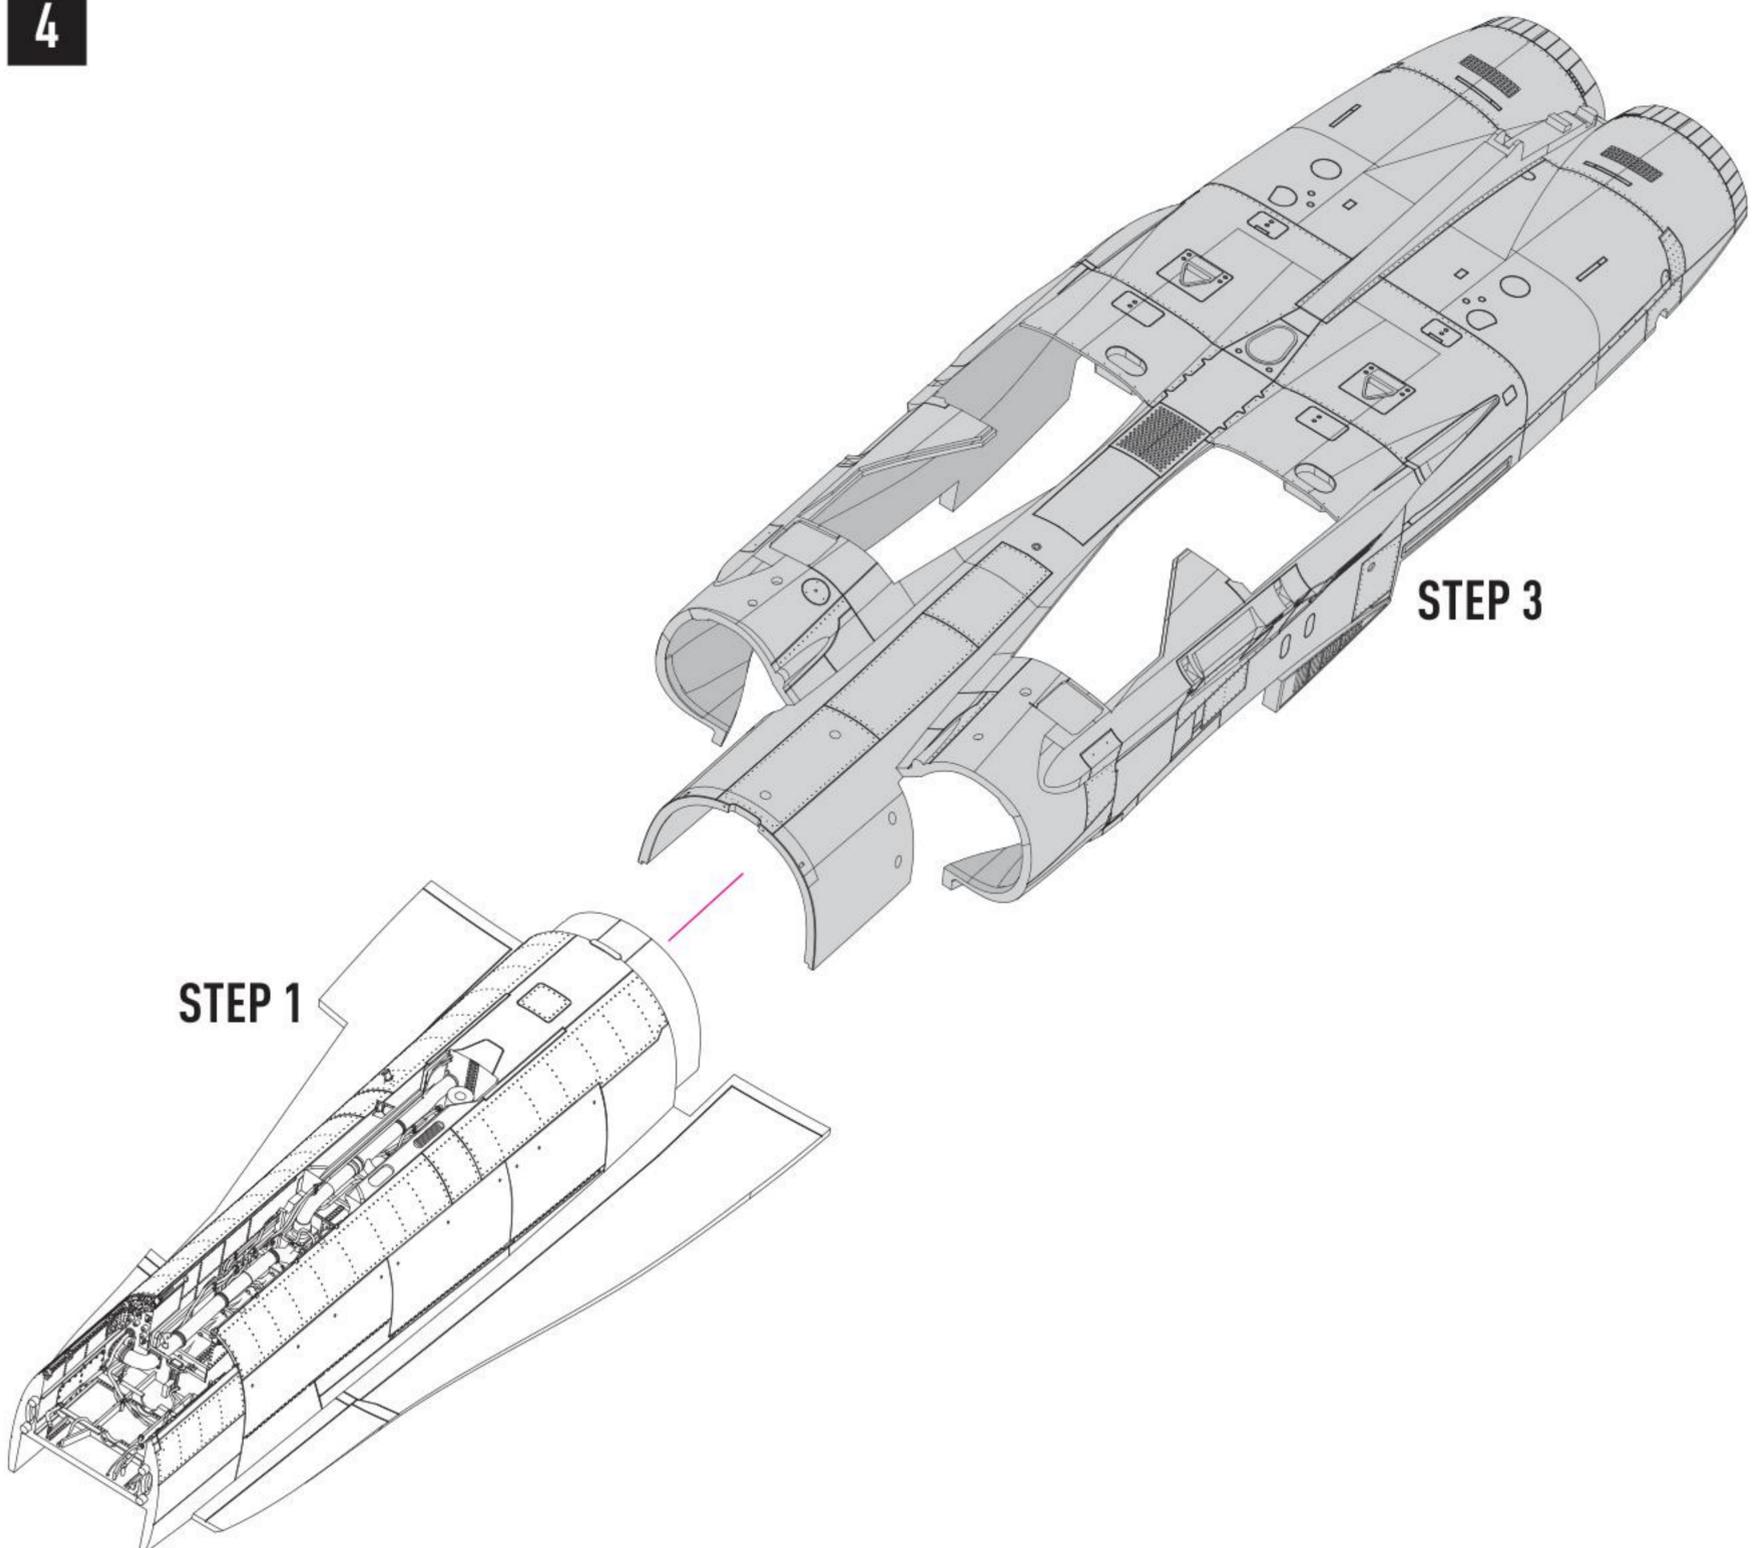


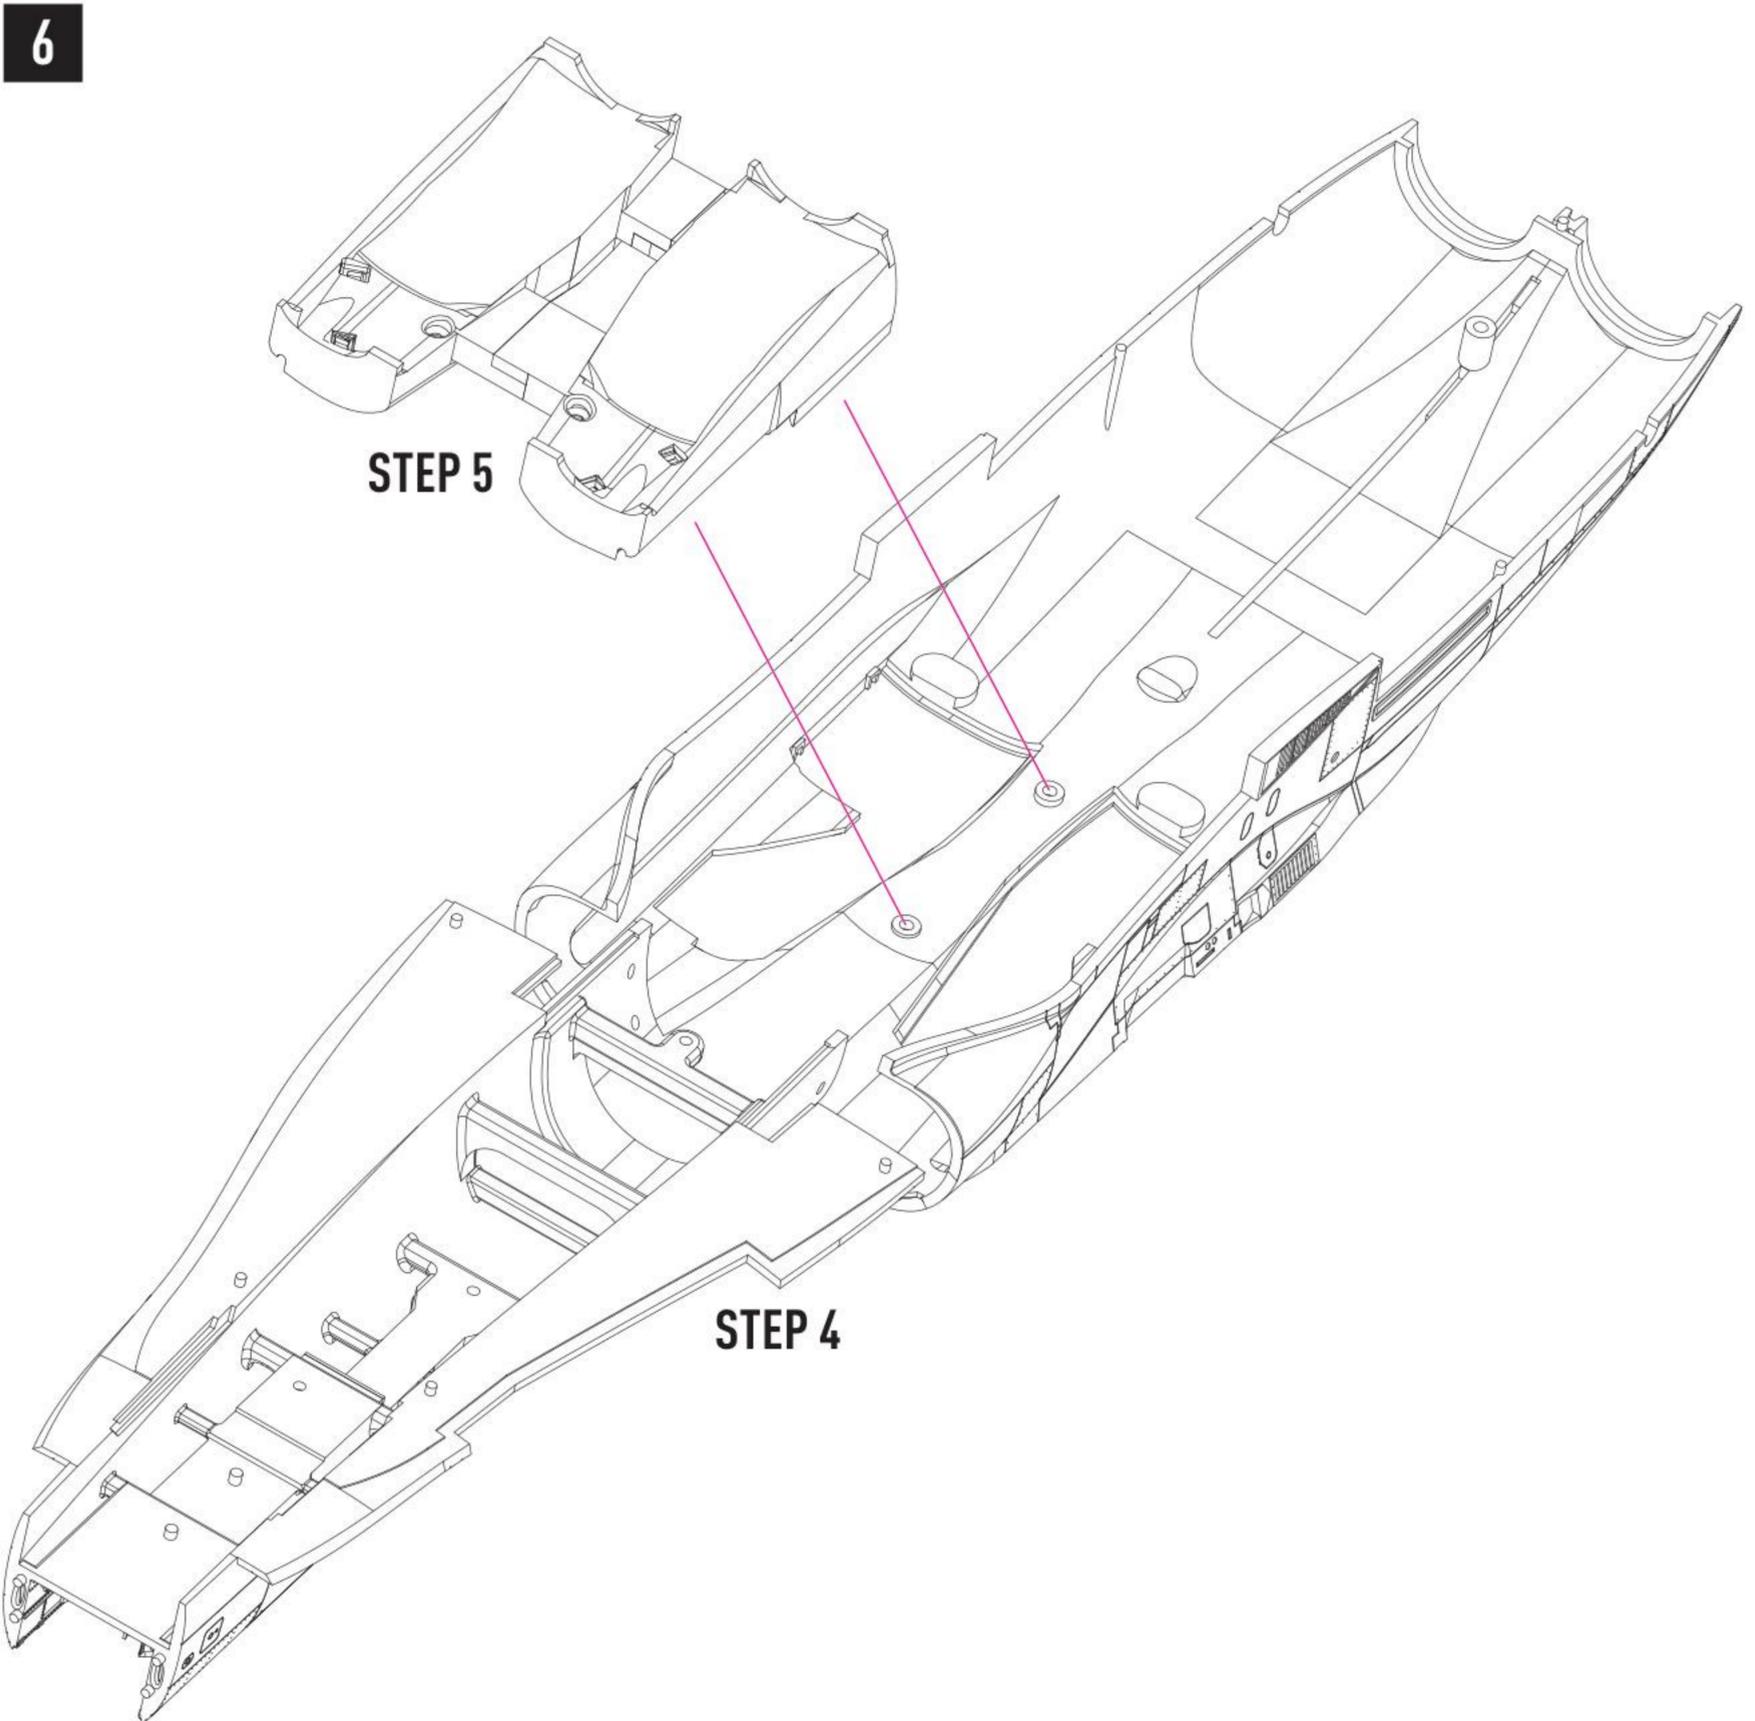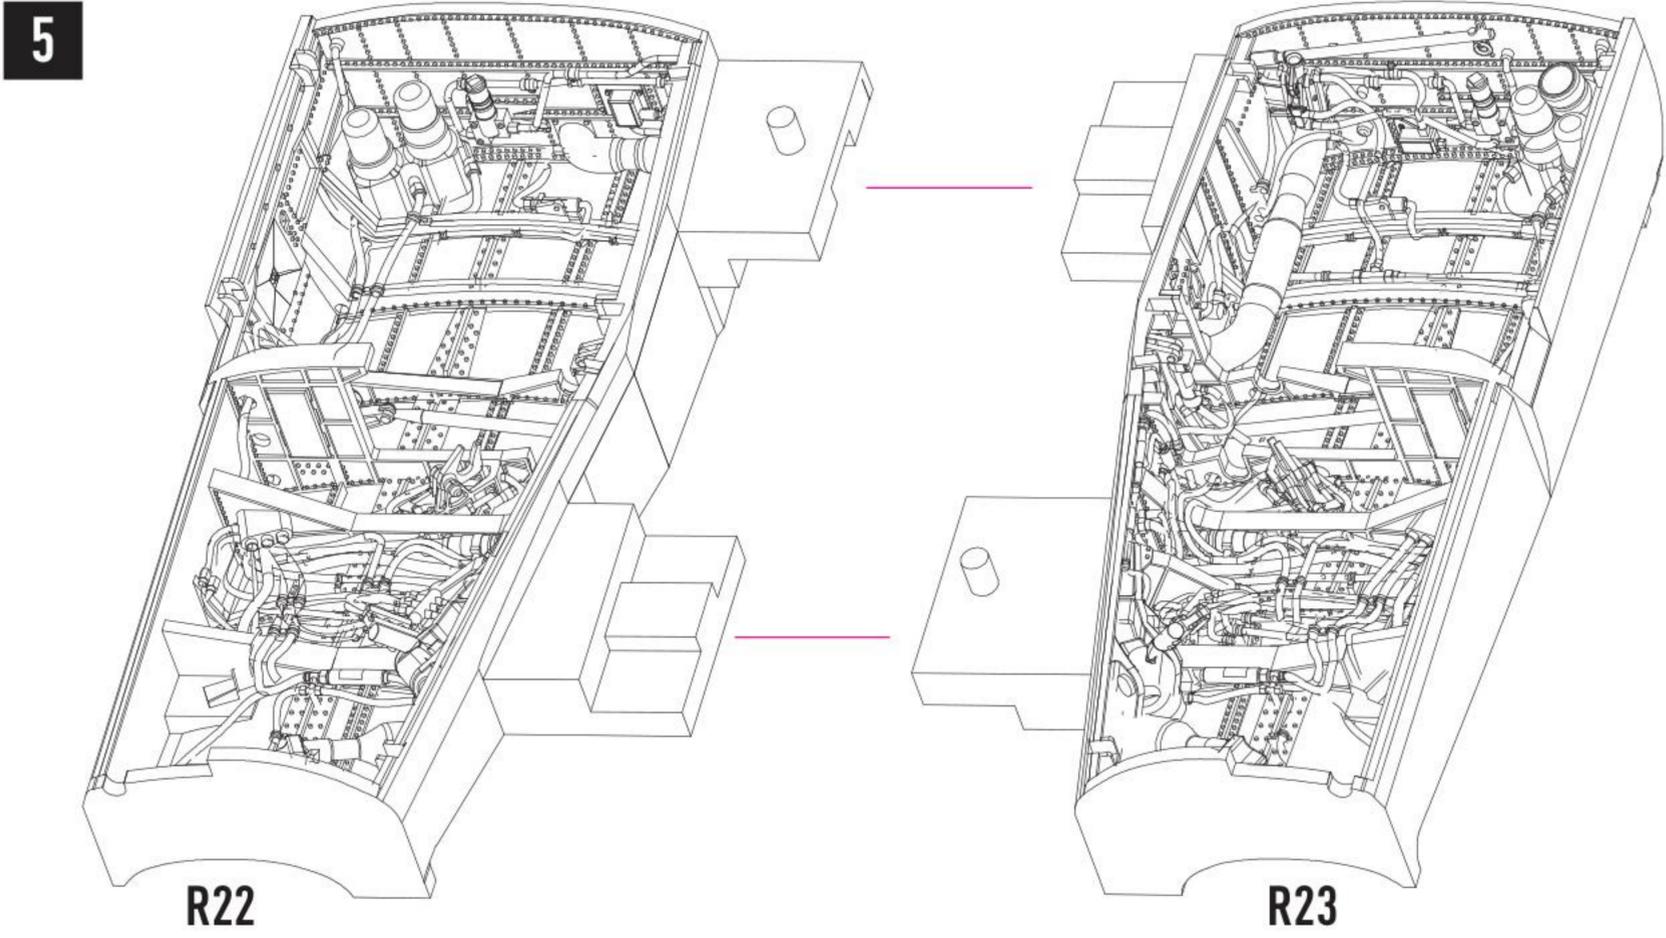


7

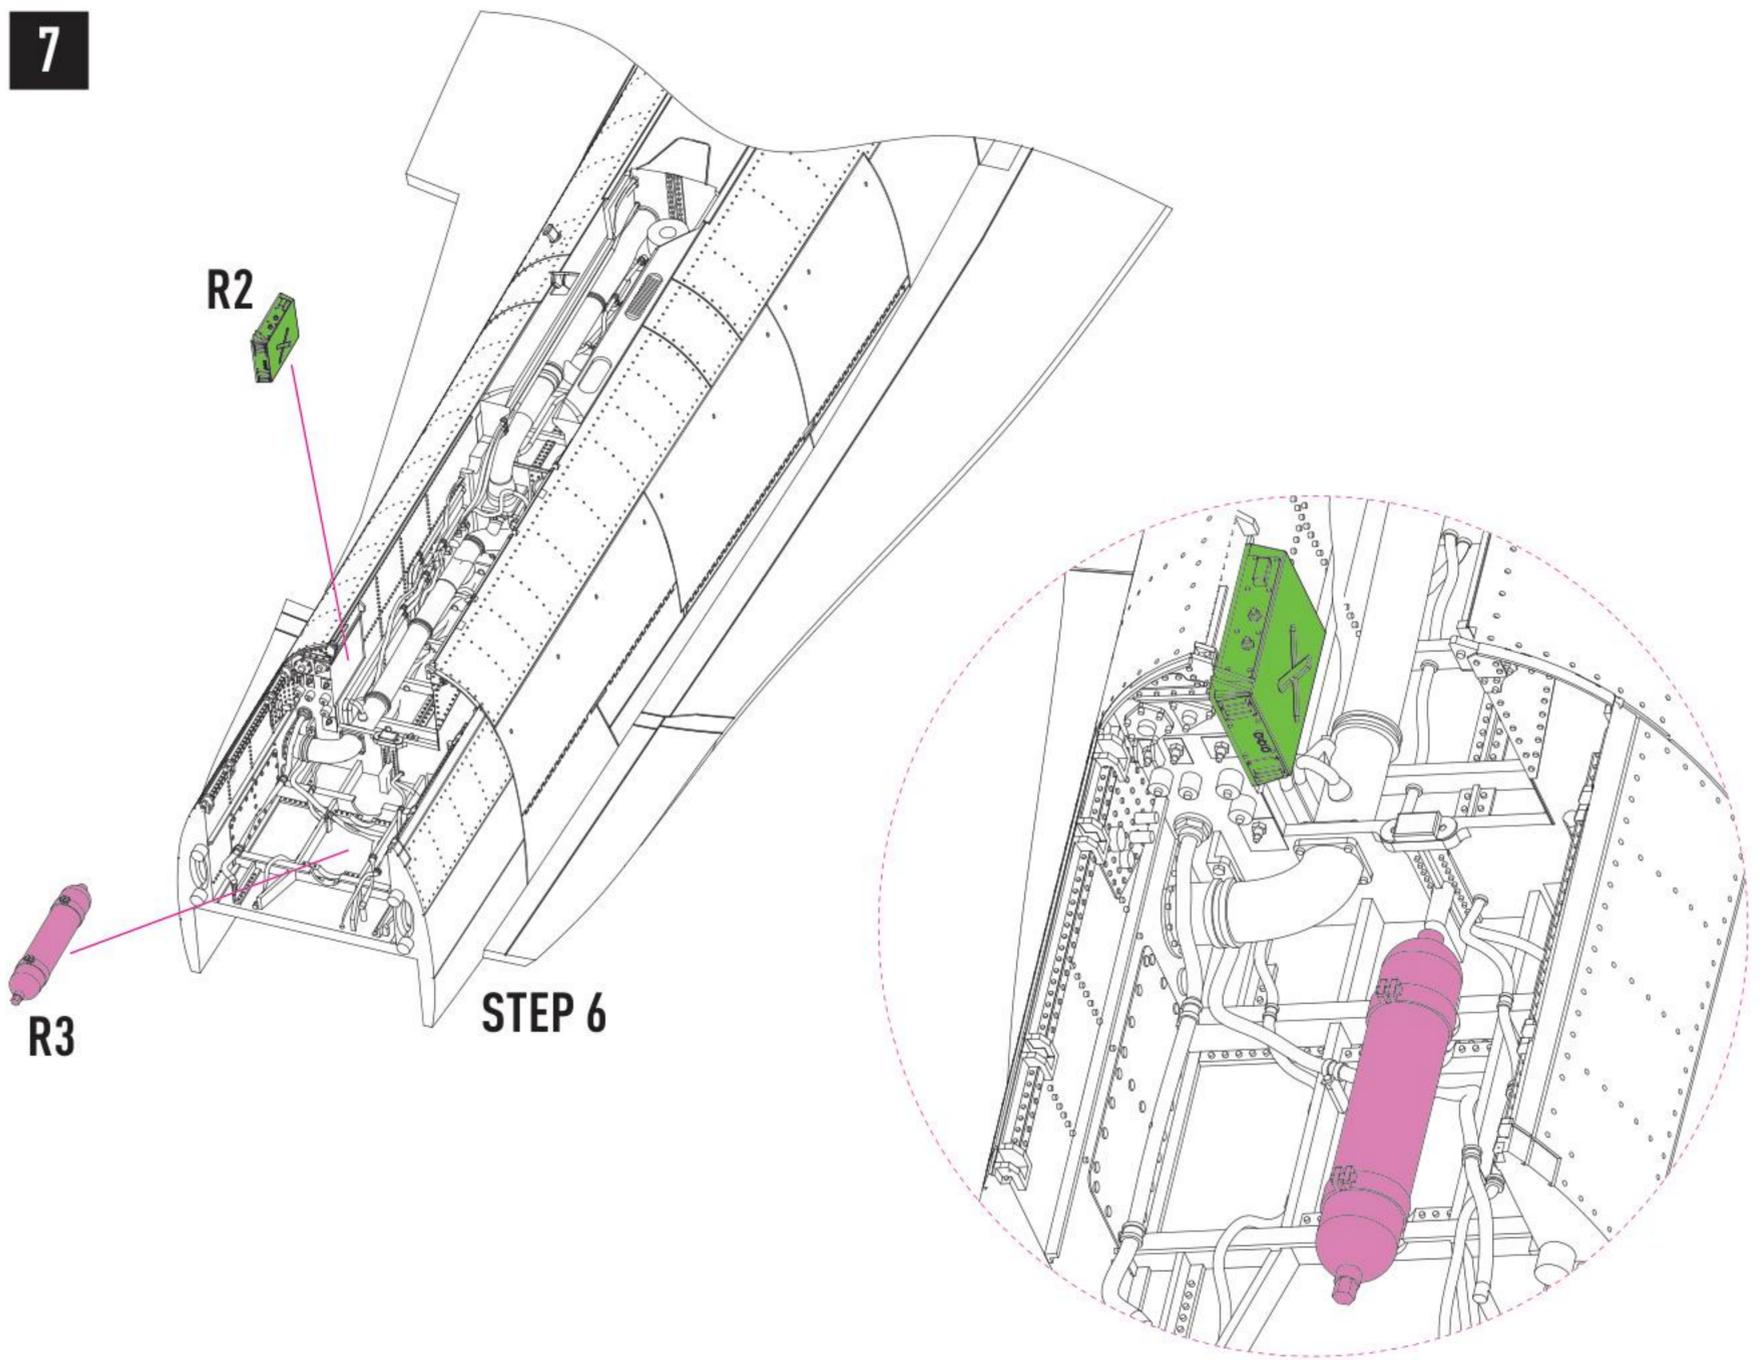


8

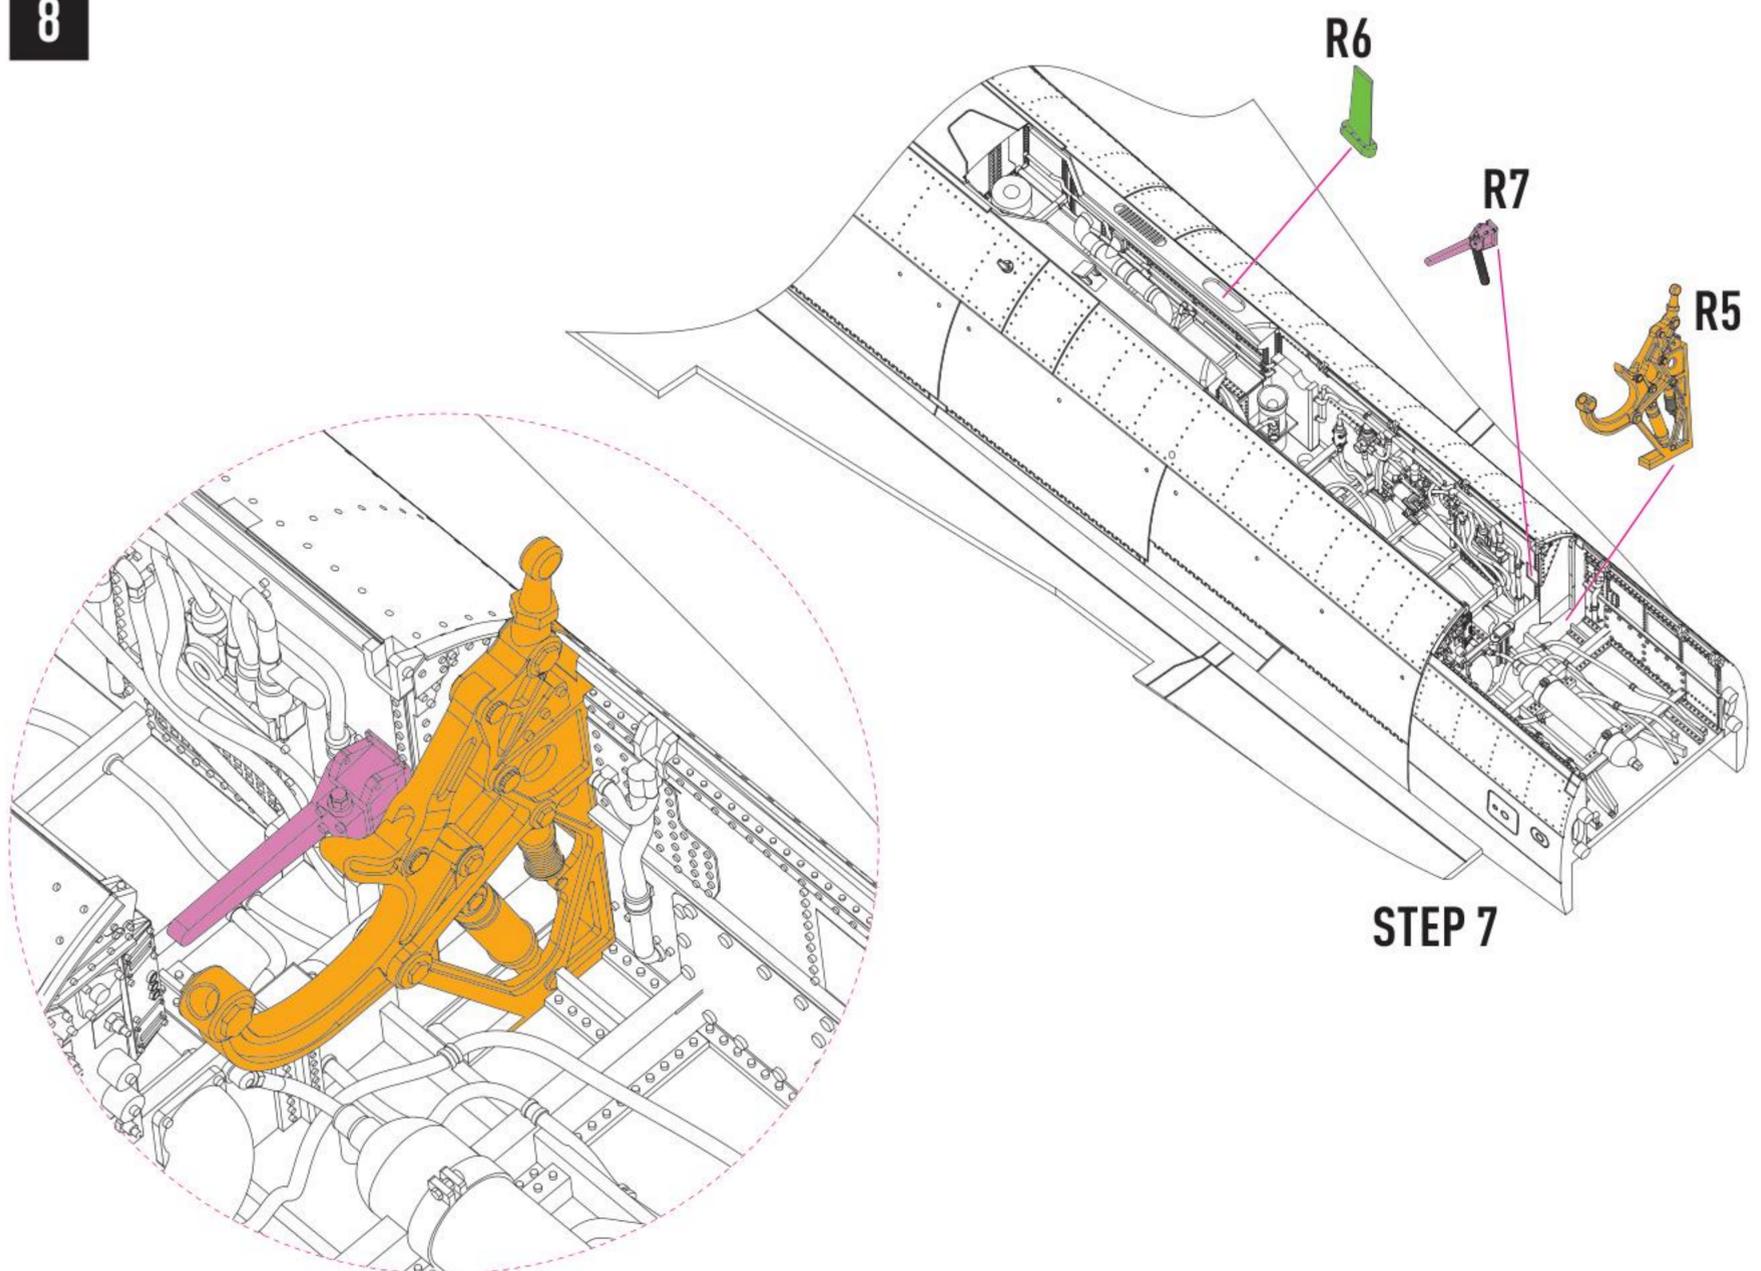


9

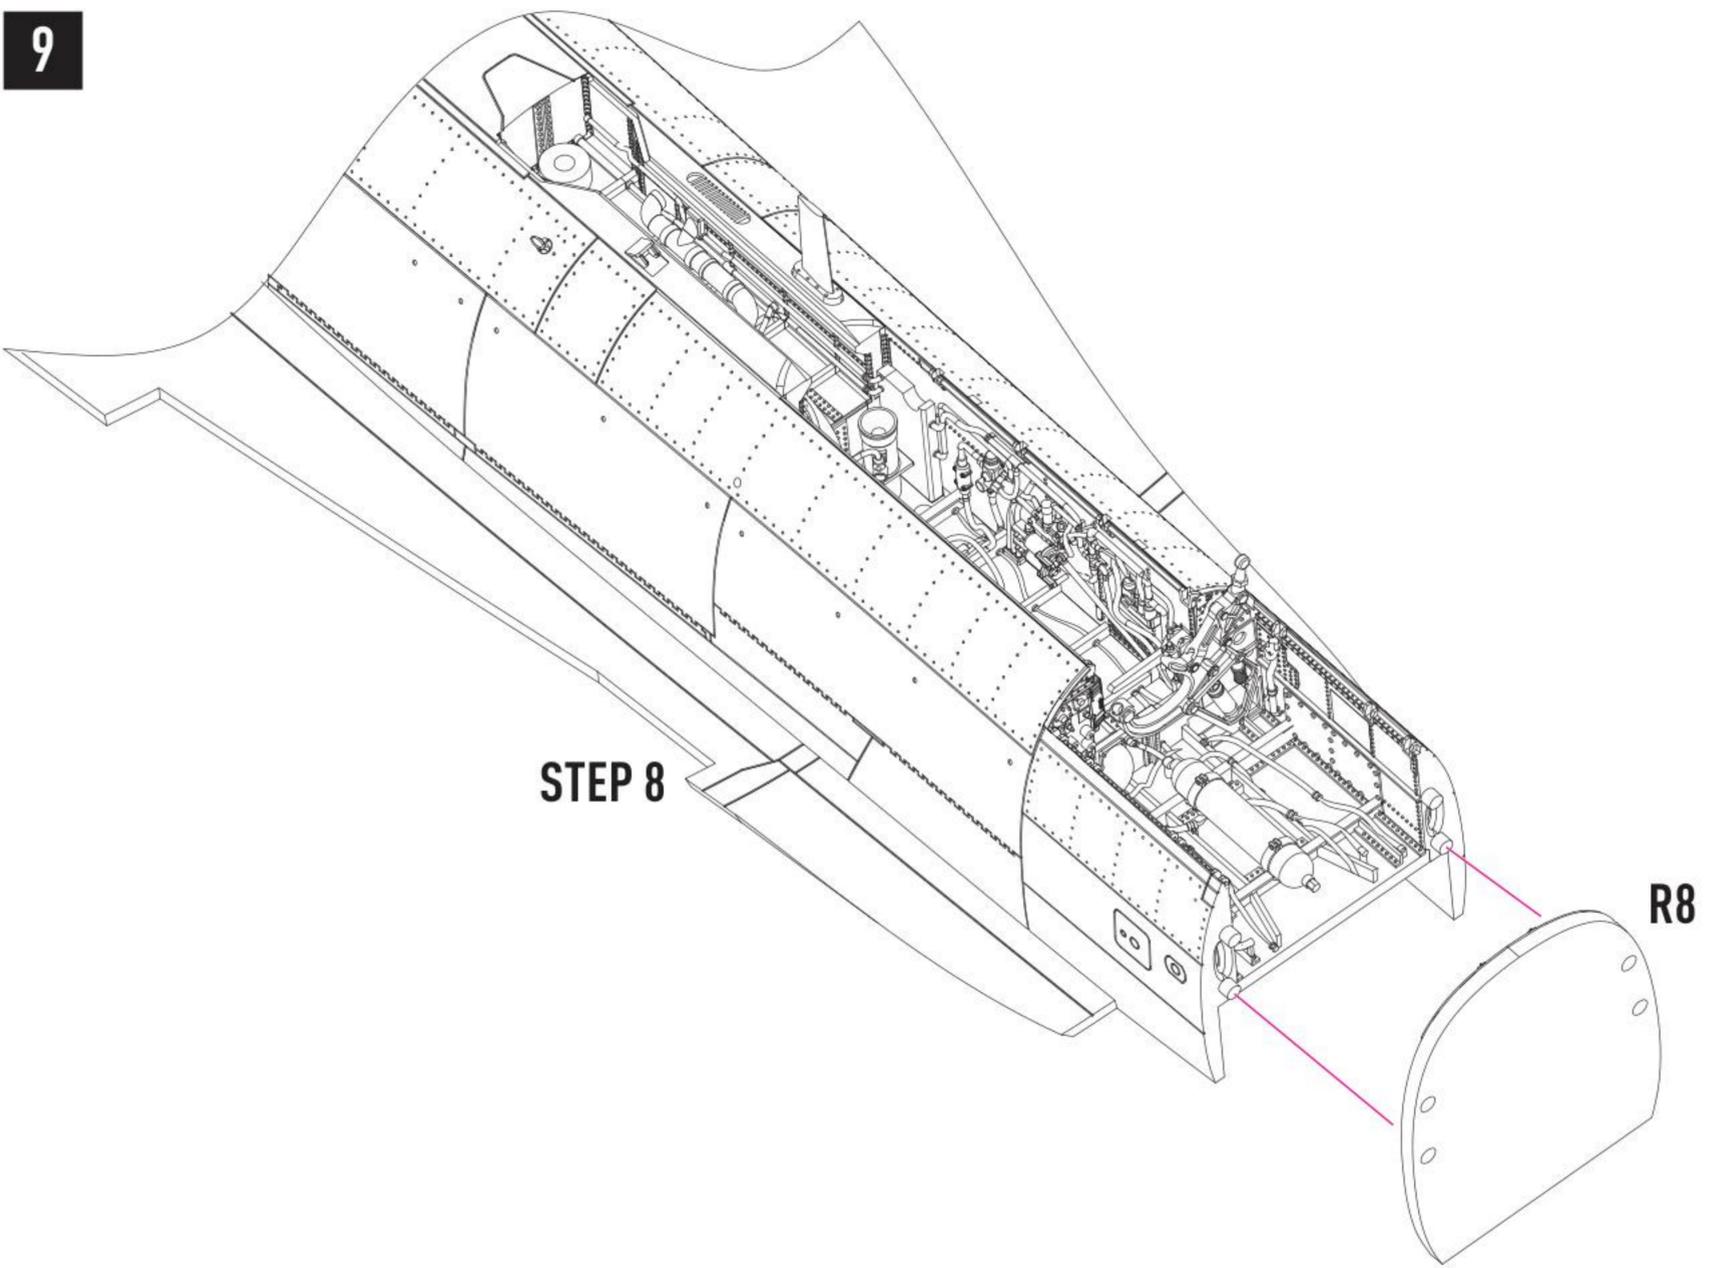


10 USE PARTS R45 AND R46 FOR CF-18 MODIFICATION ONLY

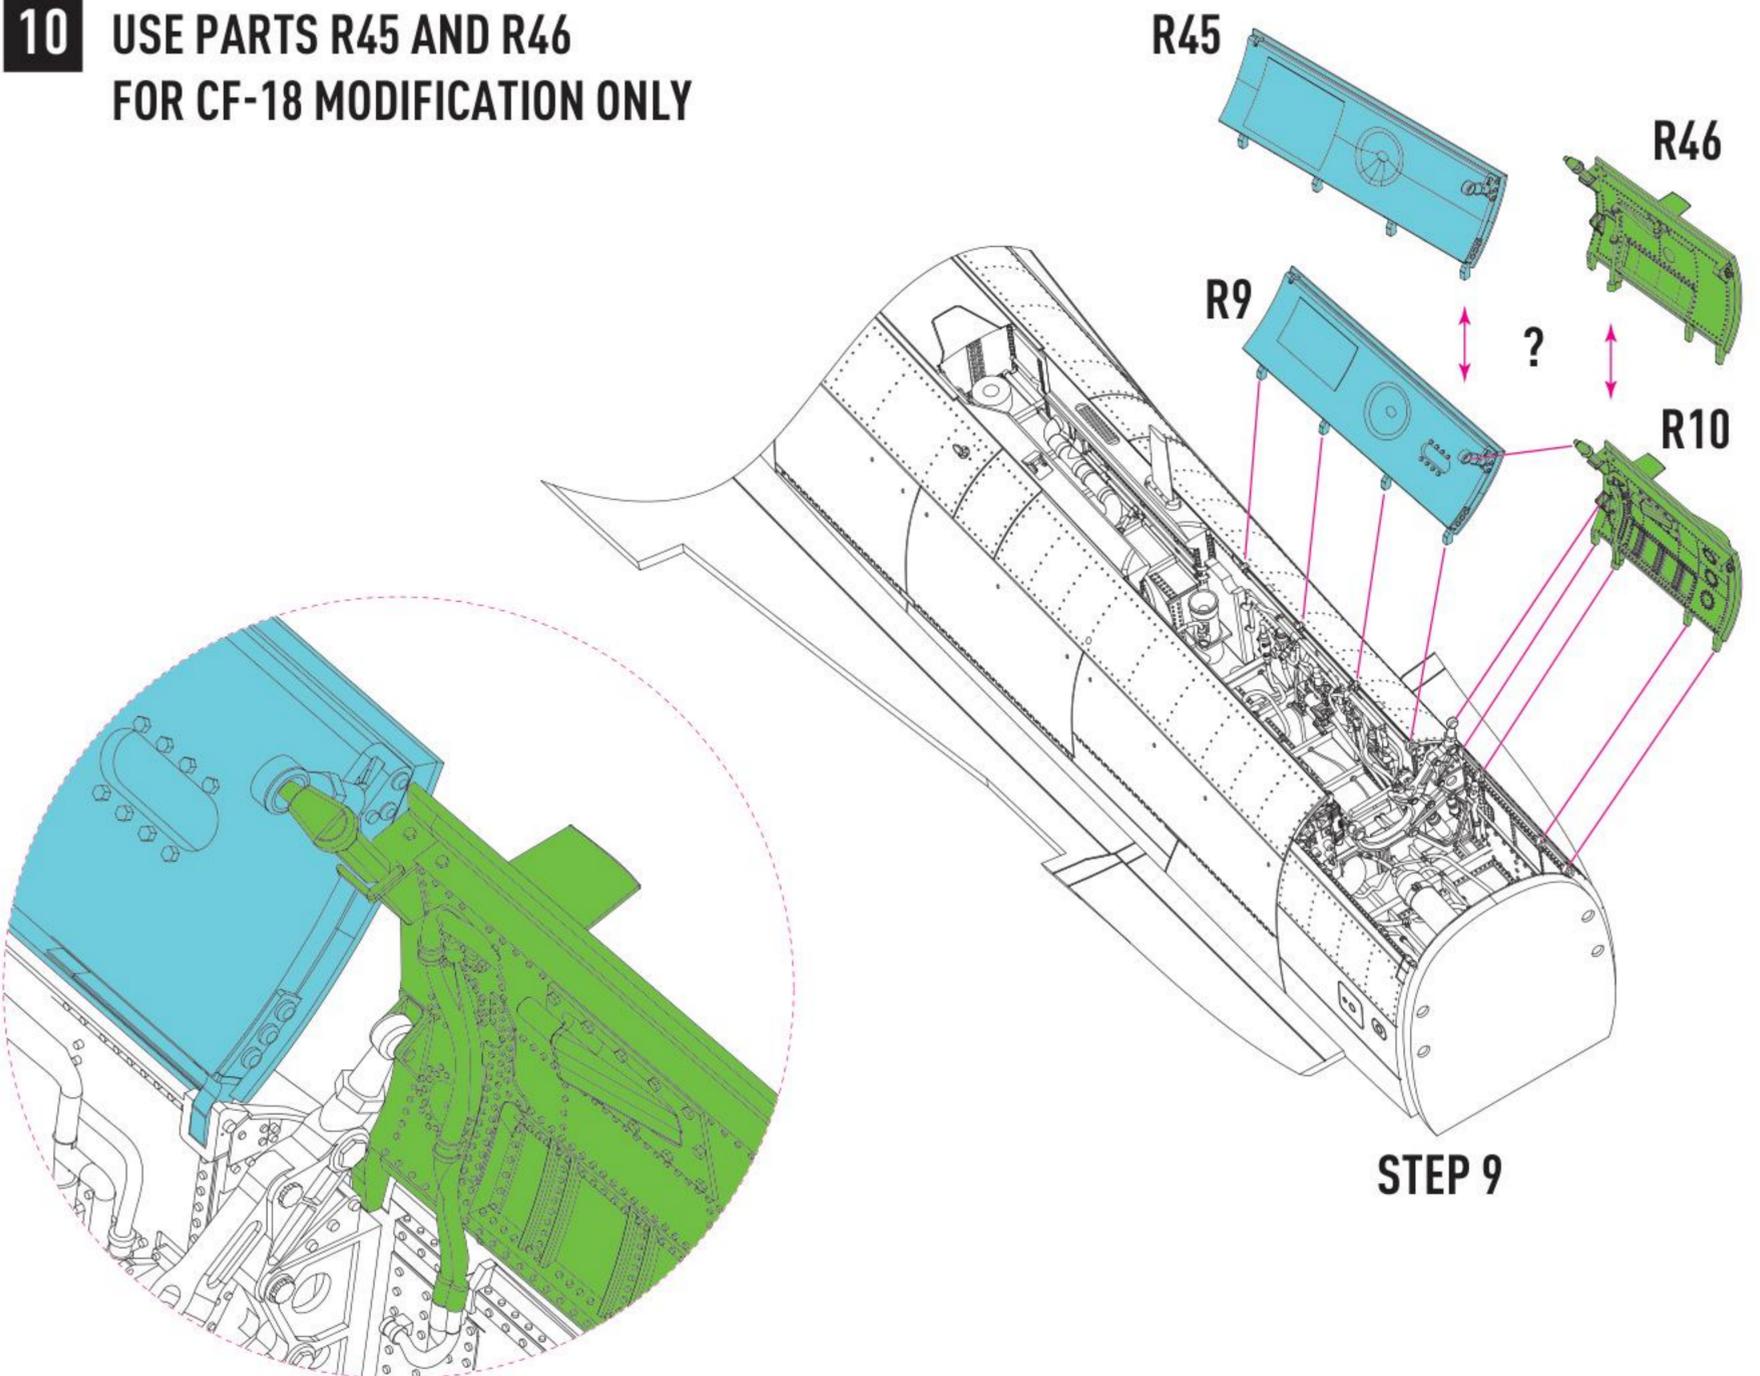



11

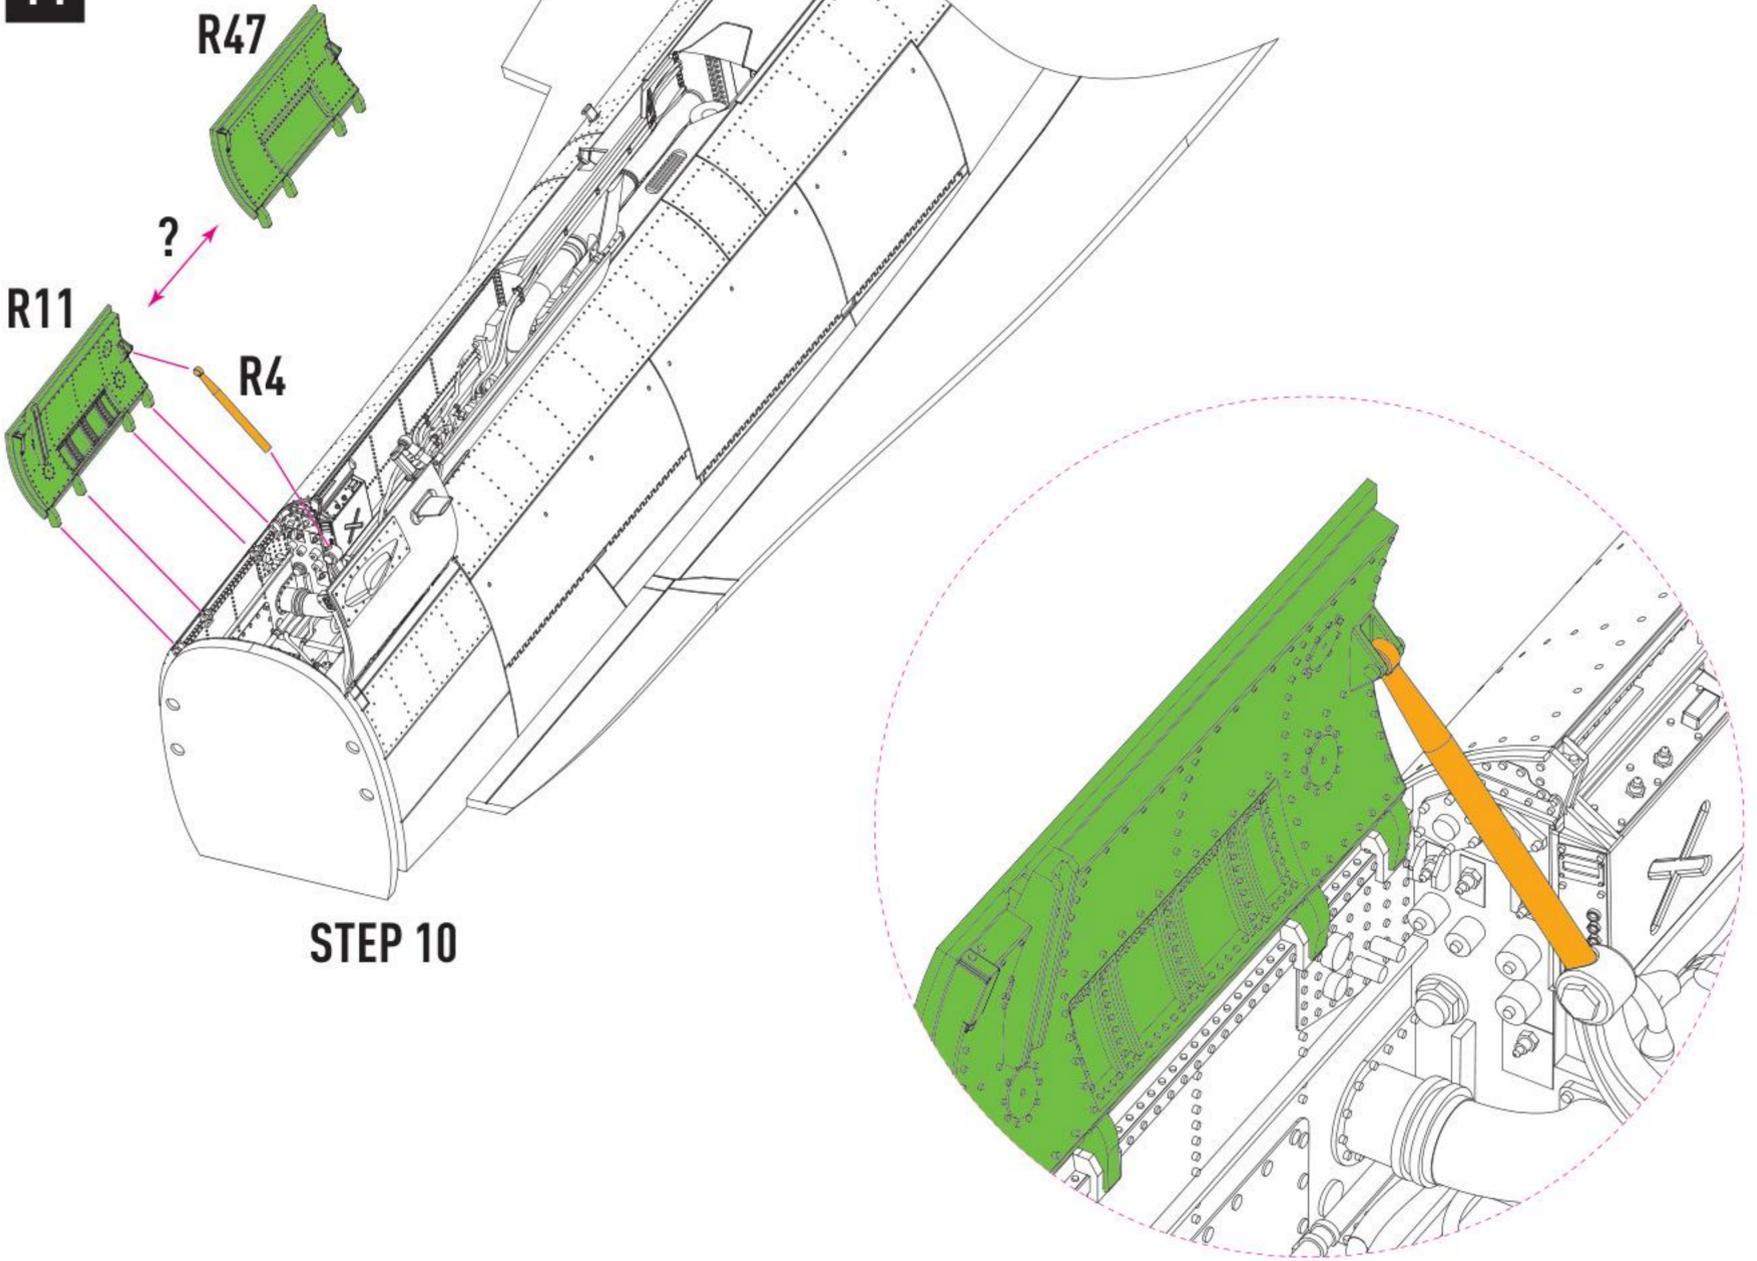



12

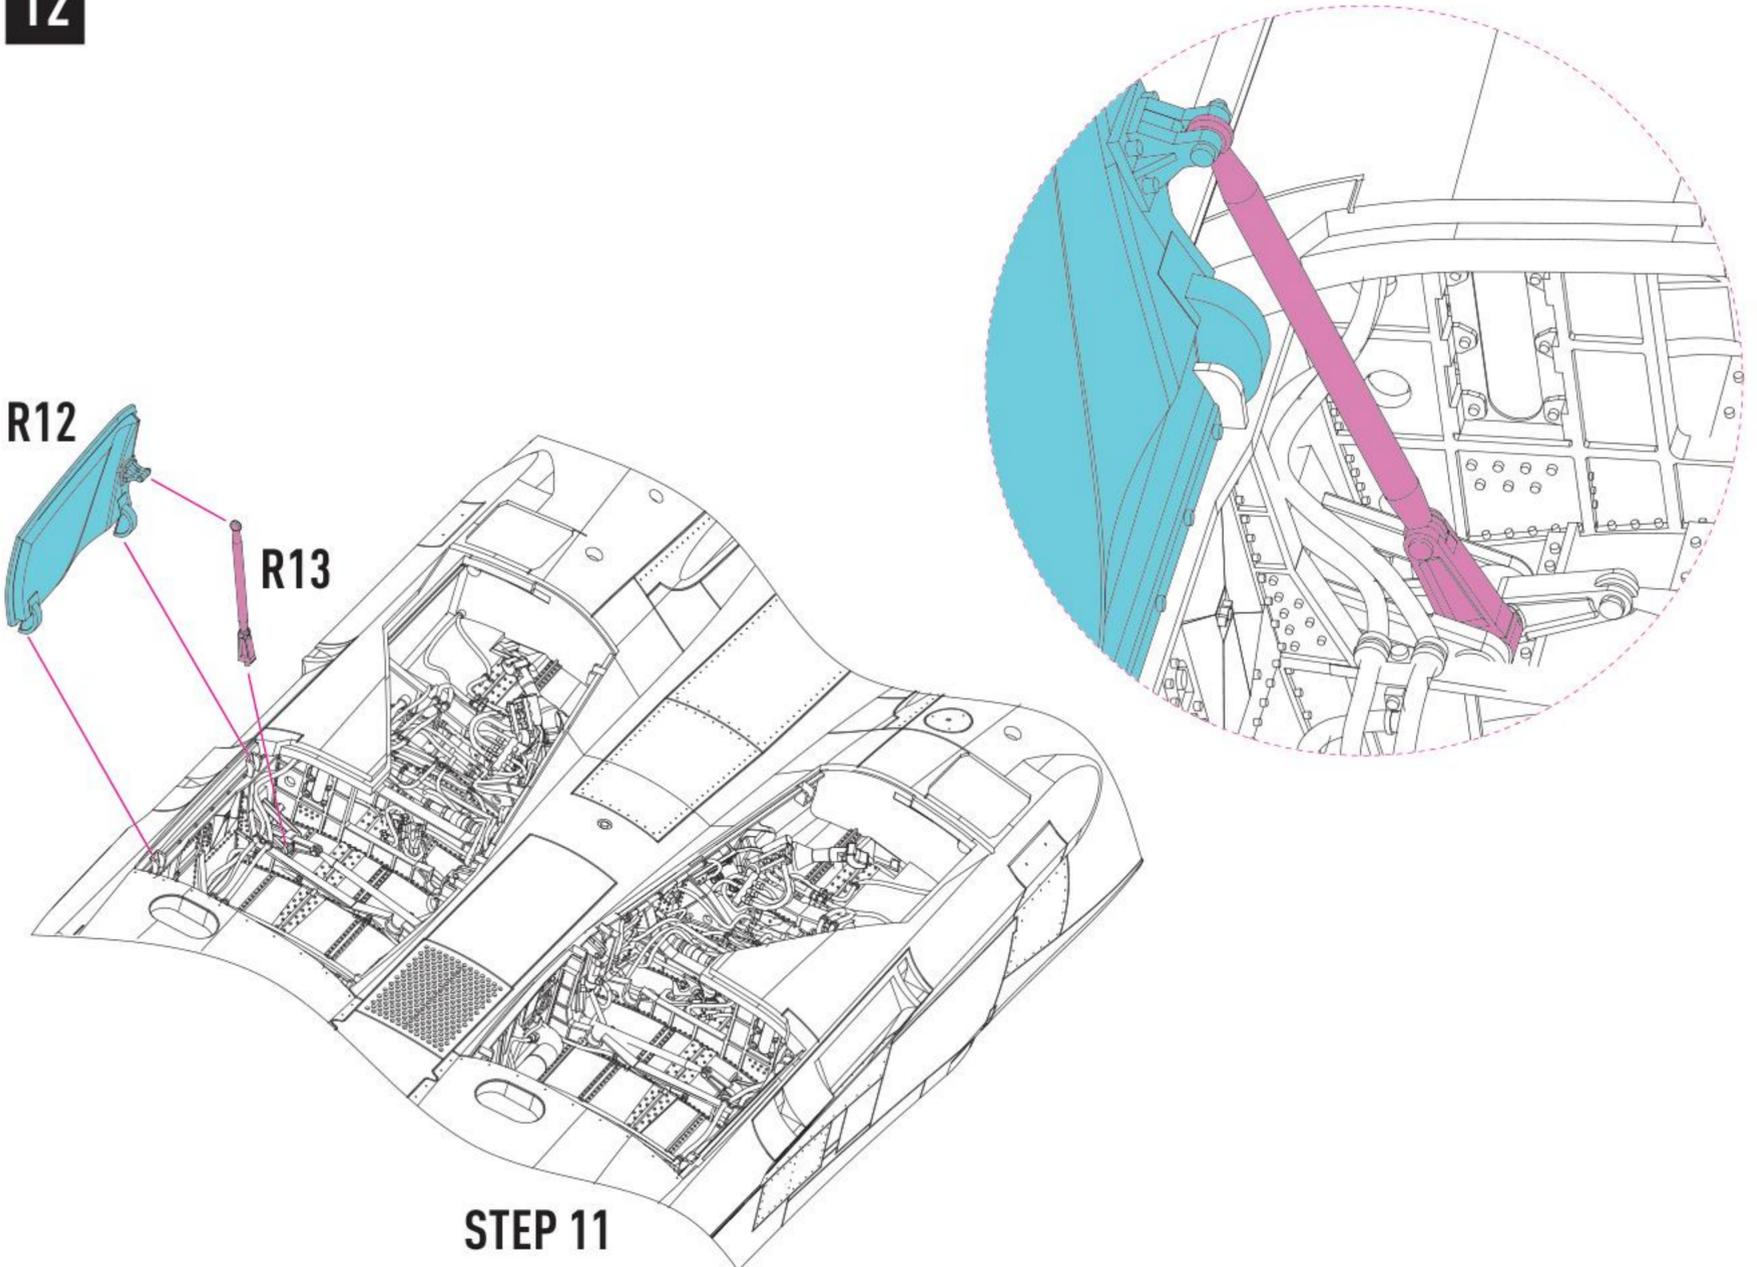


13

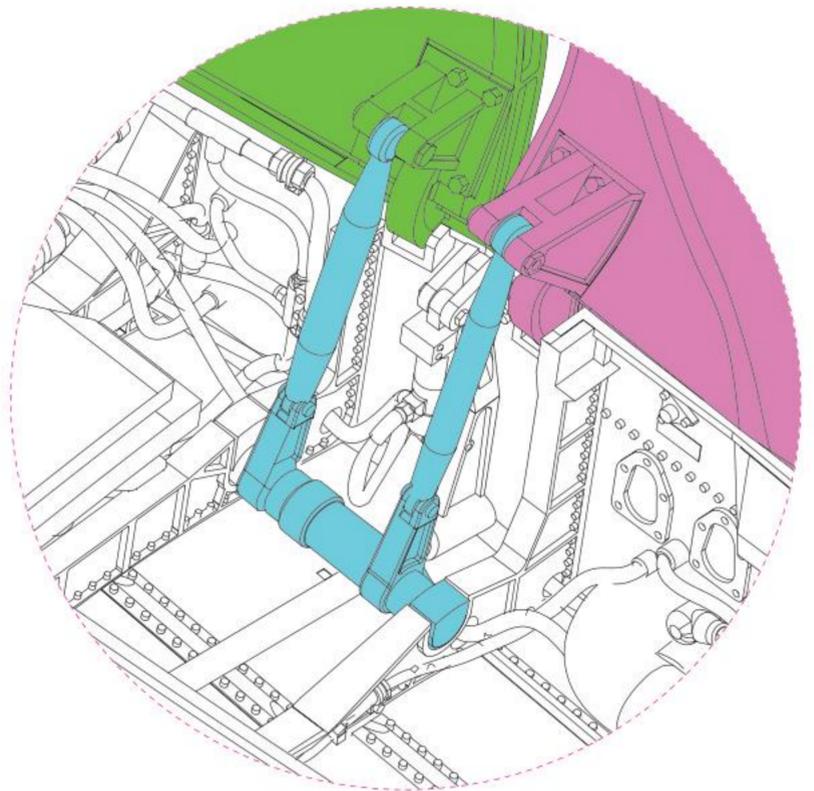
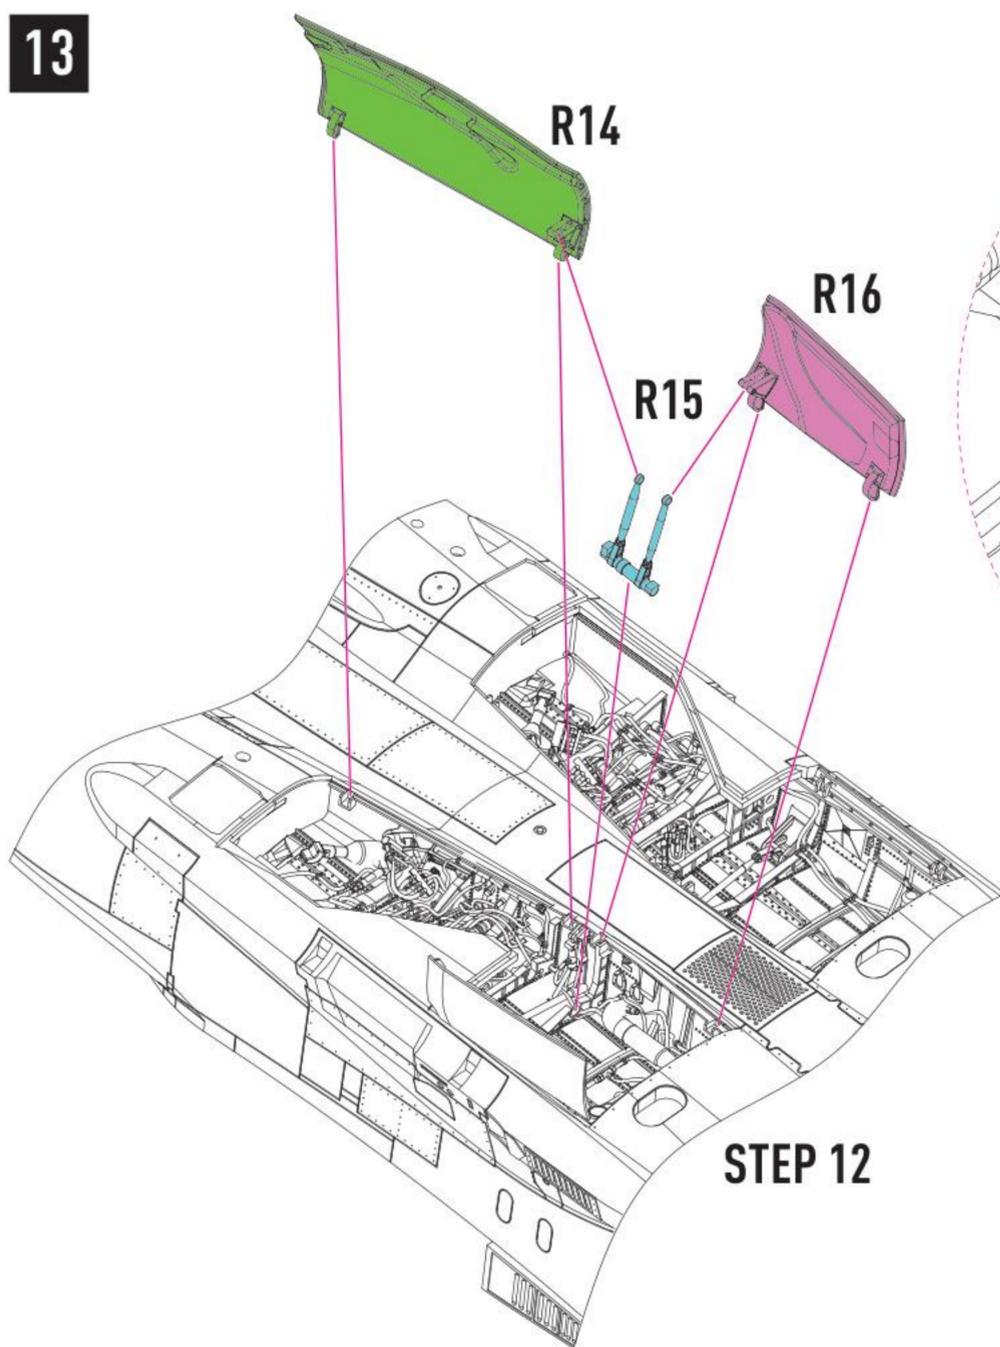


14

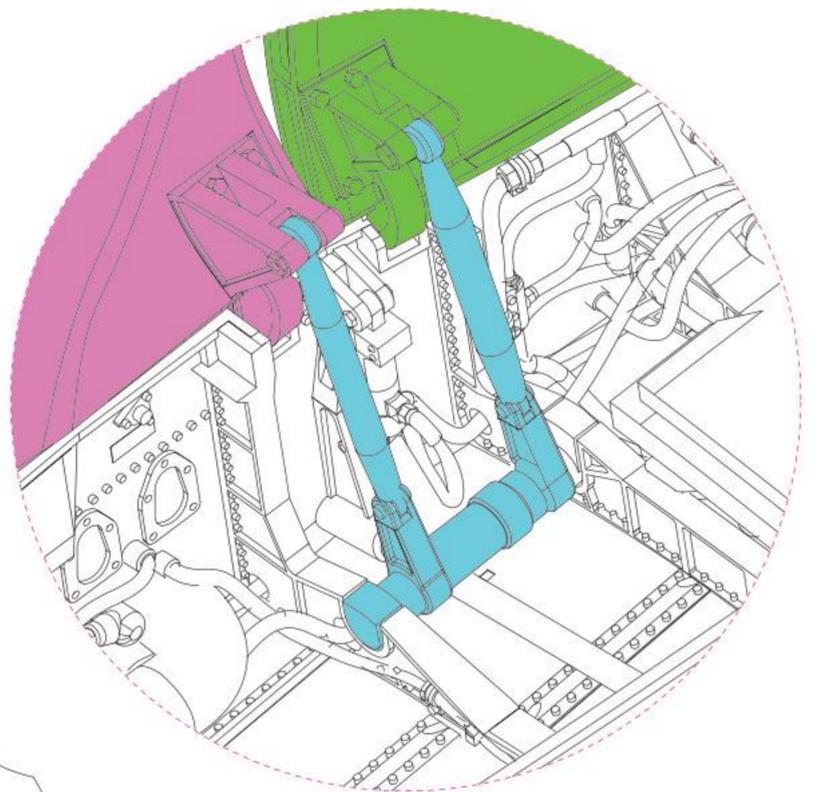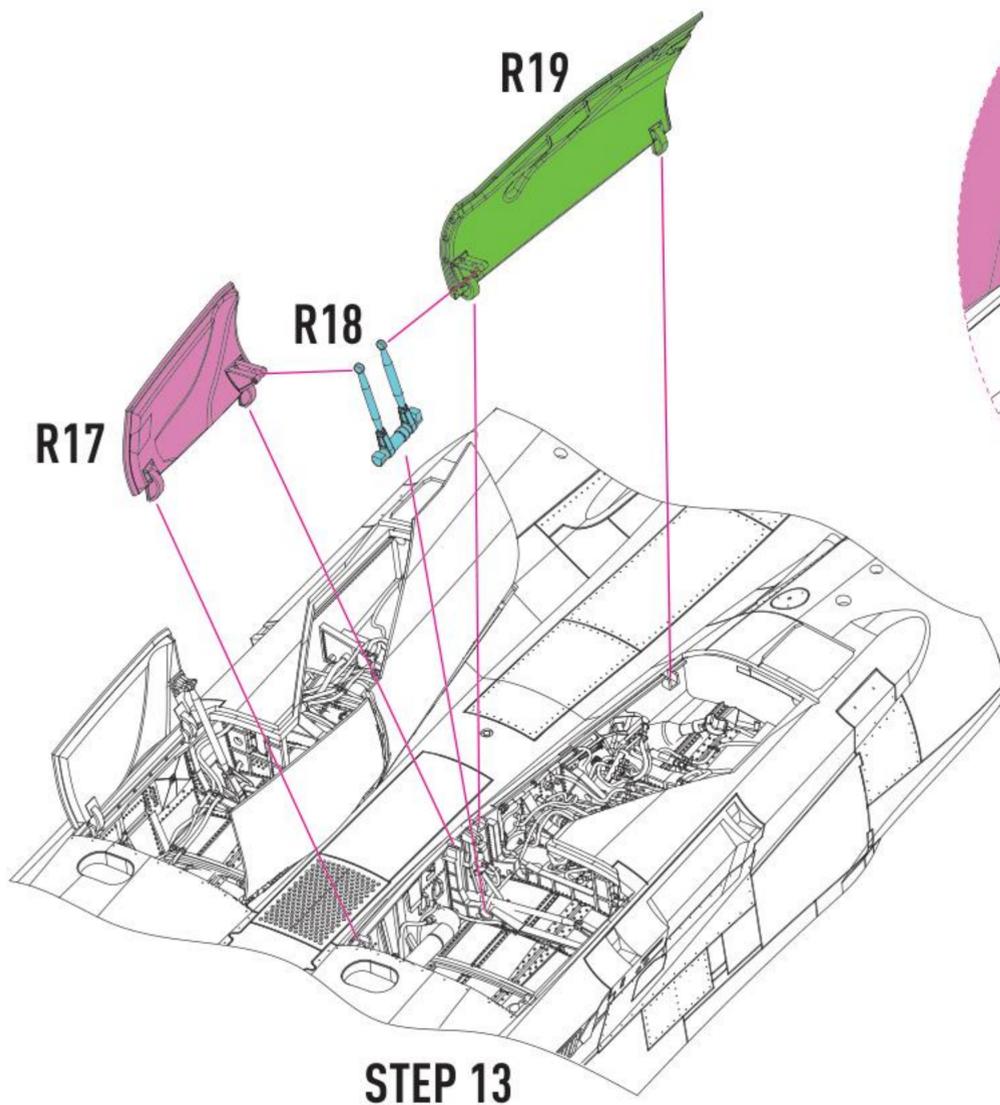

STEP 14

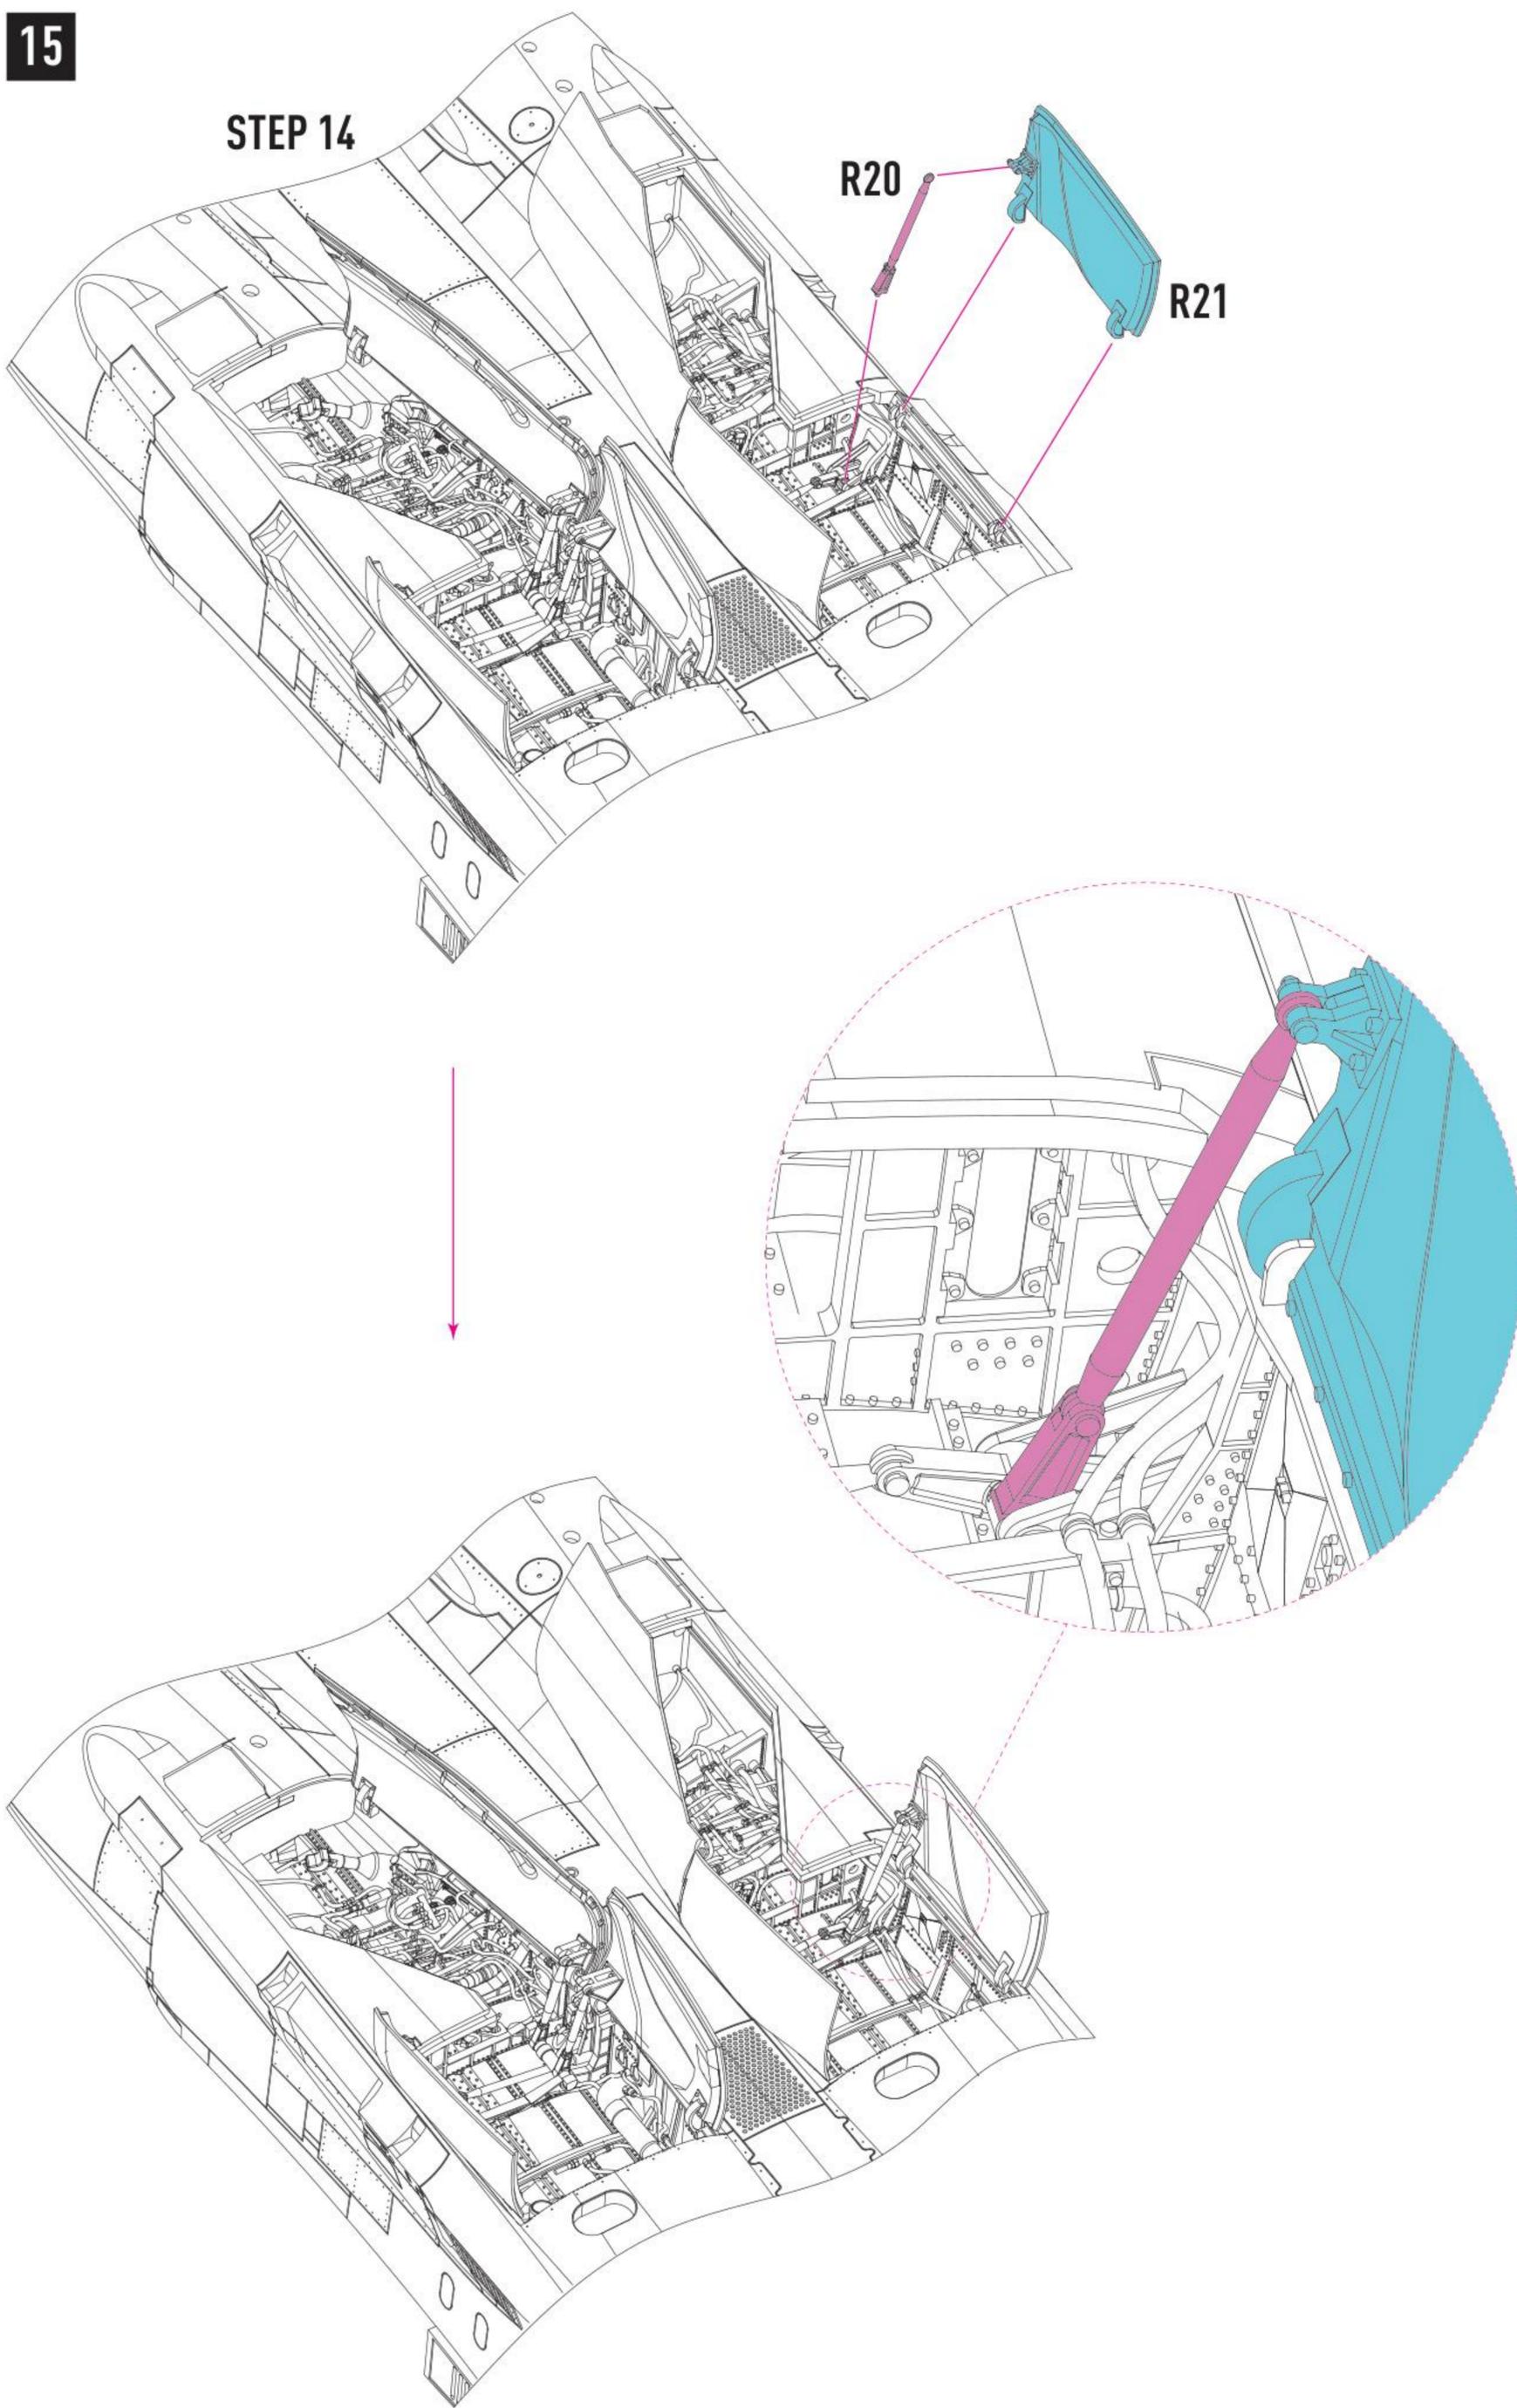

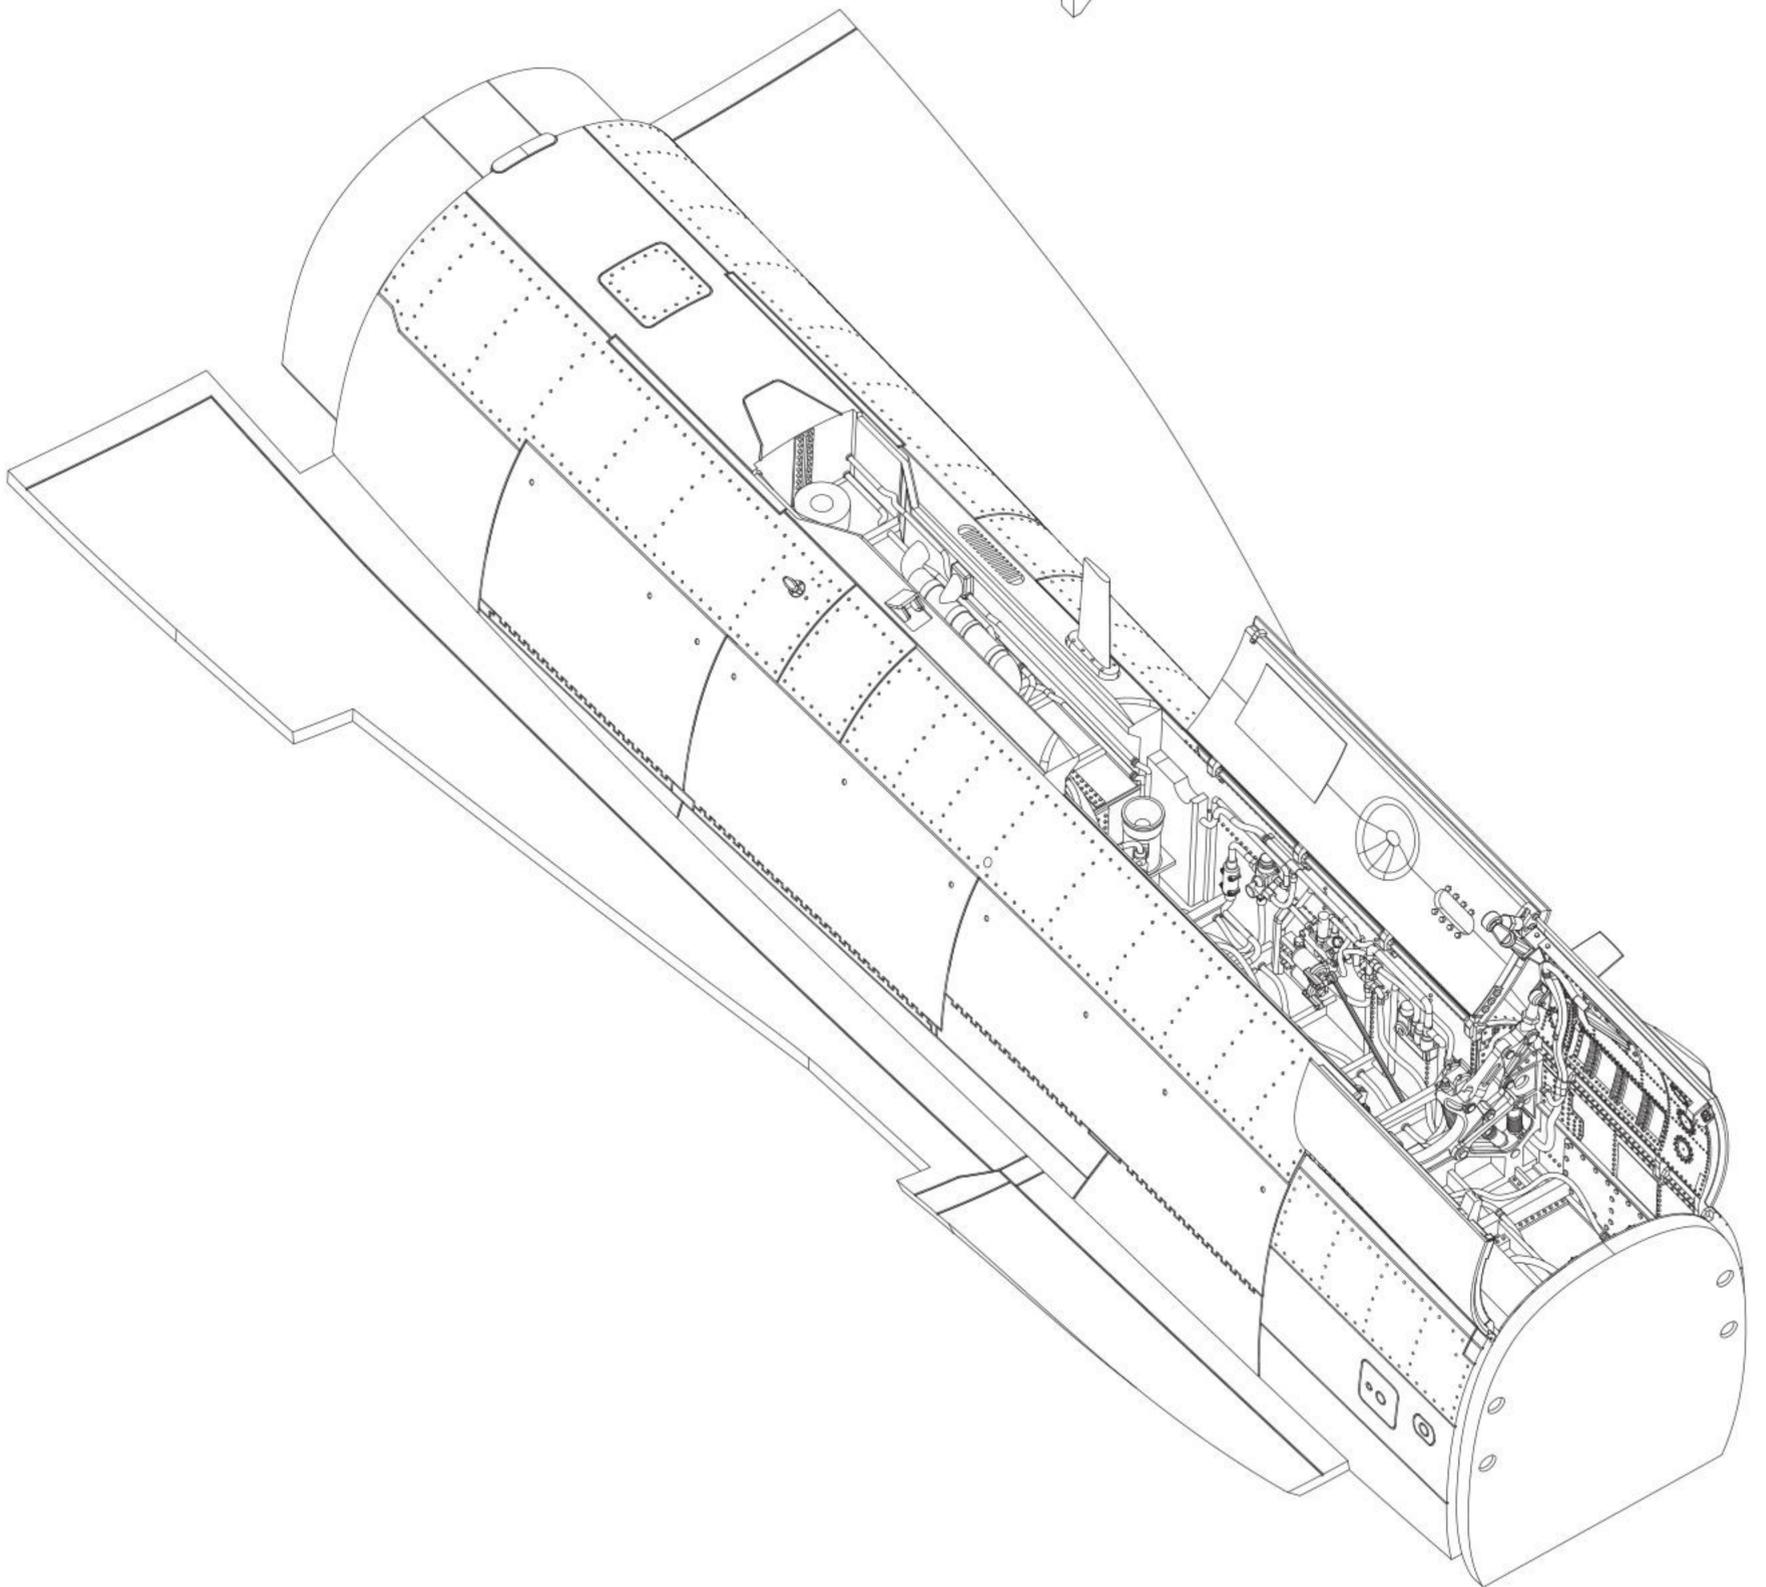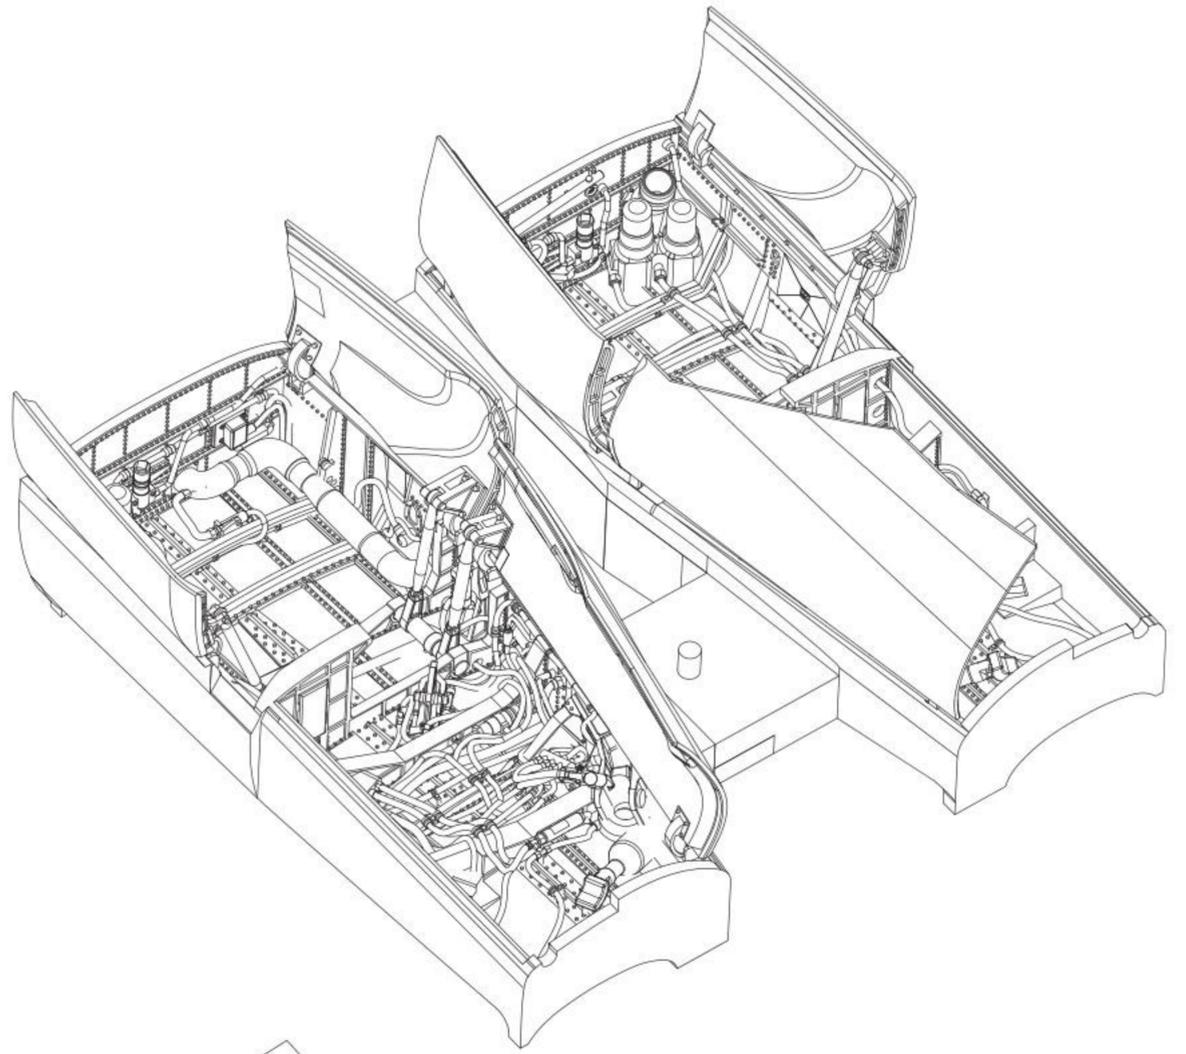

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua






RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official

 youtube.com/@reskit-usmd

DECAL INSTRUCTION

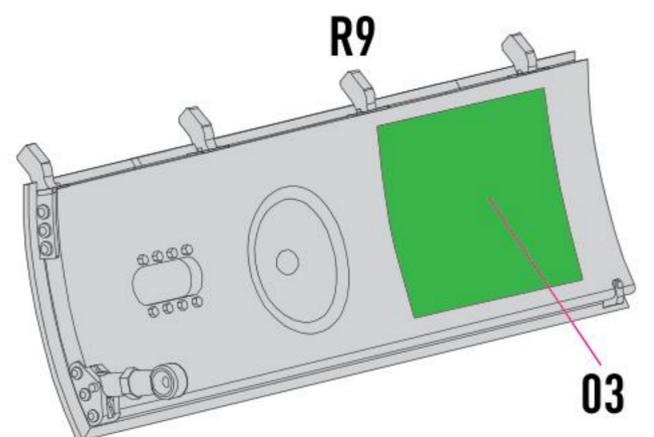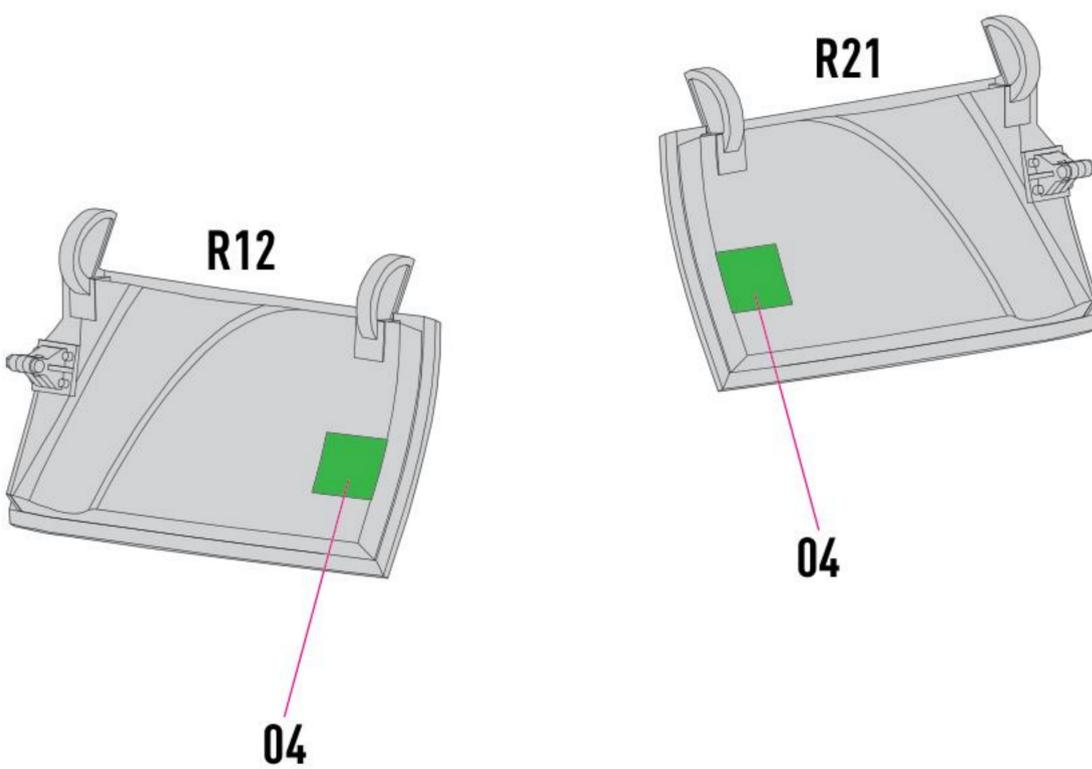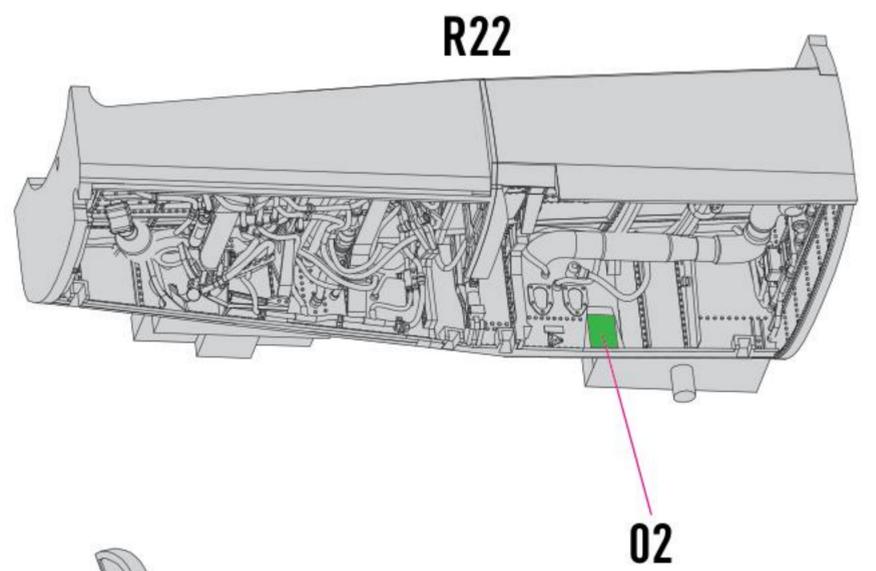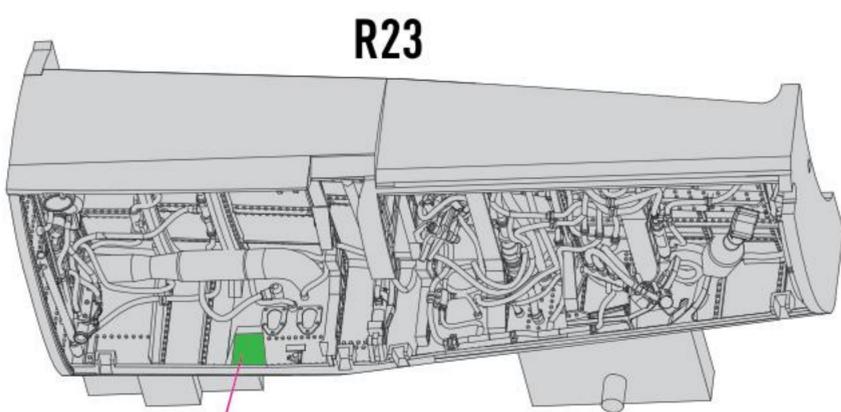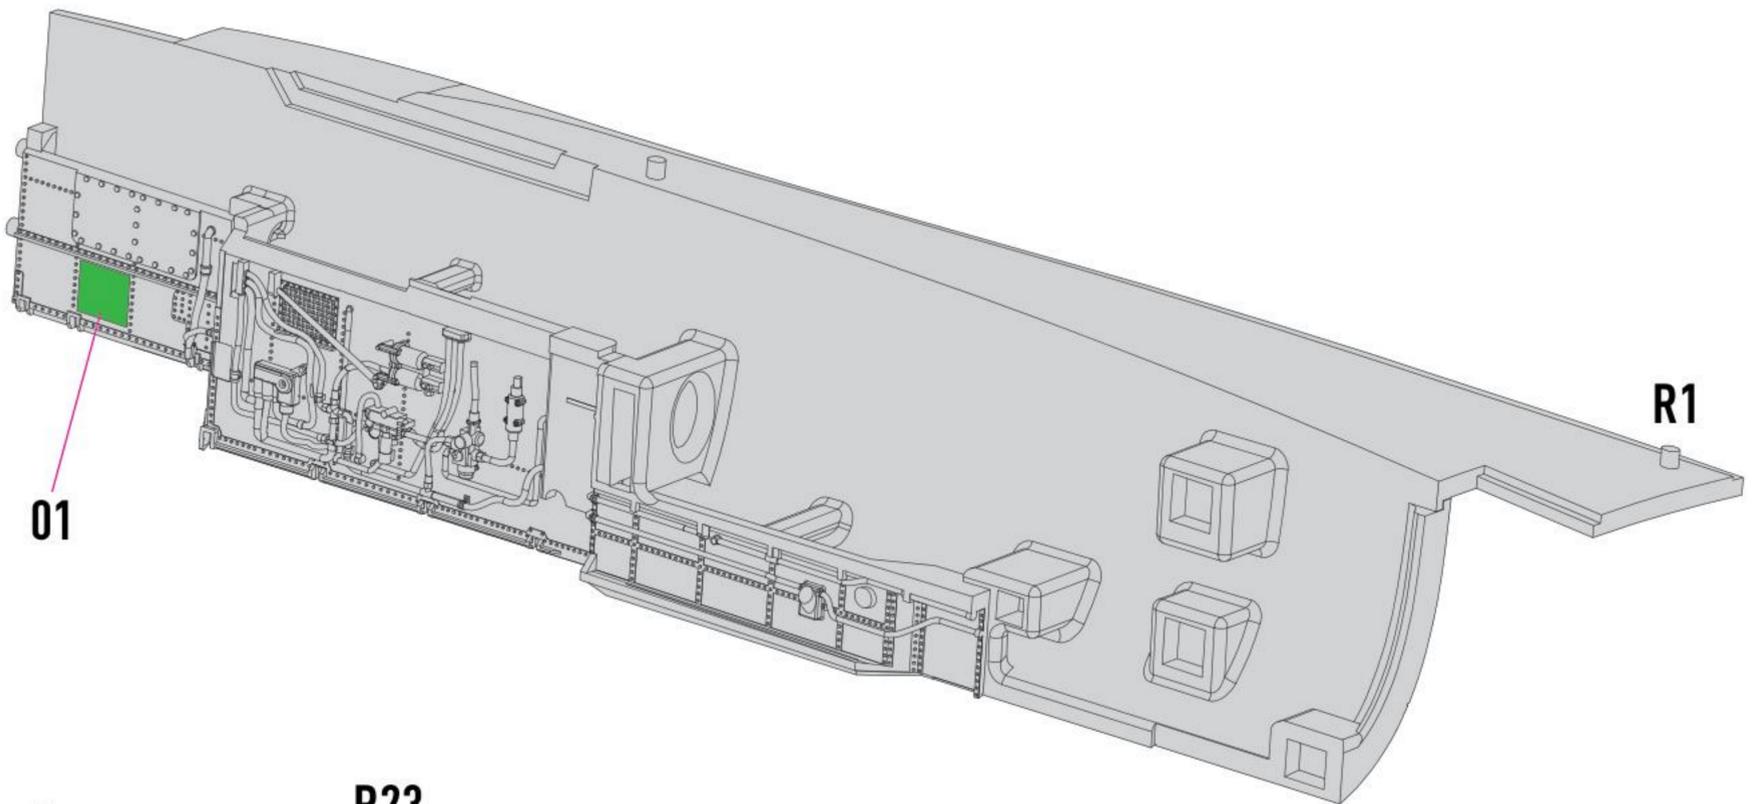

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua