



DETAILS AFTER REMOVAL FROM SUPPORTS





 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

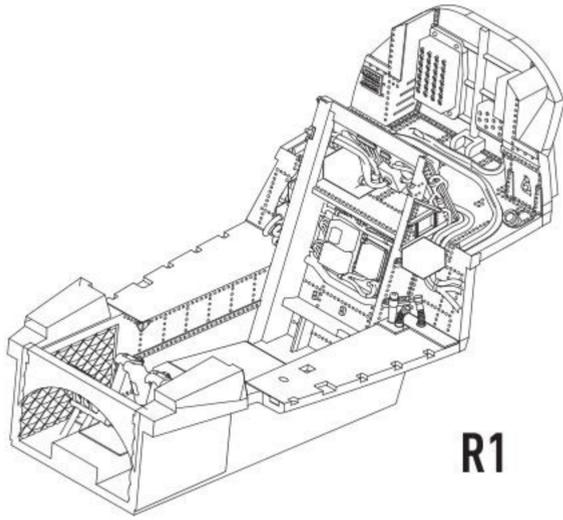



R1

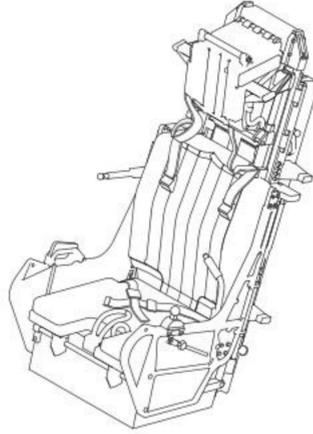



R2

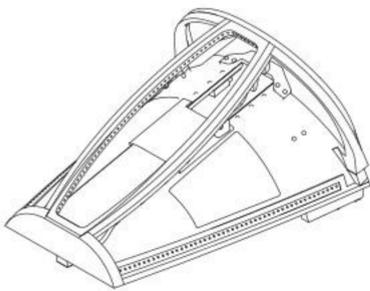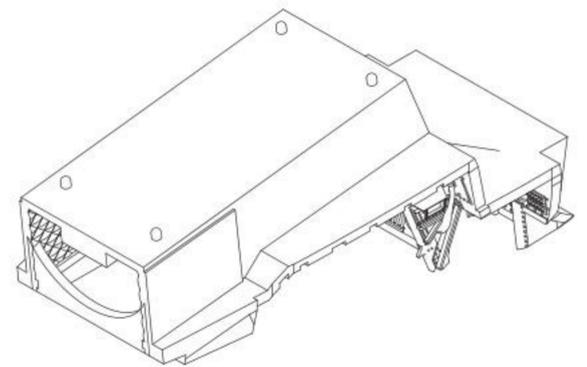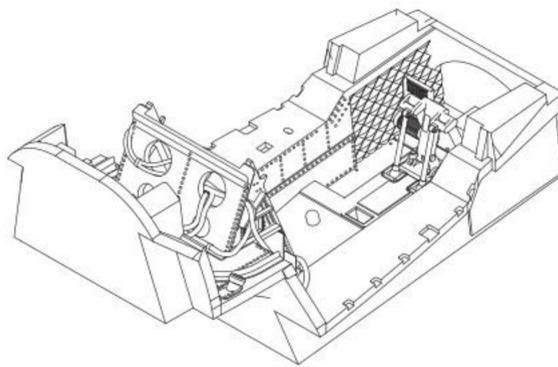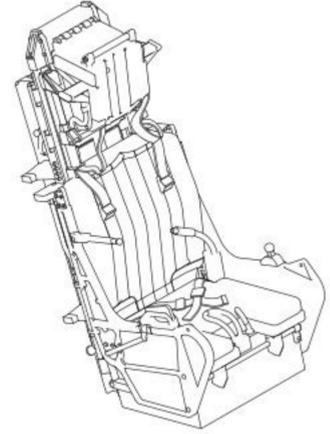




R3

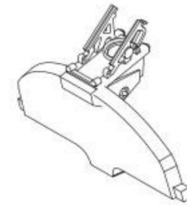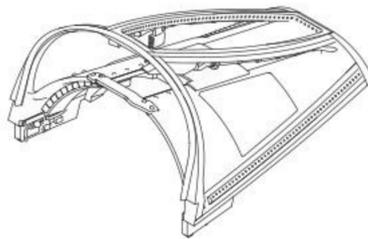


R4

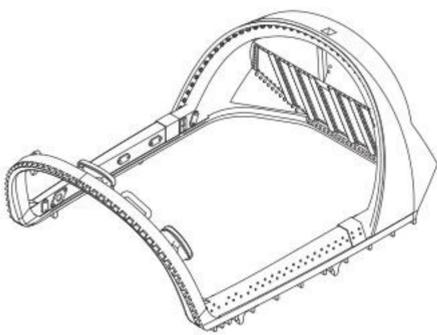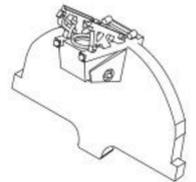

R5

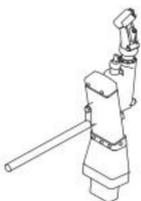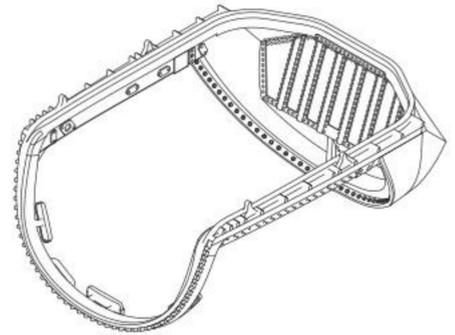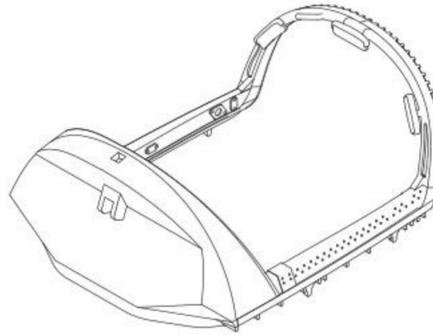

R6

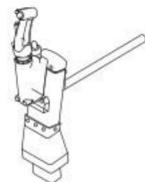


R7





R8




R9

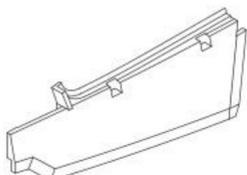

R10

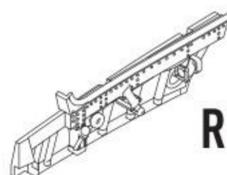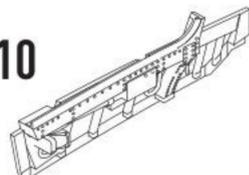


R11

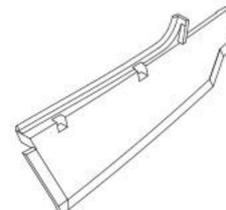


F1

F2


1

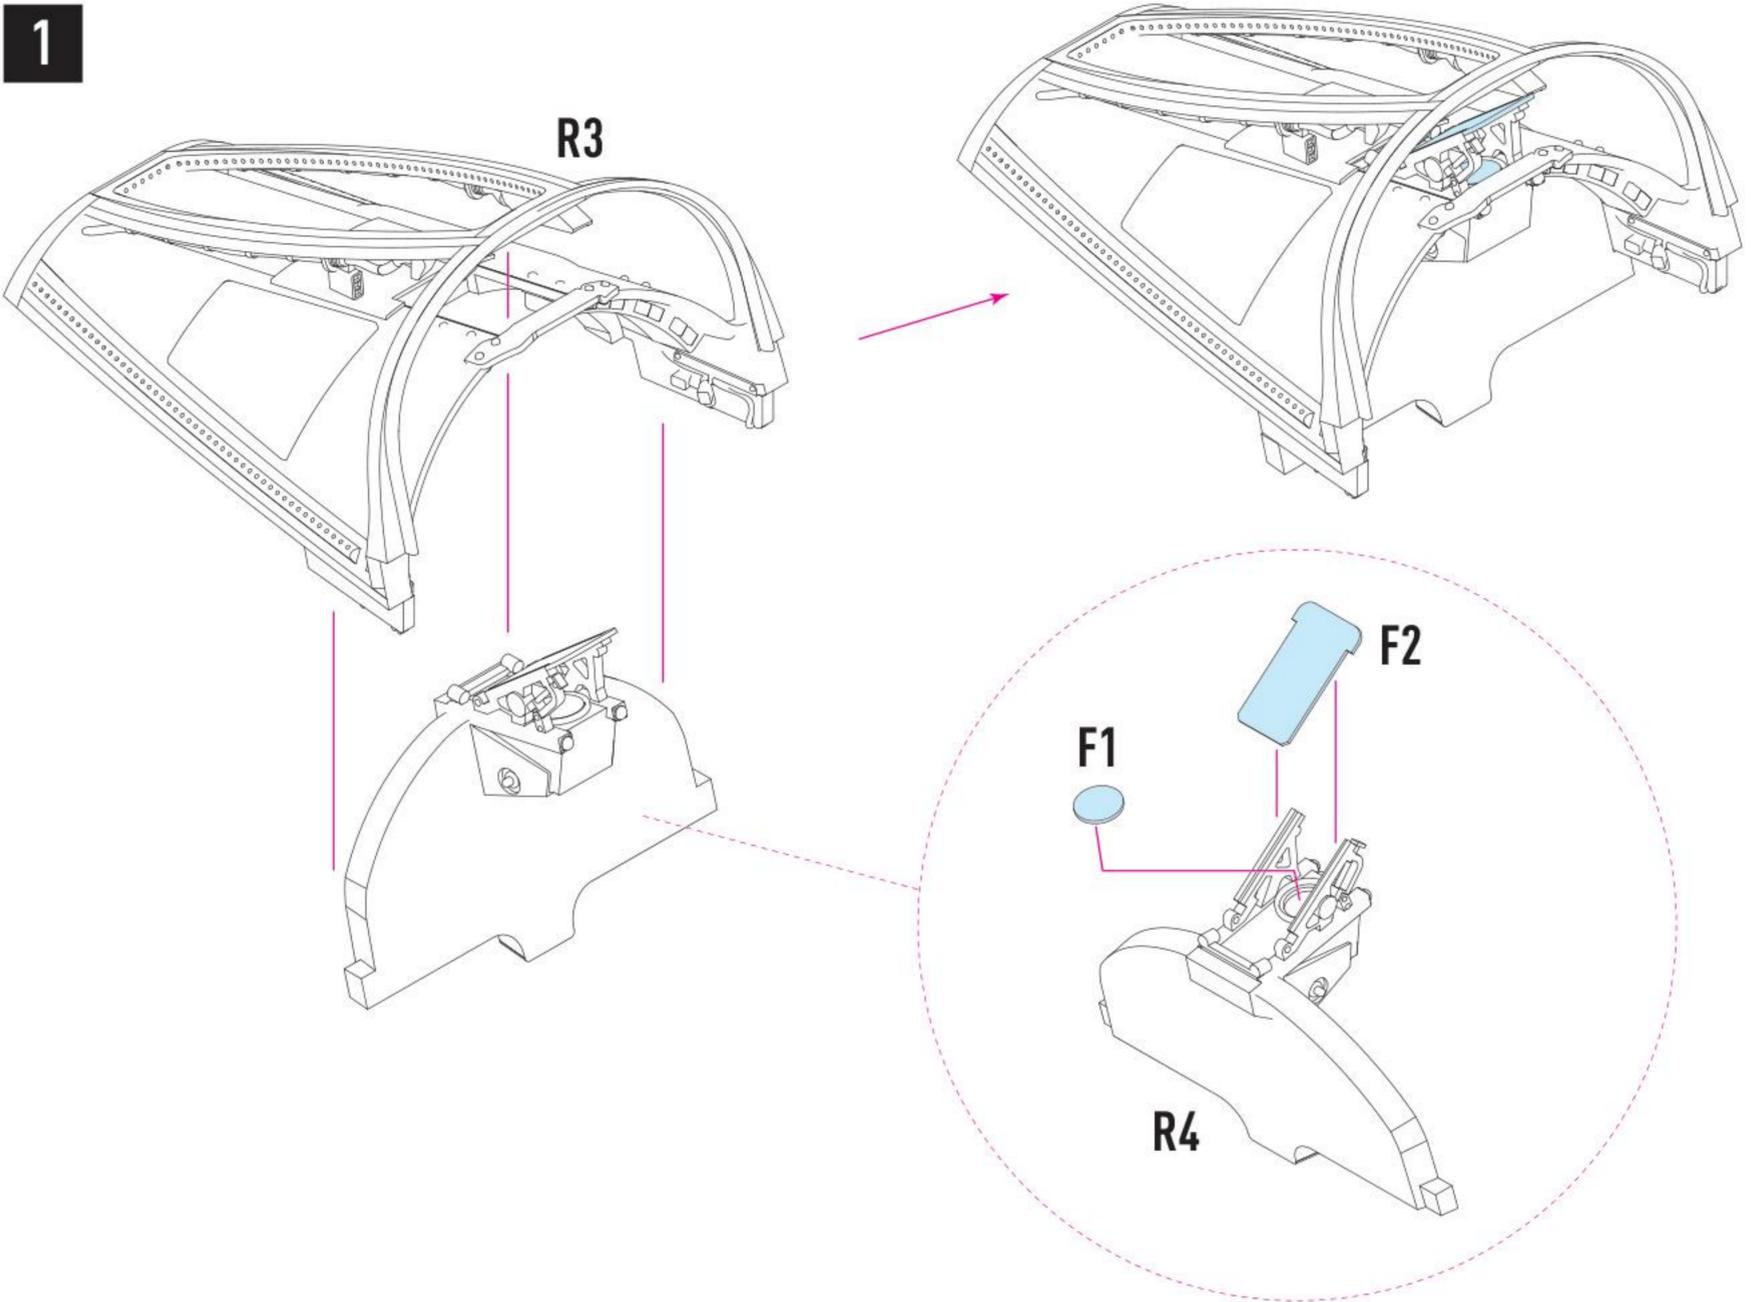


2

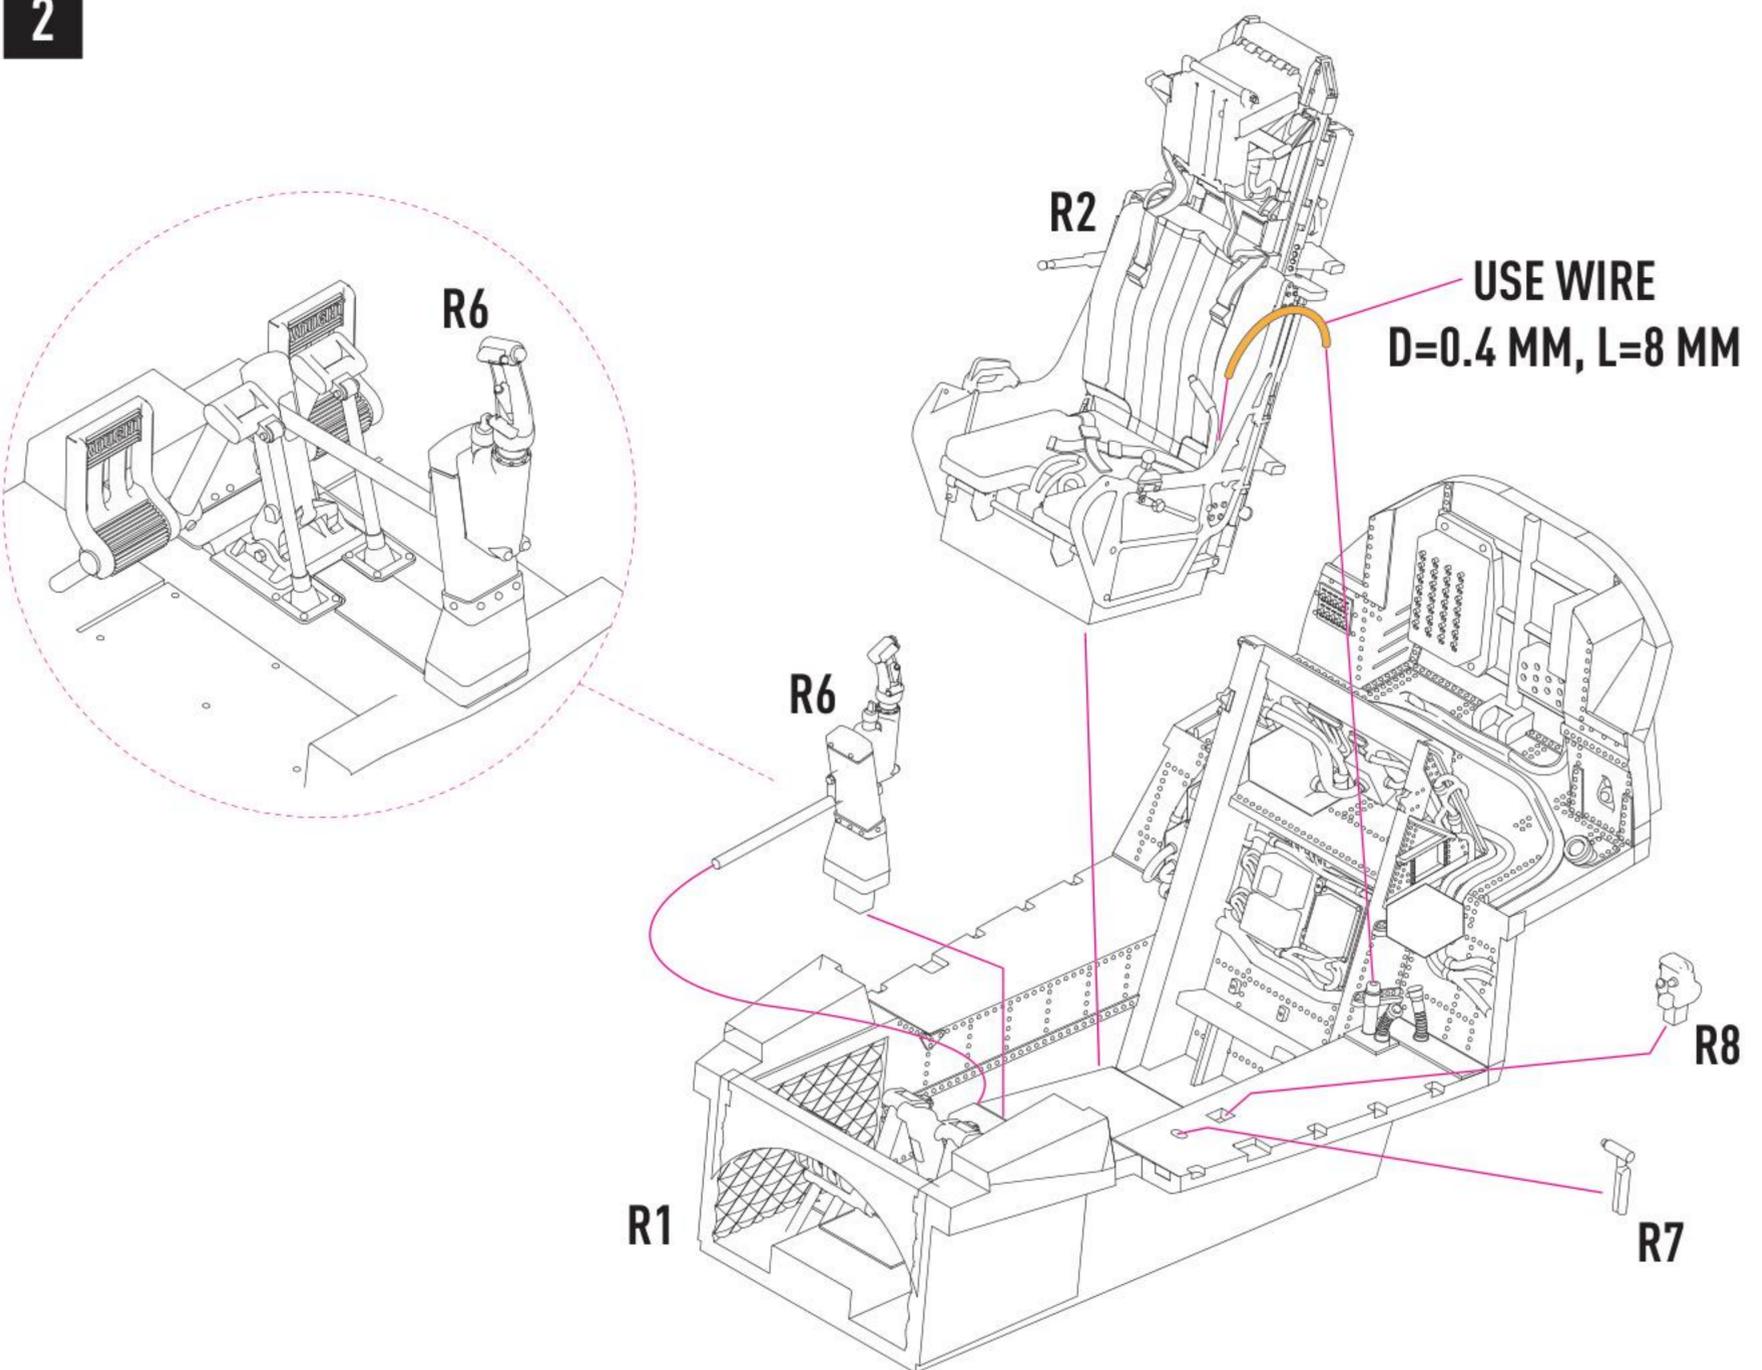



3

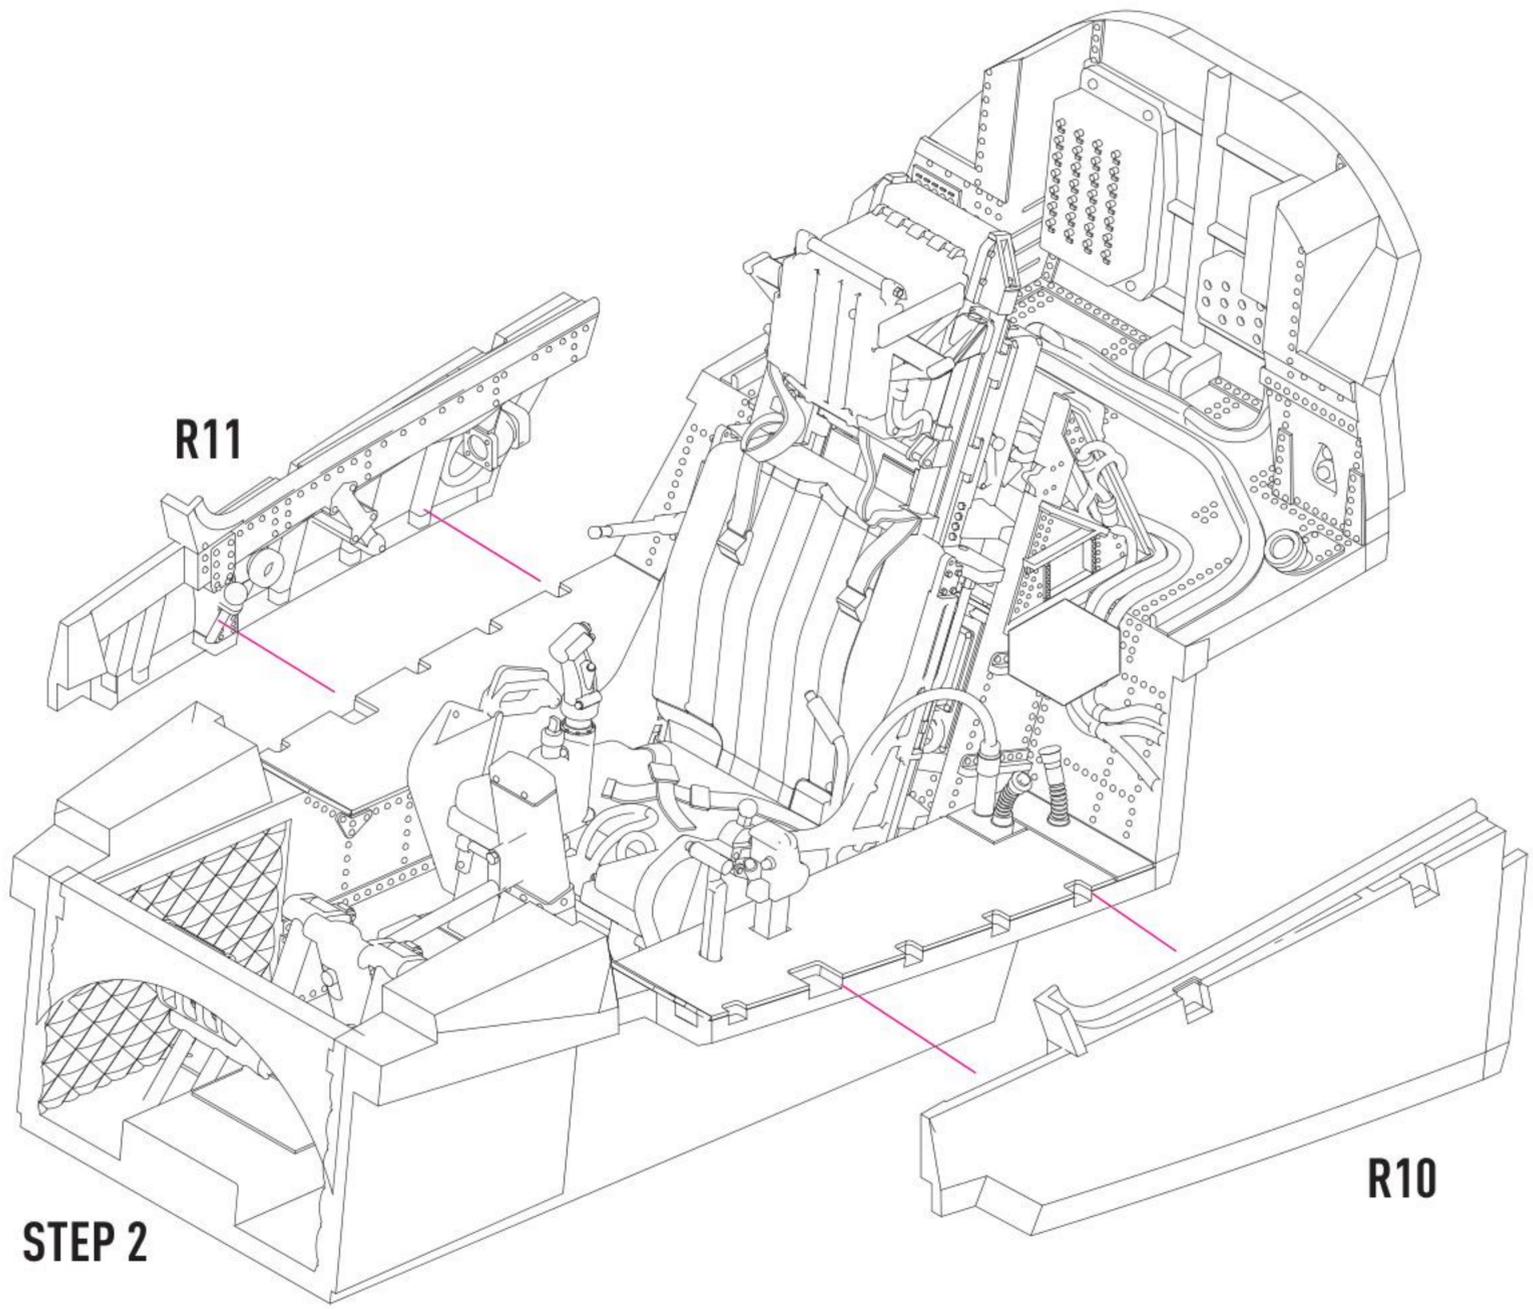


4

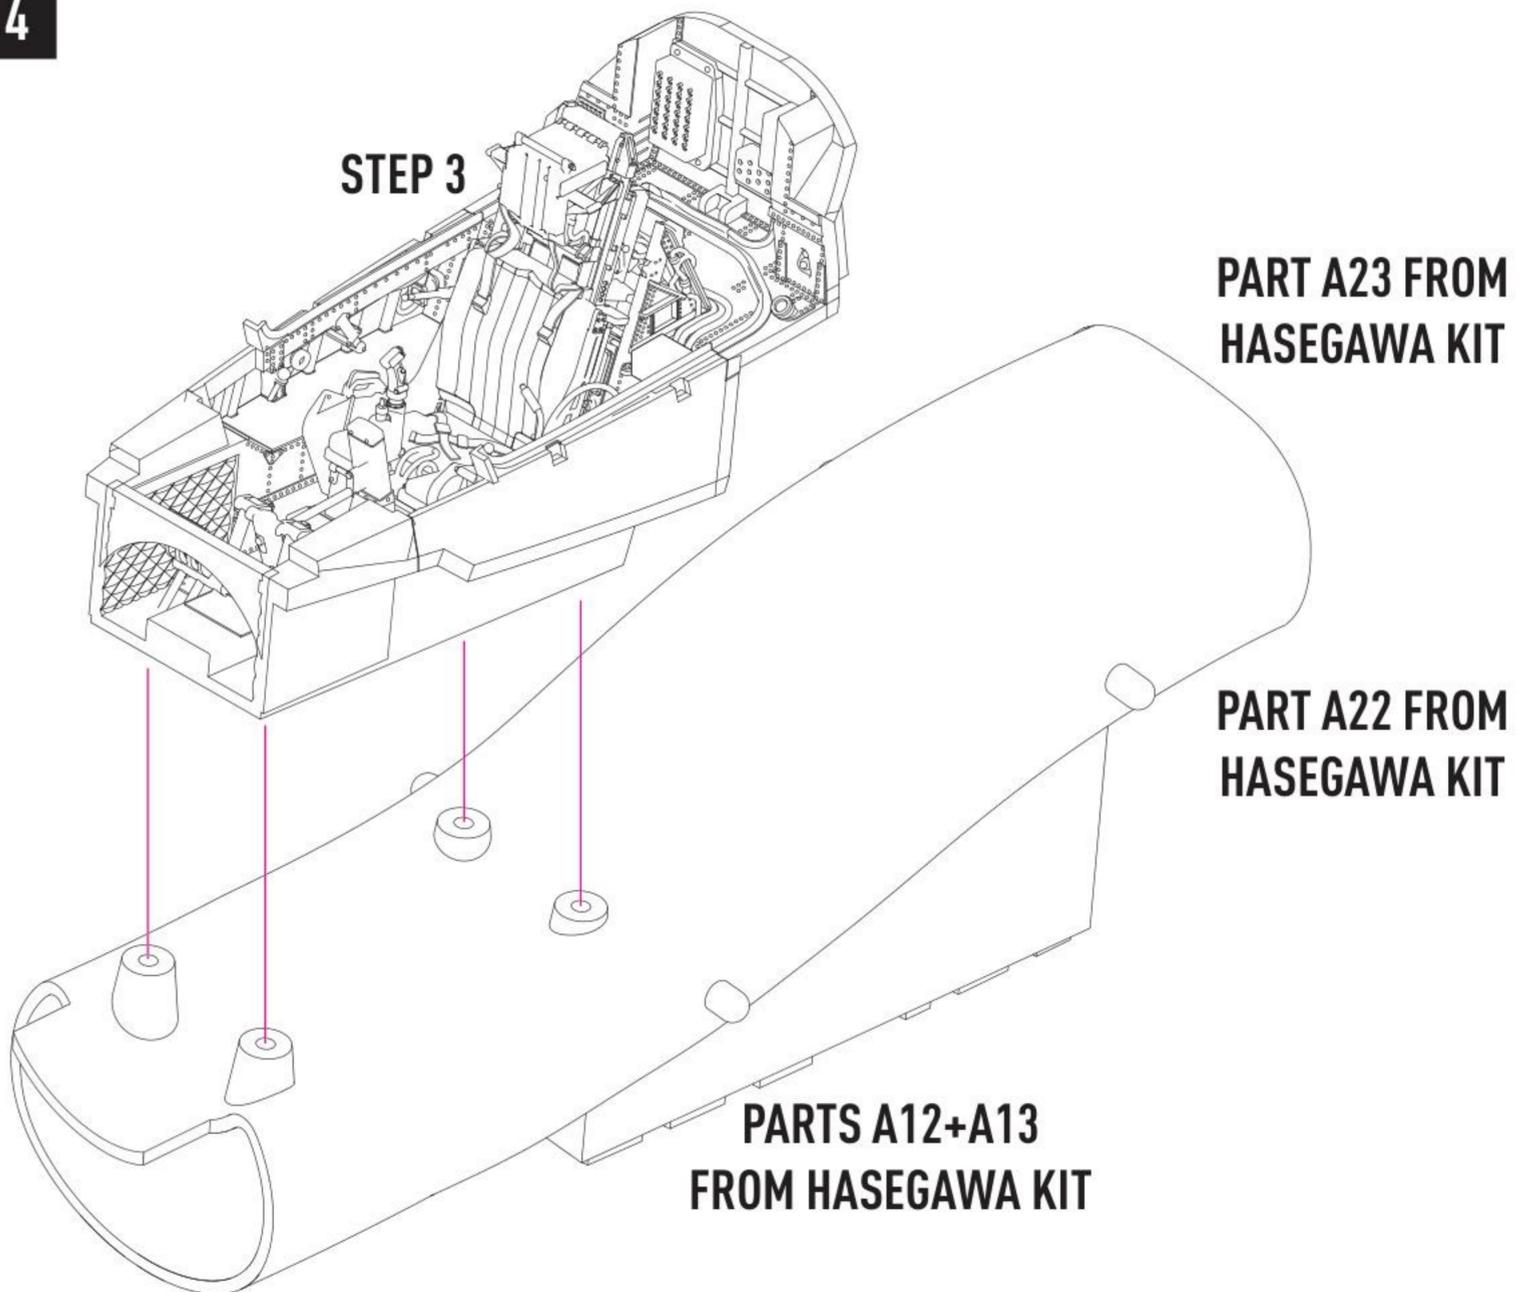


5 PREPARATION OF FUSELAGE PARTS FOR INSTALLATION OF ADDITIONAL KIT

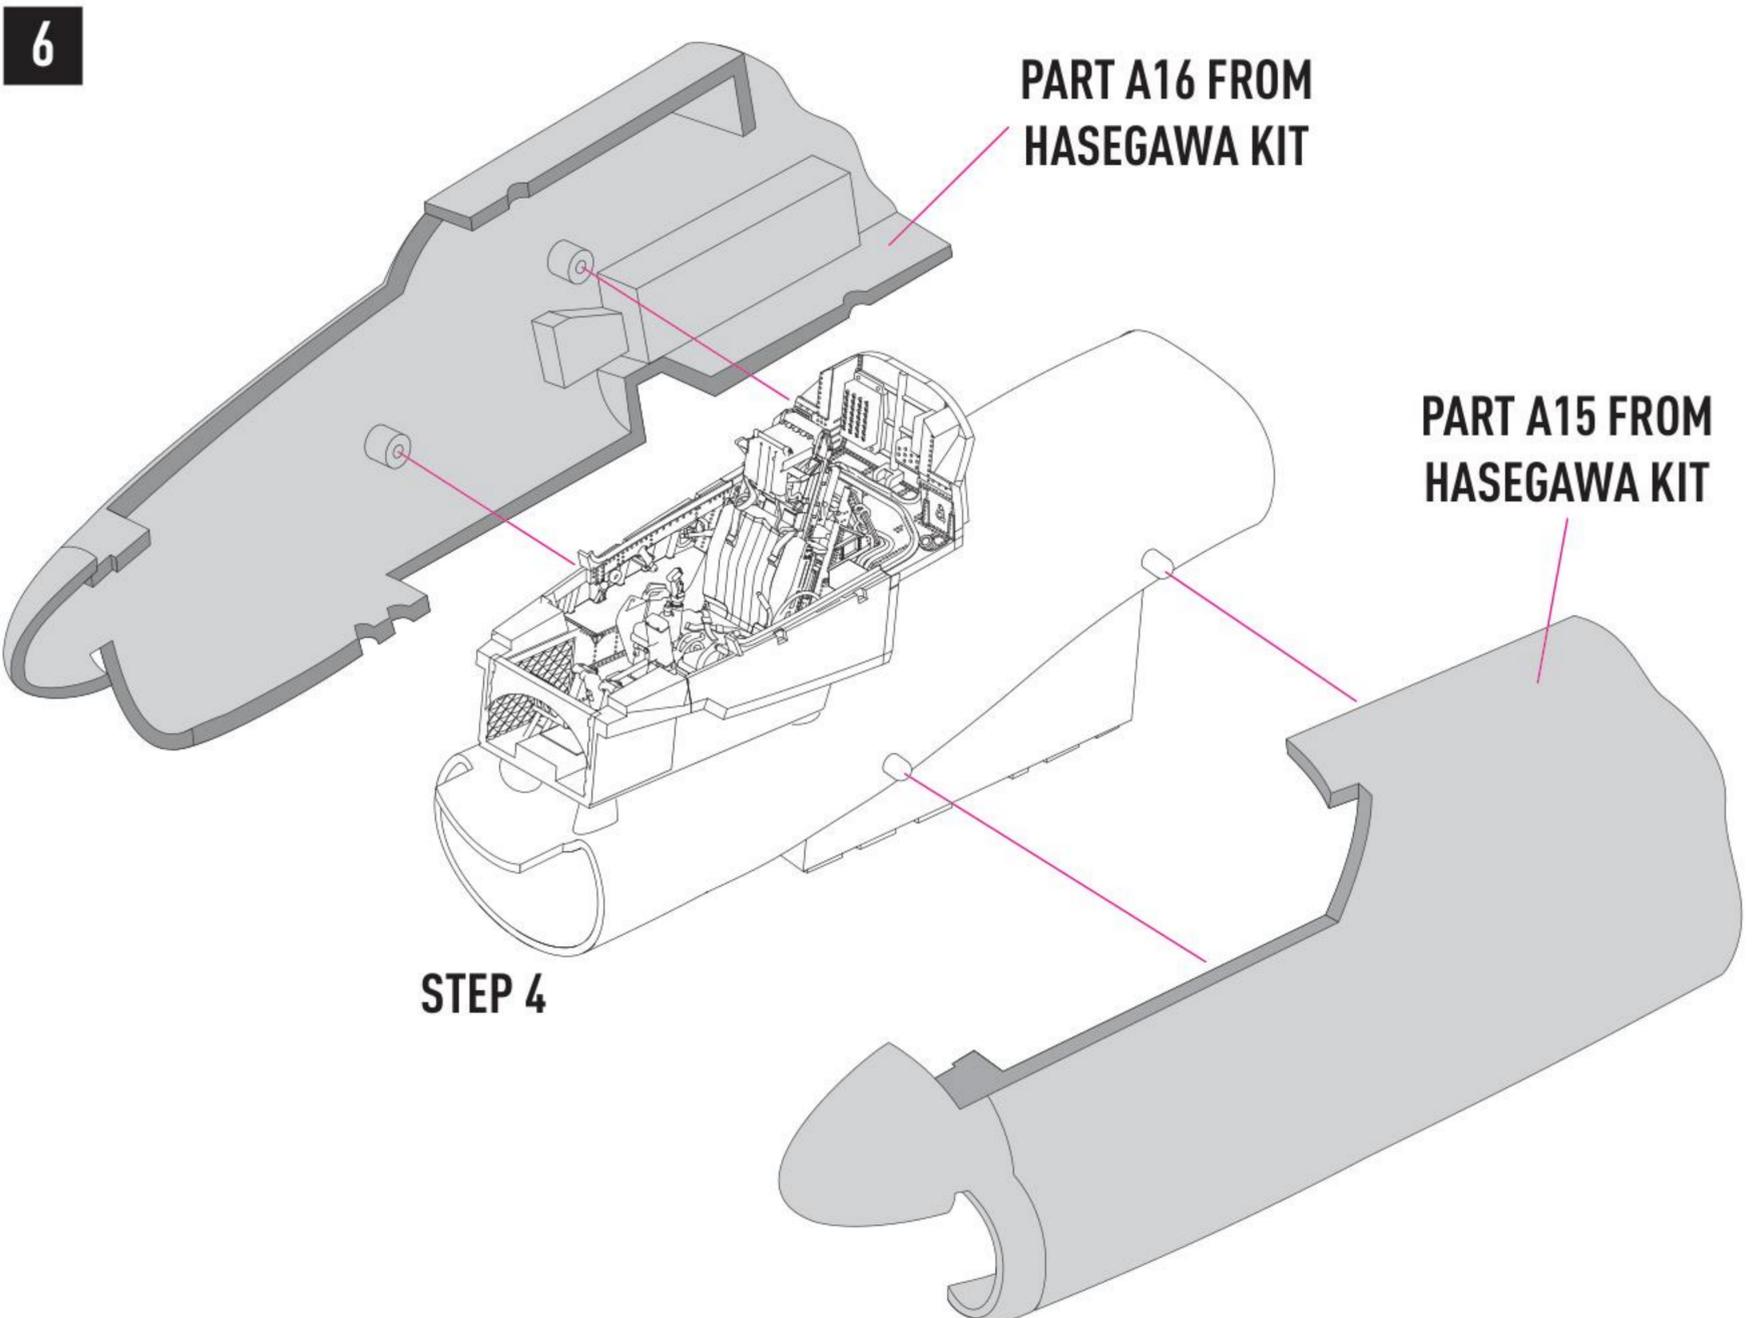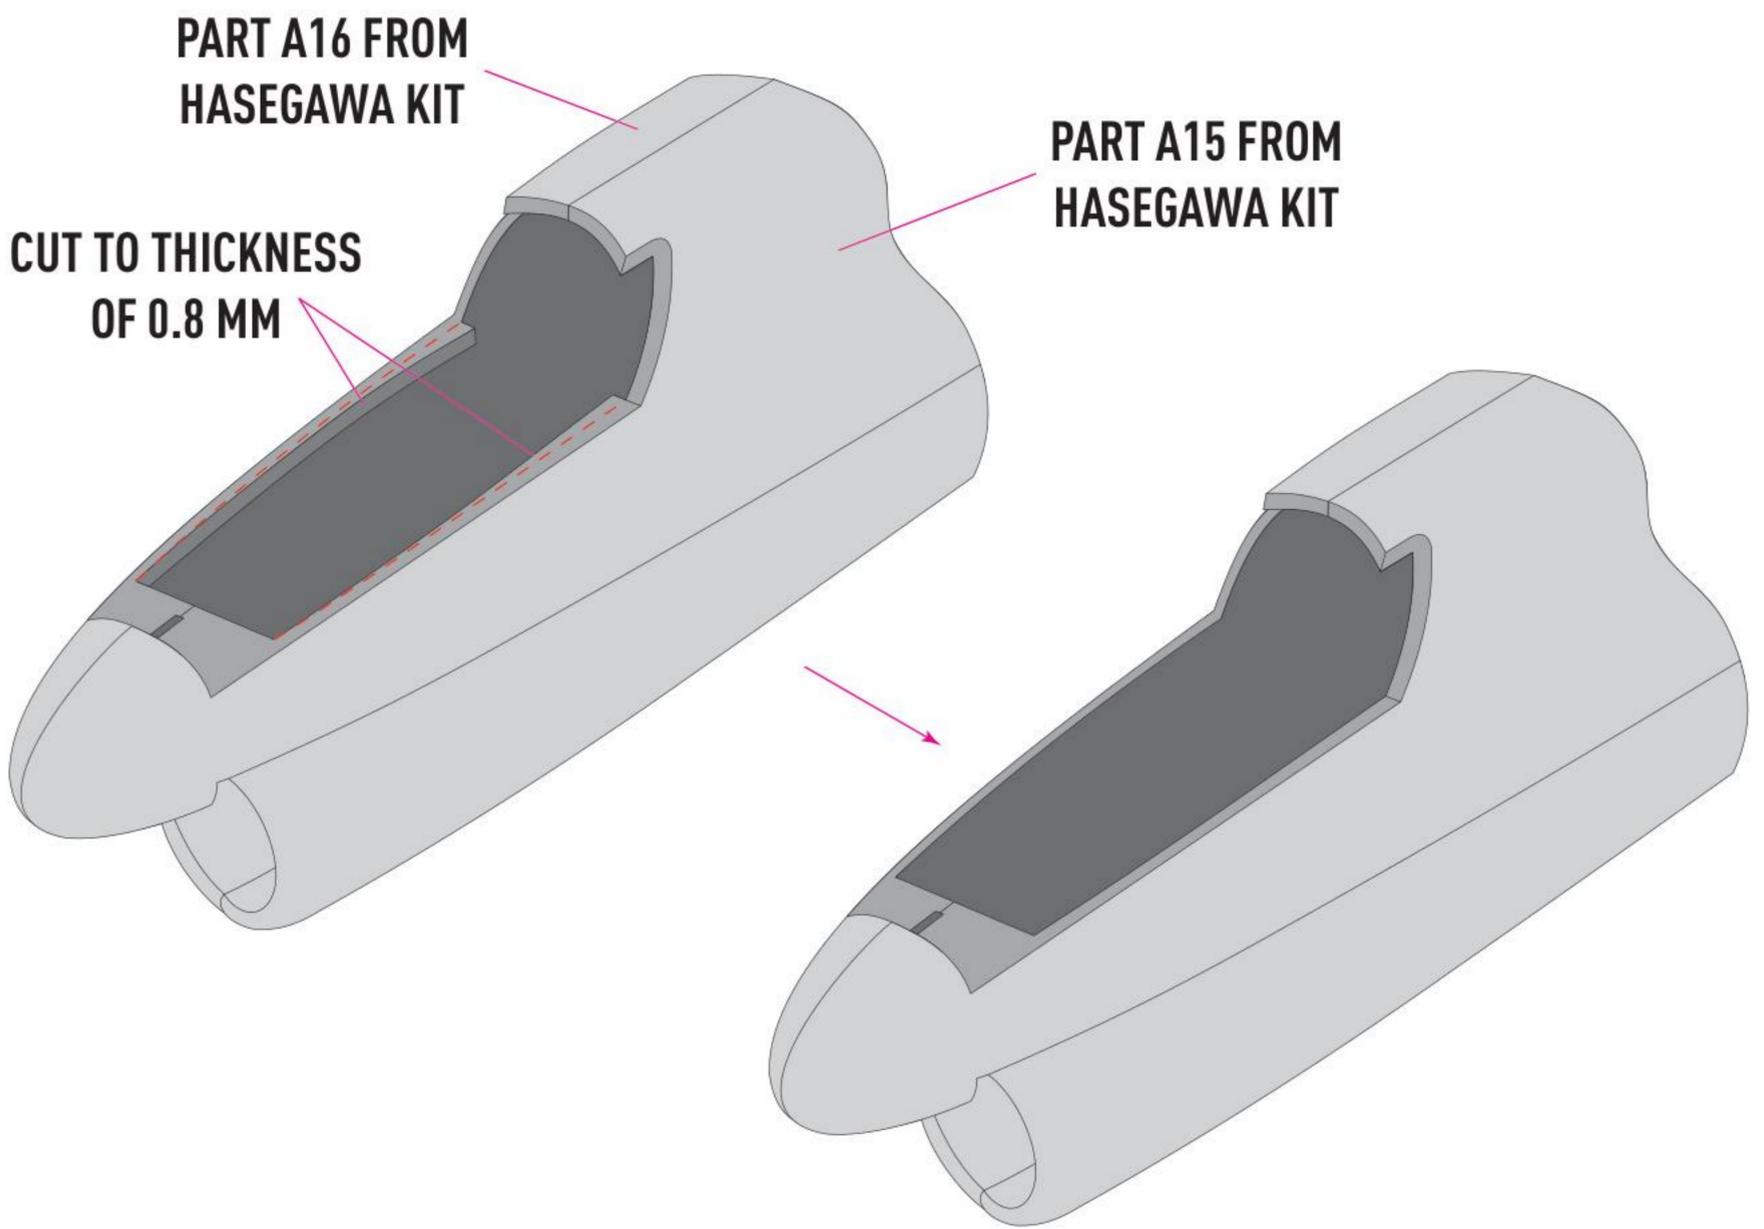


7 CLOSED CANOPY

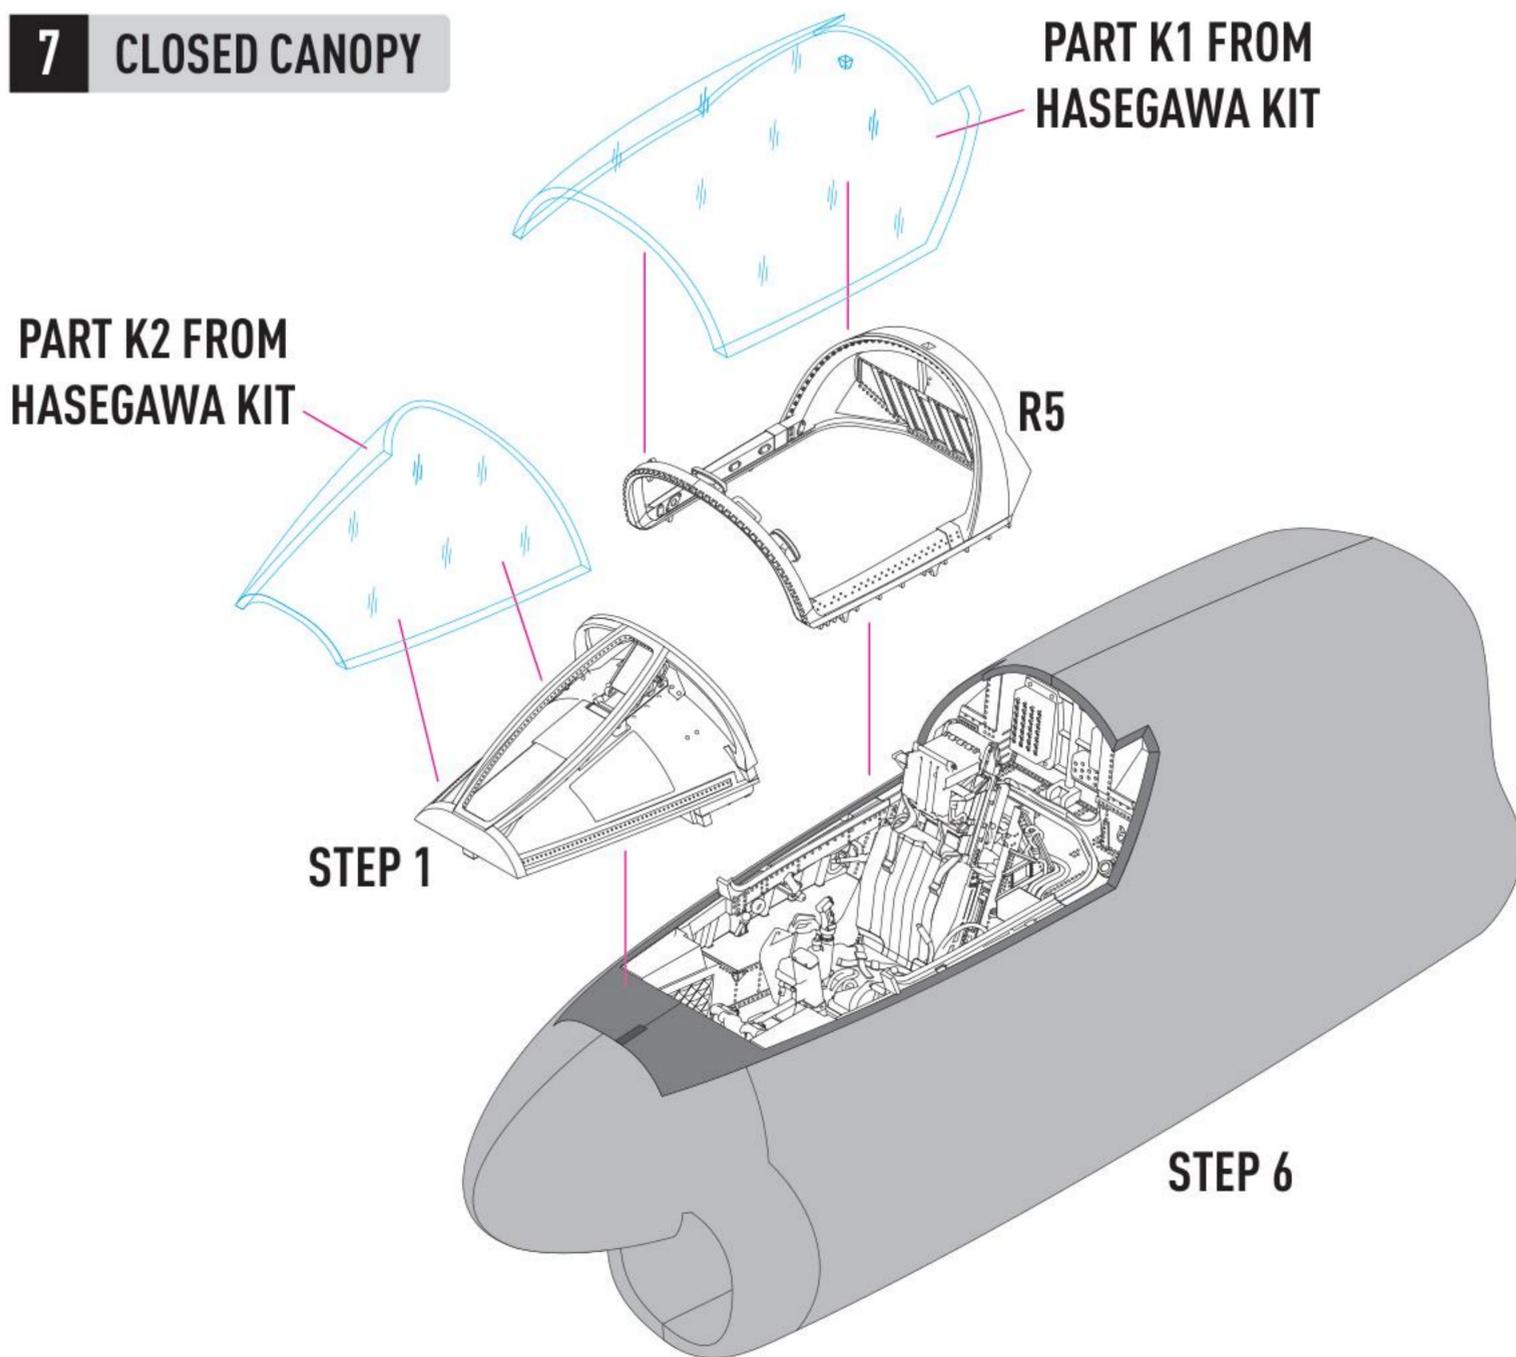


OPEN CANOPY


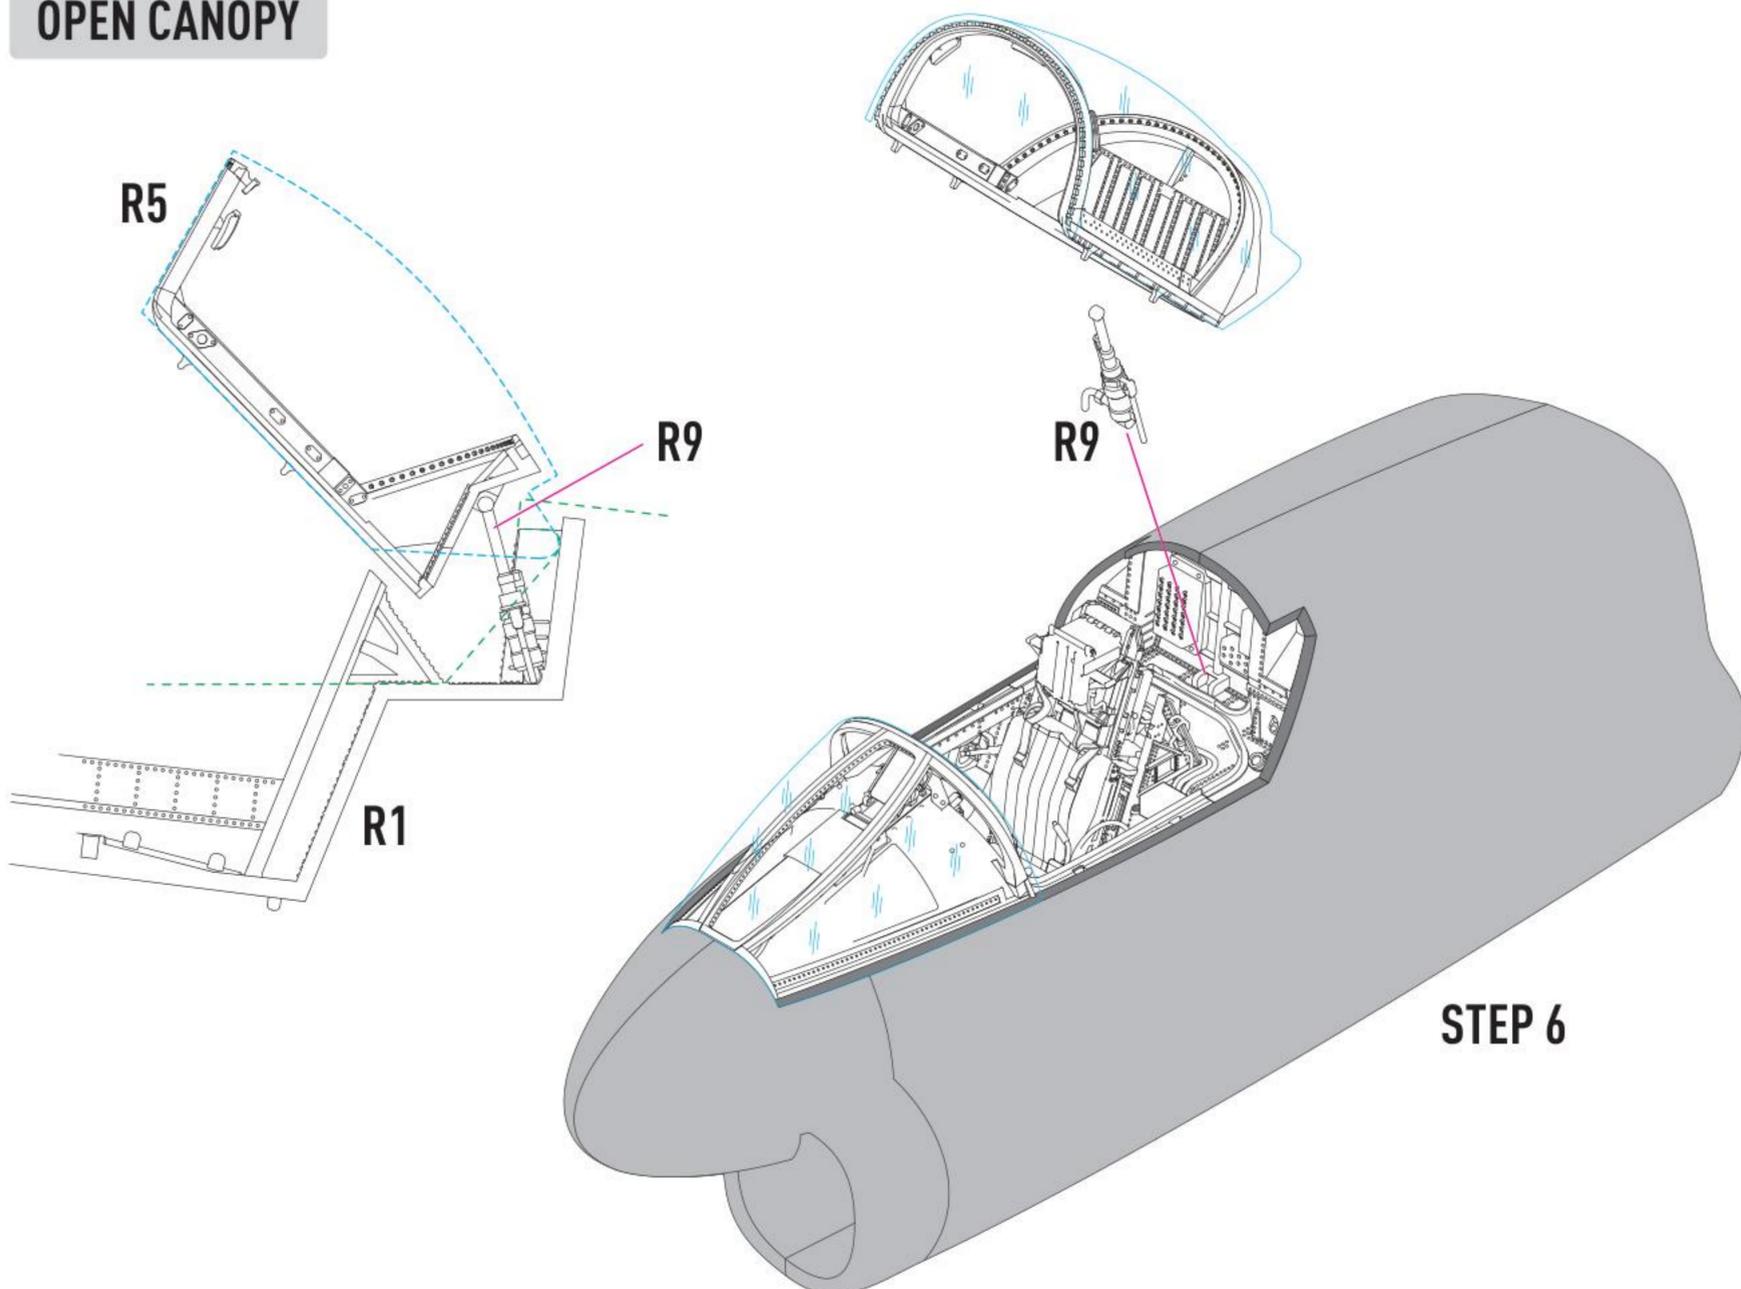


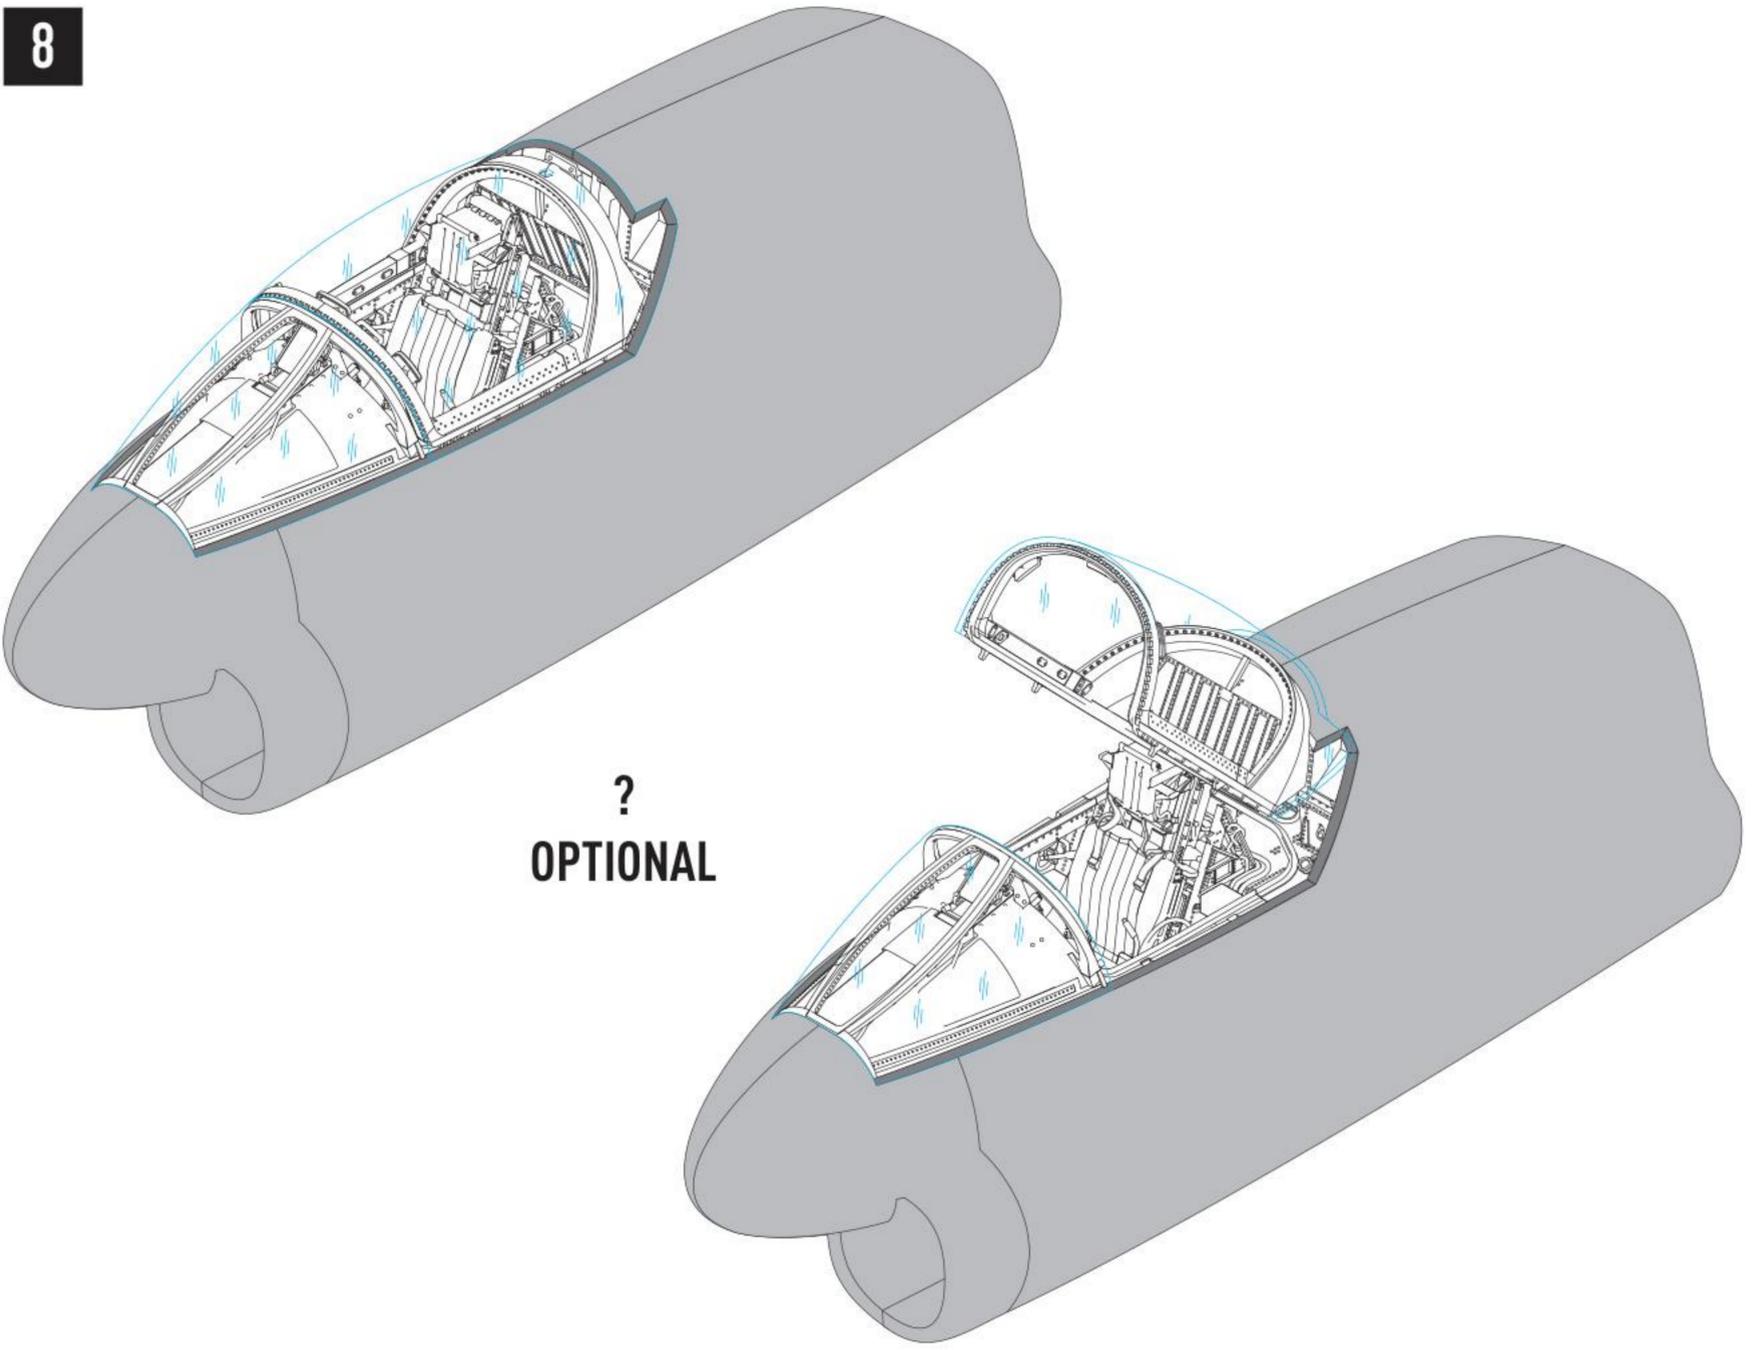

9 3D DECAL APPLICATION INSTRUCTIONS

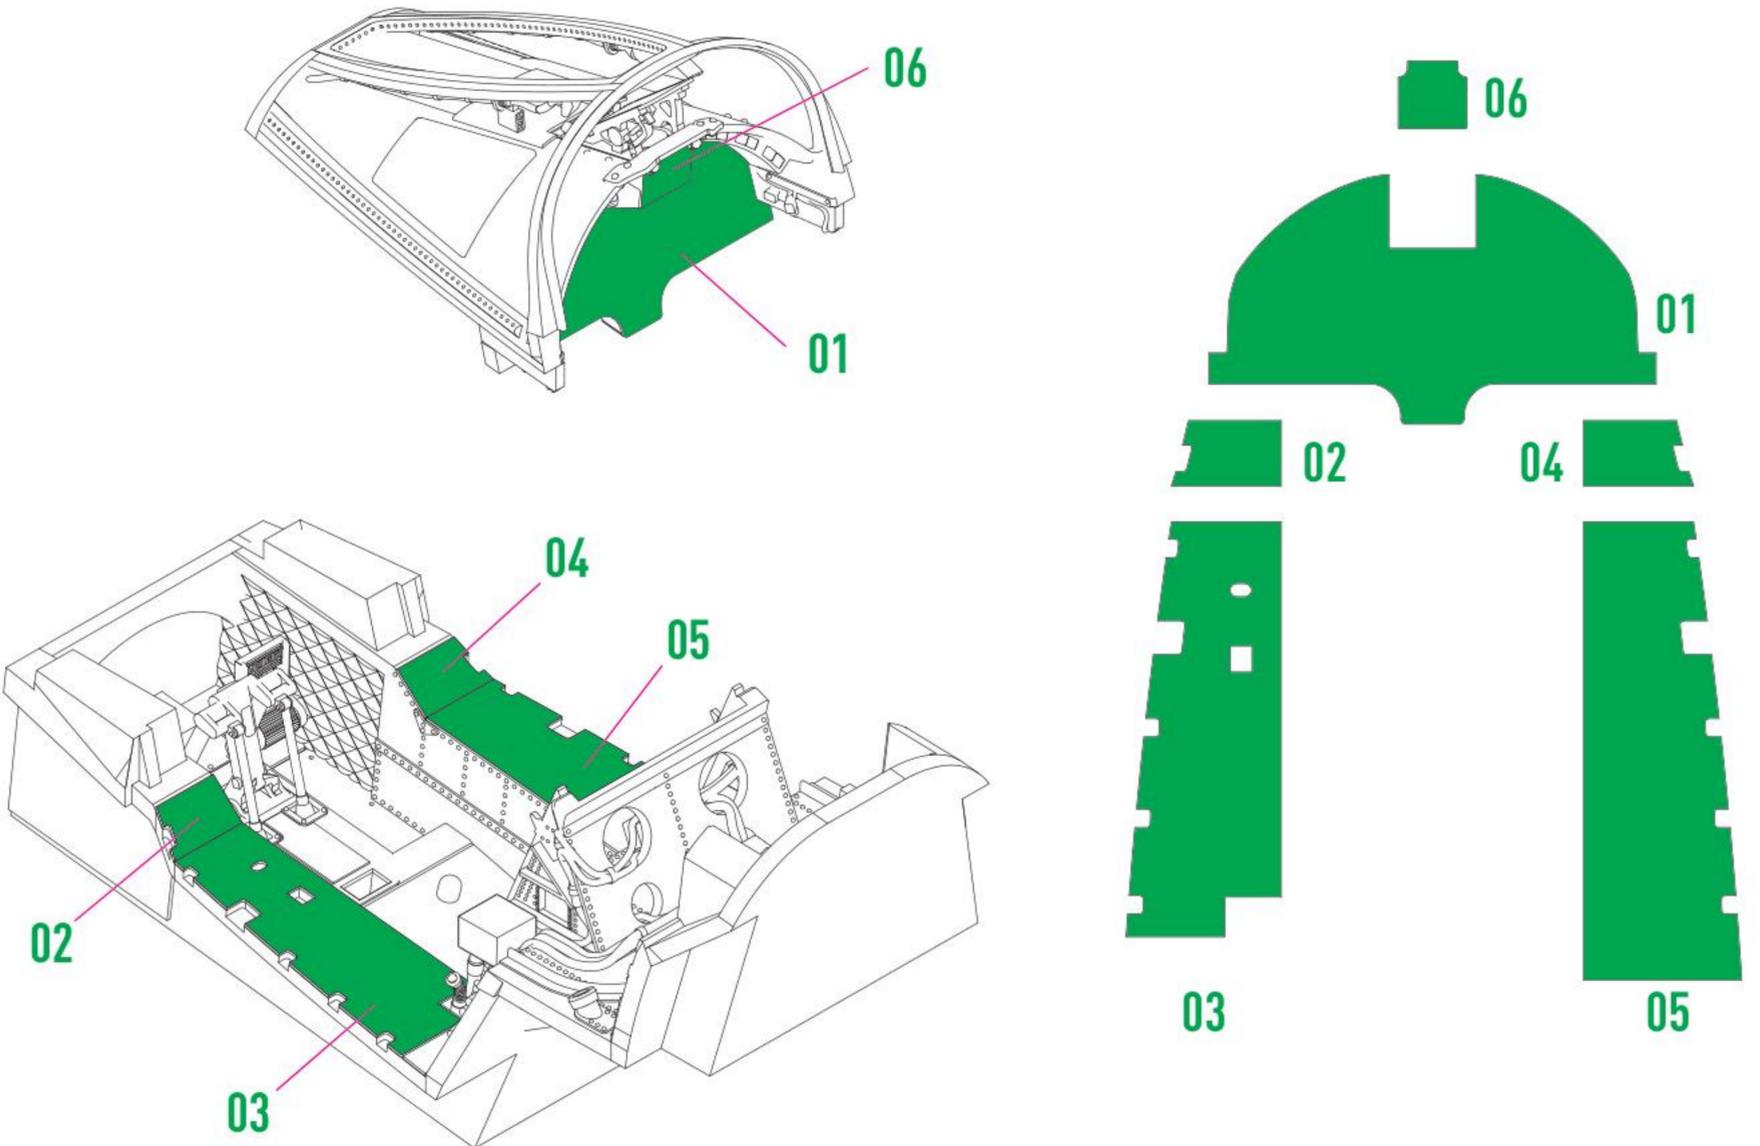

DECAL INSTRUCTION

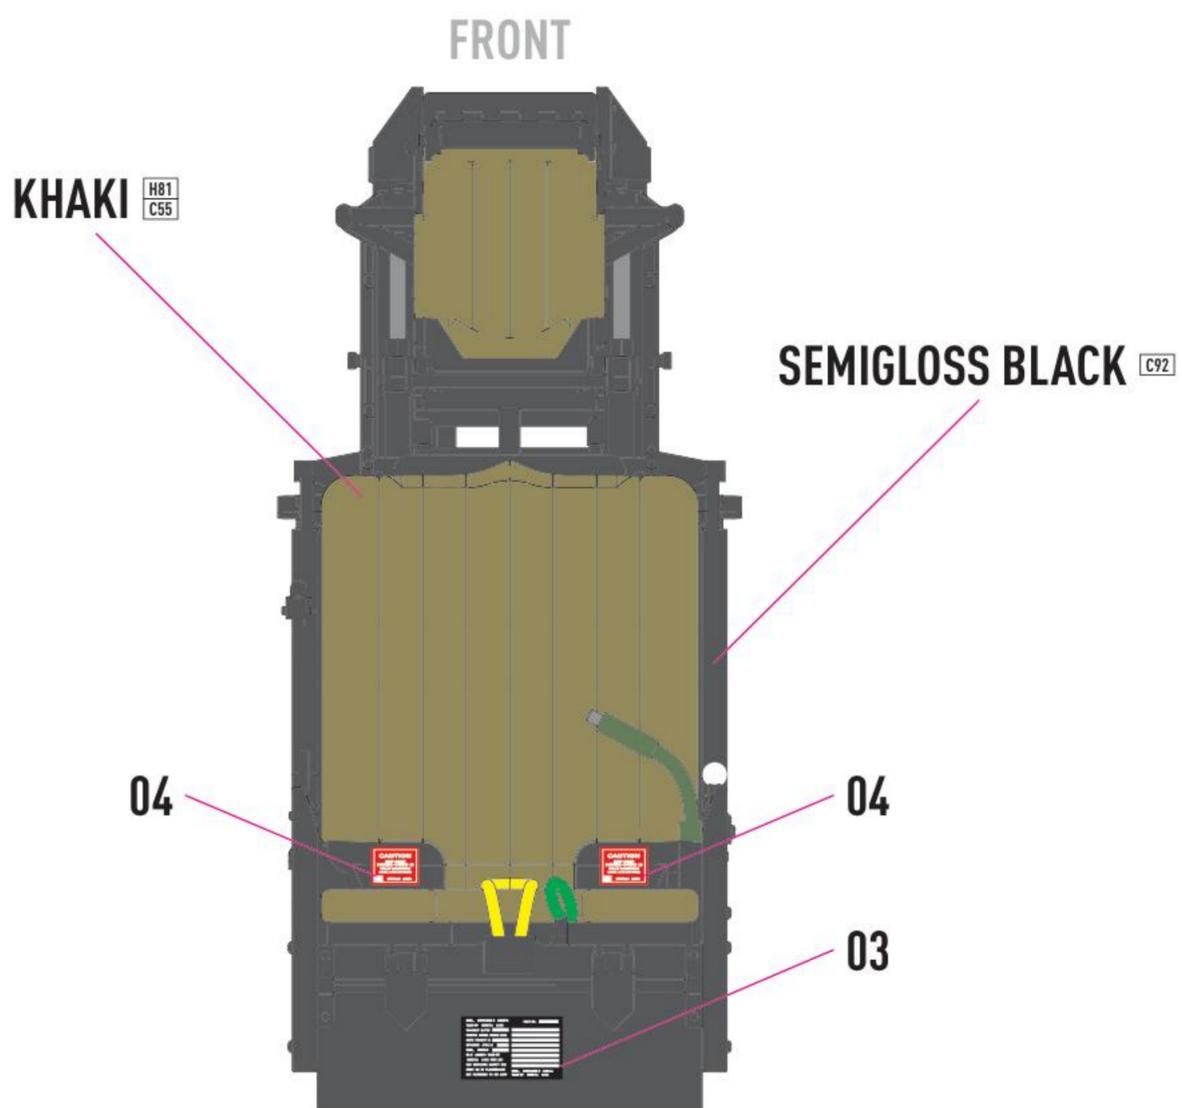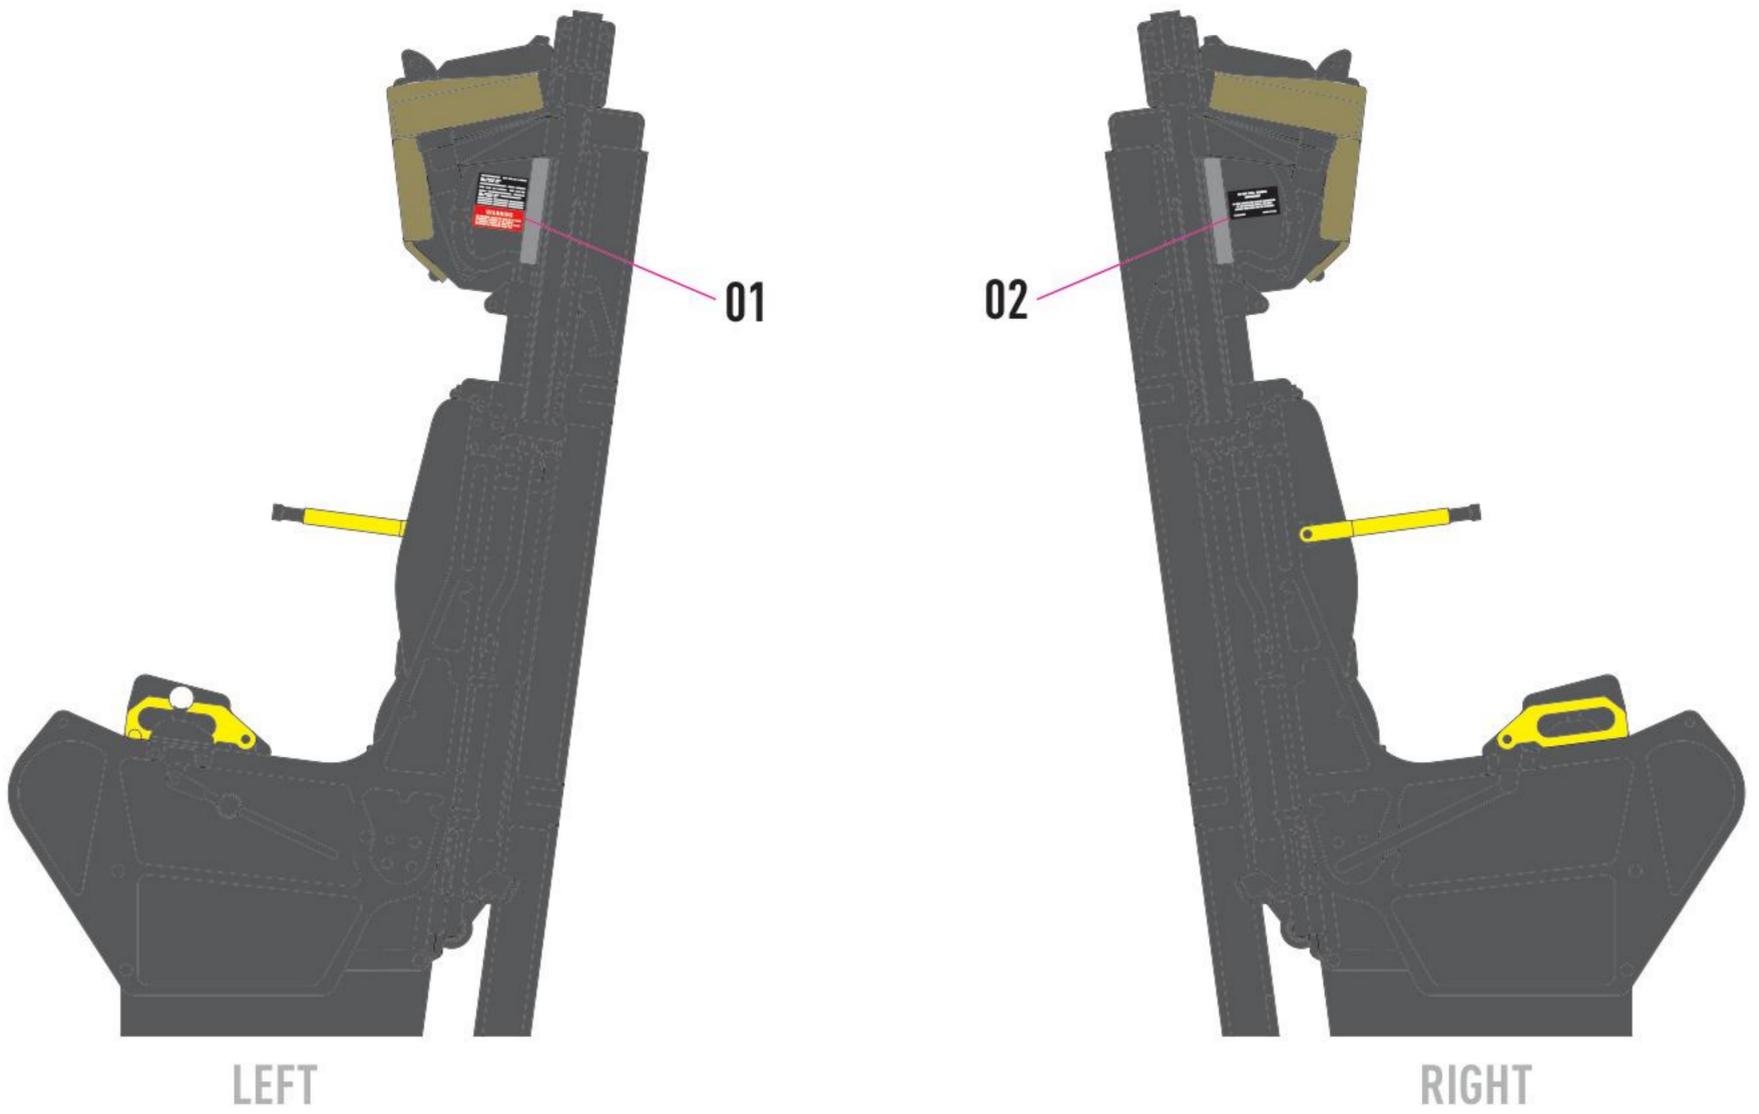

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
 KHAKI	H81	C55
 SEMIGLOSS BLACK		C92

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official

 pinterest.com/reskit_official

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua