

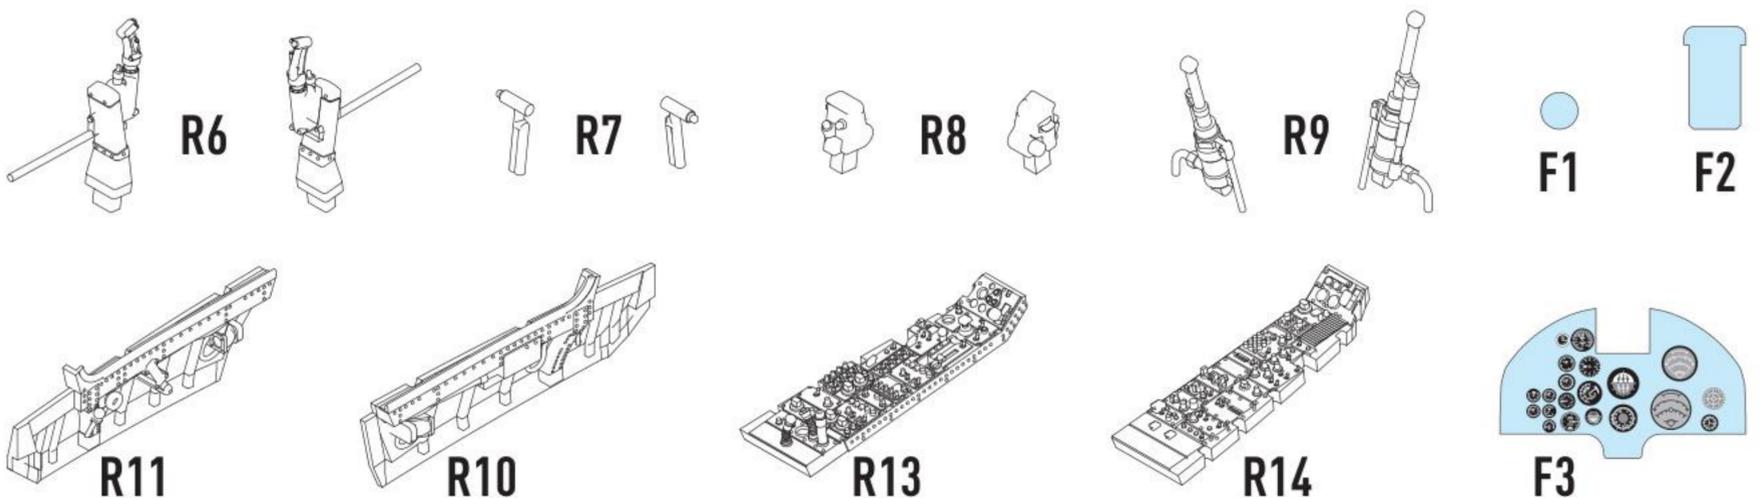
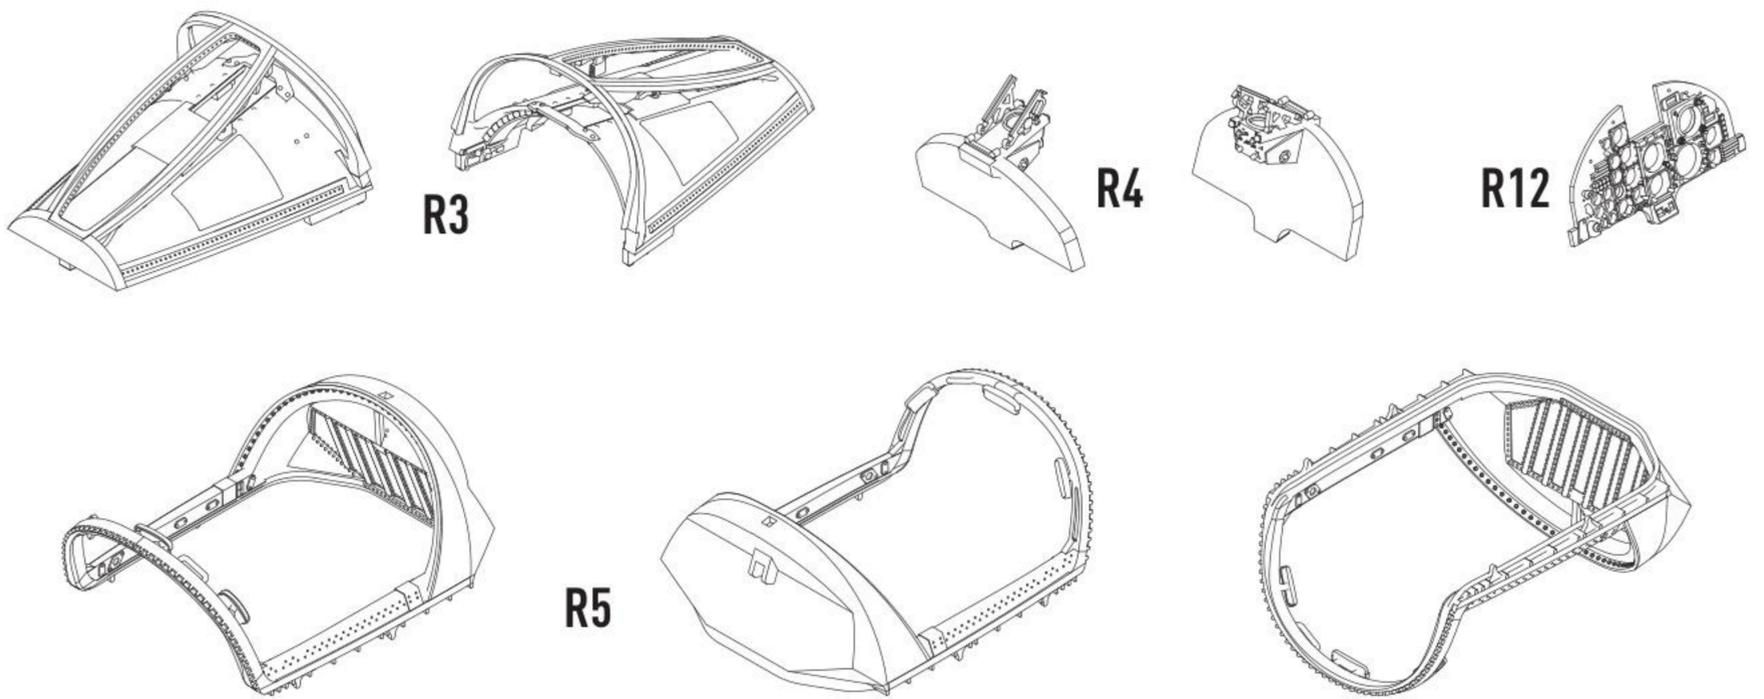


DETAILS AFTER REMOVAL FROM SUPPORTS


 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

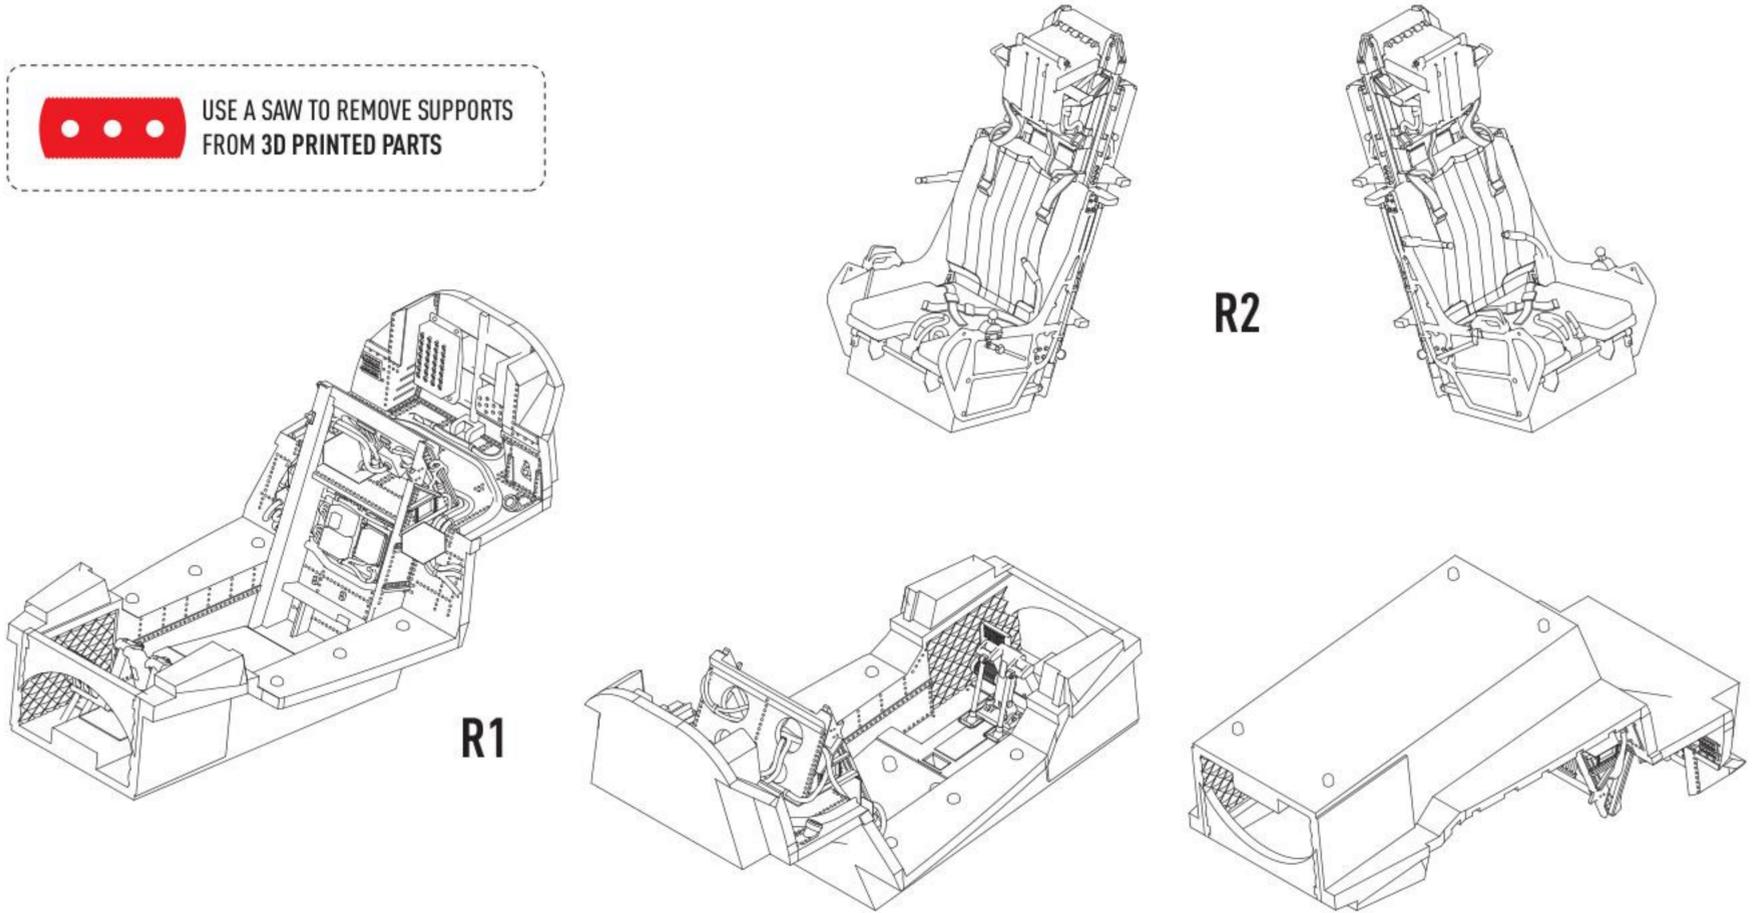


1

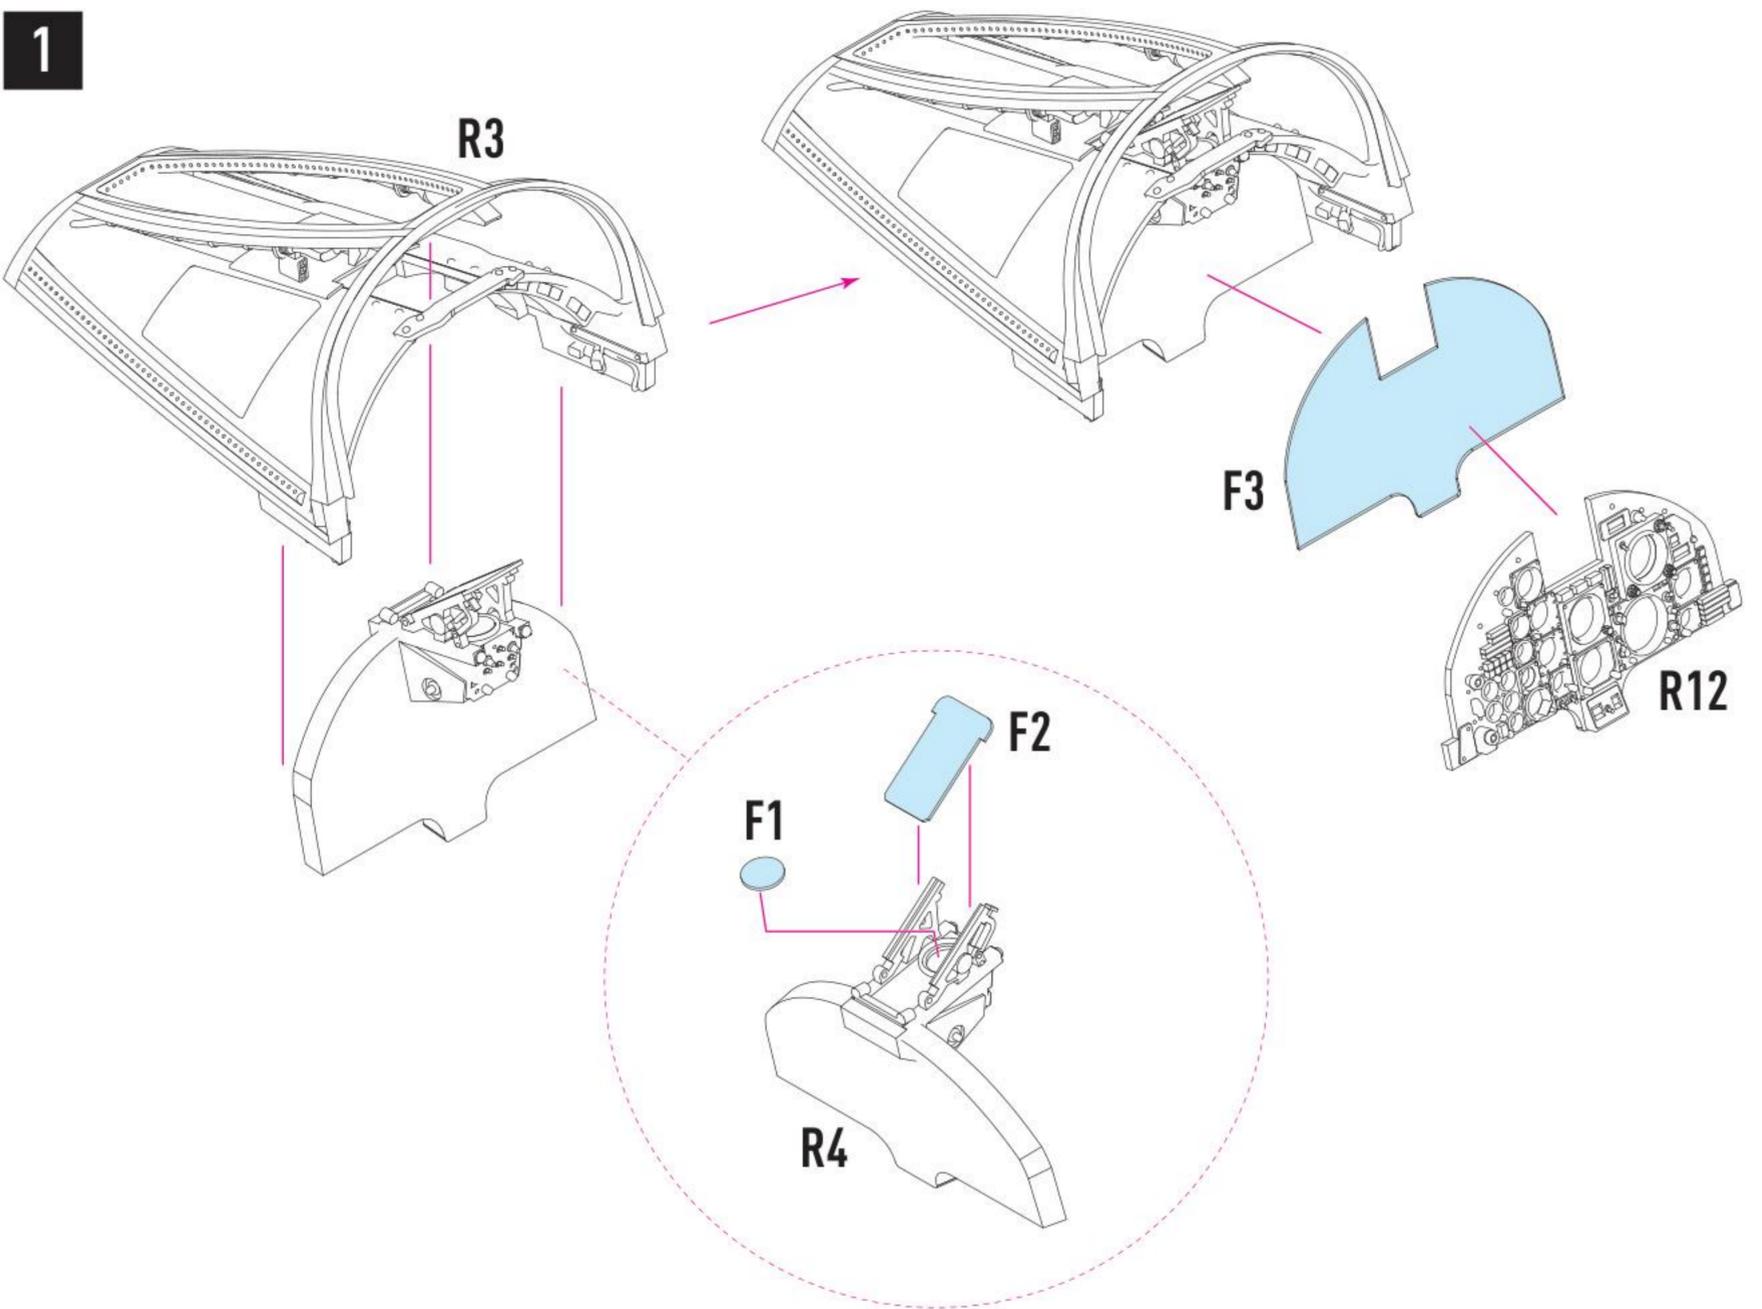


2

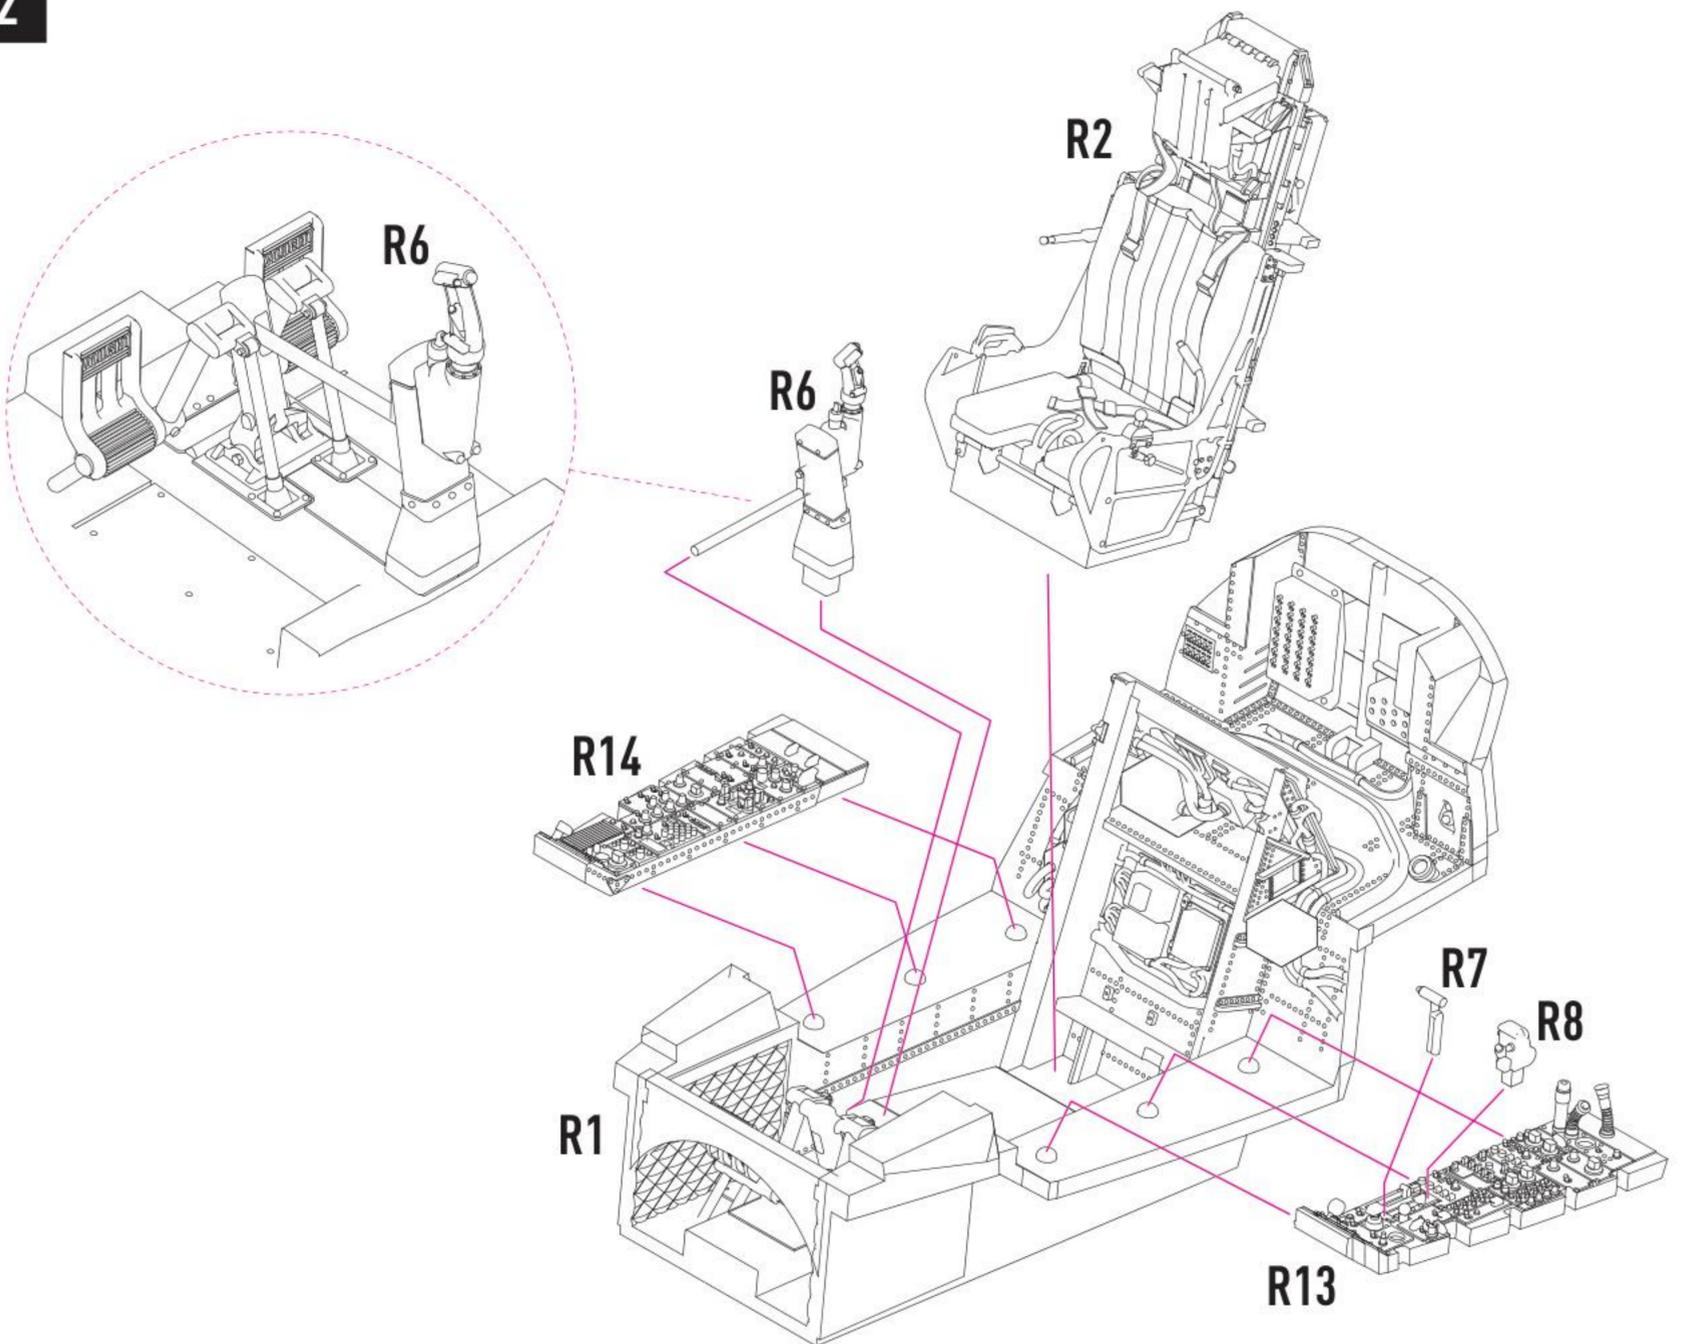



3

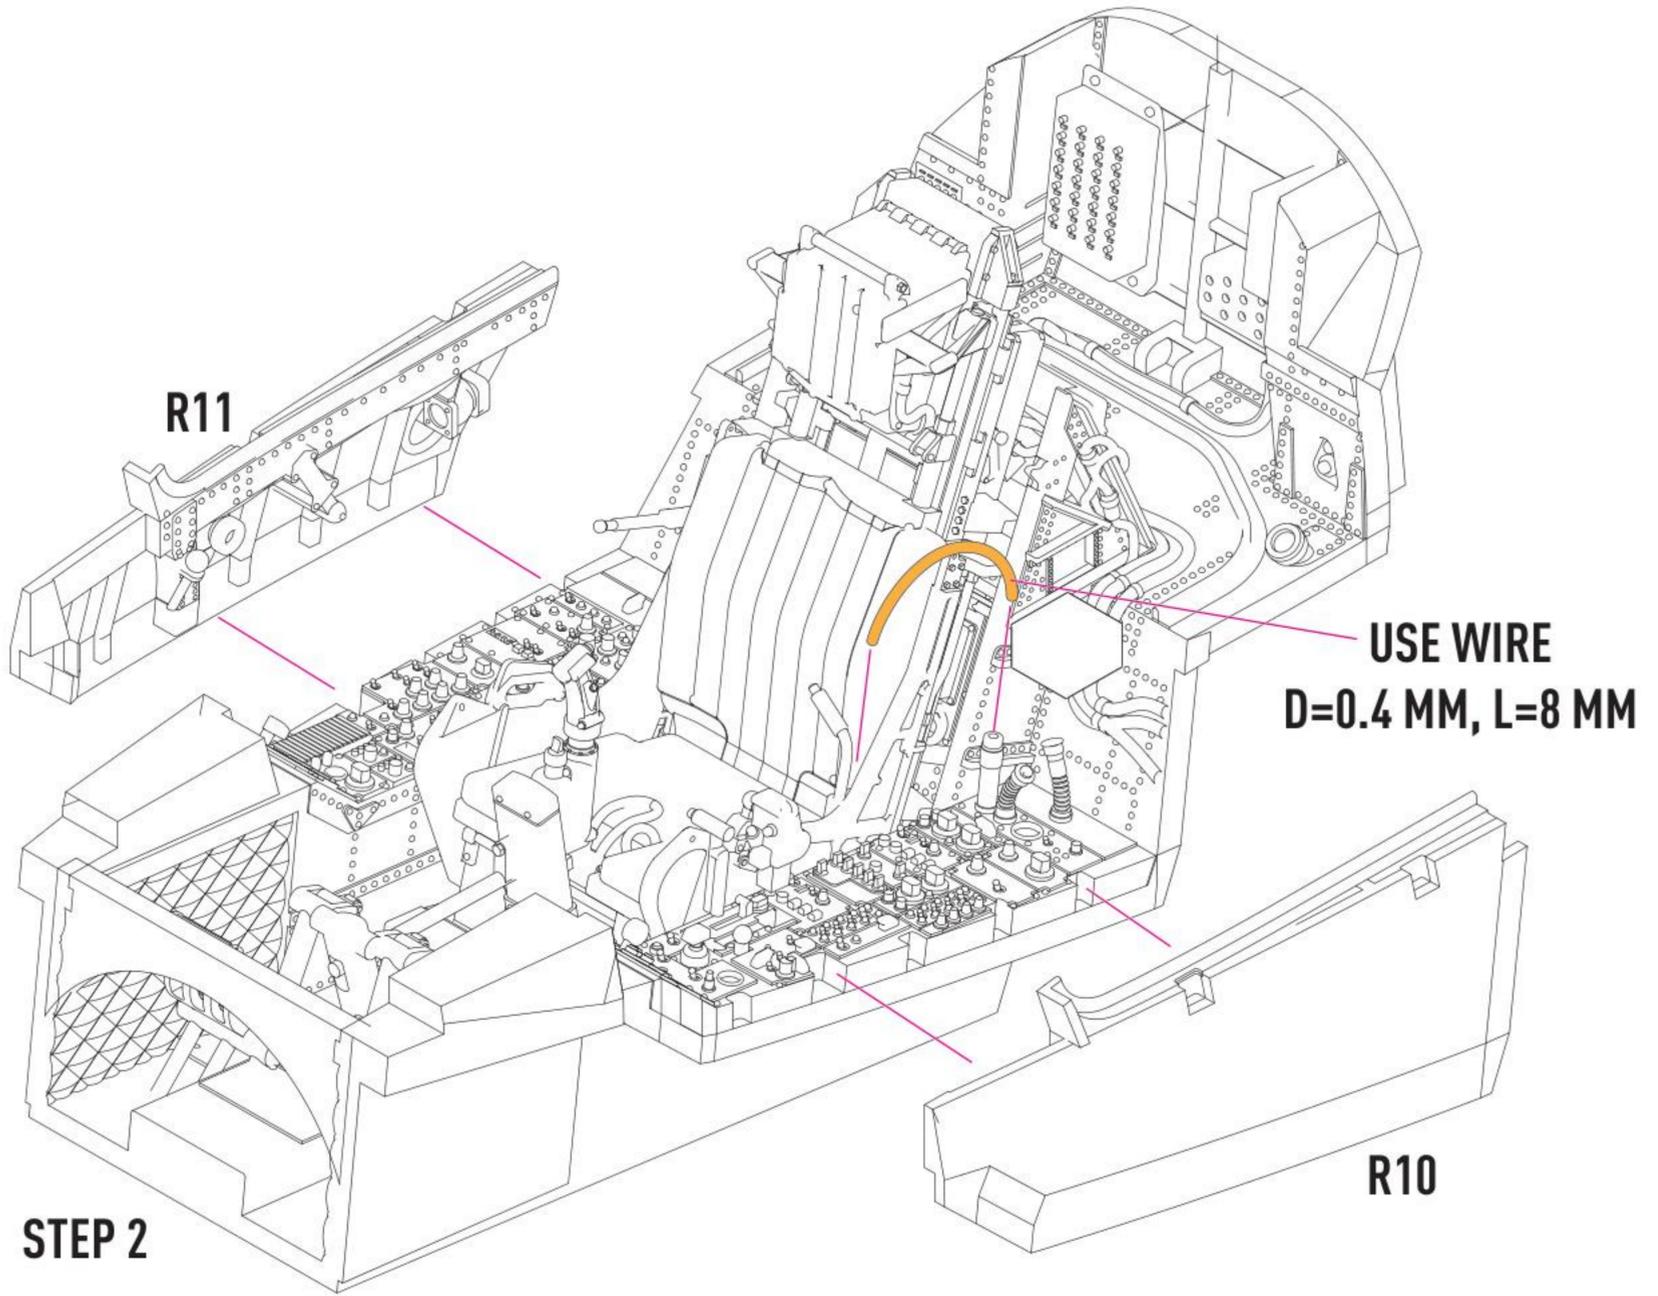


4

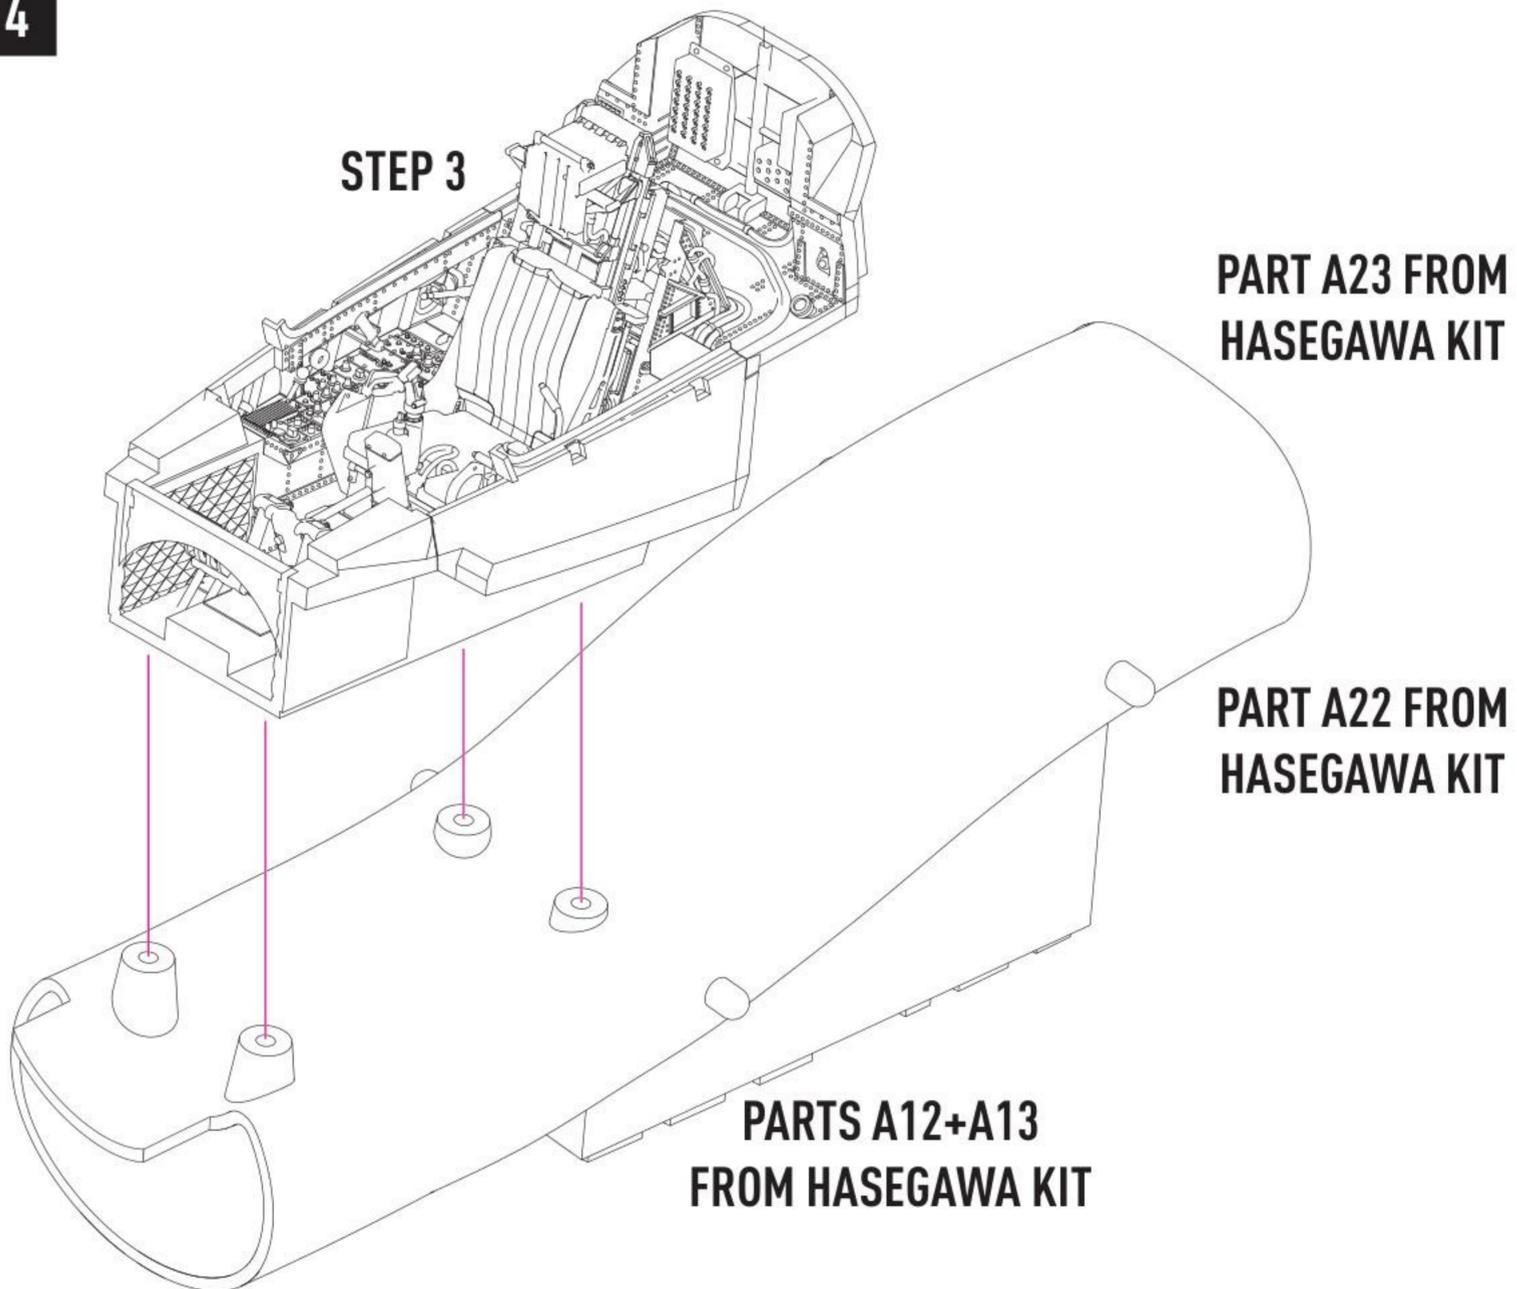


5 PREPARATION OF FUSELAGE PARTS FOR INSTALLATION OF ADDITIONAL KIT

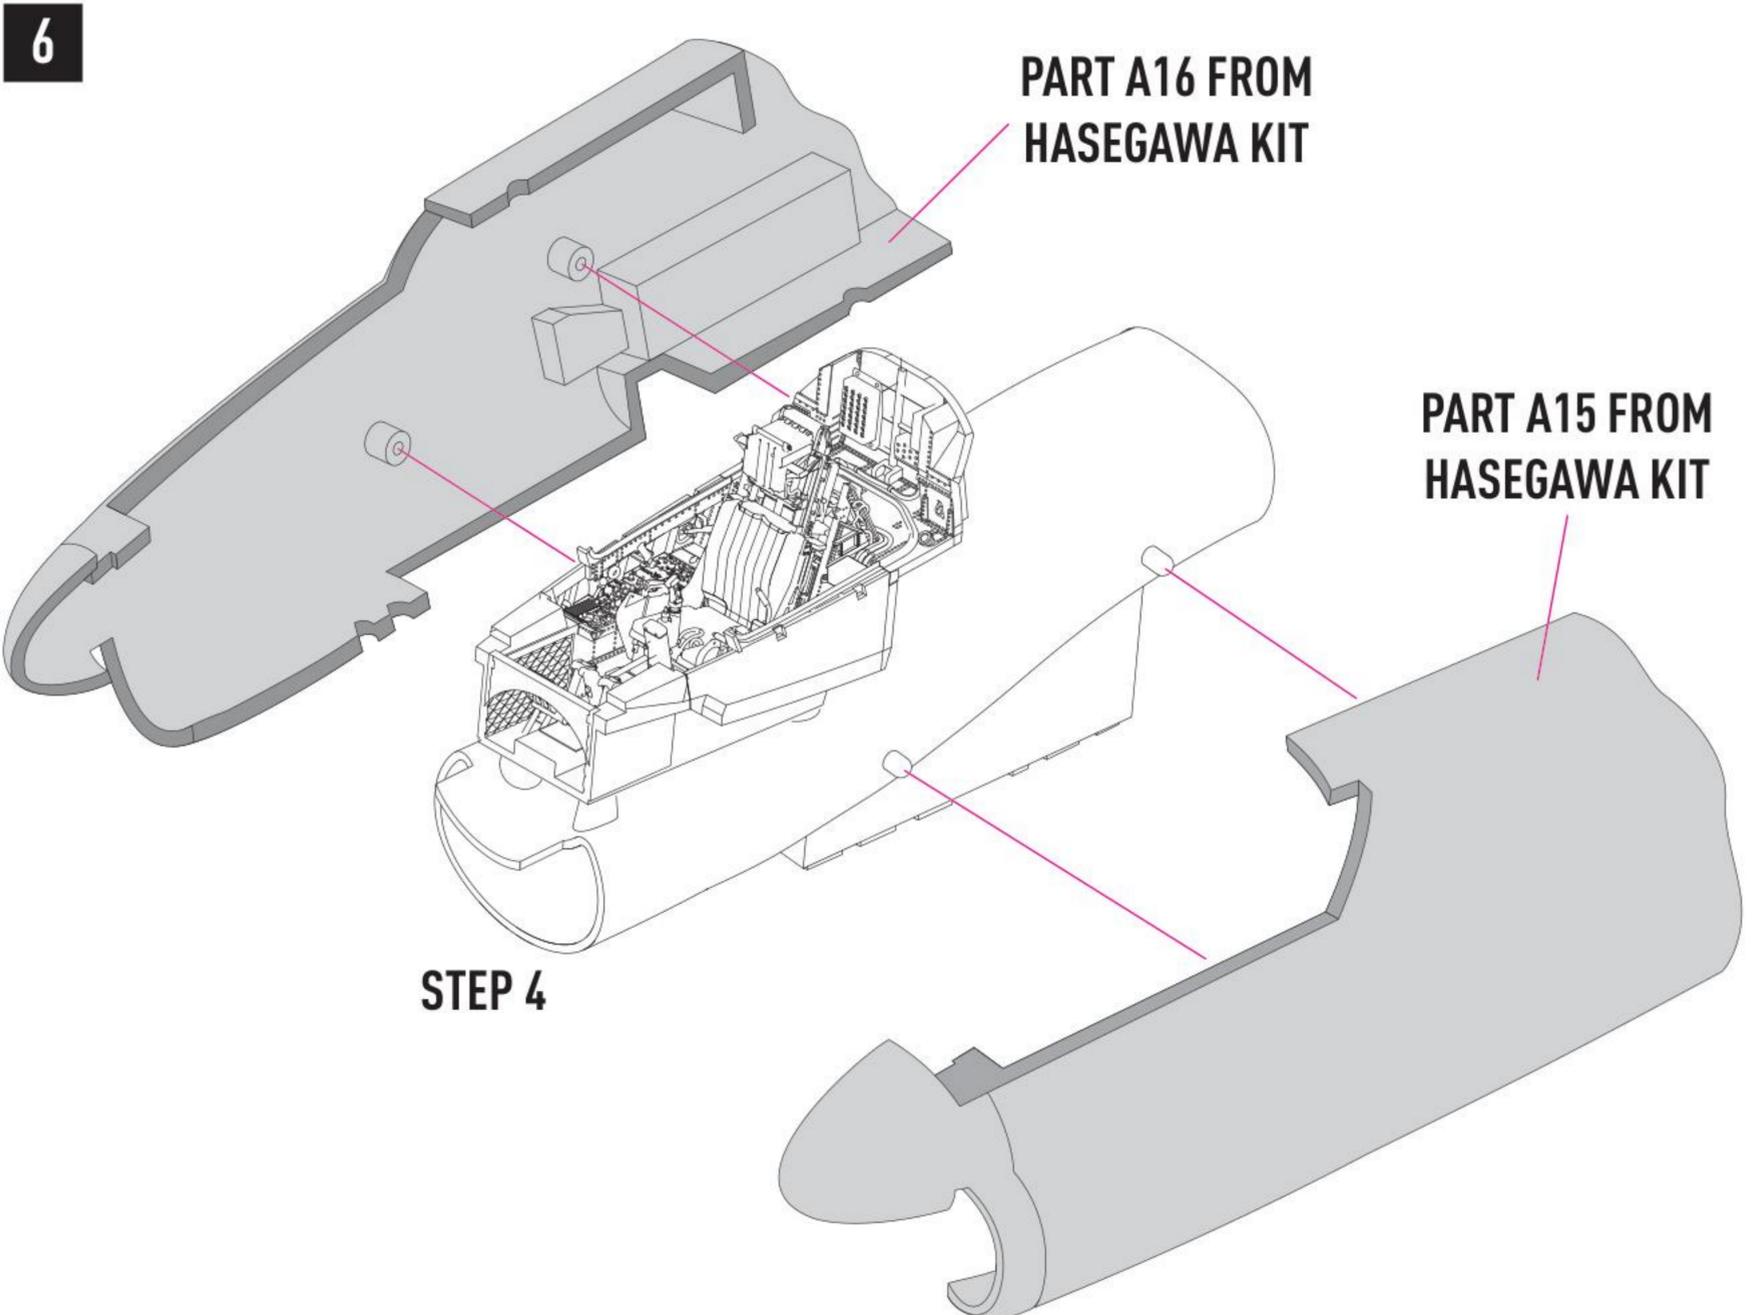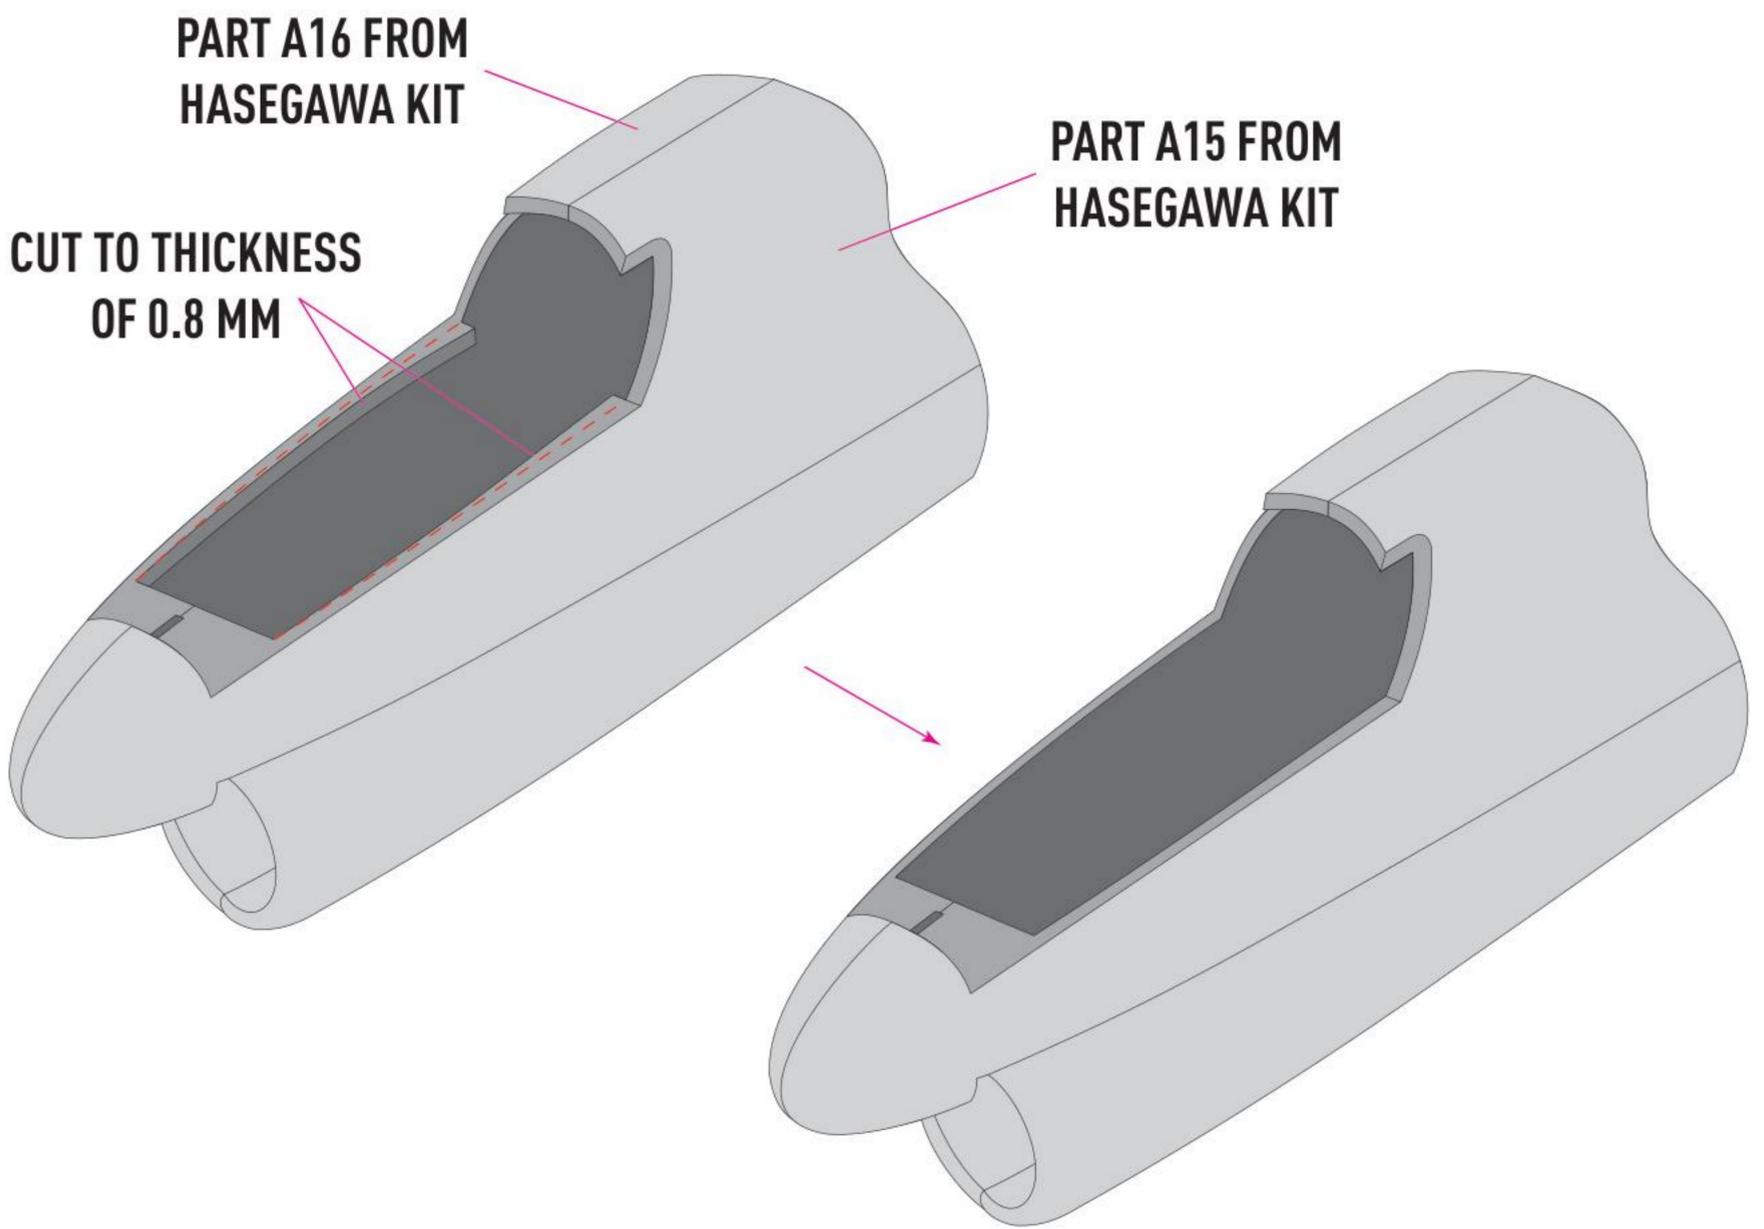


7 CLOSED CANOPY

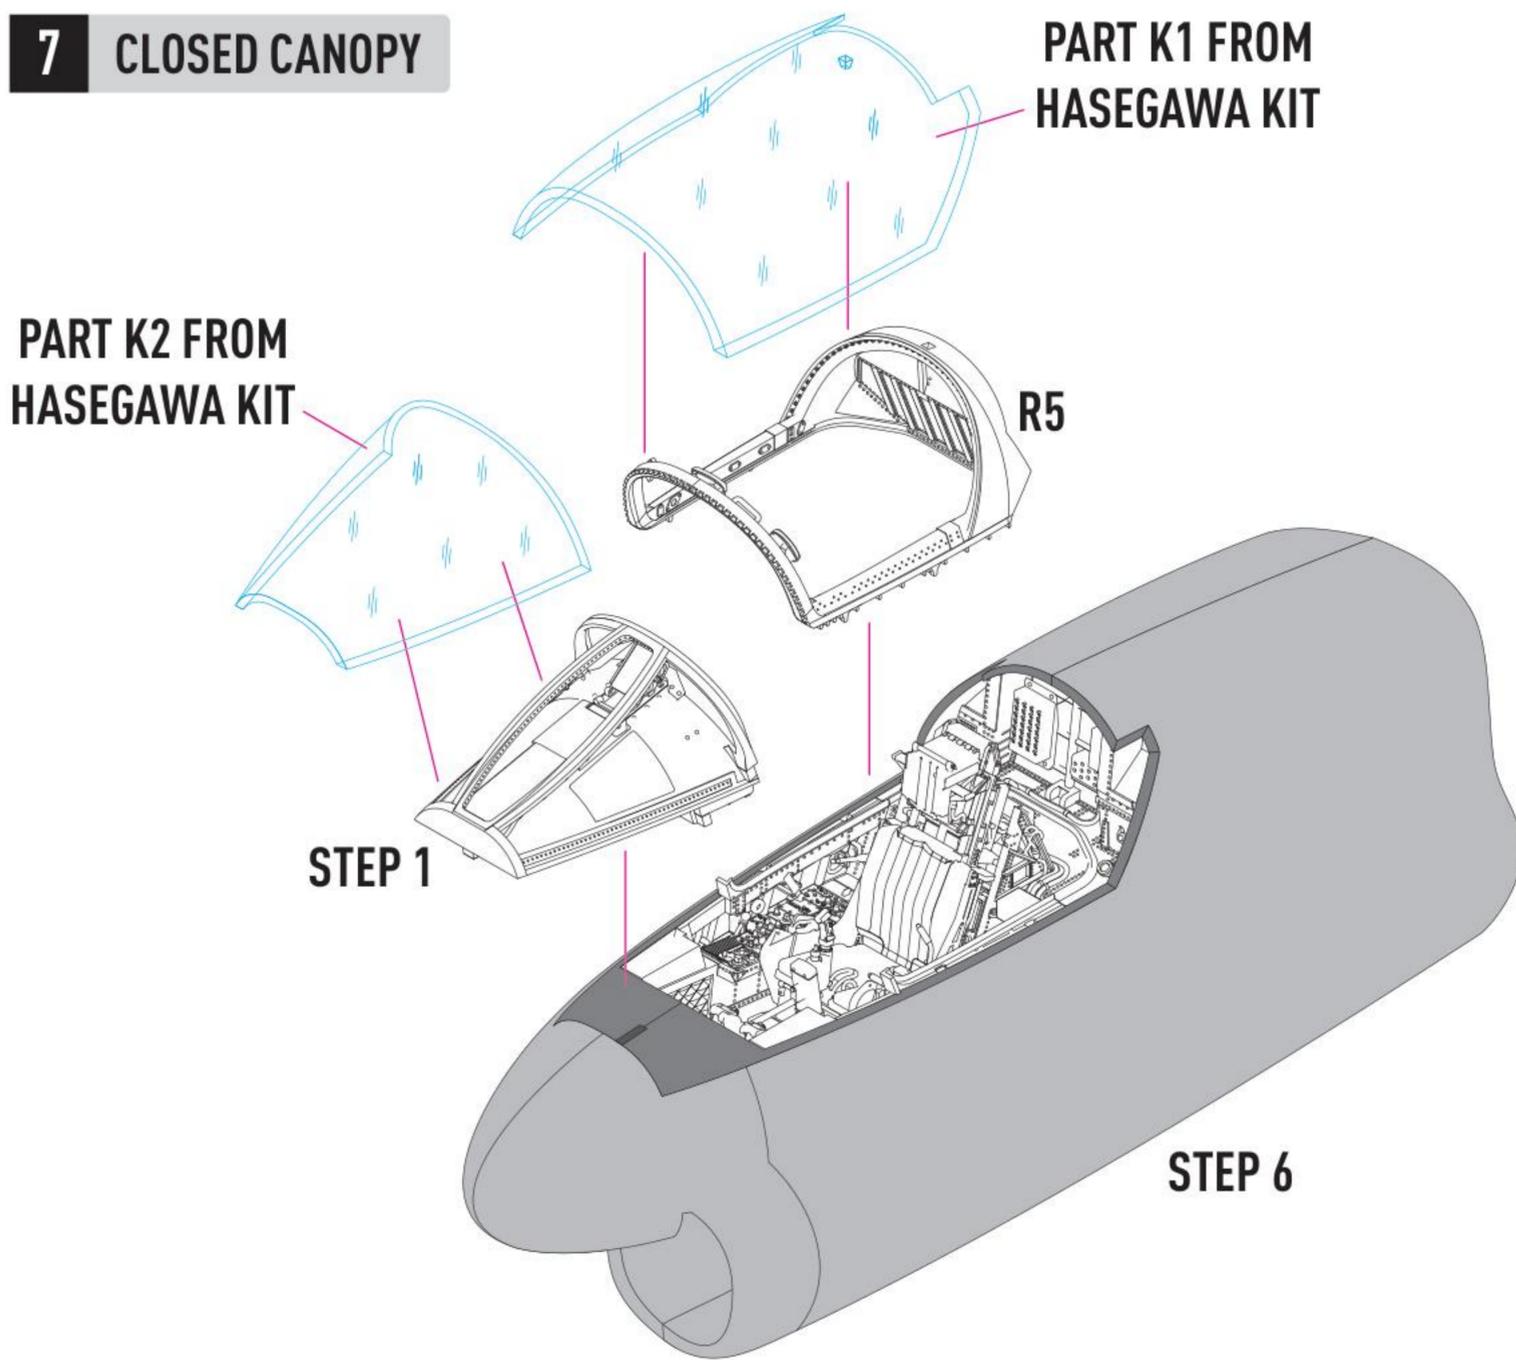


OPEN CANOPY


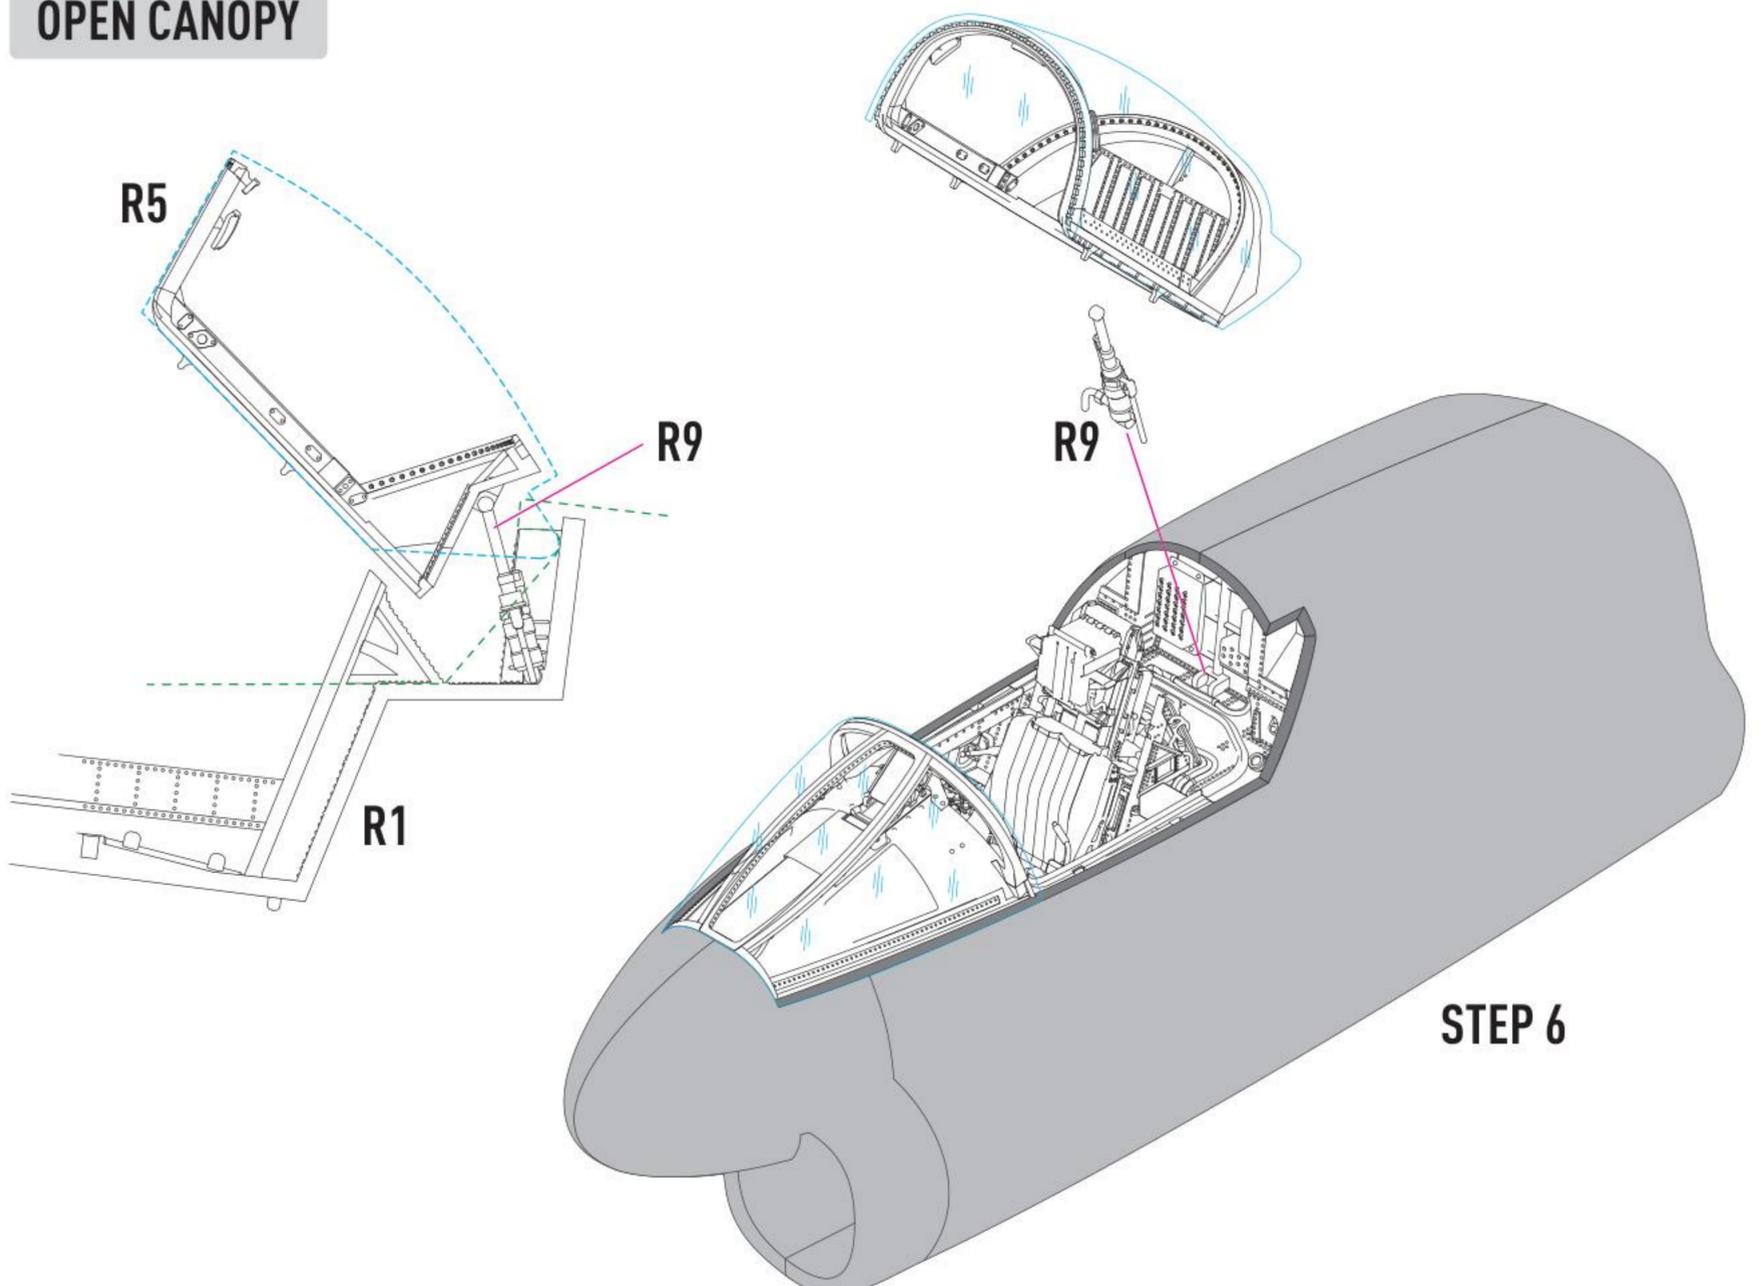


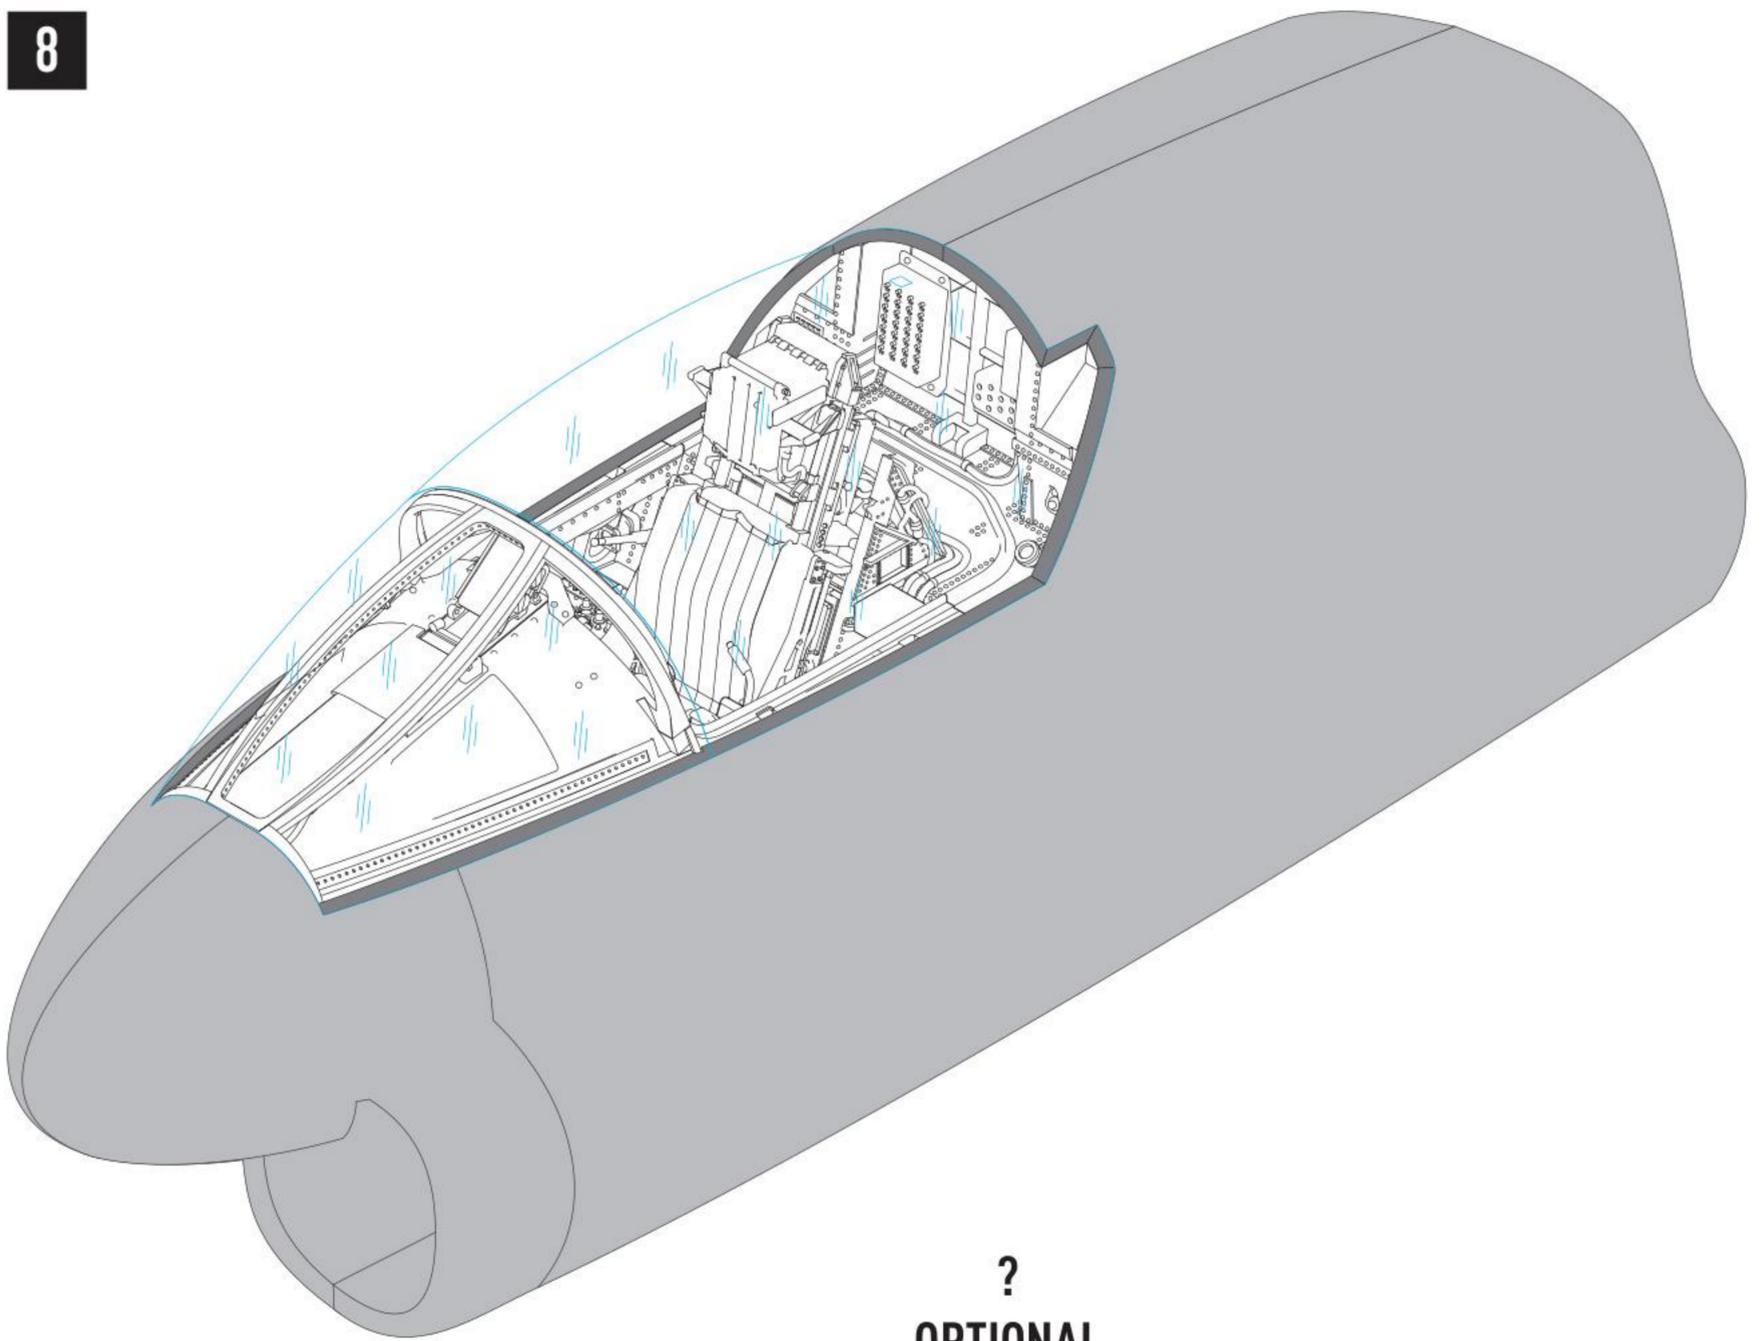

?
OPTIONAL

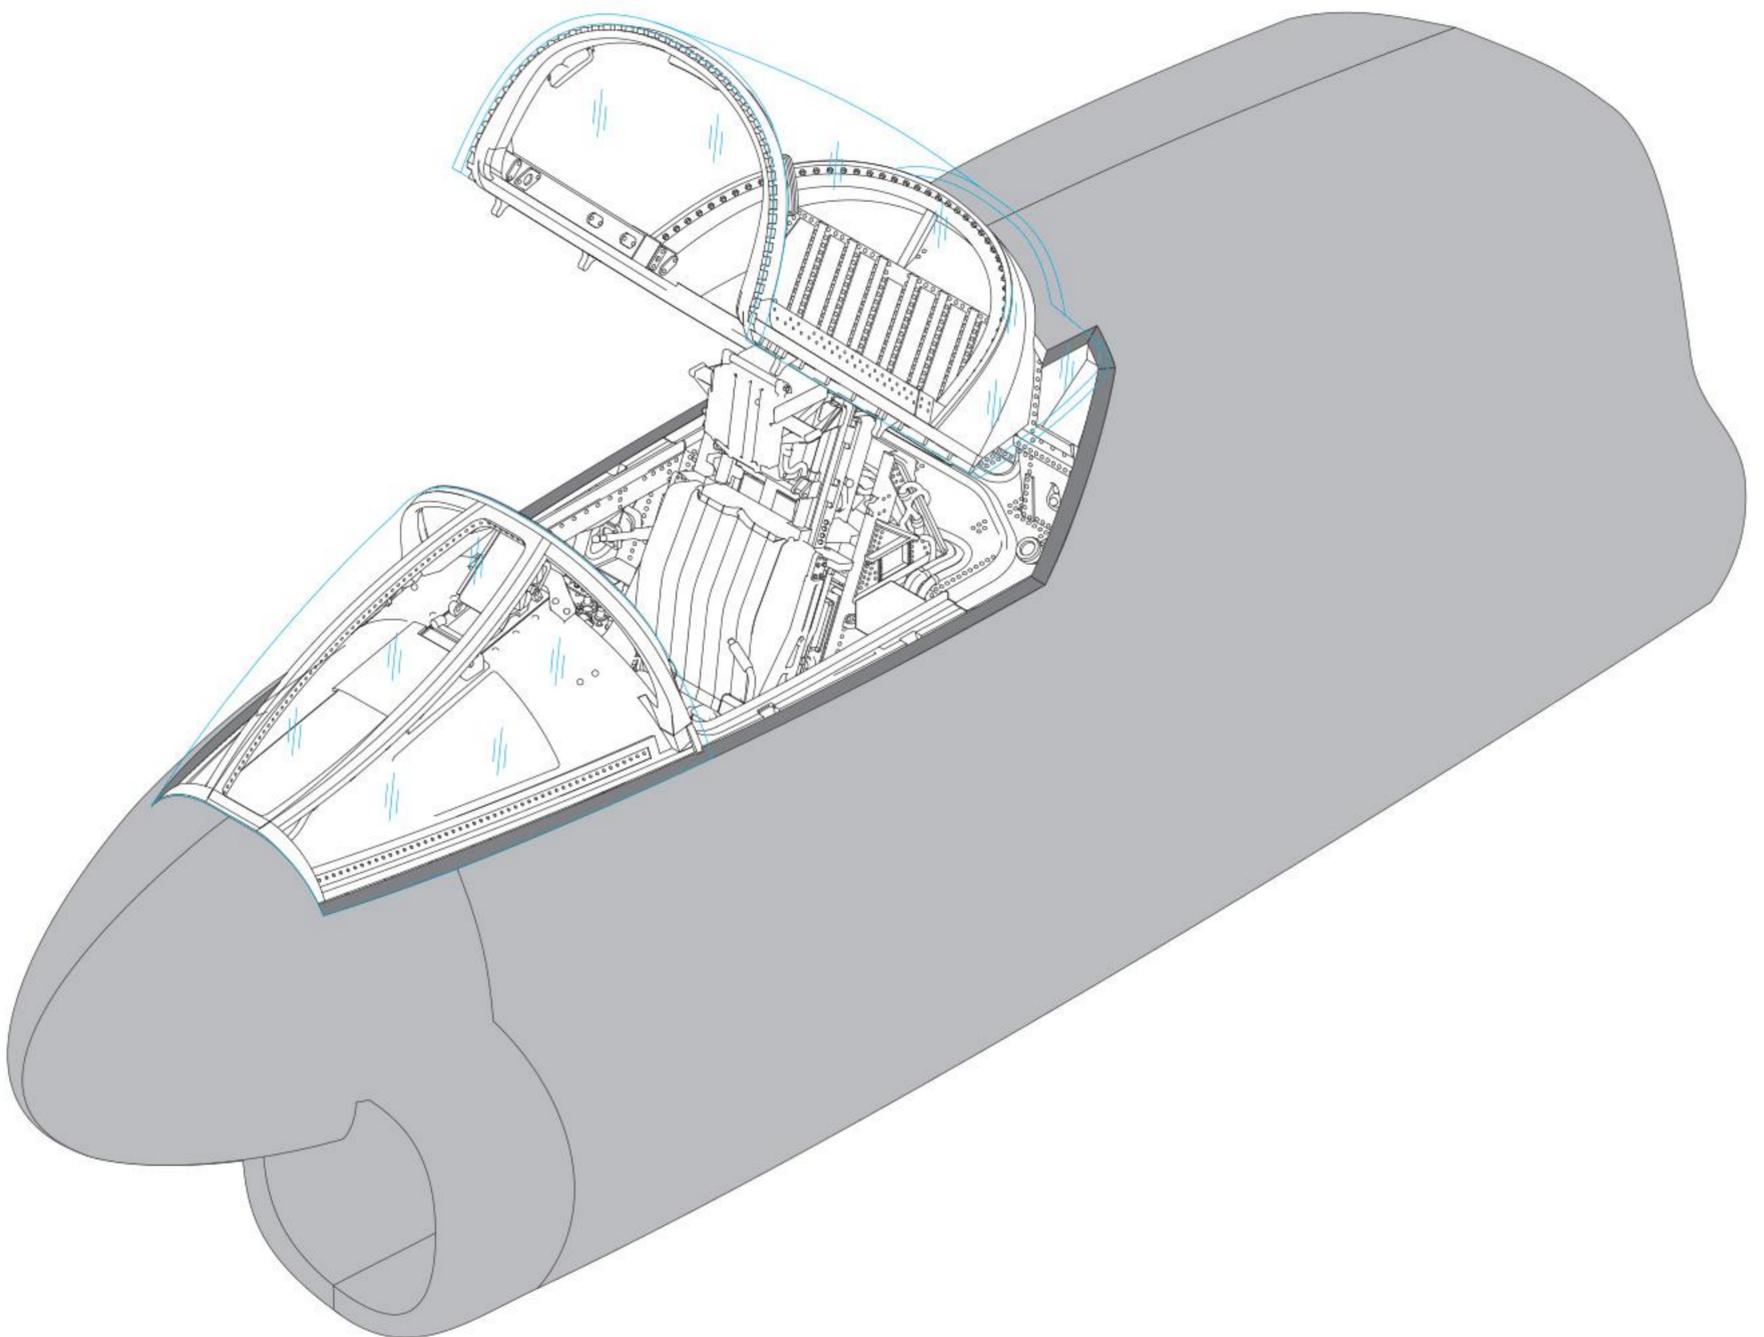

DECAL INSTRUCTION

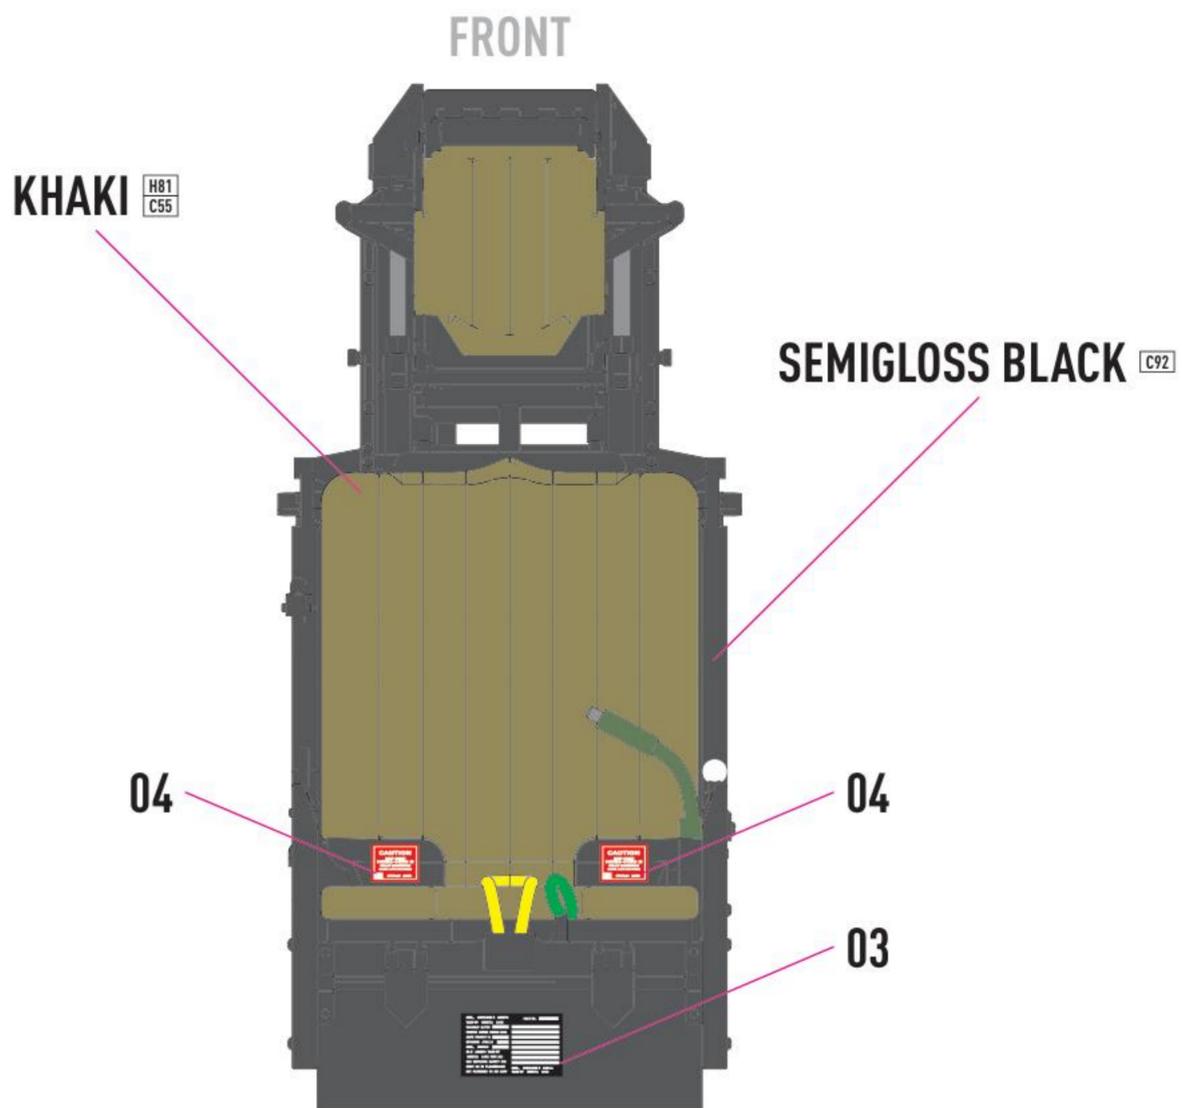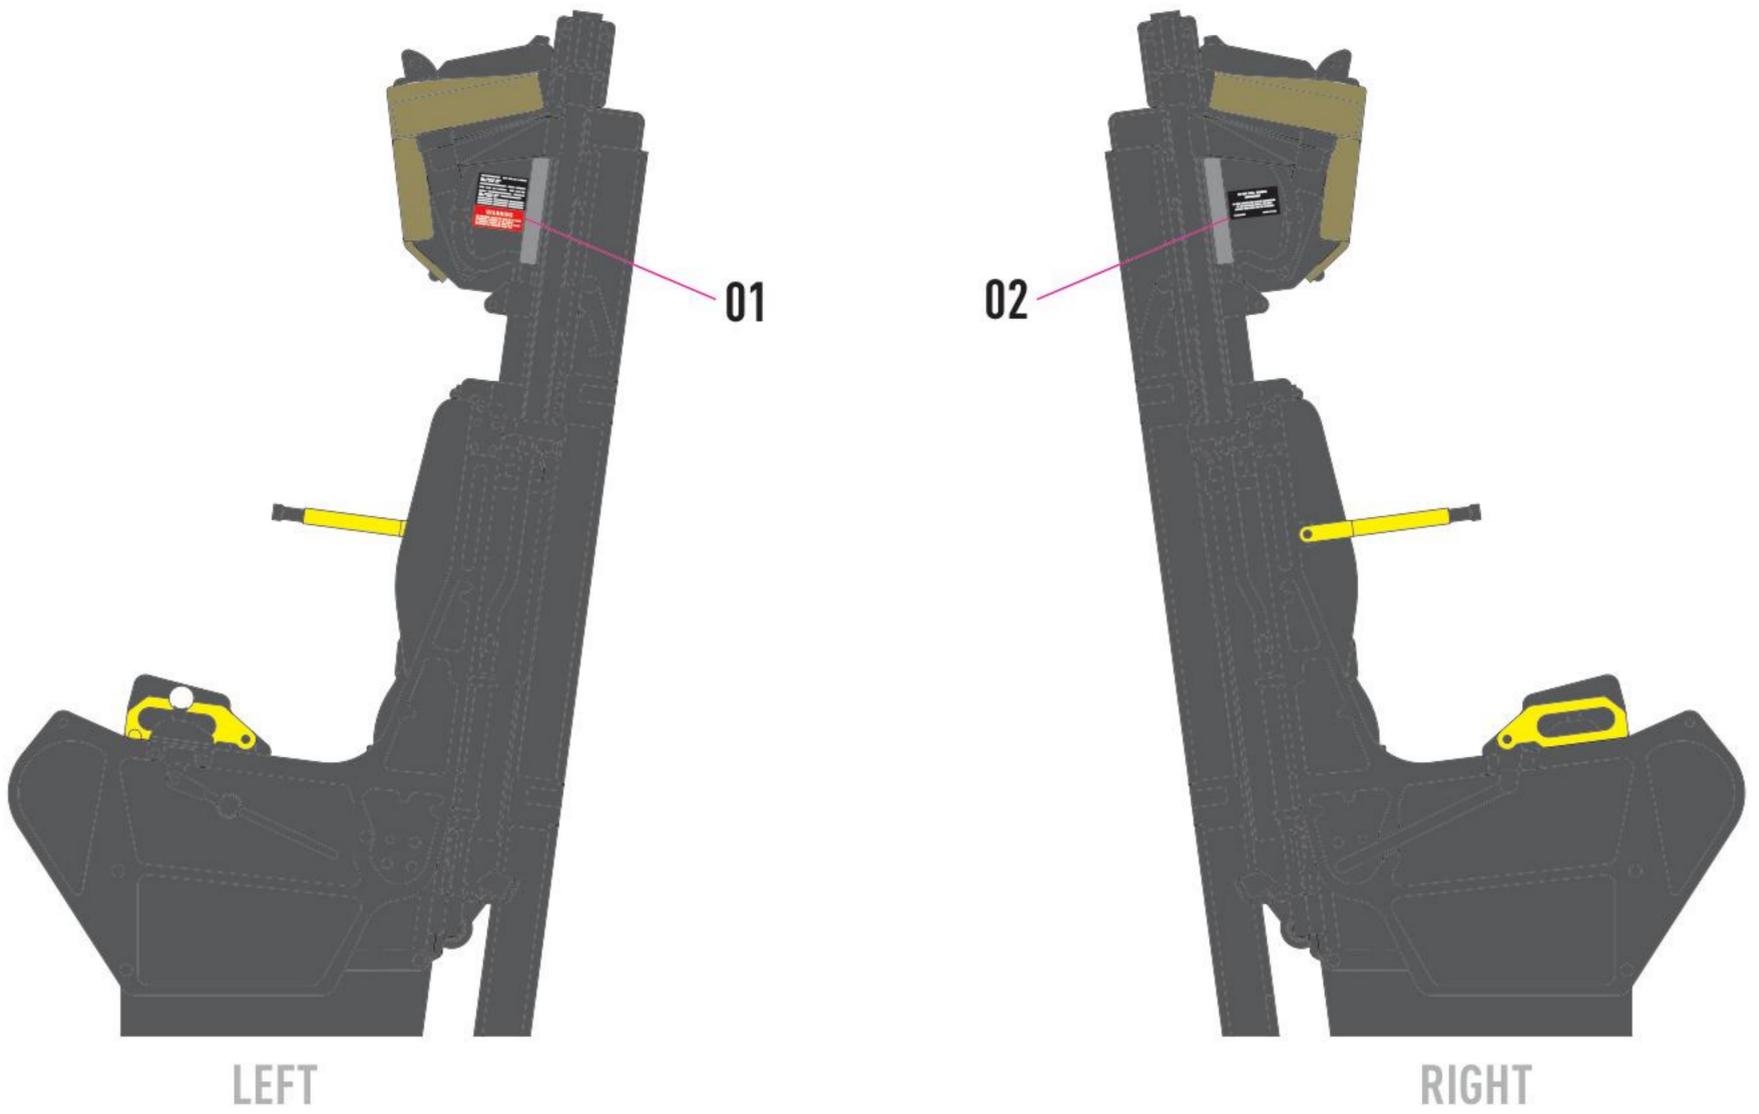

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
KHAKI	H81	C55
SEMIGLOSS BLACK		C92

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

 [fb.com/reskit.official](https://www.facebook.com/reskit.official)

 [instagram.com/reskit_official](https://www.instagram.com/reskit_official)

 [pinterest.com/reskit_official](https://www.pinterest.com/reskit_official)

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua