

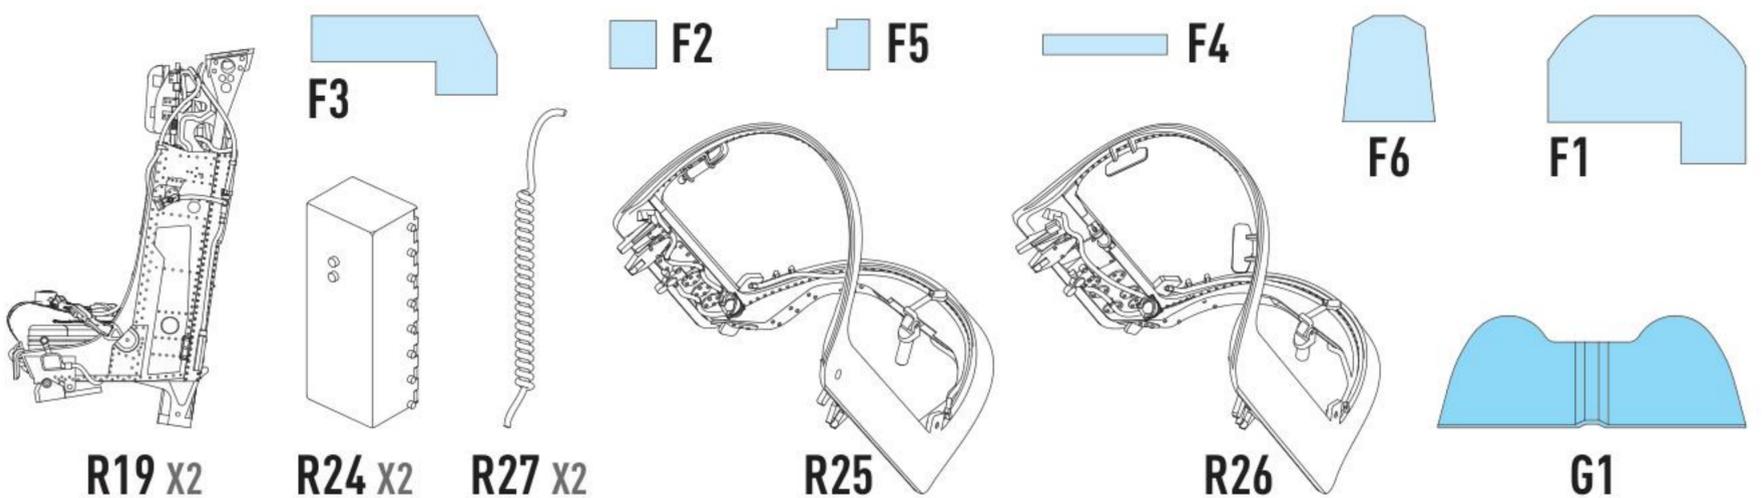
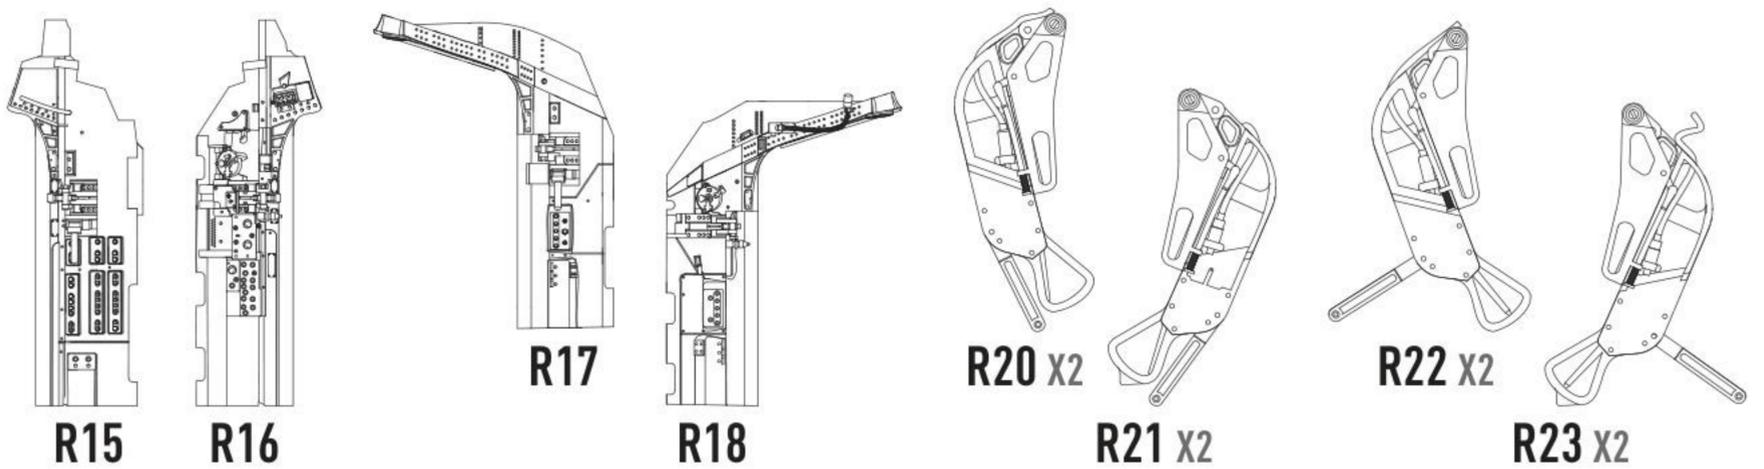
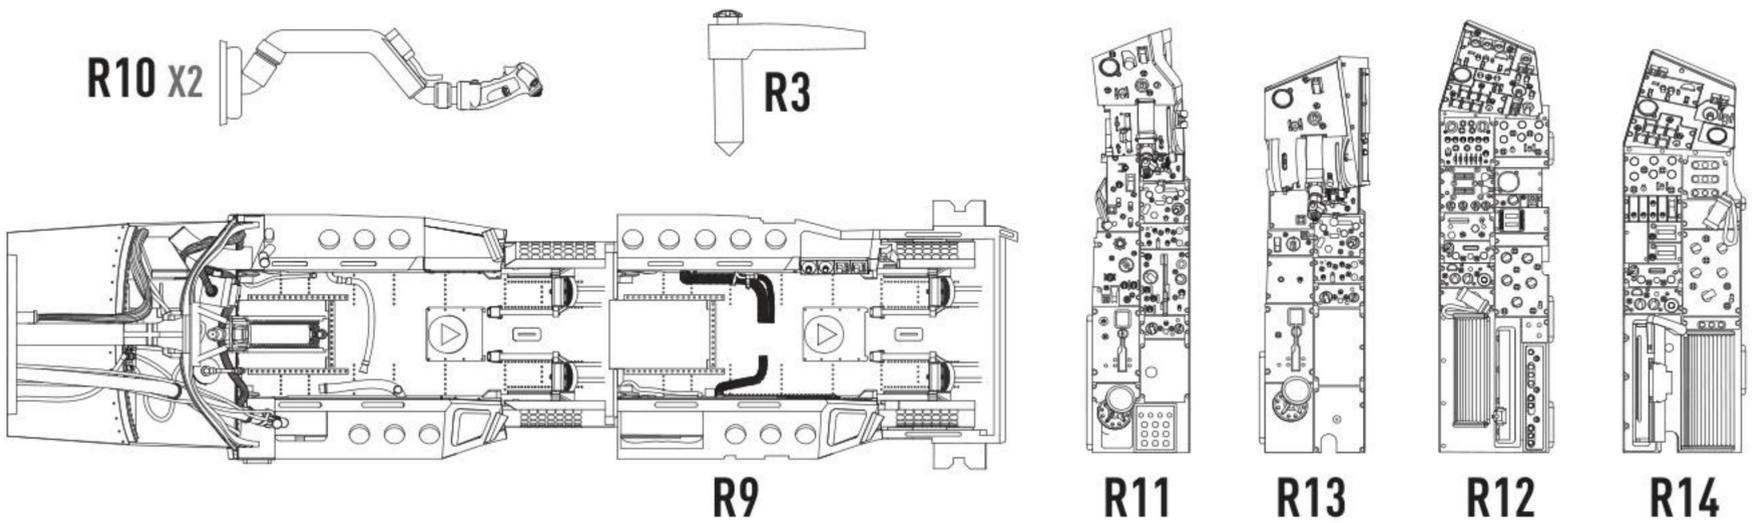


 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

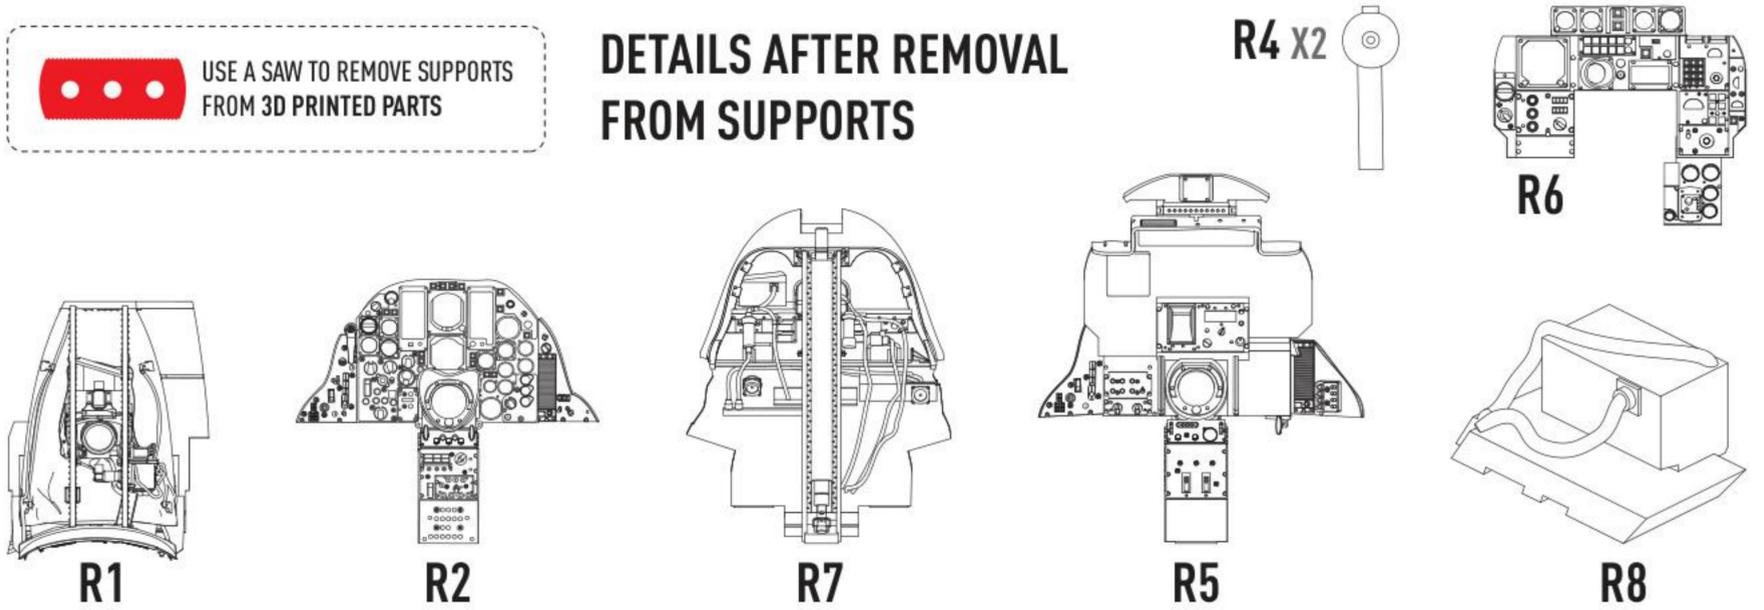


1 APPLY WITHOUT GLUING THE TWO PARTS TOGETHER AND PASTE THE MASK. MARK THE PATH OF THE CONTOUR AND DELETE THE PART INDICATED IN RED

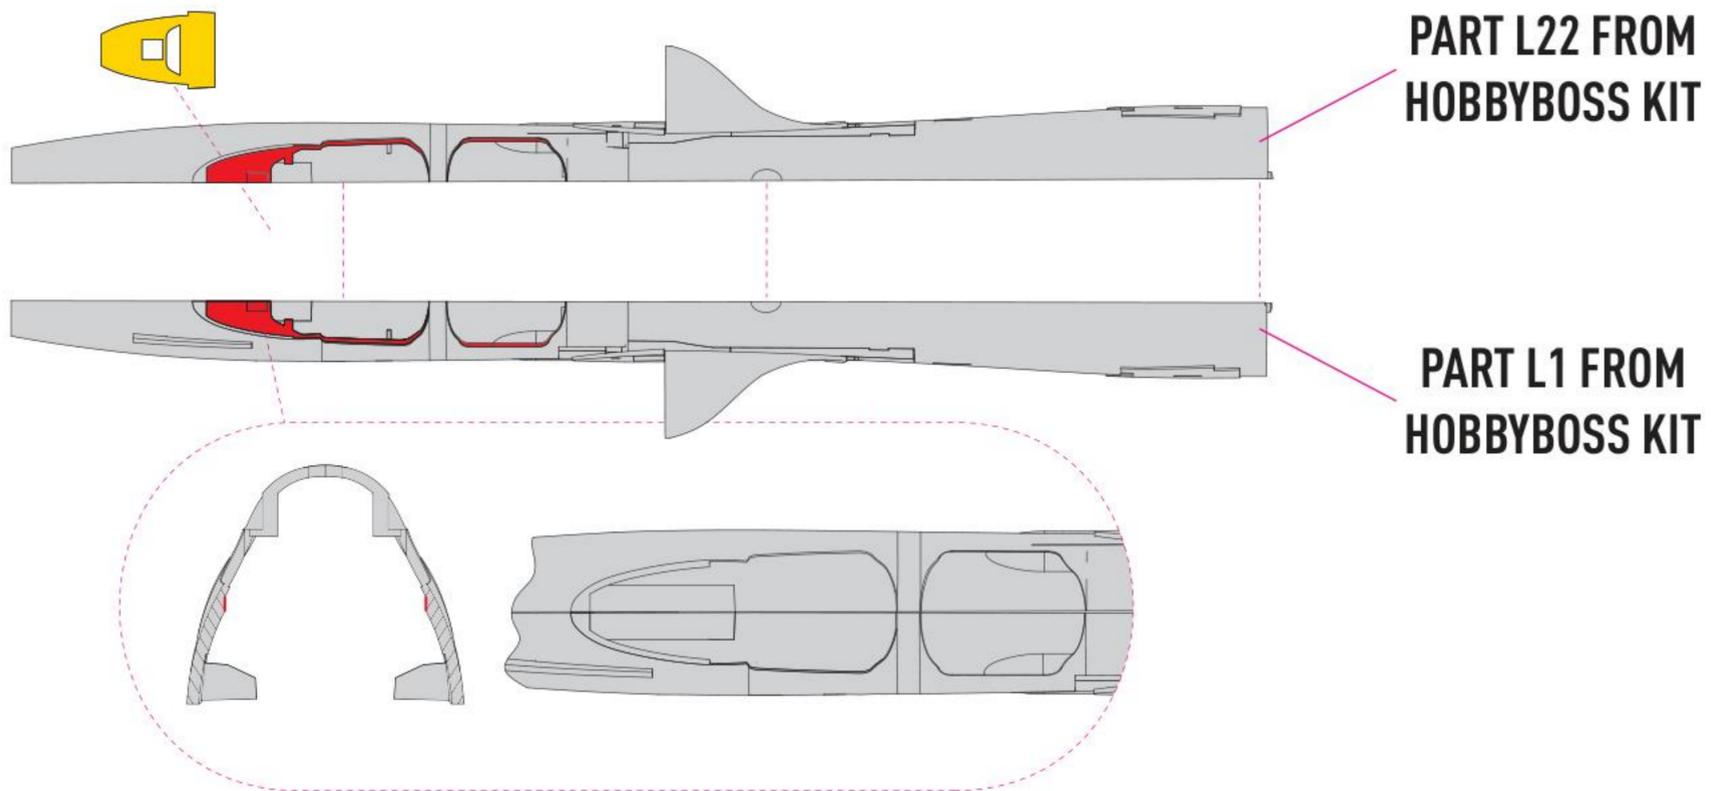

2 CUT IN BOTH PARTS (IN THE PLACES INDICATED IN RED) CHAMFER NOT LESS THAN 45°

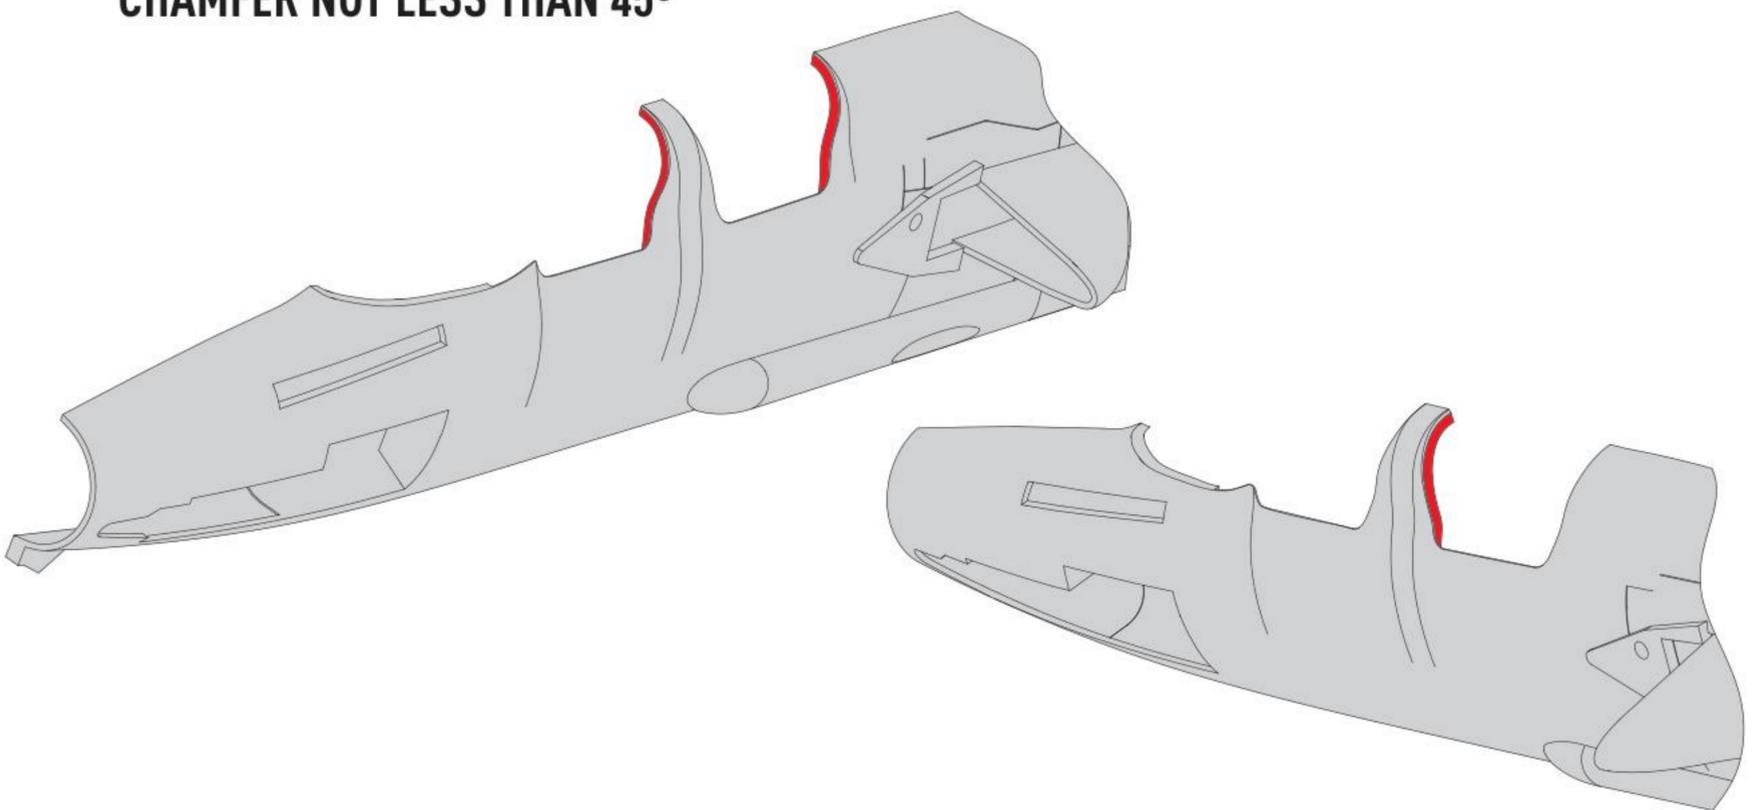


3 IN BOTH PARTS, REMOVE THE SURFACE INDICATED IN RED. DO NOT DEFORM LANDING PLACES

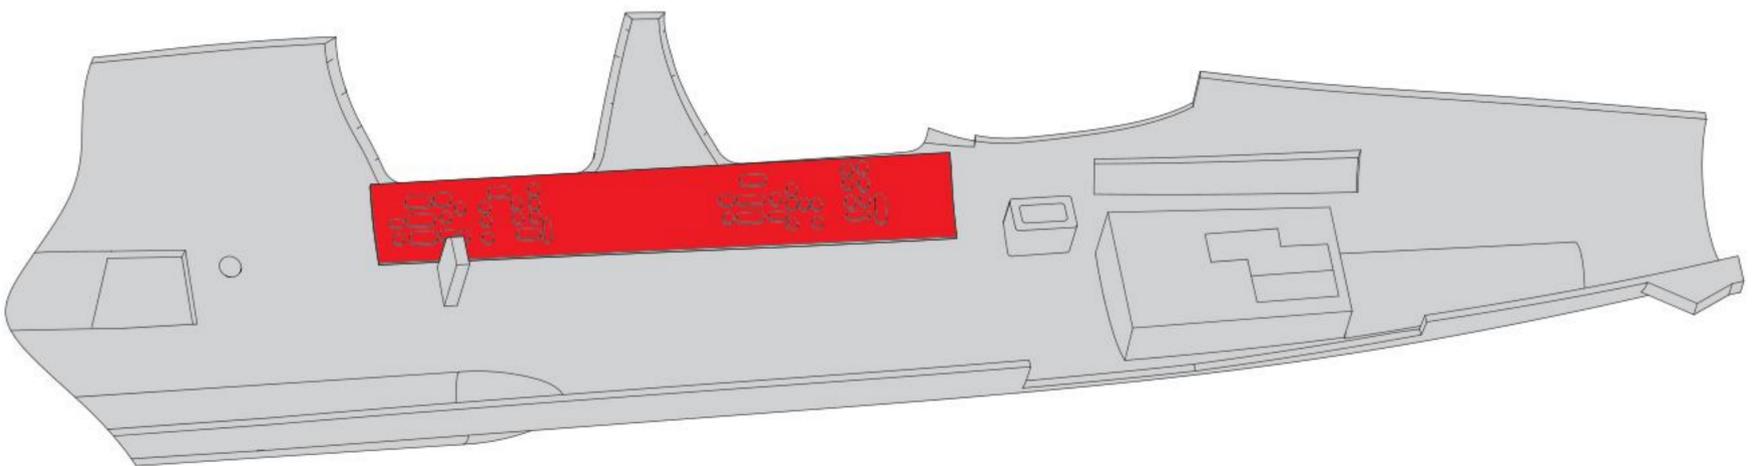



4 IF THE CABIN WILL BE OPEN, ATTACH THE TWO PARTS TOGETHER WITHOUT GLUING THEM AND MARK THE DIMENSIONAL CONTOURS ACCORDING TO THE IMAGE.

REMOVE THE PARTS INDICATED IN RED.
THIS OPTION WILL BE CONSIDERED IN THE INSTRUCTIONS LATER.

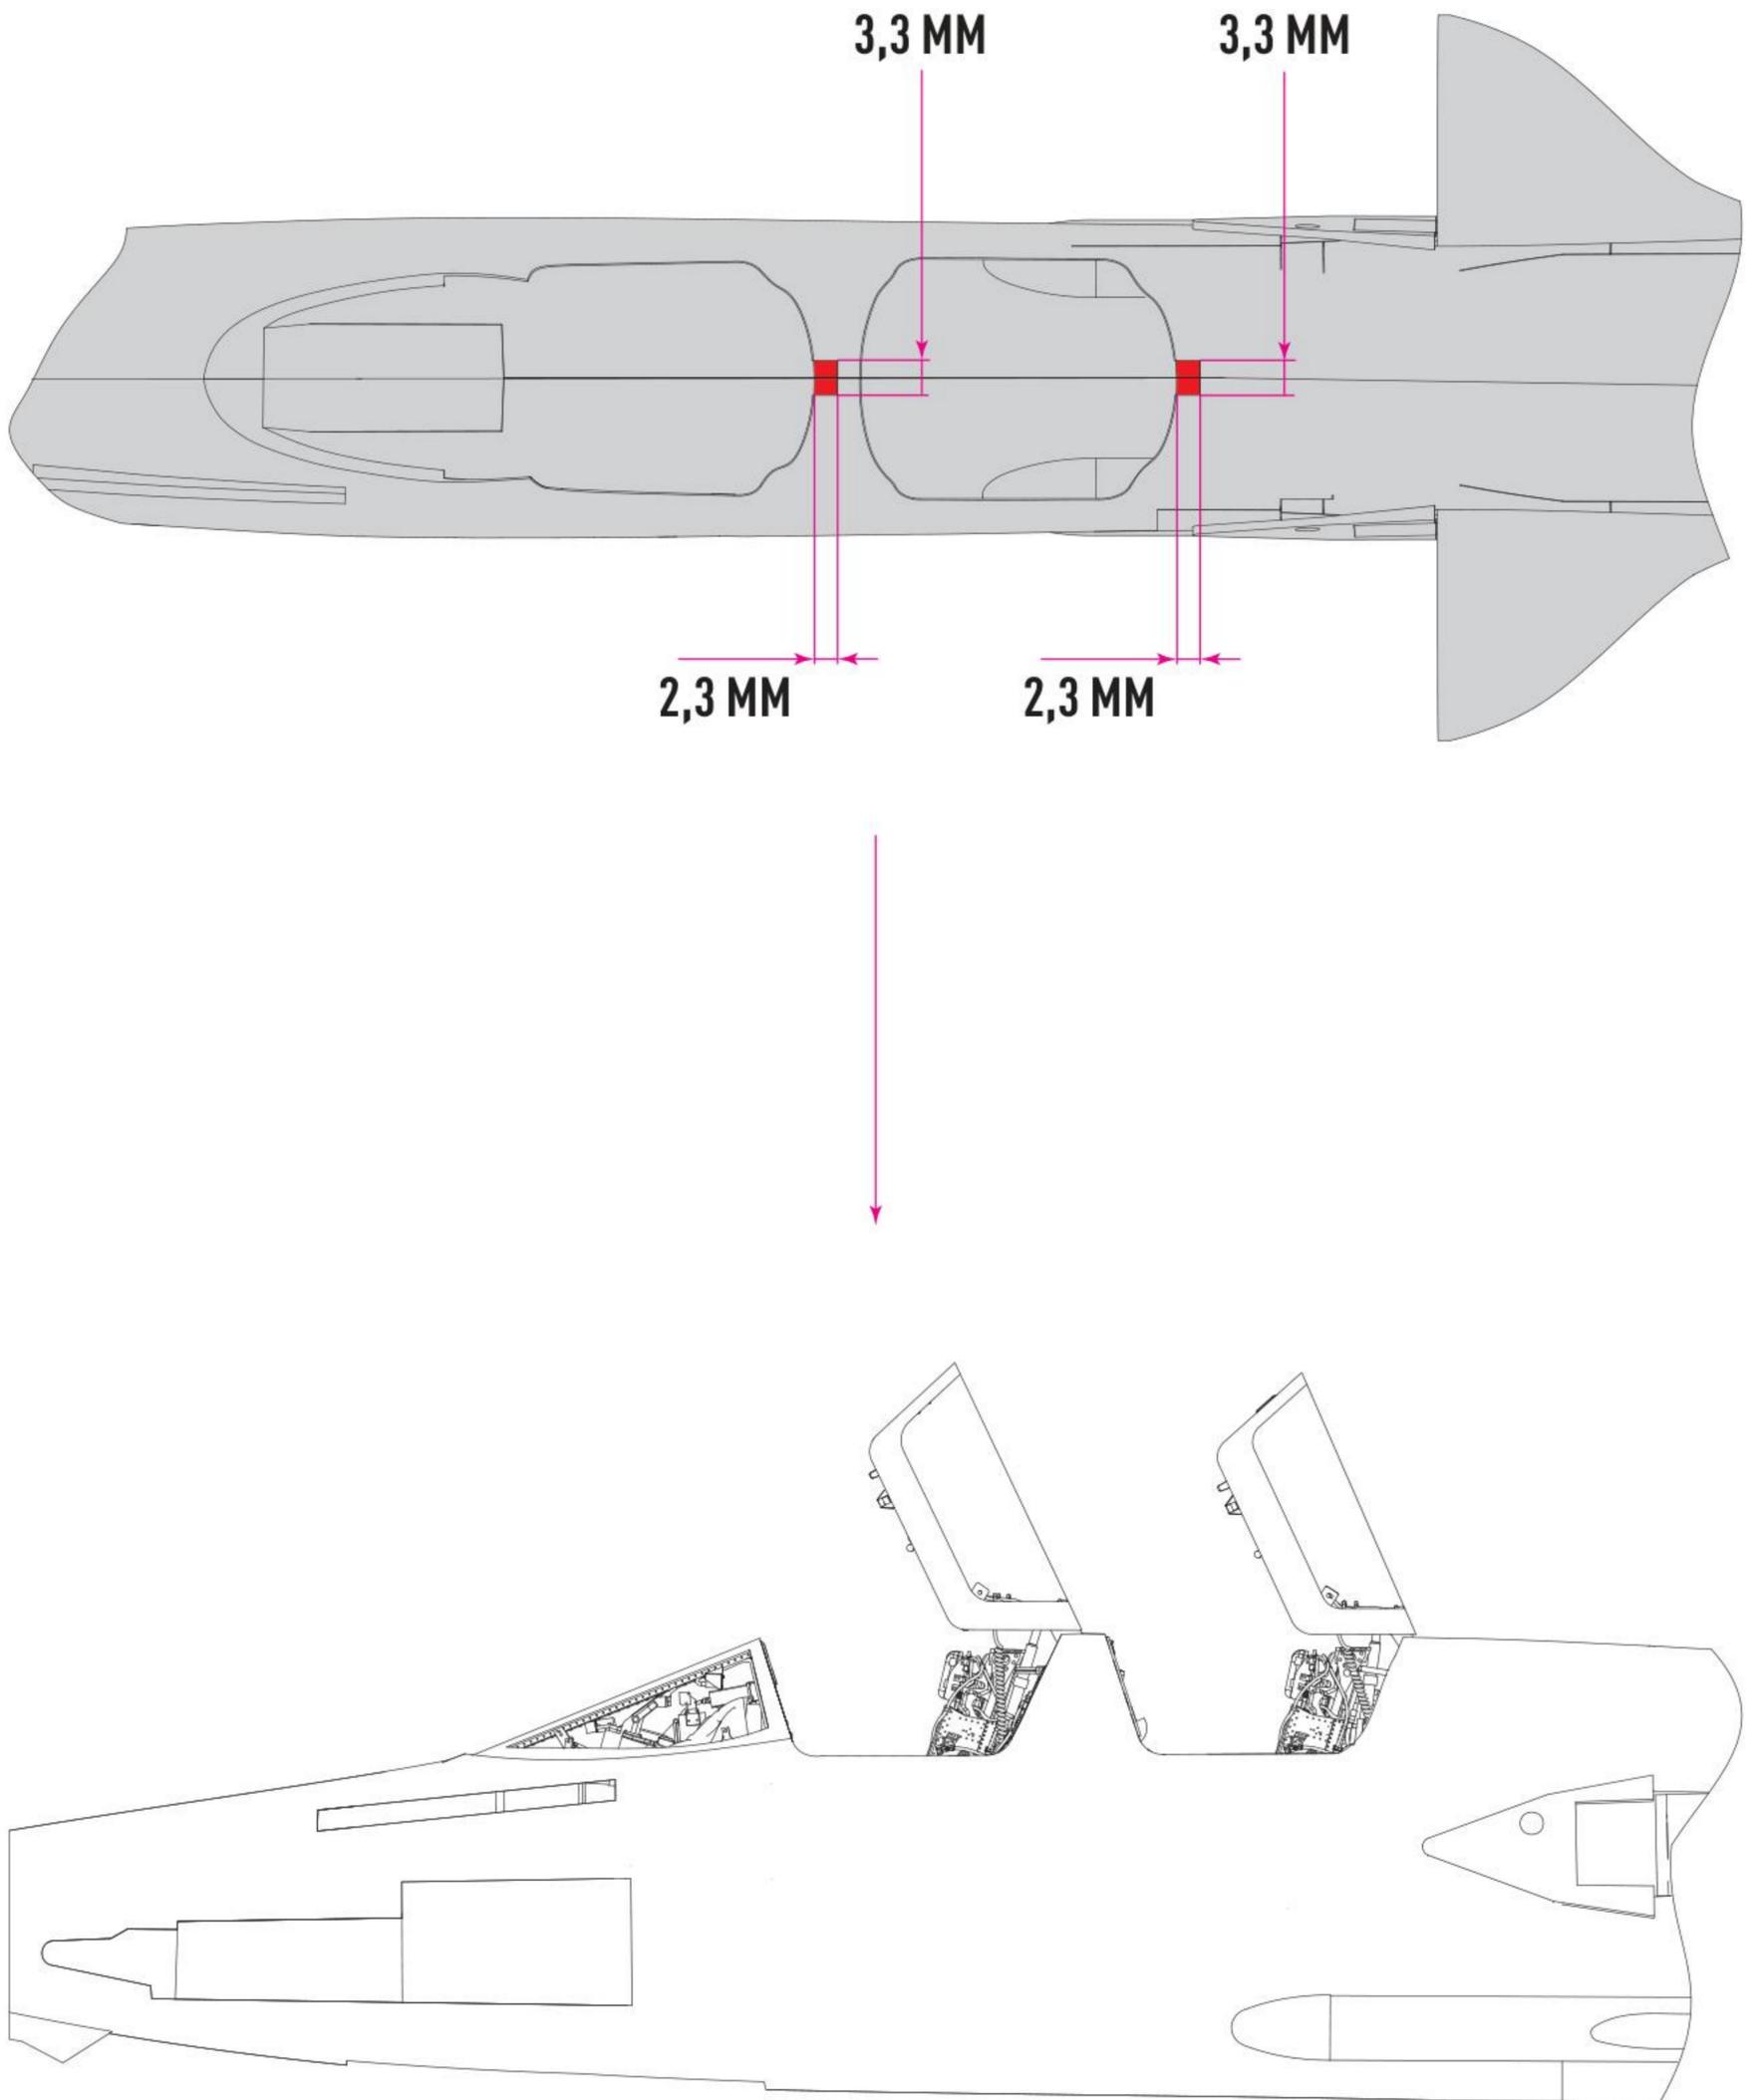


5

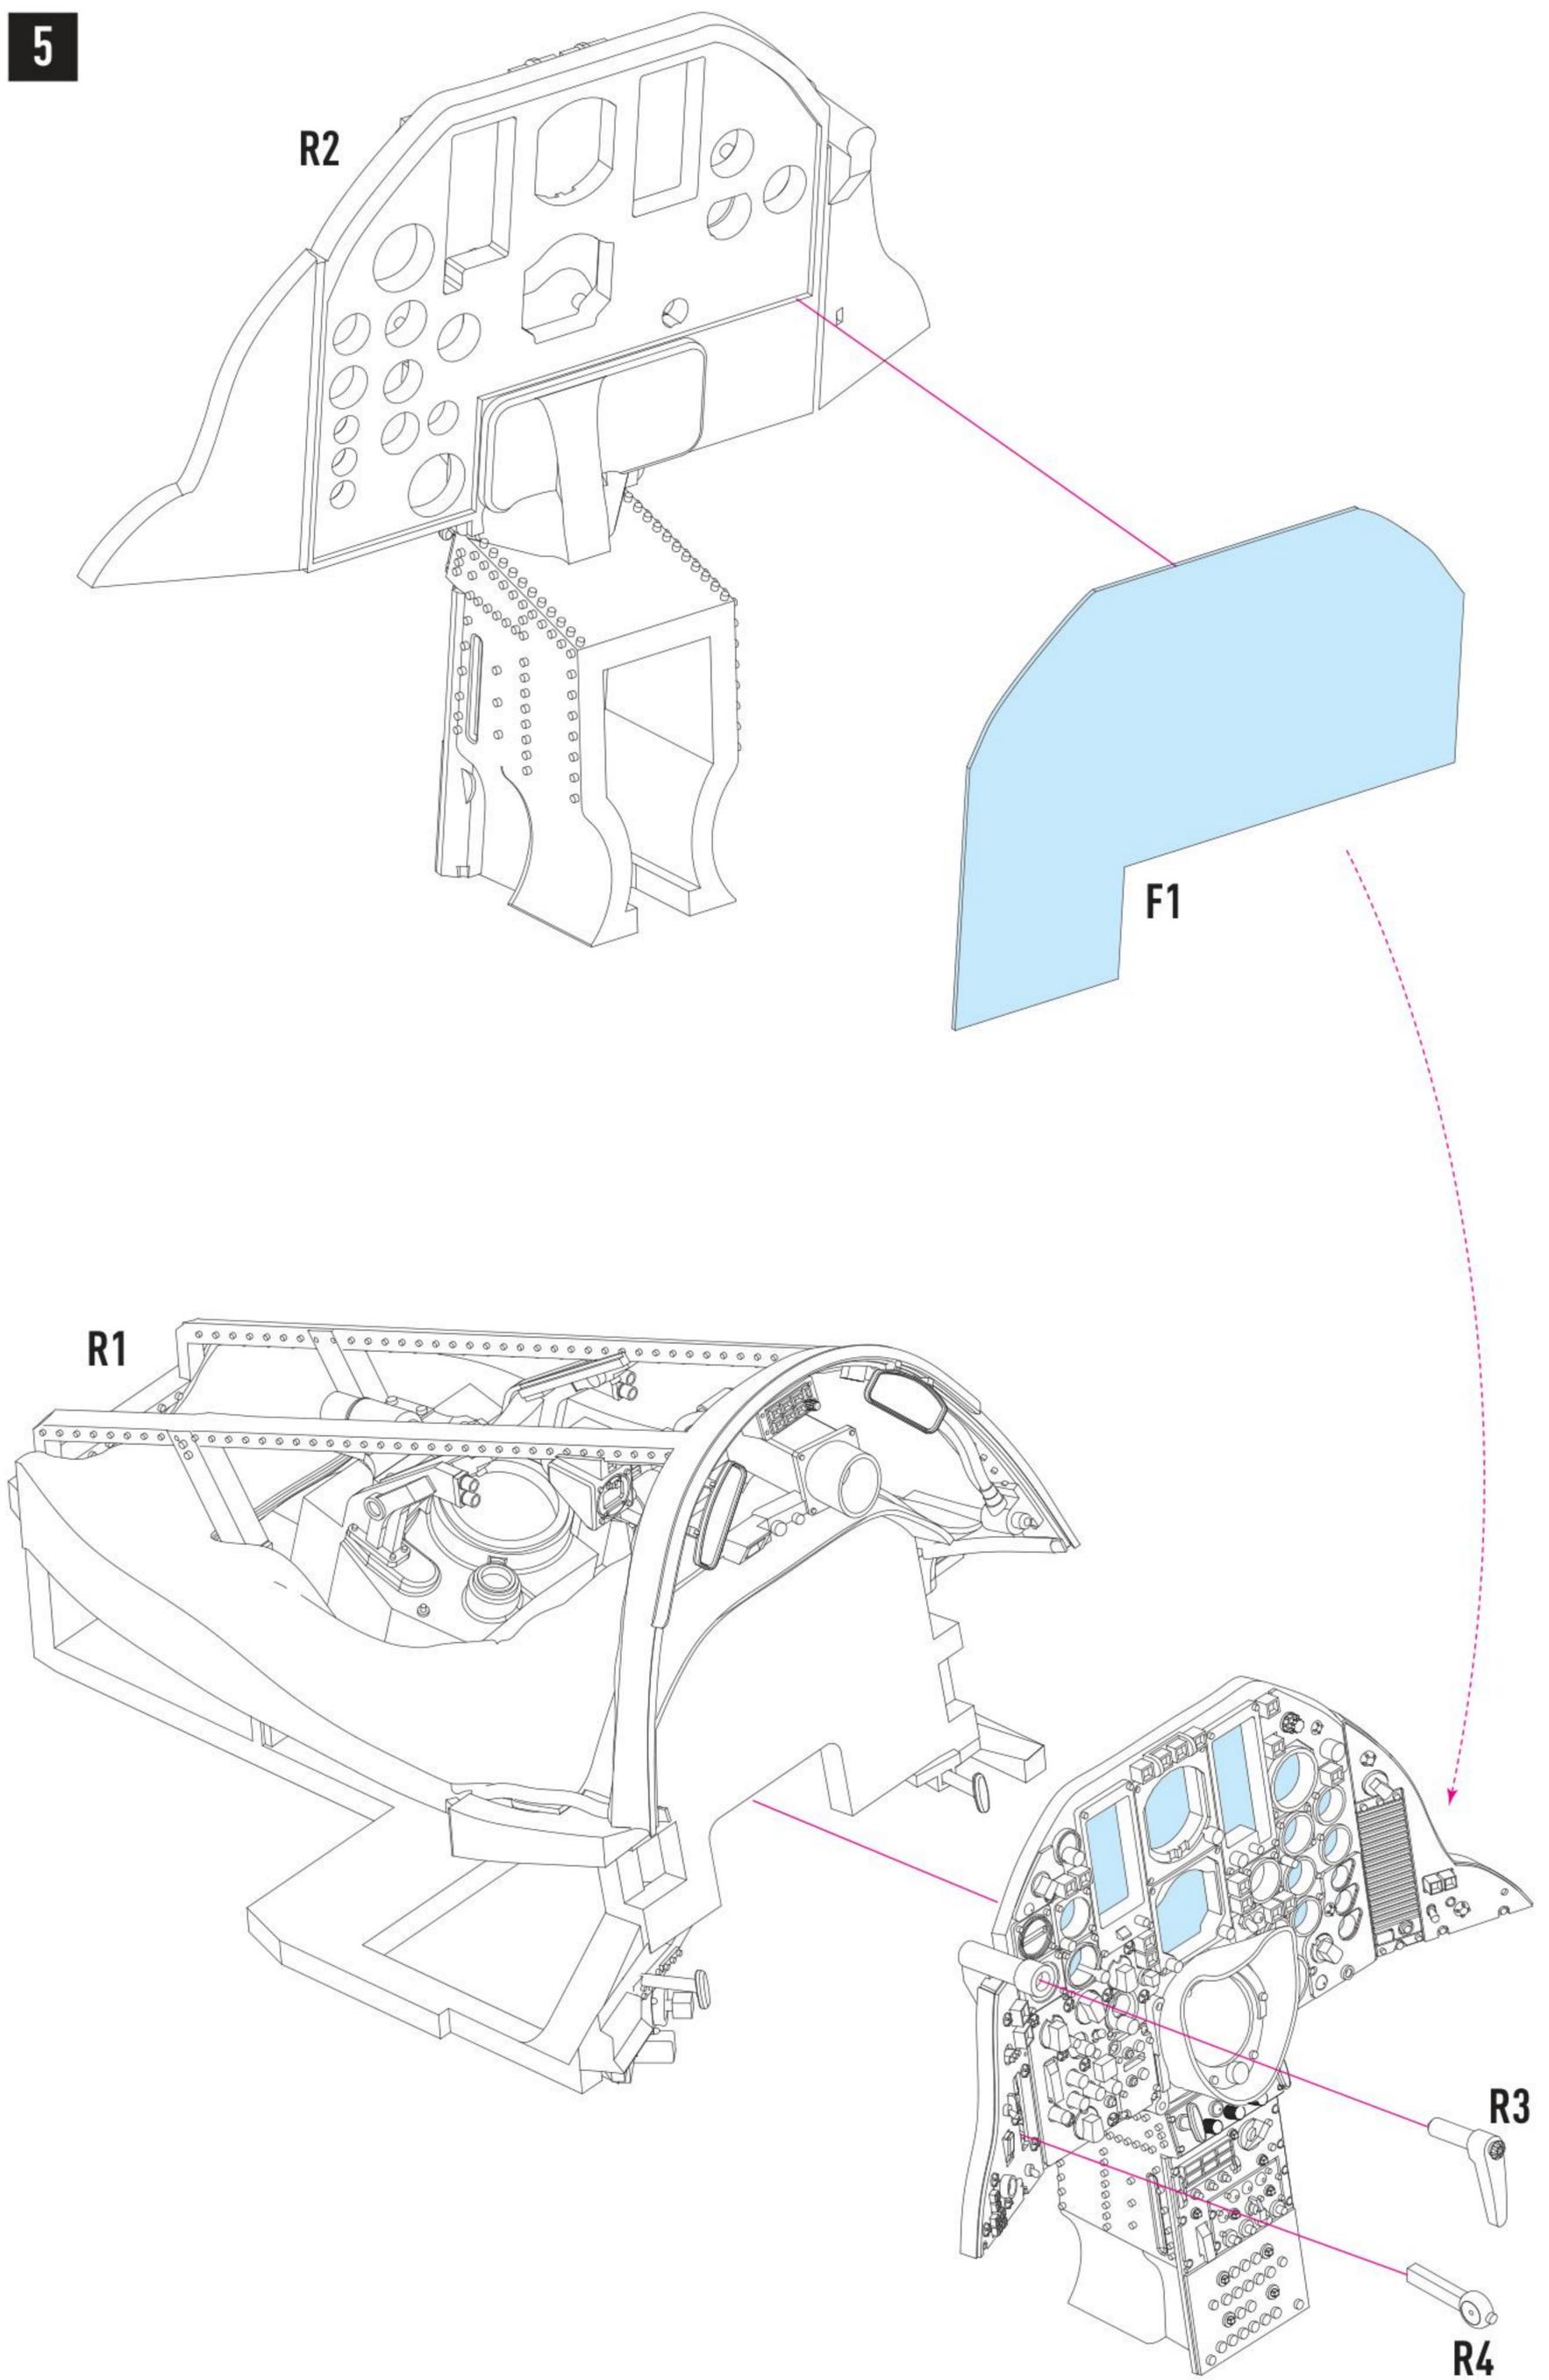

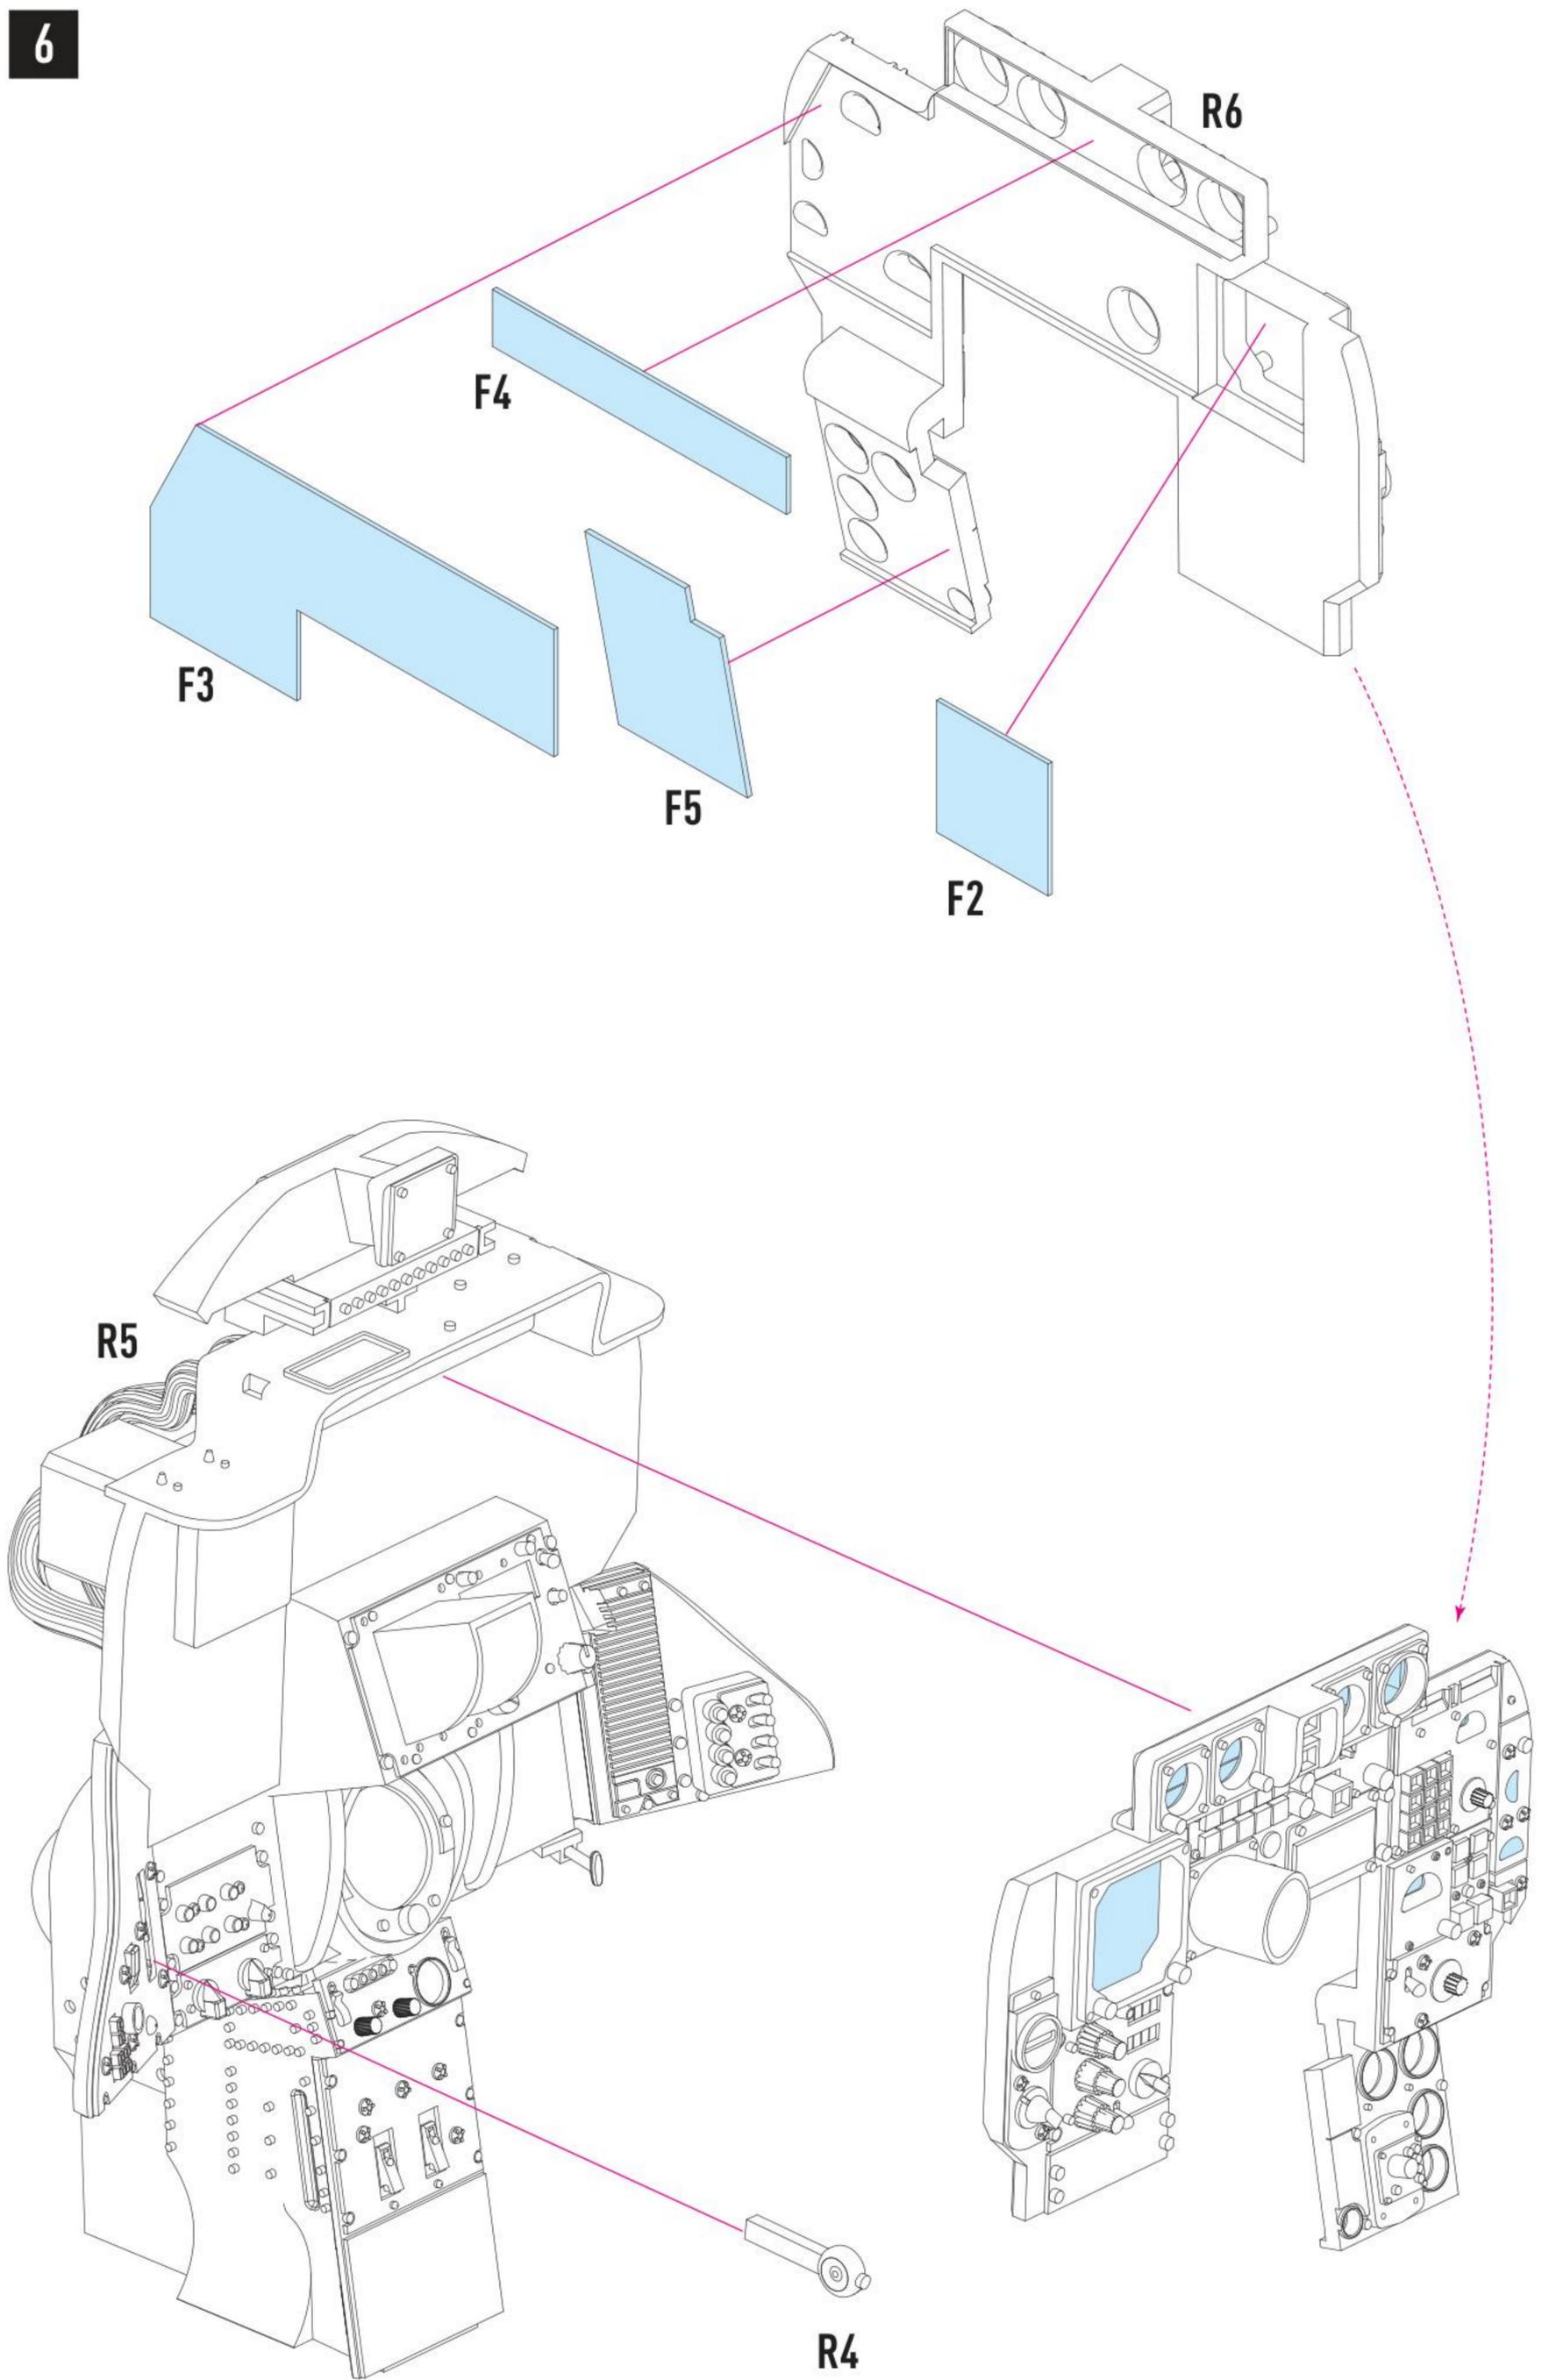


7

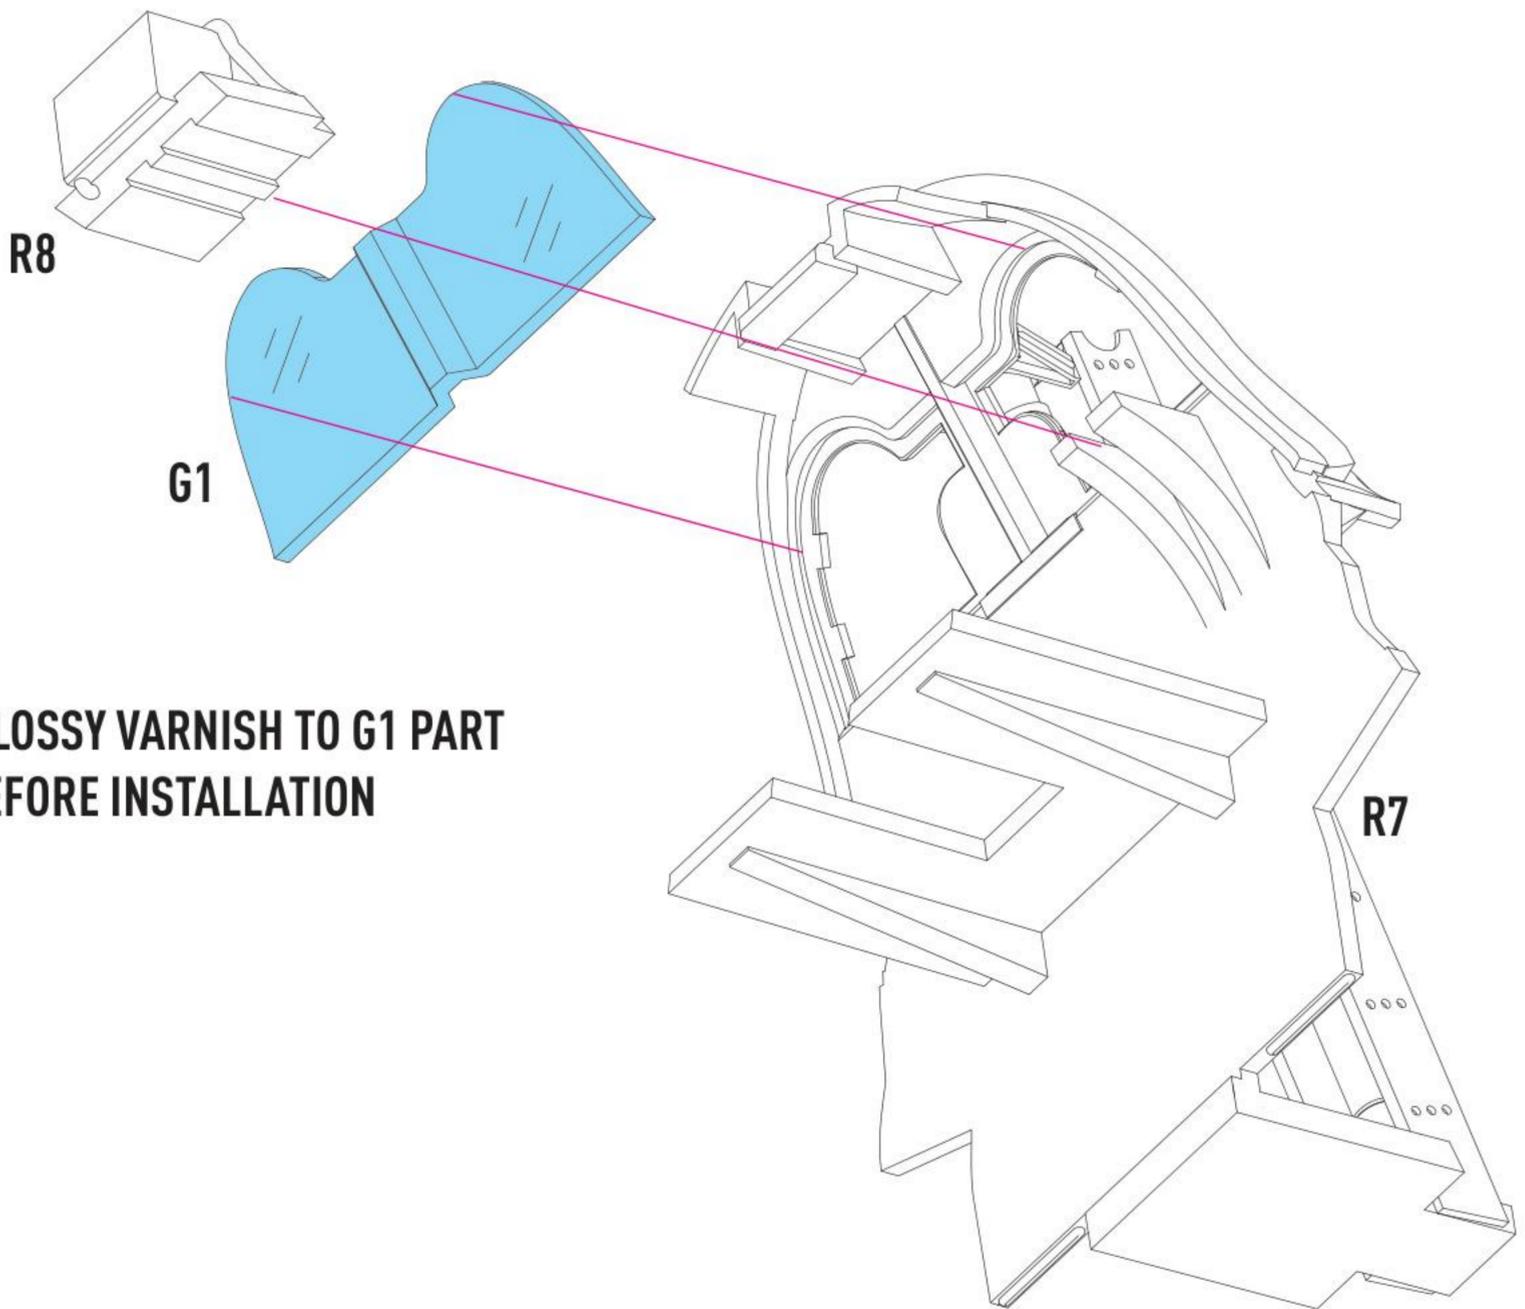

**APPLY GLOSSY VARNISH TO G1 PART
BEFORE INSTALLATION**


8

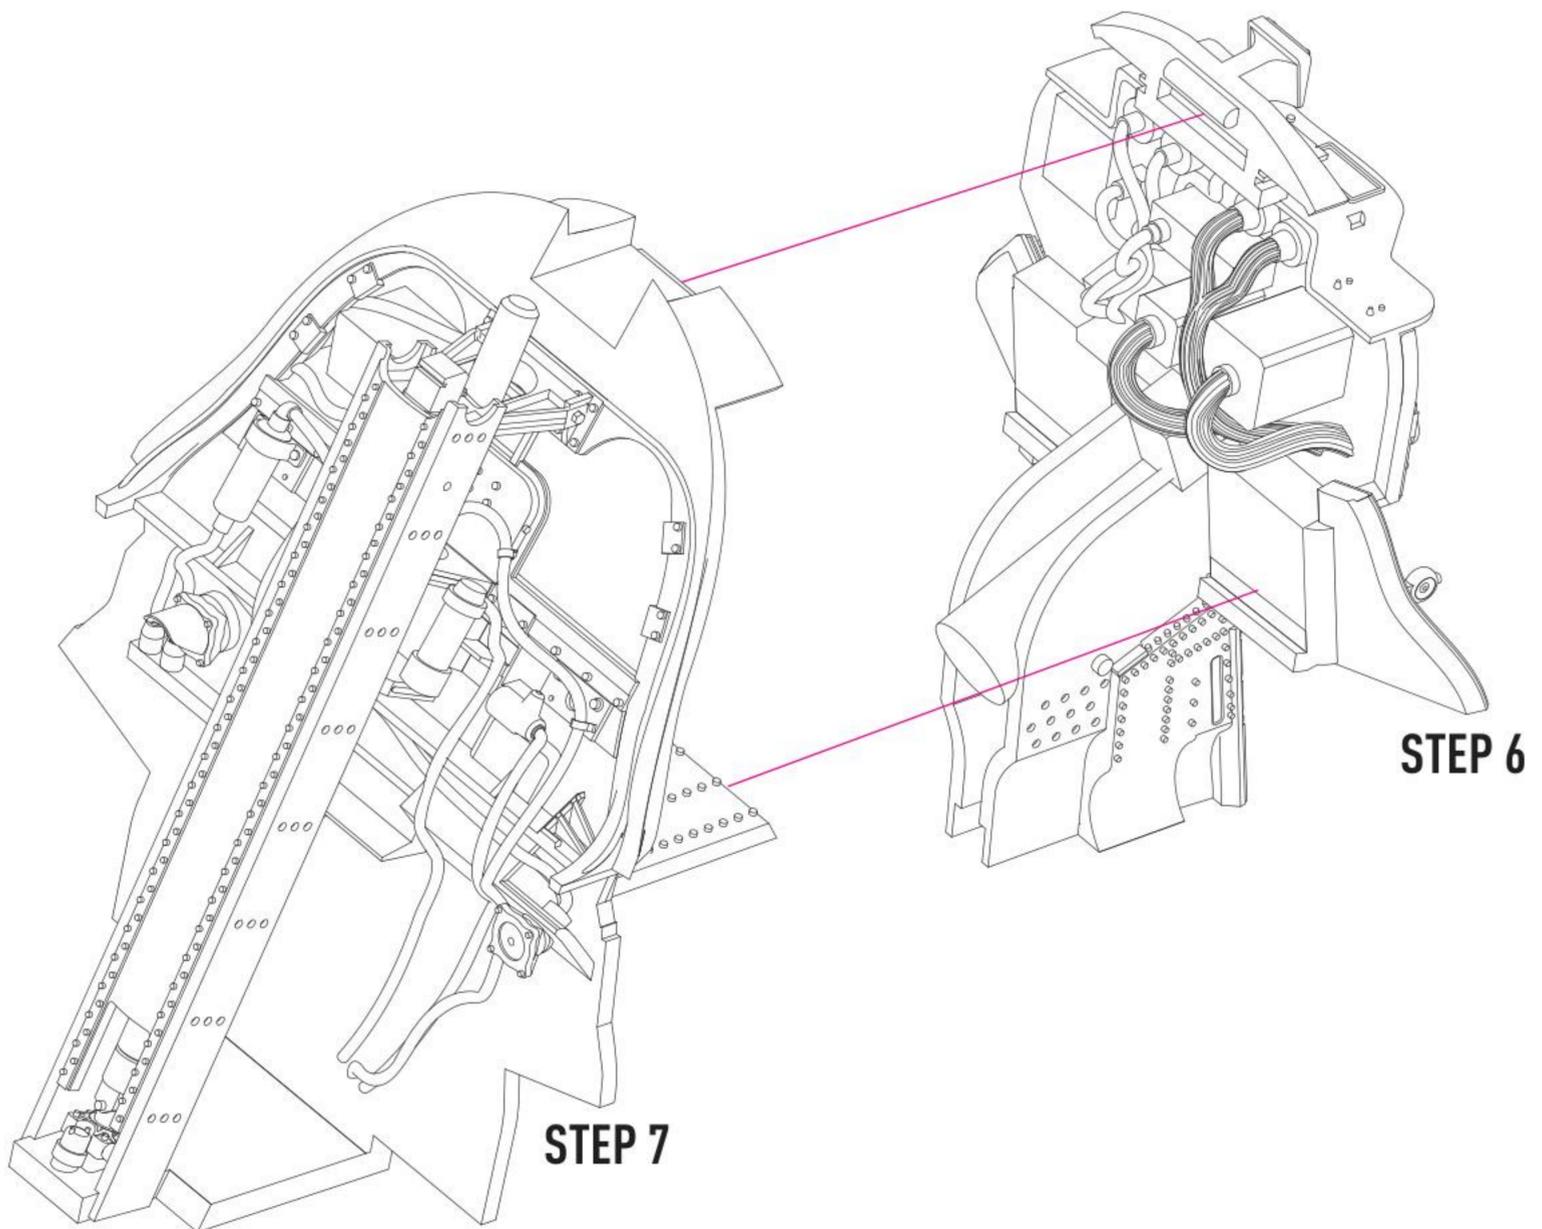

9


STEP 5


STEP 7

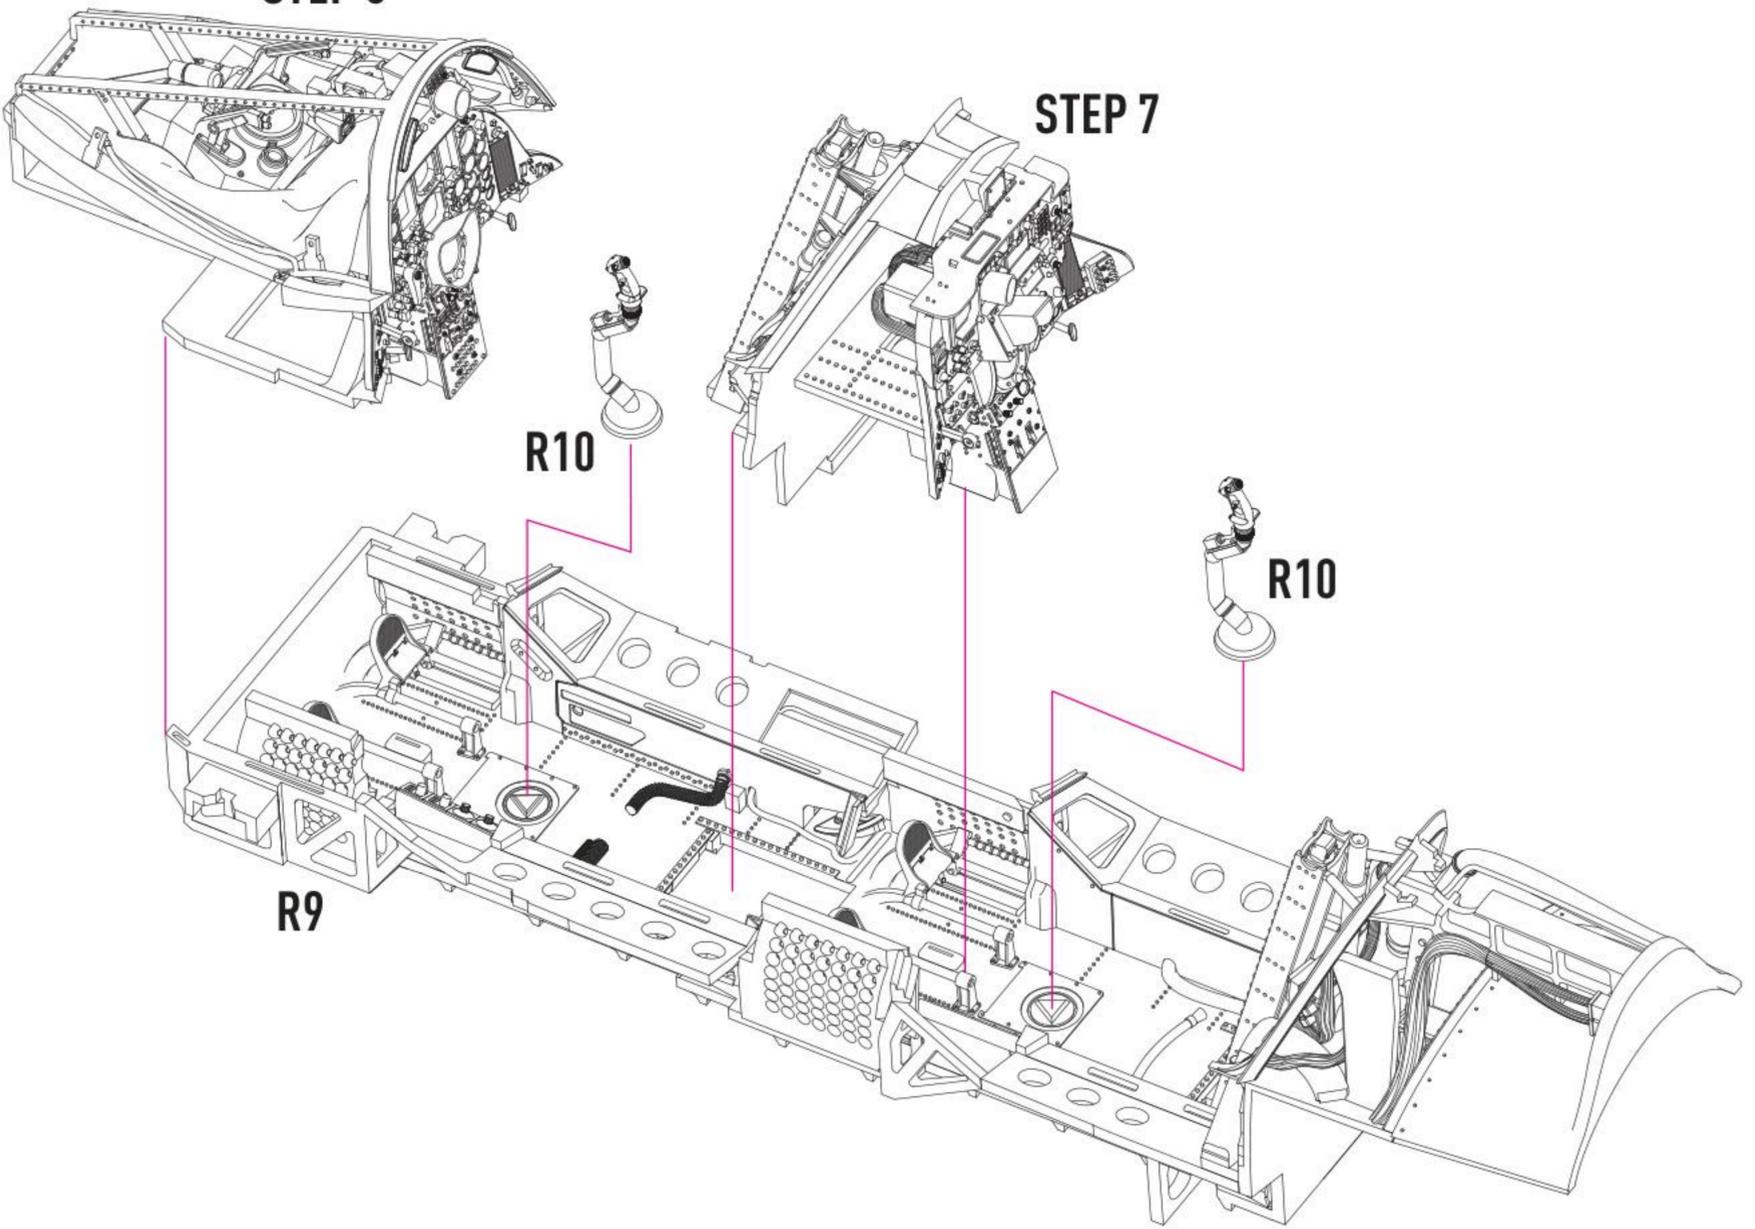


10

STEP 9

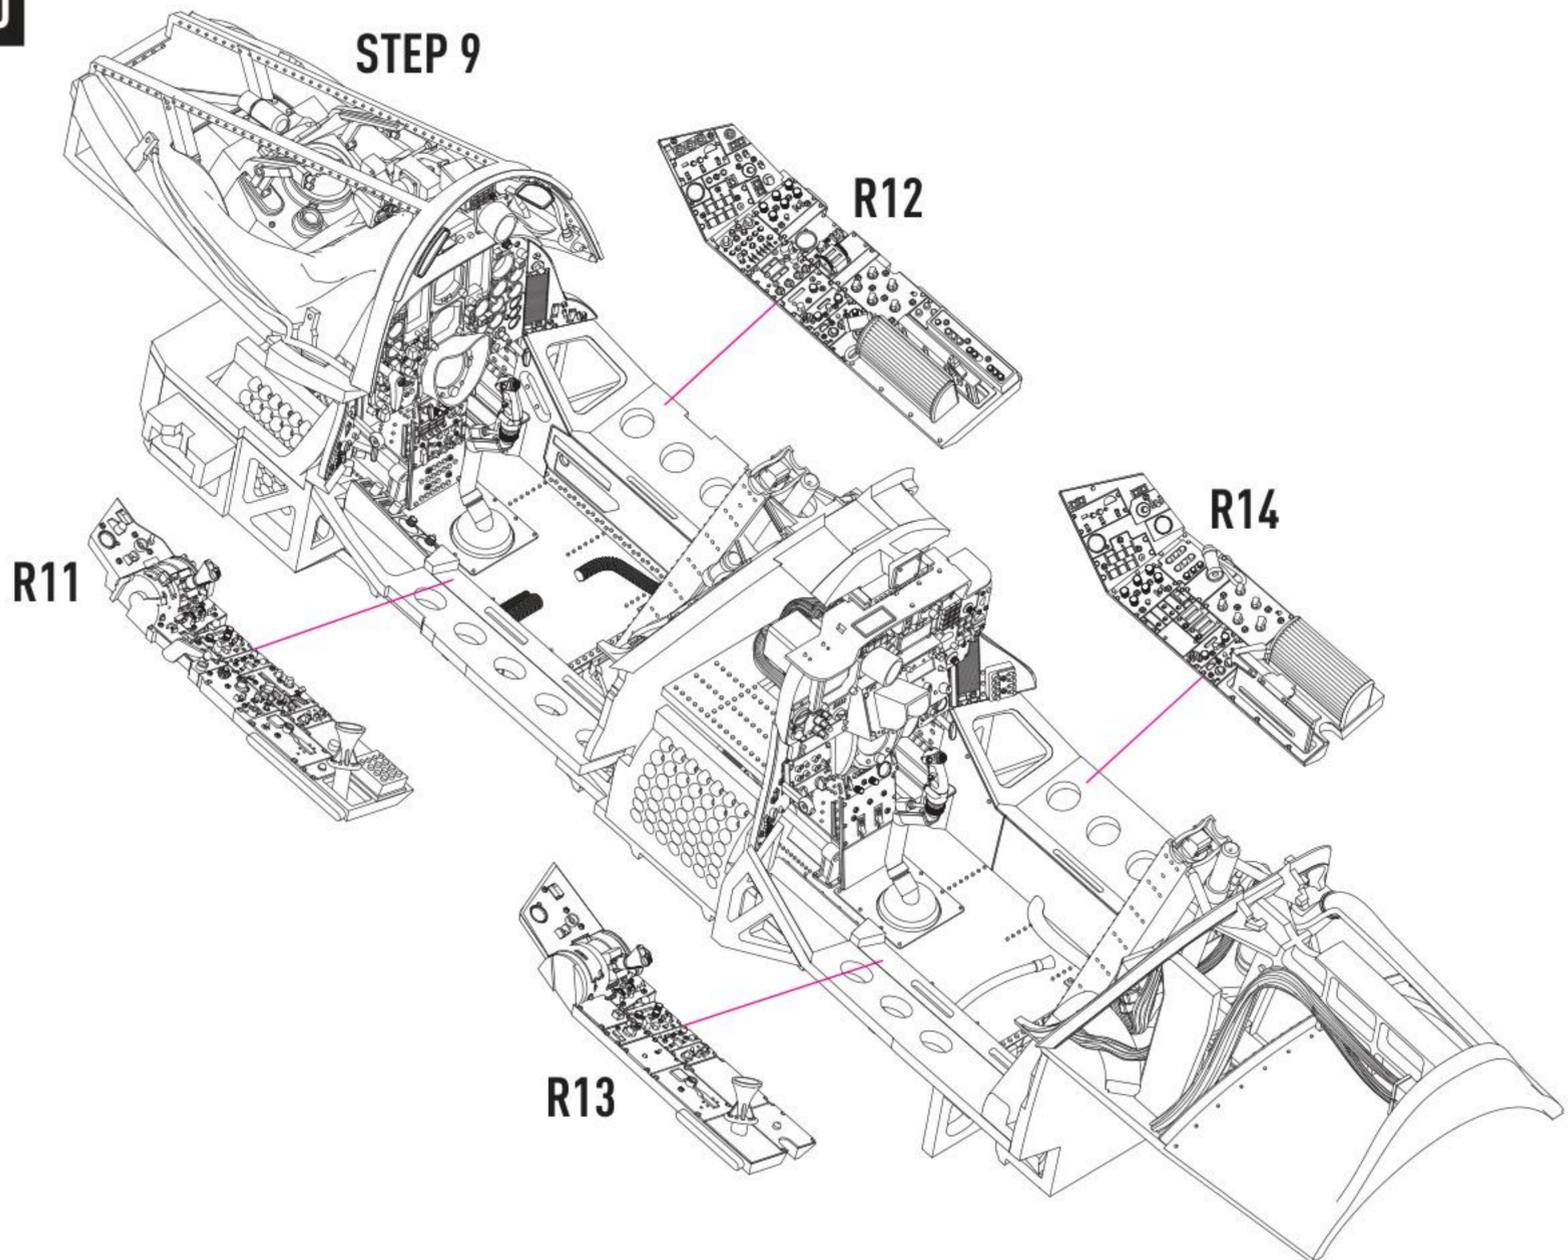


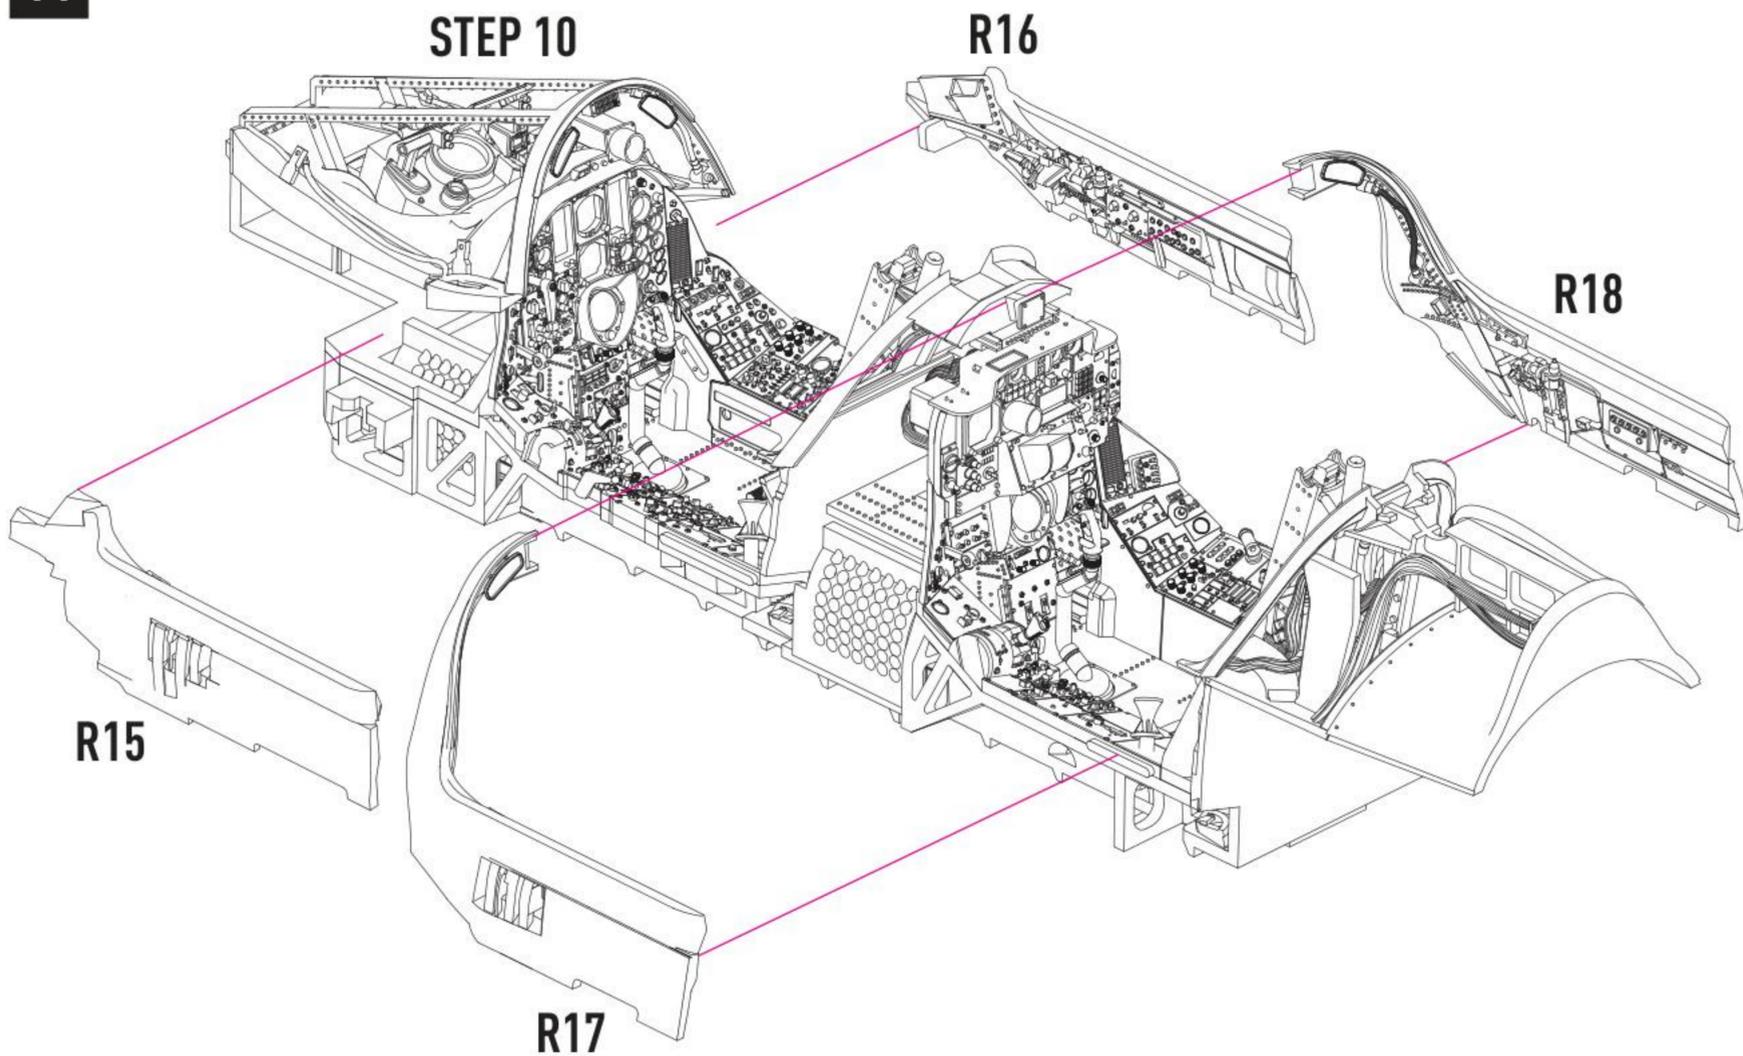


12 PARTS R22, R23, R24 ARE OPTIONAL

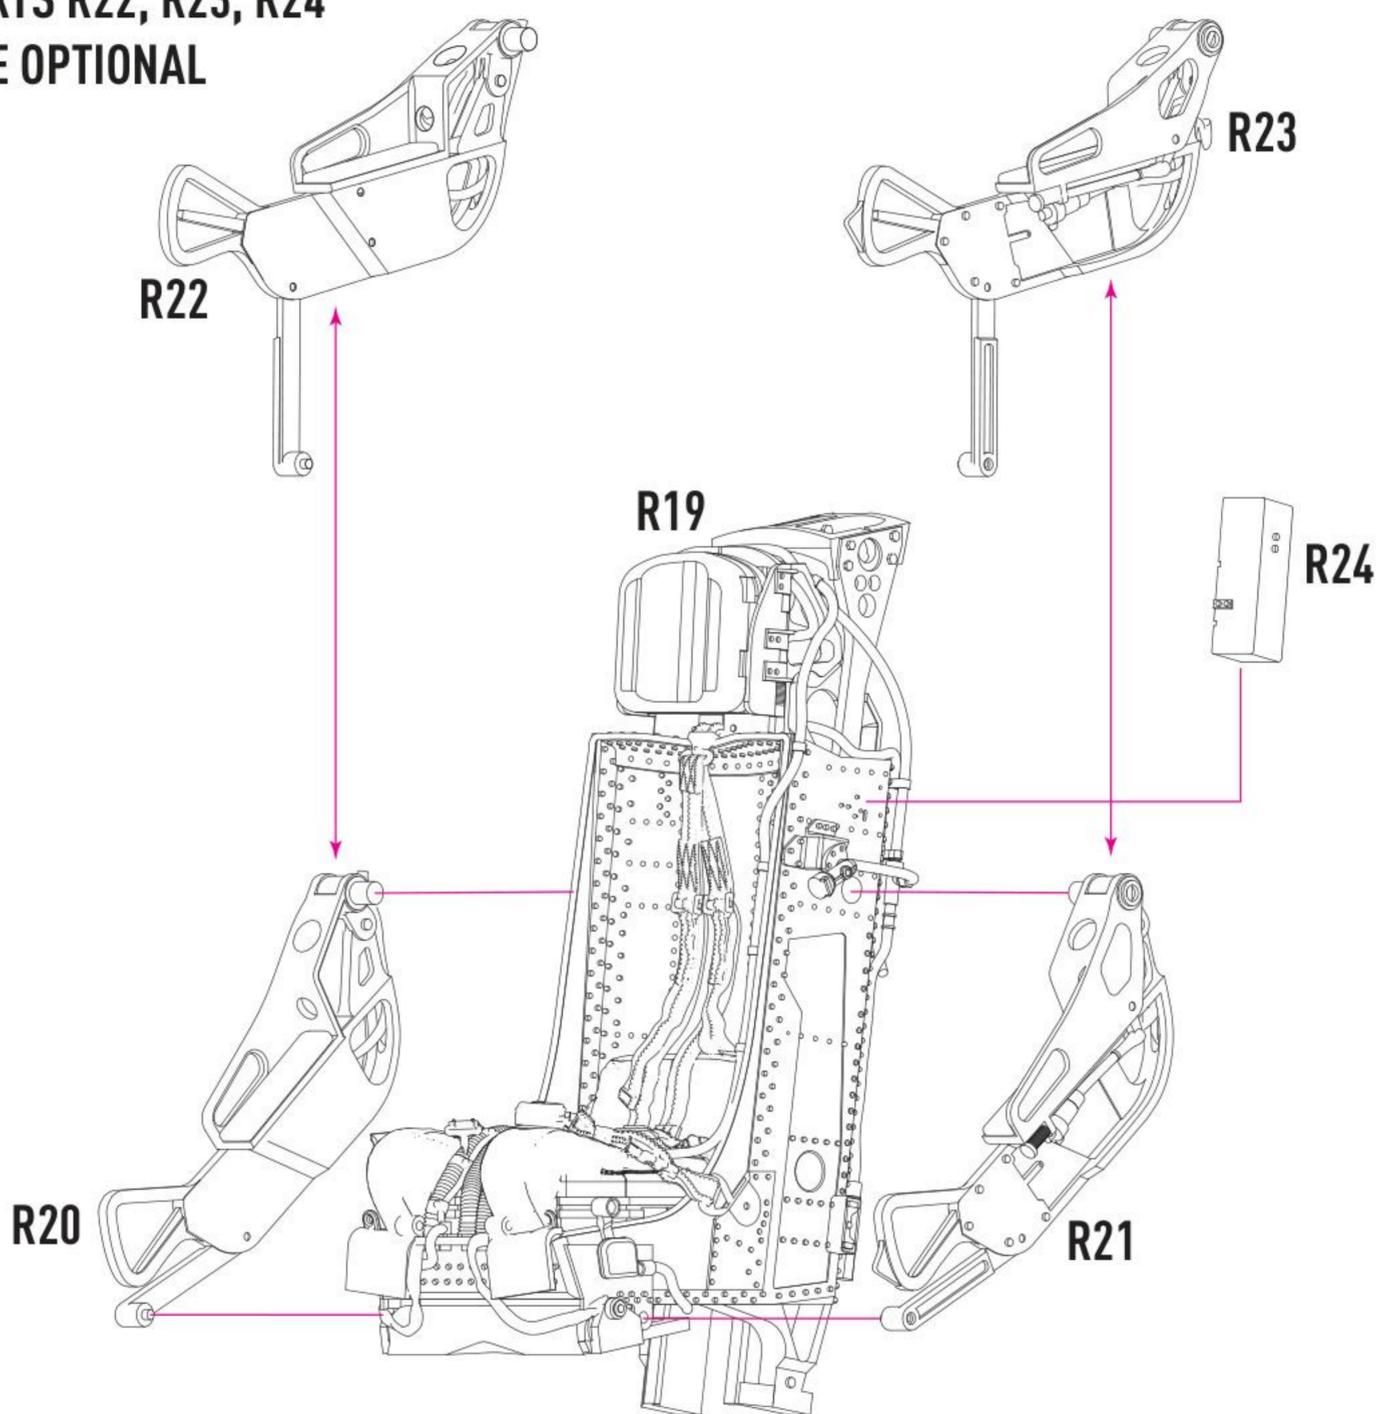


13 PARTS FROM F-105G HOBBY BOSS KIT

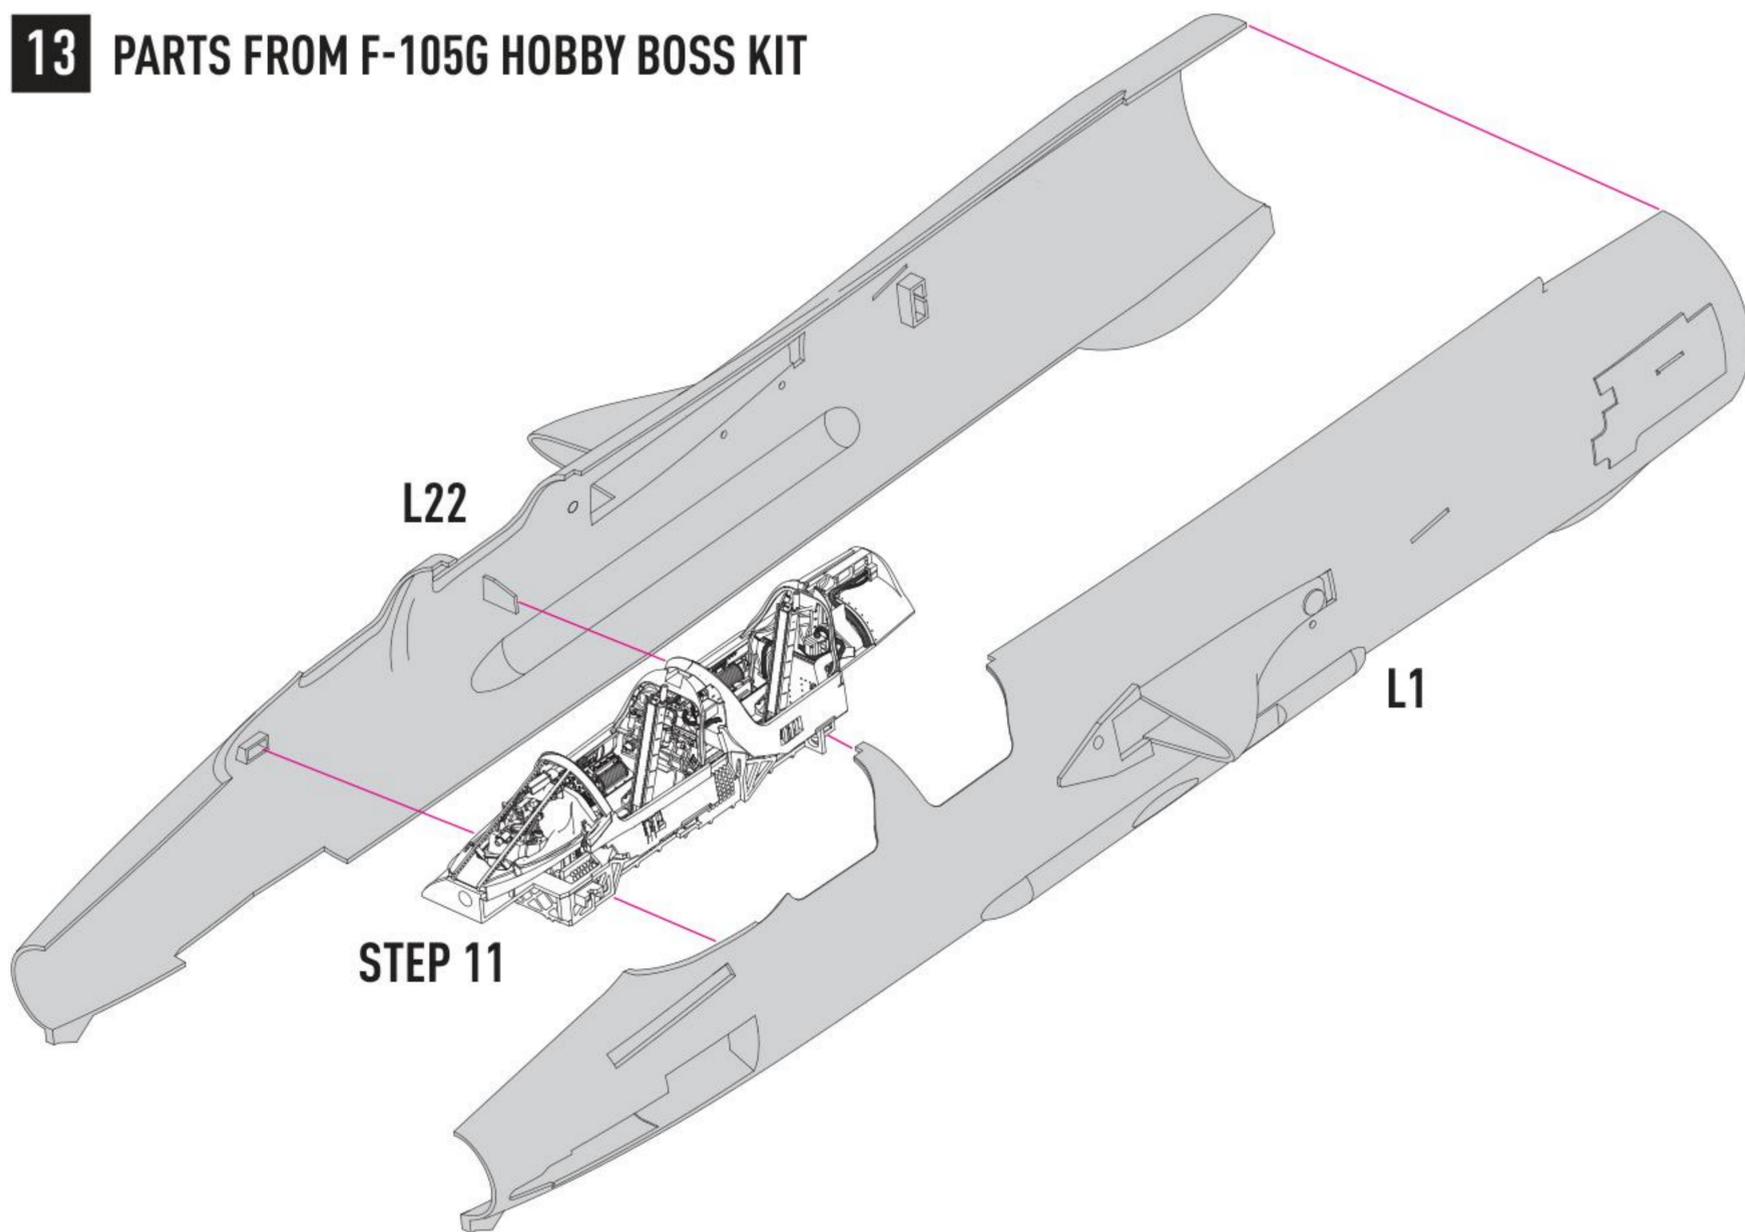


14

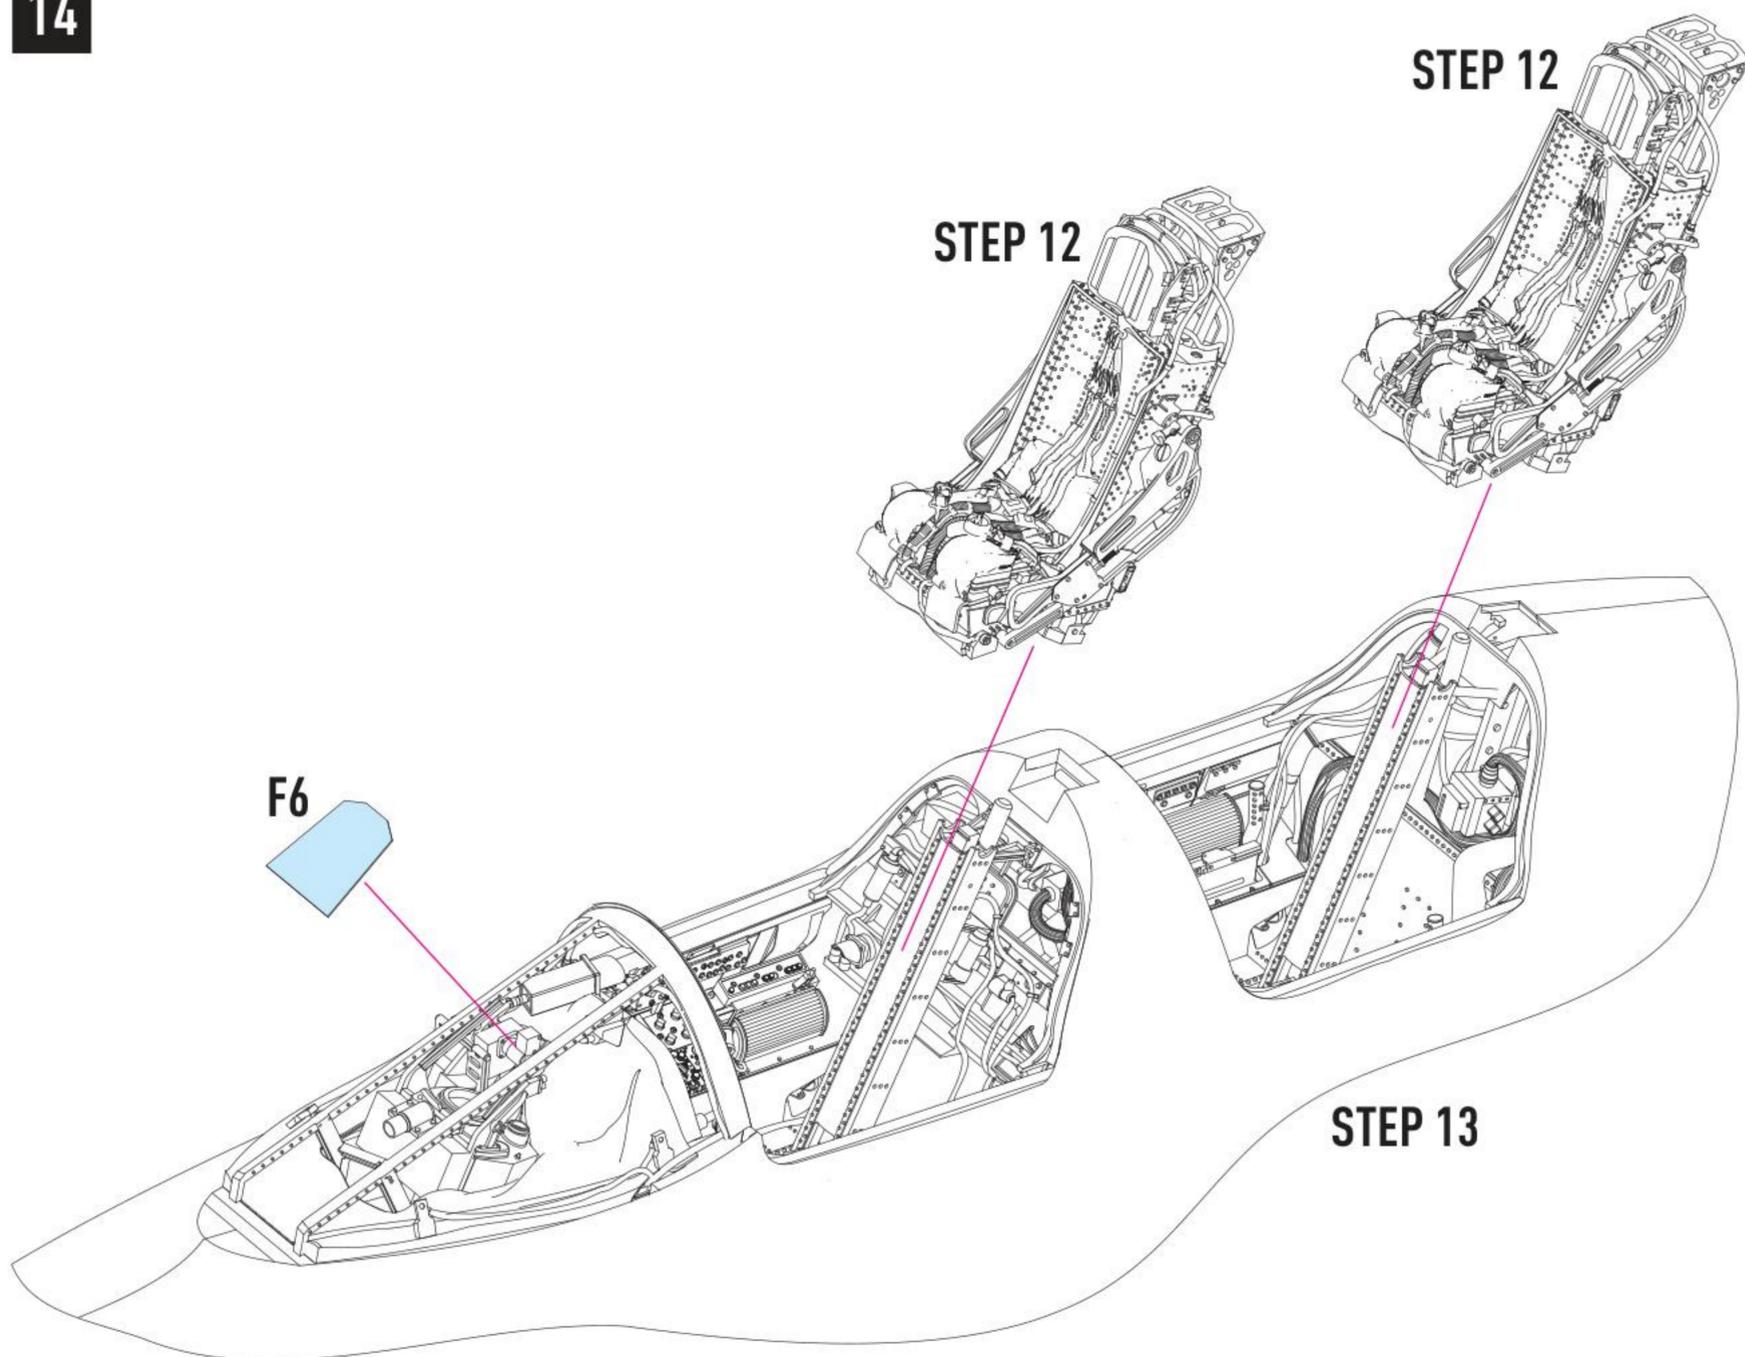

15 FOR AN OPEN CANOPY

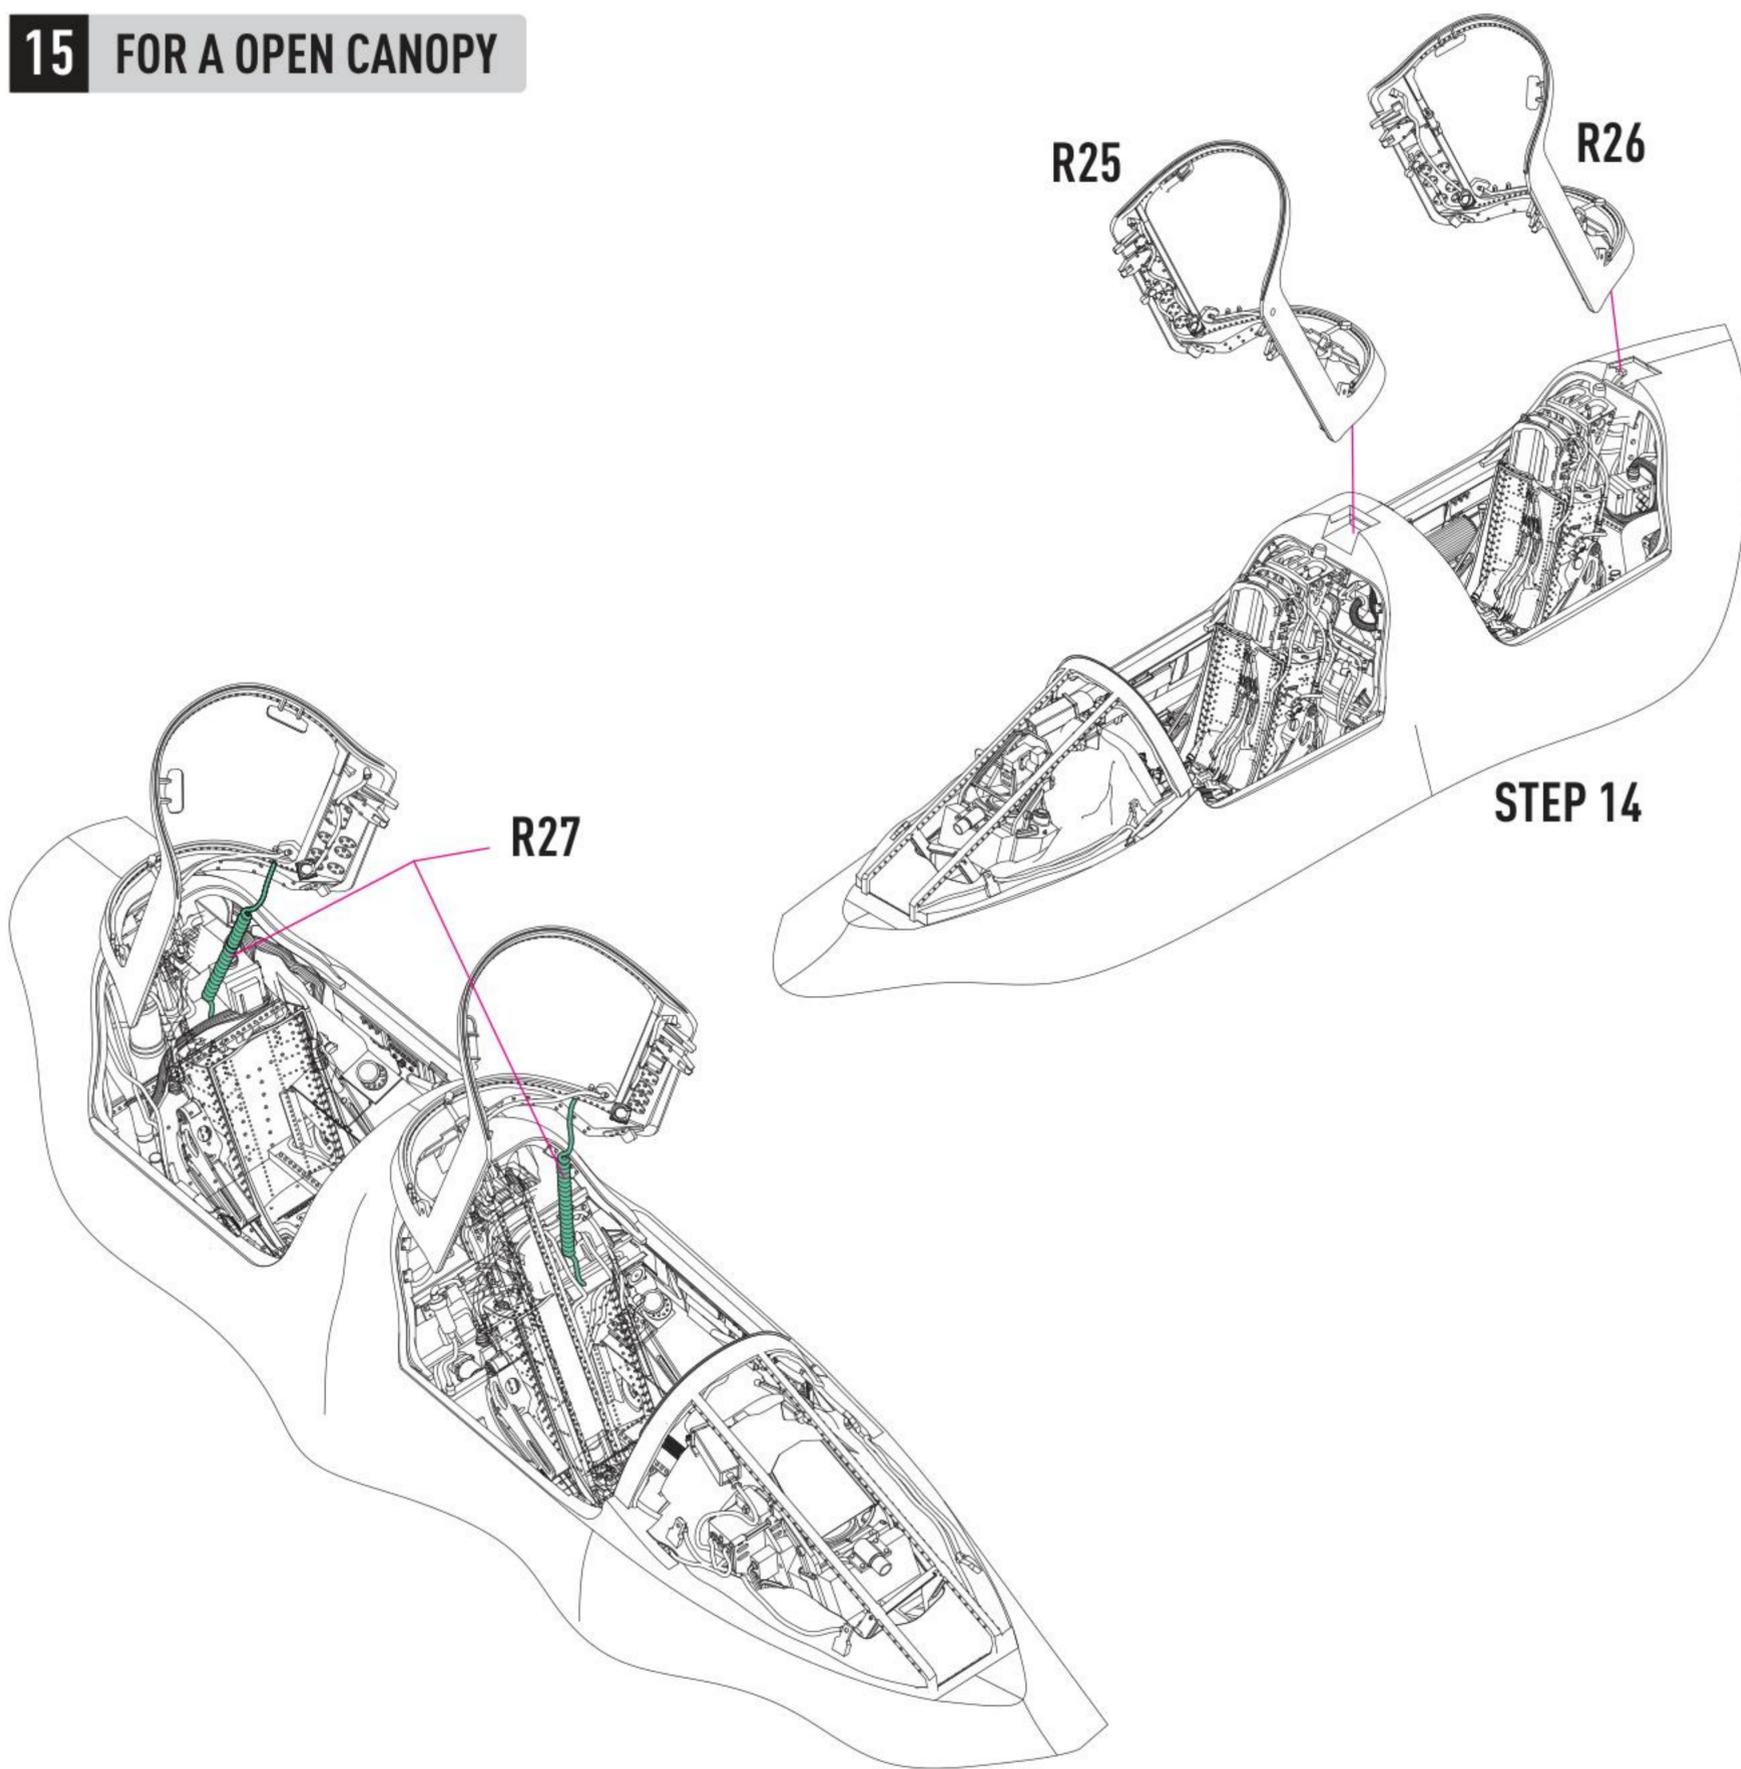

**PARTS FROM F-105G
HOBBY BOSS KIT**


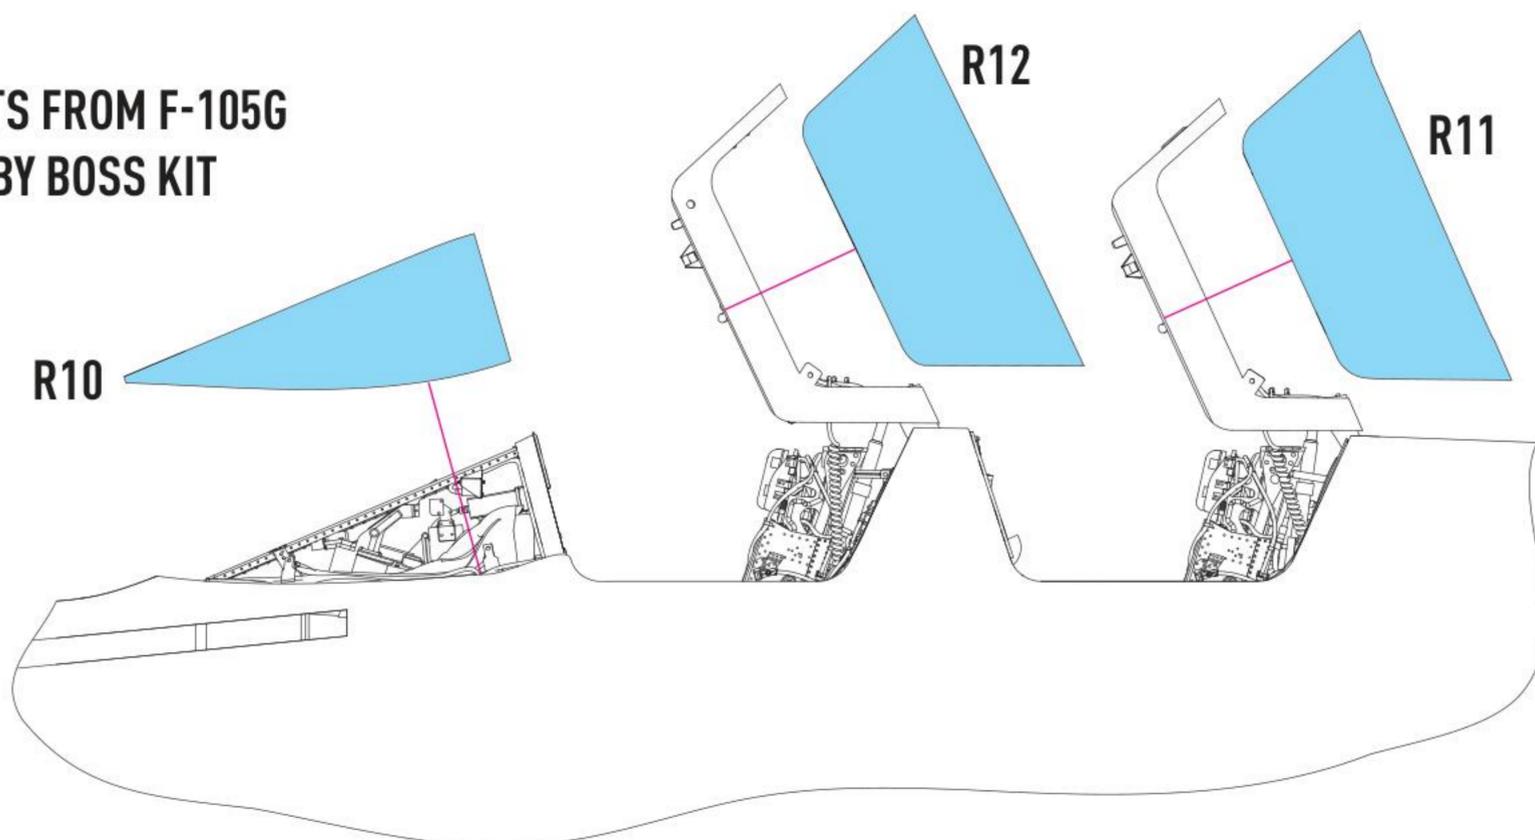


16 FOR A CLOSED CANOPY

REMOVE THE COMPONENTS HIGHLIGHTED IN RED




STEP 14

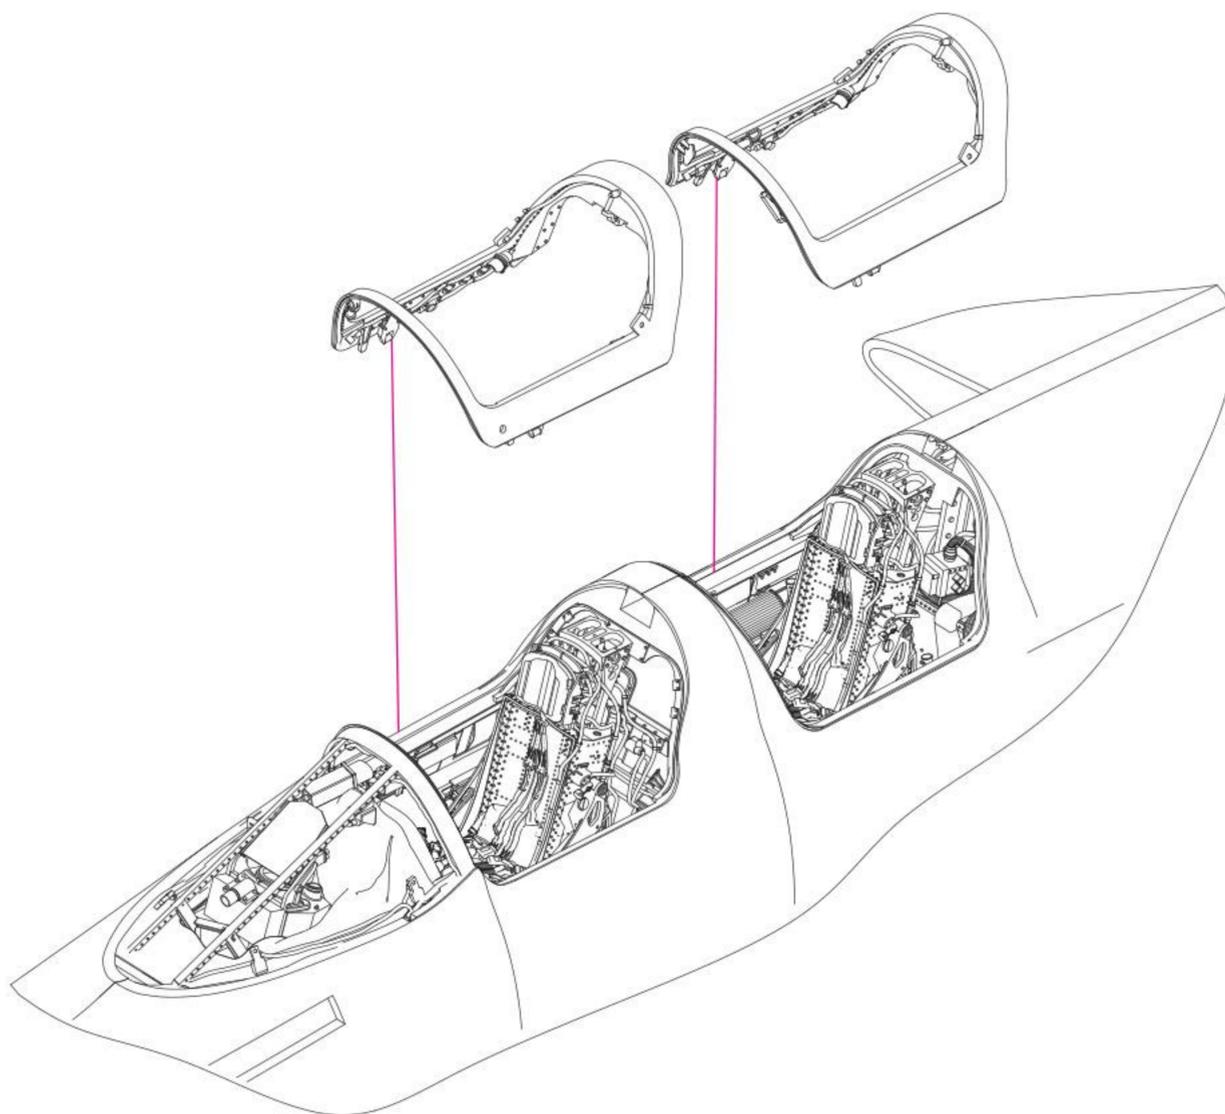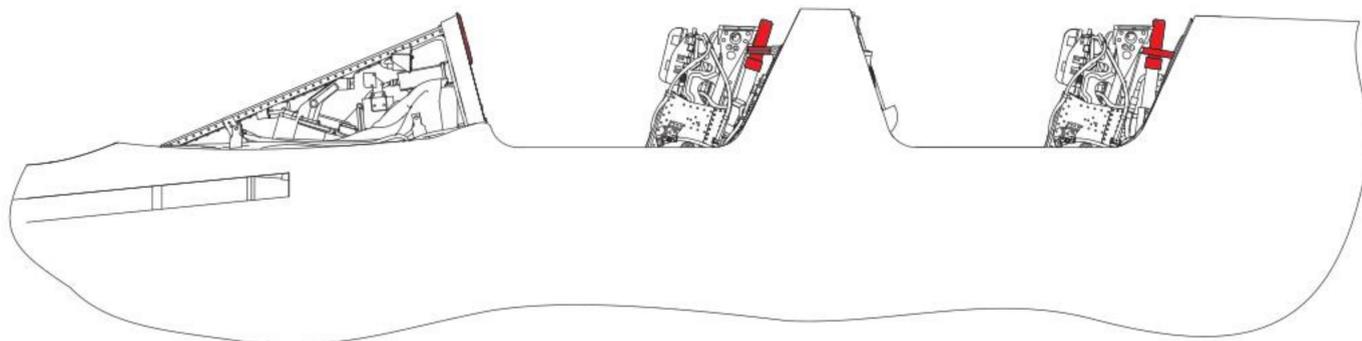

PARTS FROM F-105G HOBBY BOSS KIT



R10

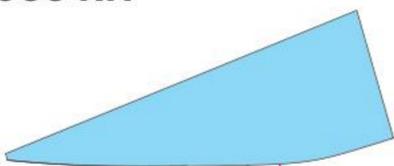

R12



R11

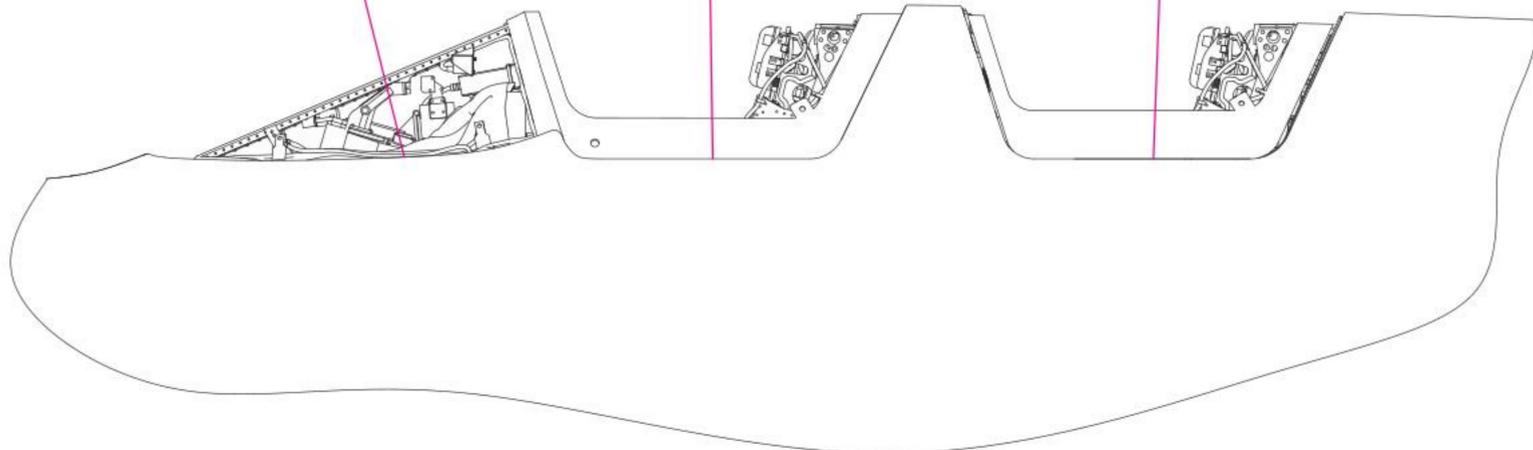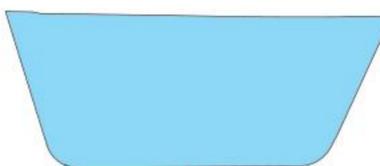

DECAL INSTRUCTION

