

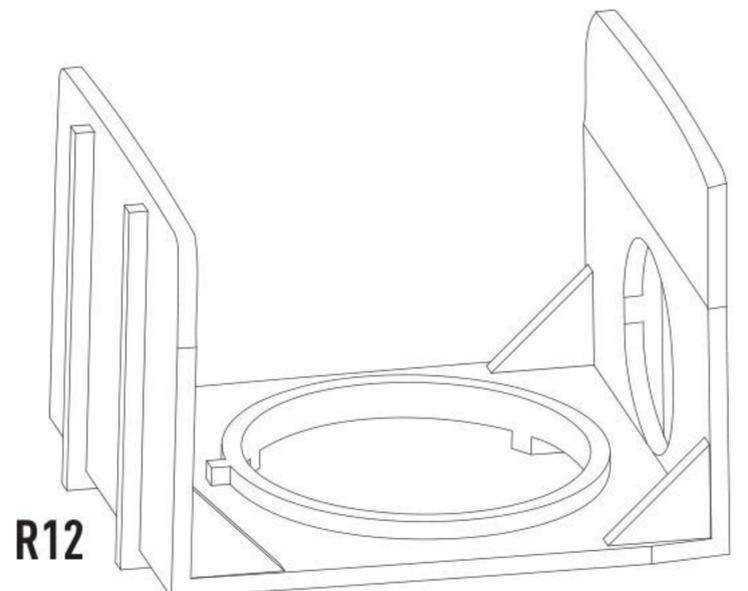
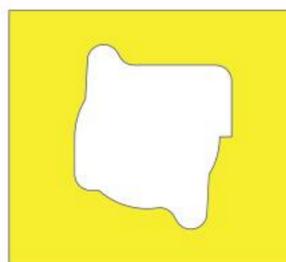
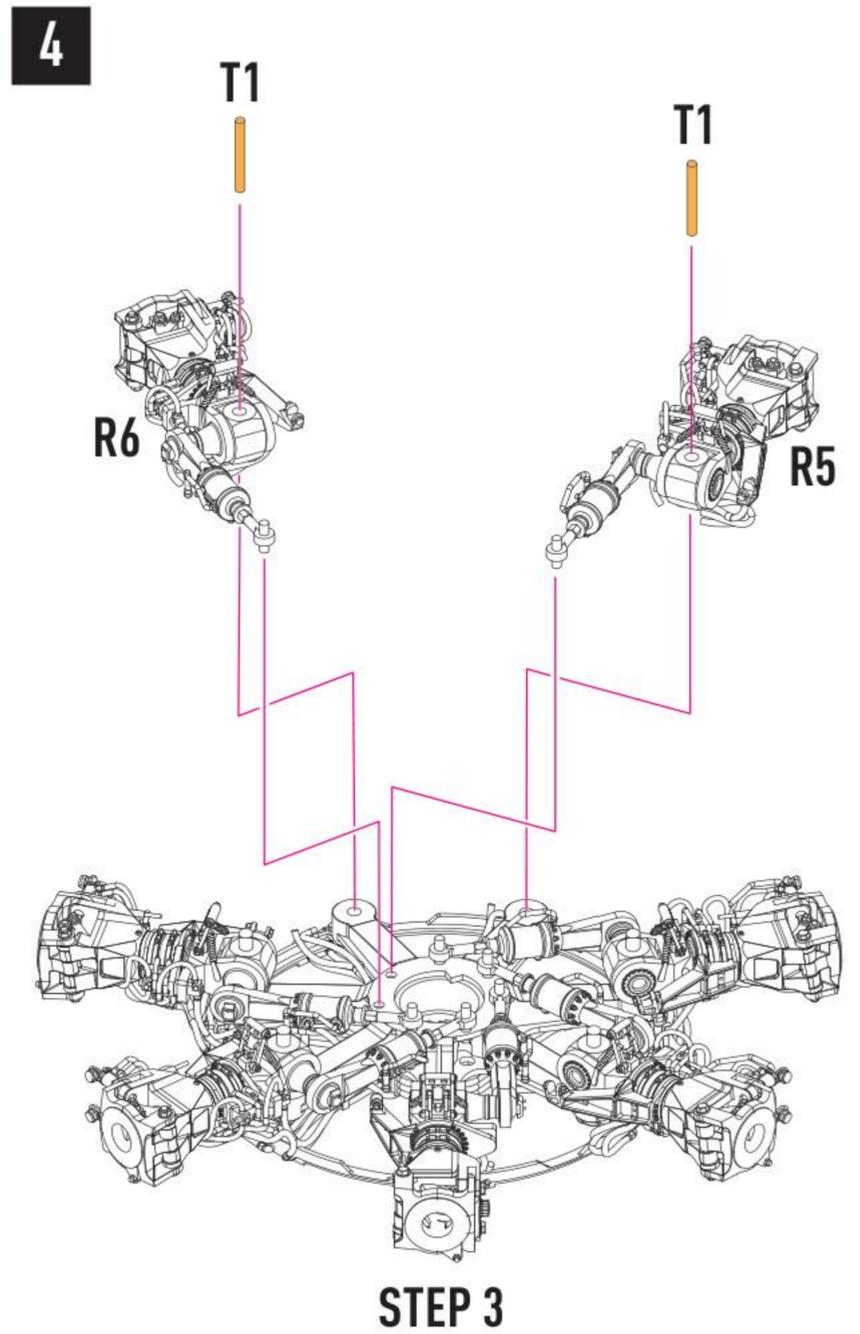
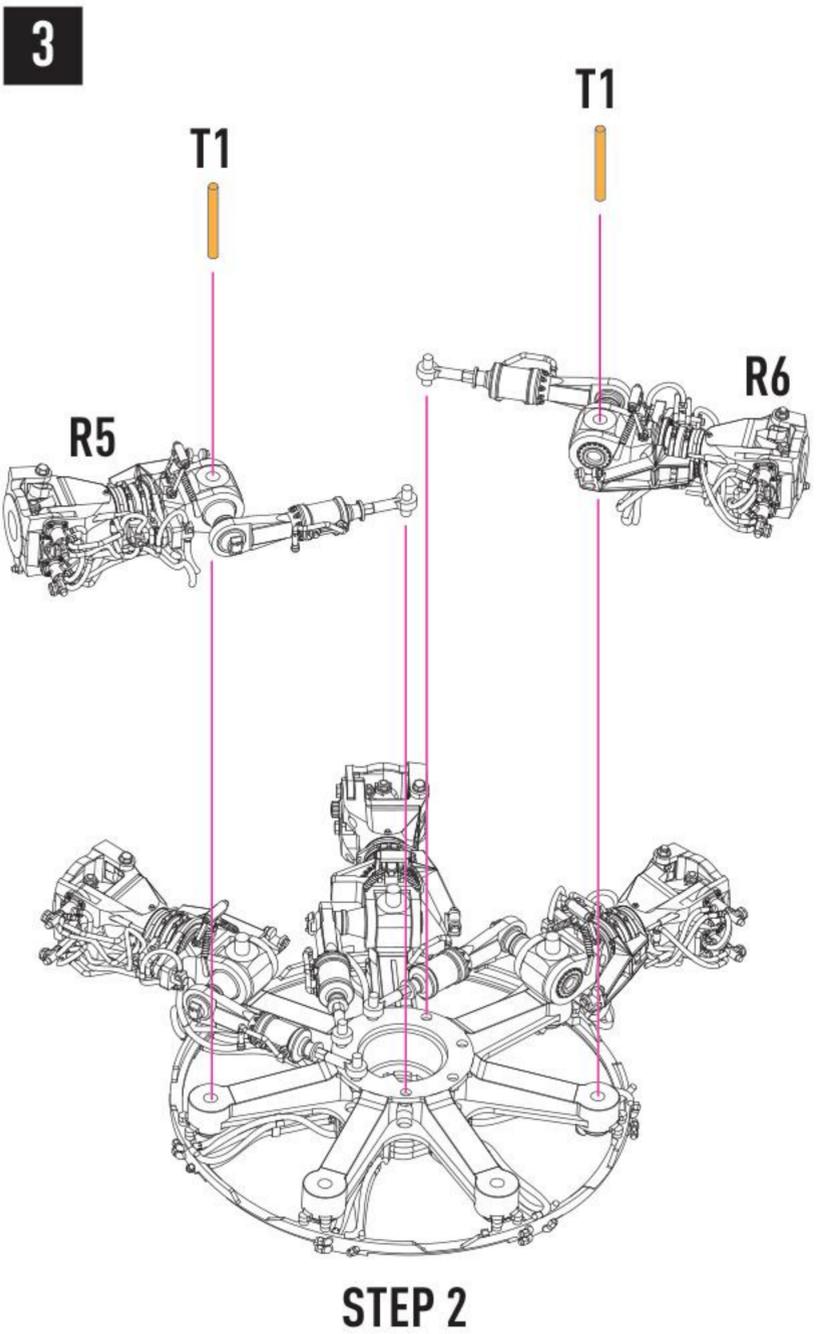



**DETAILS AFTER  
 REMOVAL FROM SUPPORTS**

**USE A SAW TO REMOVE SUPPORTS  
 FROM 3D PRINTED PARTS**

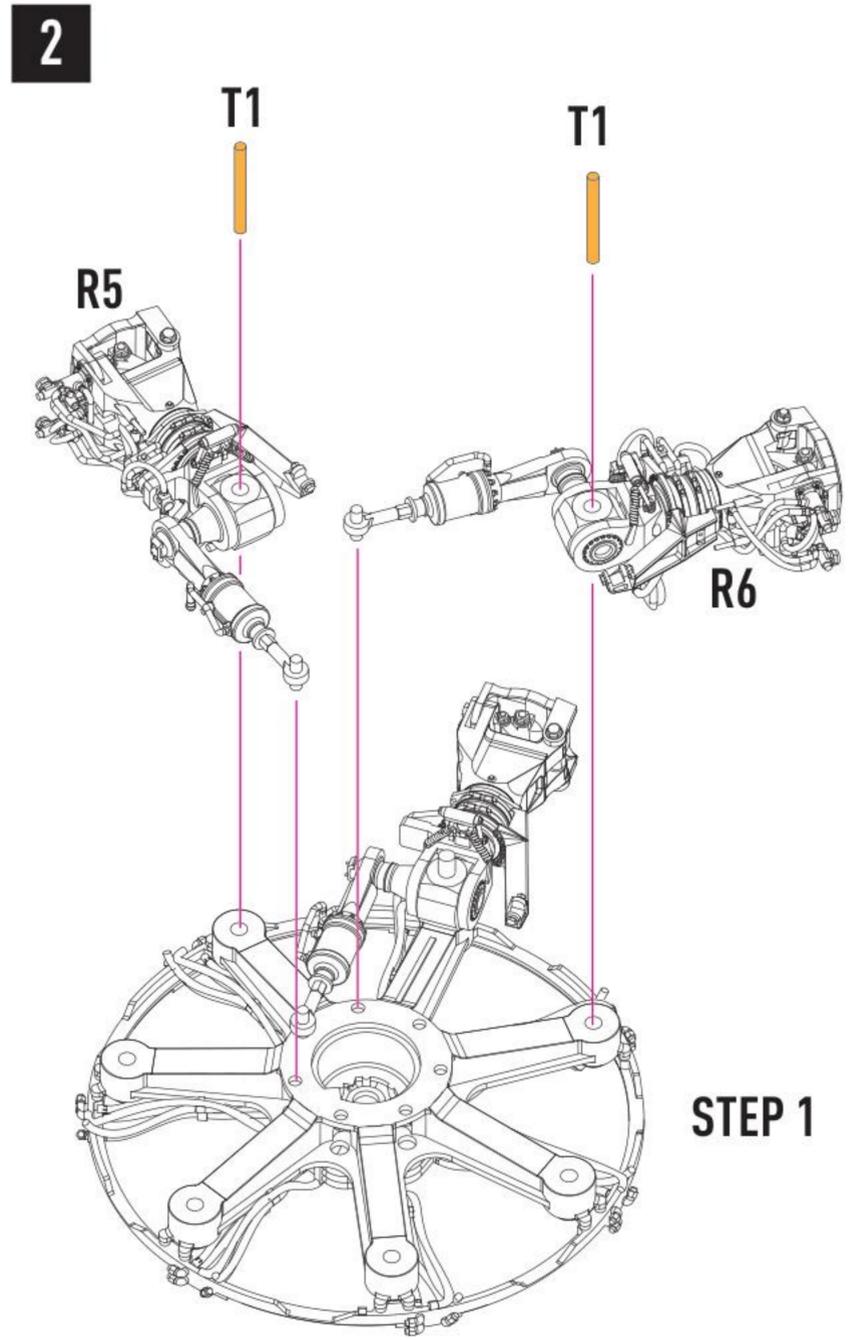


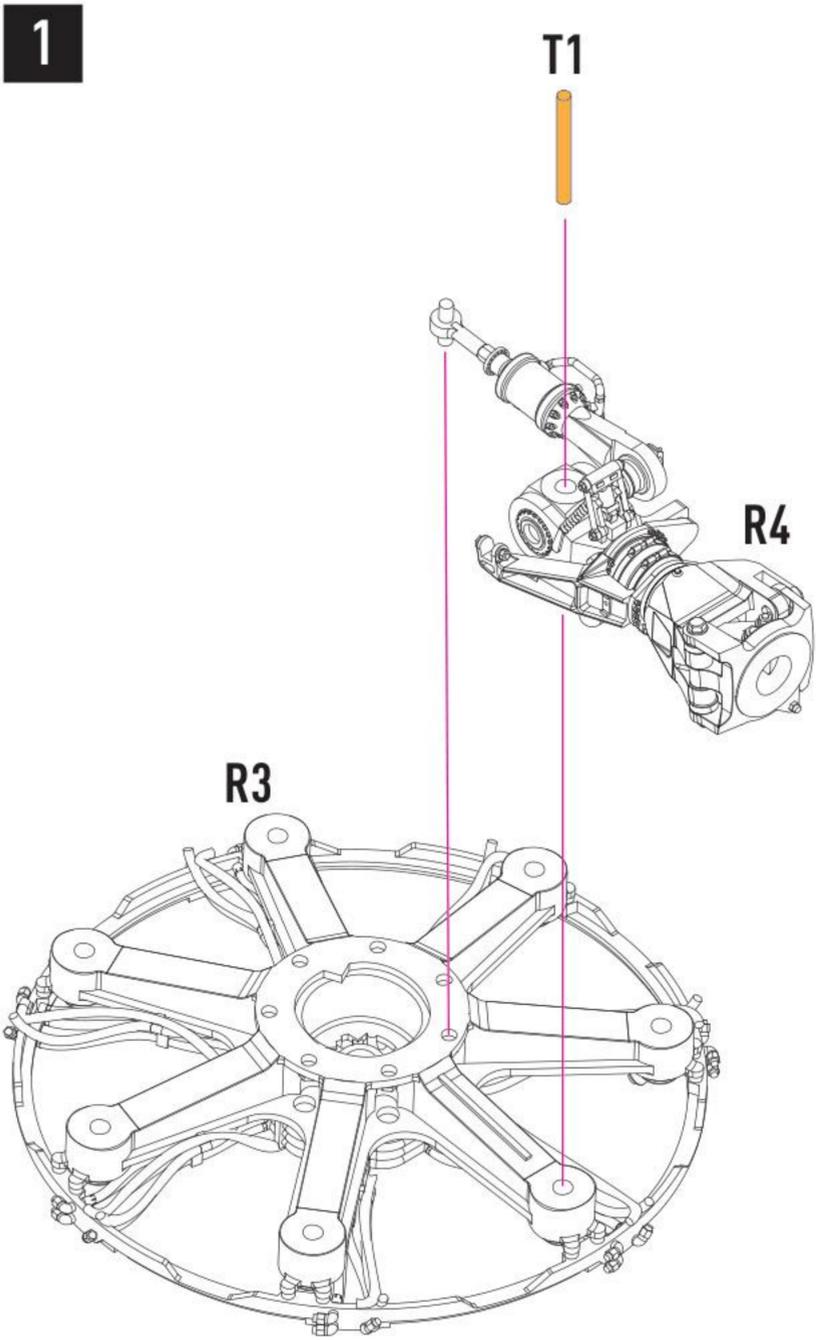


5

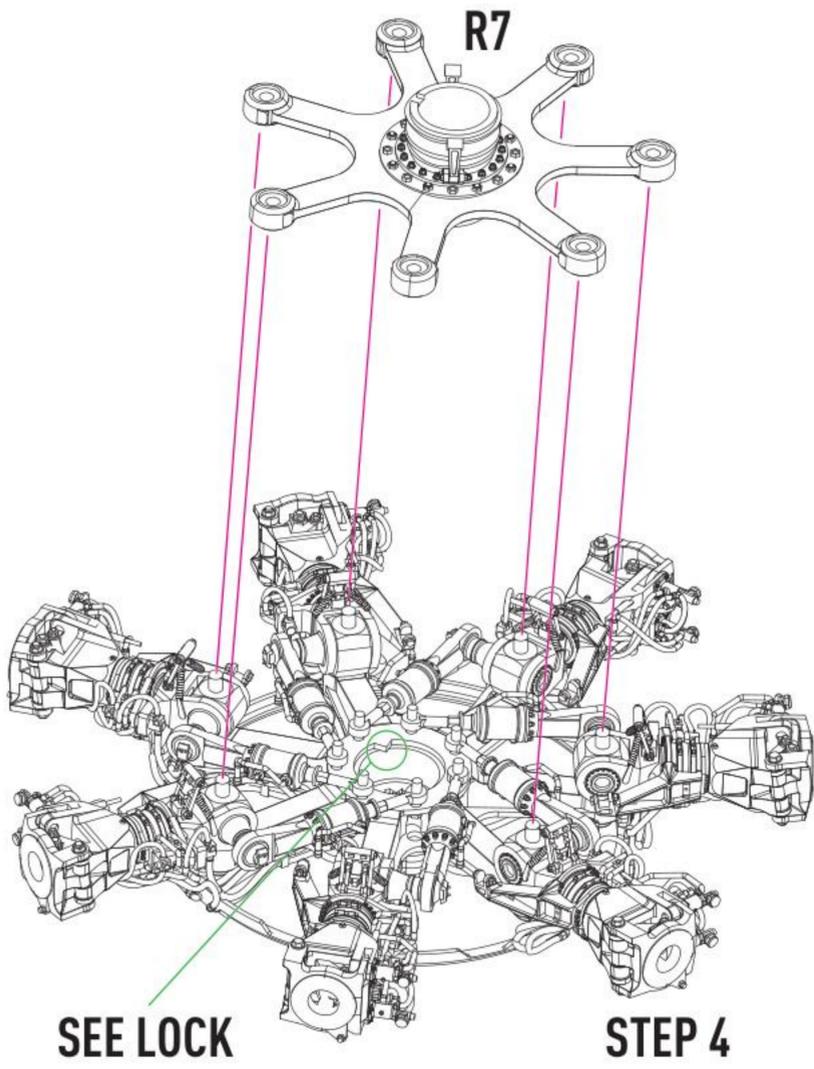


6

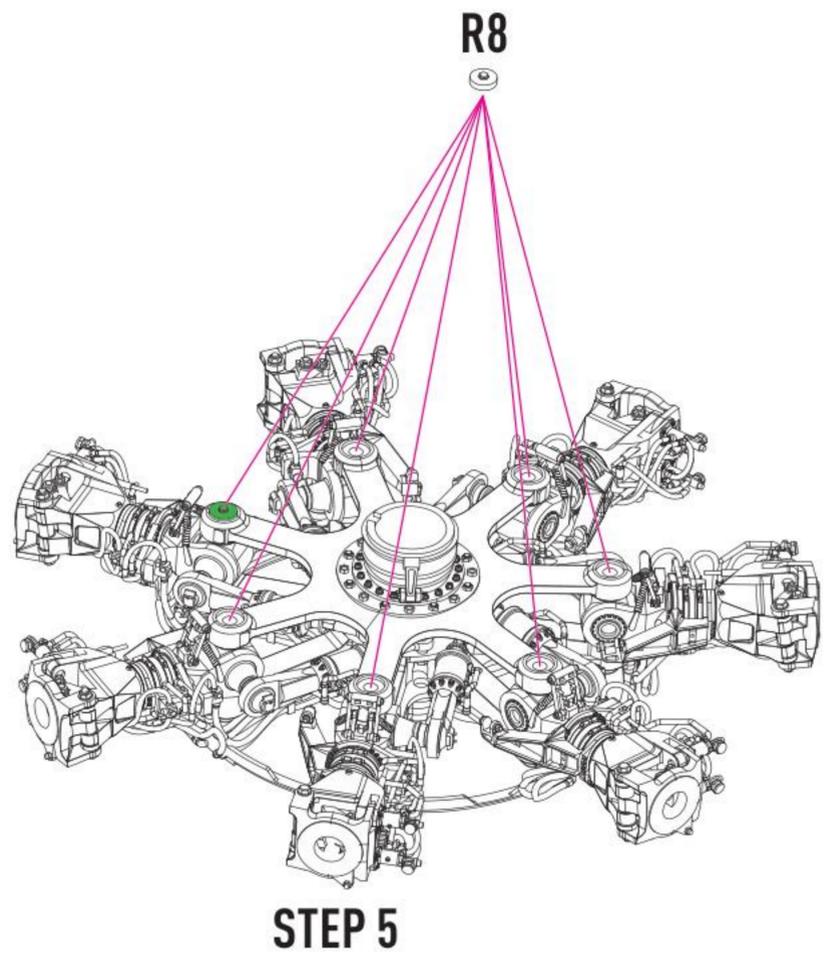


7

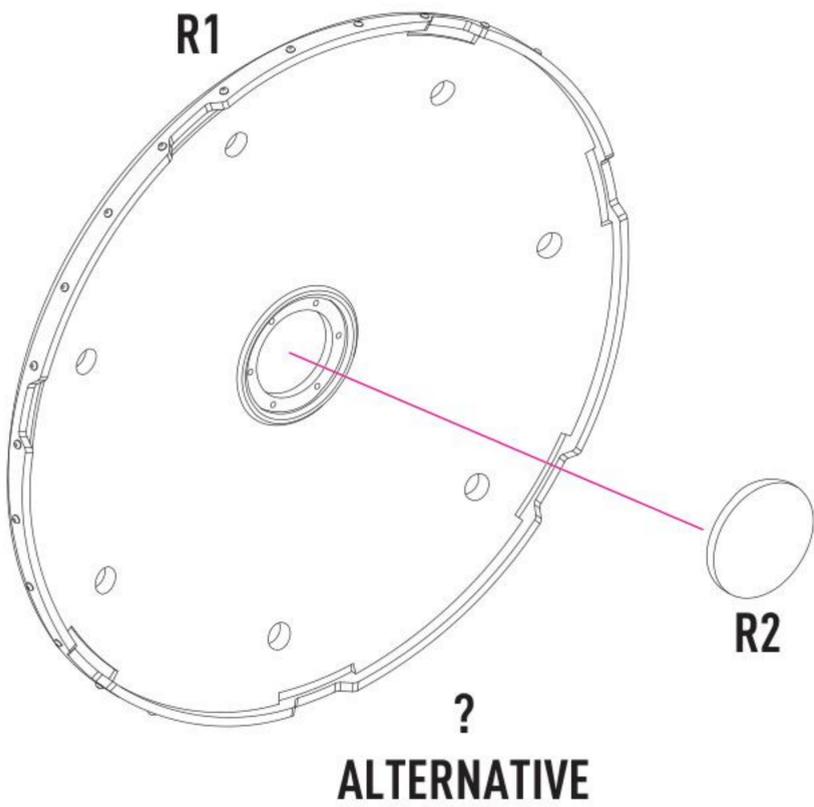


8

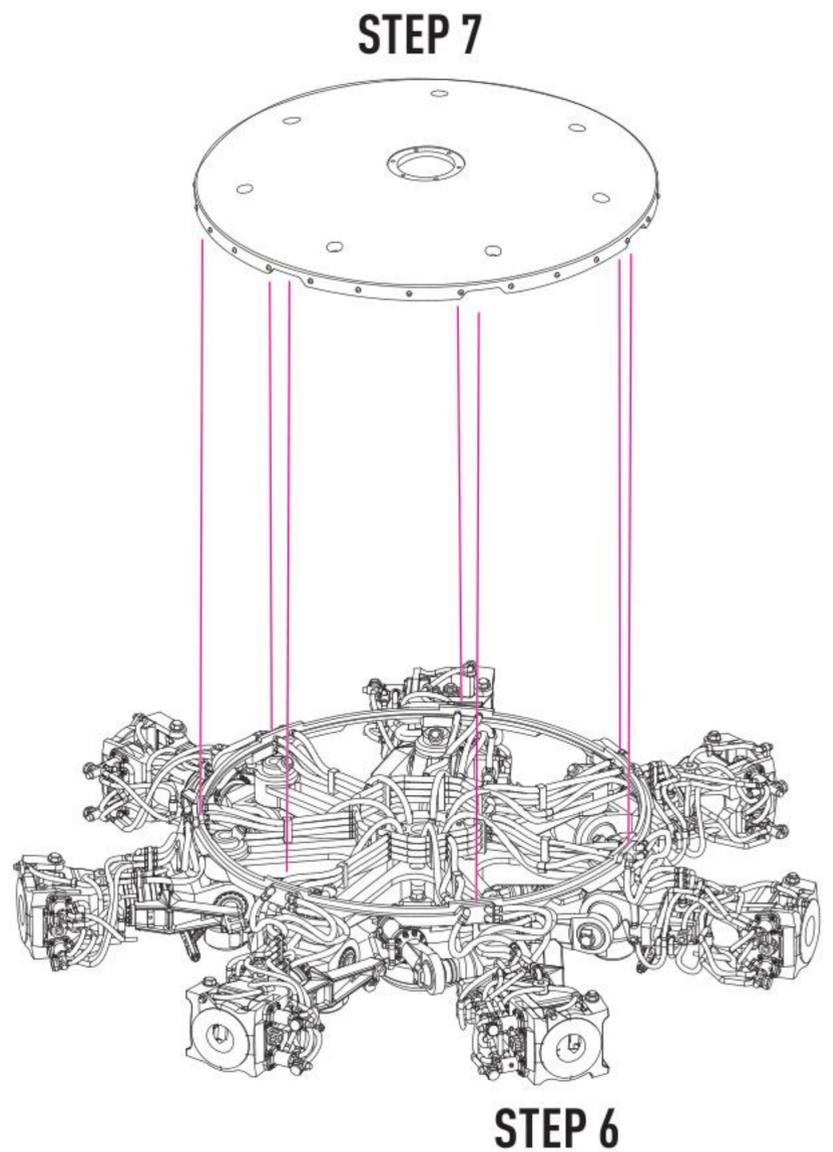


9

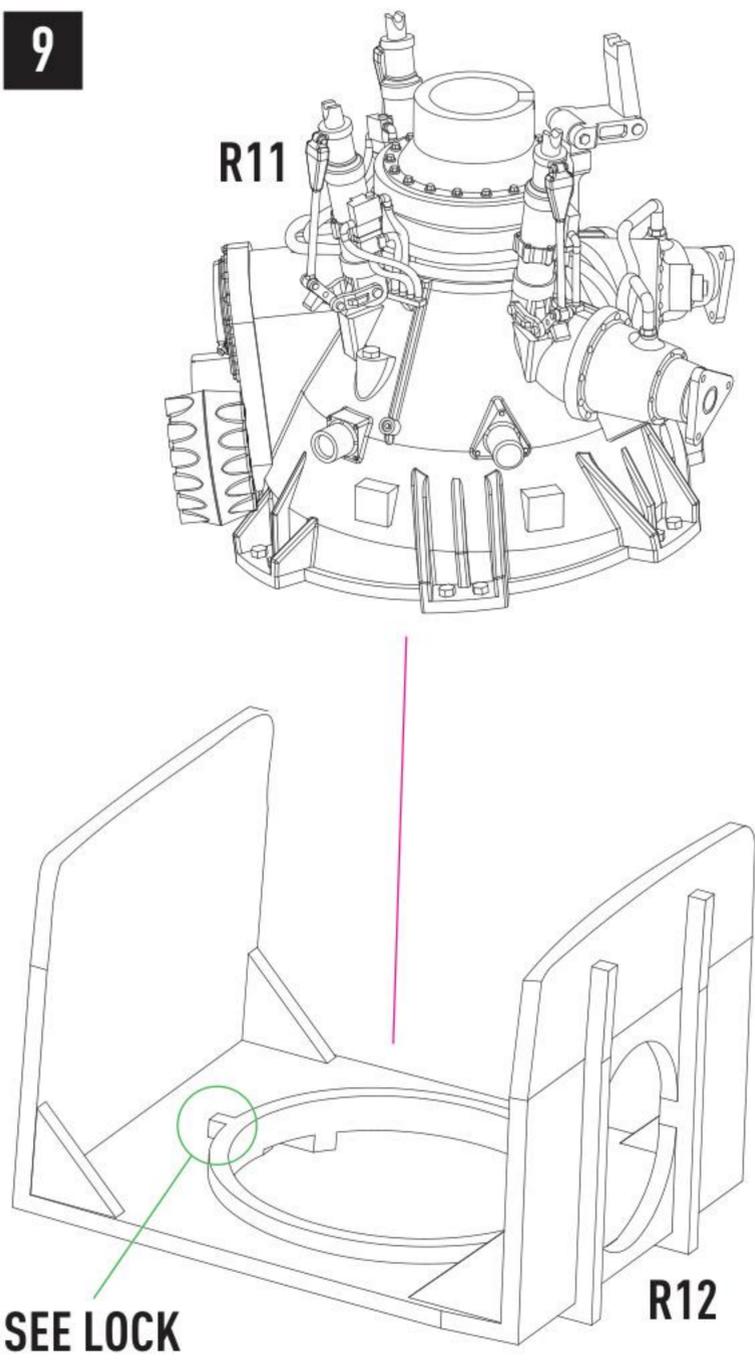


10

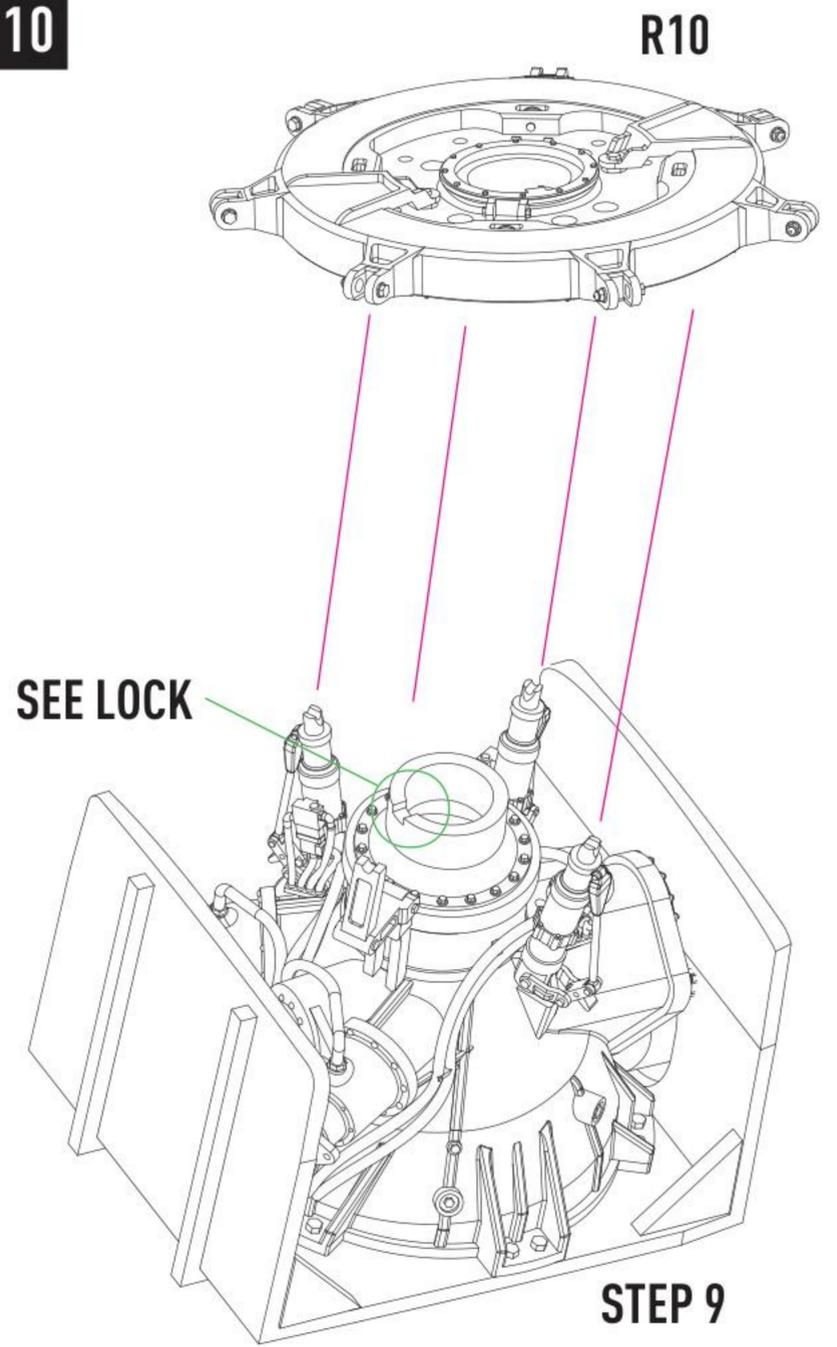


11

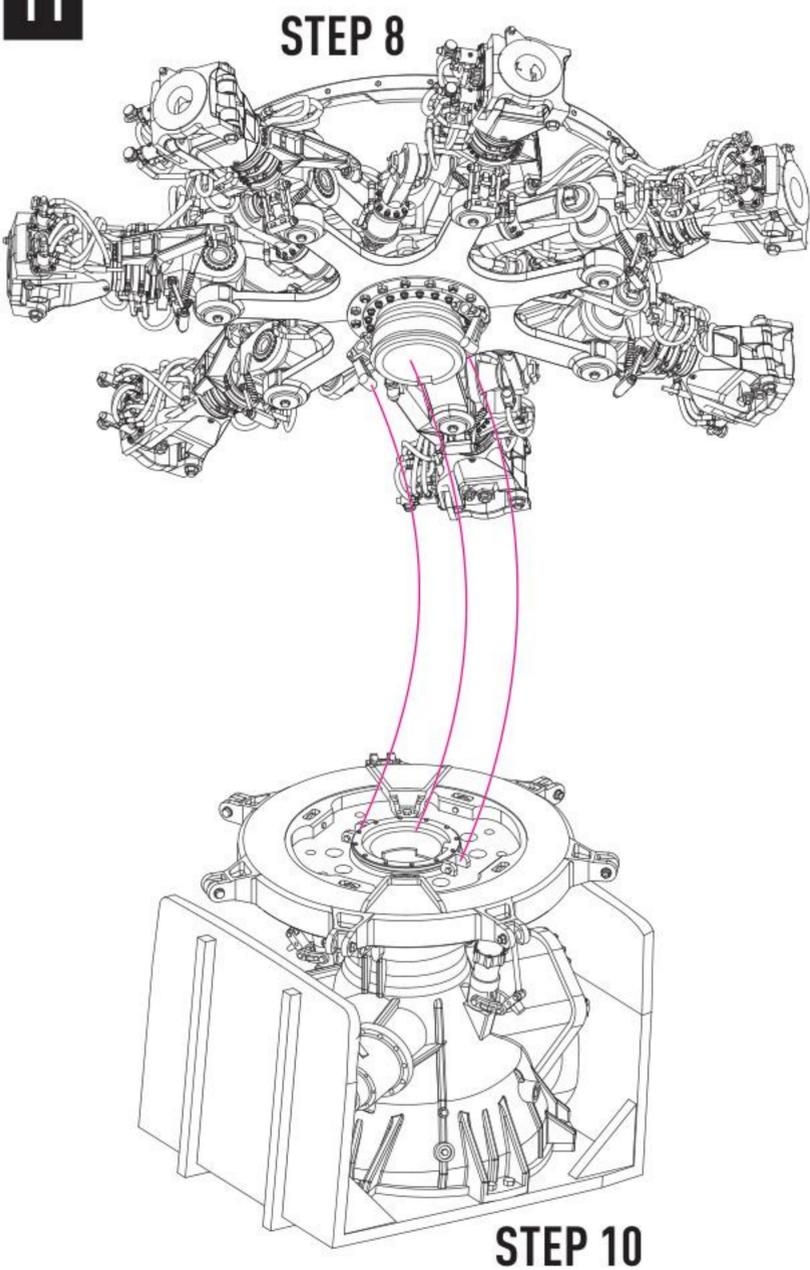


12

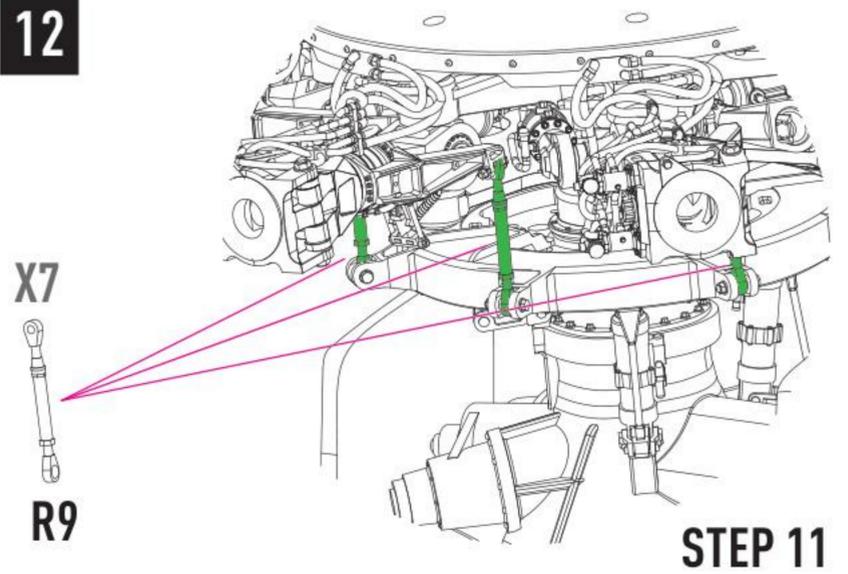


13

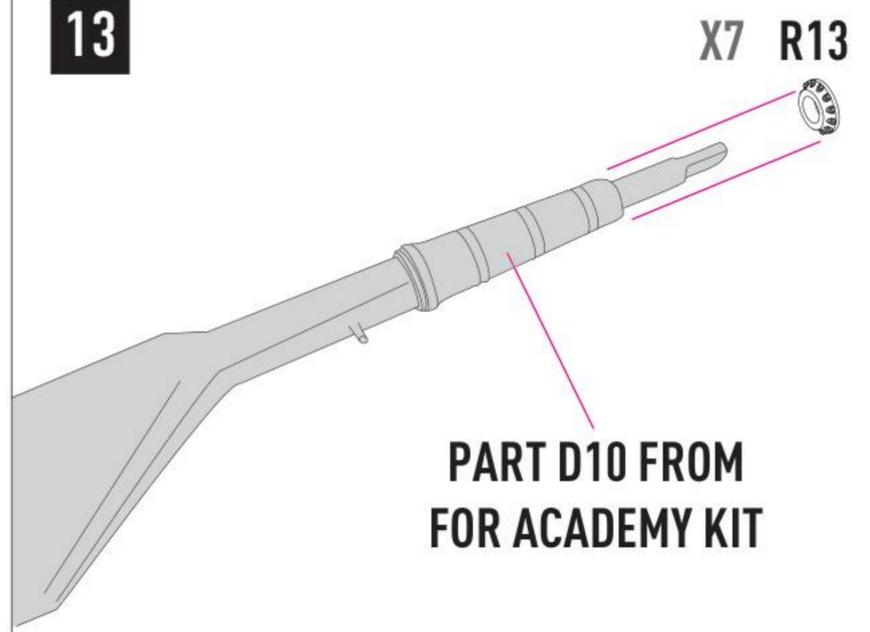

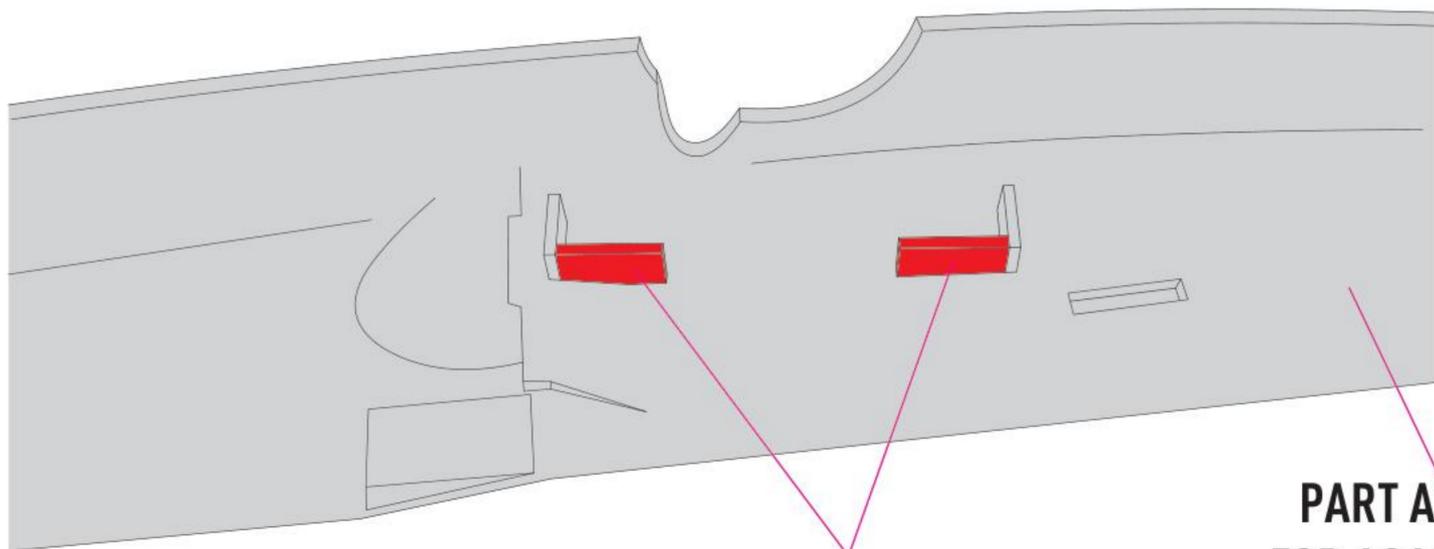


CUT


PART A2 FROM  
FOR ACADEMY KIT

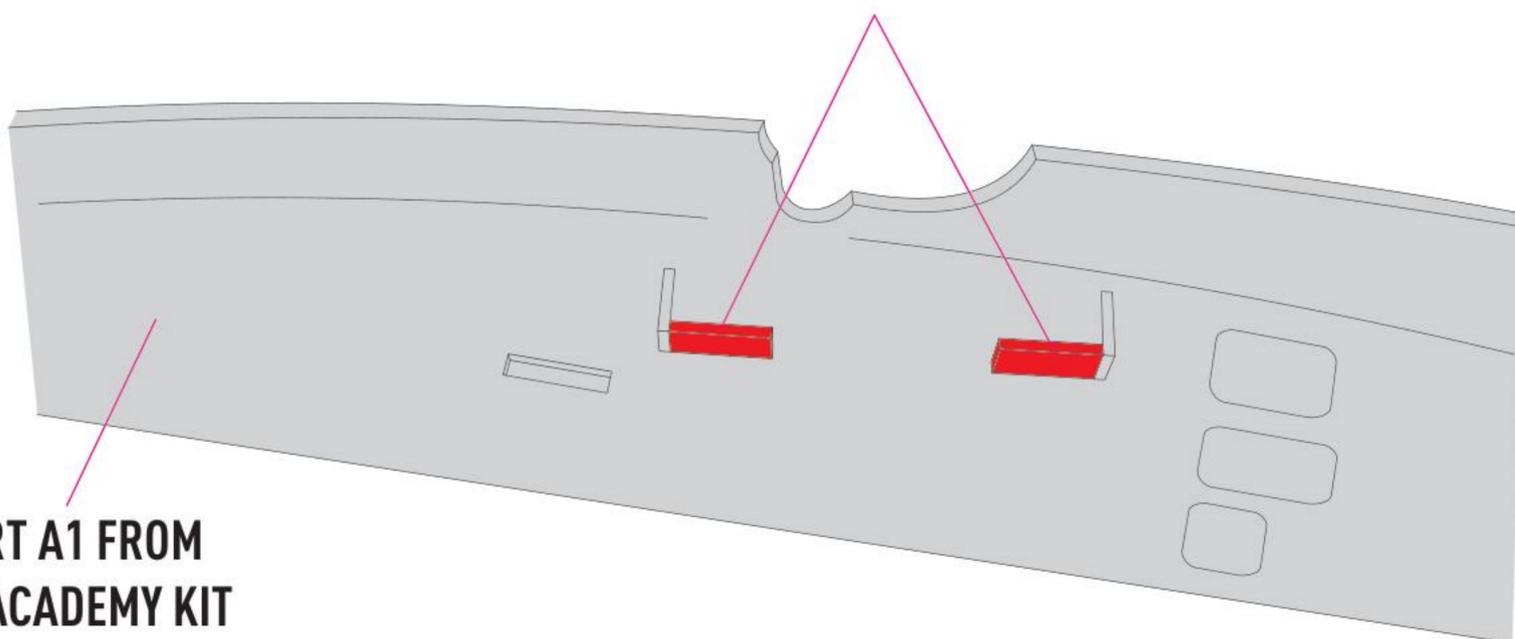

PART A1 FROM  
FOR ACADEMY KIT

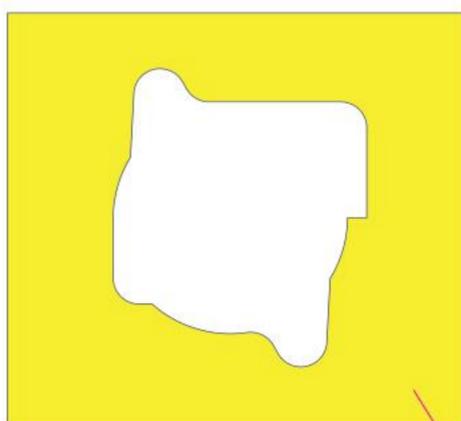


USE TEMPLATE  
M1

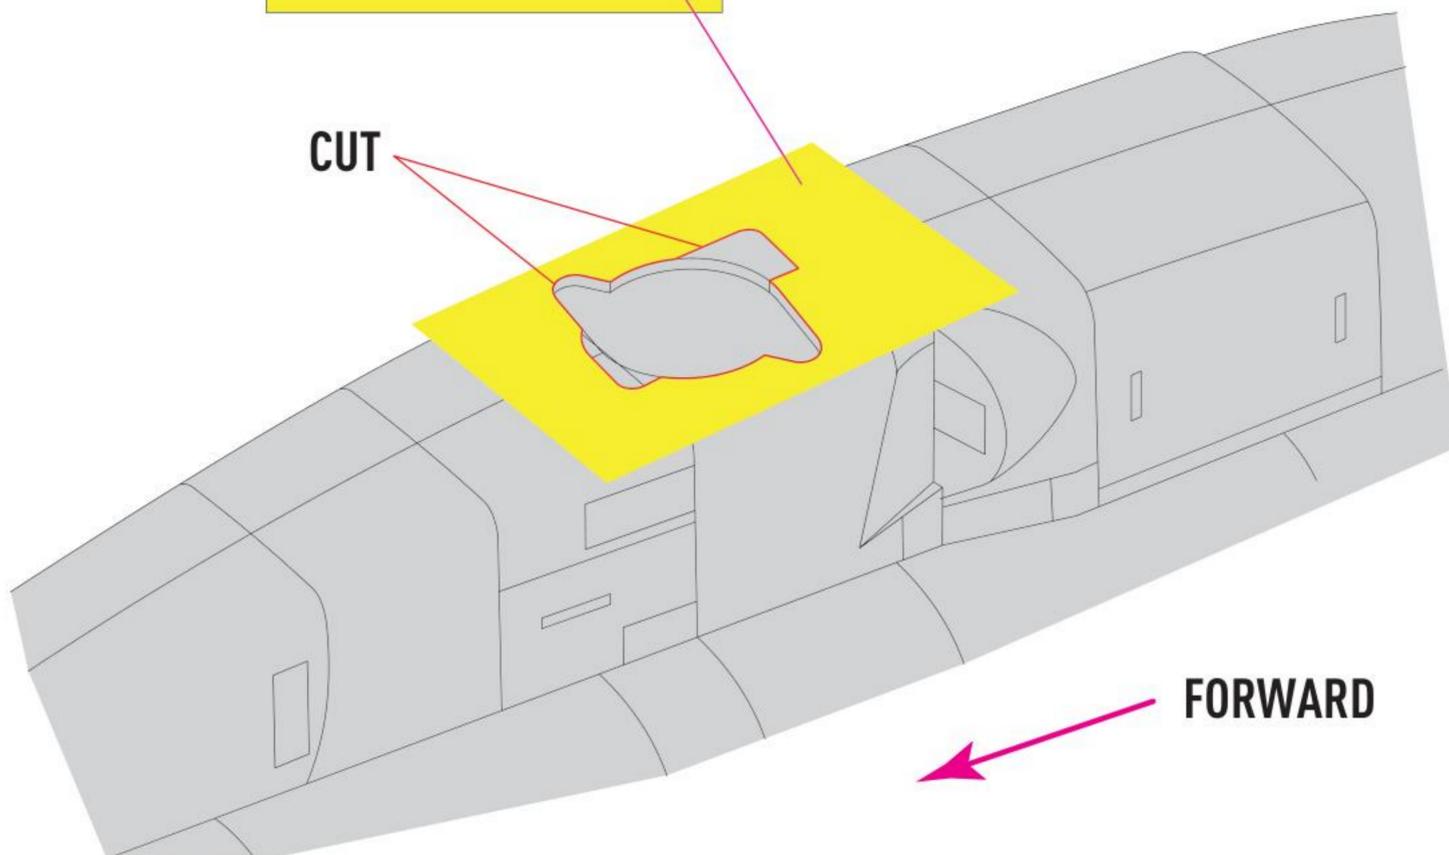


CUT

FORWARD


15

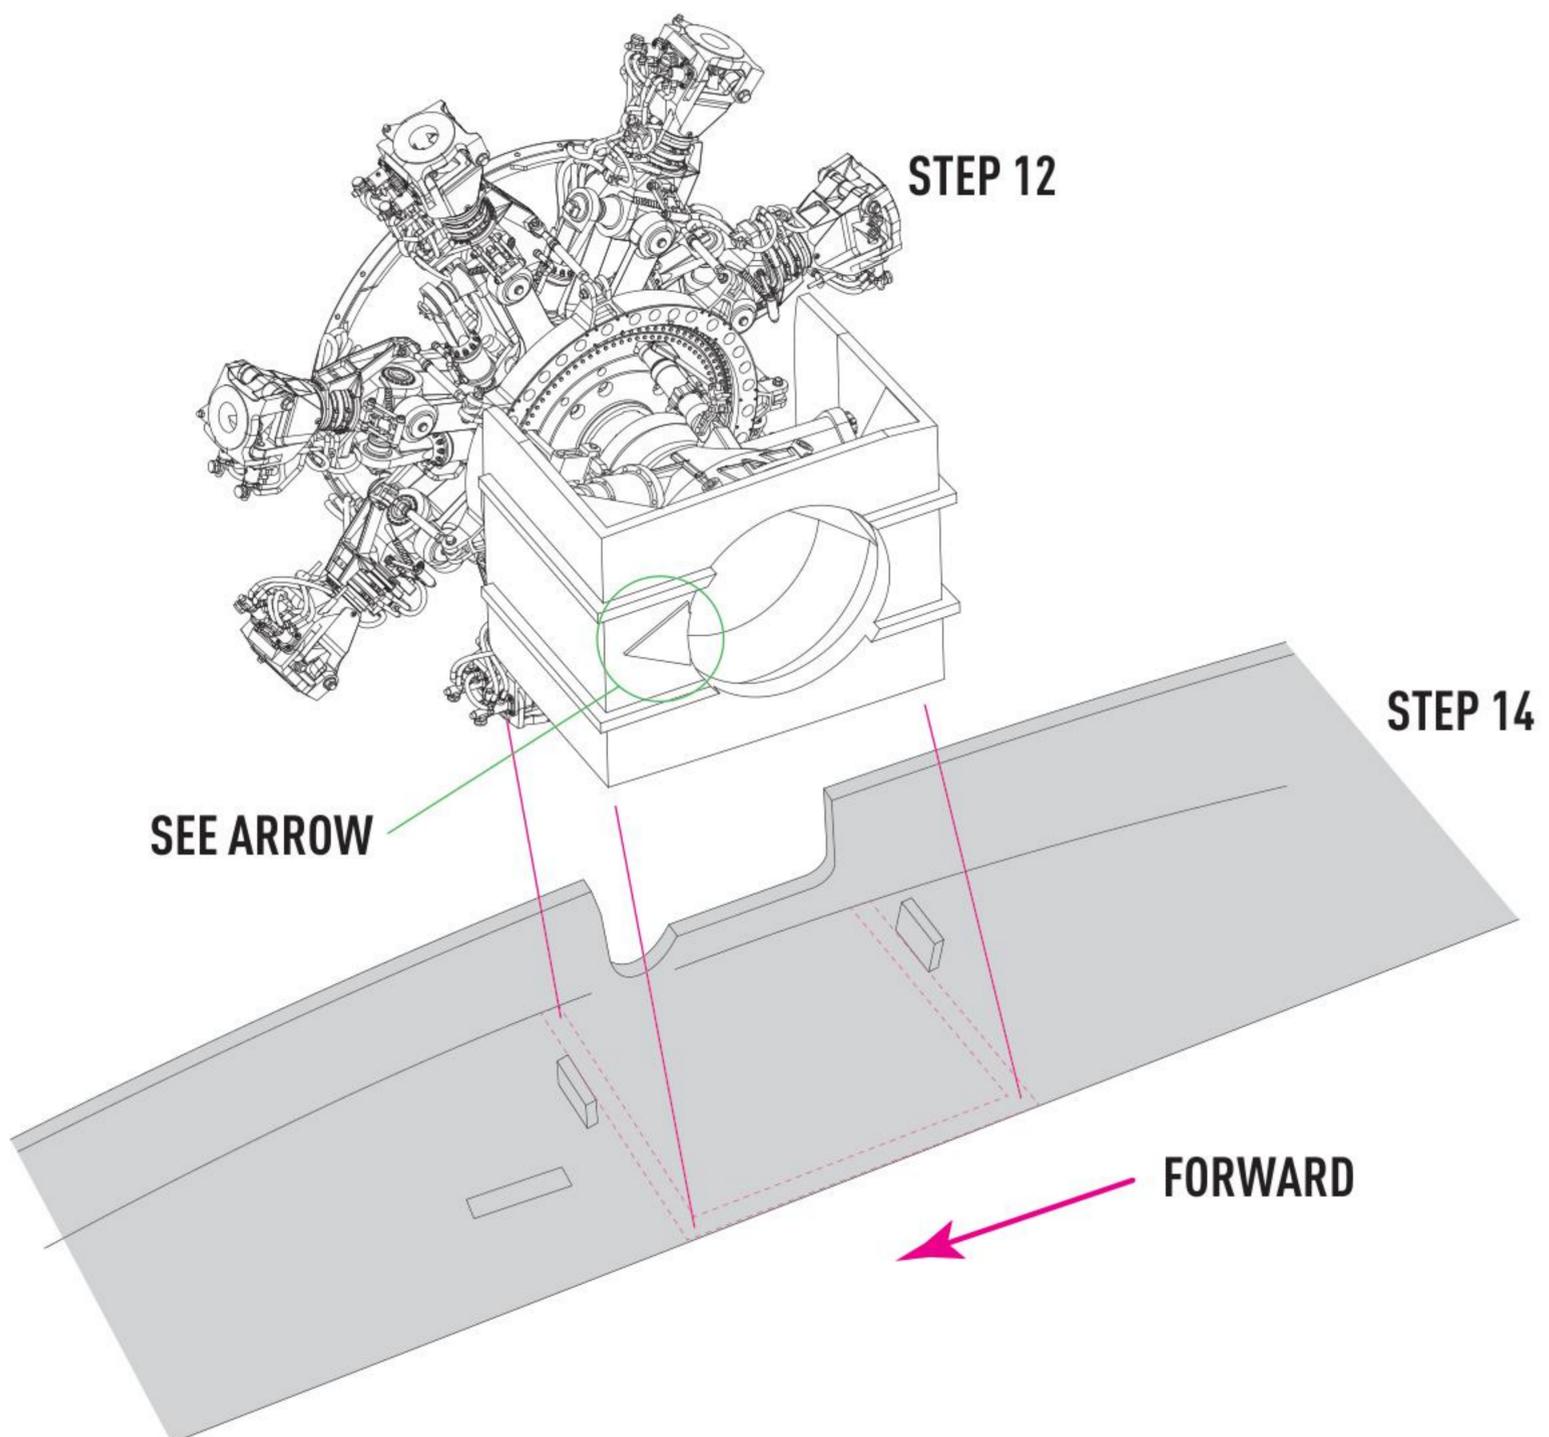




16

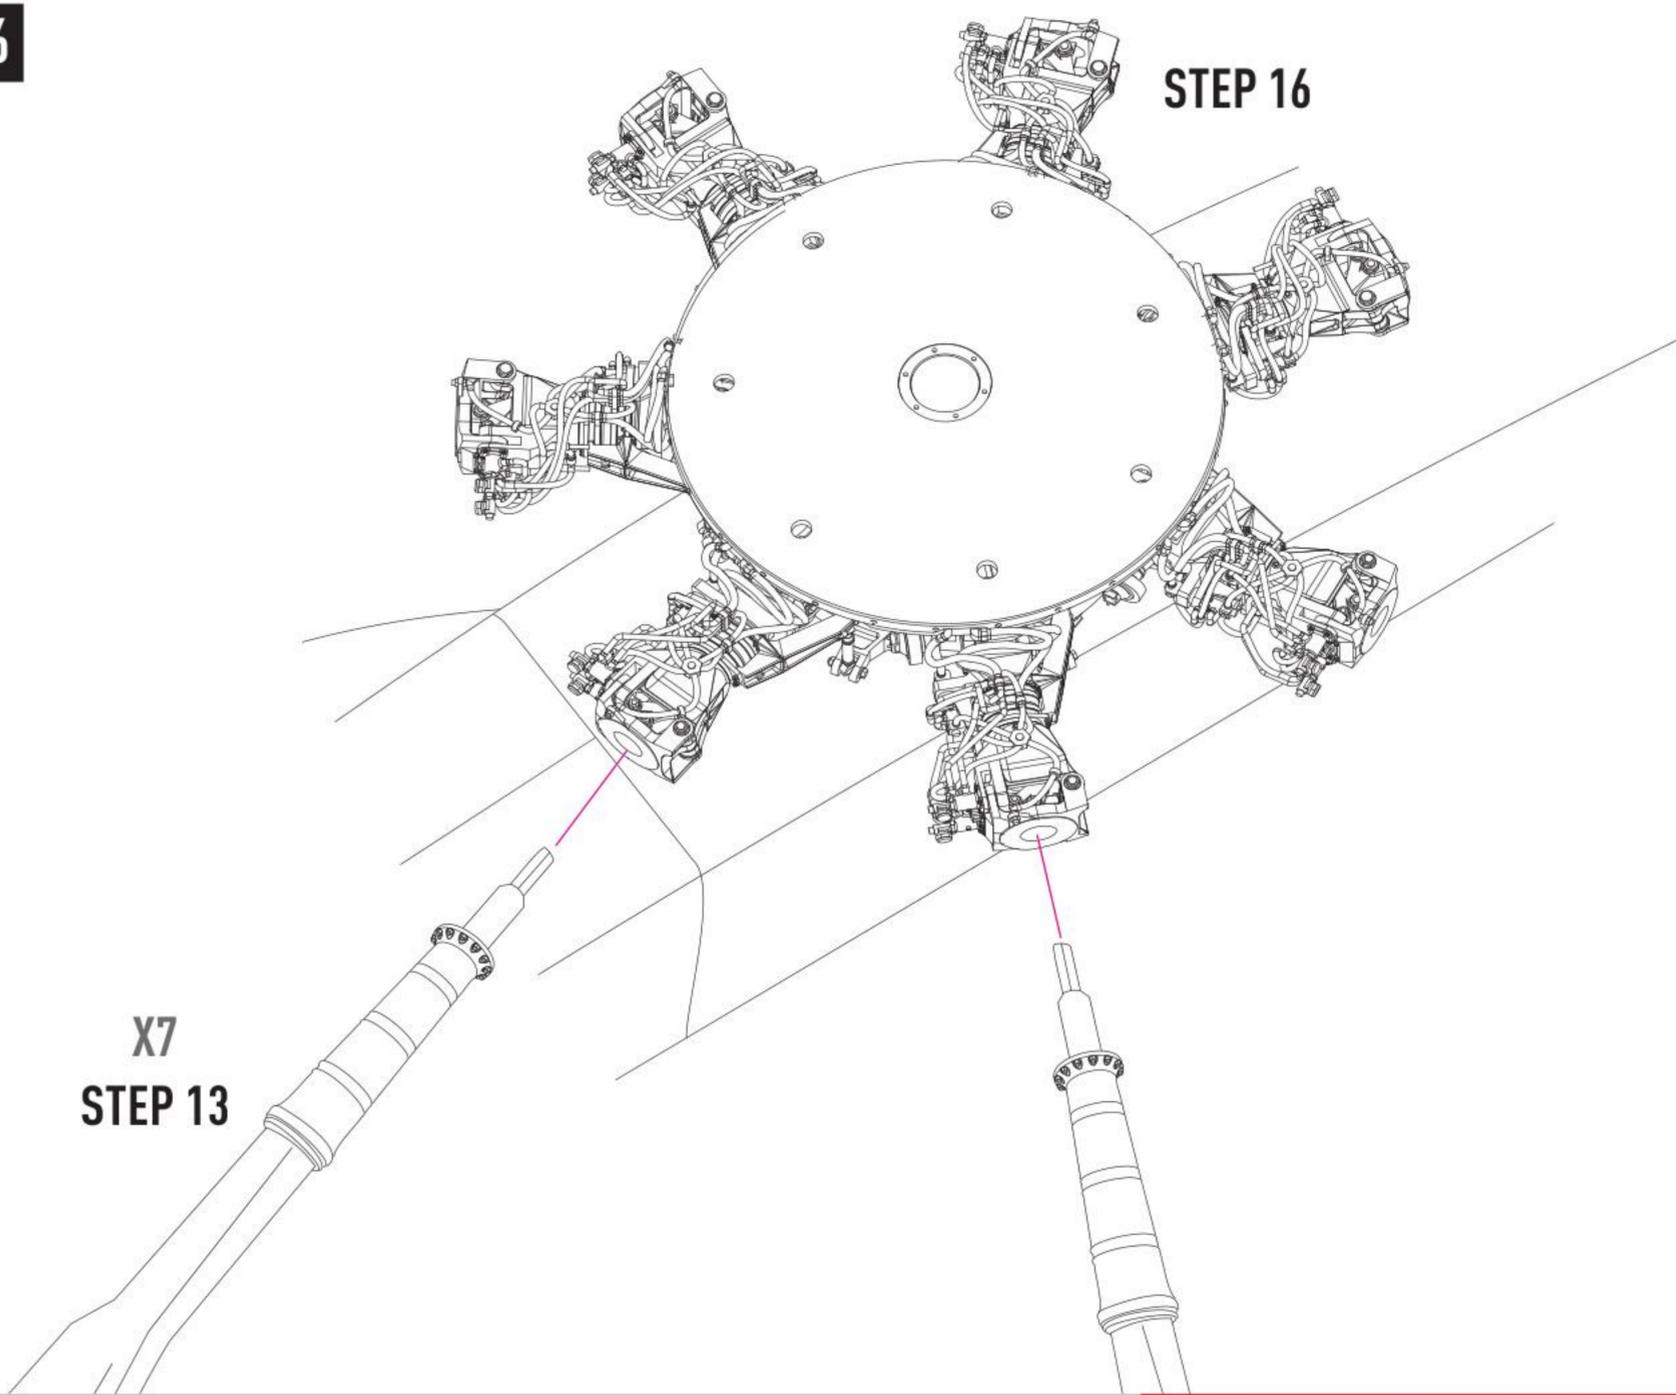

# DECAL INSTRUCTION

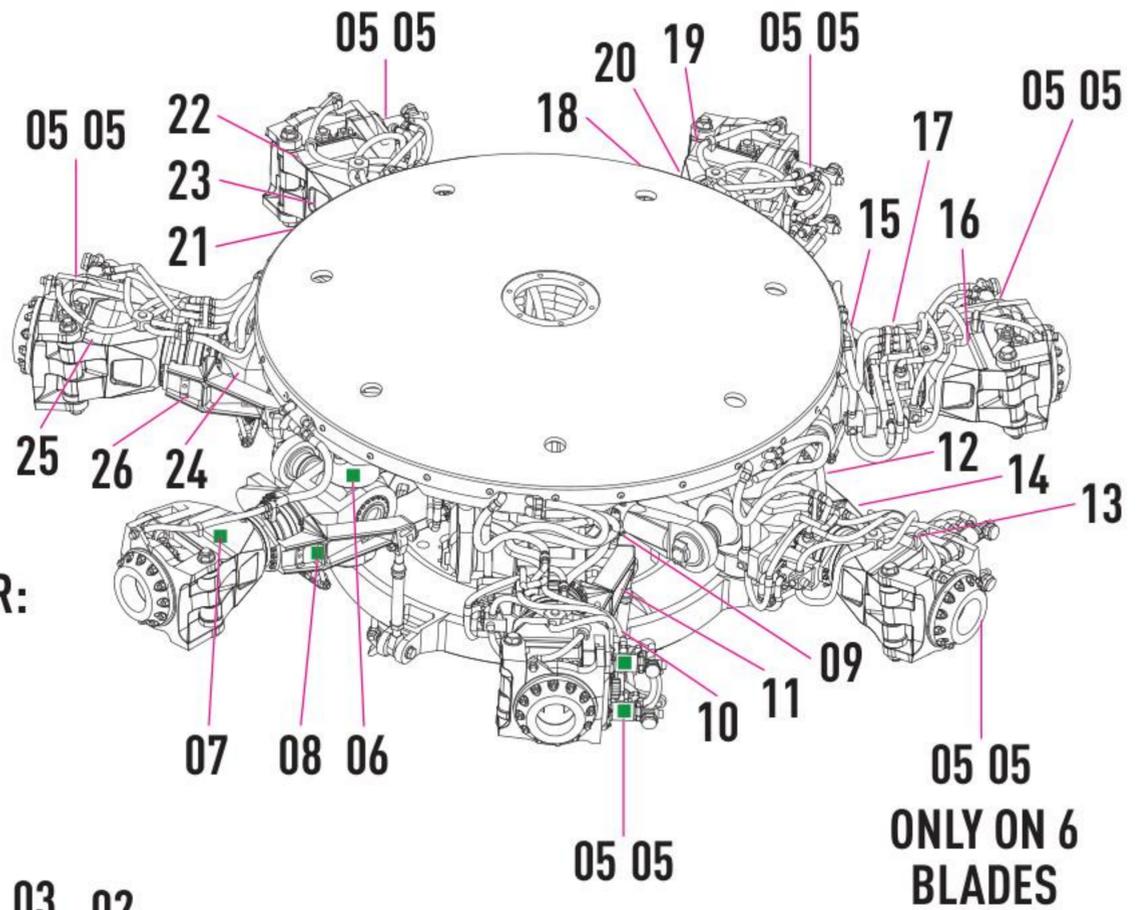

EACH BLADE HAS ITS OWN COLOR:

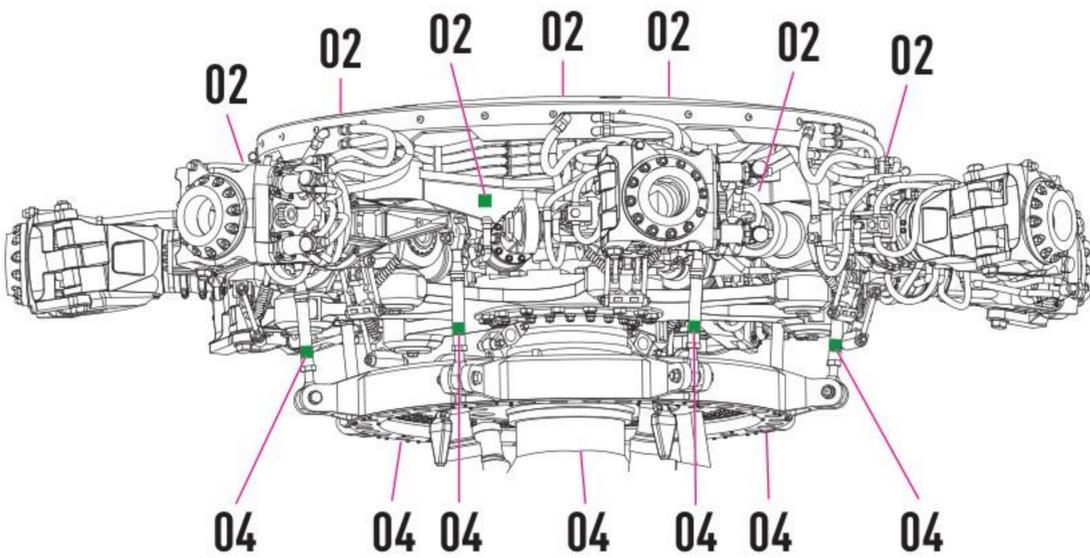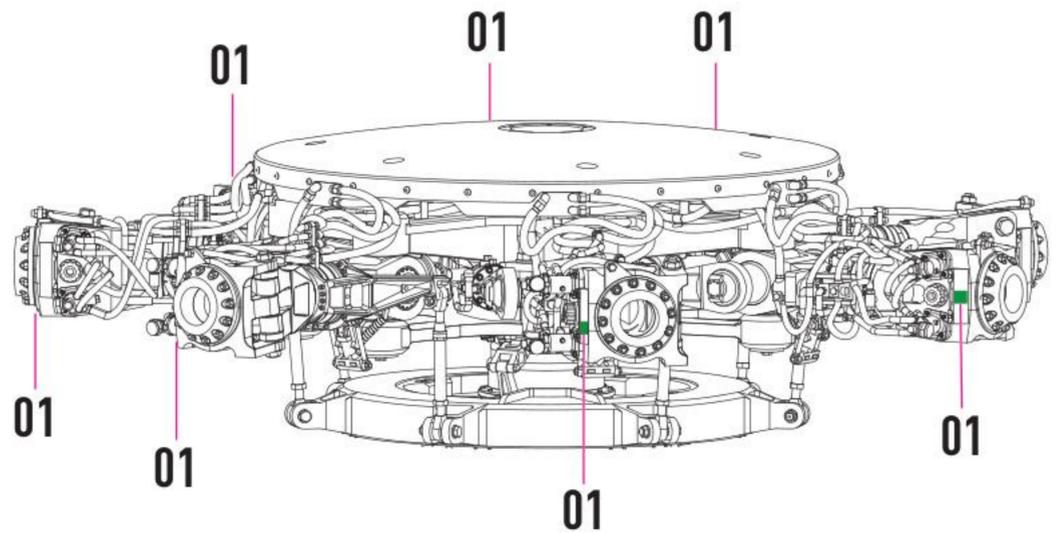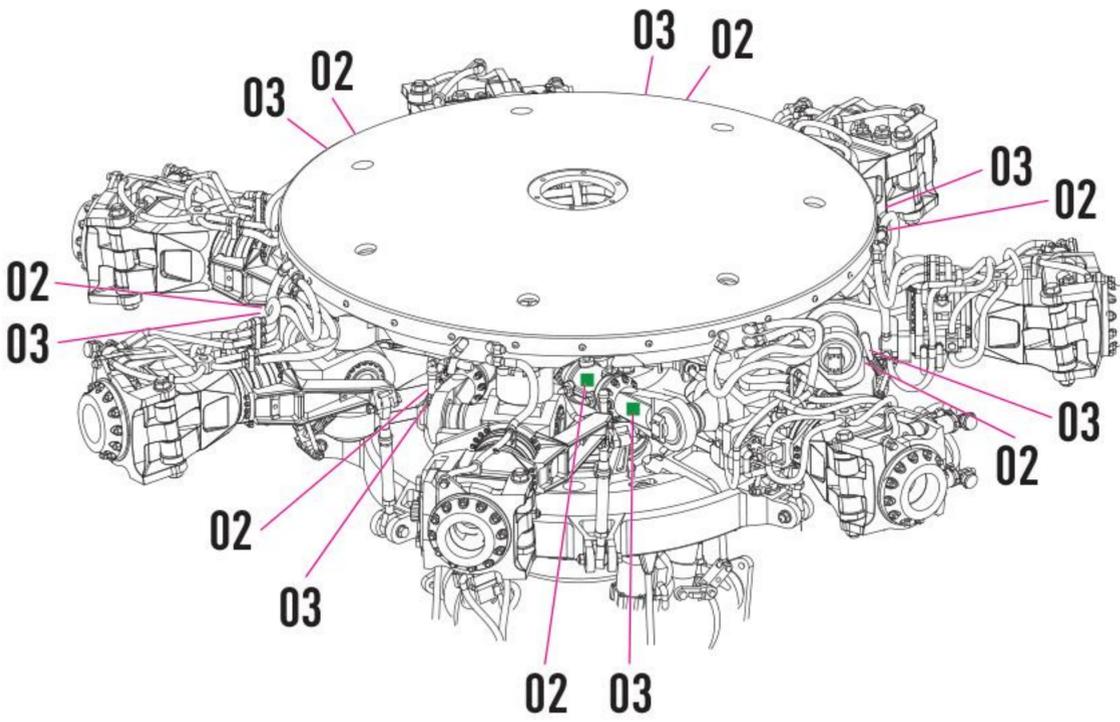

**YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE**

**RESKIT-MODELS.COM**

**General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)**

**Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)**

**Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)**