



**DETAILS AFTER REMOVAL  
FROM SUPPORTS**


 USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

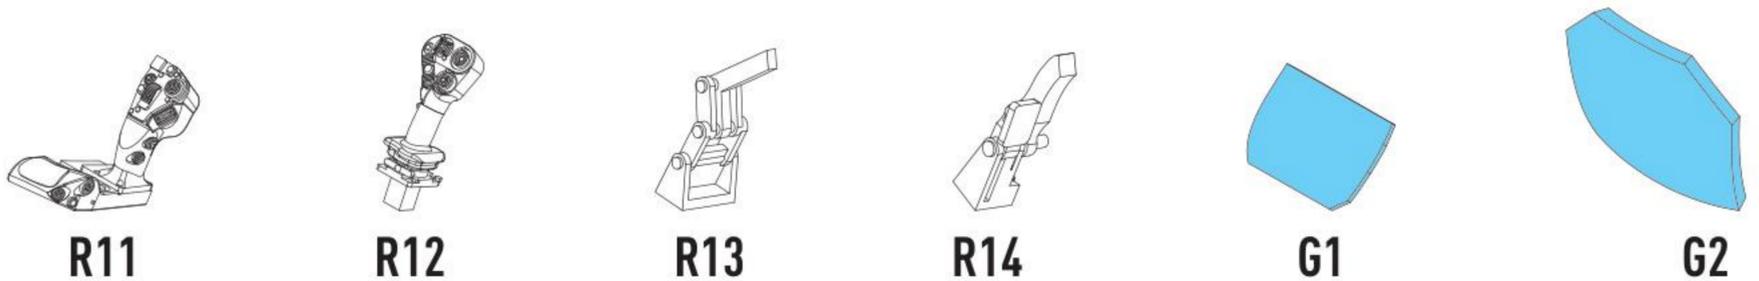


**PARTS G1 AND G2 SHOULD BE COATED WITH GLOSSY VARNISH BEFORE USE**

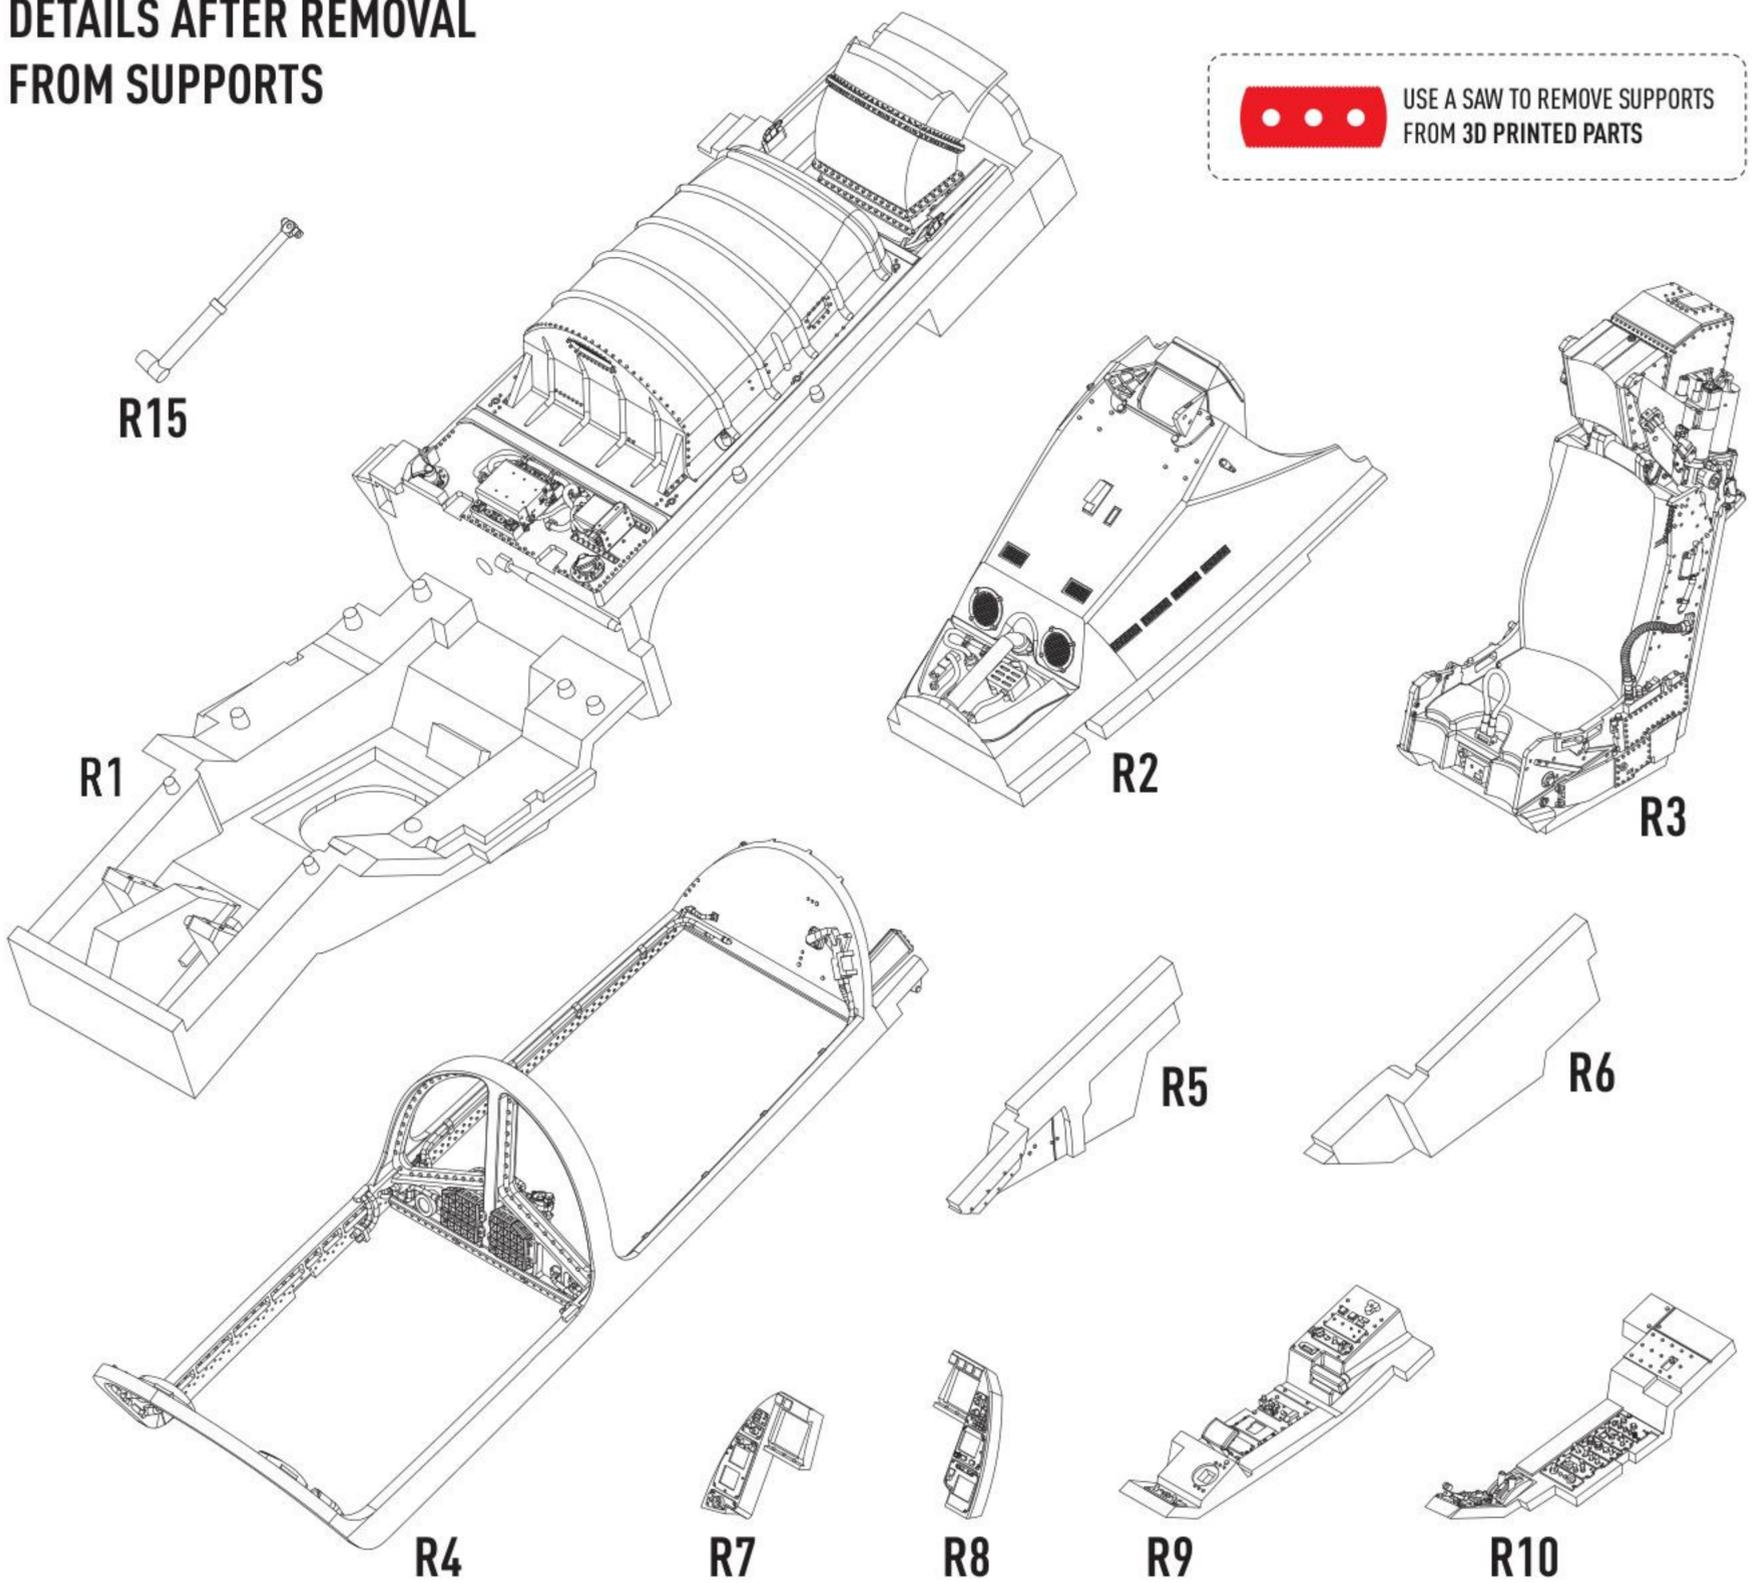


1

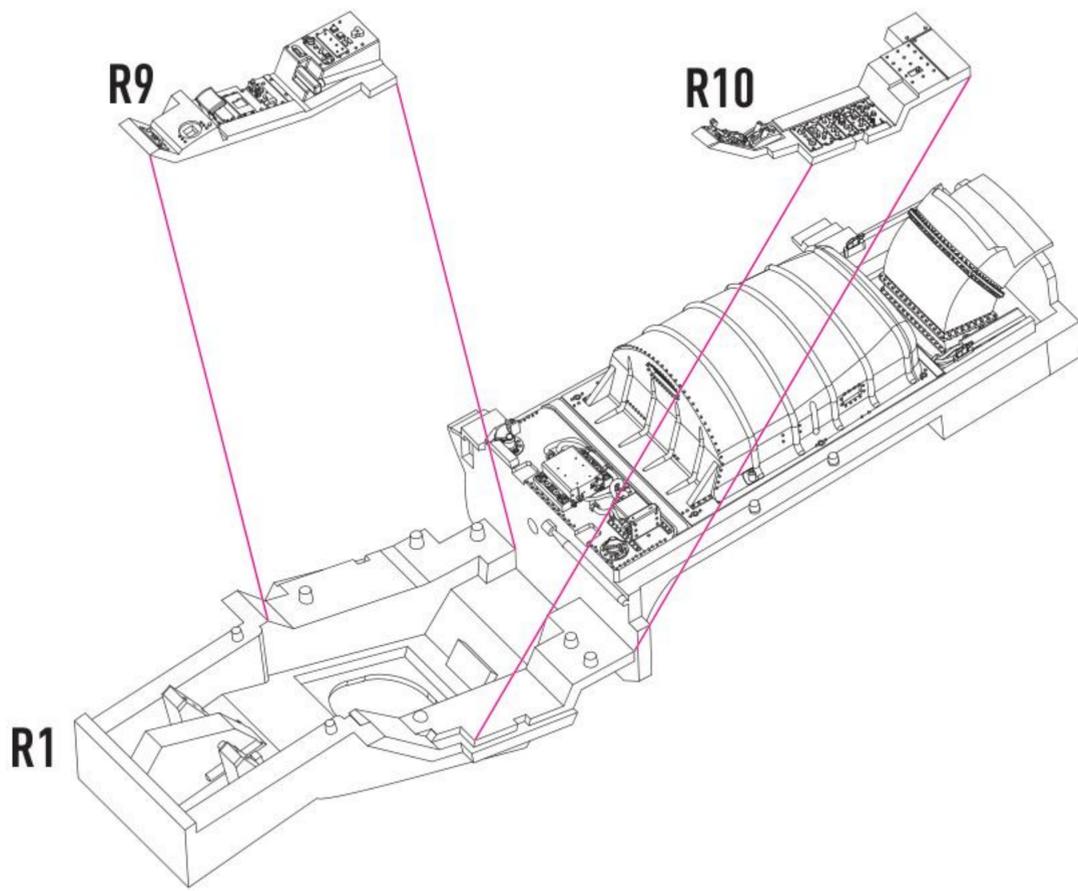


2

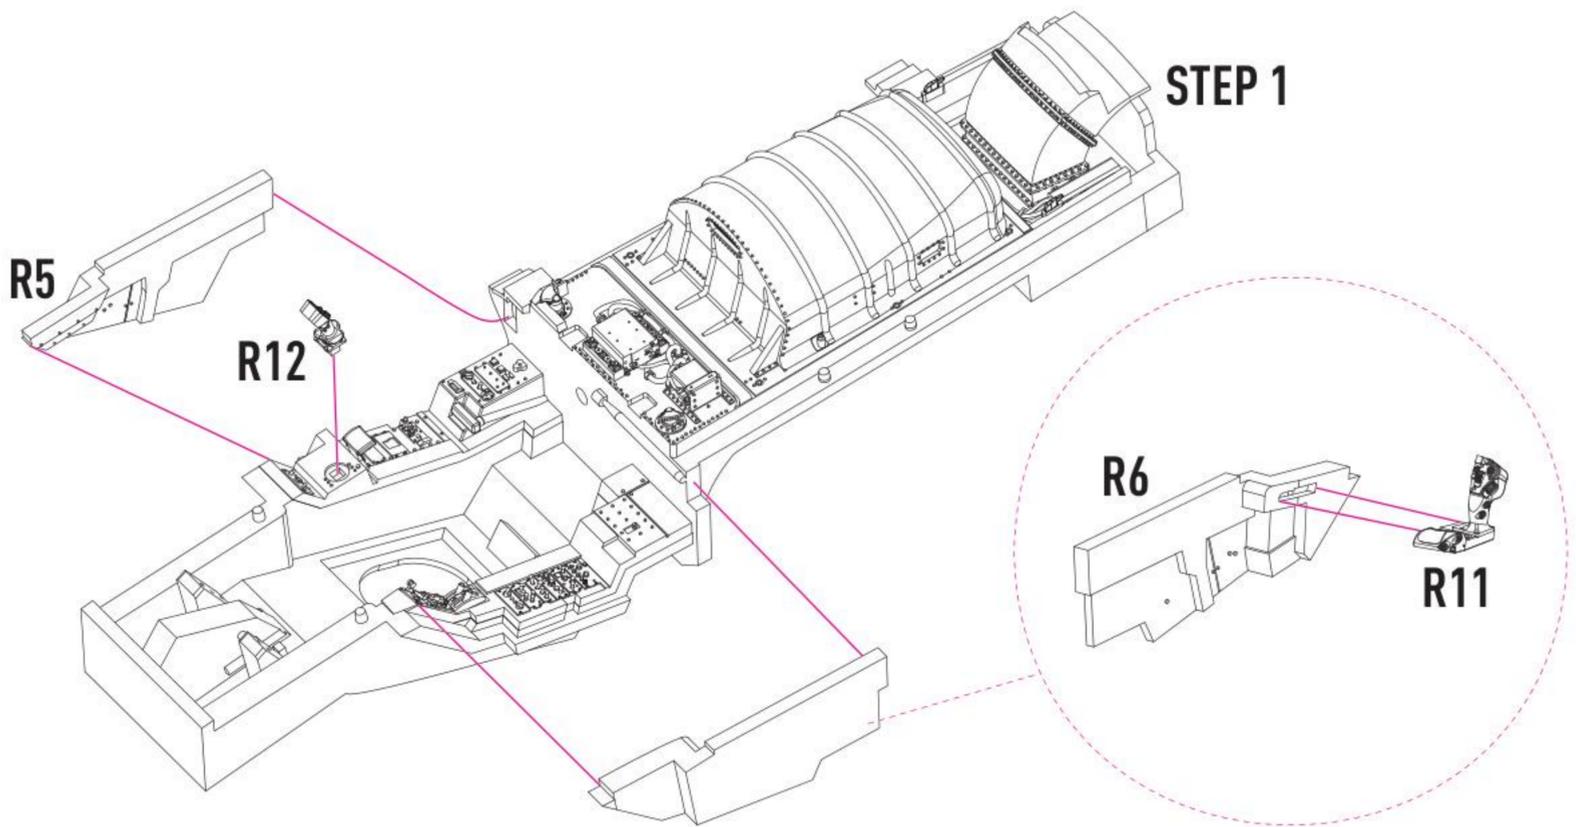

3

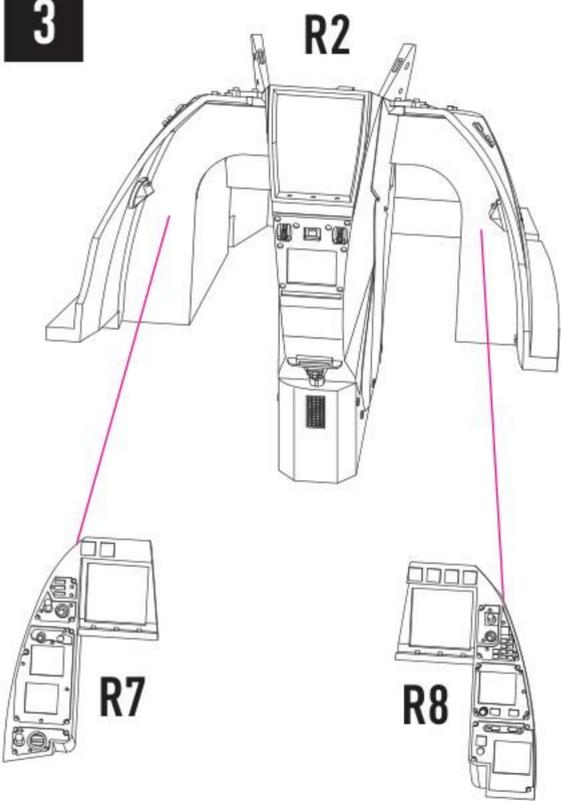


4

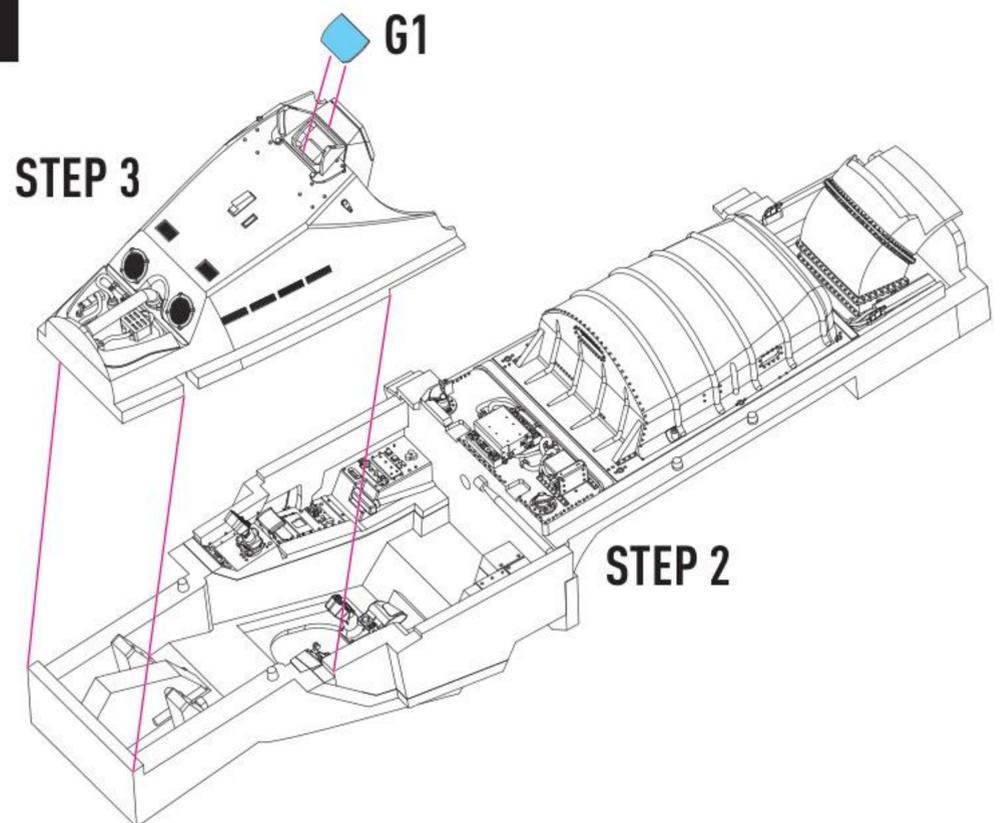

5


PART B15 FROM THE KIT

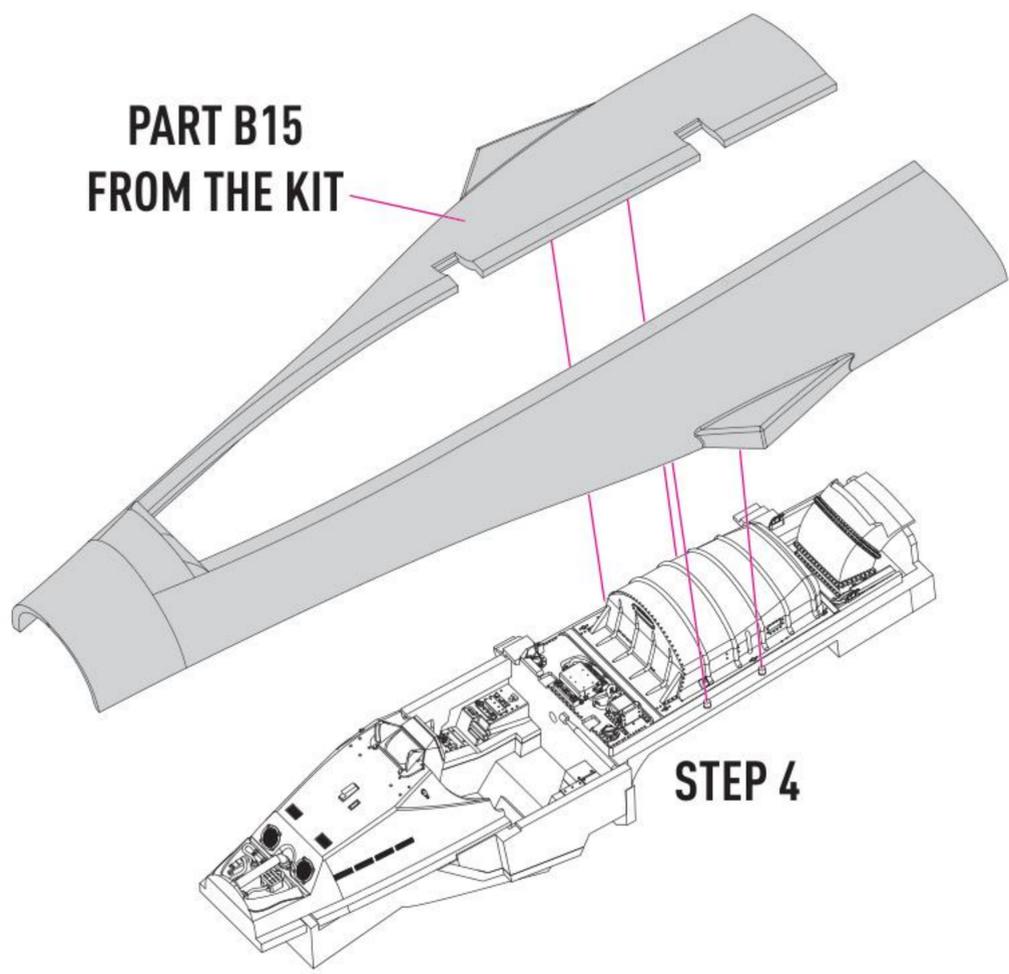

STEP 4

6


PART E74 FROM THE KIT

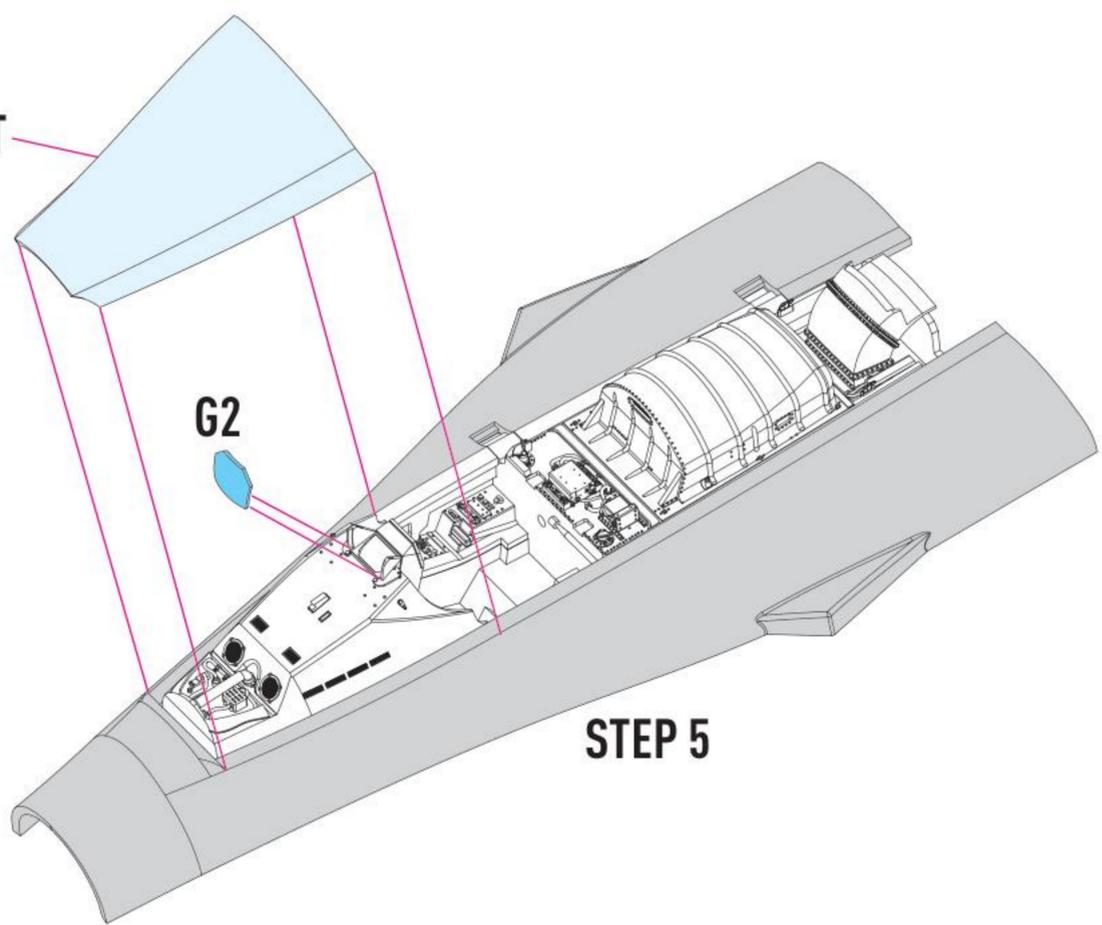


STEP 5



7

PART E70 FROM THE KIT

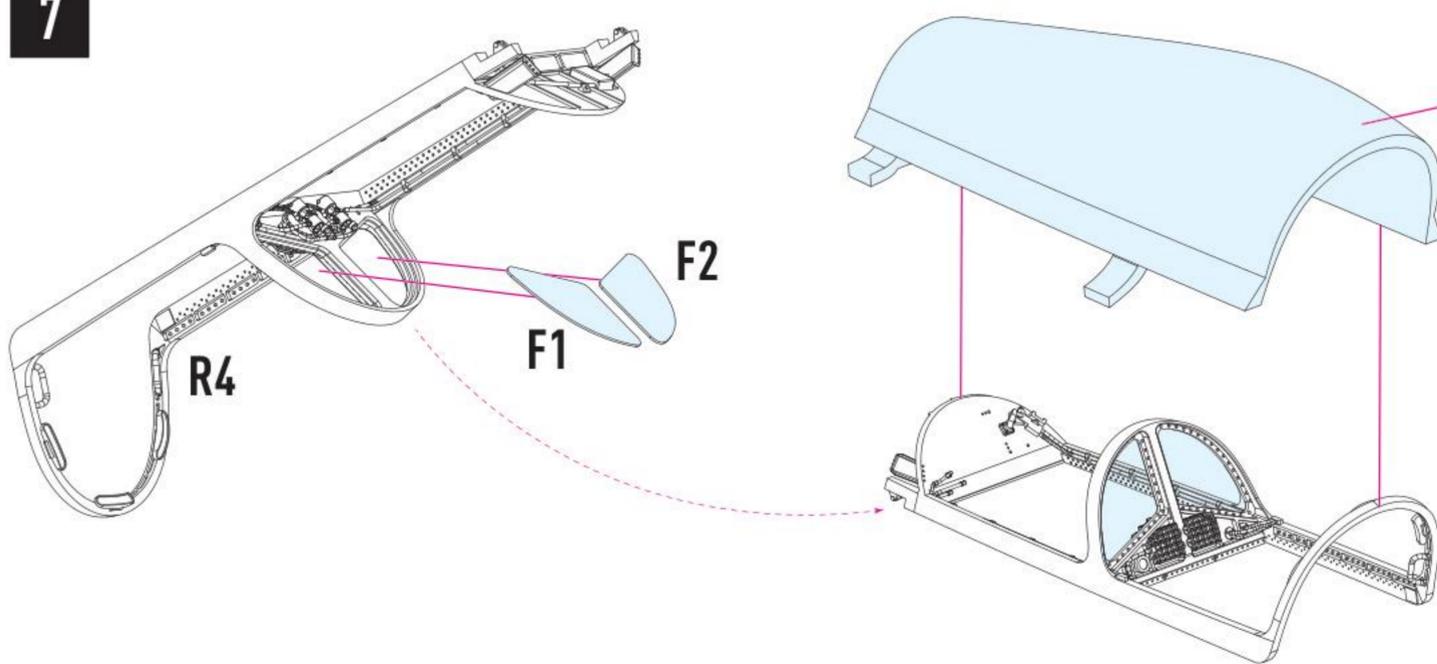


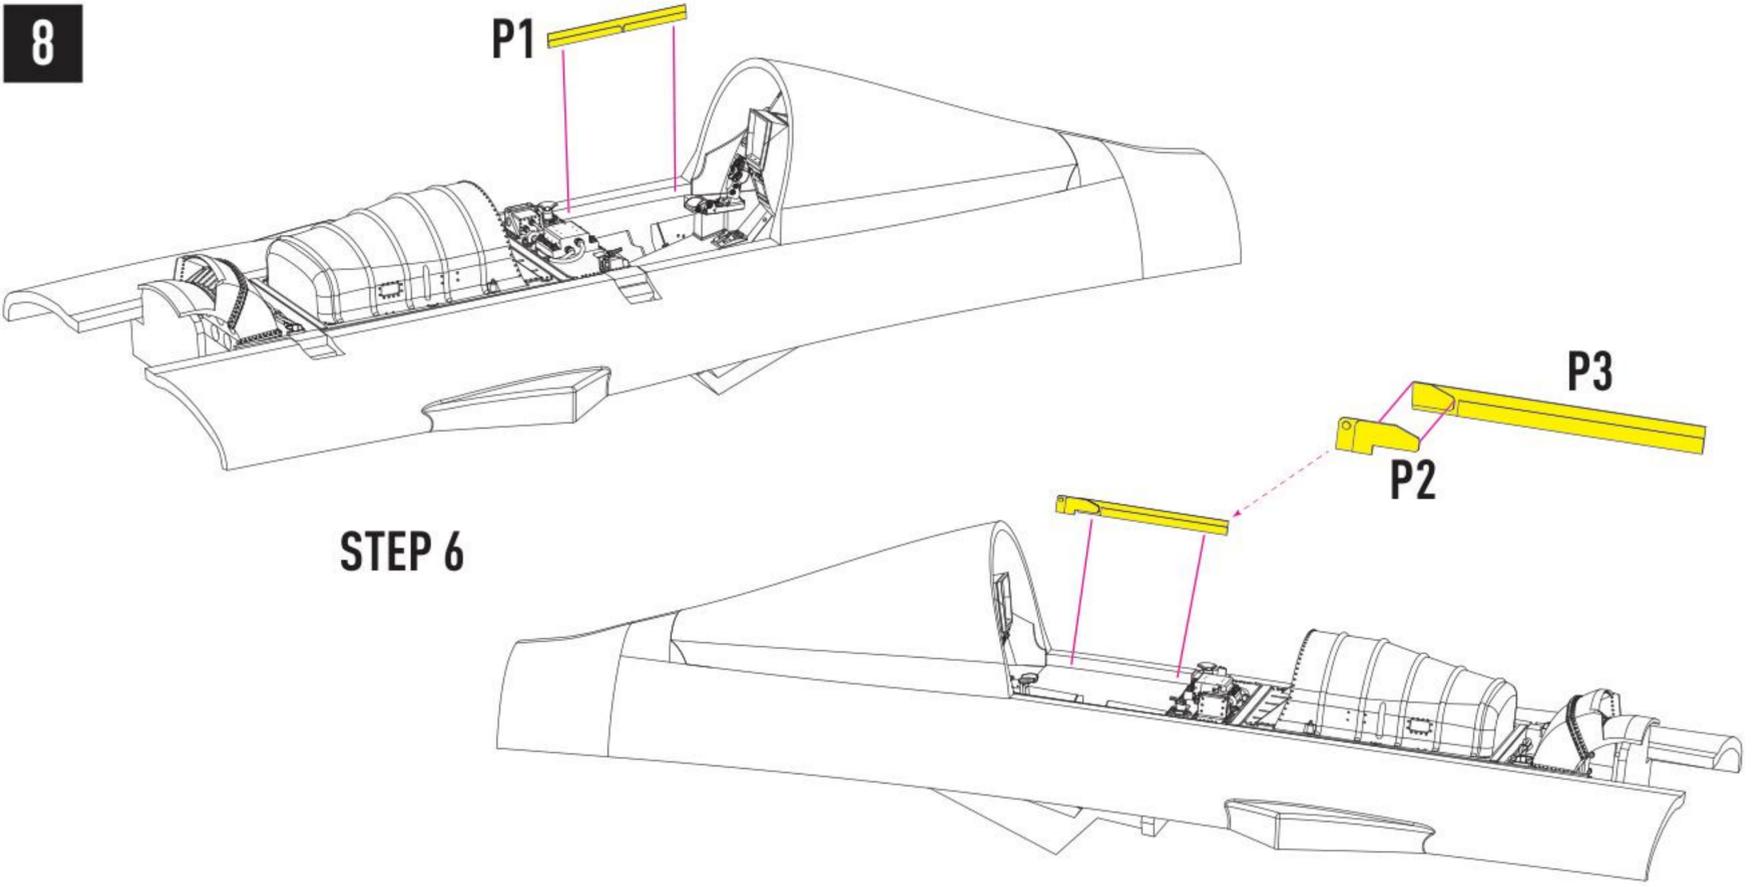


**9 FOR A CLOSED COCKPIT**

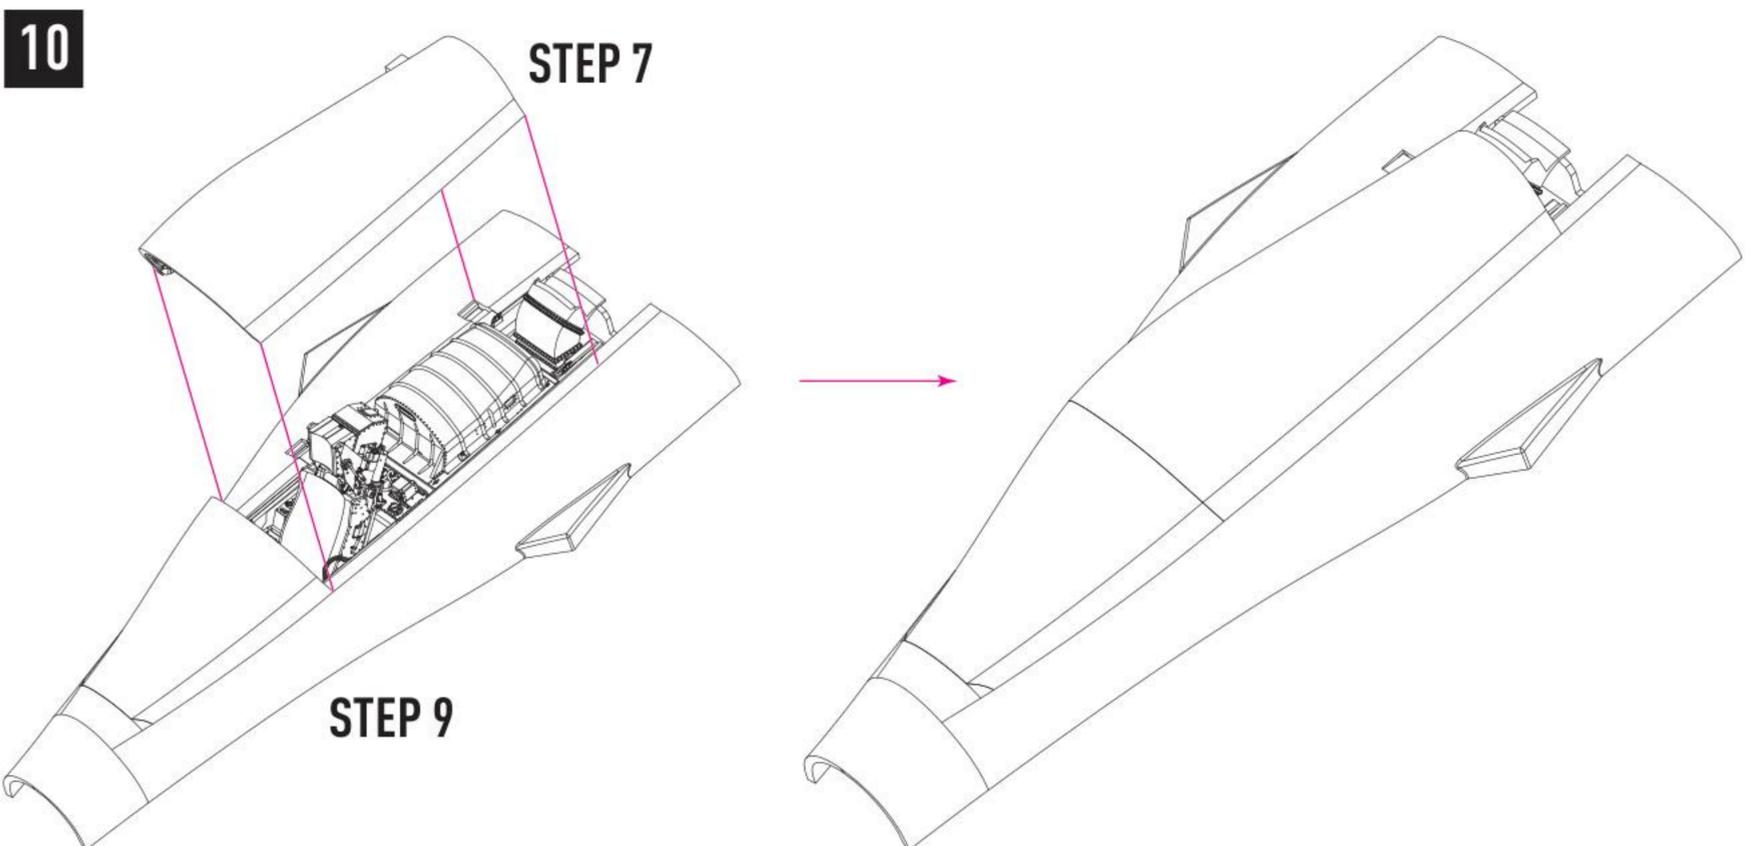
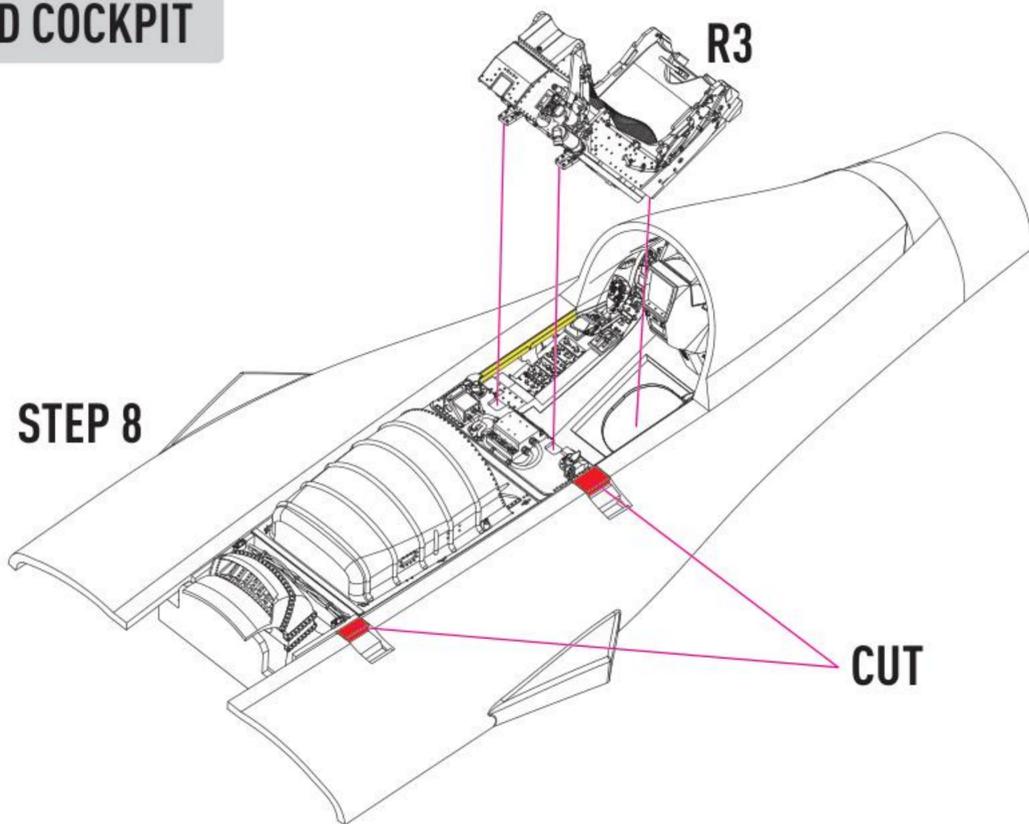


**11** FOR AN OPEN COCKPIT






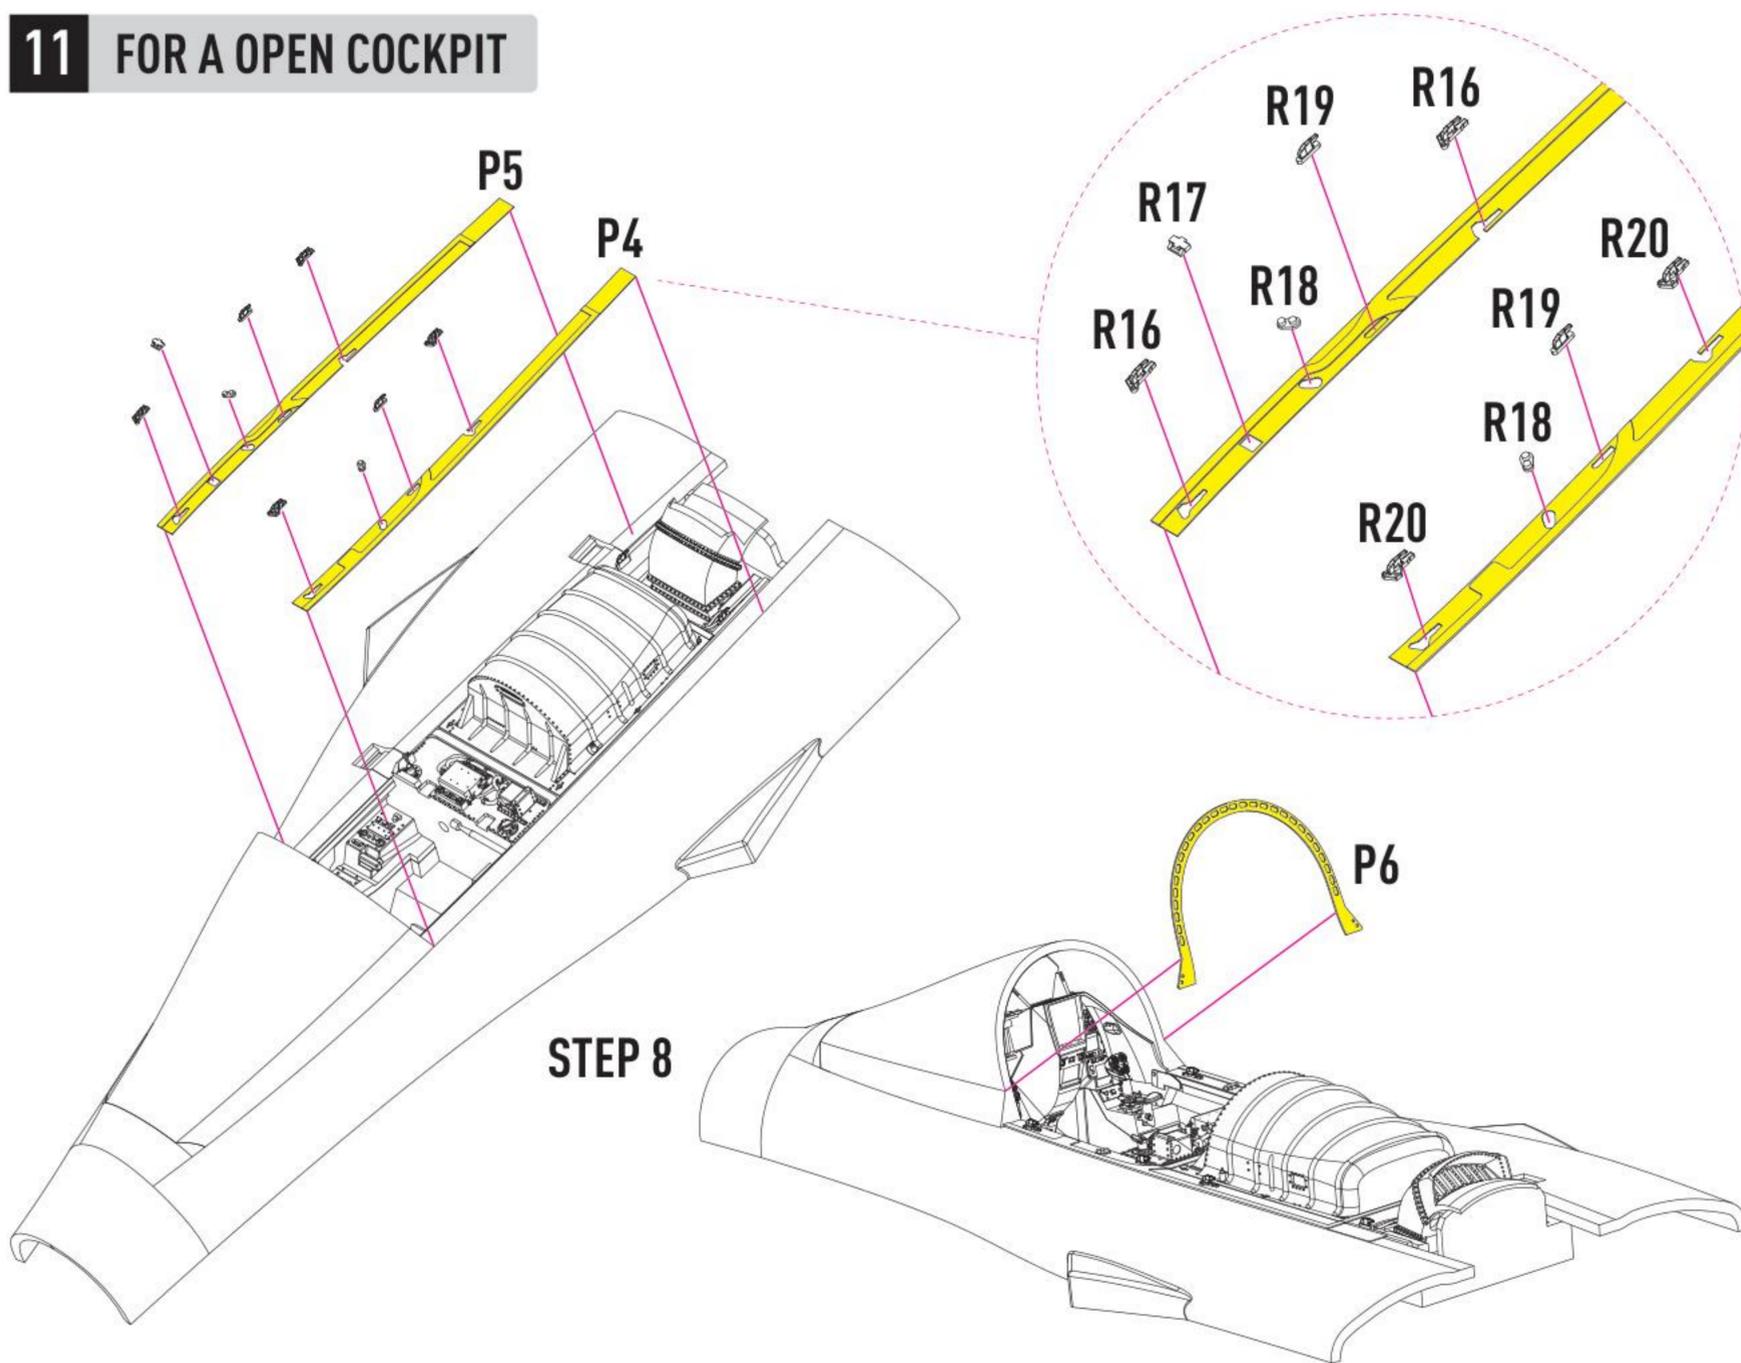


**12**

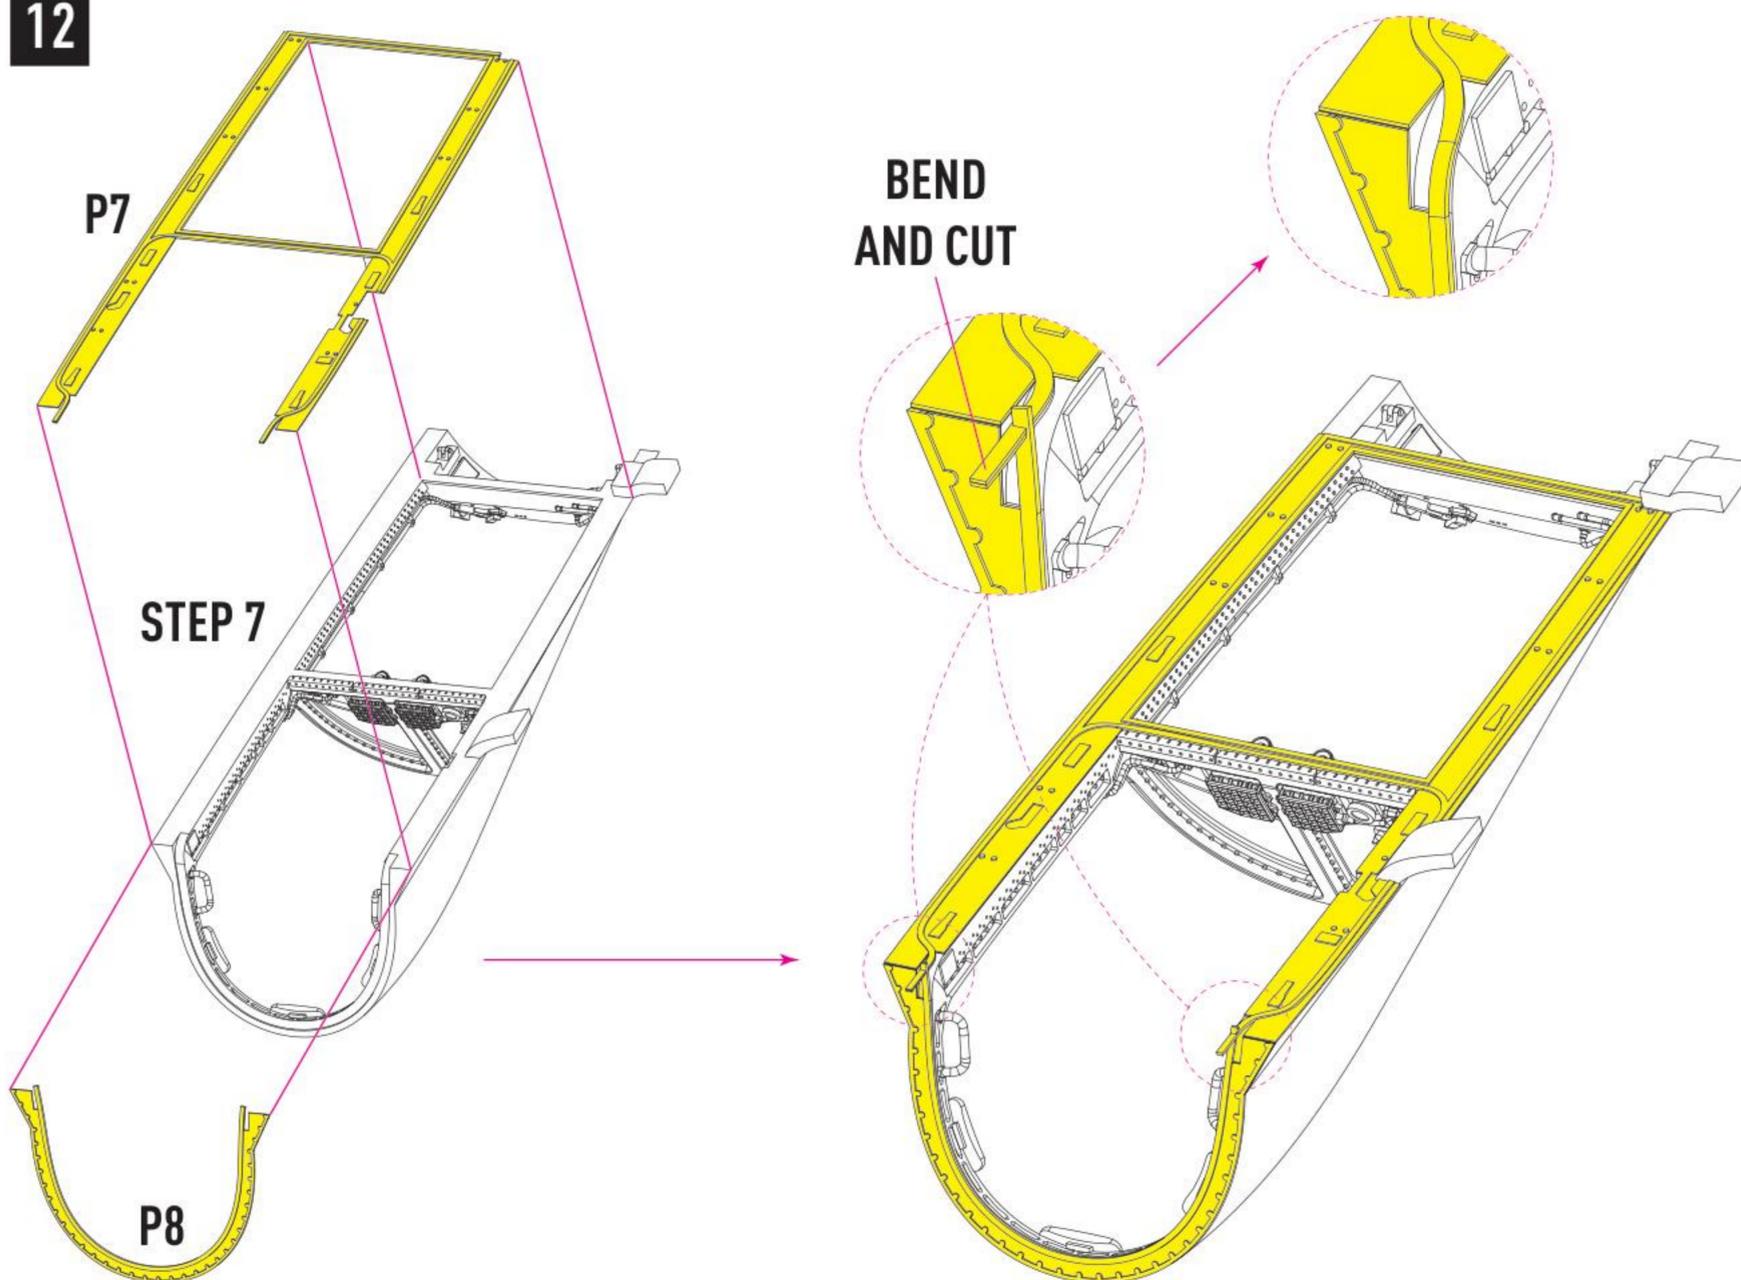

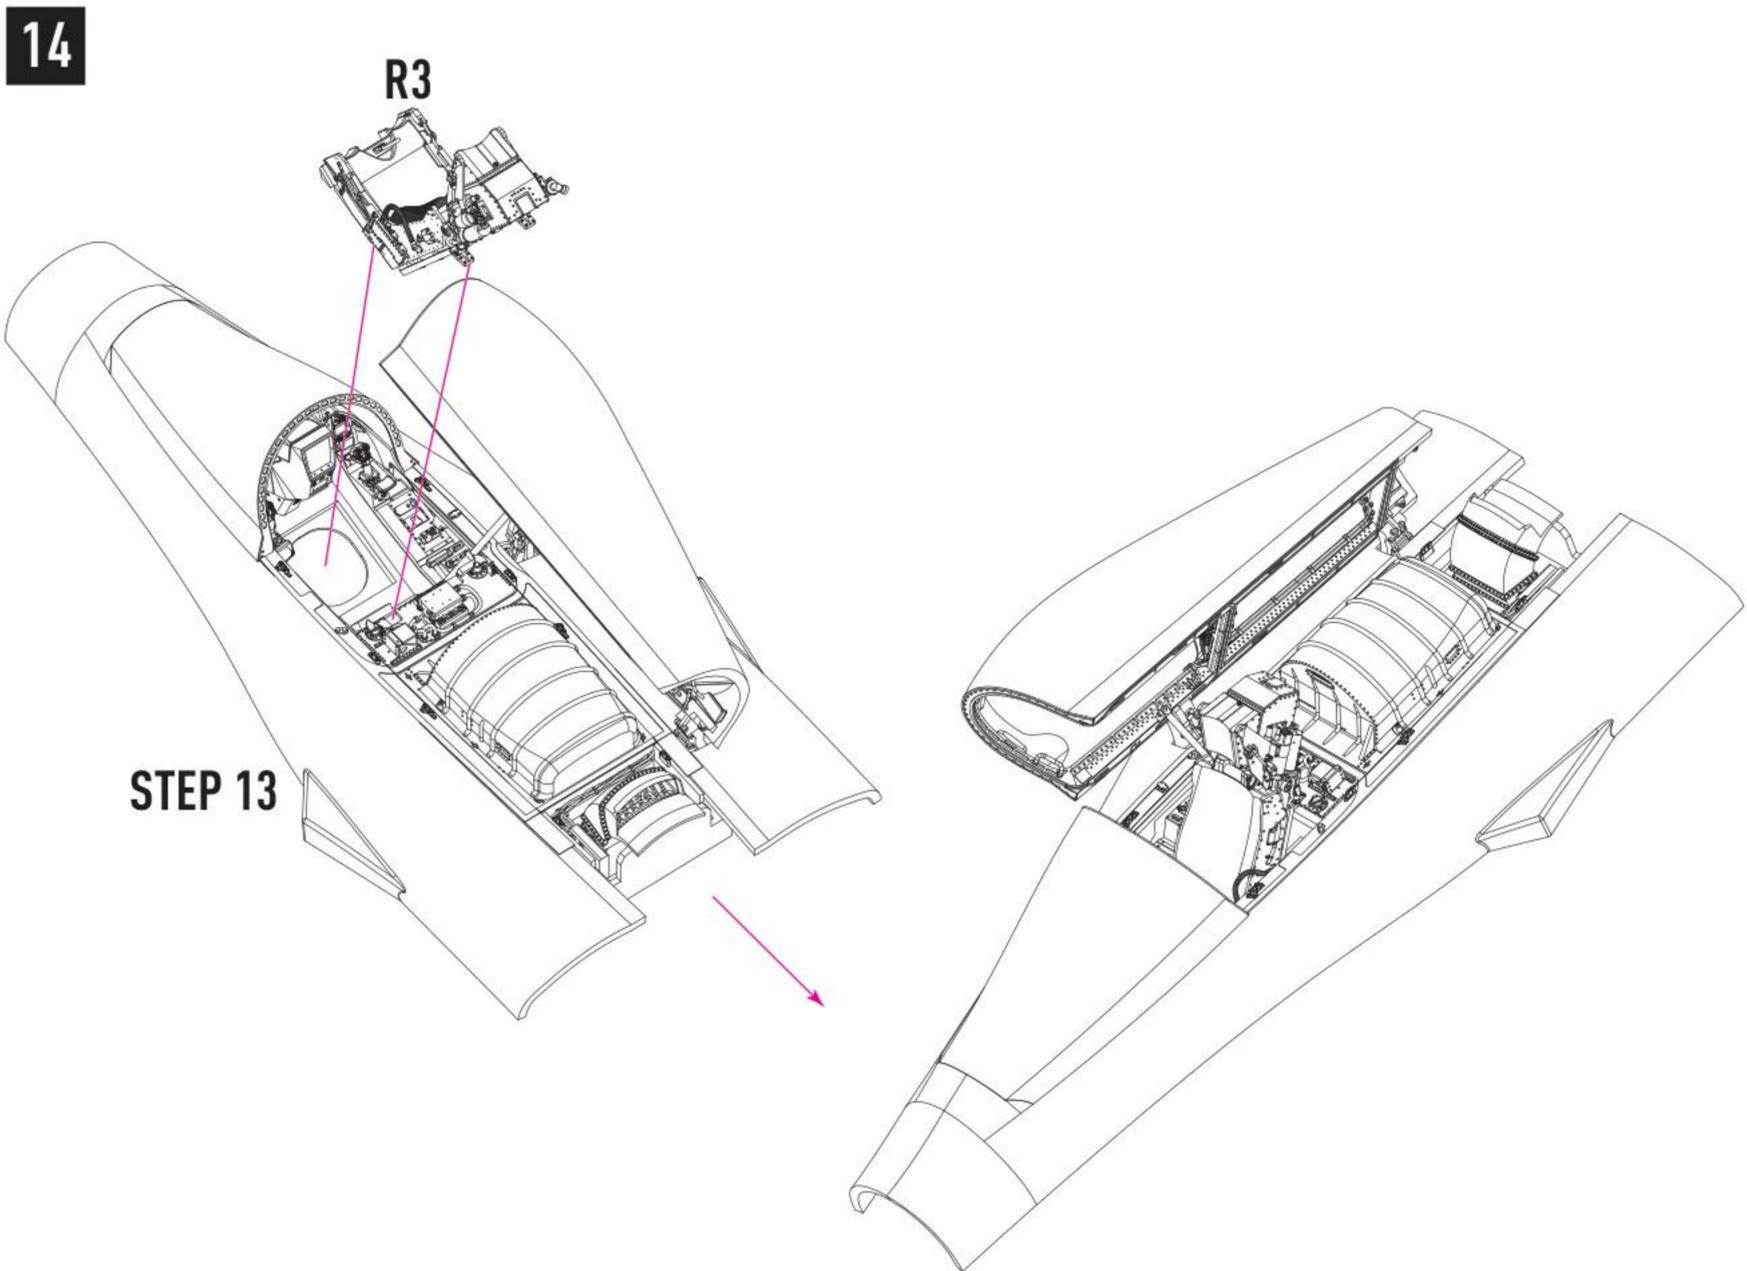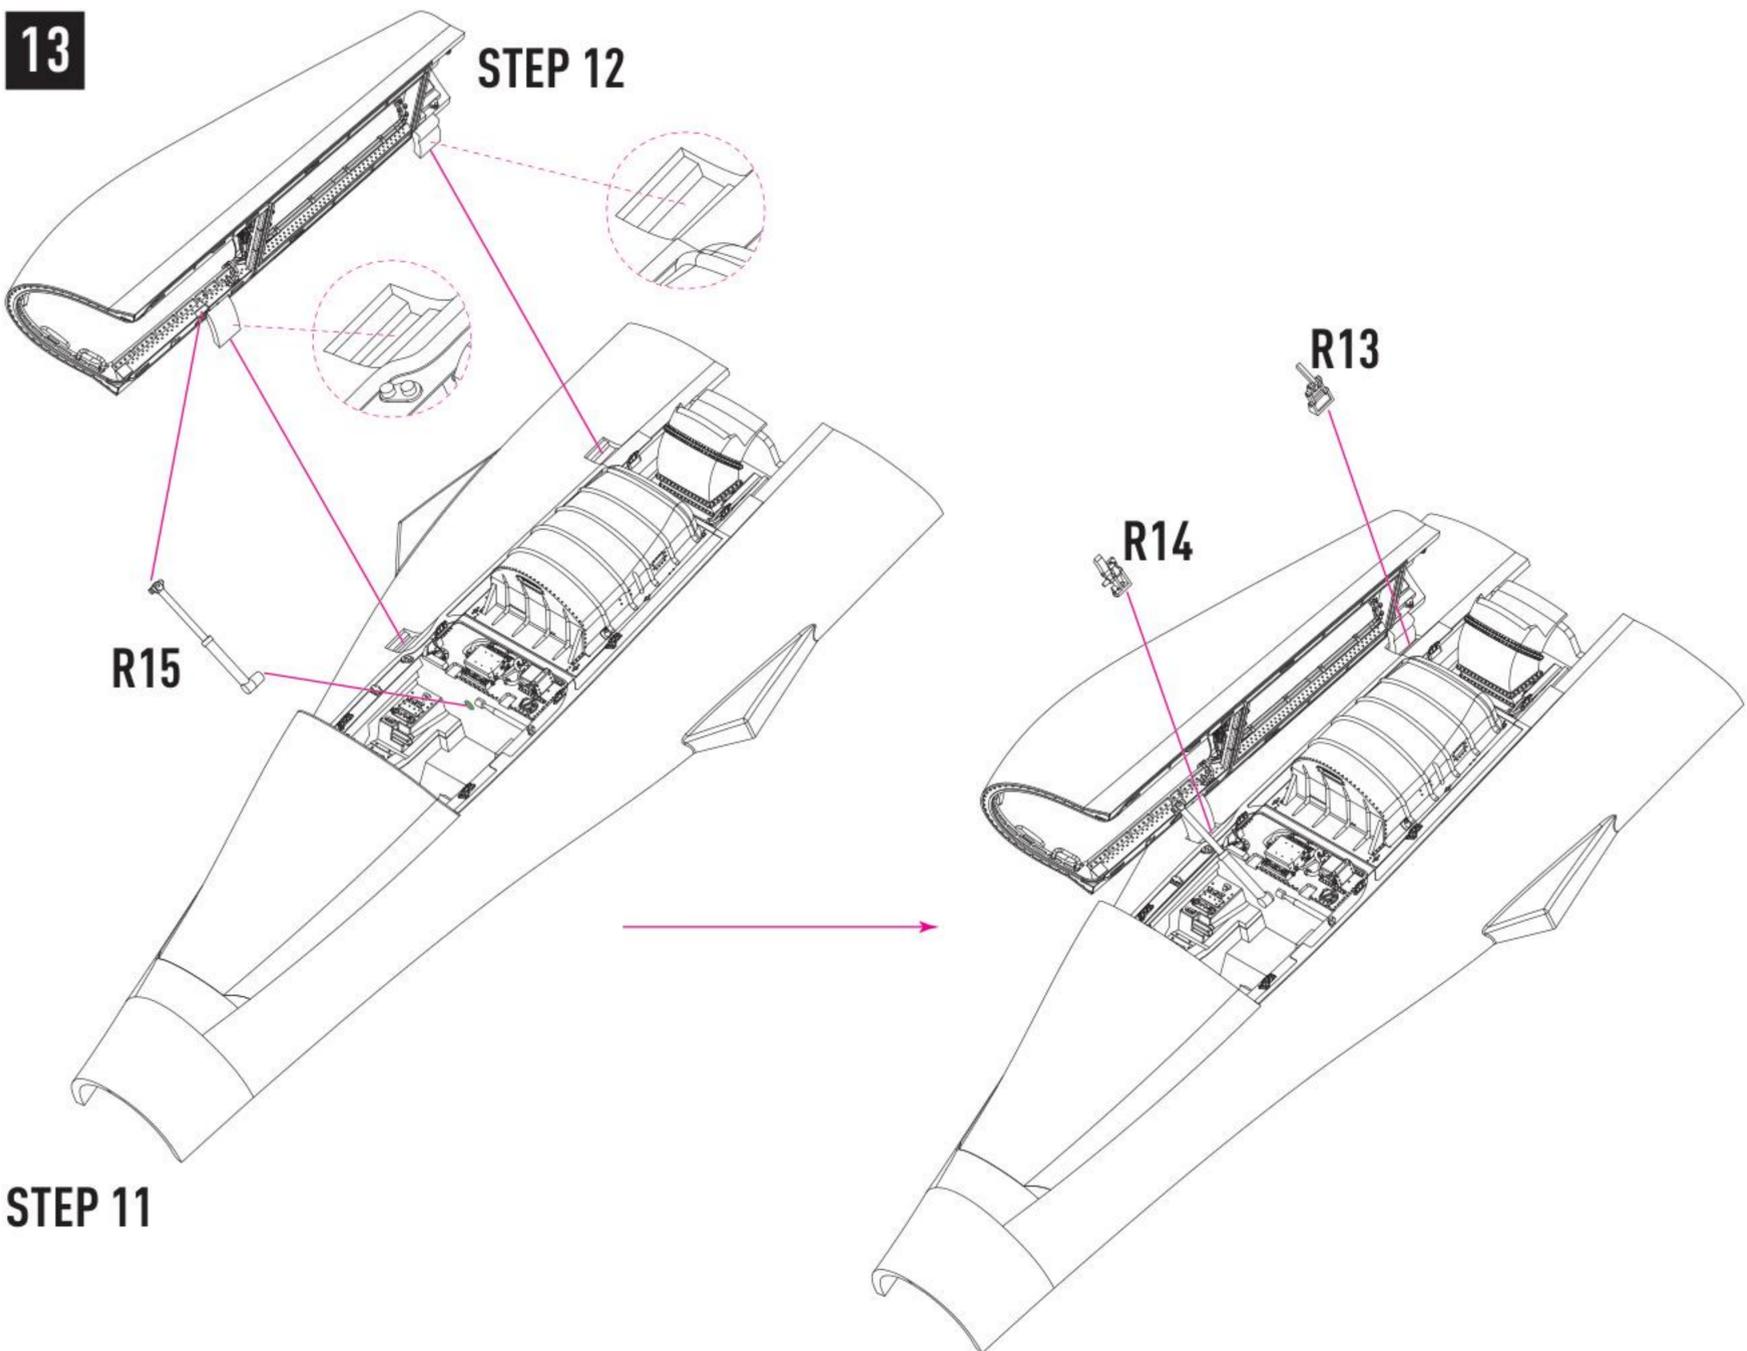

# DECAL INSTRUCTION

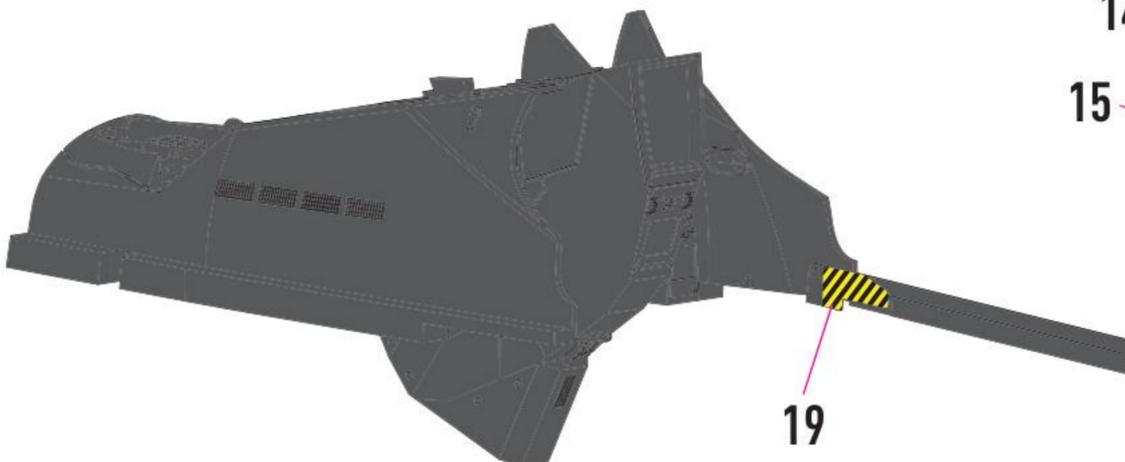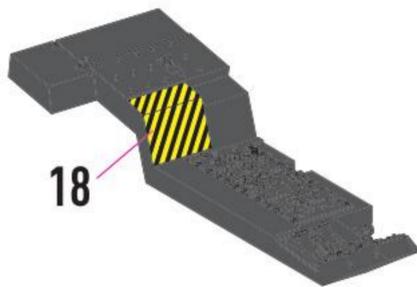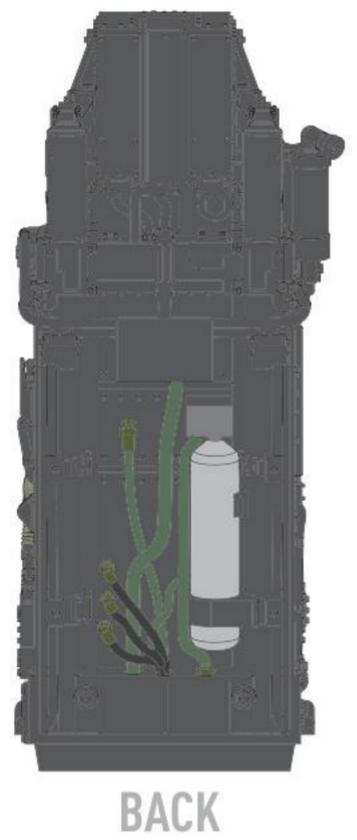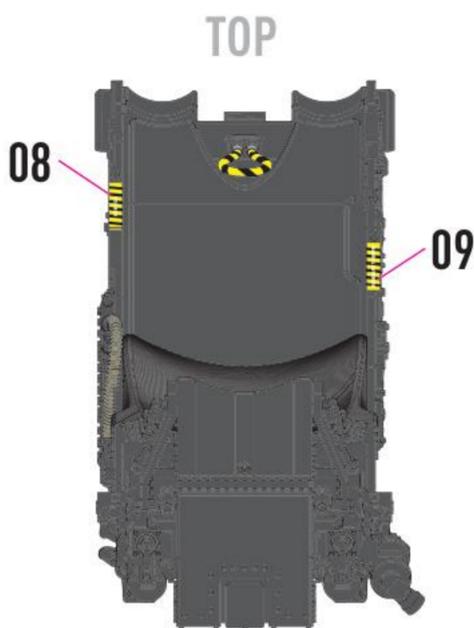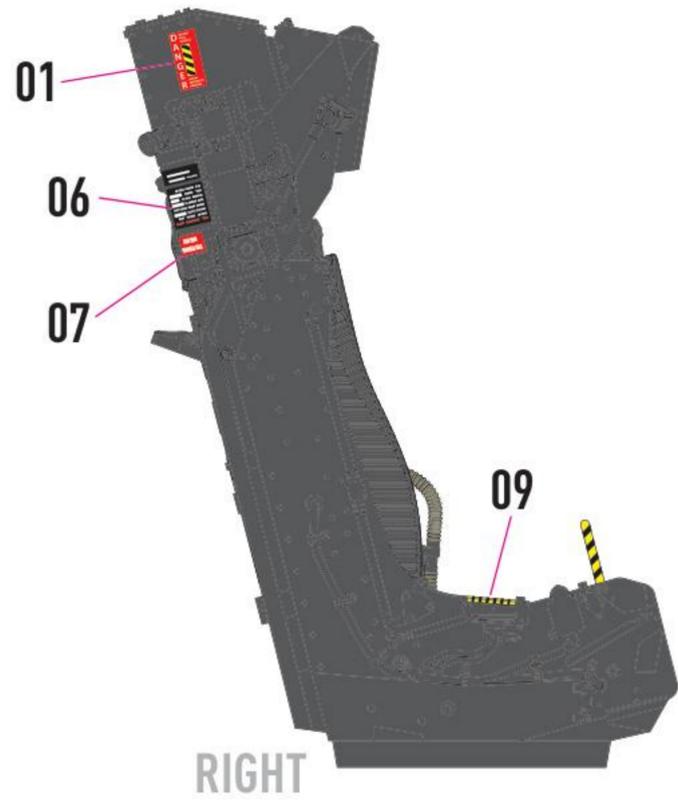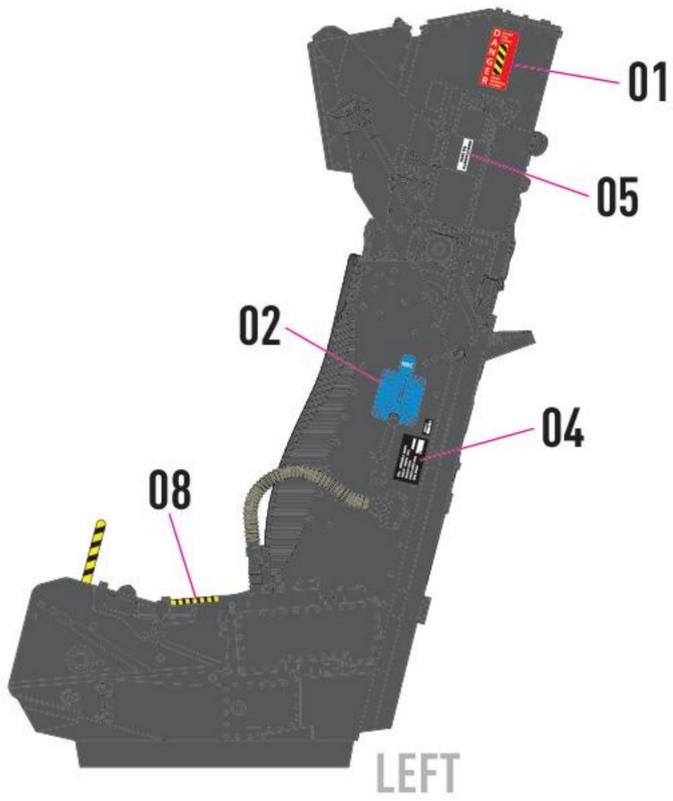

YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE

**RESKIT-MODELS.COM**

General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)

Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)

Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)