







**DETAILS AFTER REMOVAL
FROM SUPPORTS**

 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

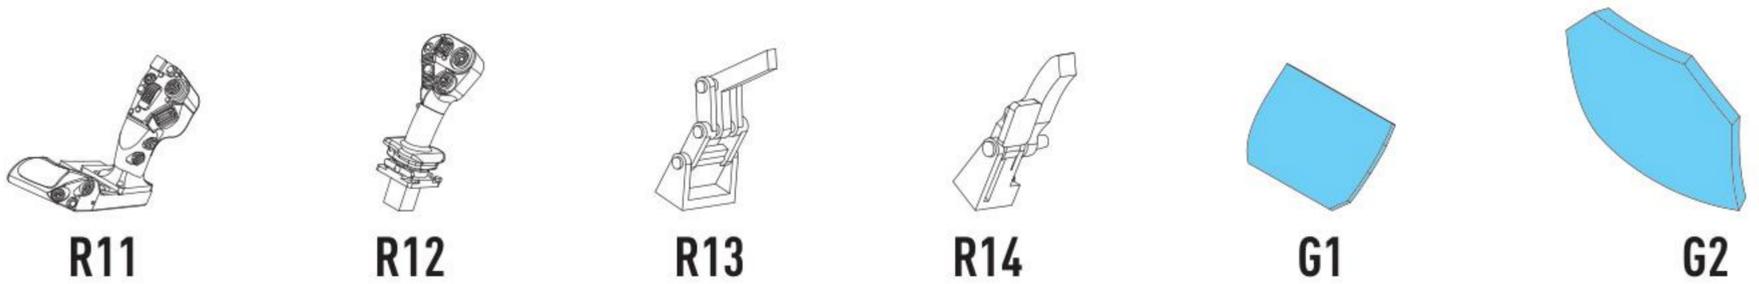


PARTS G1 AND G2 SHOULD BE COATED WITH GLOSSY VARNISH BEFORE USE

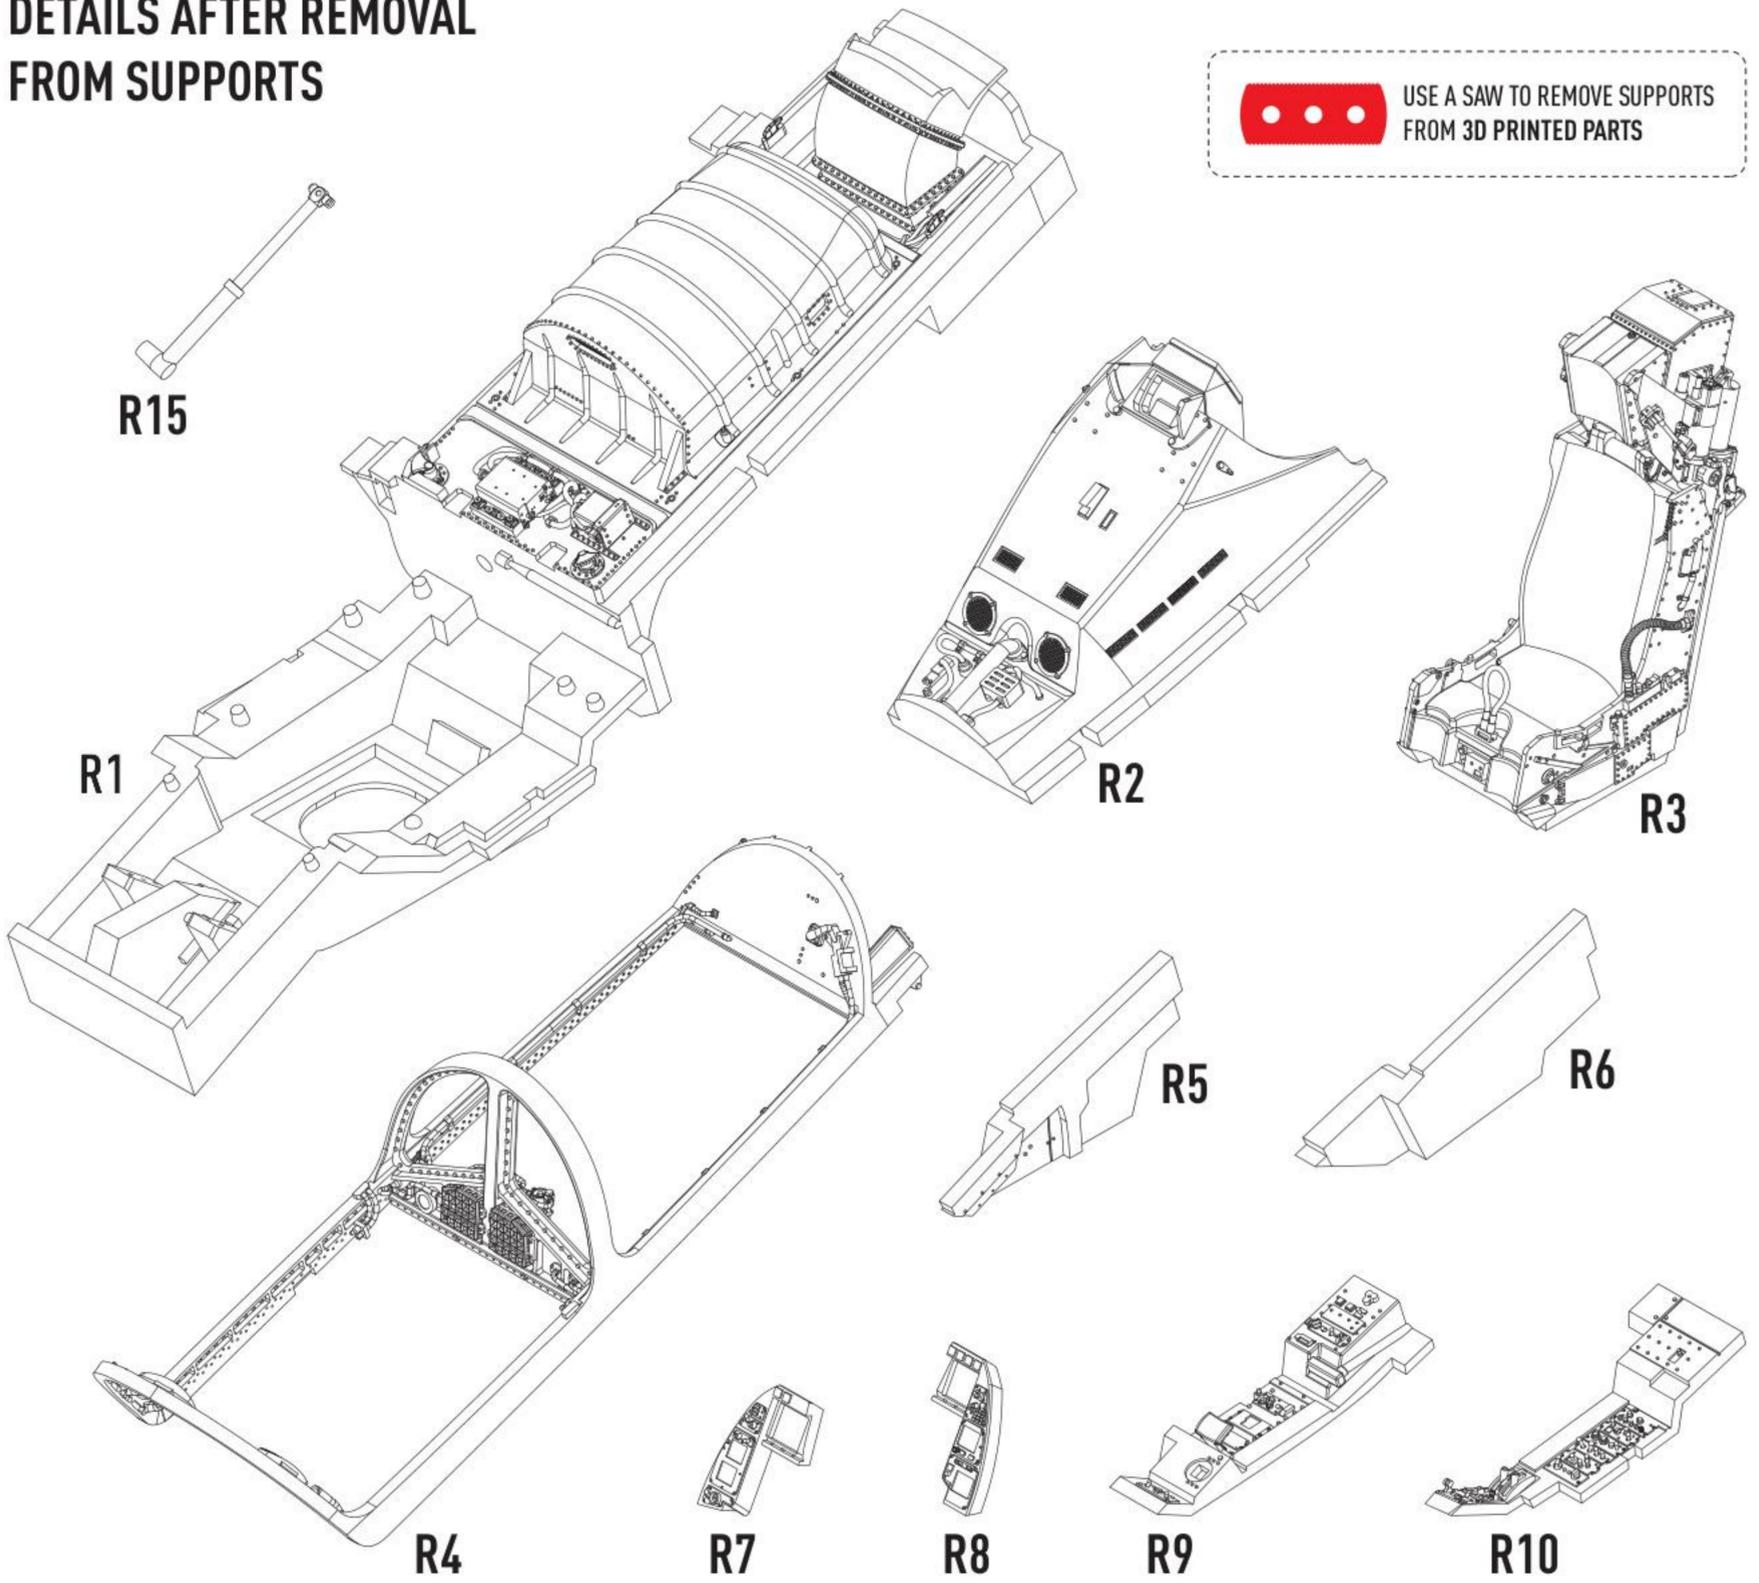

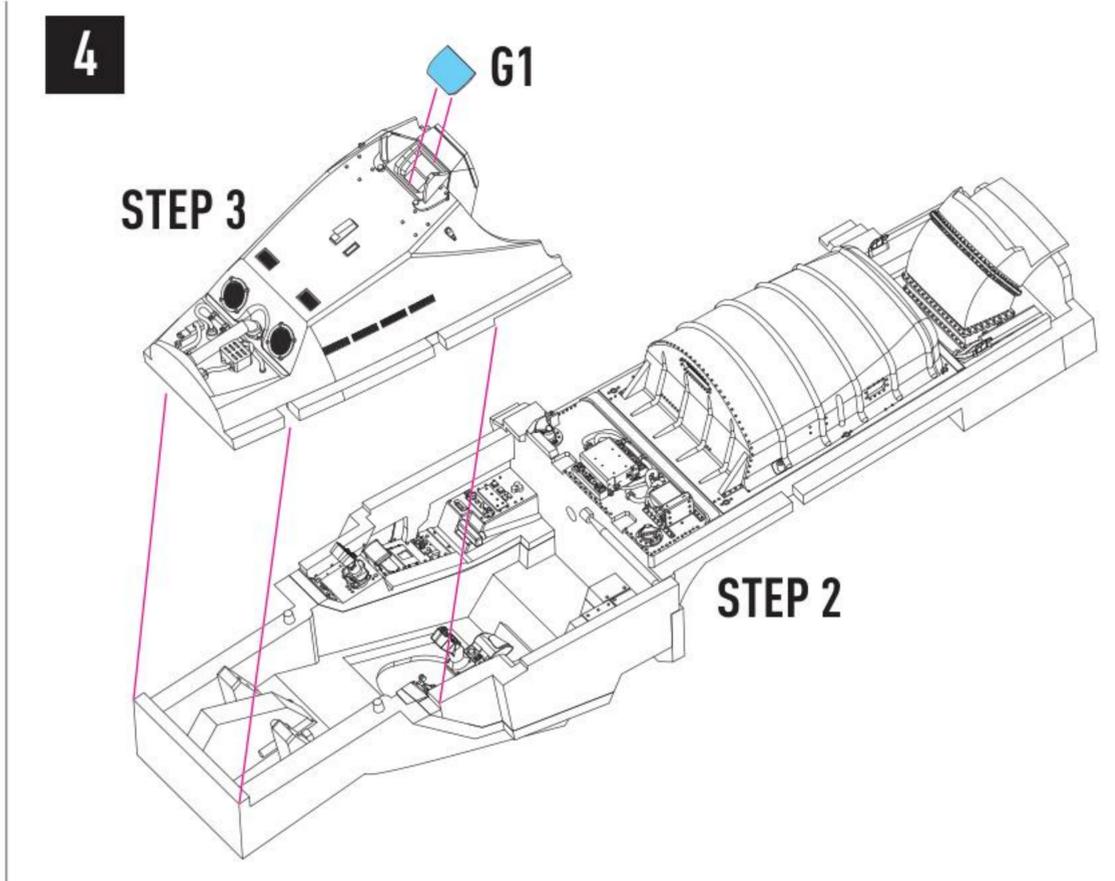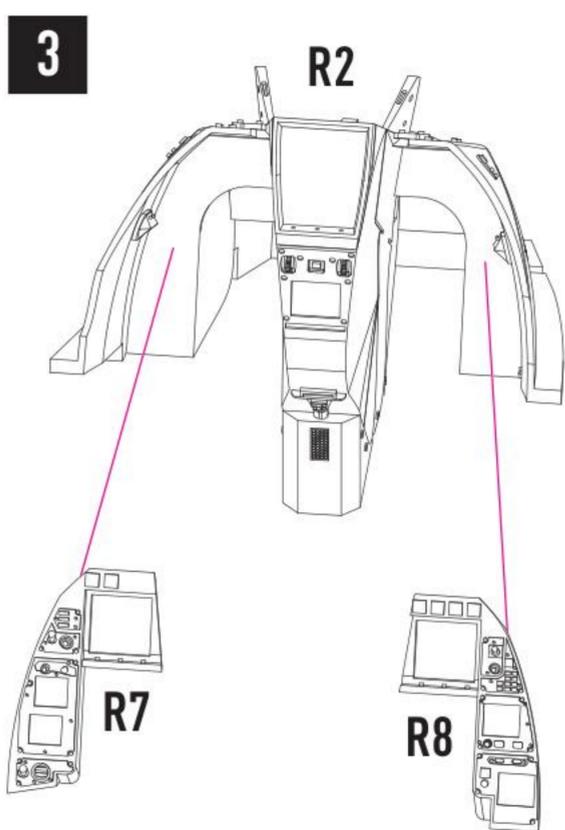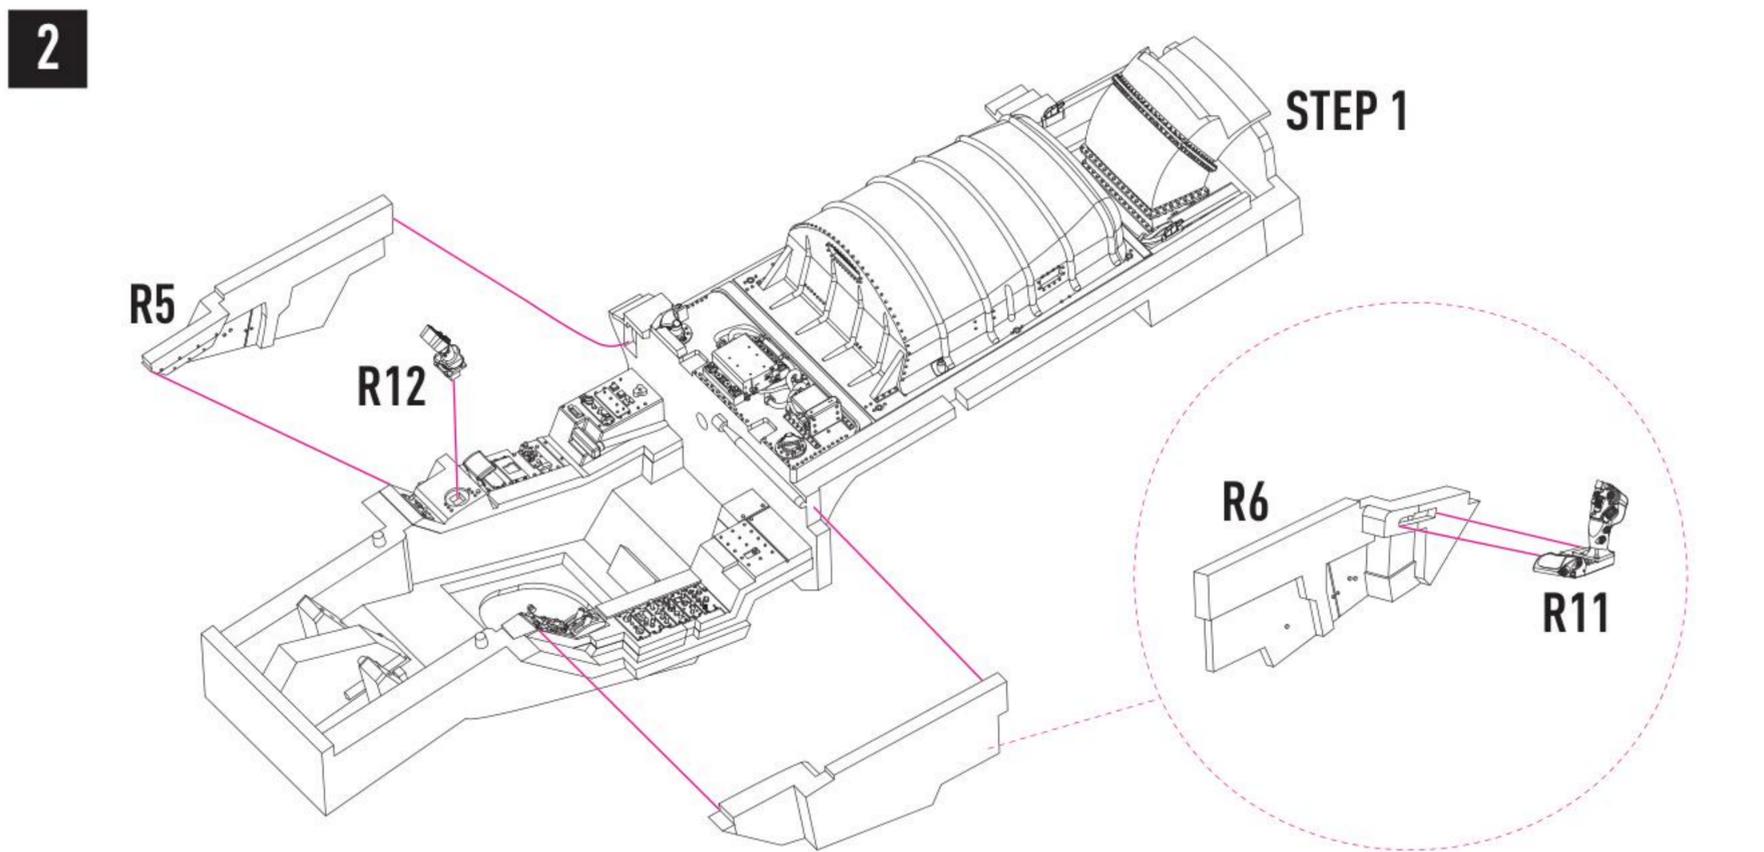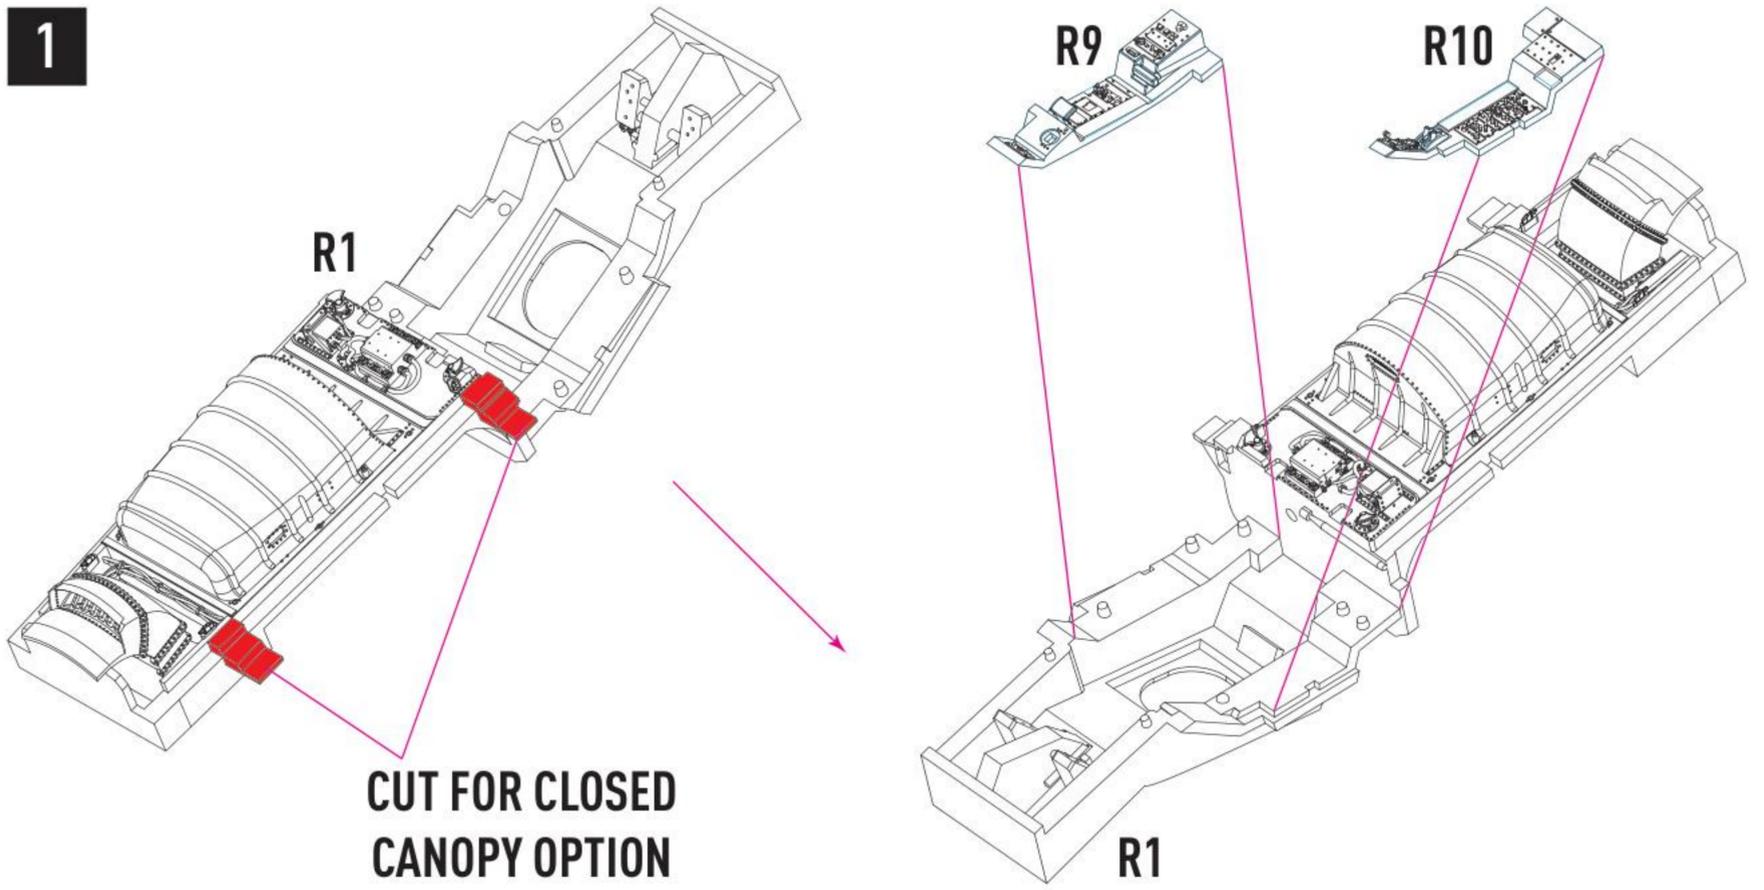

5


PART A1
FROM THE KIT

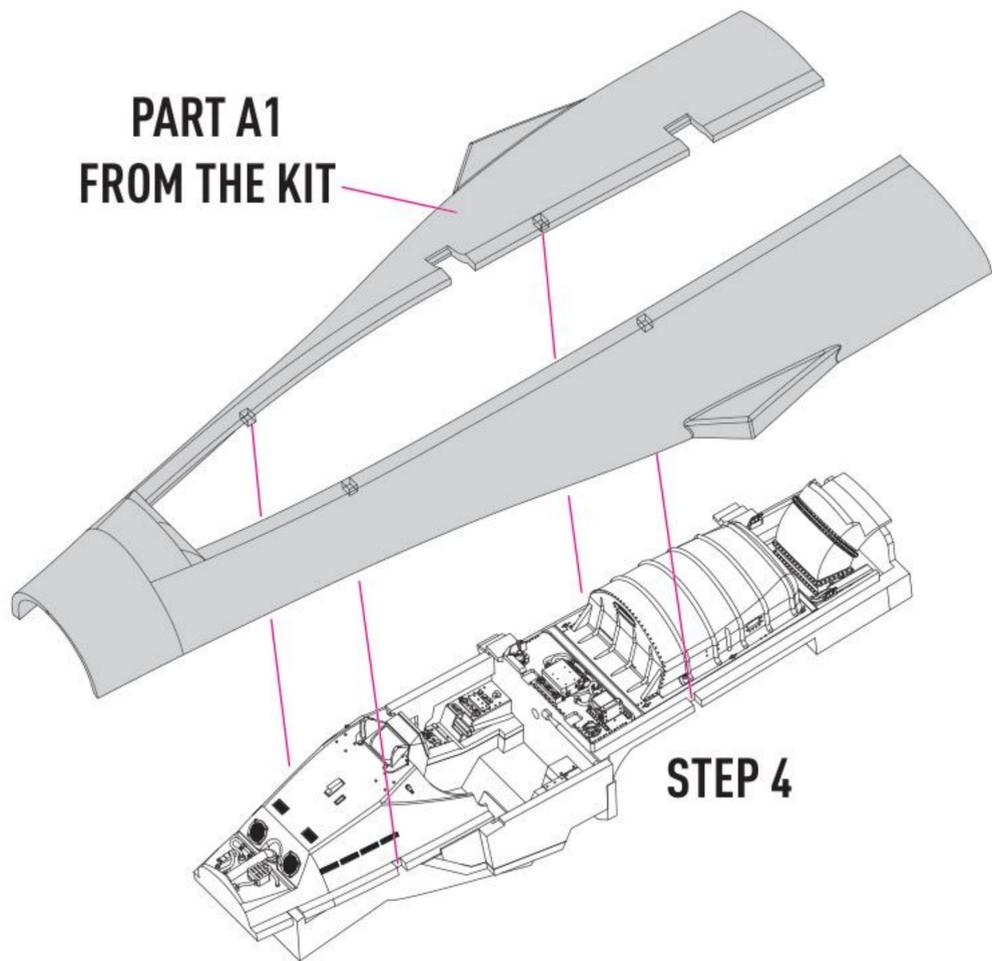

STEP 4

6


PART K2
FROM THE KIT

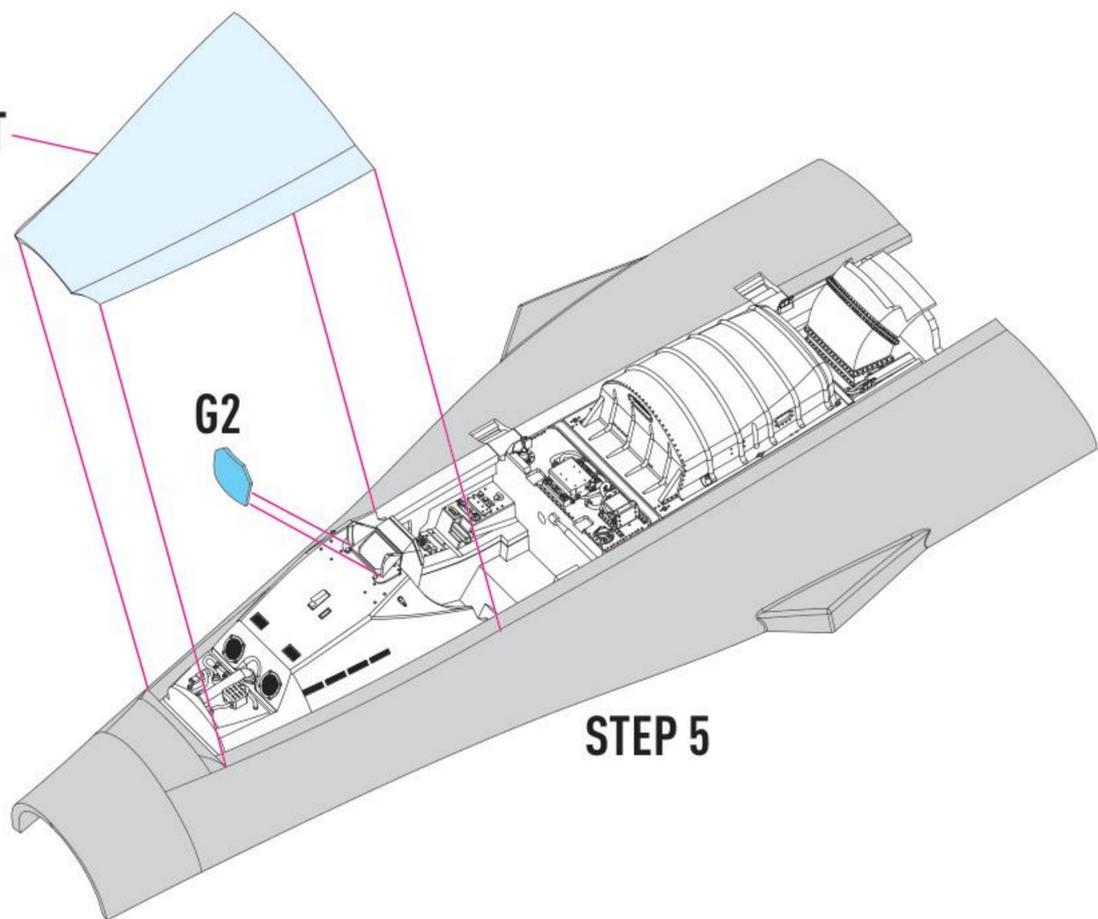


STEP 5



7

PART K3
FROM THE KIT

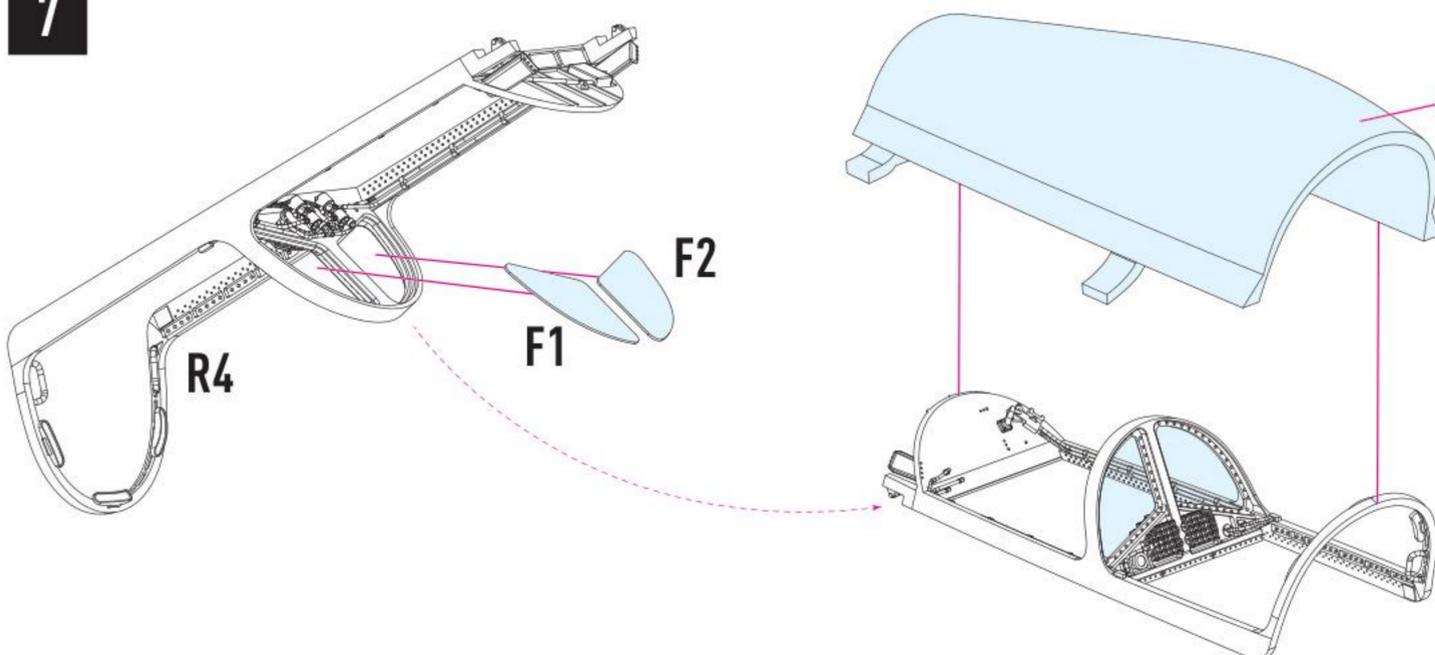


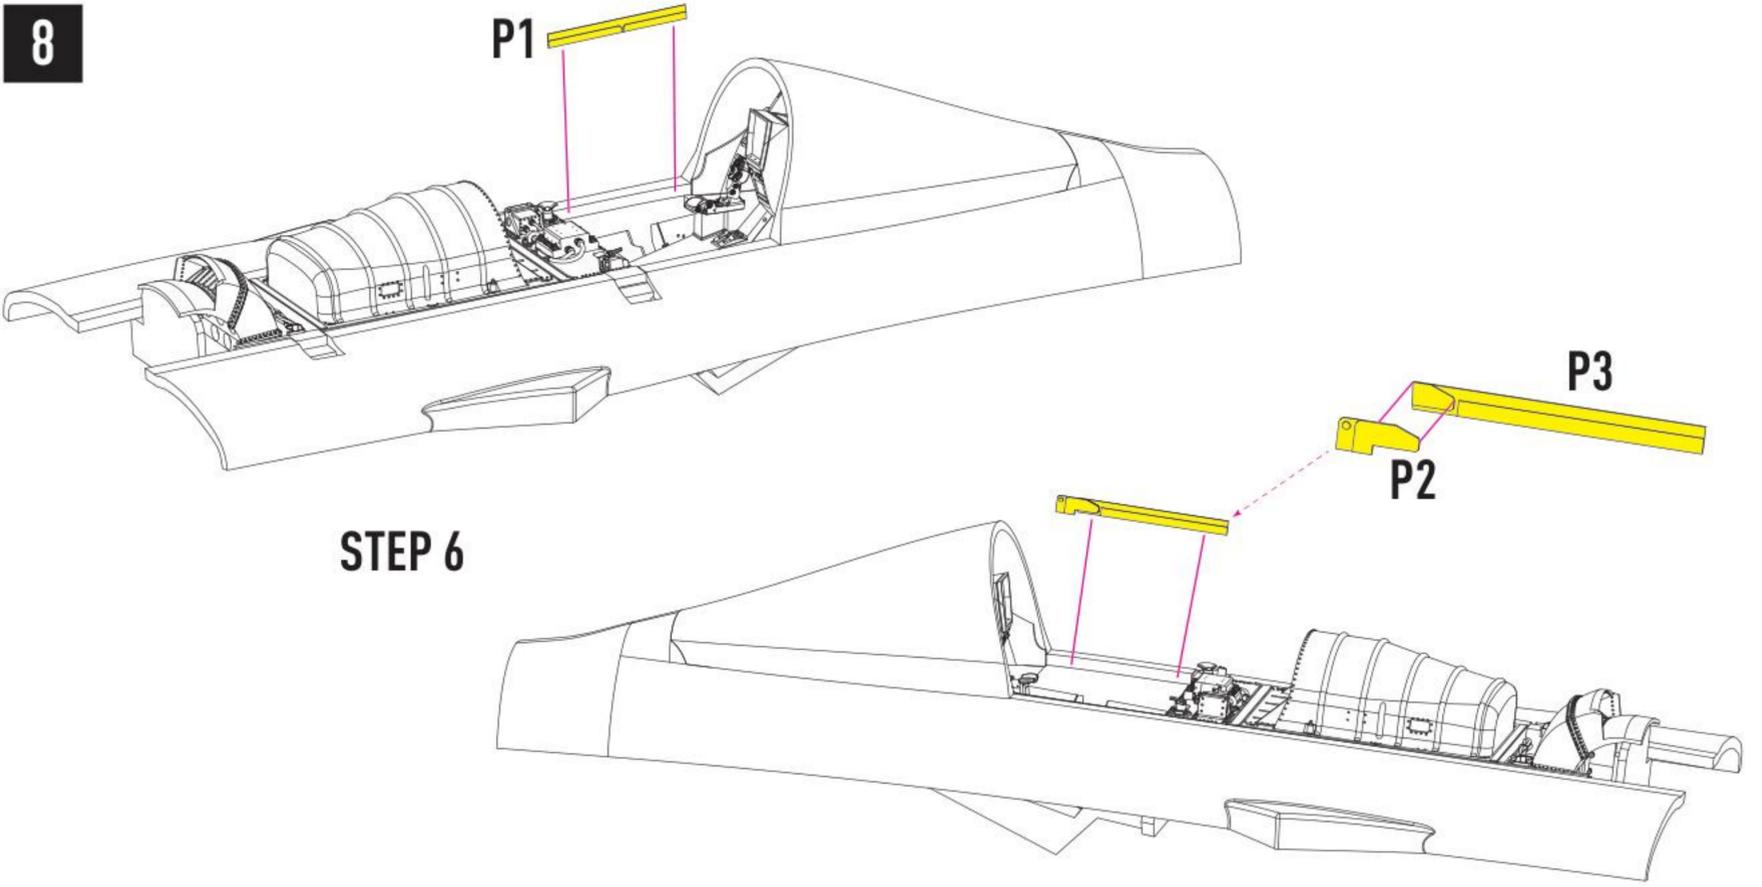


9 FOR A CLOSED CANOPY

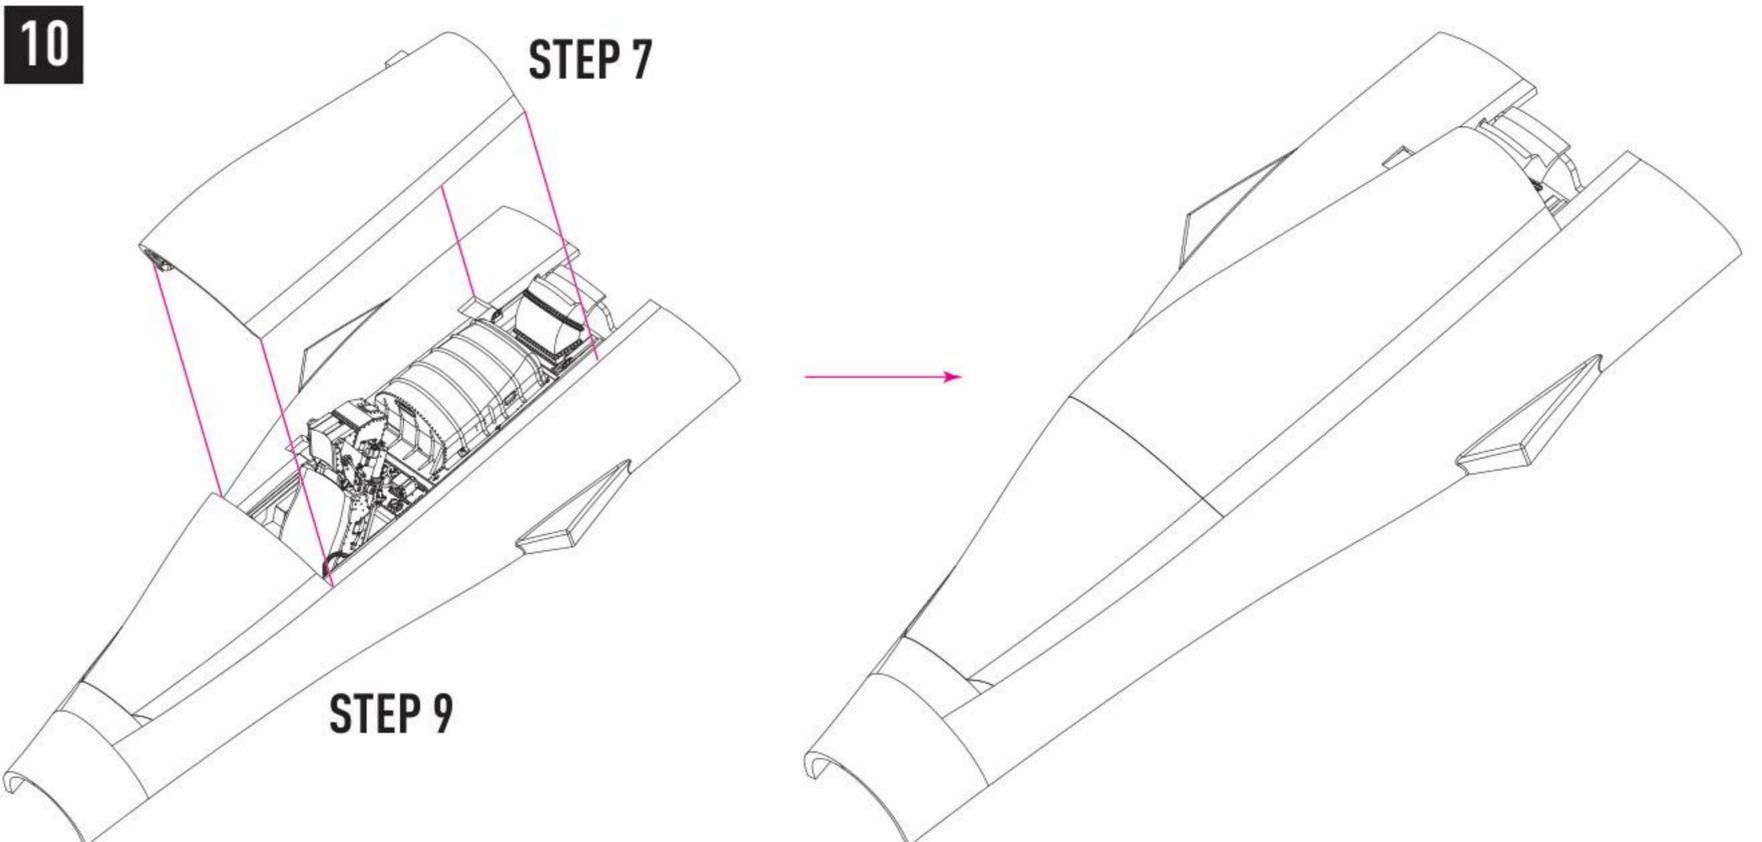
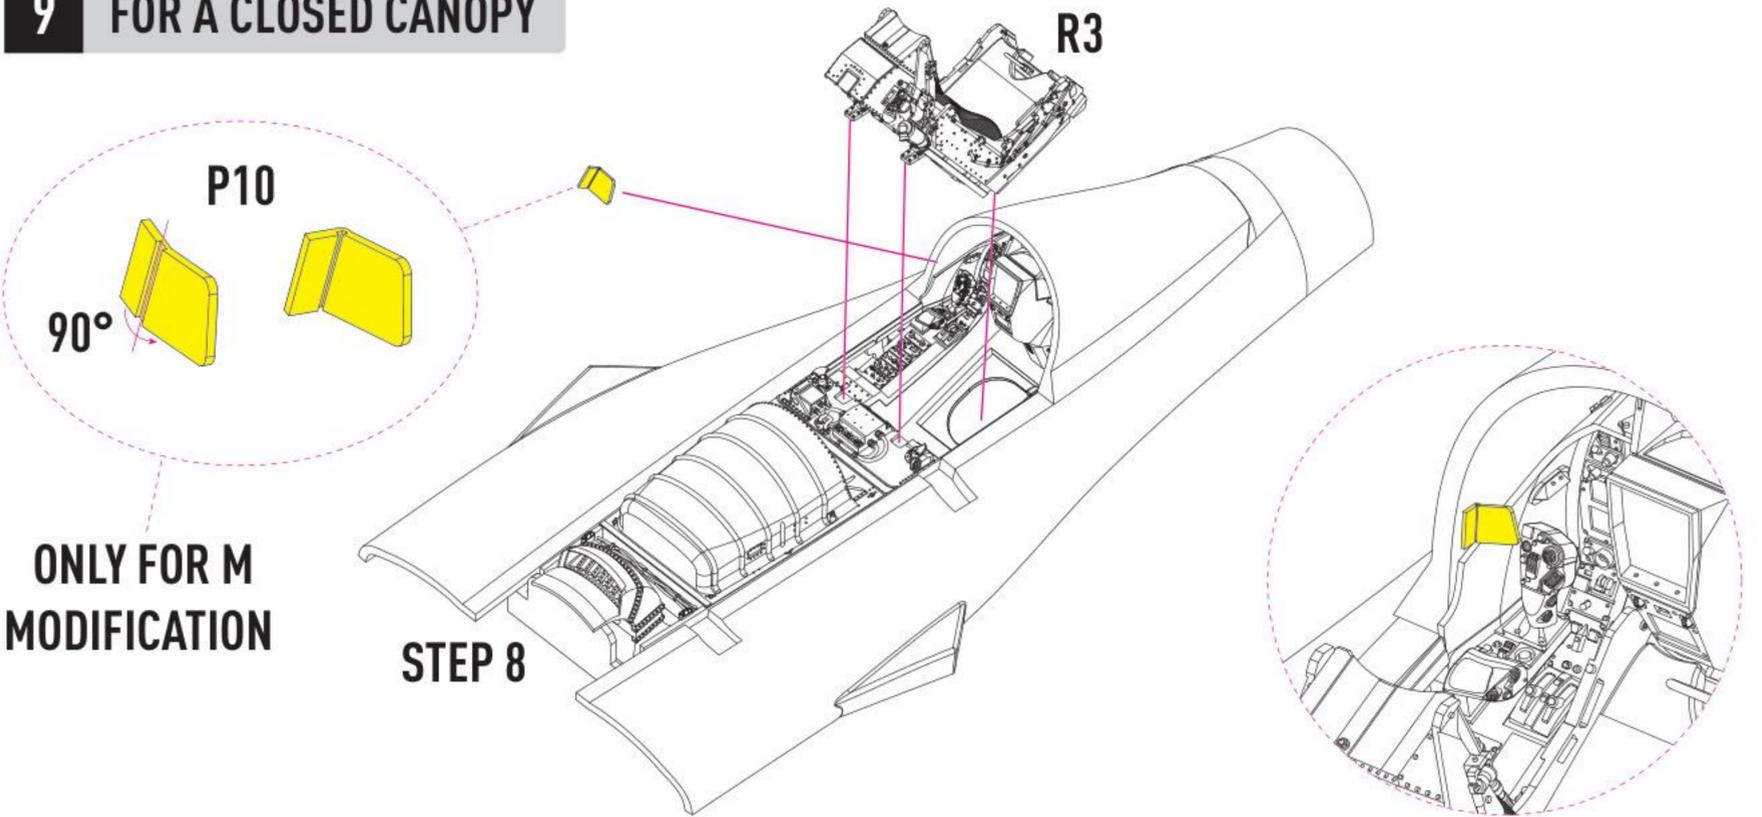


11 FOR A OPEN CANOPY








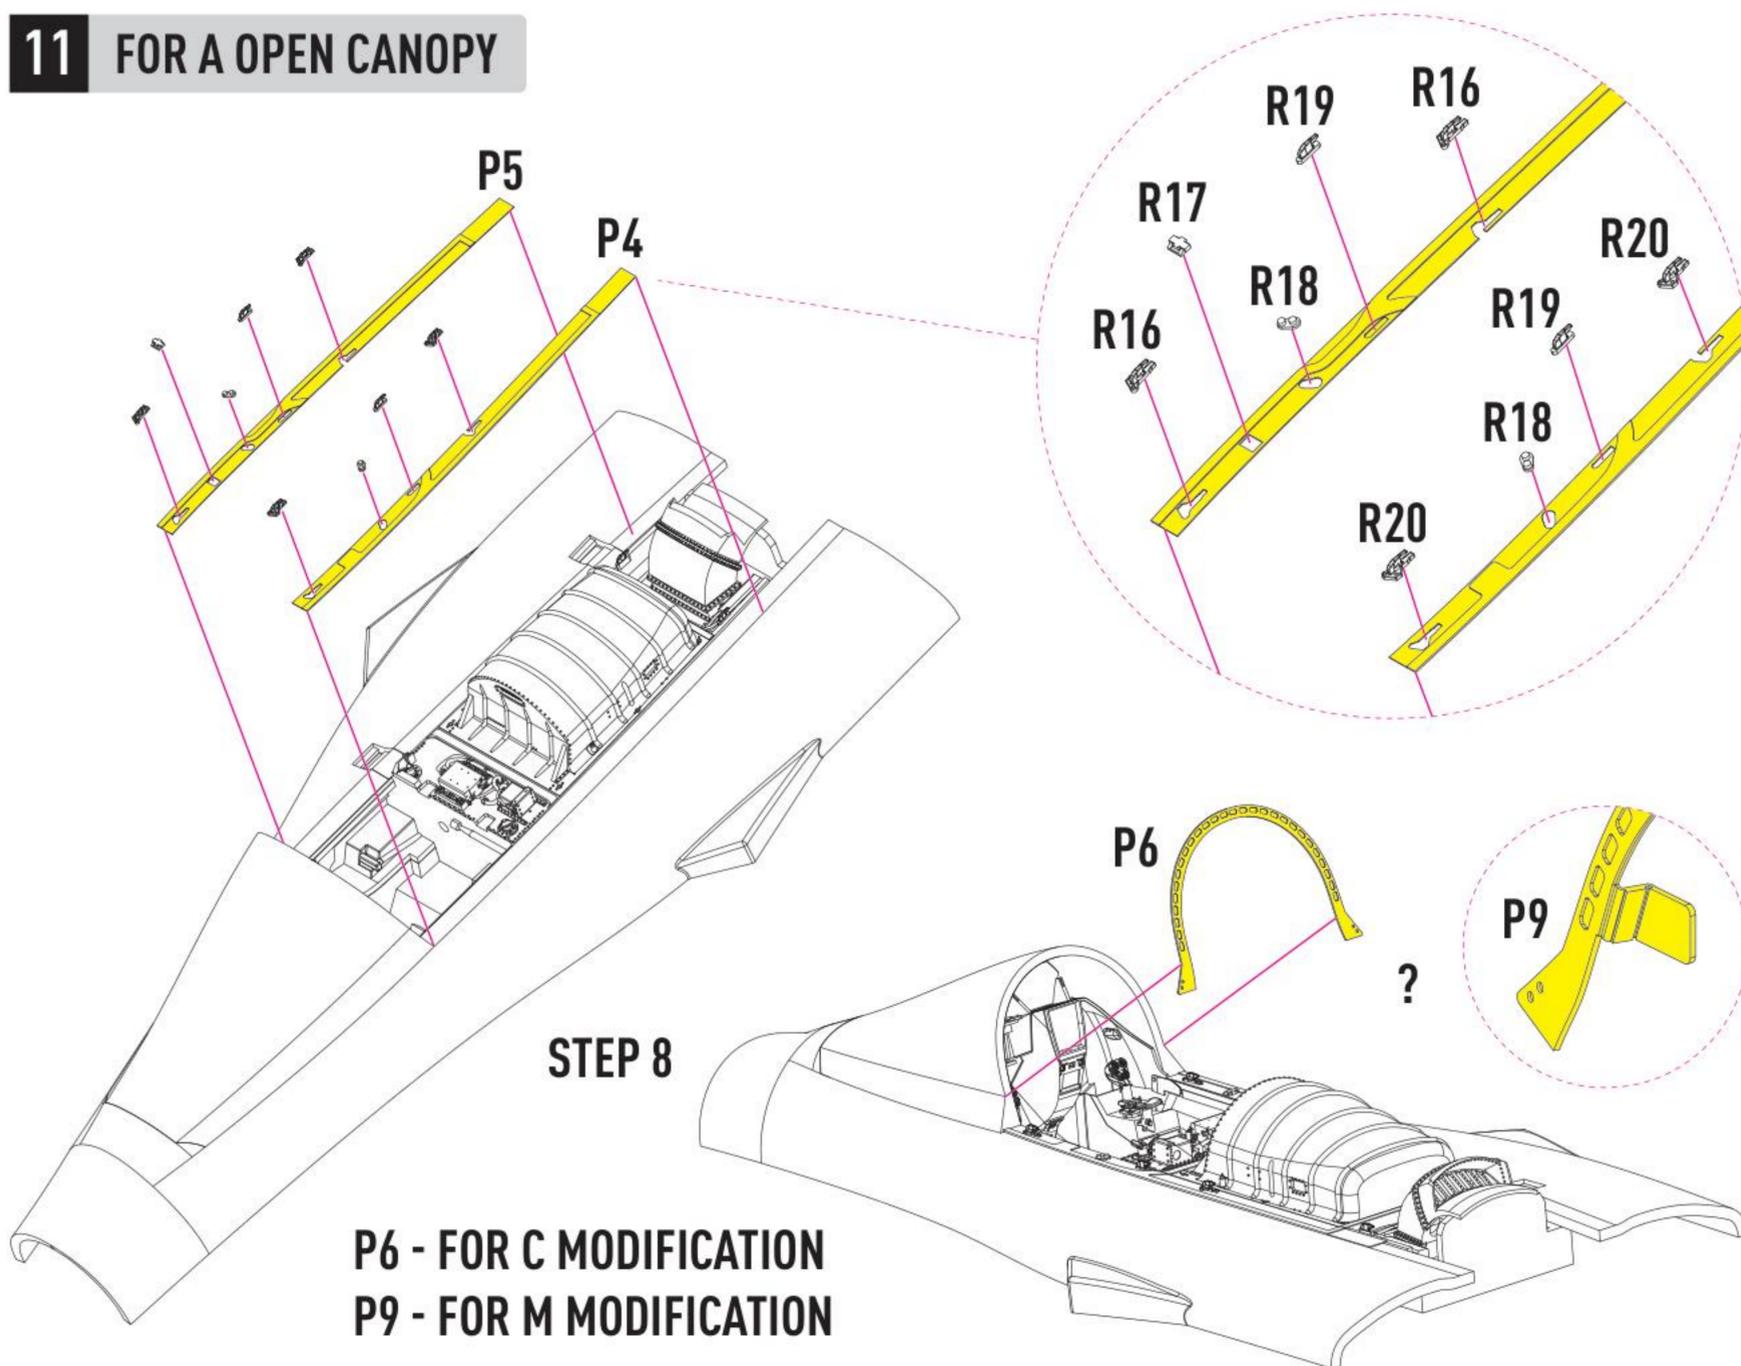


12

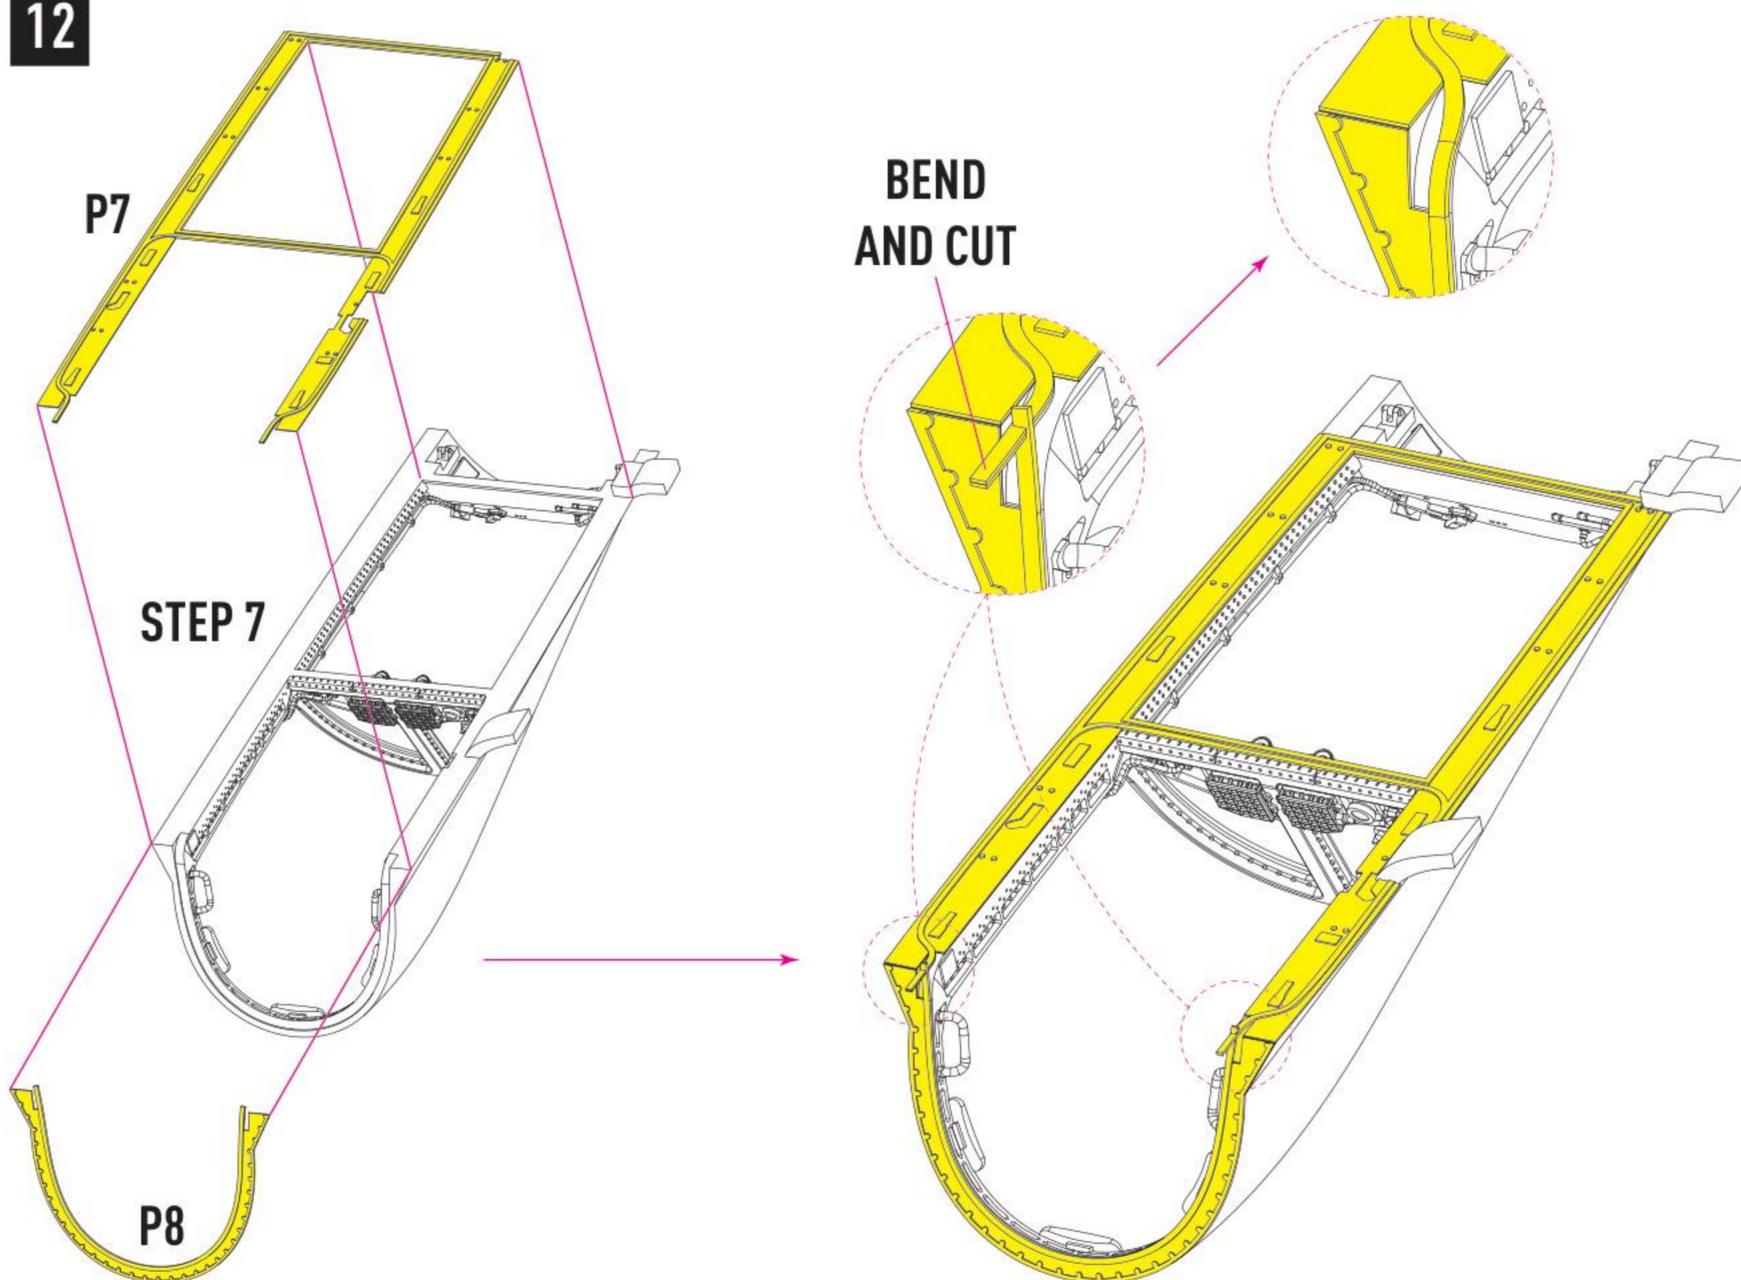

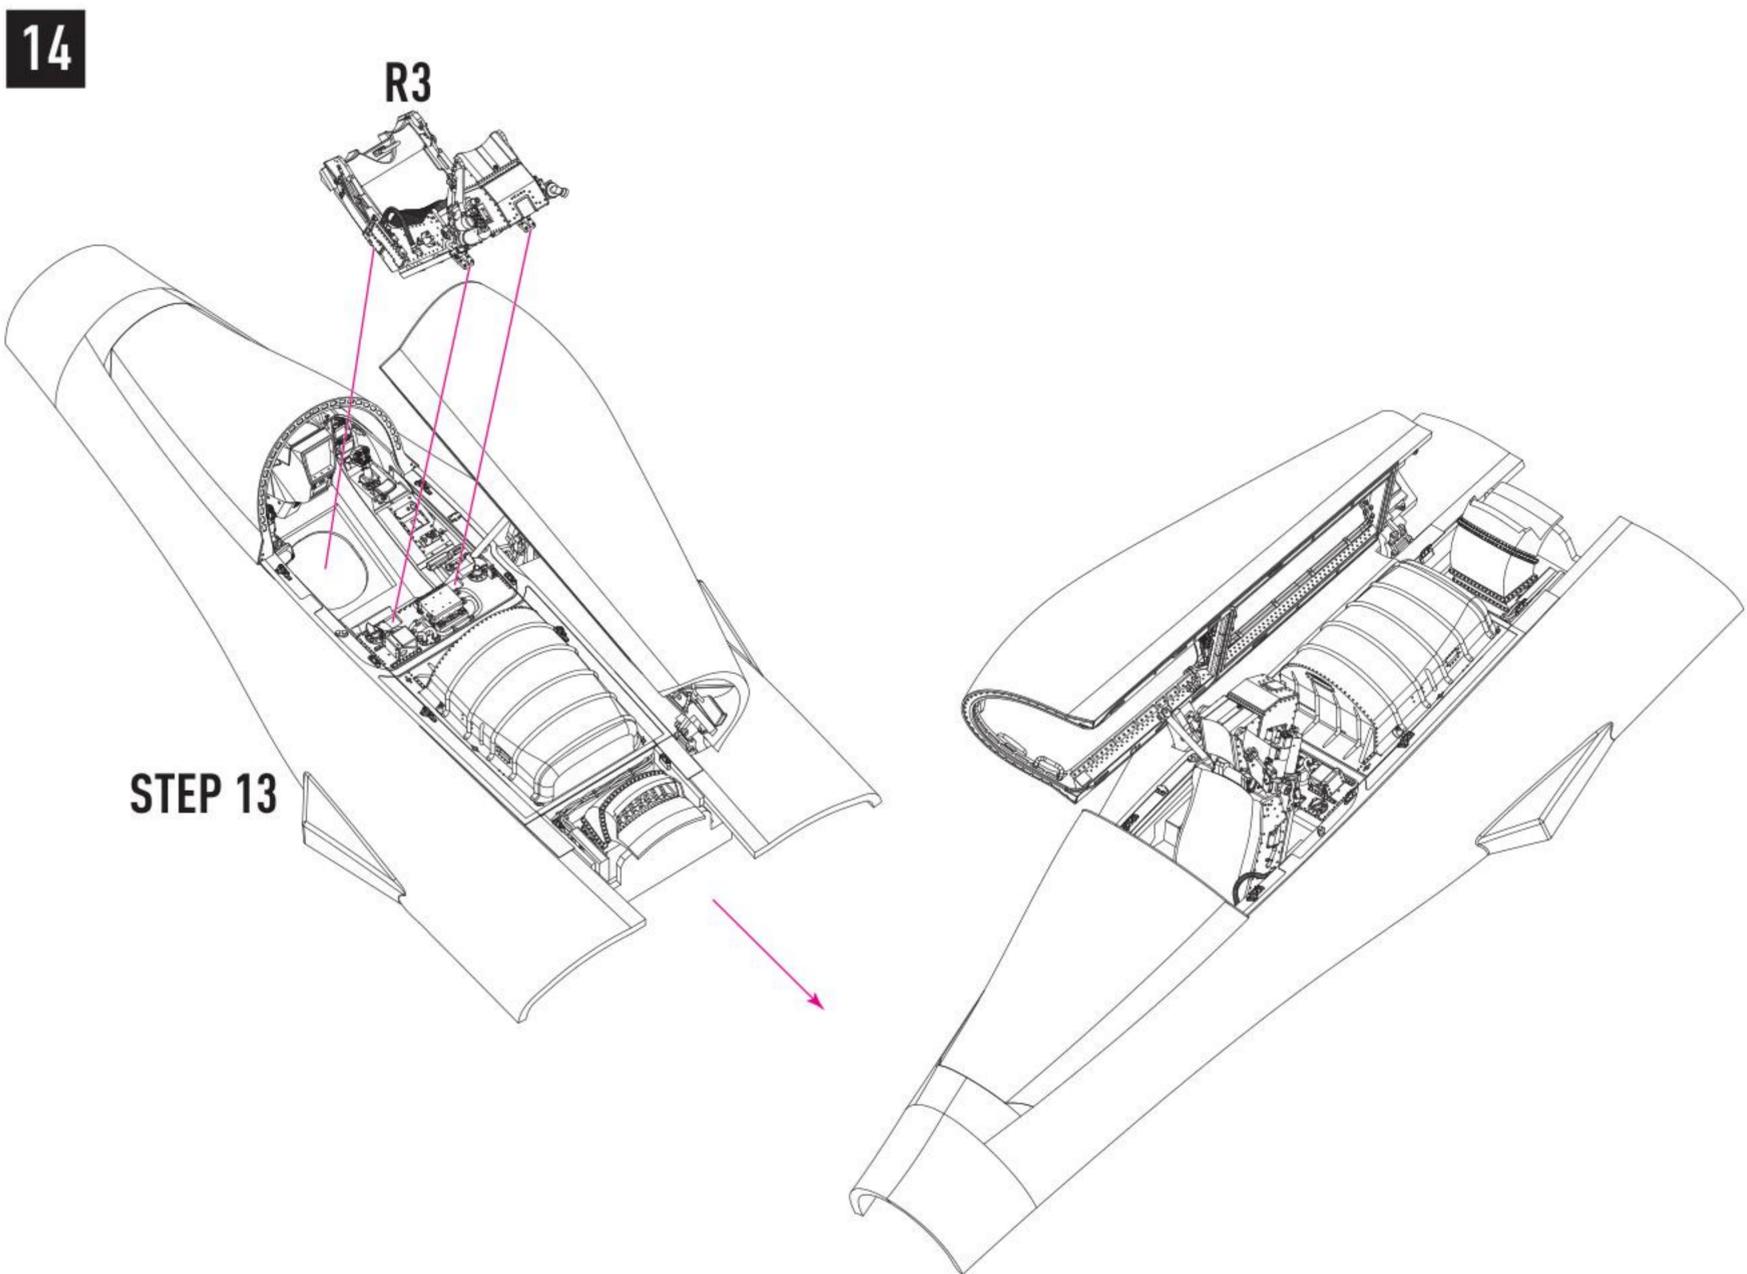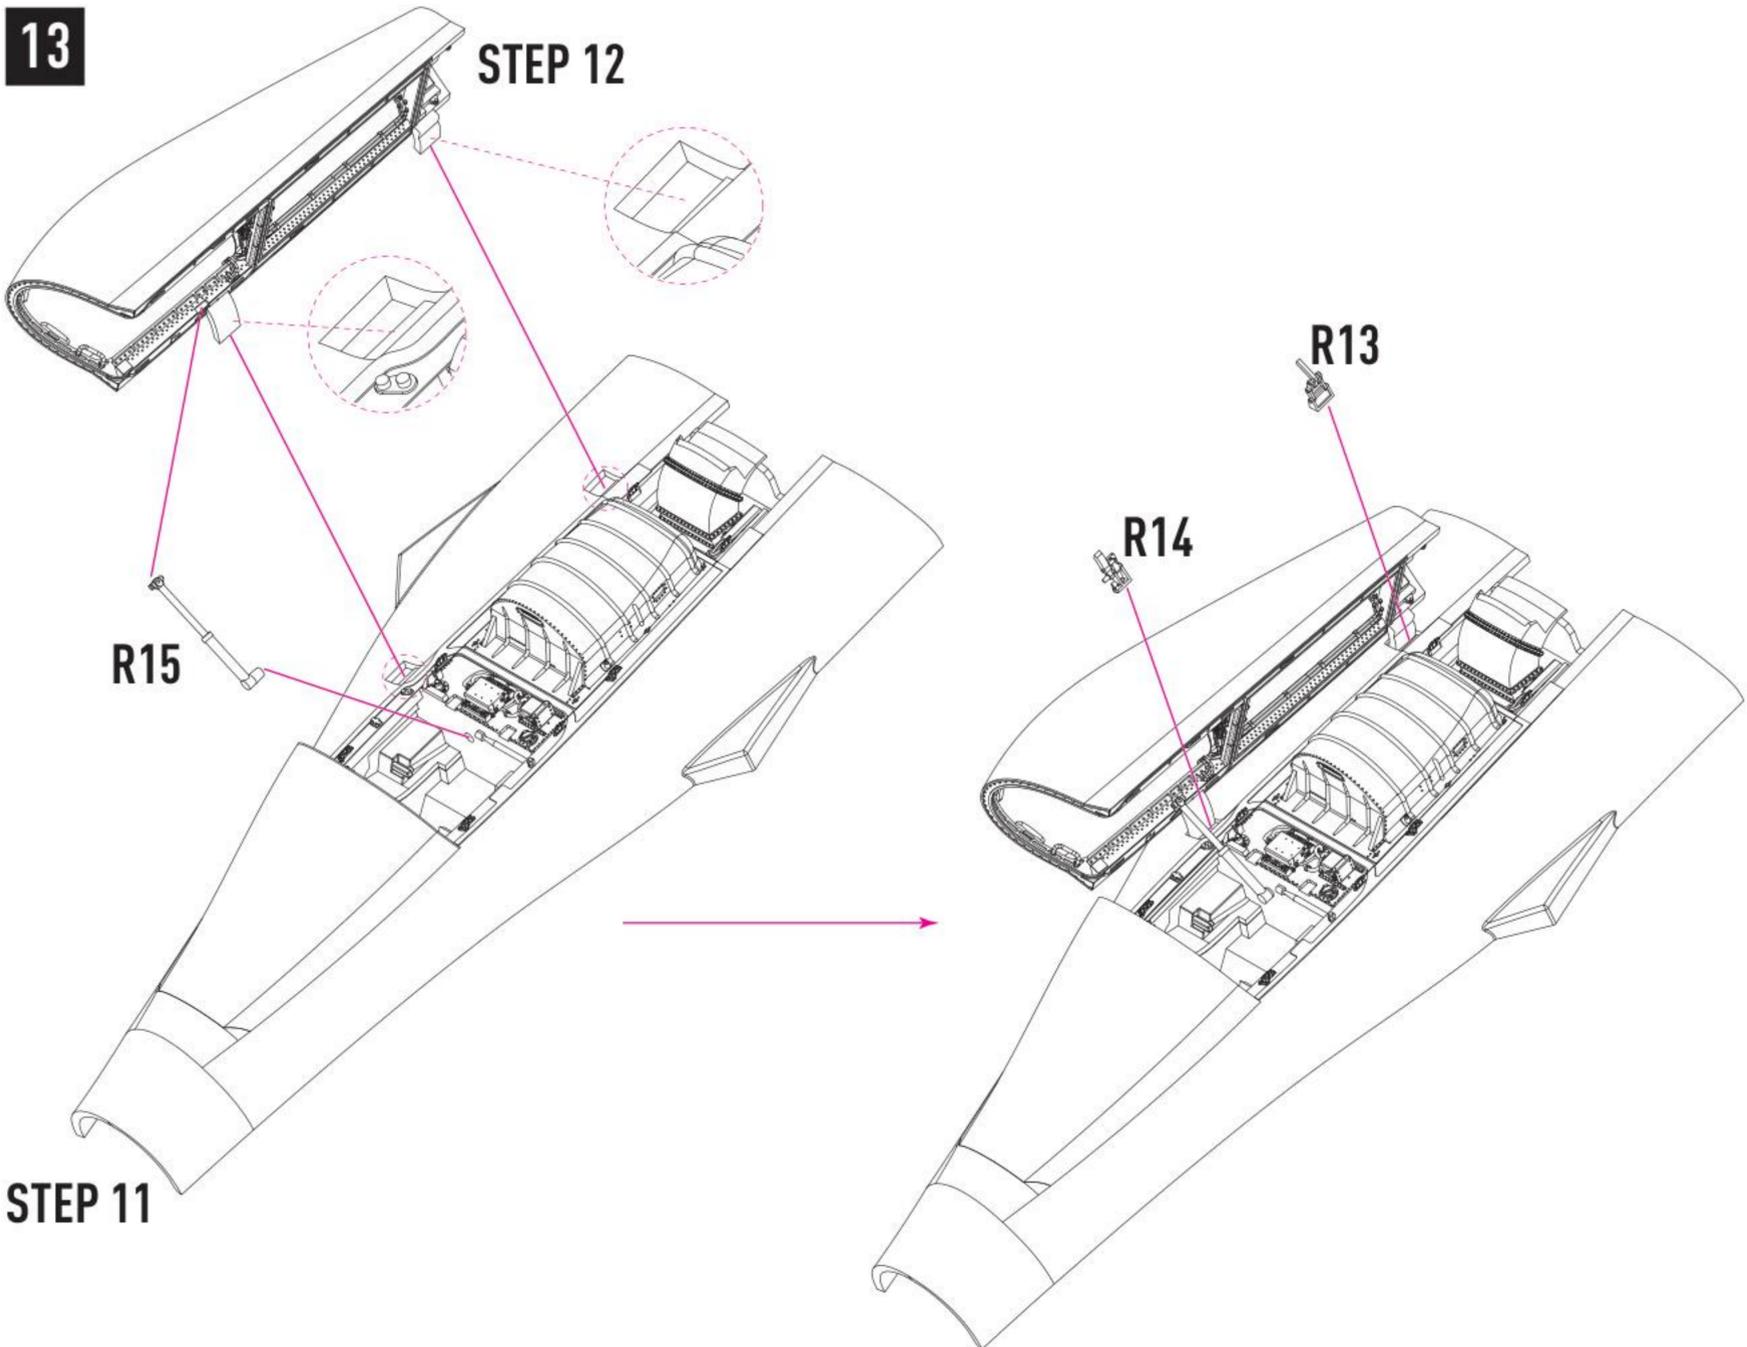

DECAL INSTRUCTION

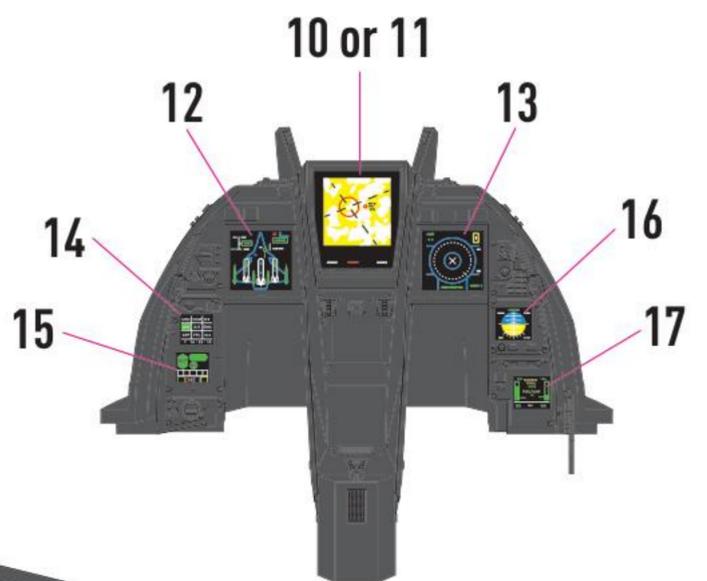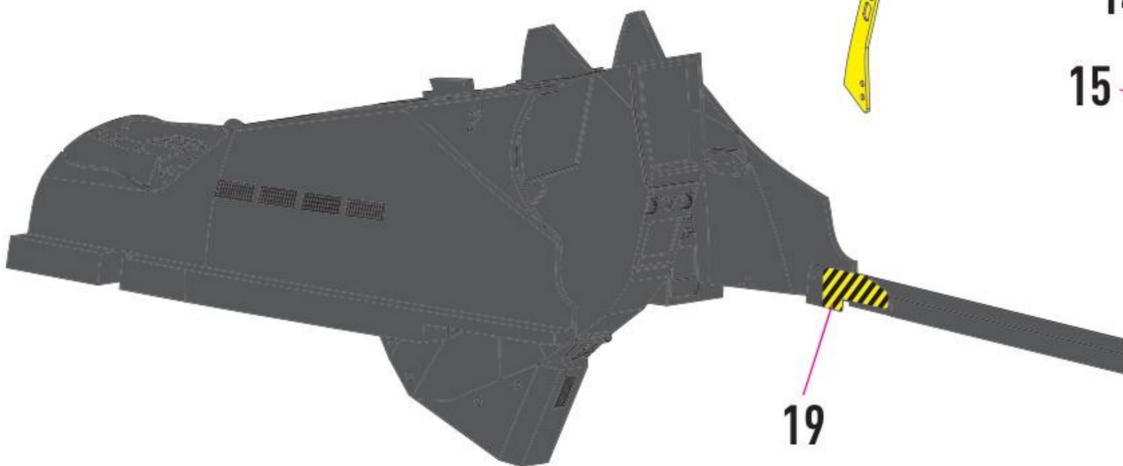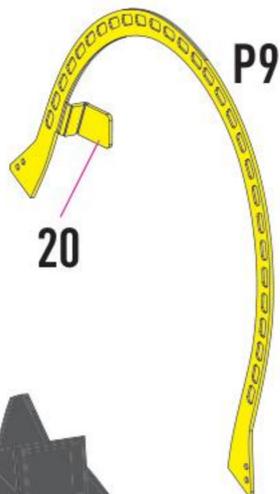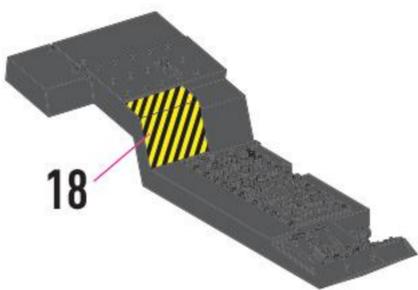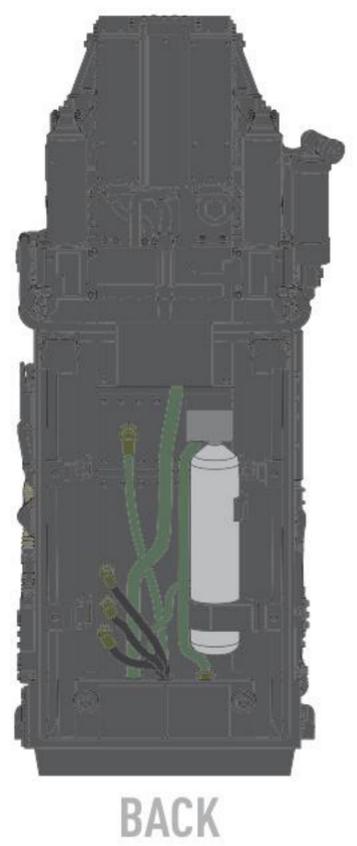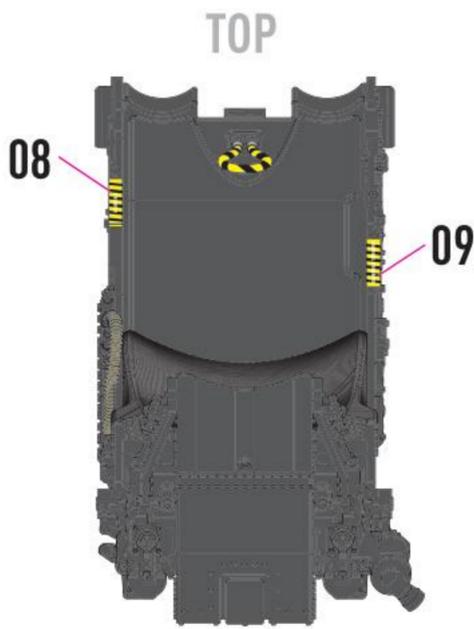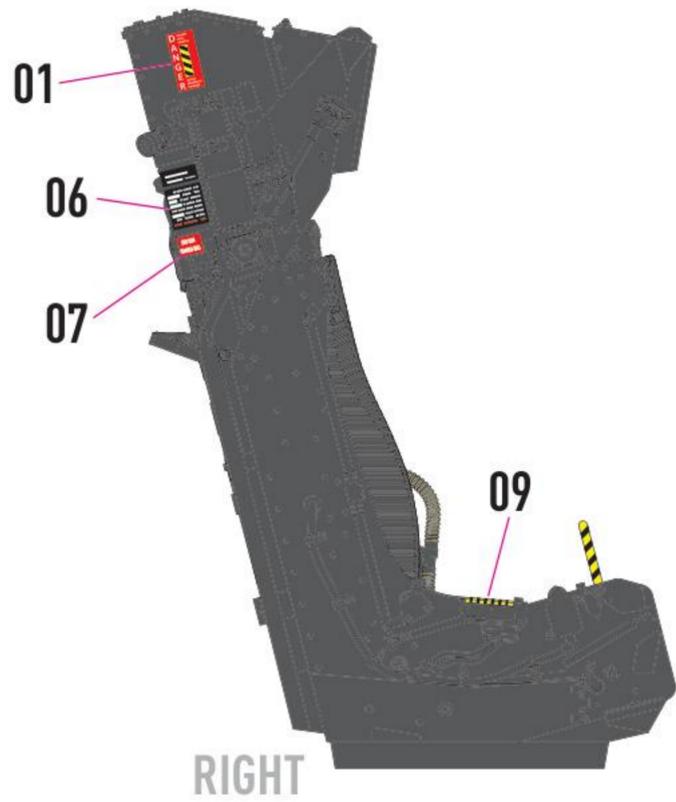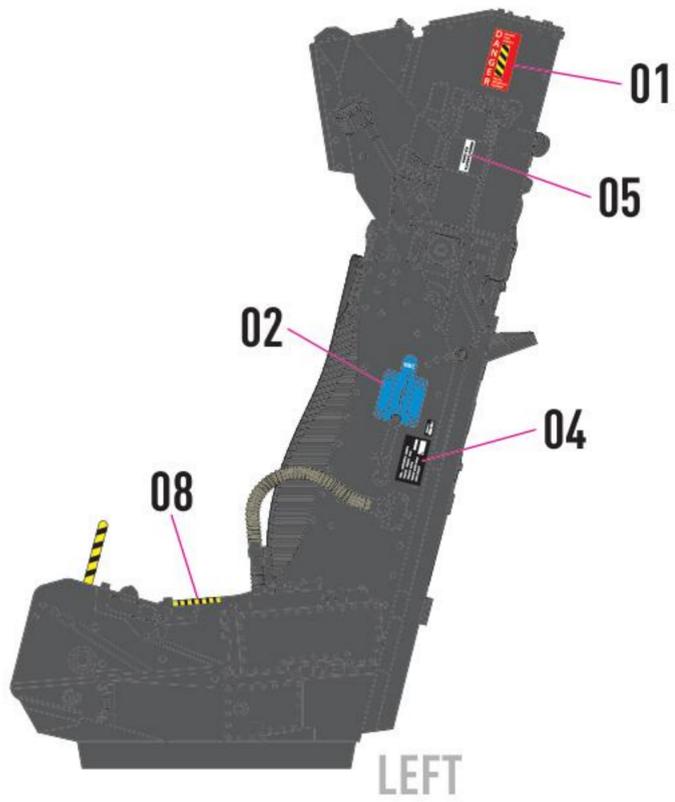

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua