




1 X2

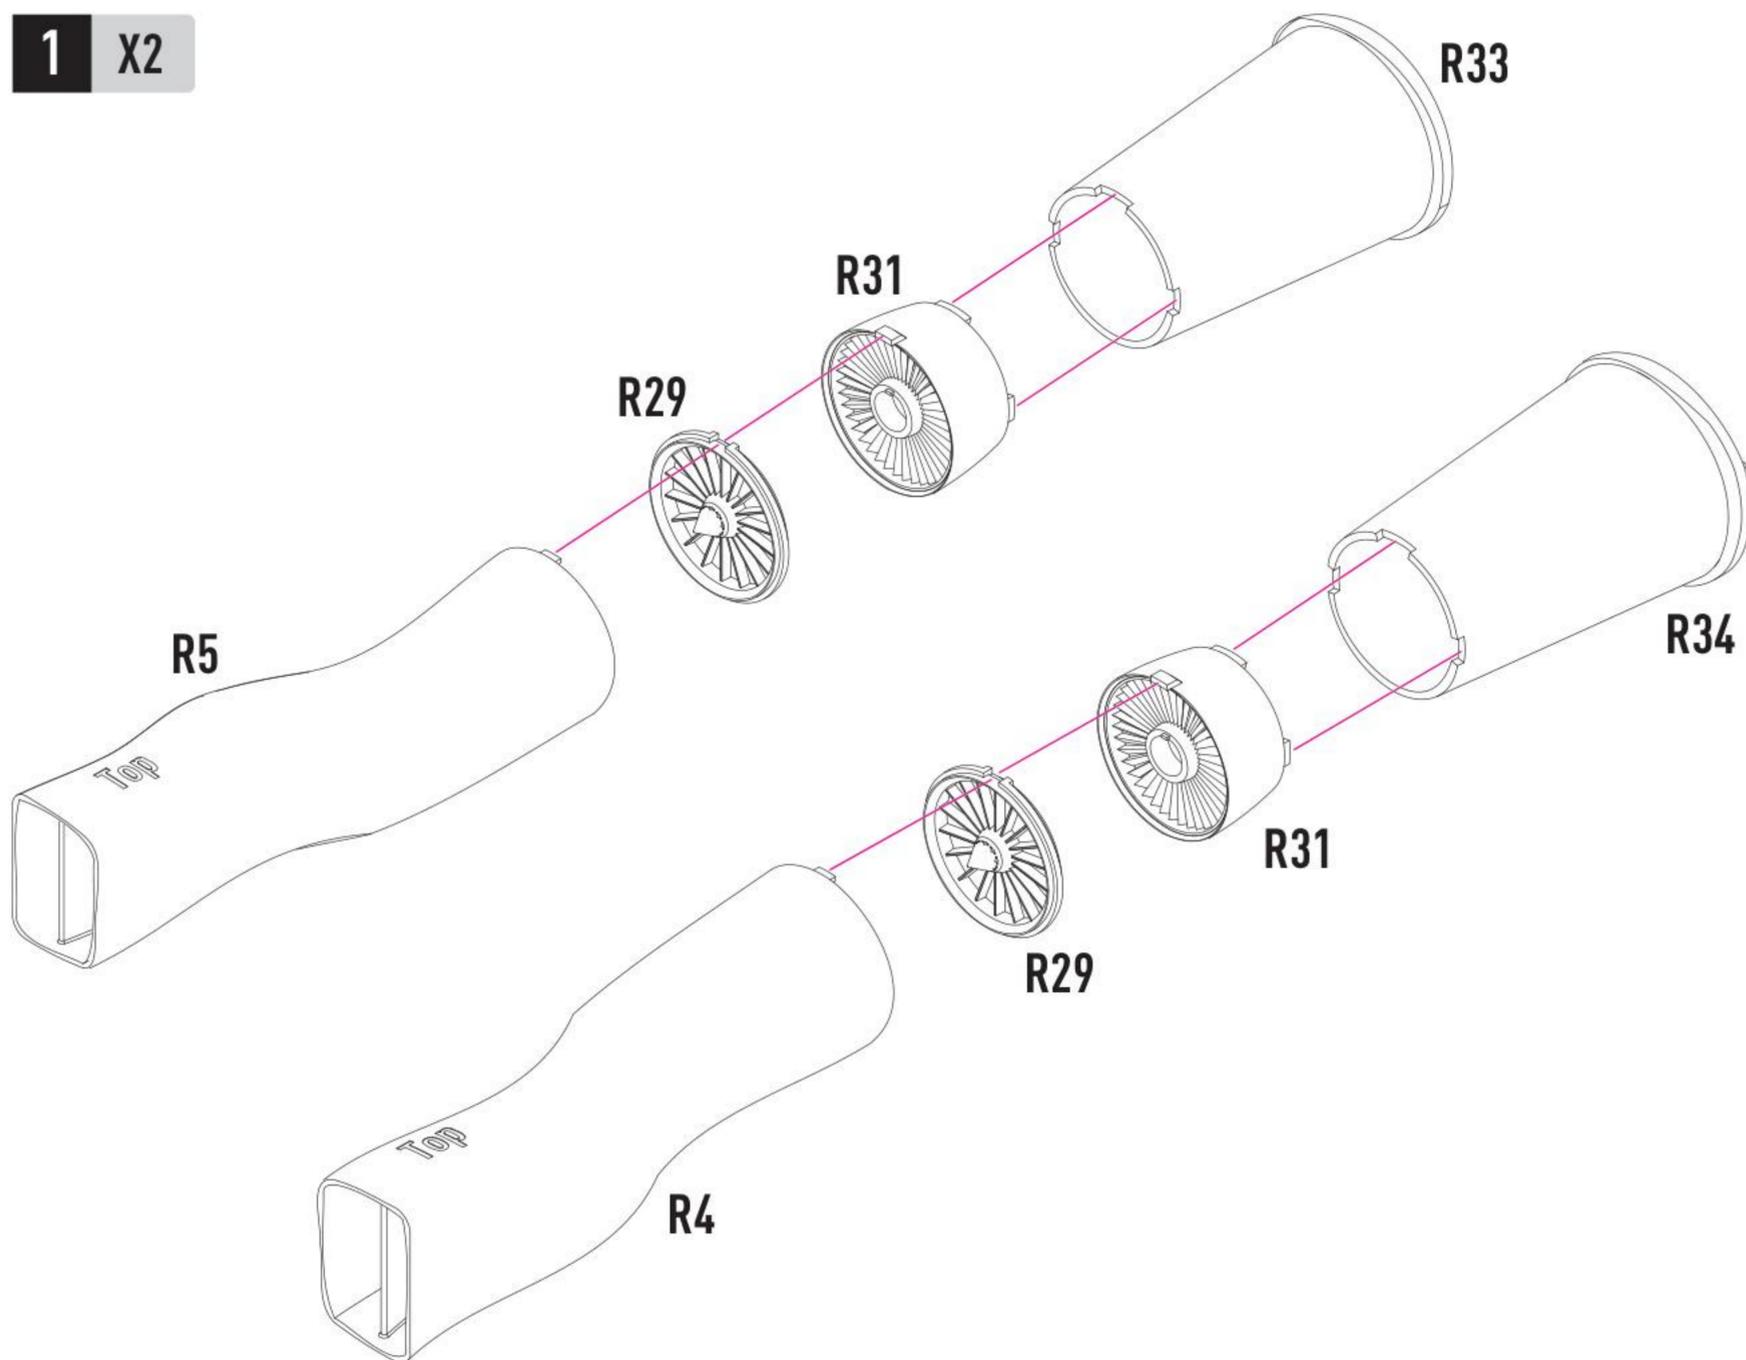


2 X4

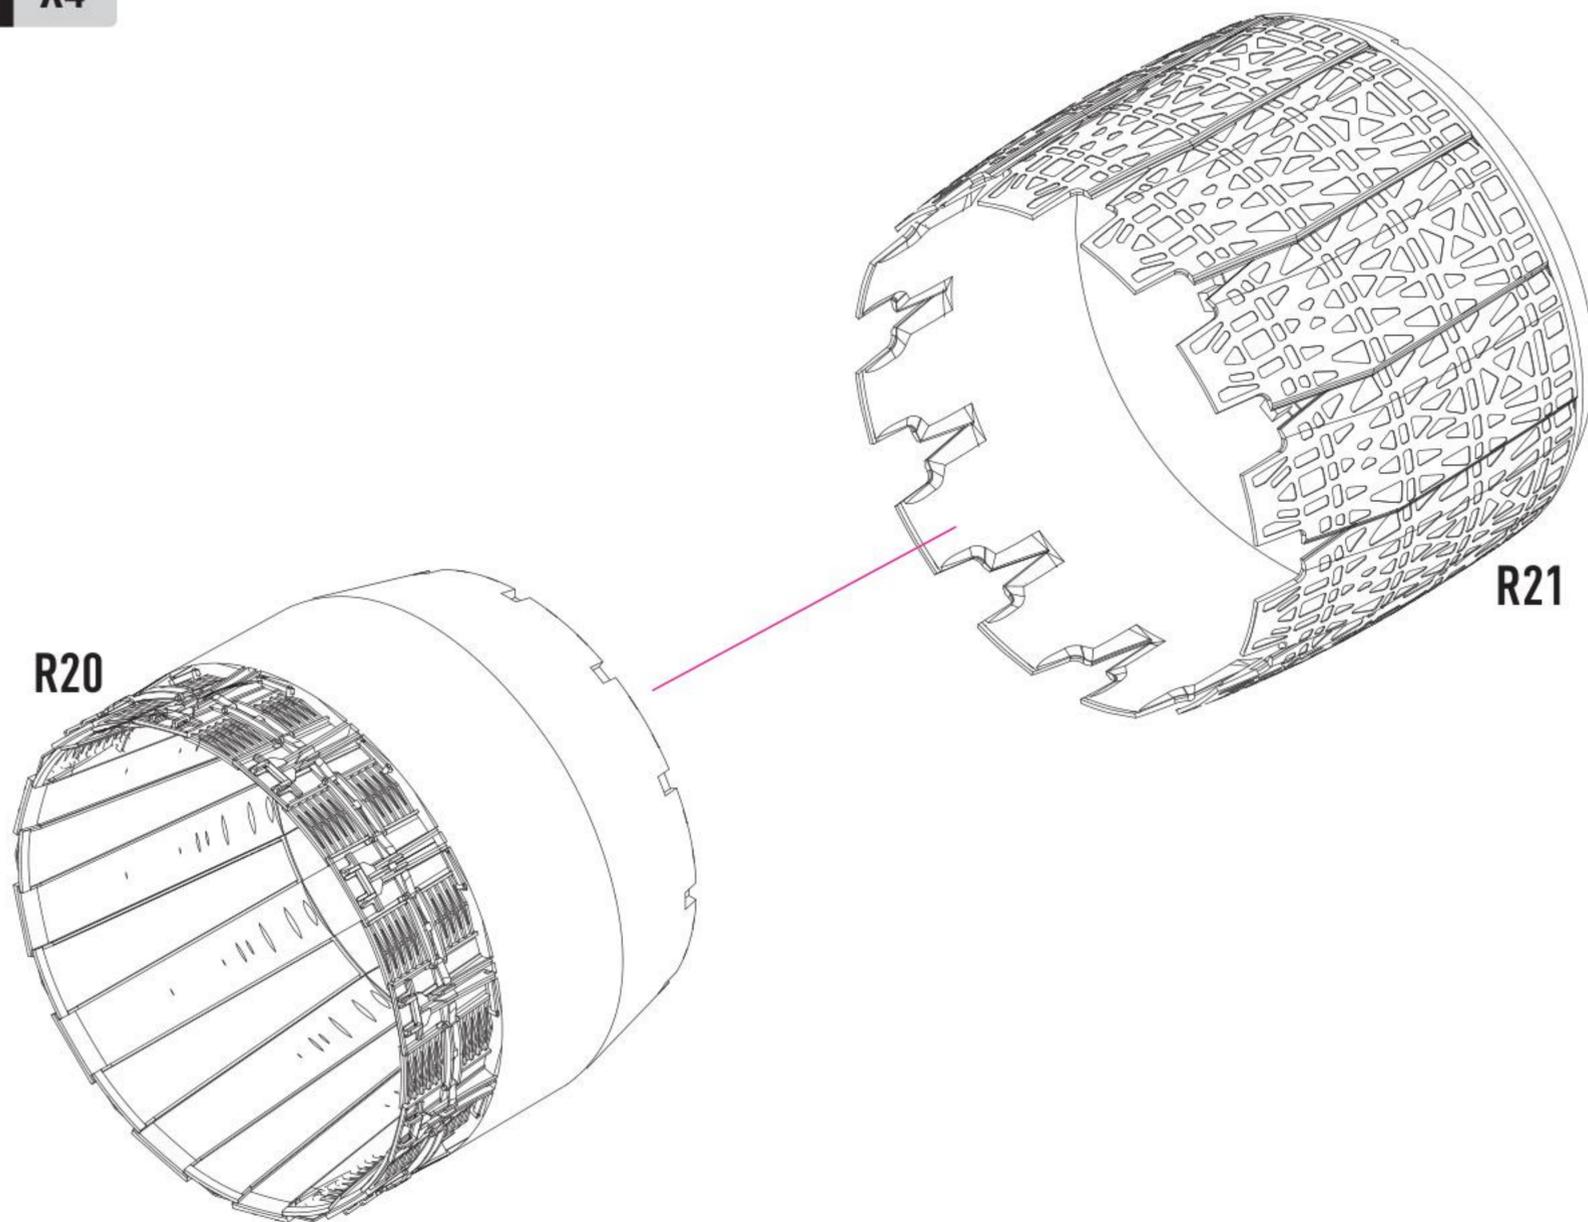


3 X4

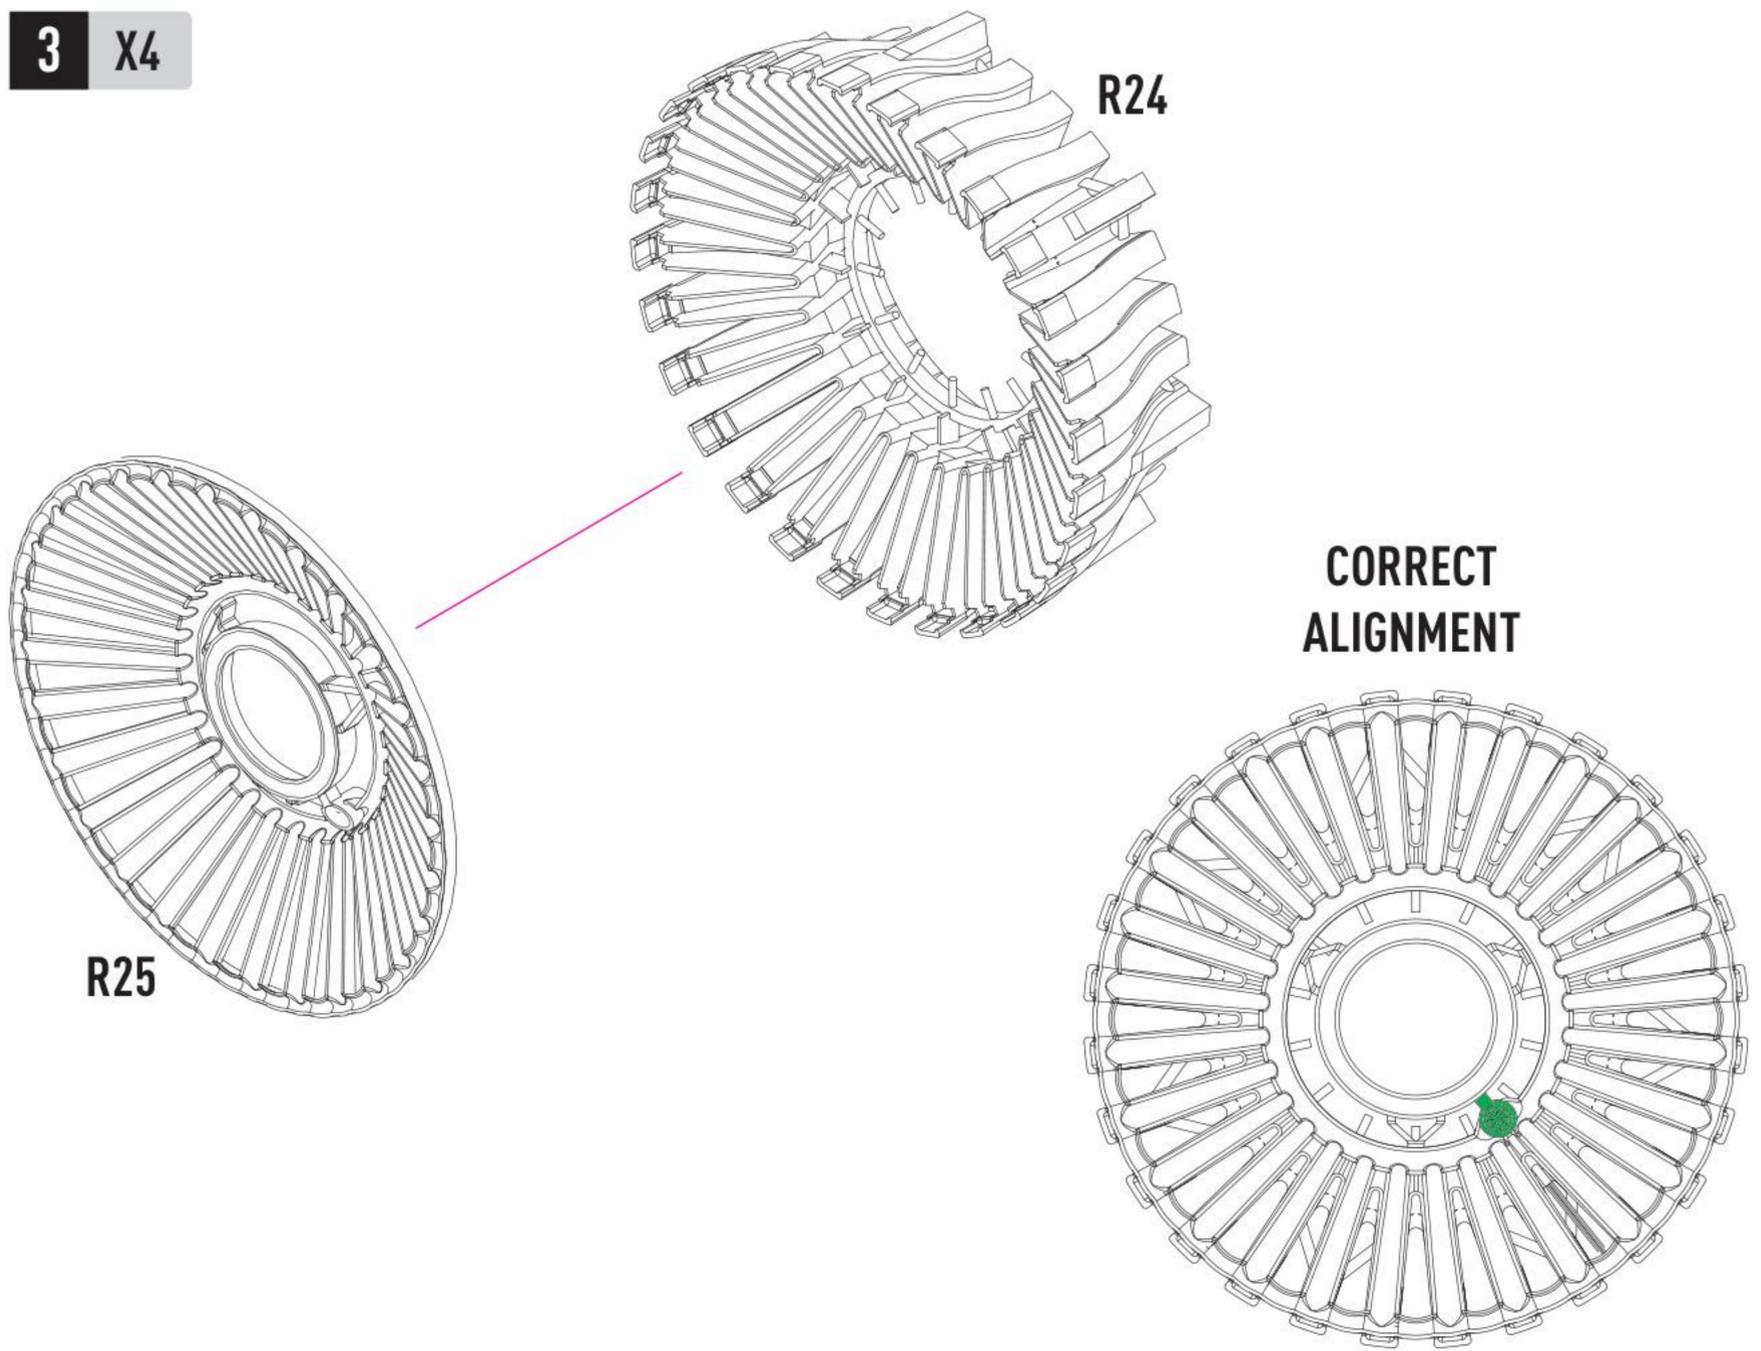


4 X4

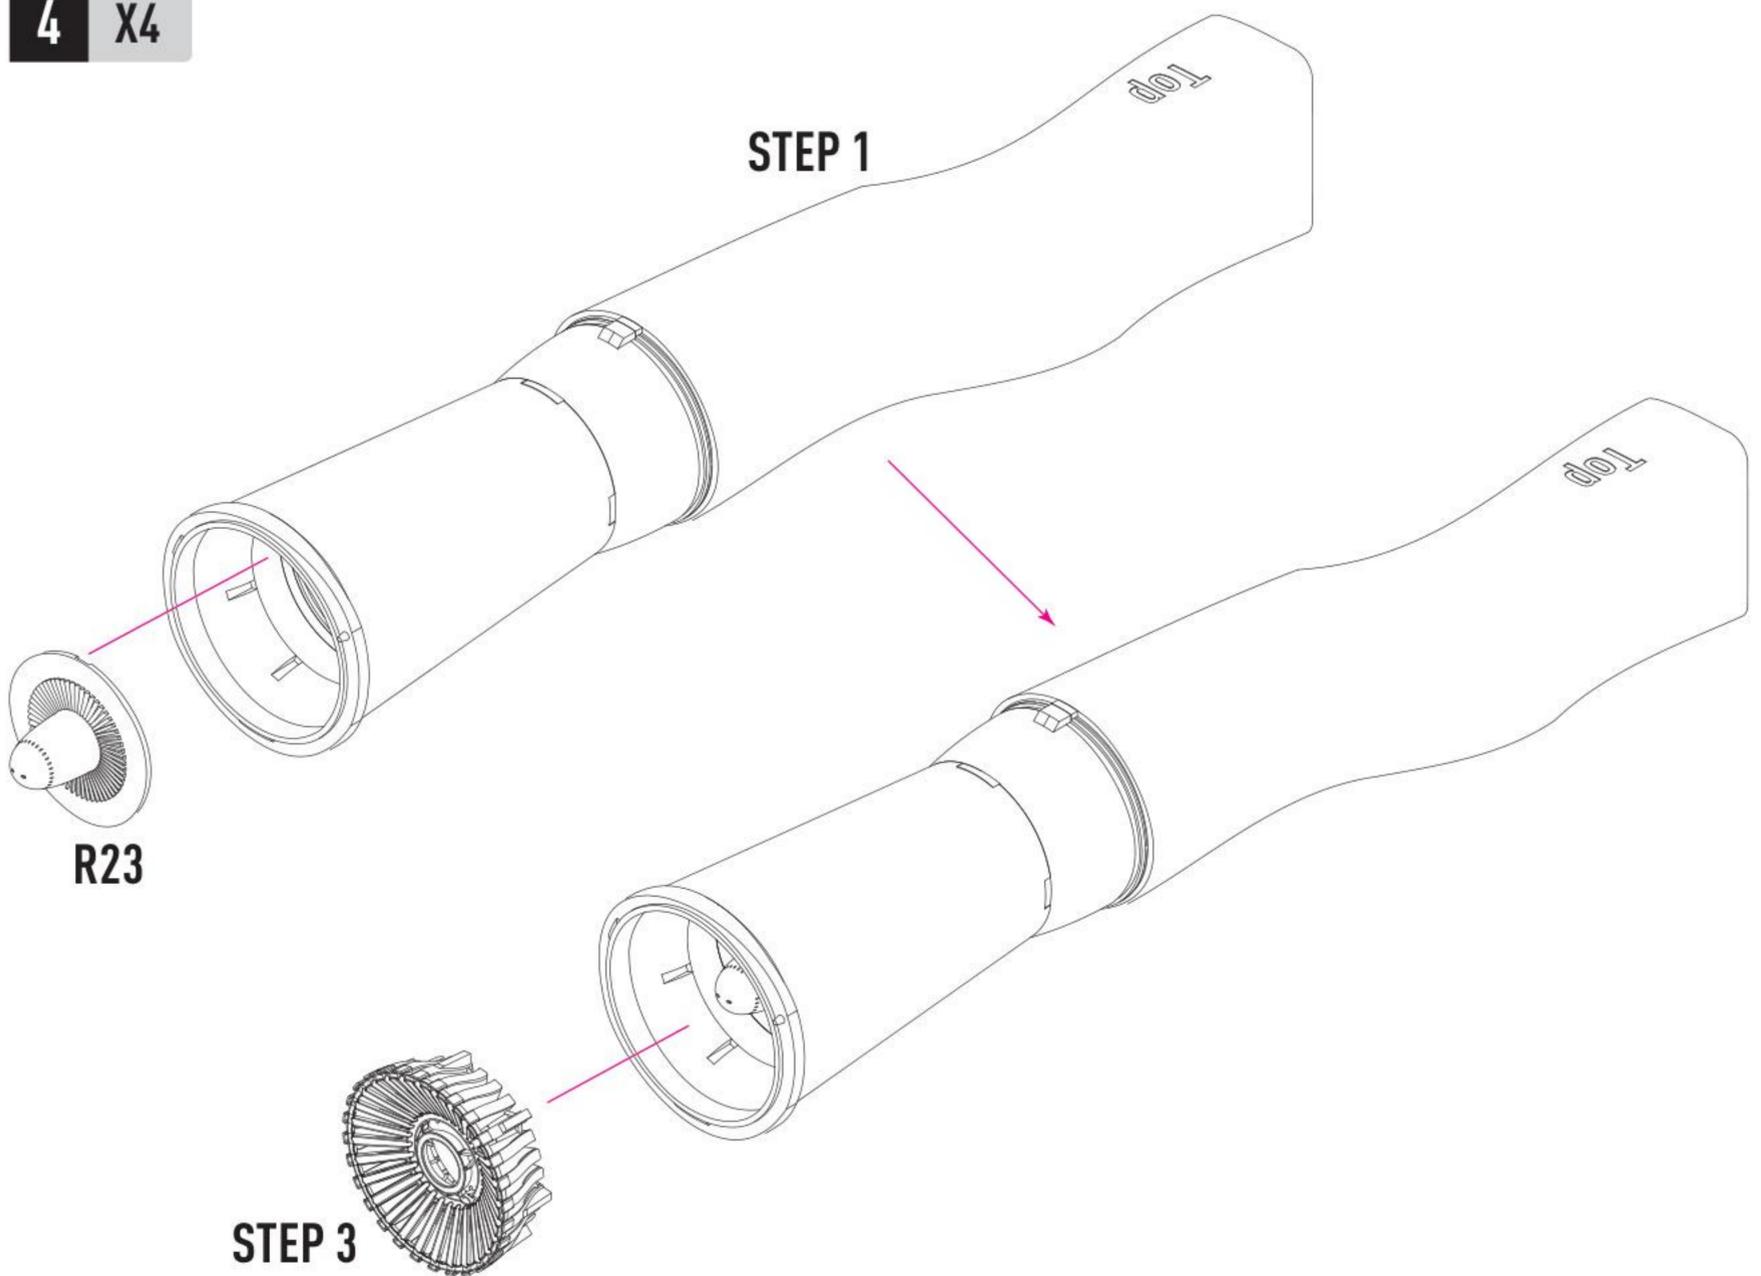

5 X2

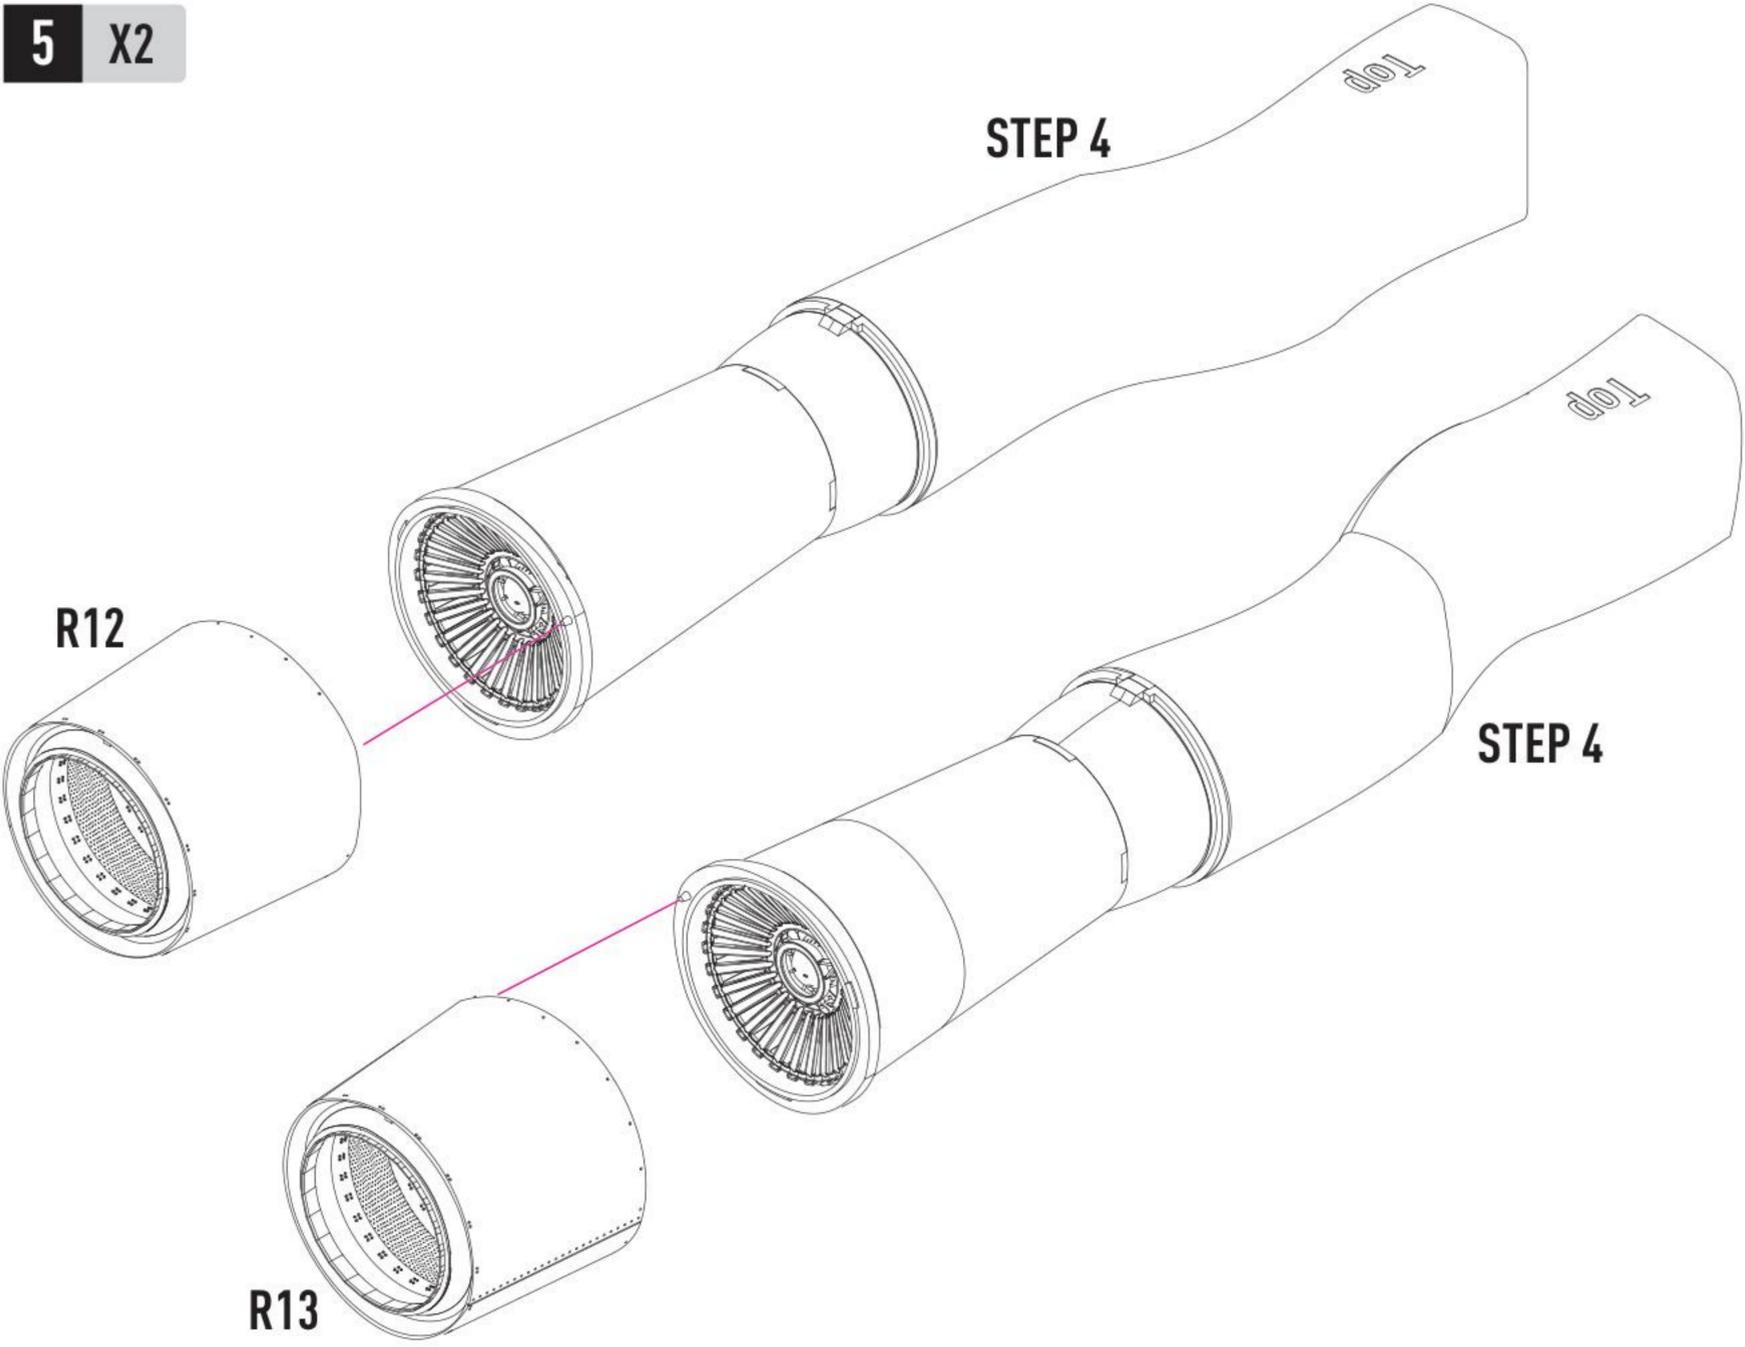


6

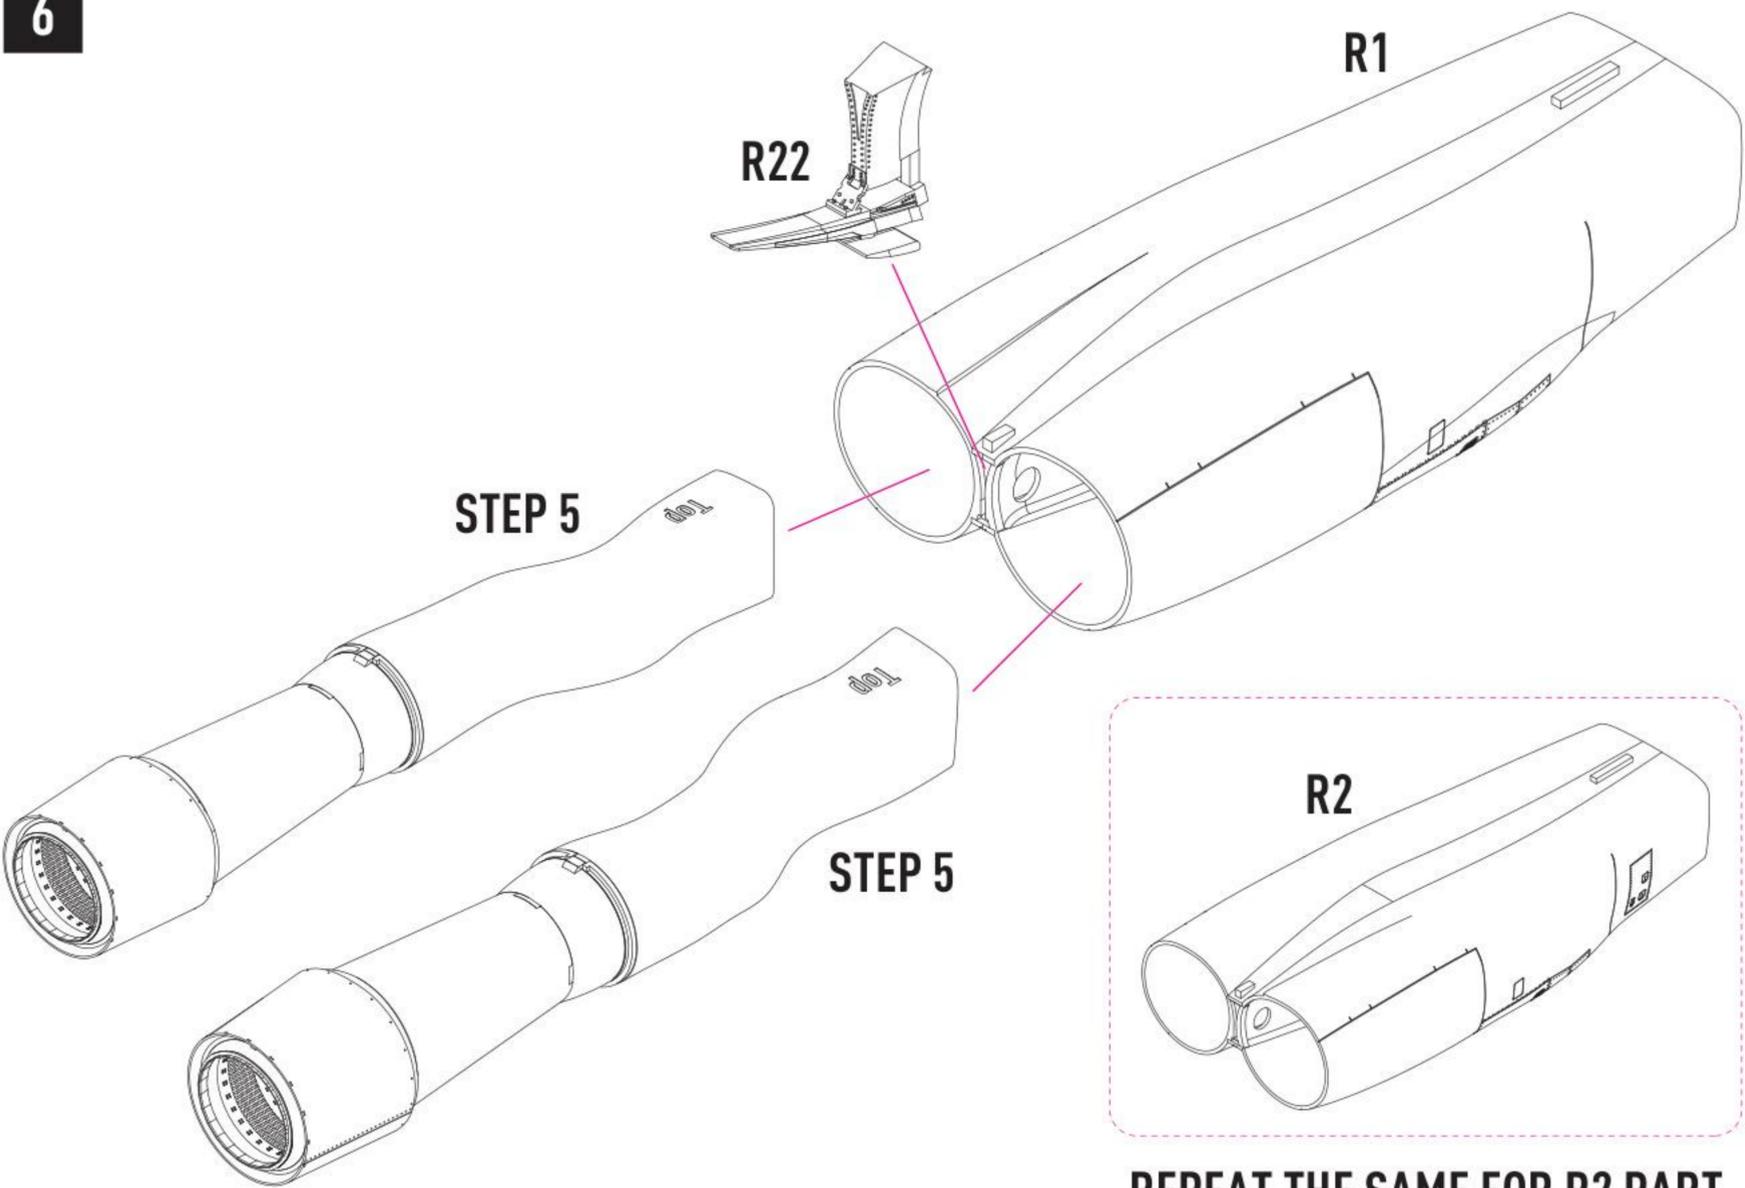


**REPEAT THE SAME FOR R2 PART
(R2 IS OPPOSITE FOR R1)**

7 X2


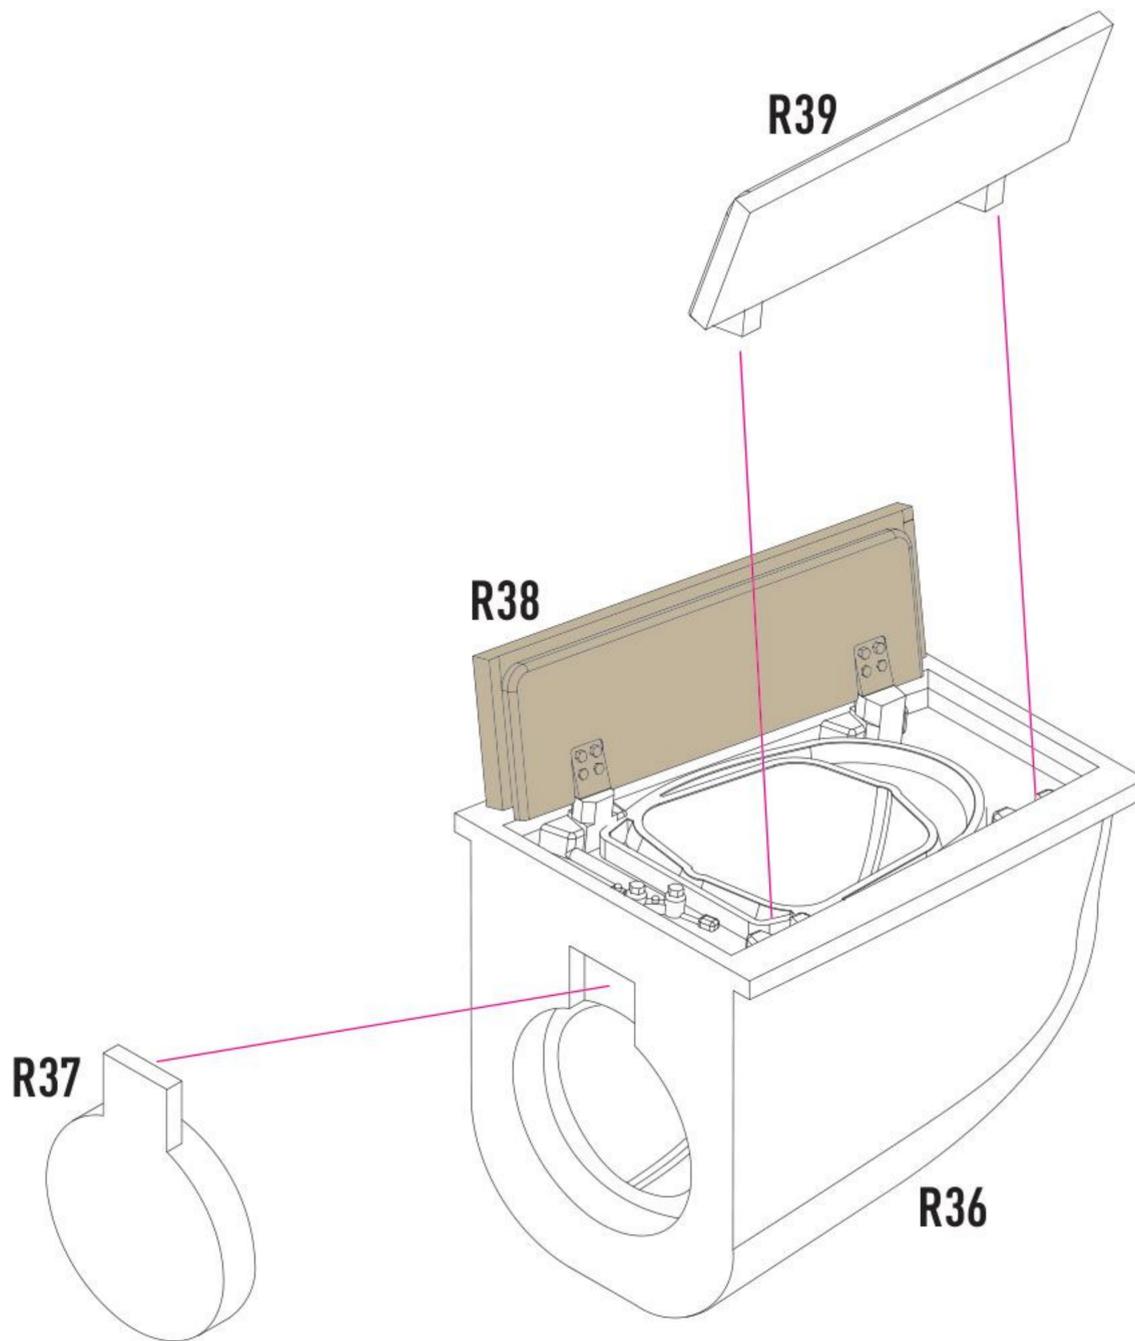


8 X2

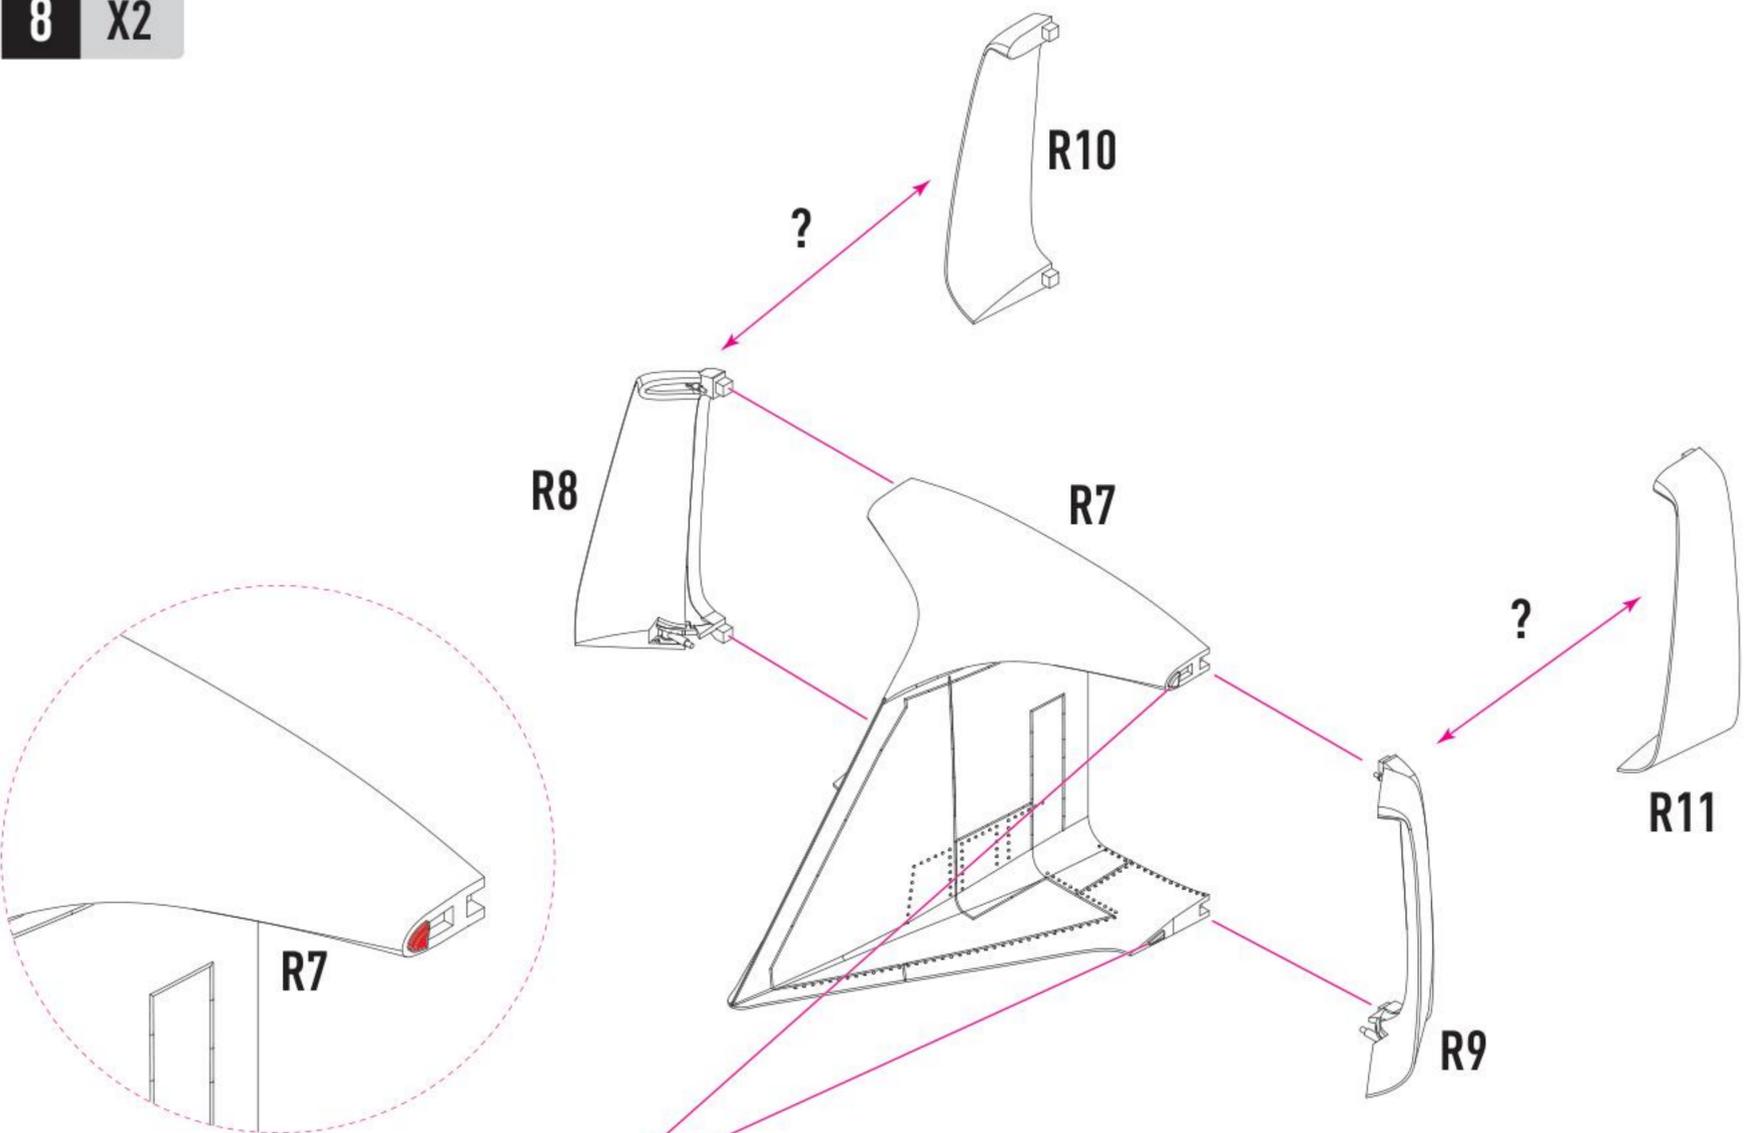

CUT ON BOTH SIDES
FOR R10 AND R11

USE R10 AND R11 FOR CLOSED AIR INTAKES
USE R9 AND R8 FOR OPEN AIR INTAKES

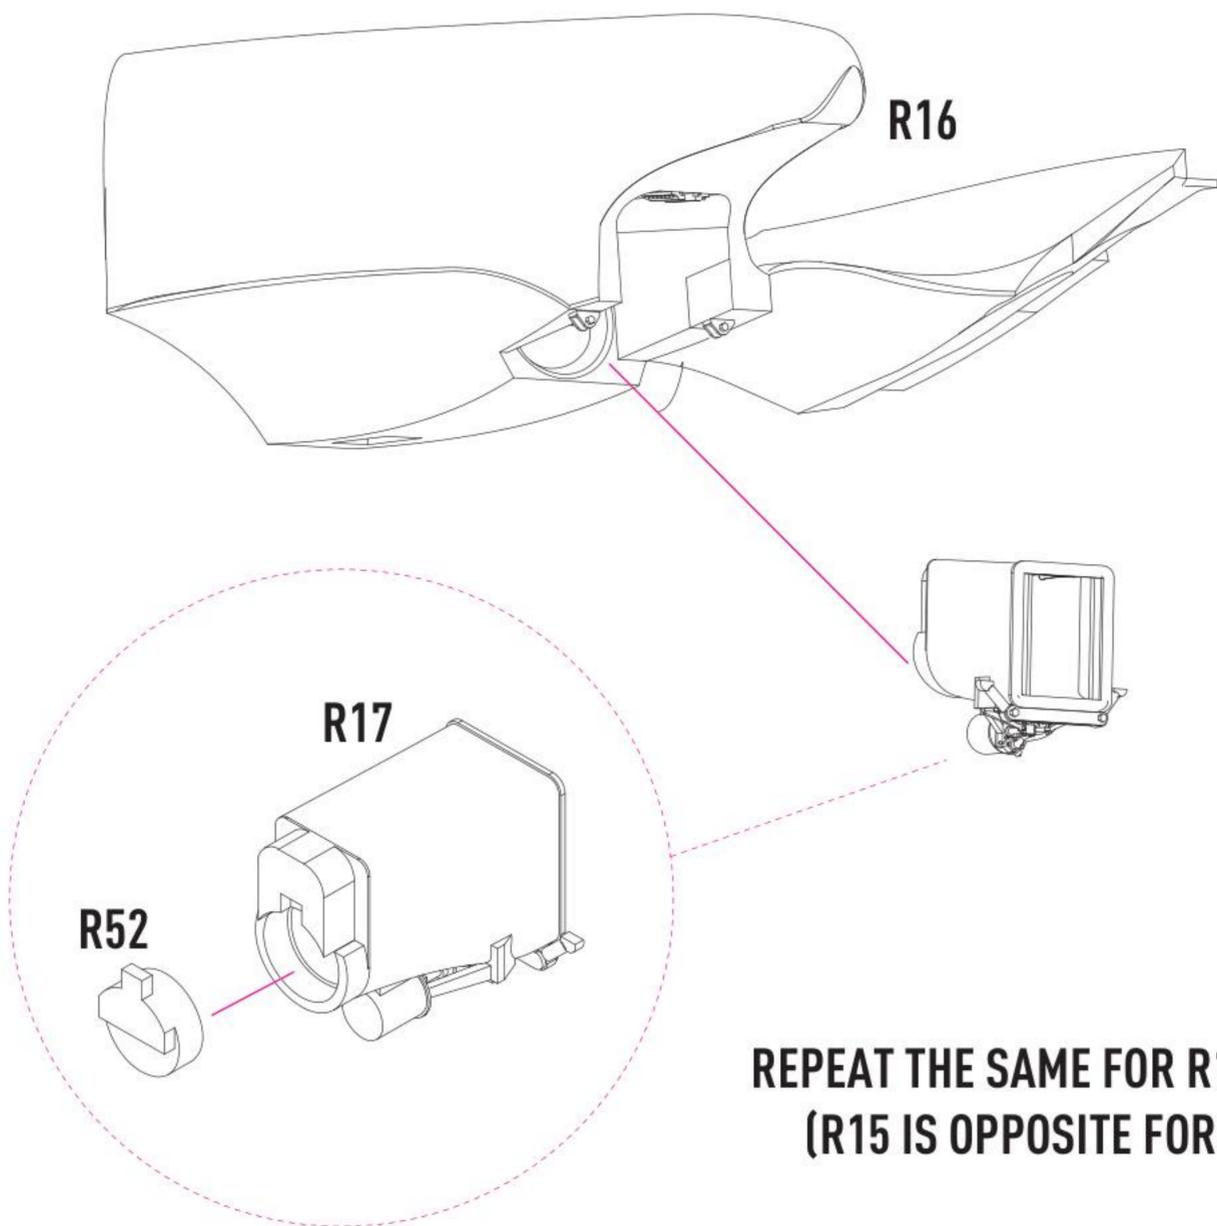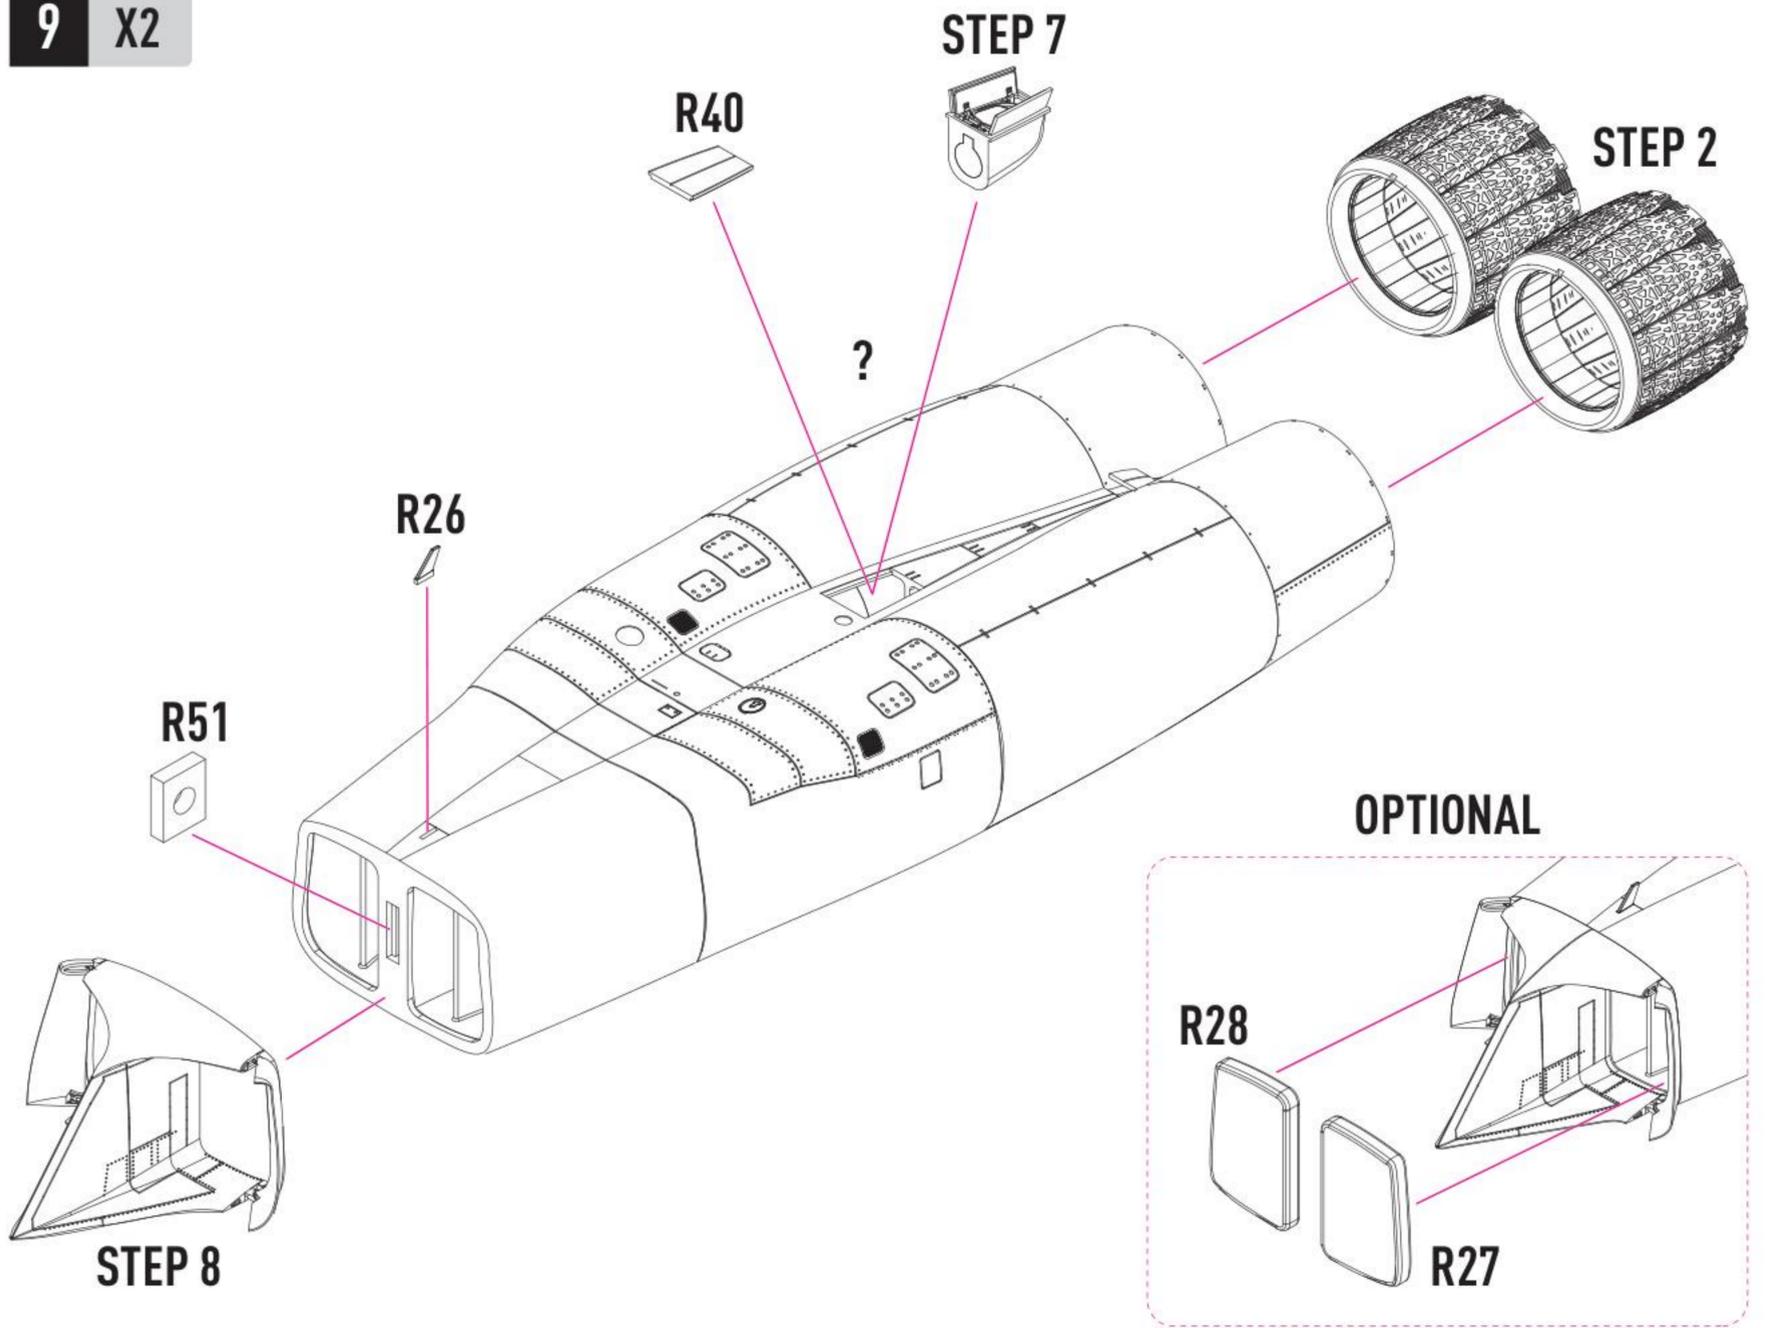


REPEAT THE SAME FOR R15 PART
(R15 IS OPPOSITE FOR R16)


11

PART C78 FROM
REVELL KIT

PART C50 FROM
REVELL KIT

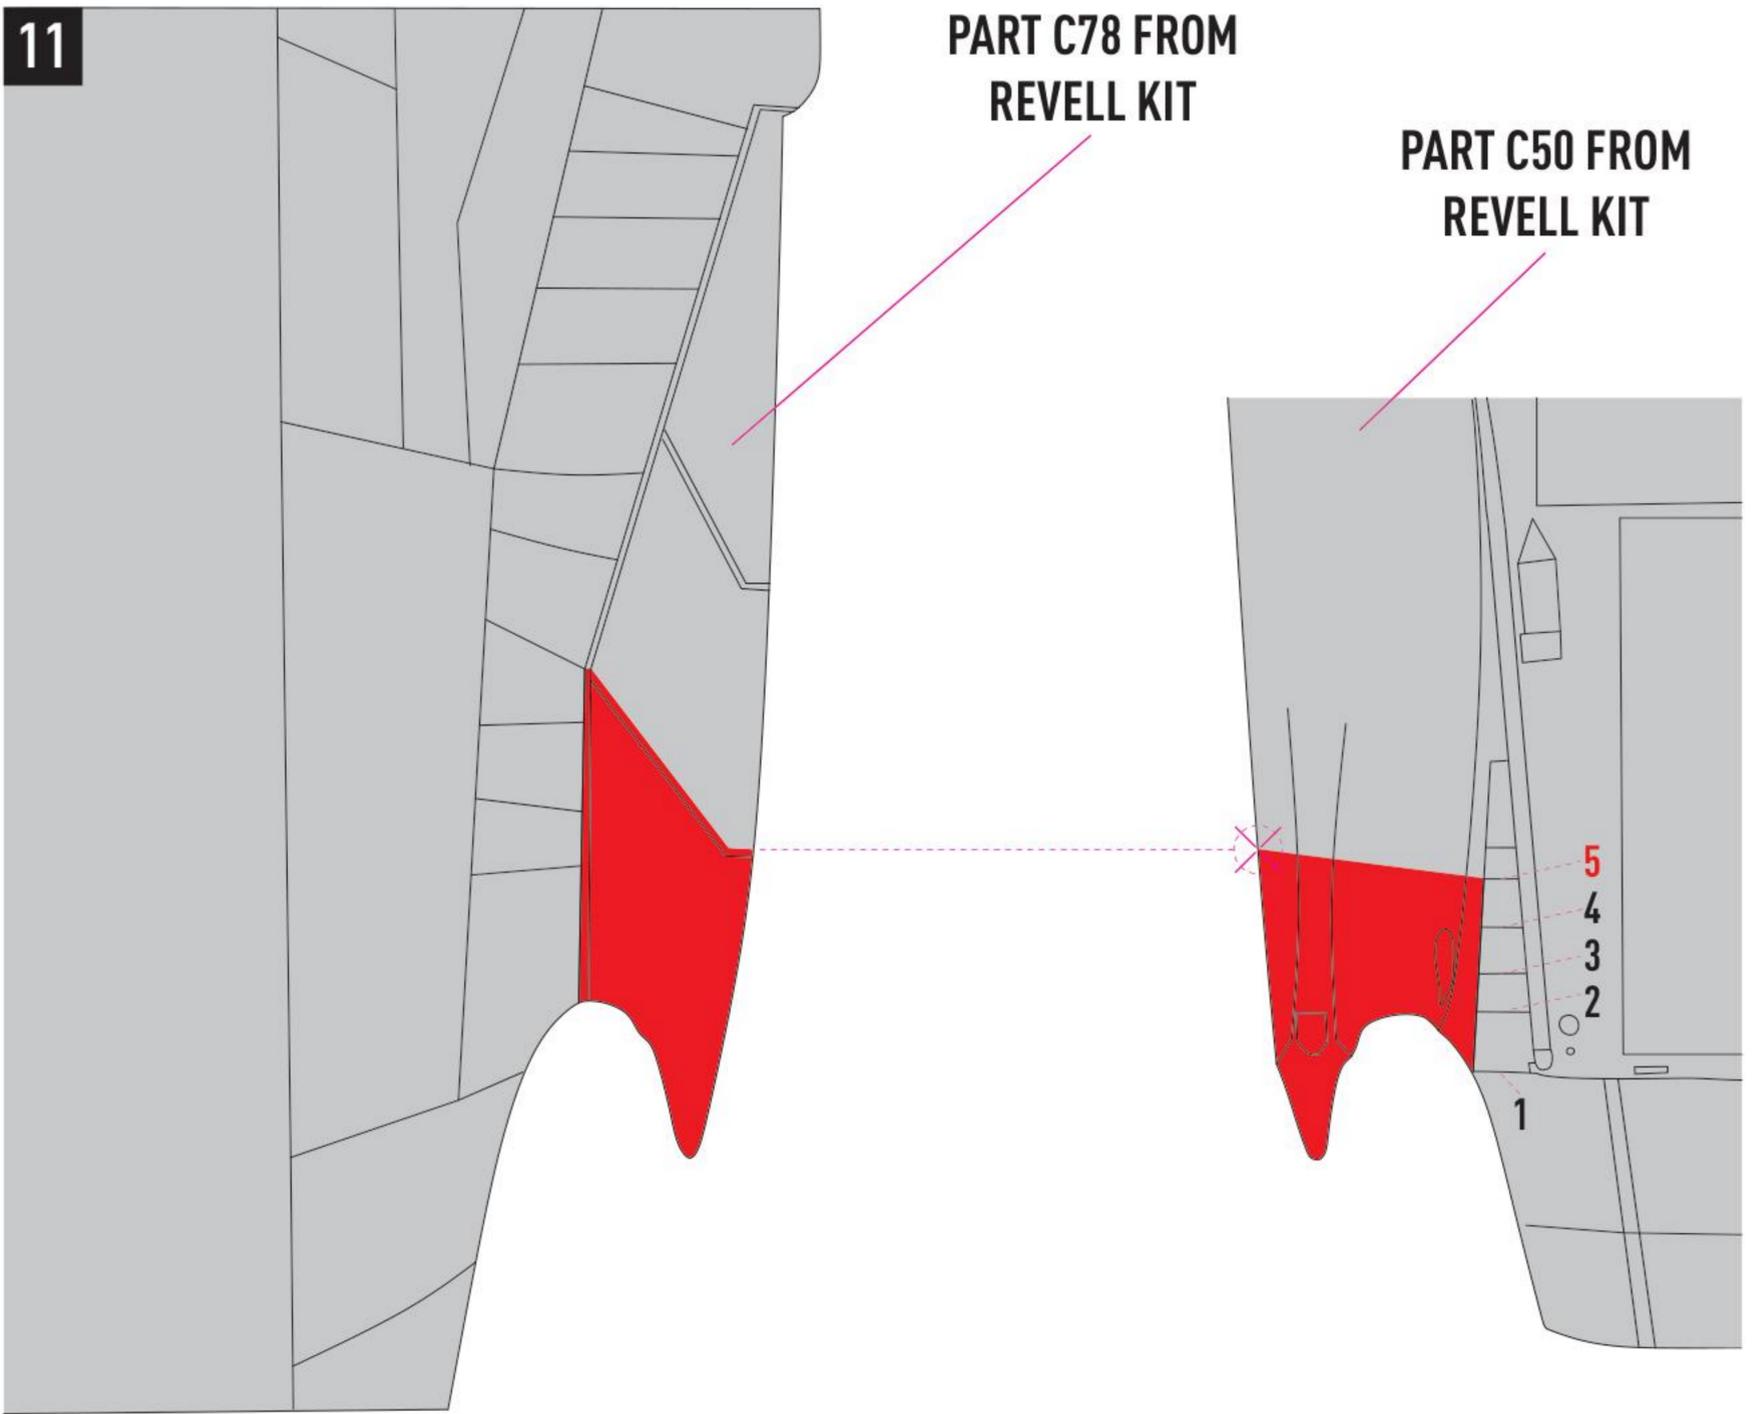

FOR ACCURATE CUT ON BOTTOM PART USE PANEL LINES FROM TOP PART
MAKE STRAIGHT CUT TO FIFTH PANEL LINE OF BOTTOM PART LIKE ON THE SCHEME
MAKE THE SAME ON OTHER SIDE

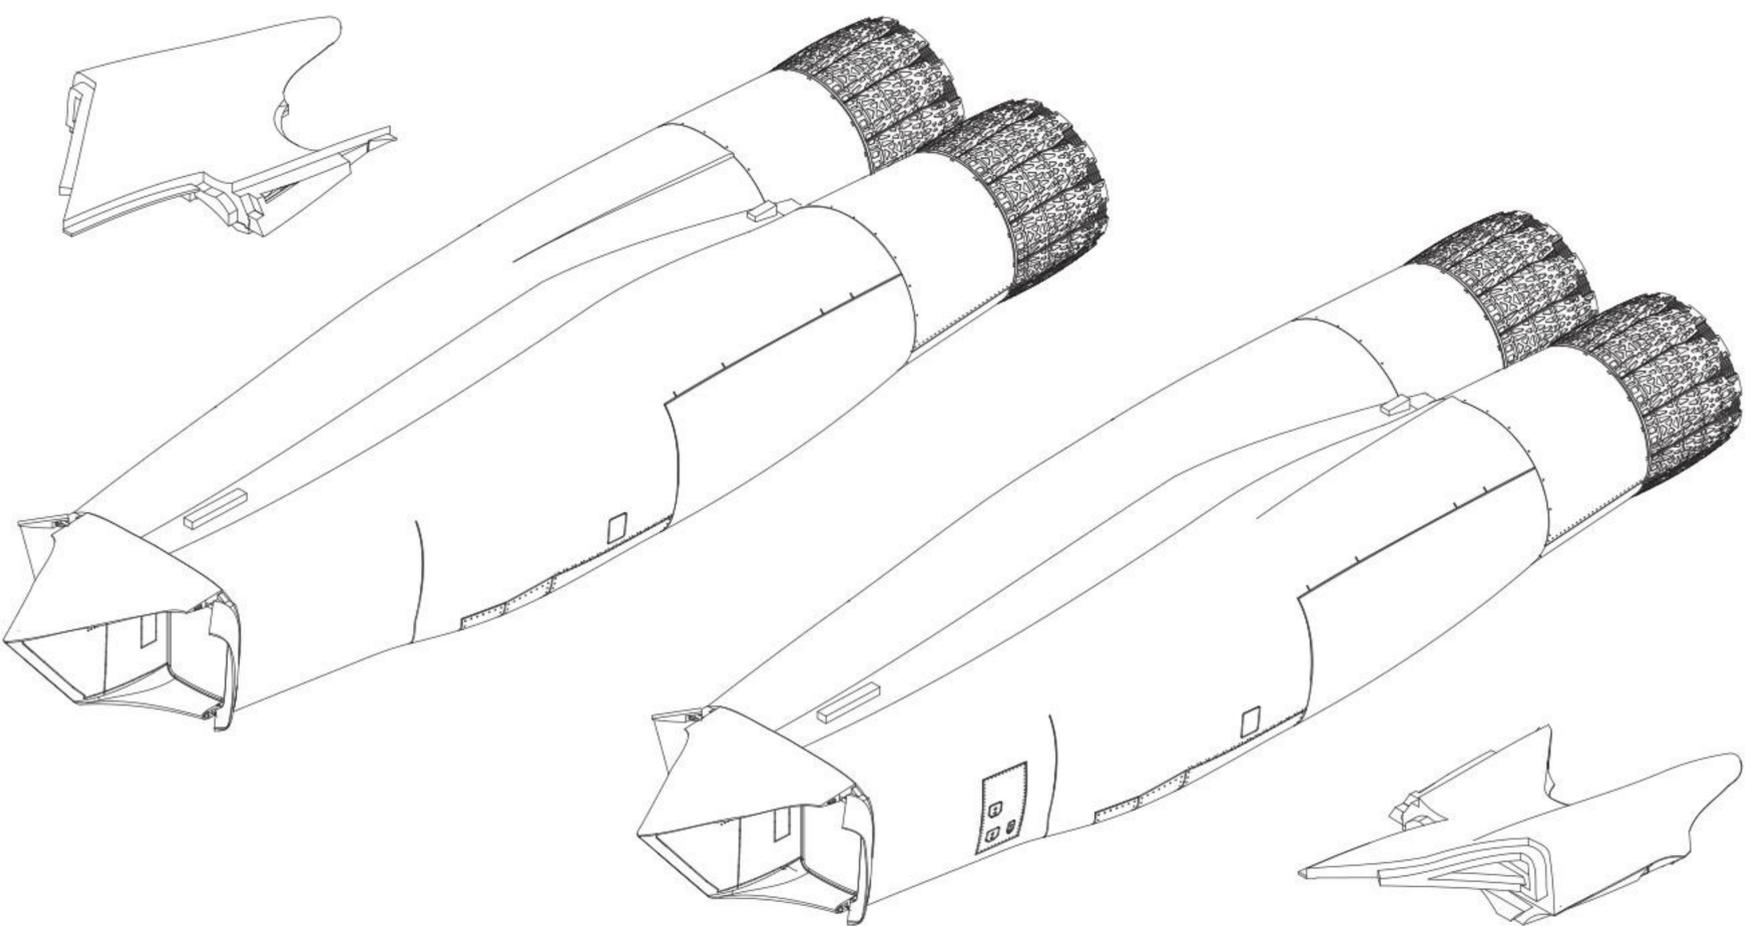

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit_official](https://www.instagram.com/reskit_official)

[youtube.com/@reskit-usmd](https://www.youtube.com/@reskit-usmd)

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua