



DETAILS AFTER REMOVAL FROM SUPPORTS

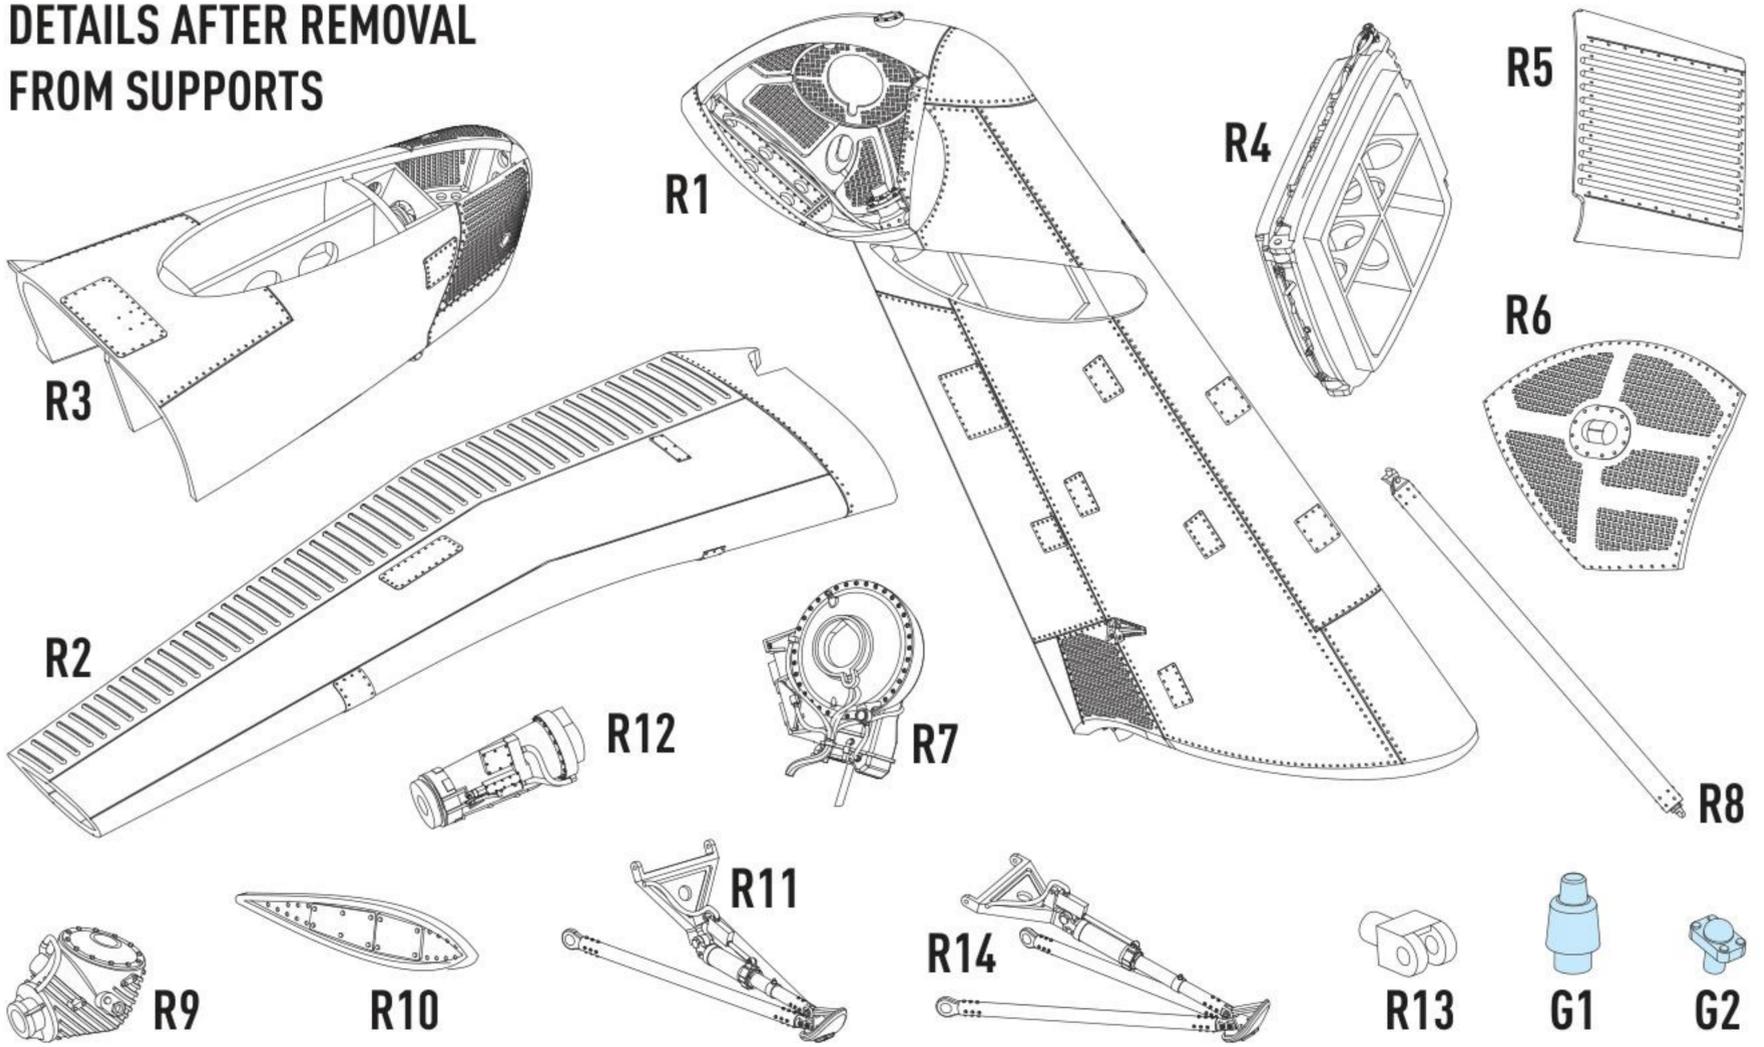

1

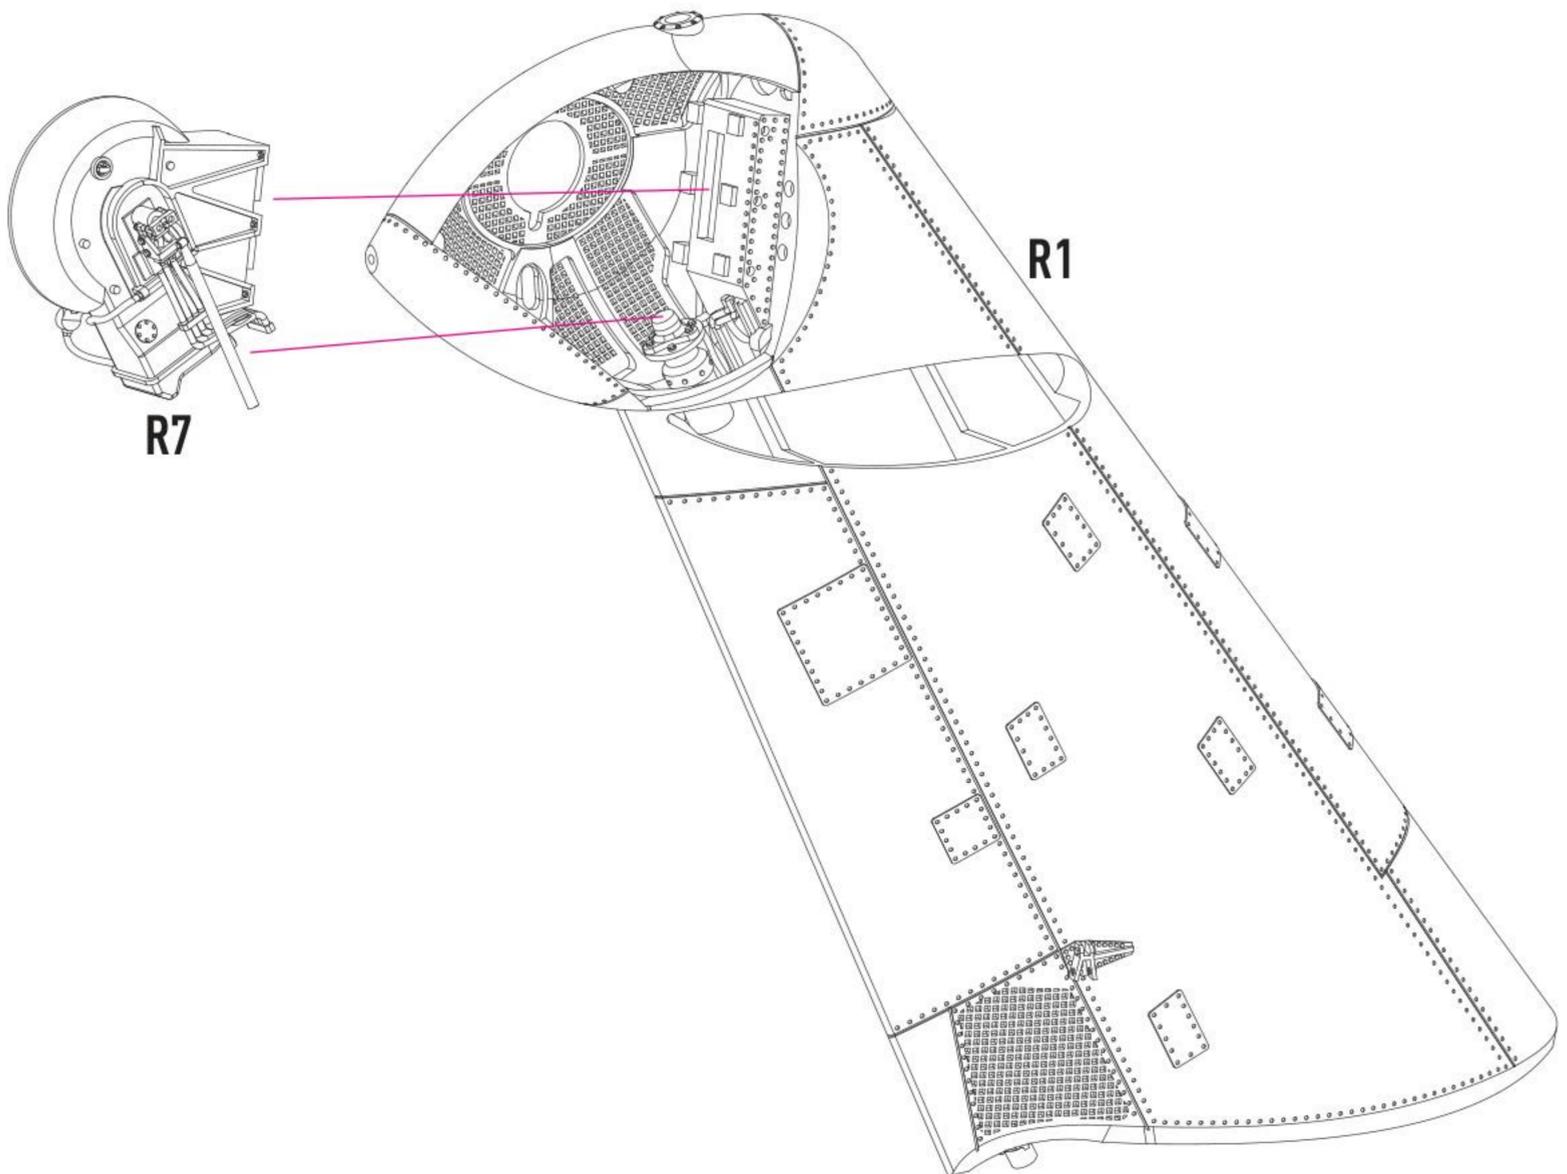


2

G1

APPLY GLOSS VARNISH TO ALL TRANSPARENT PARTS G BEFORE INSTALLATION


G2

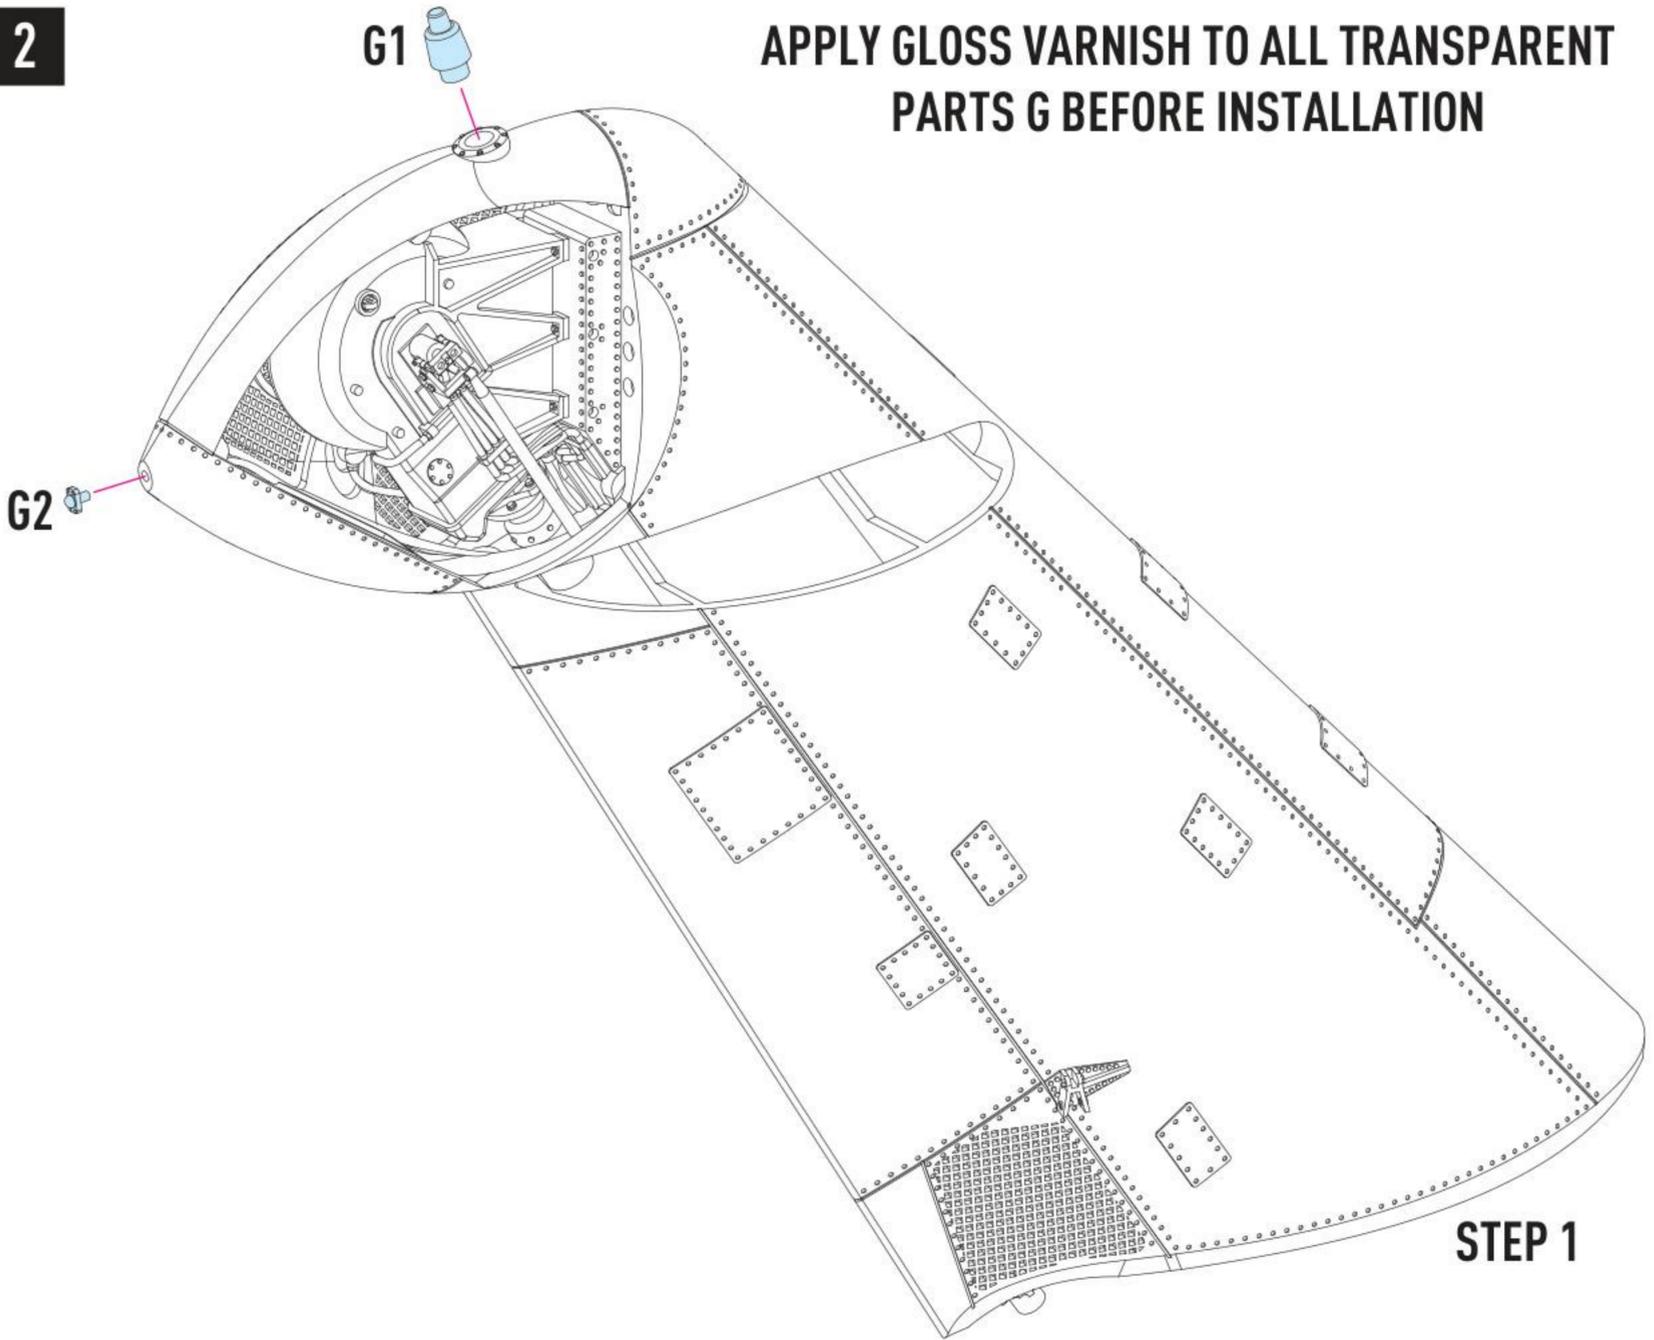

STEP 1

3


R12

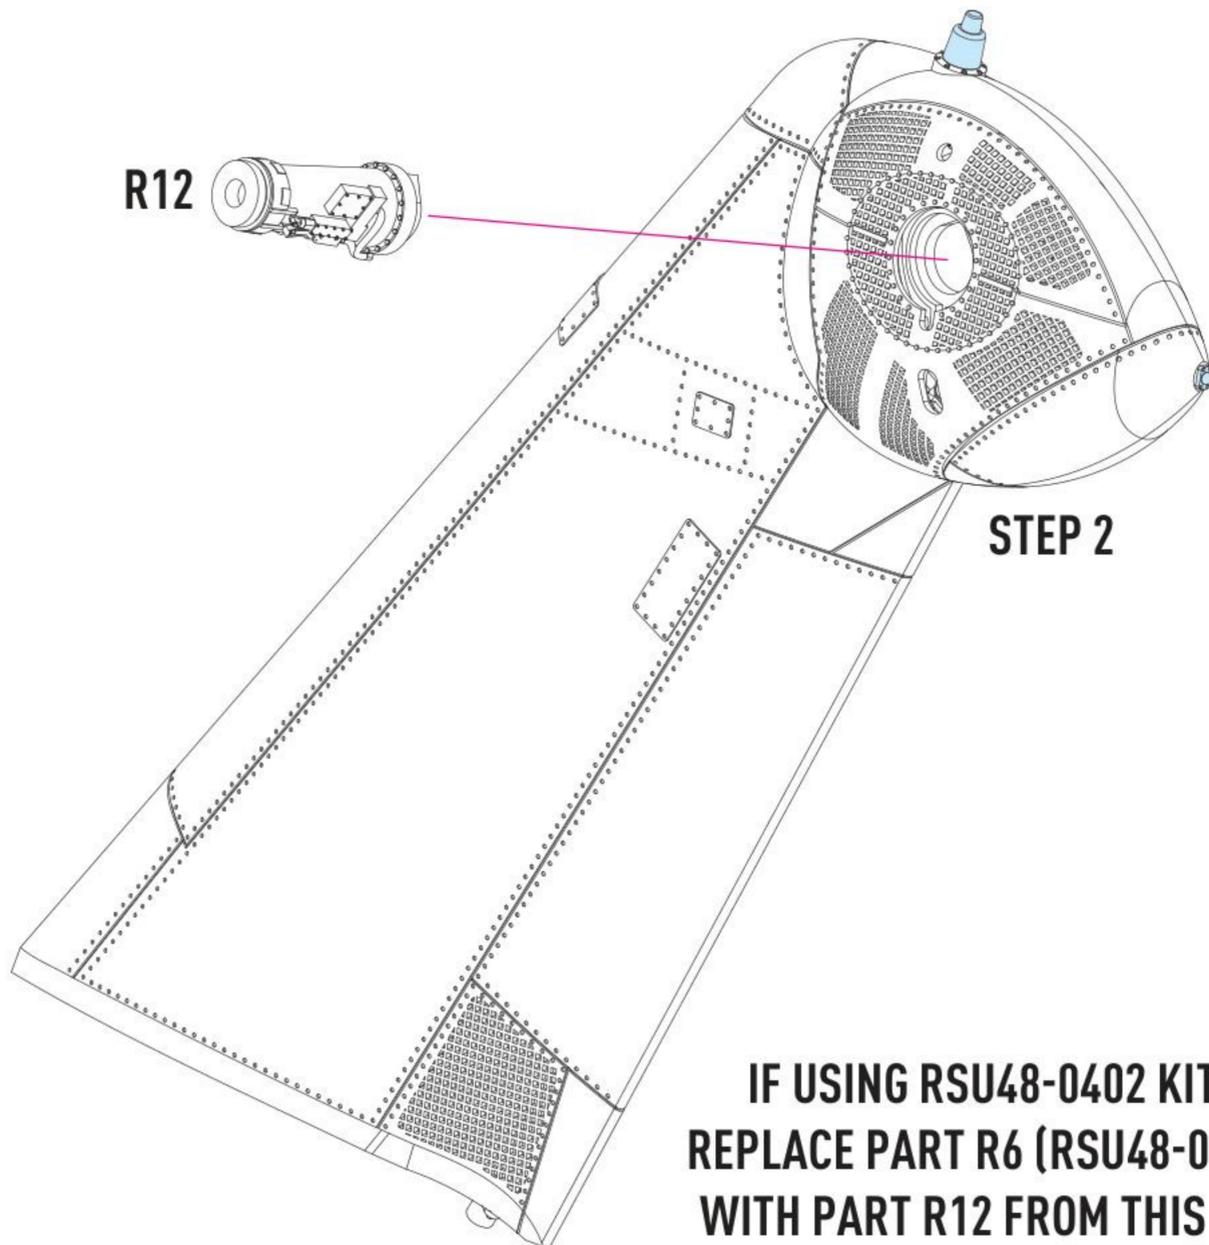


STEP 2

IF USING RSU48-0402 KIT,
REPLACE PART R6 (RSU48-0402)
WITH PART R12 FROM THIS KIT


4

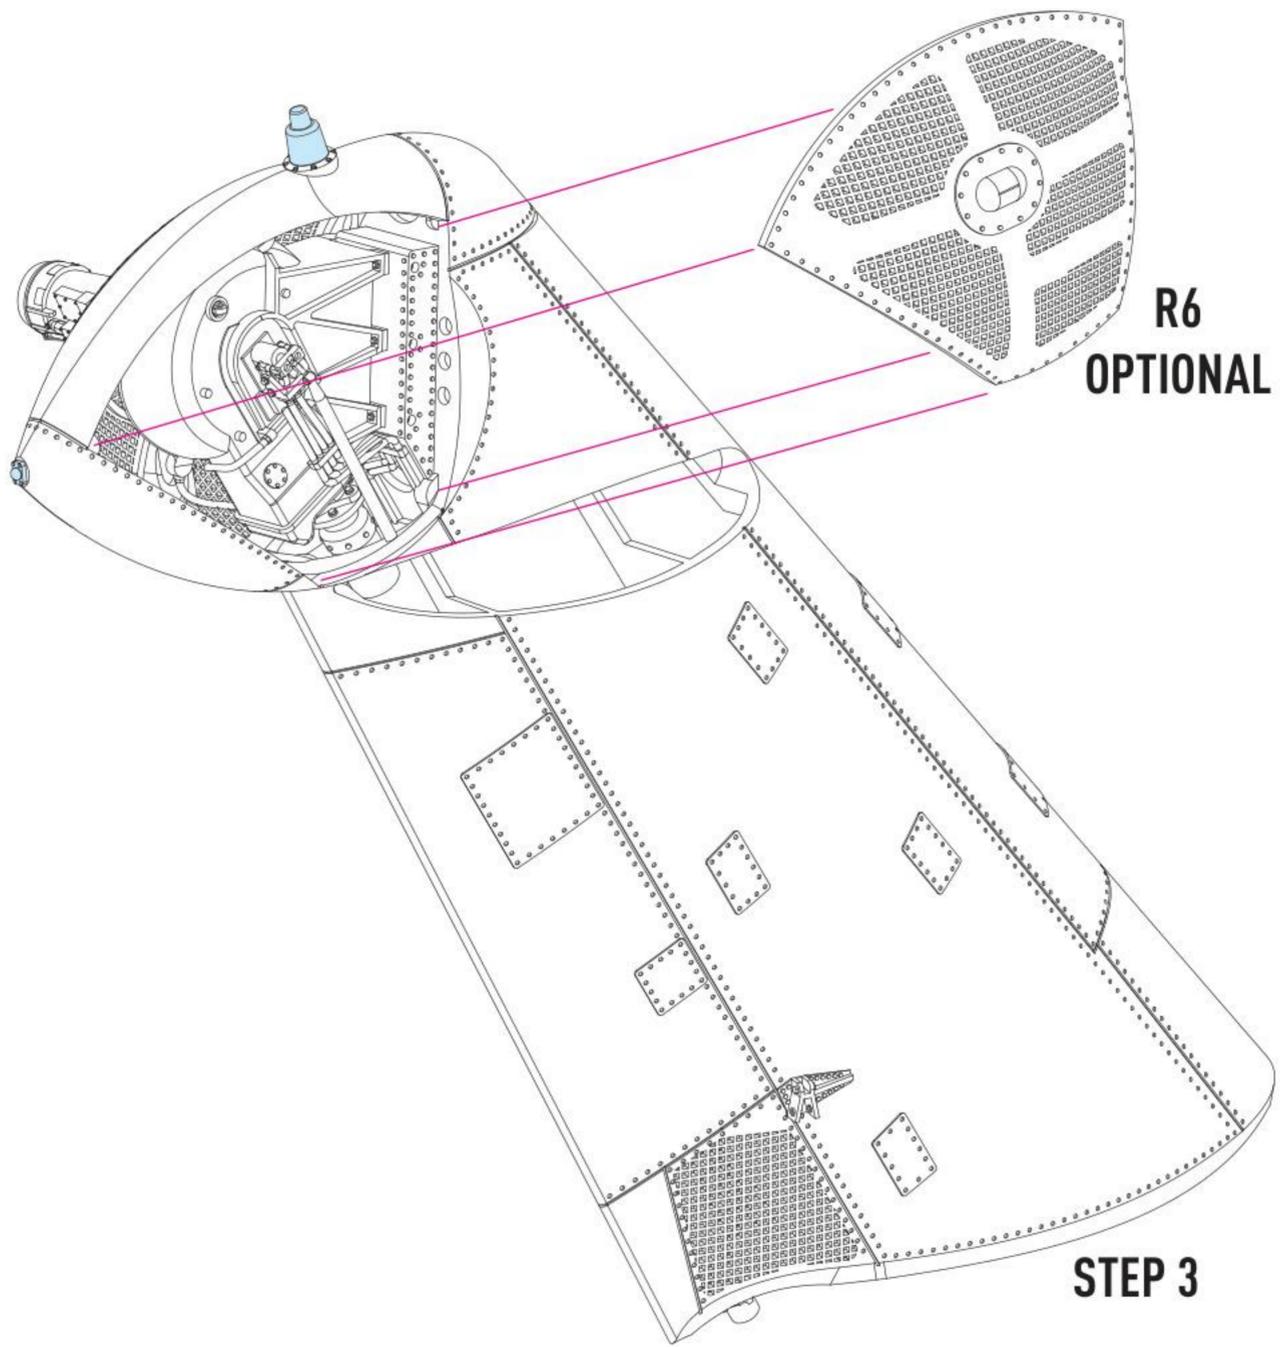


5


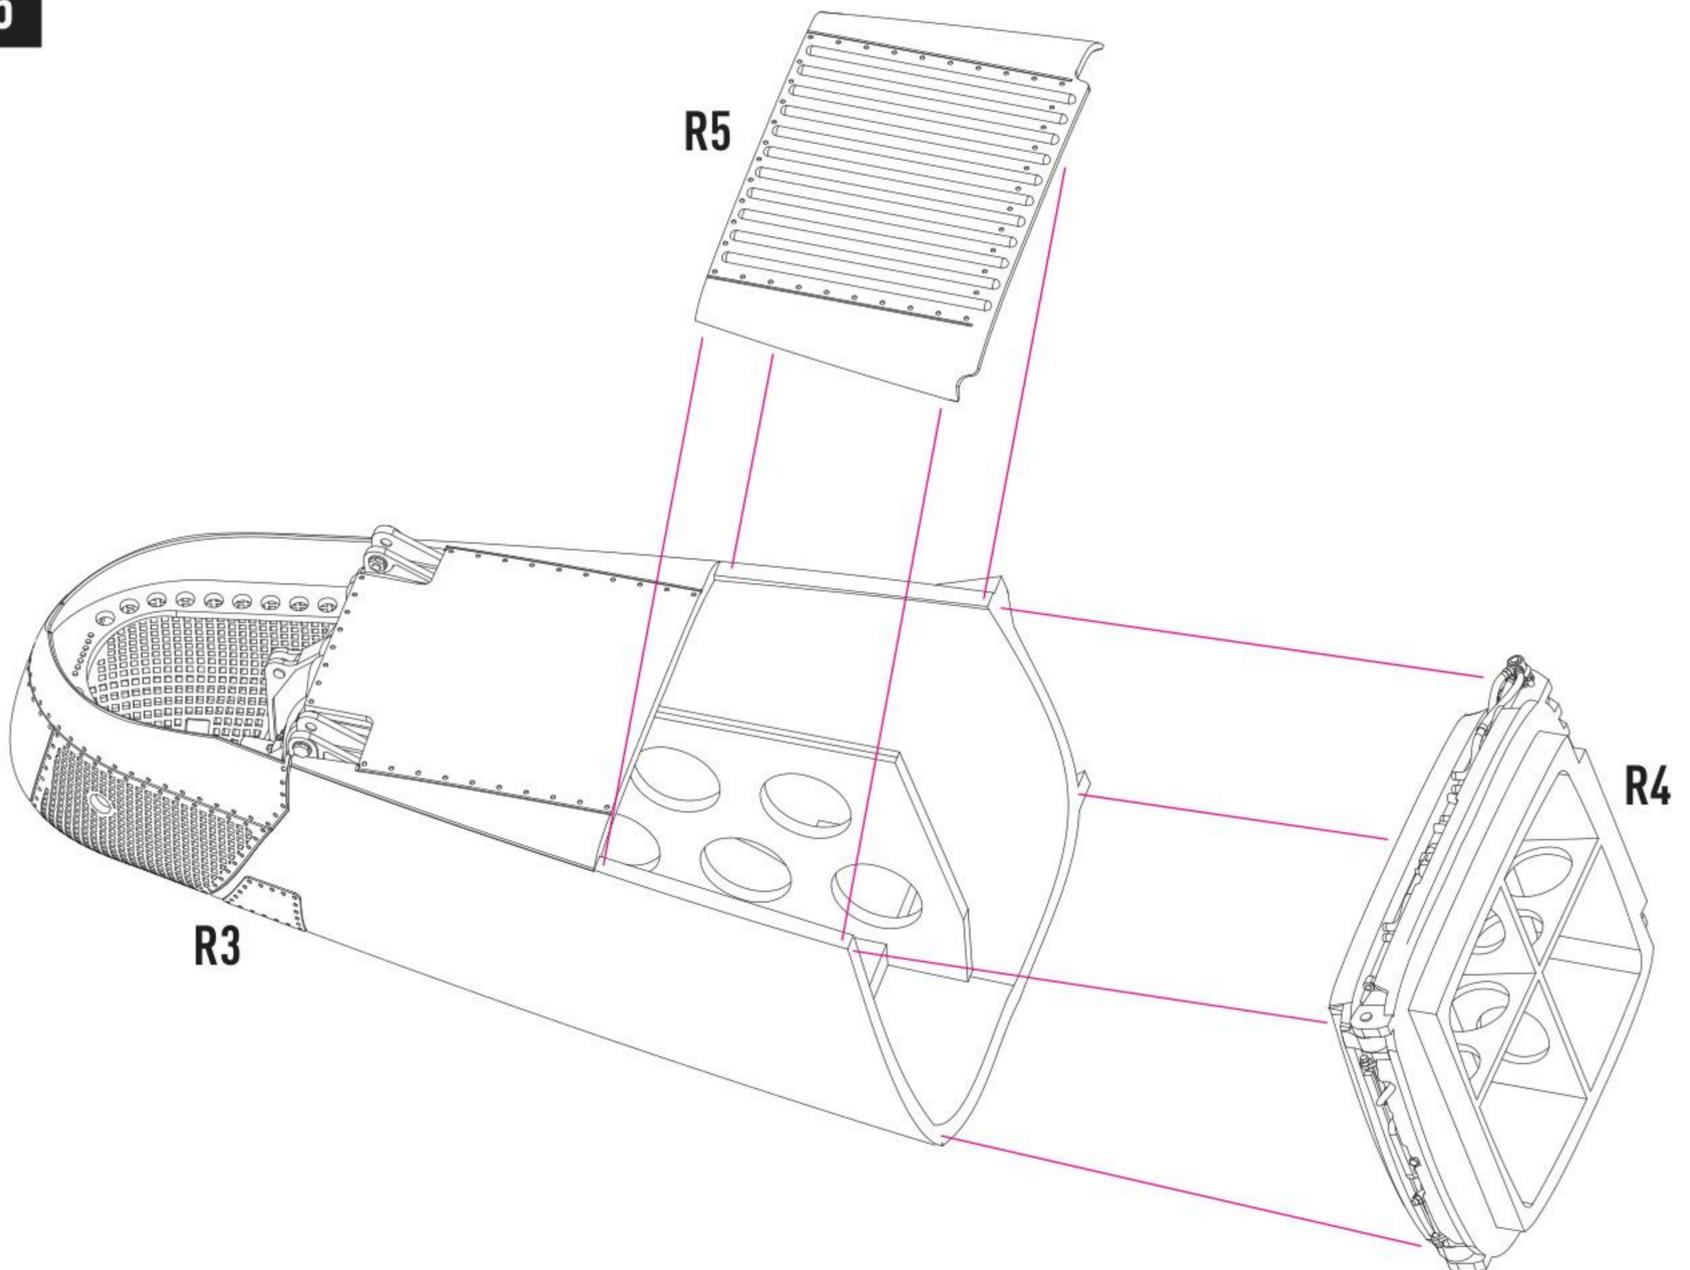



6

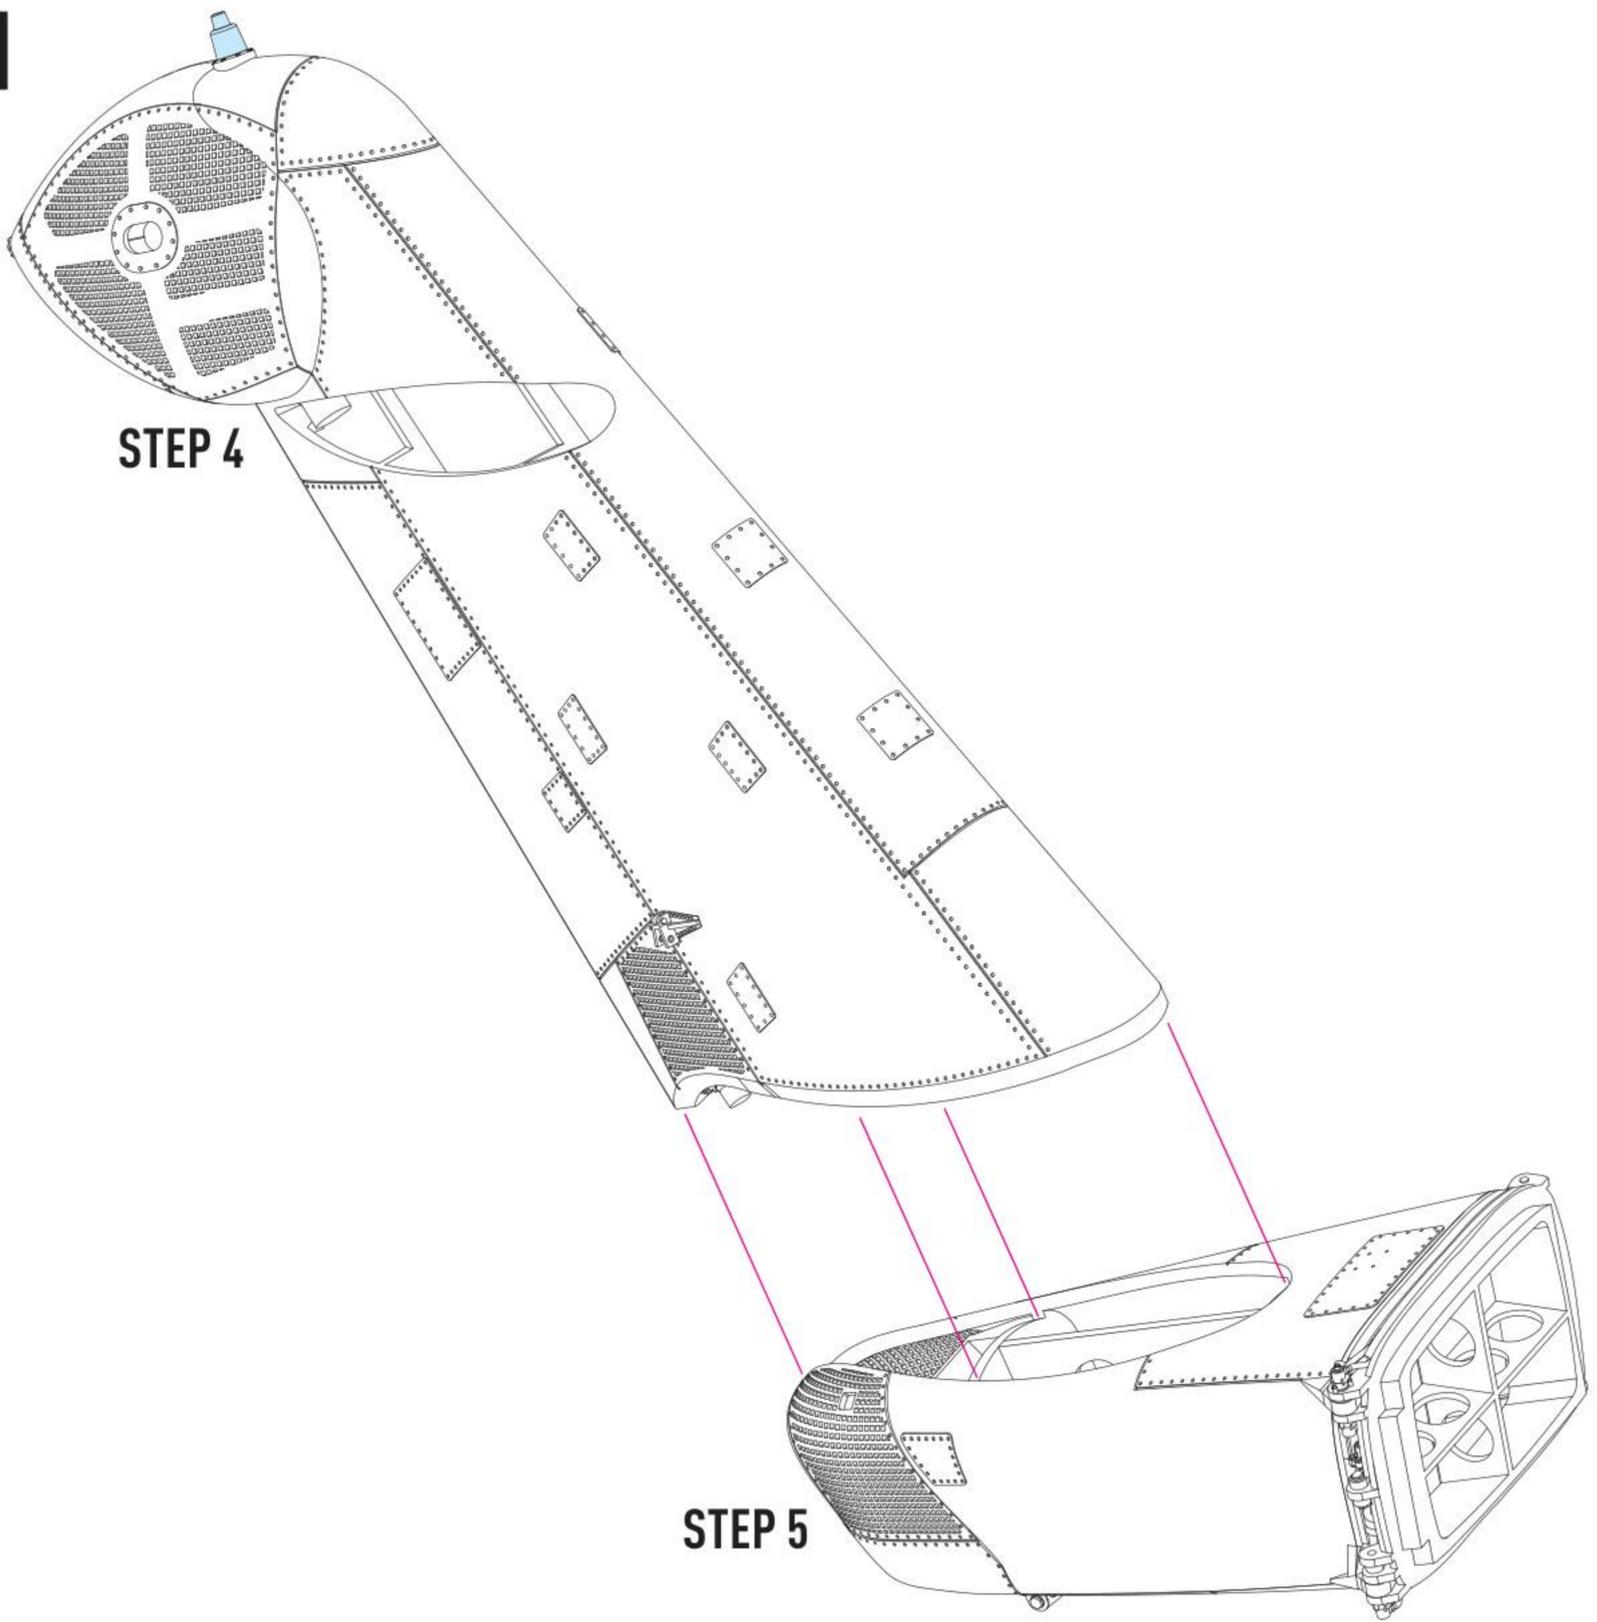


7

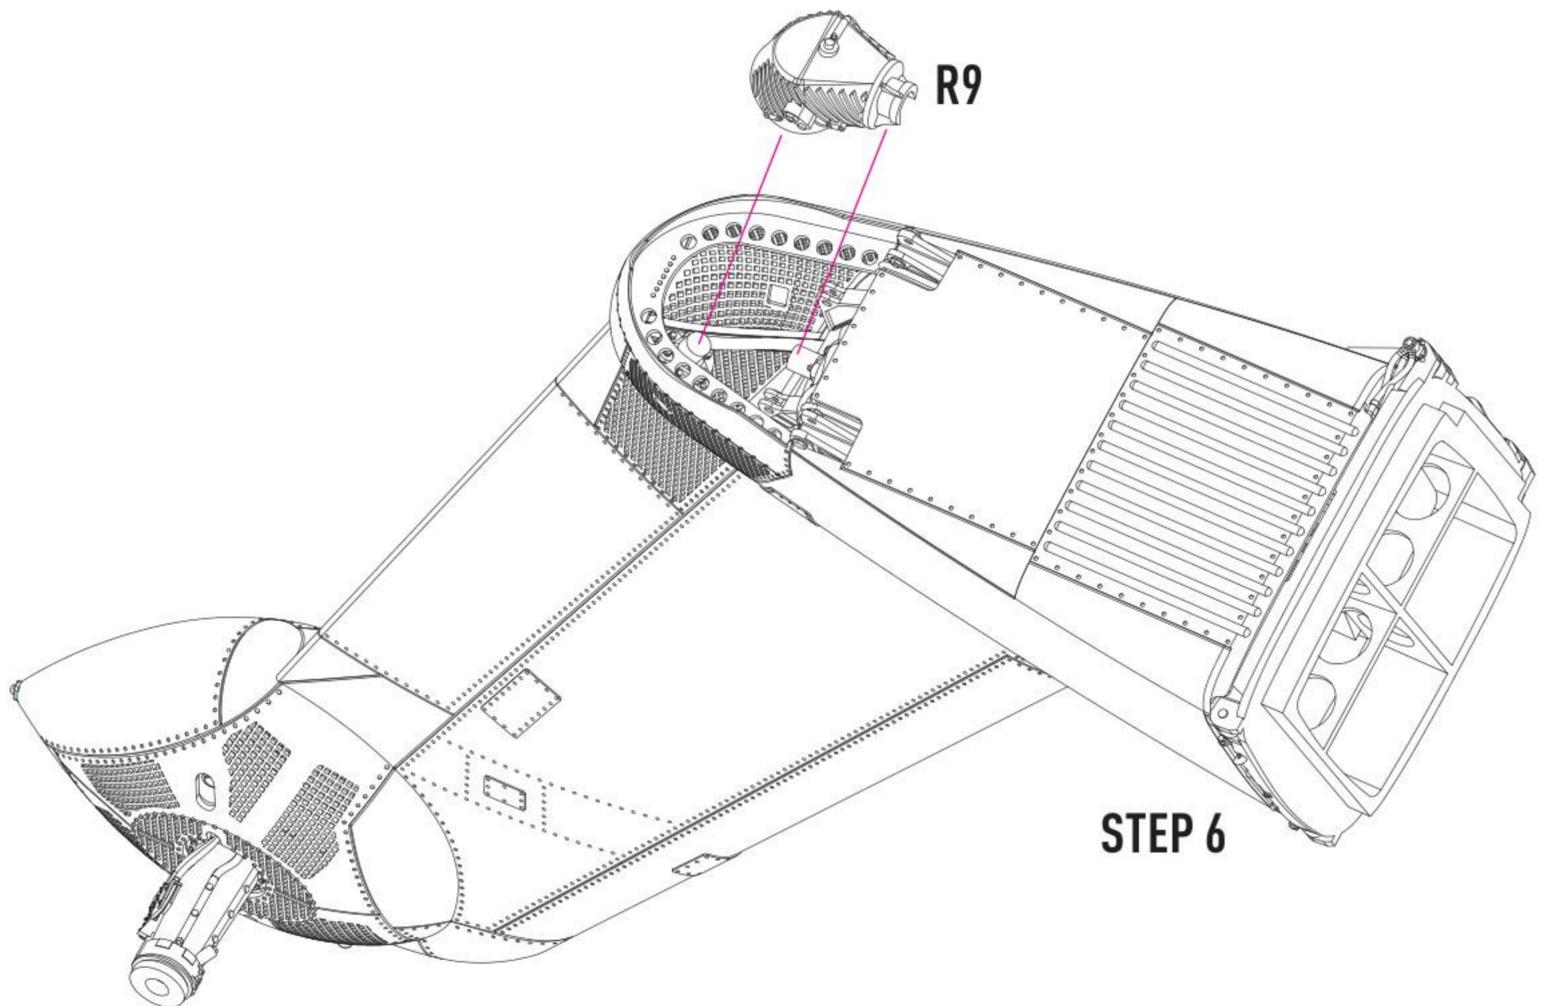


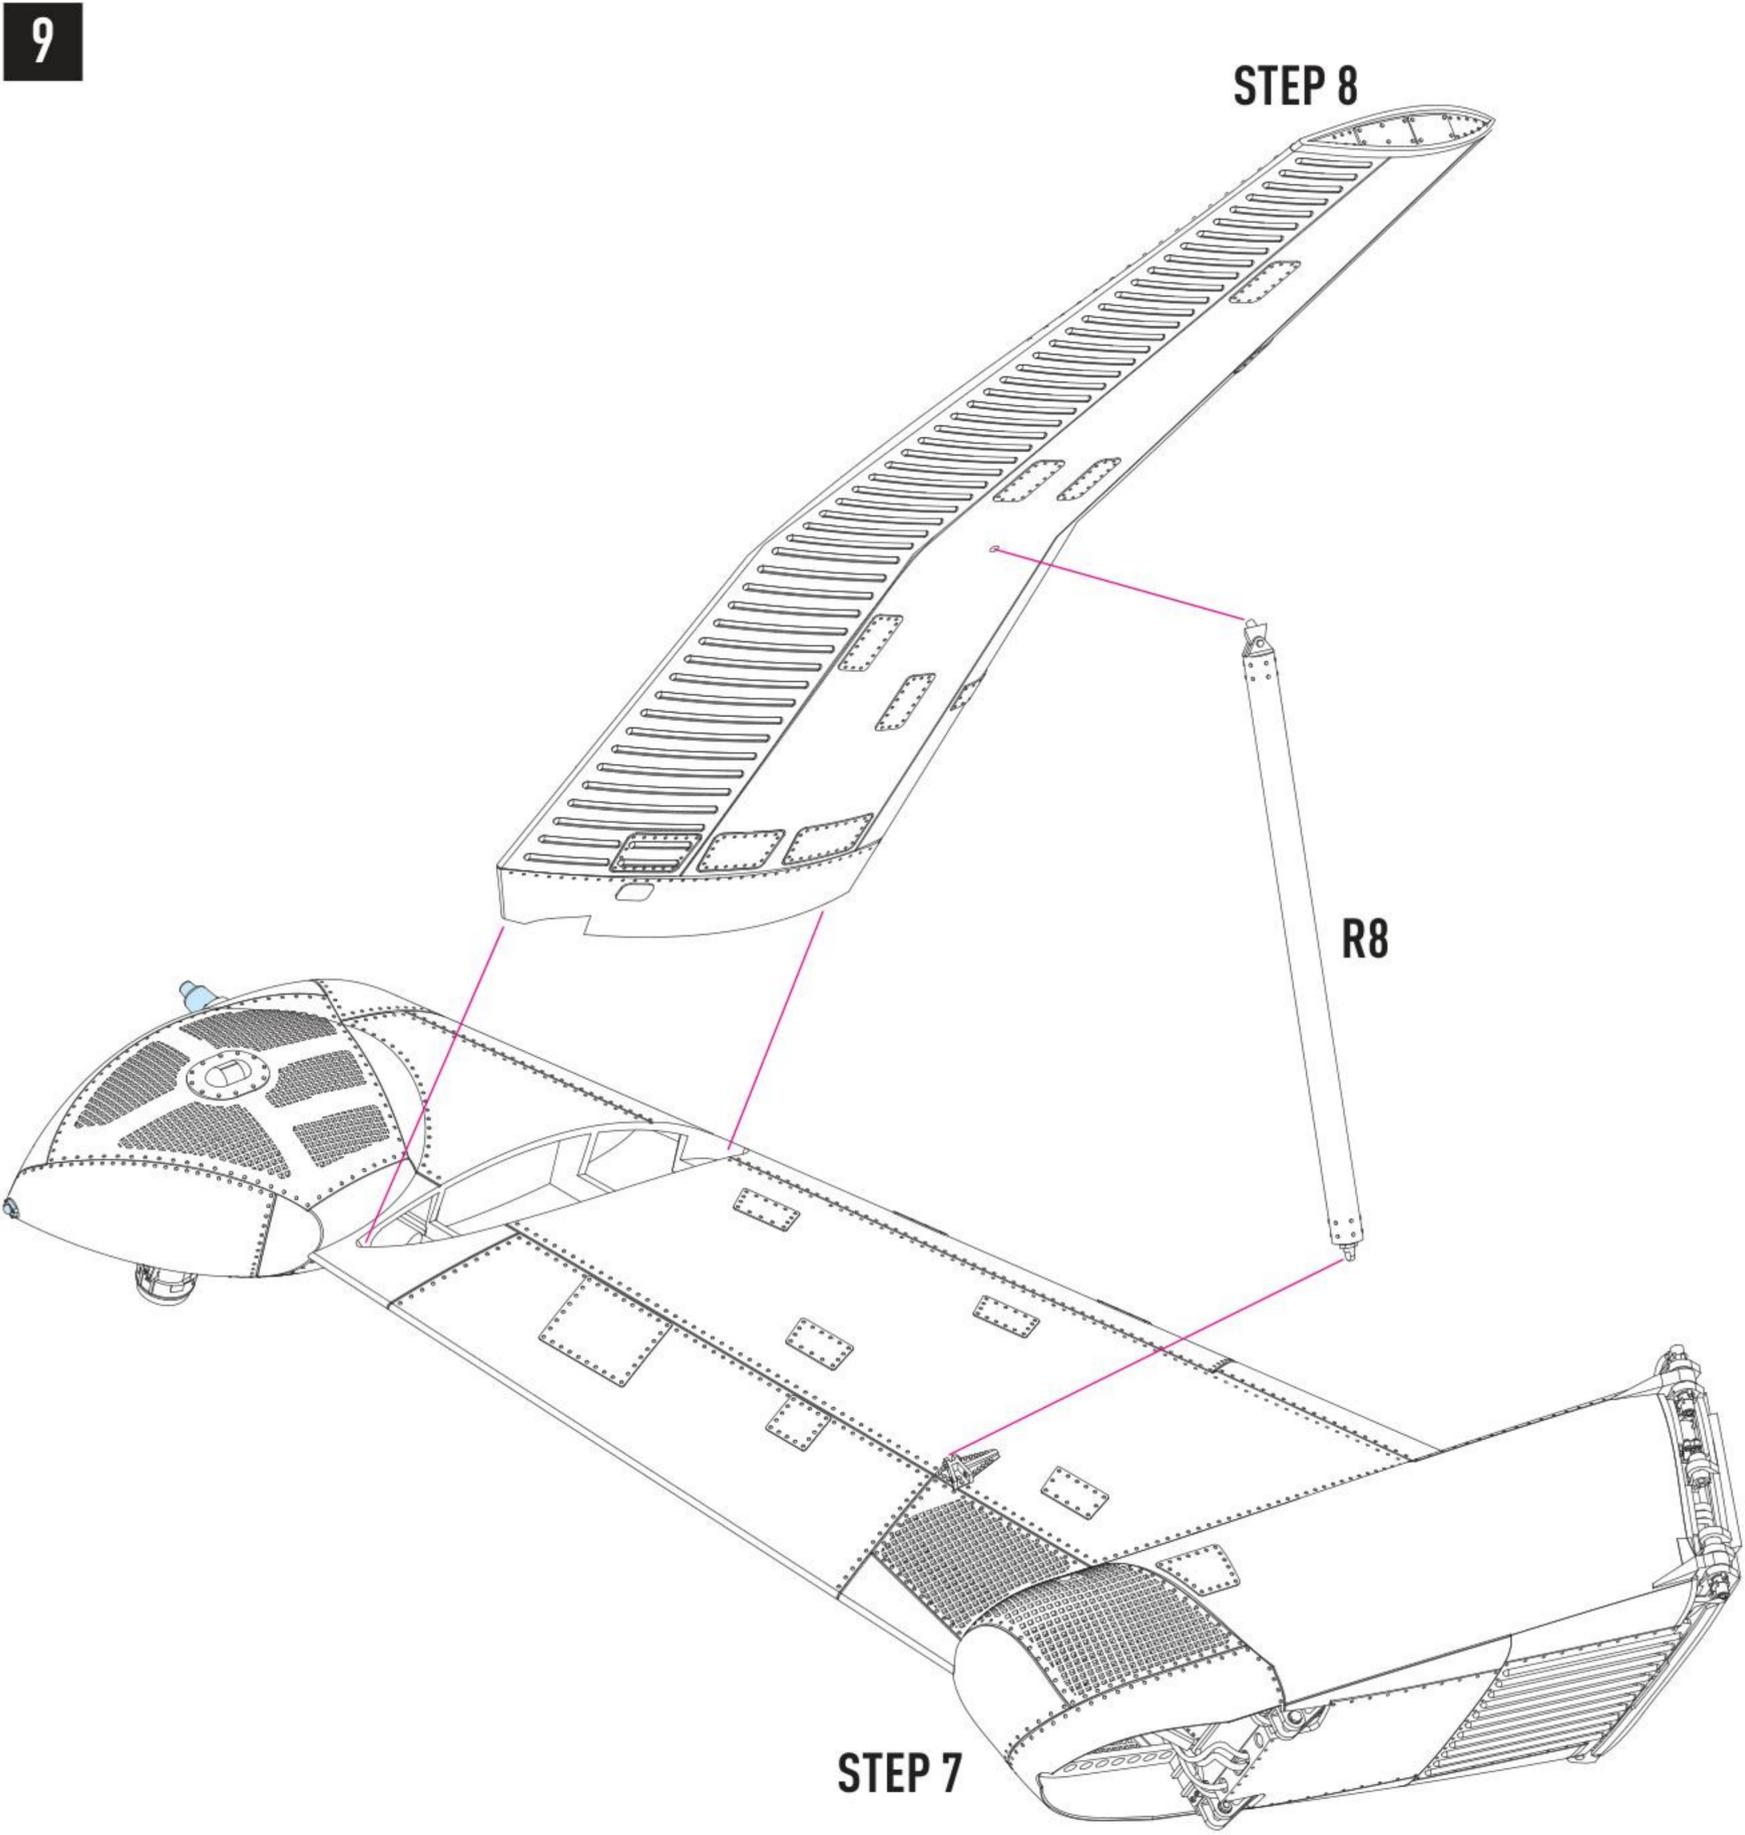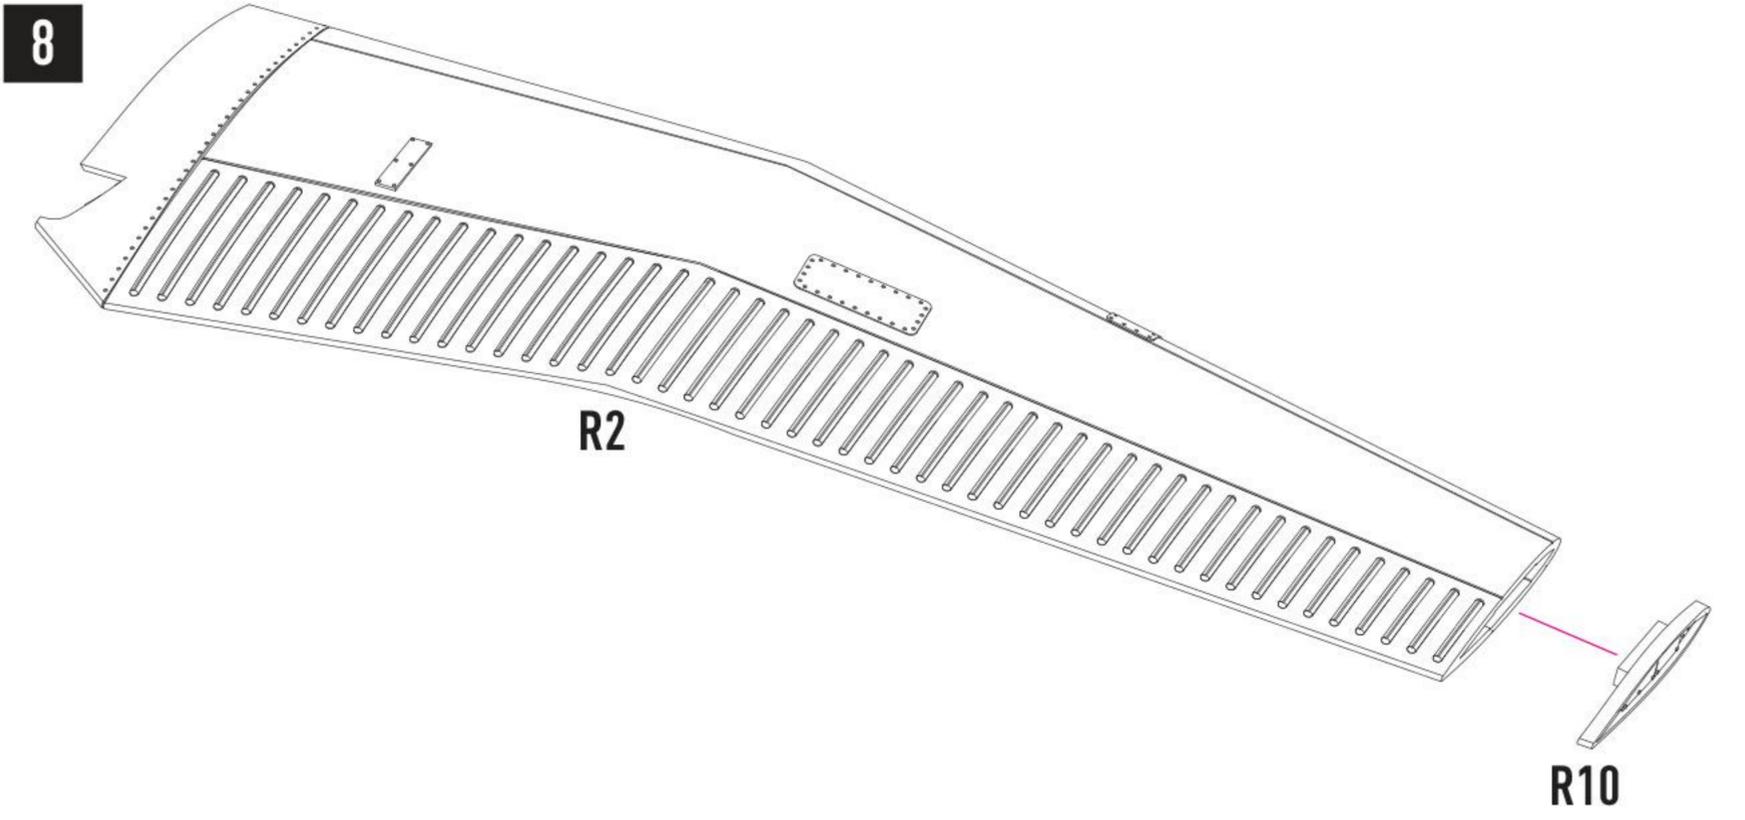

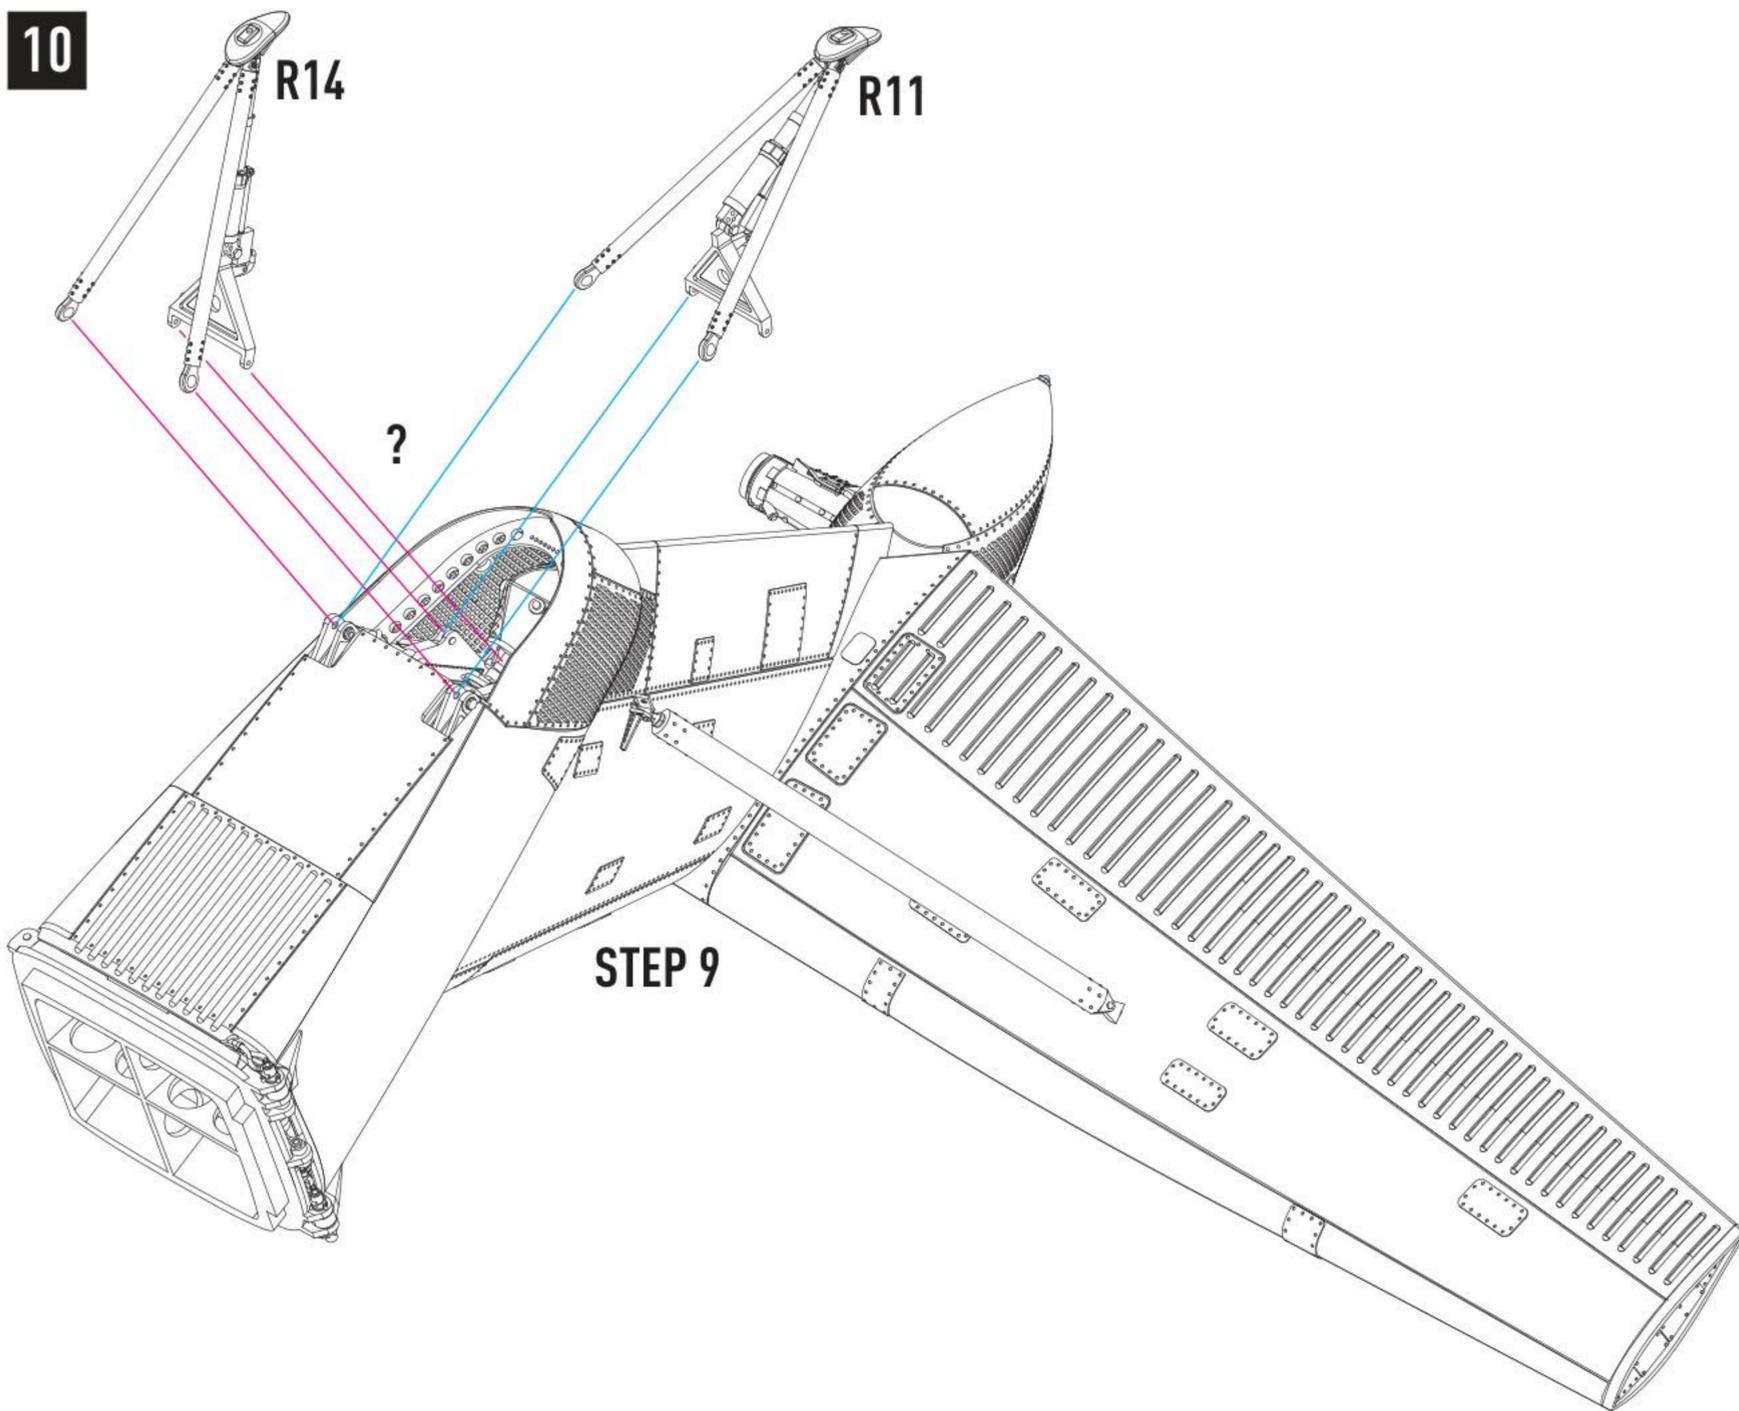

11 RIGHT SIDE OF FUSELAGE

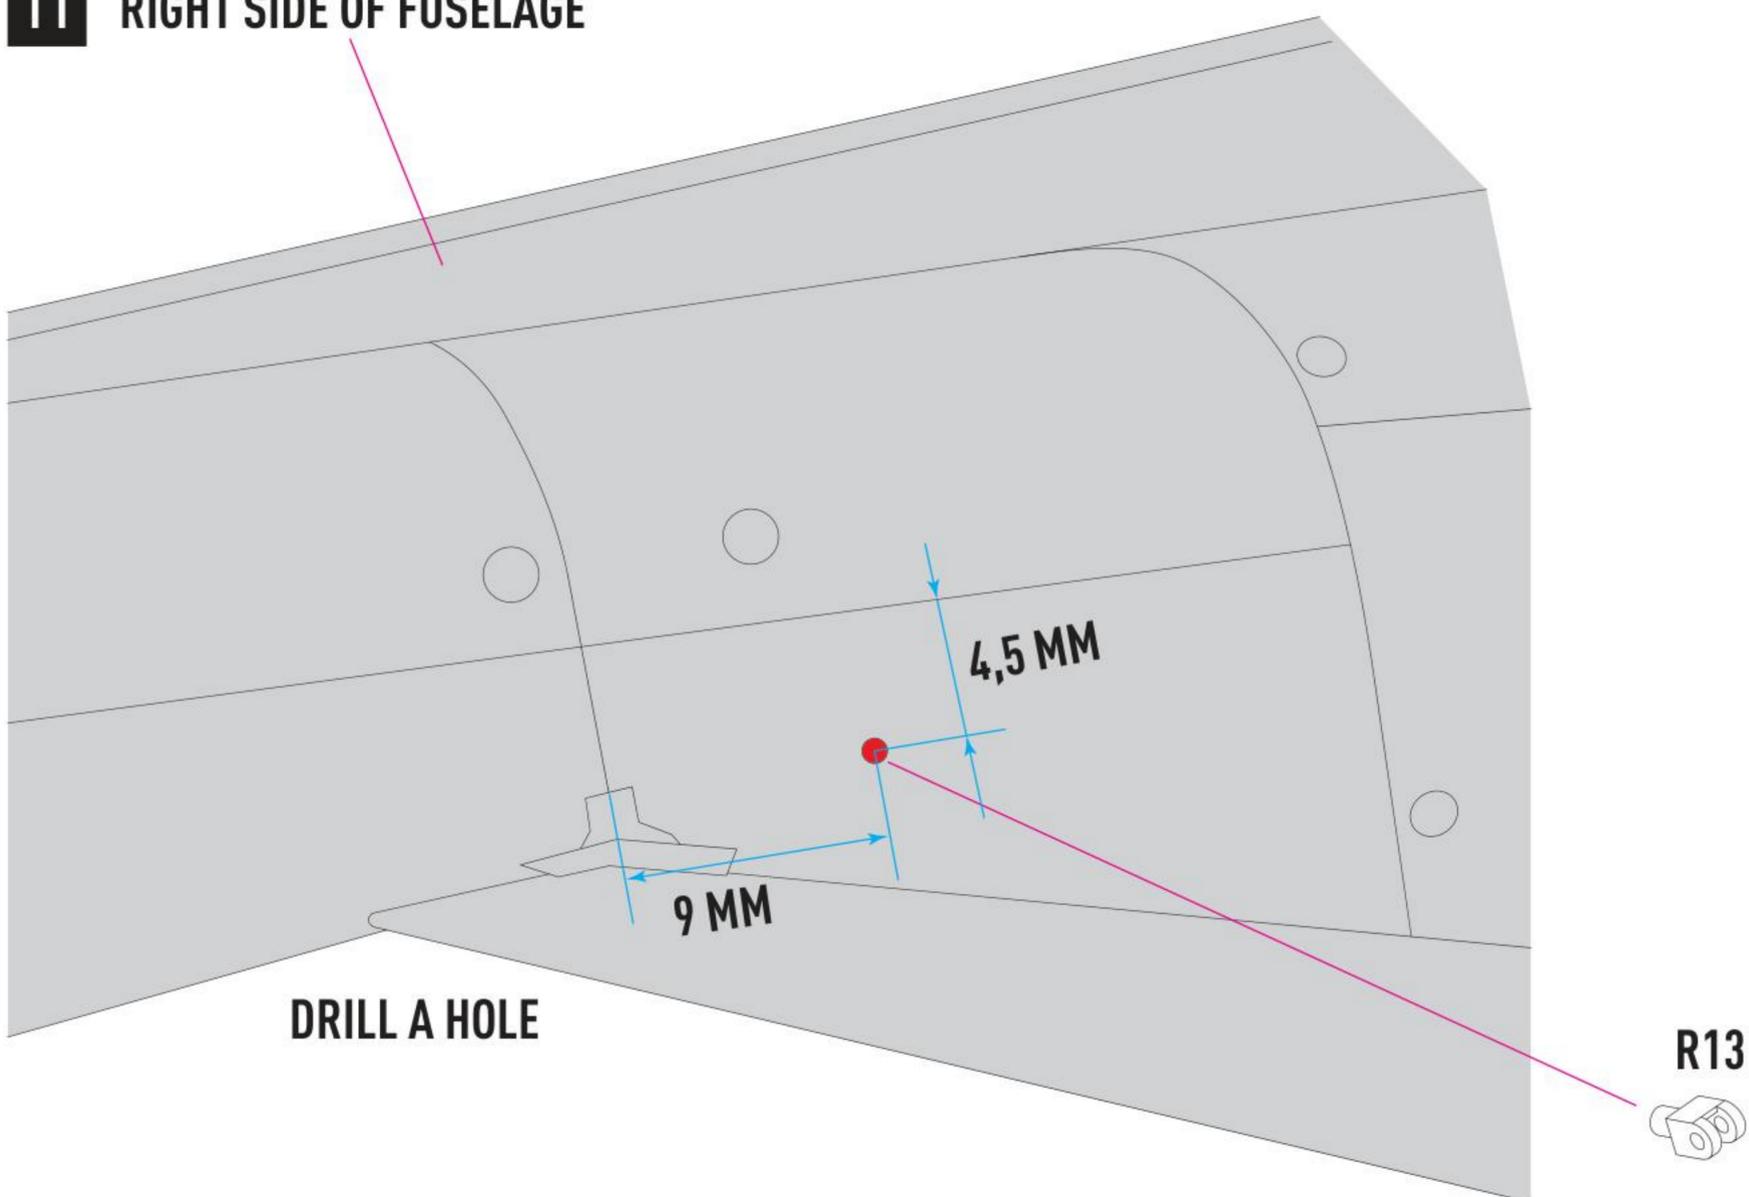

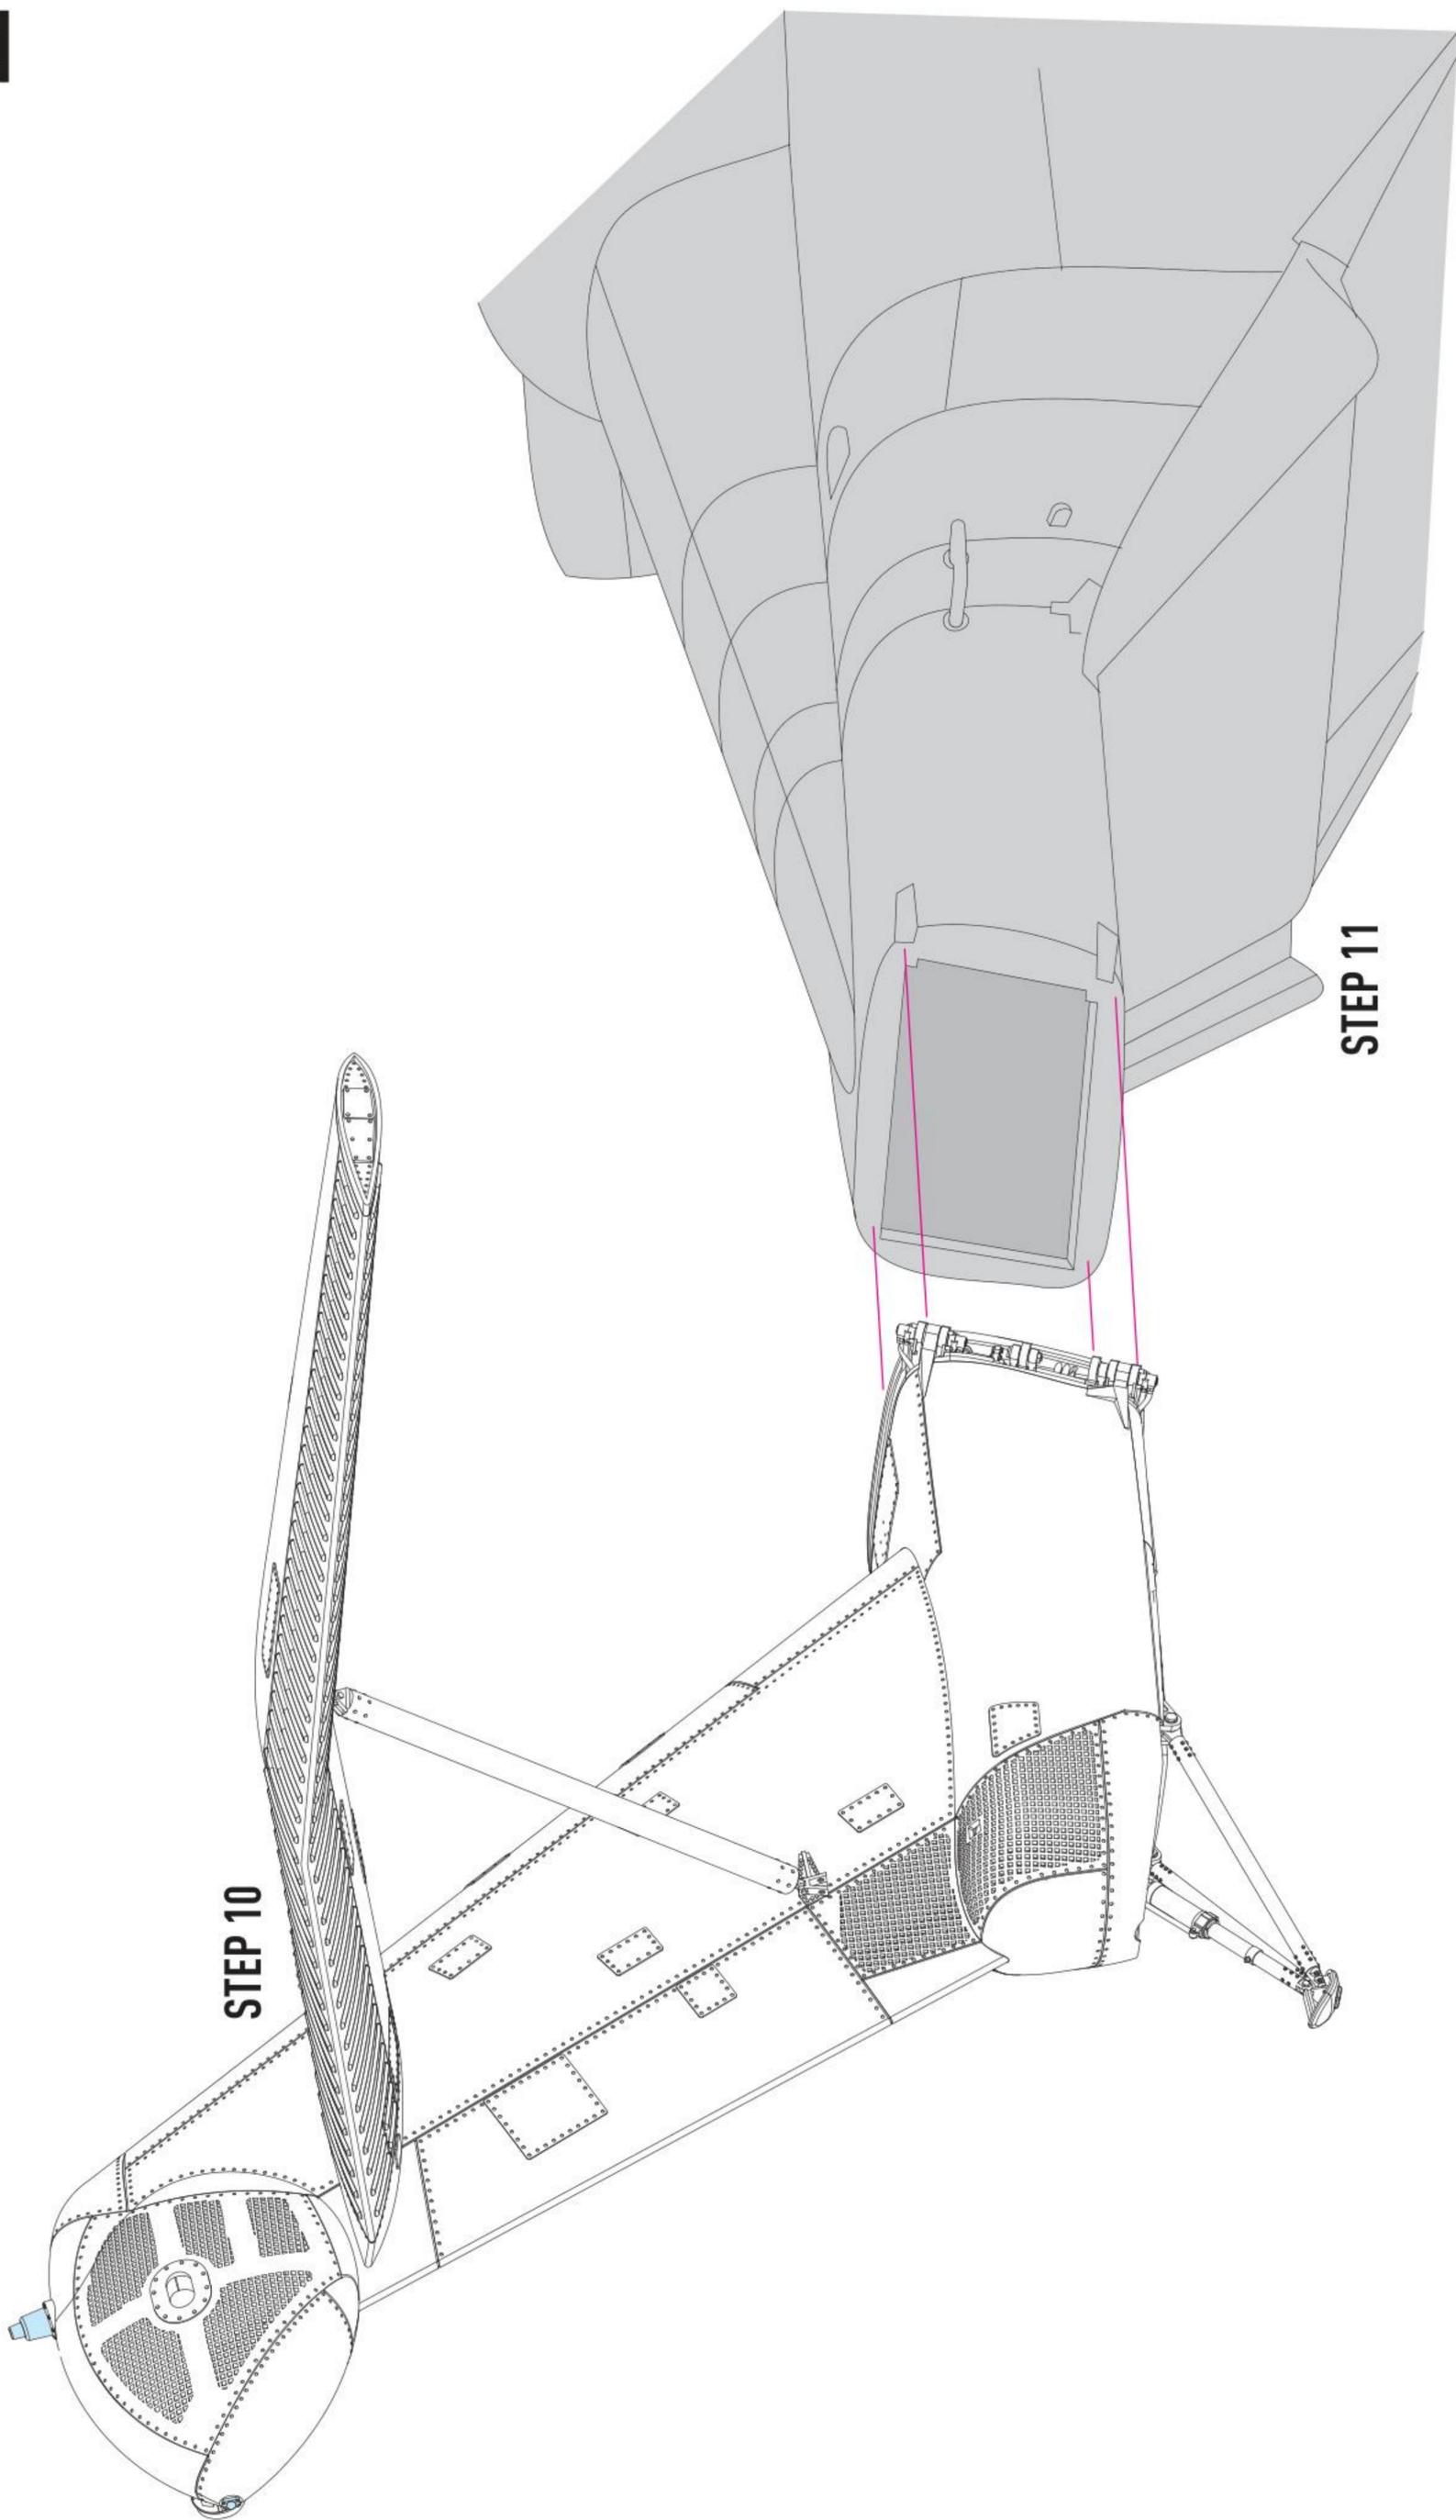

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua