



### DETAILS AFTER REMOVAL FROM SUPPORTS

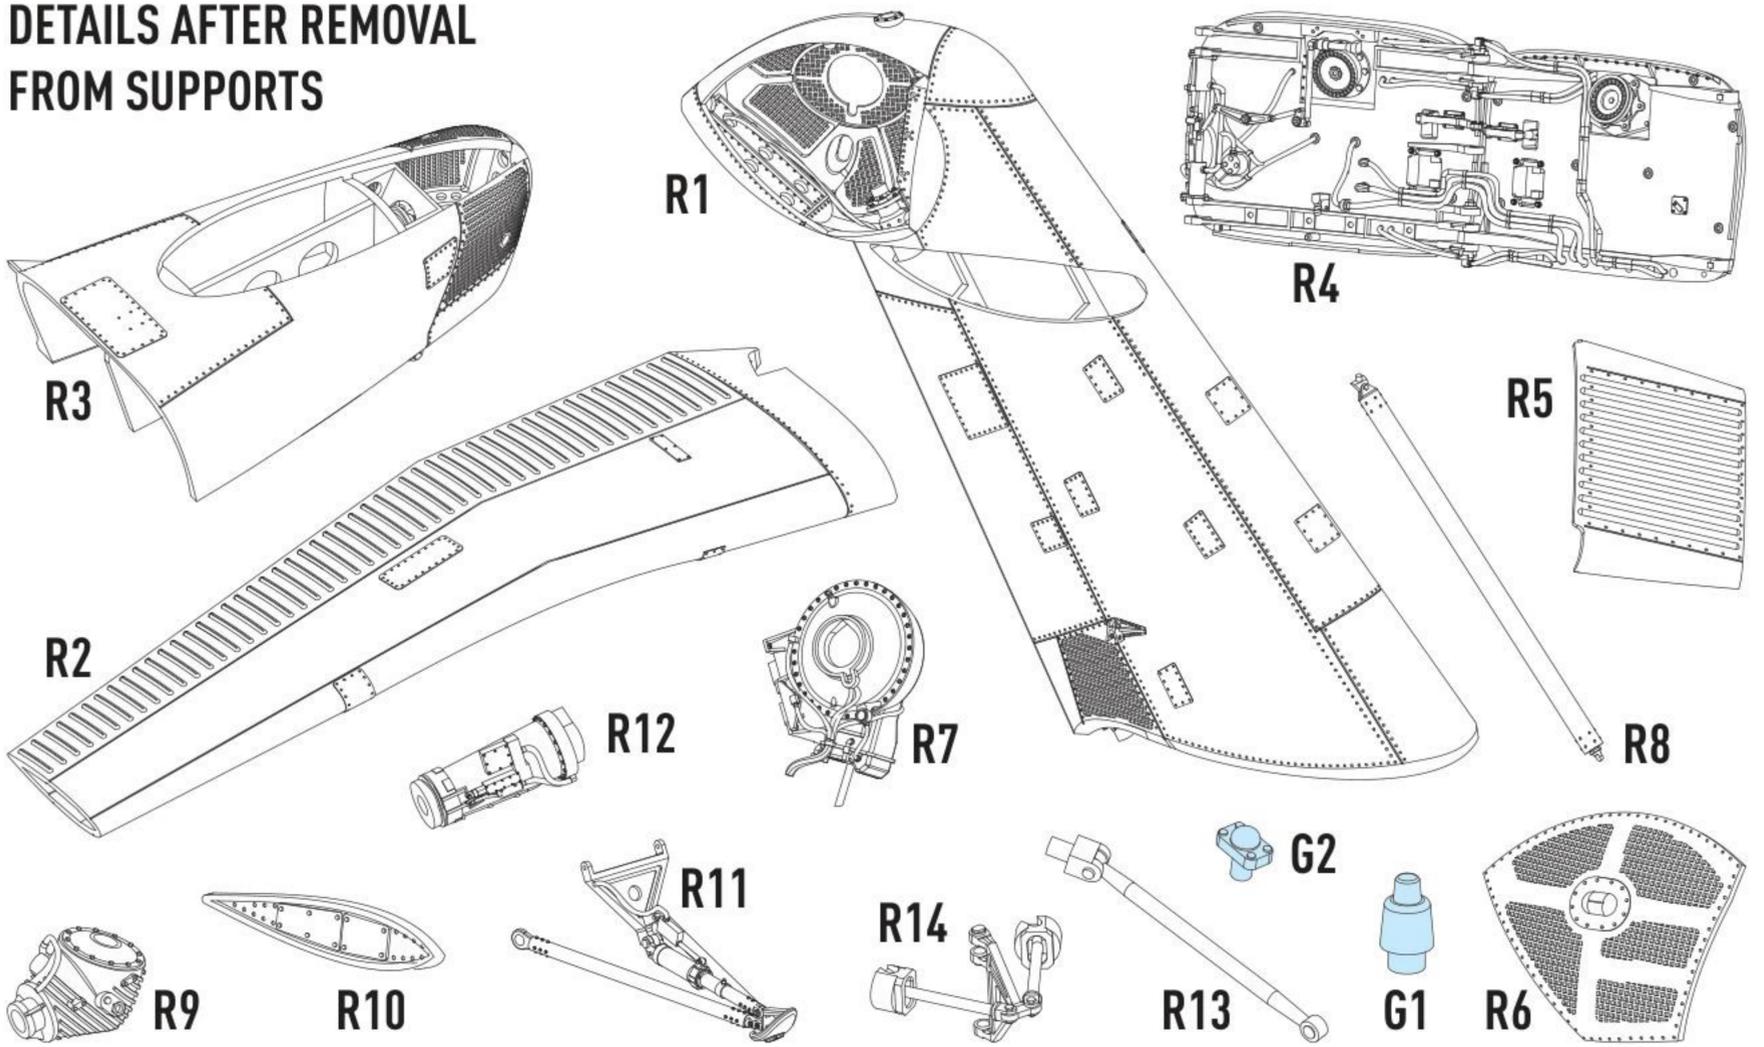

### 1

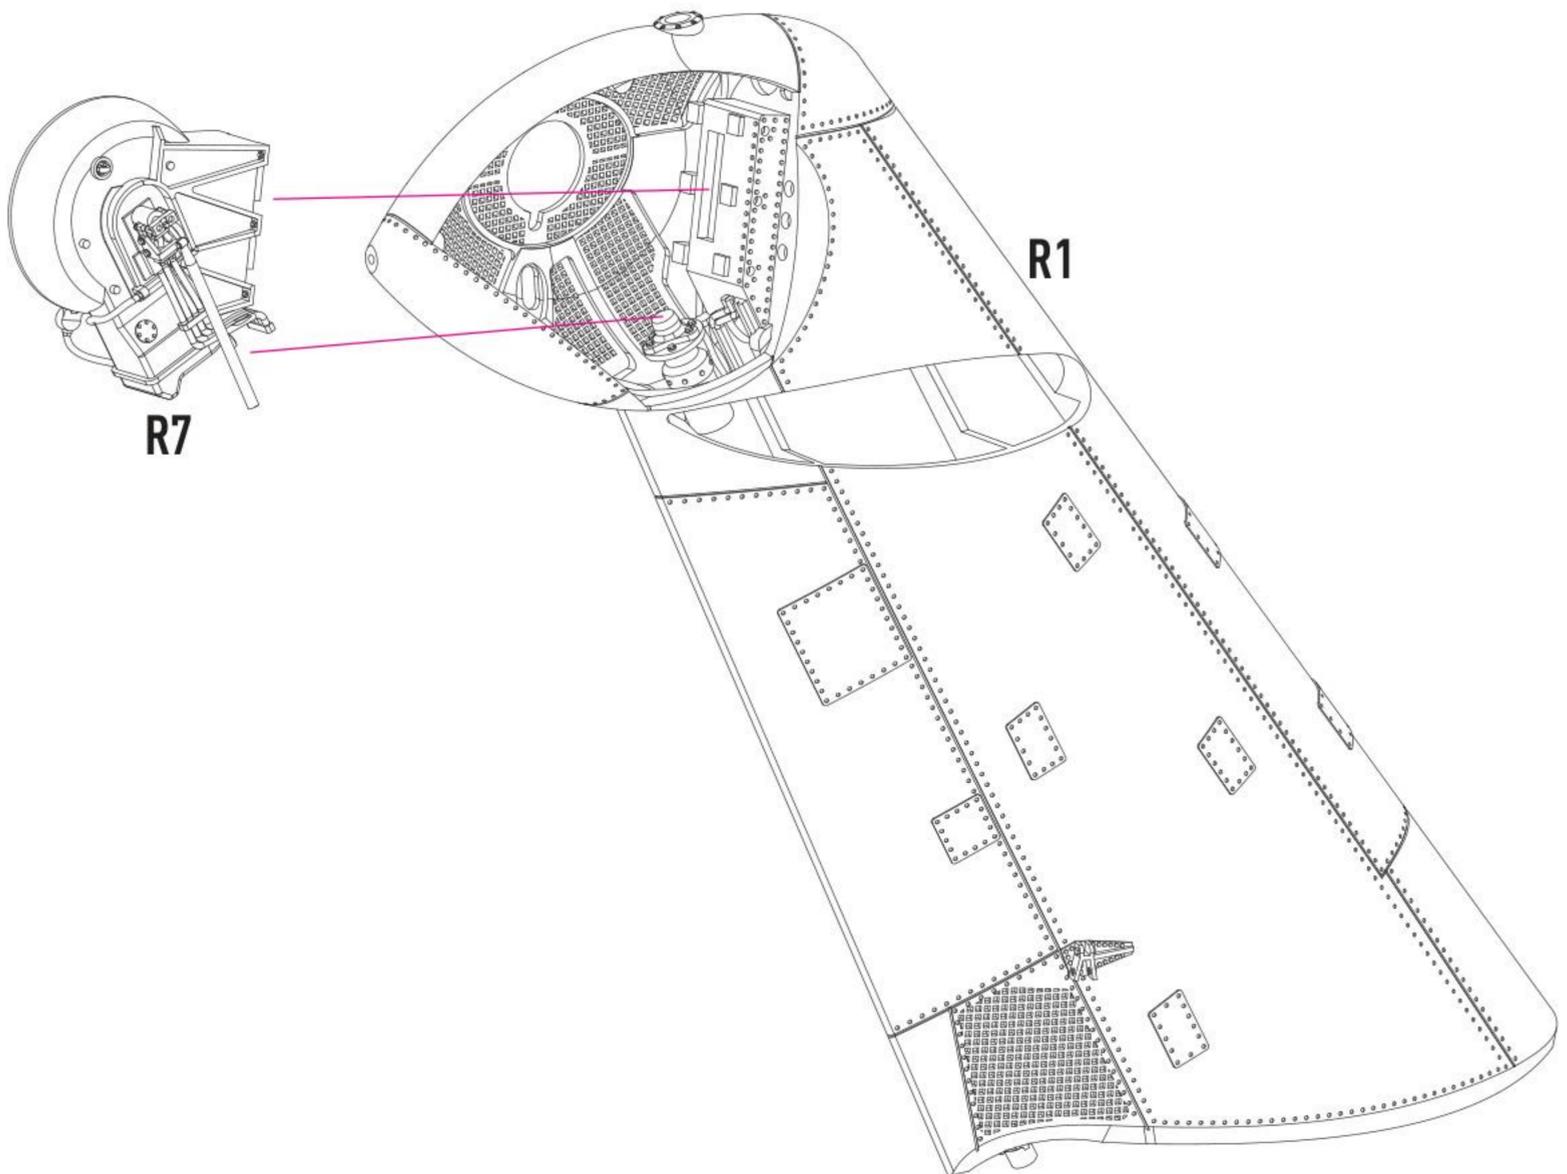


2

G1

APPLY GLOSS VARNISH TO ALL TRANSPARENT PARTS G BEFORE INSTALLATION


G2

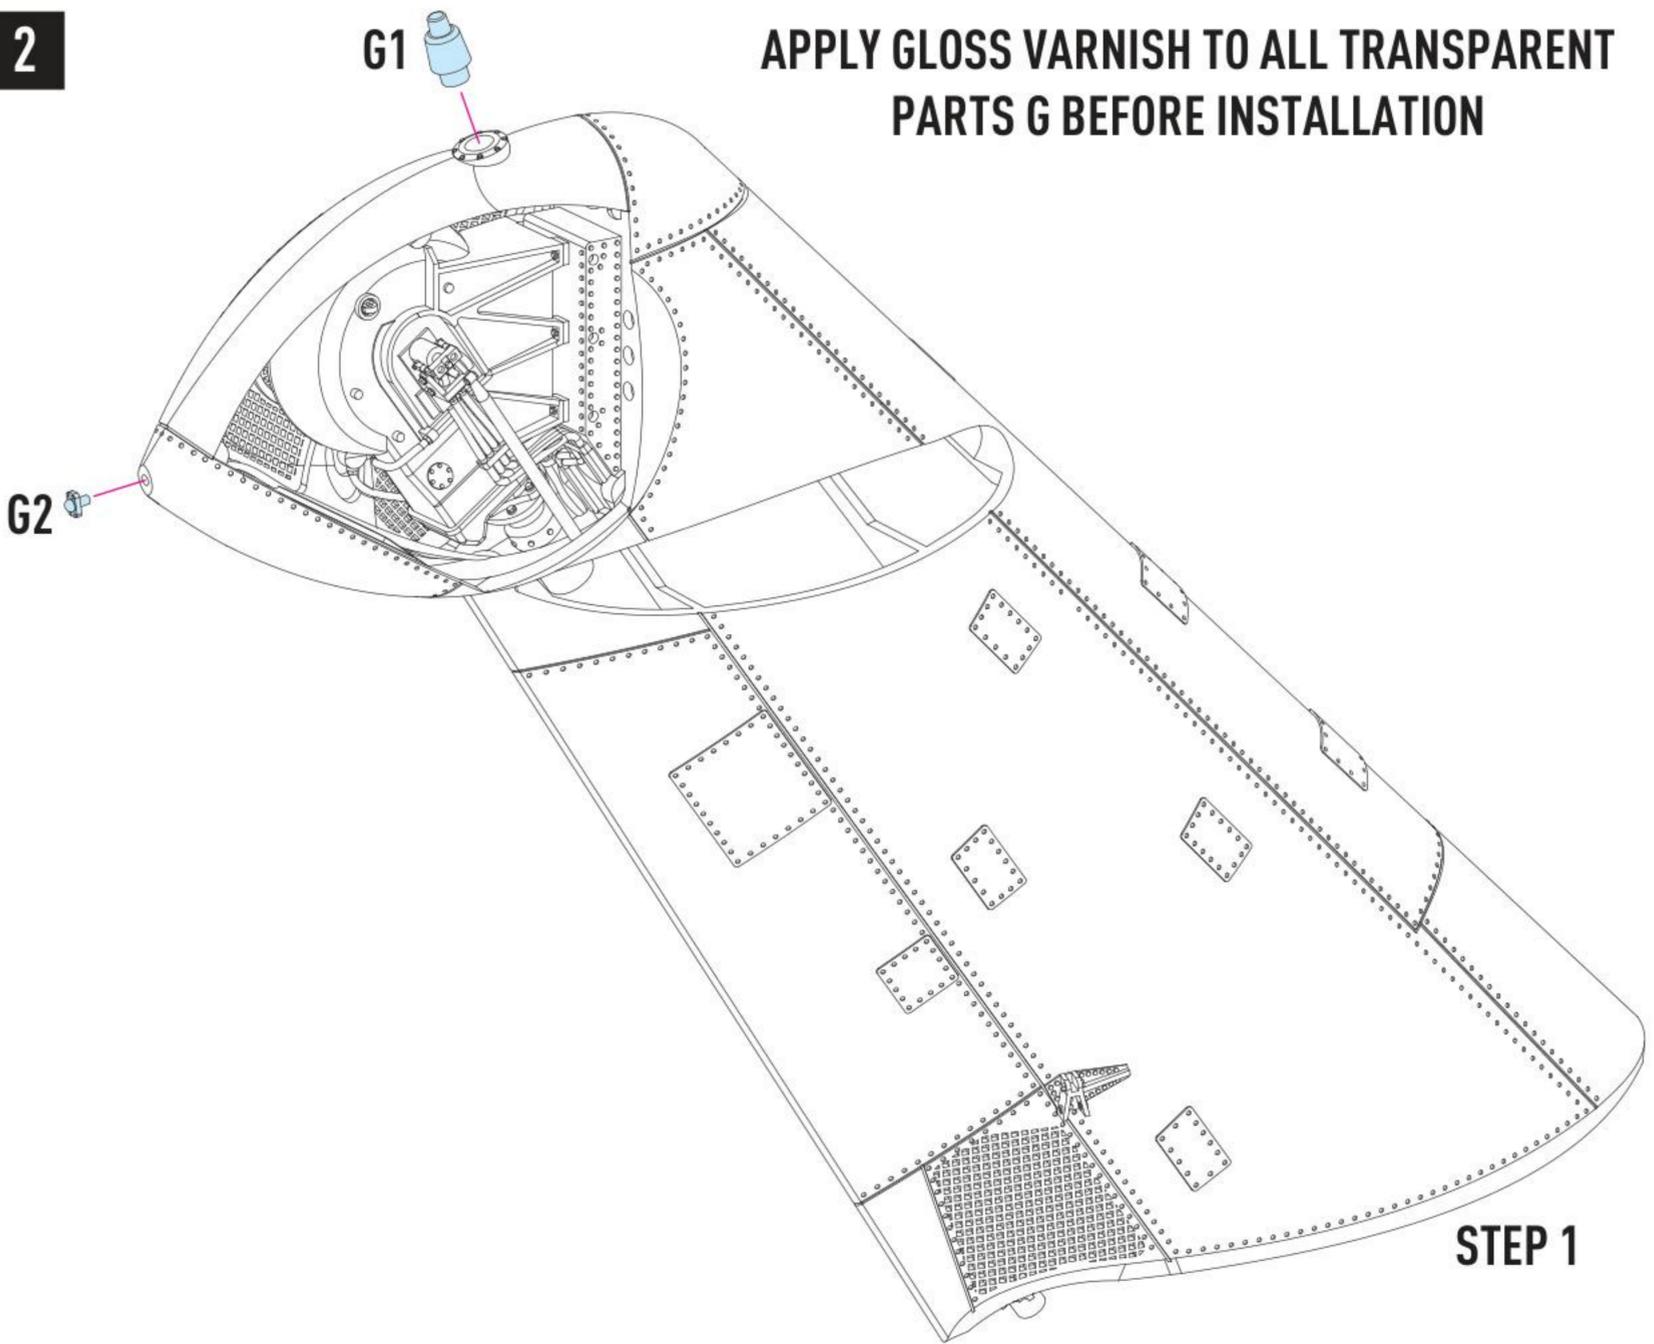

STEP 1

3


R12

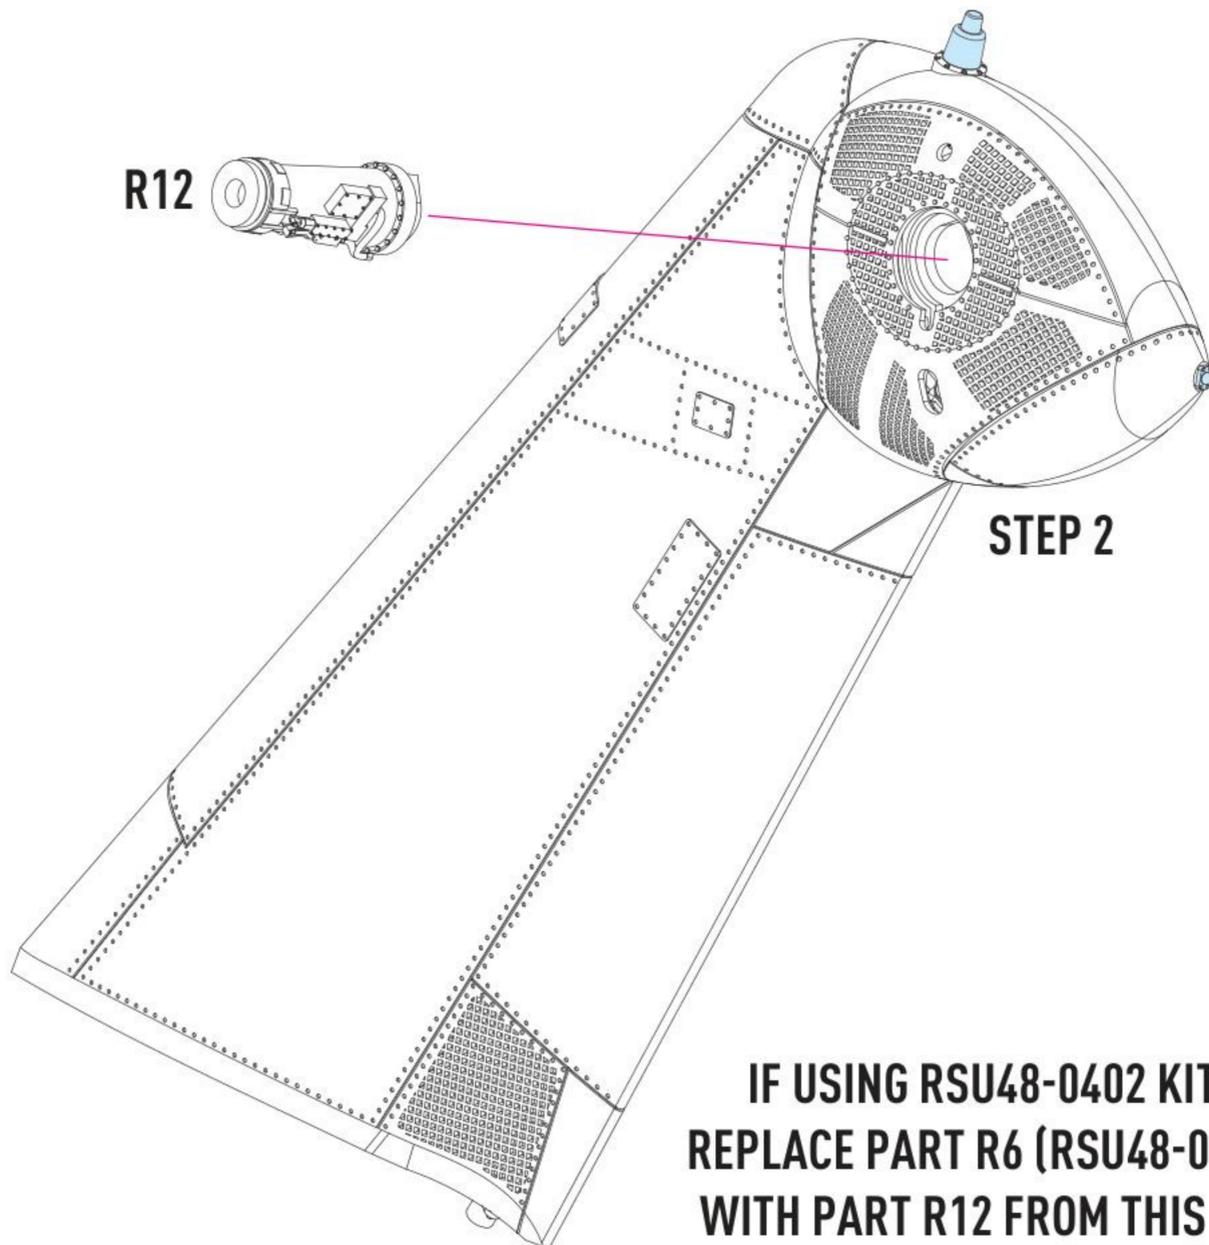


STEP 2

IF USING RSU48-0402 KIT,  
REPLACE PART R6 (RSU48-0402)  
WITH PART R12 FROM THIS KIT


4

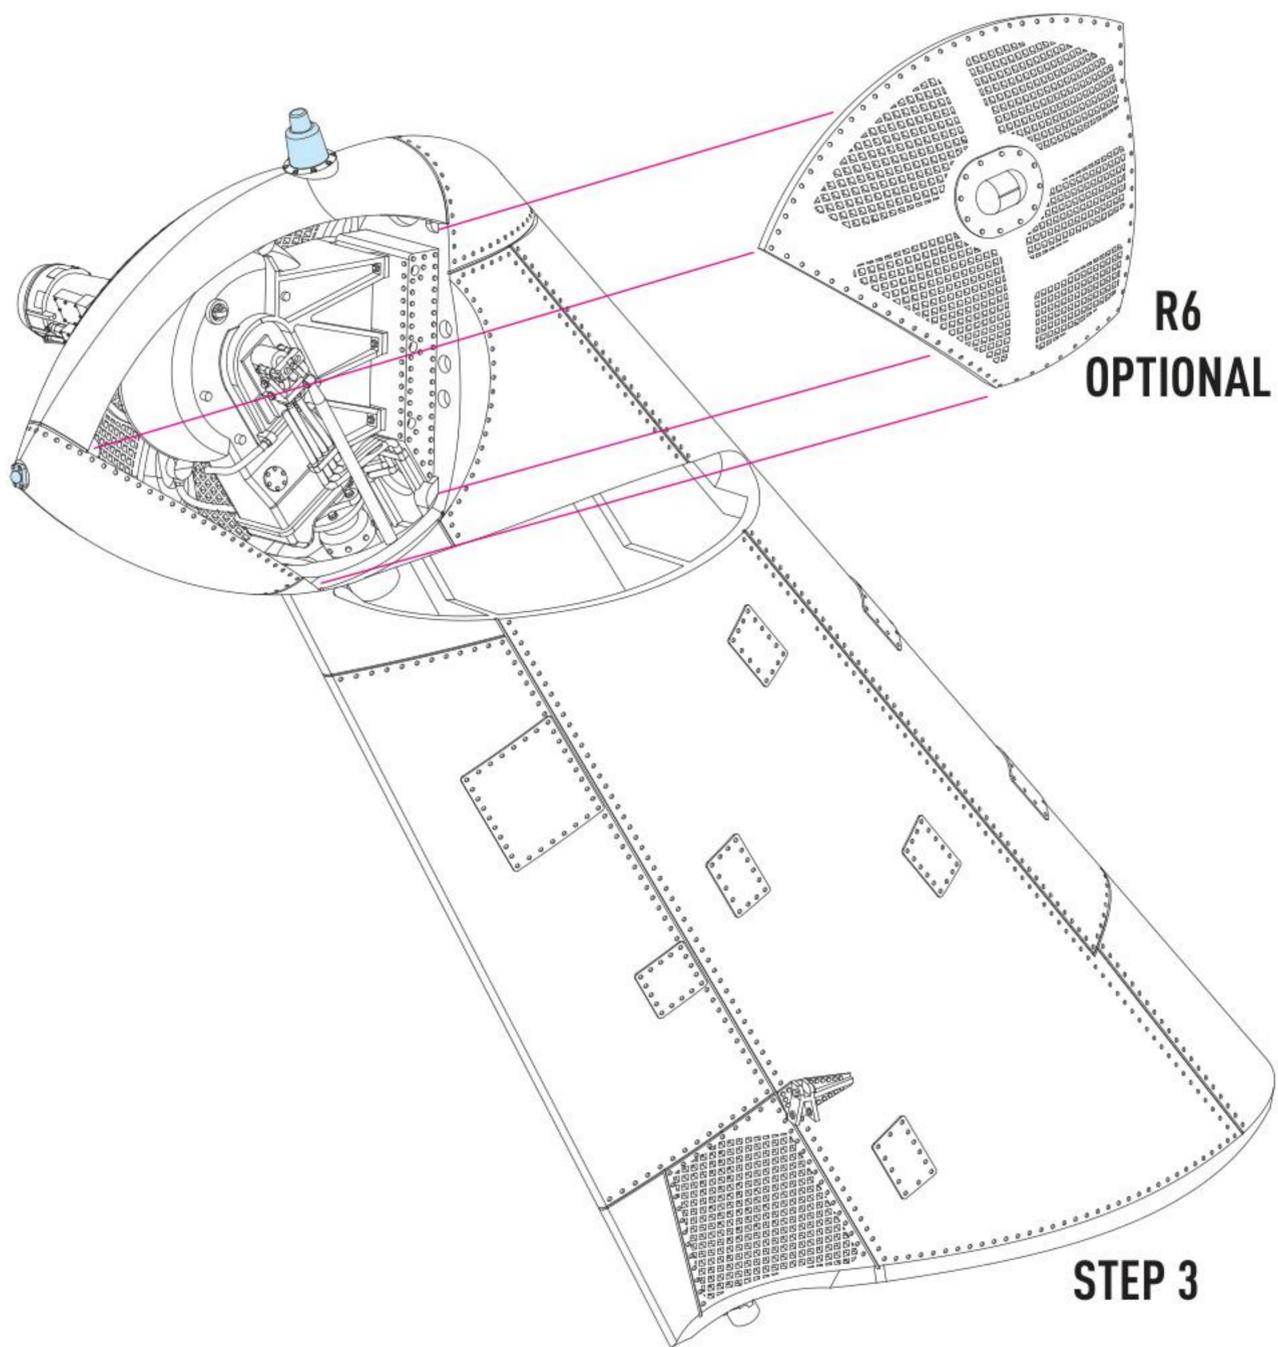


5

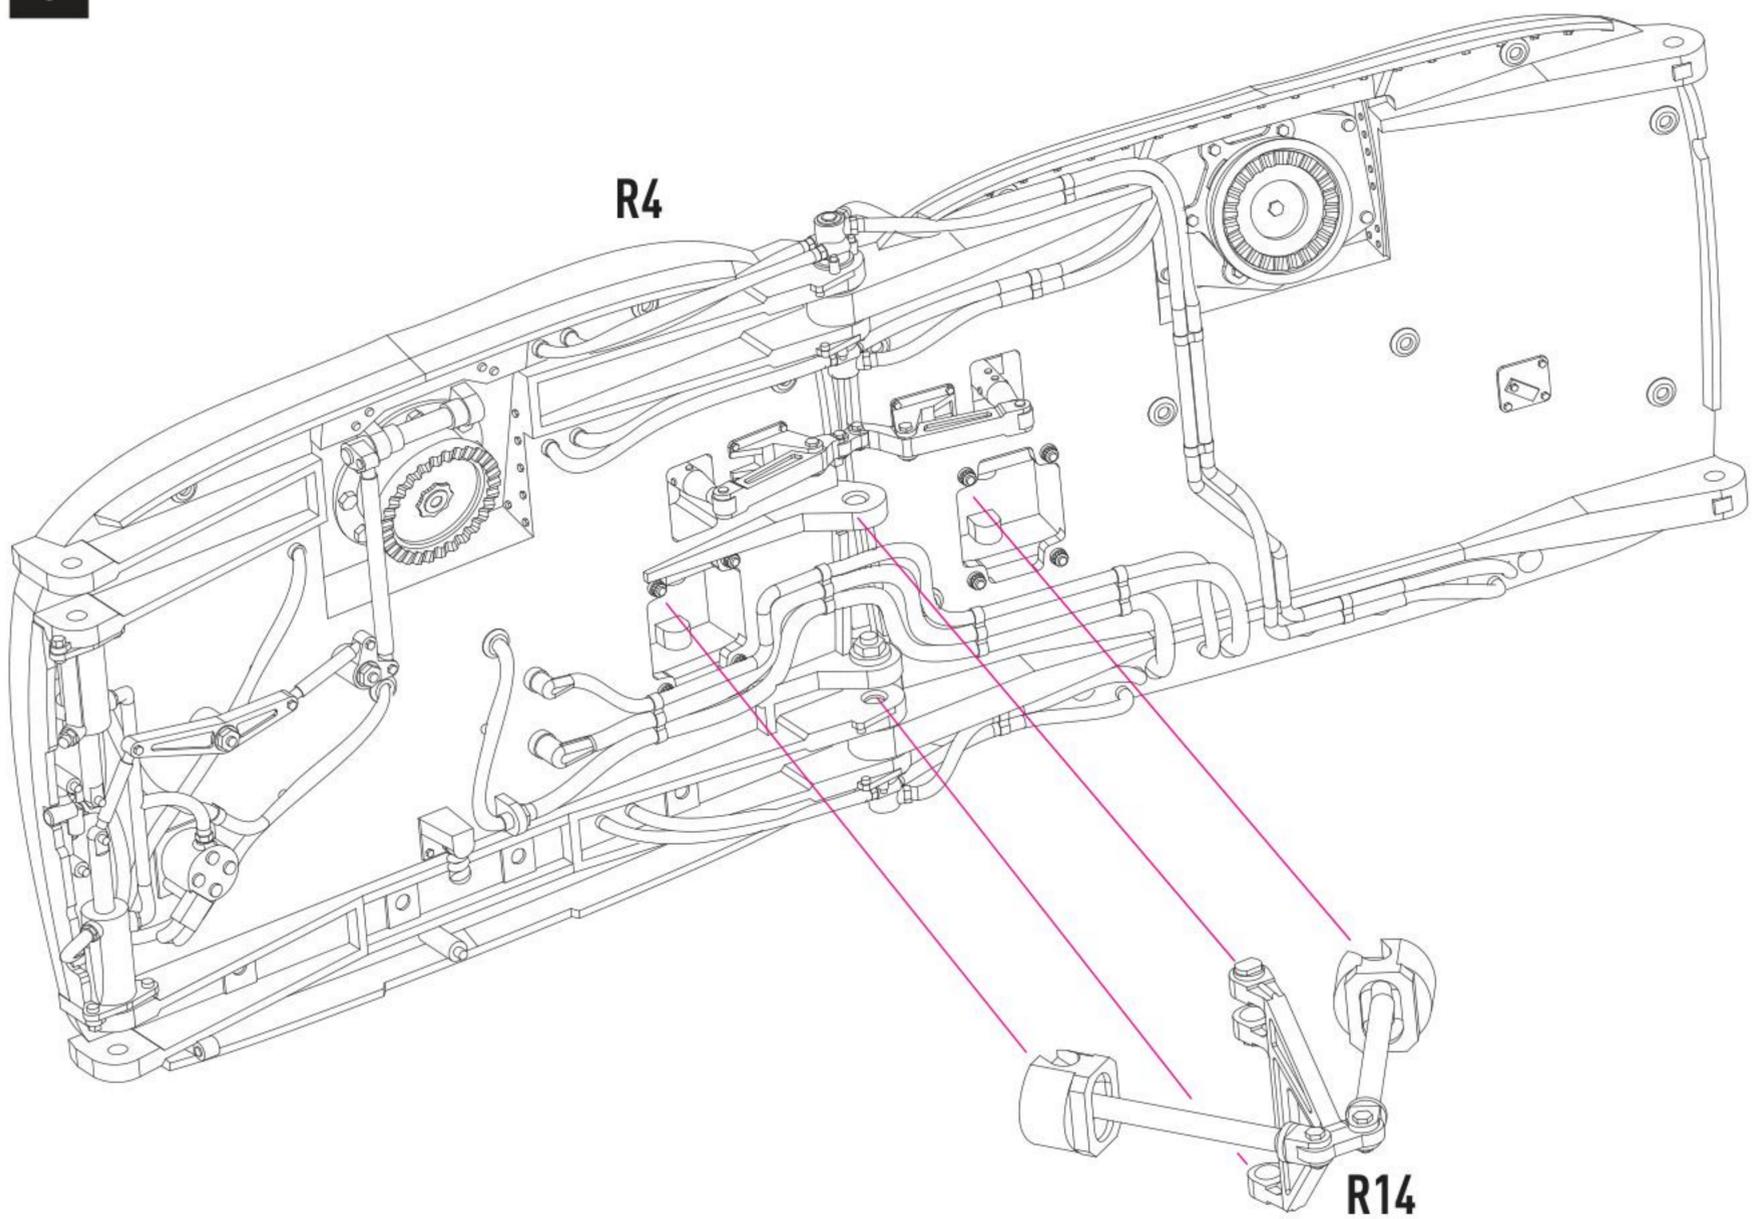


6

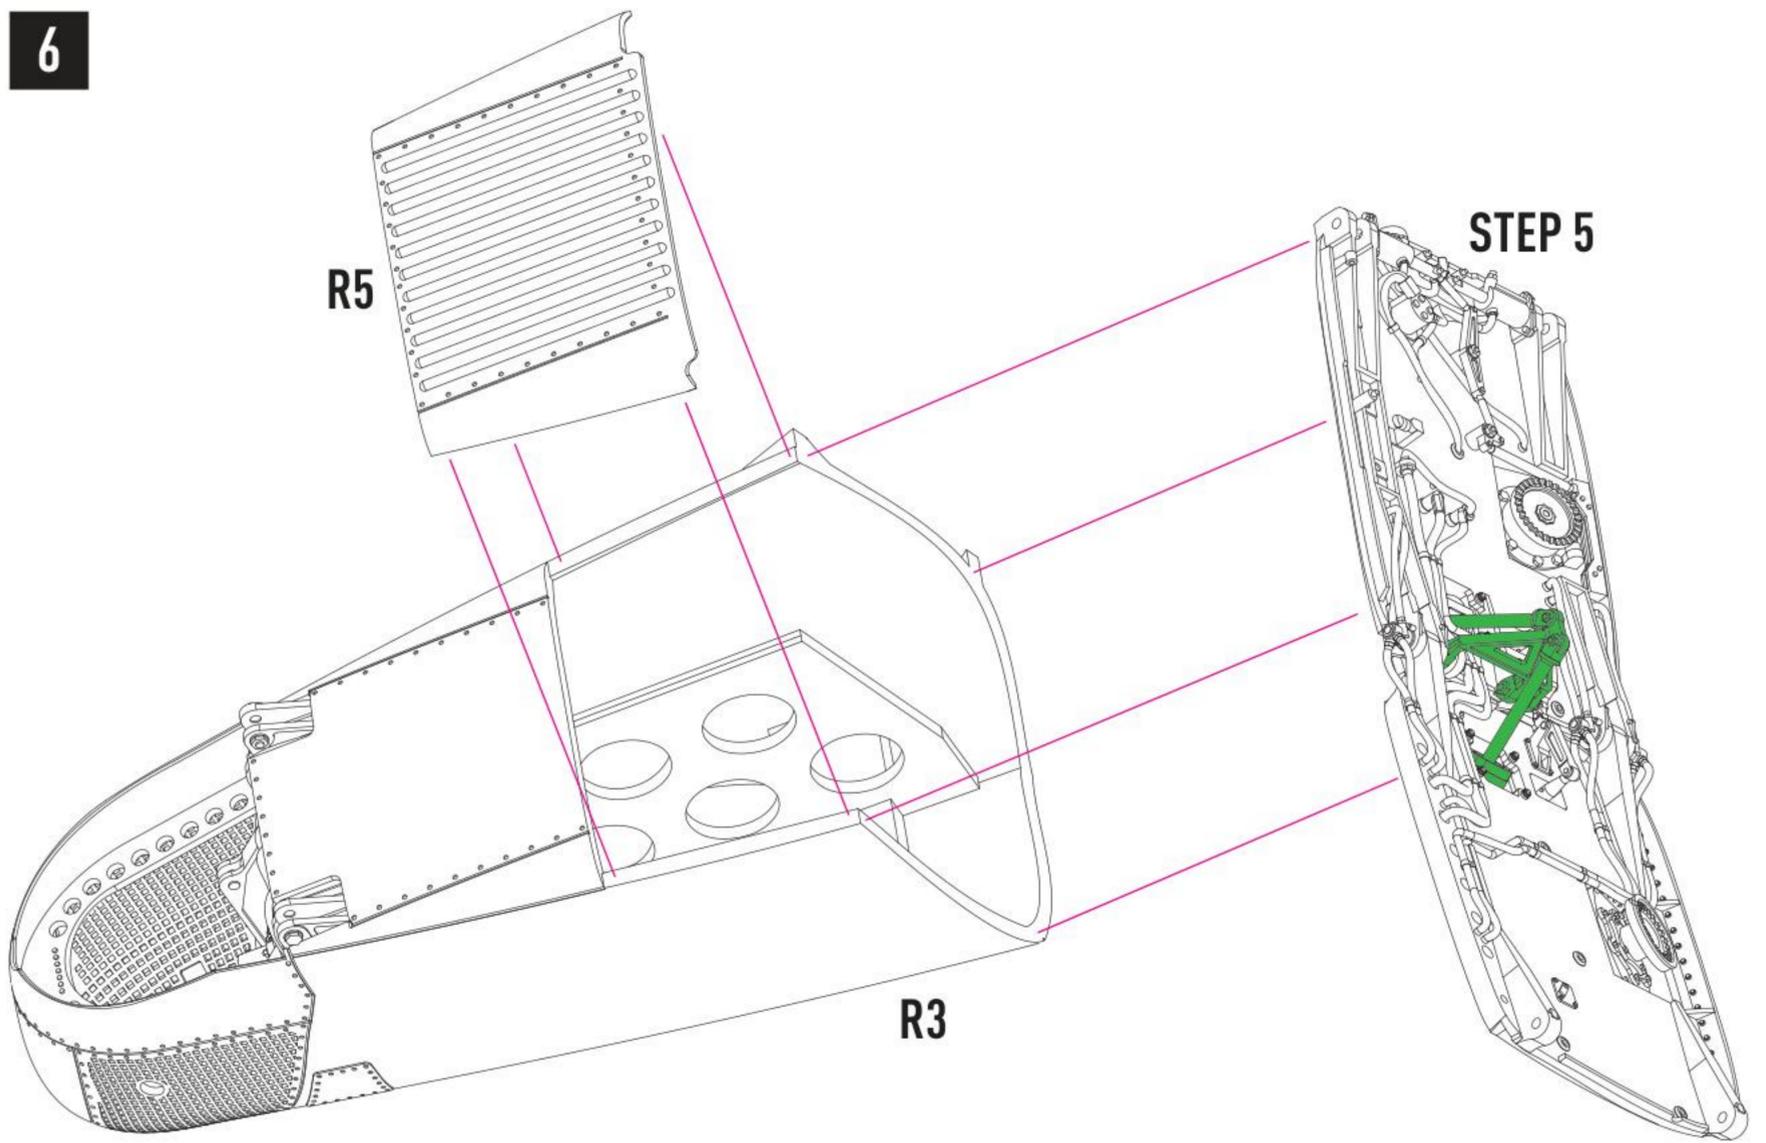


7

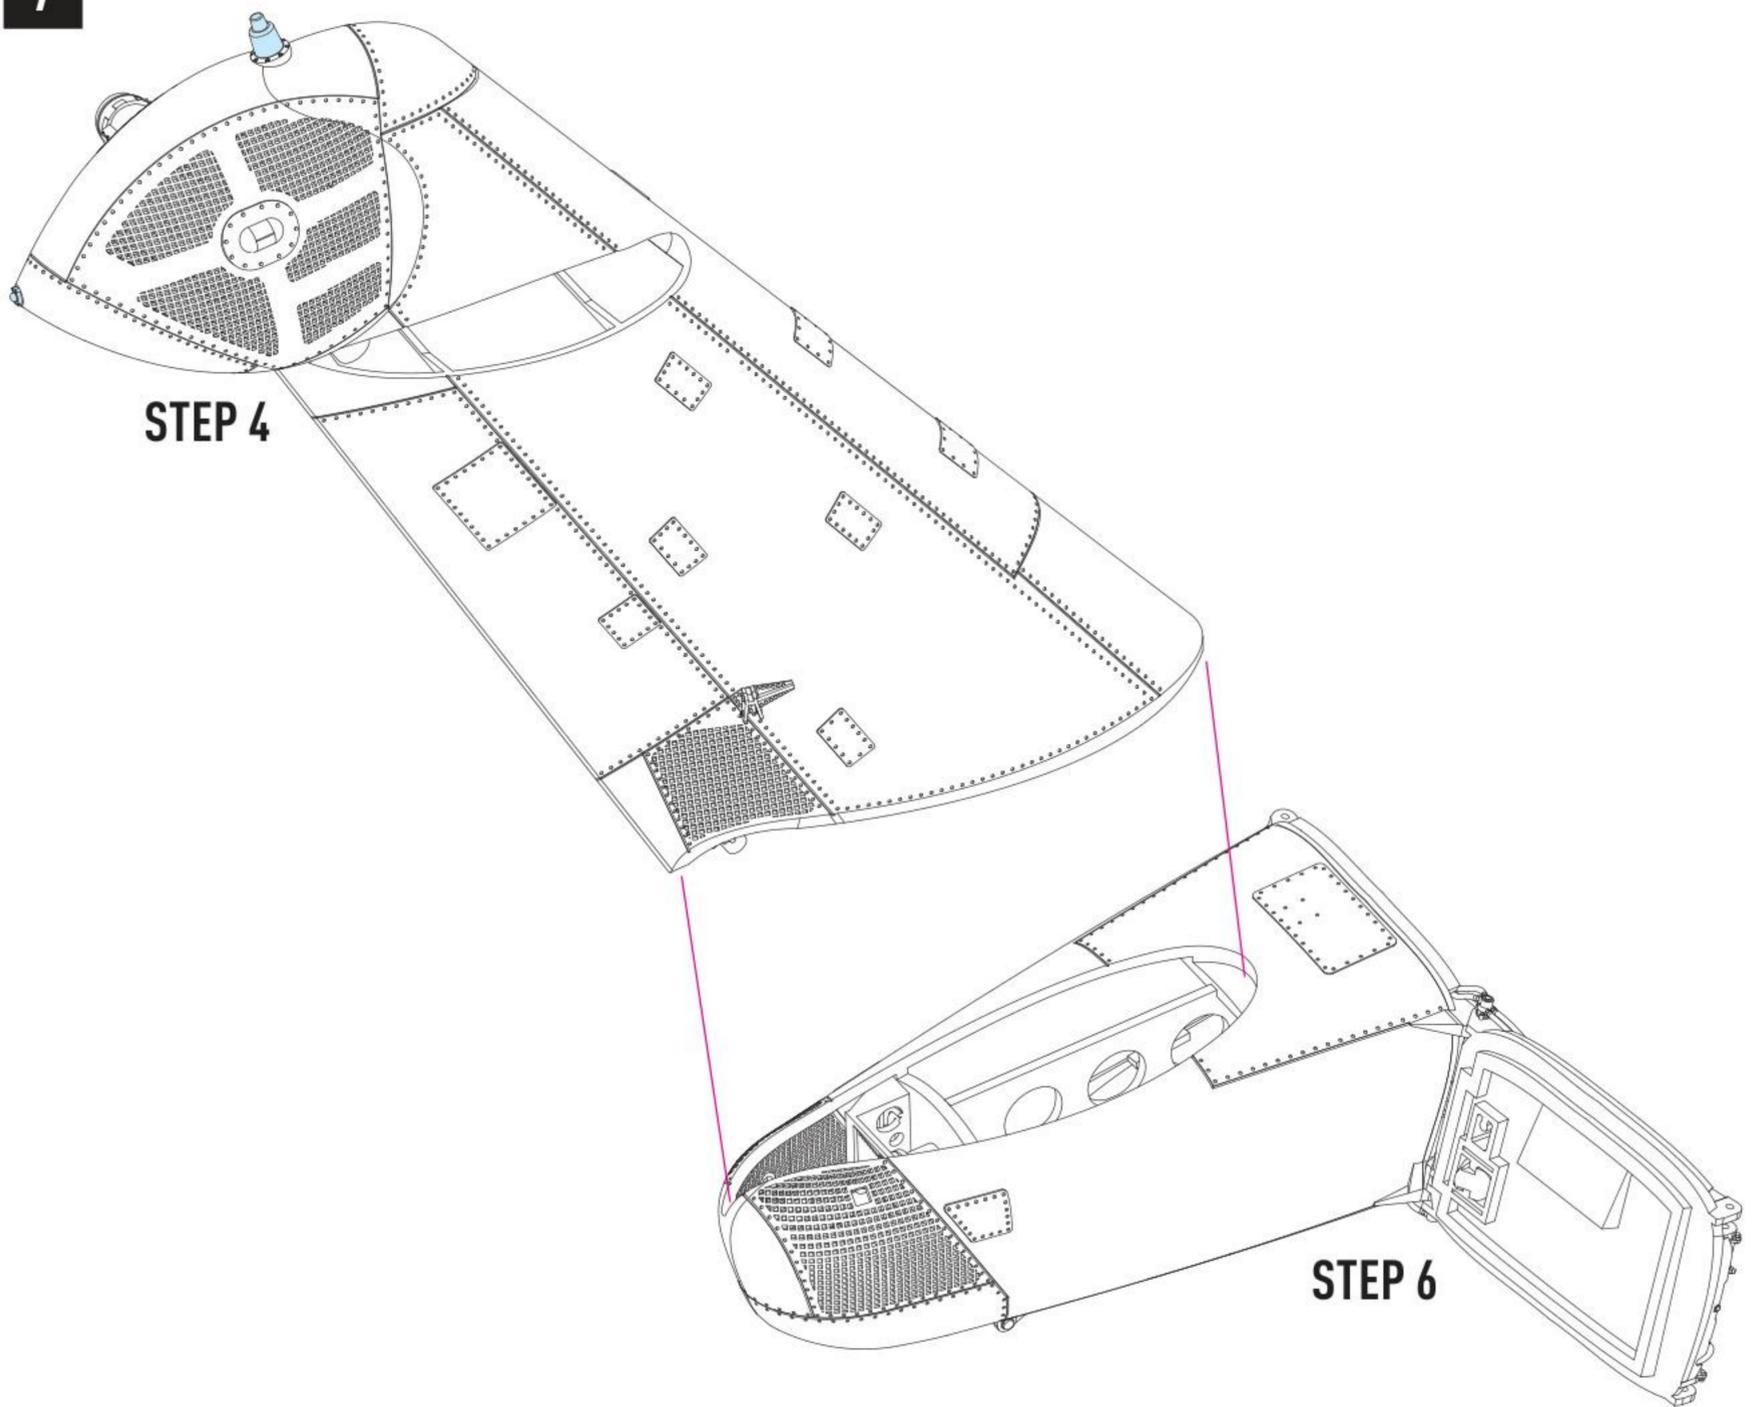


8

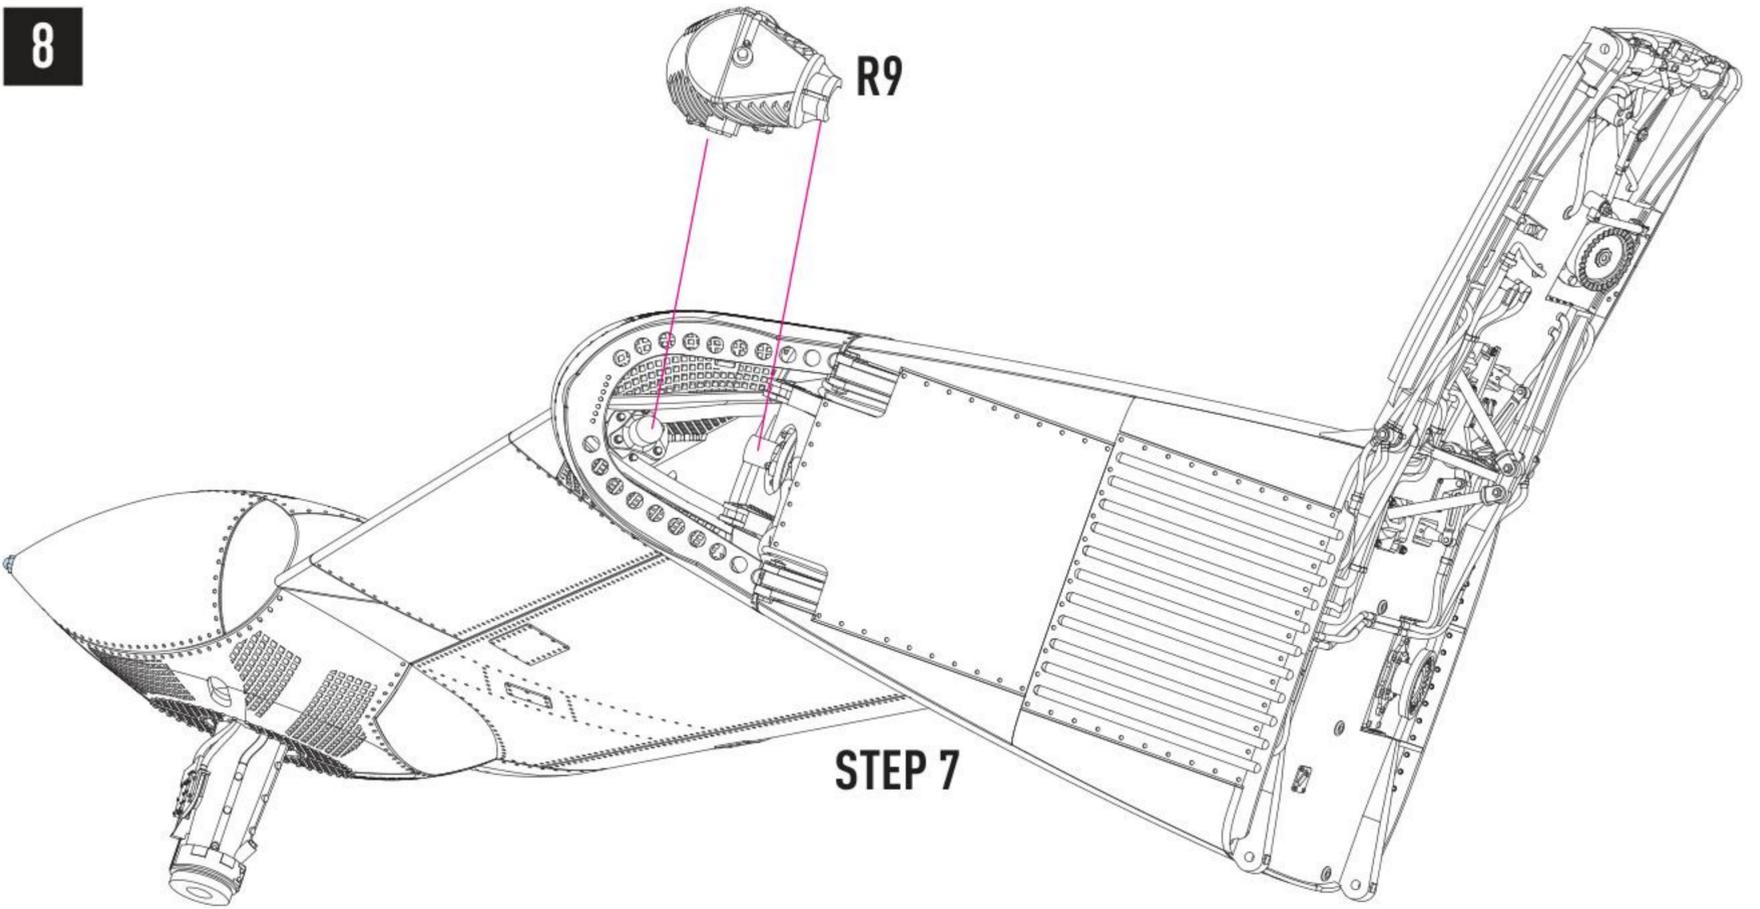


9

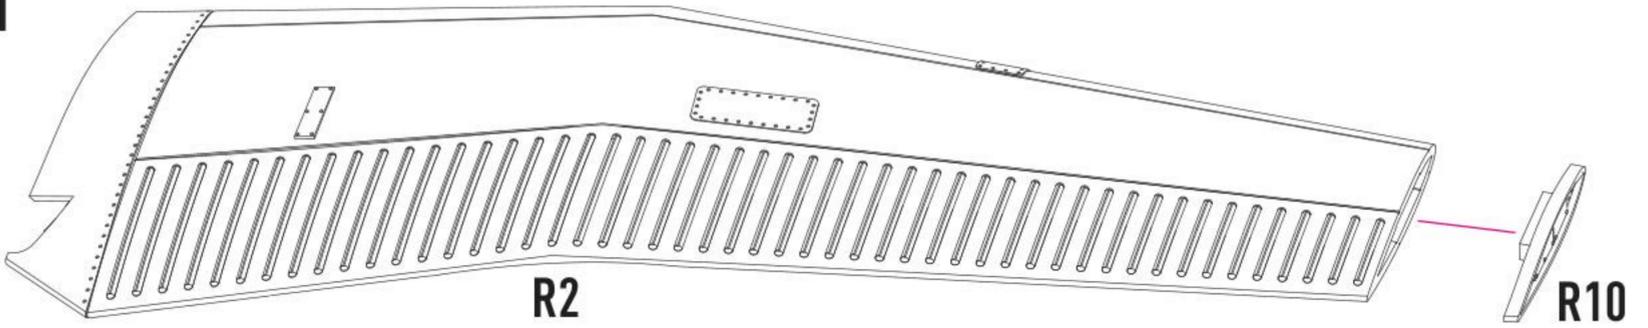


10

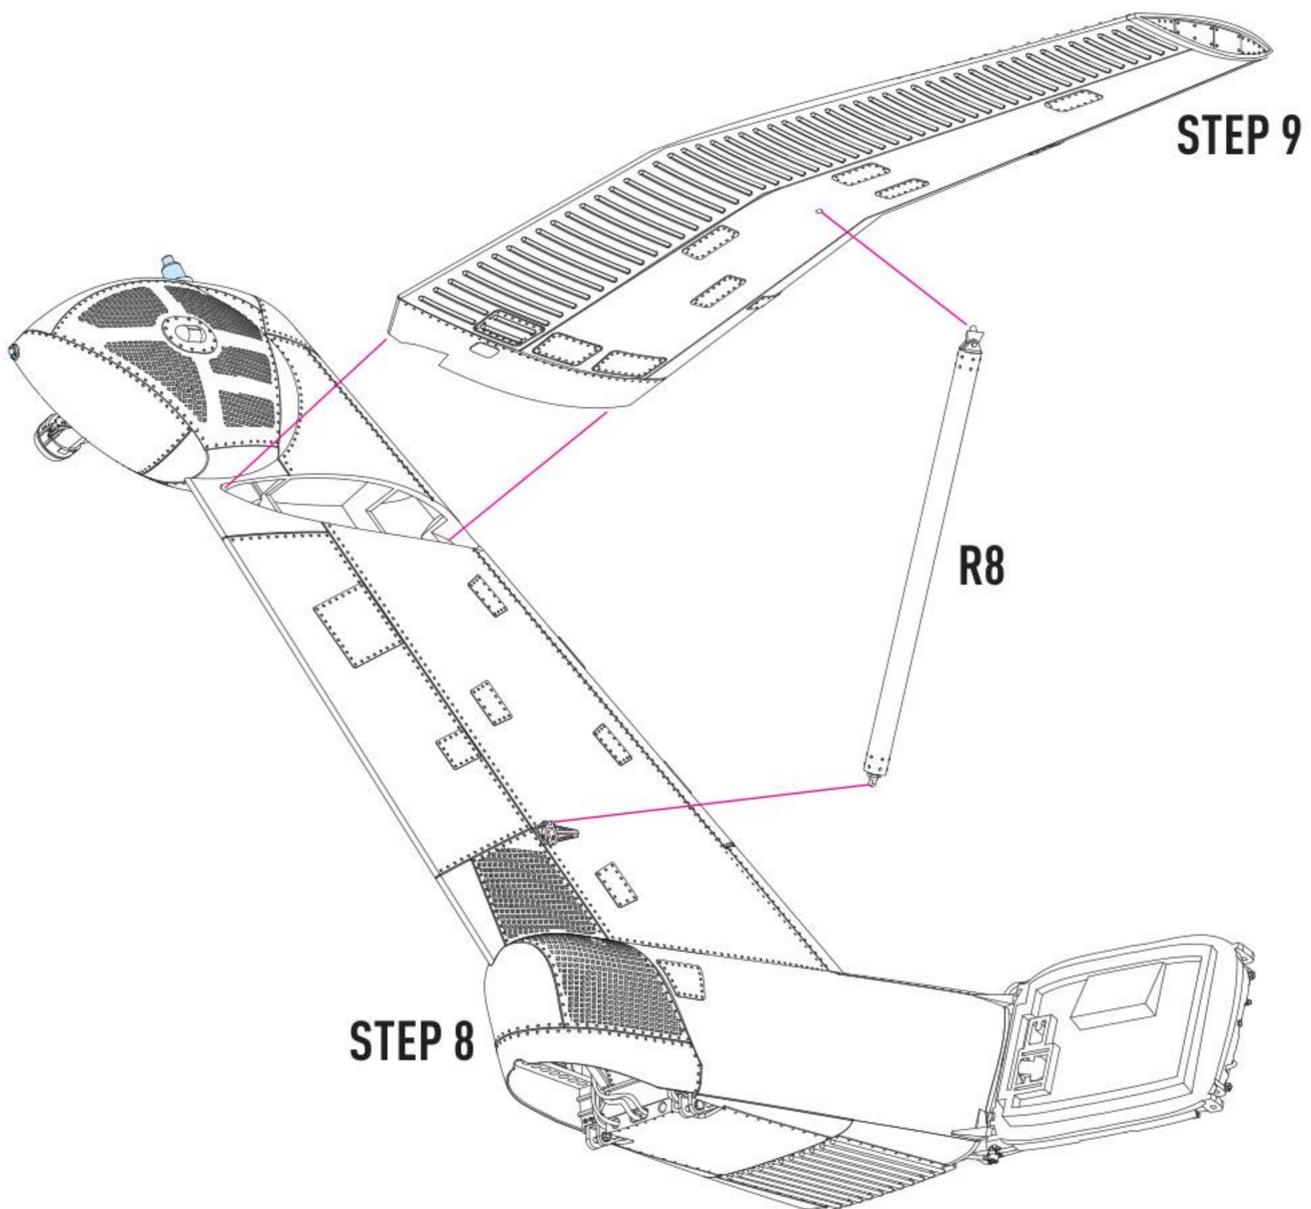


11

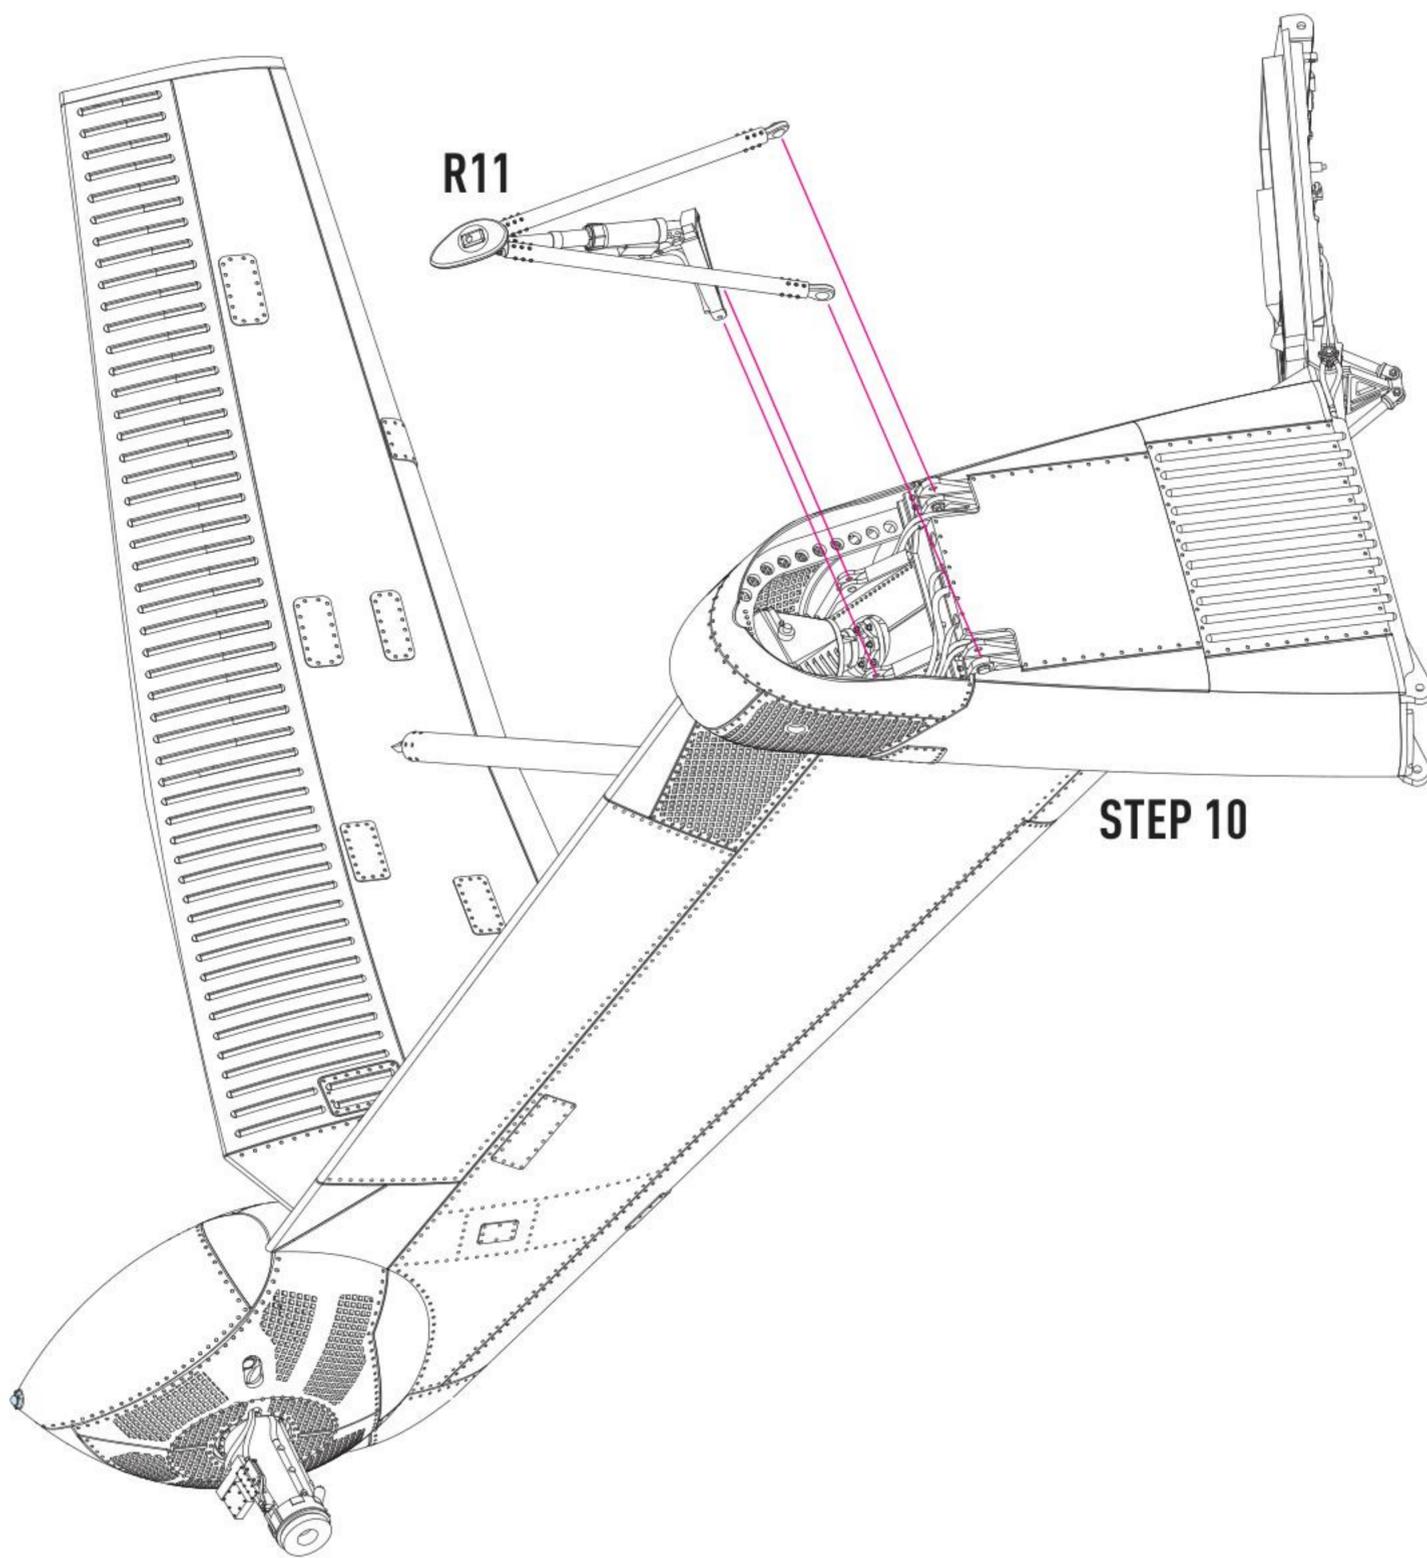


**12 RIGHT SIDE OF FUSELAGE**

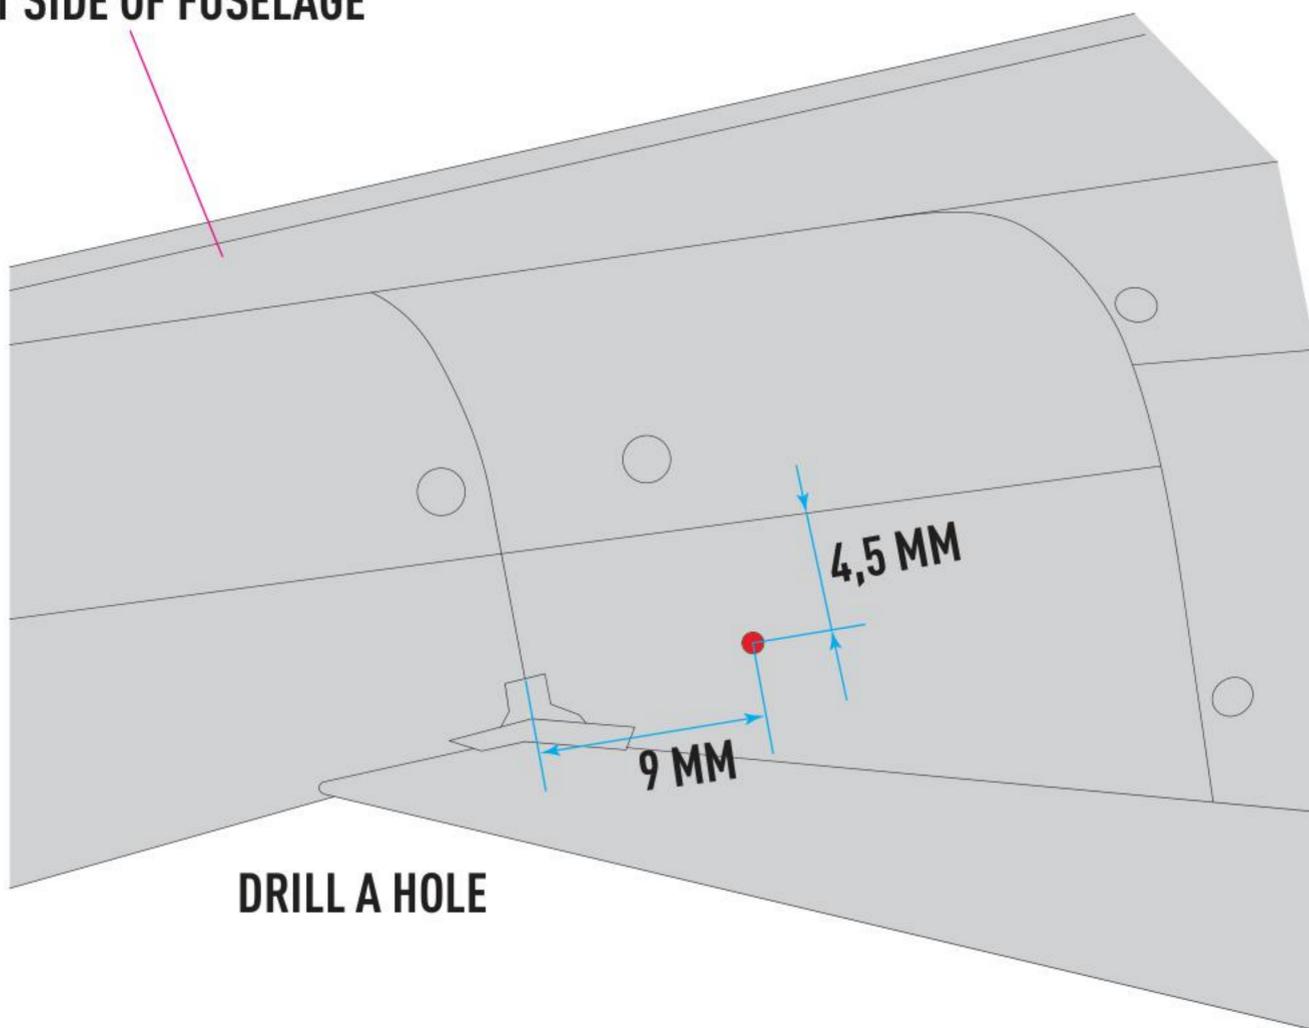


13

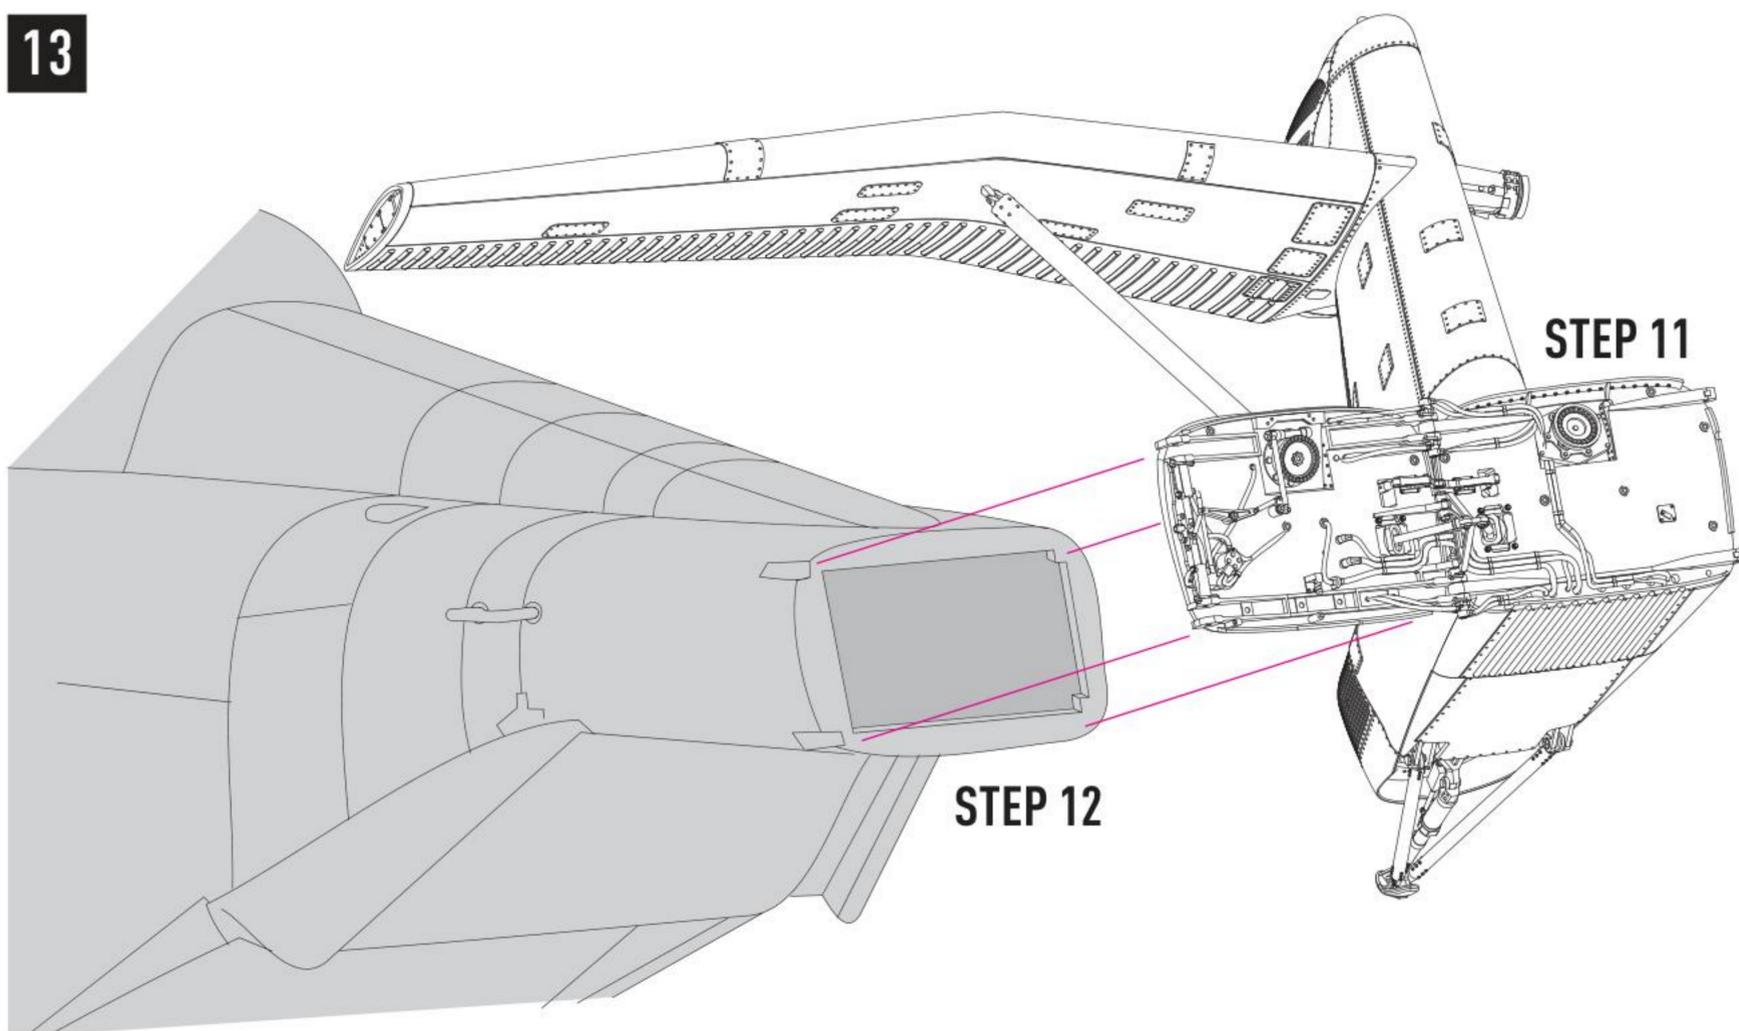

14

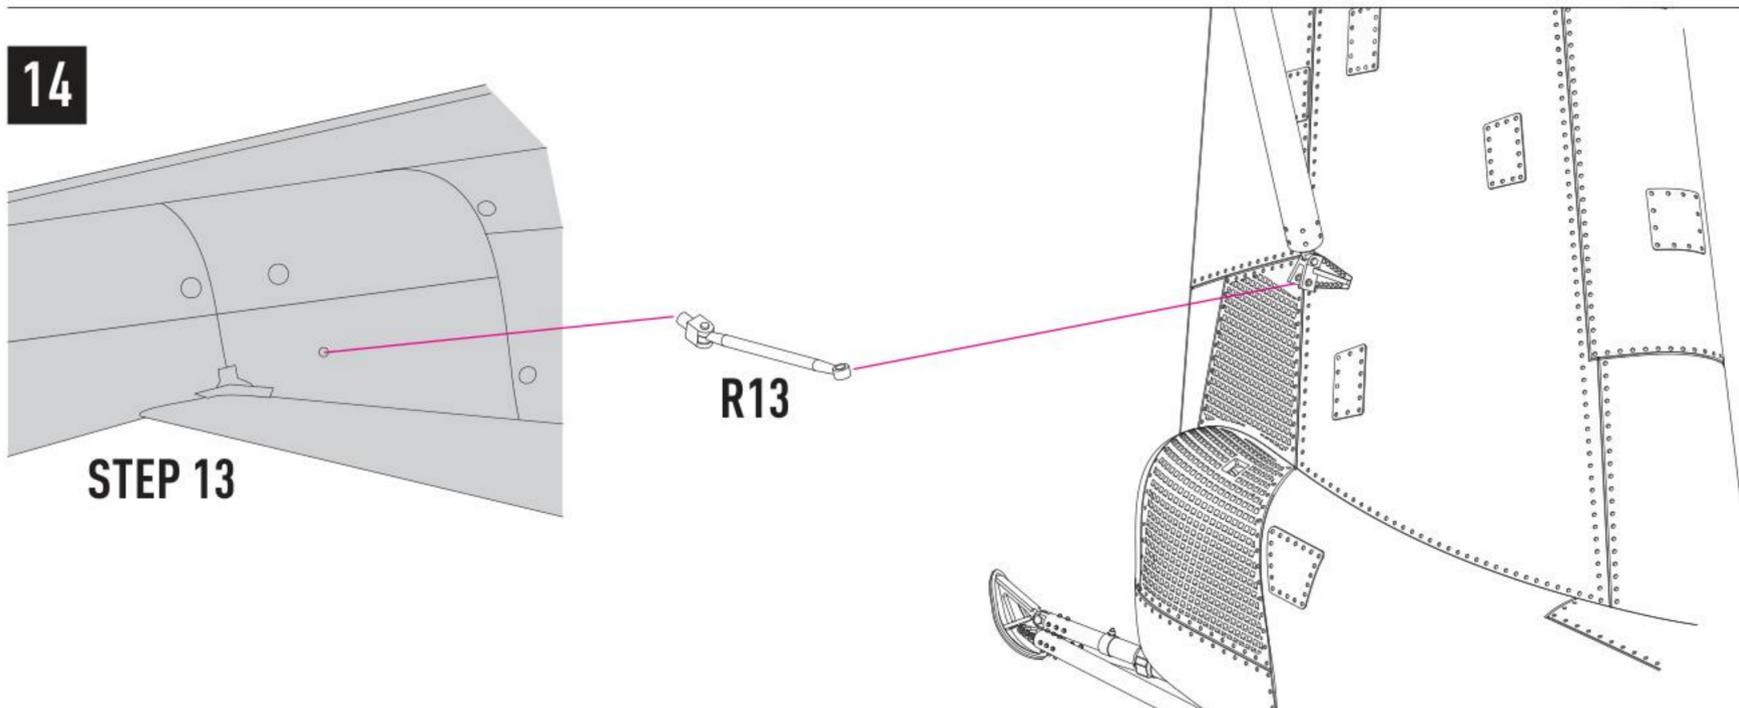

15

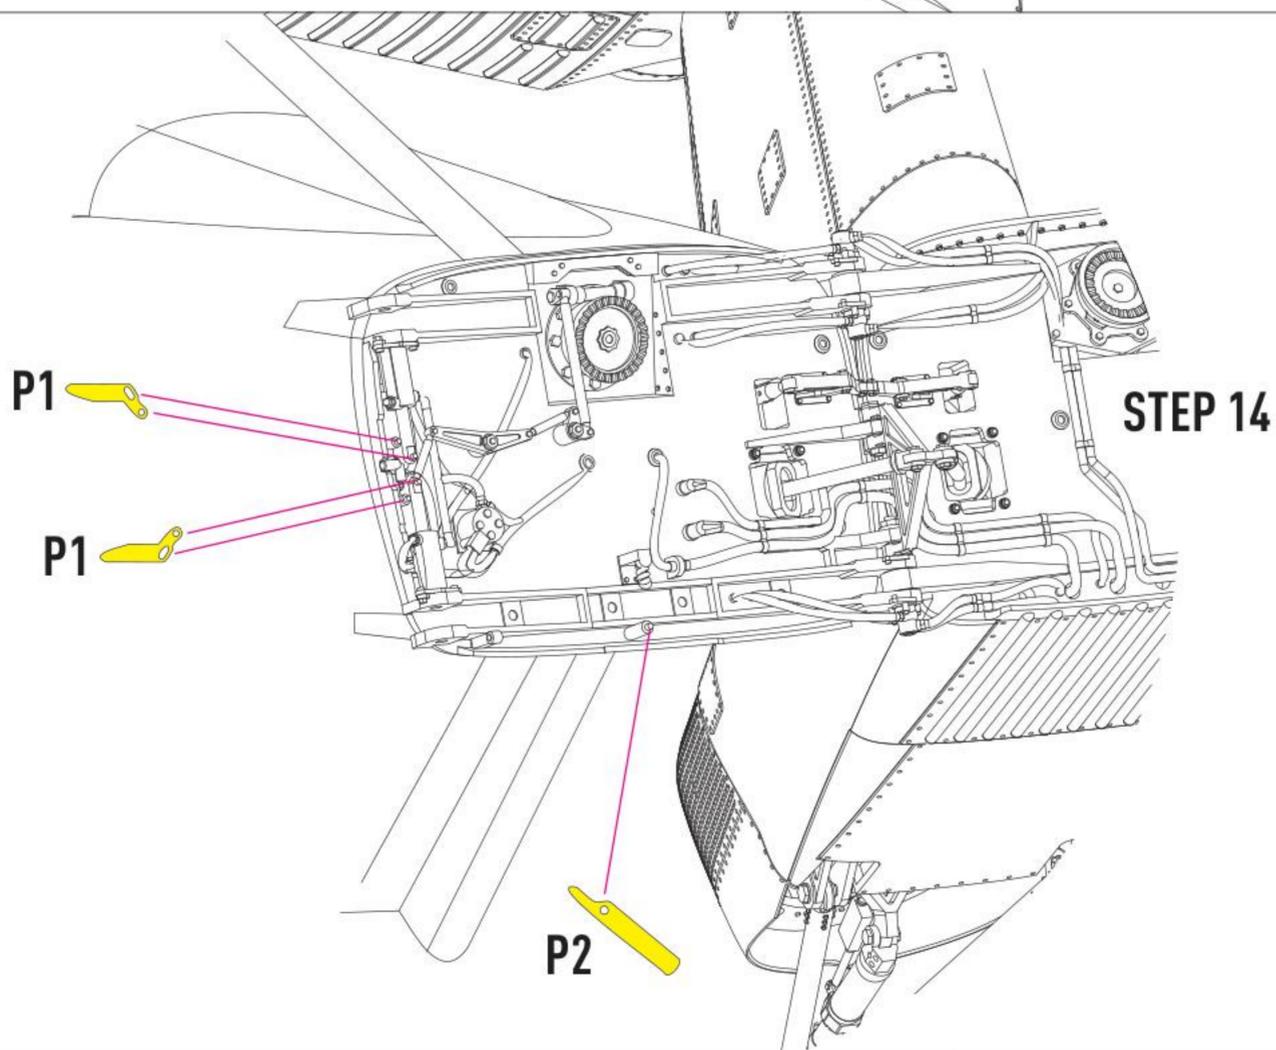

**YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE**

**RESKIT-MODELS.COM**

**General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)**

**Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)**

**Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)**