





USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

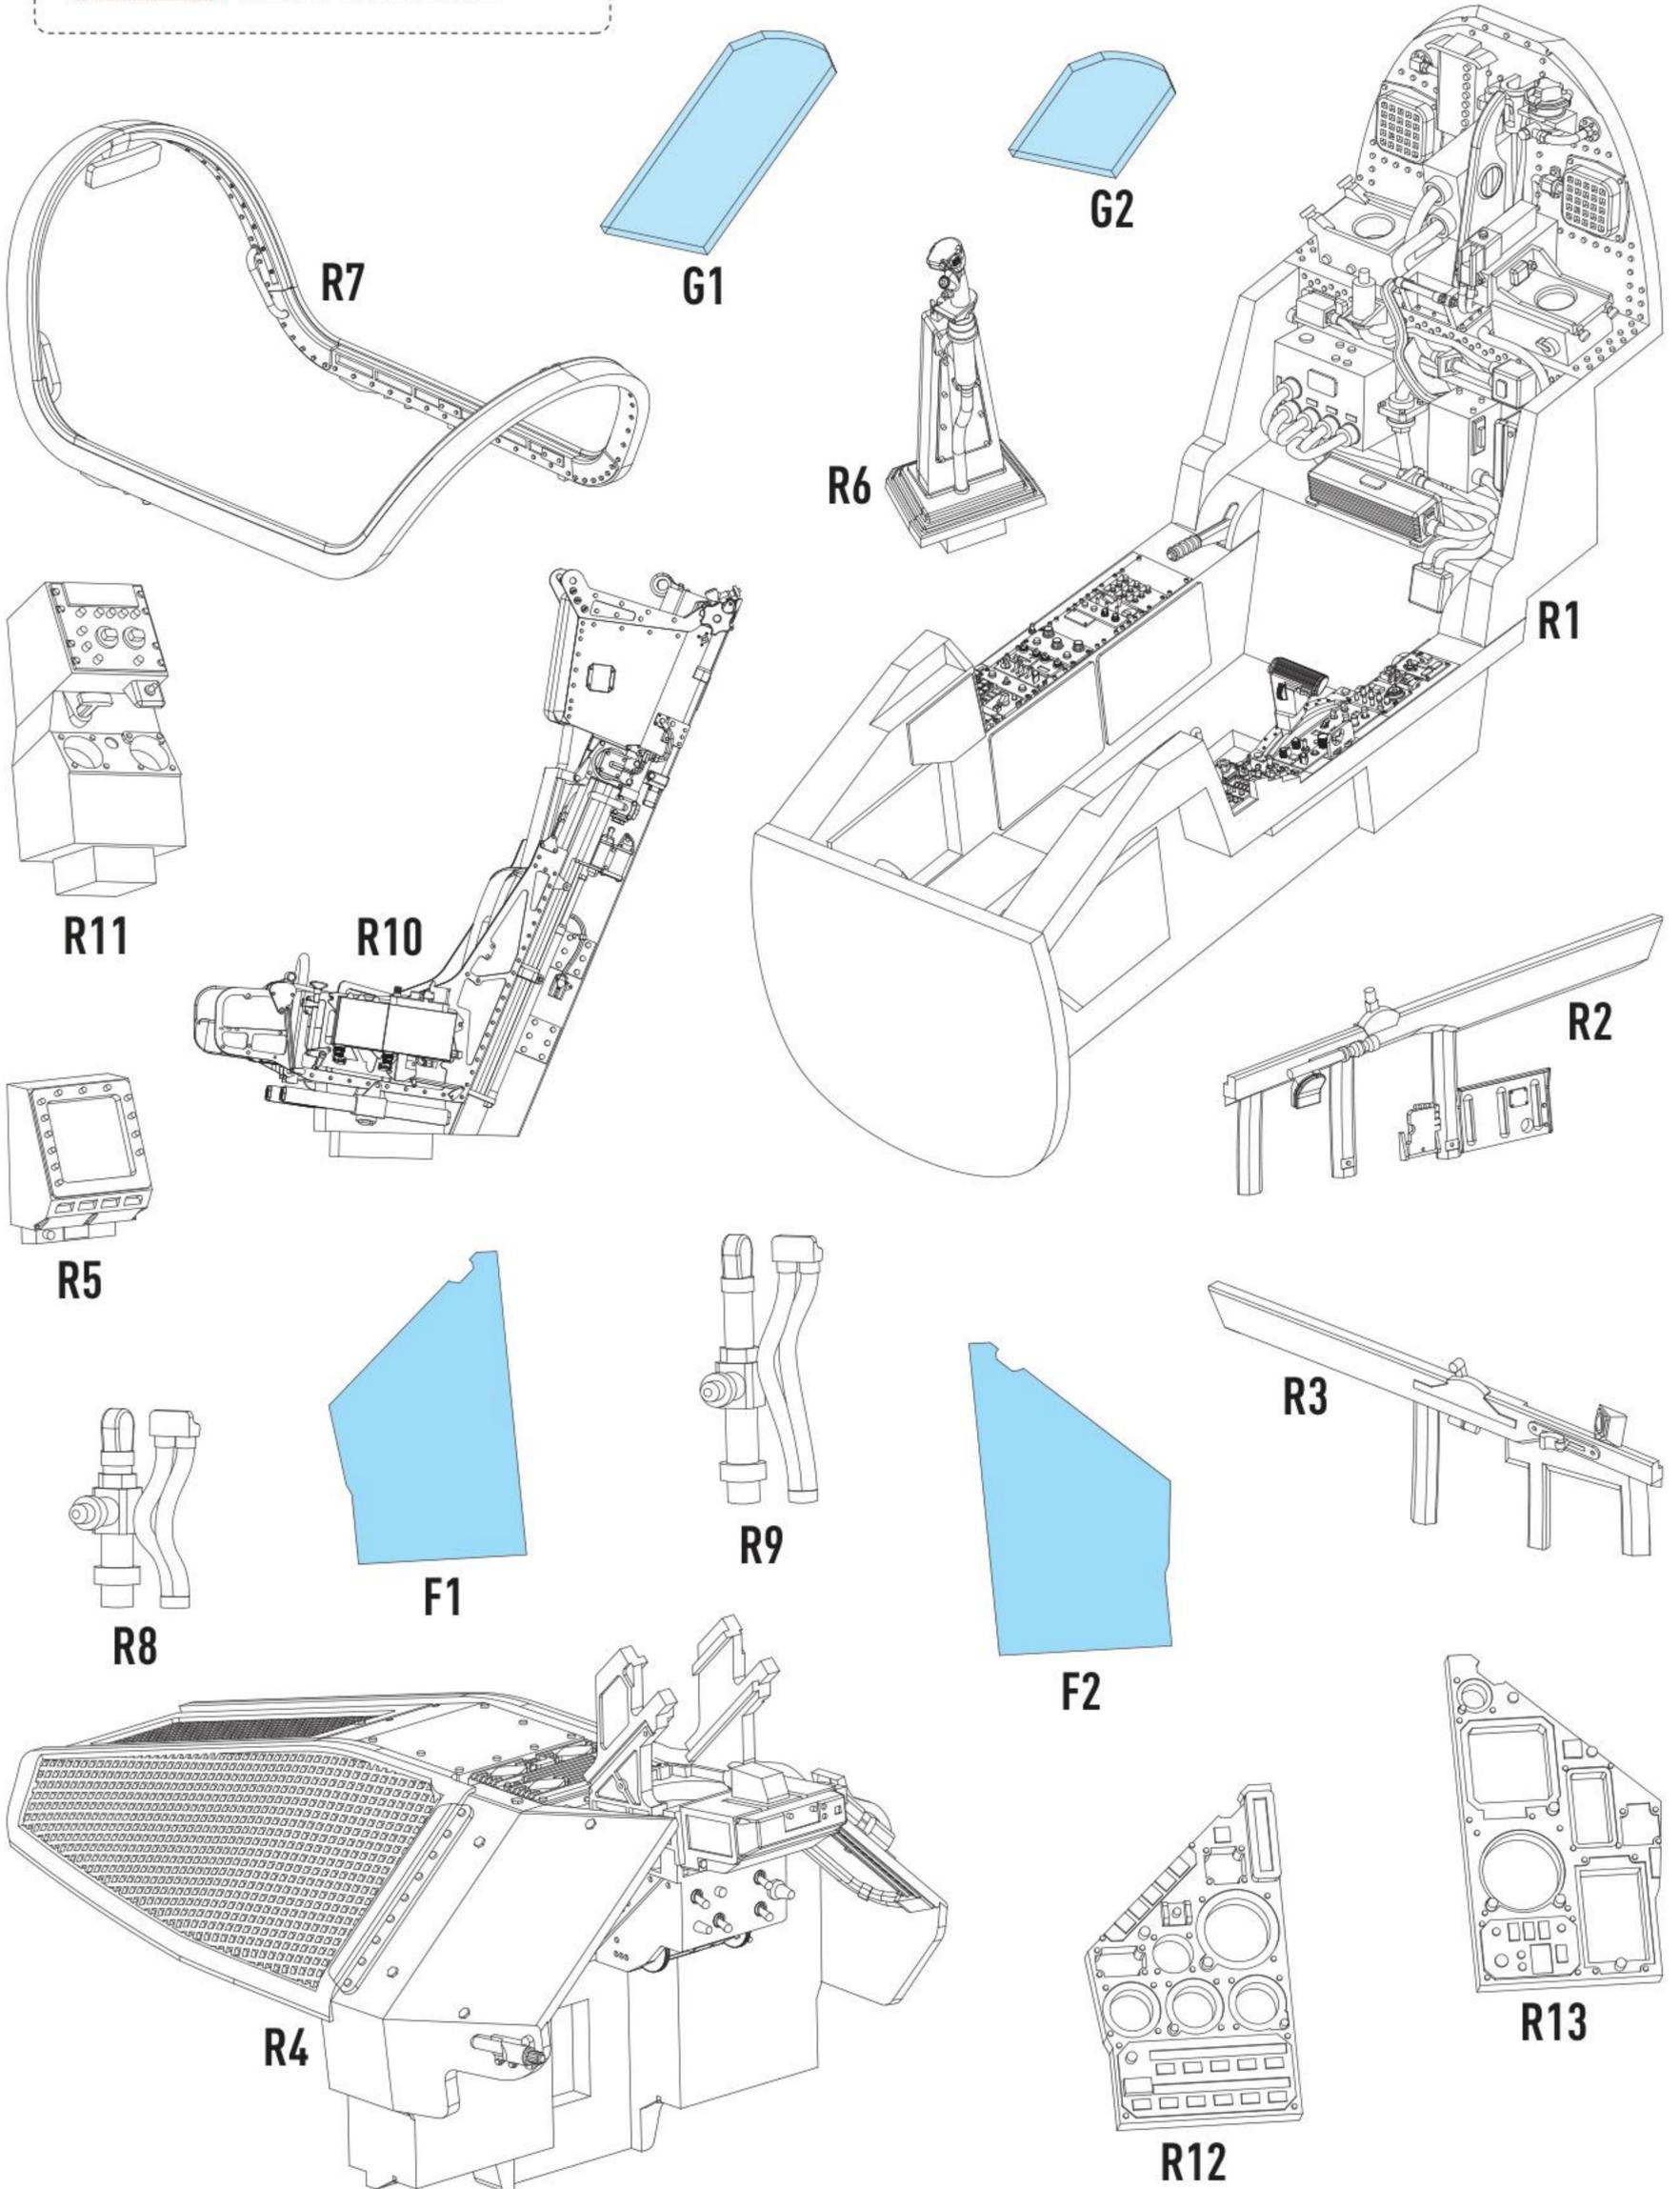


1

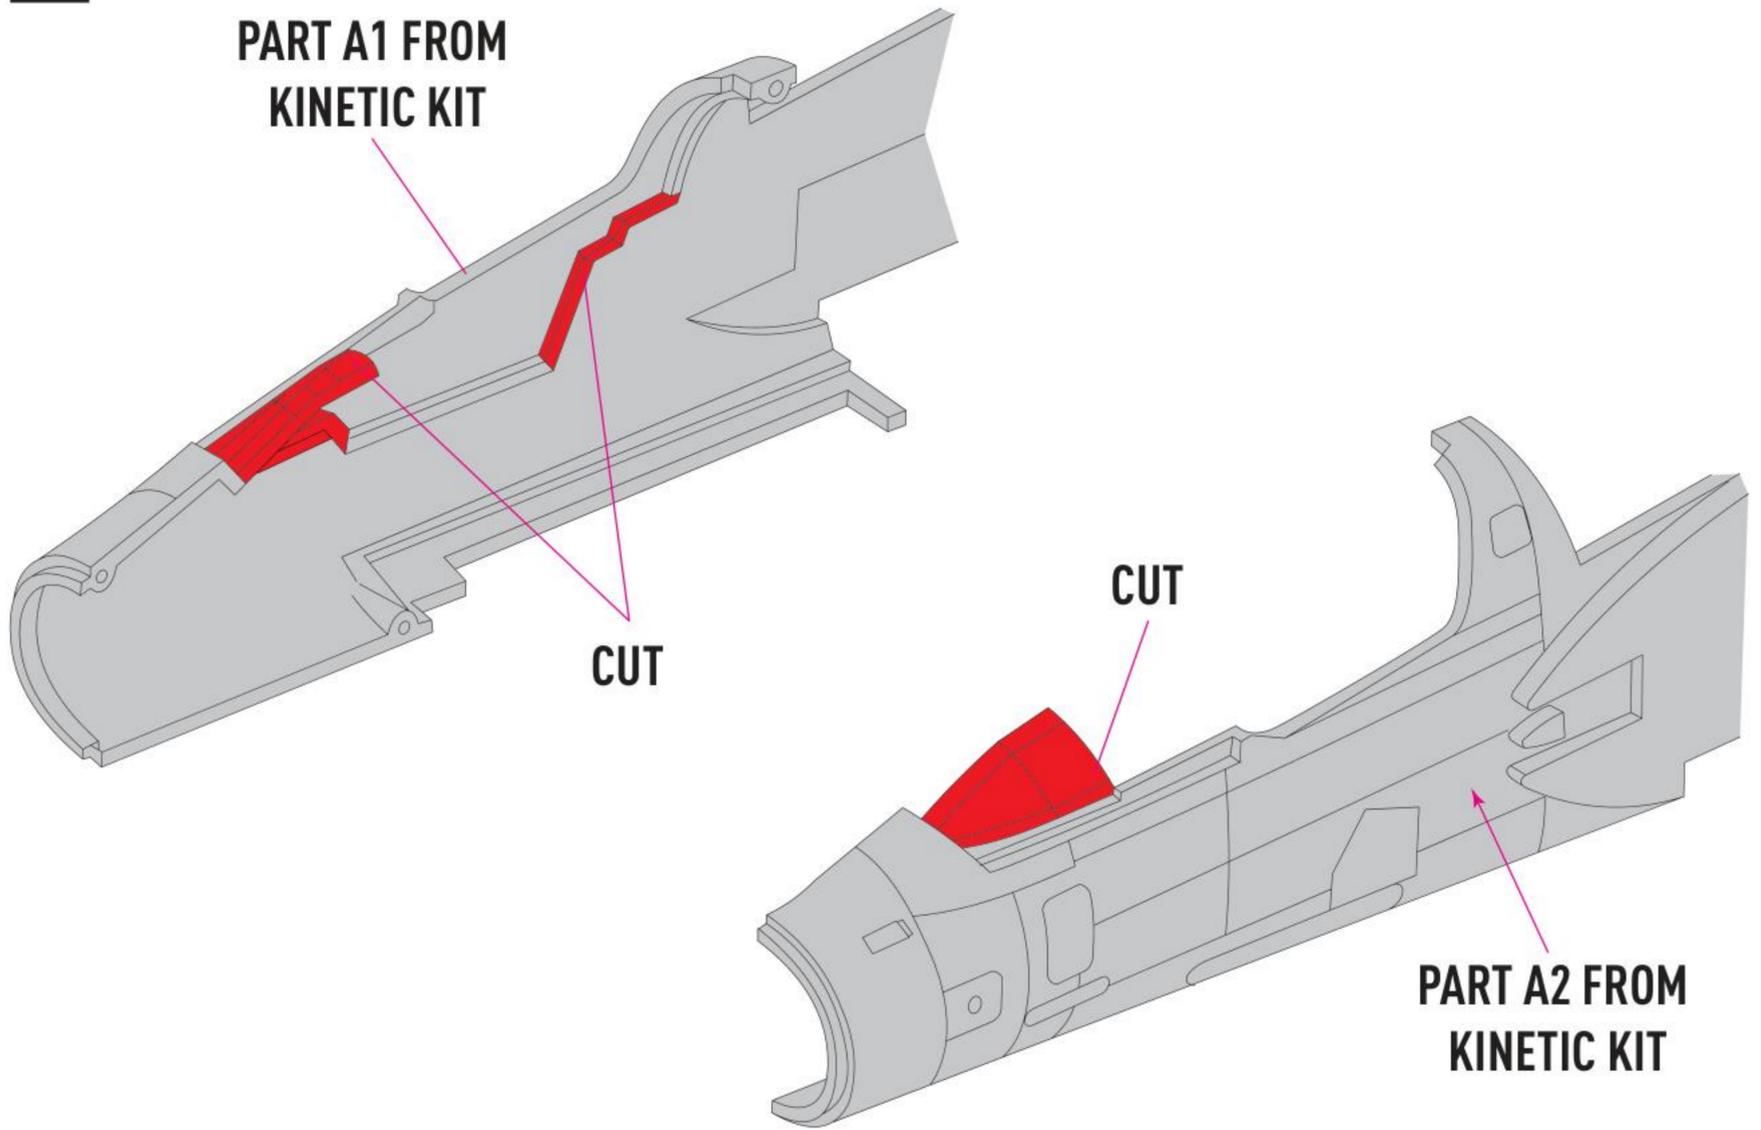


2

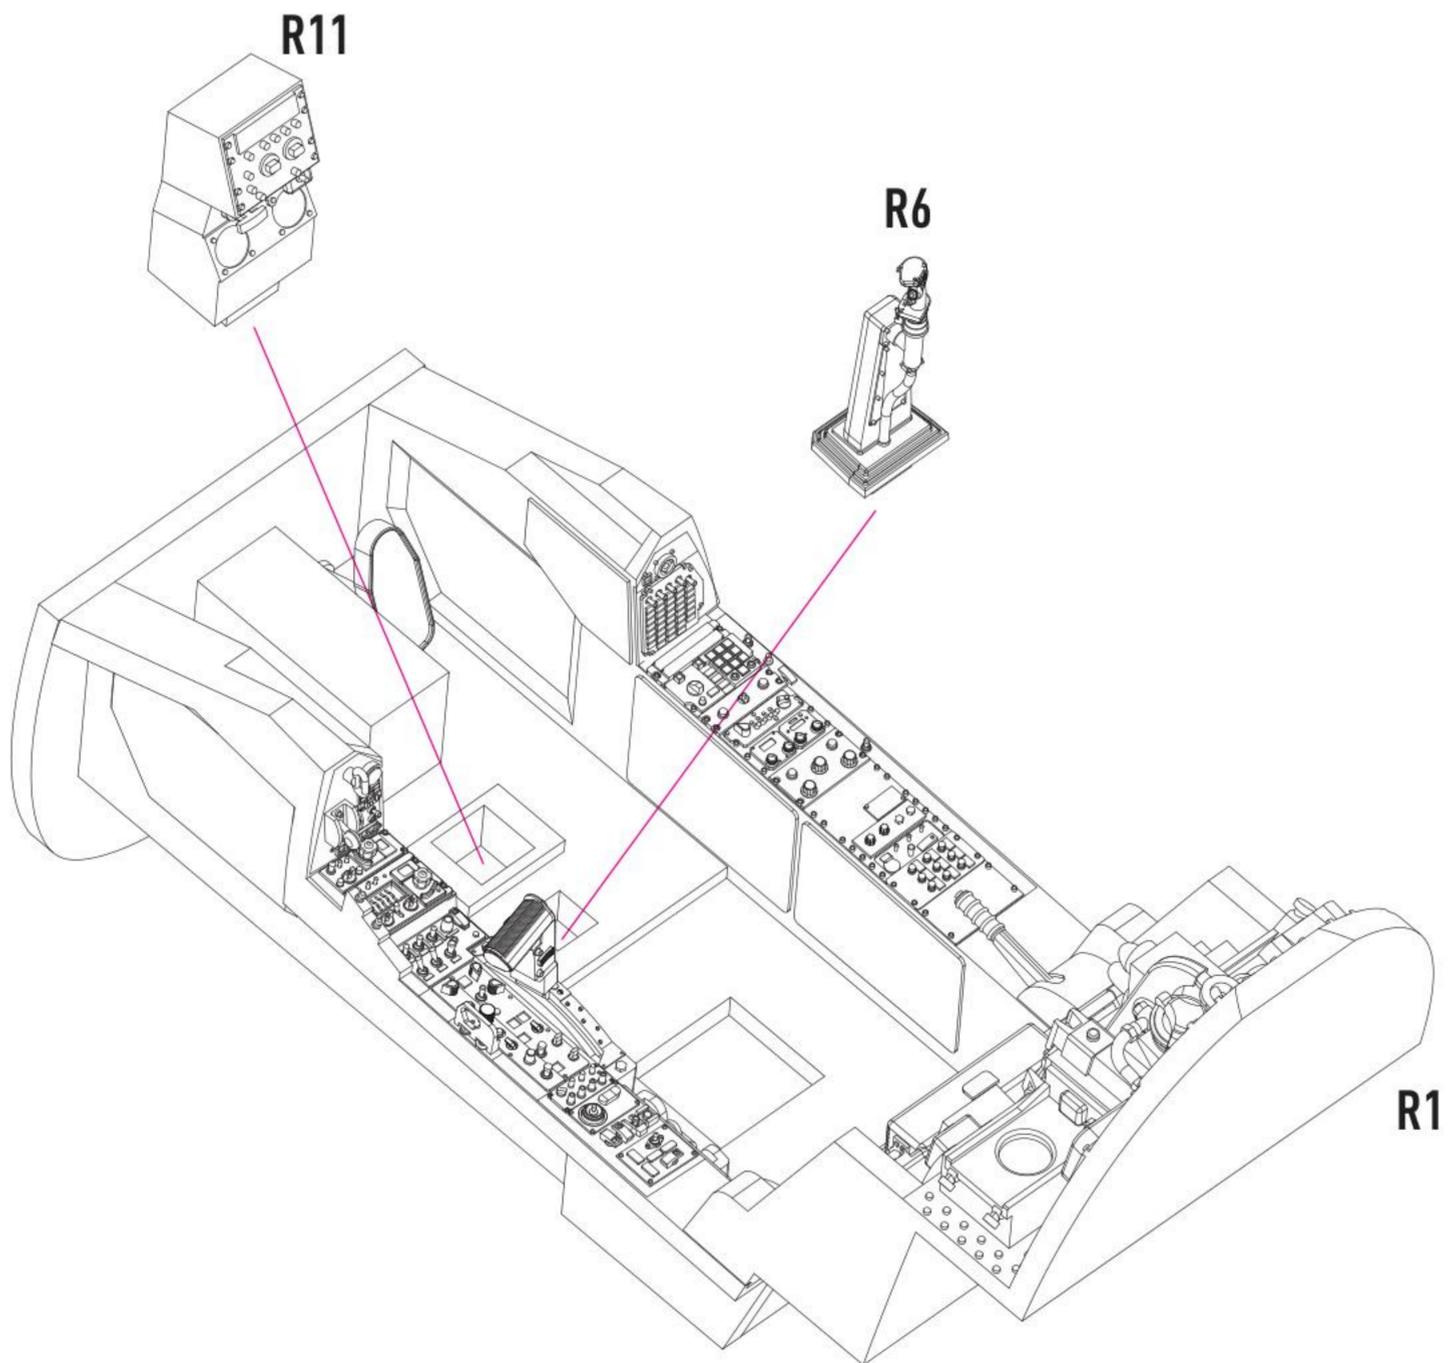


3


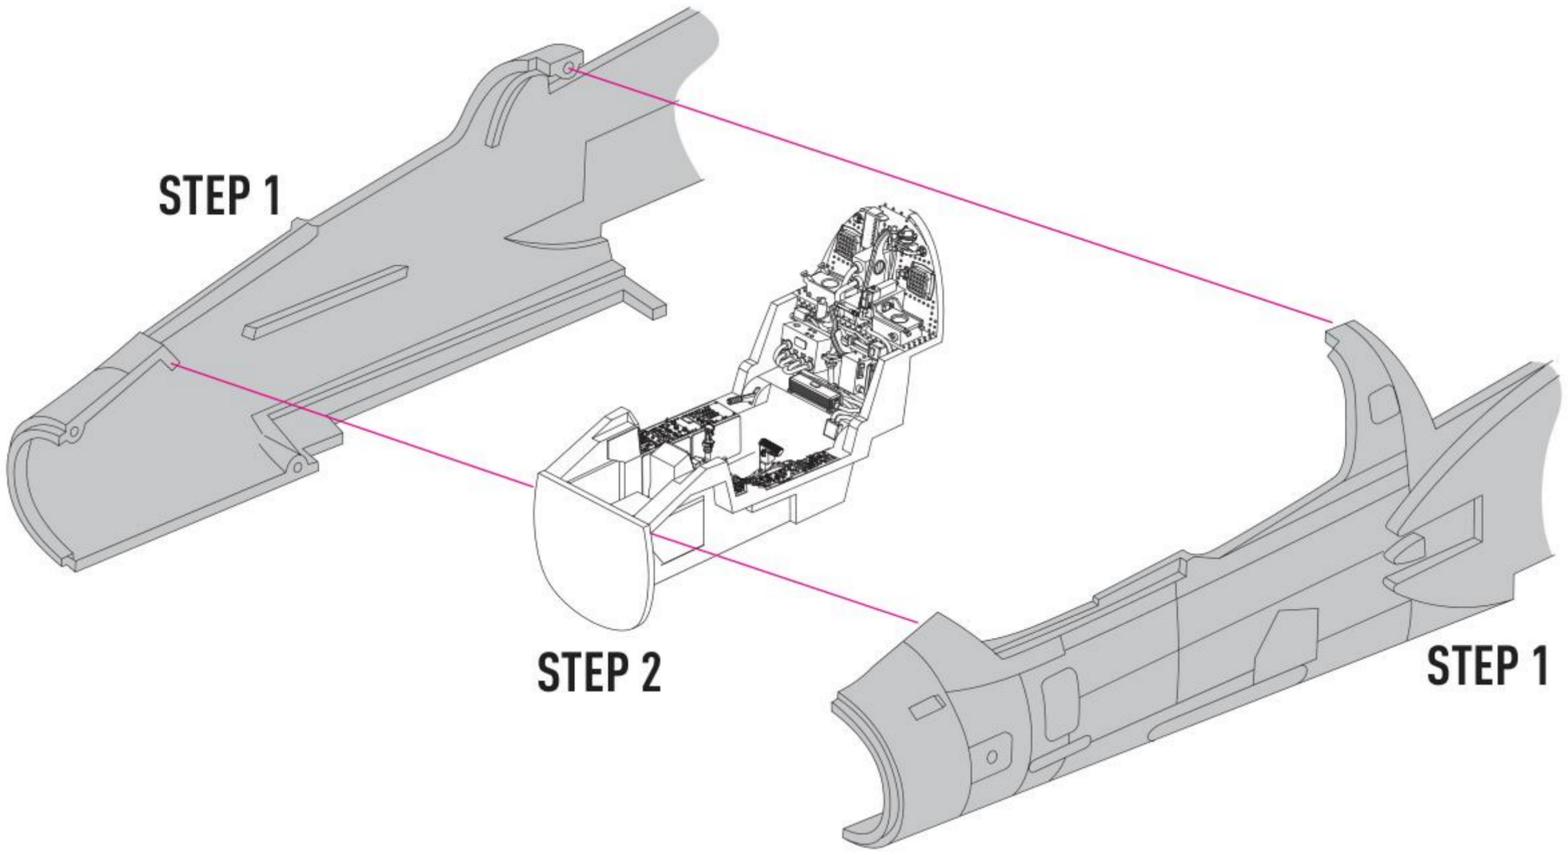


4 RIGHT SIDE

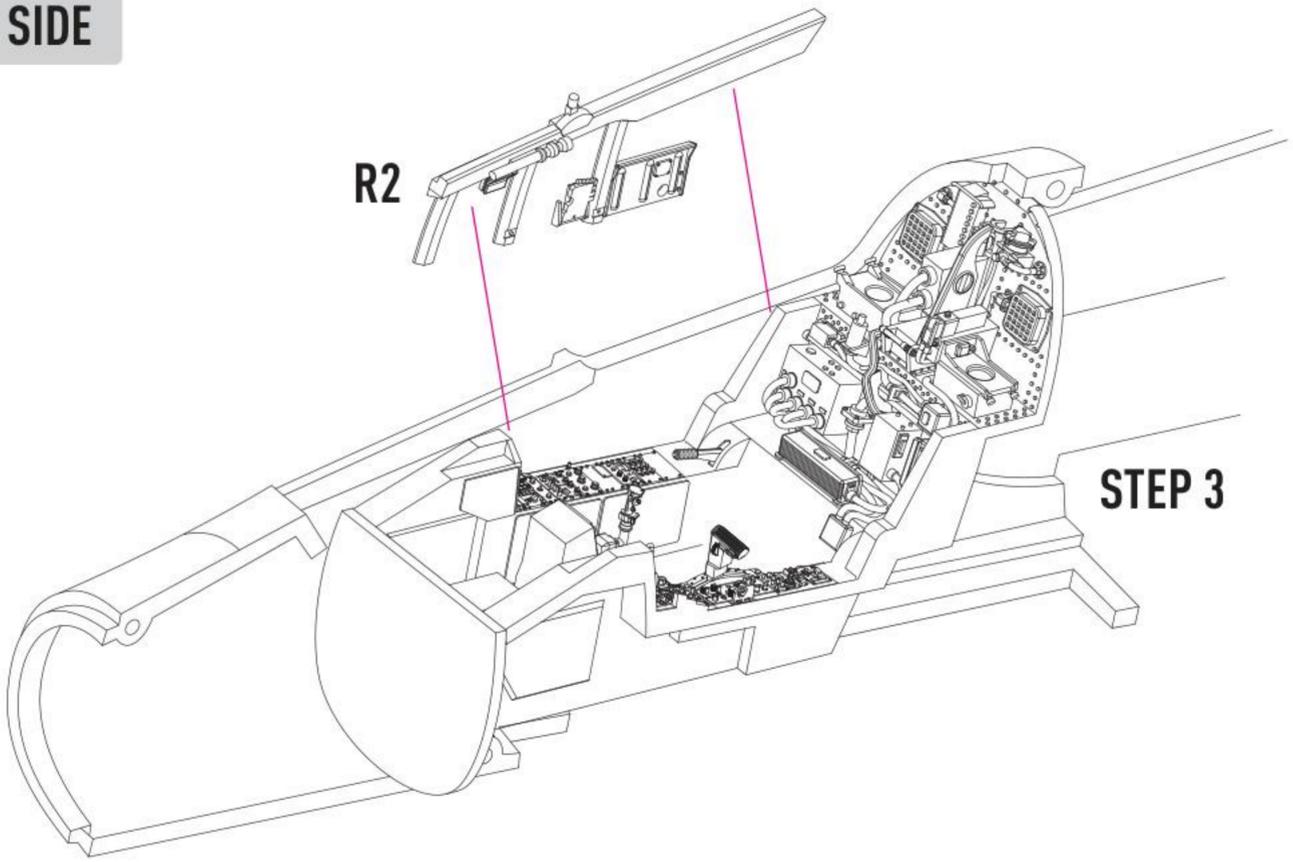


5 LEFT SIDE

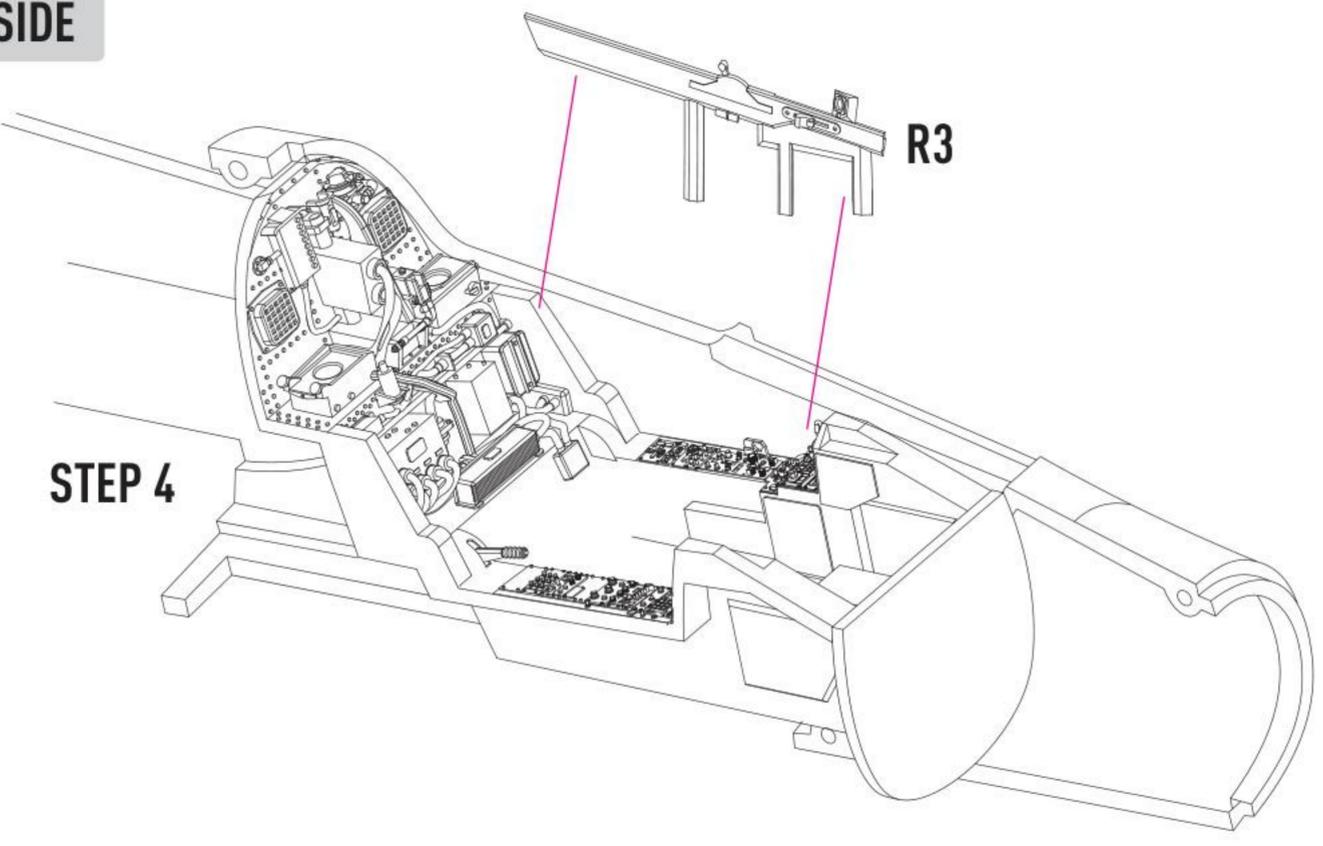

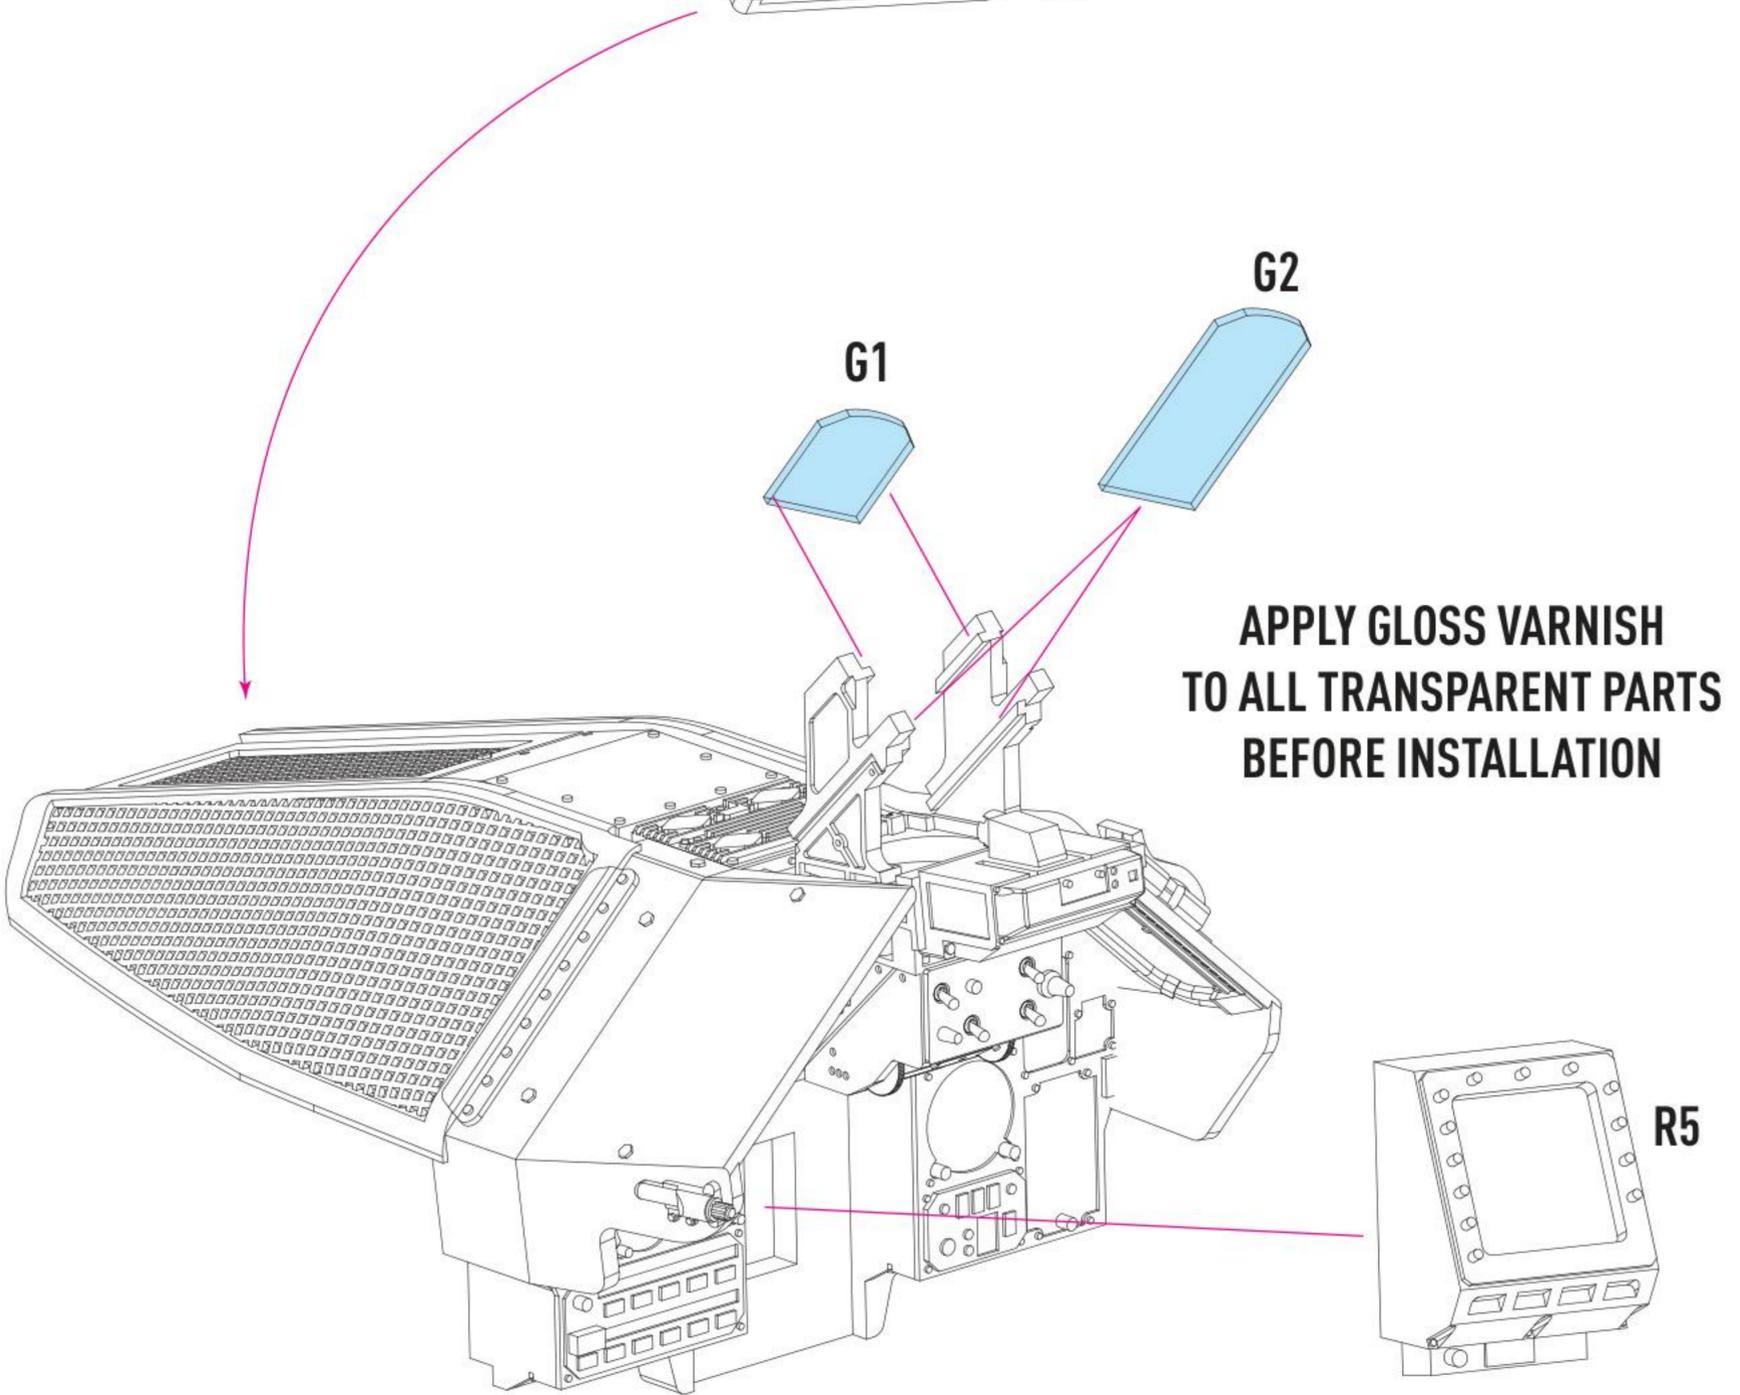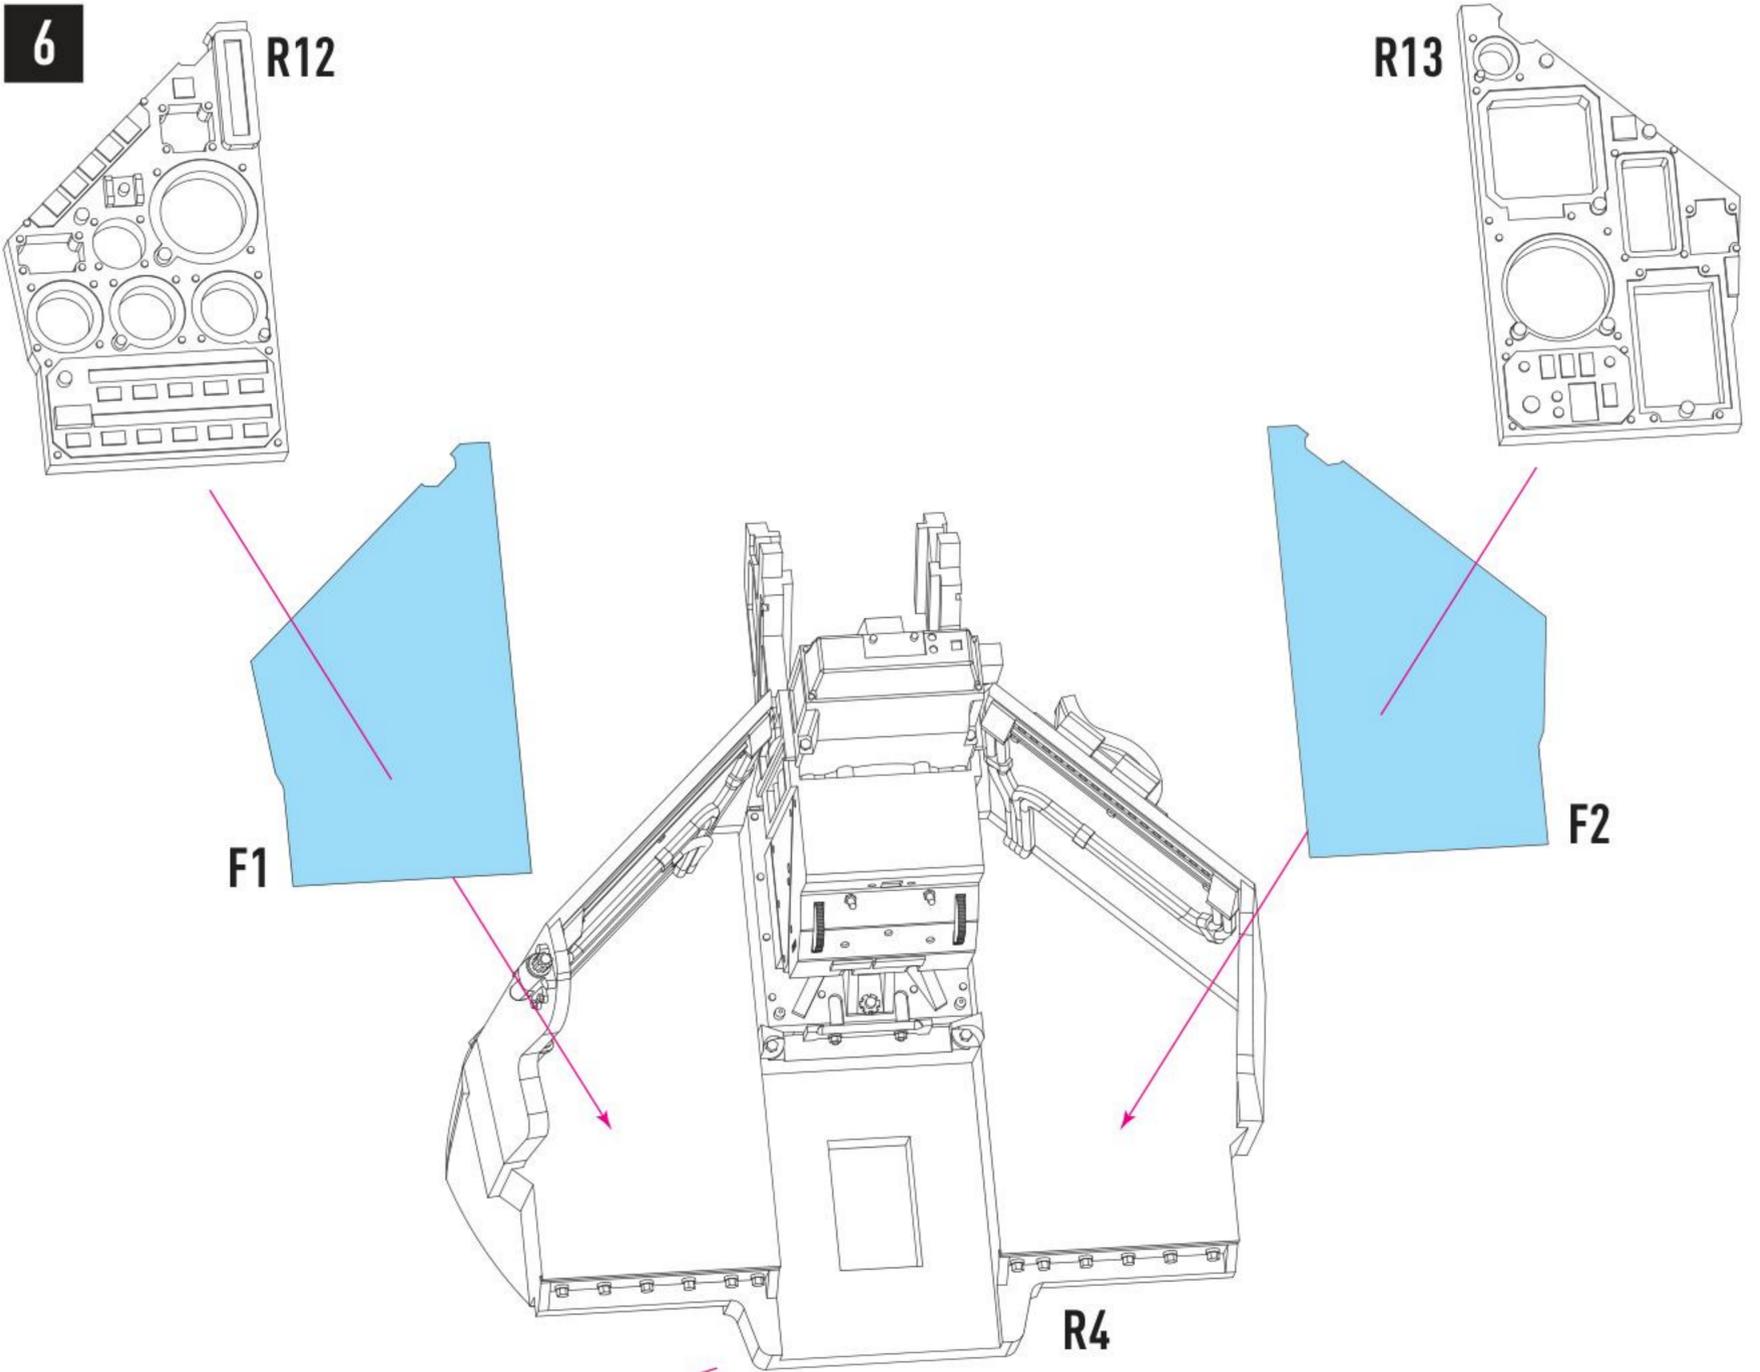


**APPLY GLOSS VARNISH
TO ALL TRANSPARENT PARTS
BEFORE INSTALLATION**


7

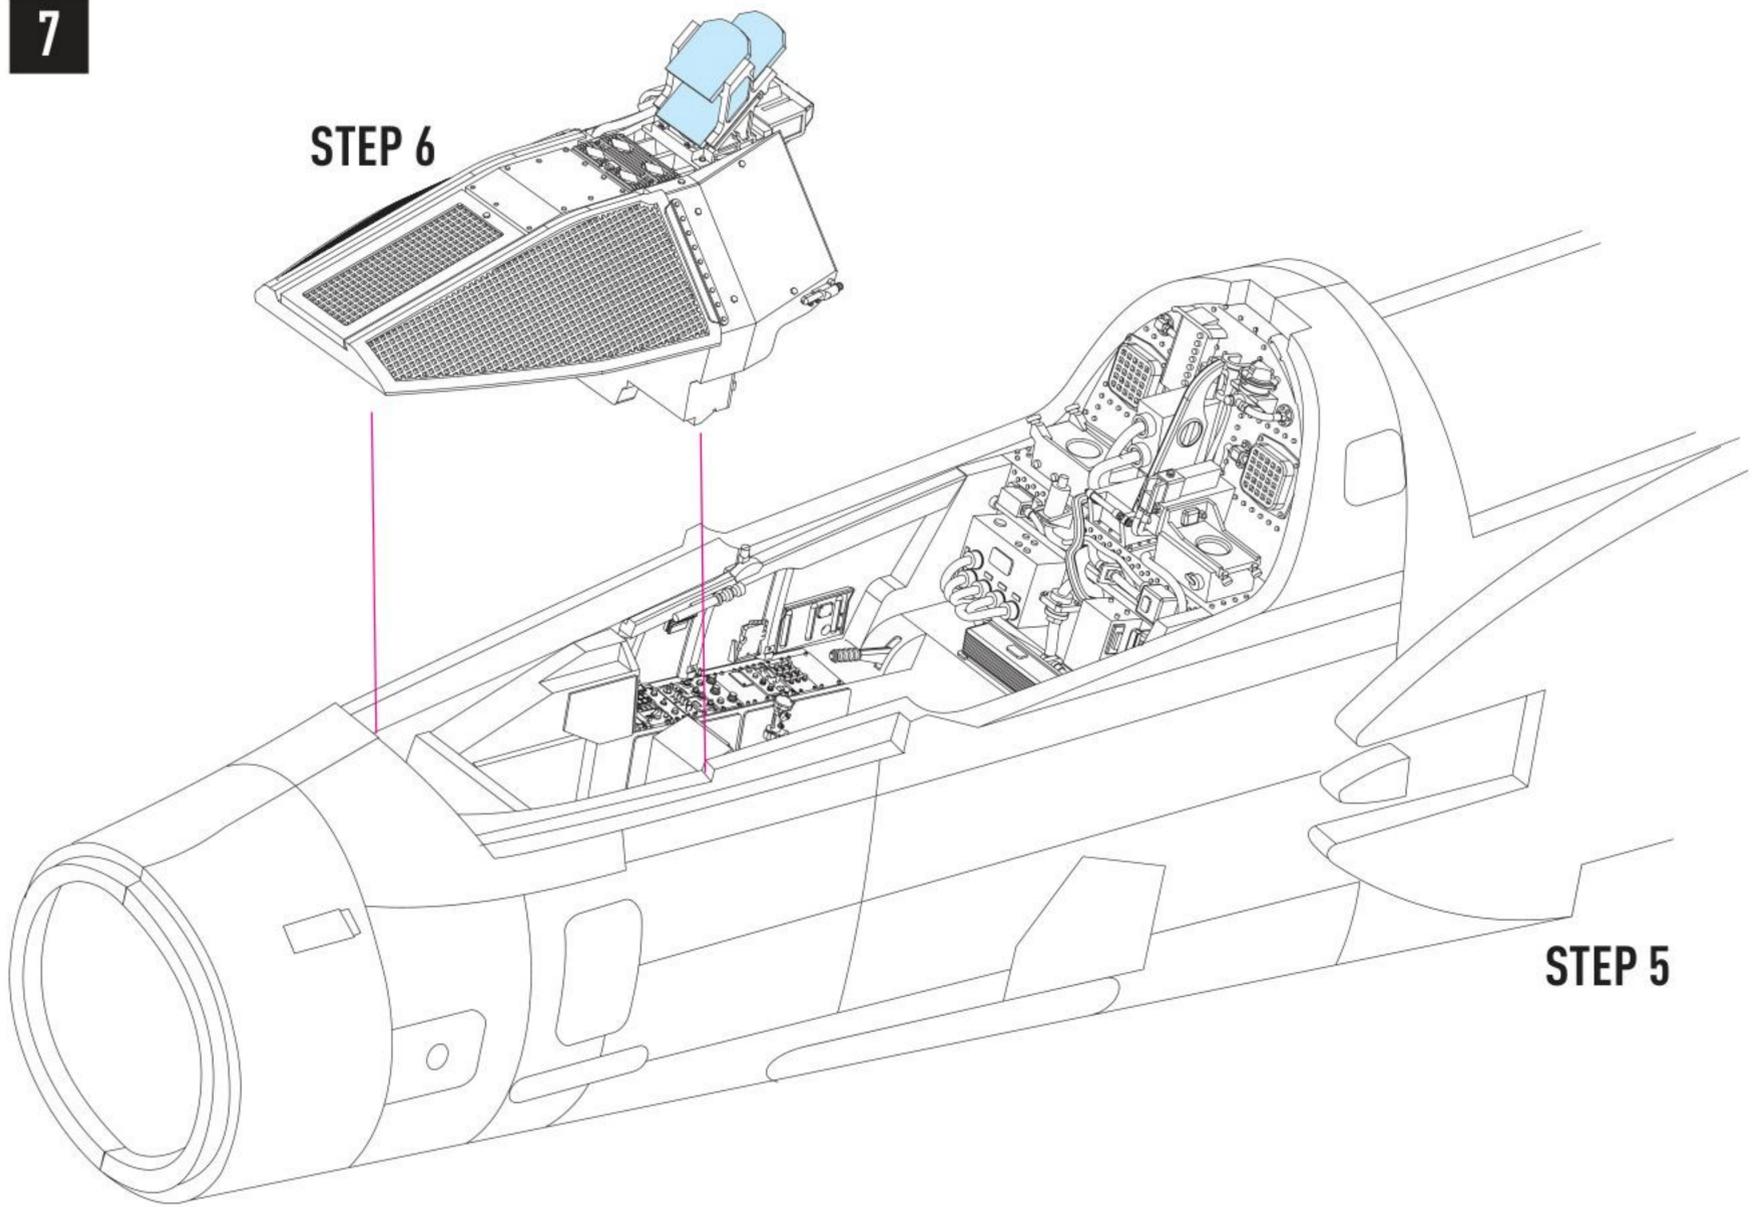


8

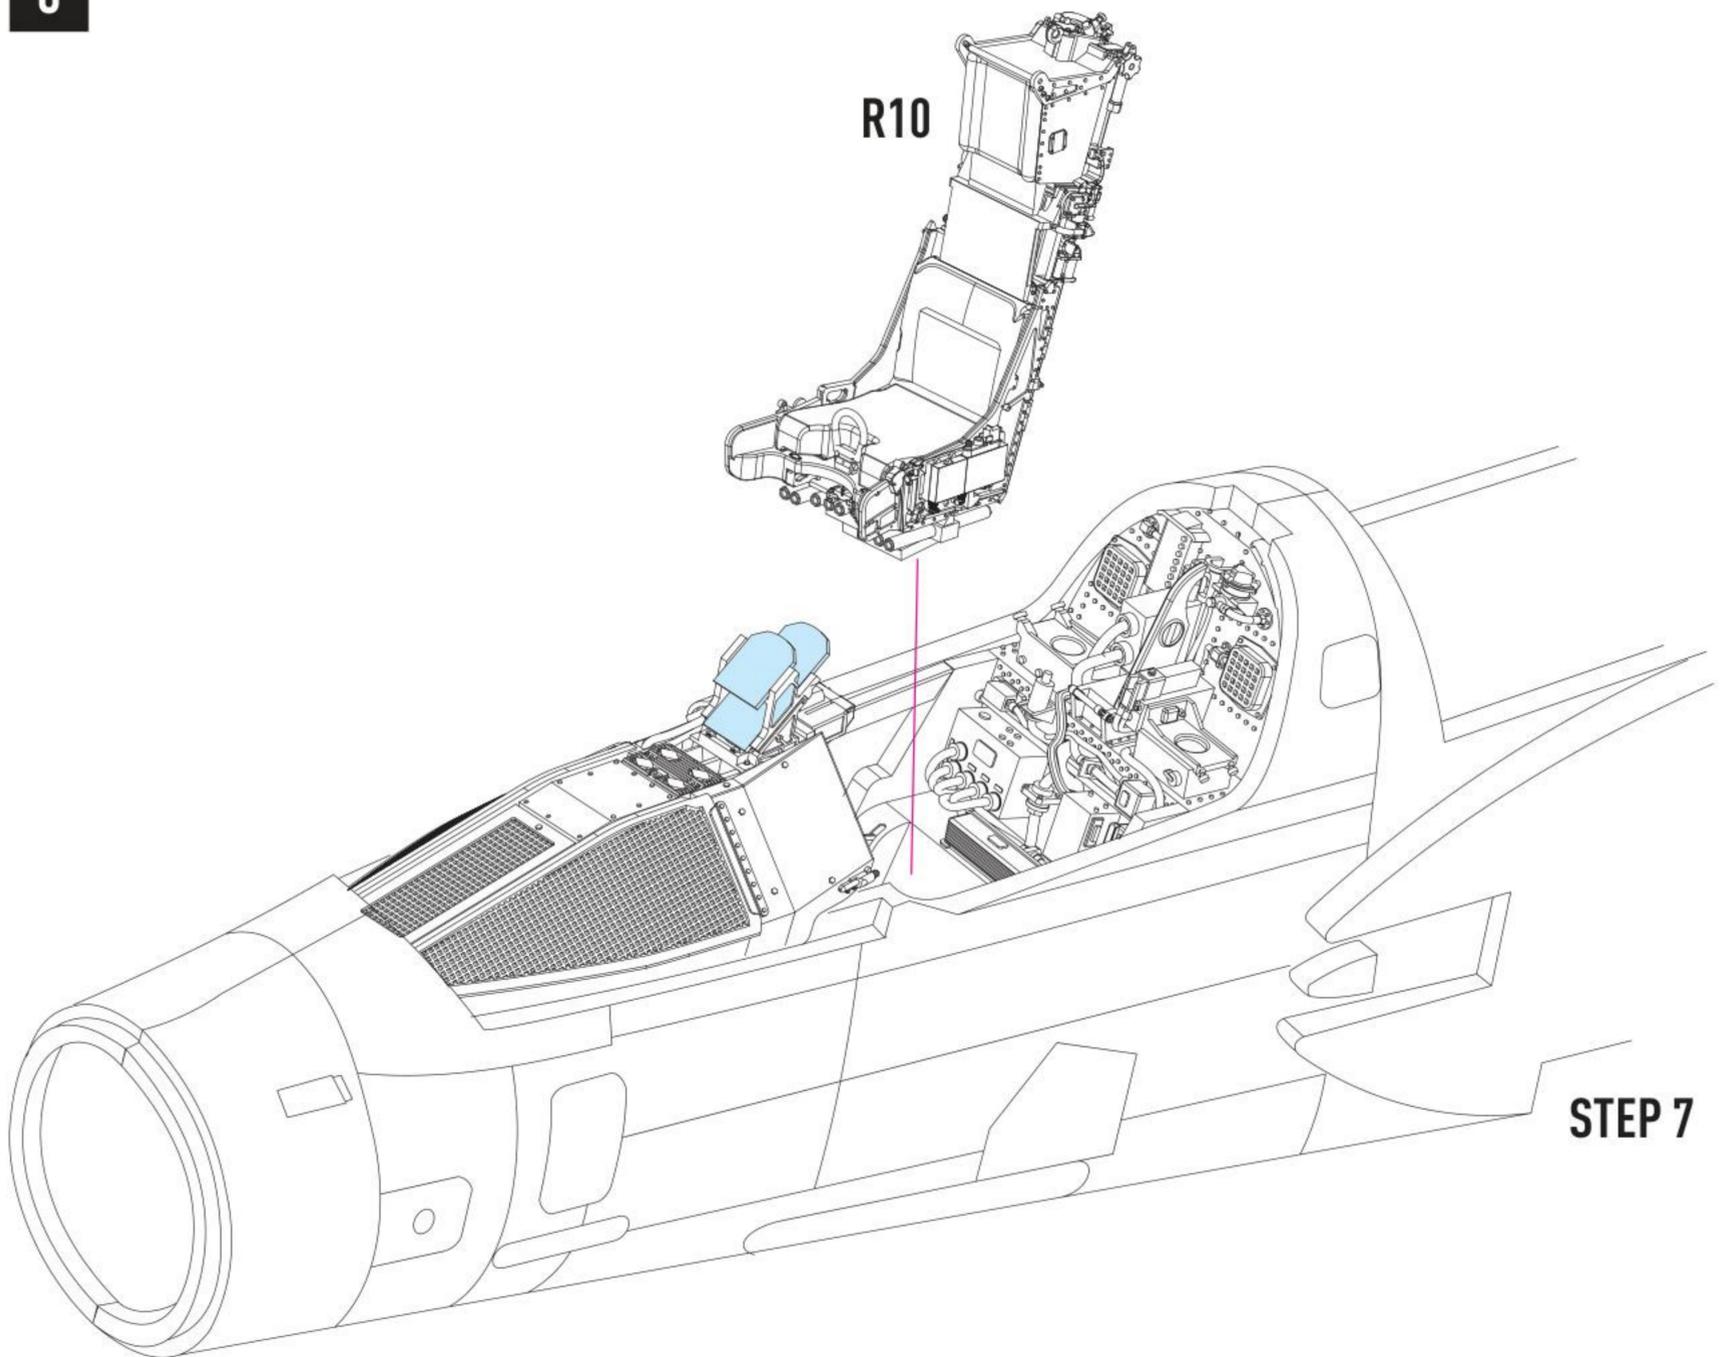


9

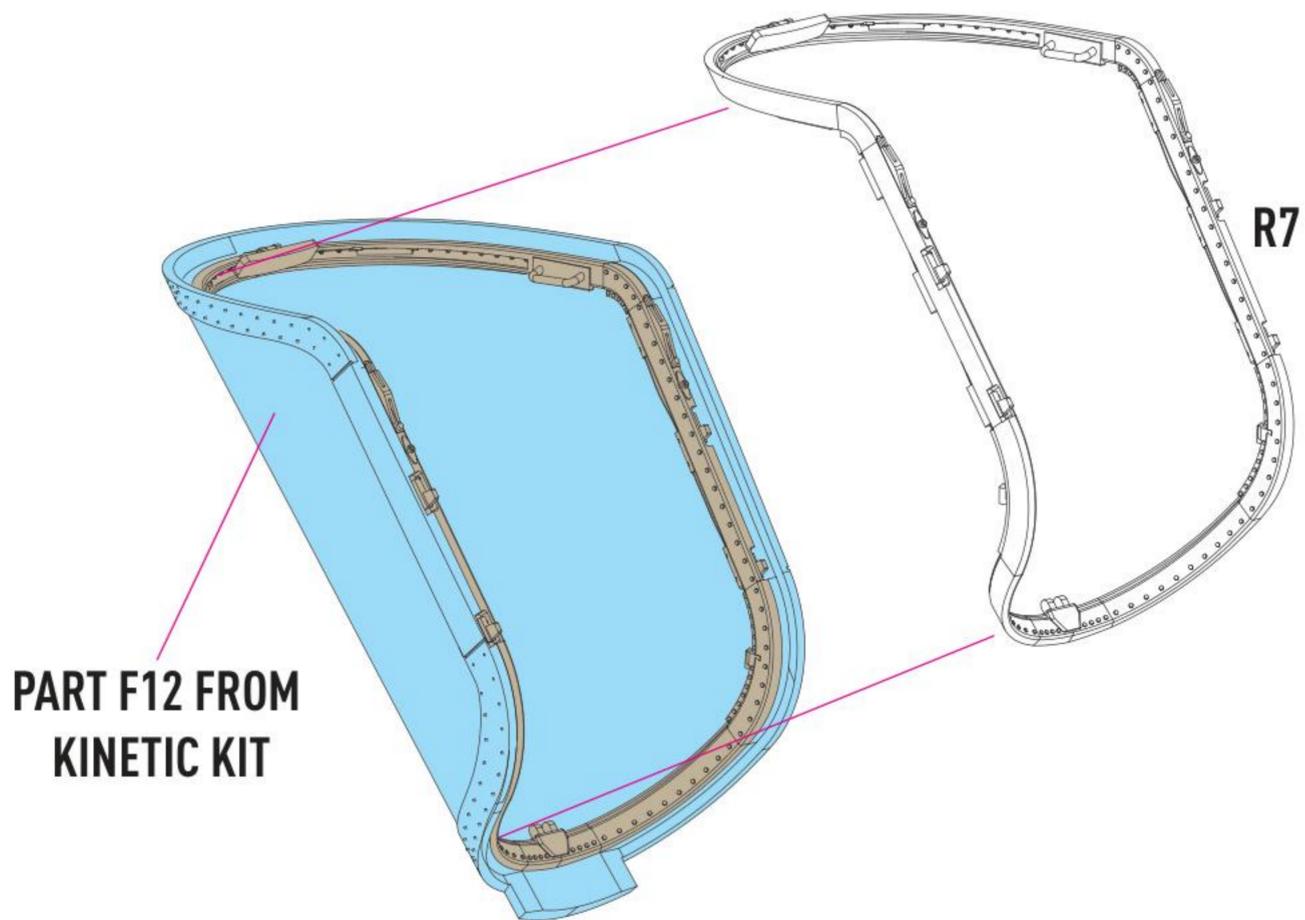


10 FOR OPEN CANOPY

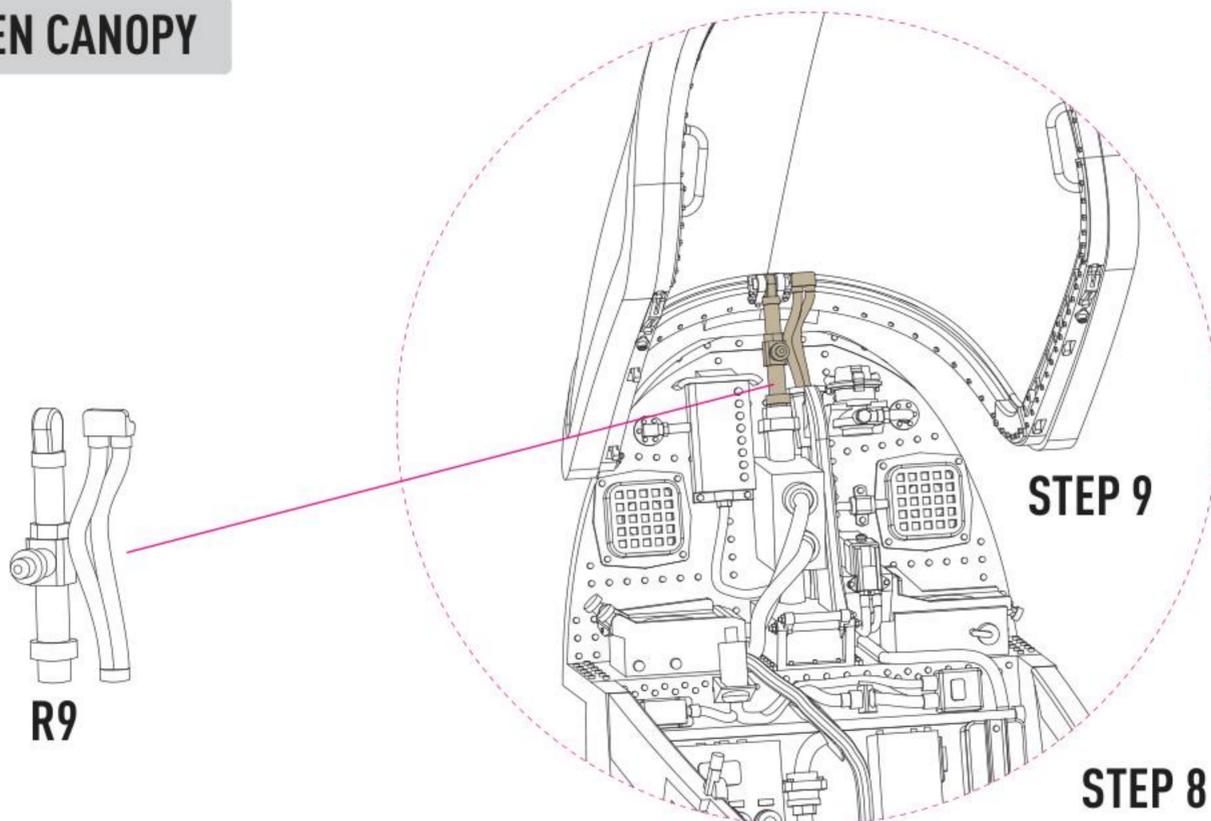


11 FOR CLOSED CANOPY

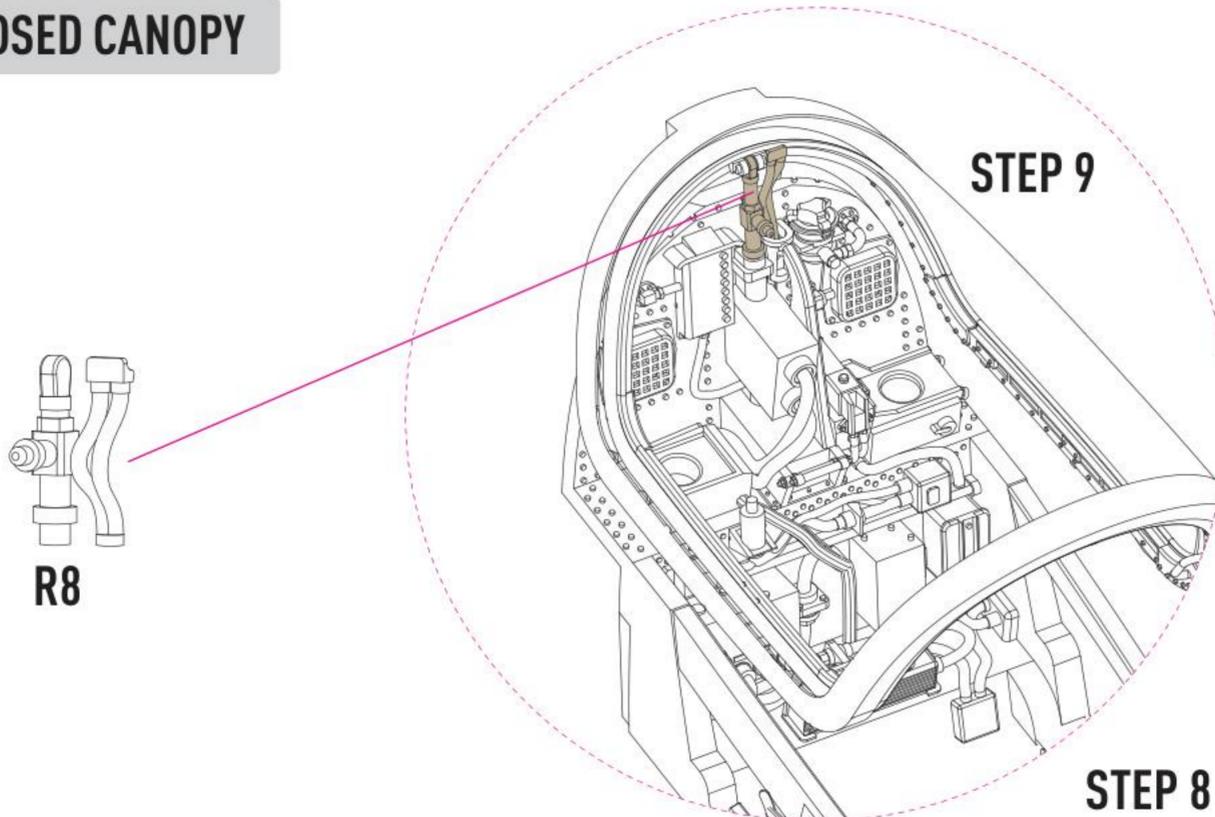

OPEN CANOPY

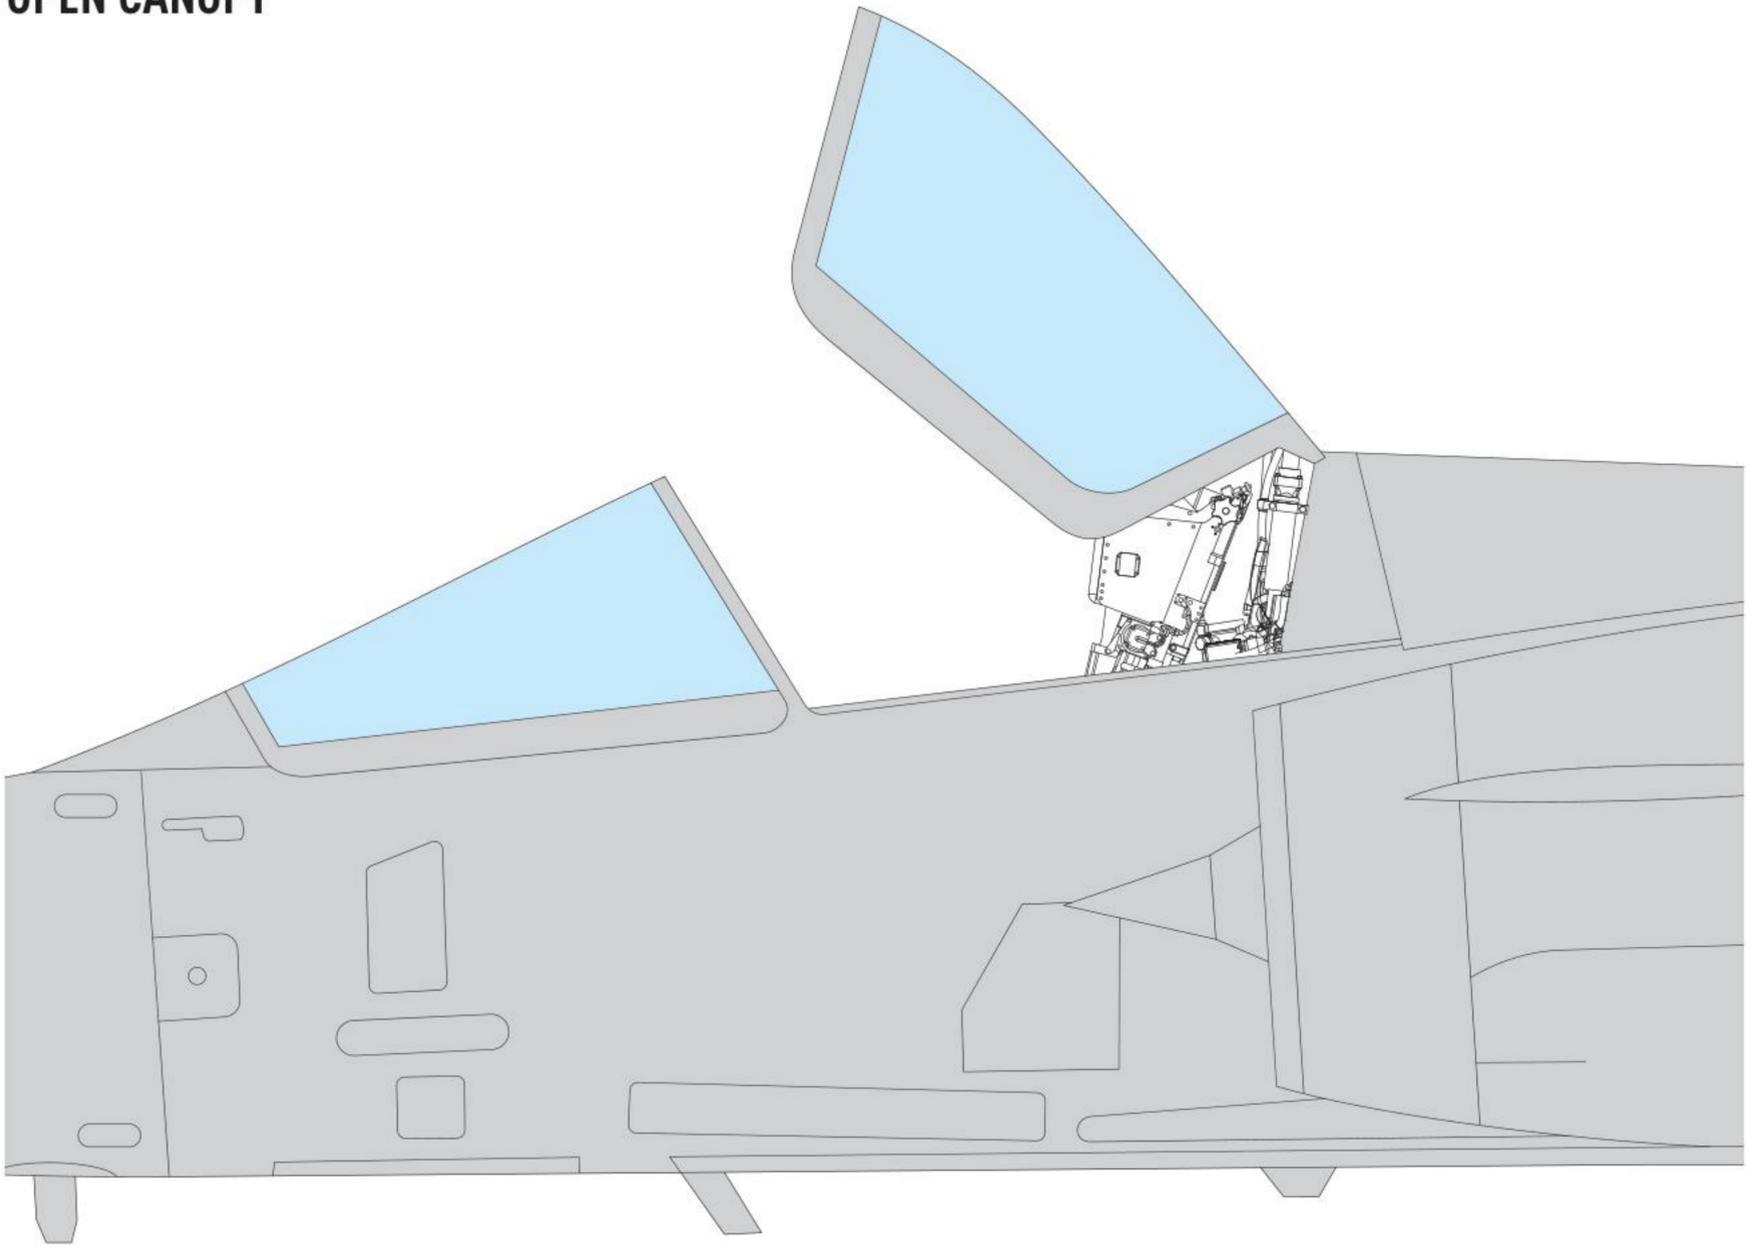

CLOSED CANOPY

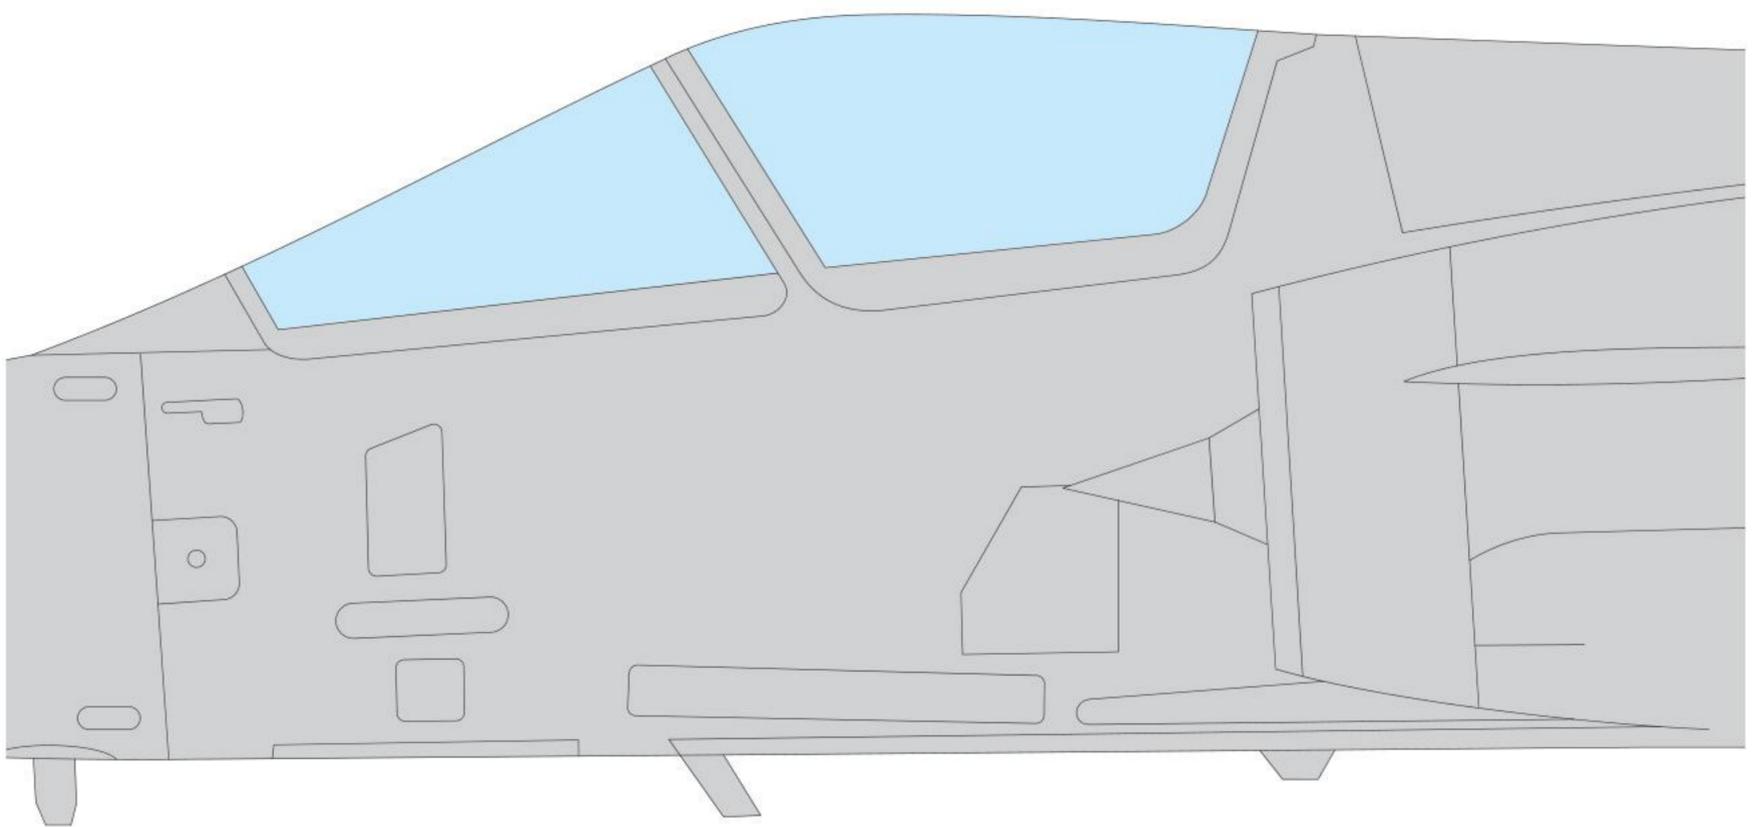

DECAL INSTRUCTION

