





USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

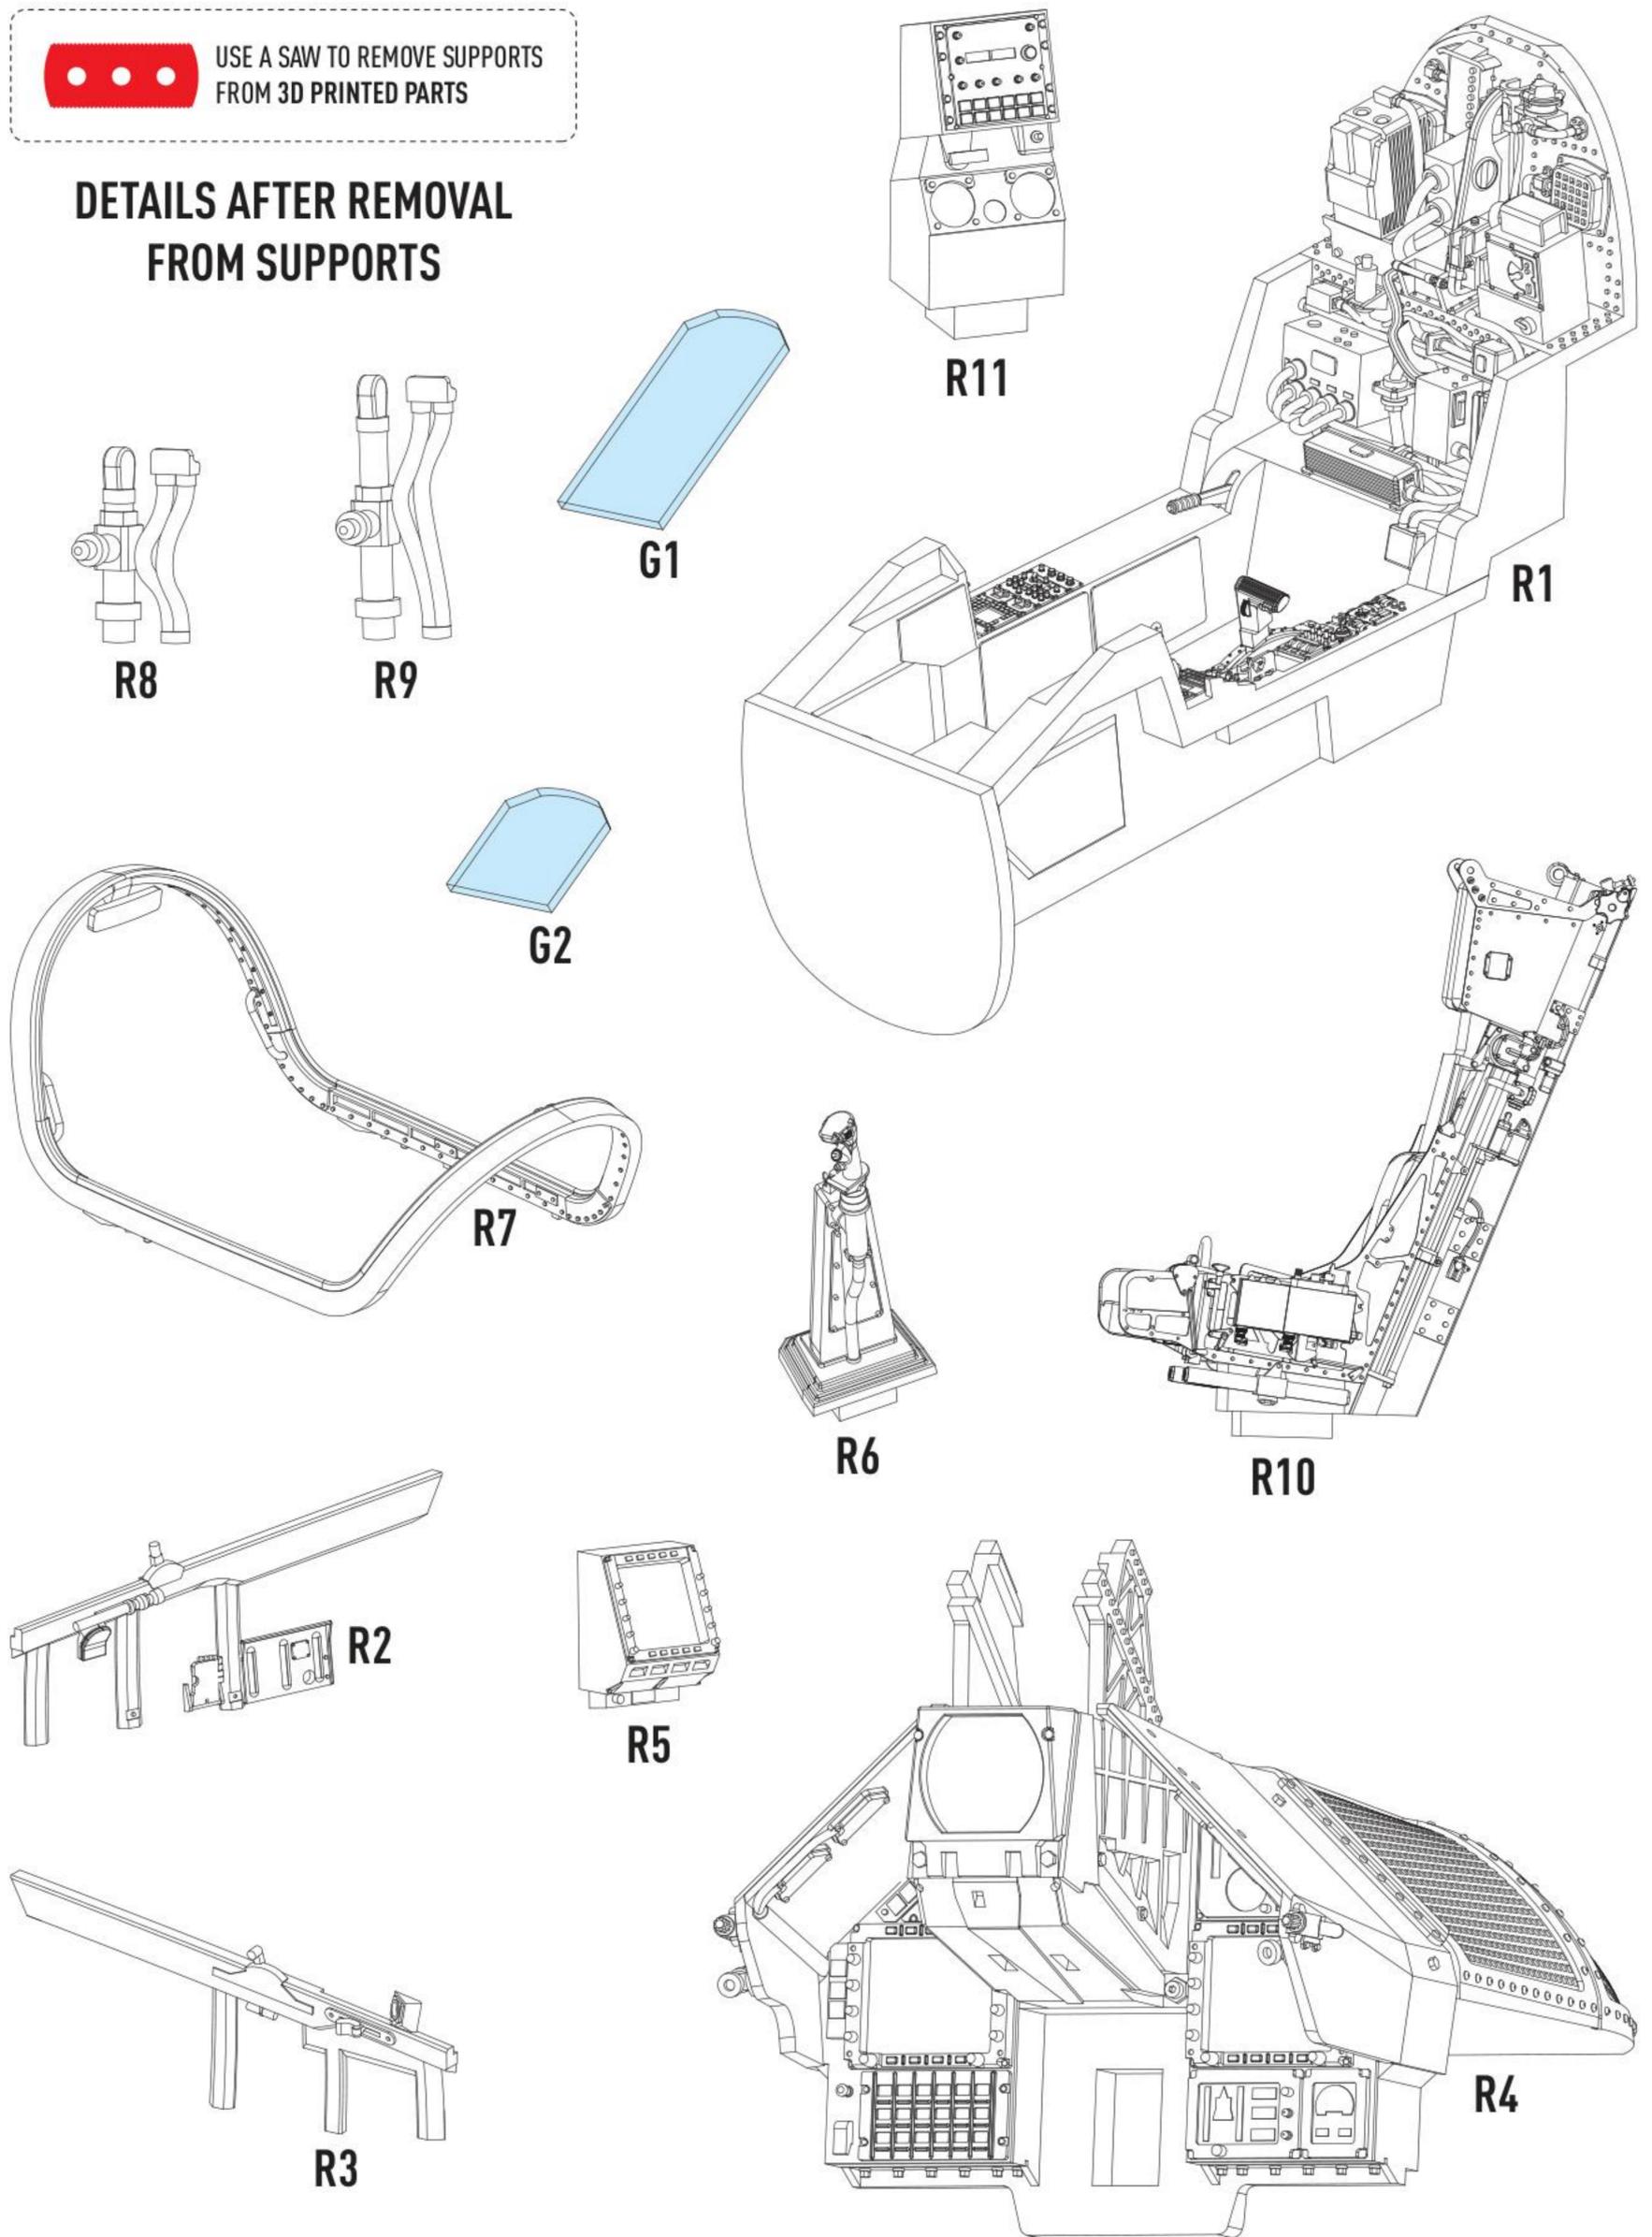


1

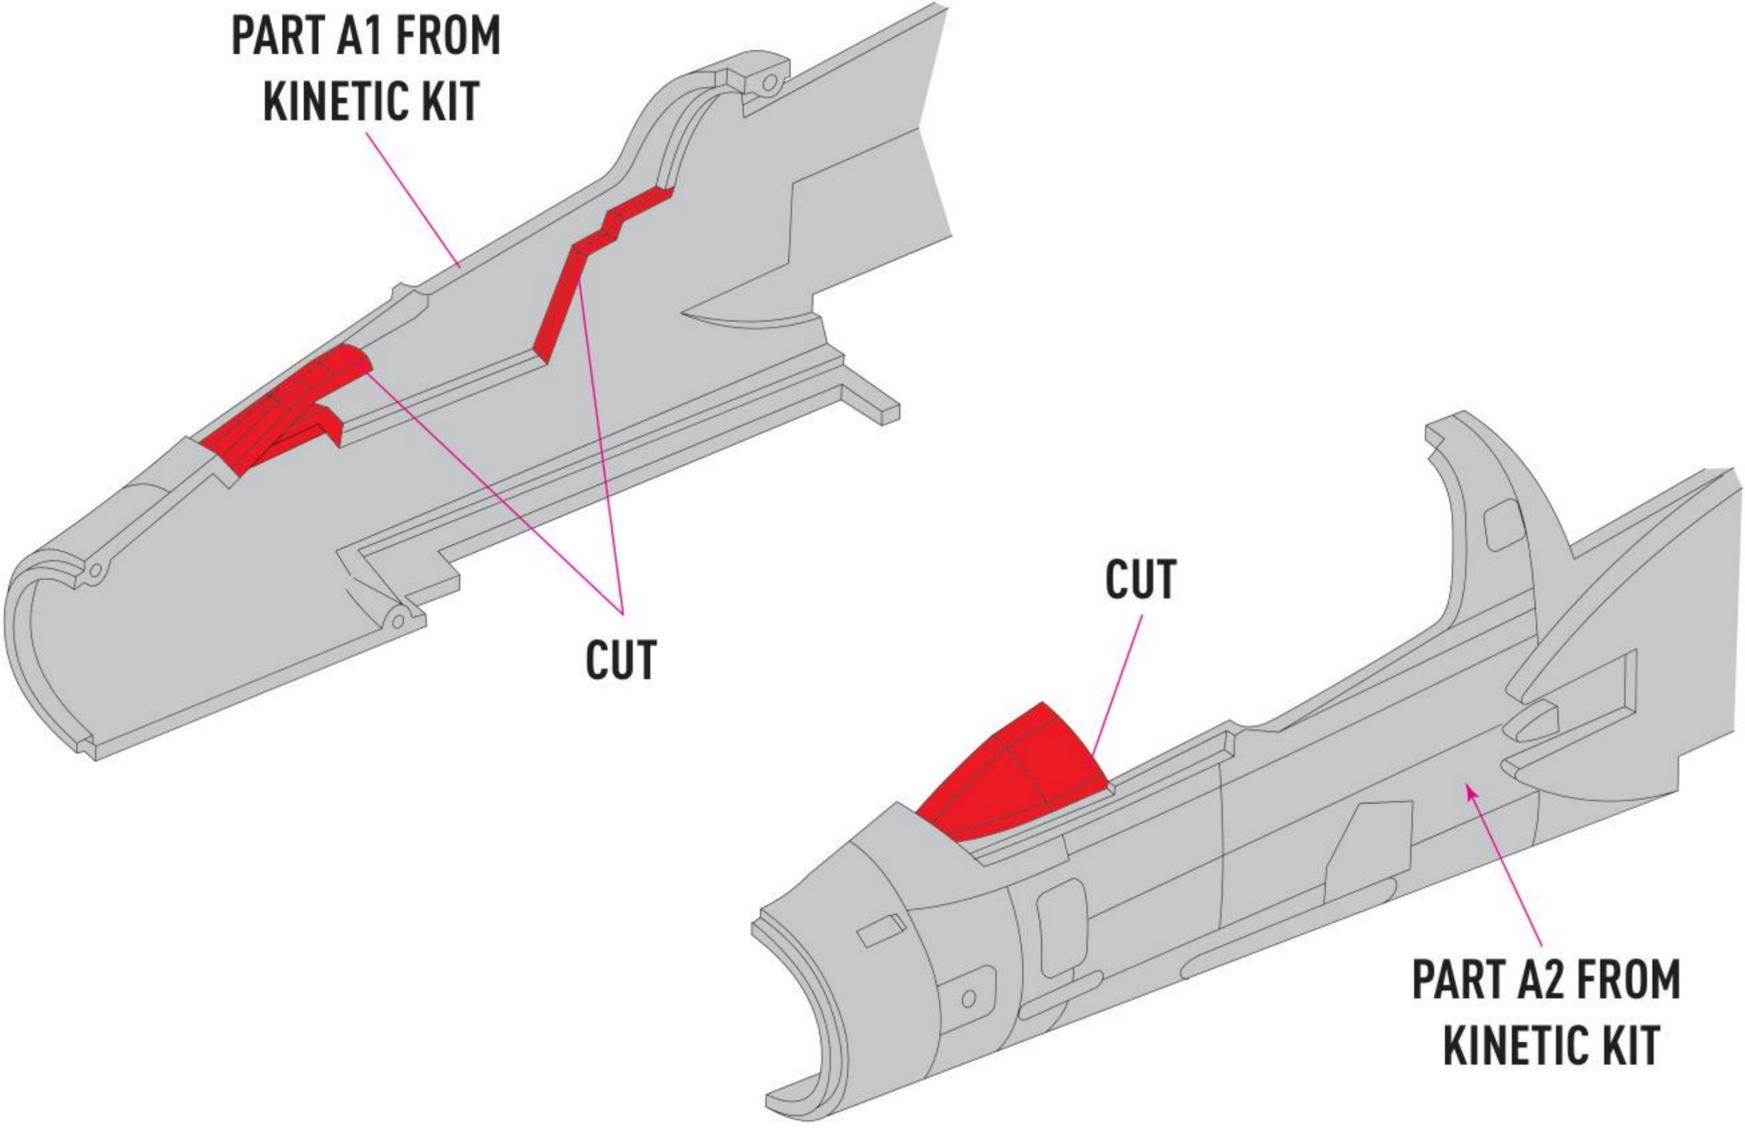


2

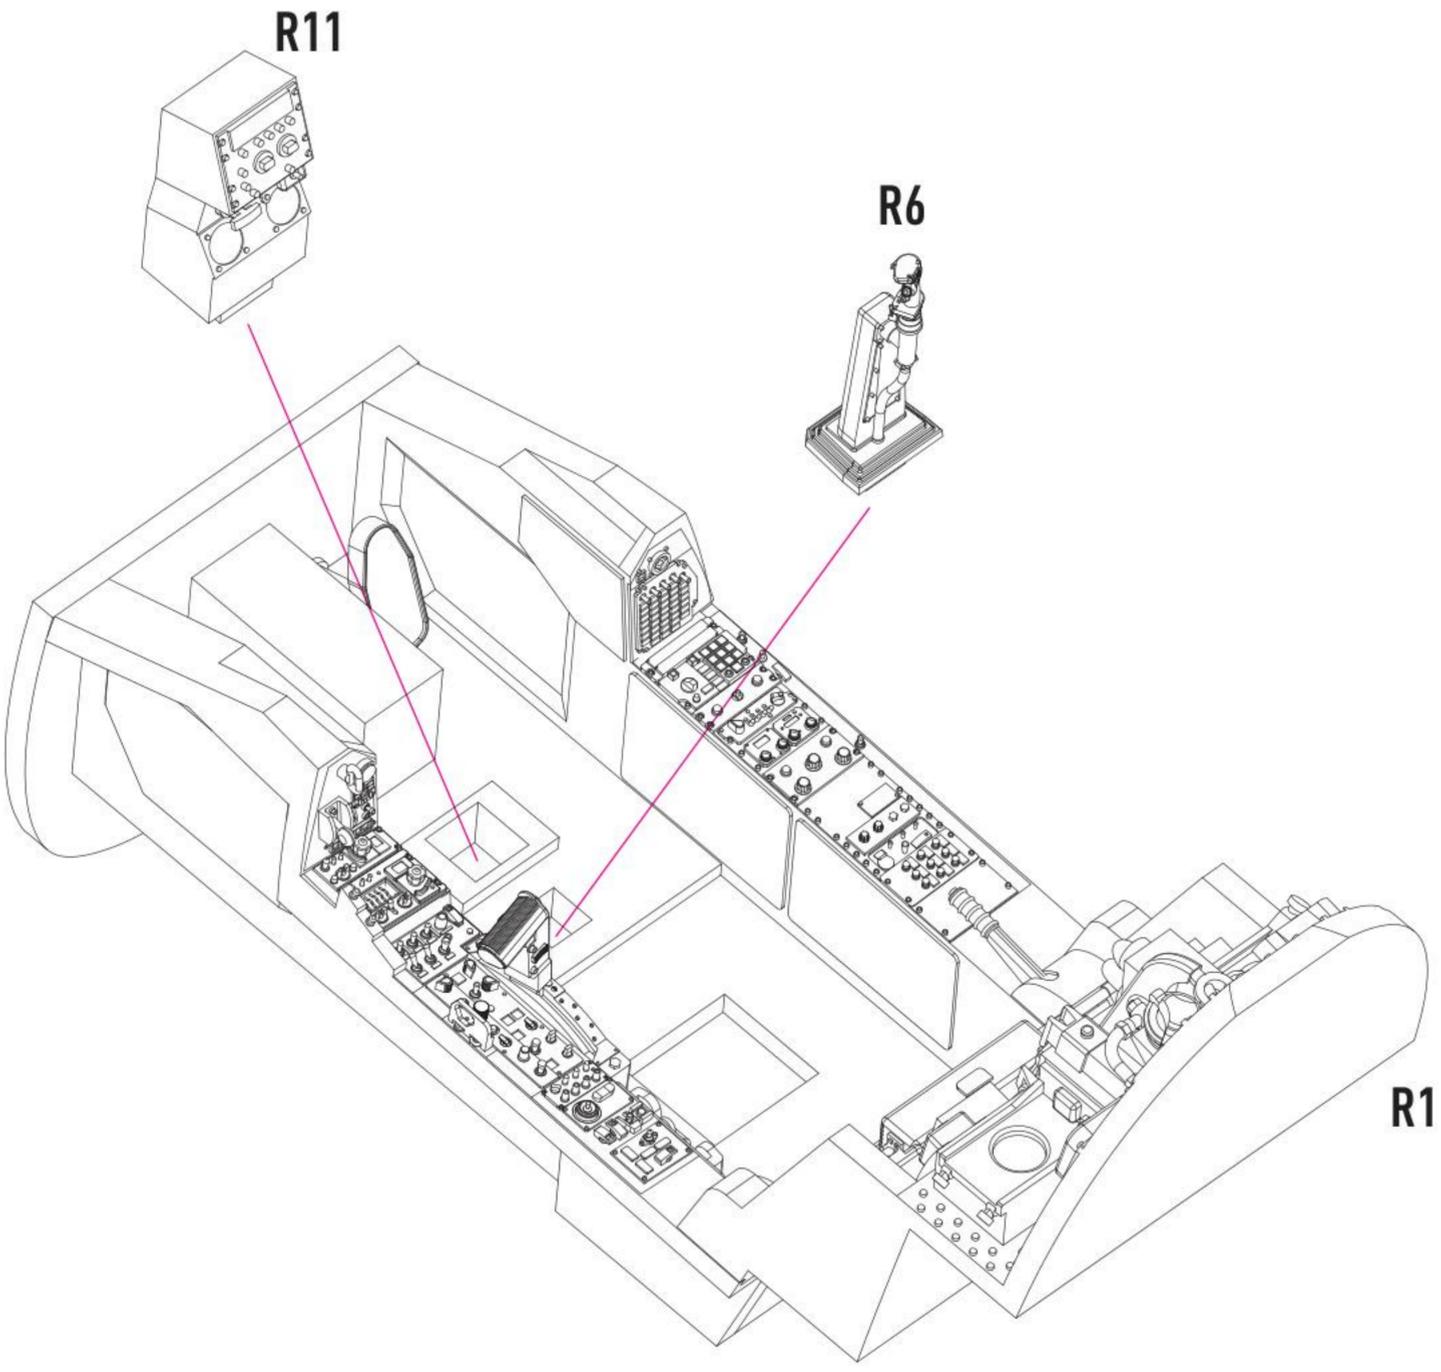


3

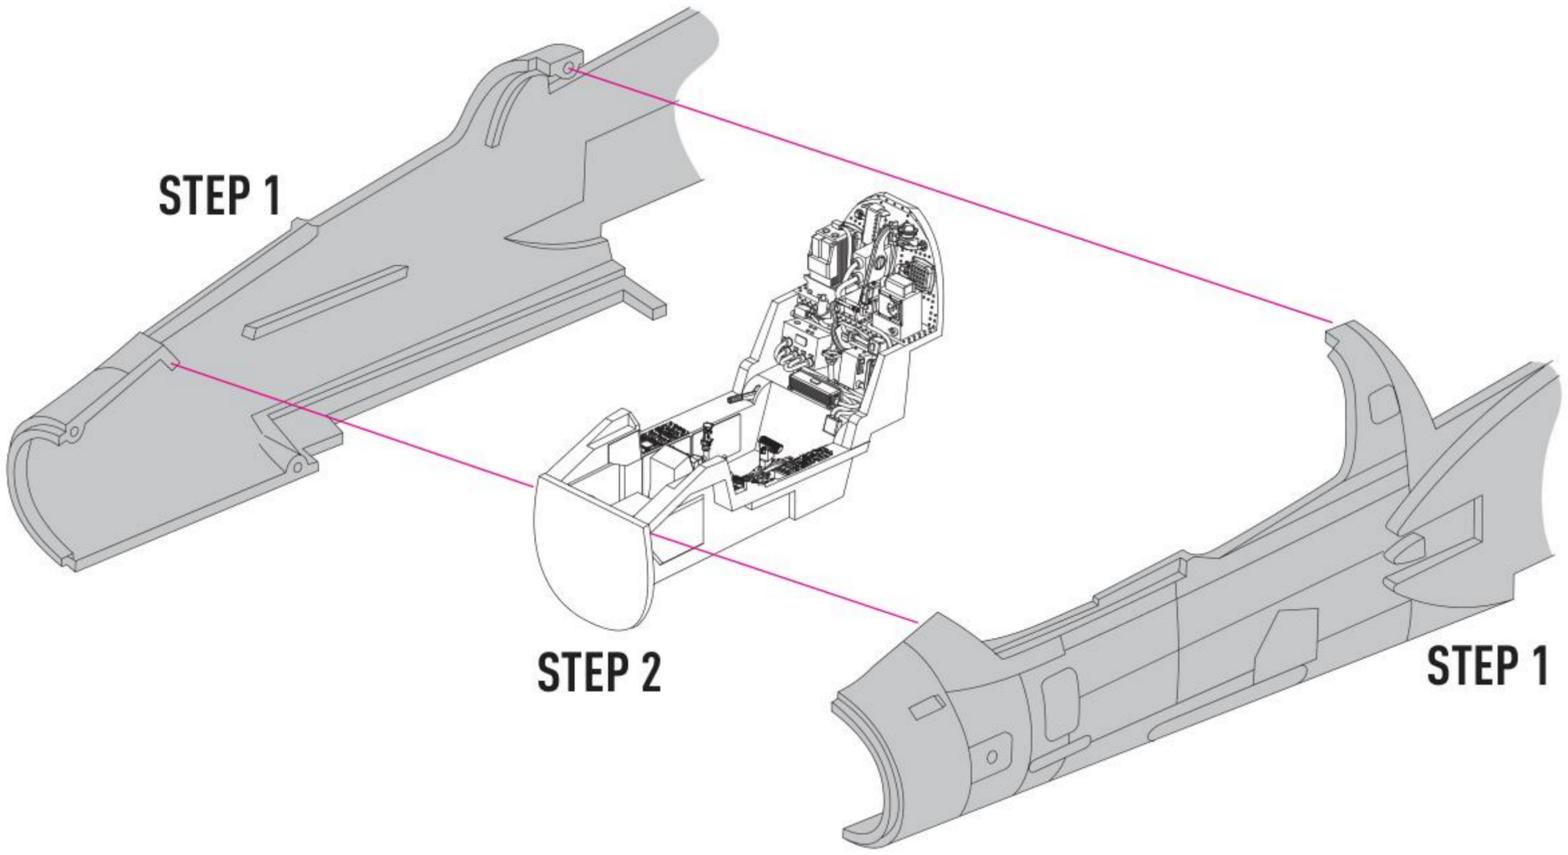

4 RIGHT SIDE

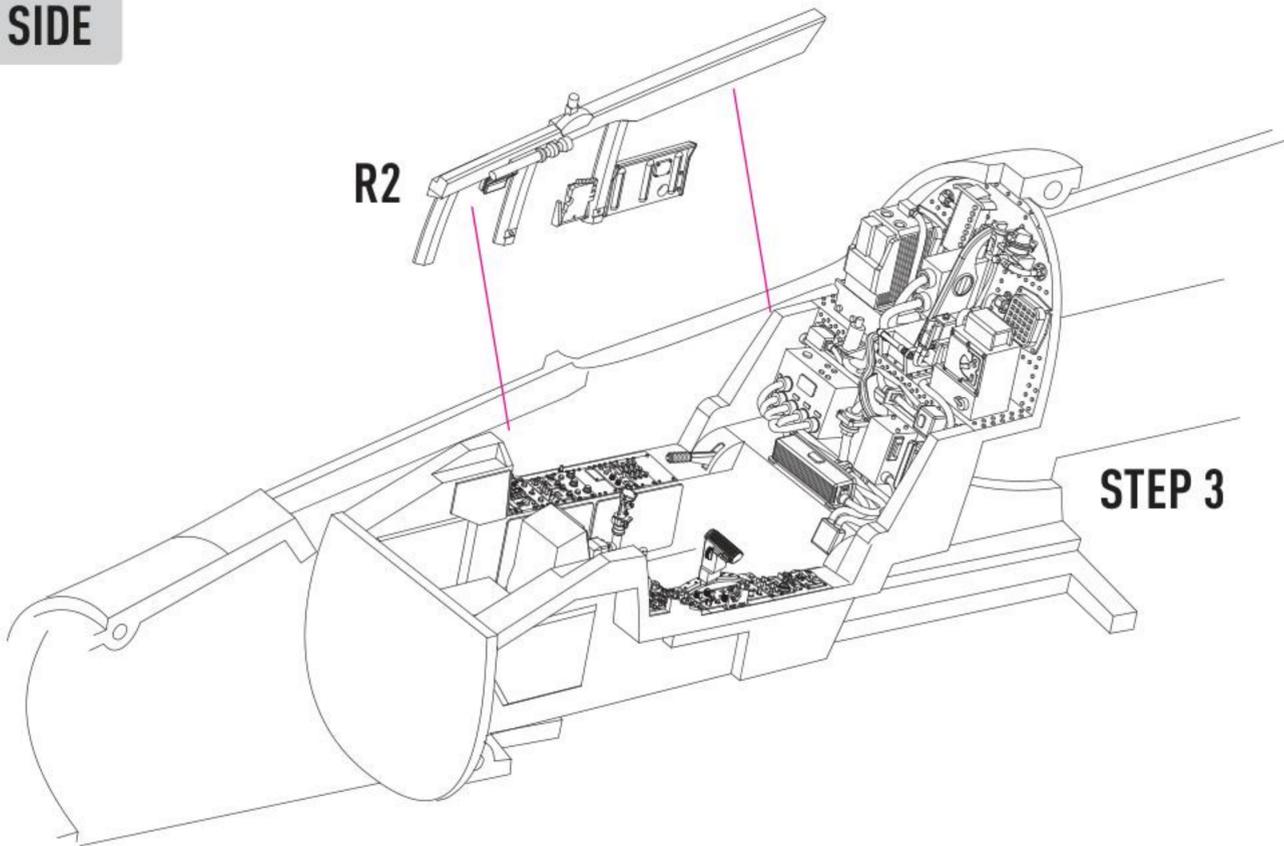


5 LEFT SIDE

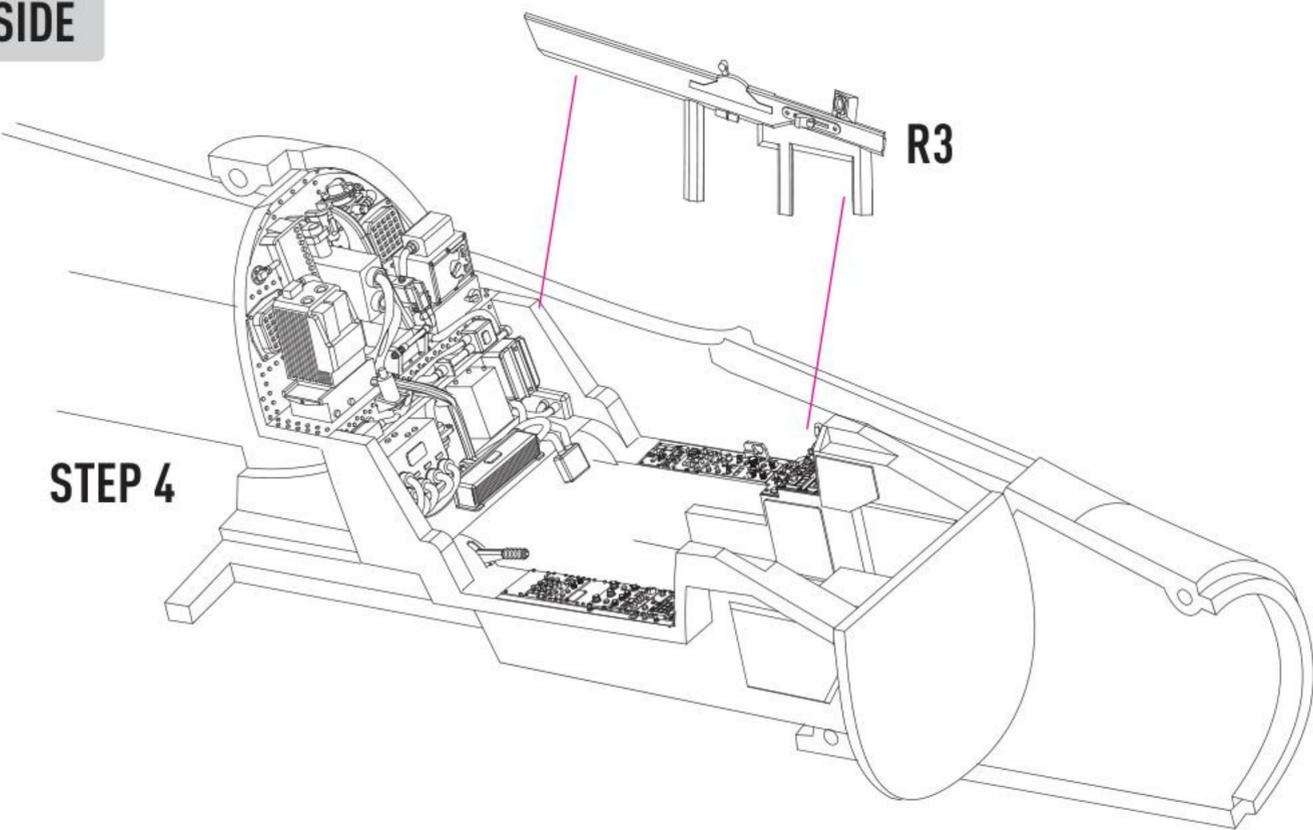


6

APPLY GLOSS VARNISH TO ALL TRANSPARENT PARTS BEFORE INSTALLATION

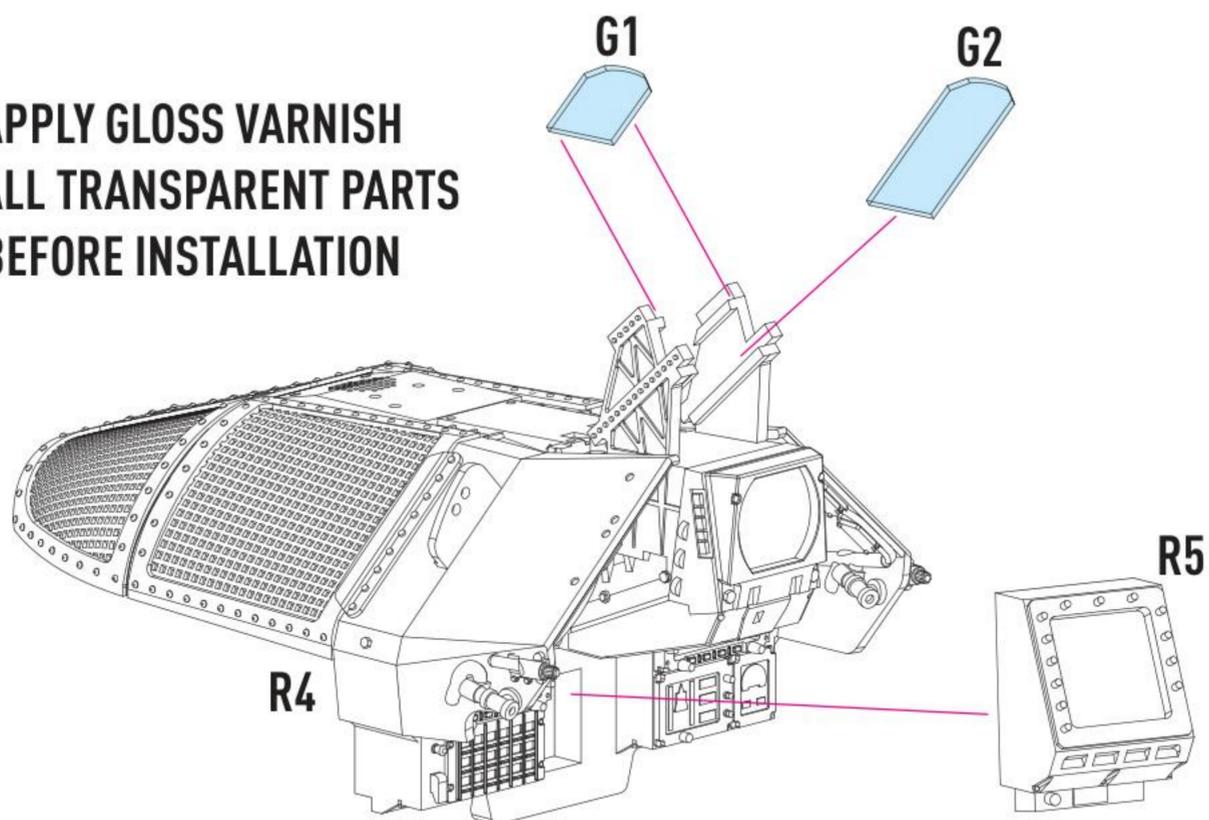


7

STEP 6

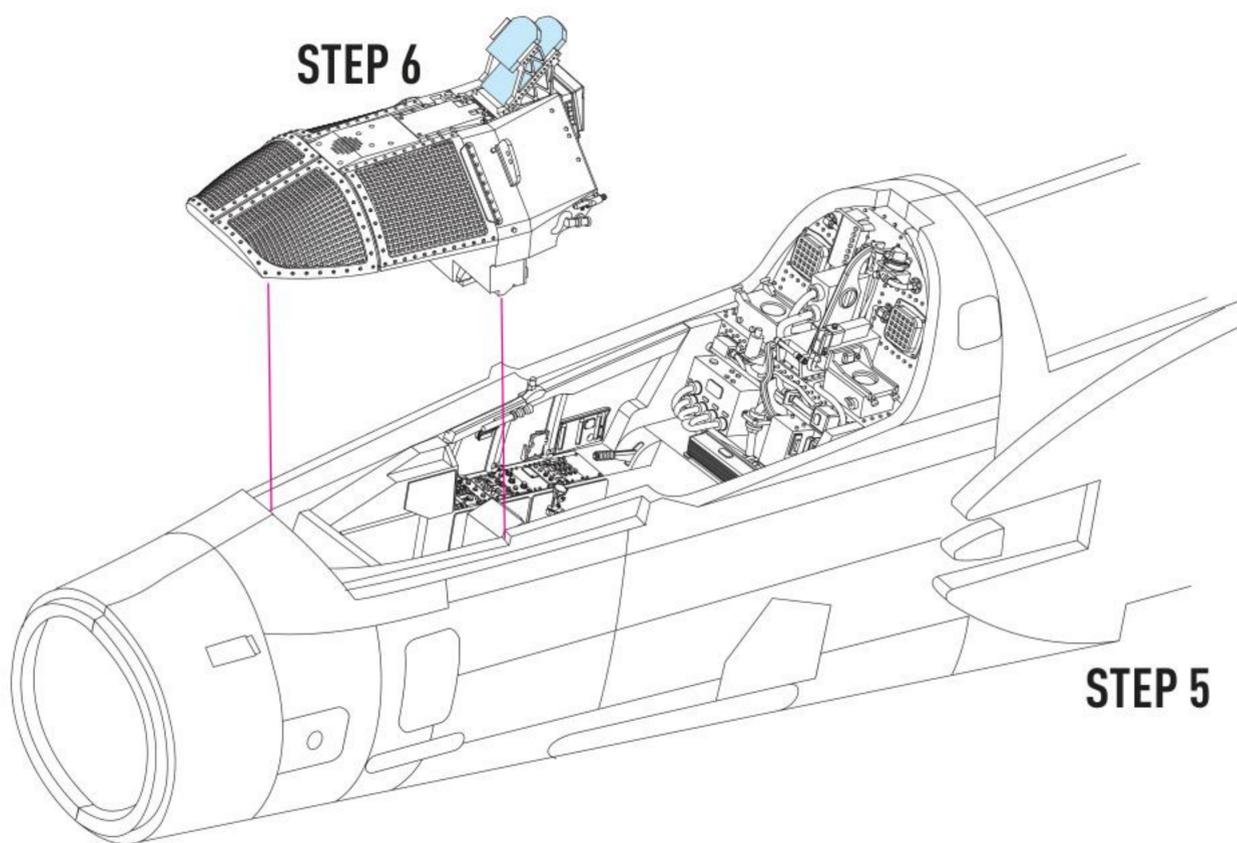


8


R10

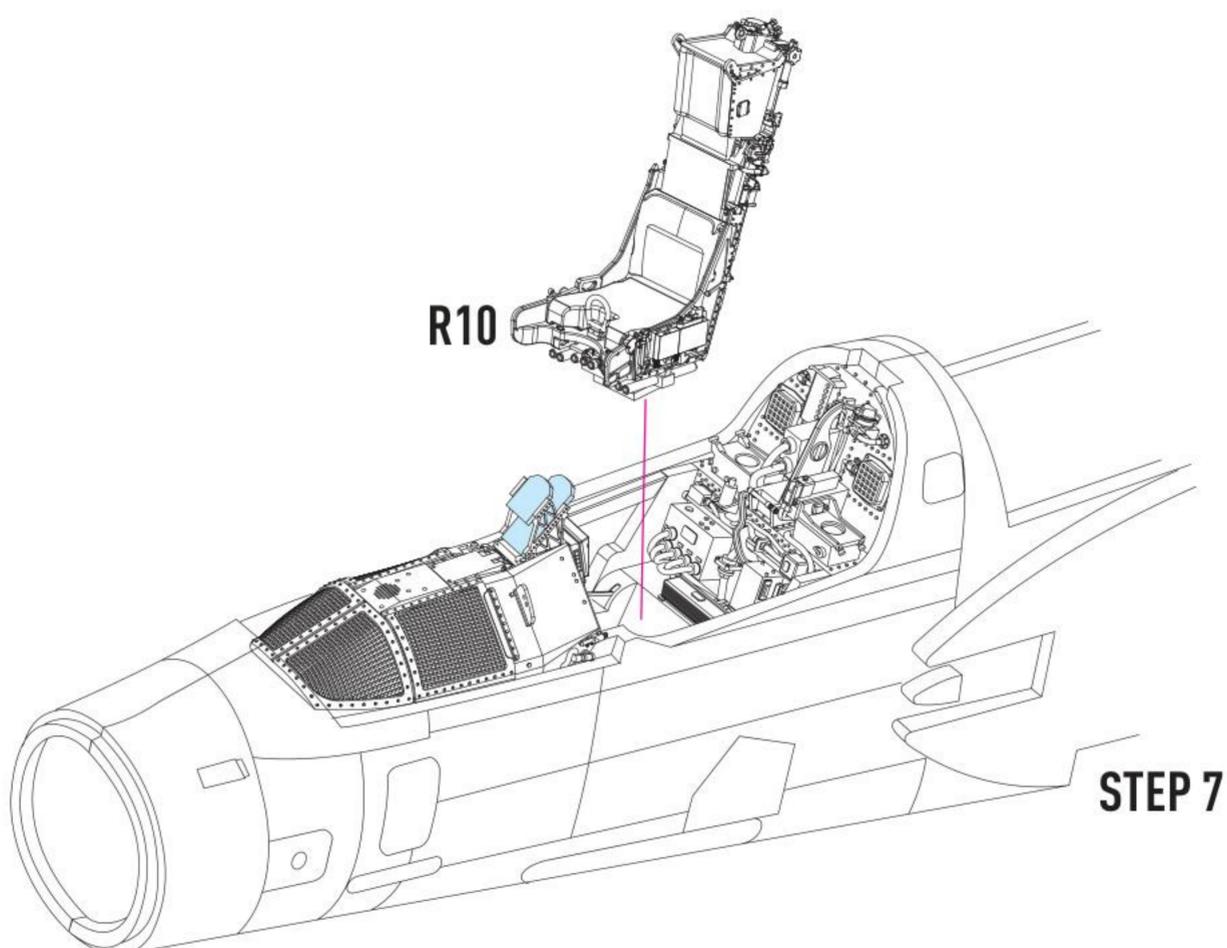


9

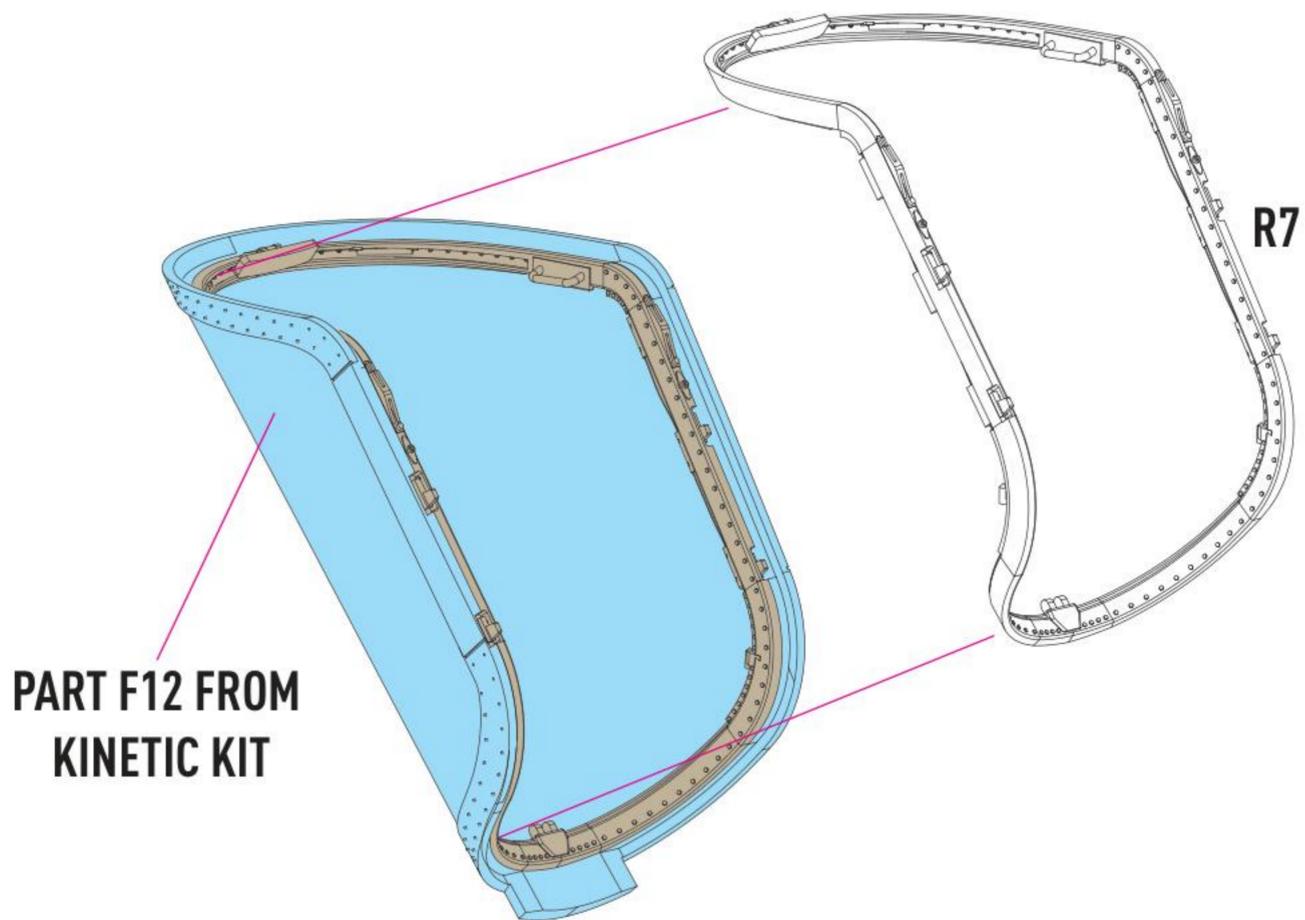


10 FOR OPEN CANOPY

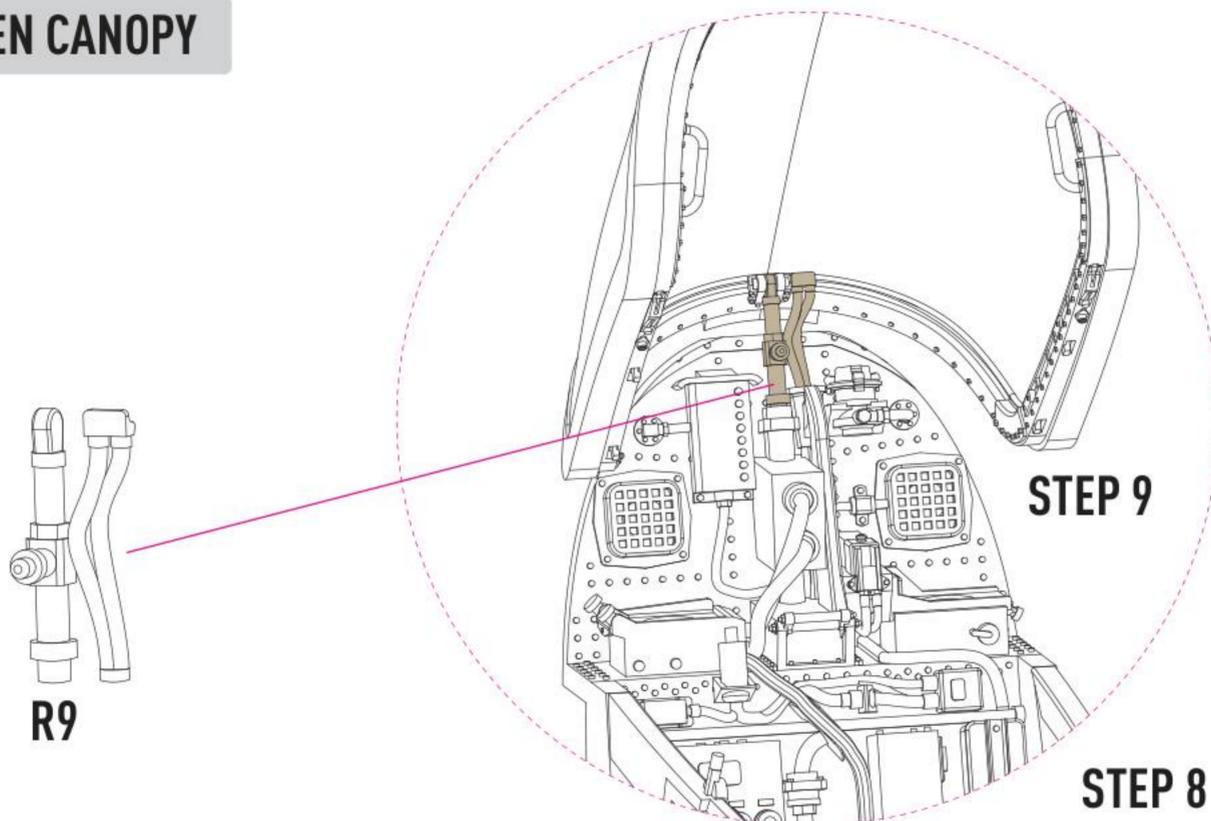


11 FOR CLOSED CANOPY

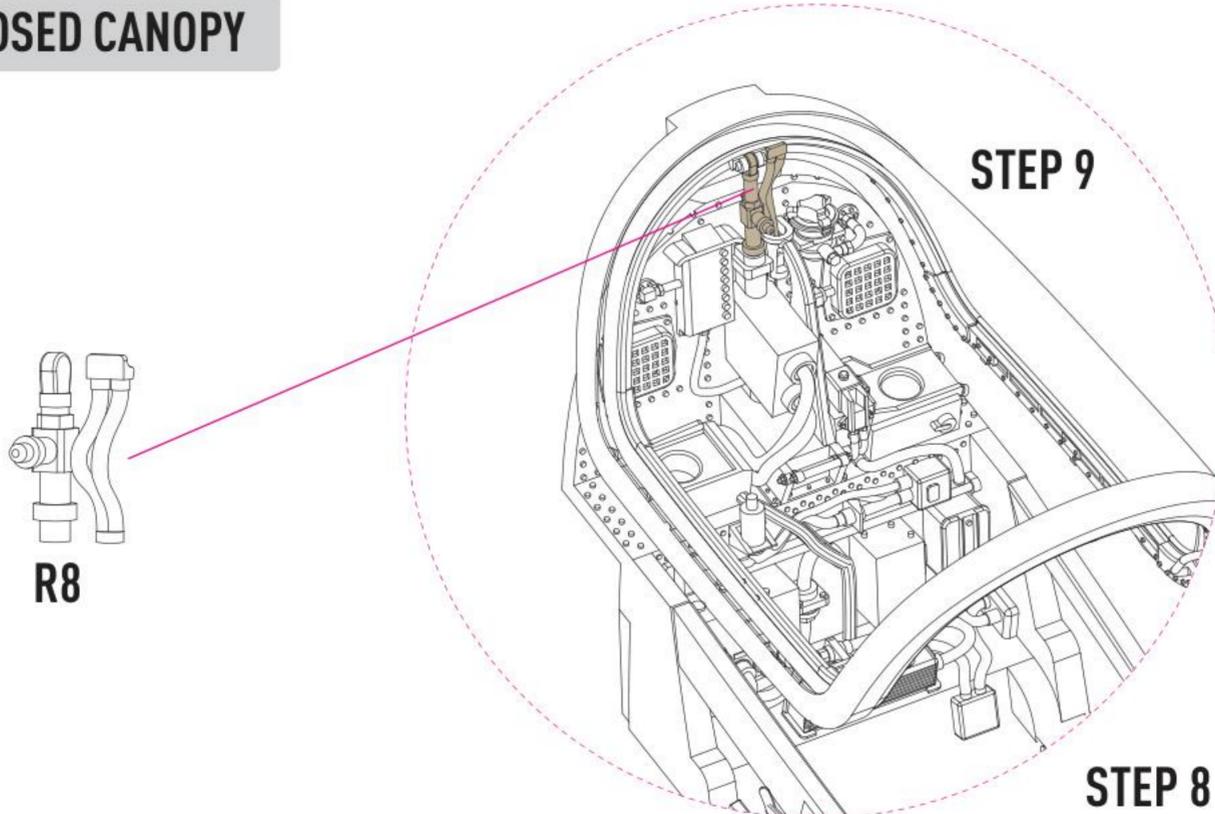


OPEN CANOPY

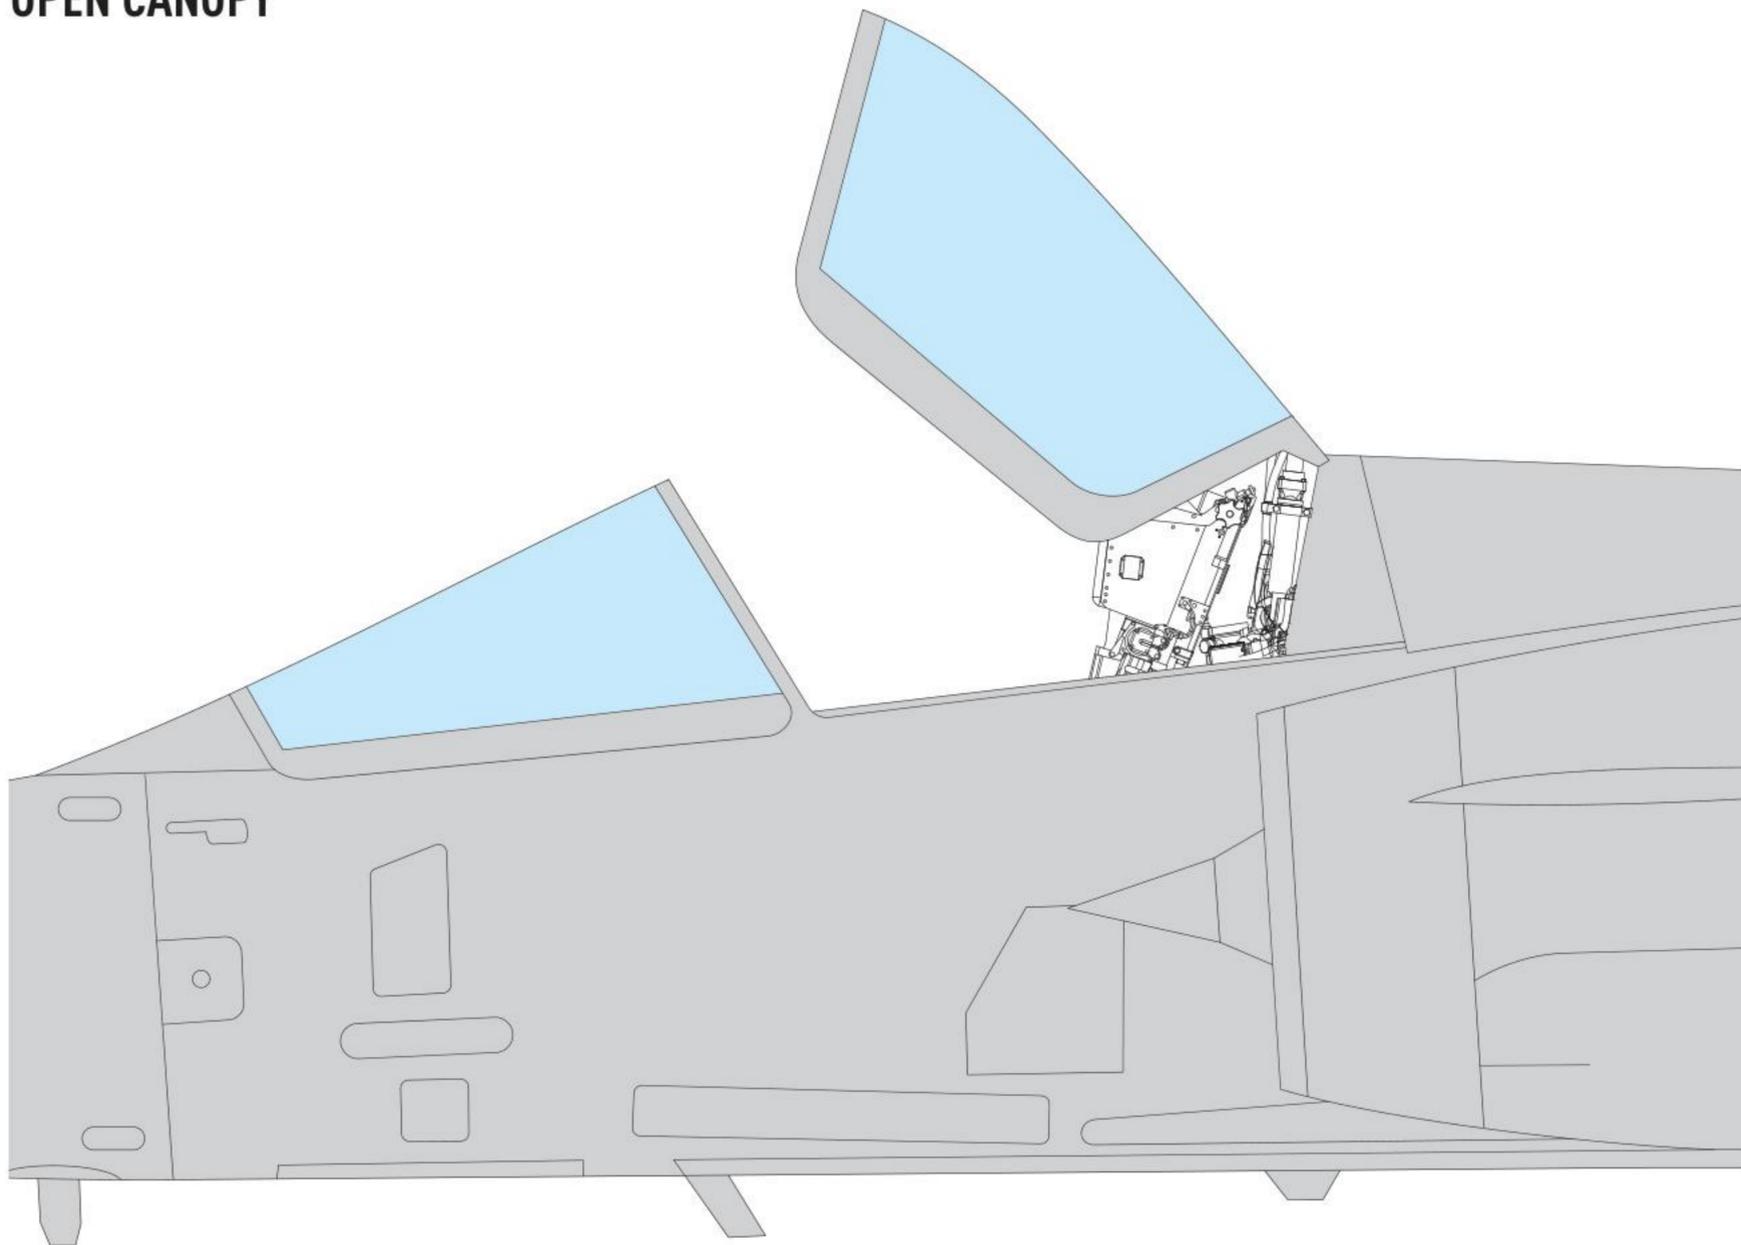

CLOSED CANOPY

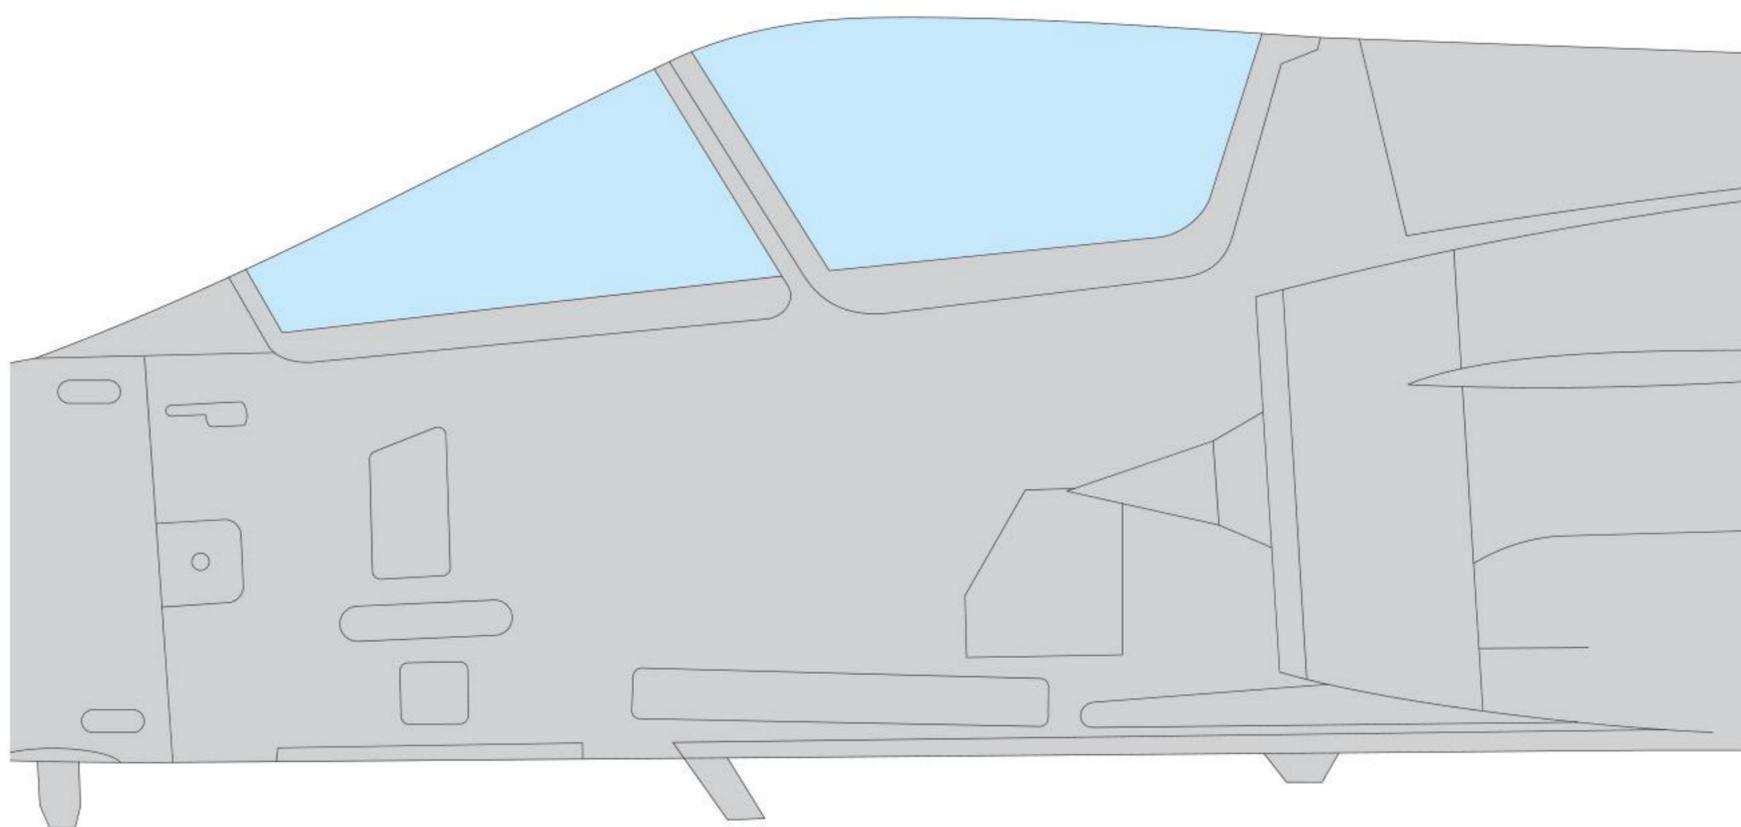

DECAL INSTRUCTION

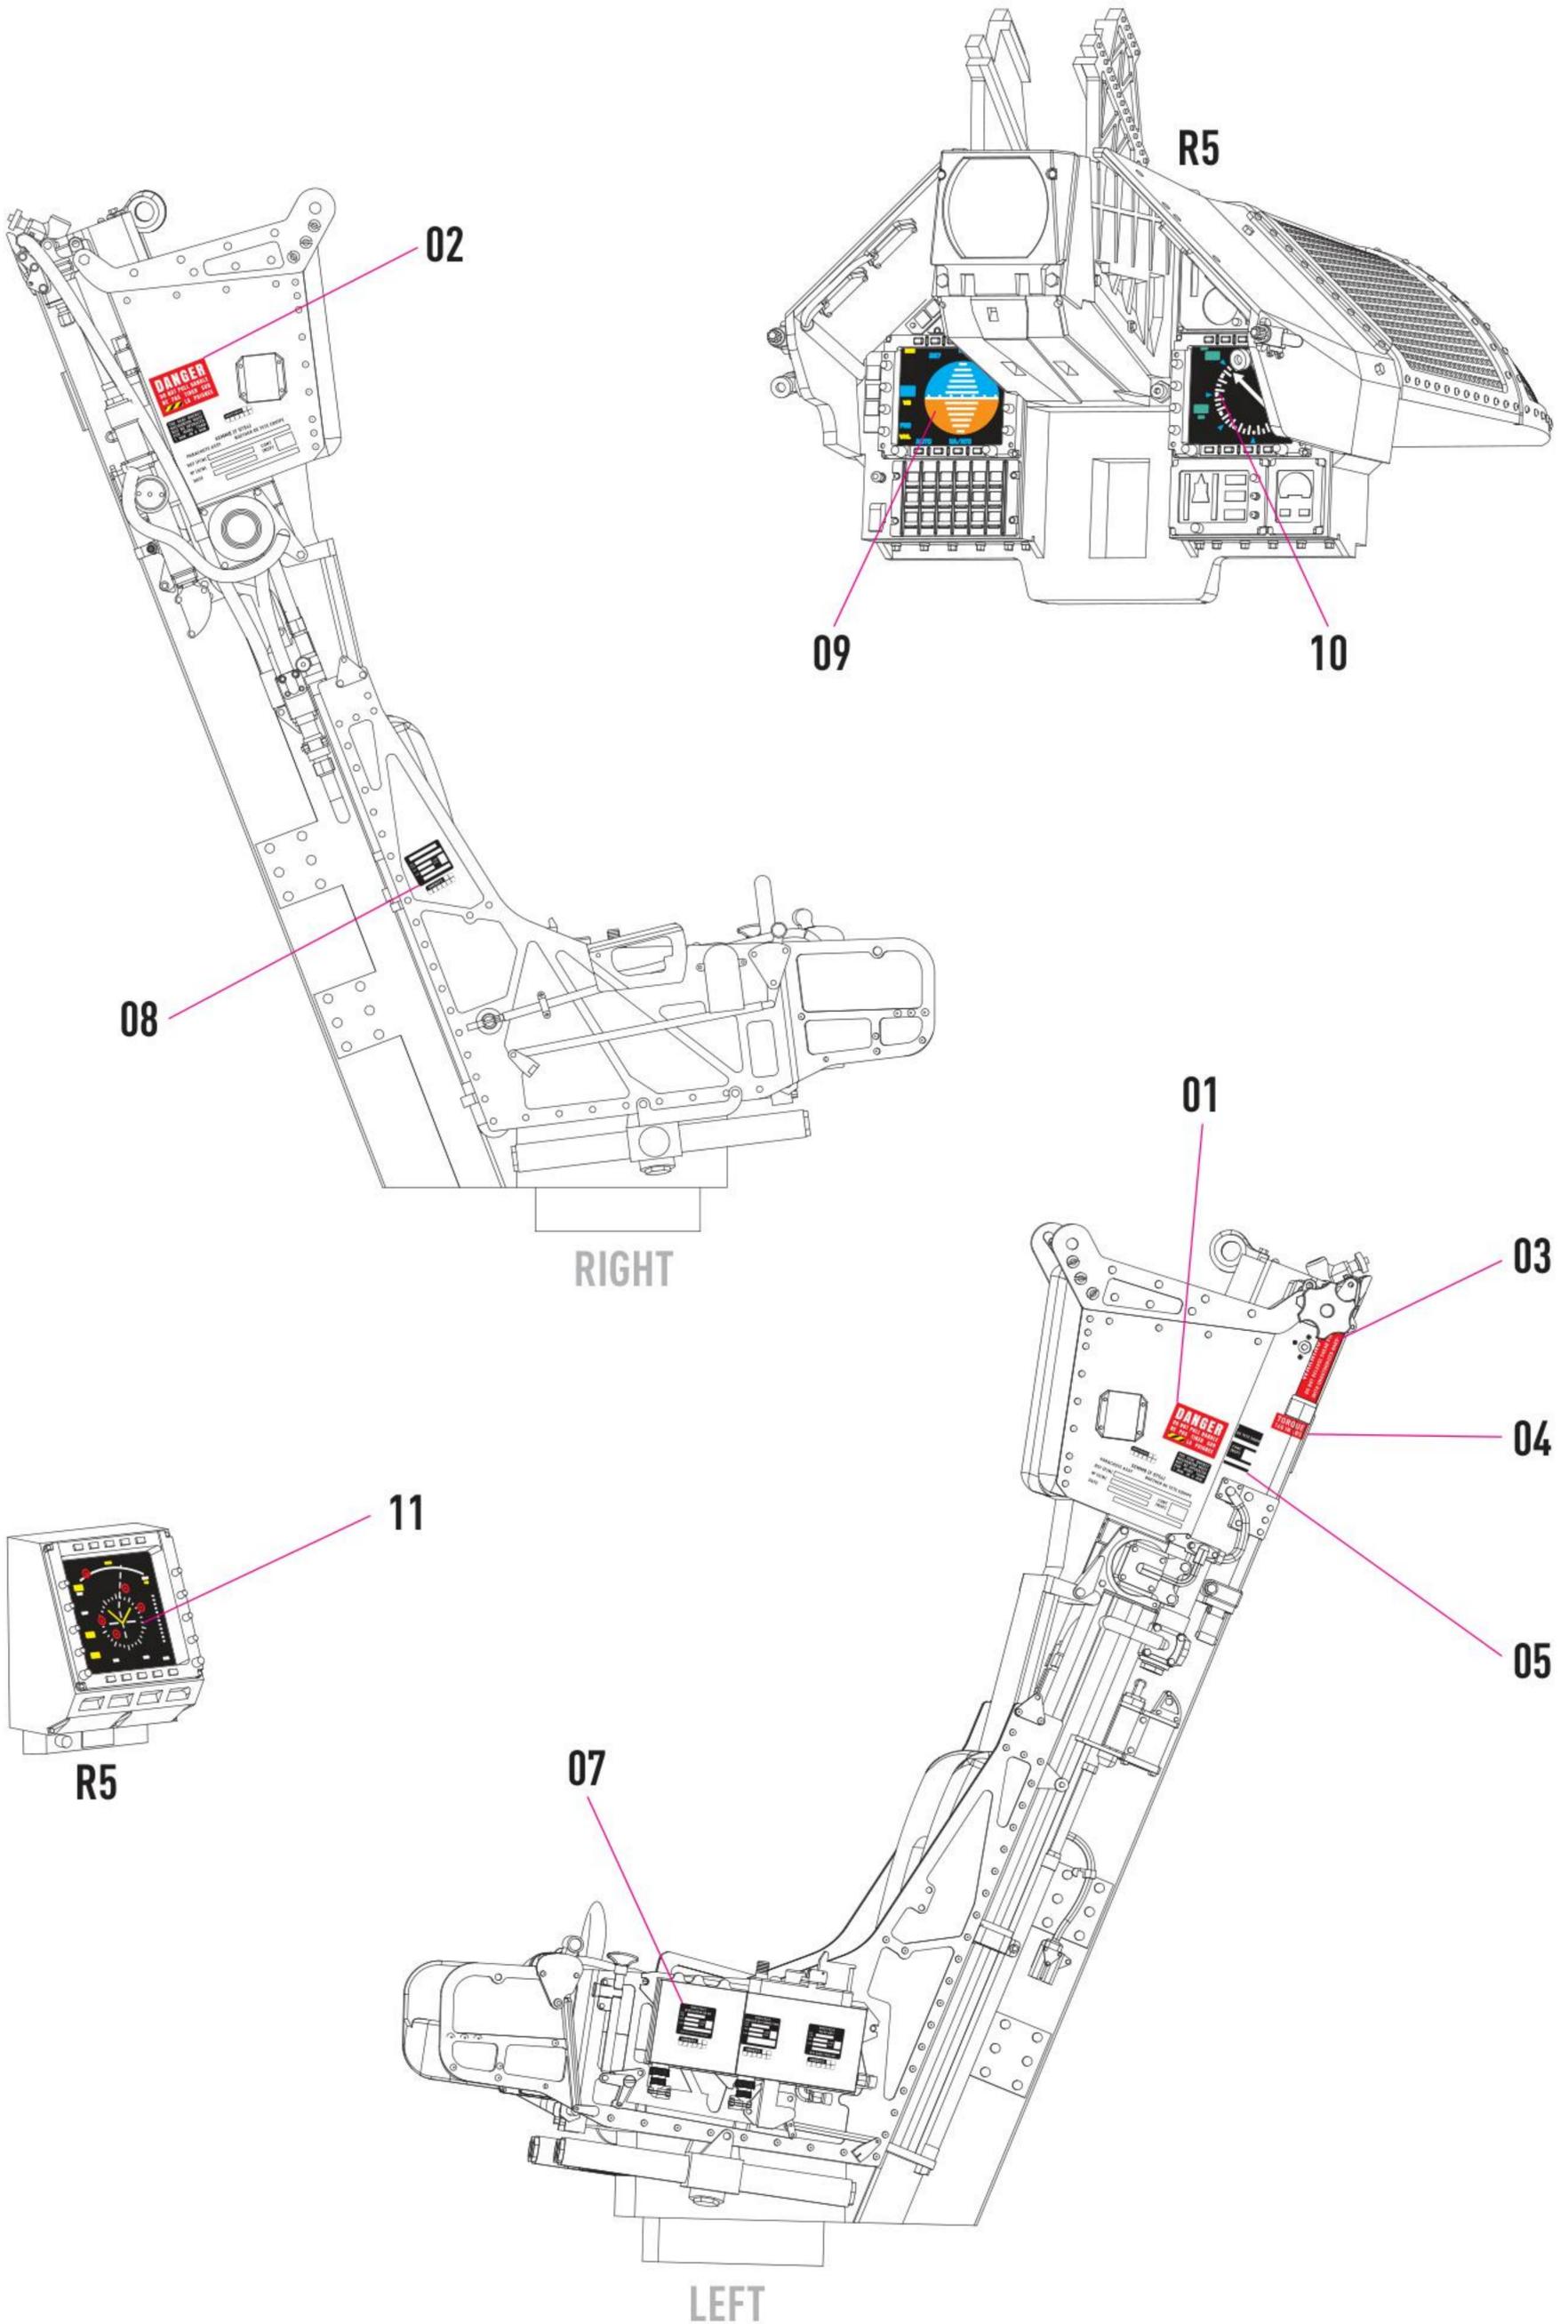

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official

 youtube.com/@reskit-usmd

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua