







### DETAILS AFTER REMOVAL FROM SUPPORTS

 USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

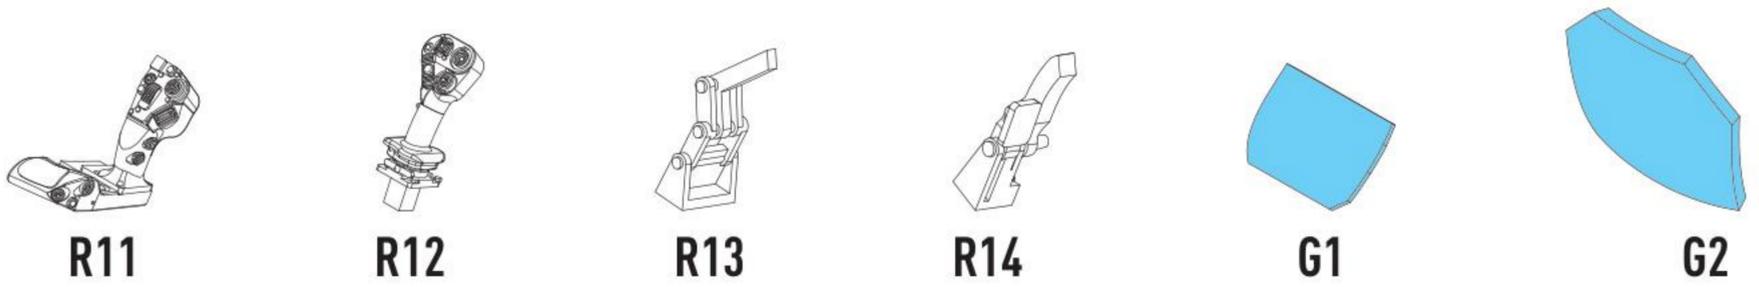


**PARTS G1 AND G2 SHOULD BE COATED WITH GLOSSY VARNISH BEFORE USE**

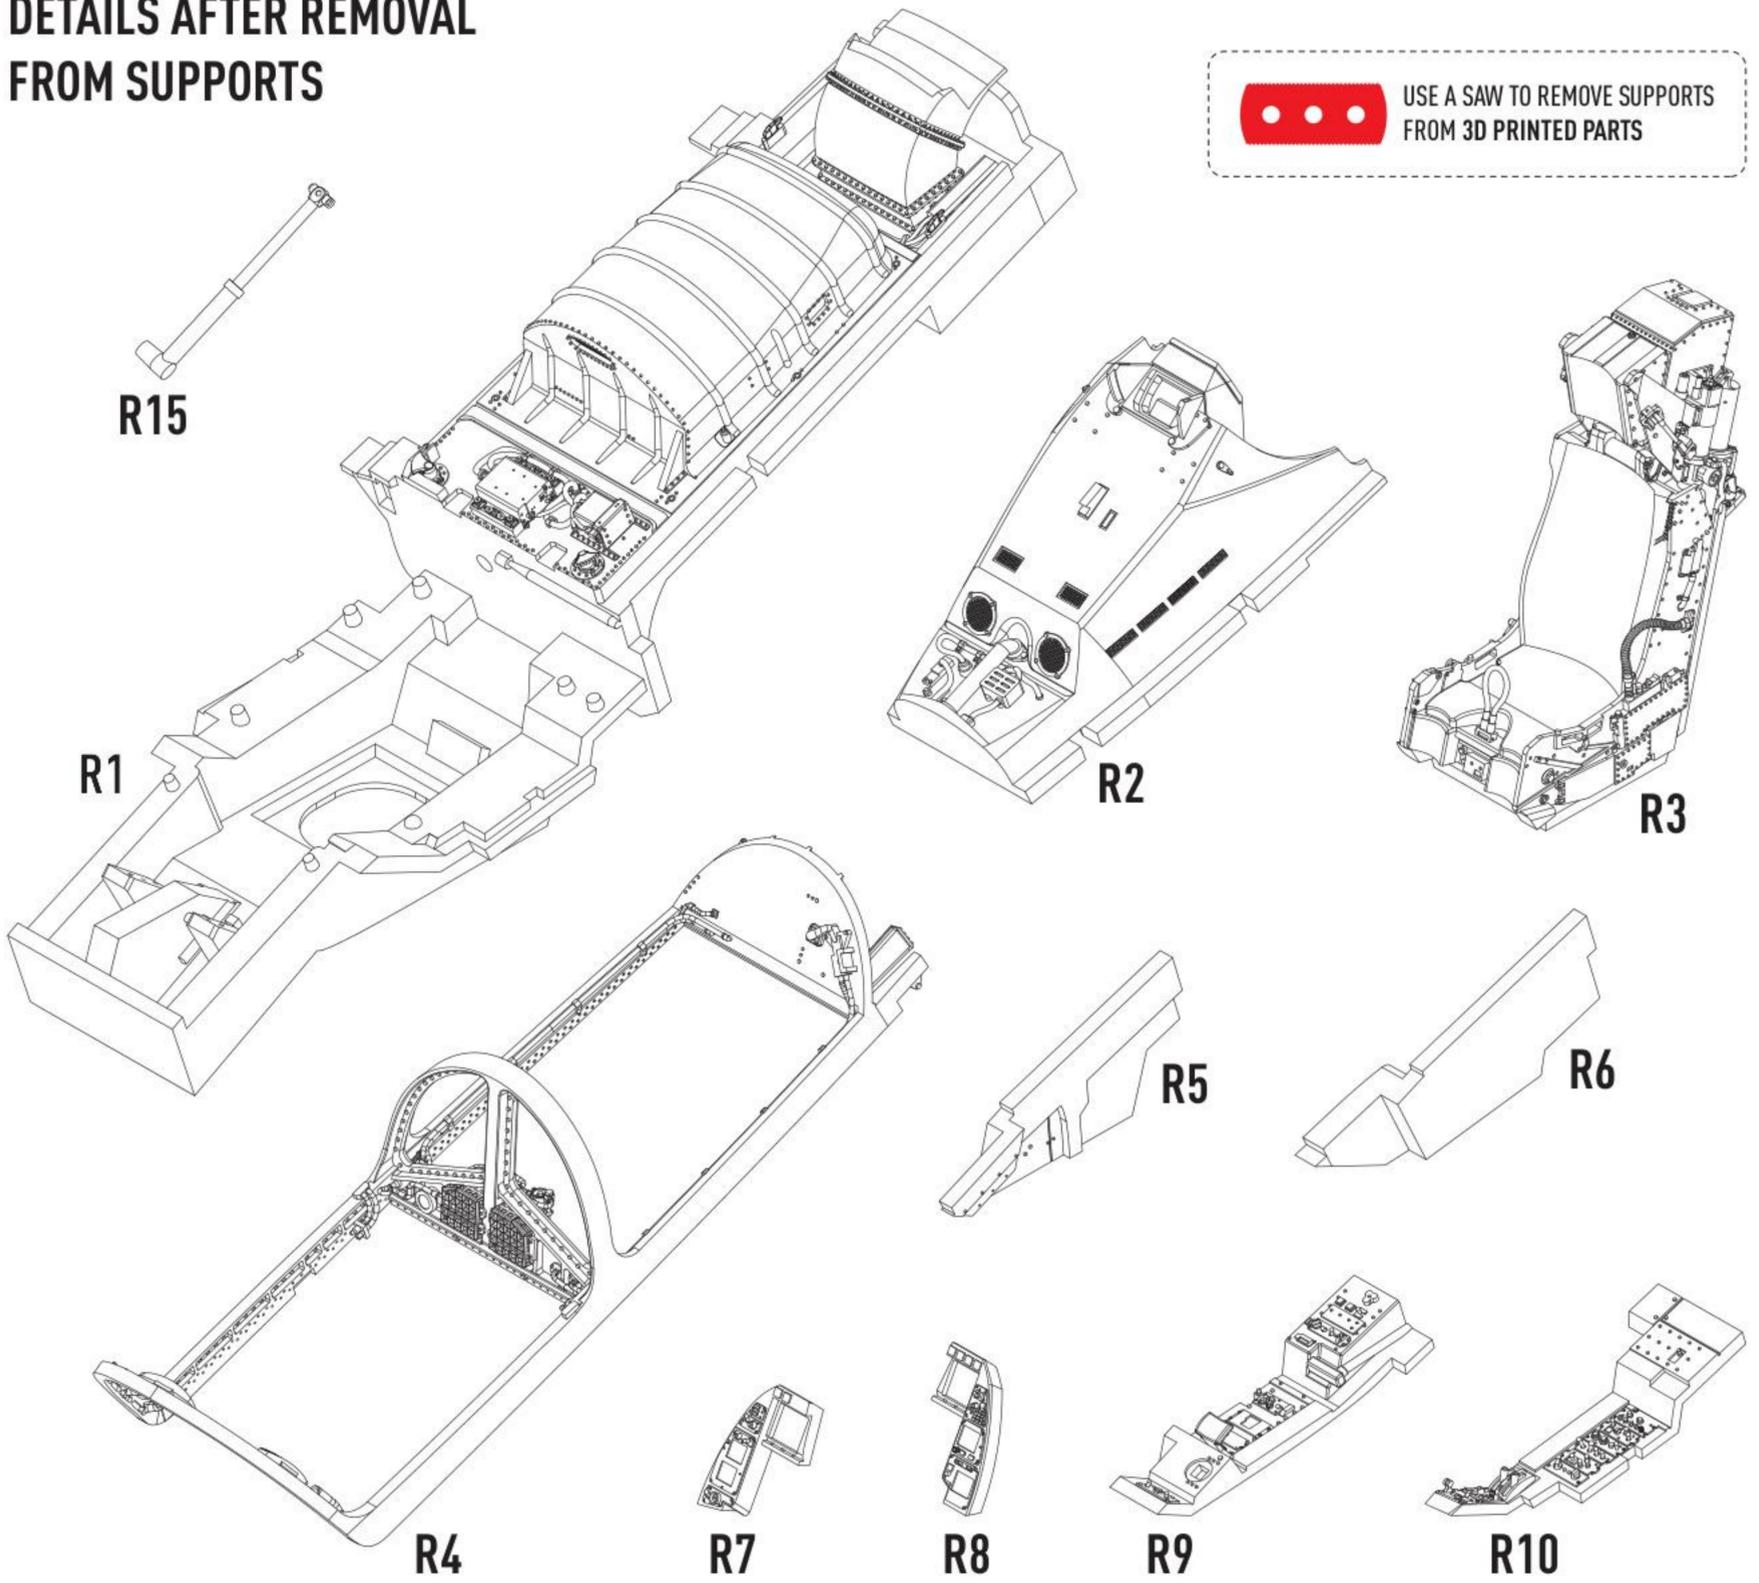

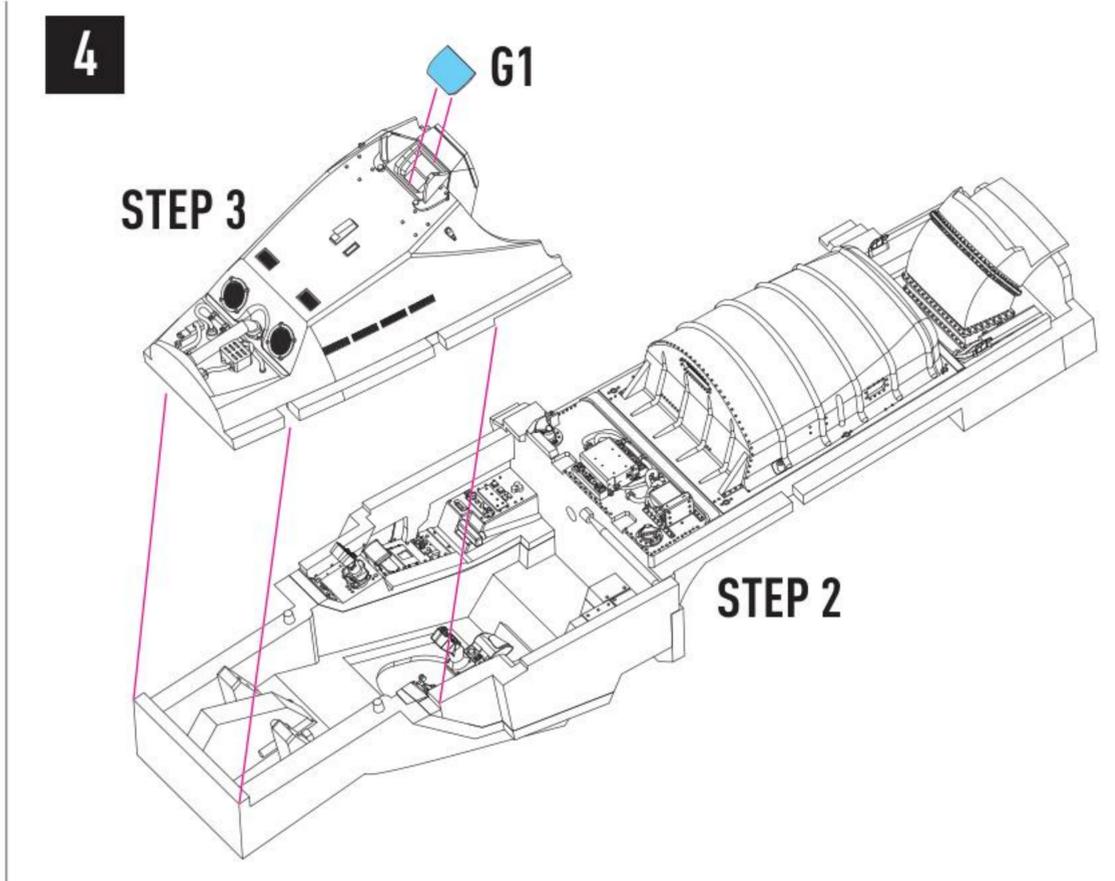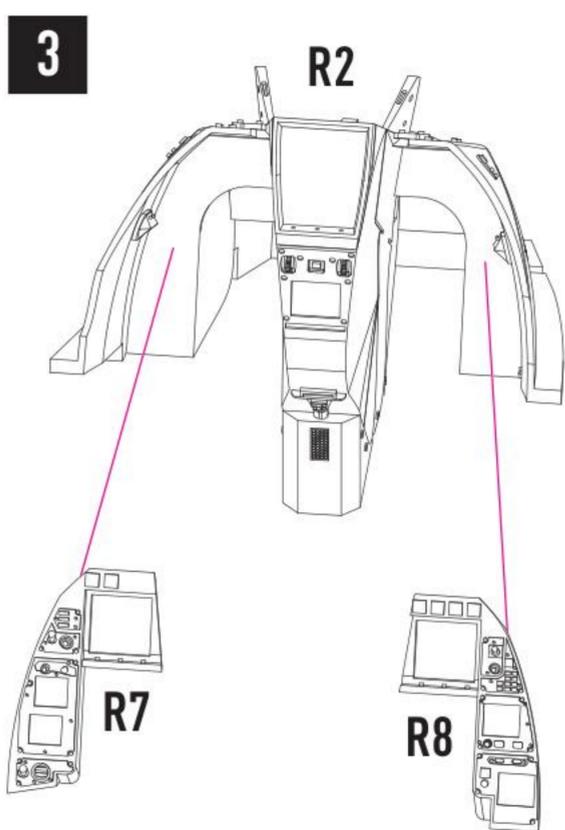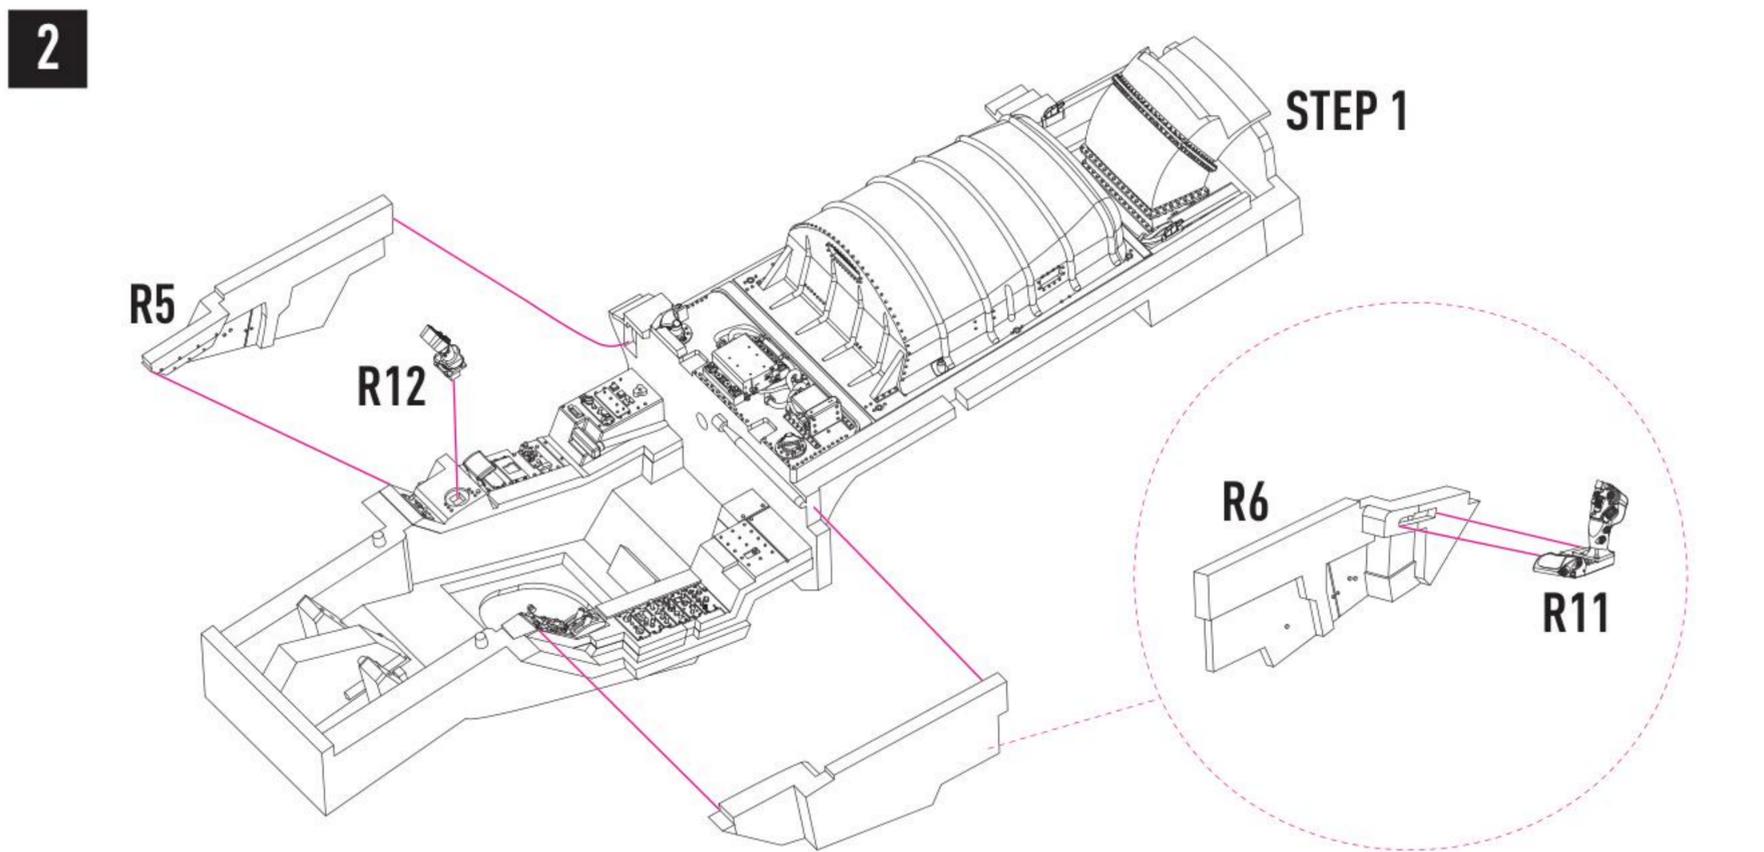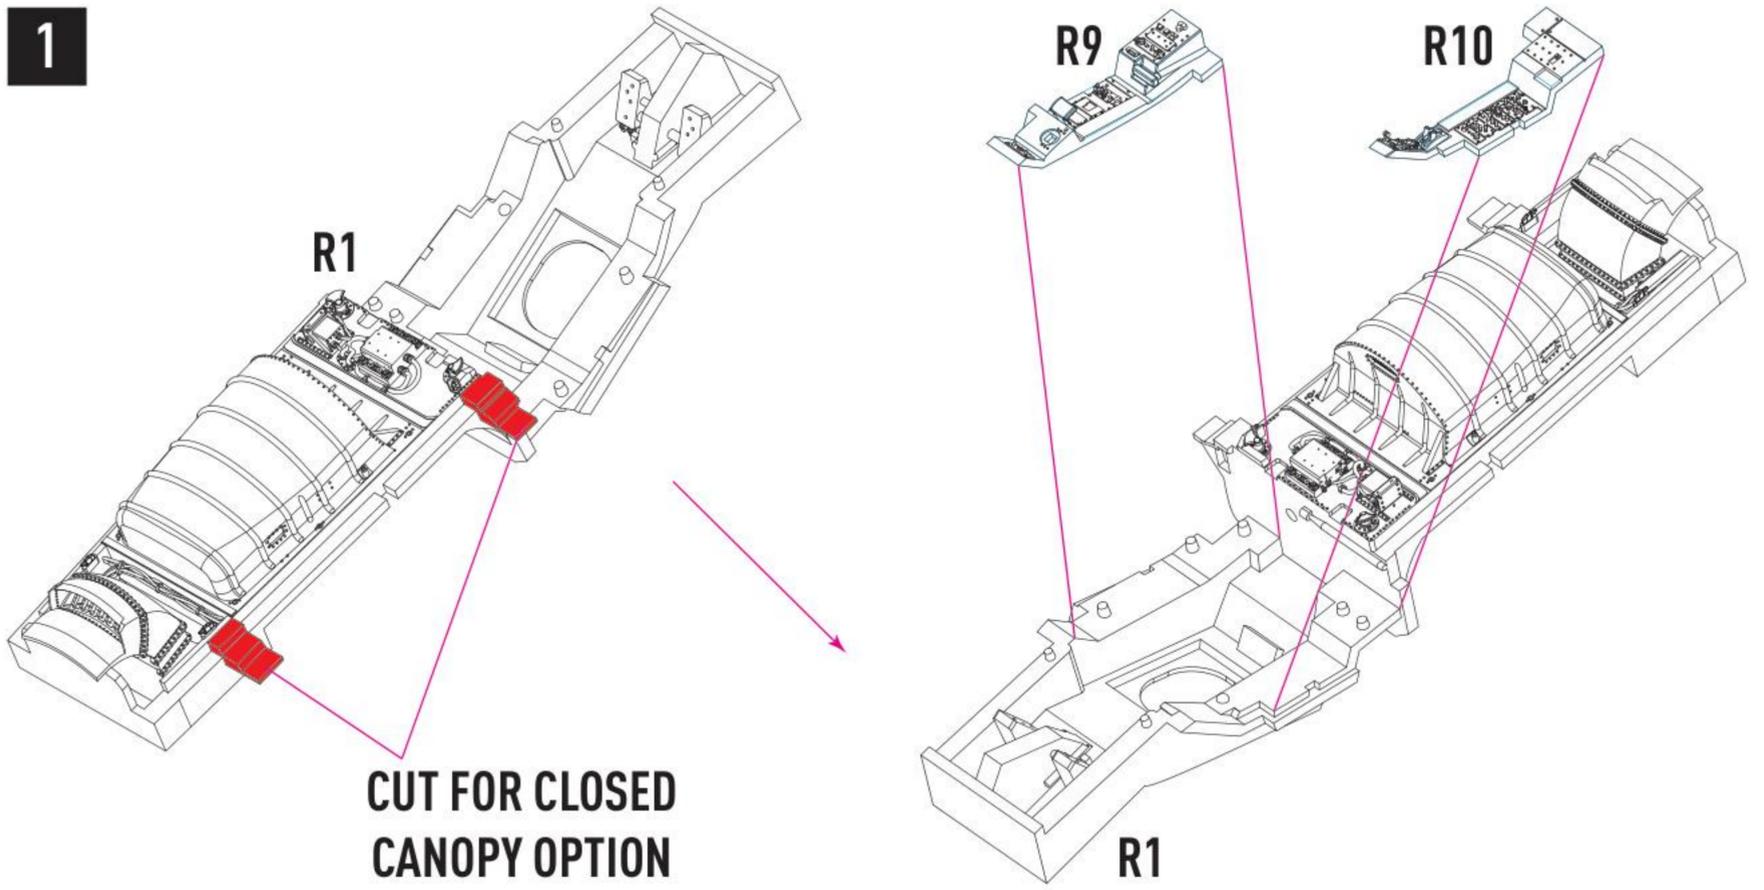

5


PART A1  
FROM THE KIT

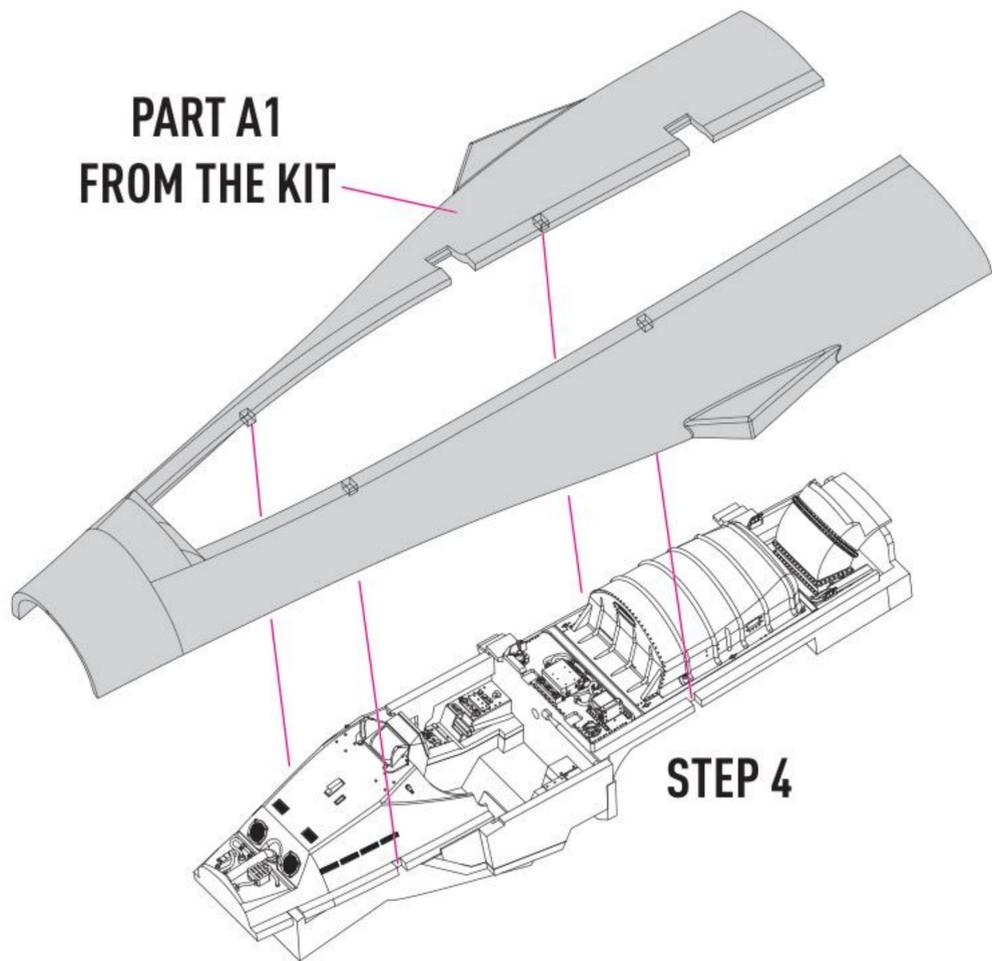

STEP 4

6


PART K2  
FROM THE KIT

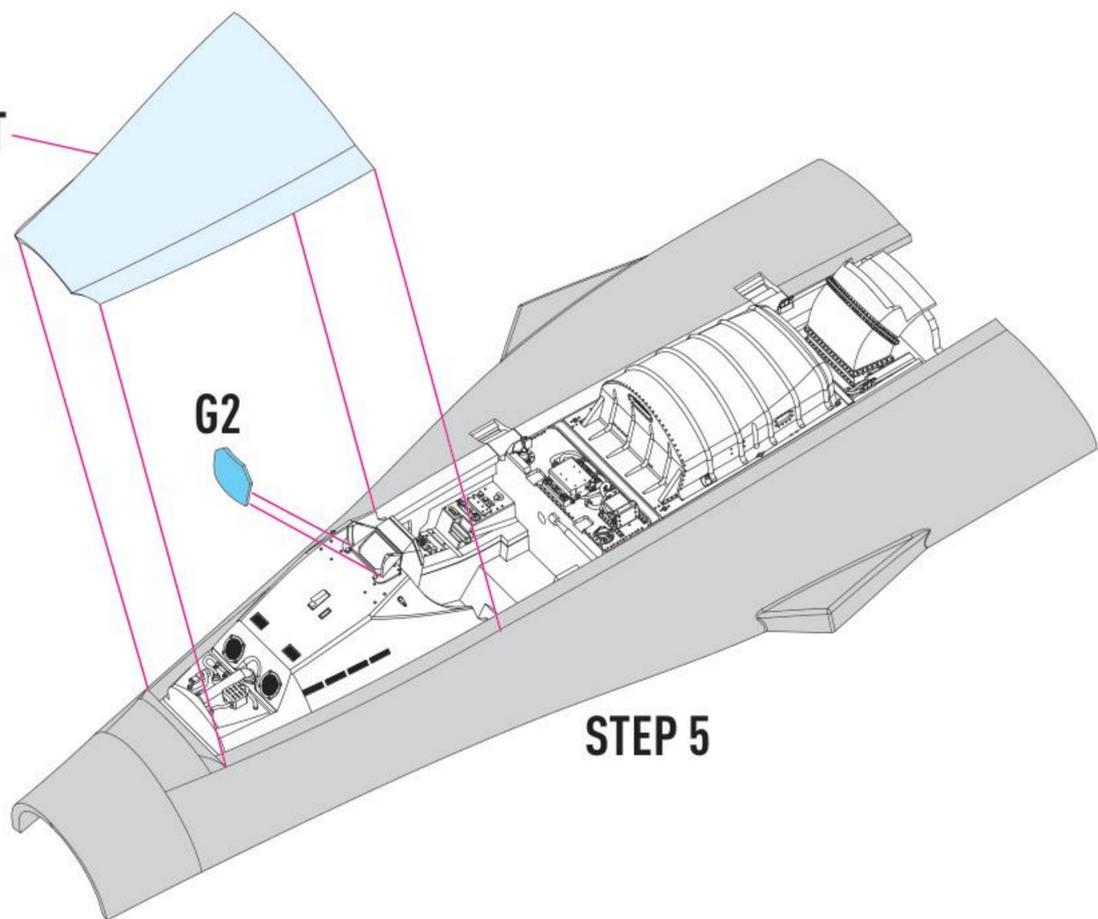


STEP 5



7

PART K3  
FROM THE KIT

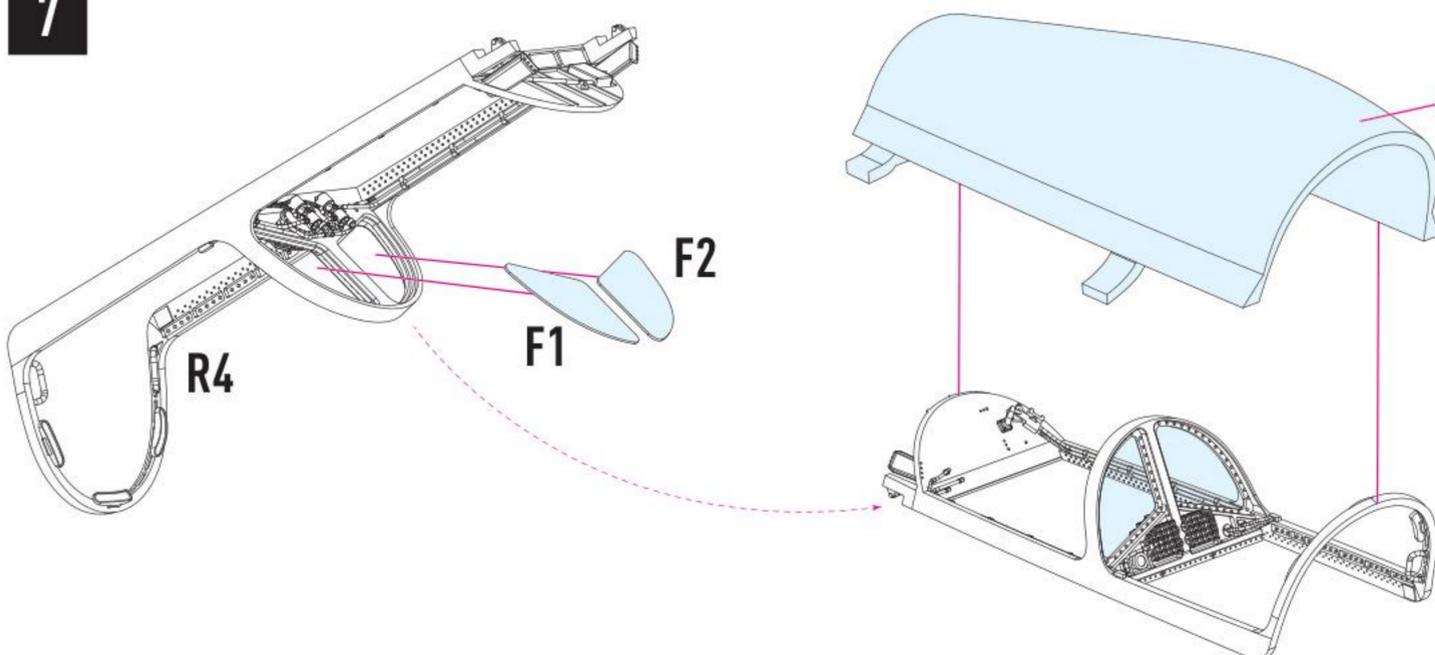


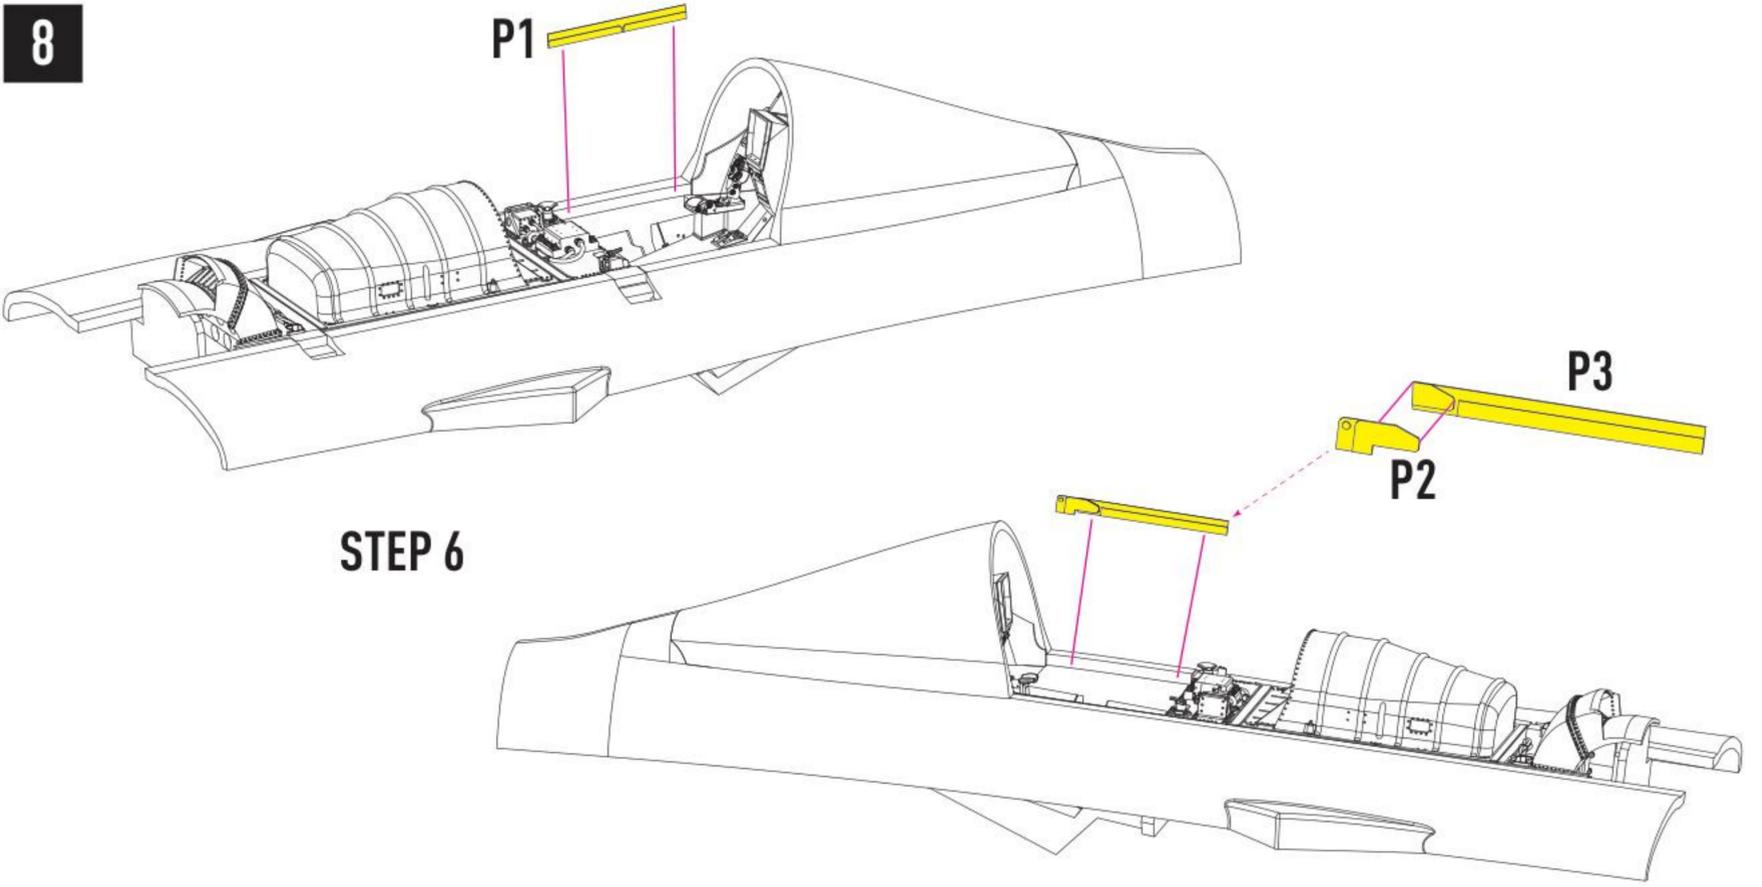


**9 FOR A CLOSED CANOPY**

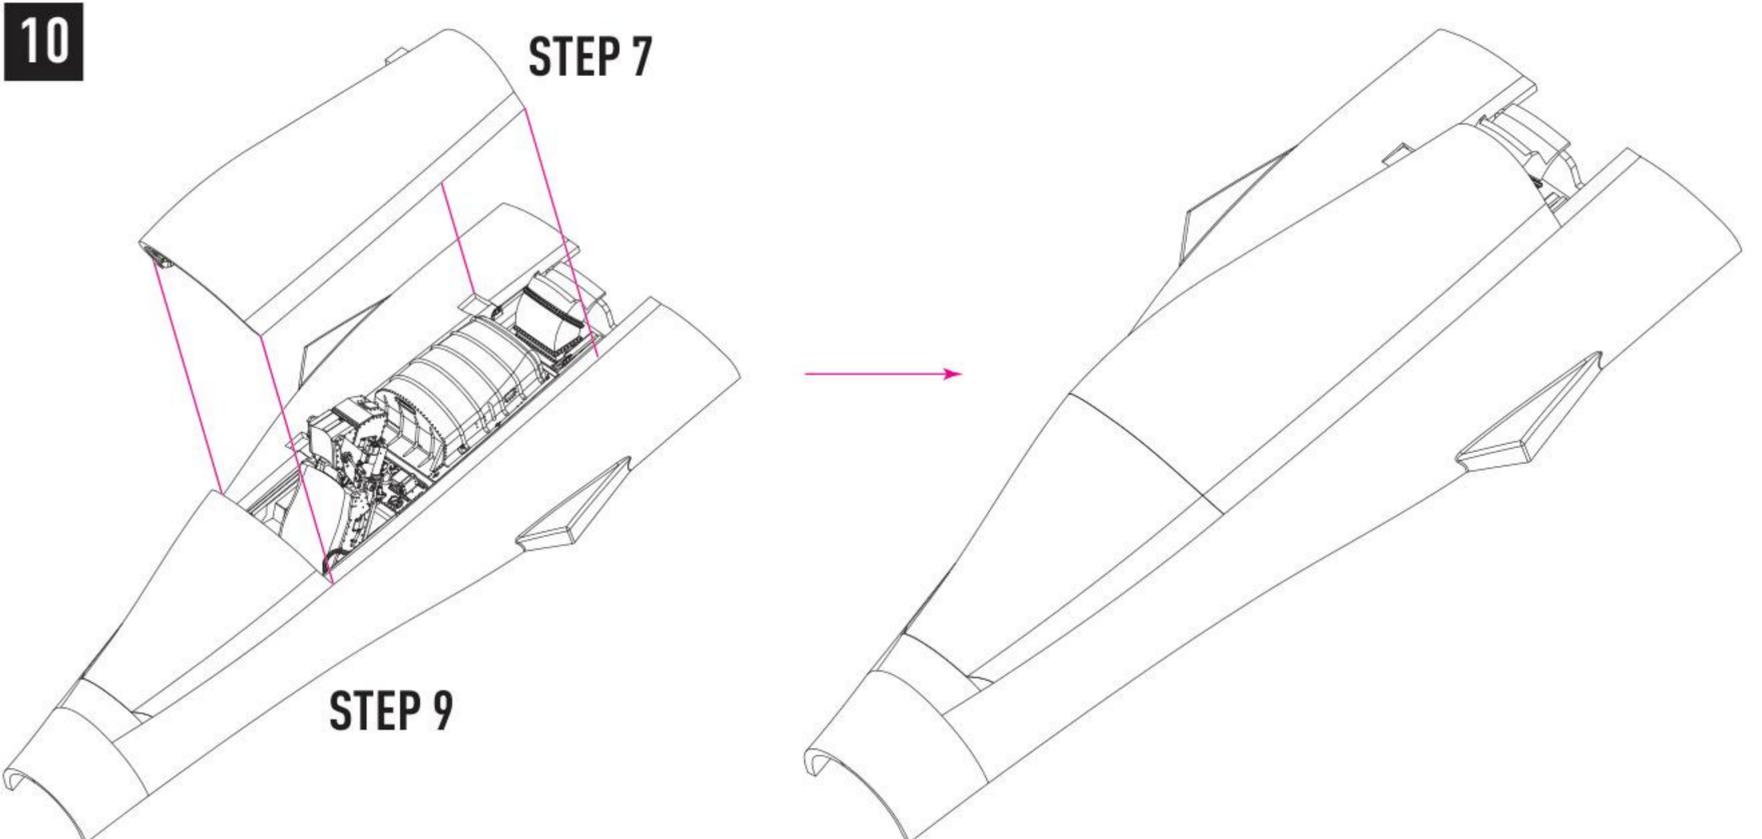
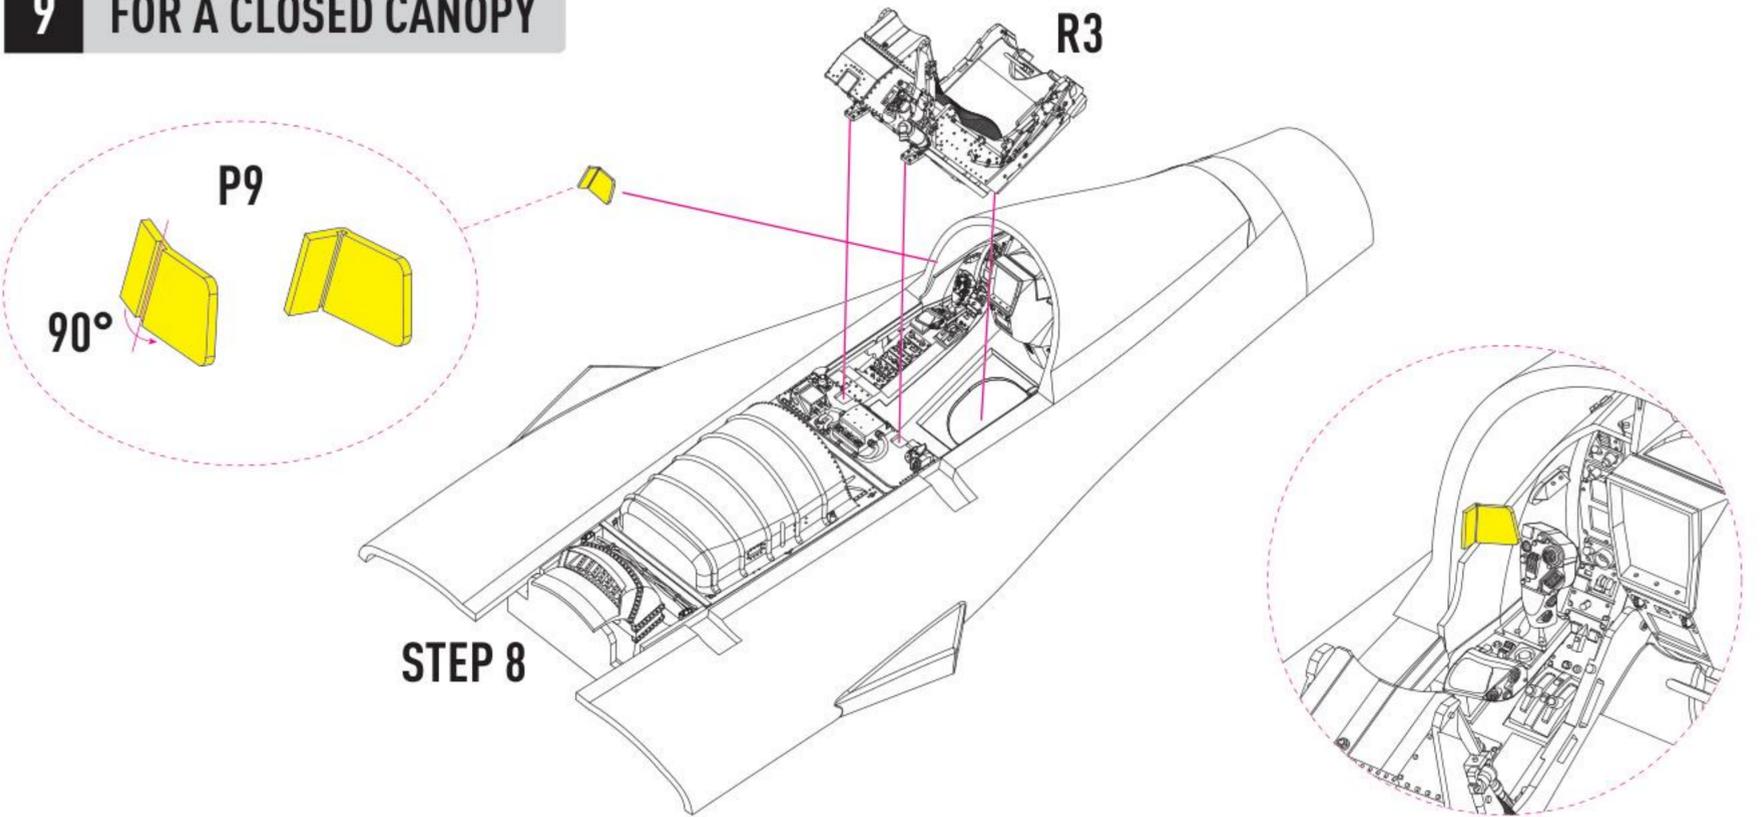


**11 FOR AN OPEN CANOPY**








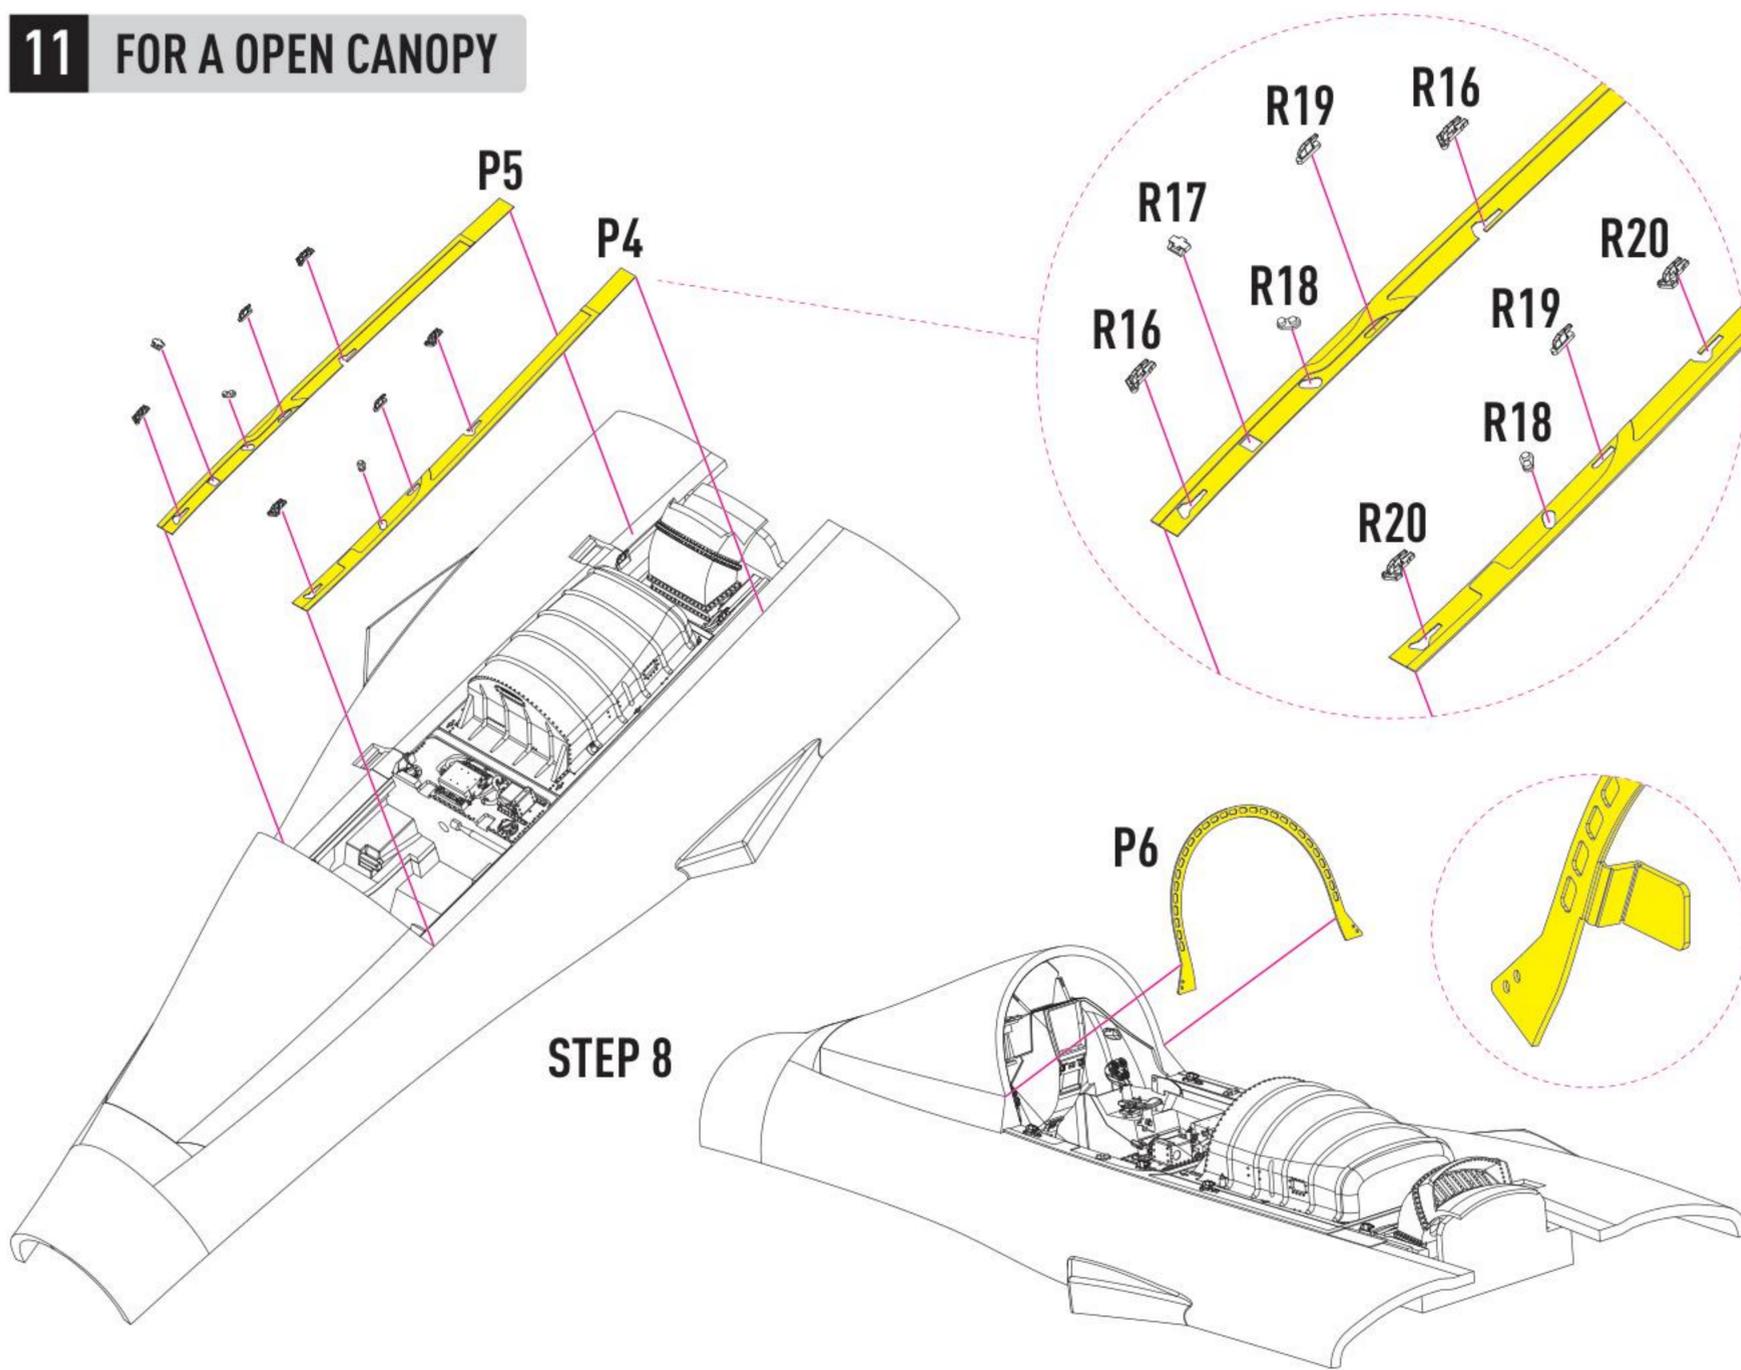


**12**

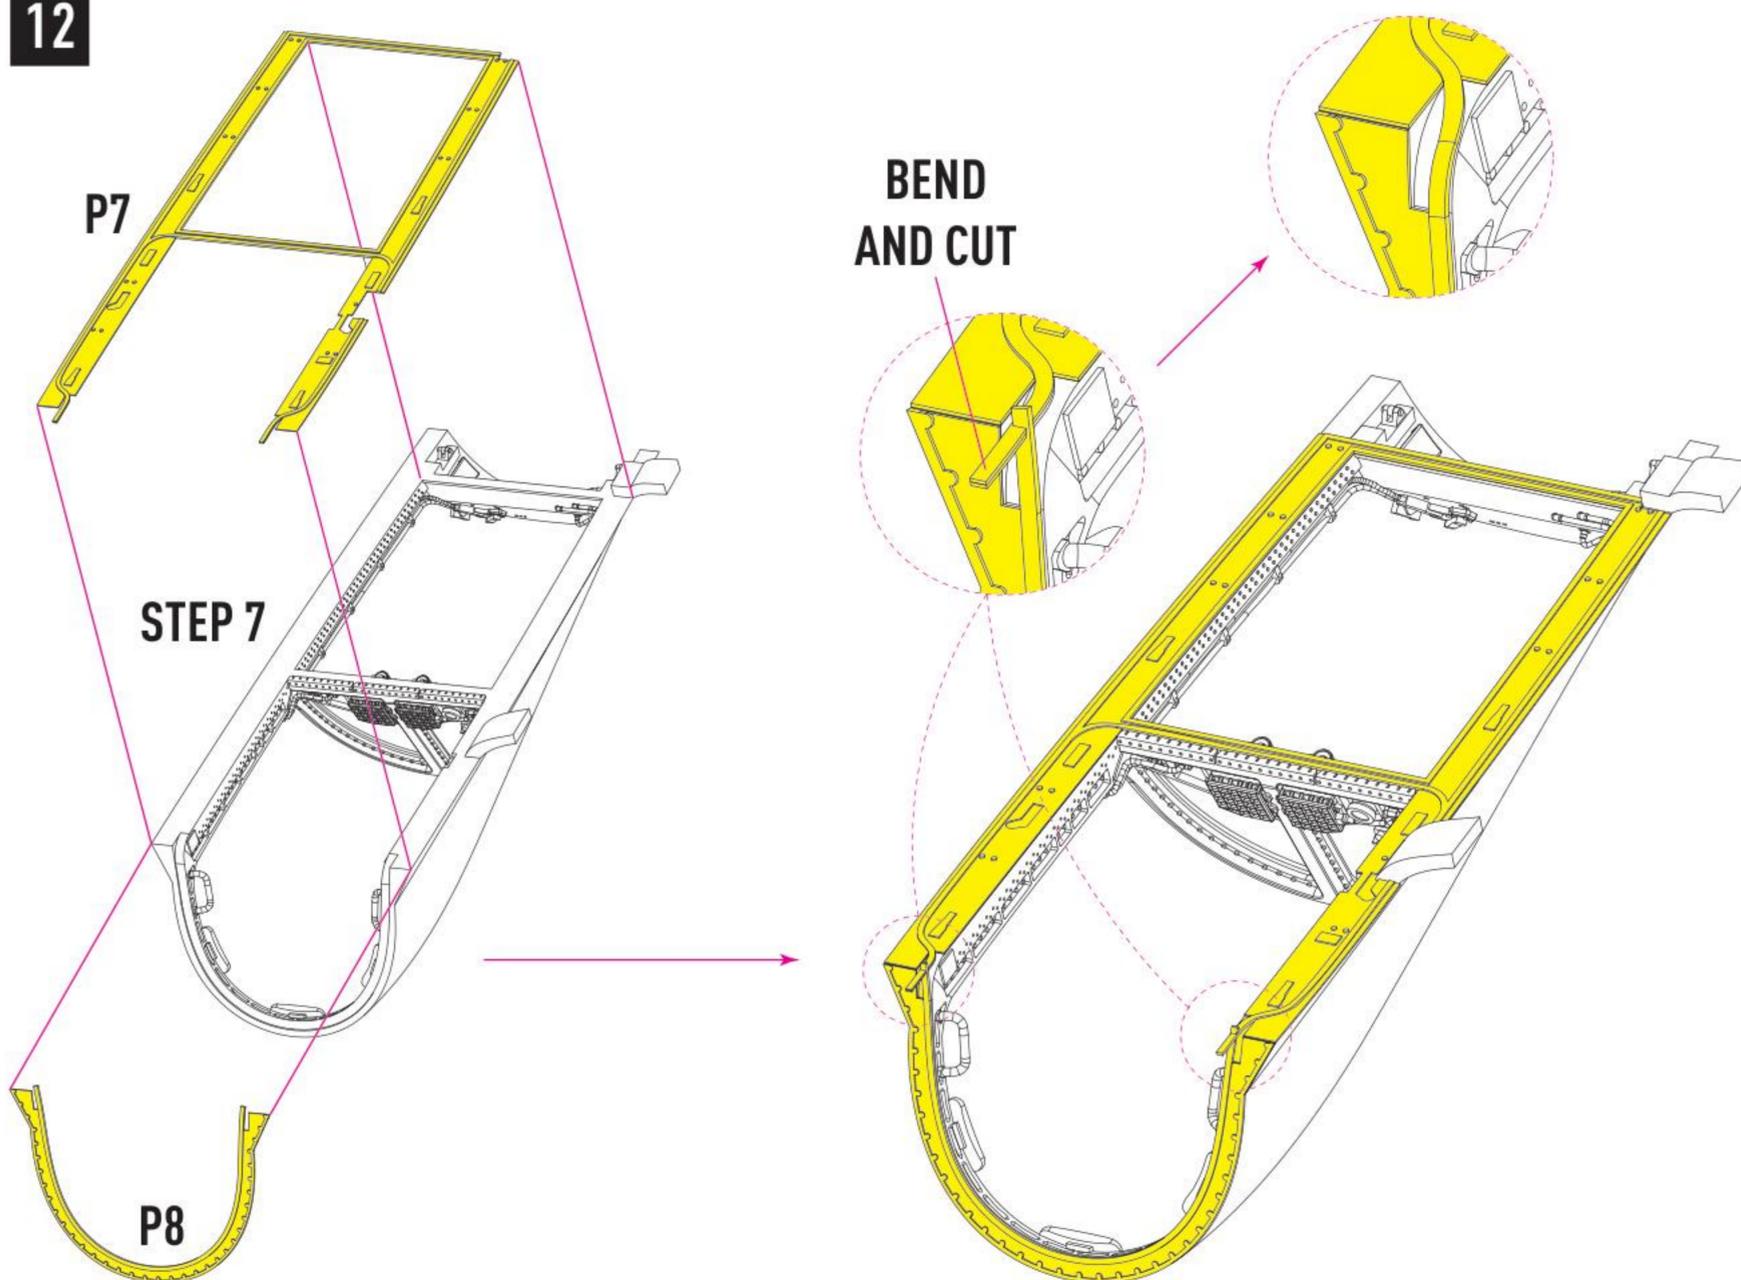

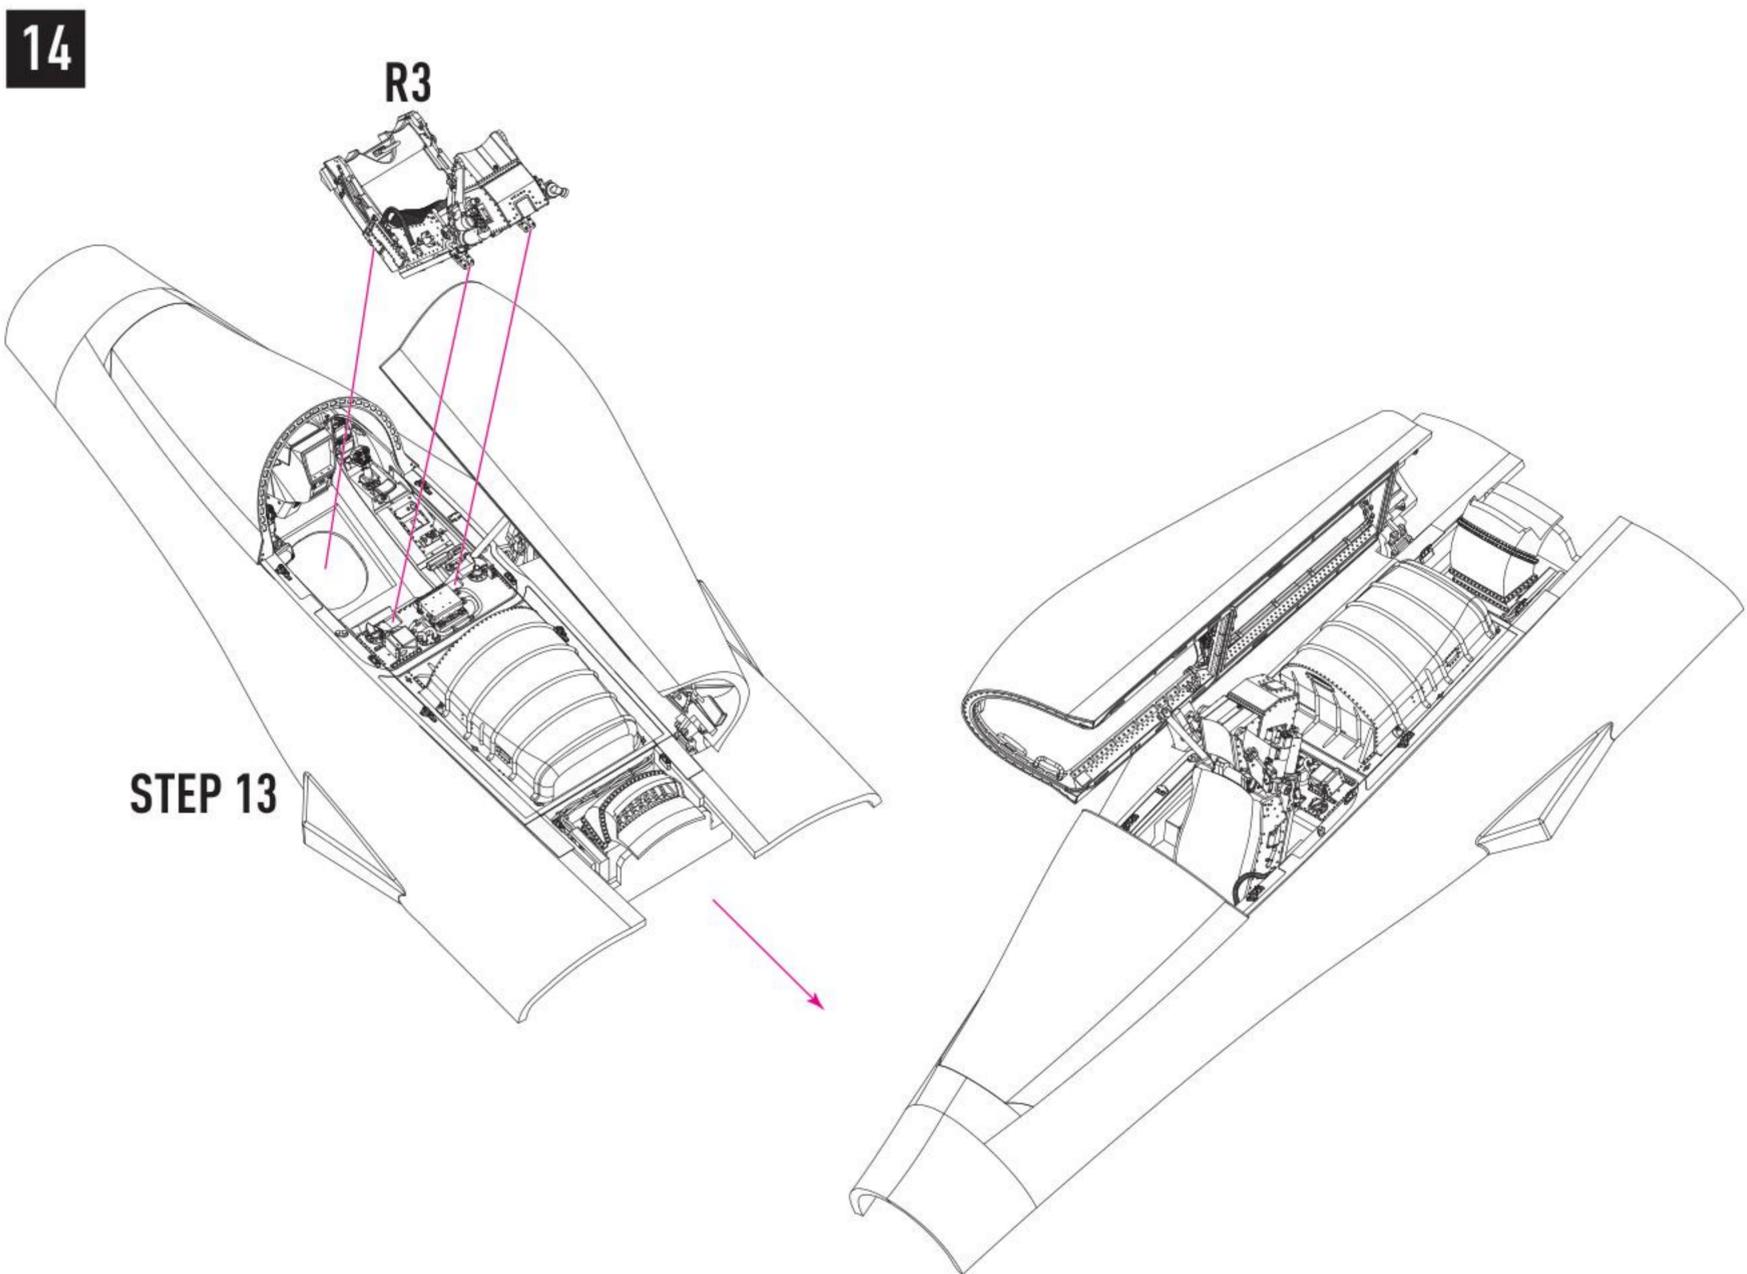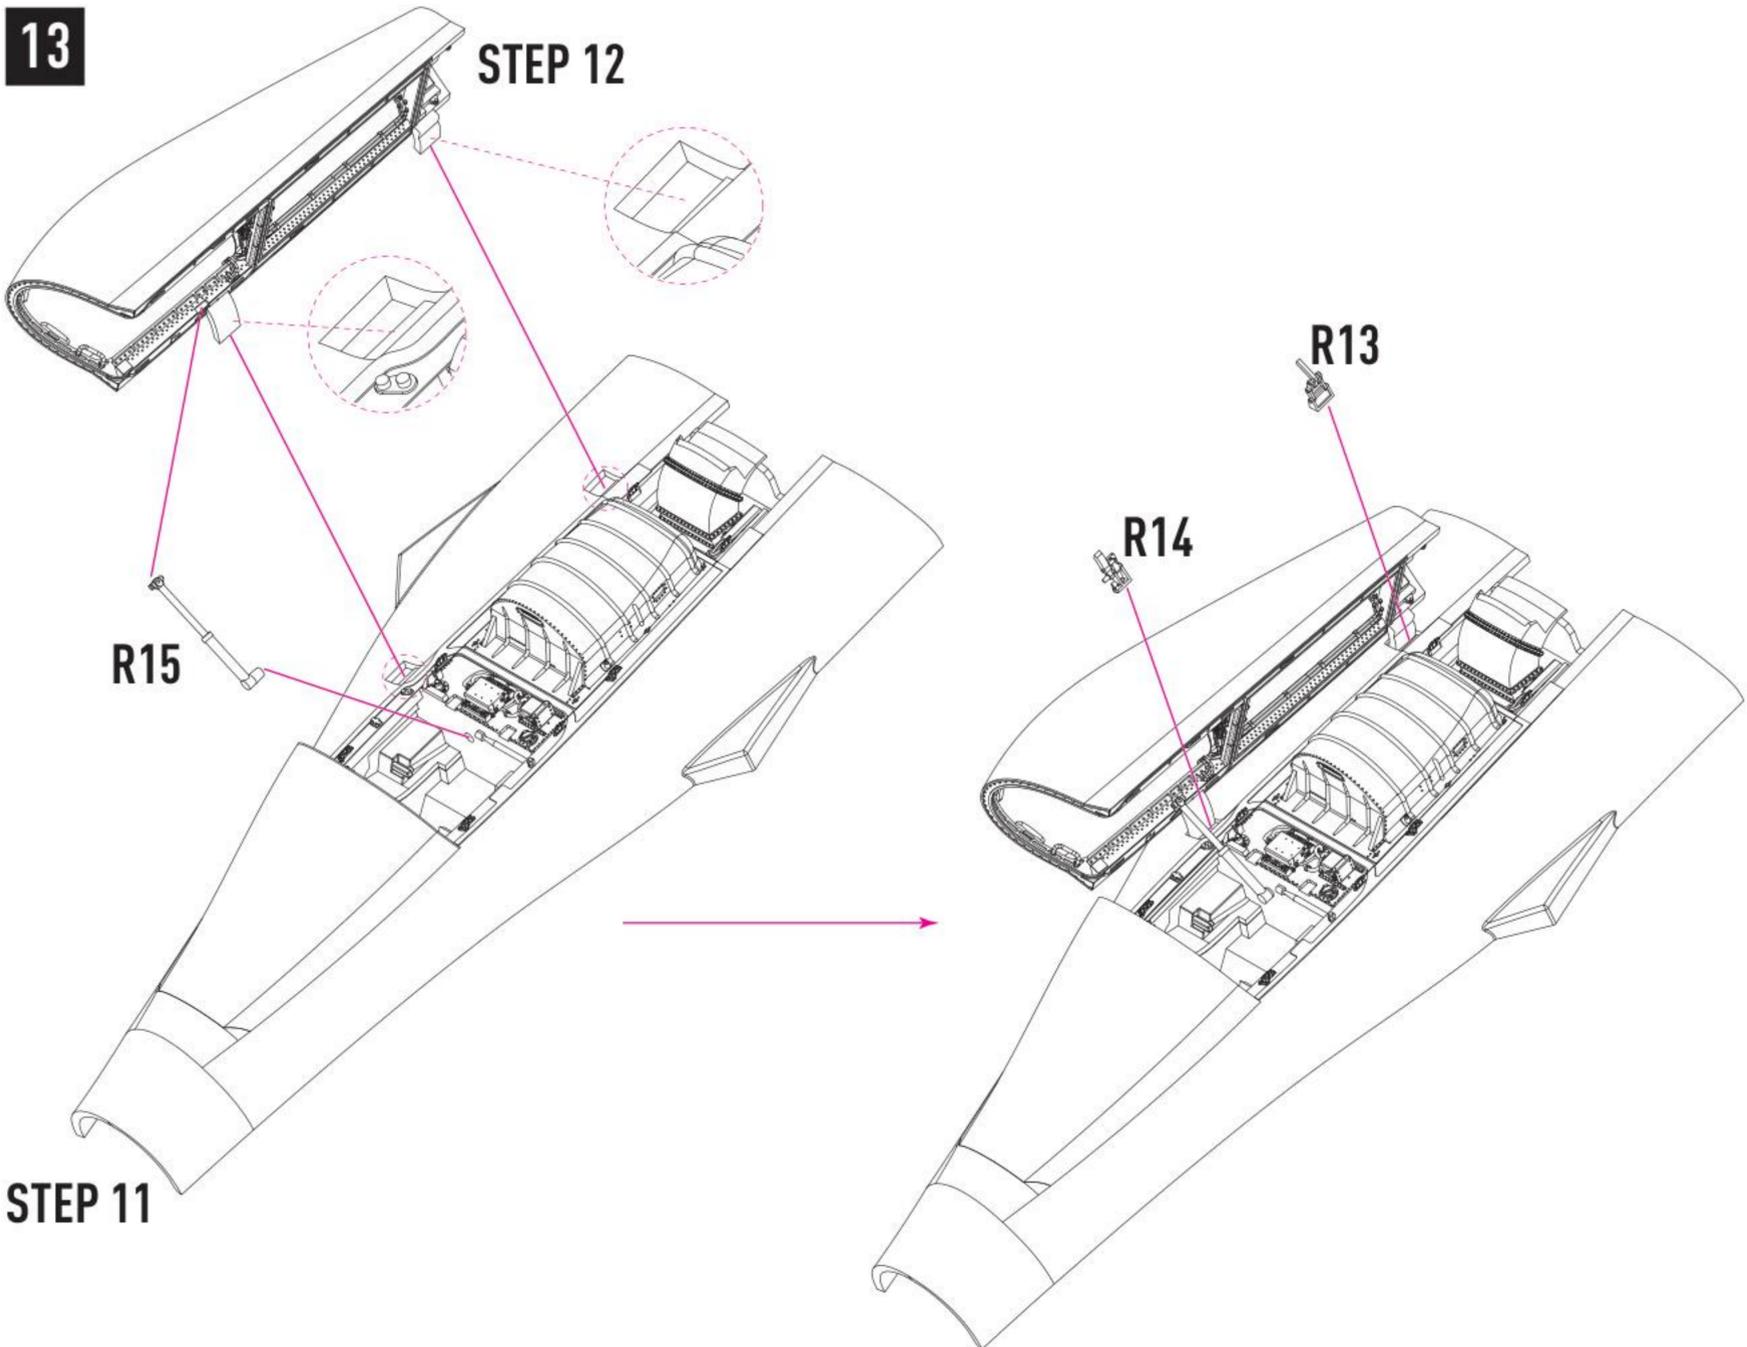

# DECAL INSTRUCTION

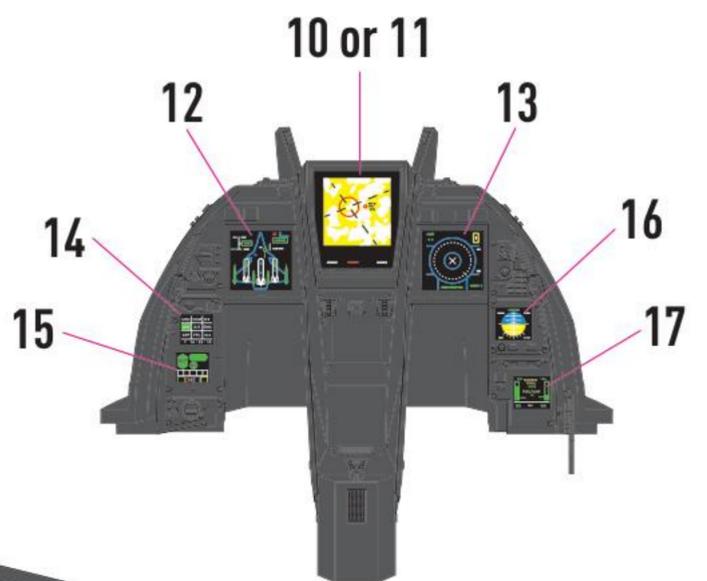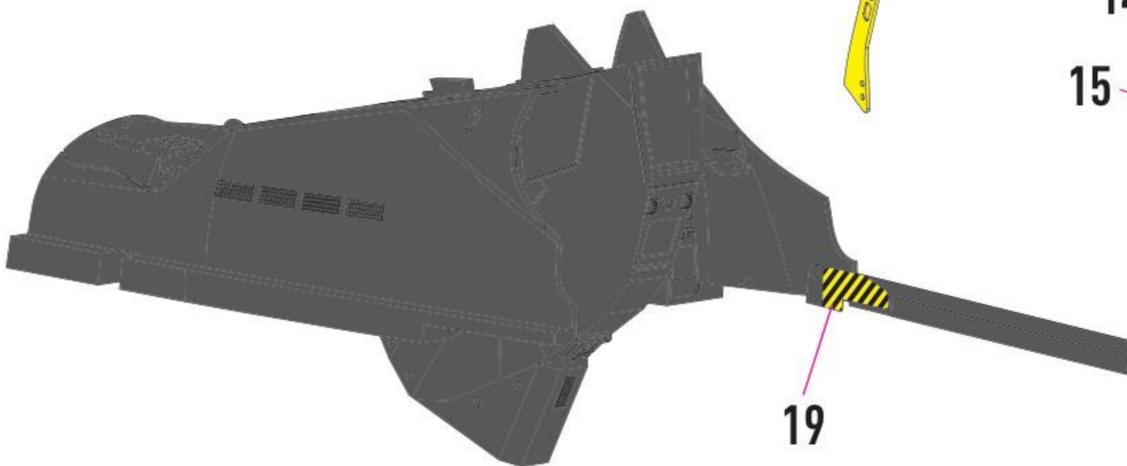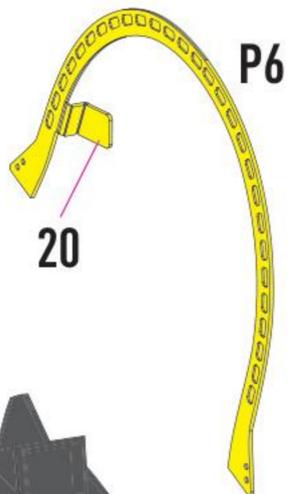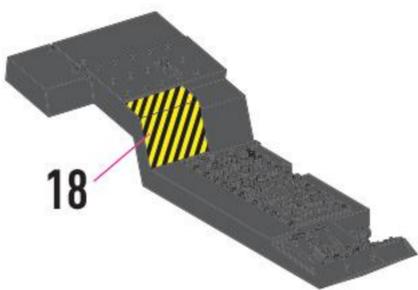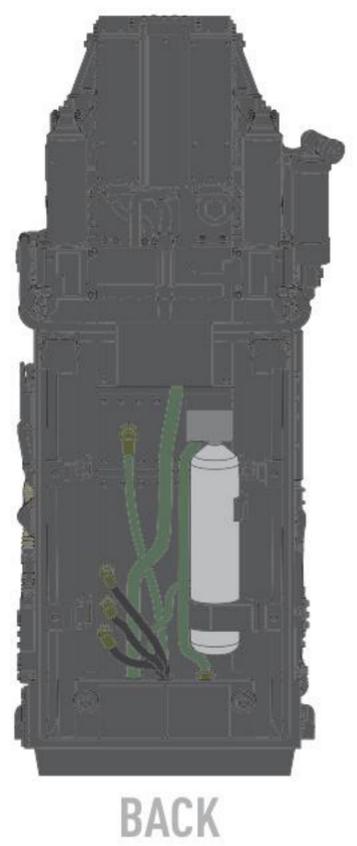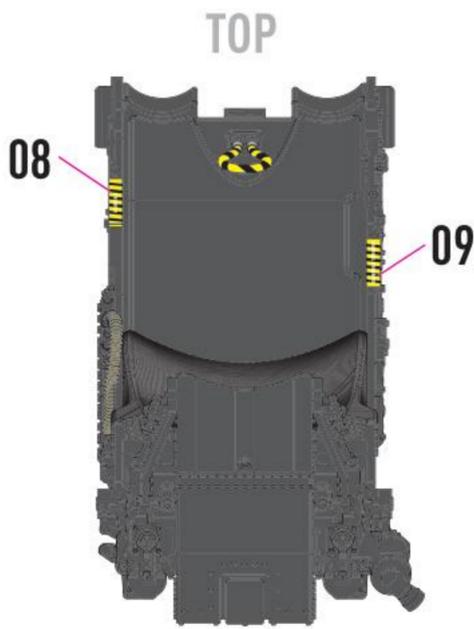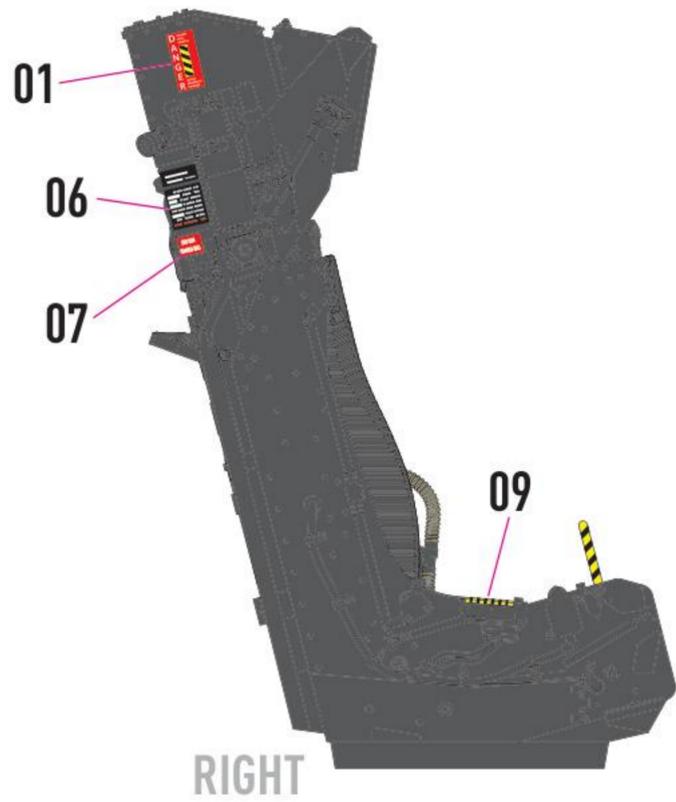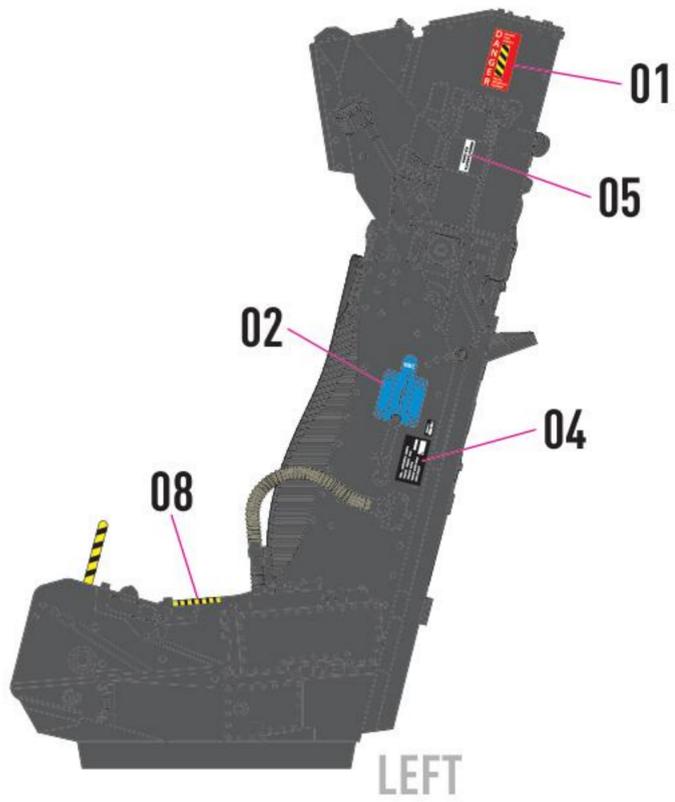

**YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE**

**RESKIT-MODELS.COM**

**General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)**

**Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)**

**Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)**