



**DETAILS AFTER REMOVAL
FROM SUPPORTS**

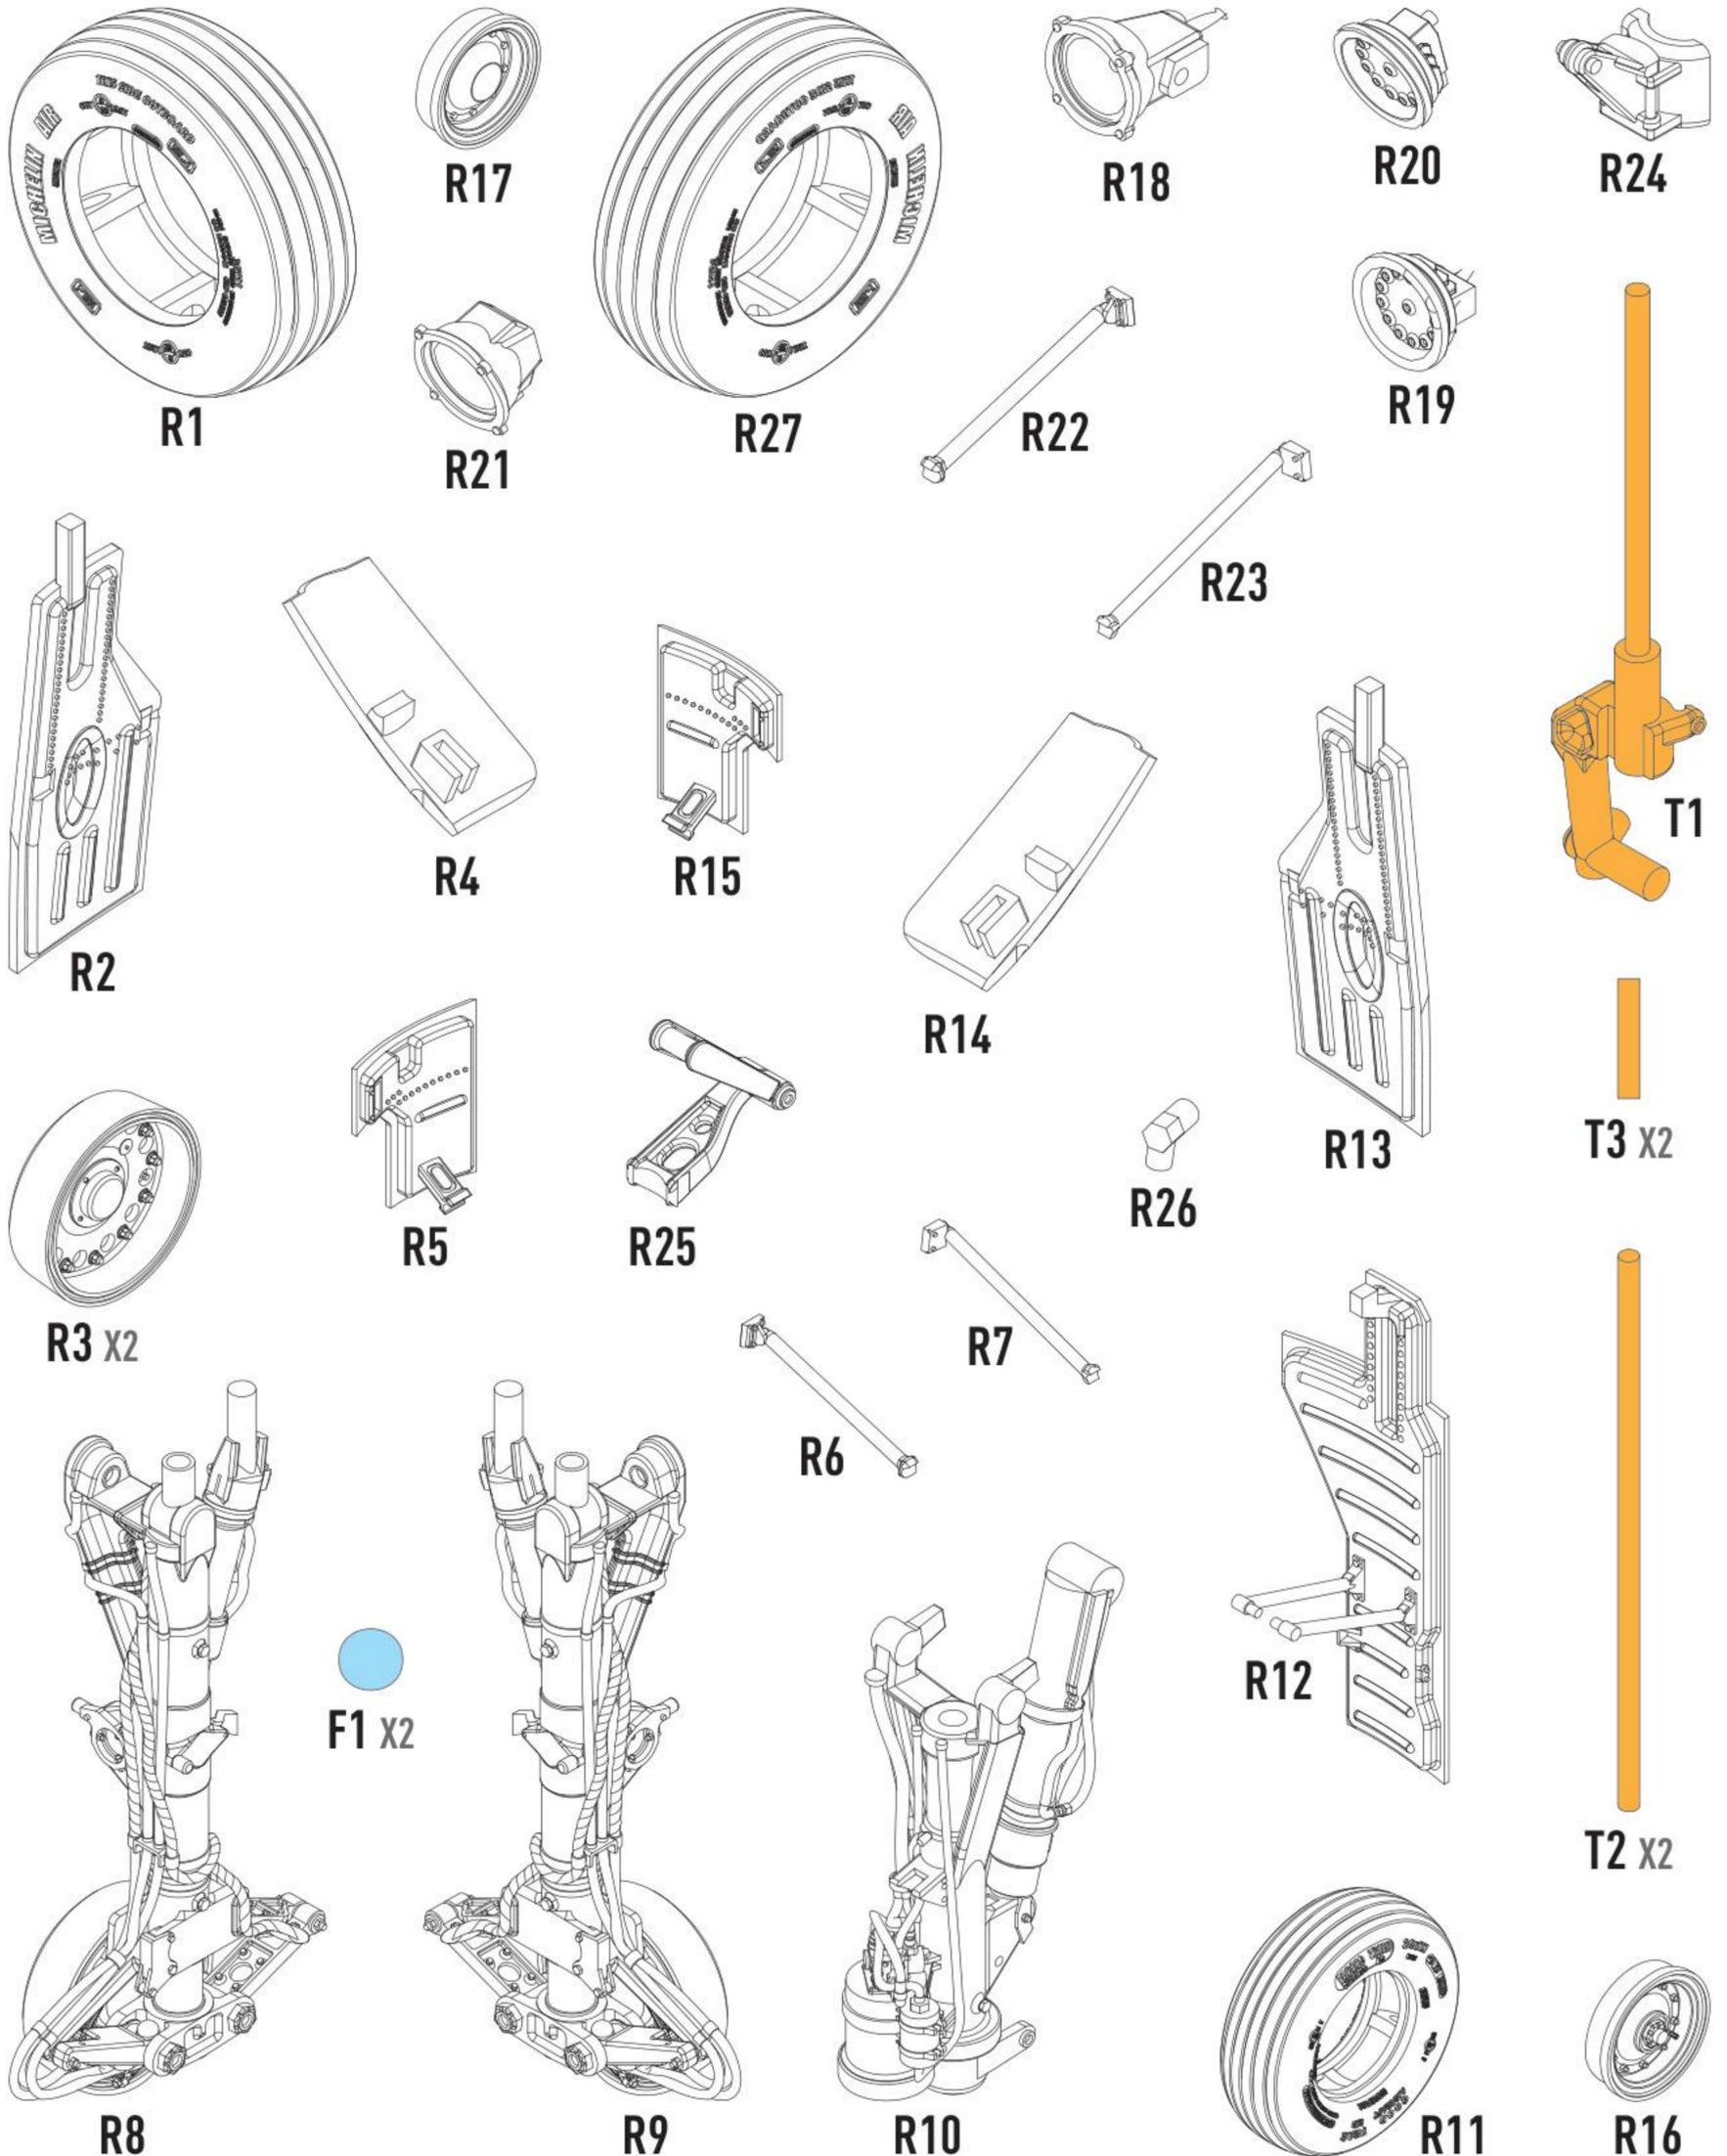


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




1

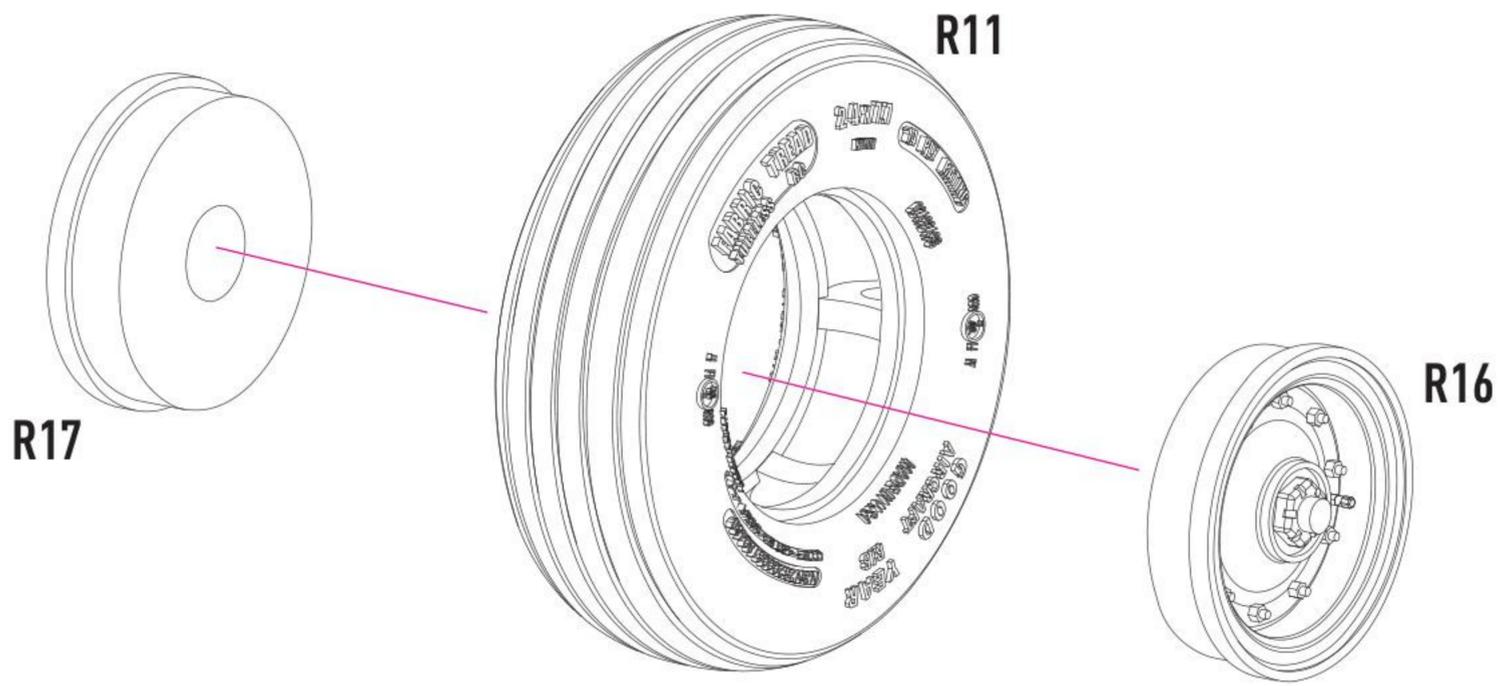


2

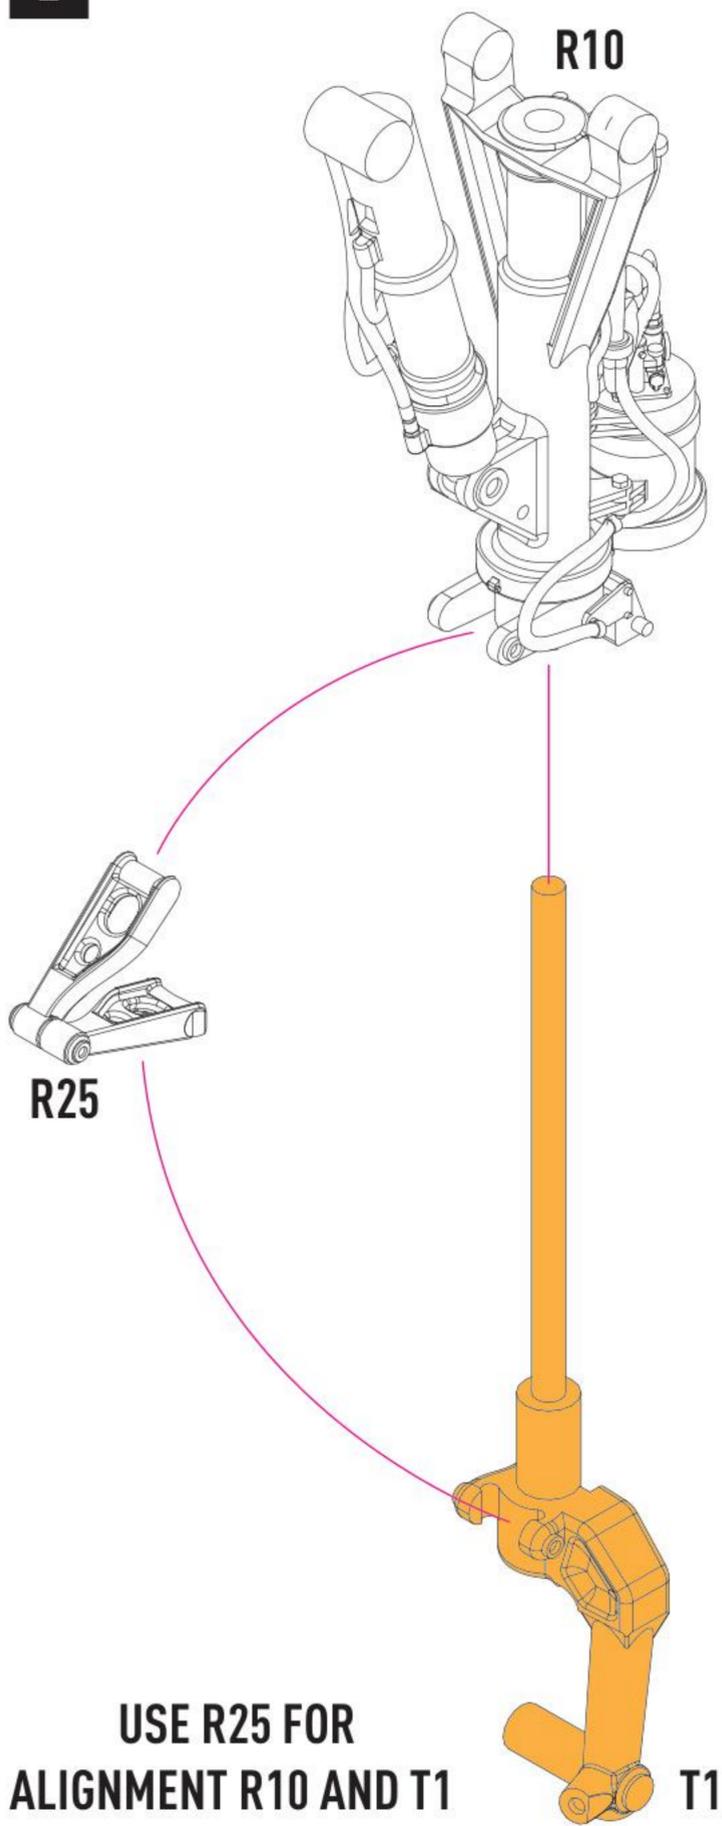


3

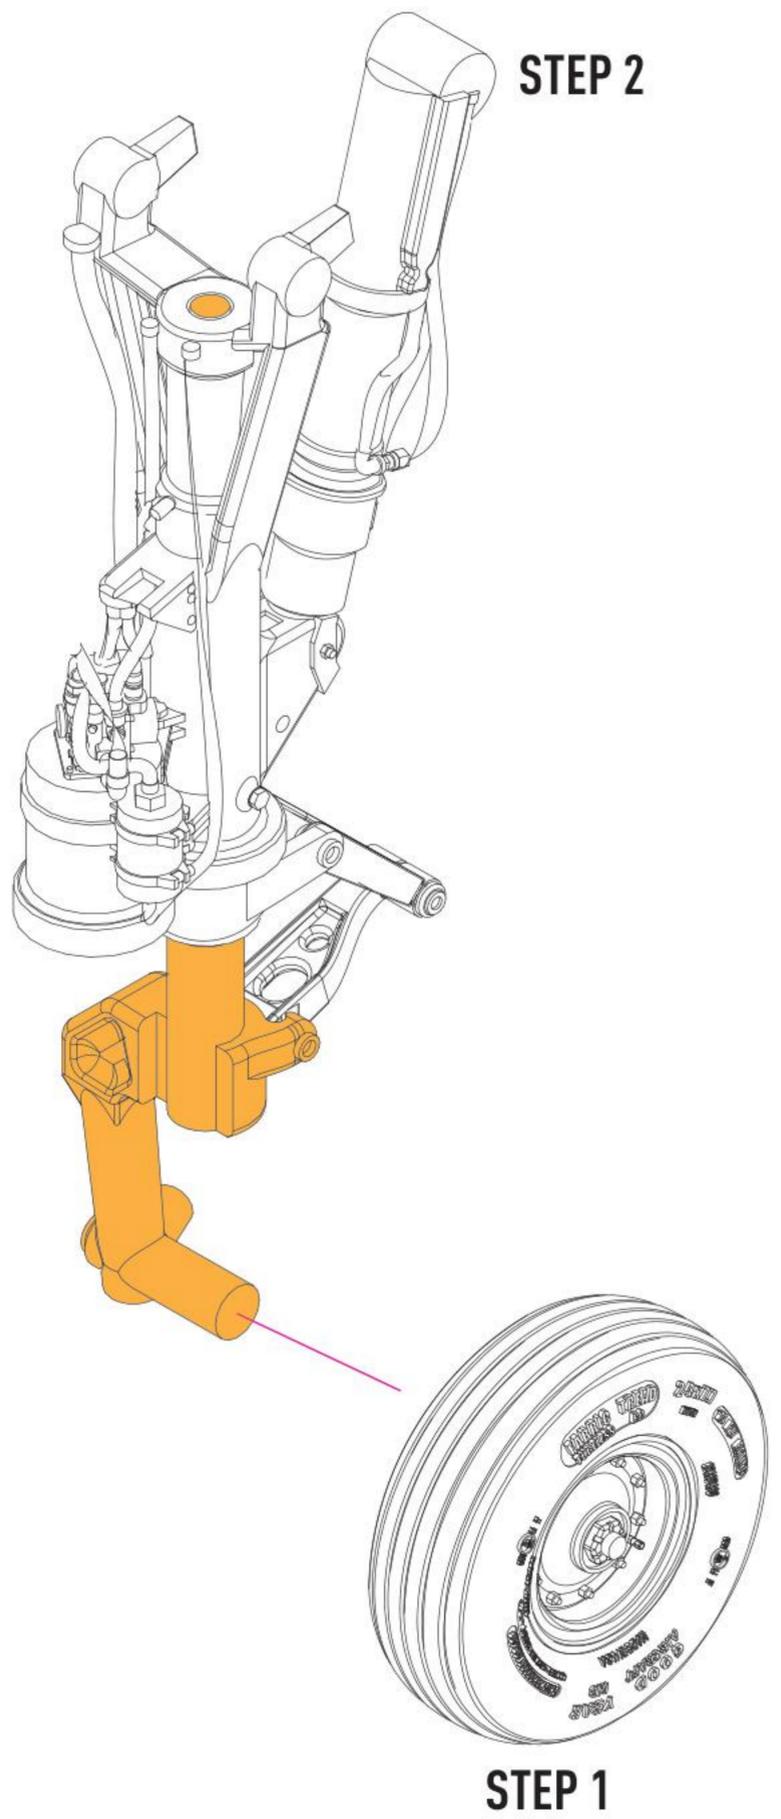



4

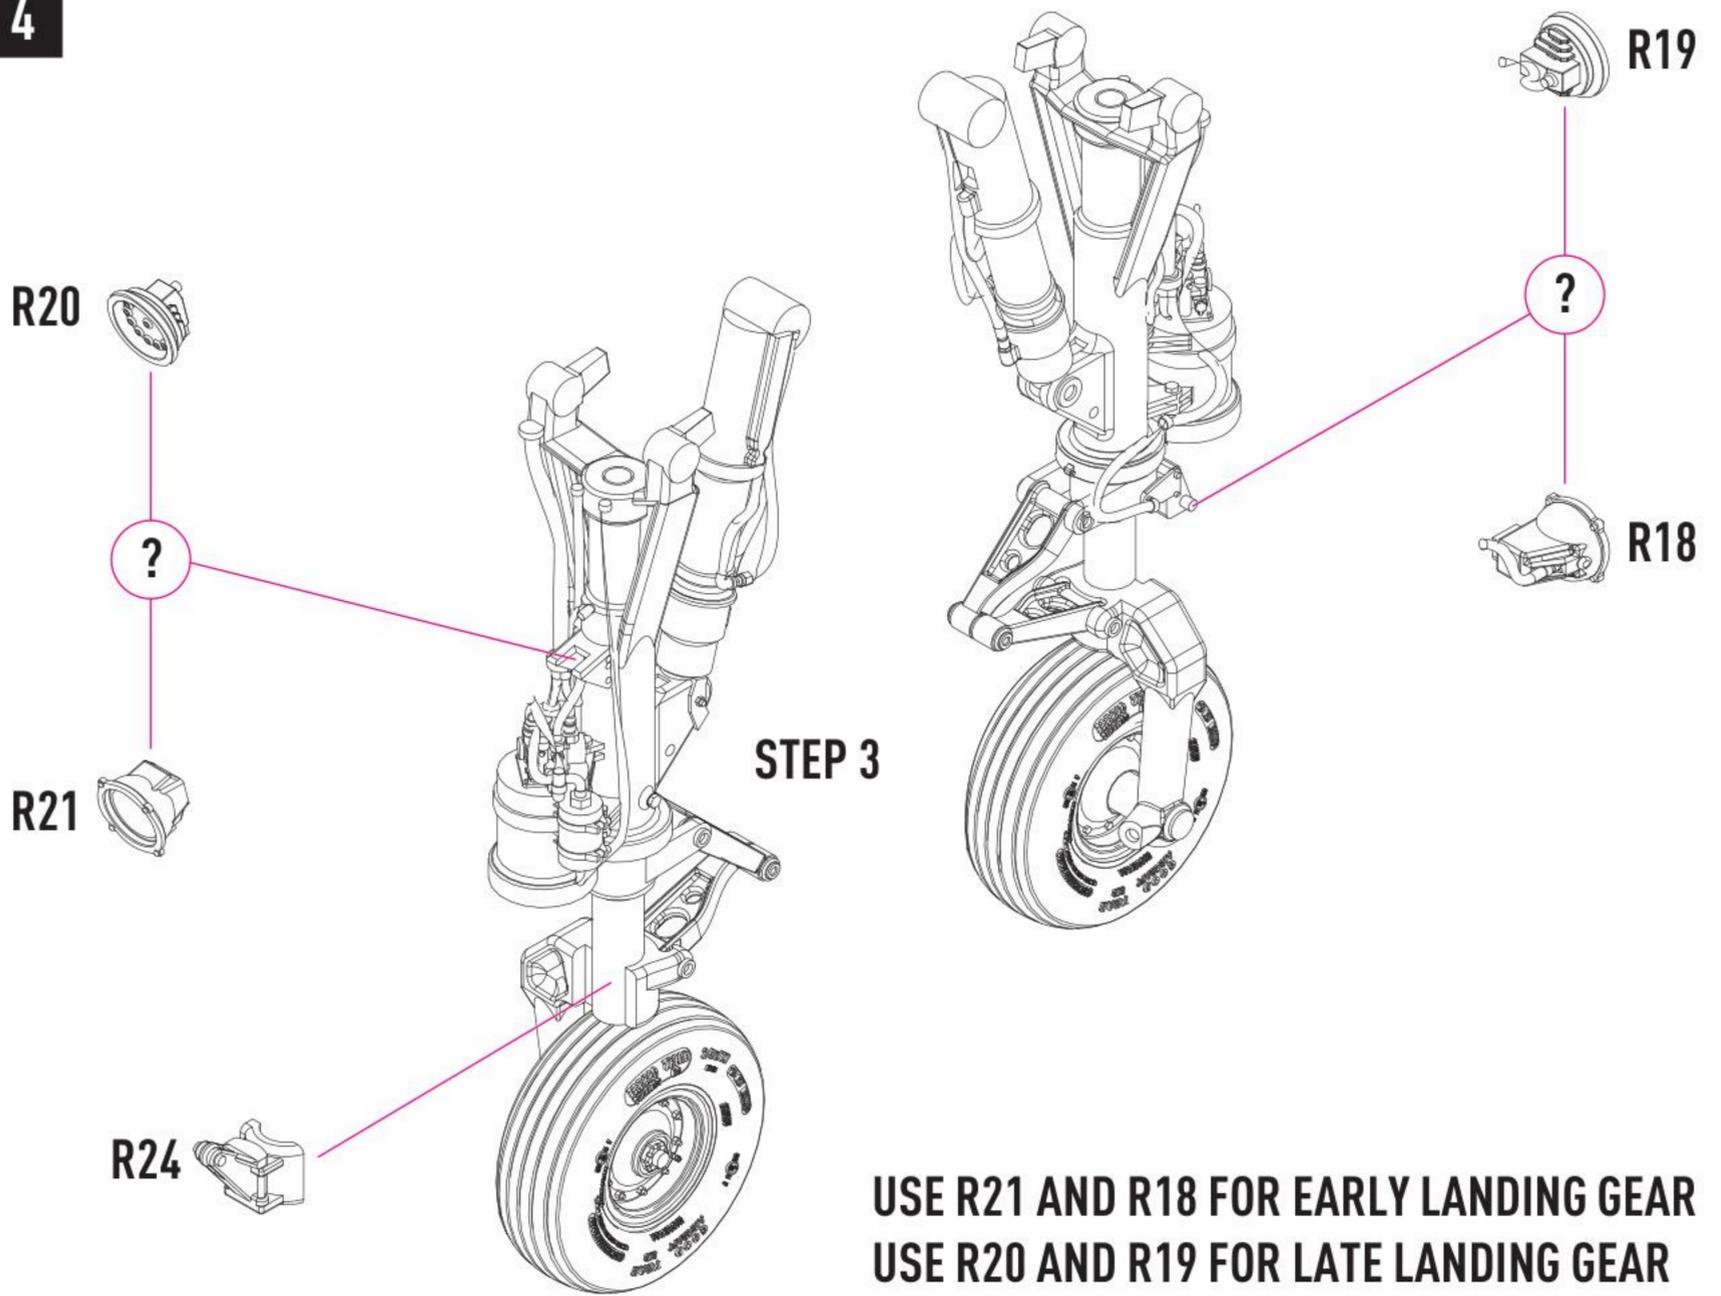


5

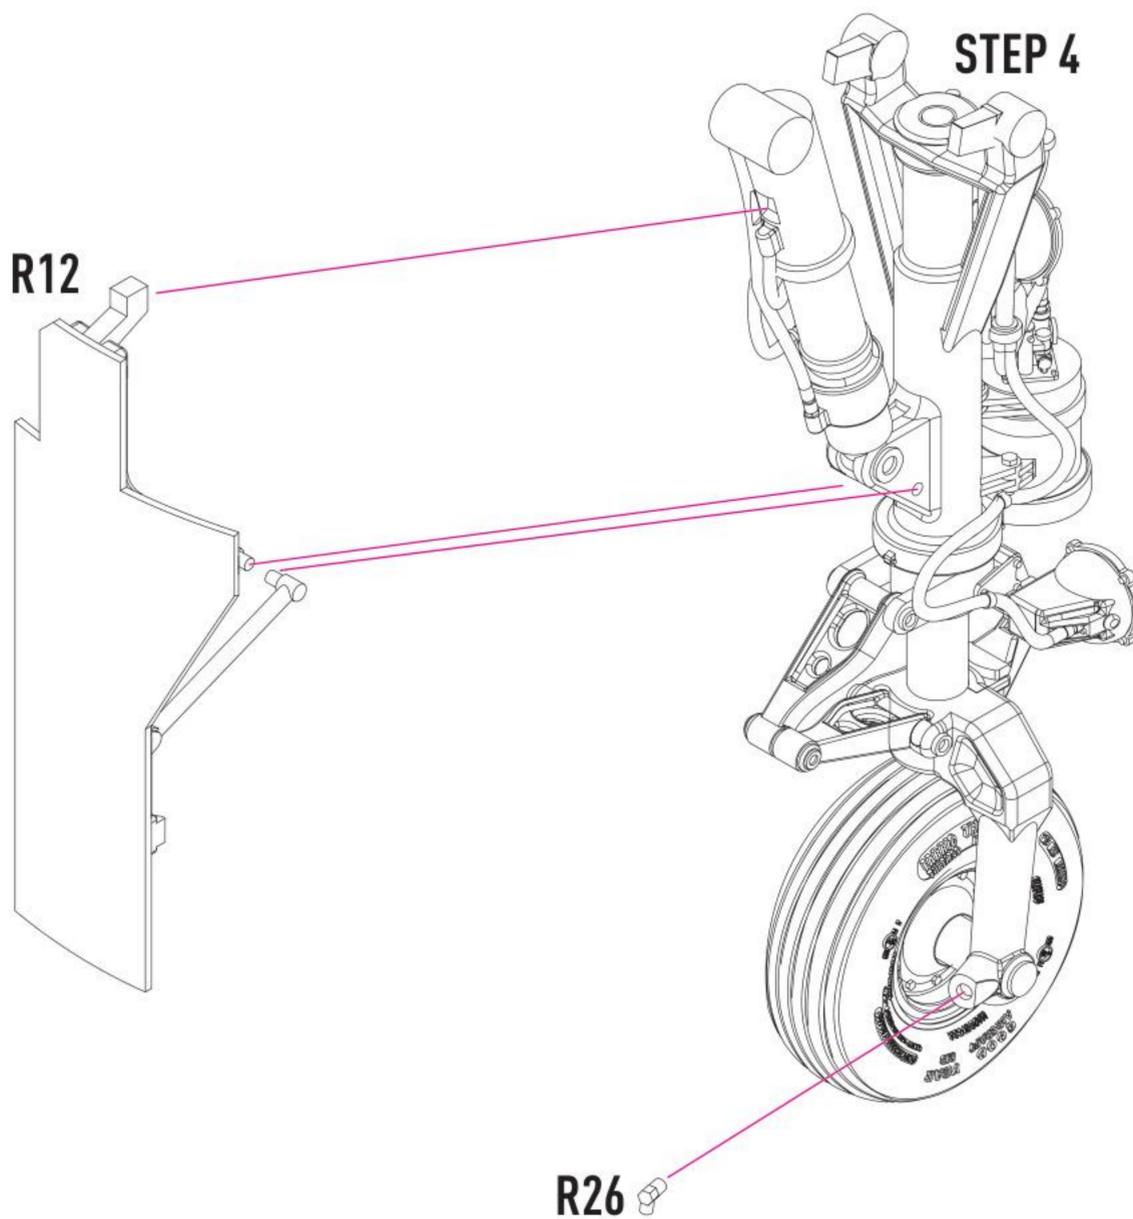


6

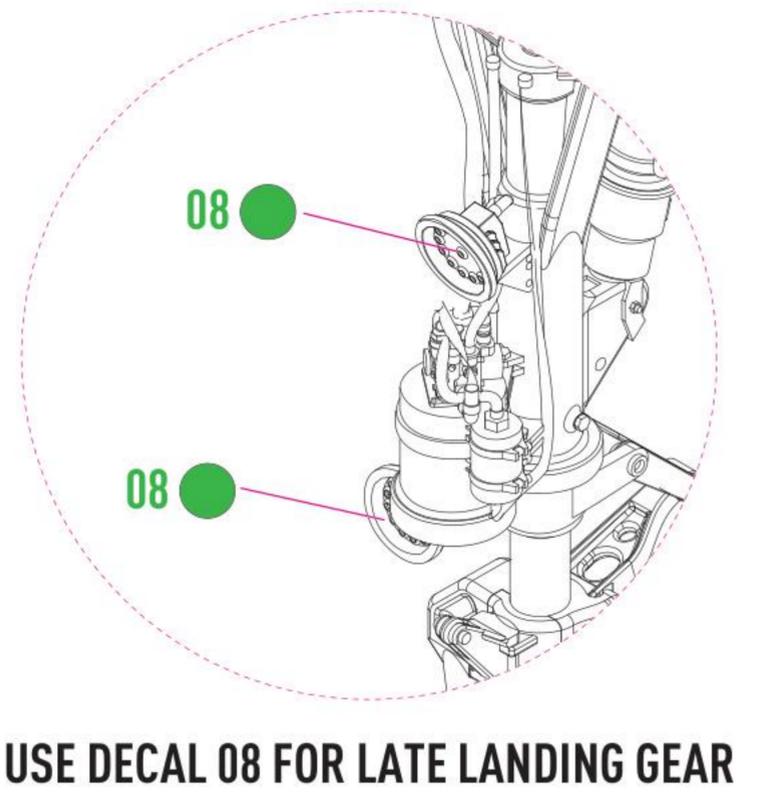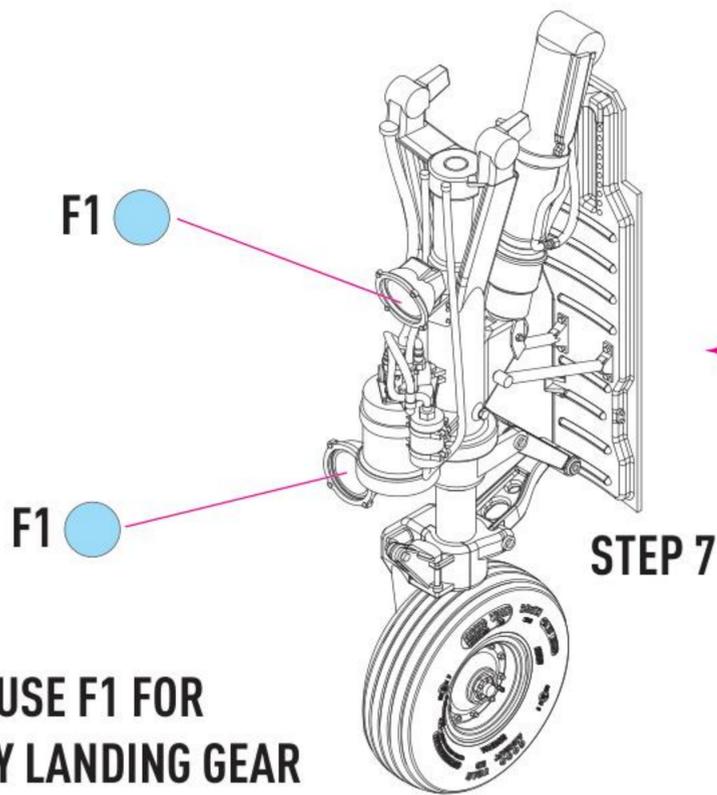



7




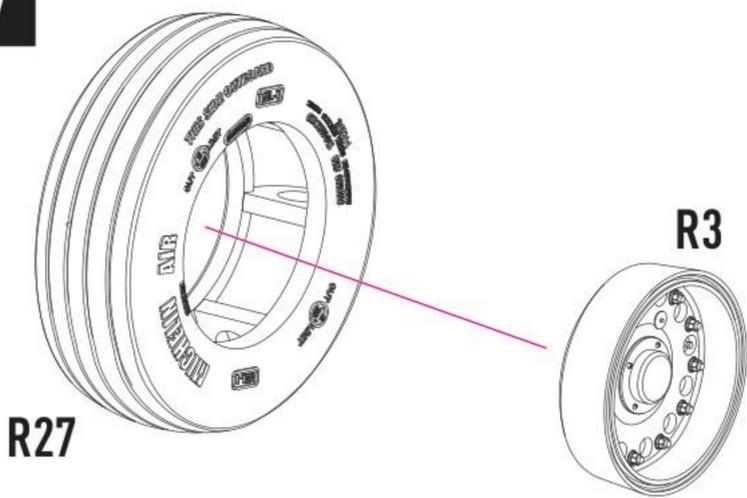


8

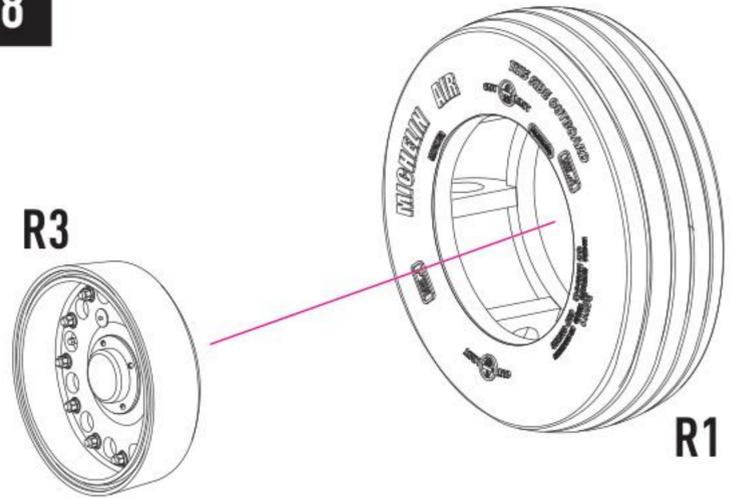


9

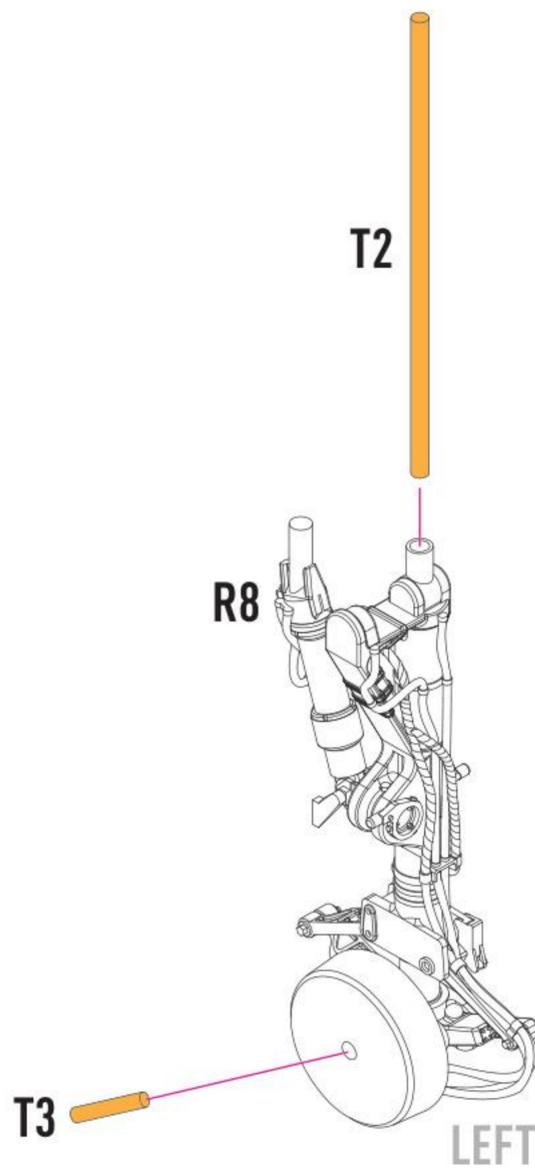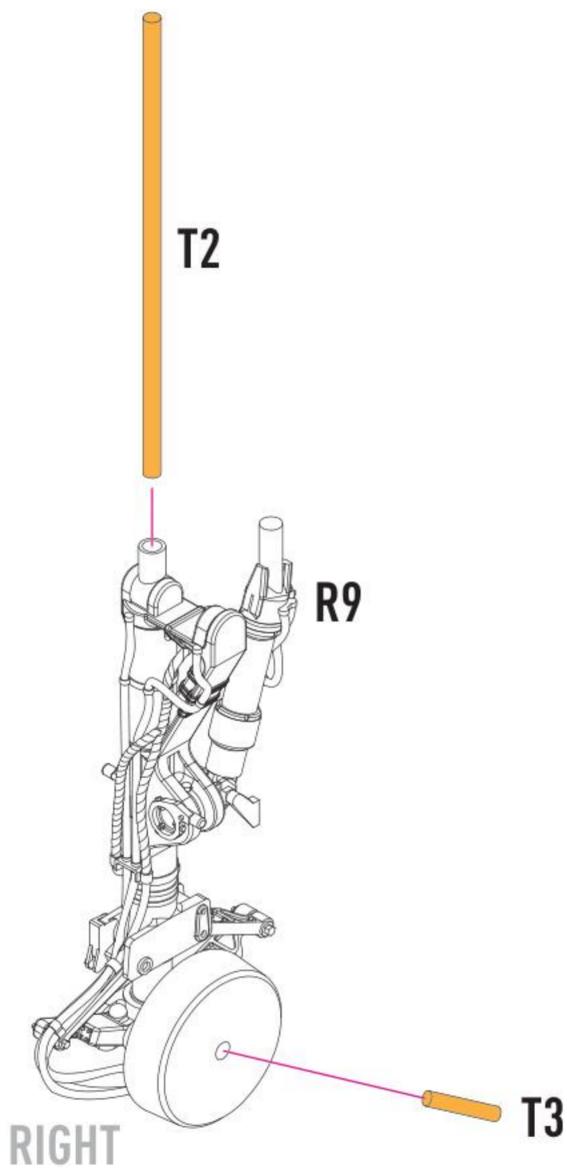

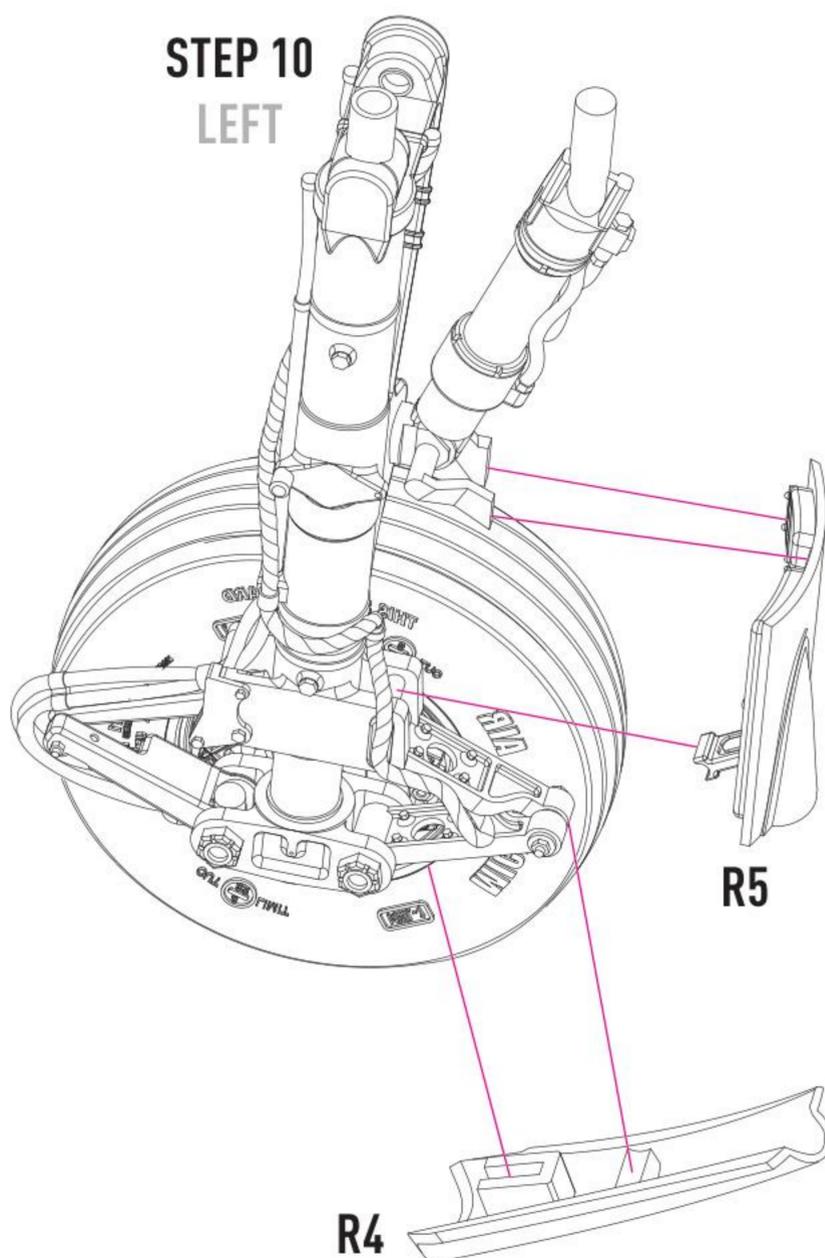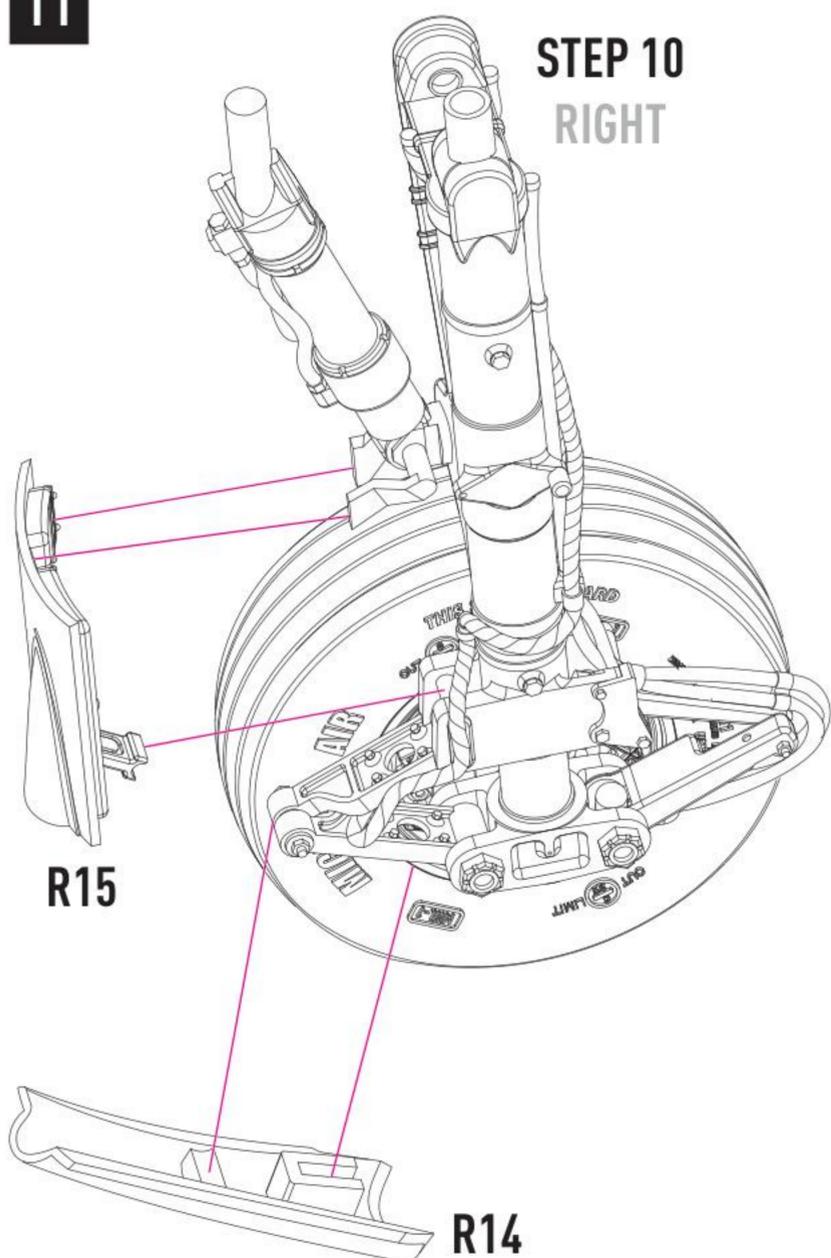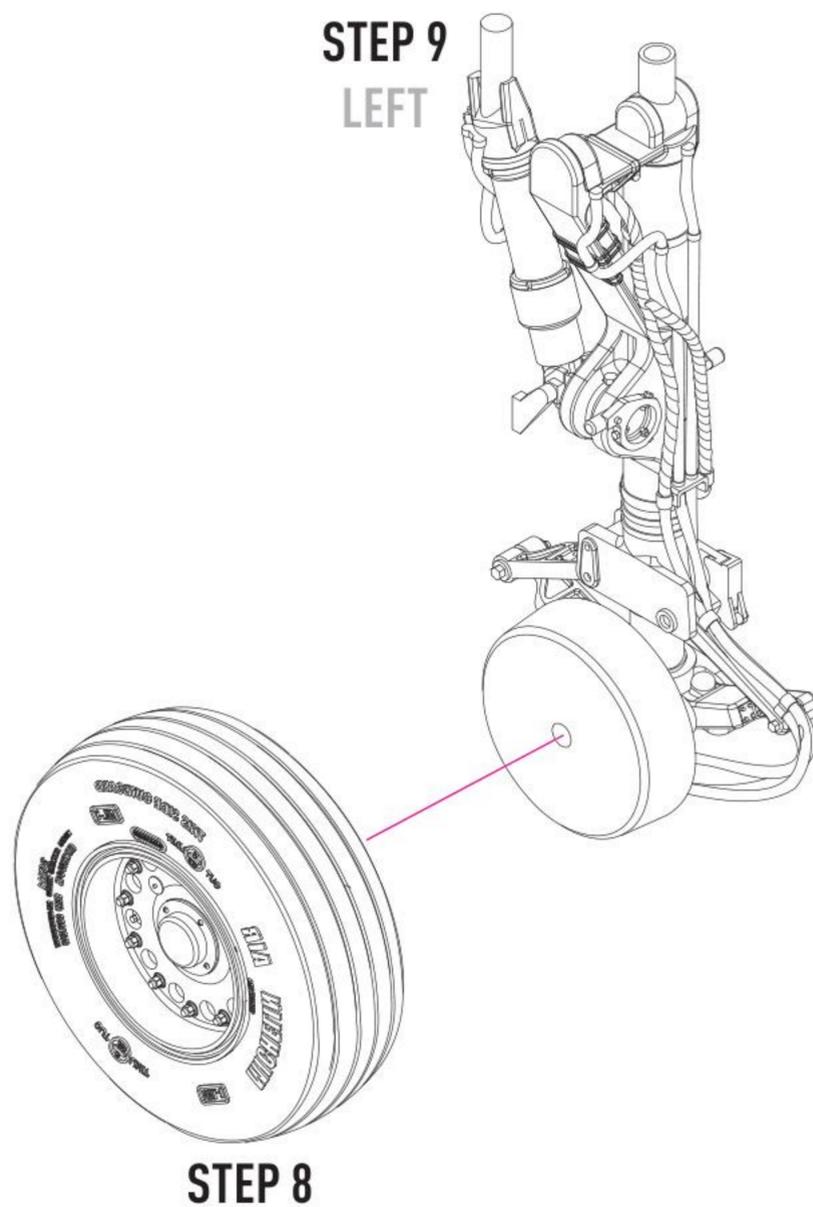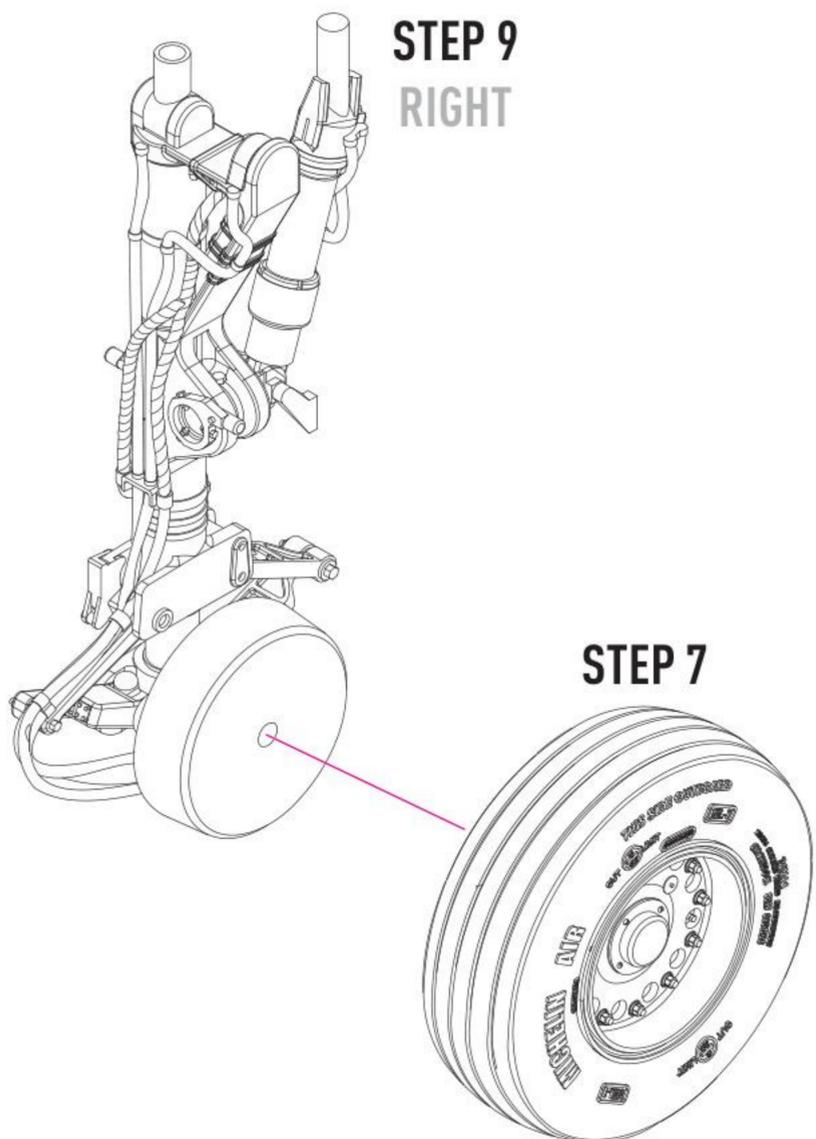


12

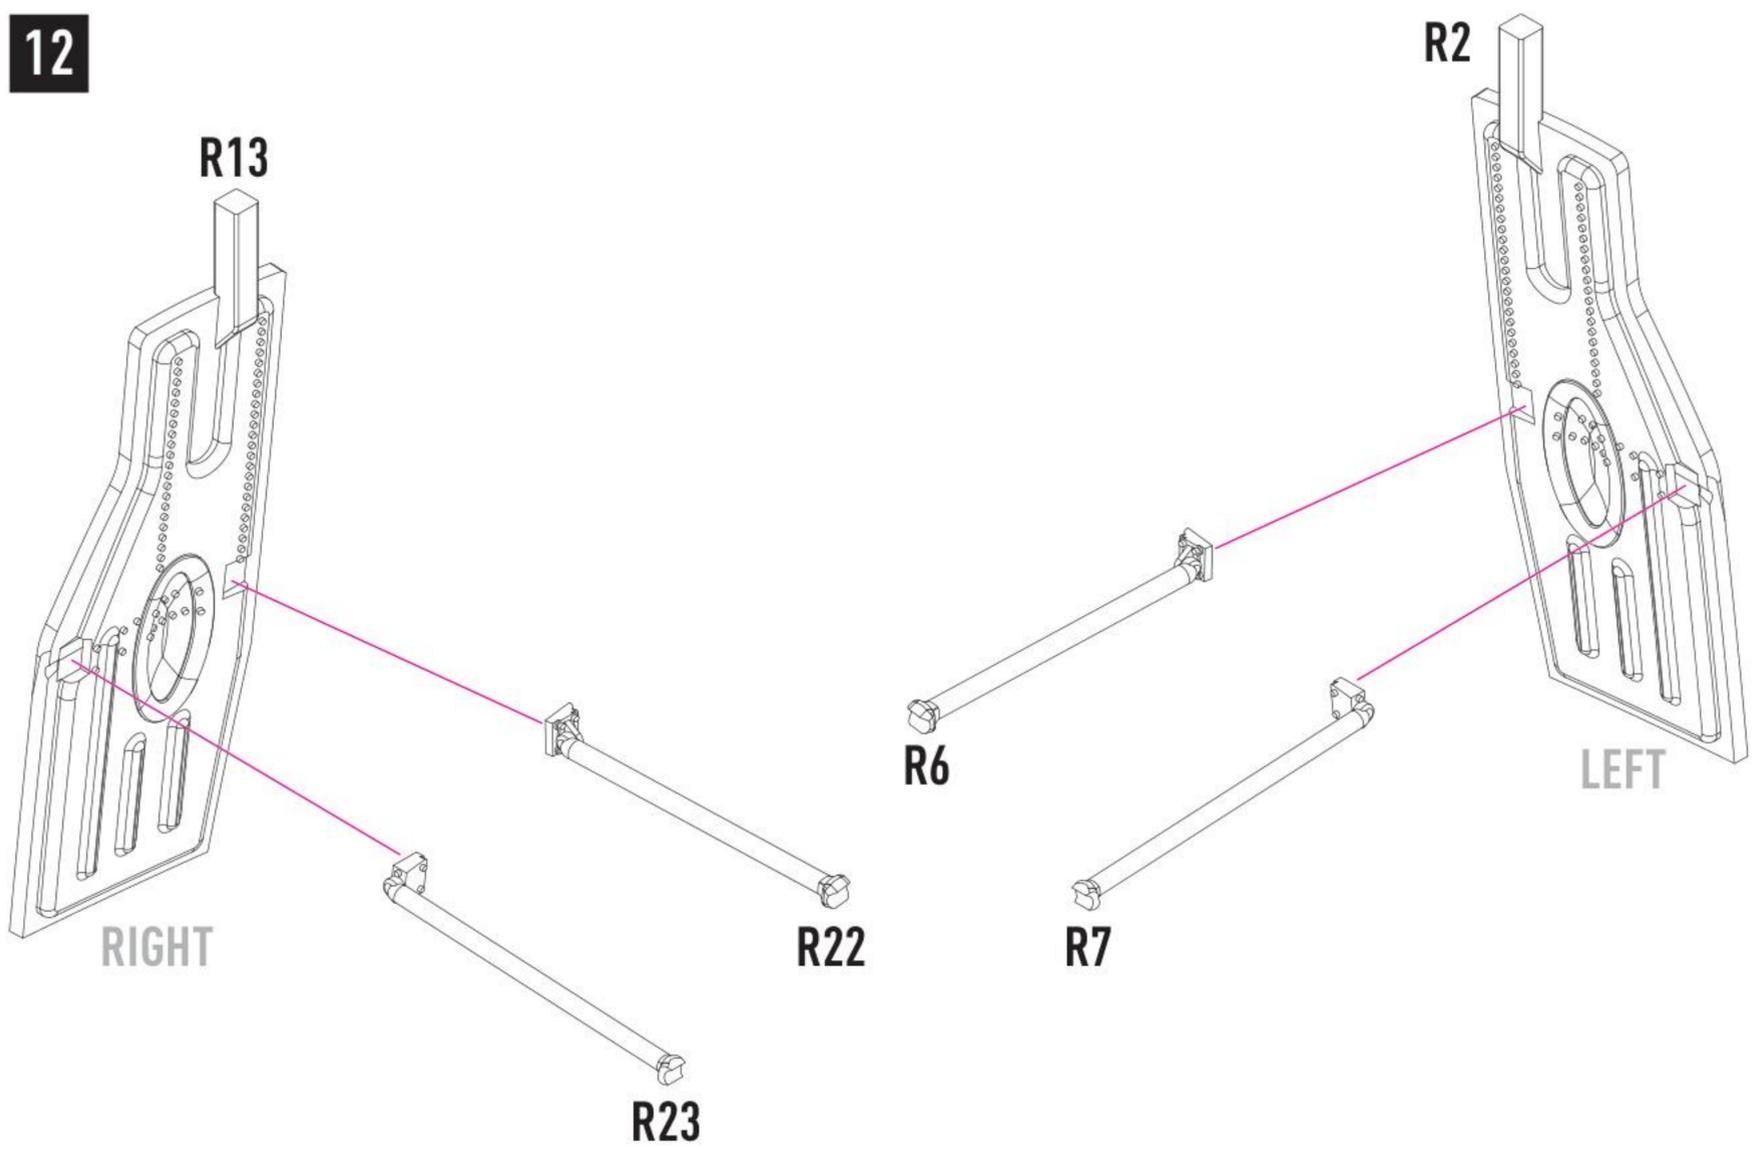


13 LEFT SIDE

GWH A-10 "THUNDERBOLT II" MODEL ASSEMBLY

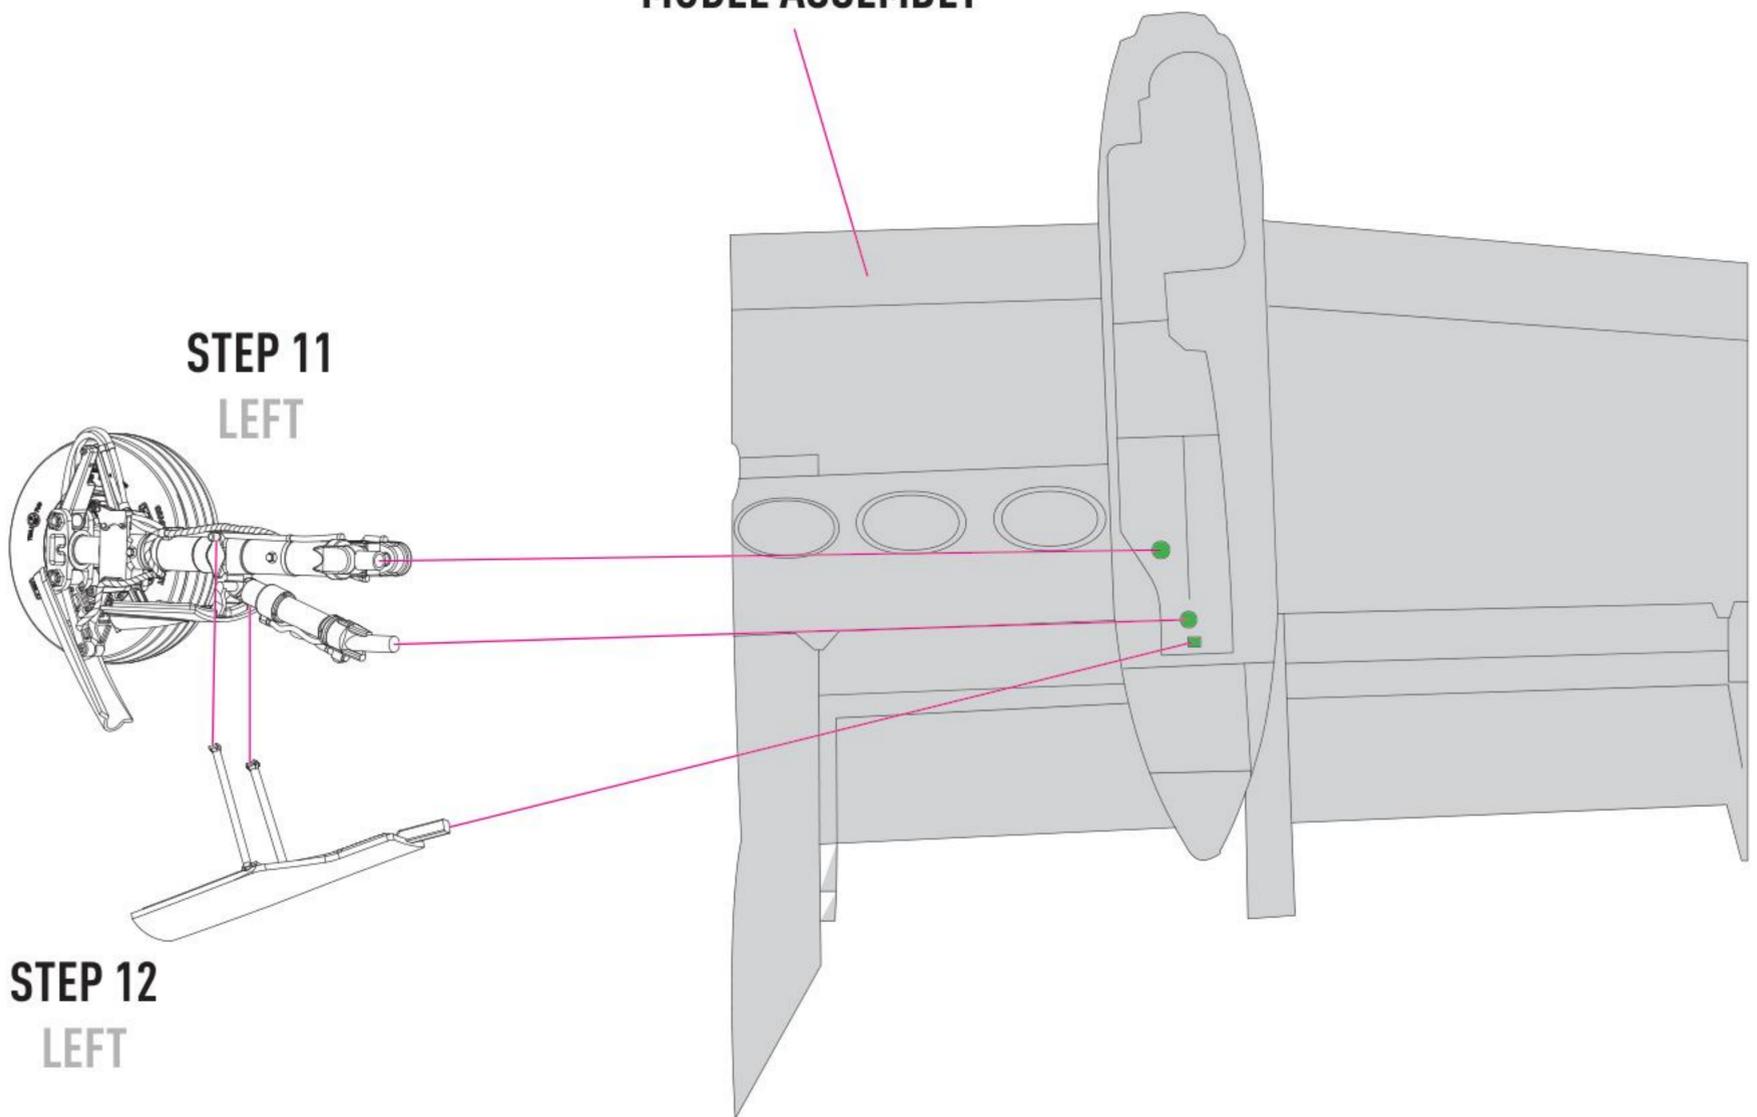


FIRST GLUE STEP 11 TO GWH MODEL ASSEMBLY
 THAN GLUE STEP 12 TO MODEL AND CONNECT BOTH ADDITIONAL PART TOGETHER

**GWH A-10 "THUNDERBOLT II"
MODEL ASSEMBLY**

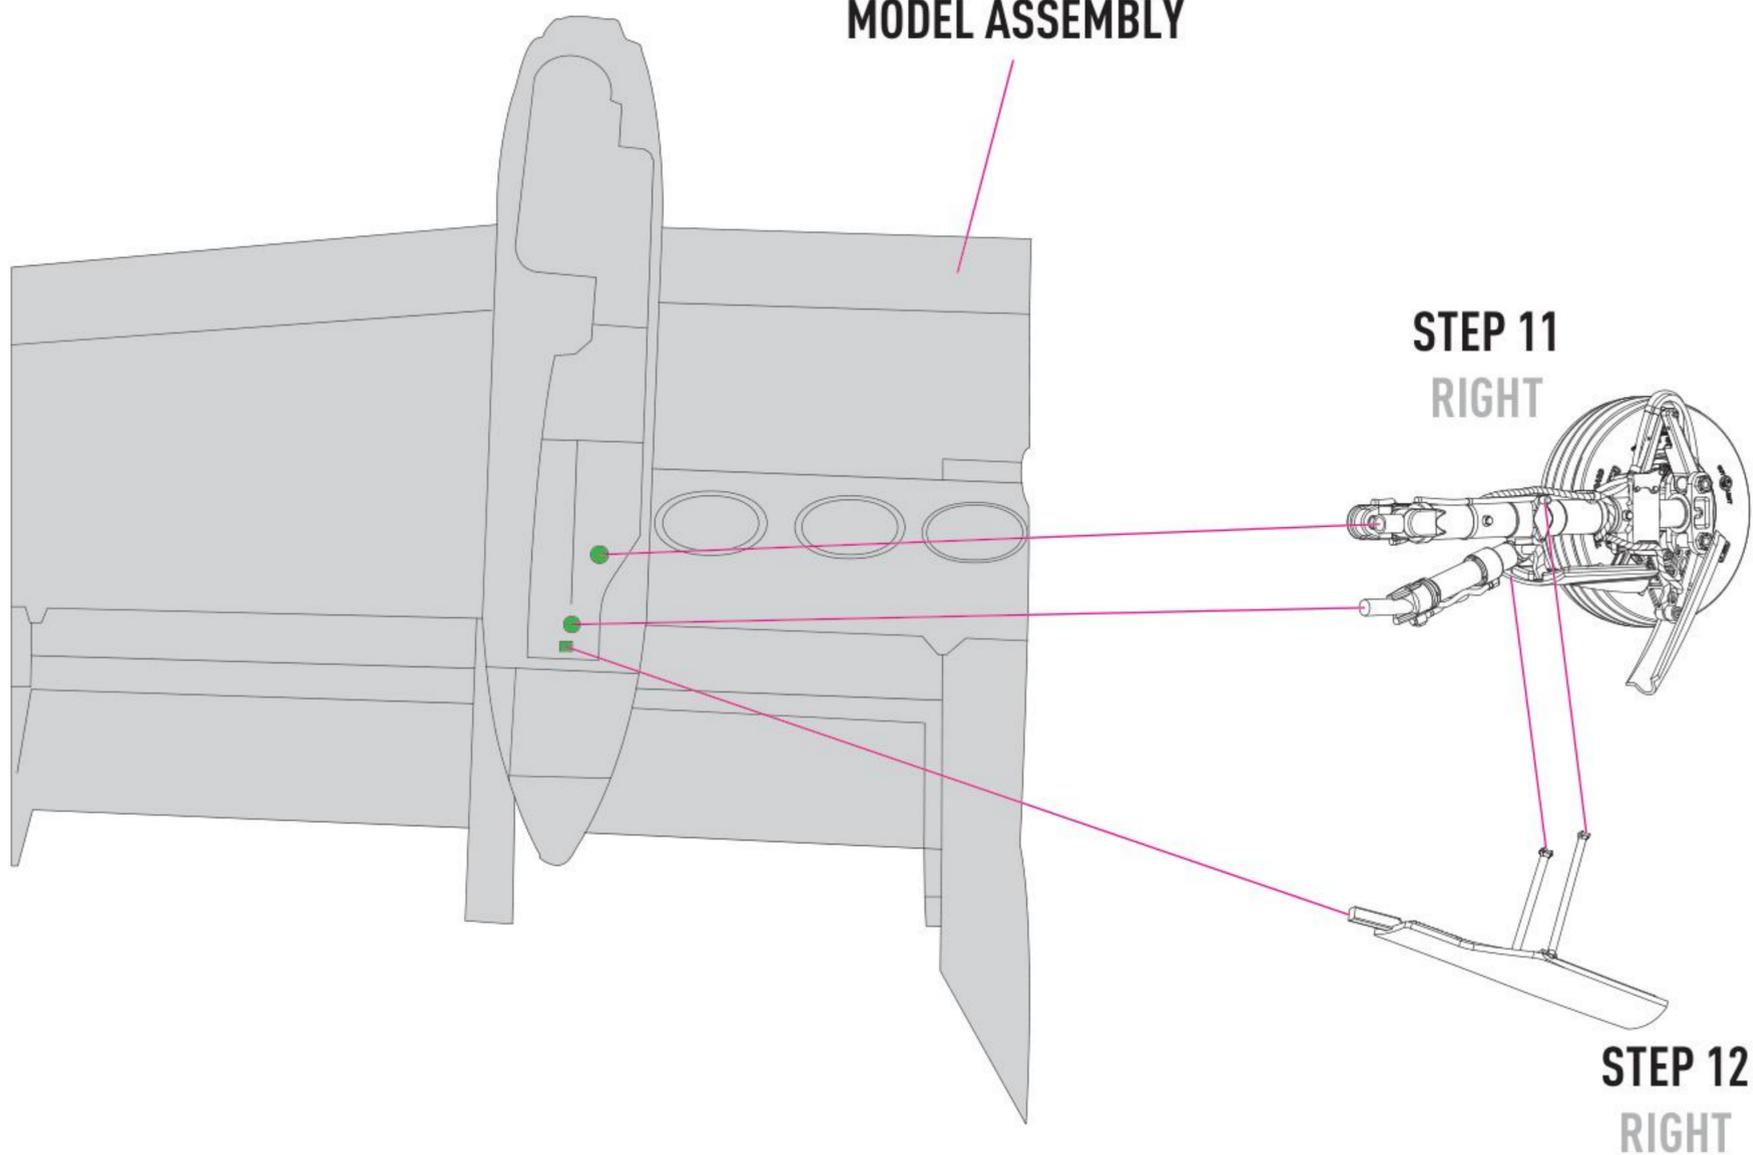

**FIRST GLUE STEP 11 TO GWH MODEL ASSEMBLY
THAN GLUE STEP 12 TO MODEL AND CONNECT BOTH ADDITIONAL PART TOGETHER**

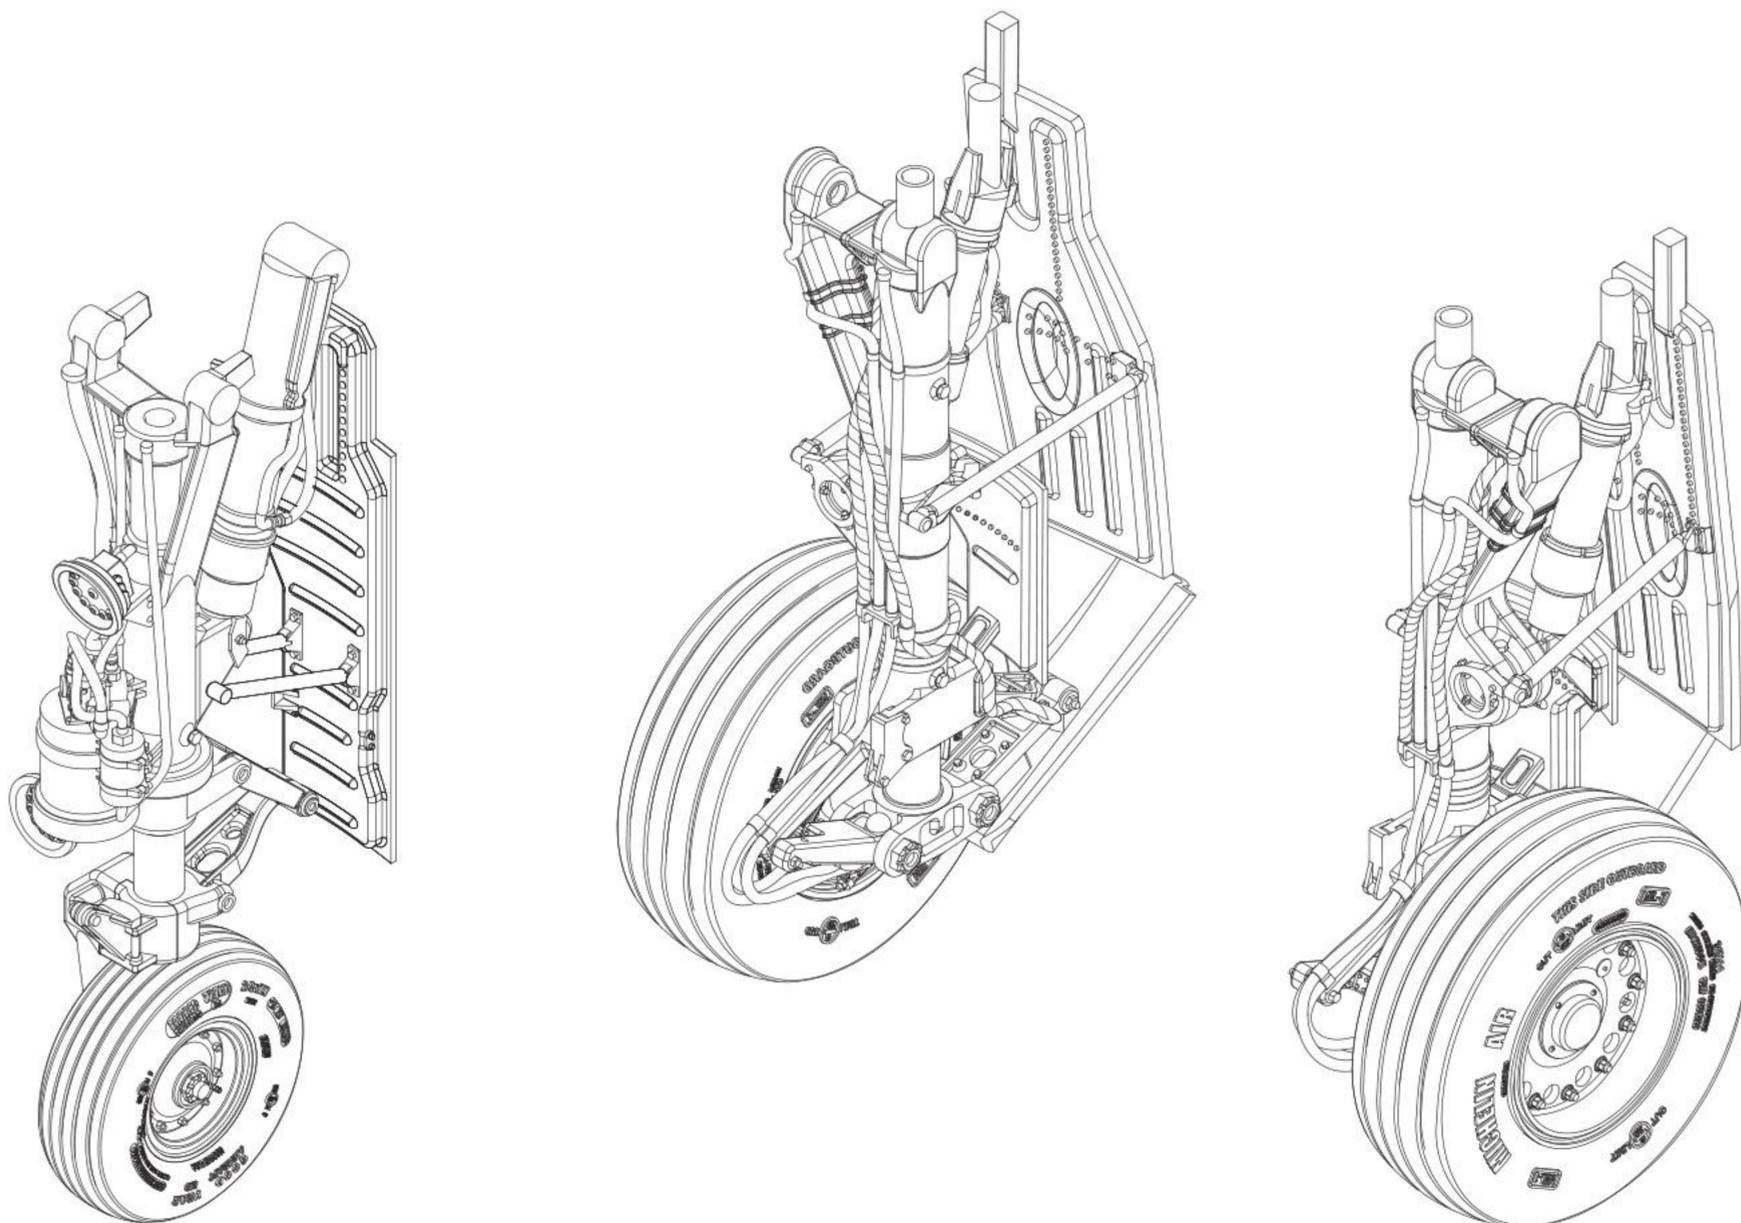

DECAL INSTRUCTION

