

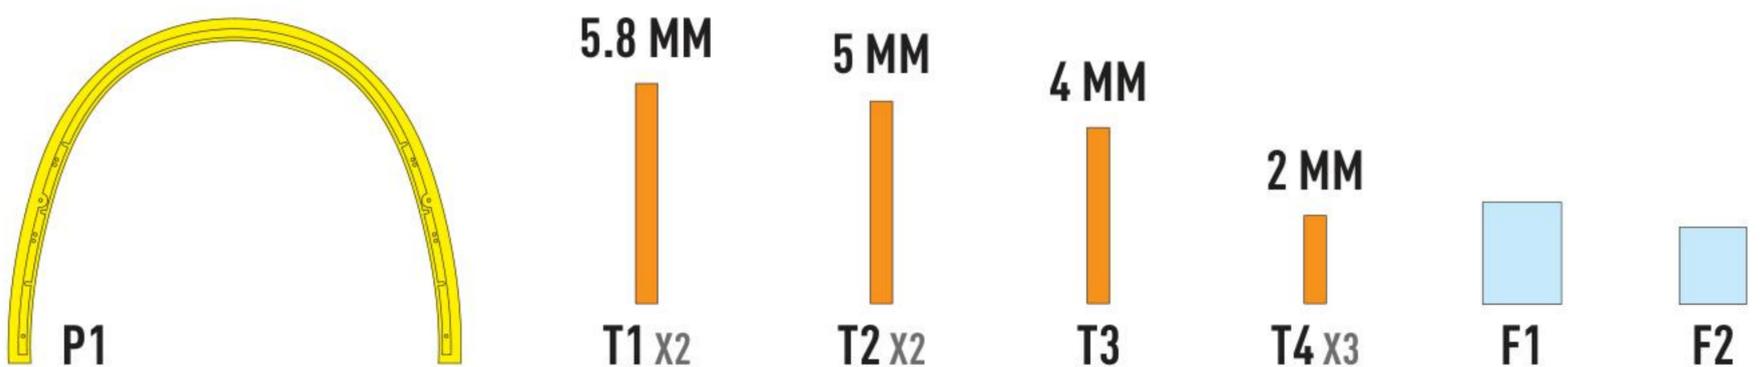


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

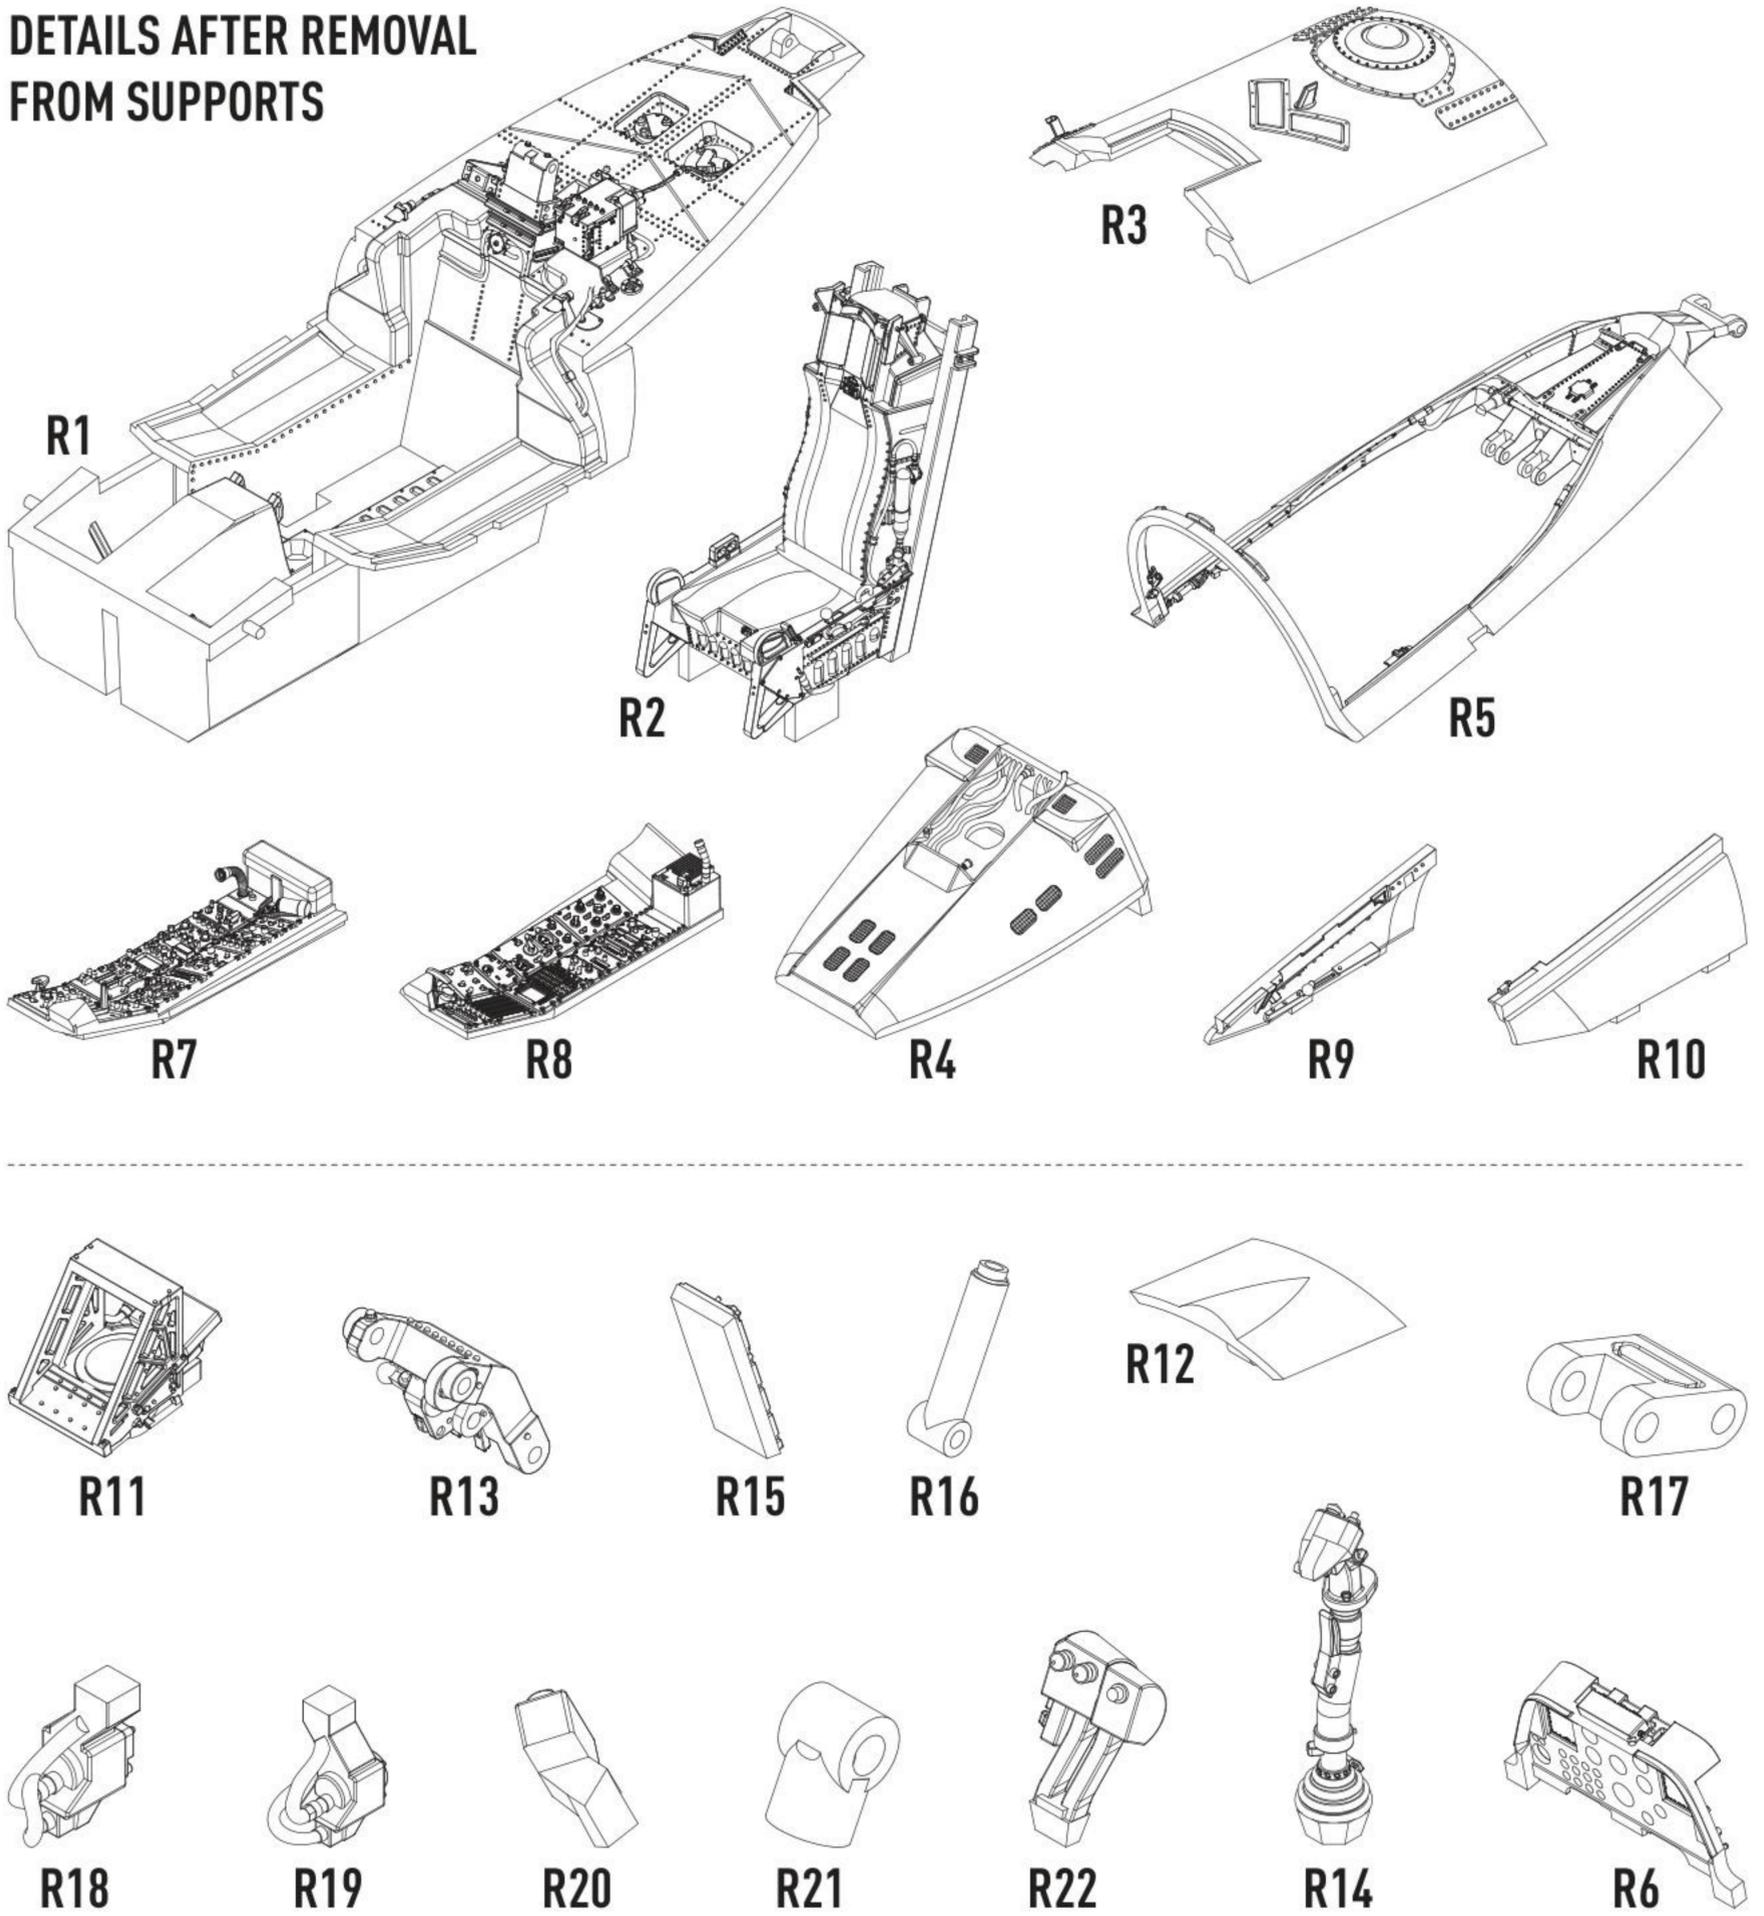


1

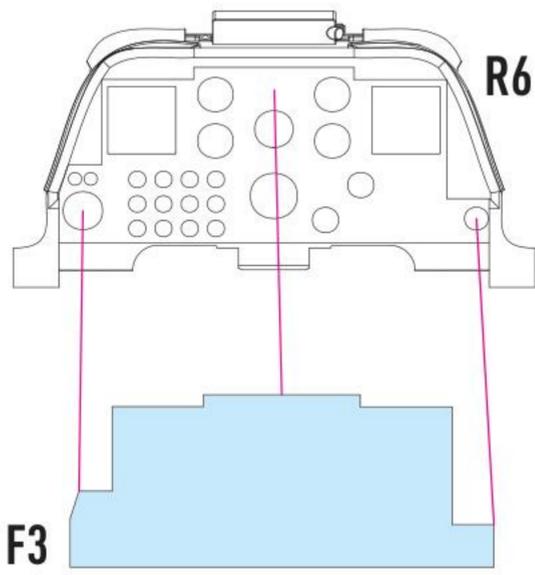


F3

R6

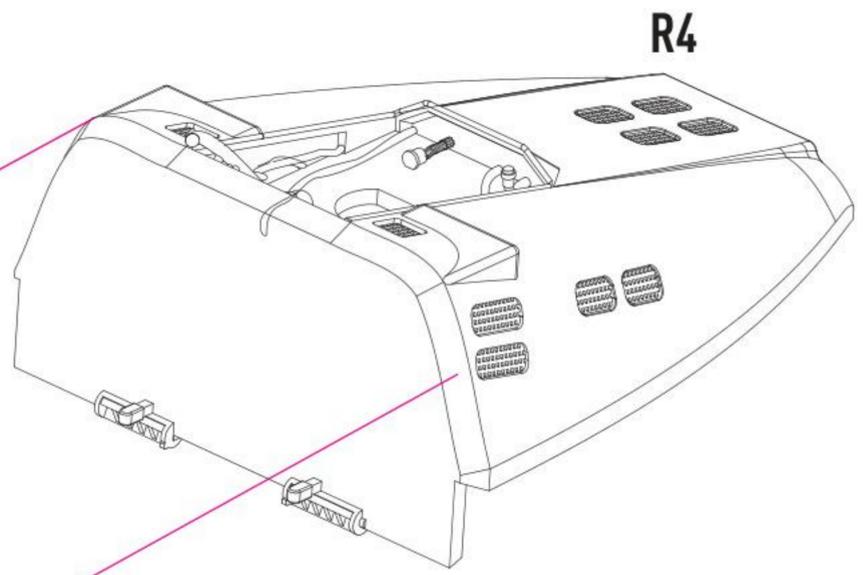


R4

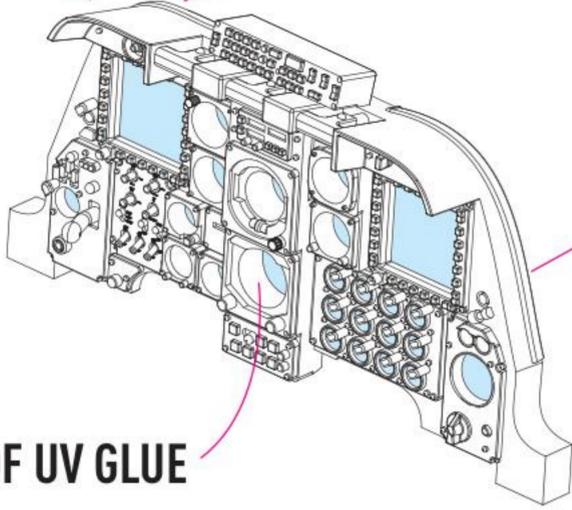

USE A DROP OF UV GLUE



2

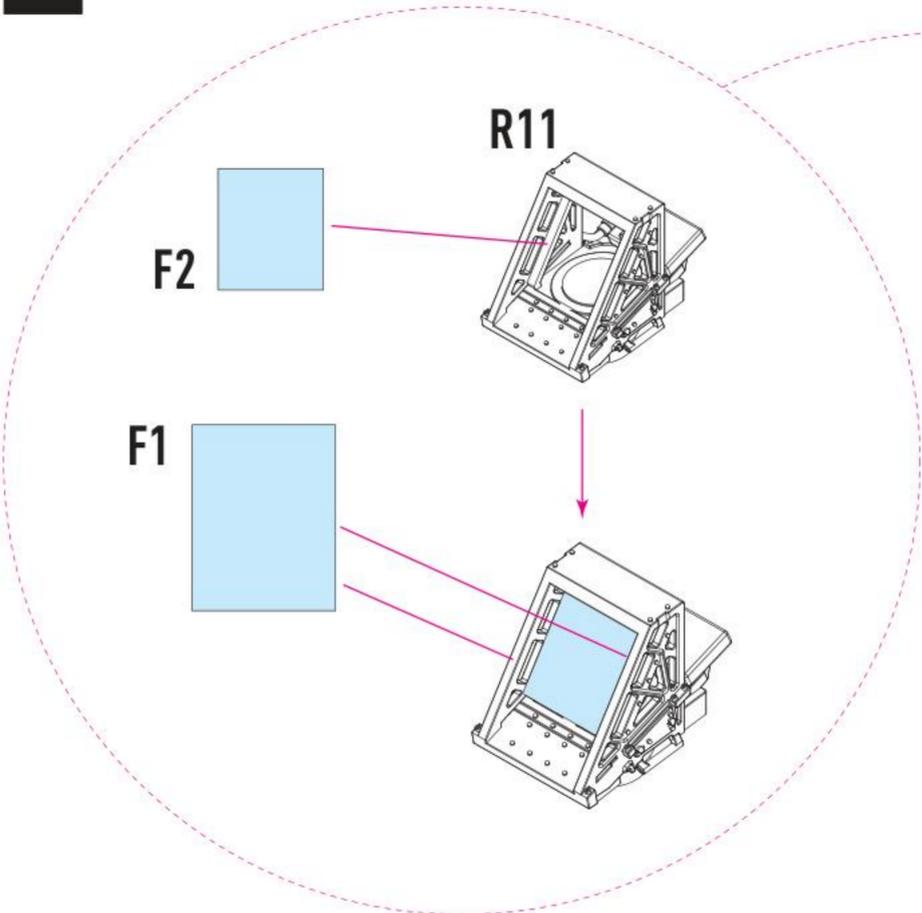

R11


F2

F1

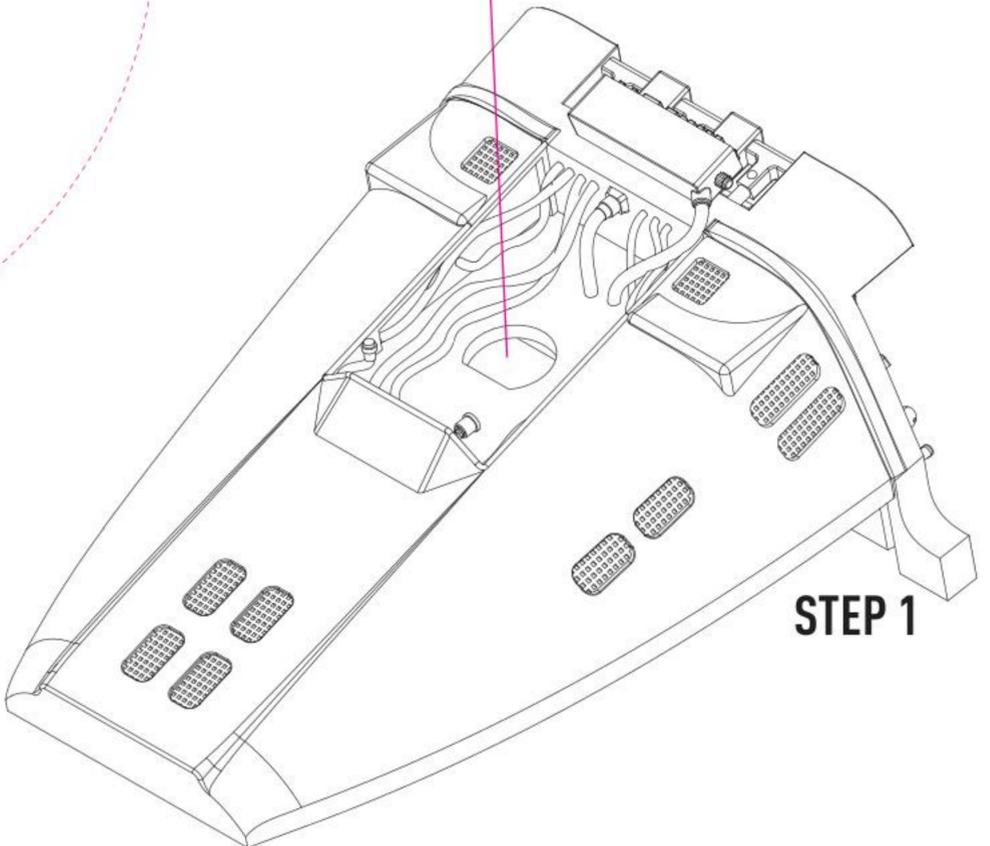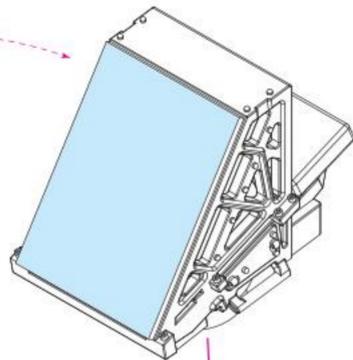


STEP 1



3

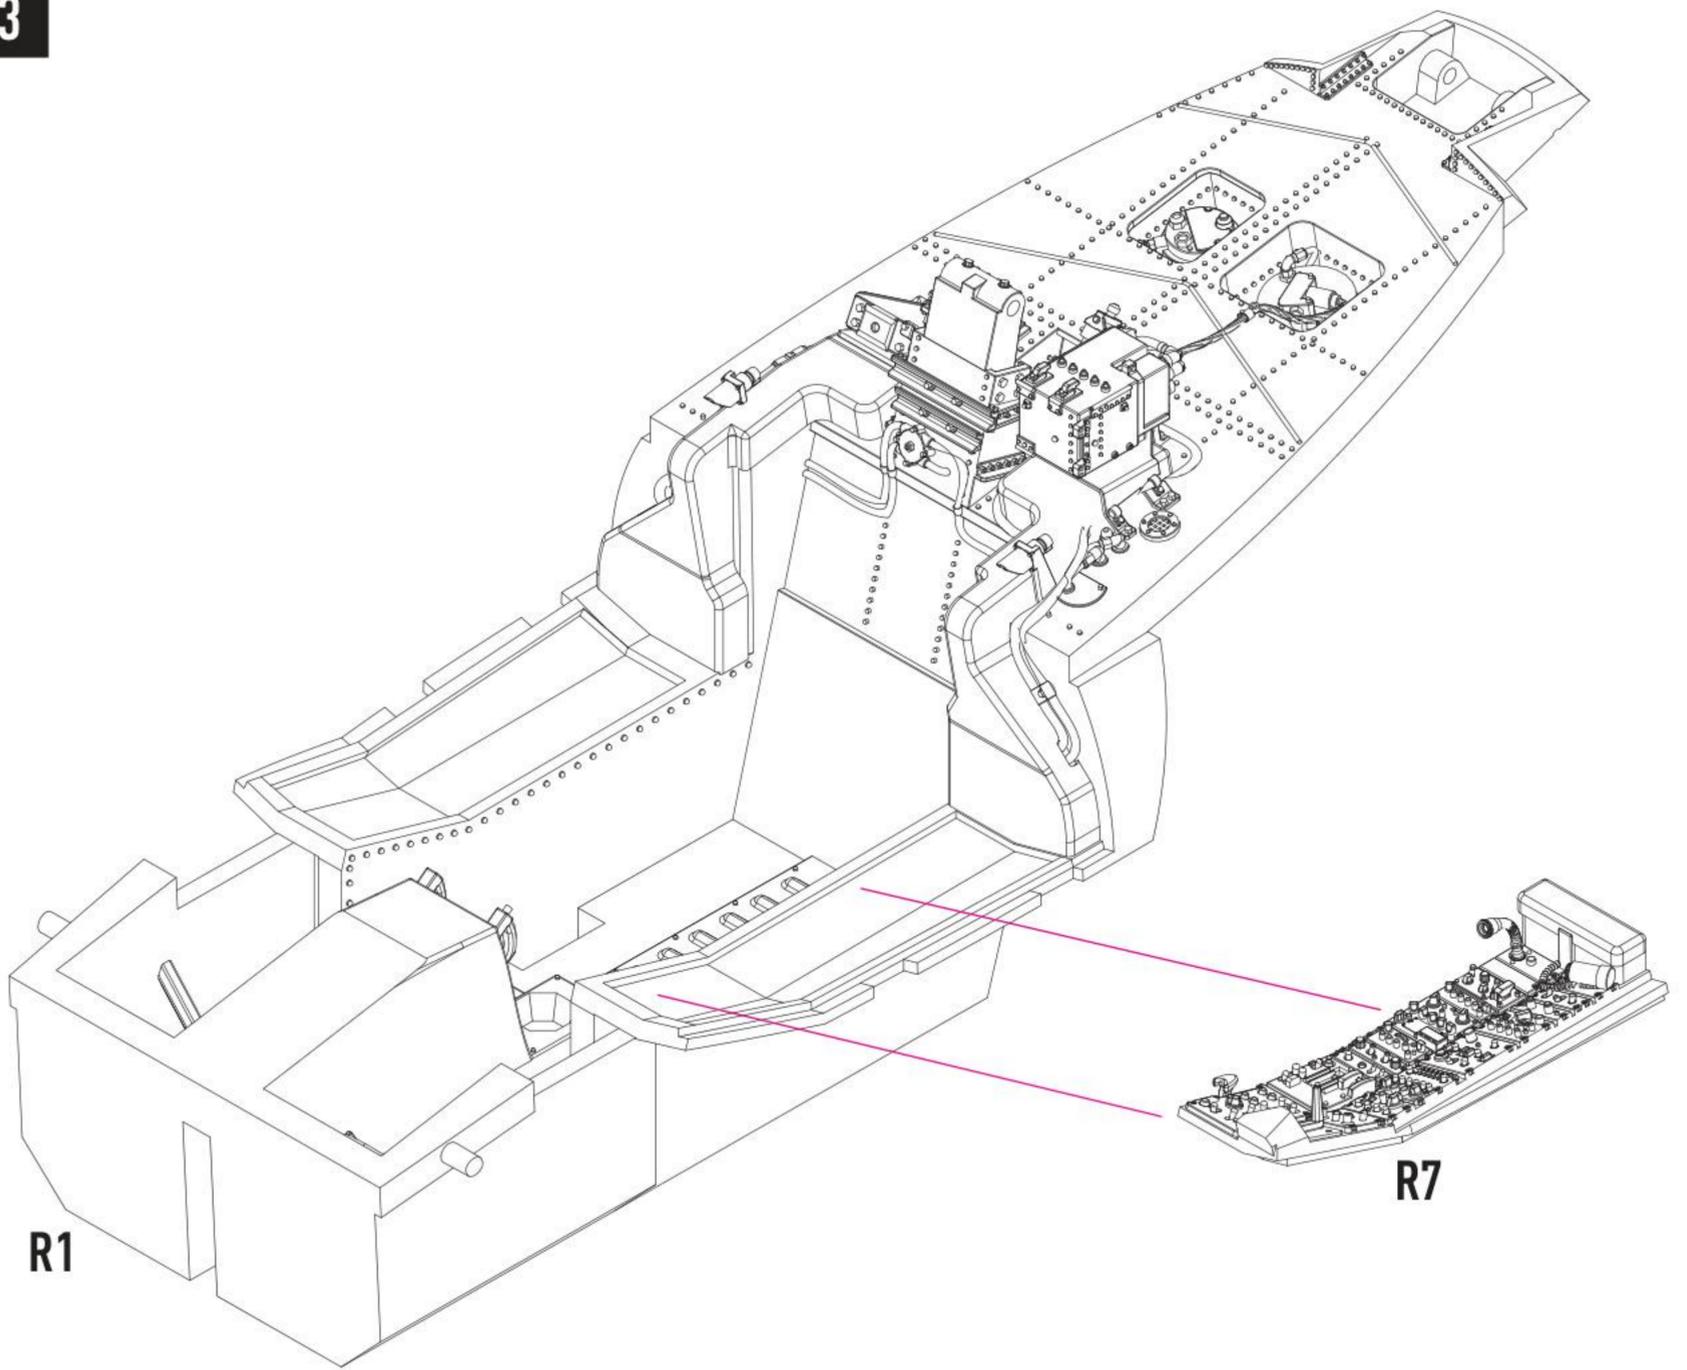




4

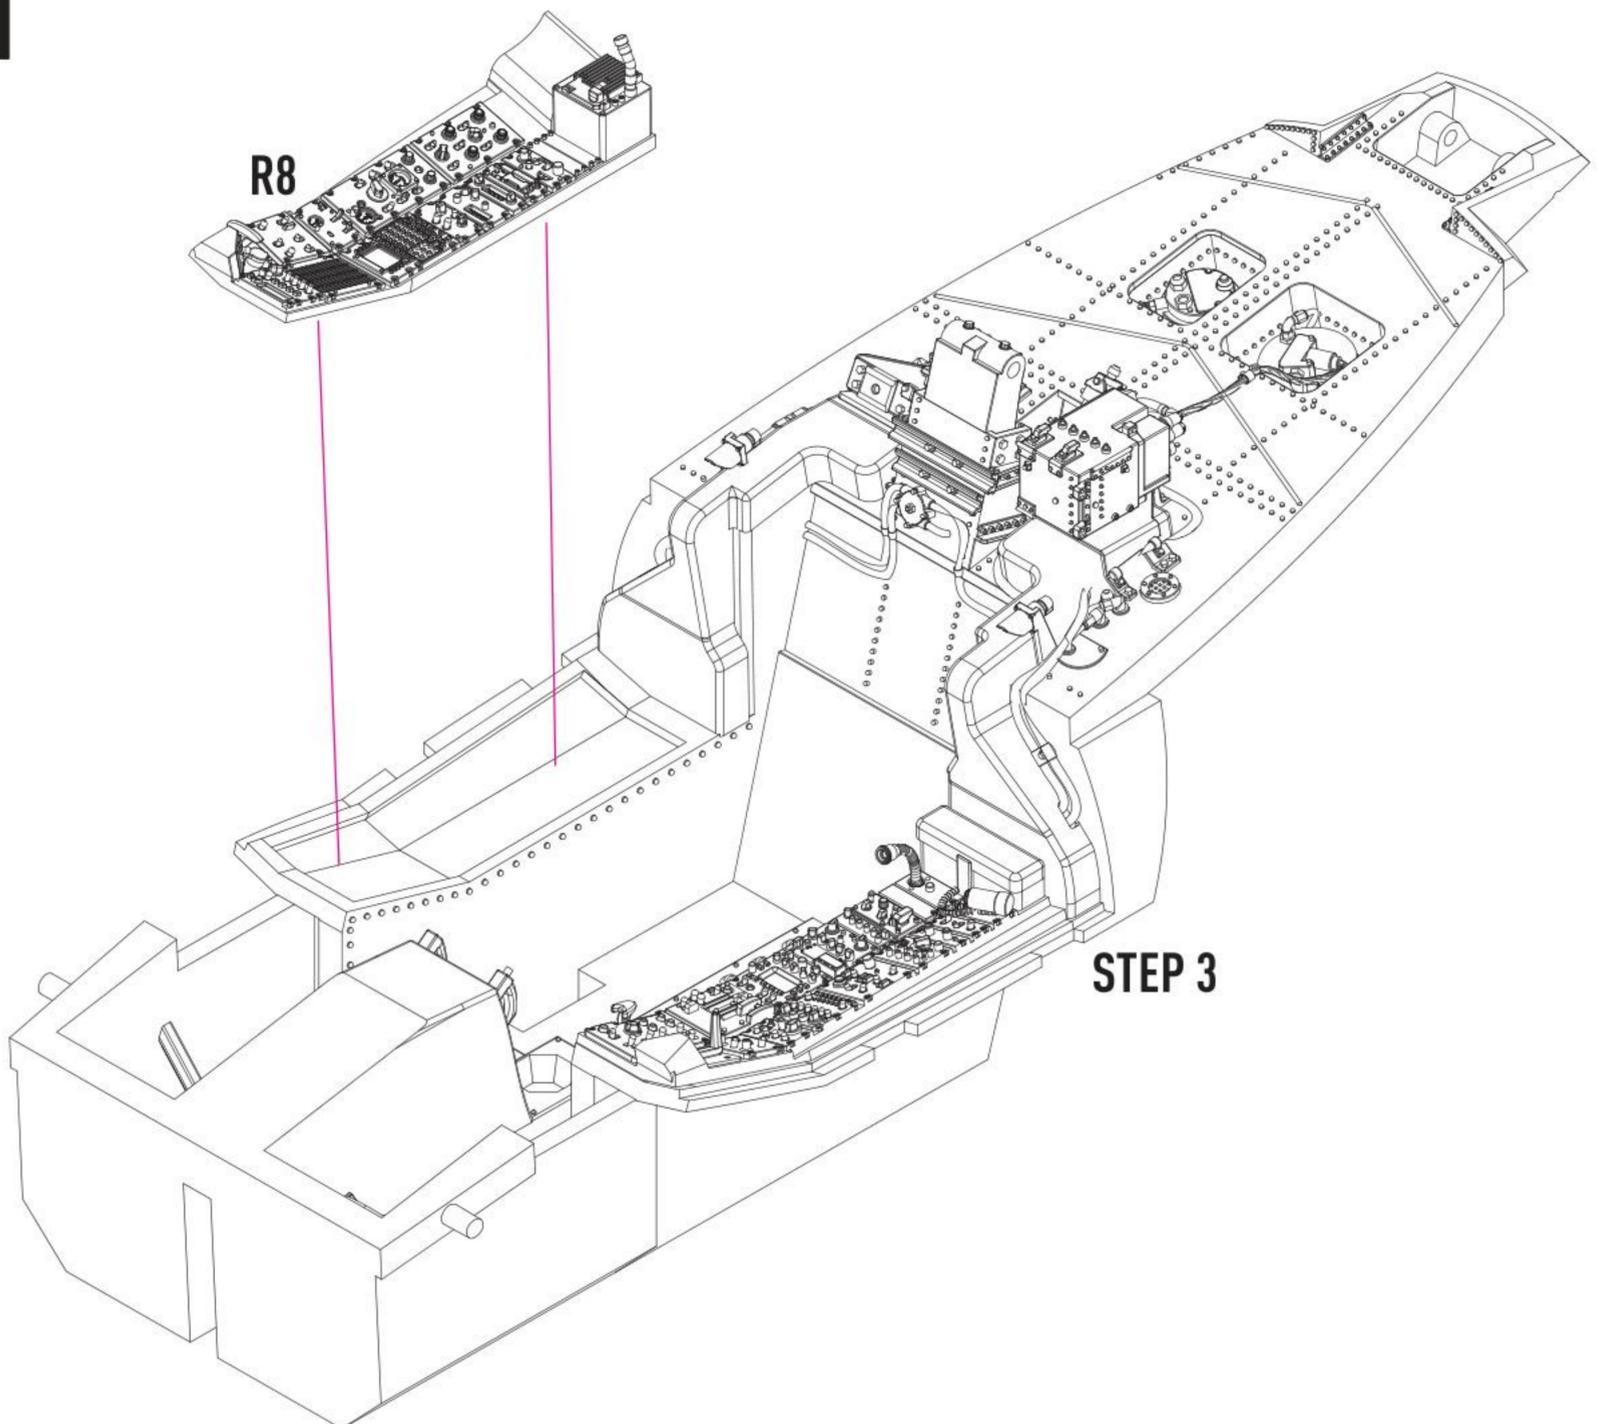


5

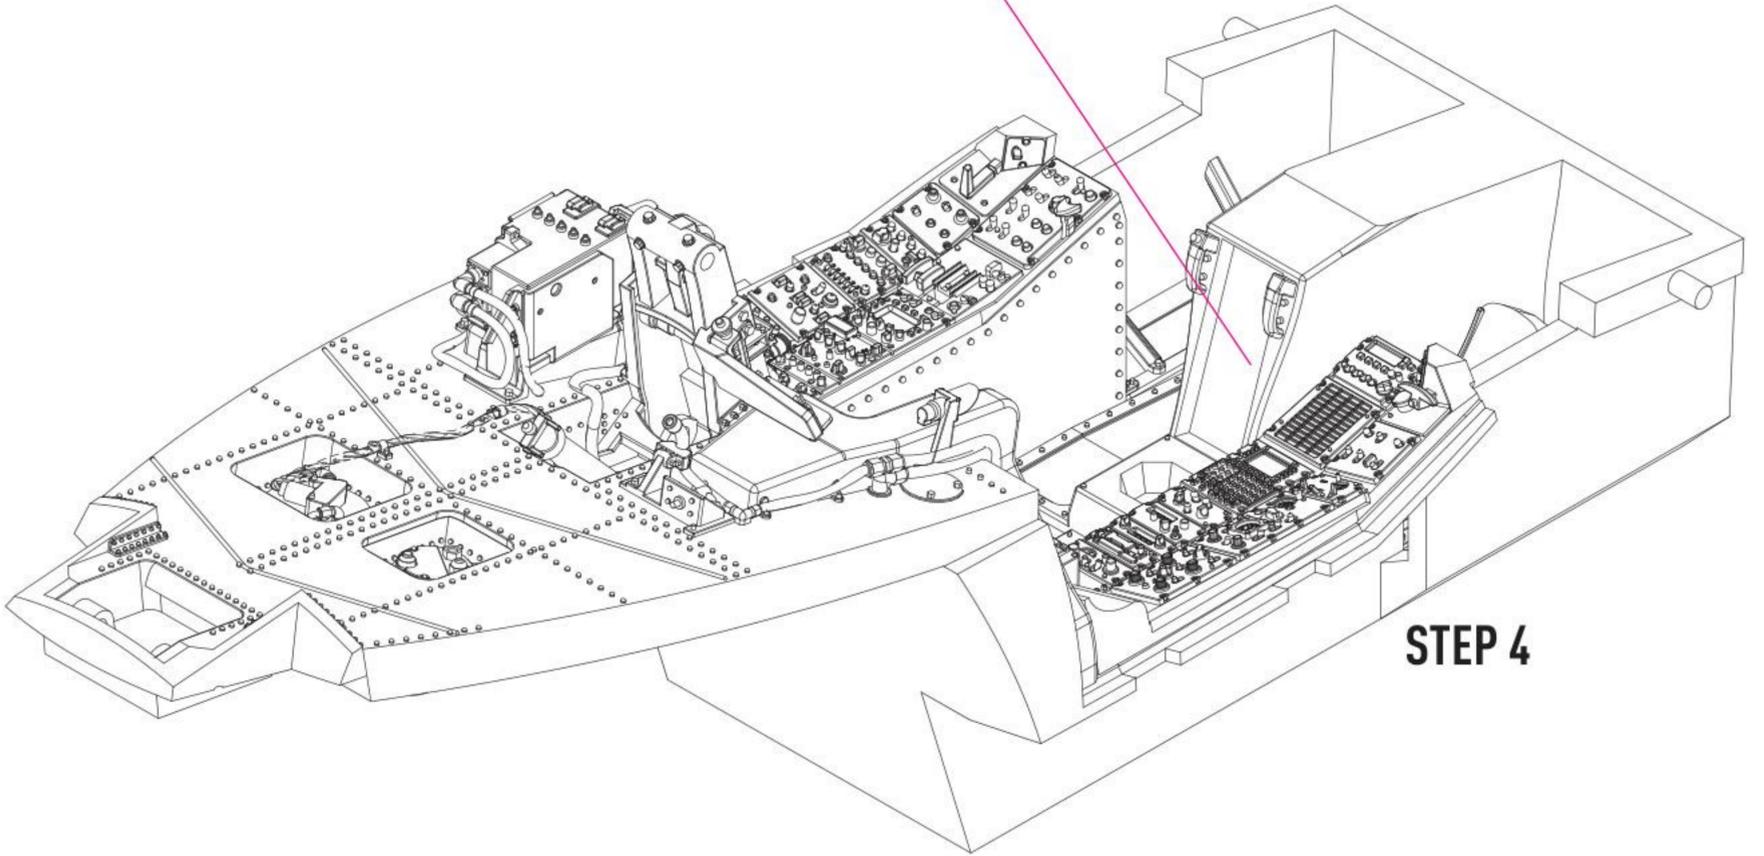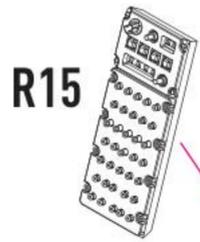


6

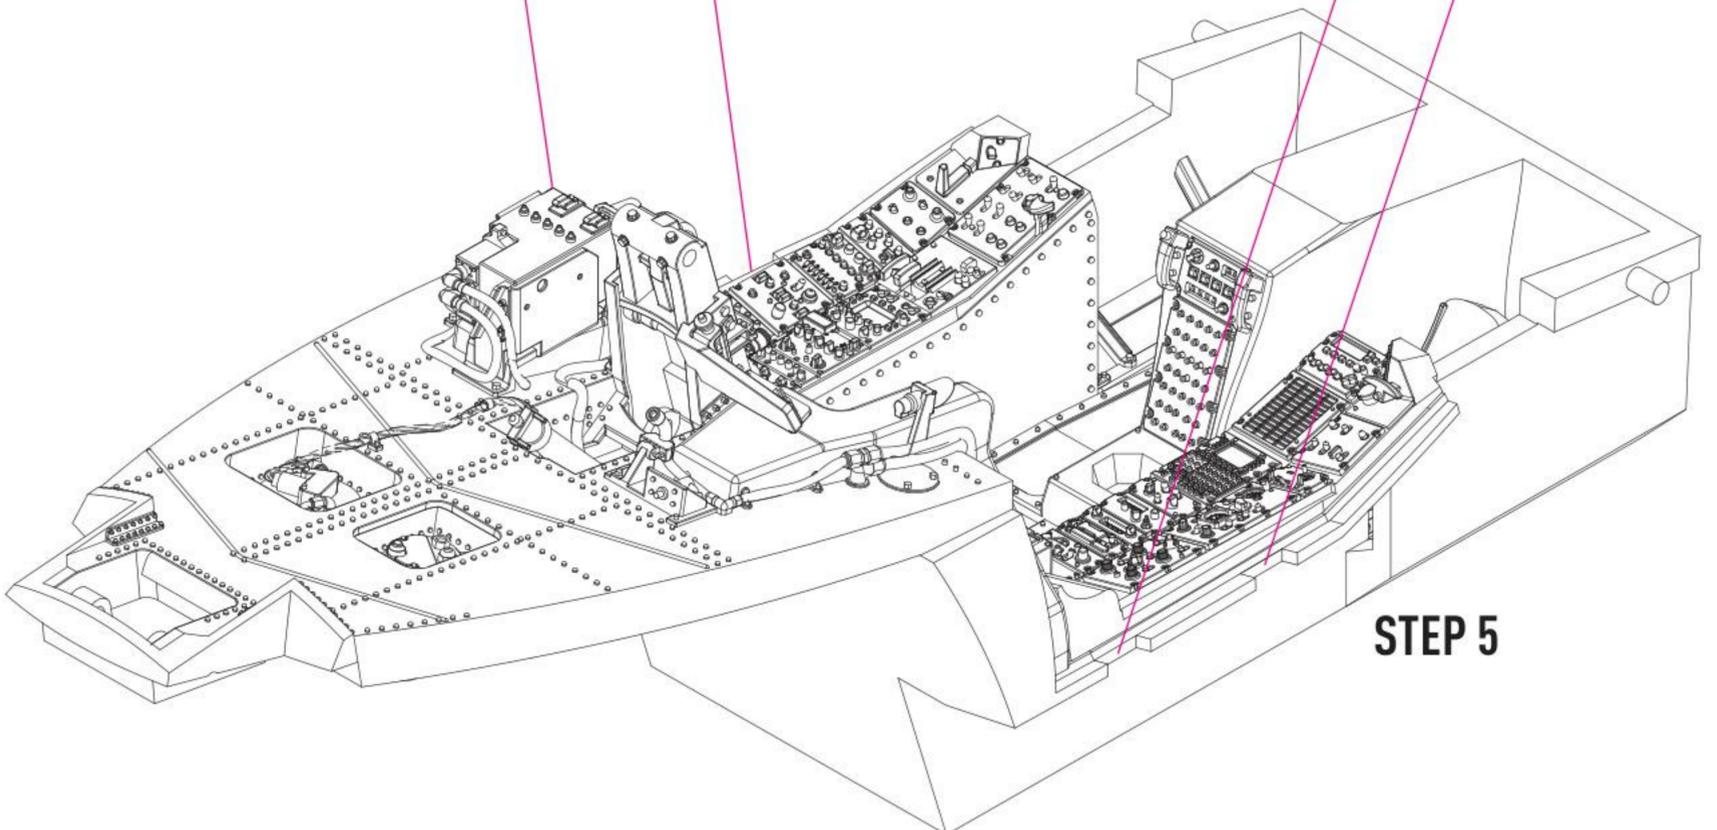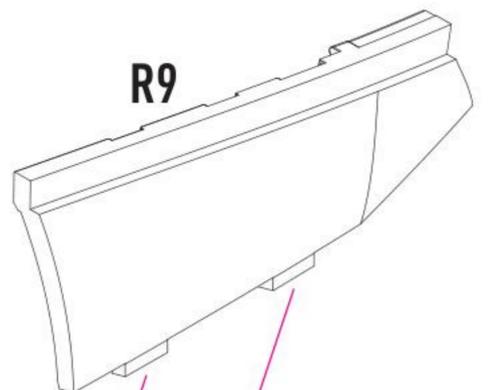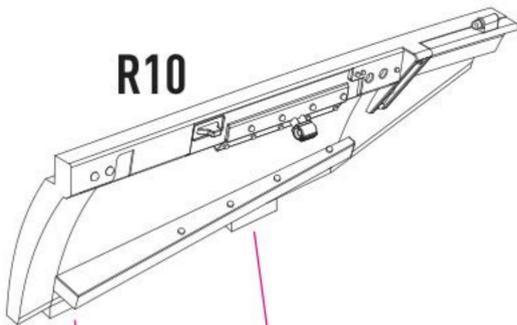

7

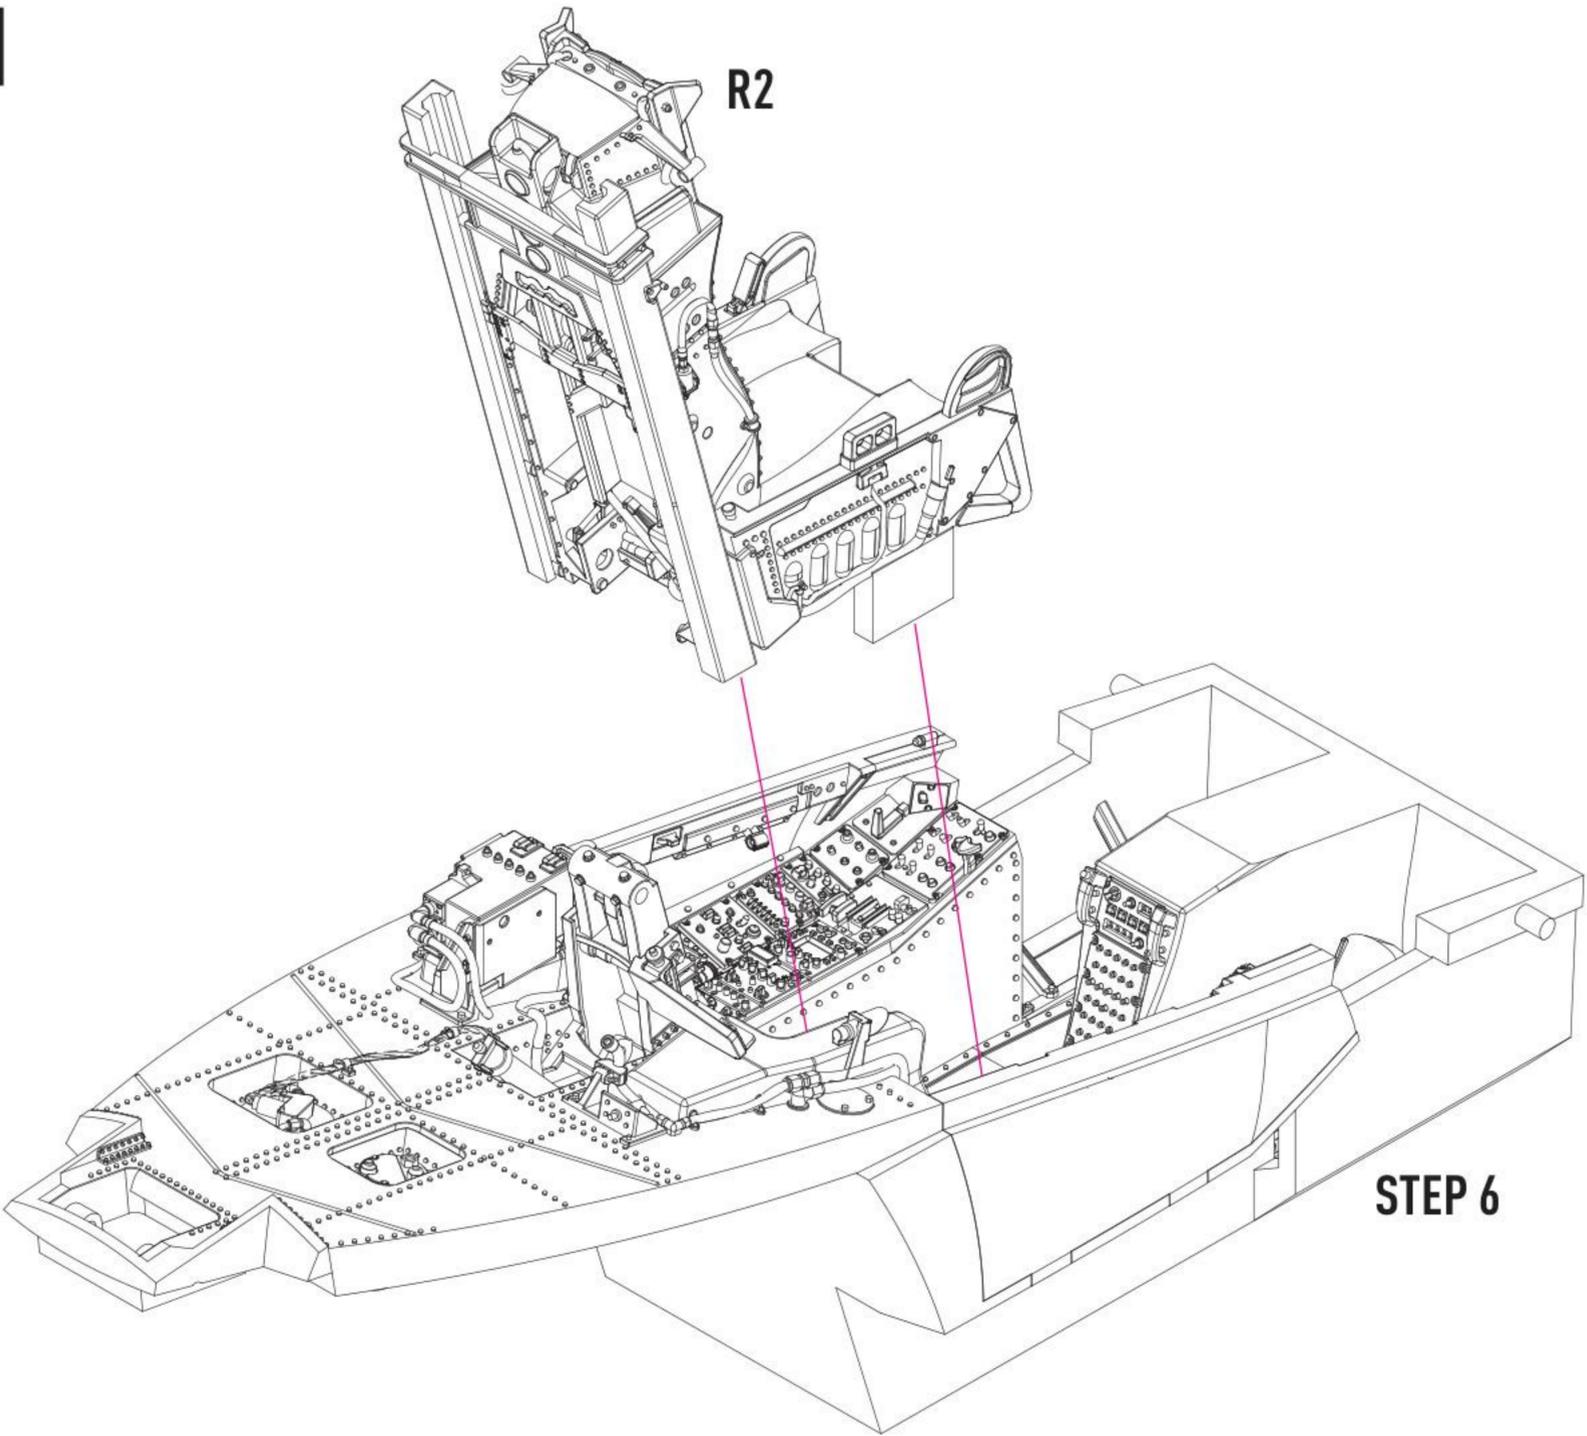


8

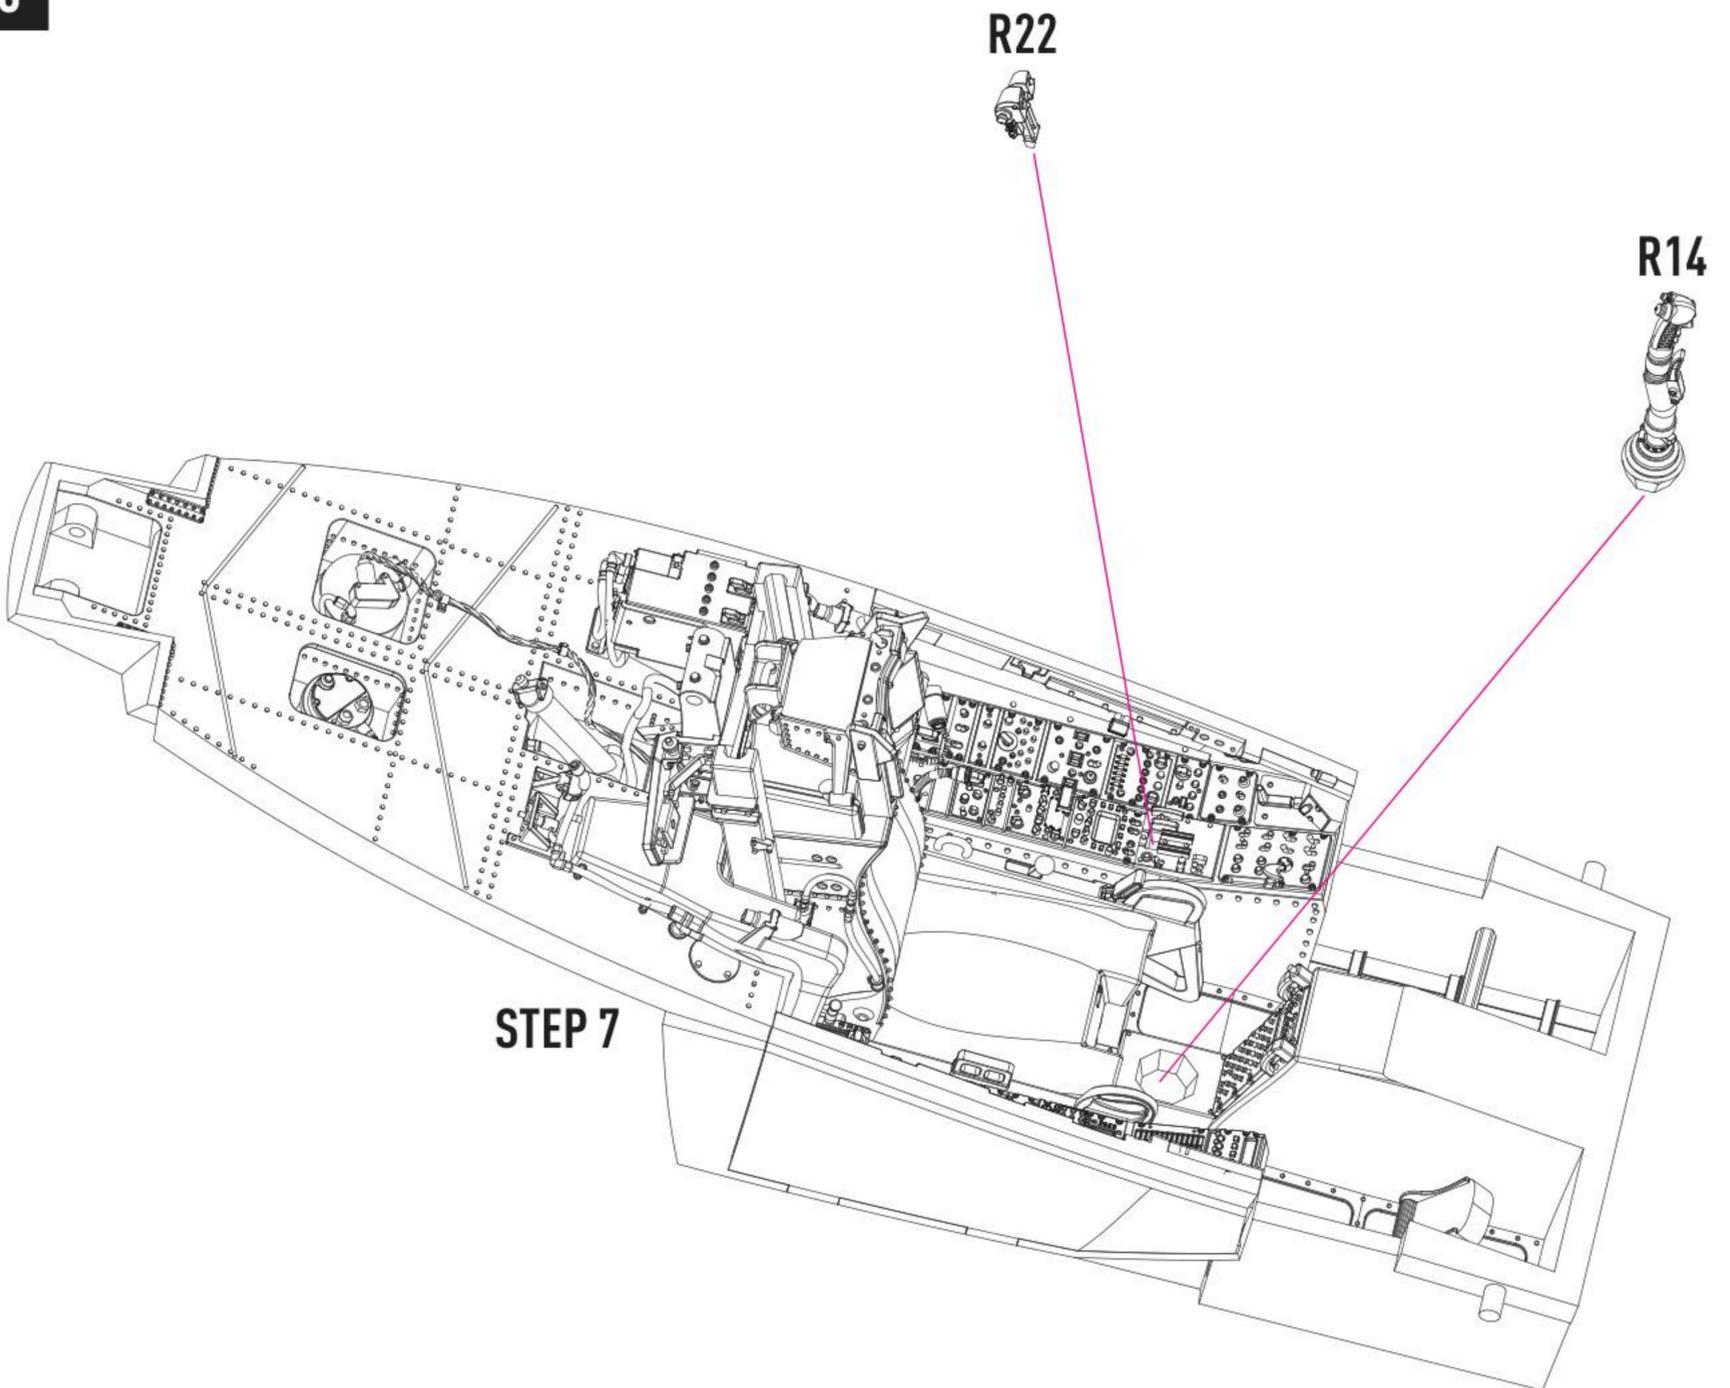

9


STEP 8

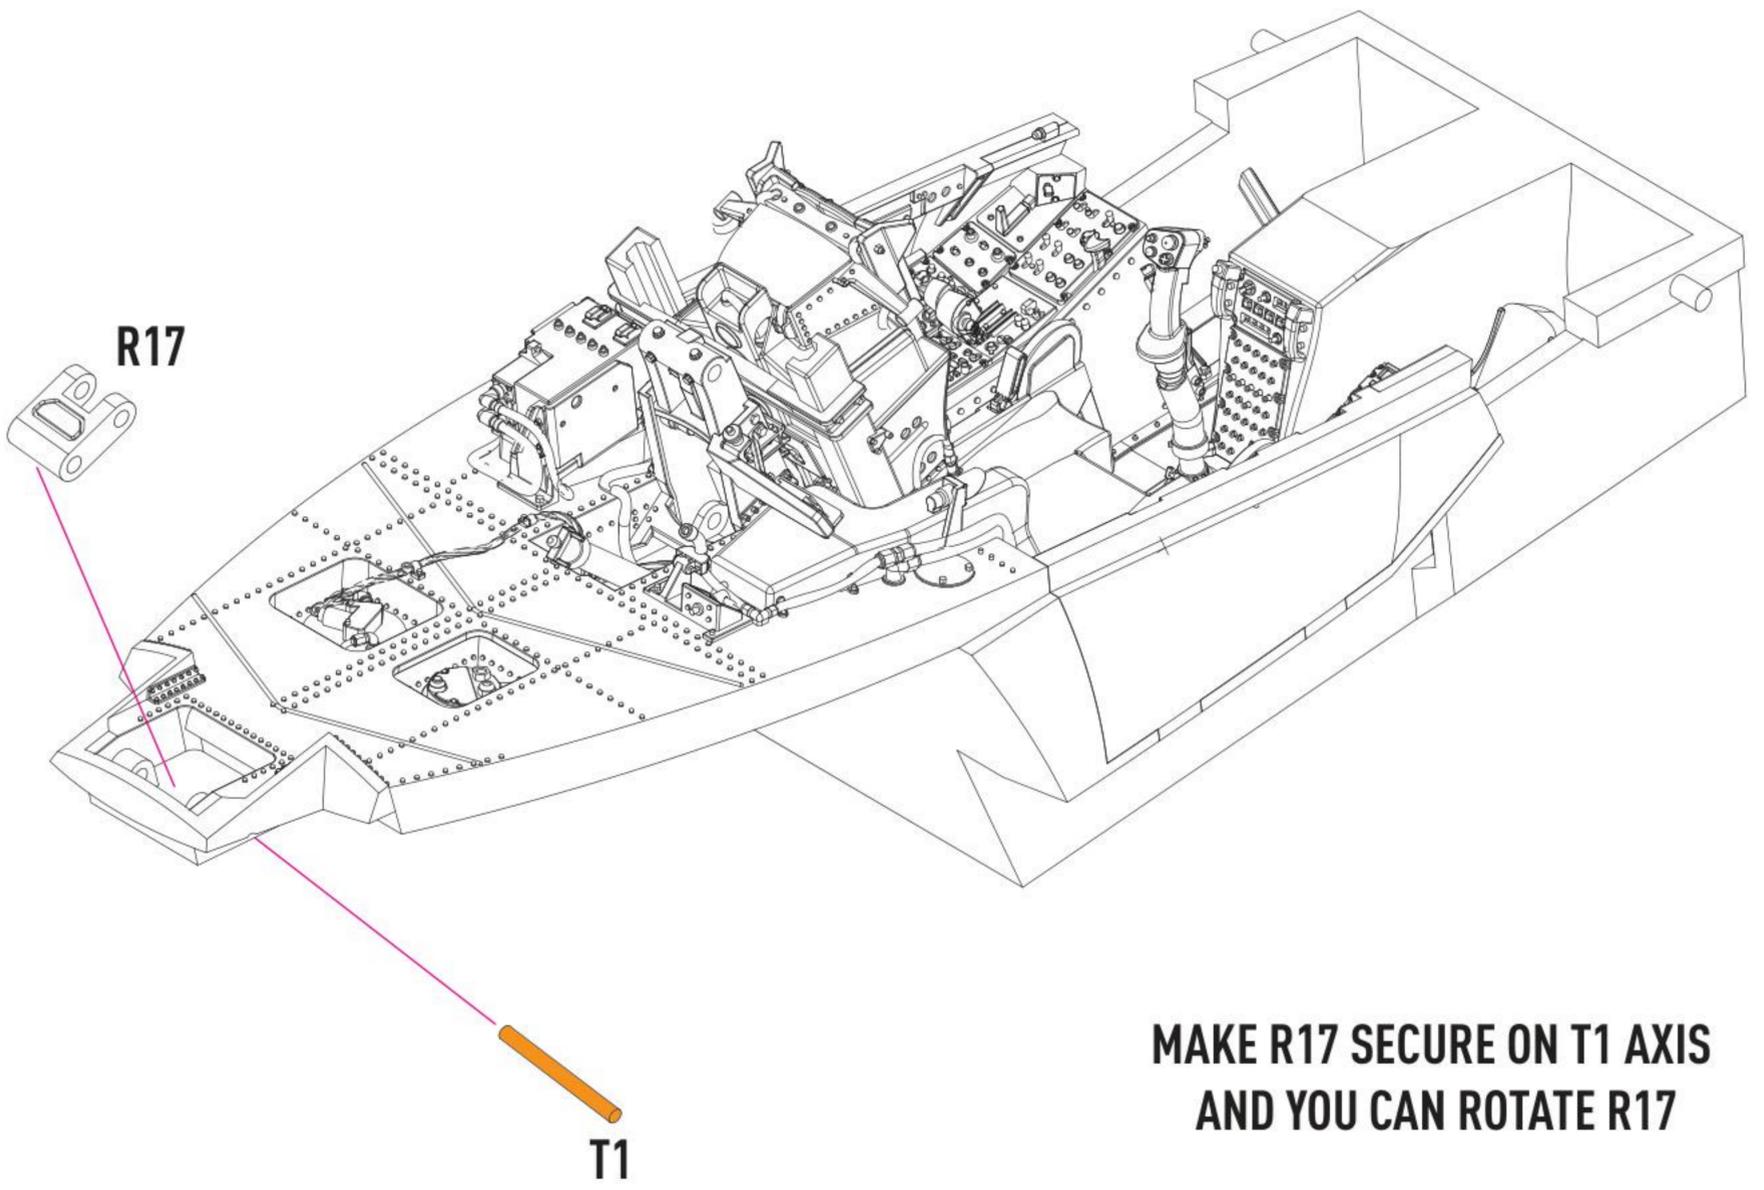

**MAKE R17 SECURE ON T1 AXIS
AND YOU CAN ROTATE R17**


GLUE T1 TO STEP 8 ONLY

10

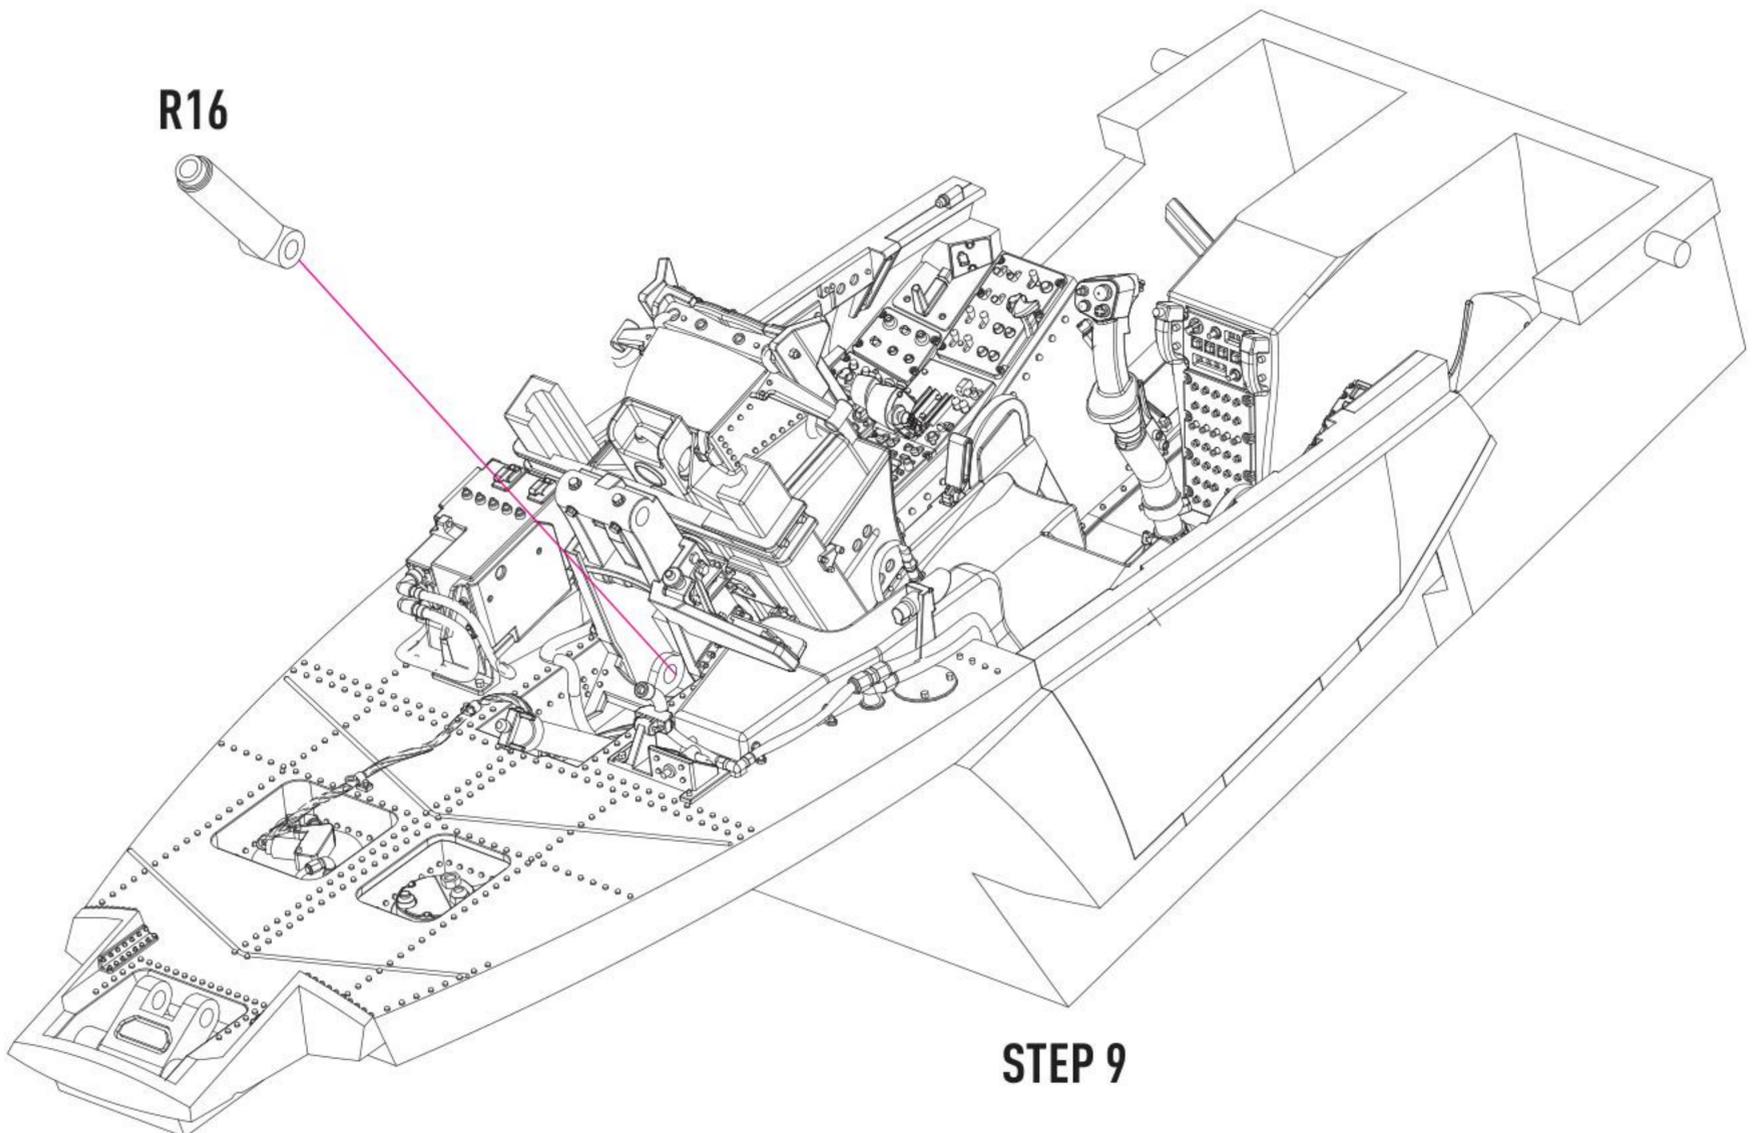


STEP 9


11

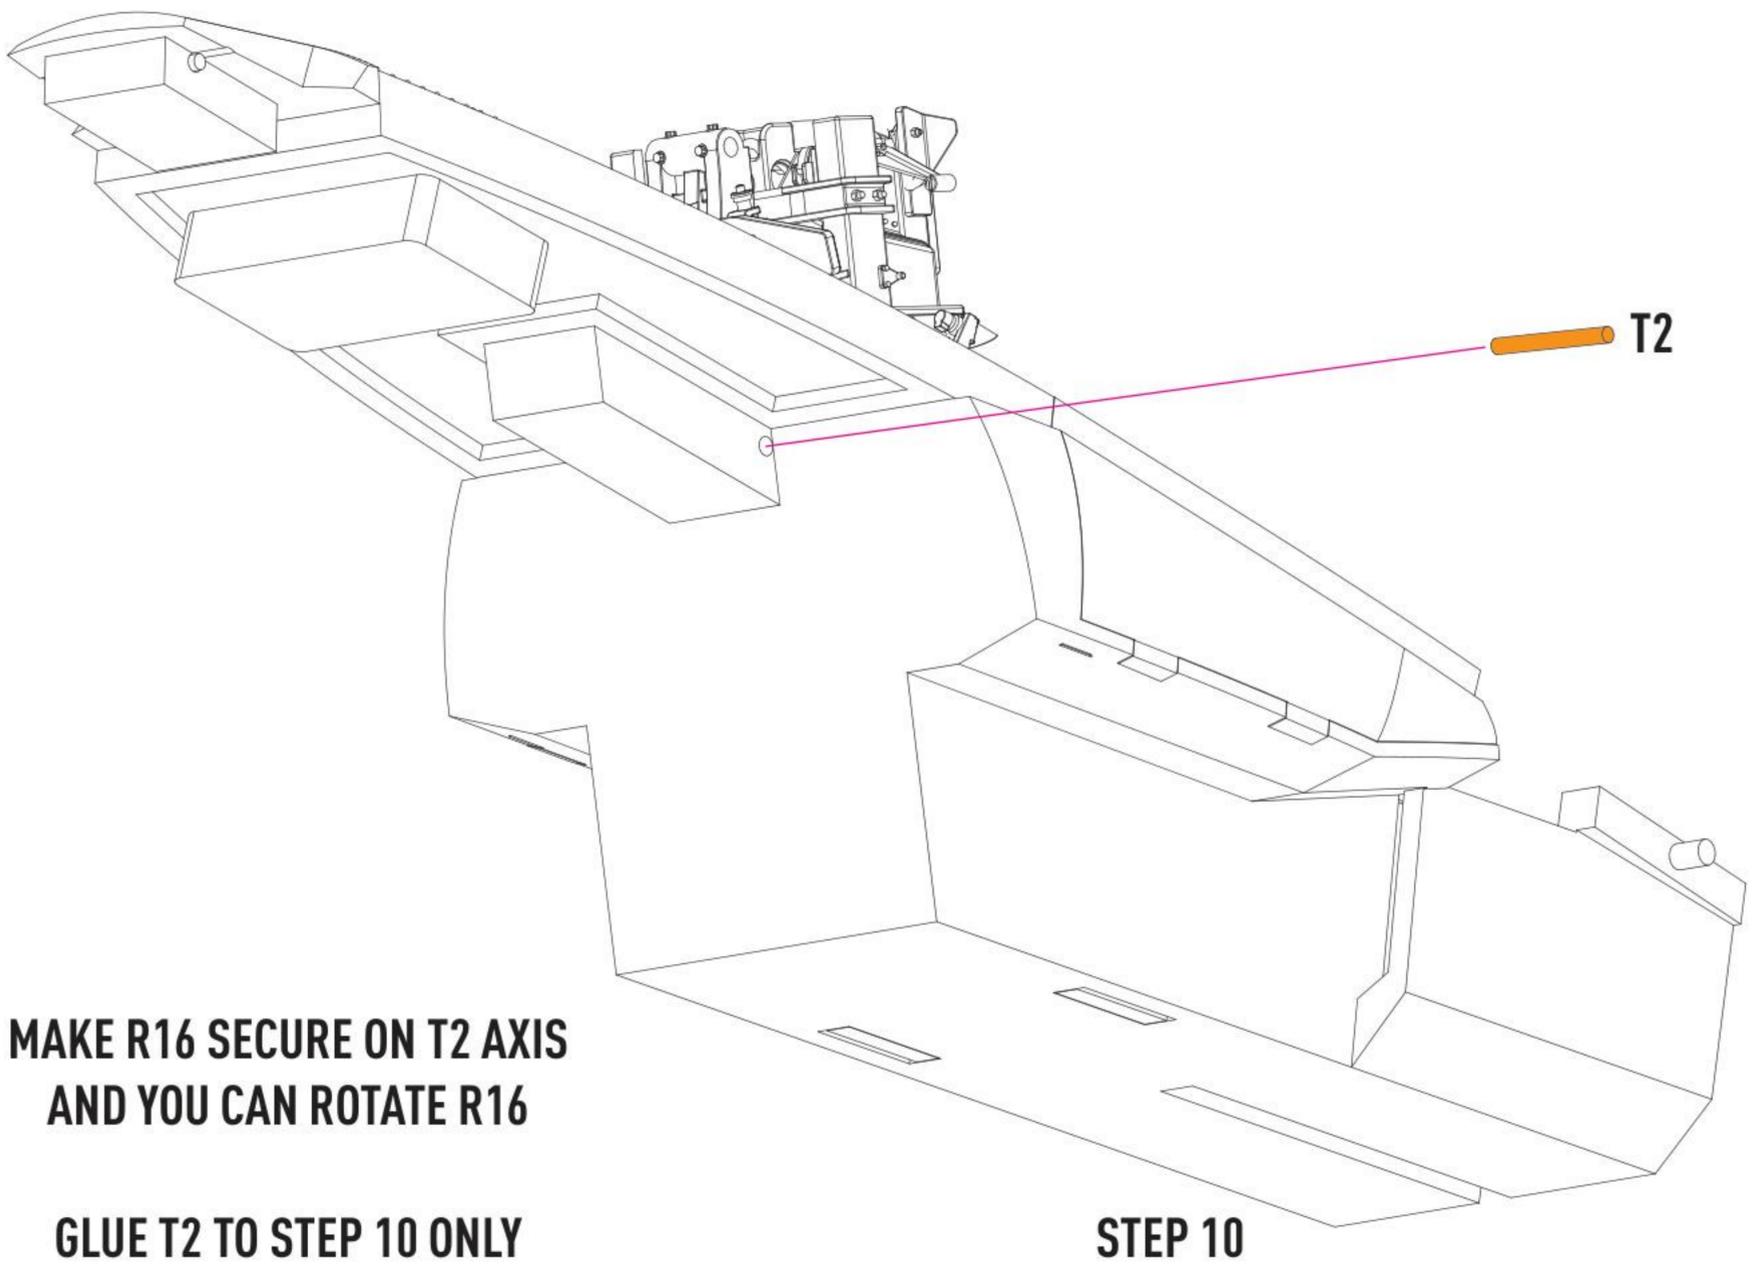


12

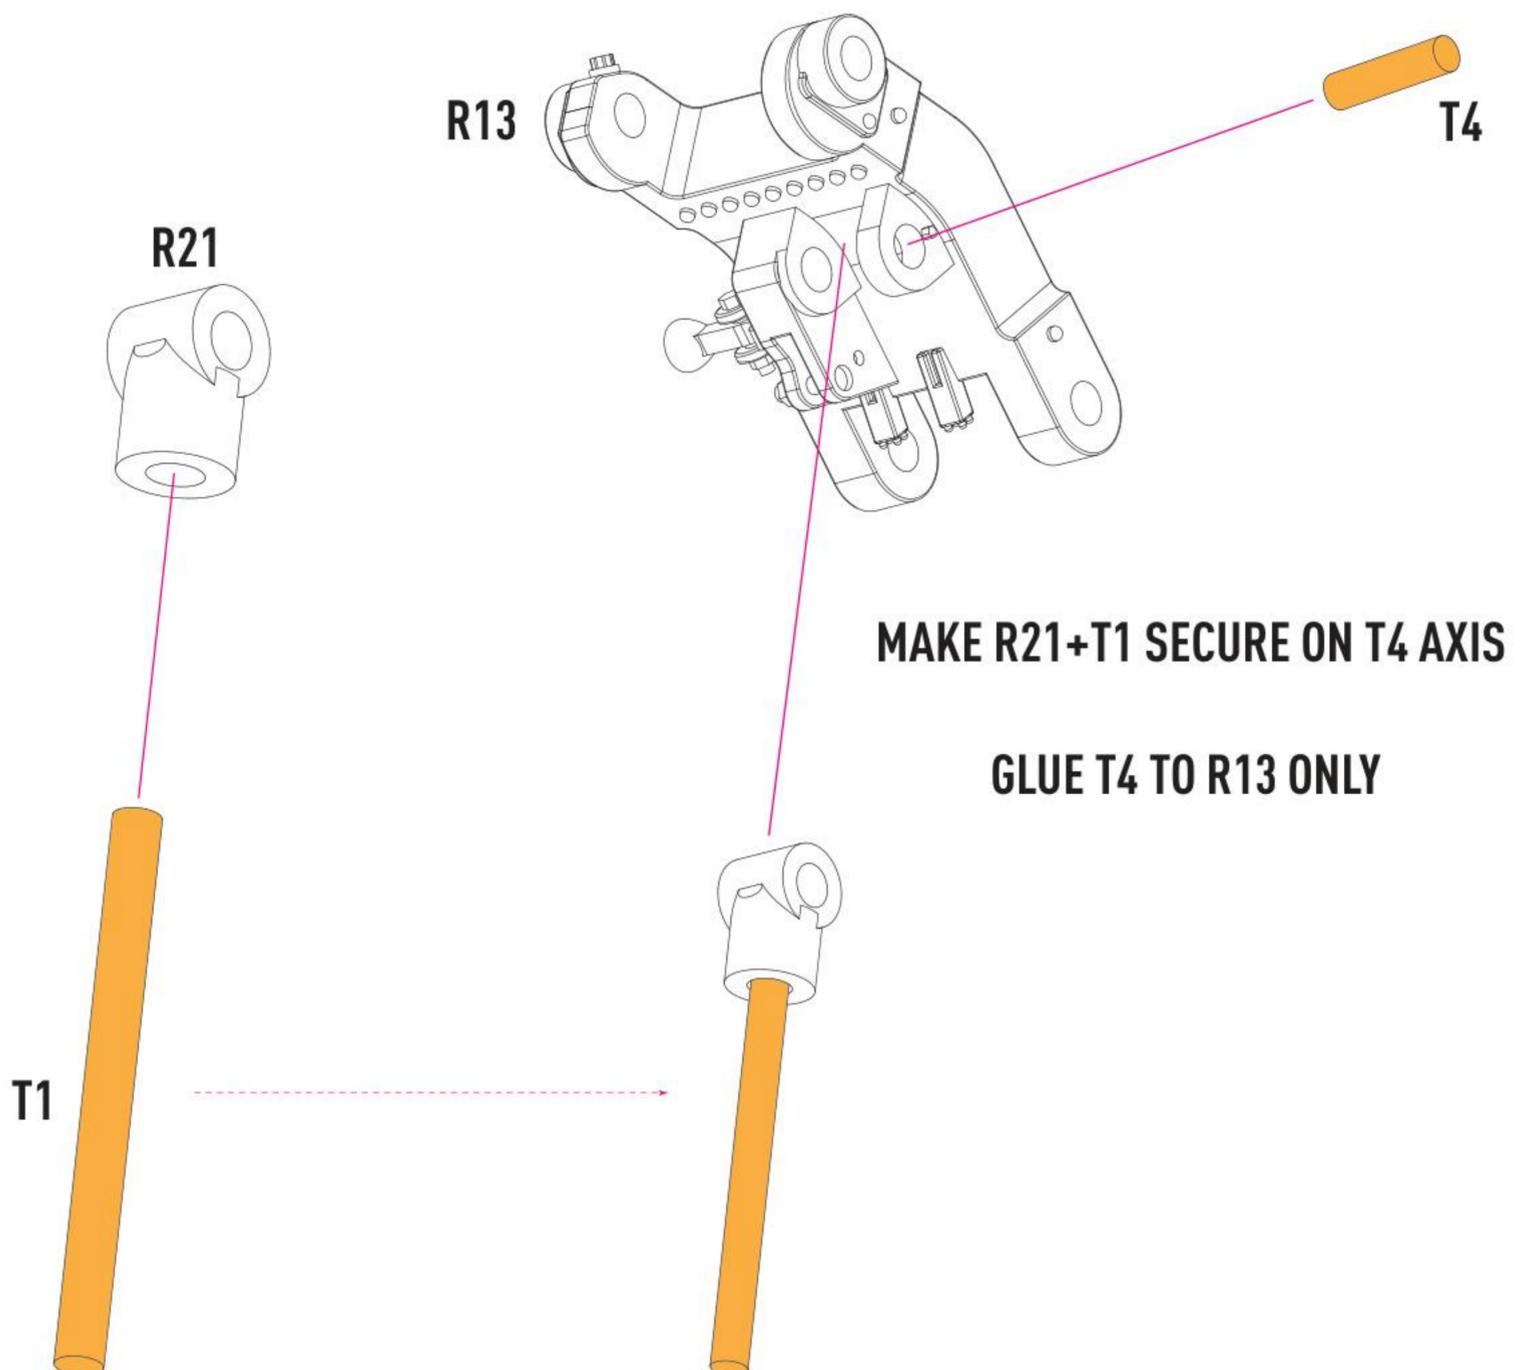


13

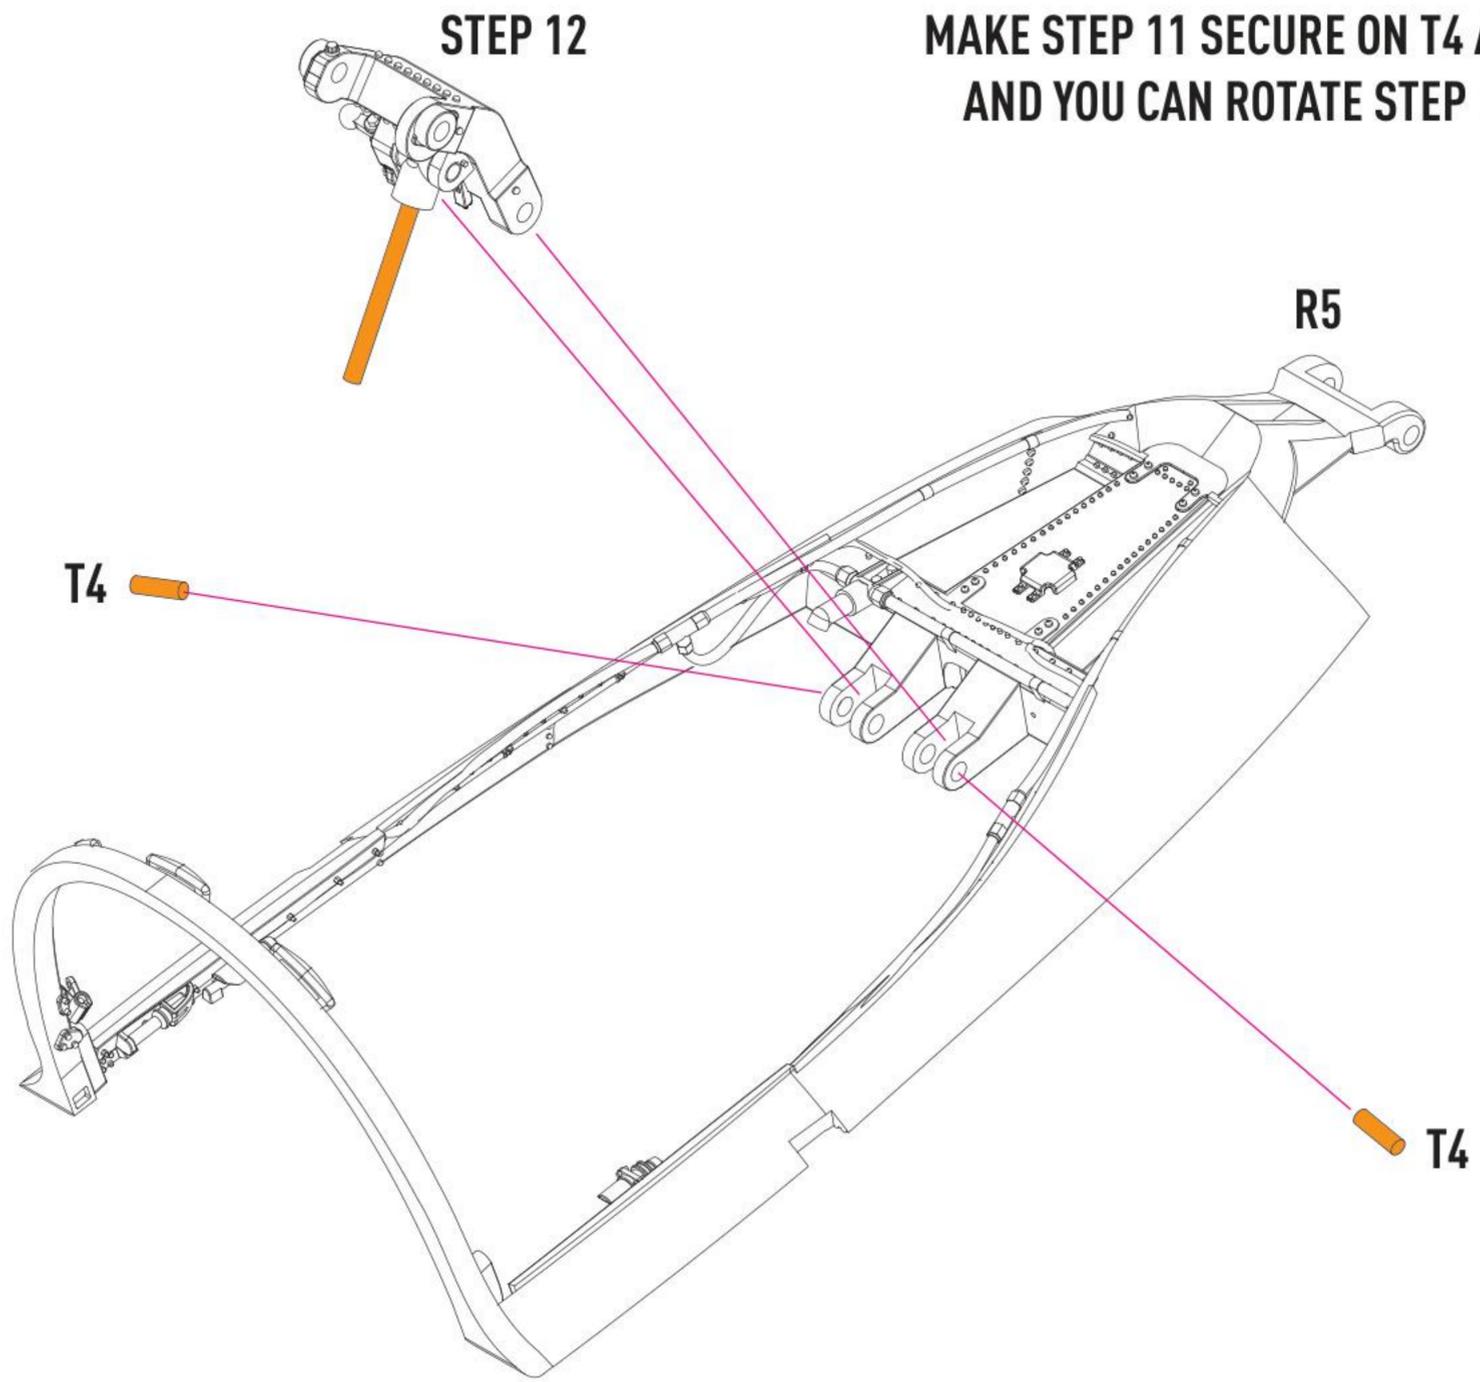


14

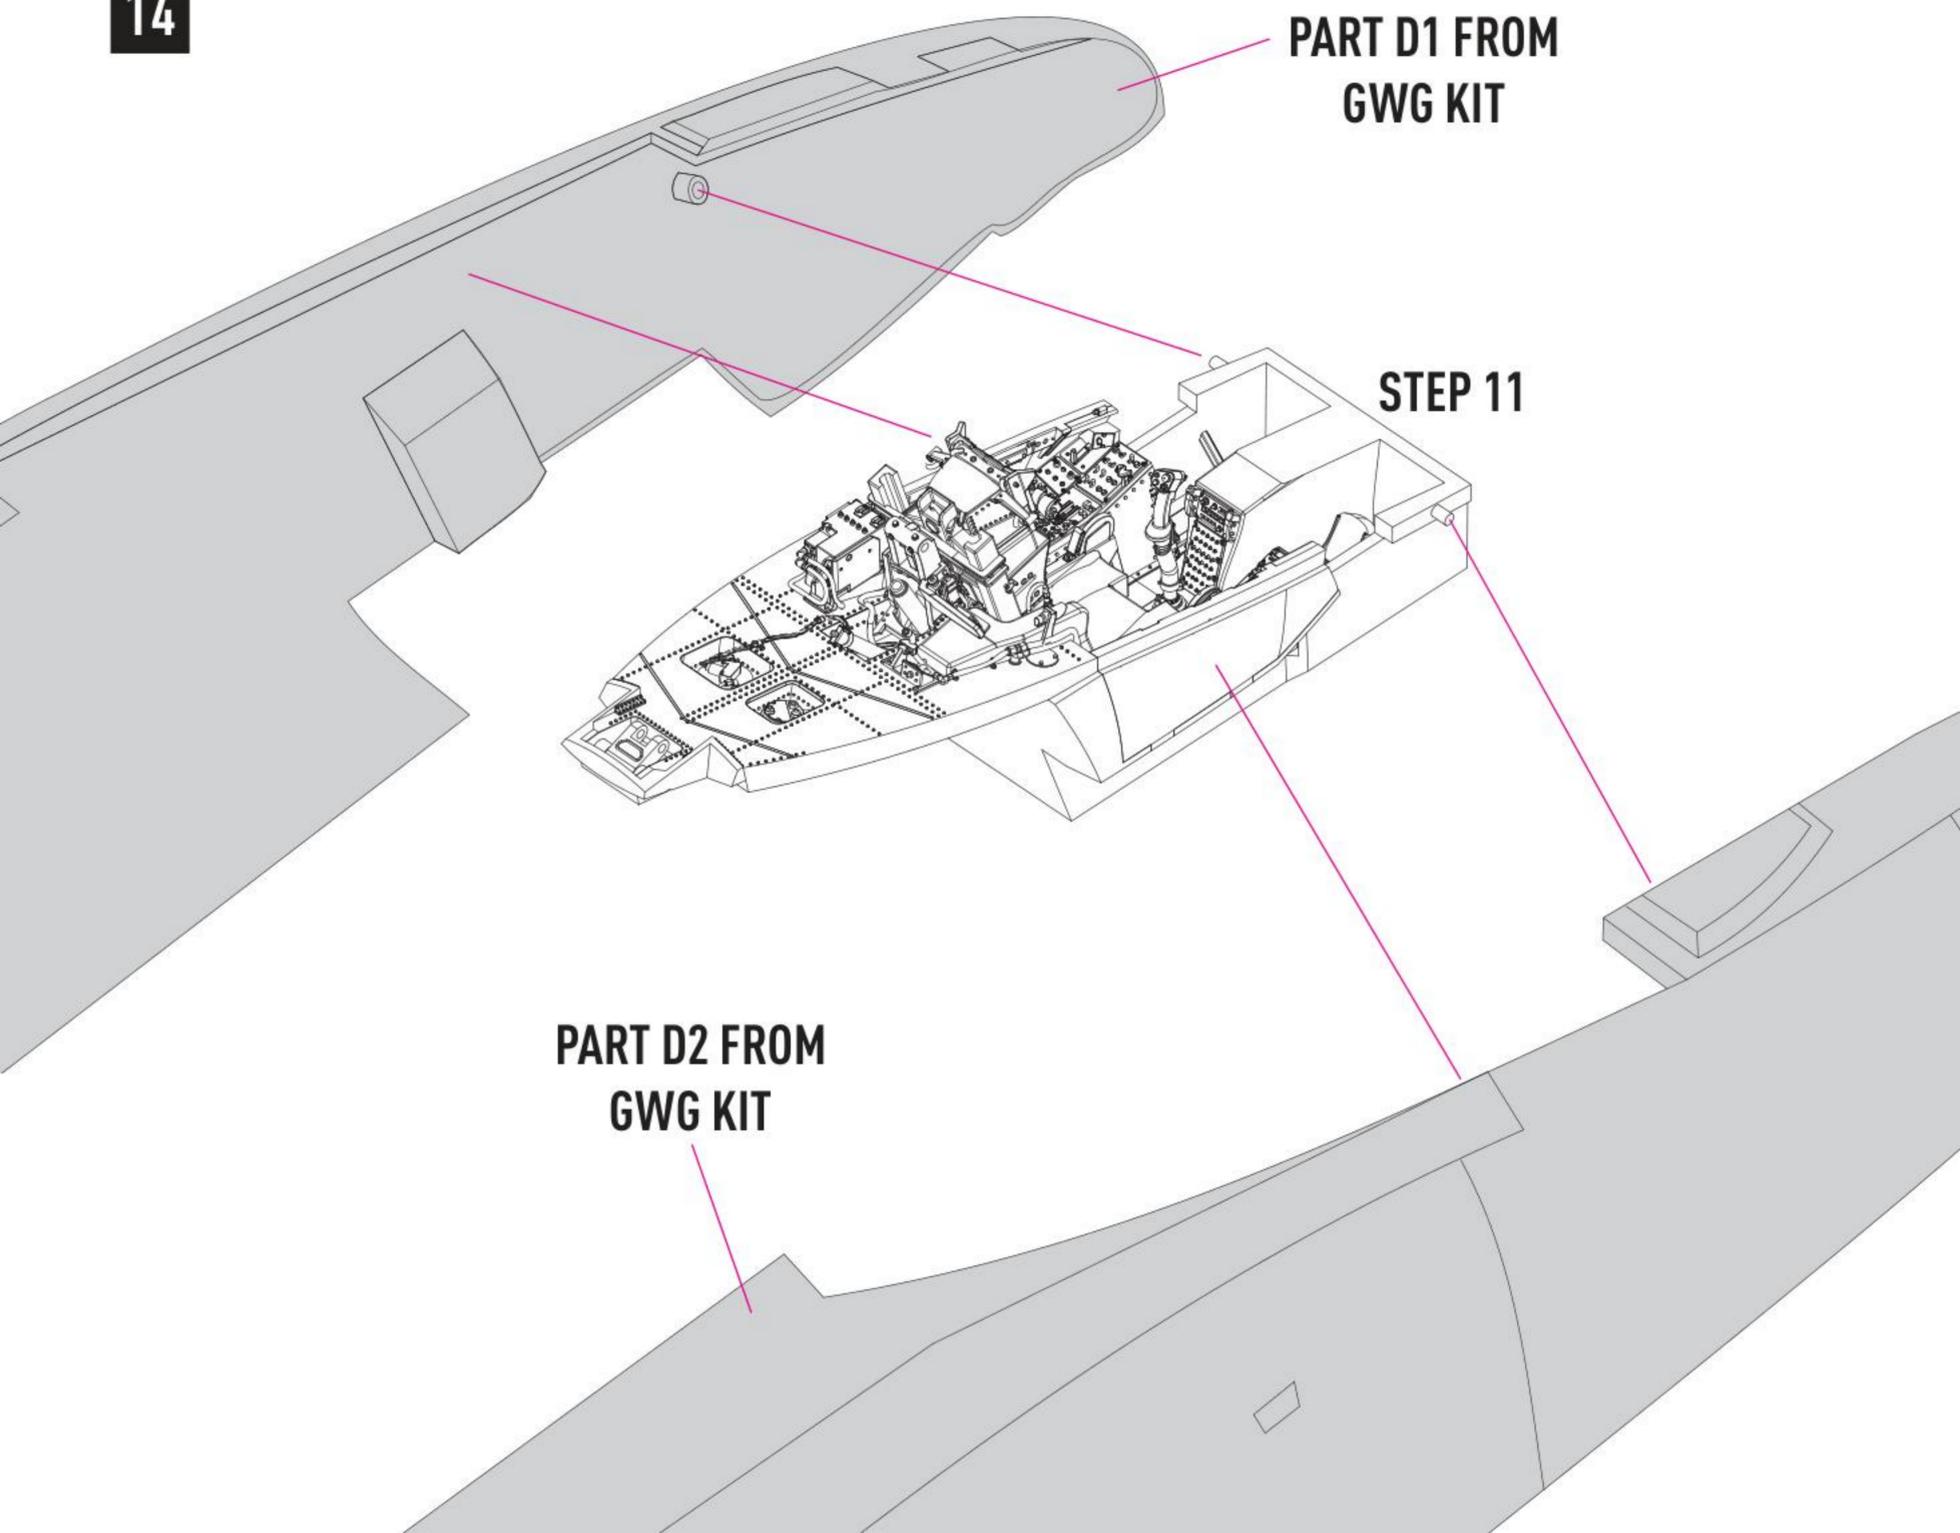

15

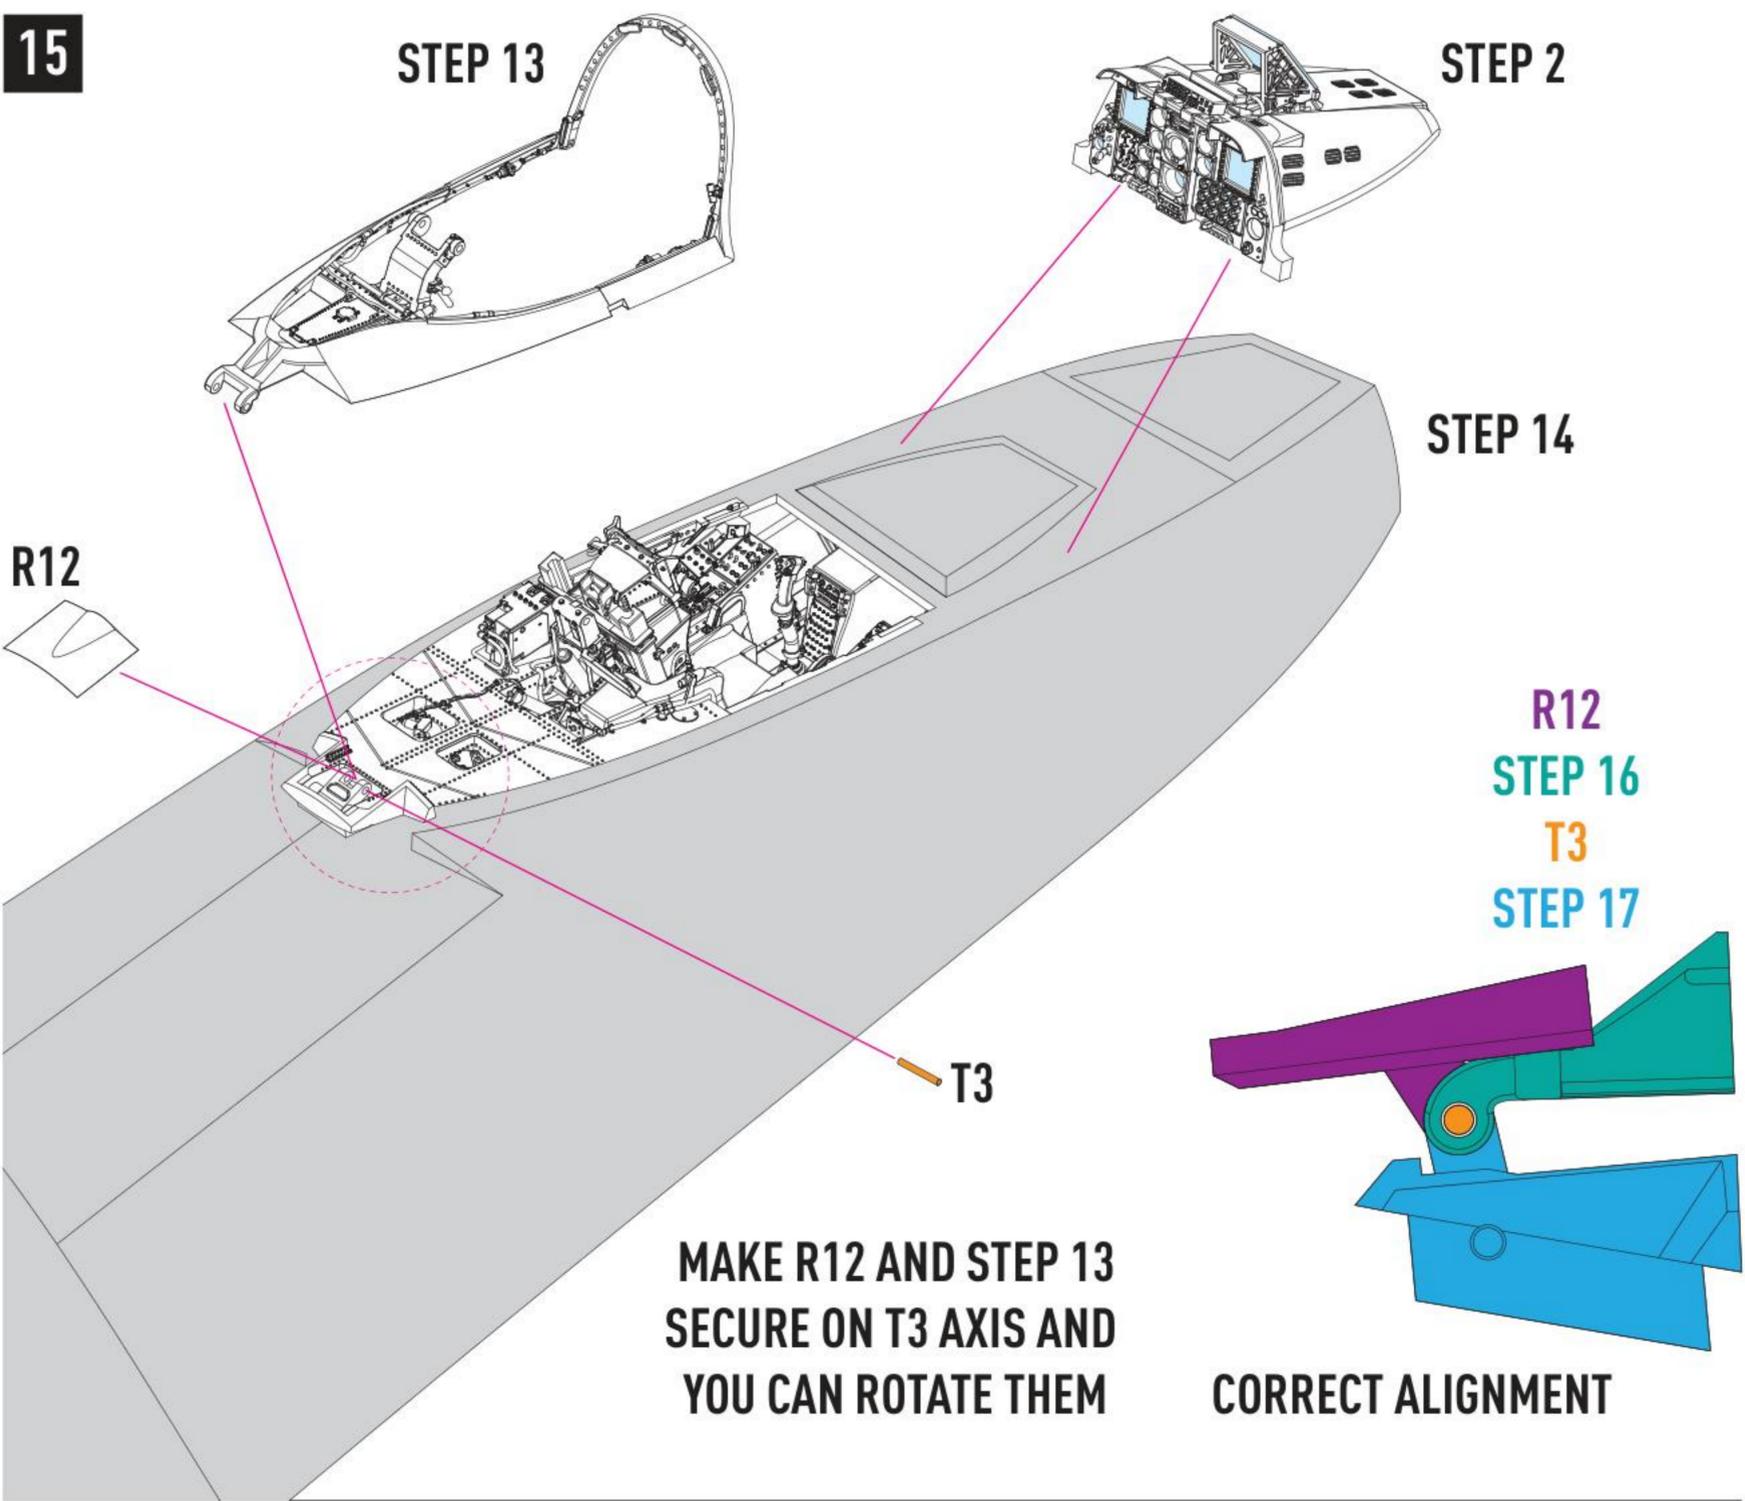


16

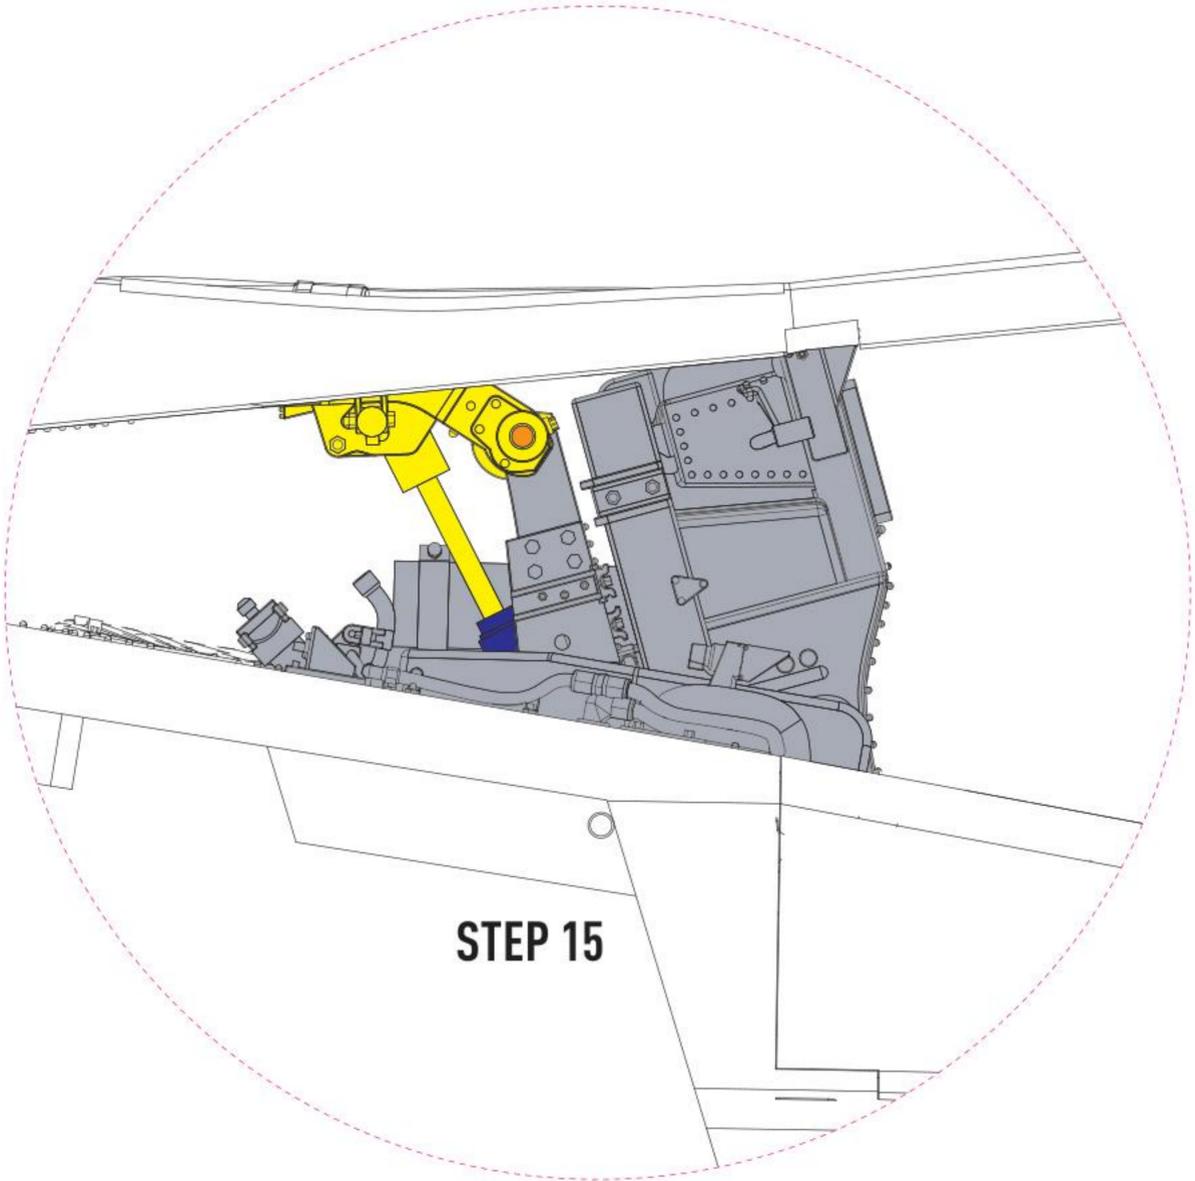


SECURE IN ONE. MAKE PART ALINE WITH
AND THAN SECURE EVERY ONE WITH T2






17

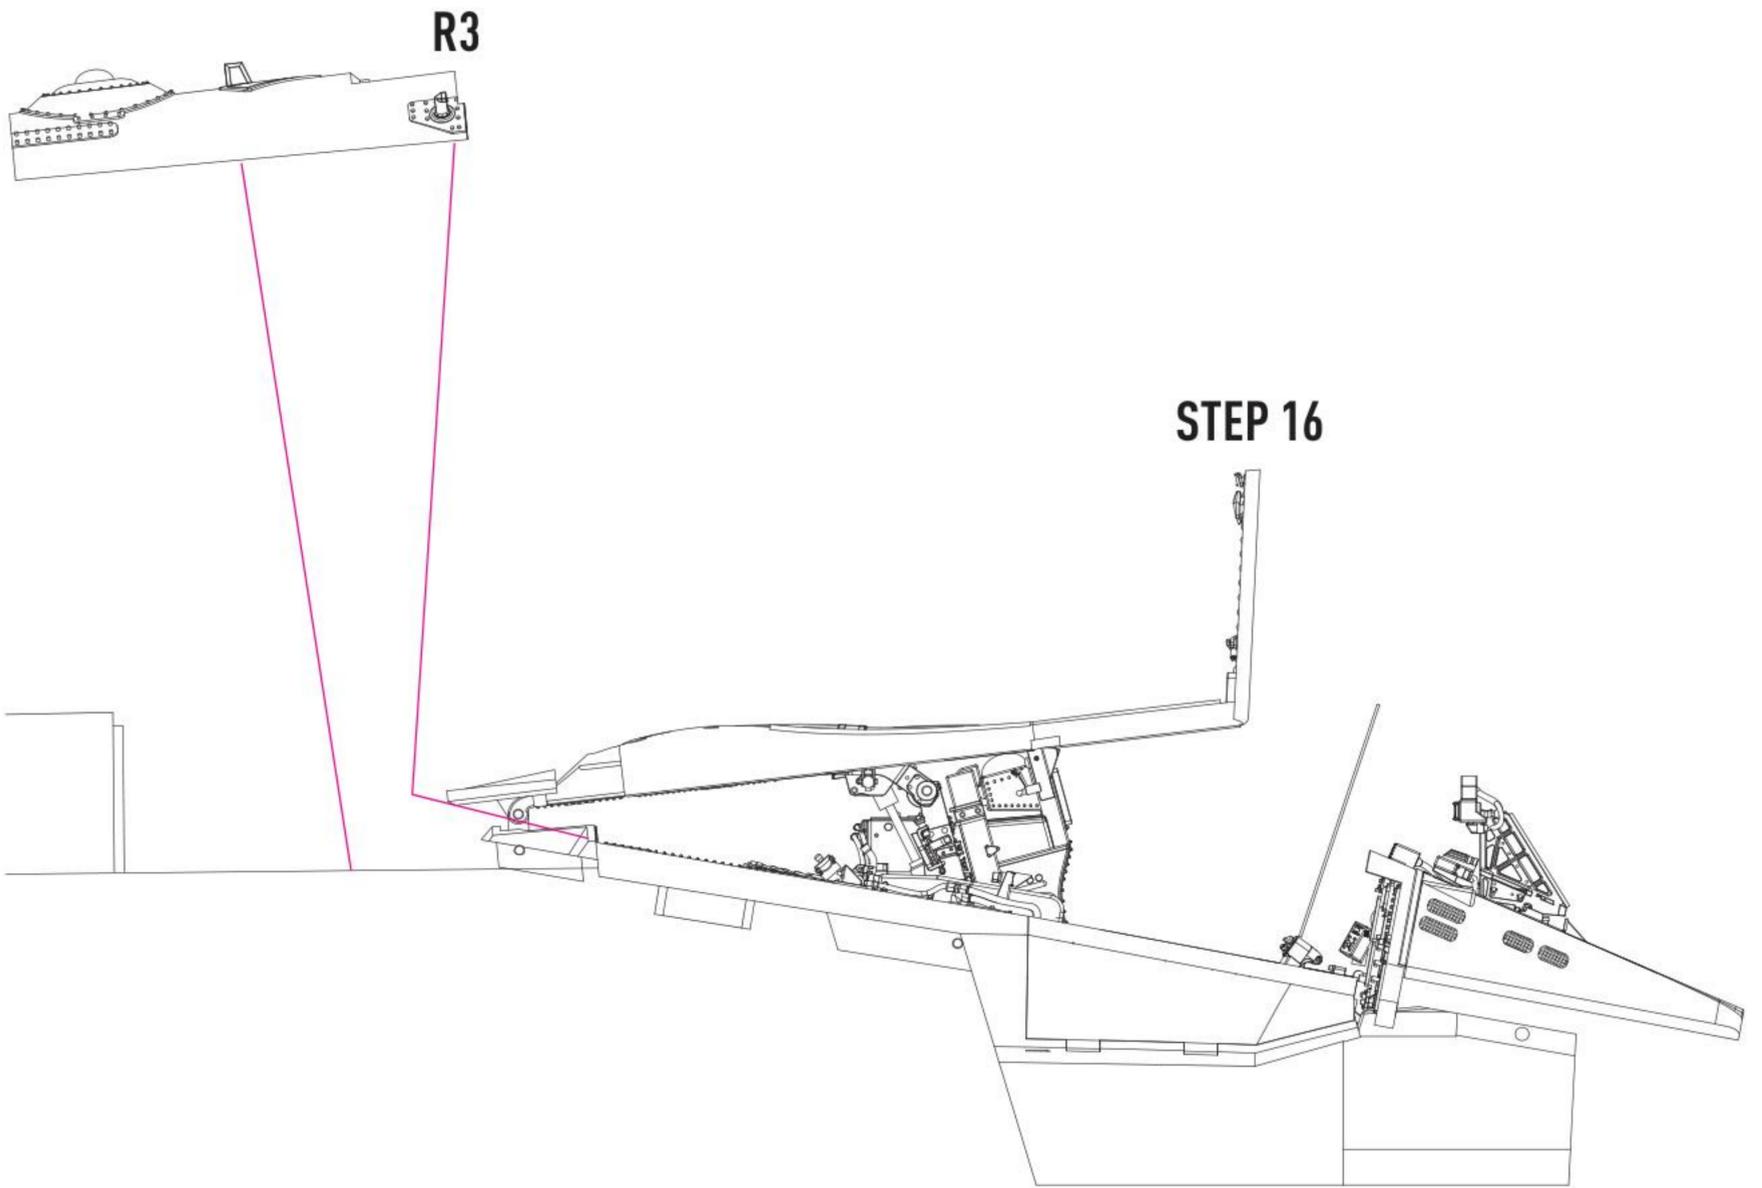

18

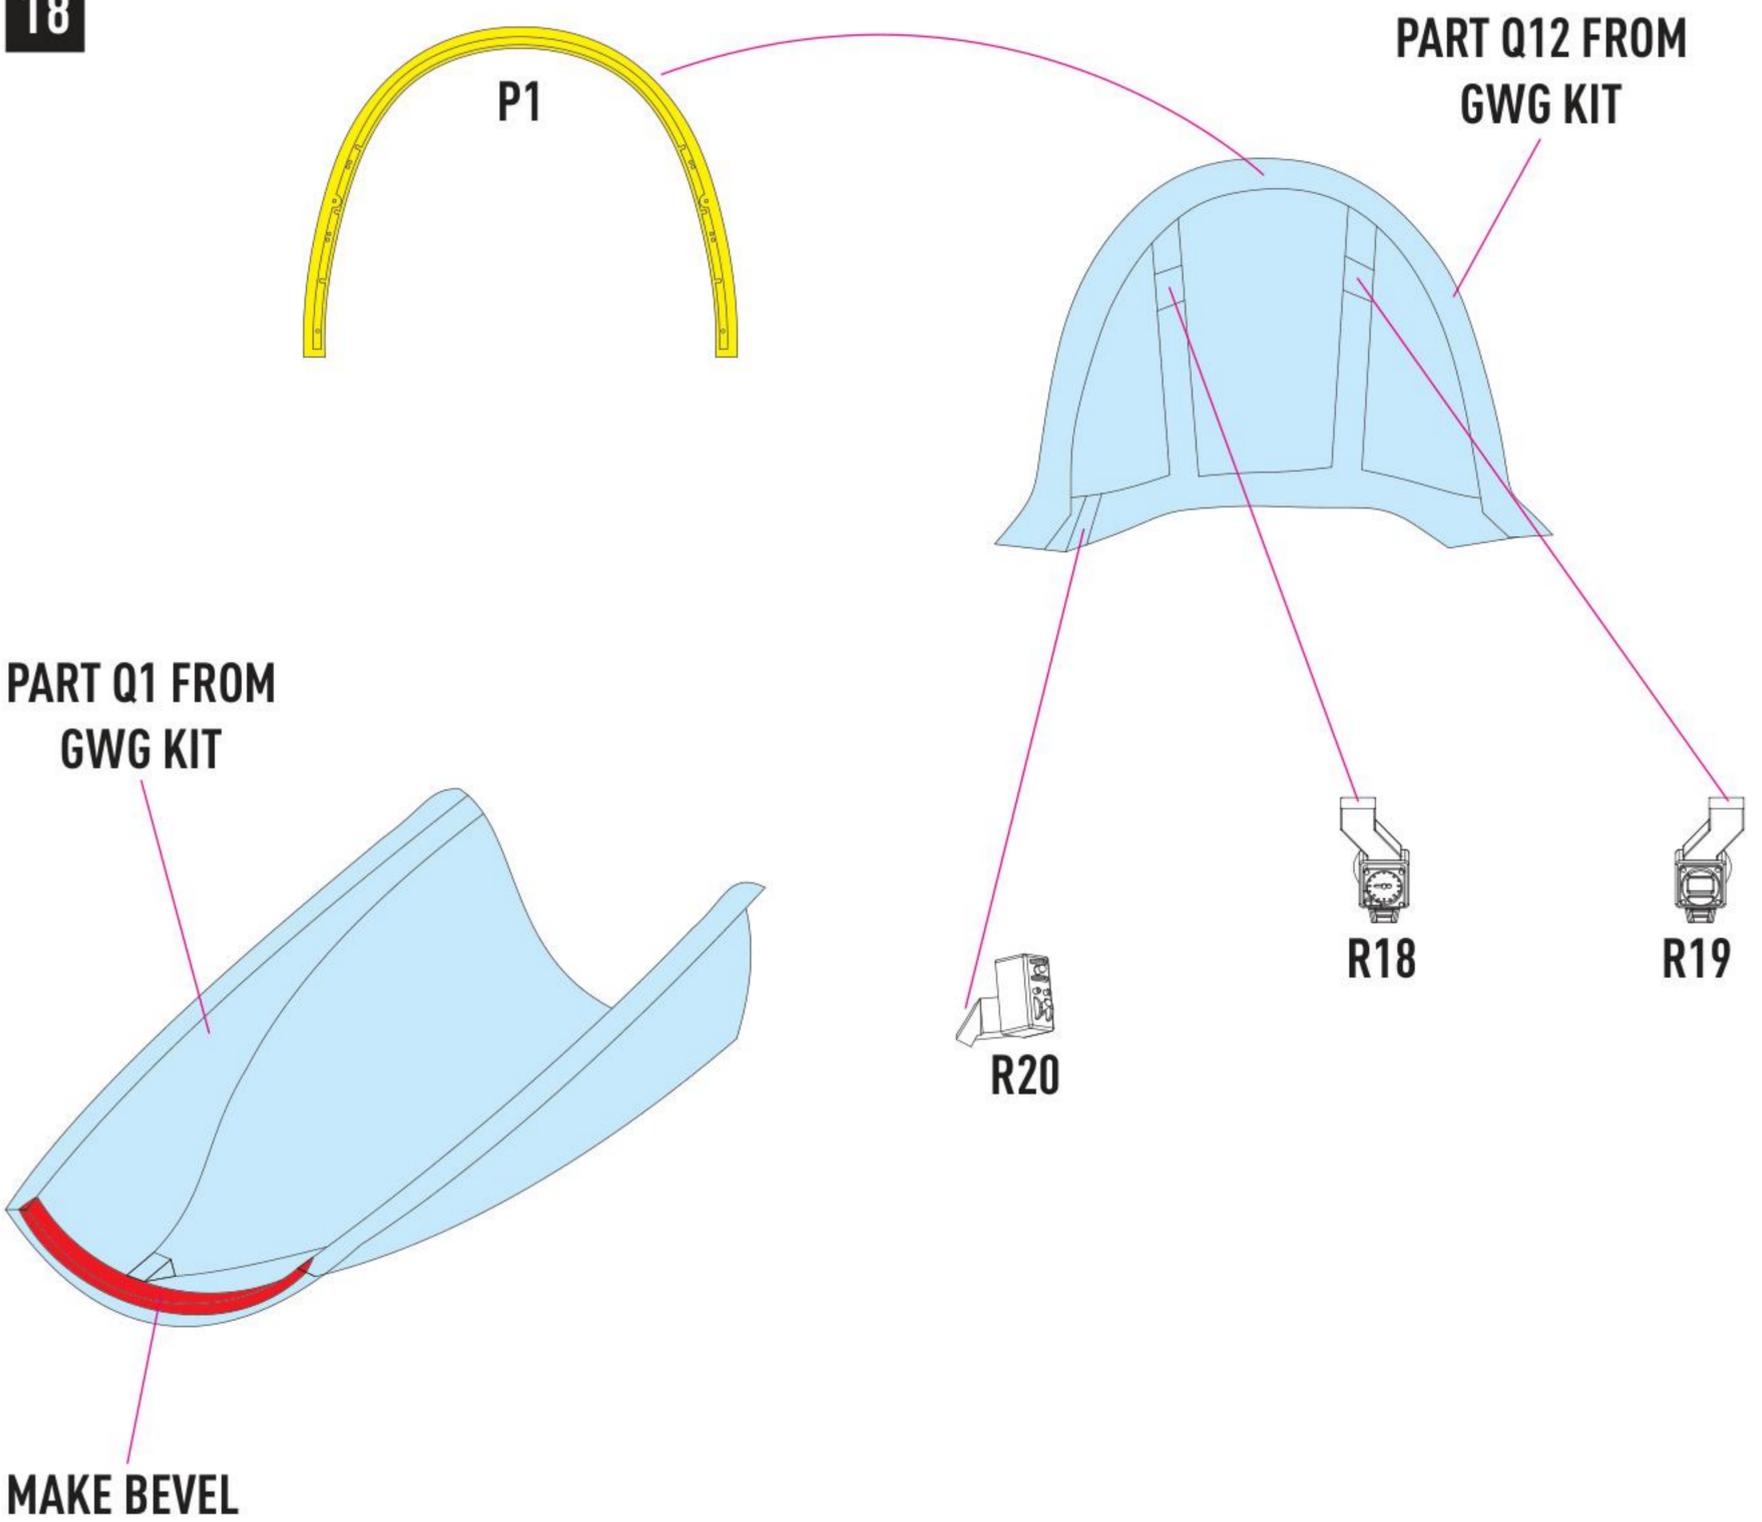

DECALS INSTRUCTION

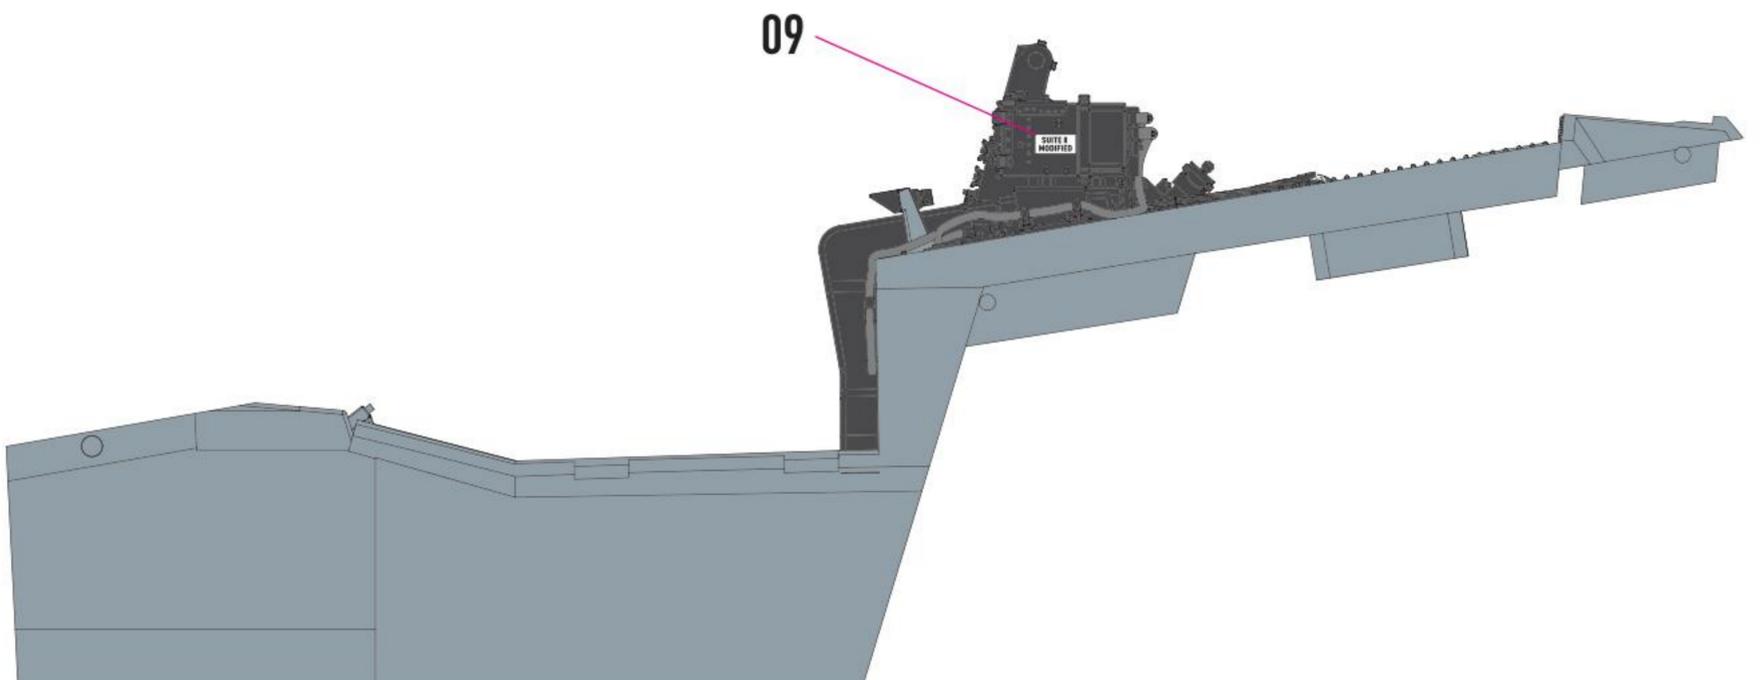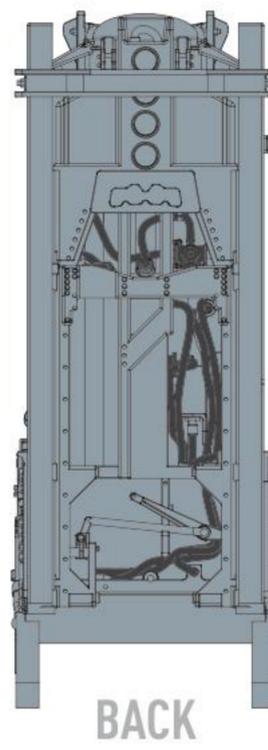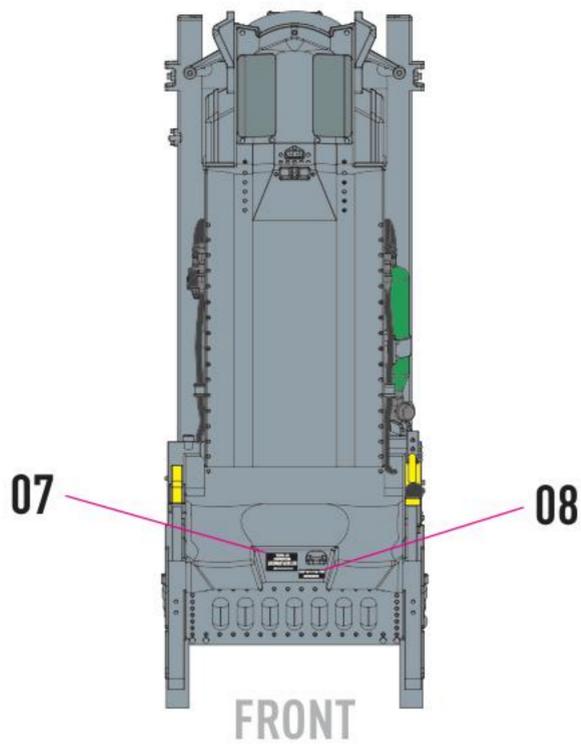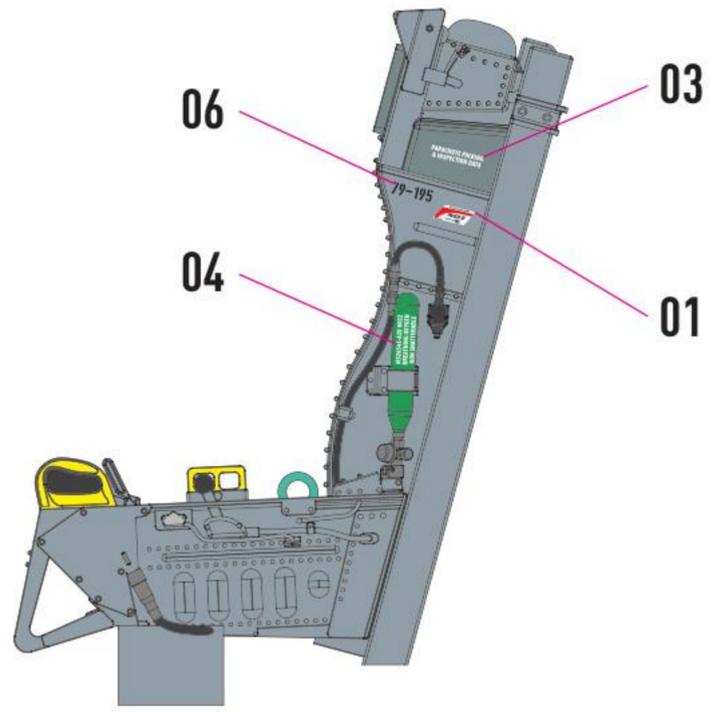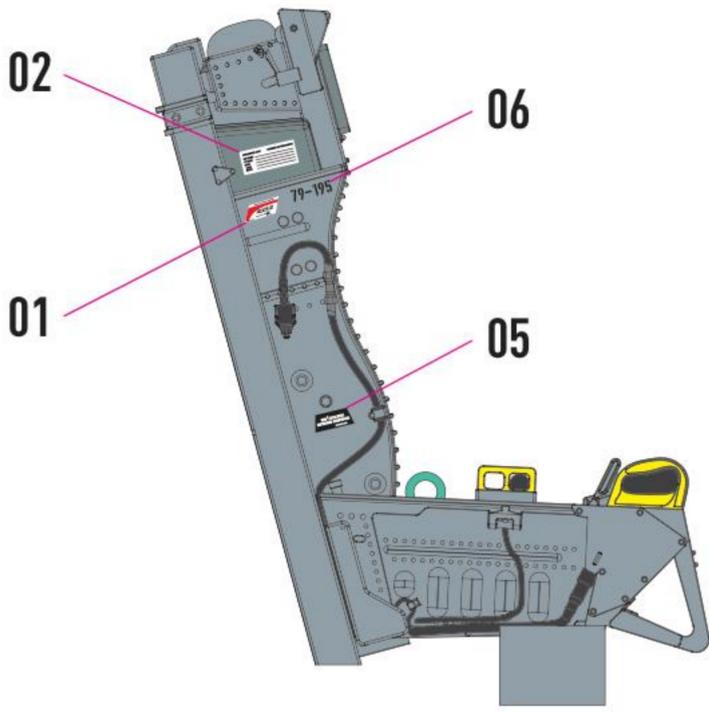

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua