



**DETAILS AFTER REMOVAL
FROM SUPPORTS**

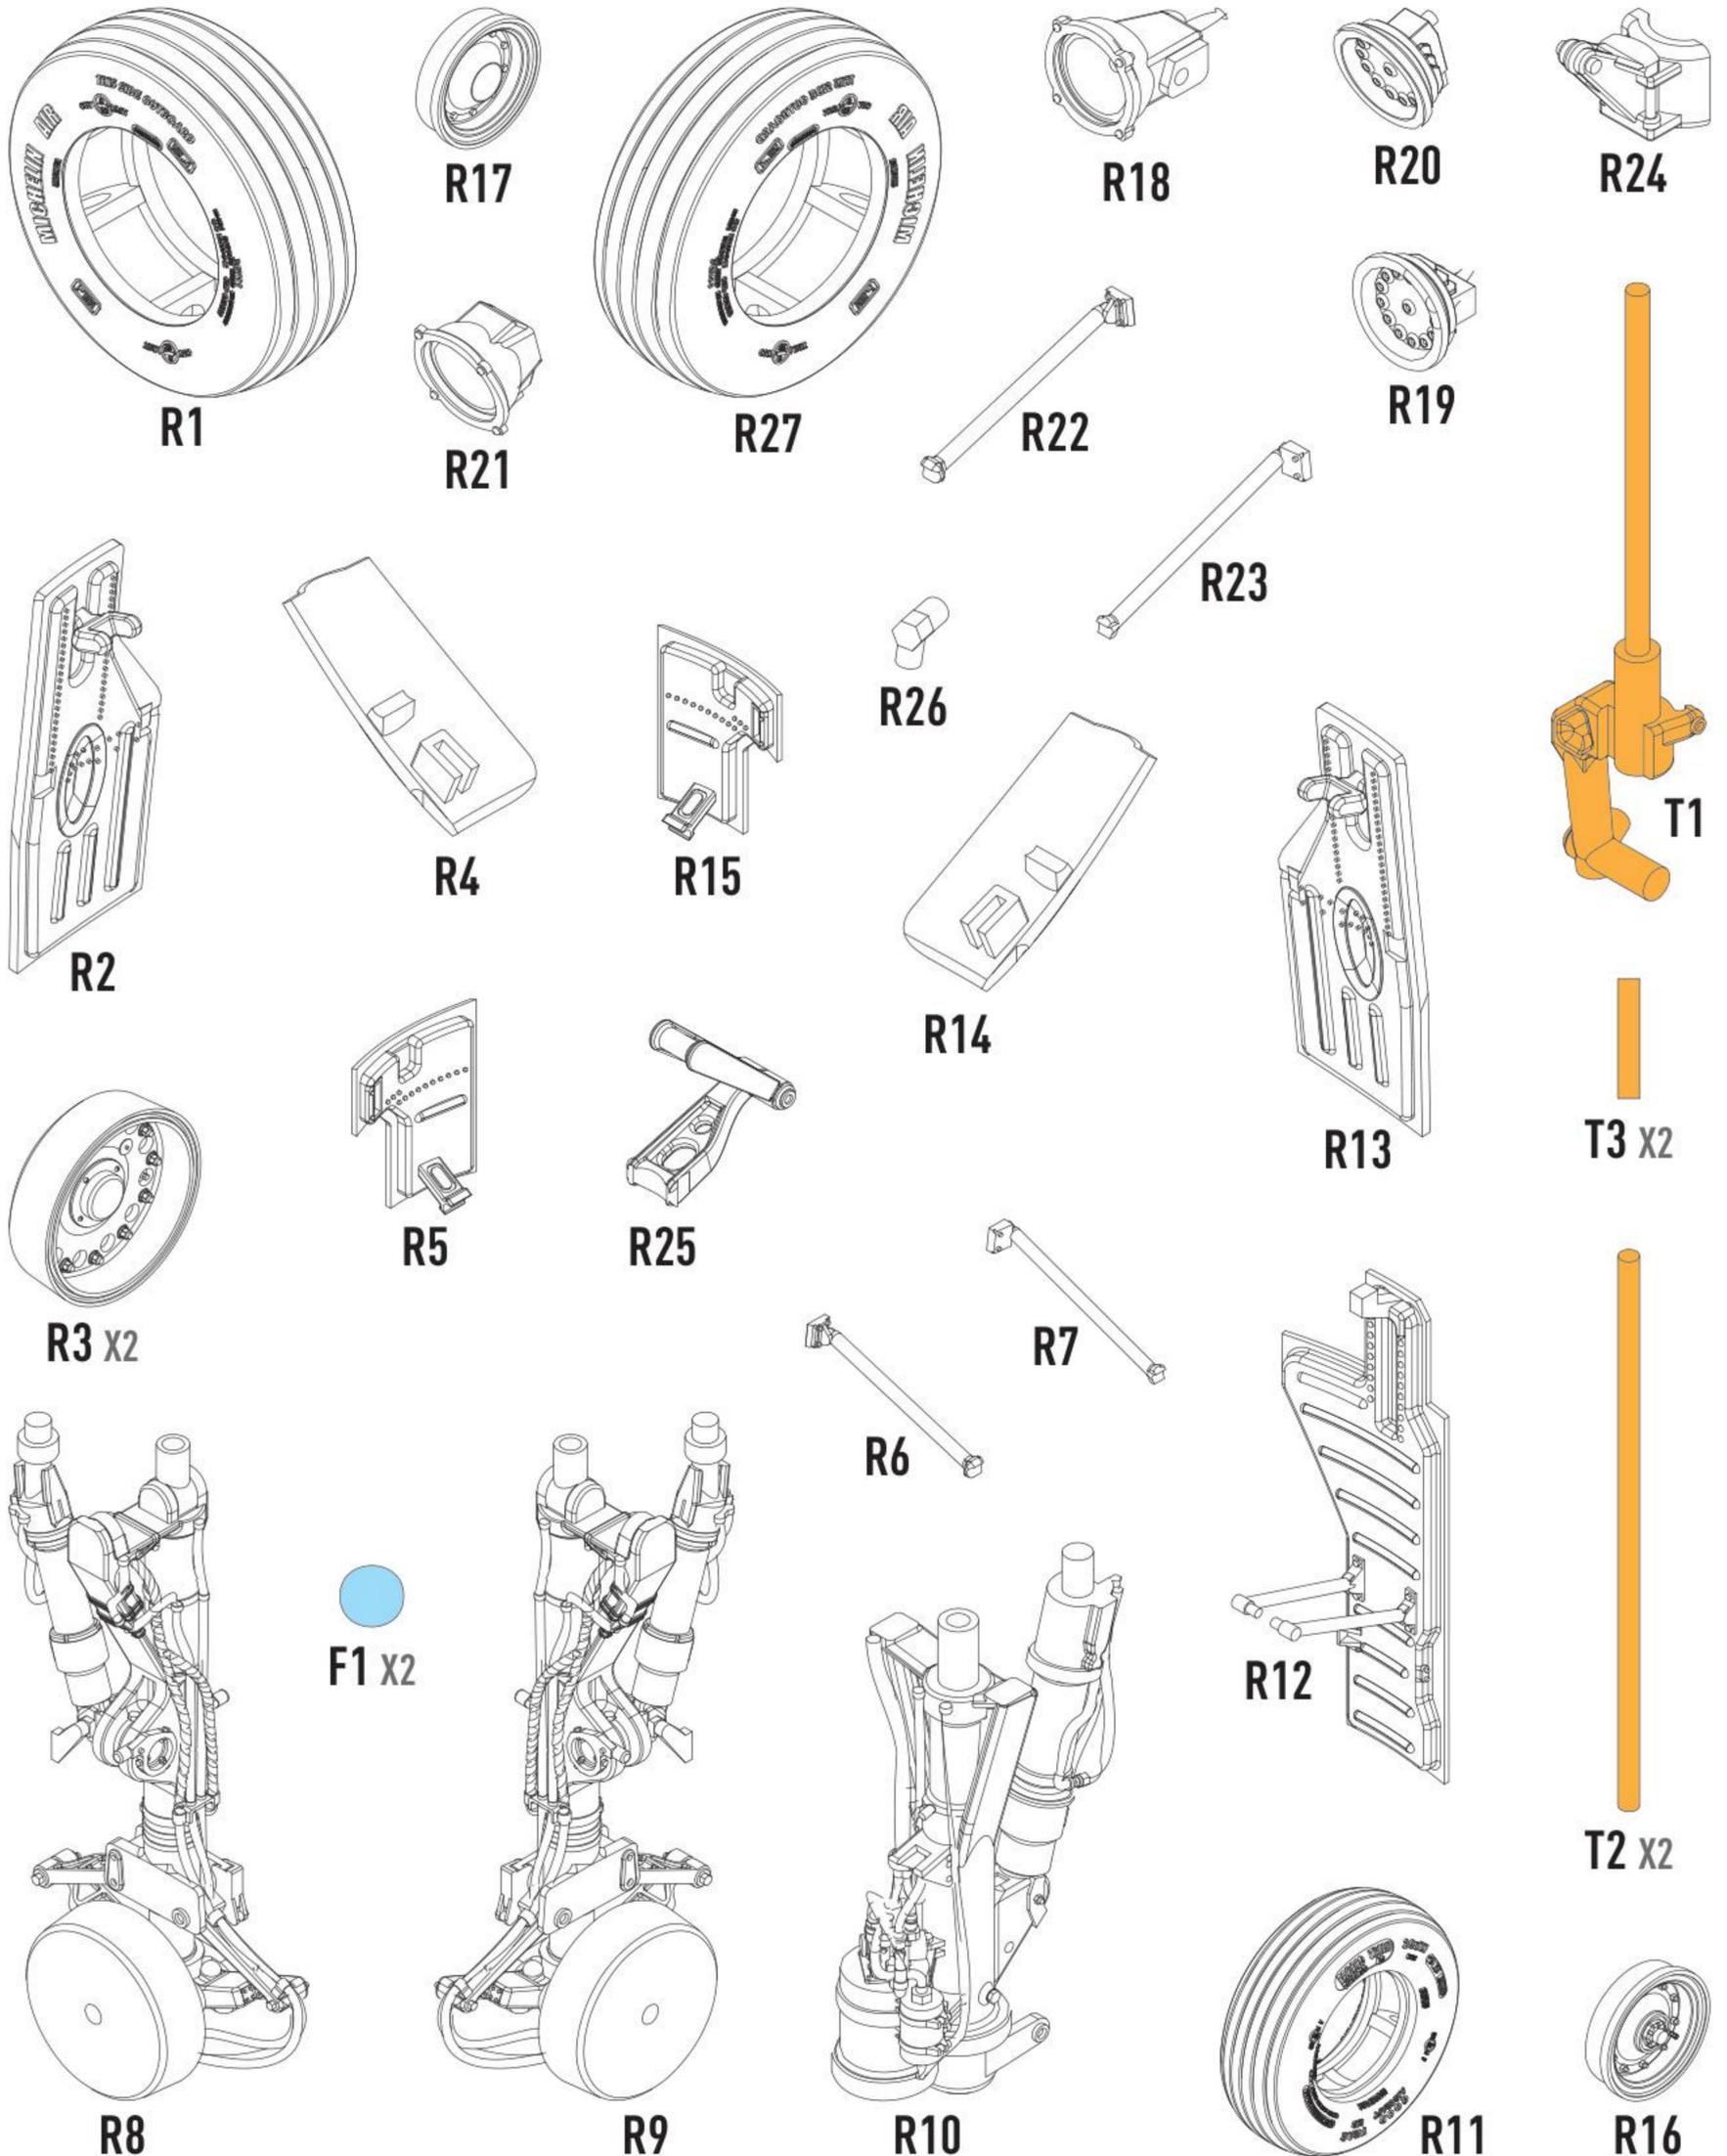


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




1

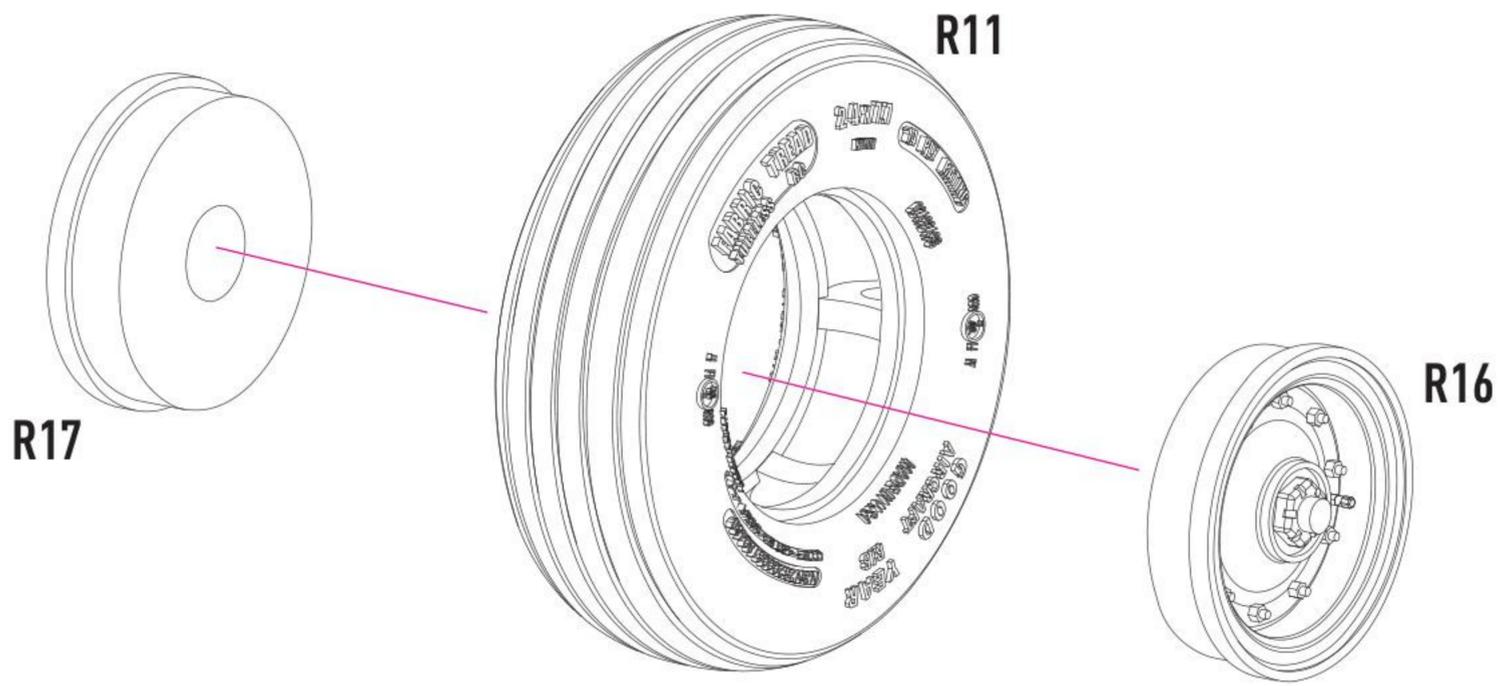


2

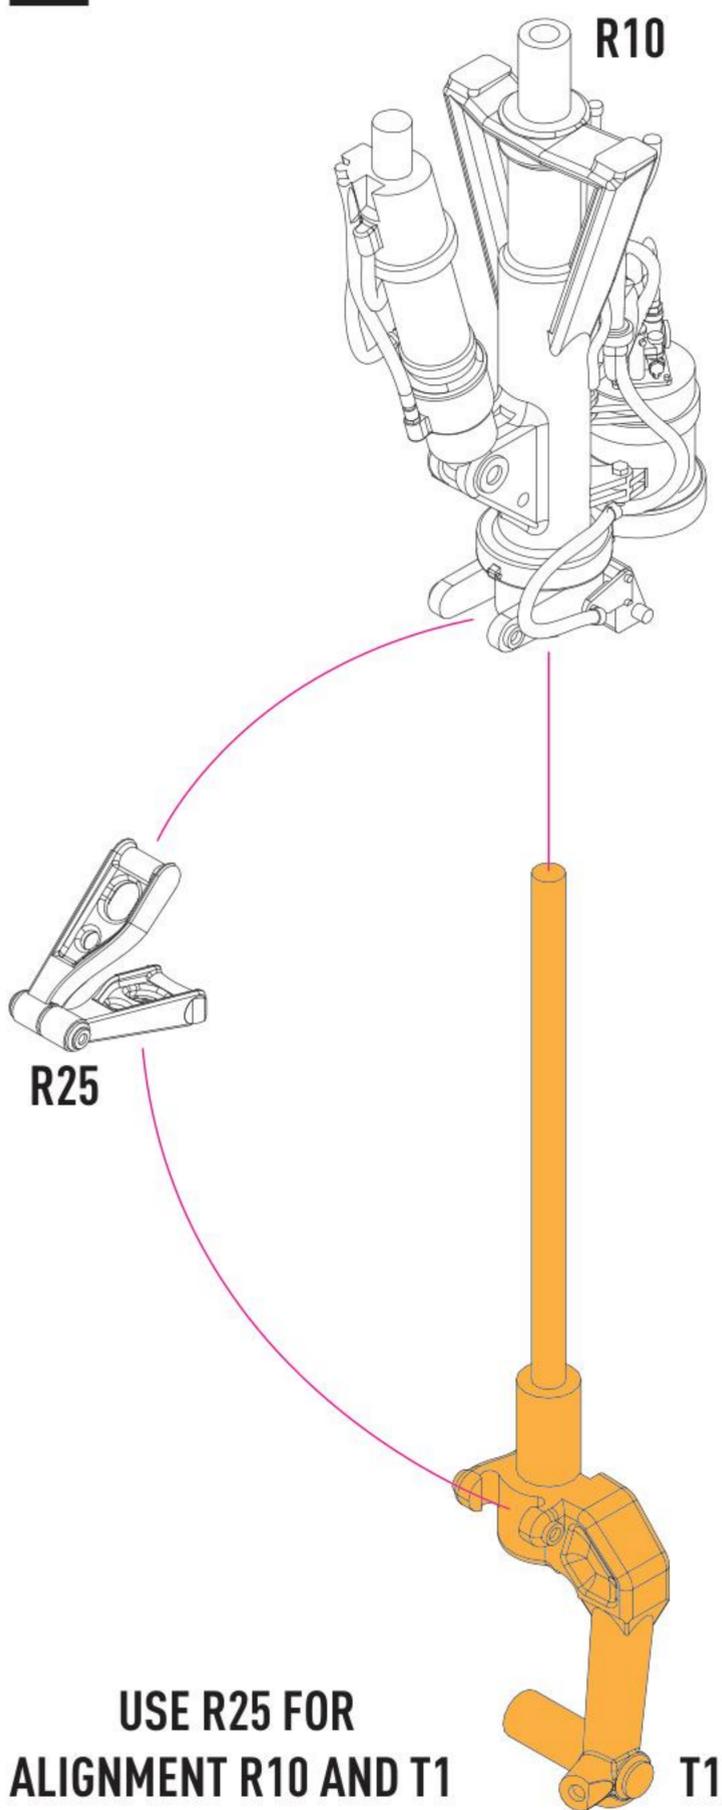

3

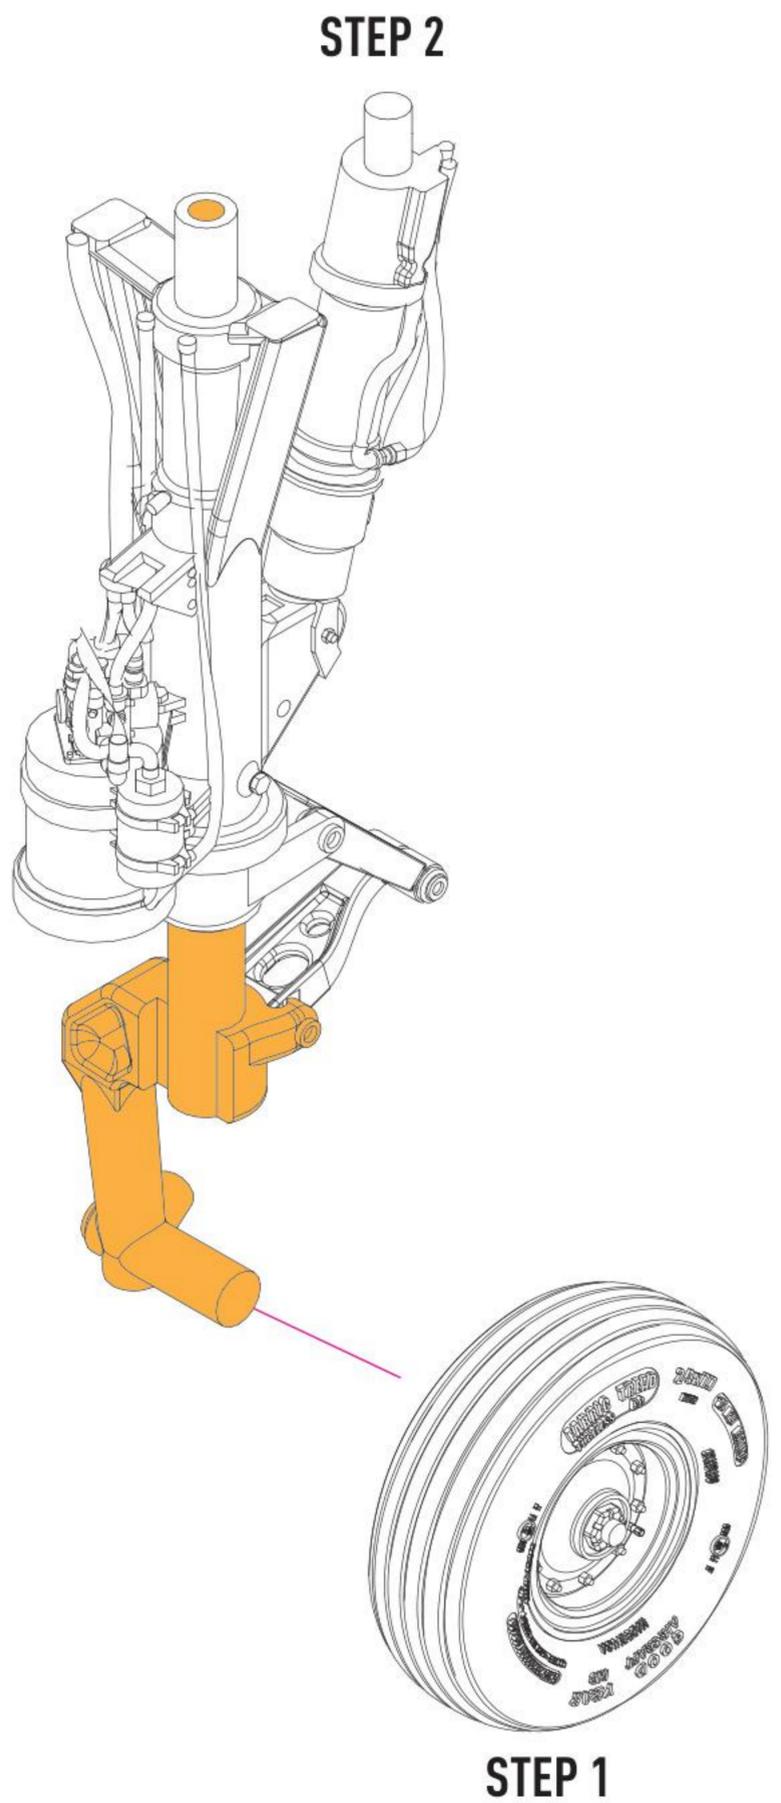


4


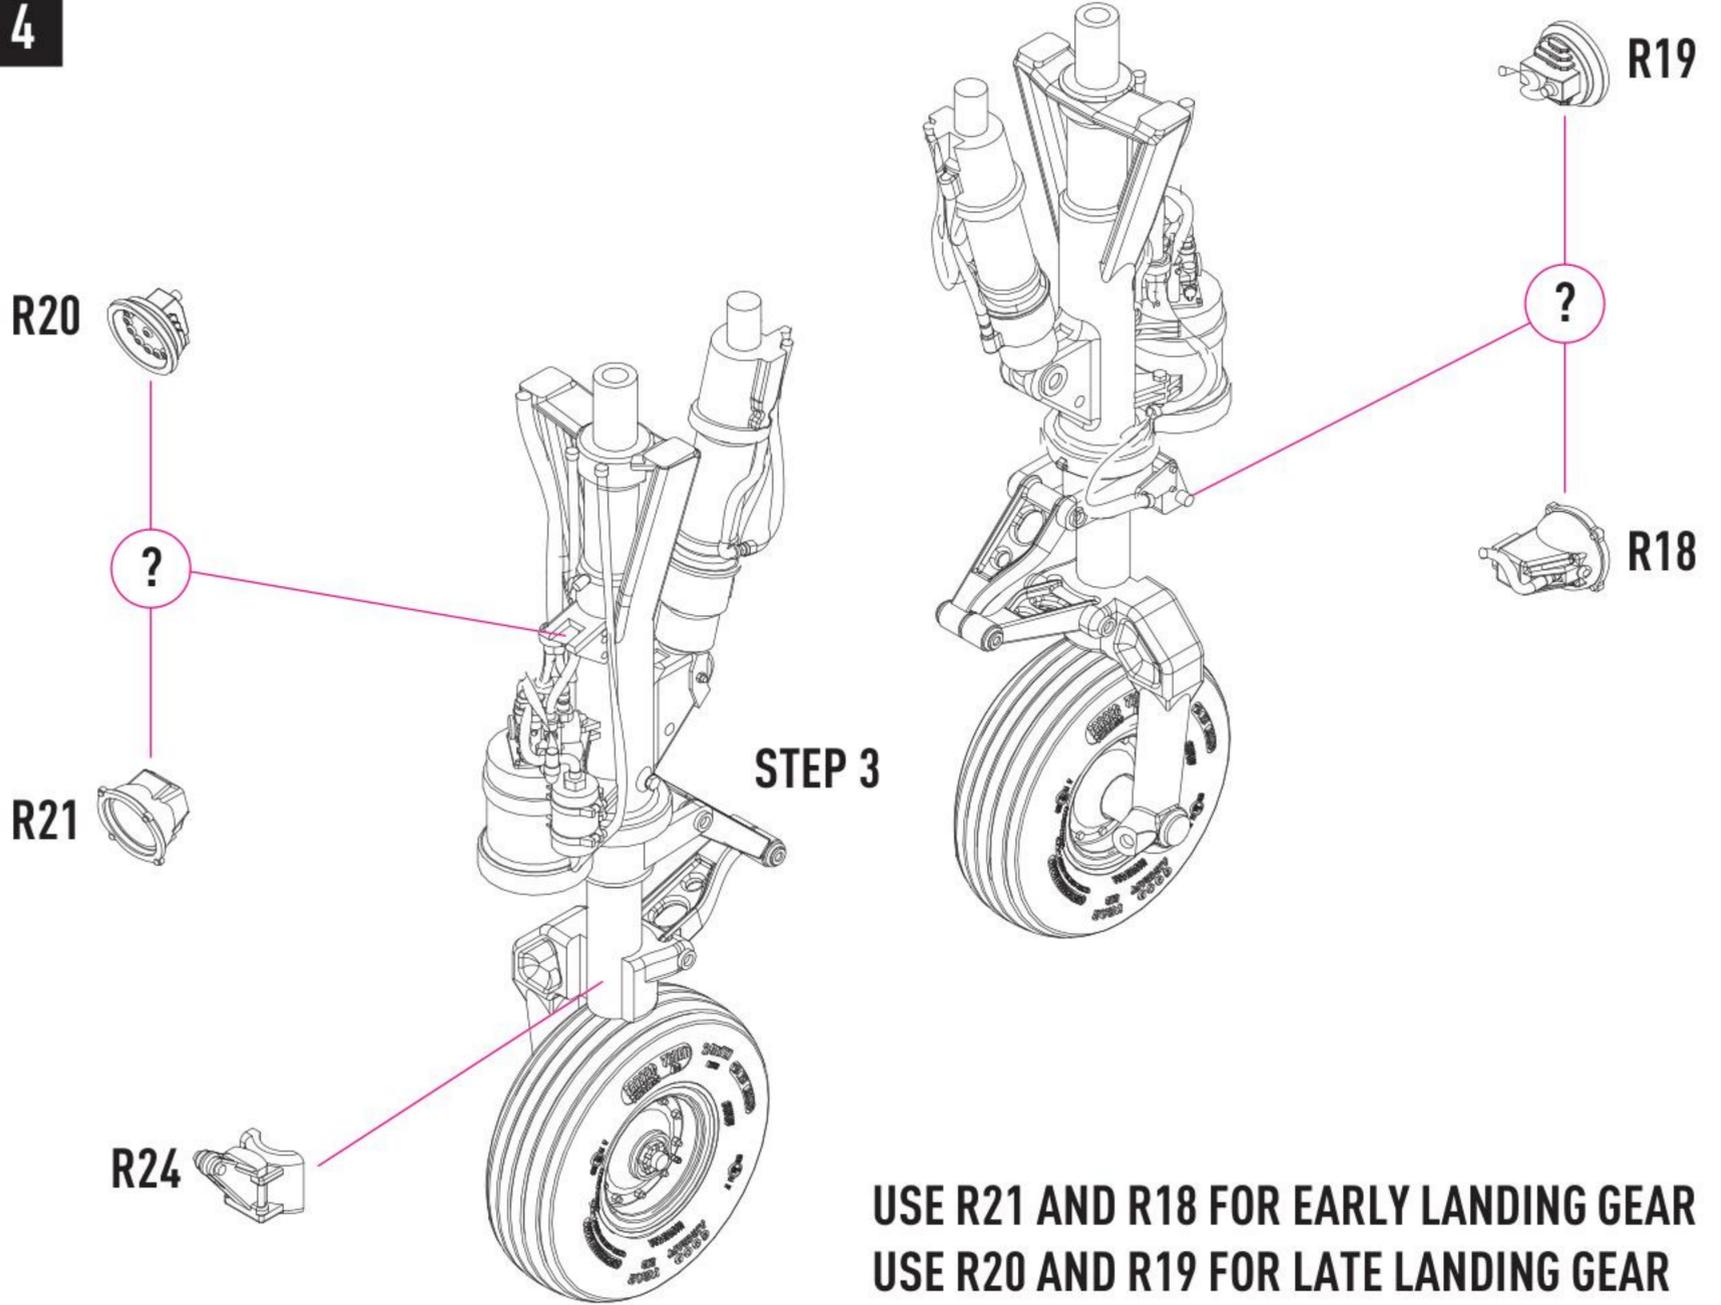


USE R21 AND R18 FOR EARLY LANDING GEAR
USE R20 AND R19 FOR LATE LANDING GEAR


5

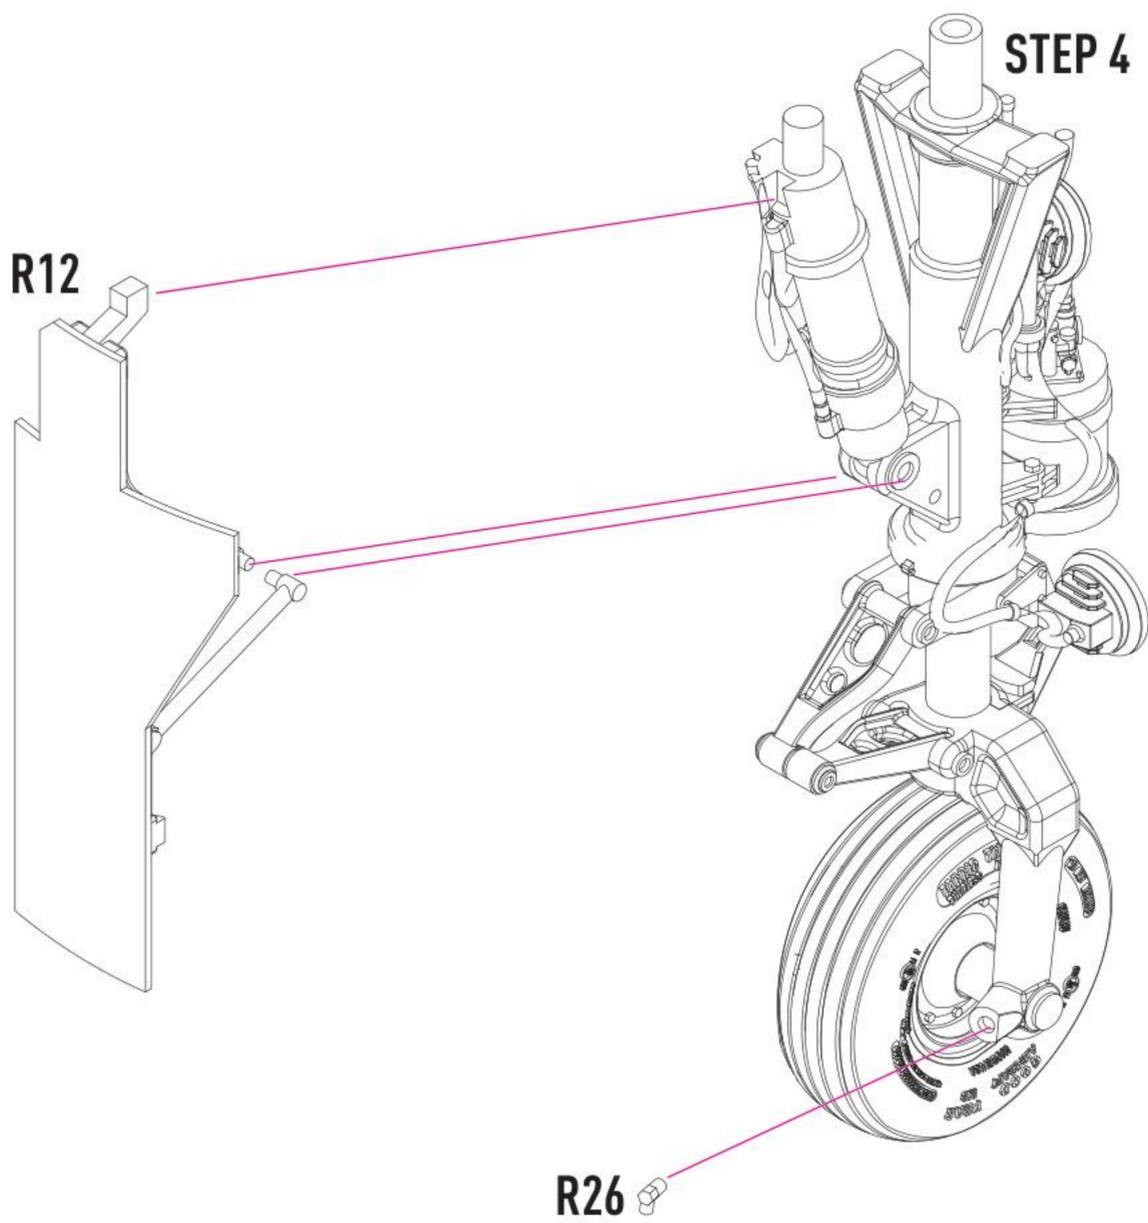


6

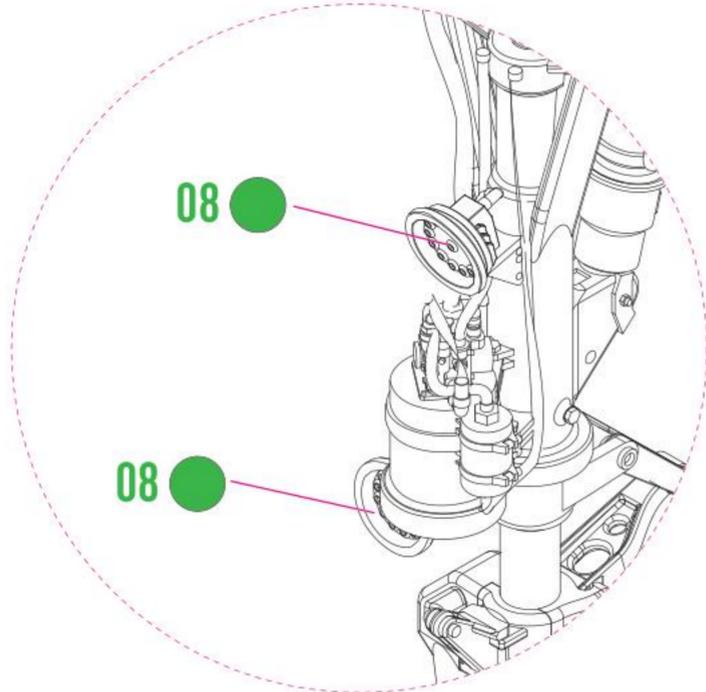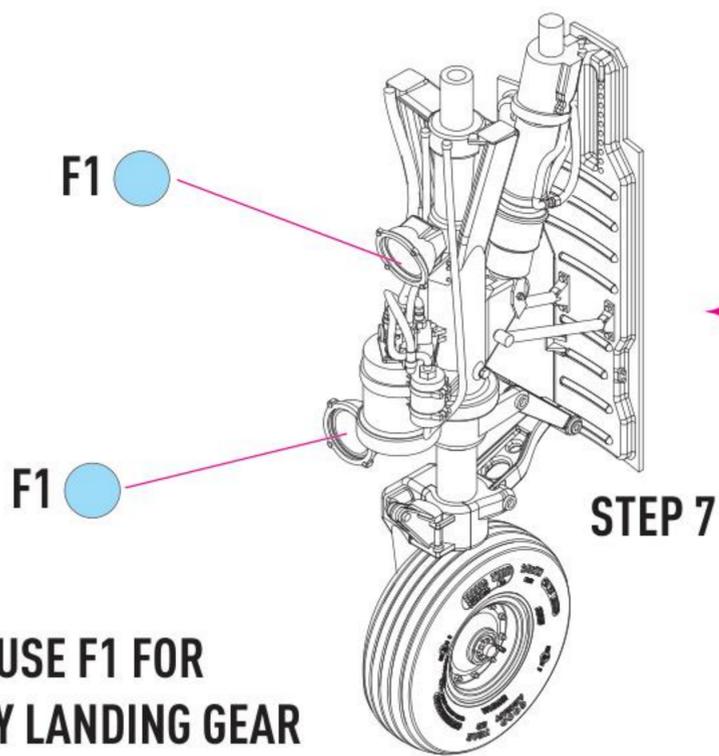



7

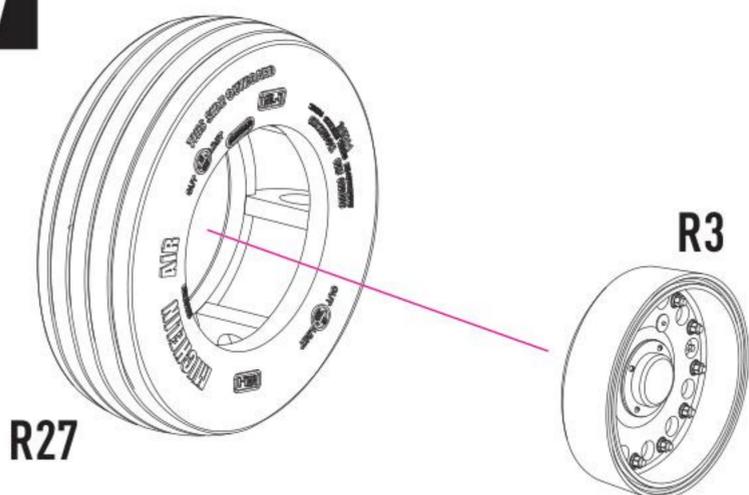


8

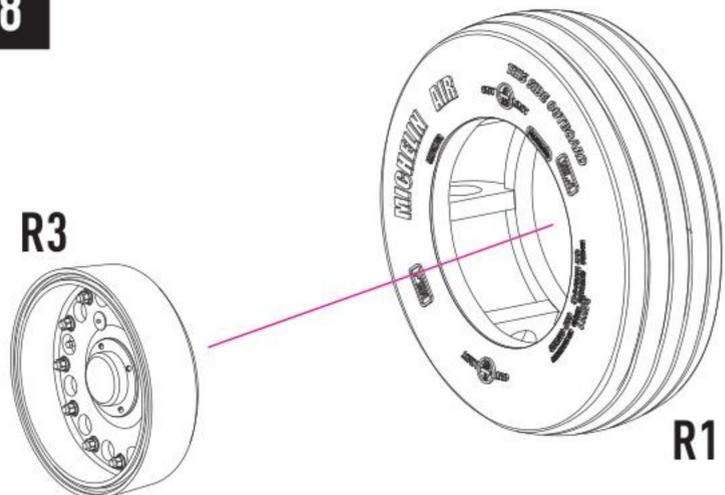


9

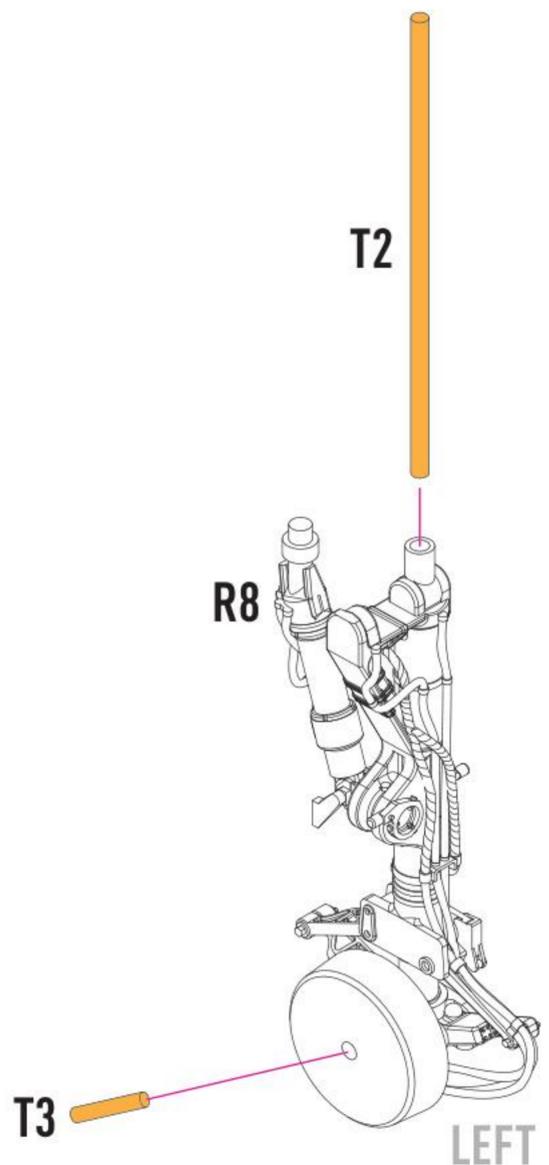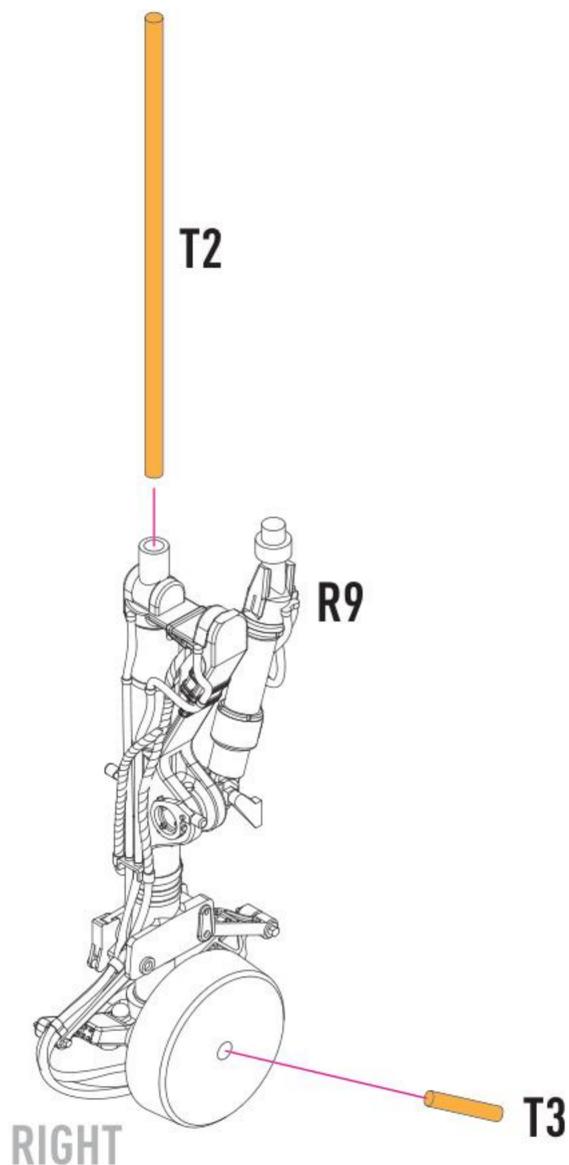

10

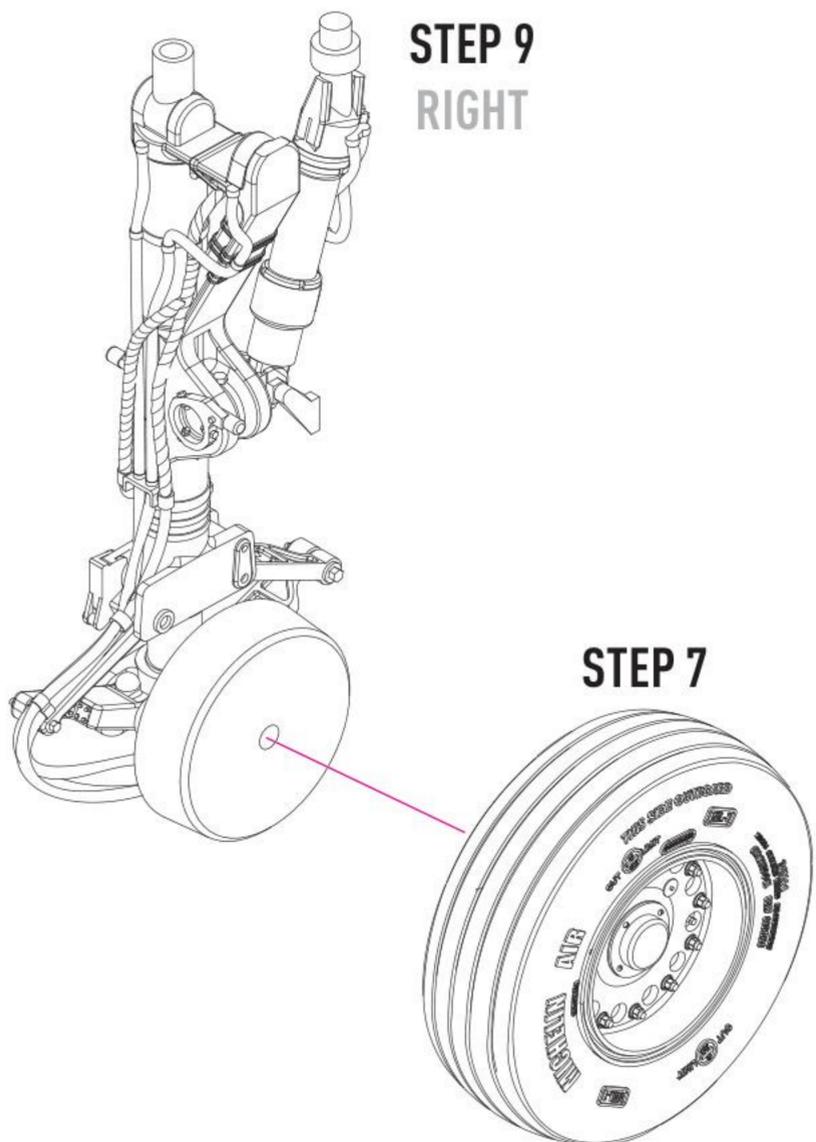


STEP 9
LEFT

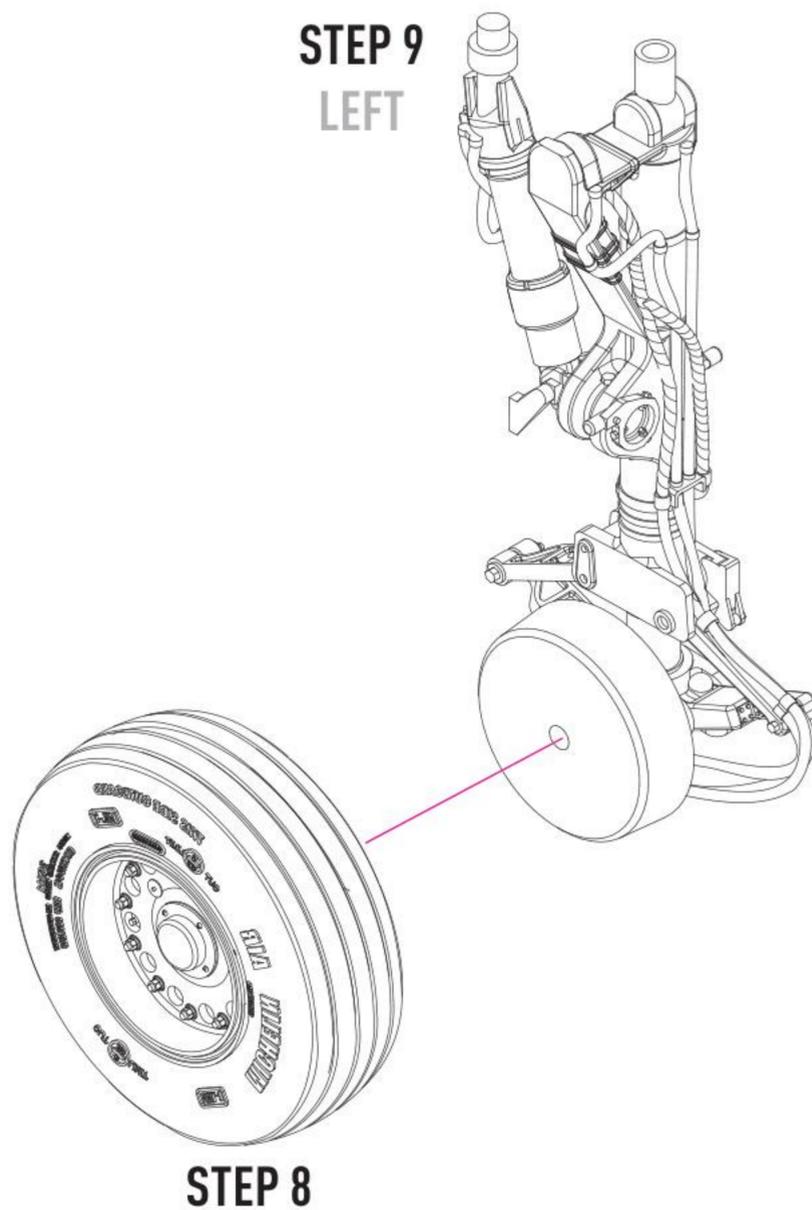





11




STEP 10
RIGHT

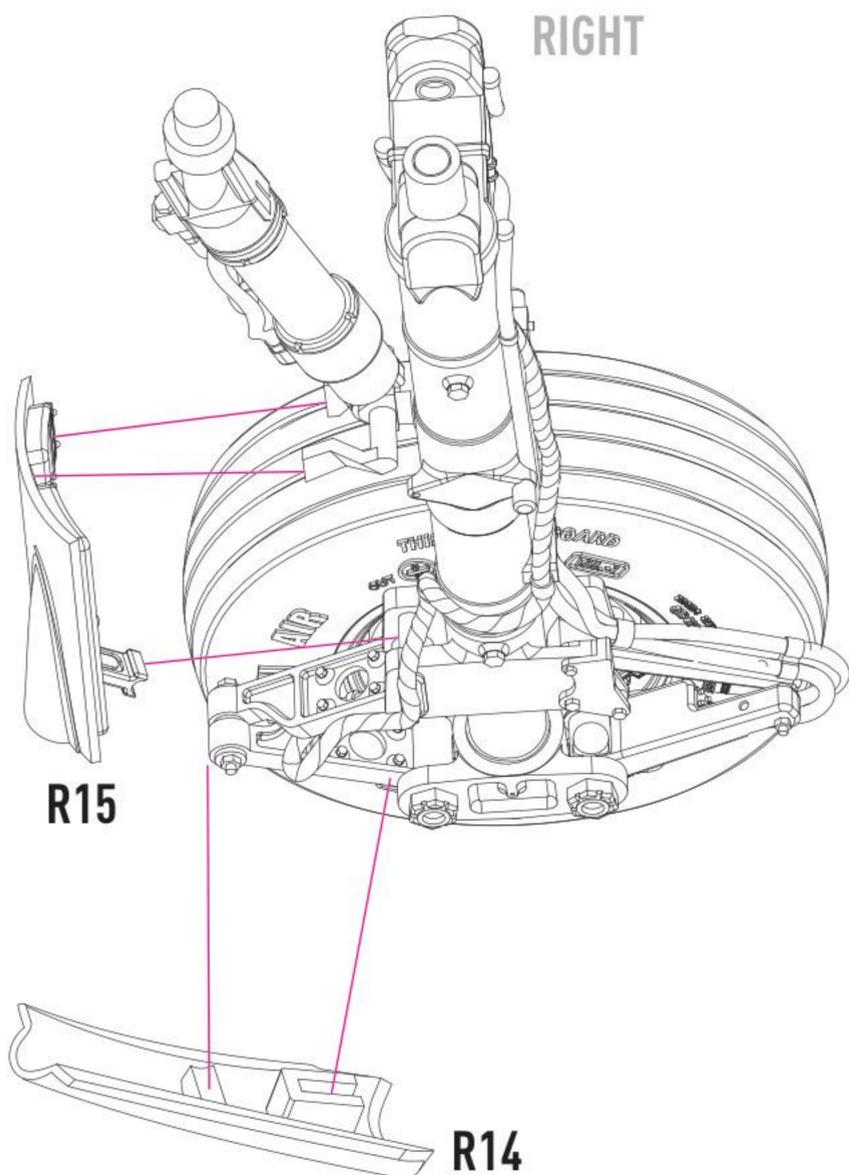

STEP 10
LEFT

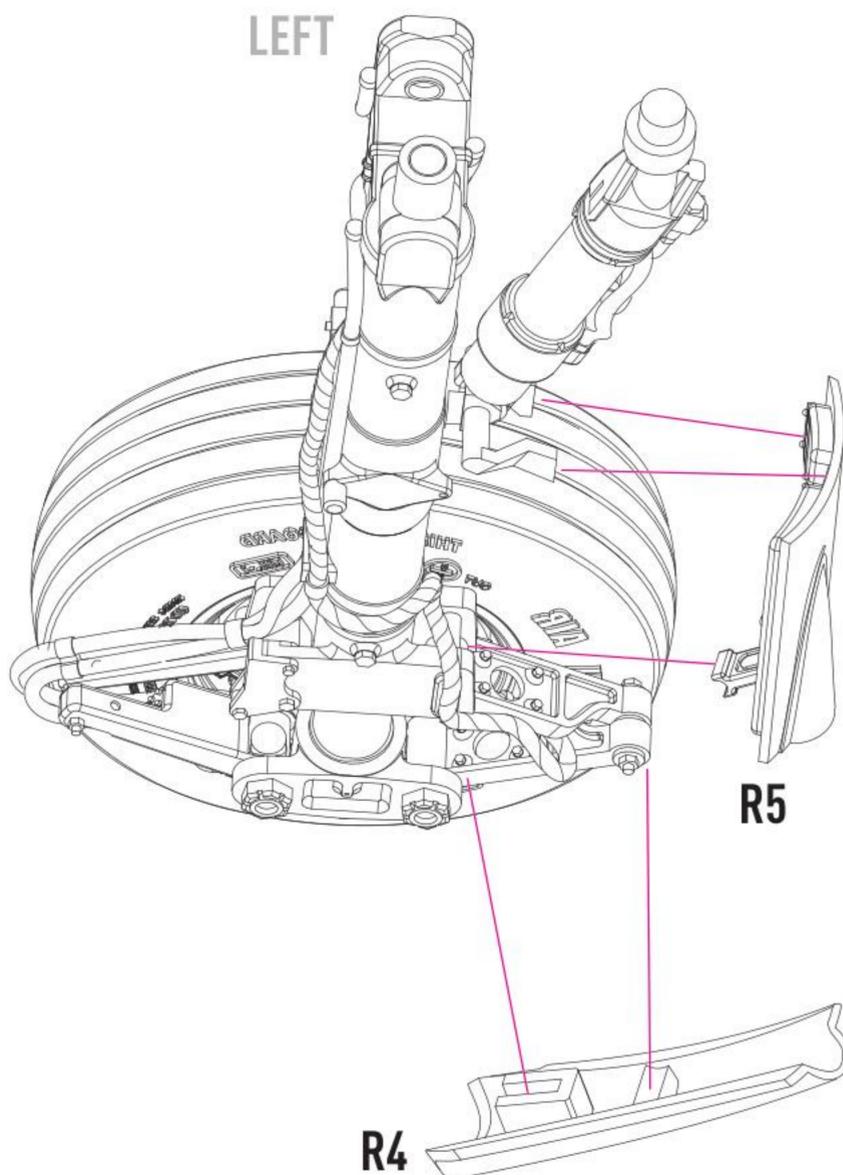

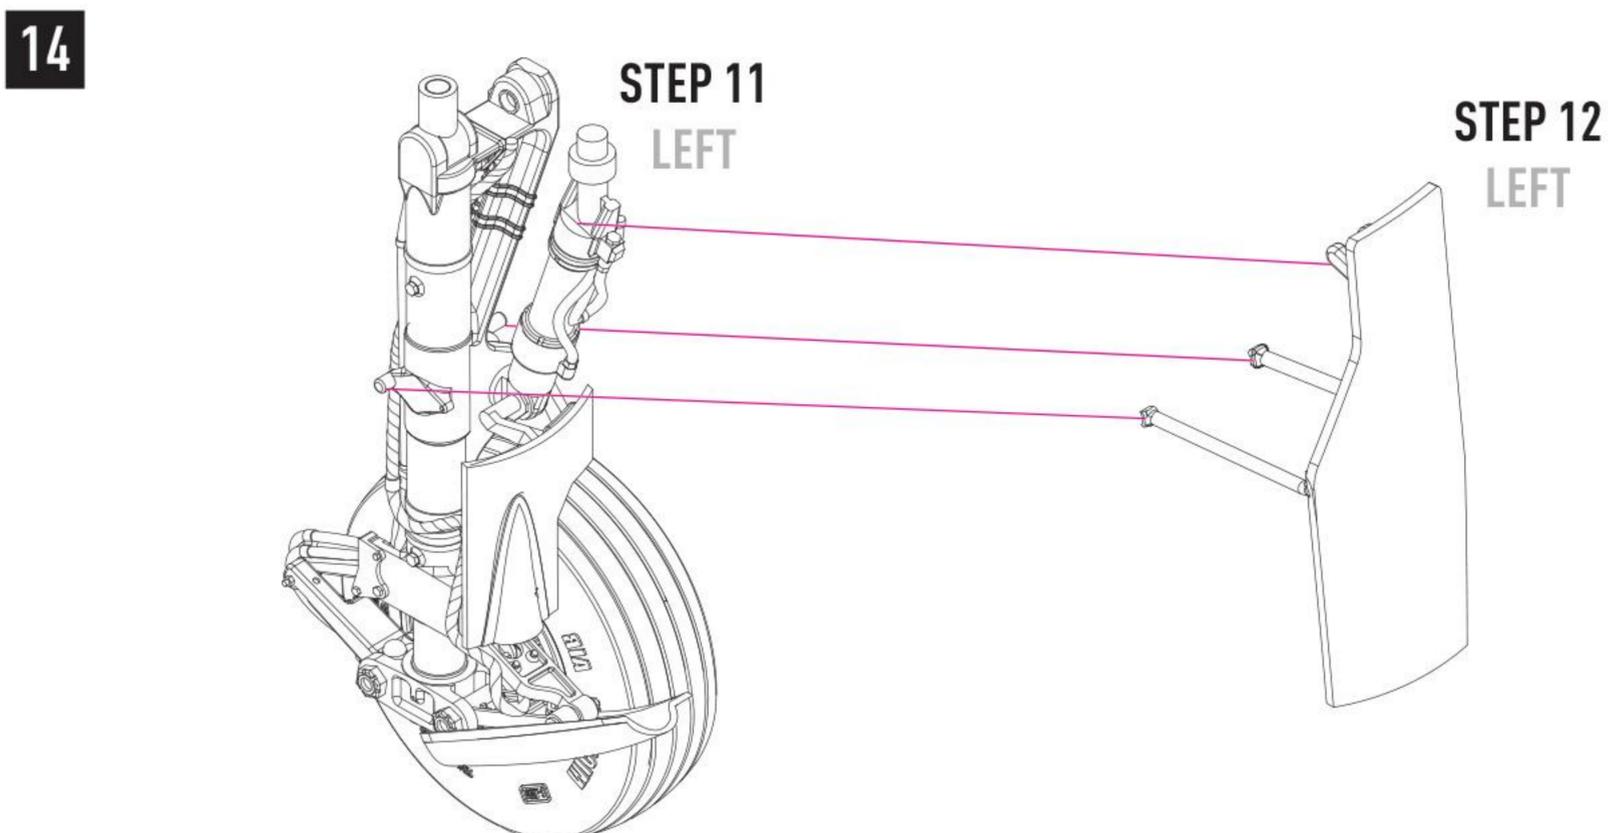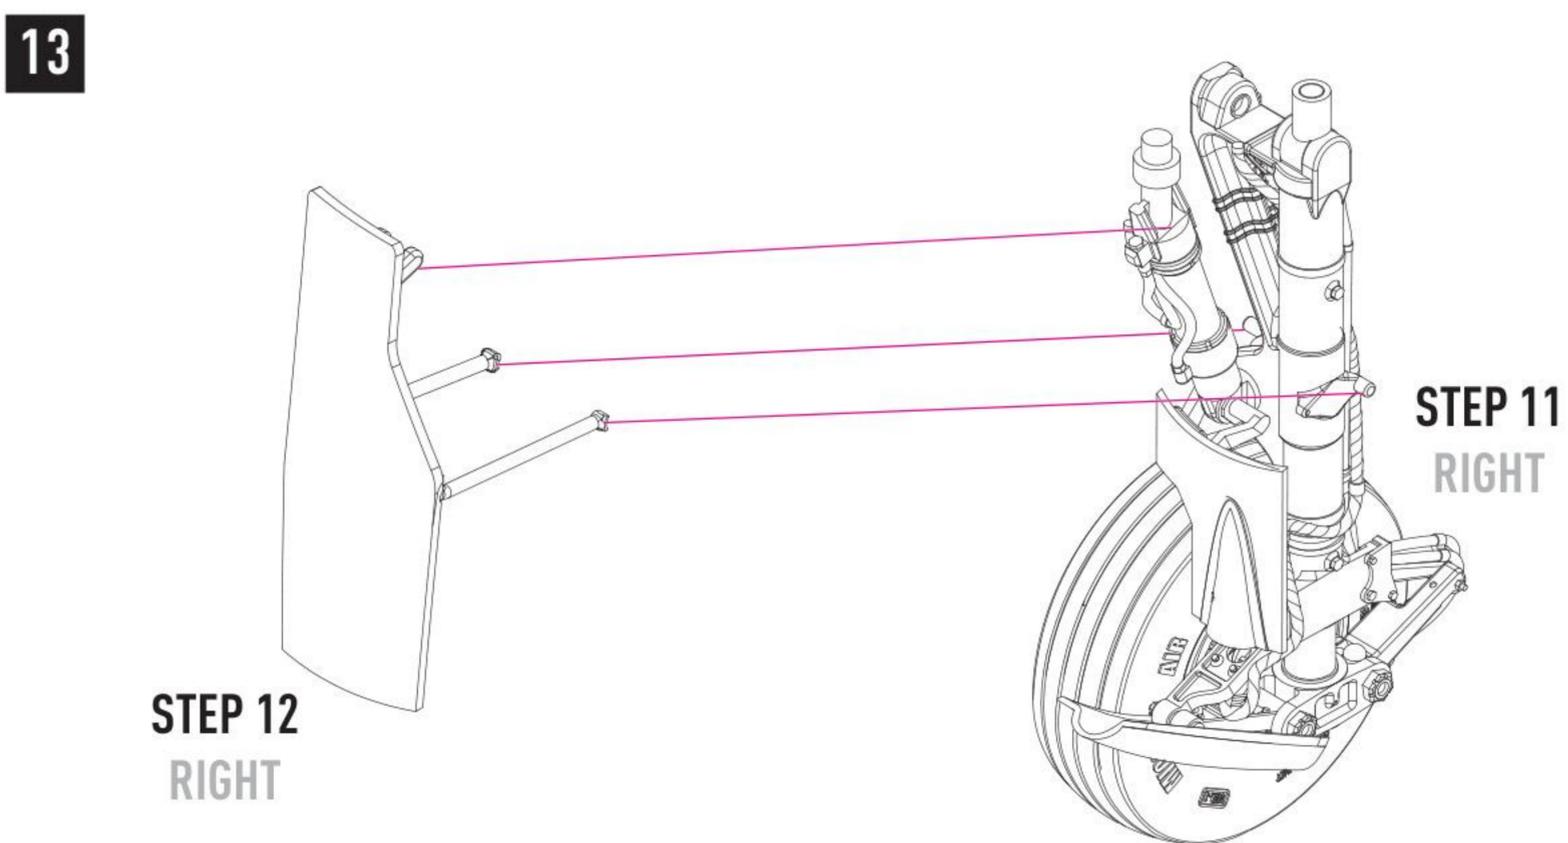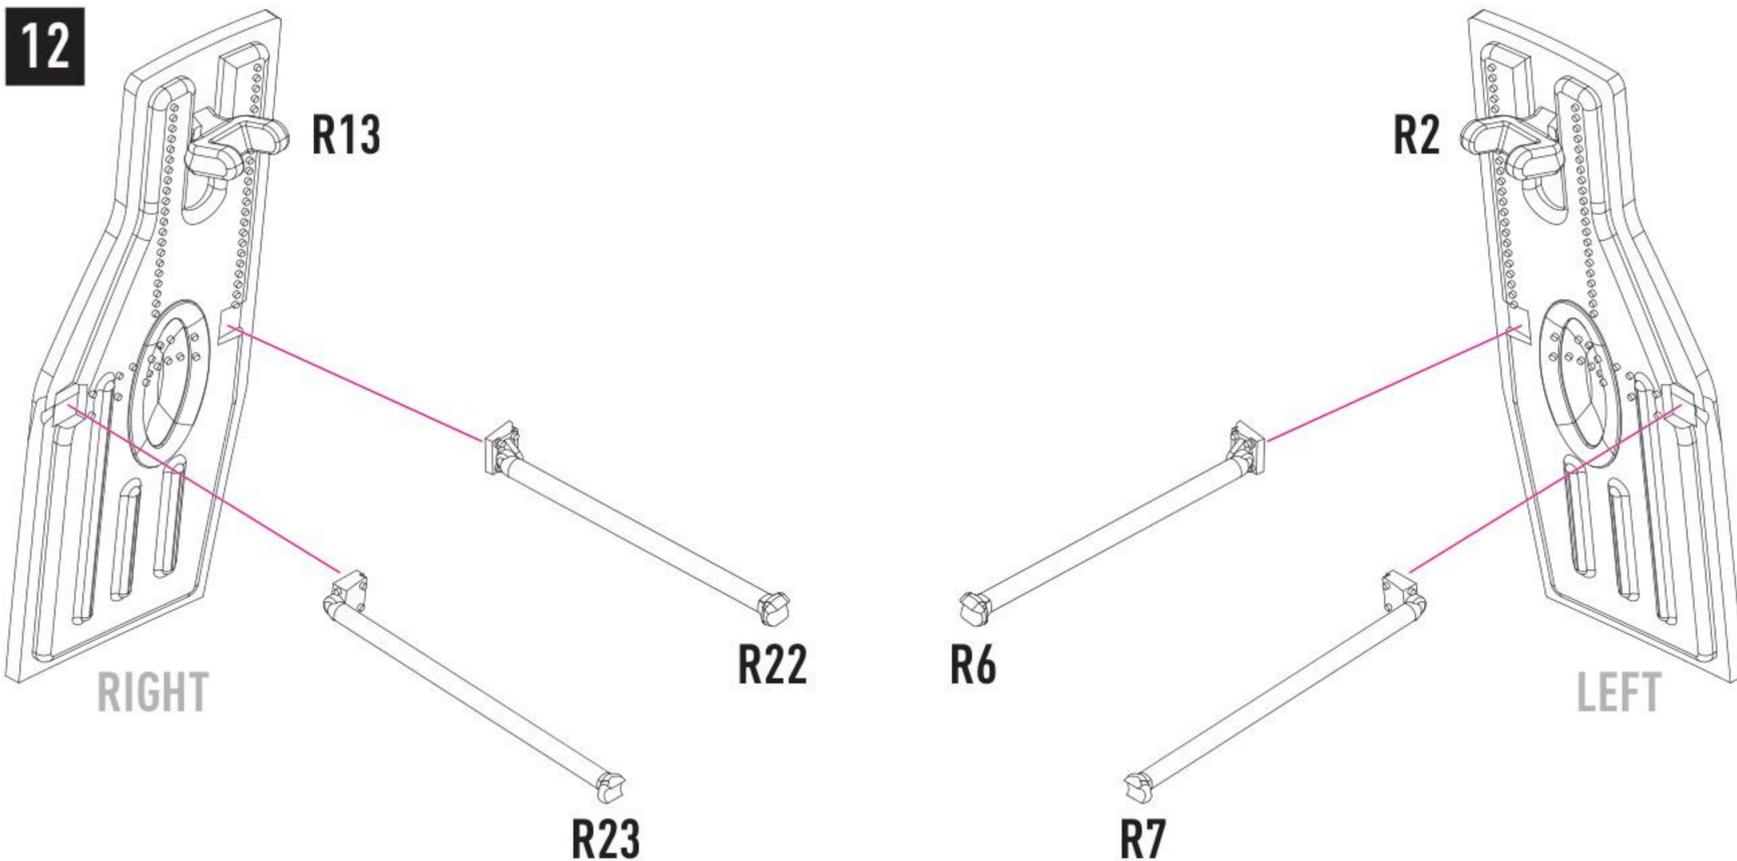

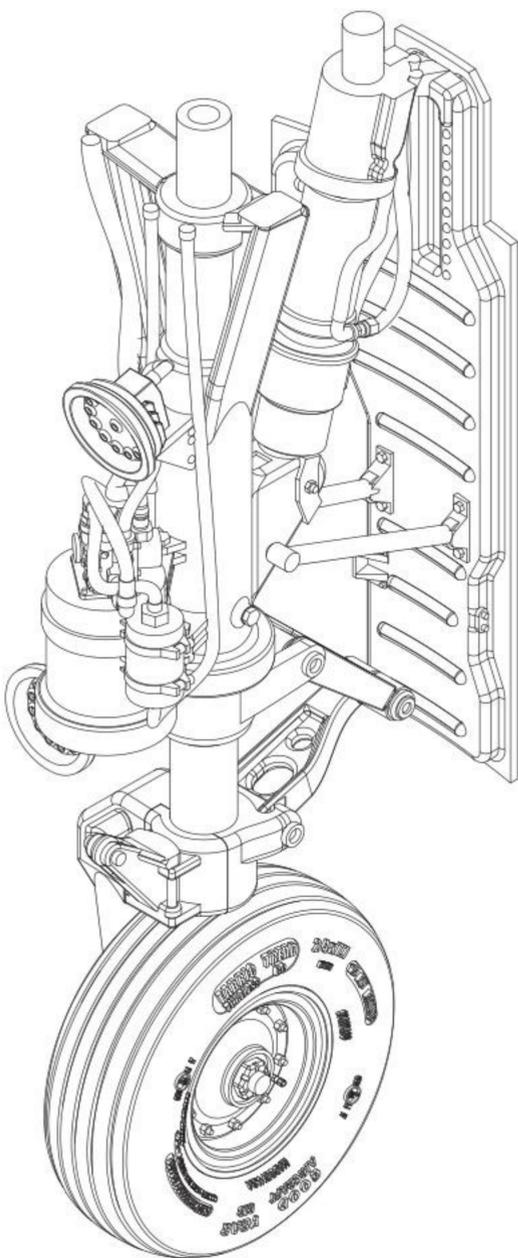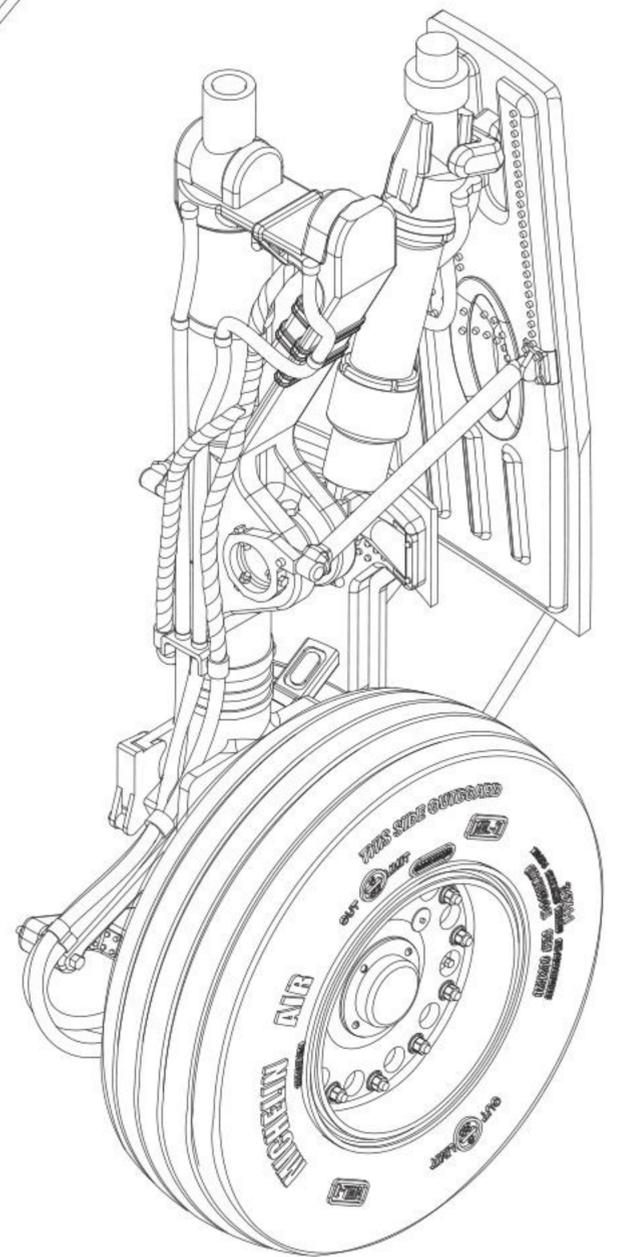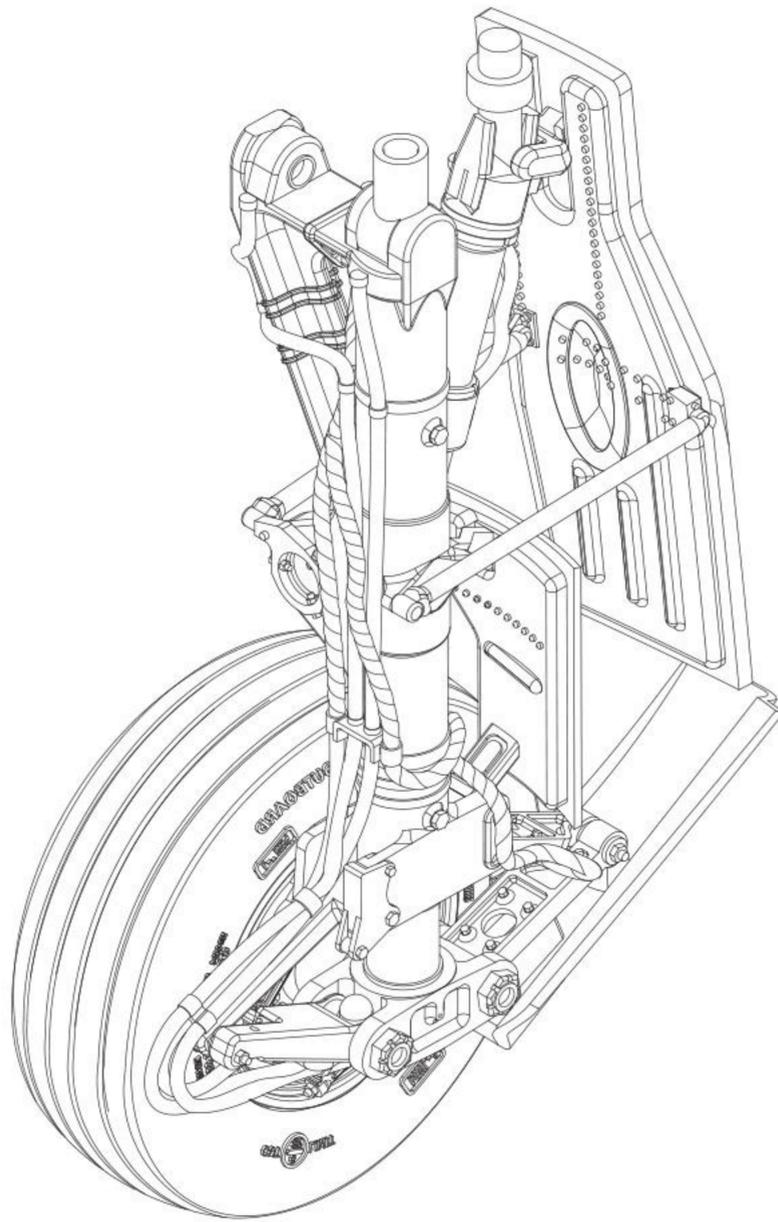

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua




RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official

 youtube.com/@reskit-usmd

DECAL INSTRUCTION

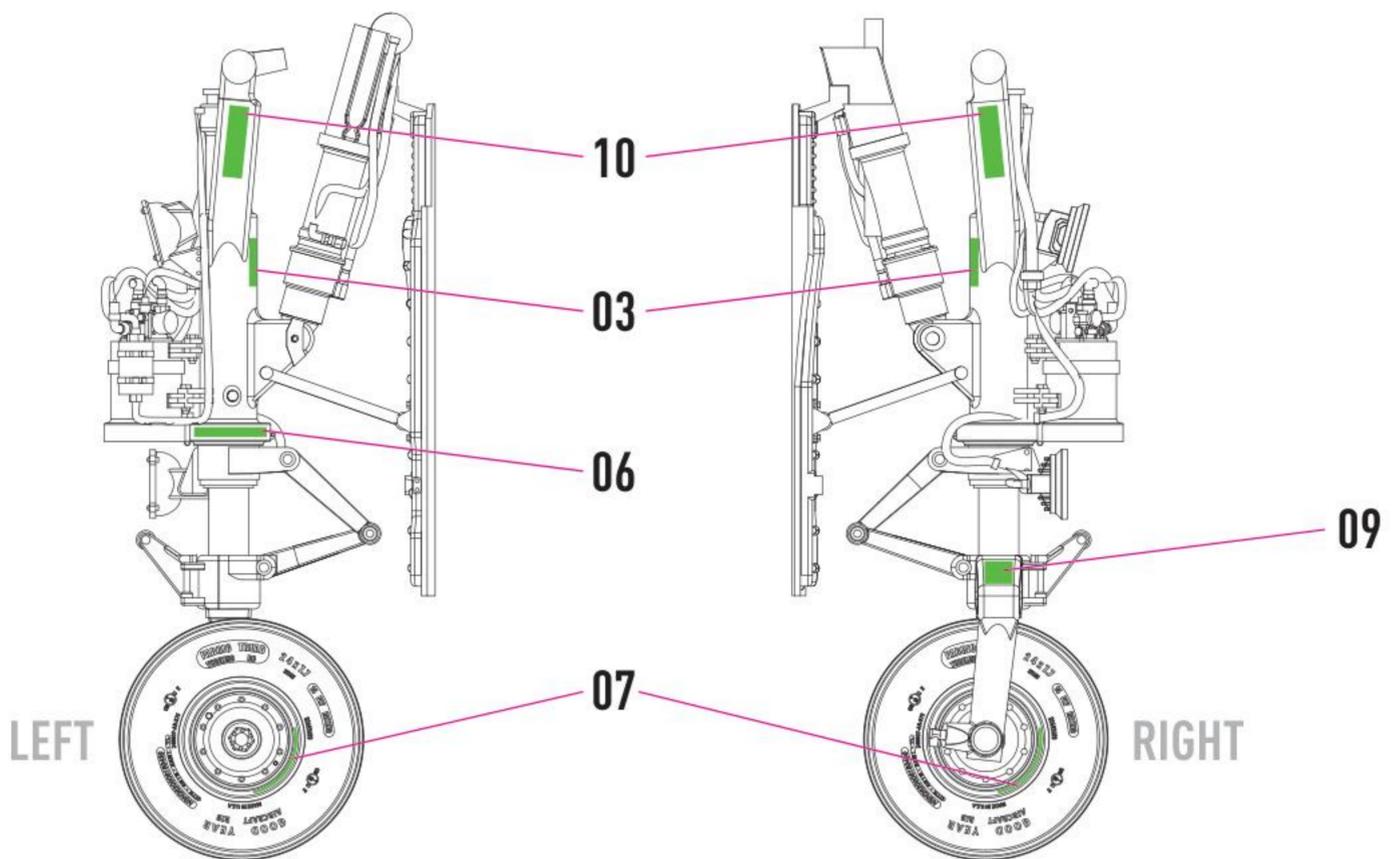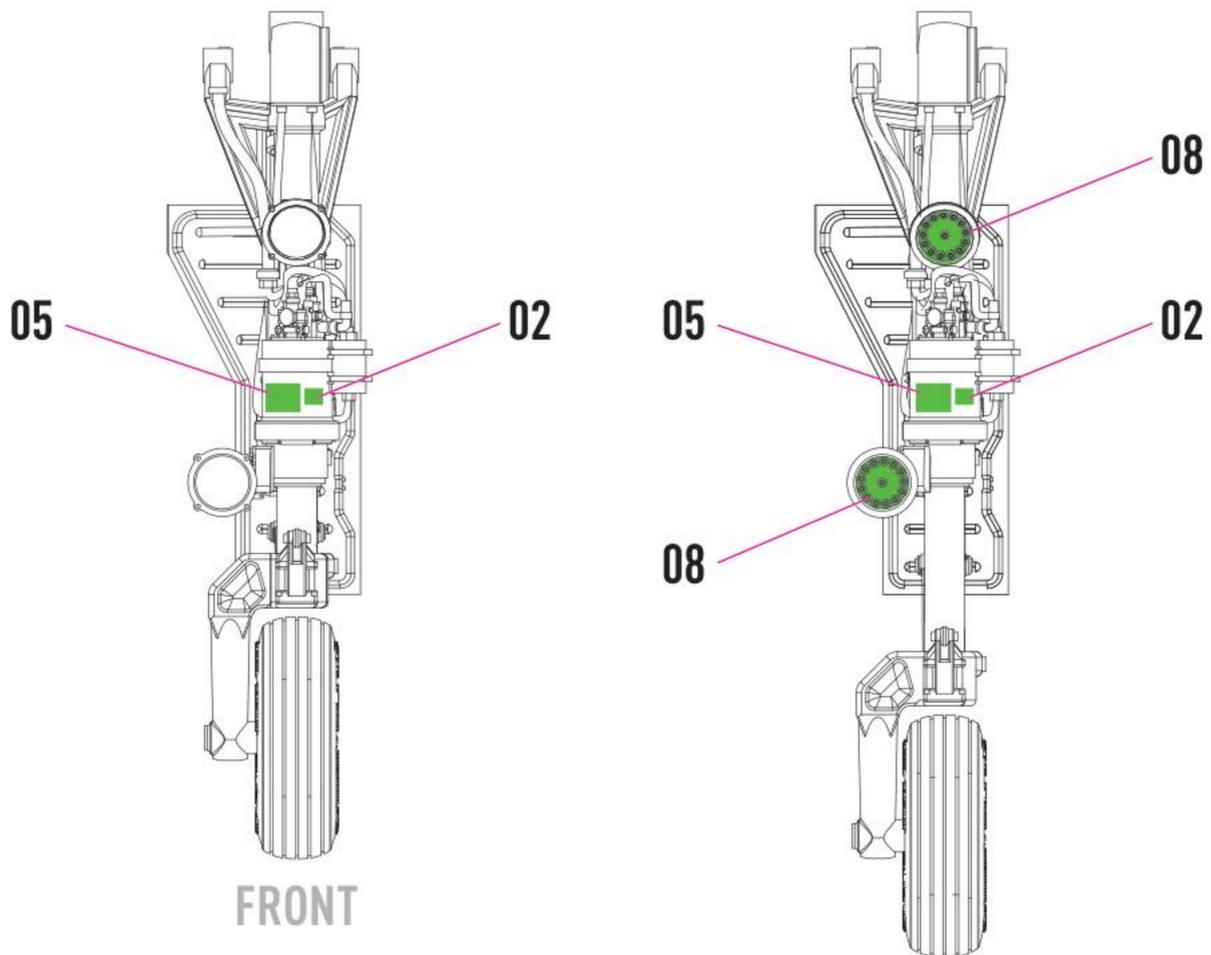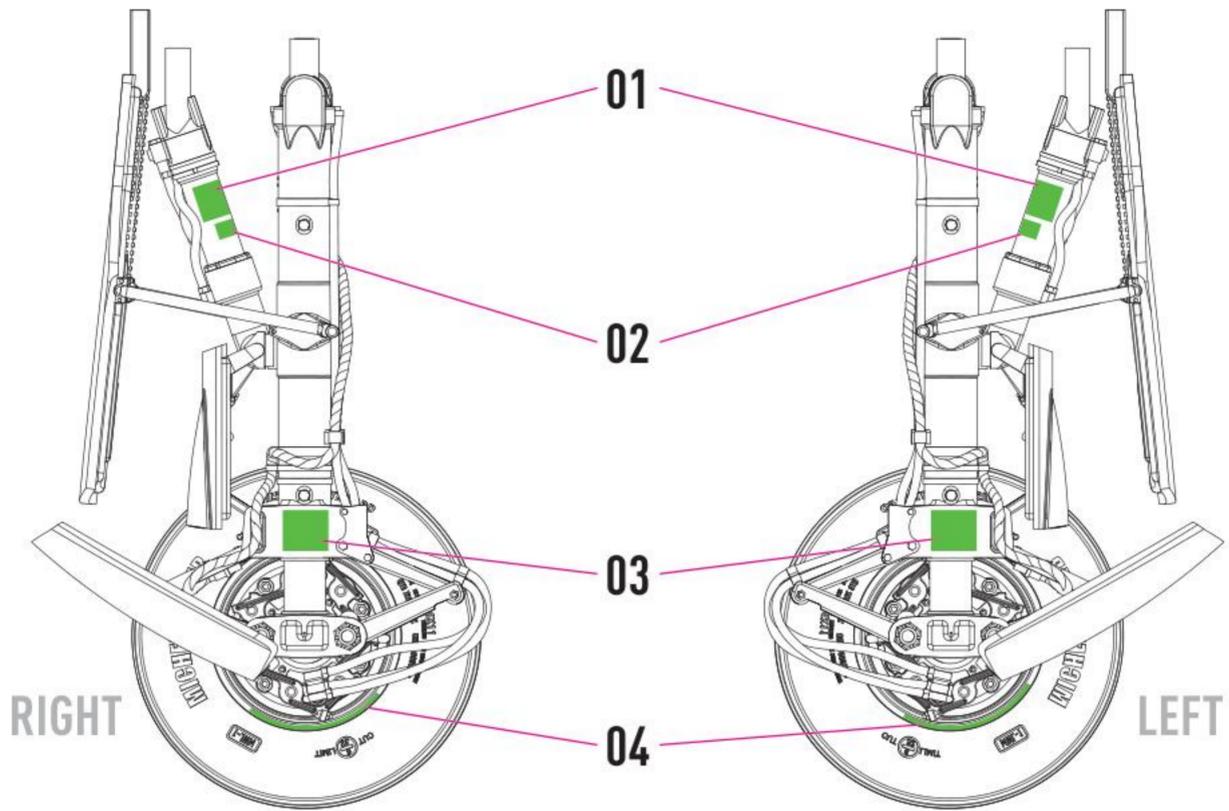

LEFT