


USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL  
FROM SUPPORTS**

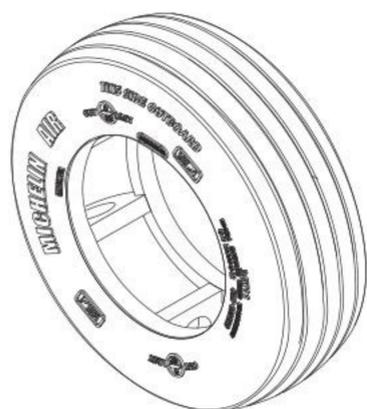


R1 X2



R3 X2




R17

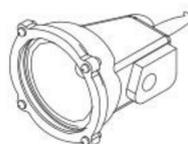

R18



R20

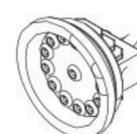

R19




R22




R21




R23

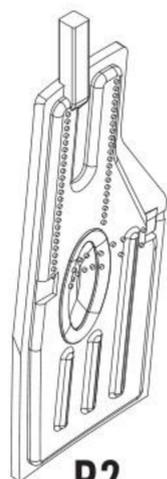


R2

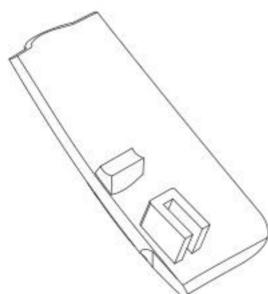


R4

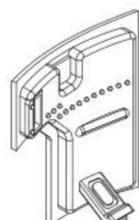


R5

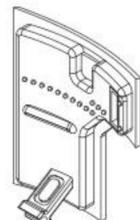


R15

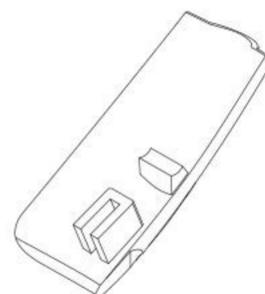

R14

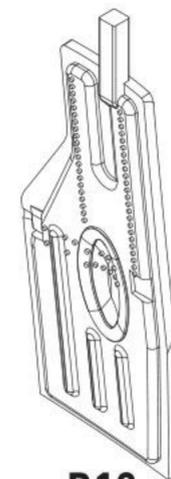

R13

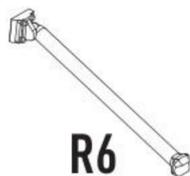


R6




R7




F1 X2

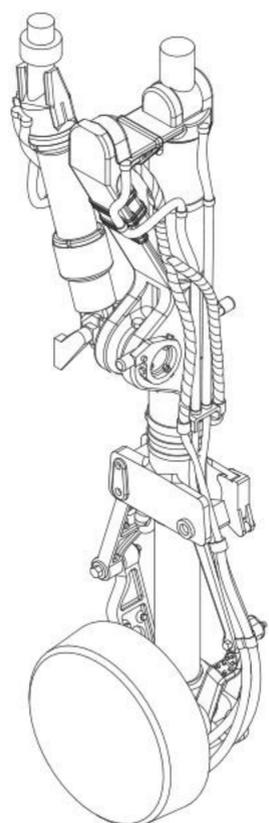


R8

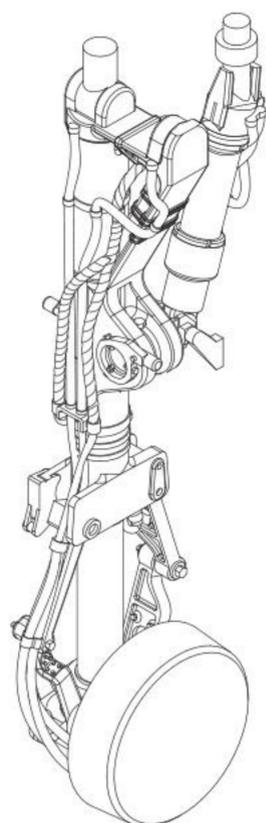

R9

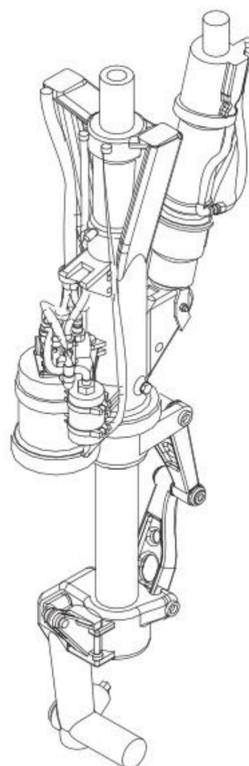


R10

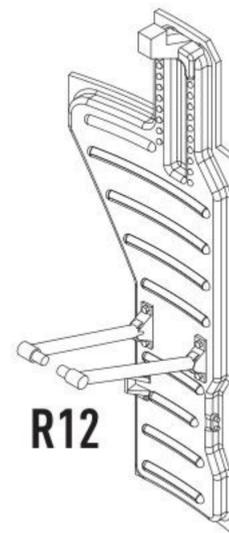

R12




R11

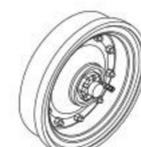


R16


1

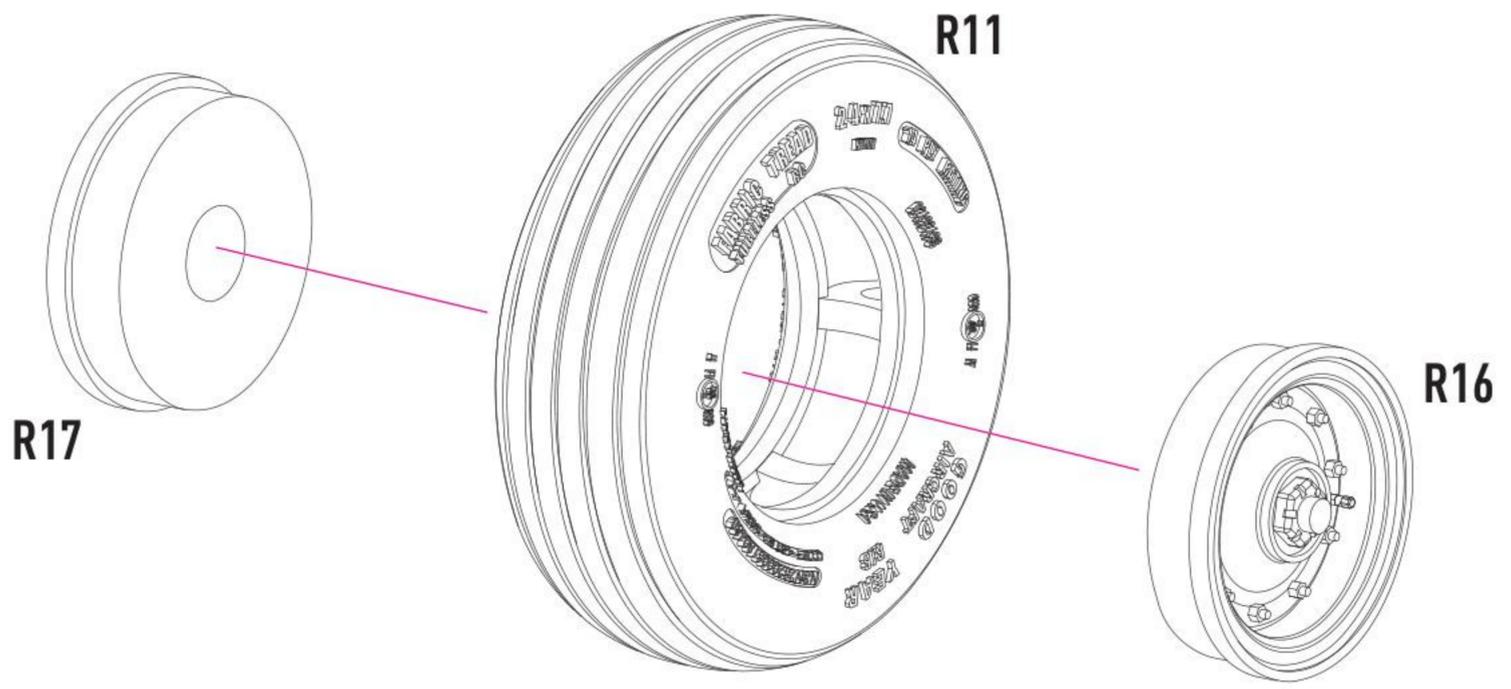


2

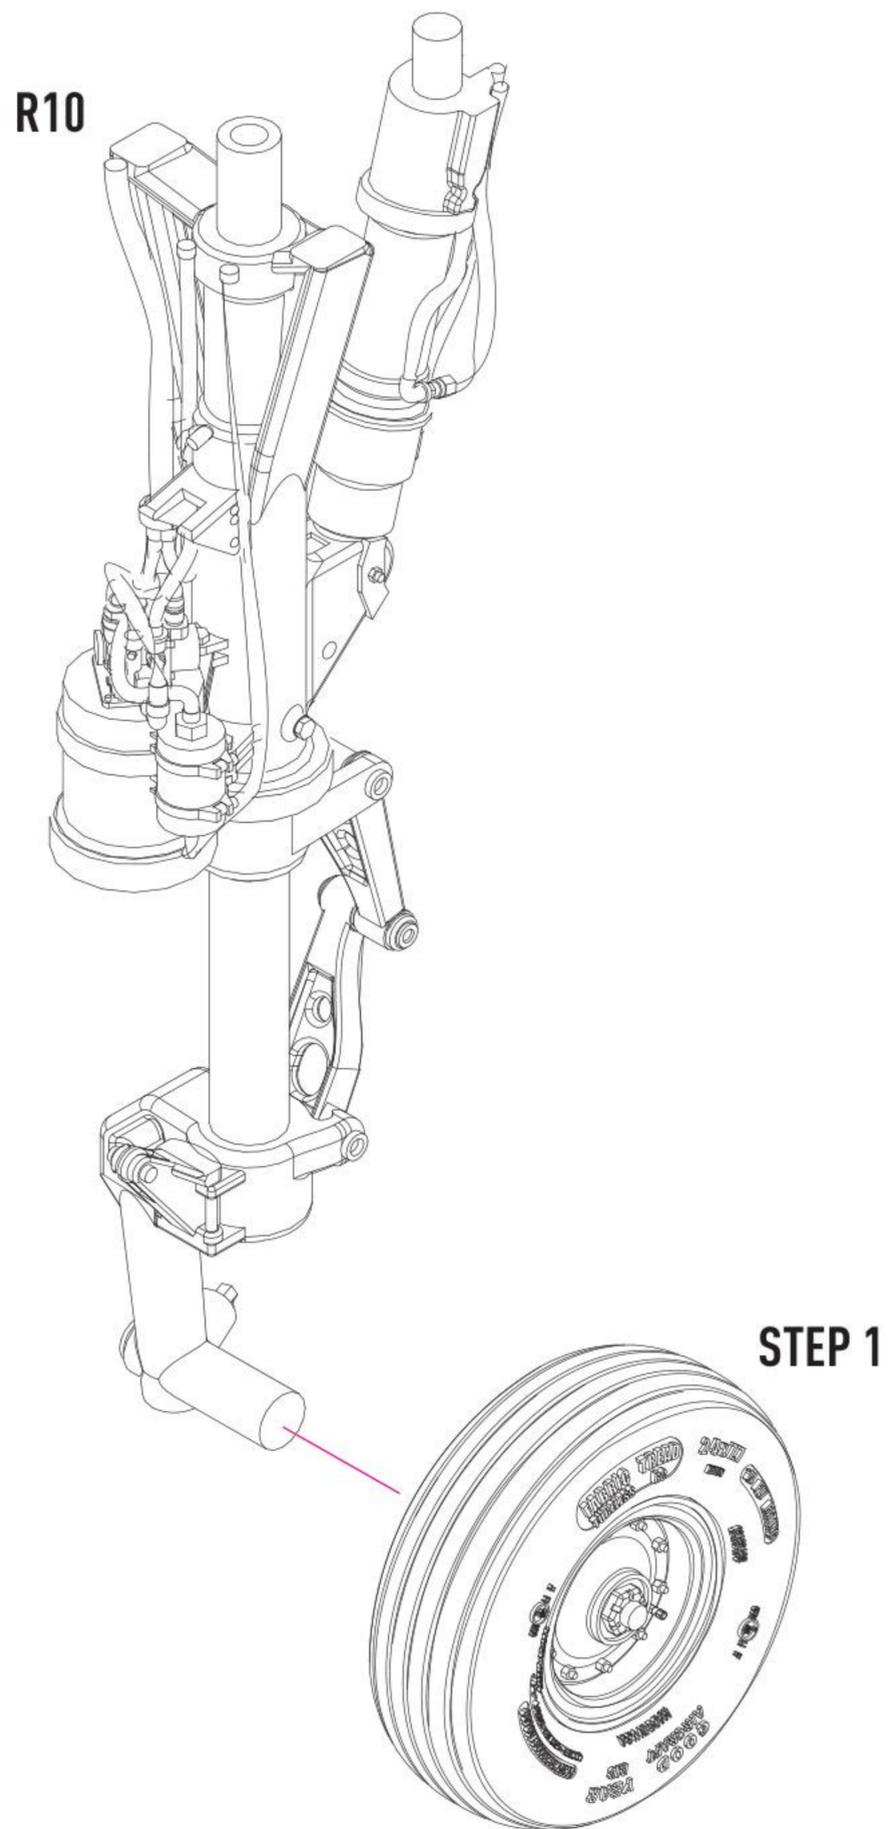

3

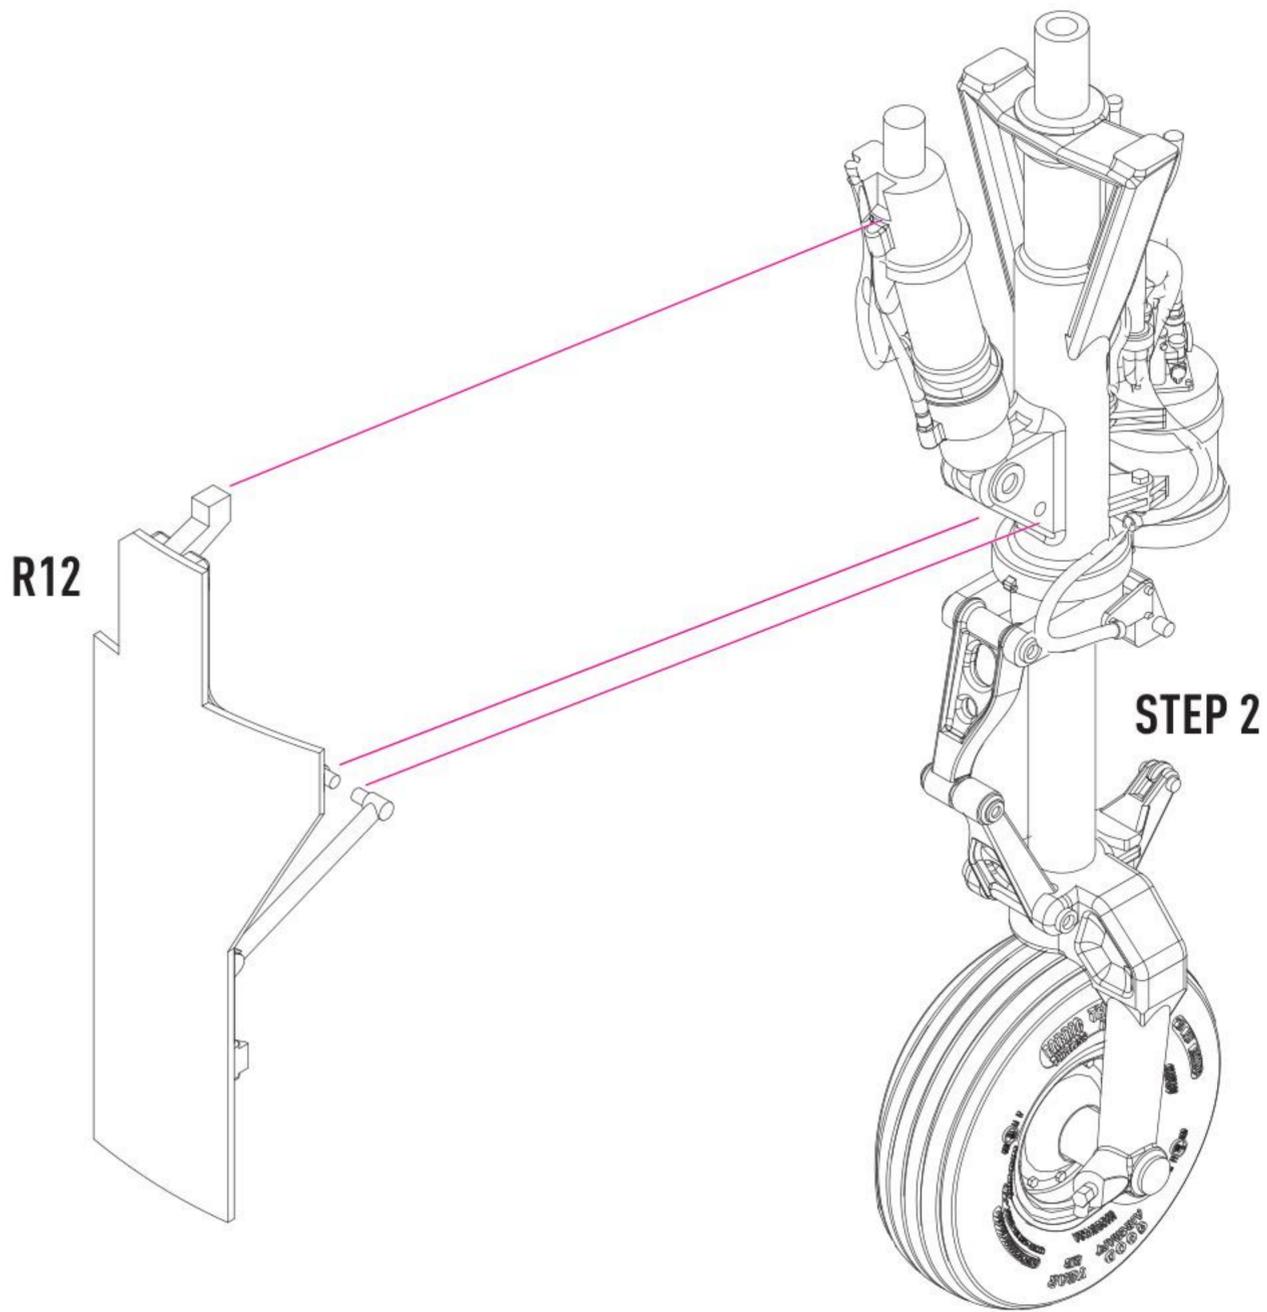

4

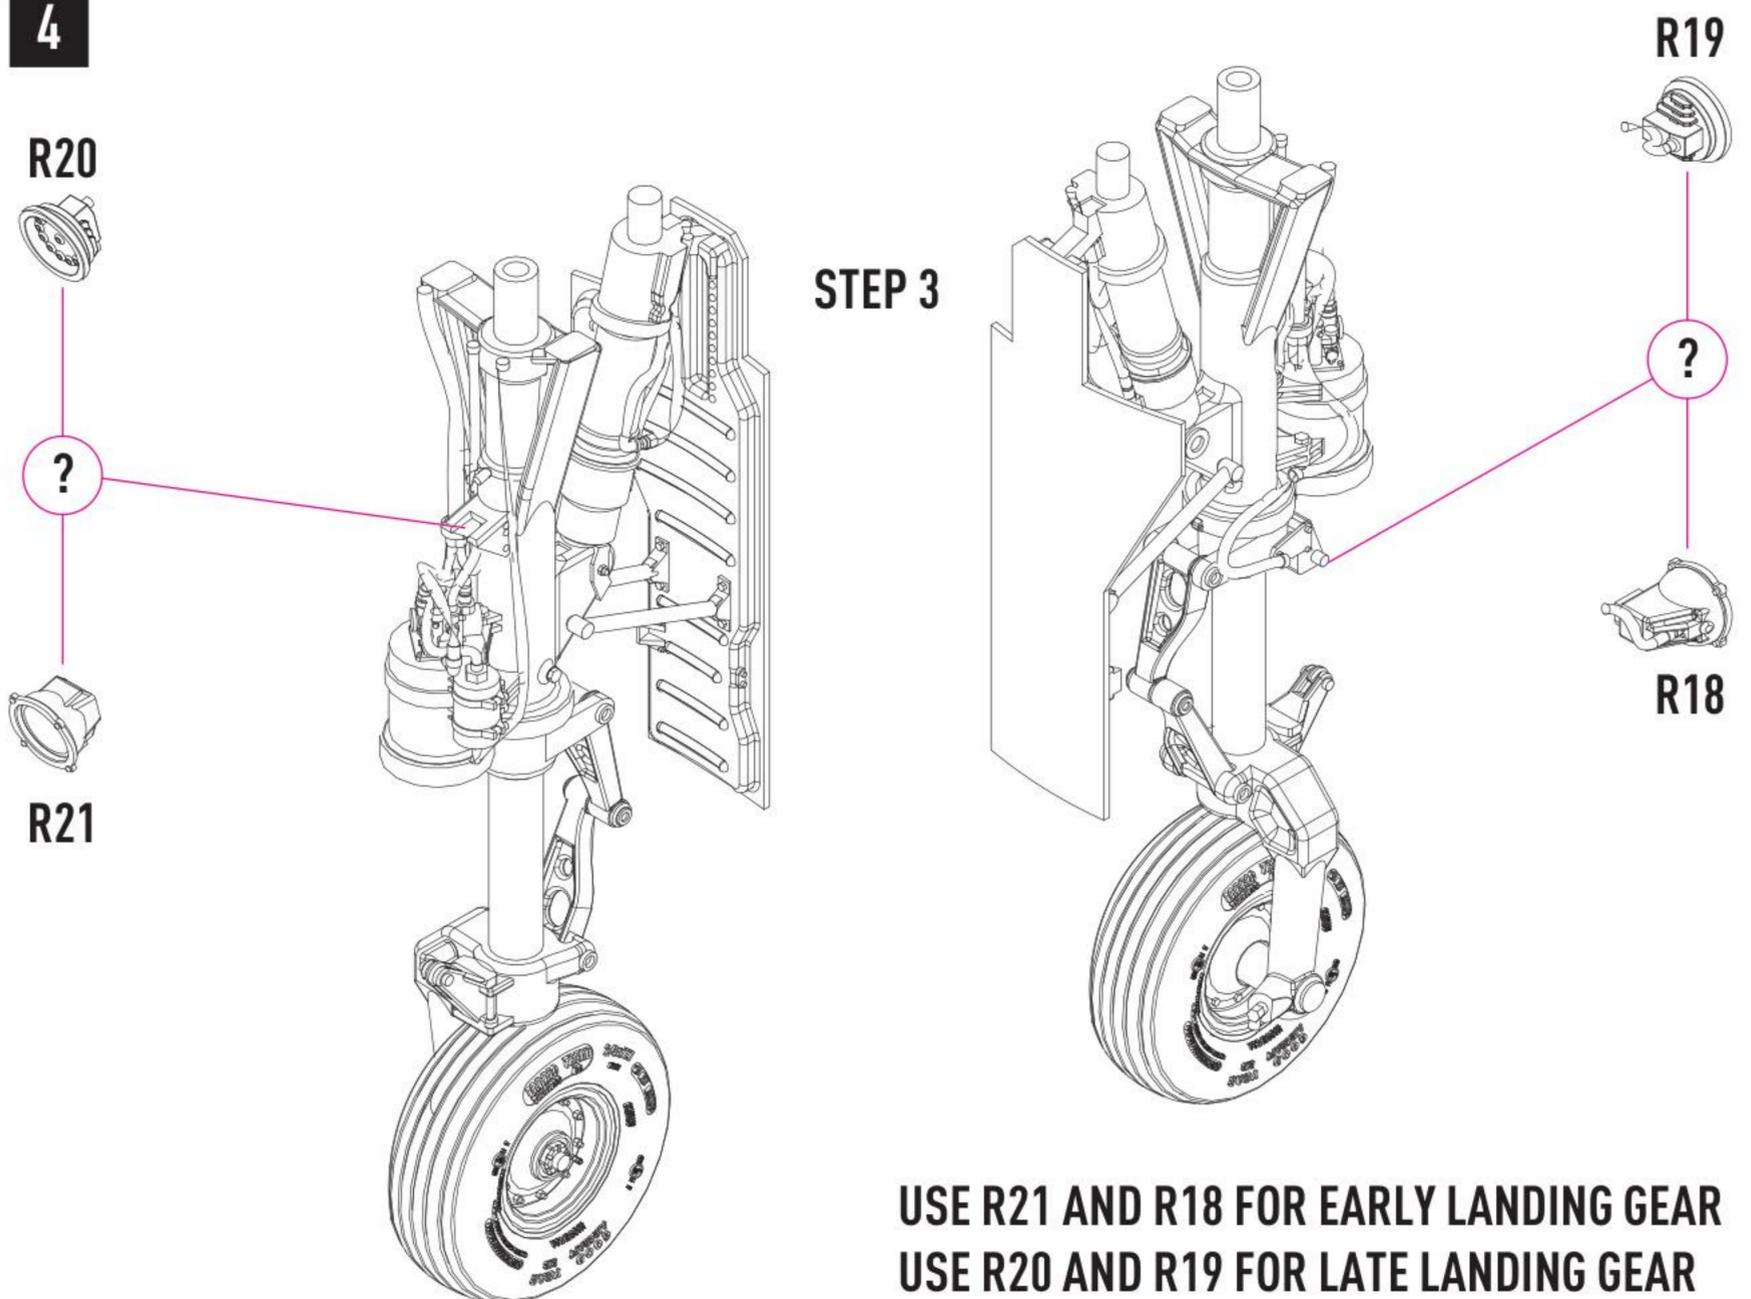



**USE R21 AND R18 FOR EARLY LANDING GEAR  
USE R20 AND R19 FOR LATE LANDING GEAR**

**5**

**STEP 4**

**F1**


**F1**

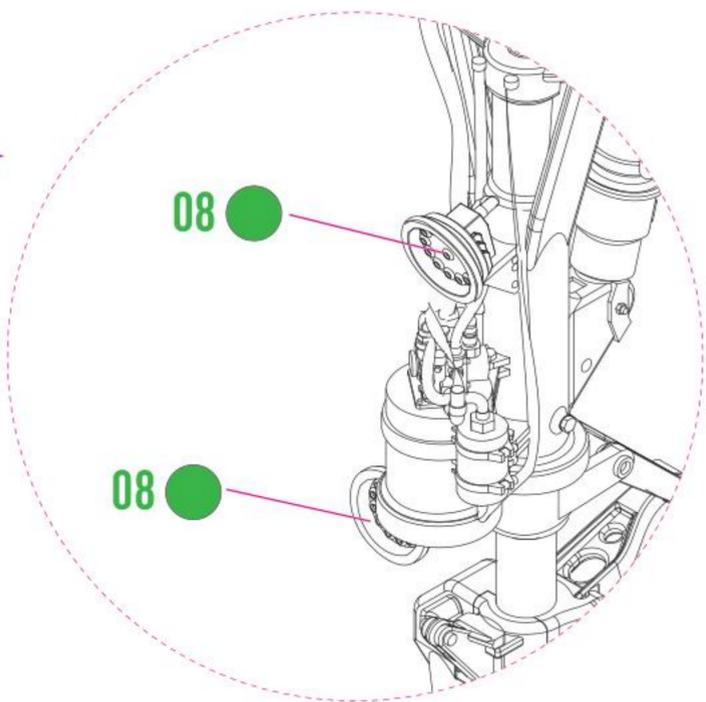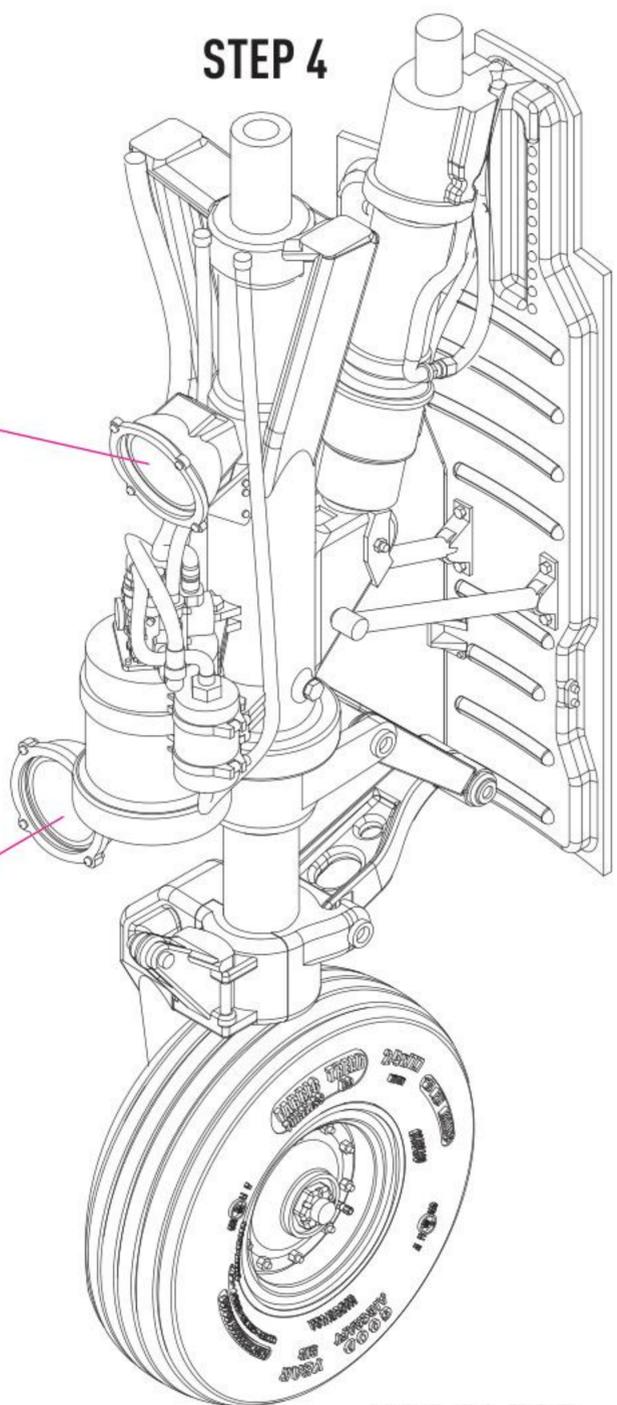


**USE DECAL 08 FOR LATE LANDING GEAR**

**USE F1 FOR EARLY LANDING GEAR**

**6 X2**


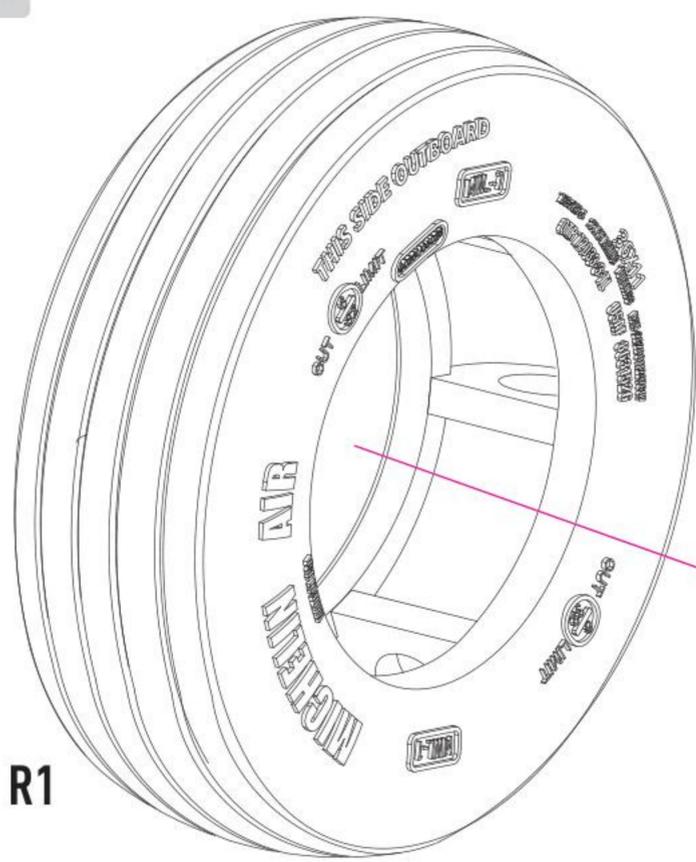


**R1**

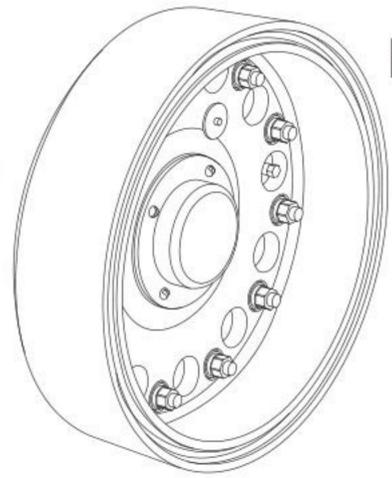

**R3**

7

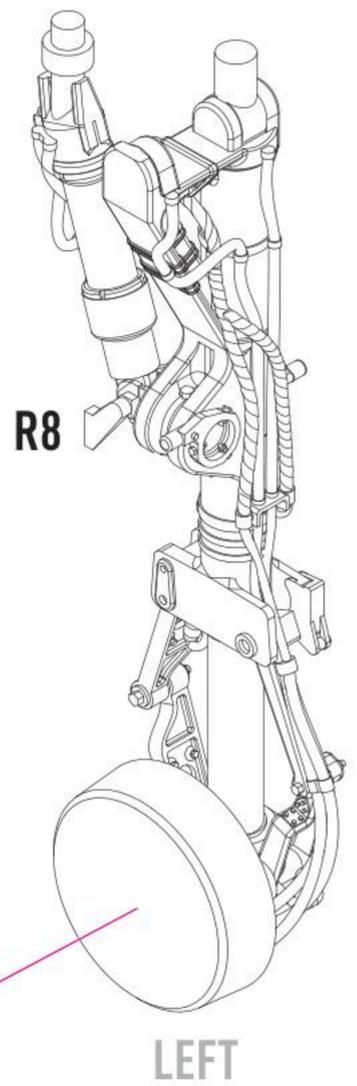
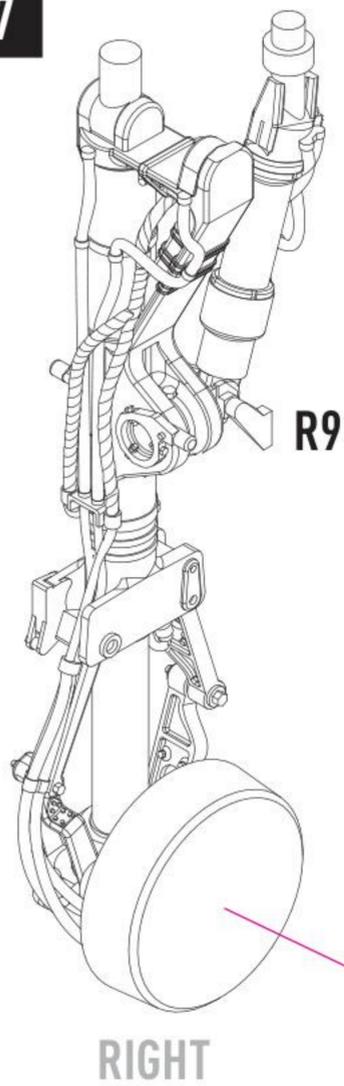


STEP 6

STEP 6

RIGHT



LEFT


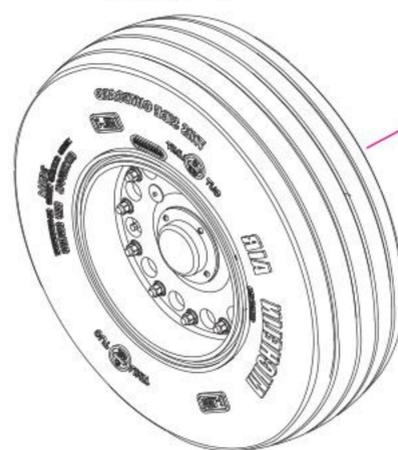
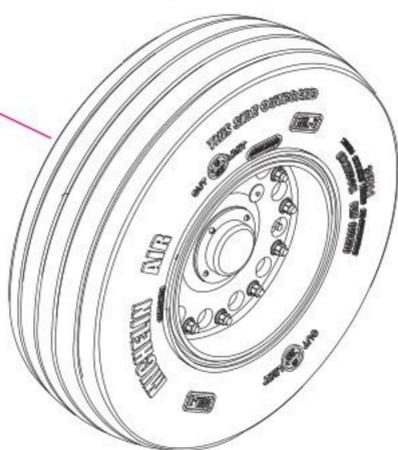





8

STEP 7  
RIGHT

STEP 7  
LEFT

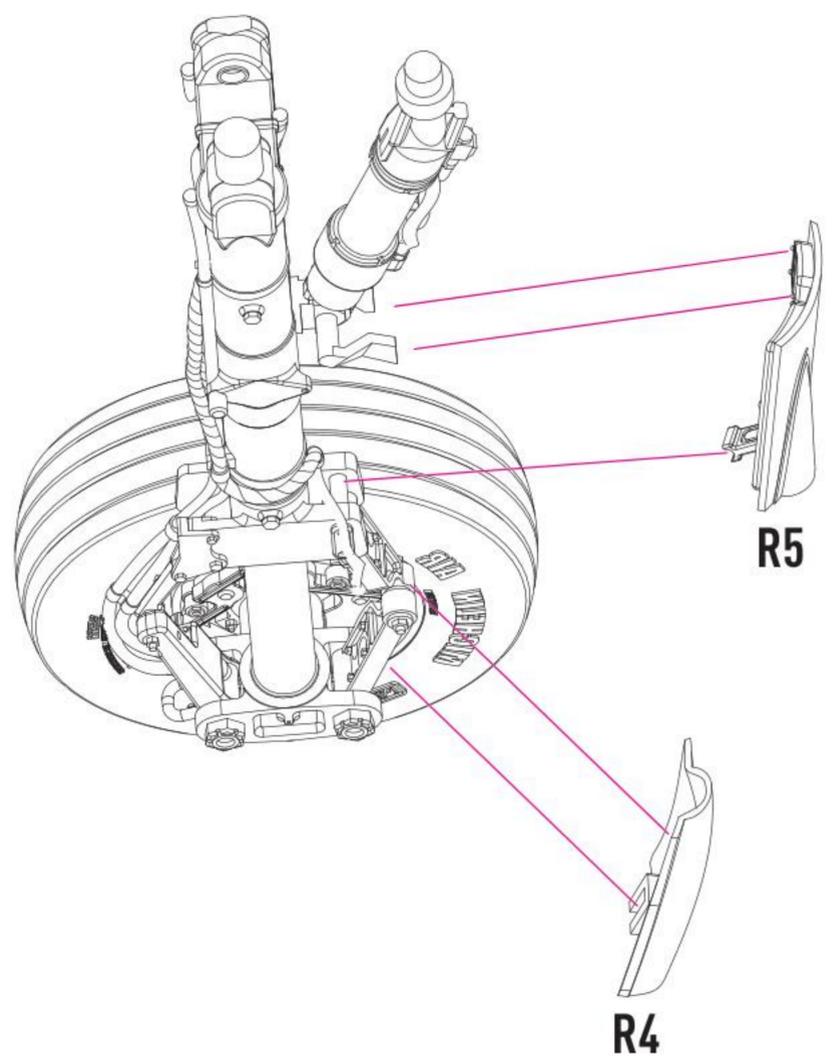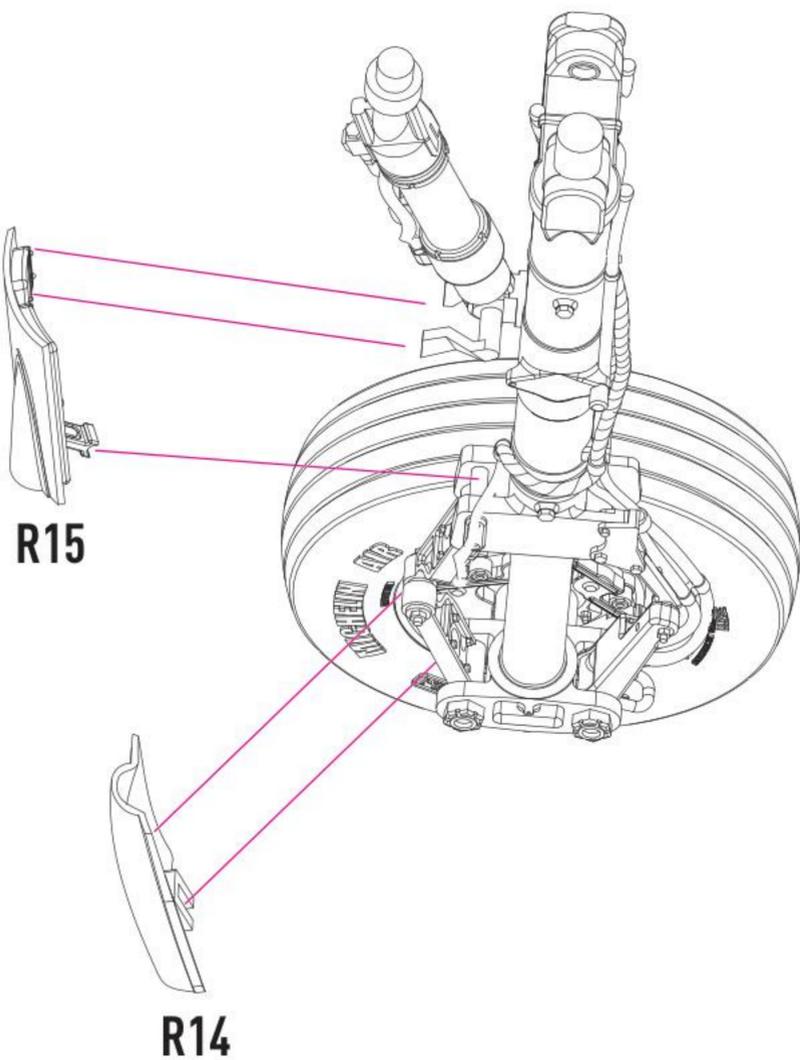

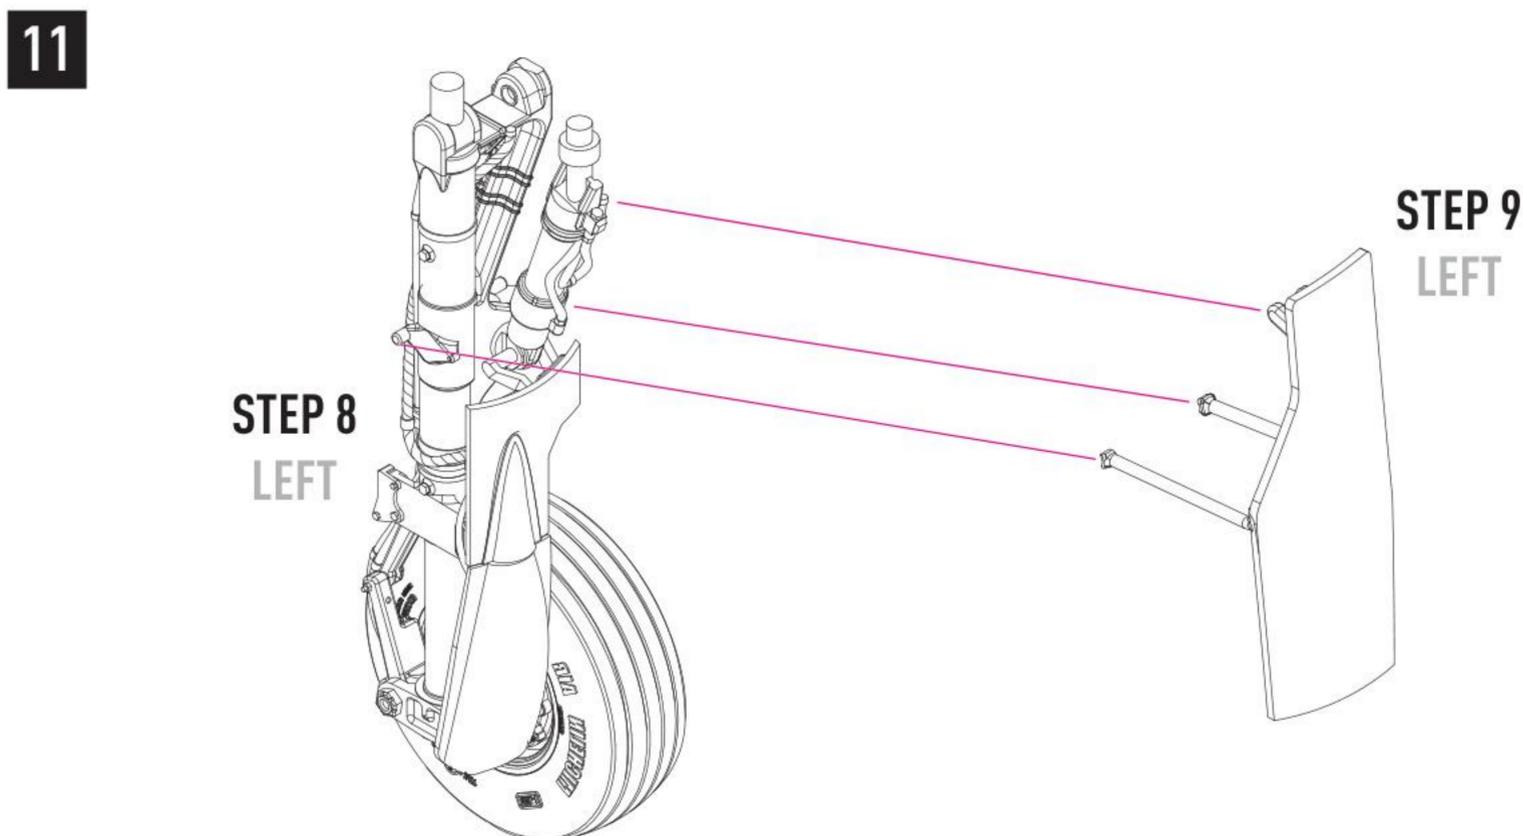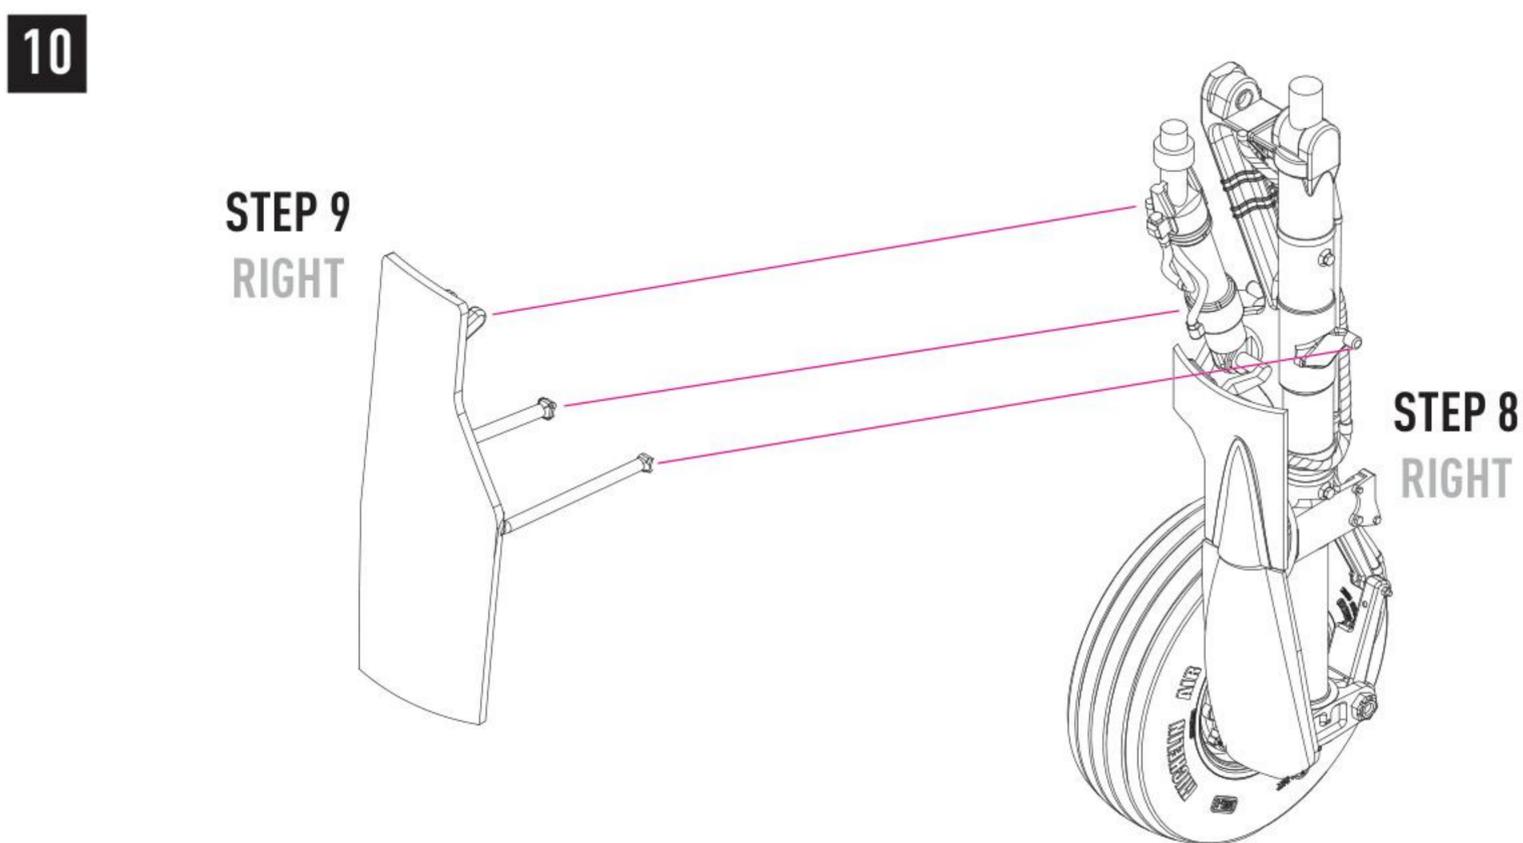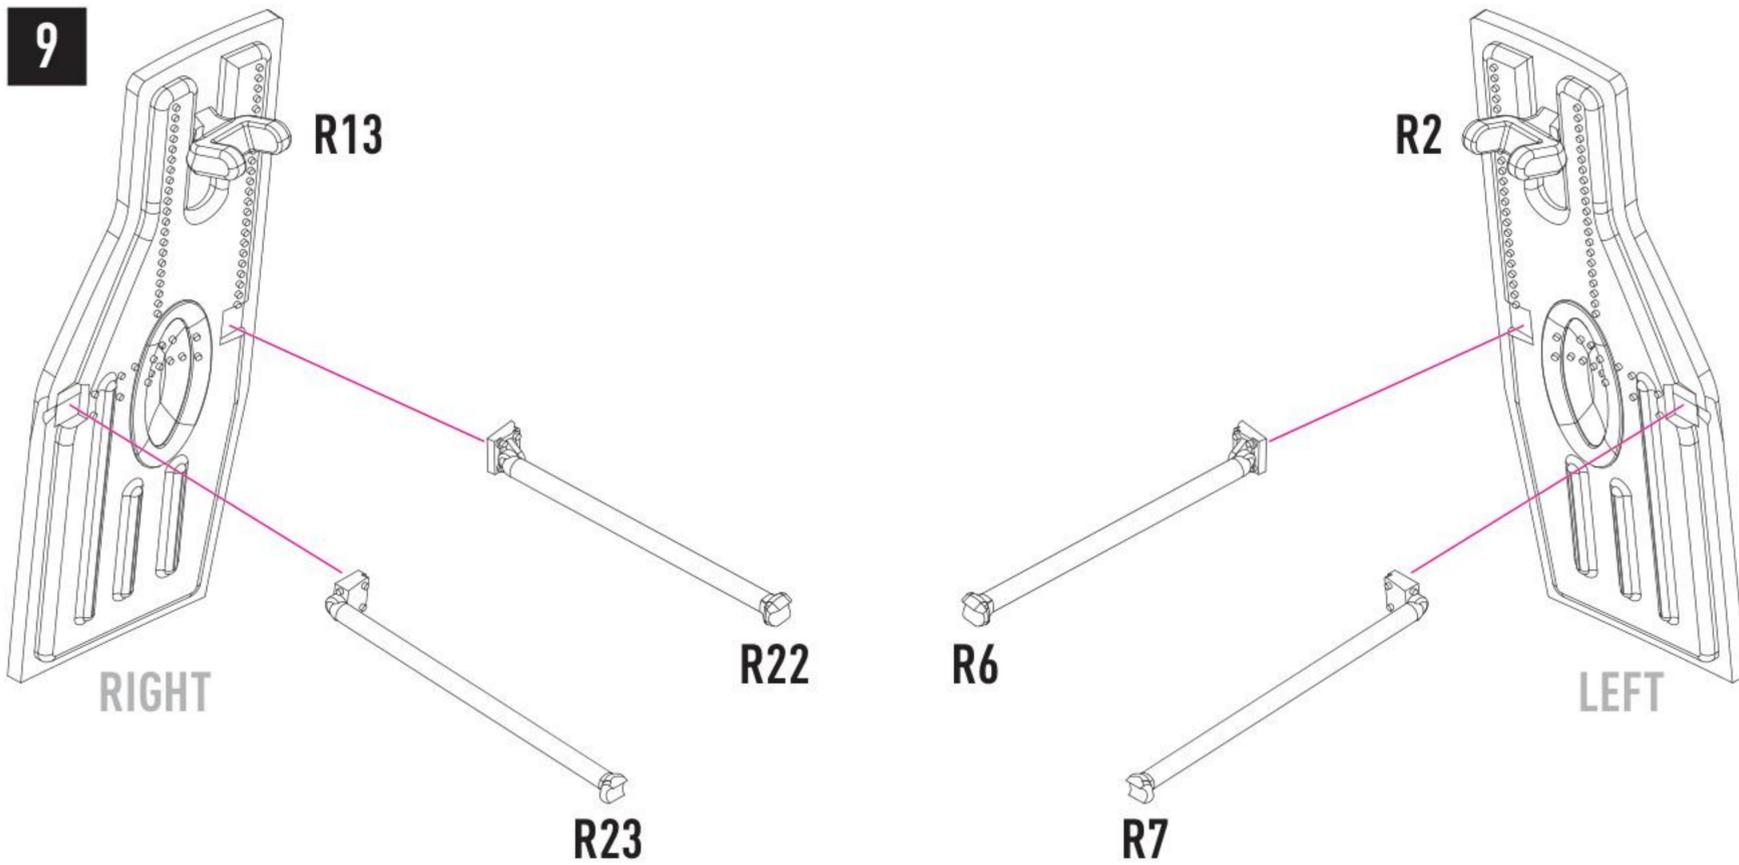

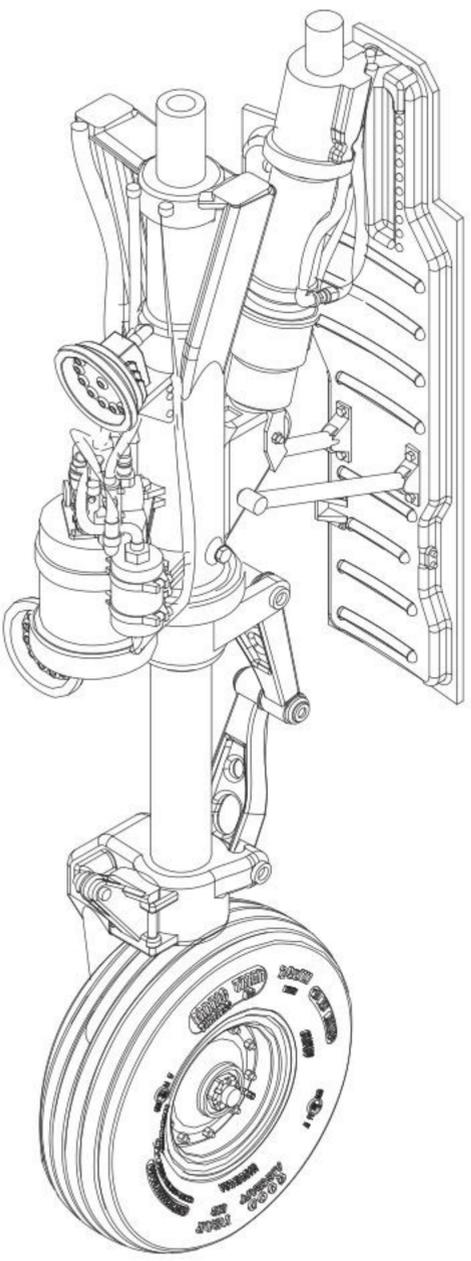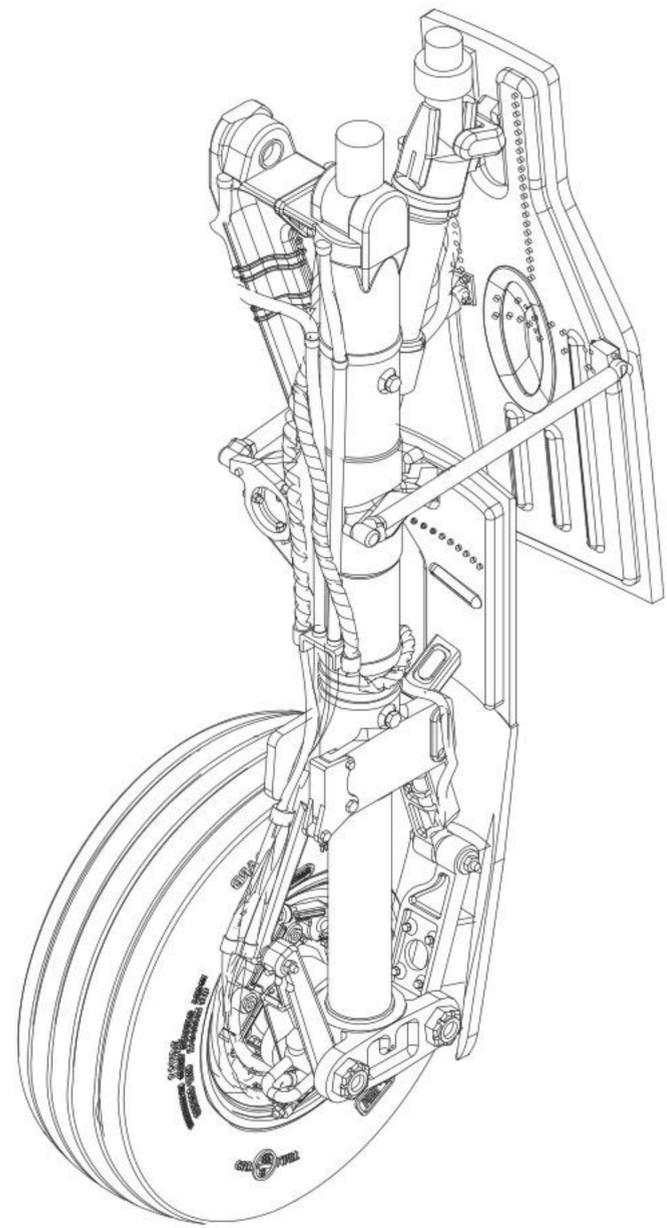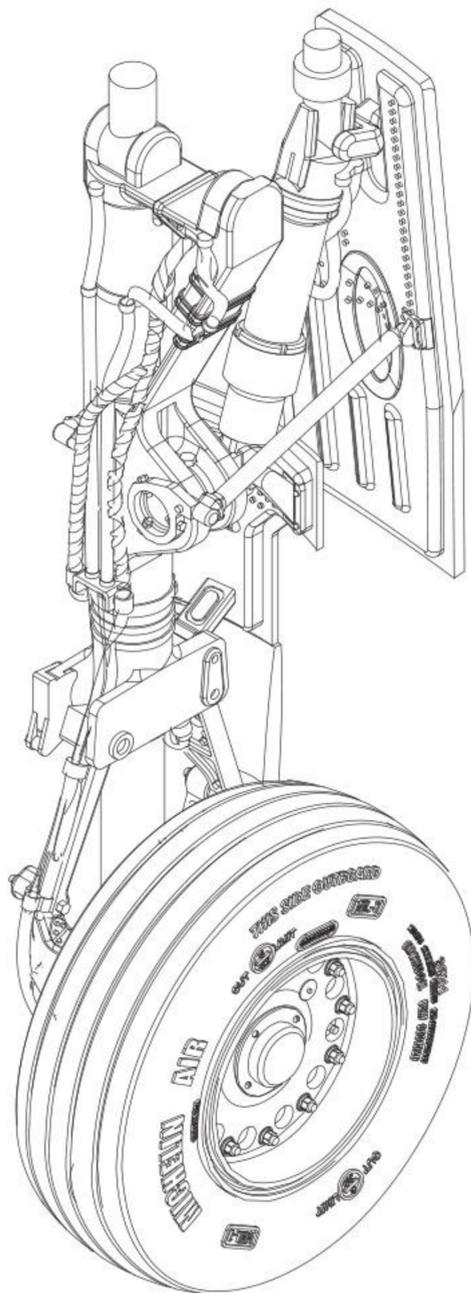

# DECAL INSTRUCTION

