



**DETAILS AFTER REMOVAL
FROM SUPPORTS**

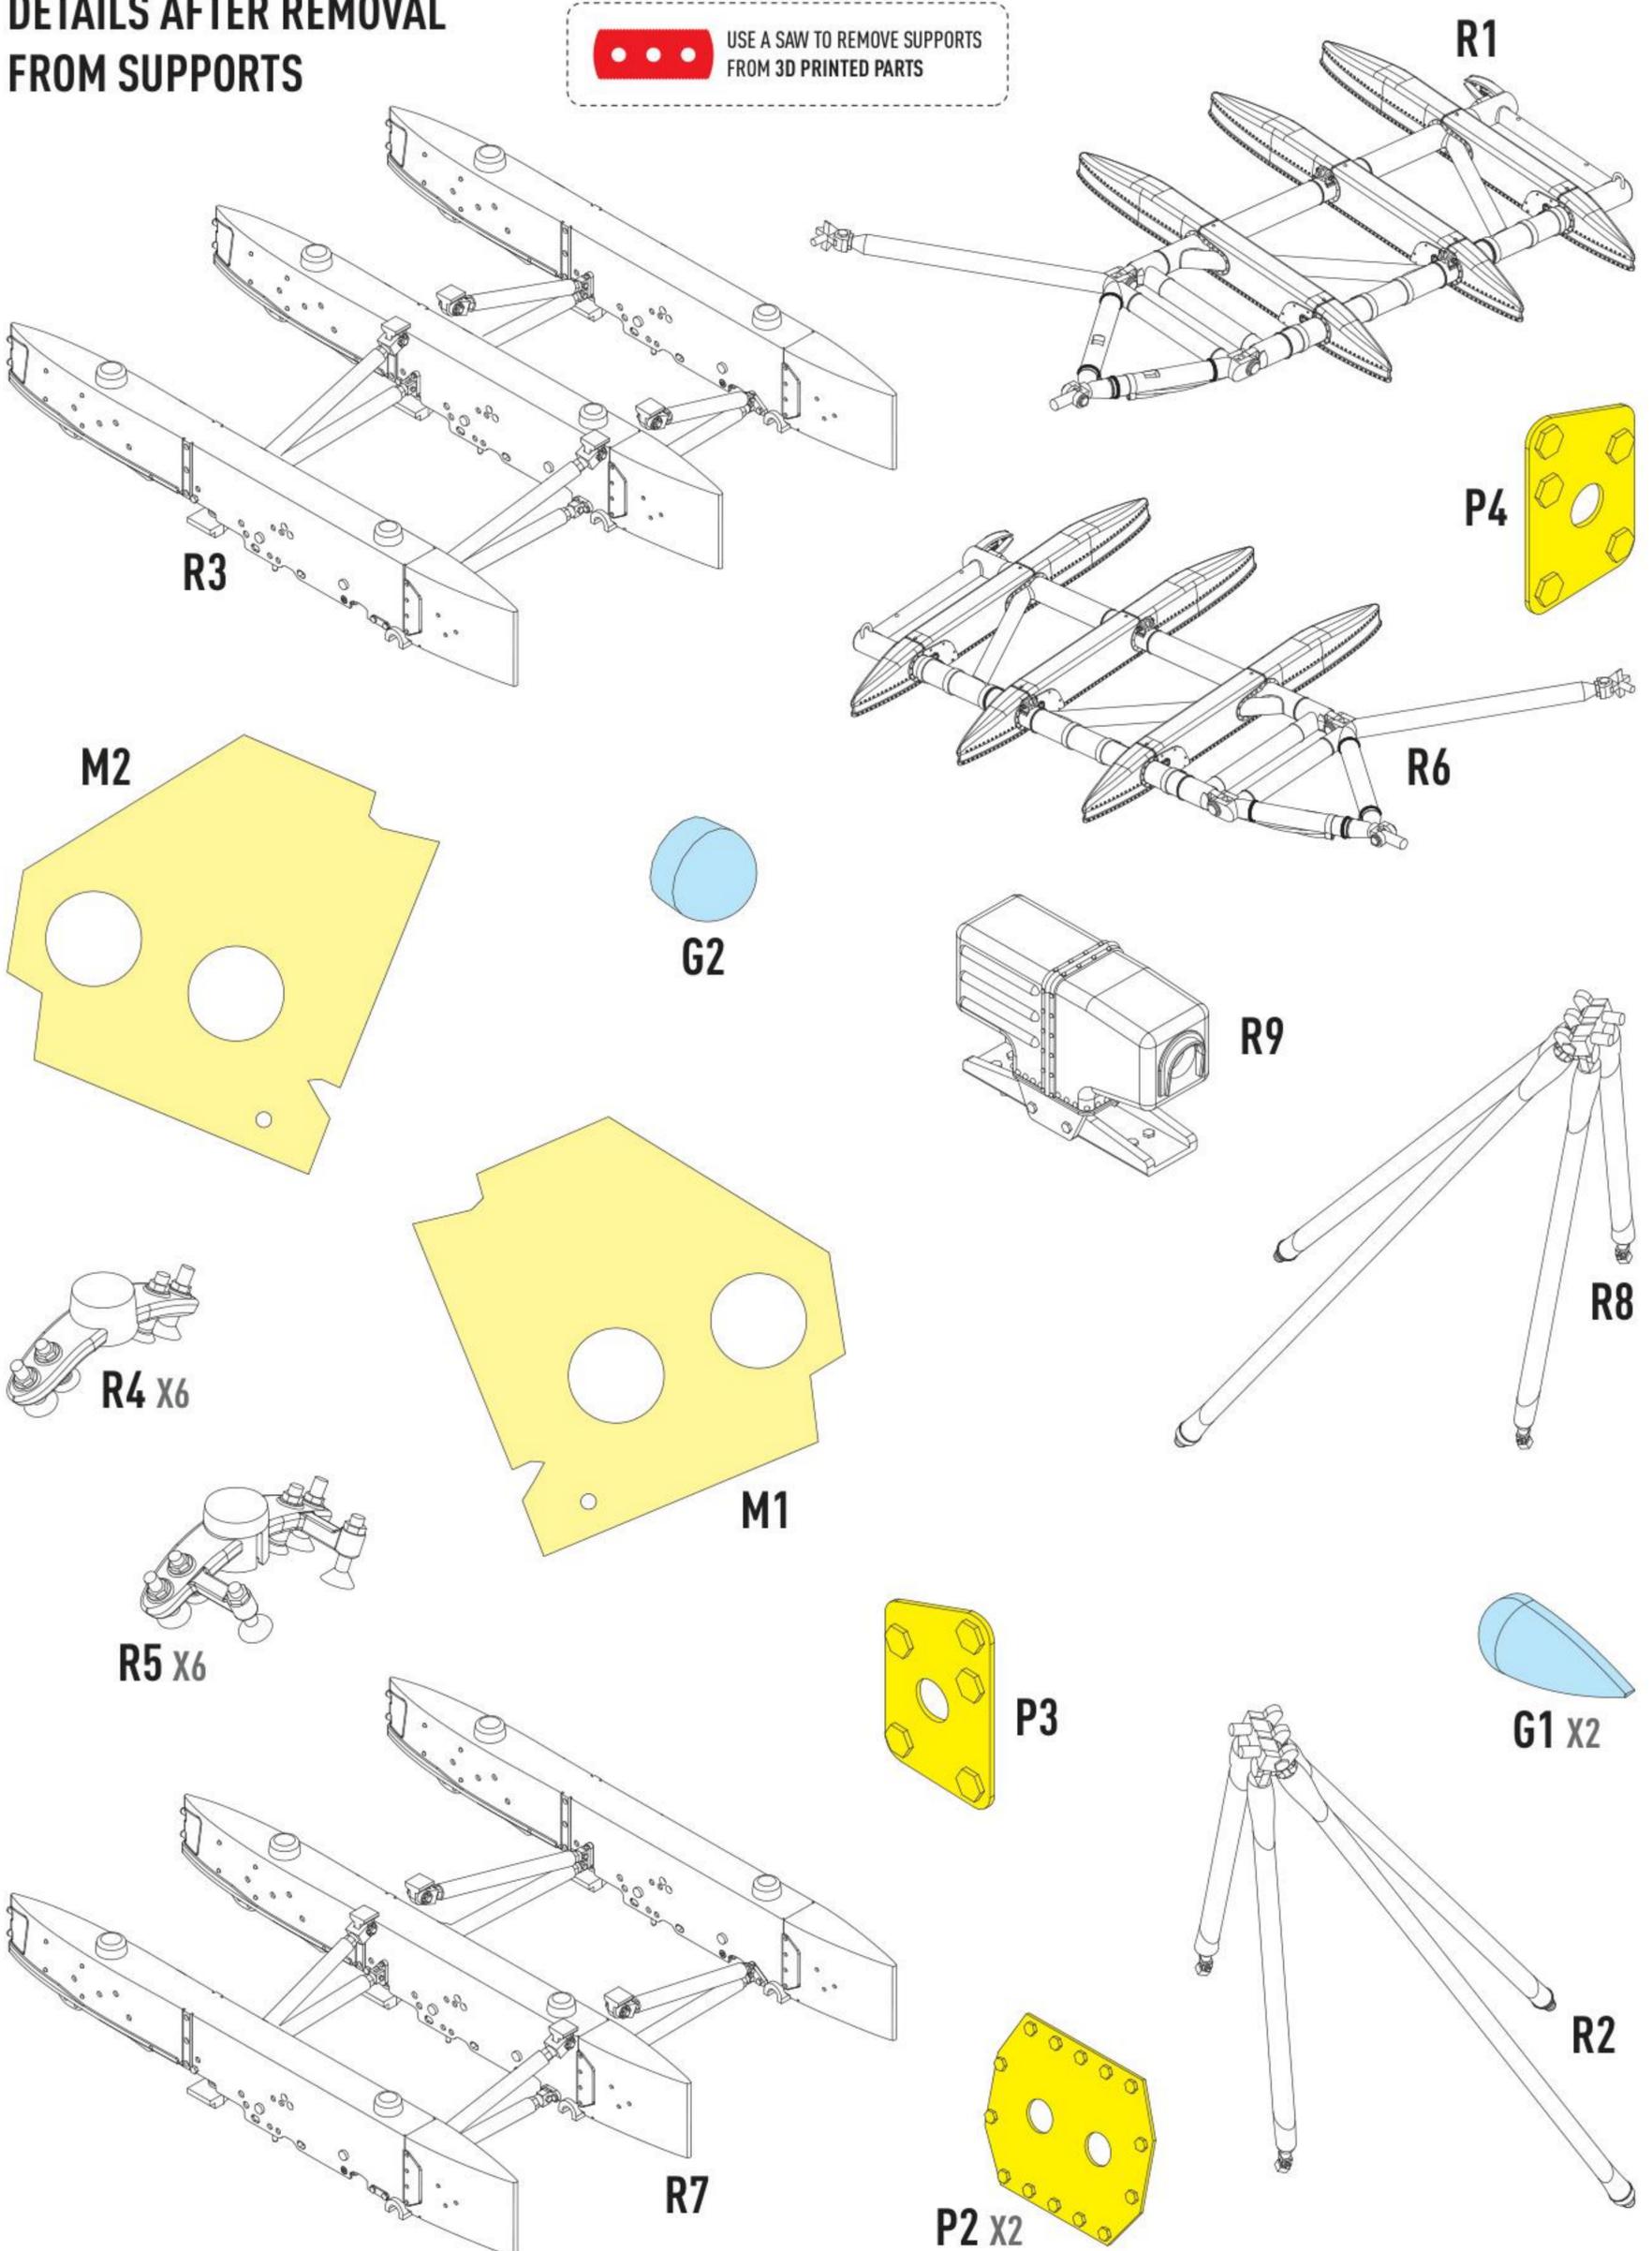


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS



1 LEFT SIDE

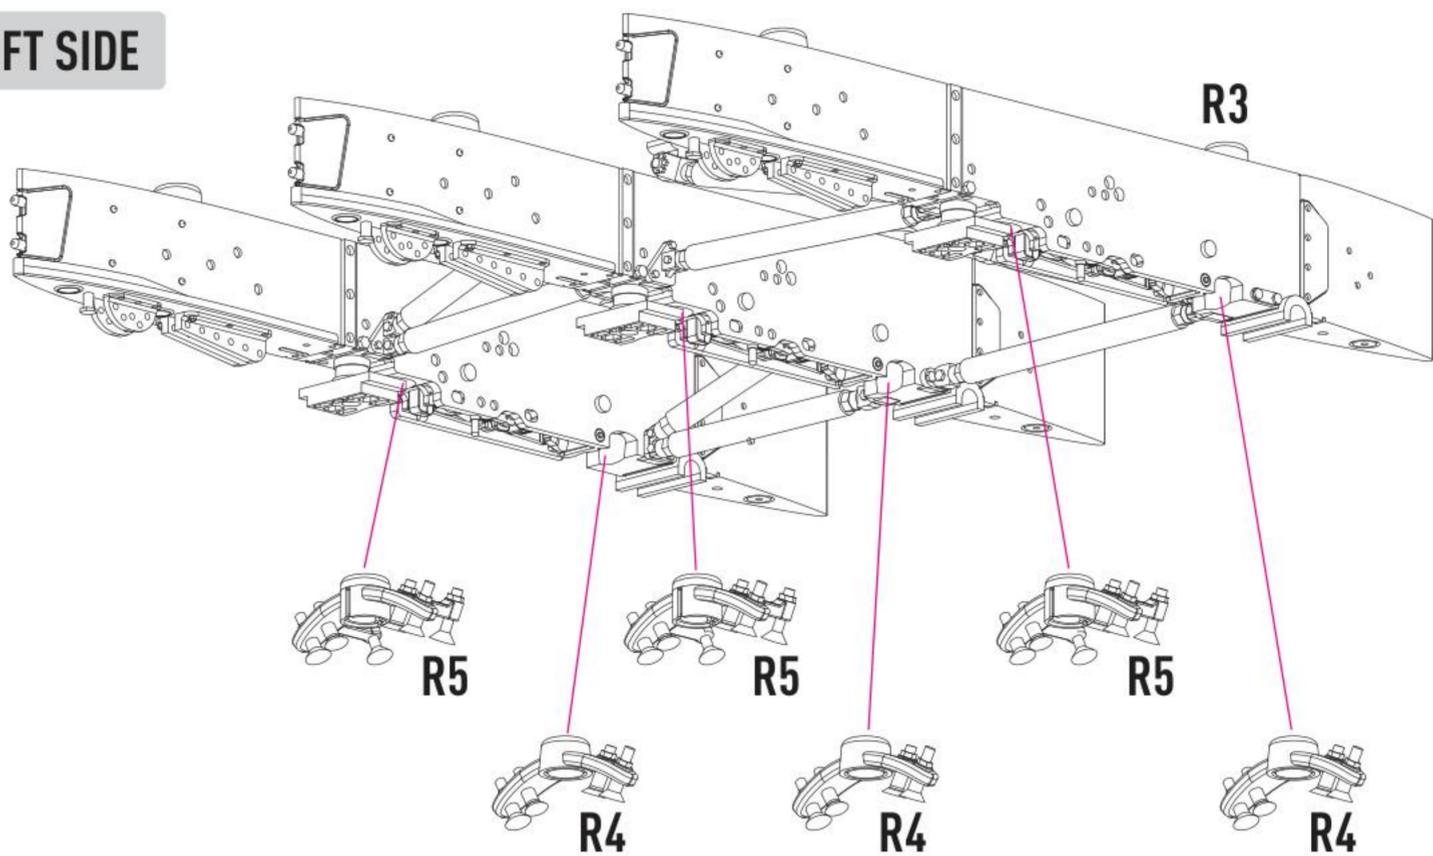


2

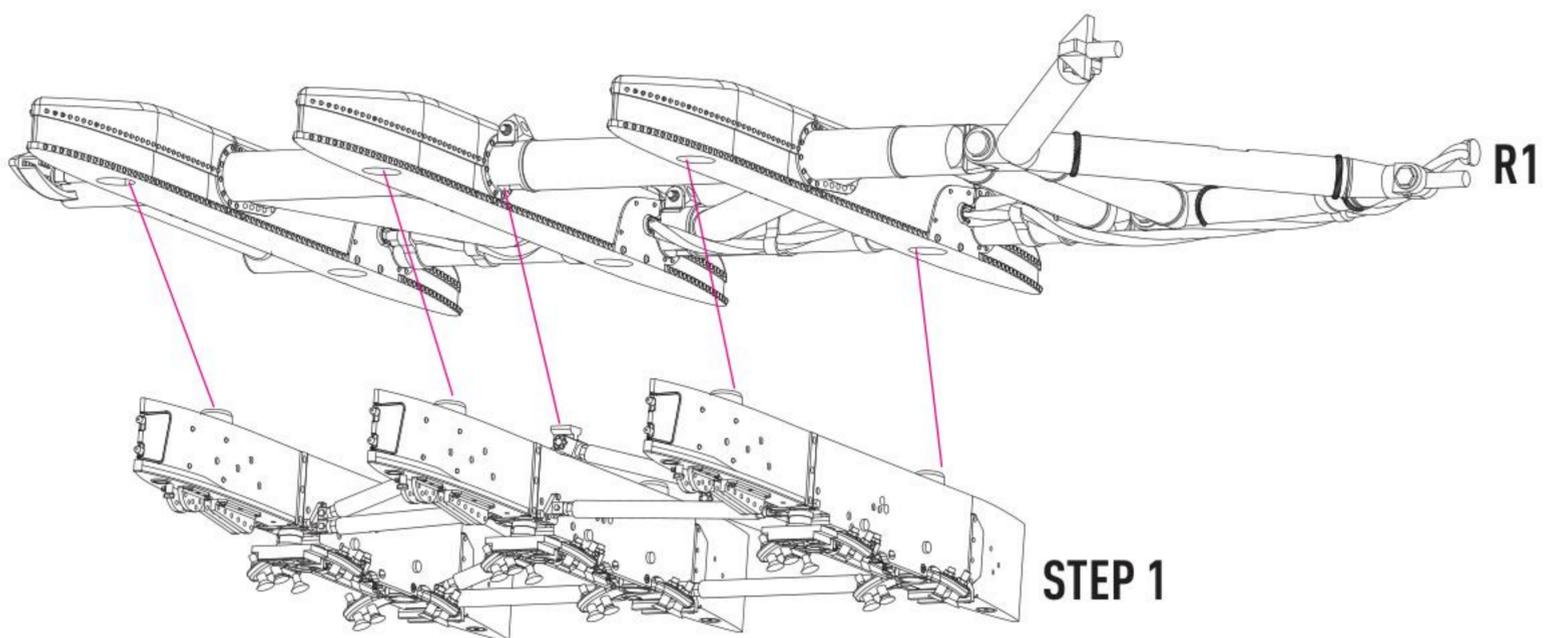


3


BEFORE INSTALLATION, APPLY GLOSS VARNISH ON TRANSPARENT PART

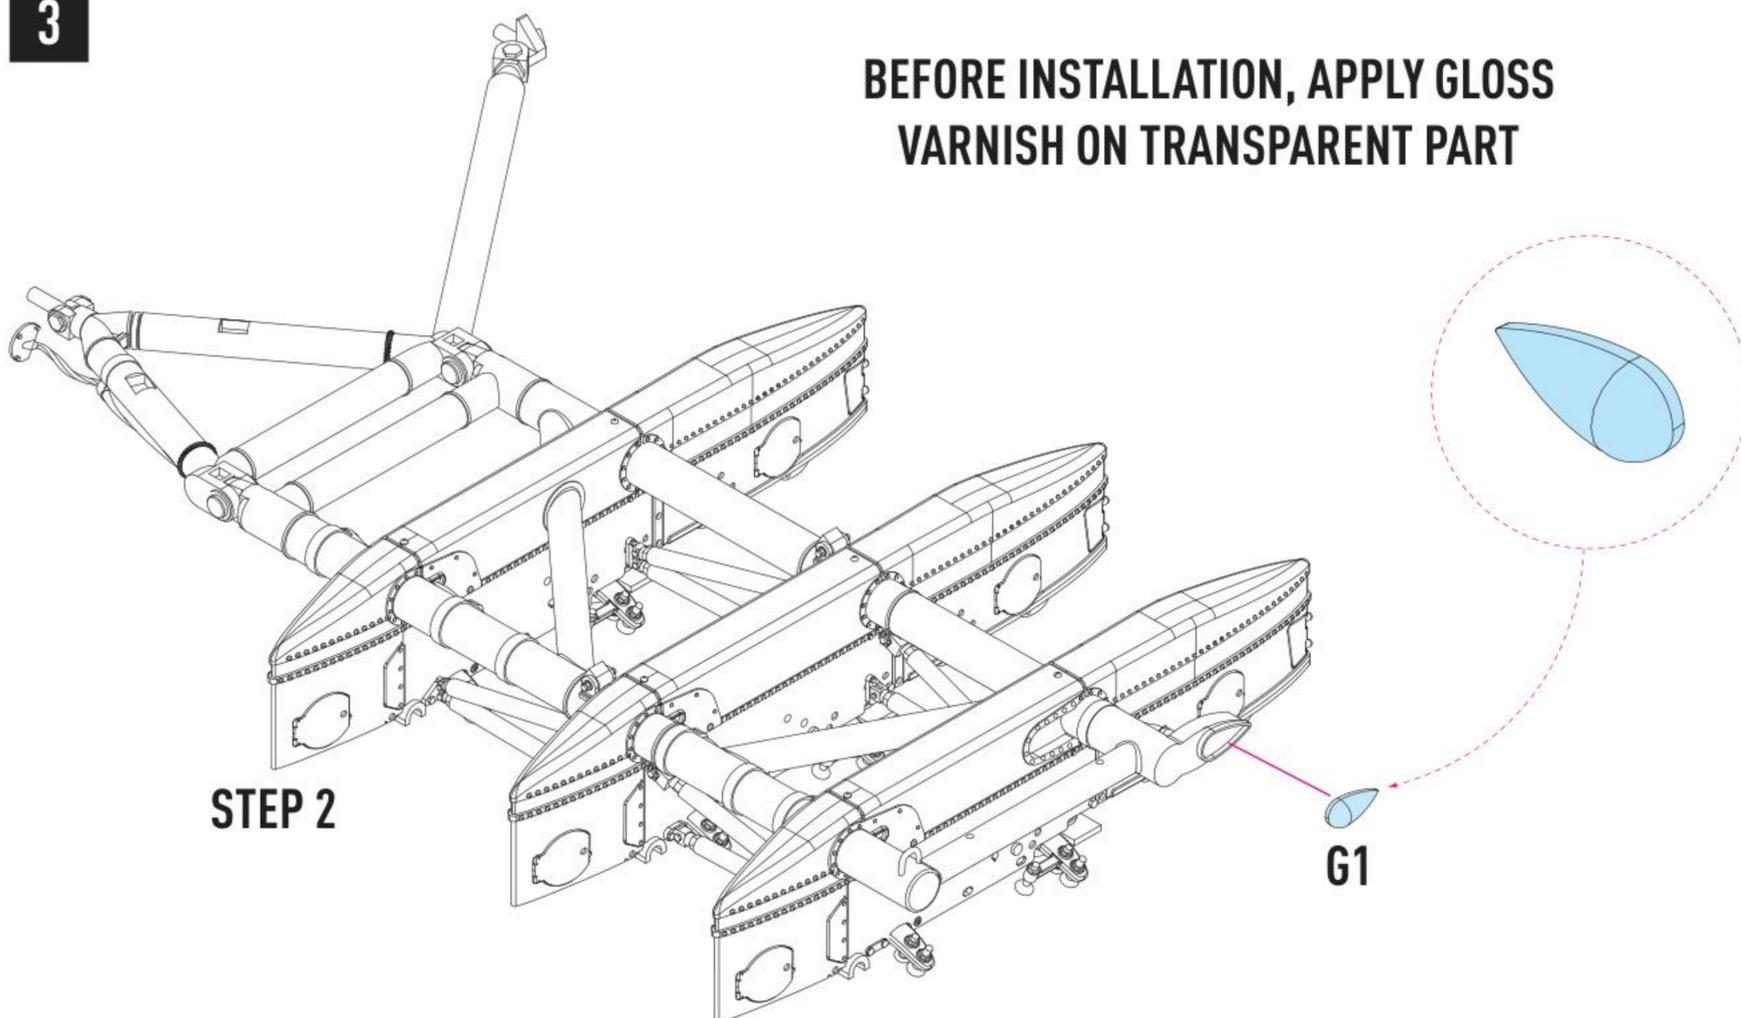

4

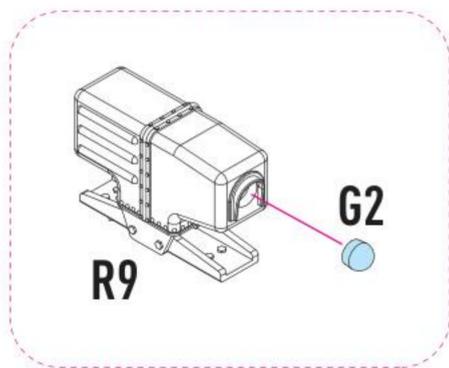


USE PART G2 OR APPLY
A DROP OF UV-GLUE

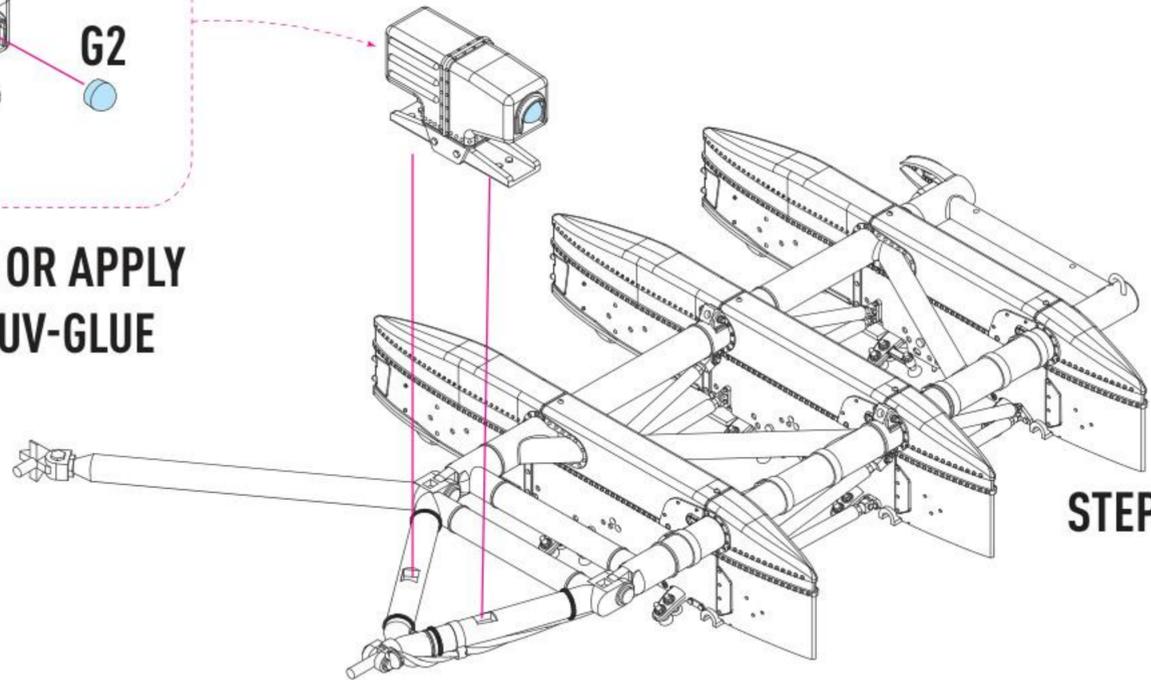

STEP 3


5

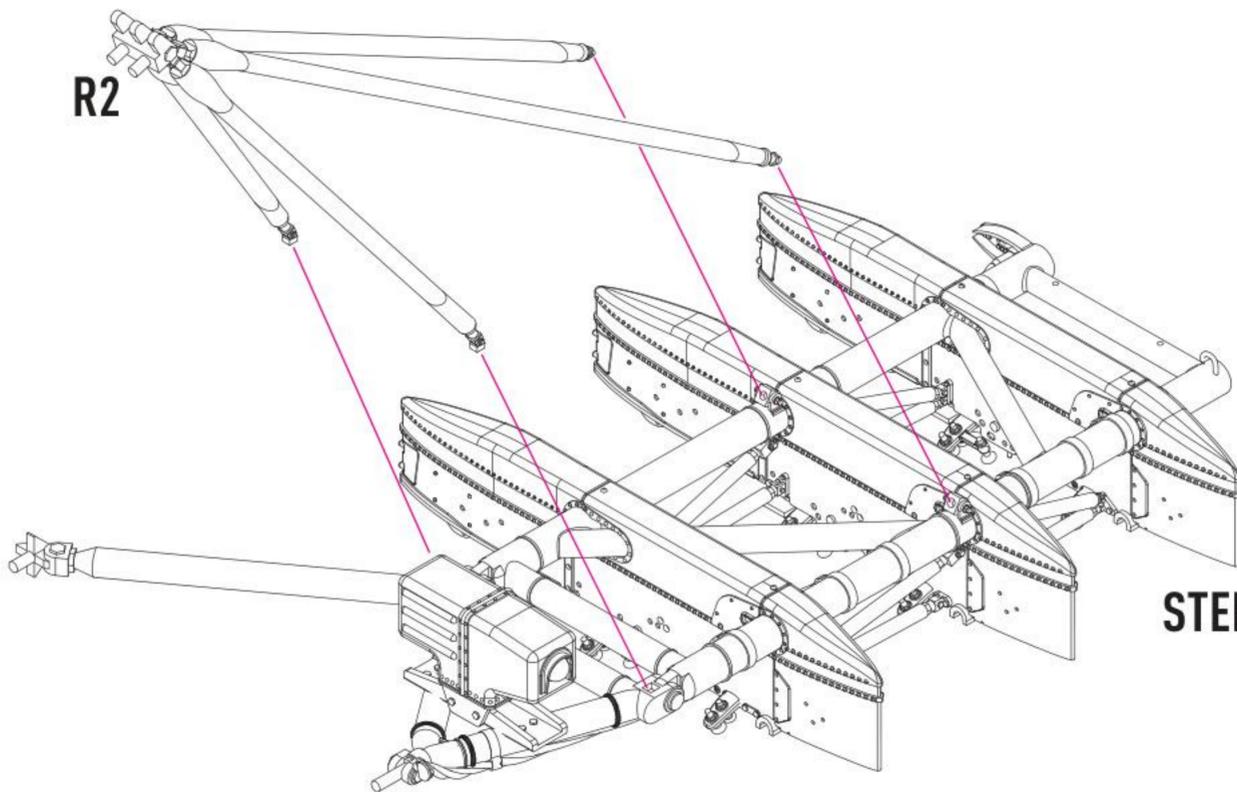

STEP 4

6

PART FROM
TRUMPETER KIT

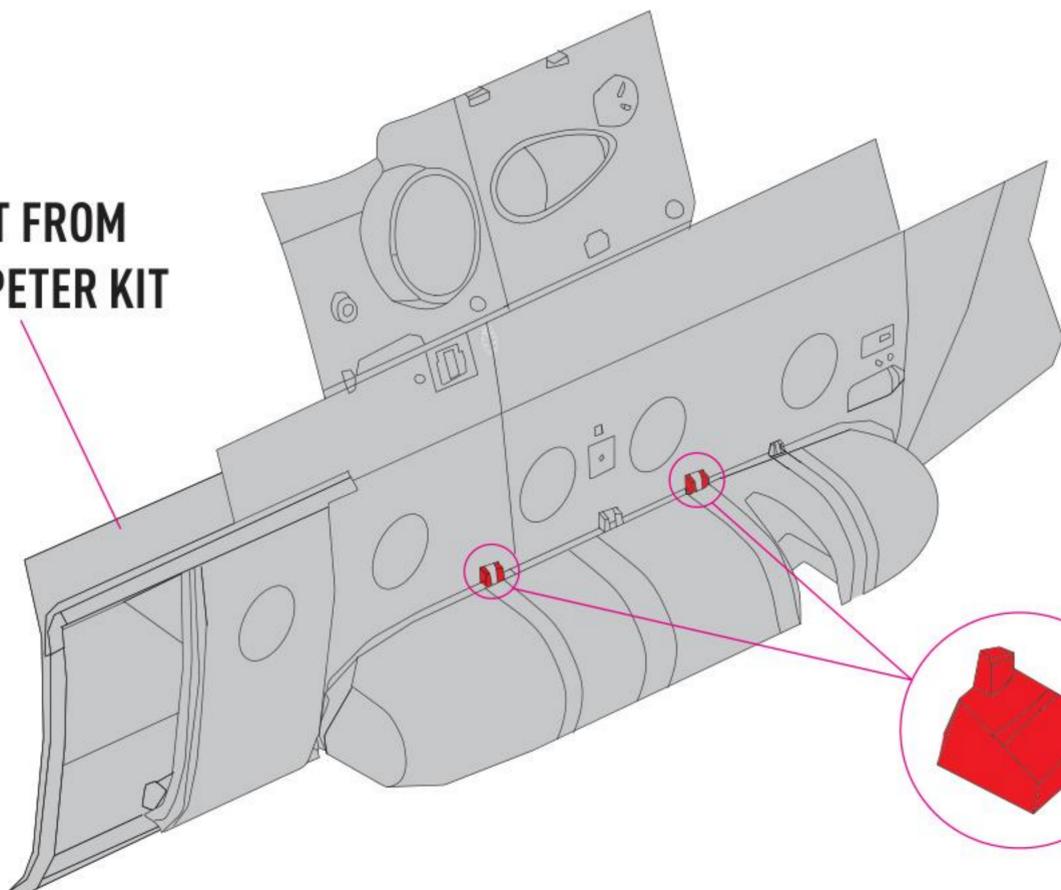


CUT

7

PART FROM TRUMPETER KIT

GLUE M1 MASK (GUIDED BY THE WINDOWS)

STEP 6

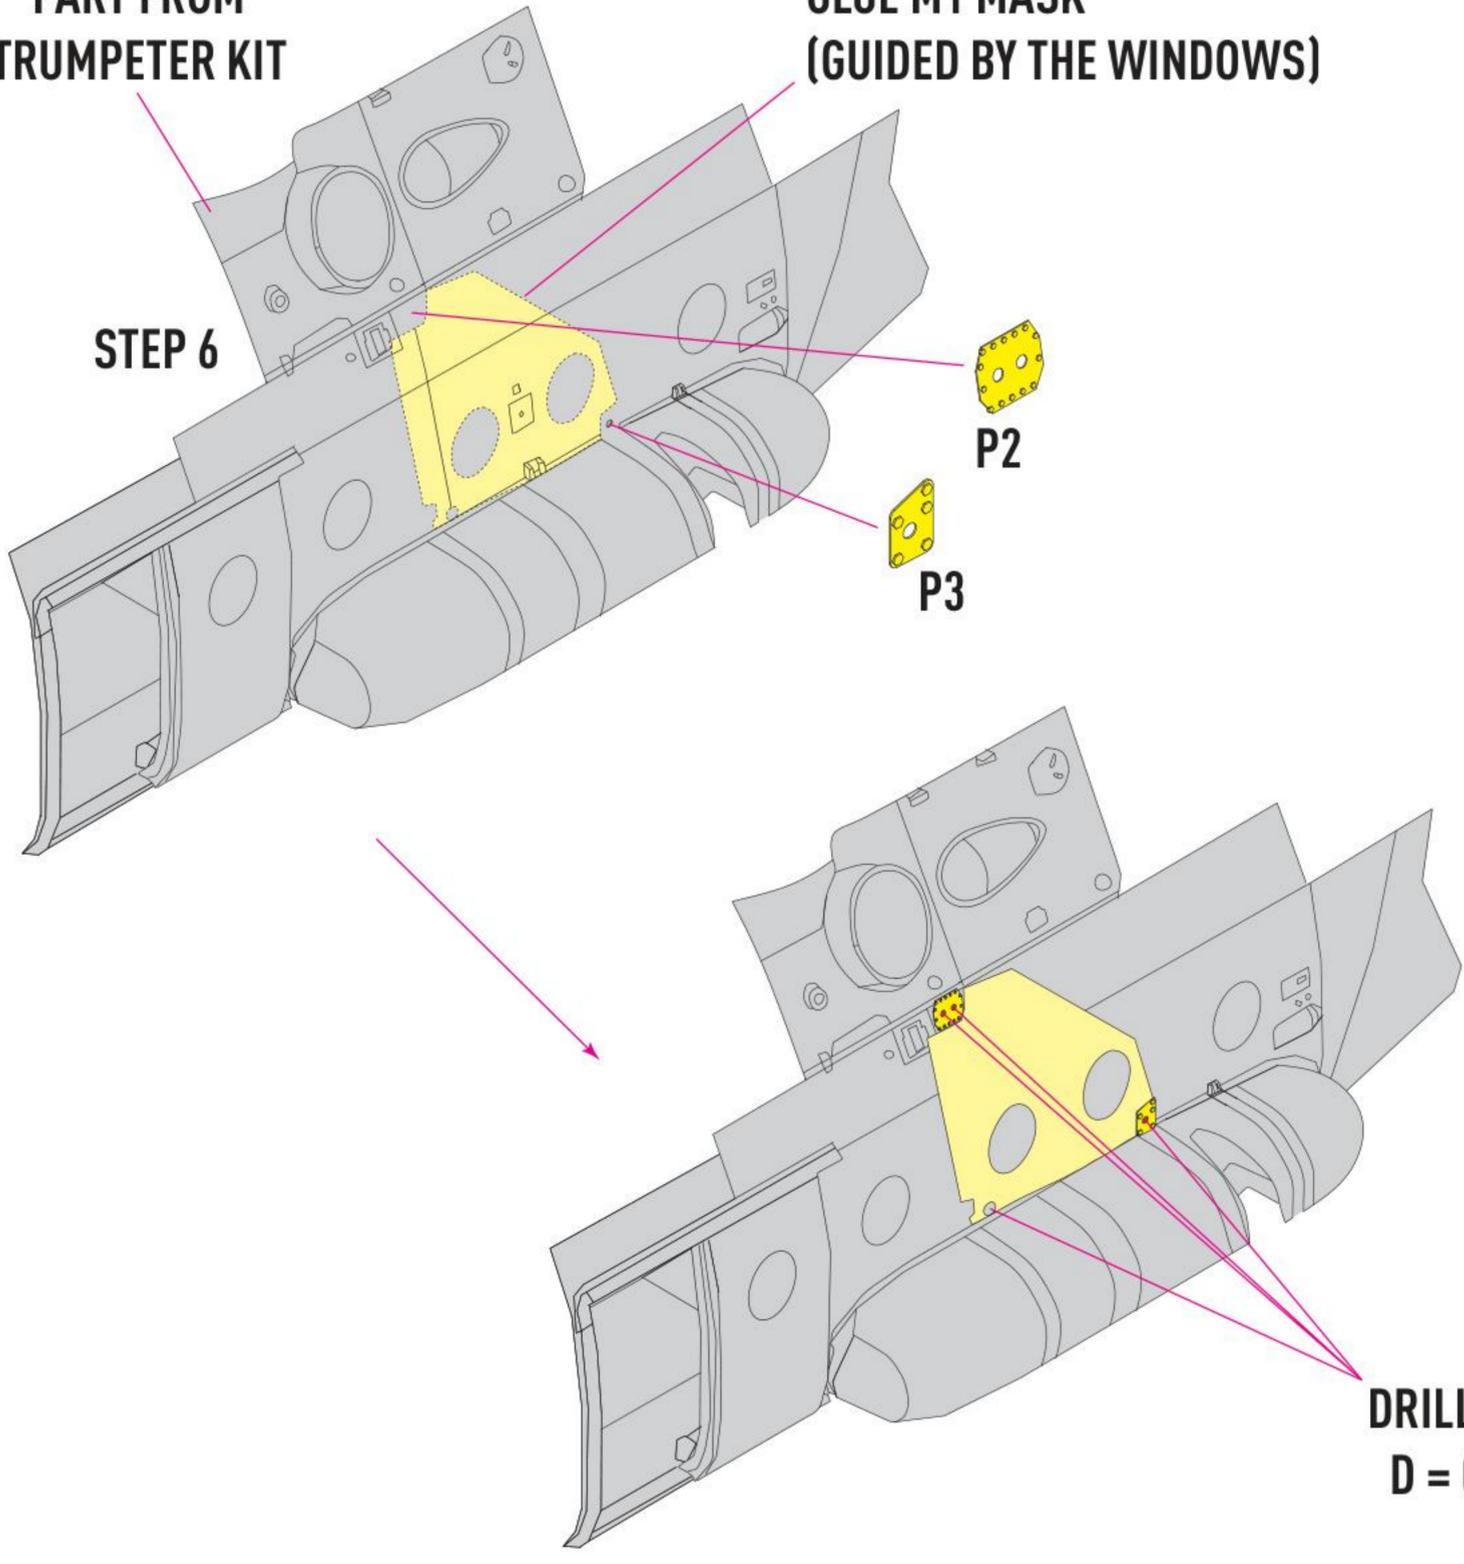


**DRILL A HOLE
D = 0.6 MM**

8


REMOVE MASK

STEP 7

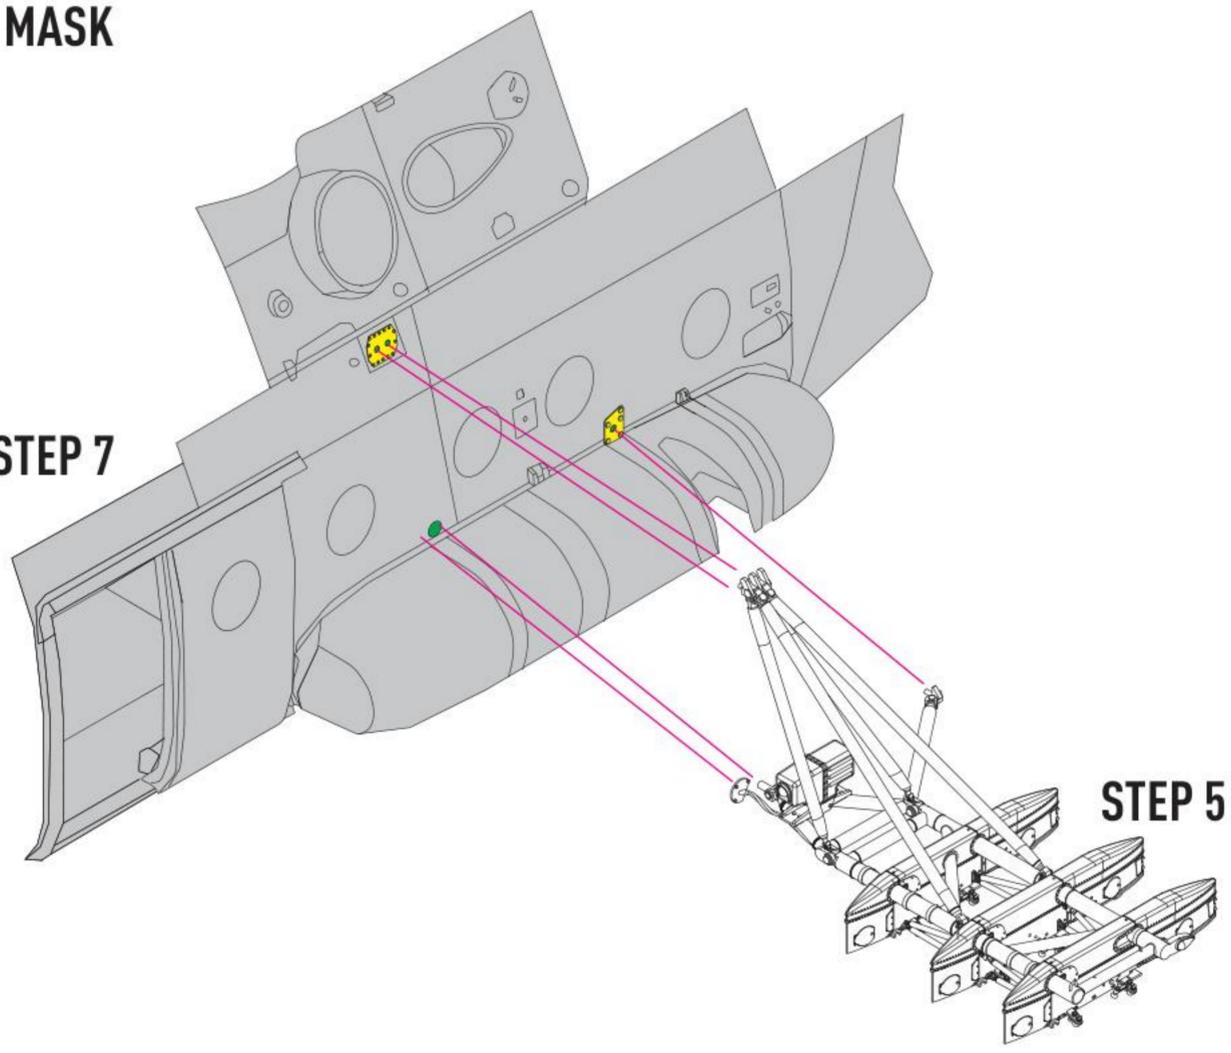


STEP 5

9 RIGHT SIDE


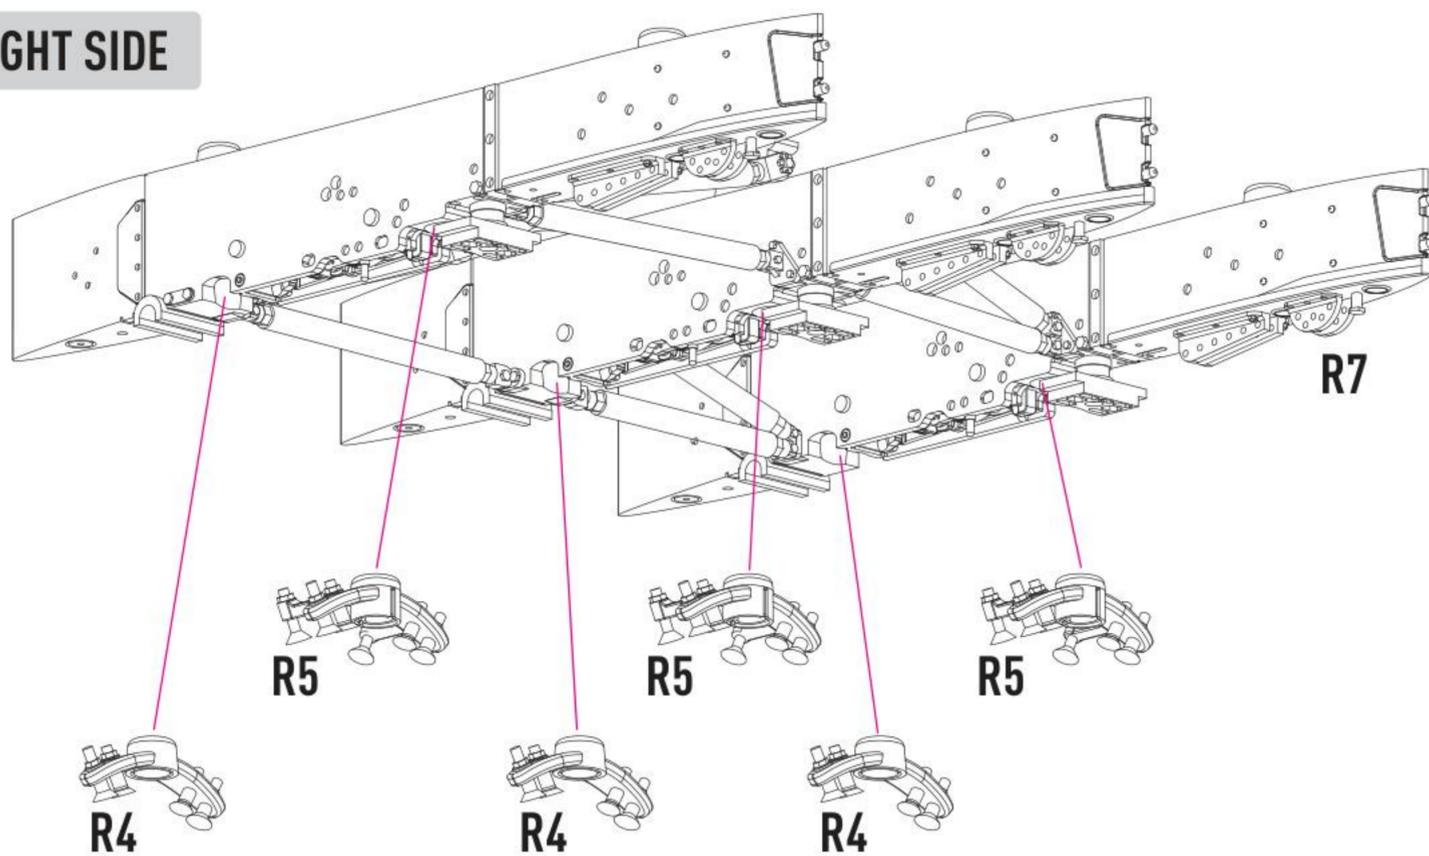




10

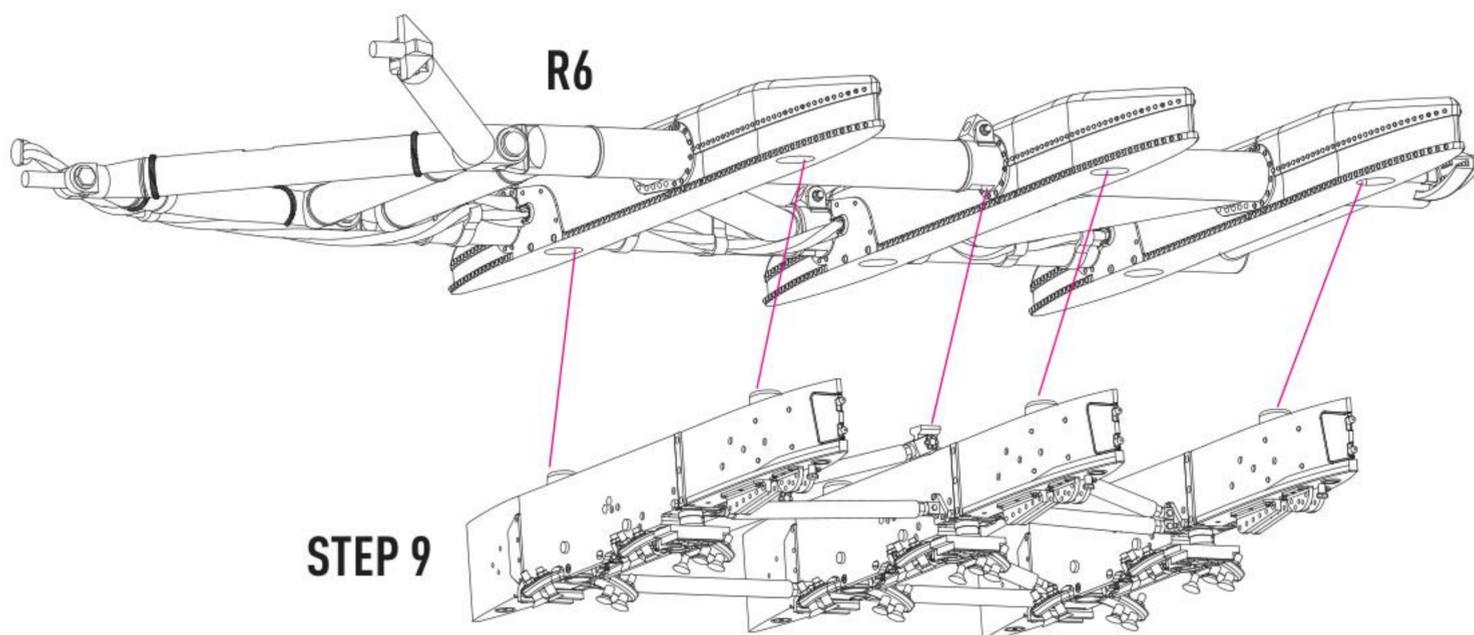

11

BEFORE INSTALLATION, APPLY GLOSS VARNISH ON TRANSPARENT PART

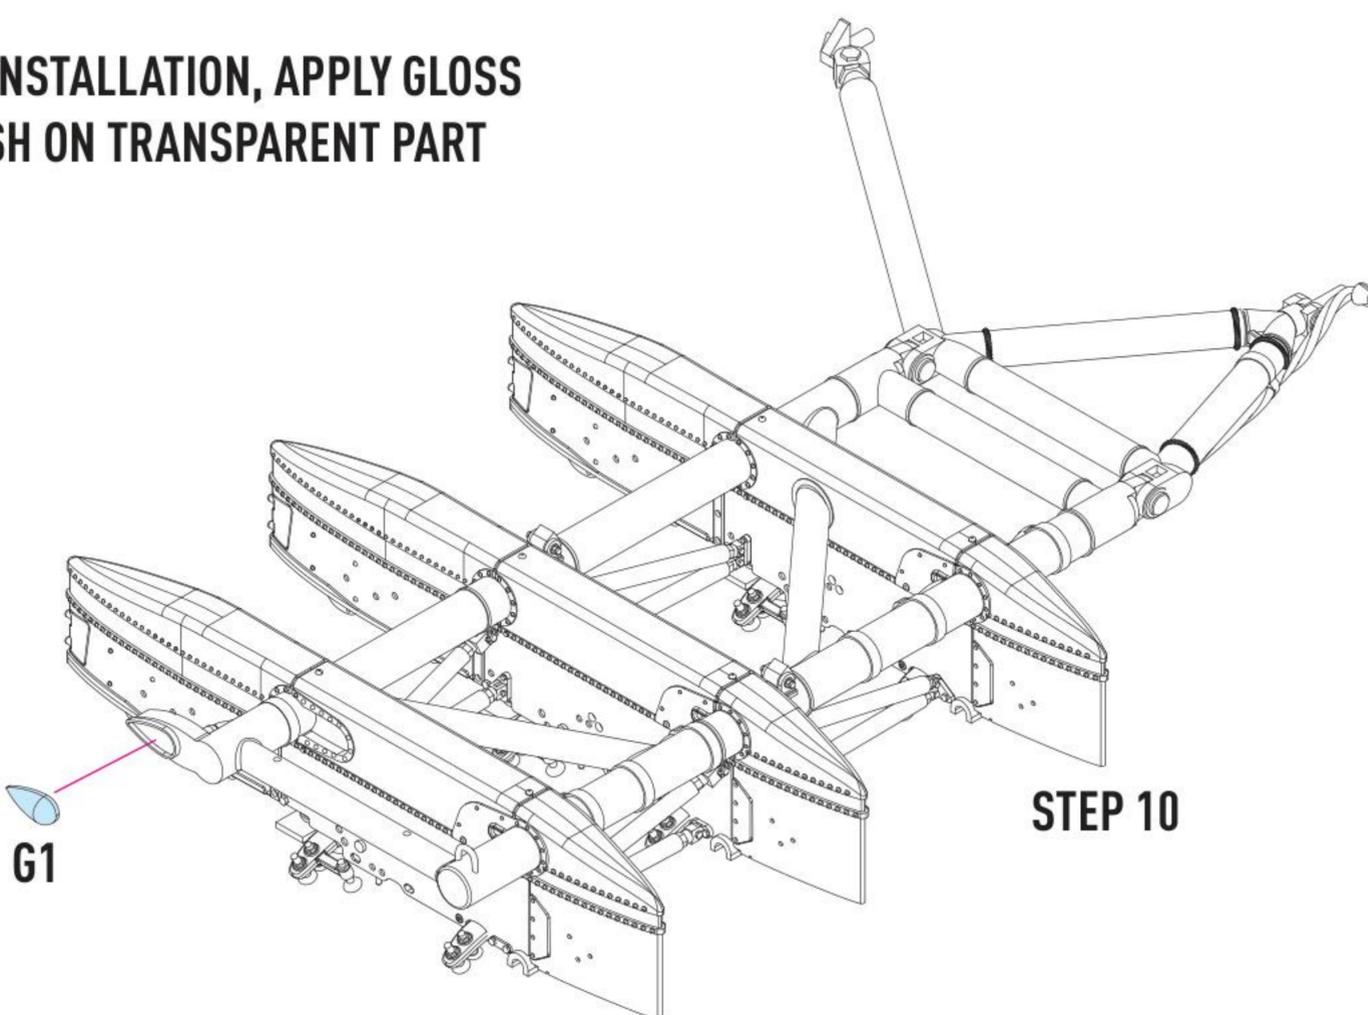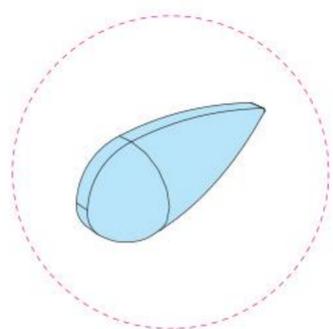

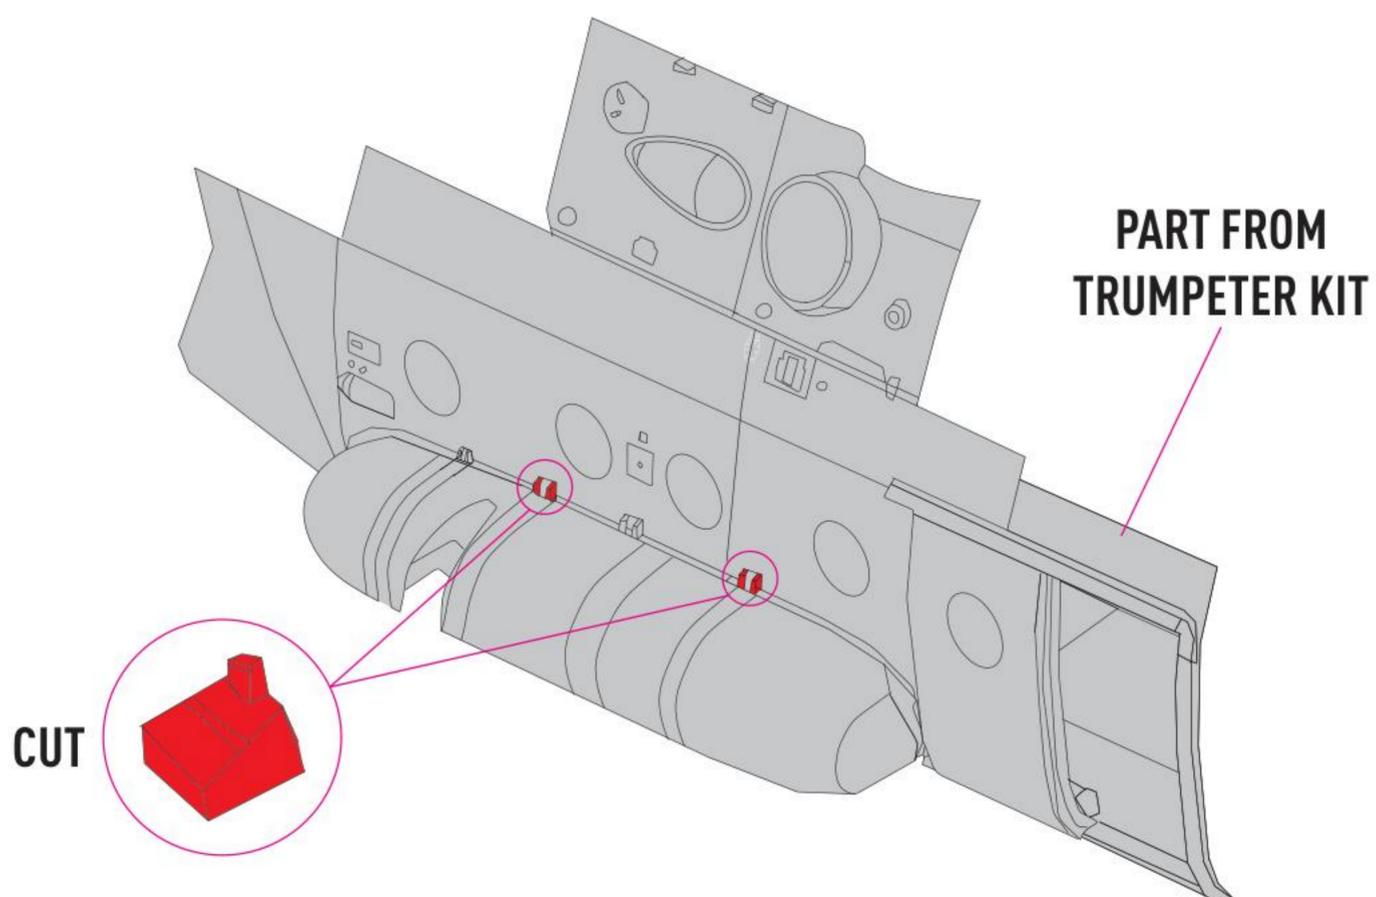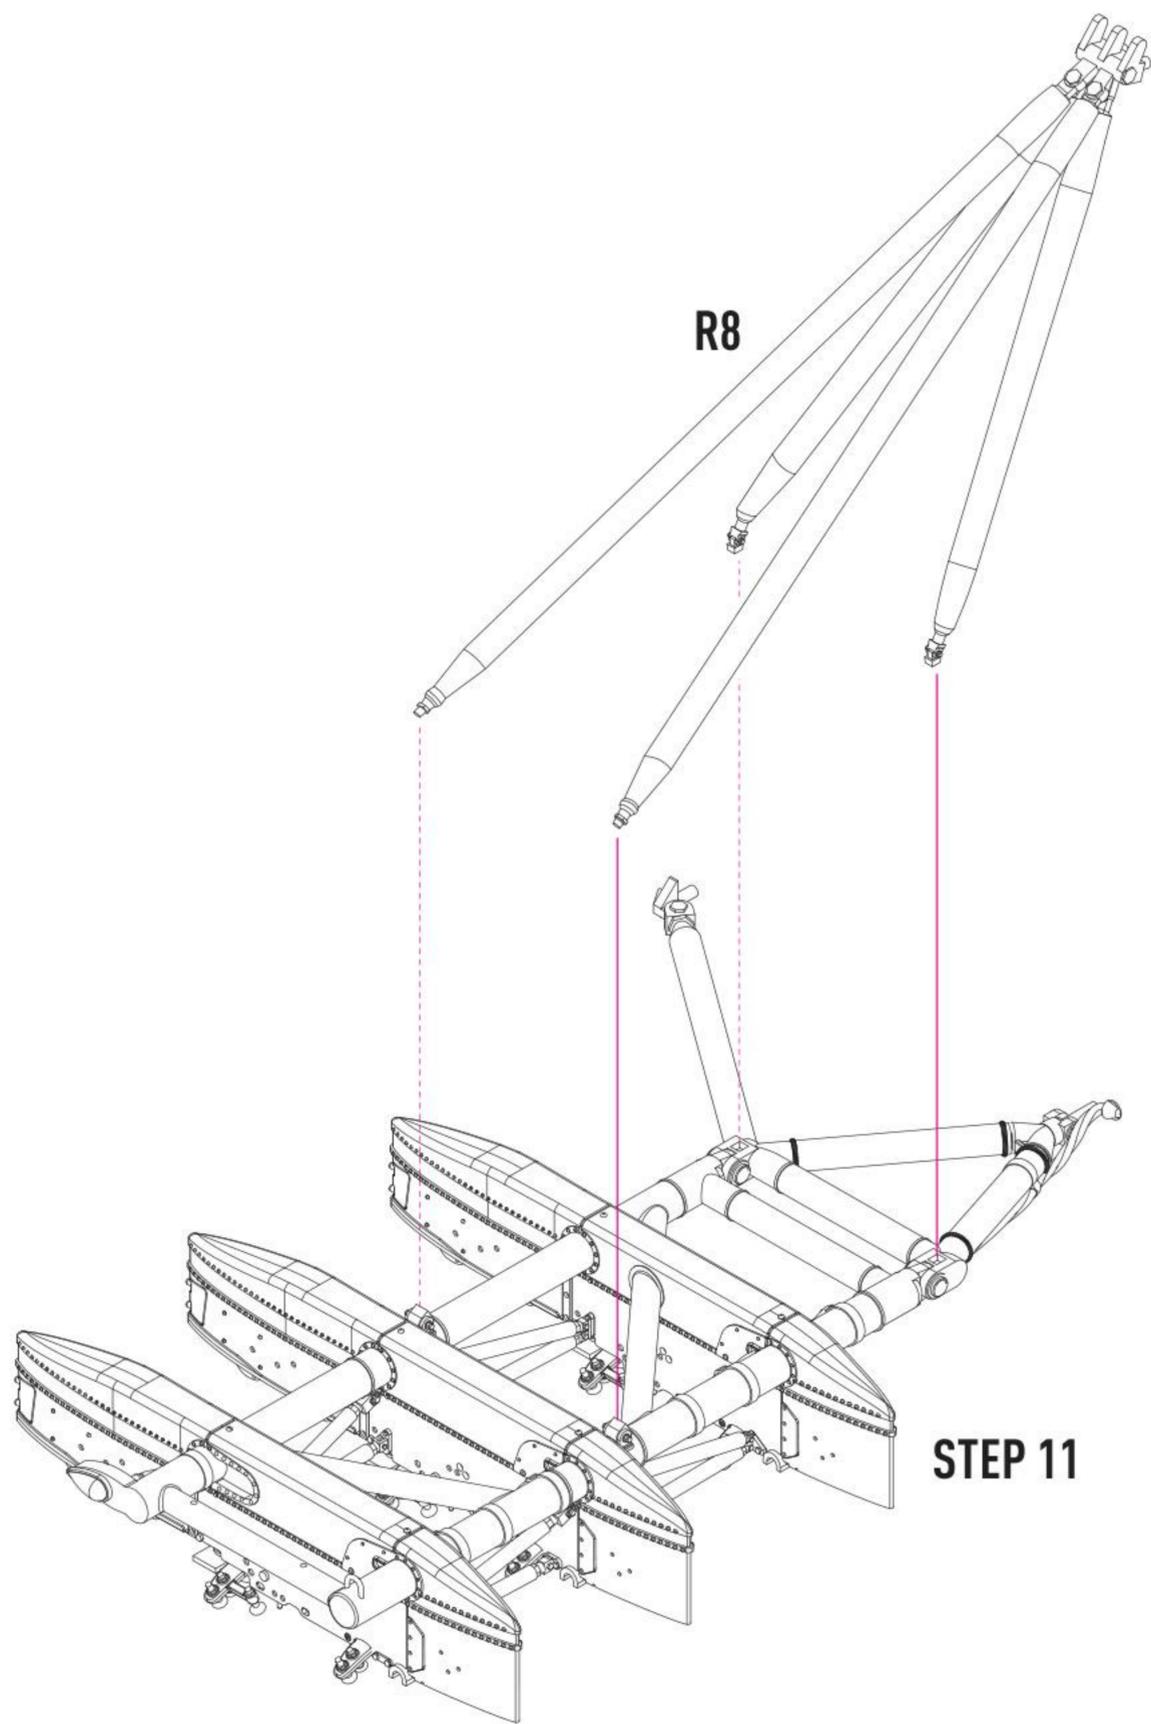

14

GLUE M1 MASK
(GUIDED BY THE WINDOWS)

PART FROM
TRUMPETER KIT

STEP 13

P2

P4



DRILL A HOLE
D = 0.6 MM

15 REMOVE MASK

STEP 14

STEP 11

DECAL INSTRUCTION

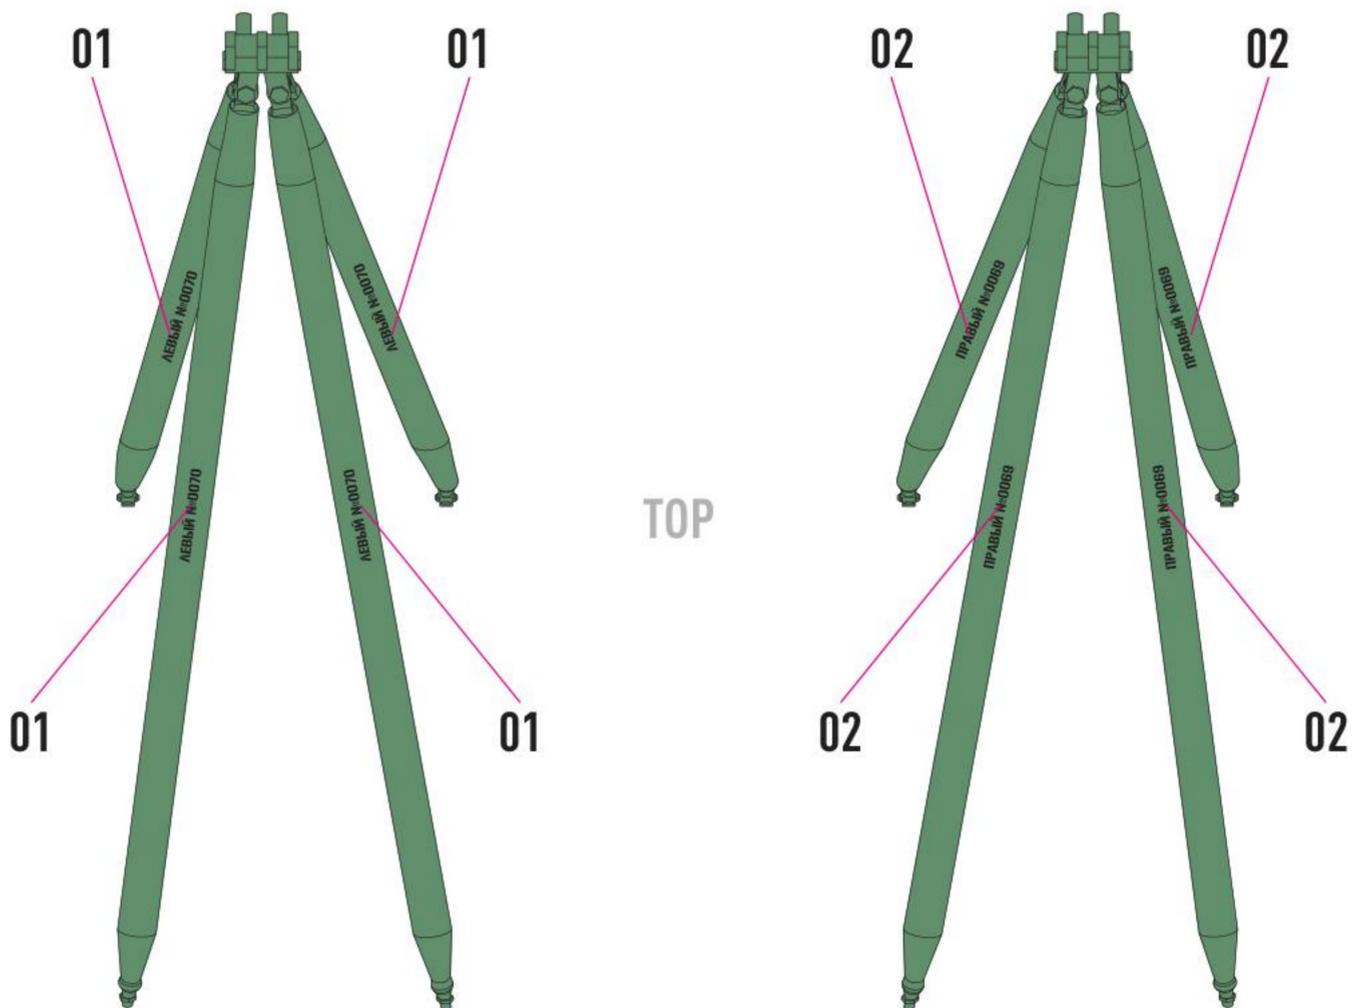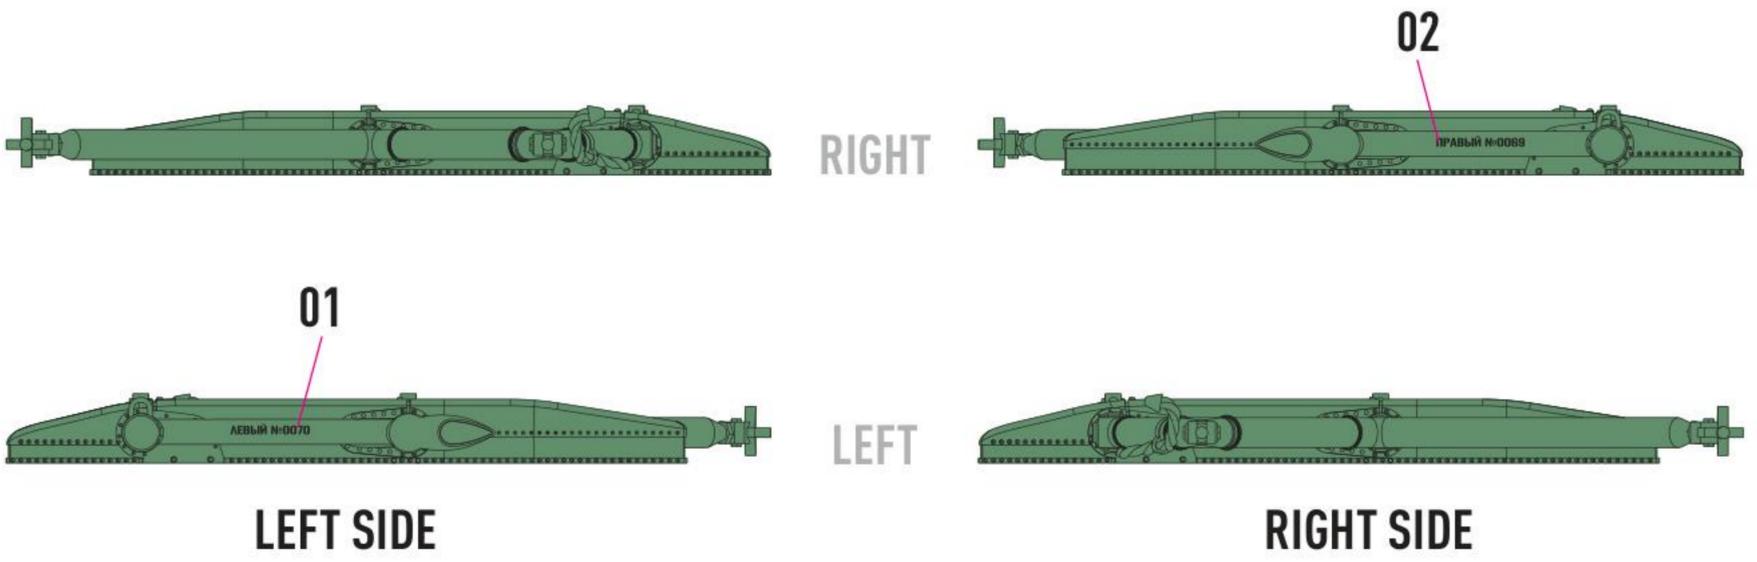

BD3-57KRV

