



RESIN PARTS
FOR SCALE PLASTIC KITS


YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION **RSU48-0564**

P-47D-10/11 THUNDERBOLT COCKPIT

DETAILED EDITION

3D PRINTED
PARTS


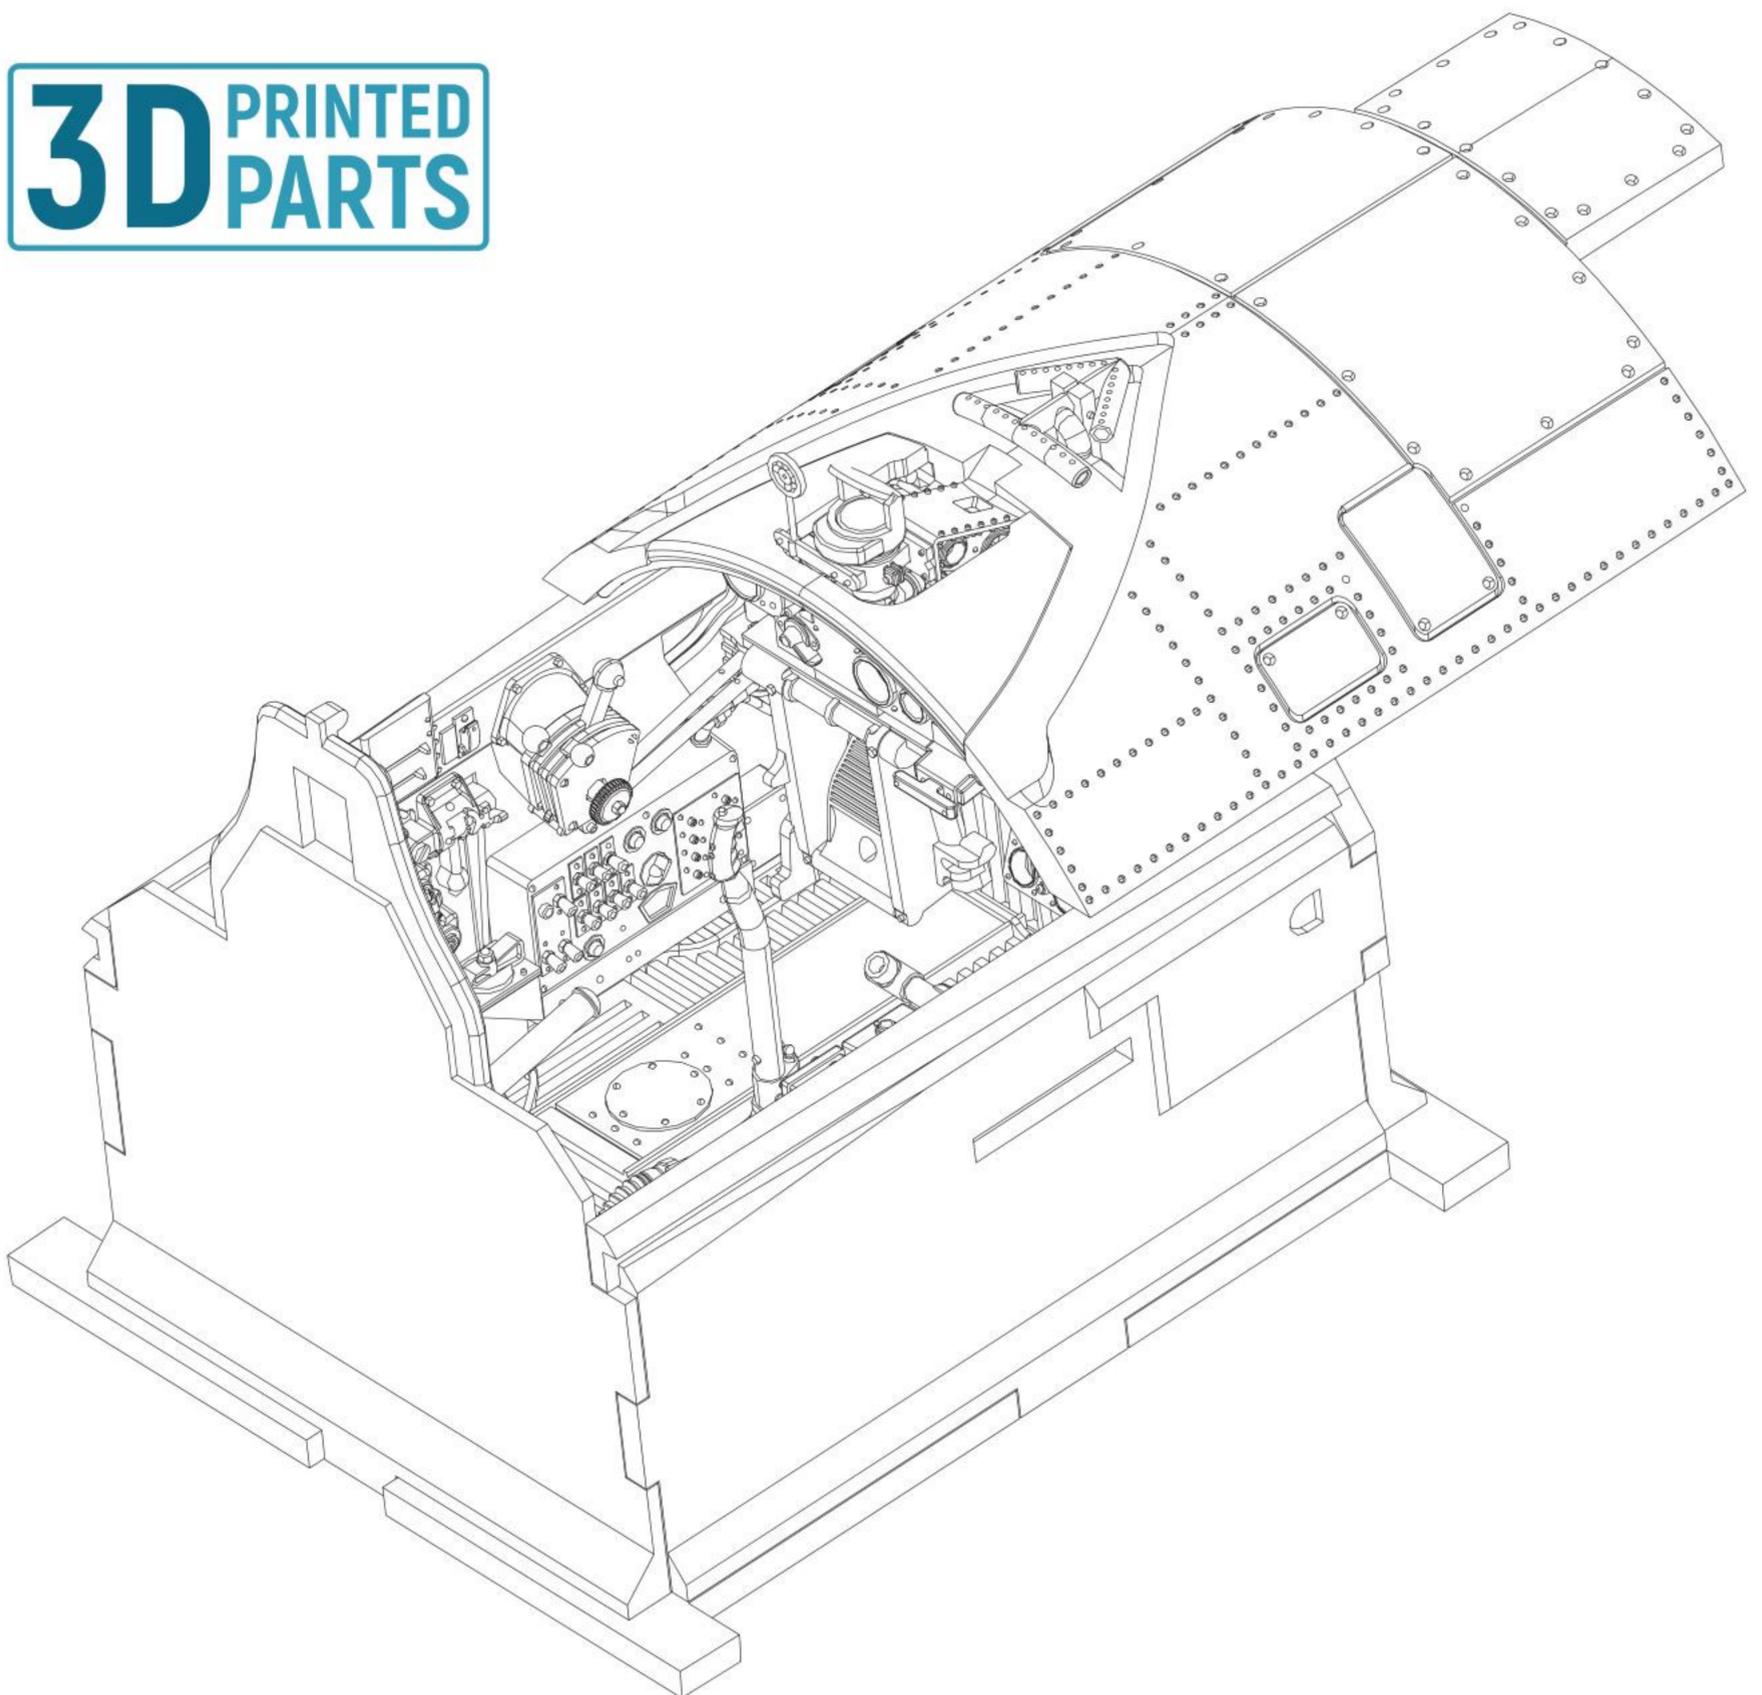


FOR MINIART KIT



USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS

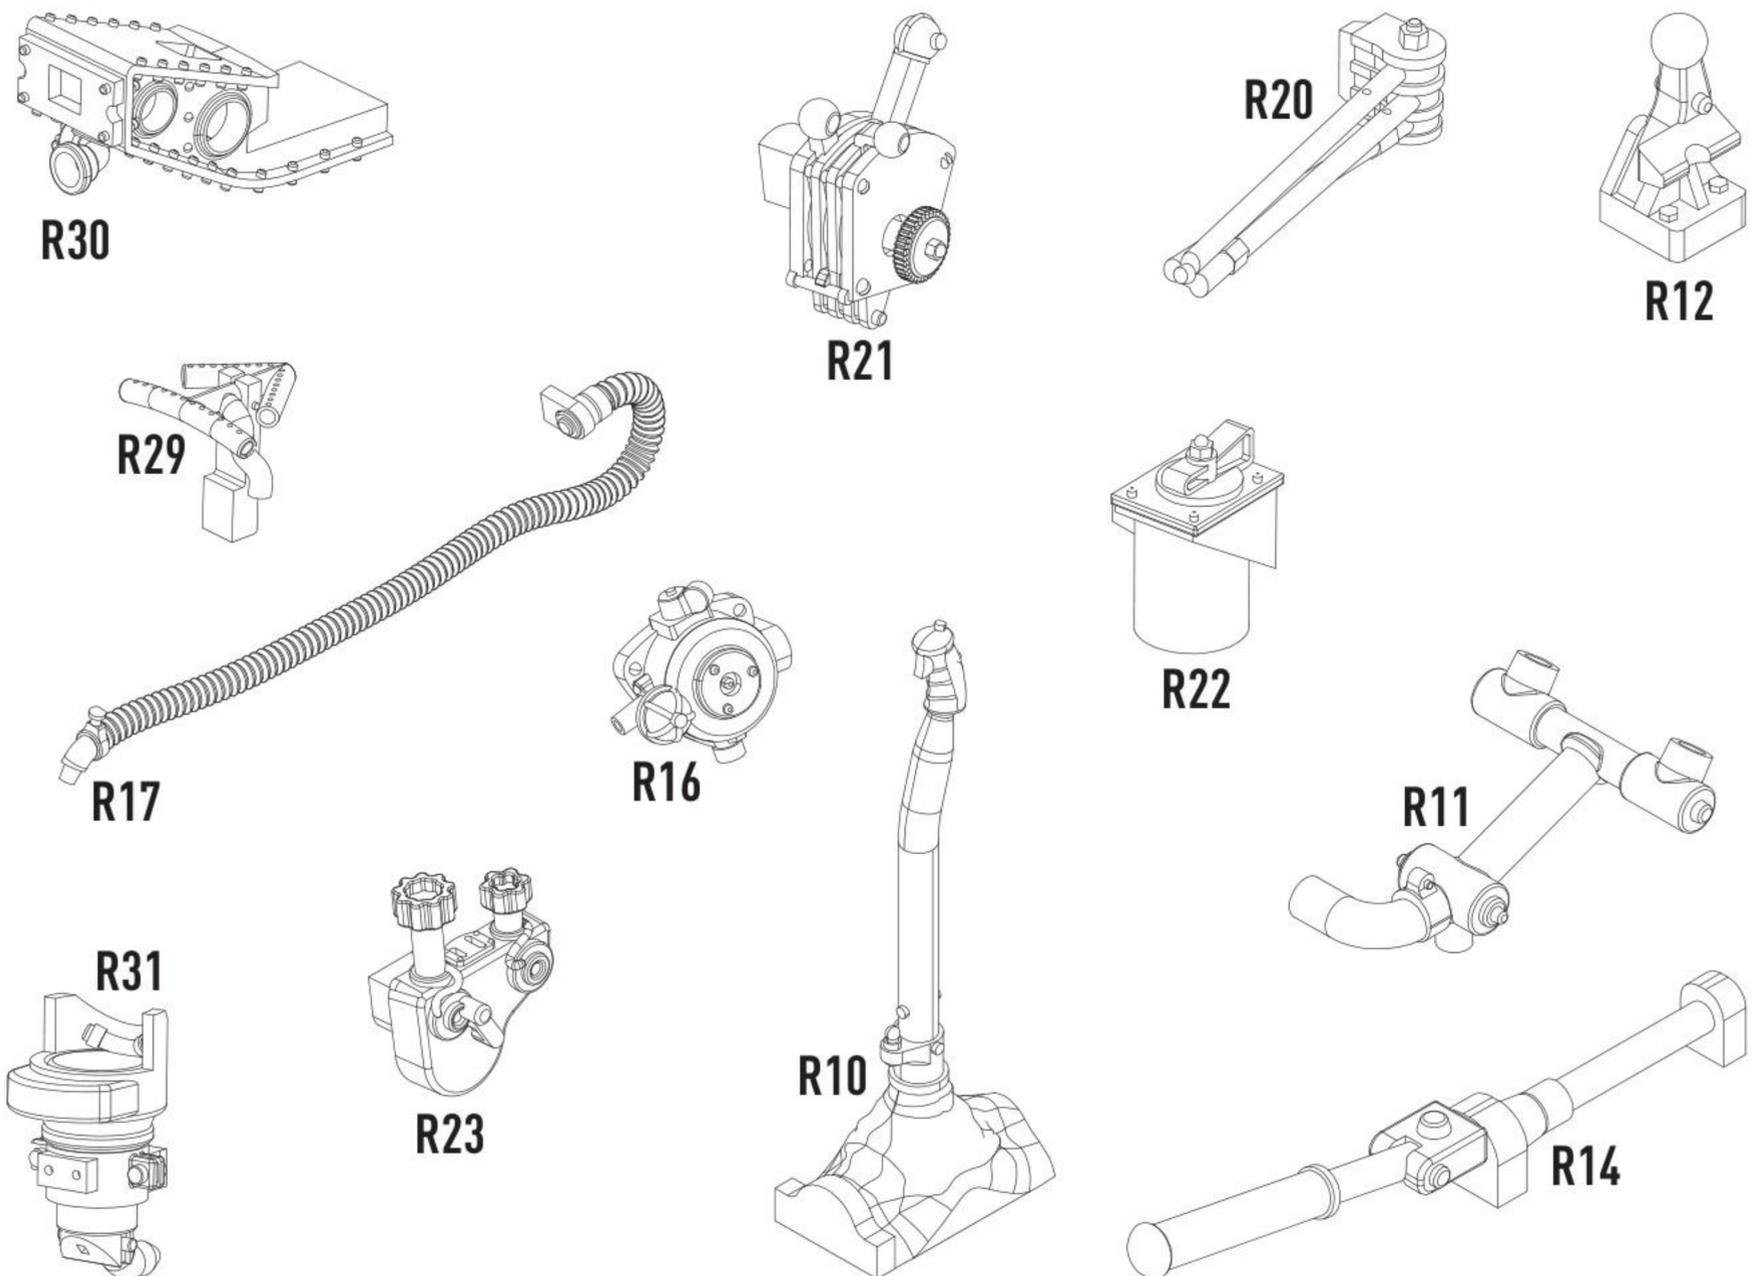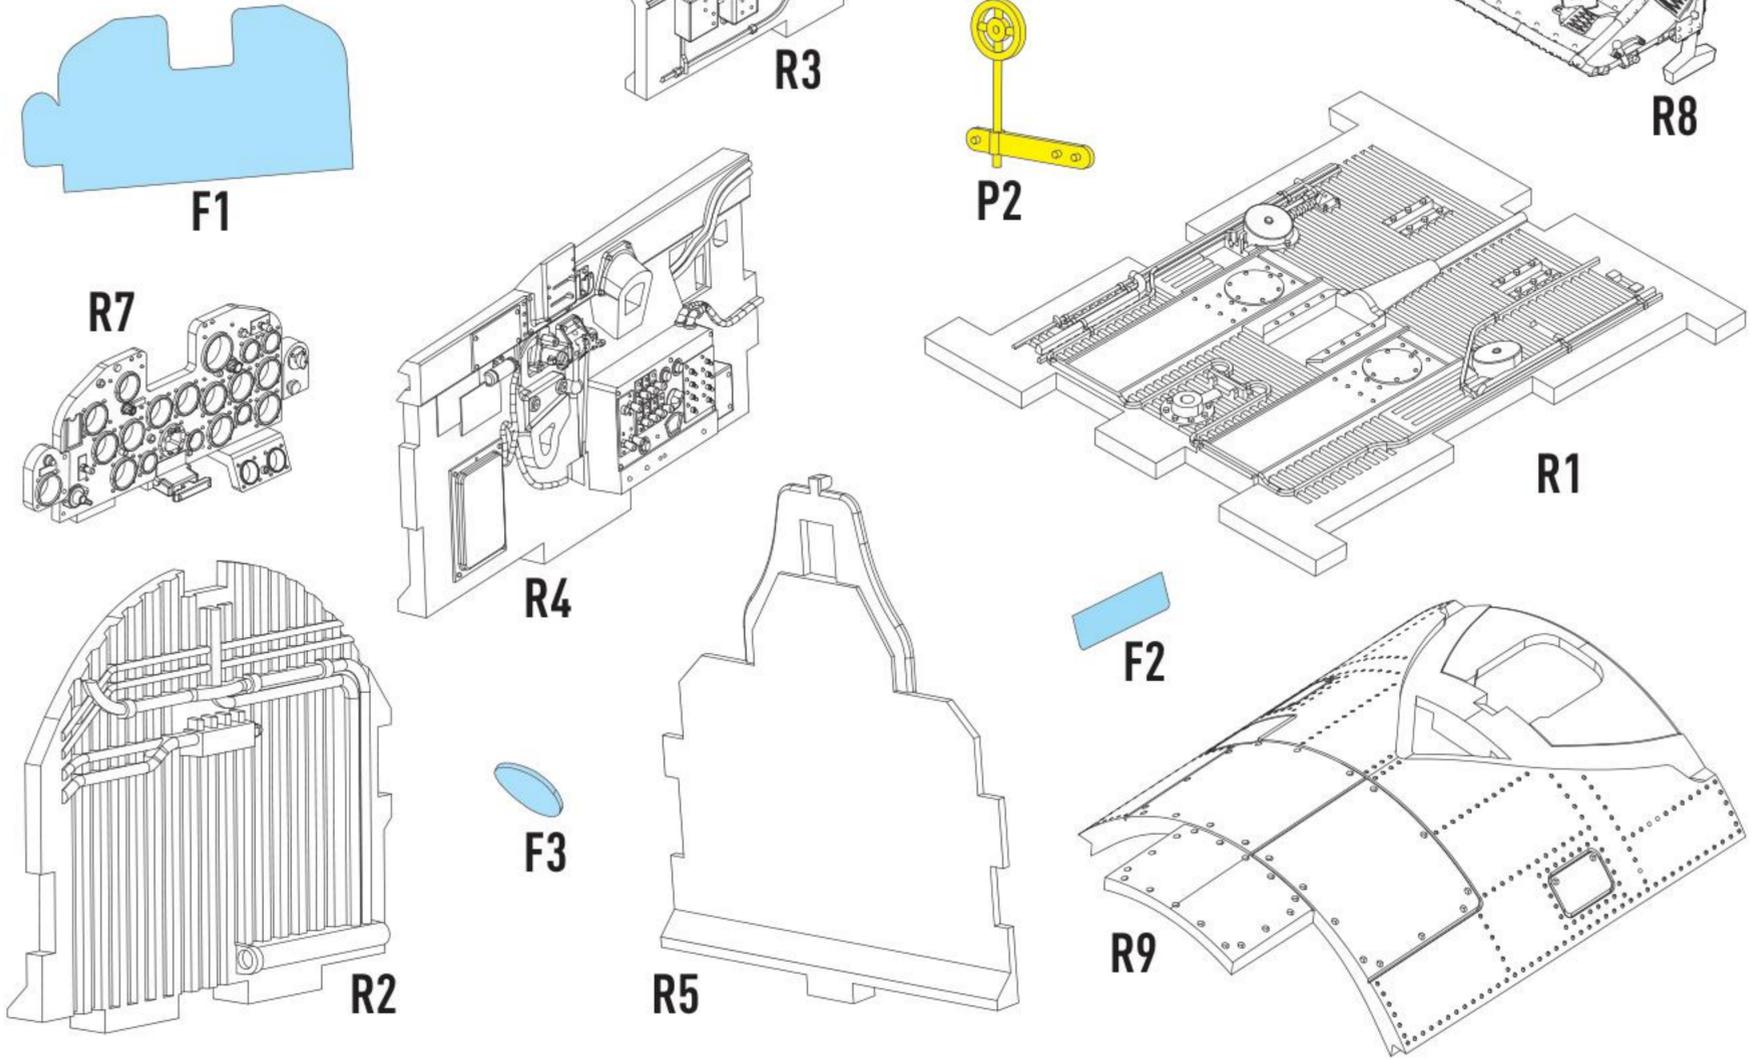

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua


RESKIT-MODELS.COM

fb.com/reskit.official


instagram.com/reskit_official

youtube.com/@reskit-usmd


1

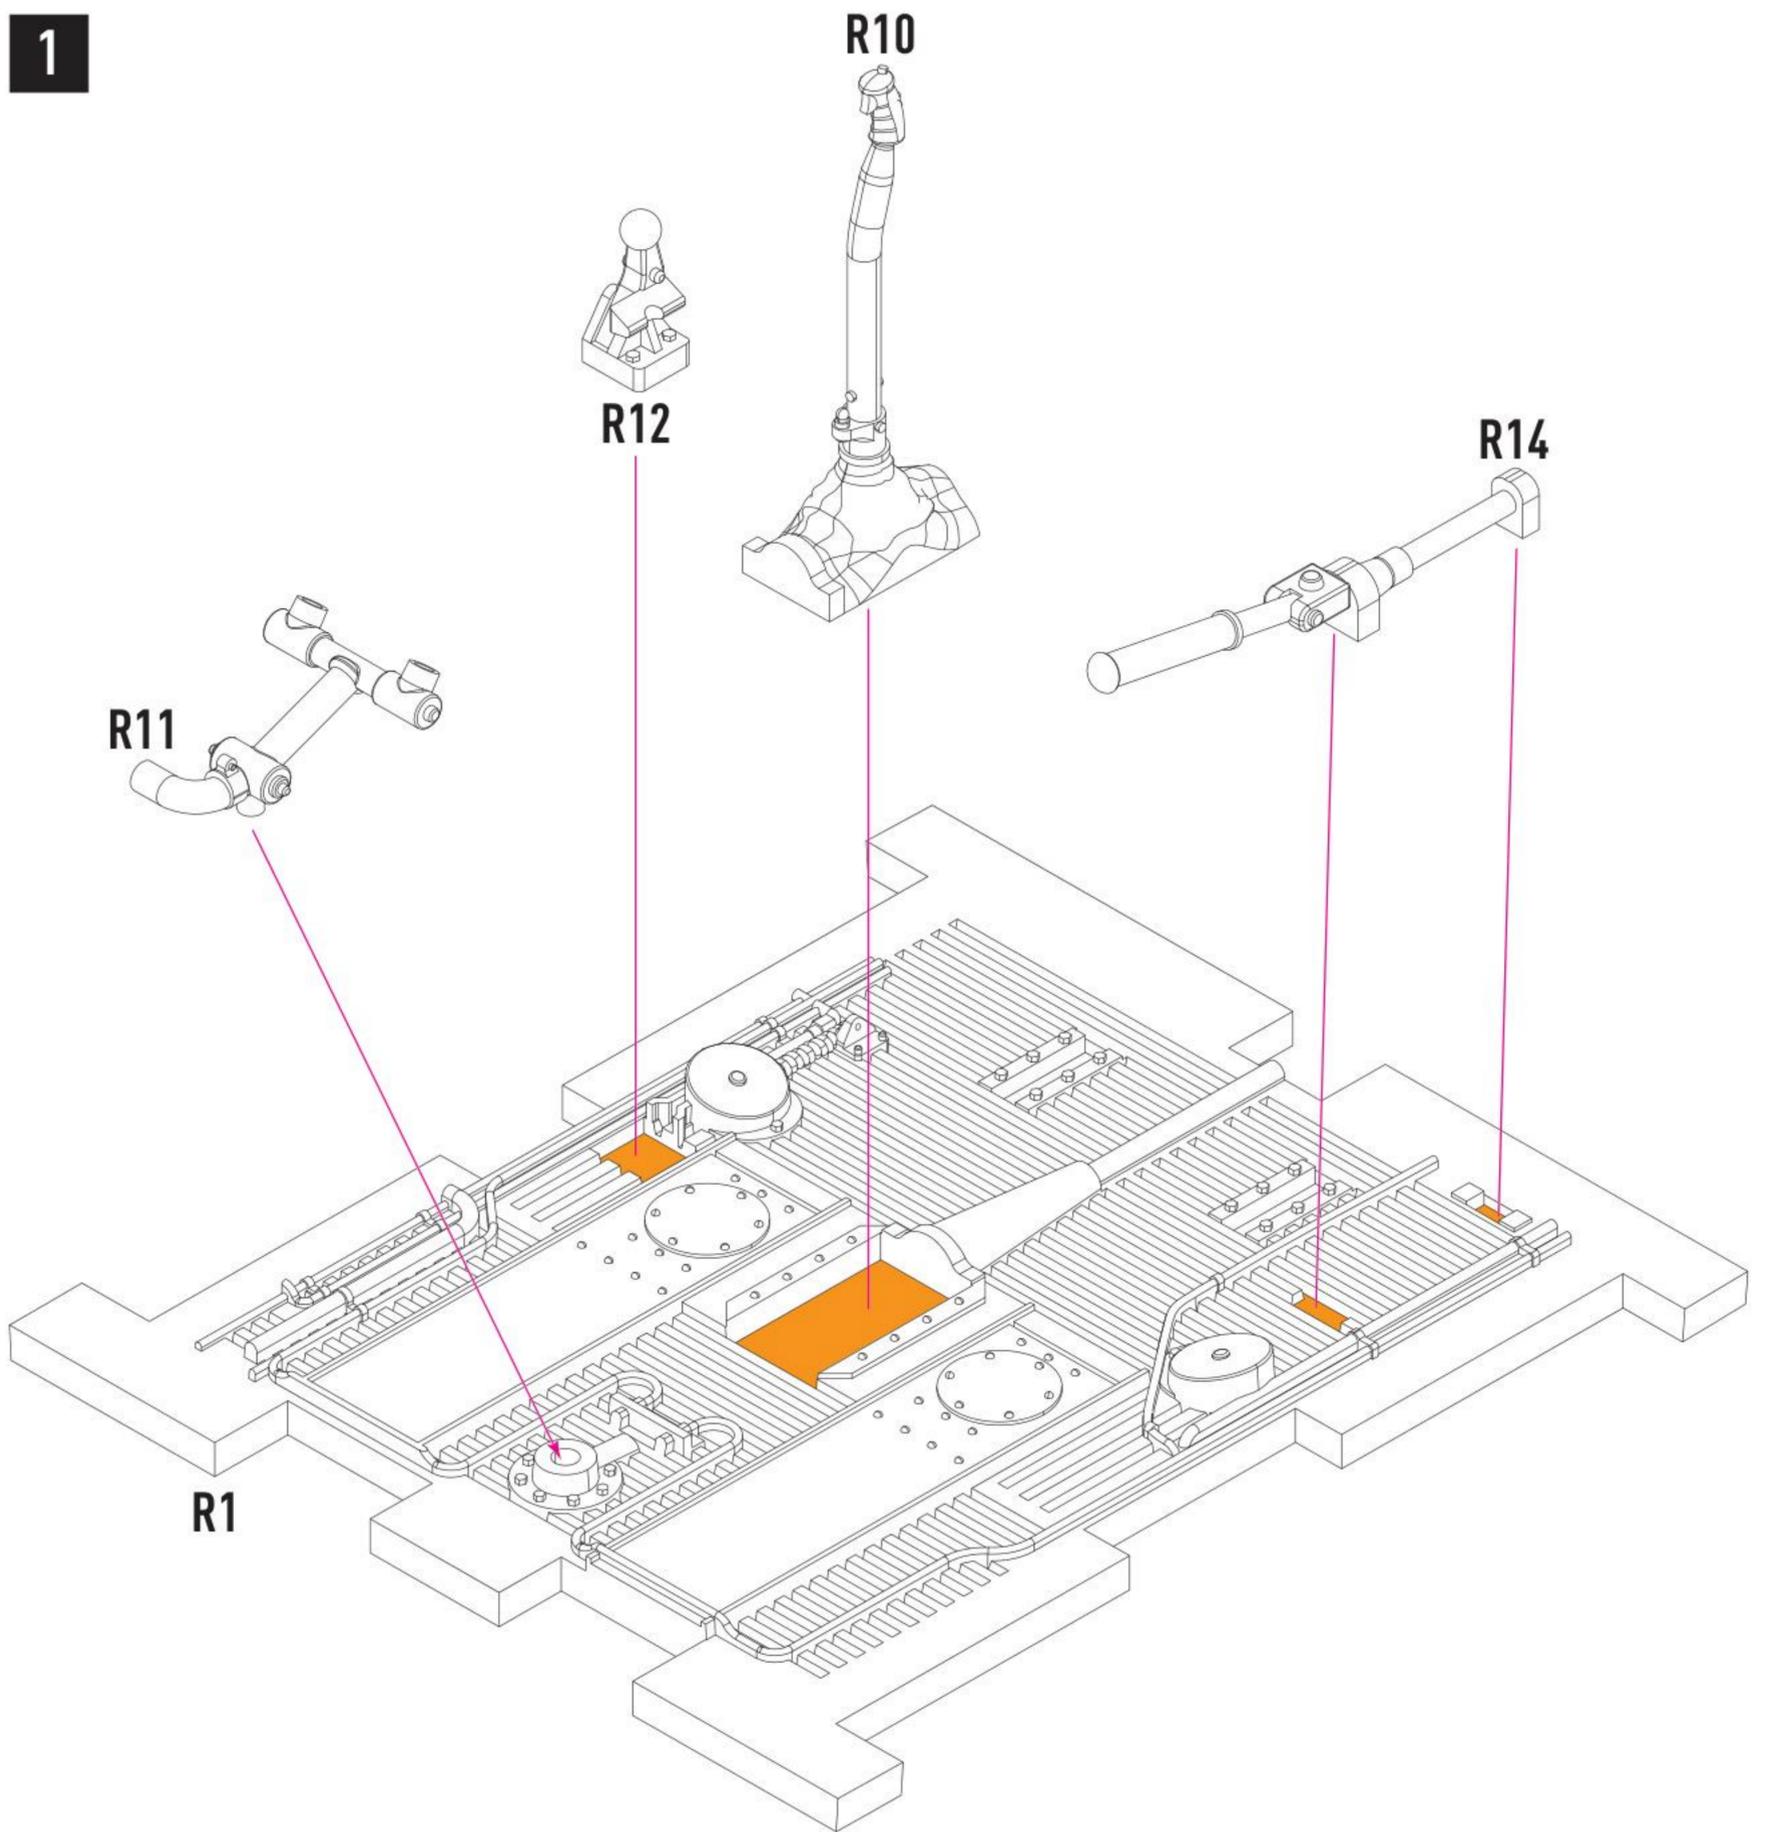


2

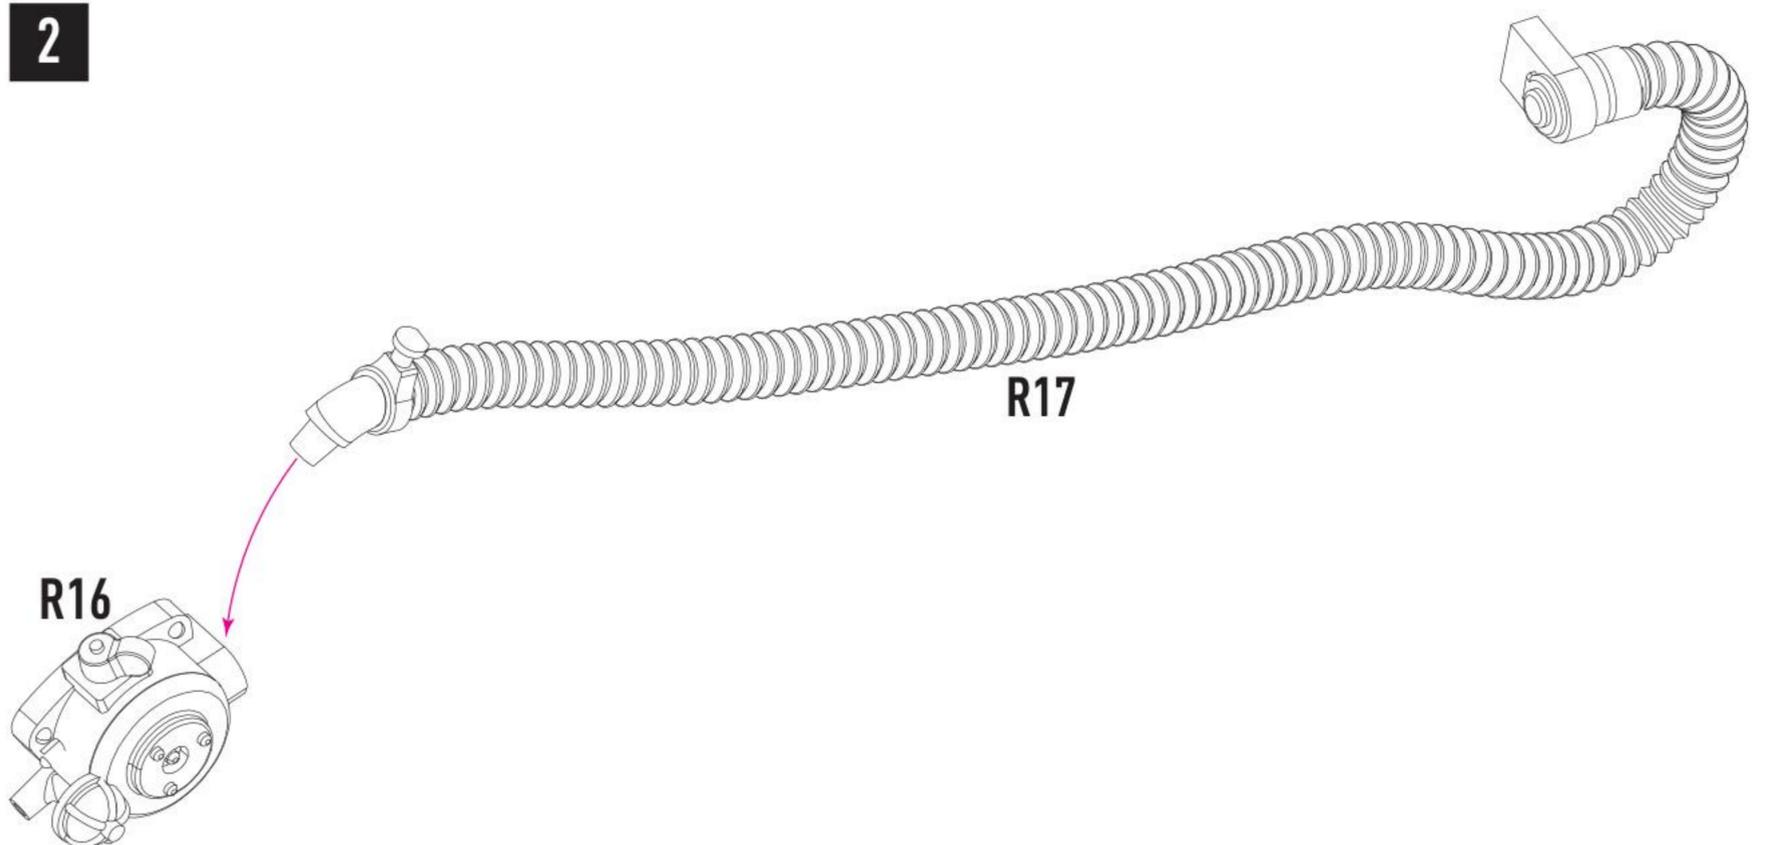


3

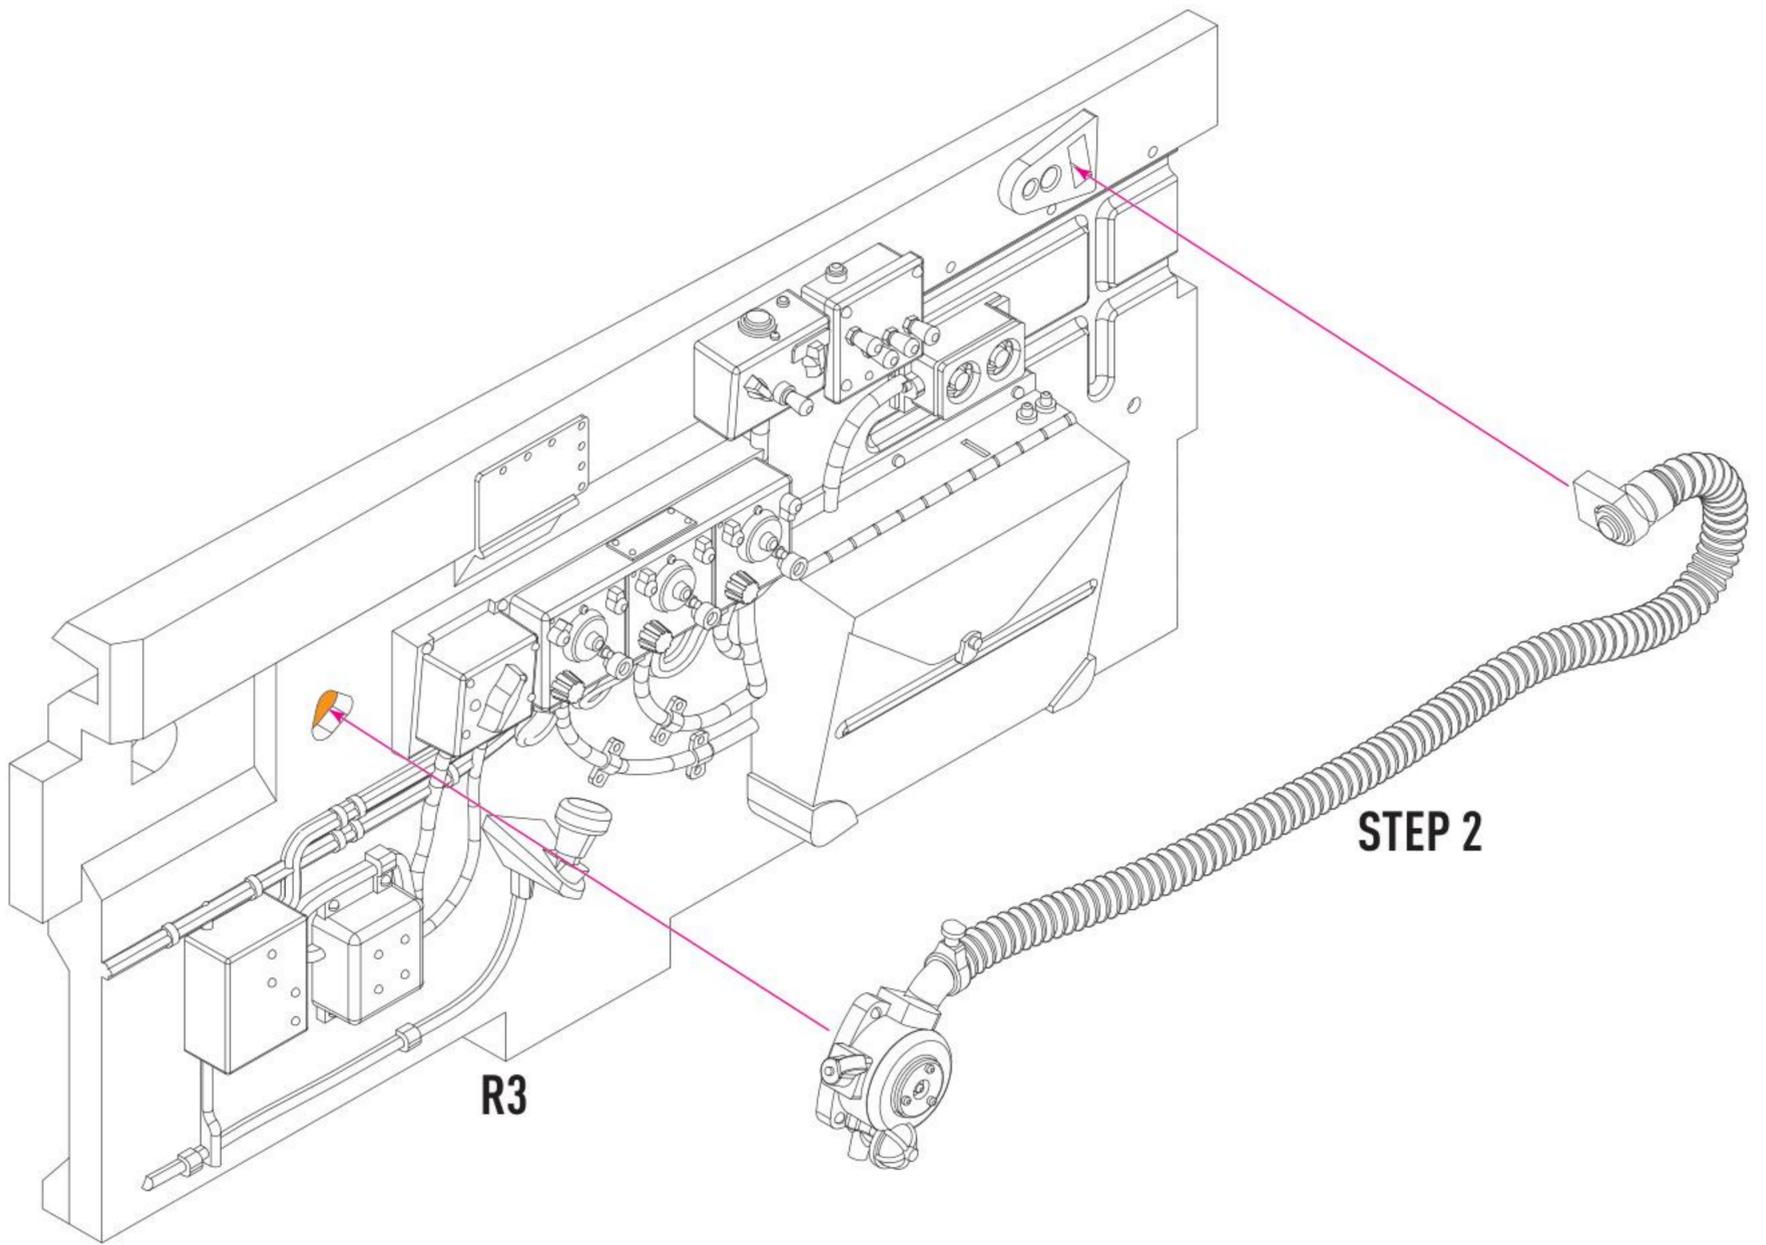


4

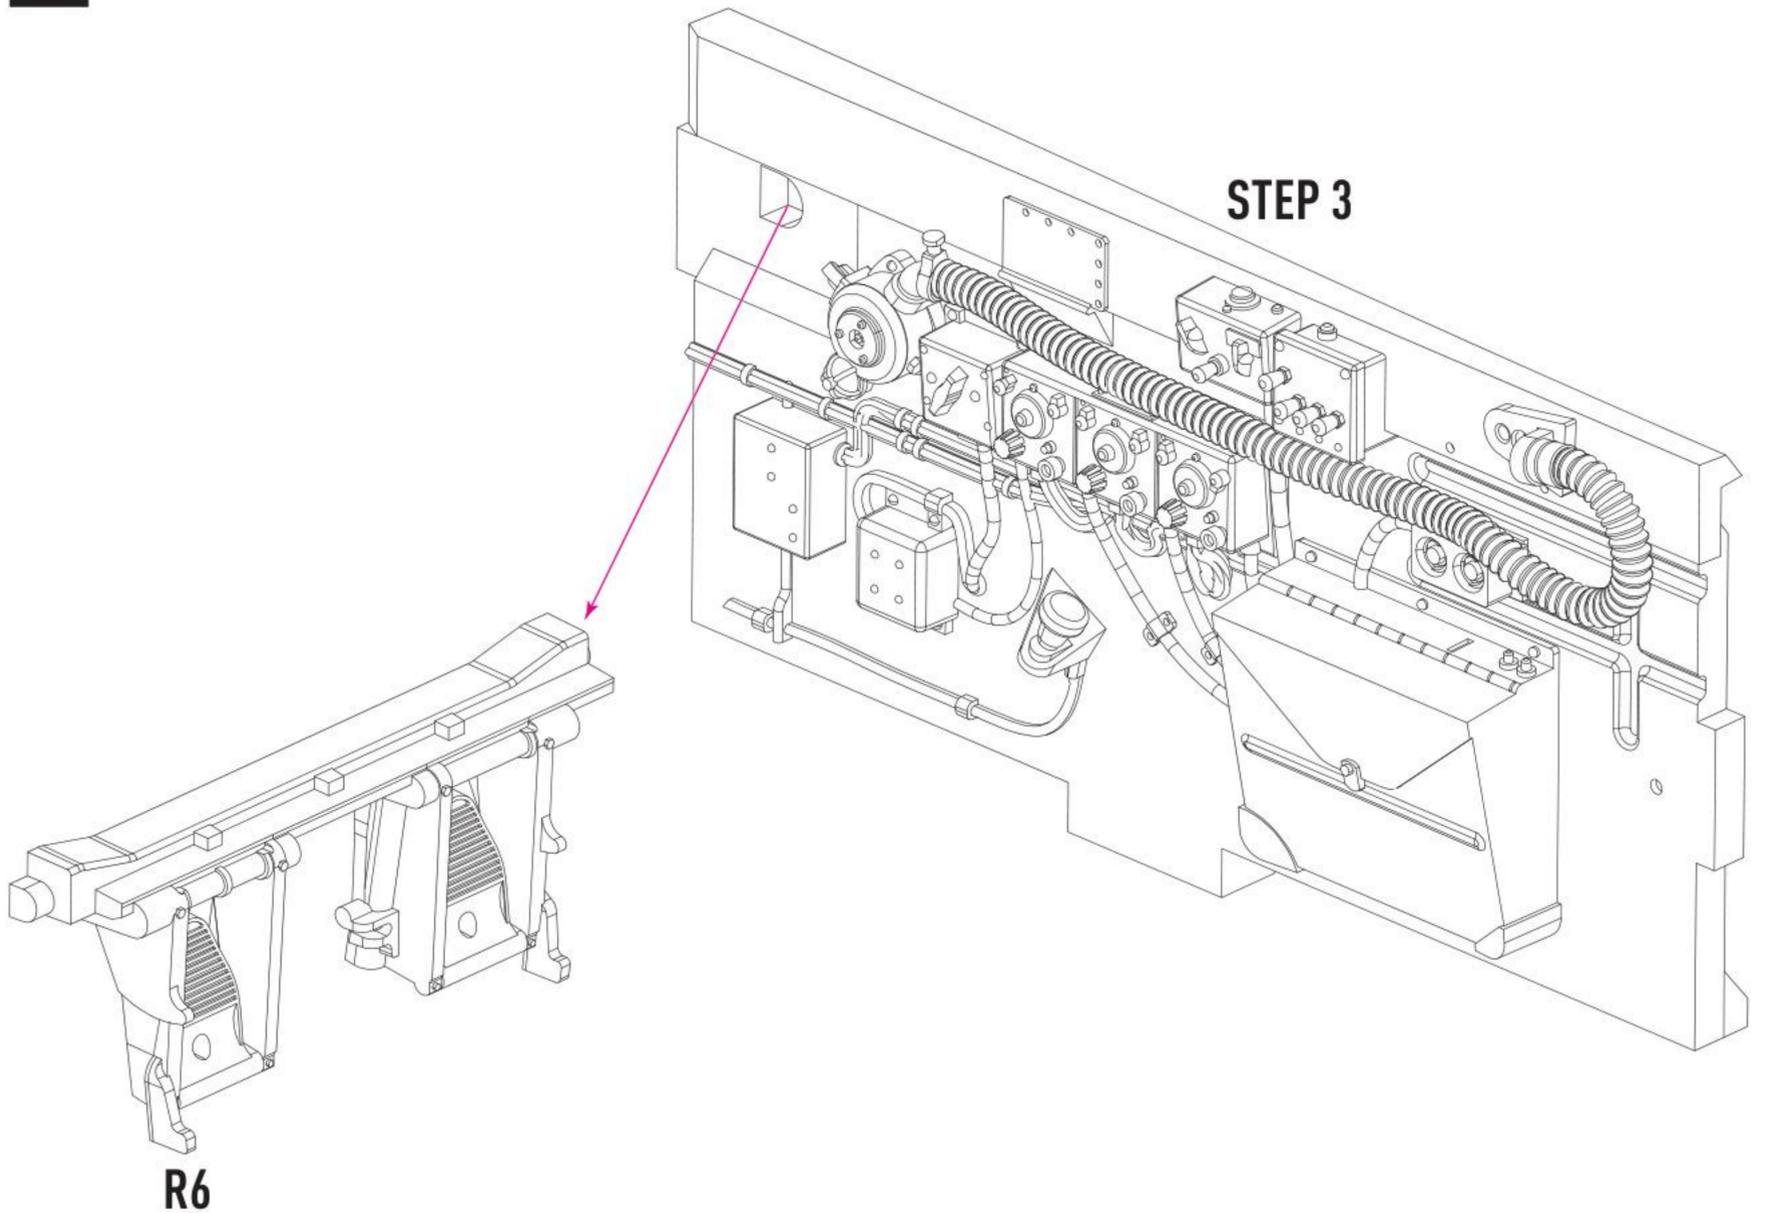


5

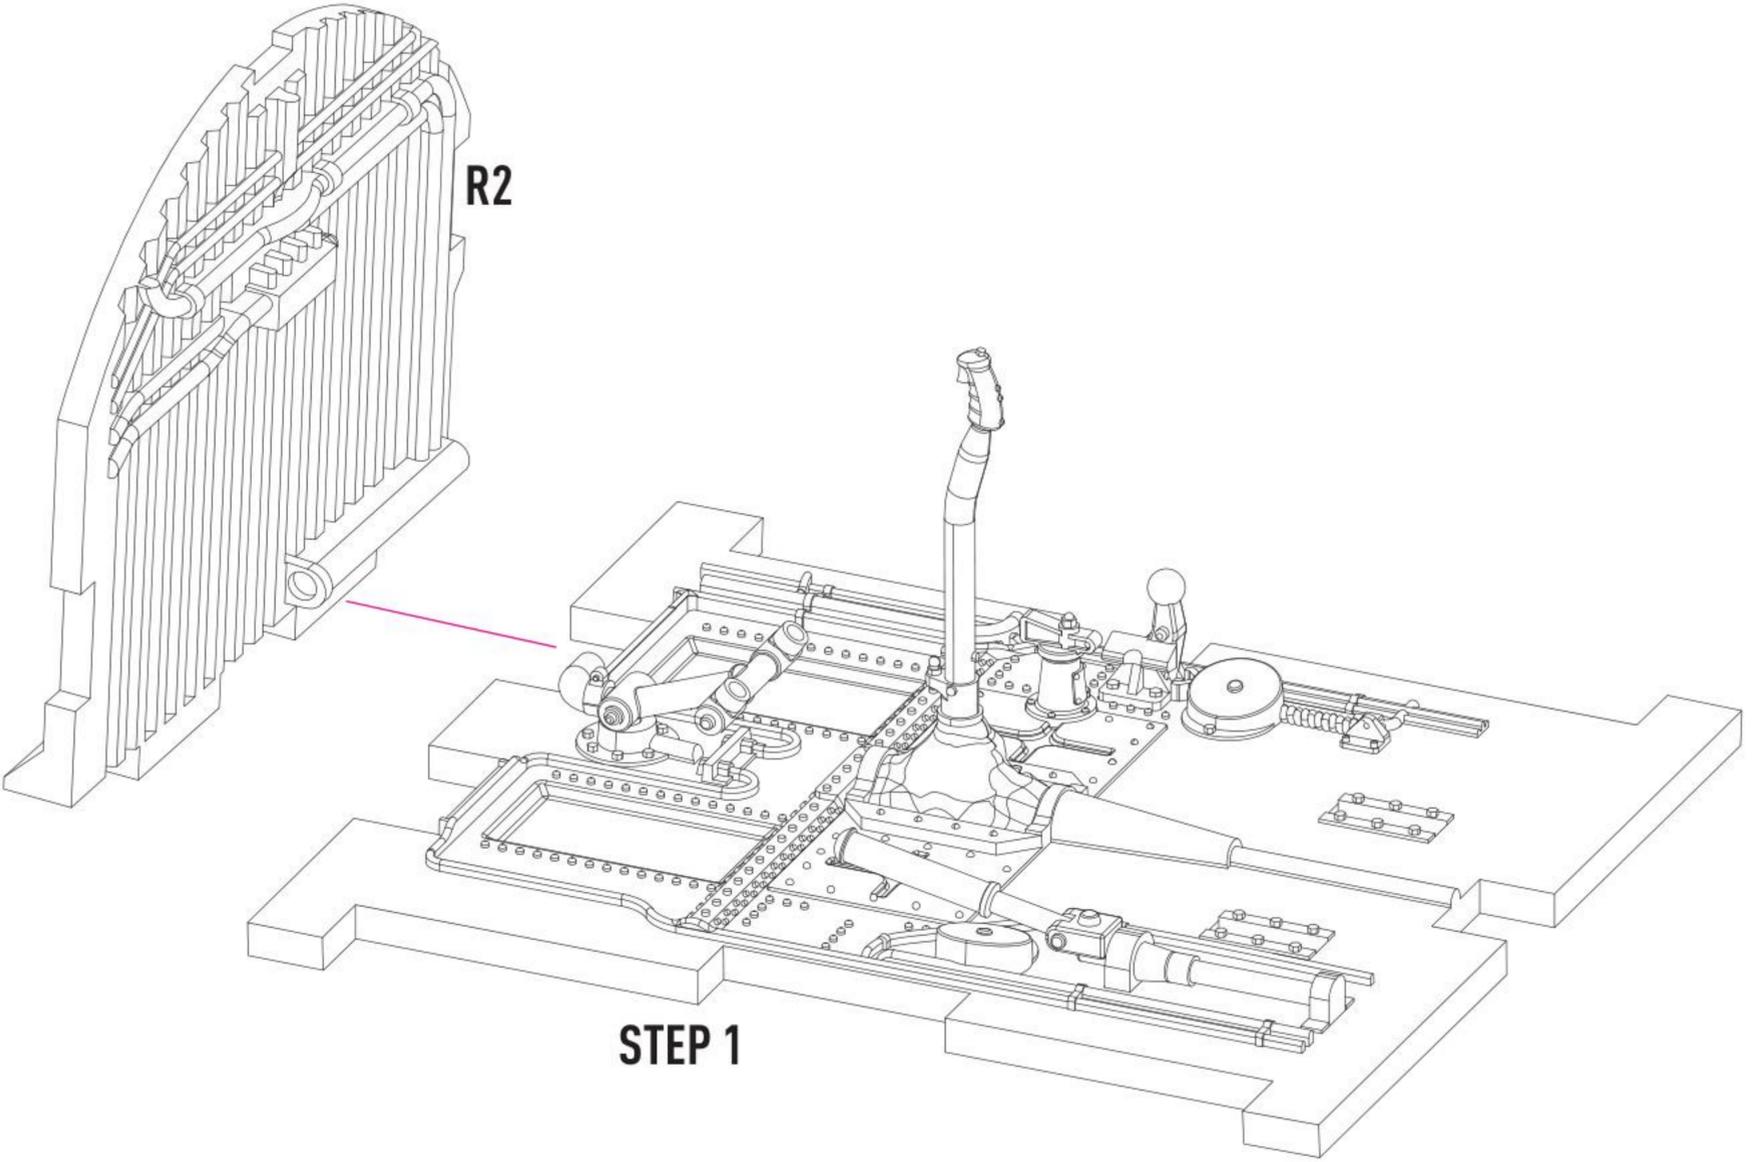



6

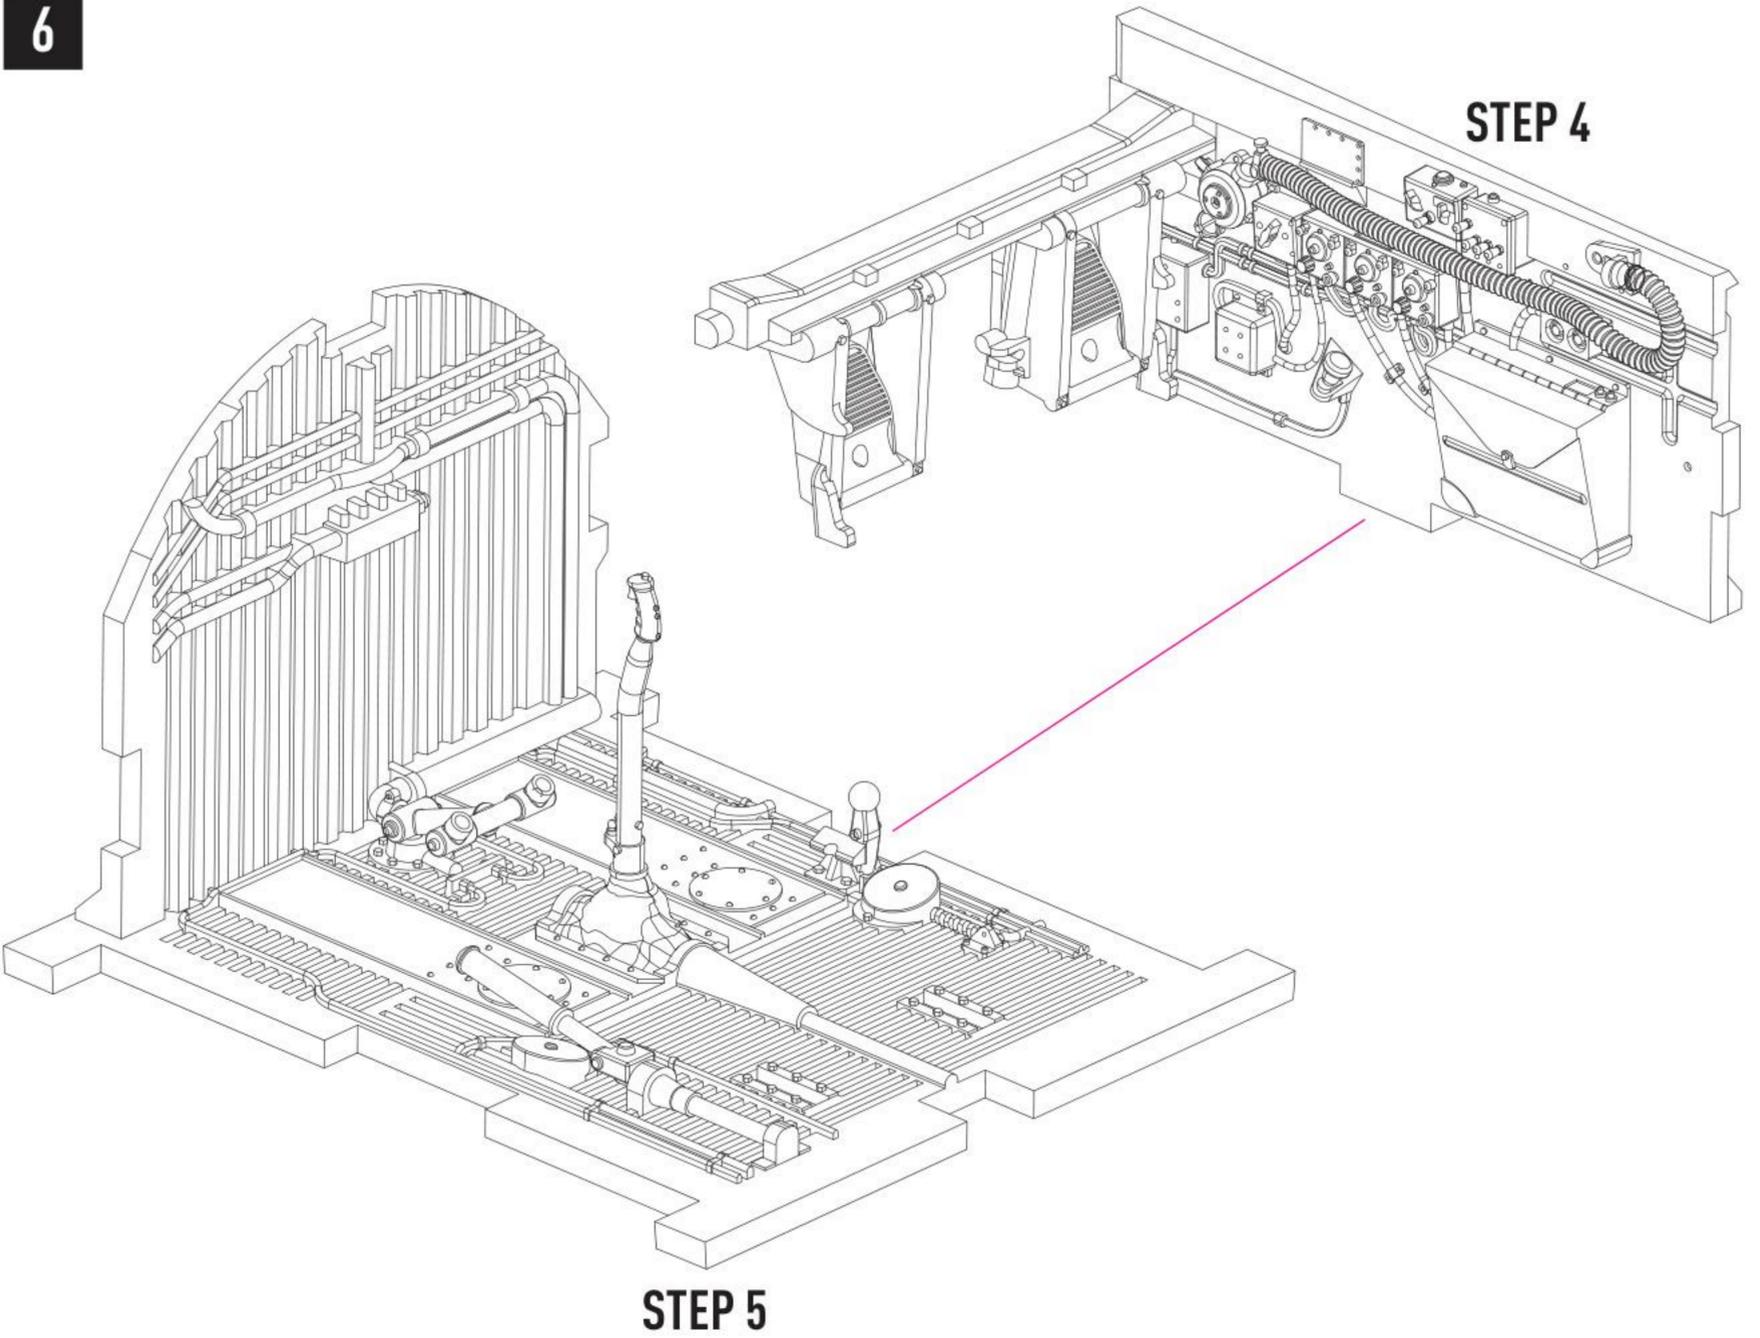


7 BEFORE STICKING THE FILM F1 AND F2, PAINT THE REVERSE SIDE WITH WHITE PAINT

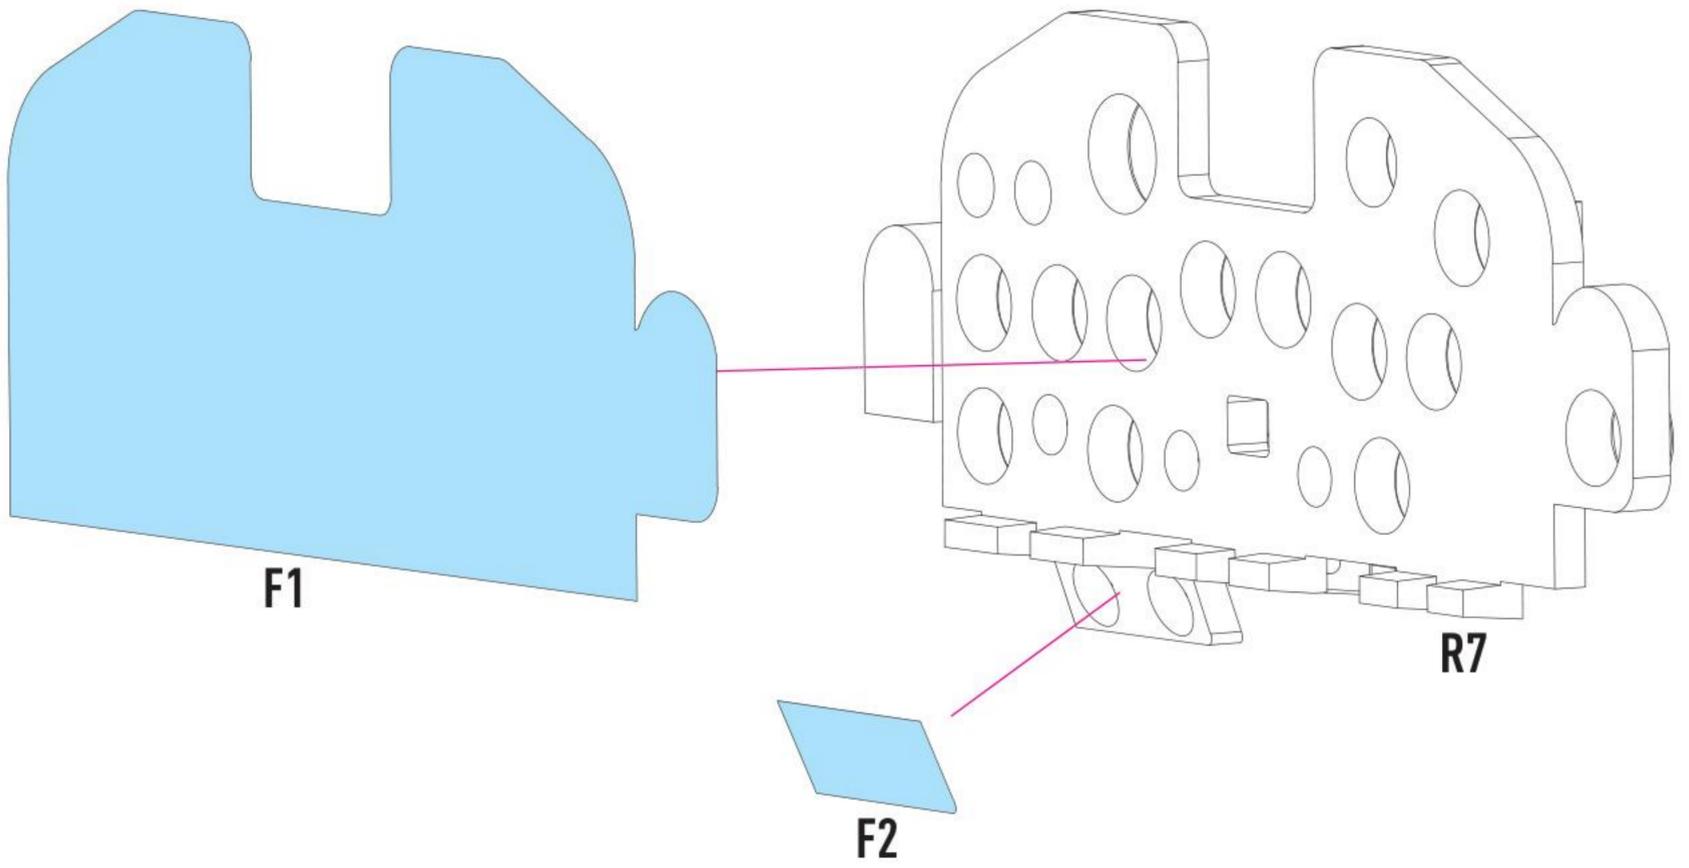


8

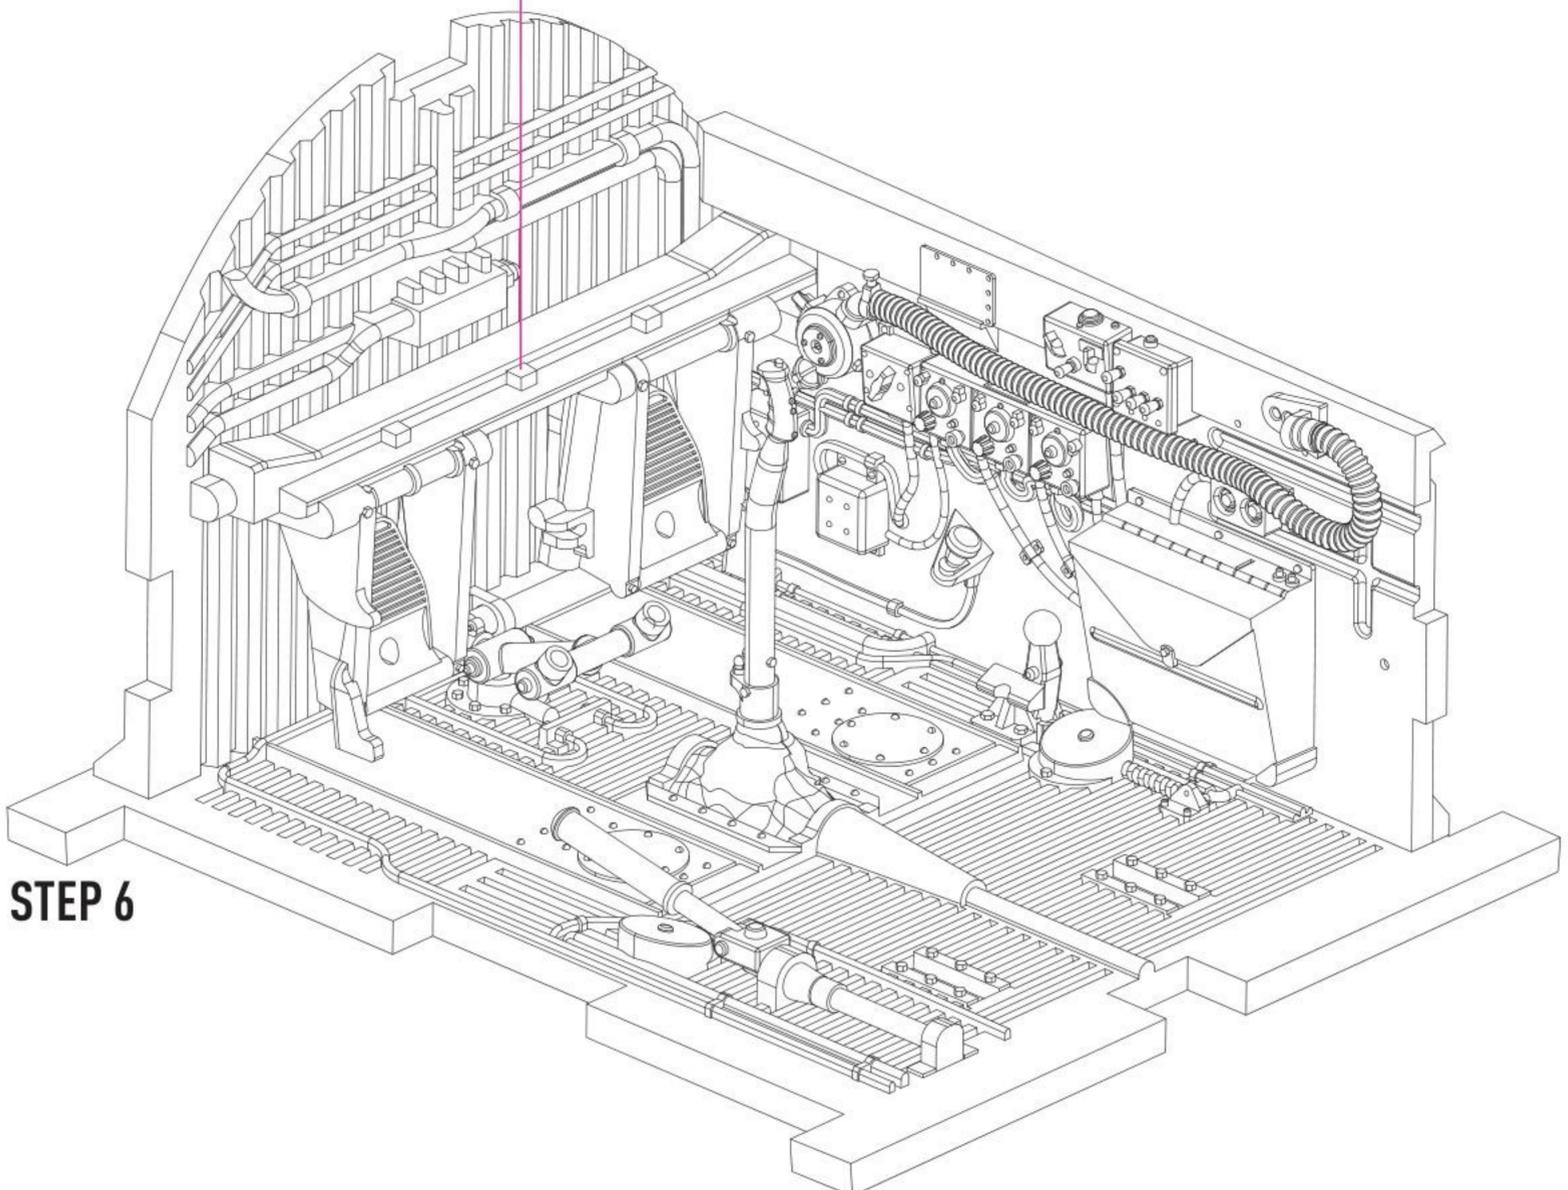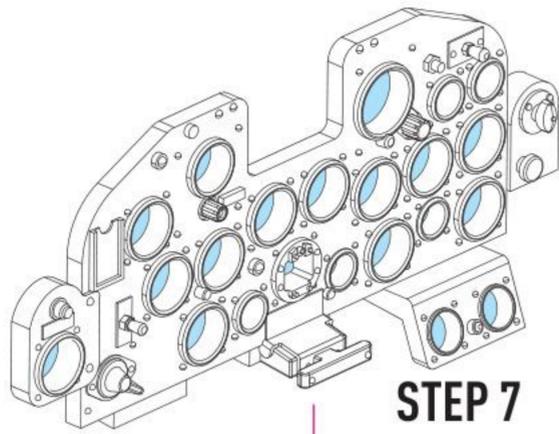

9

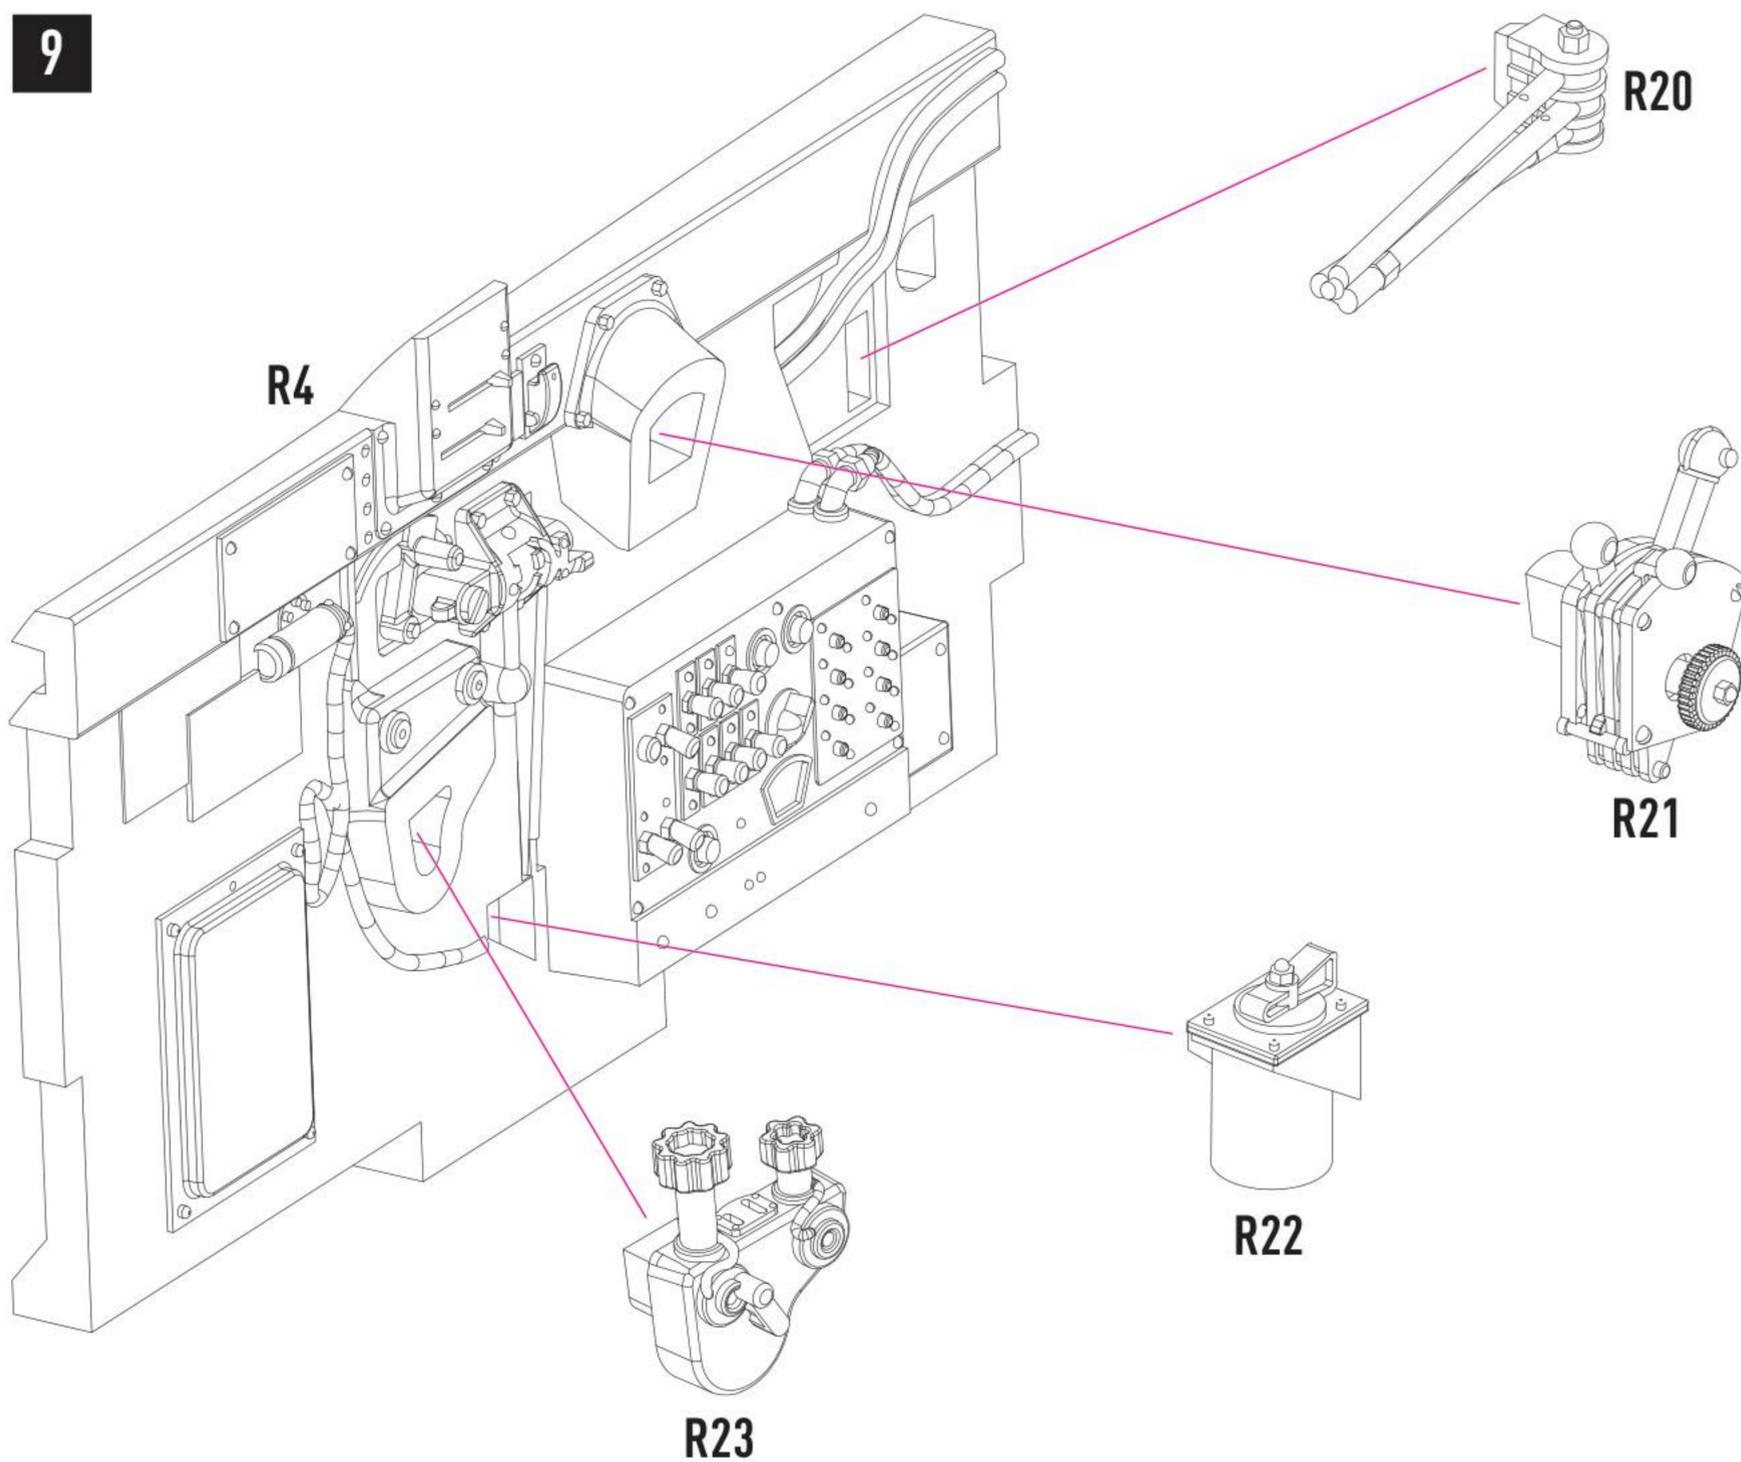


10

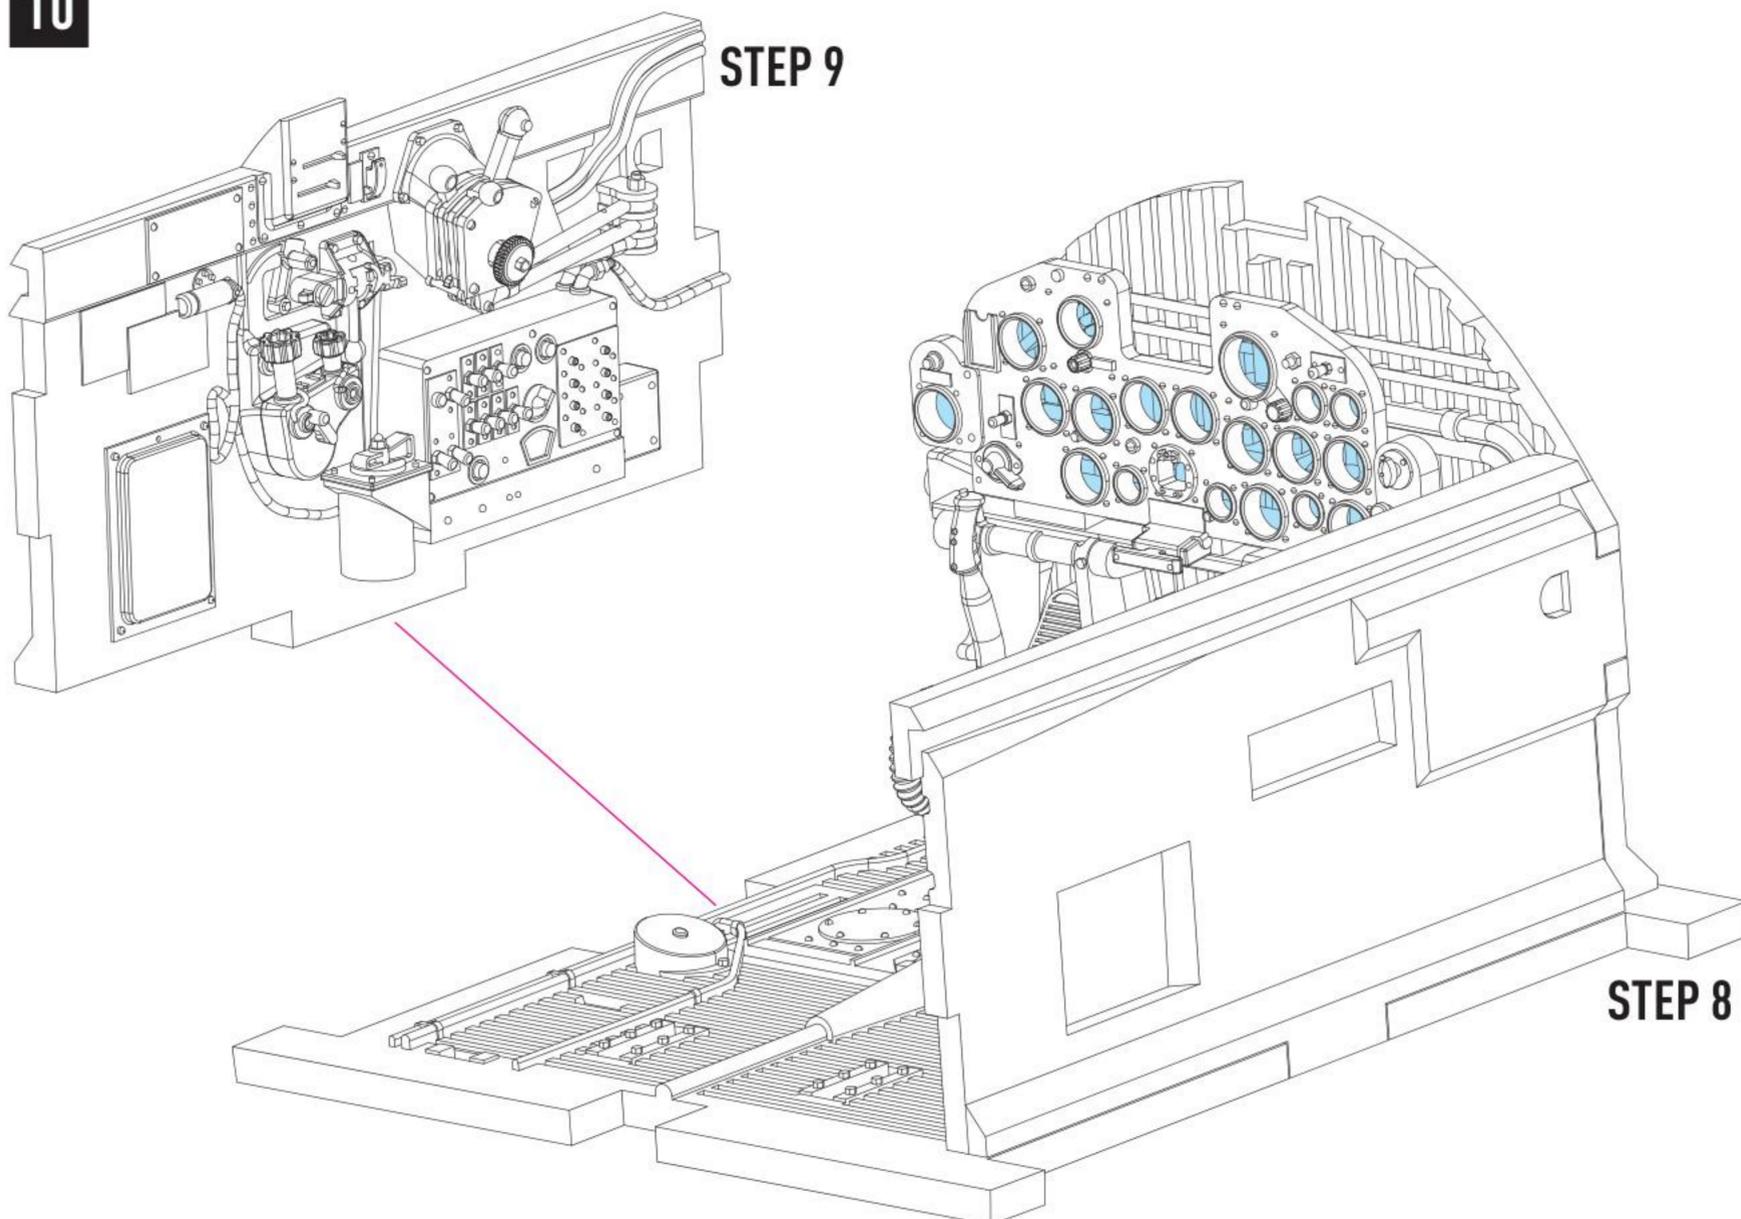


11


STEP 10

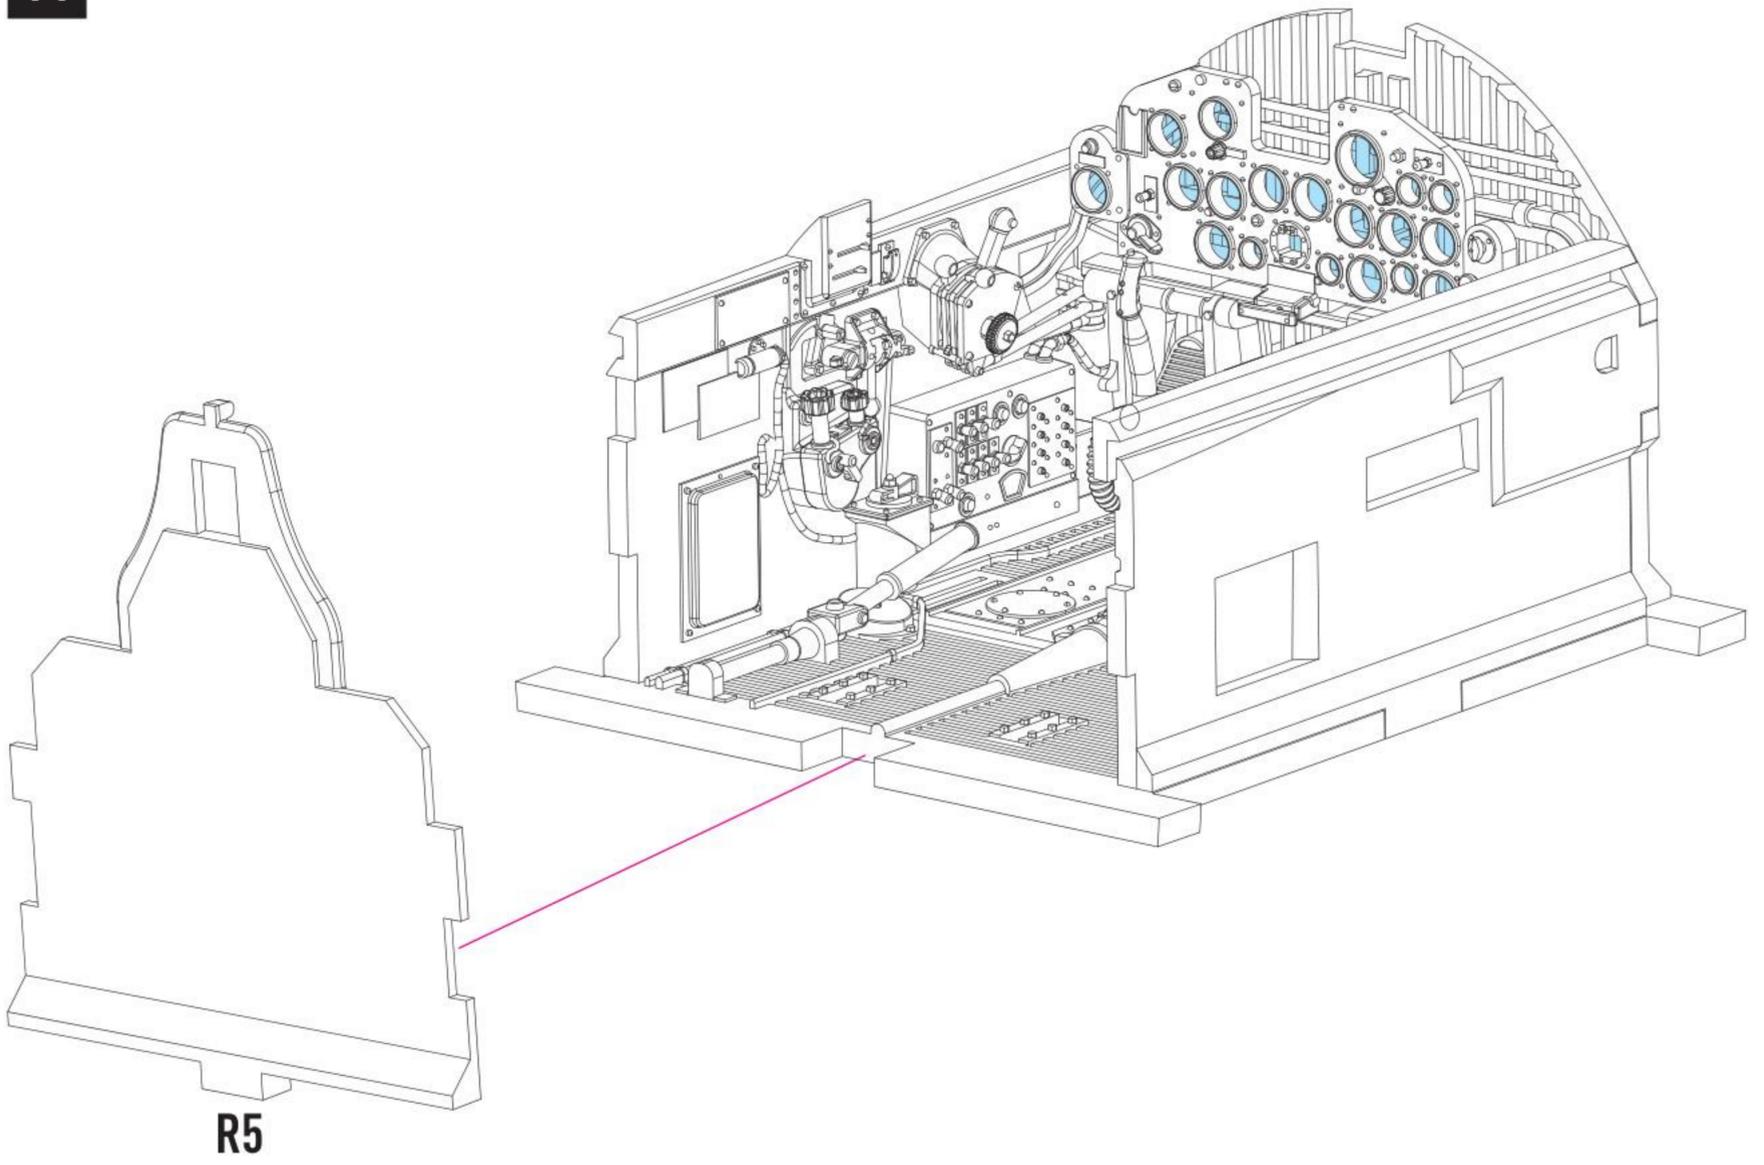


12

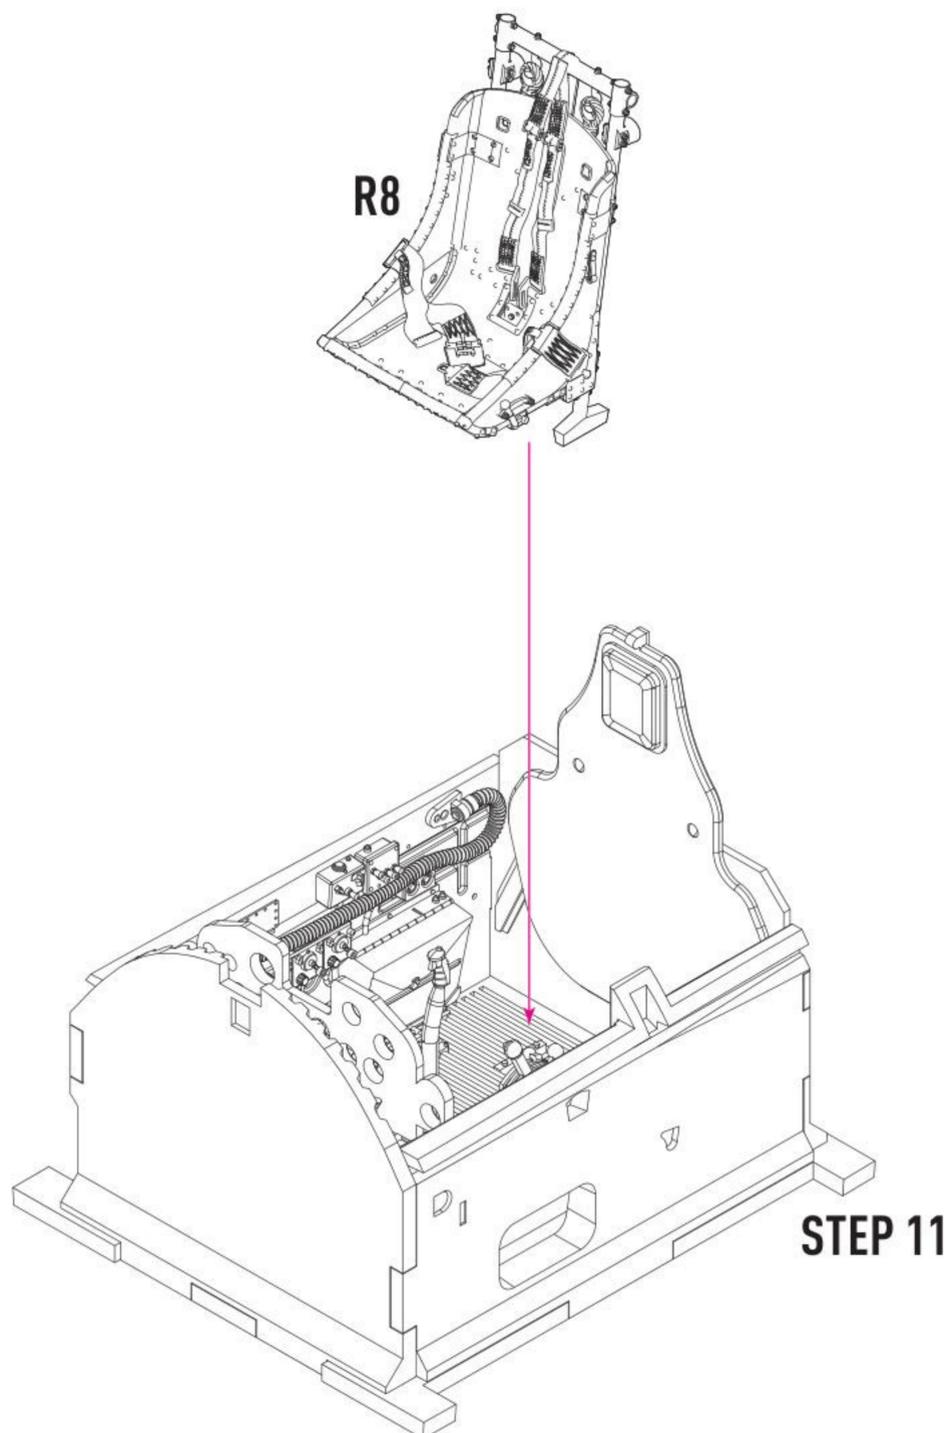


STEP 11

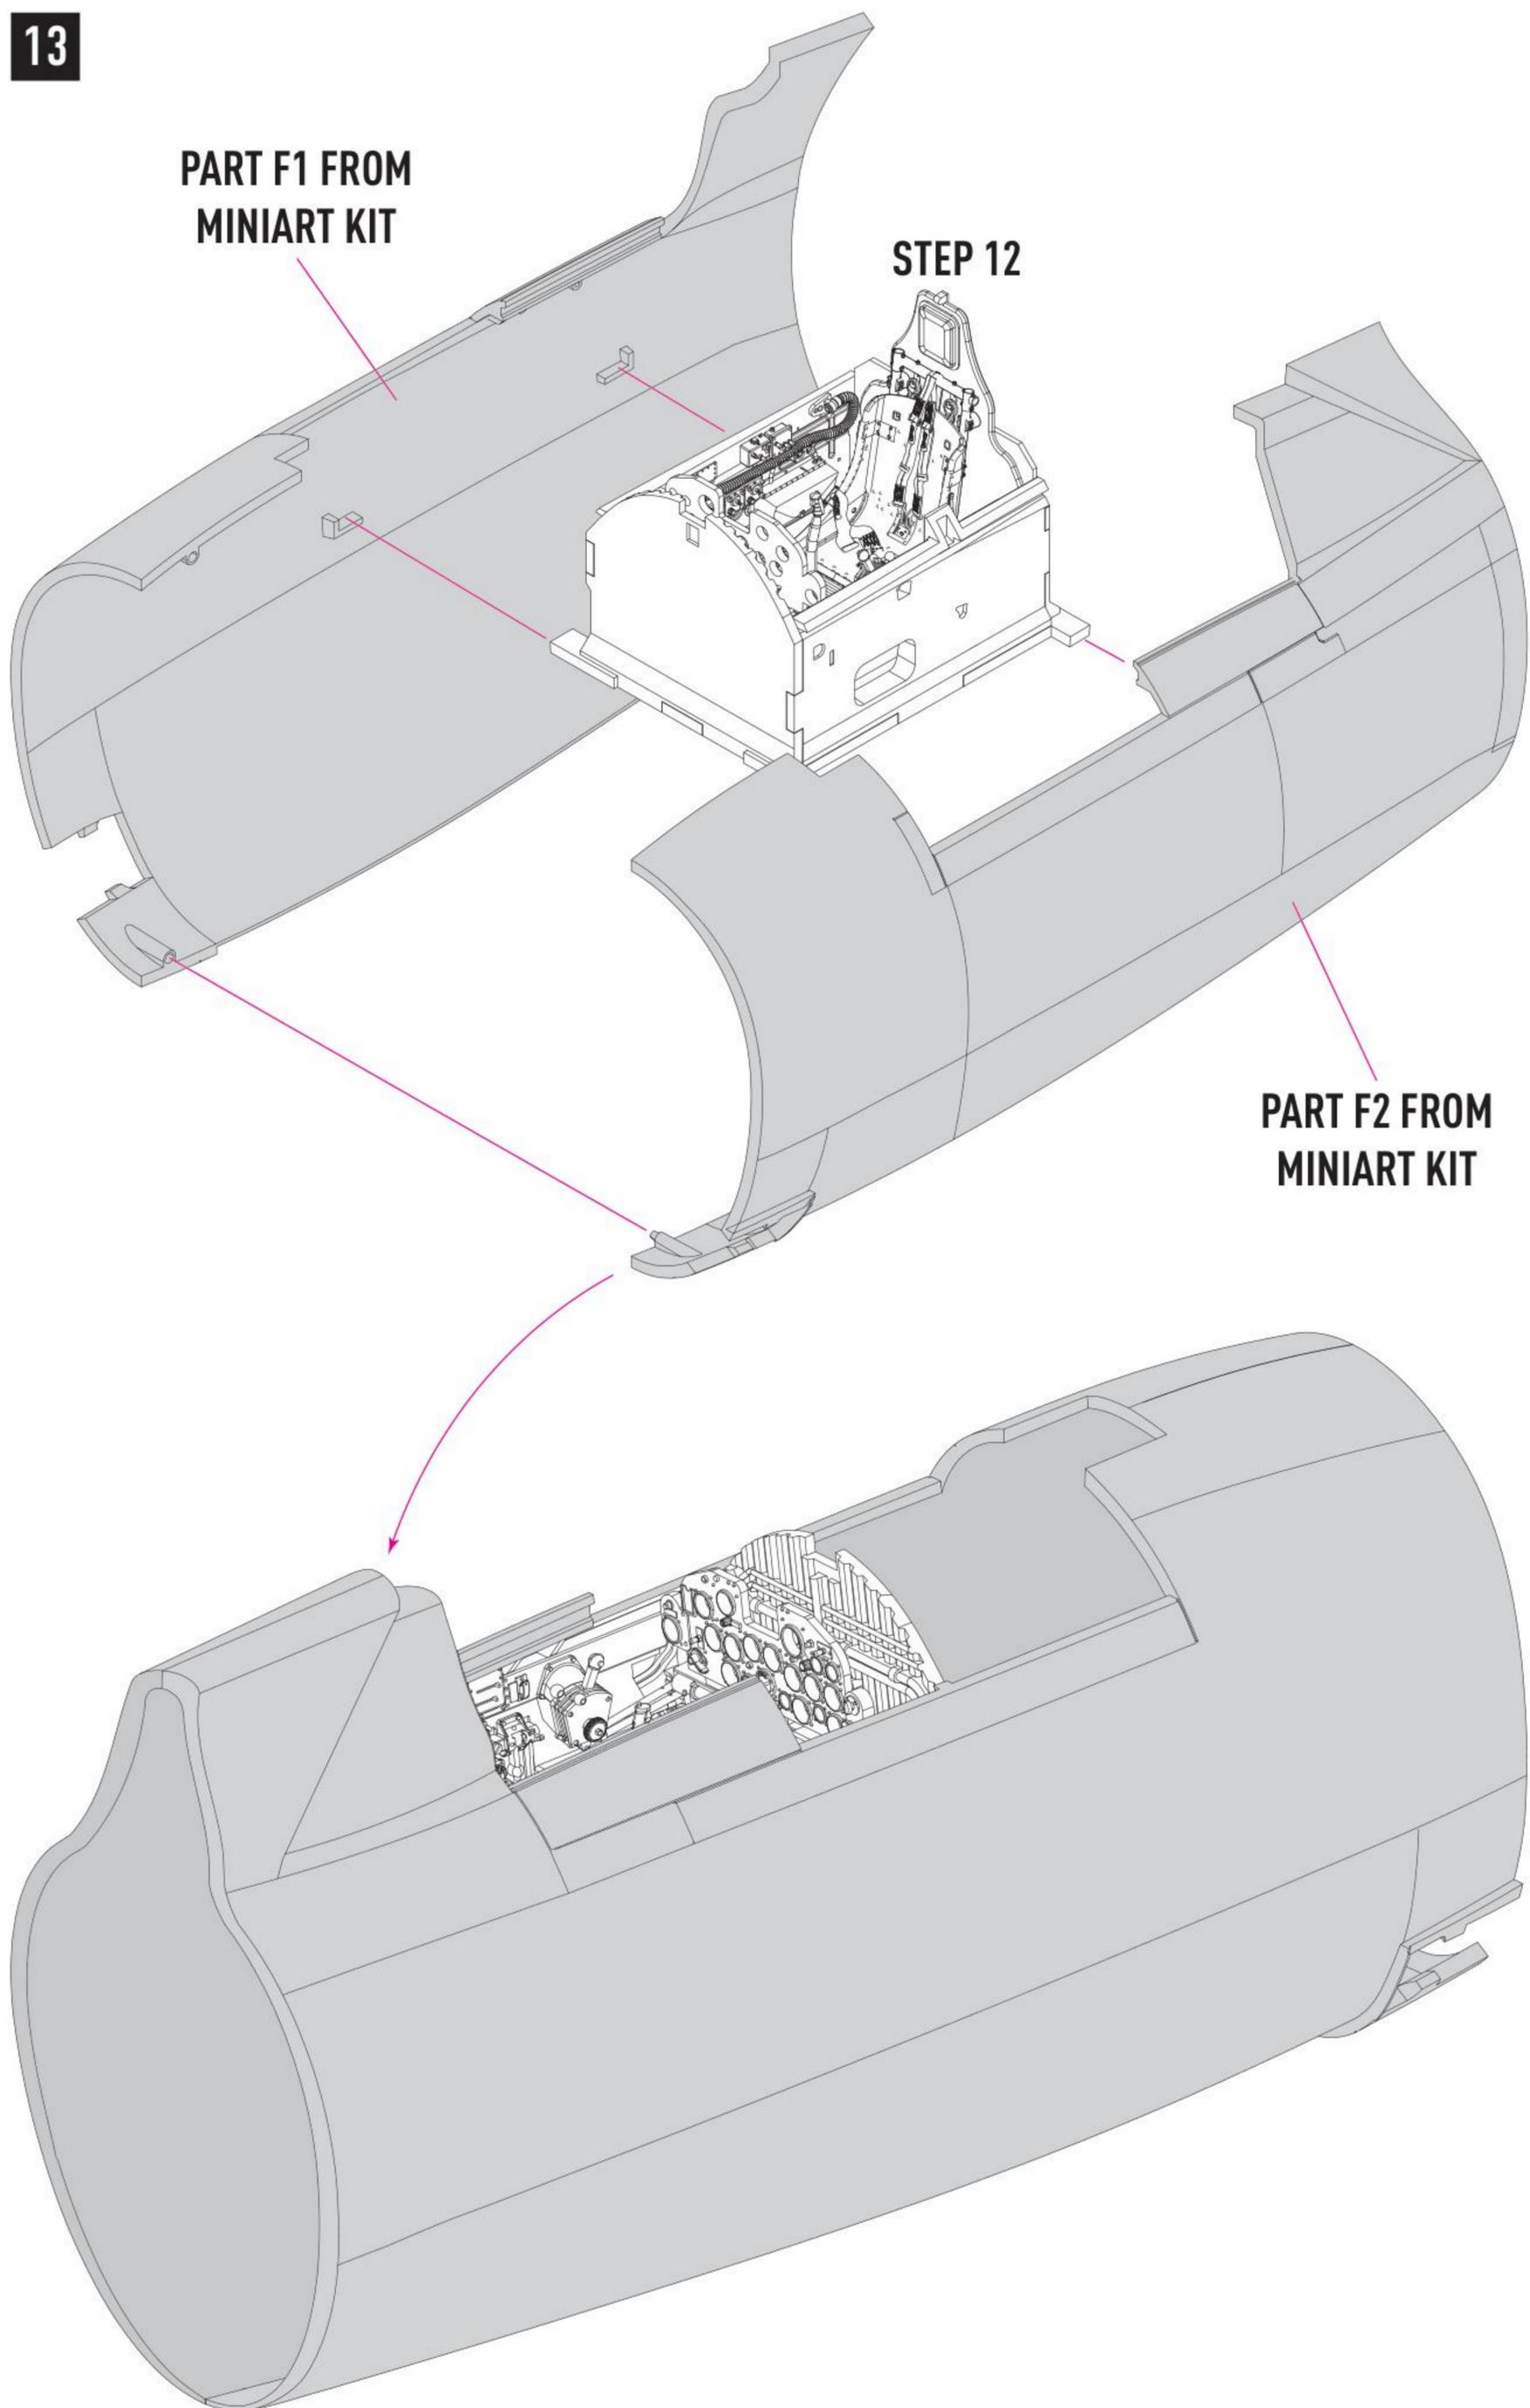


14

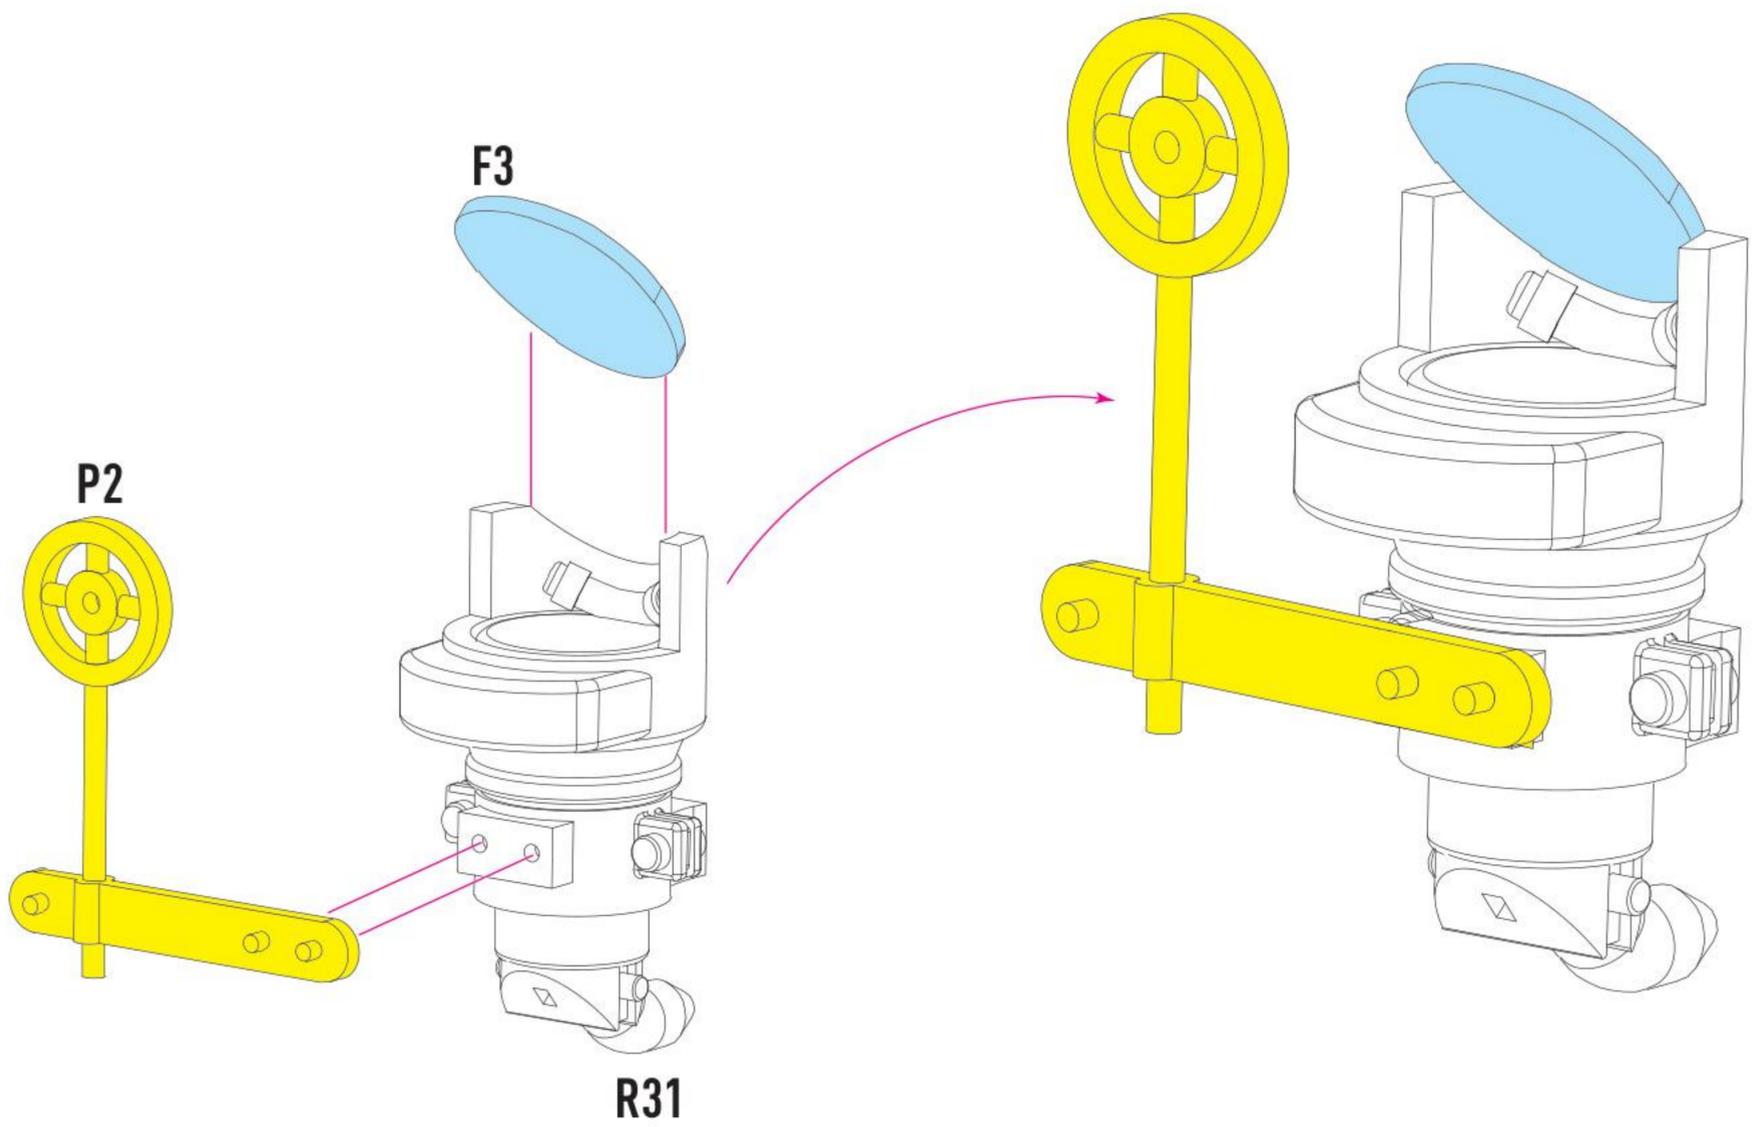

15

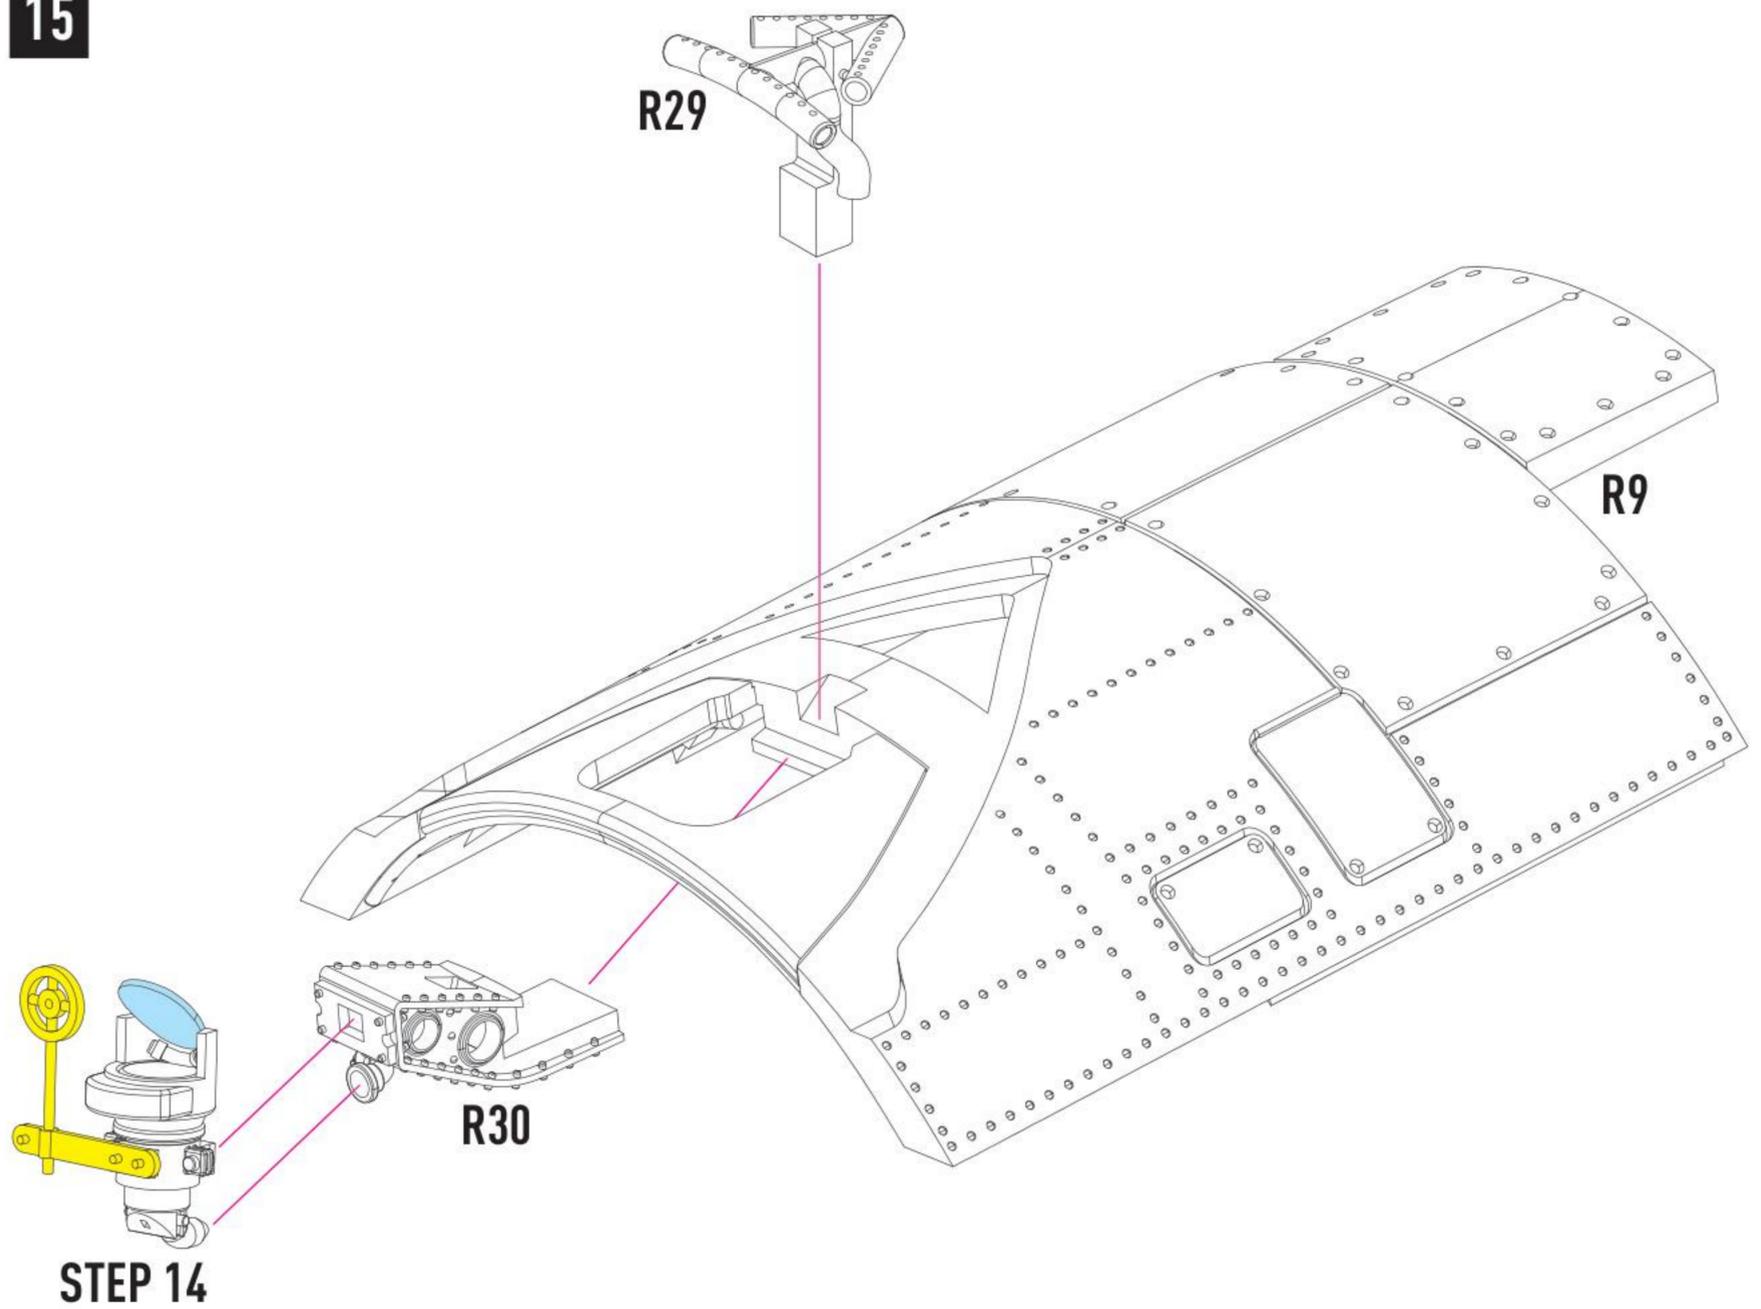

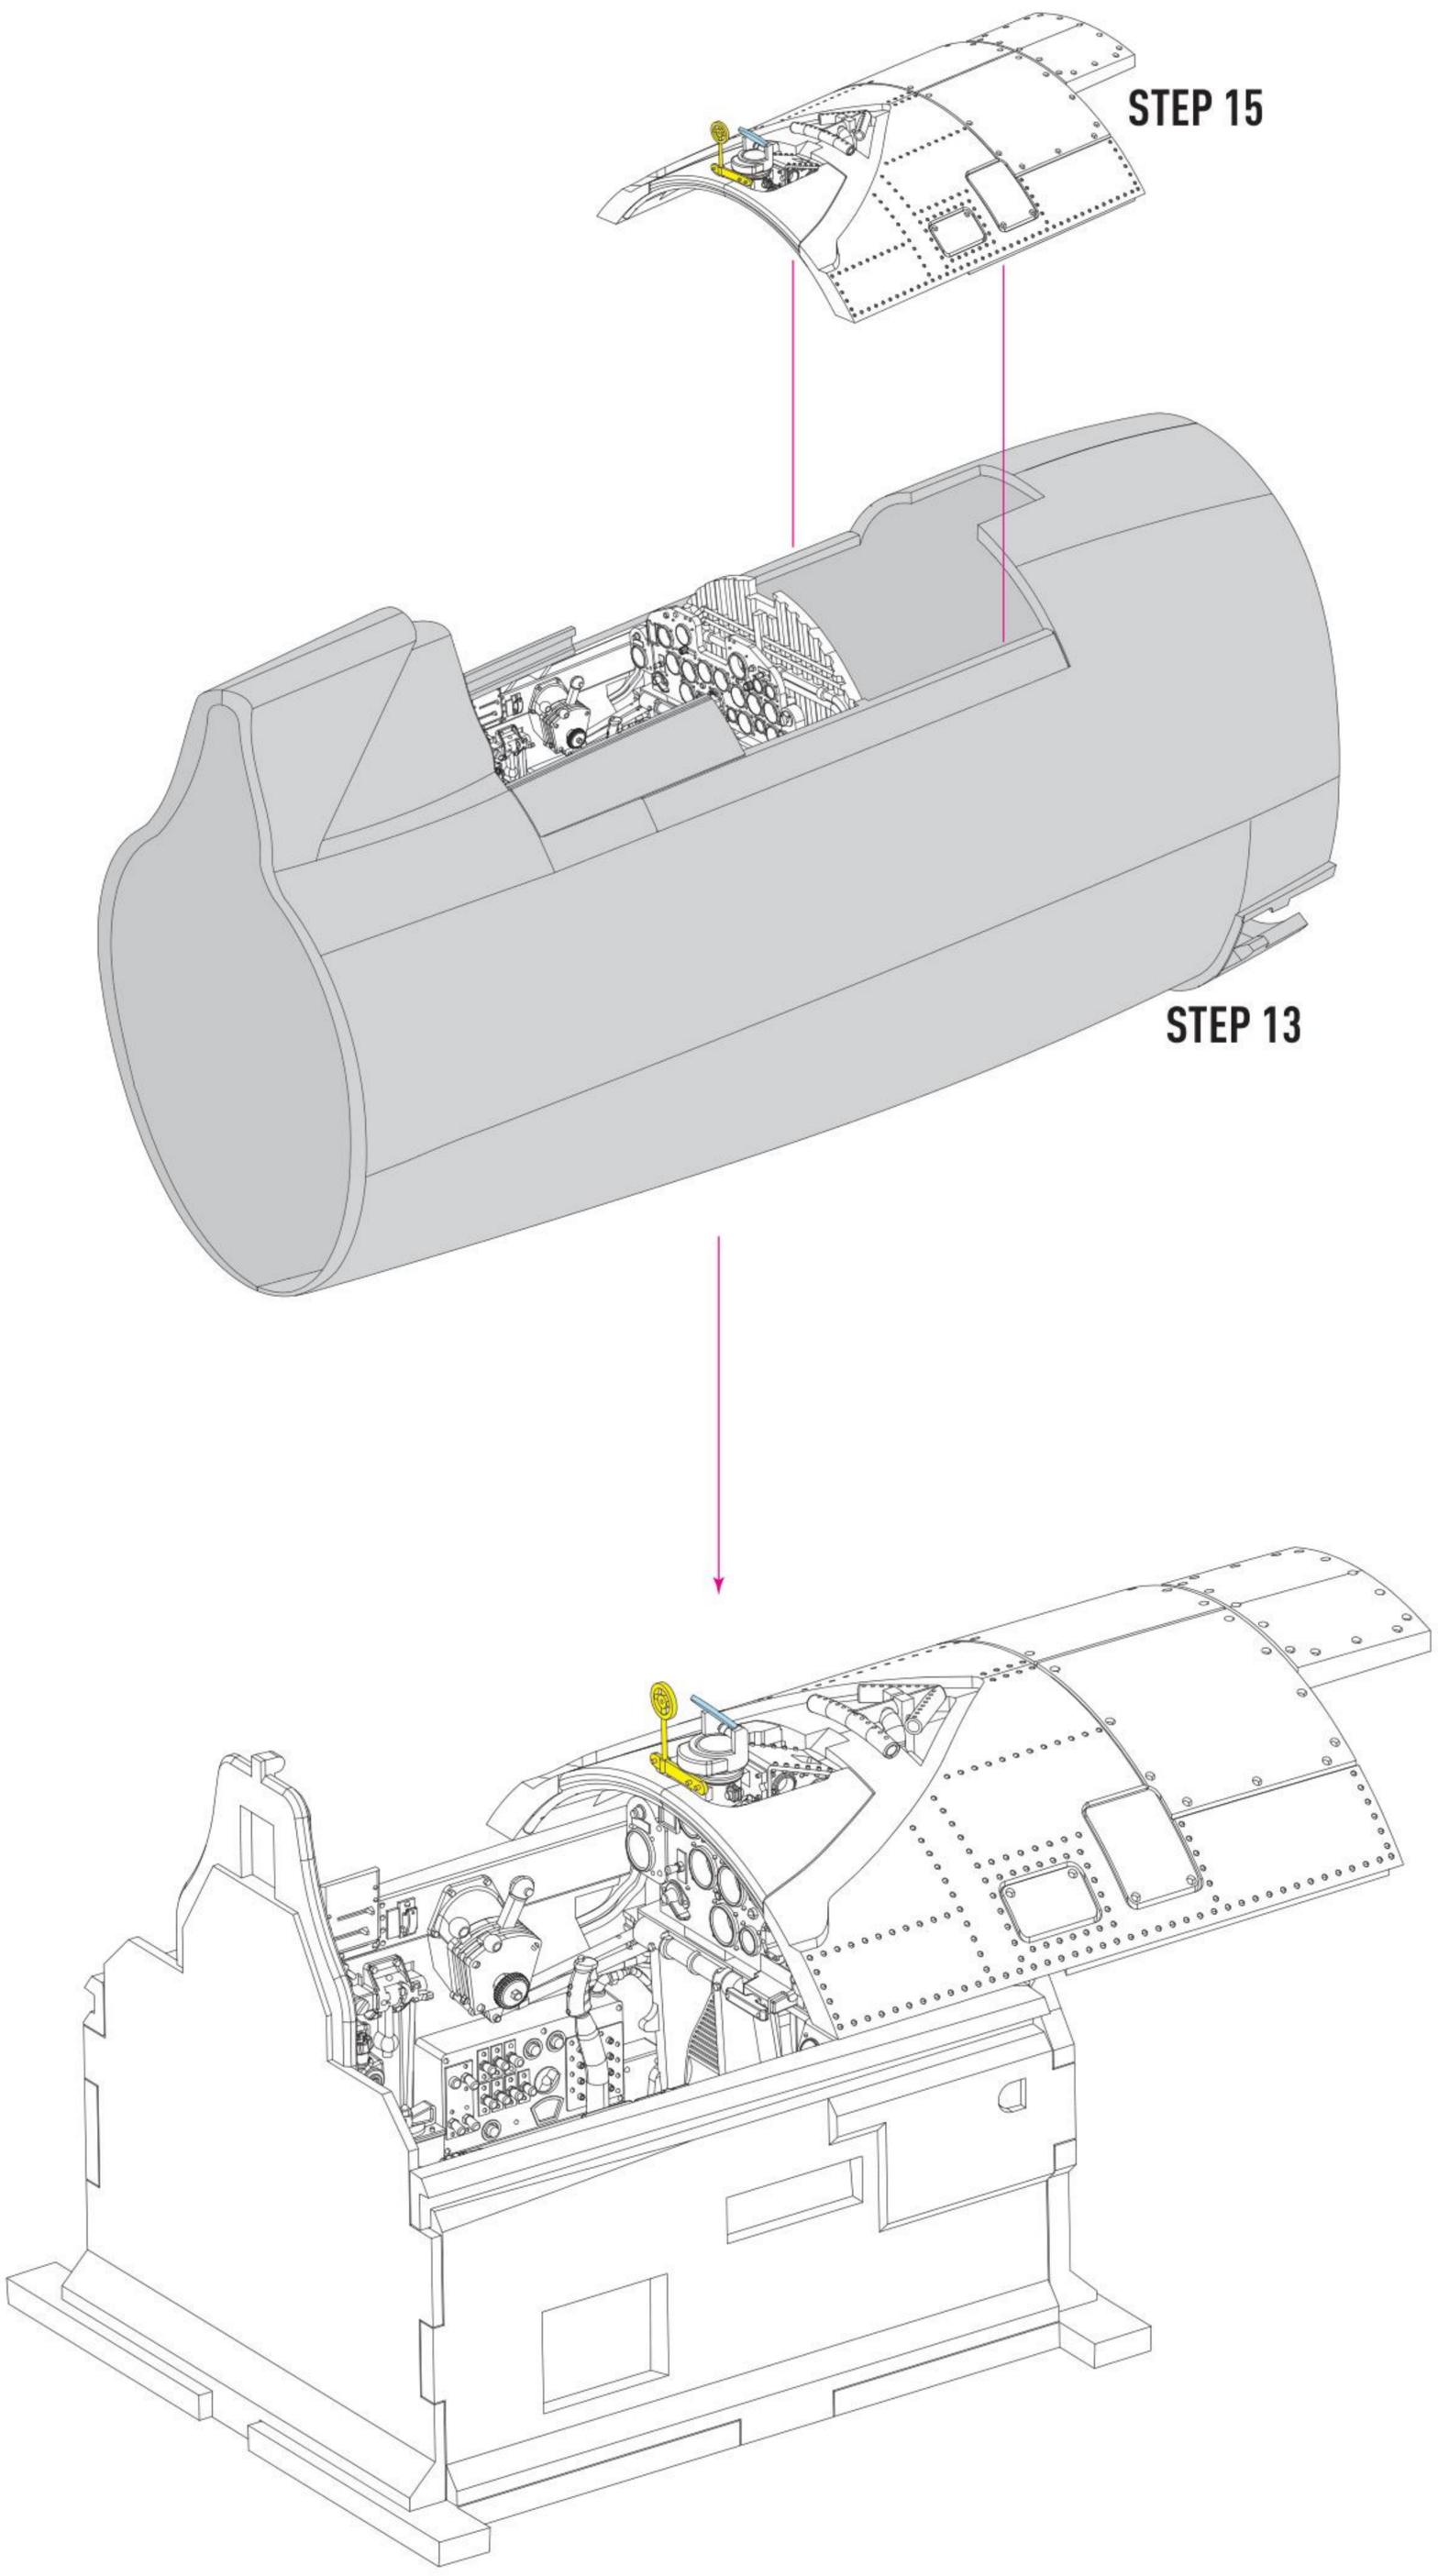

STEP 15

STEP 13

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua