





USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS


### DETAILS AFTER REMOVAL FROM SUPPORTS

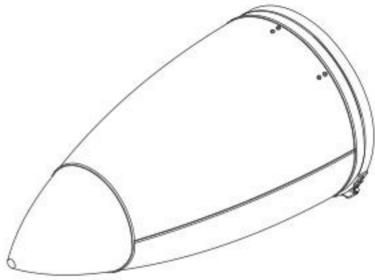

R3

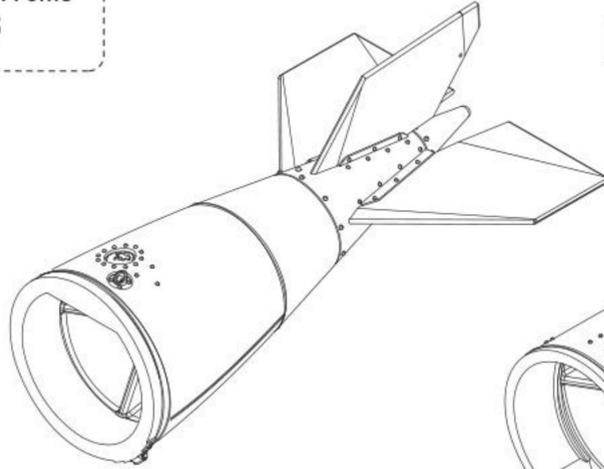


R4





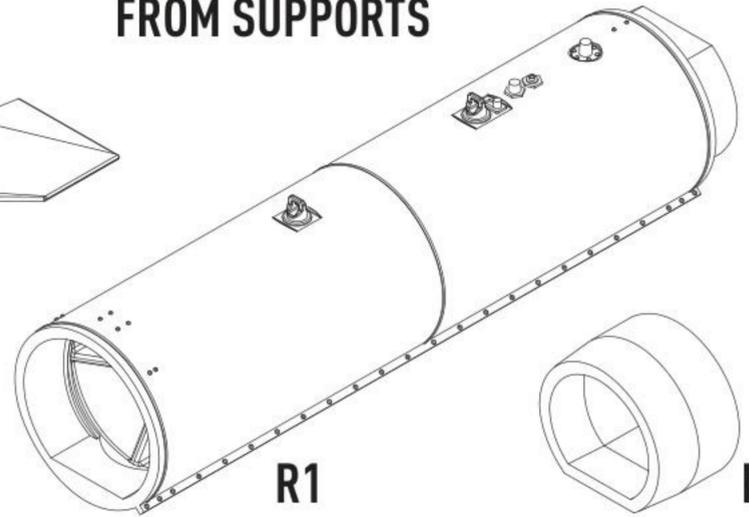


R1

R2

1

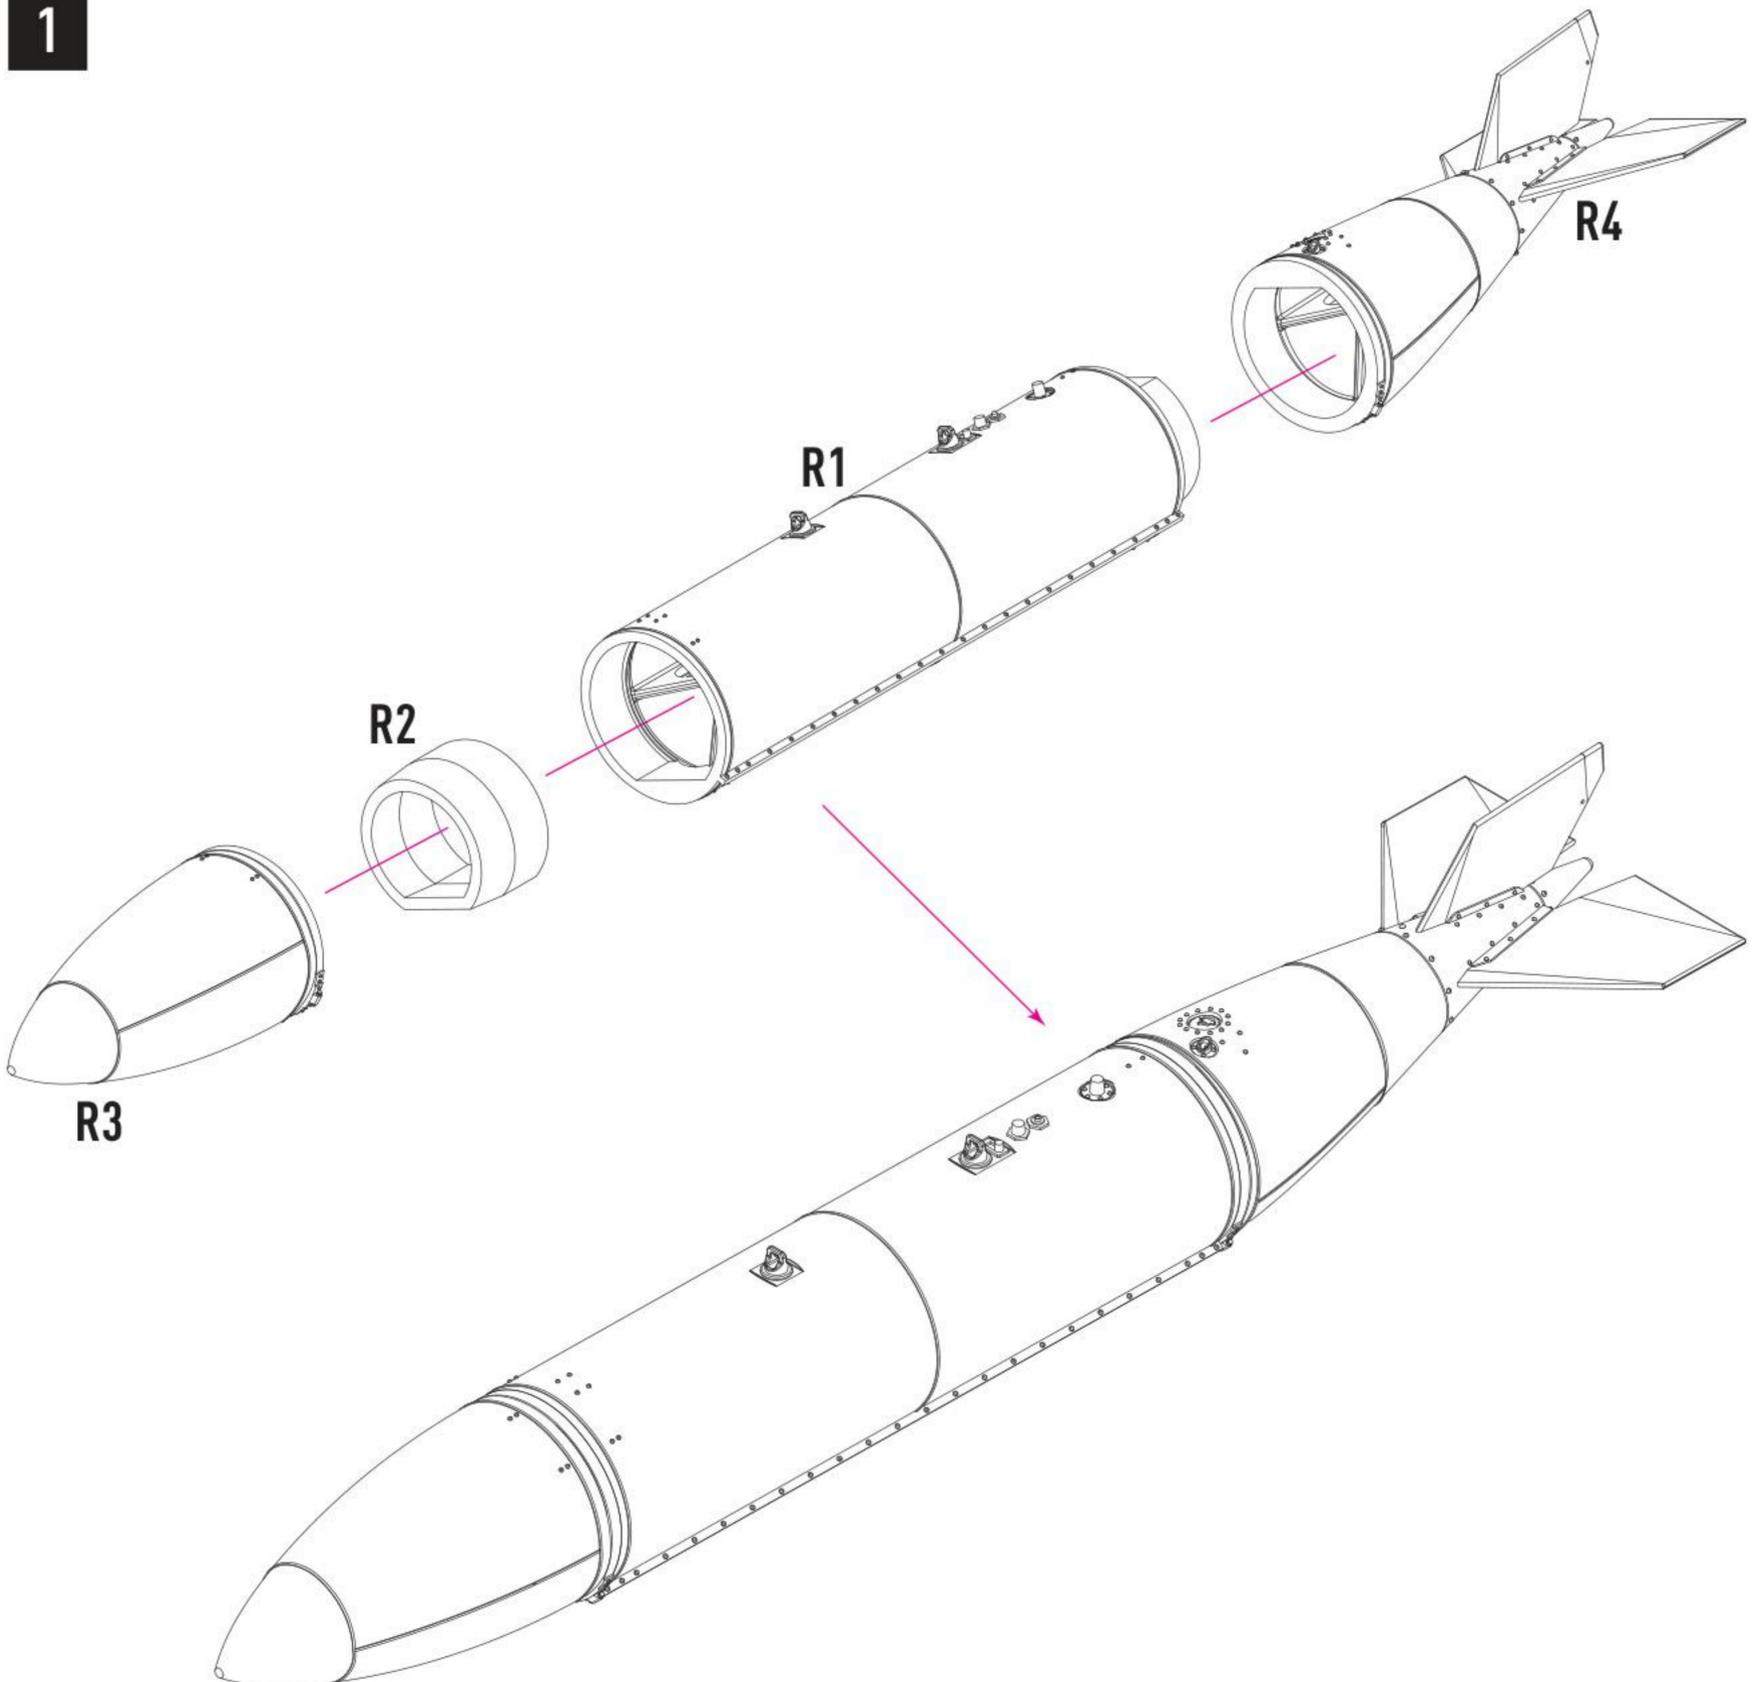

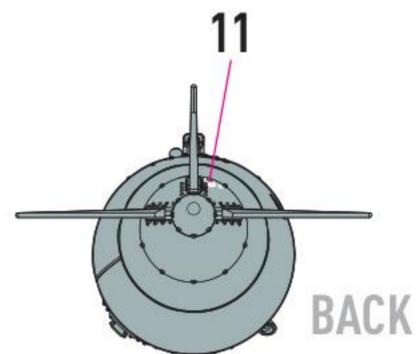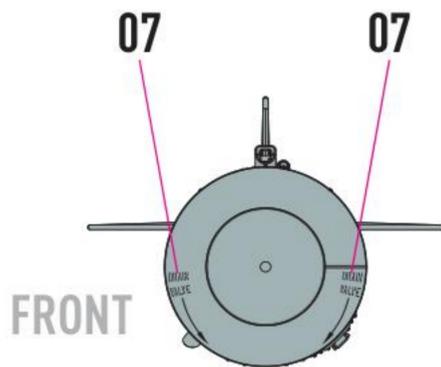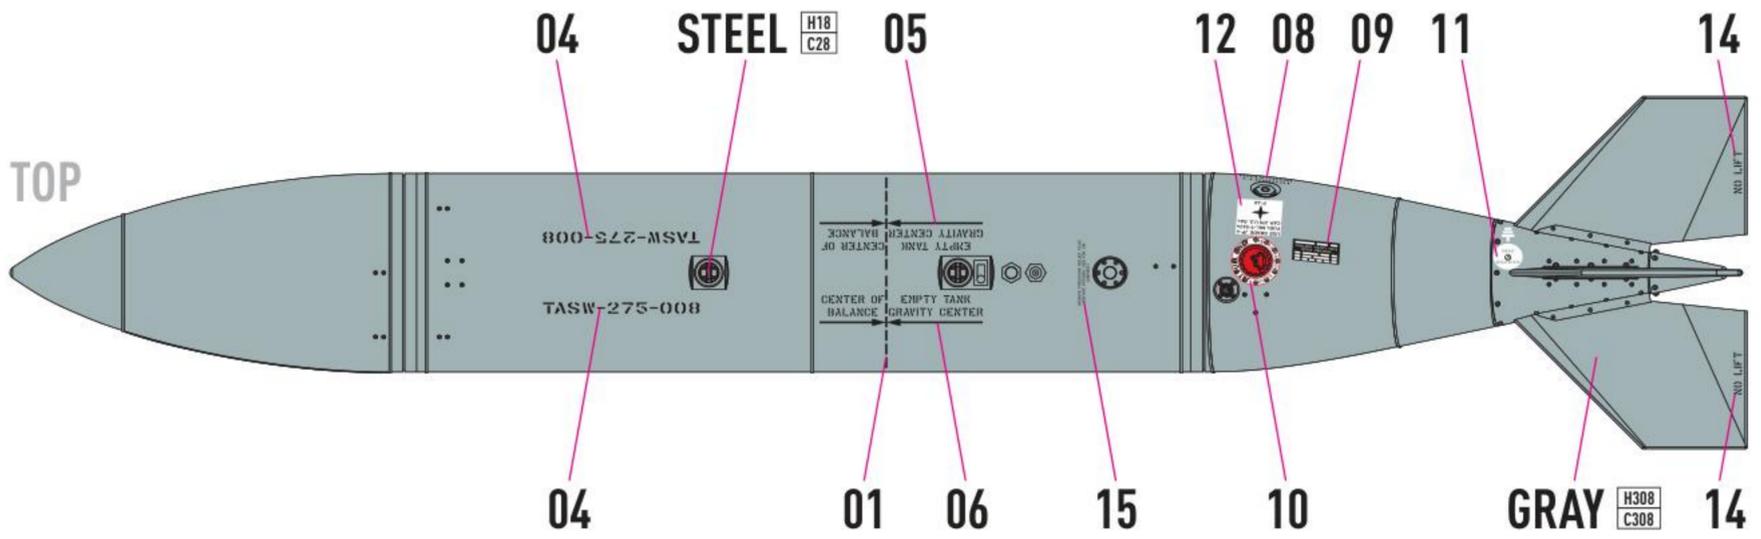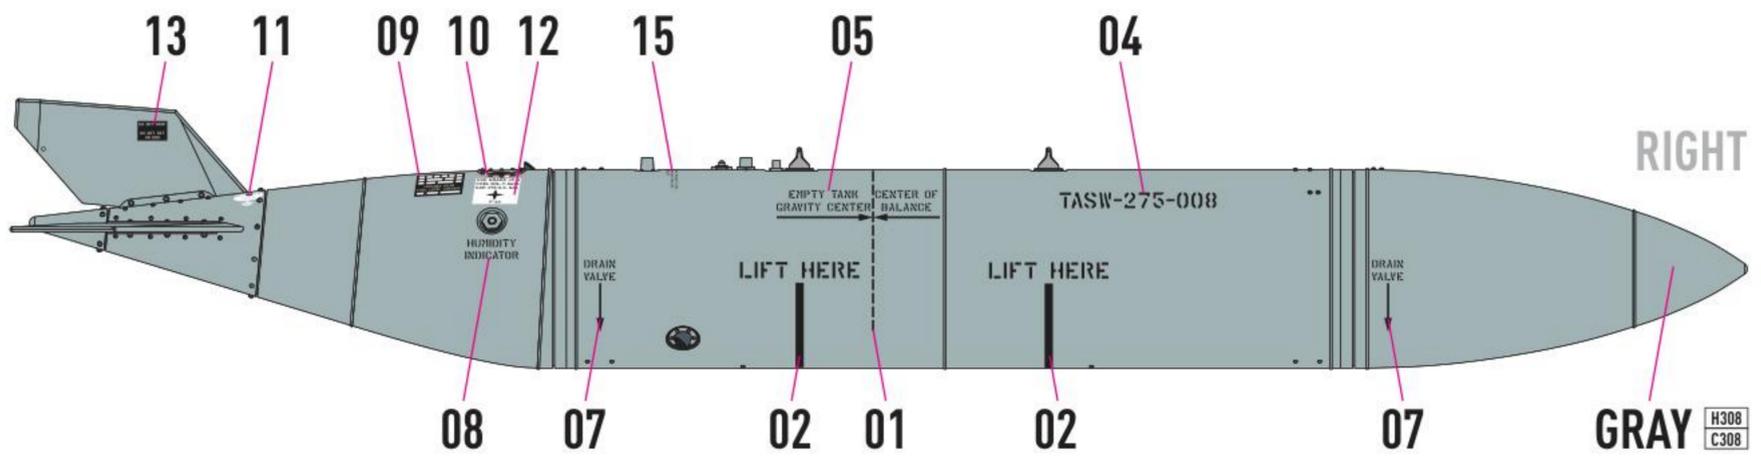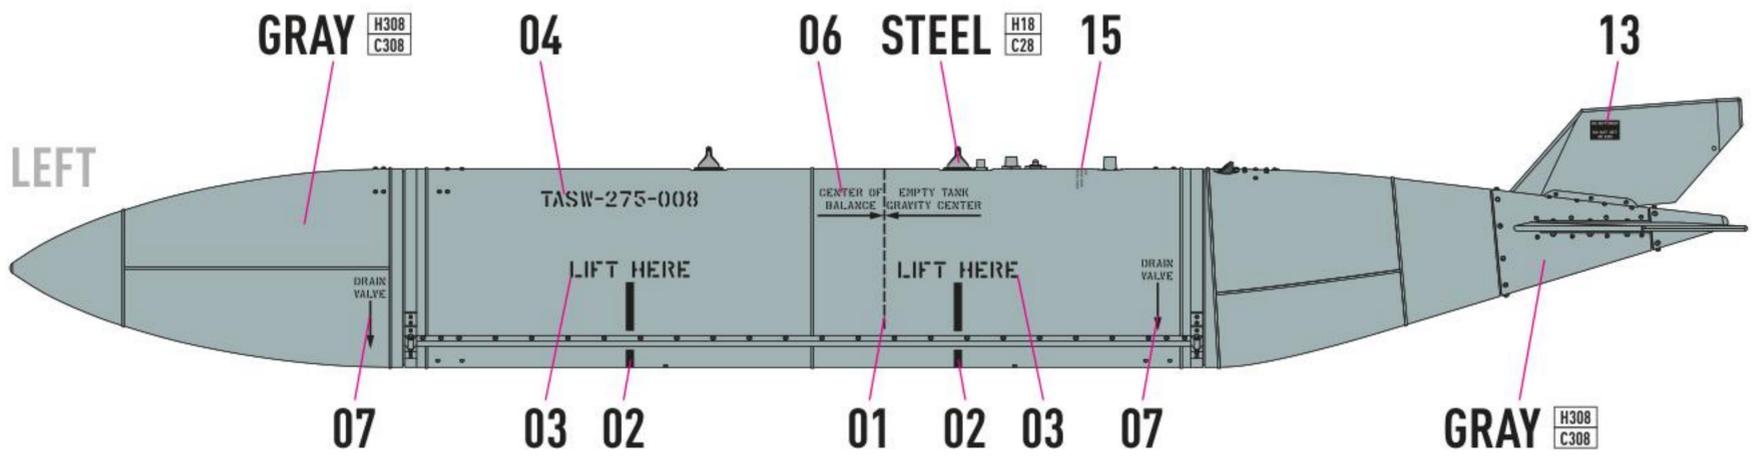

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
STEEL	H18	C28