

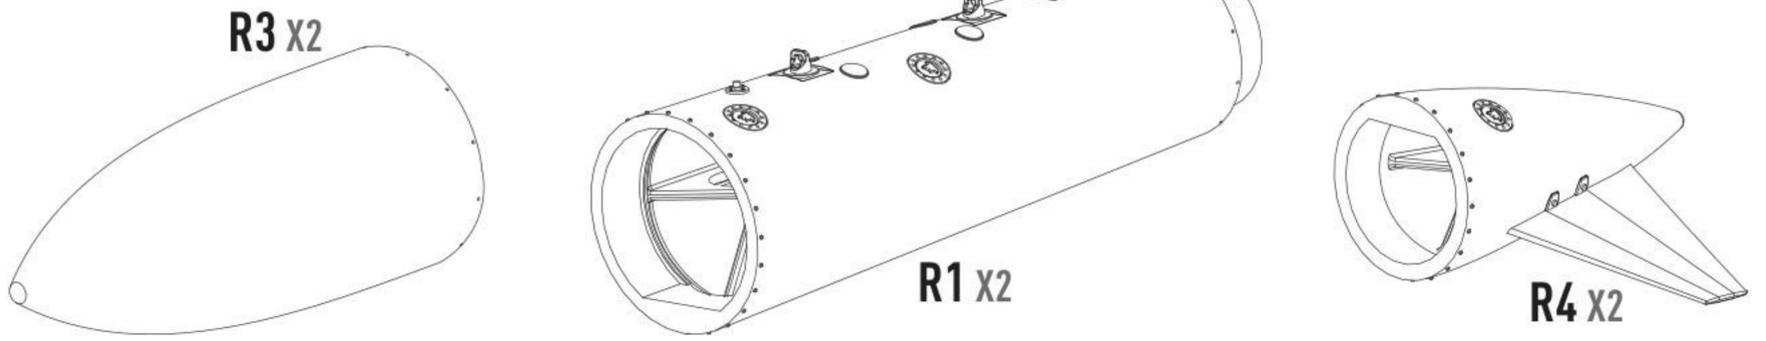







 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS

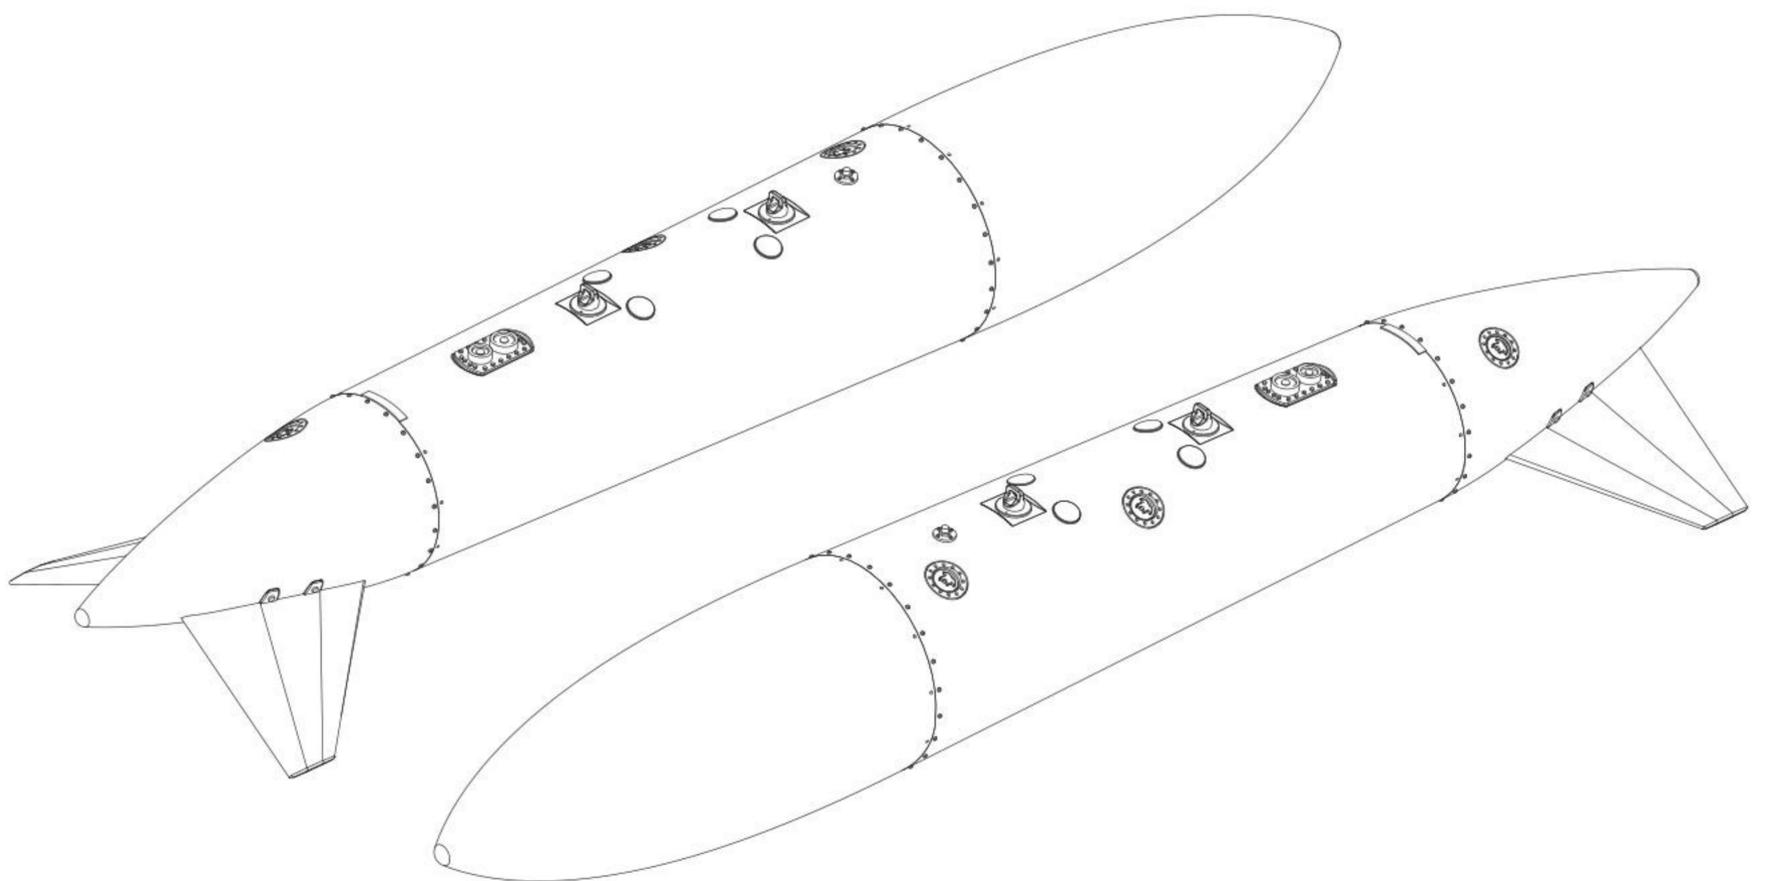

1 X2

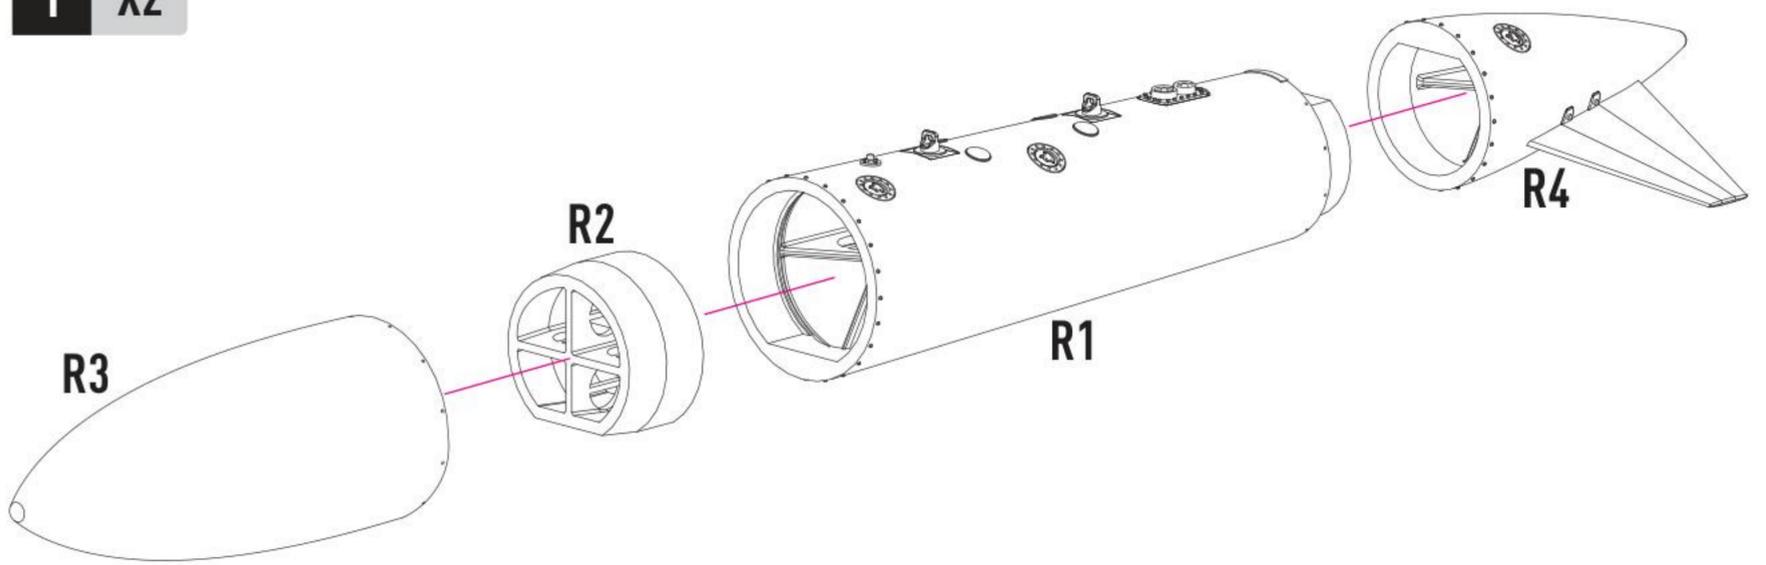

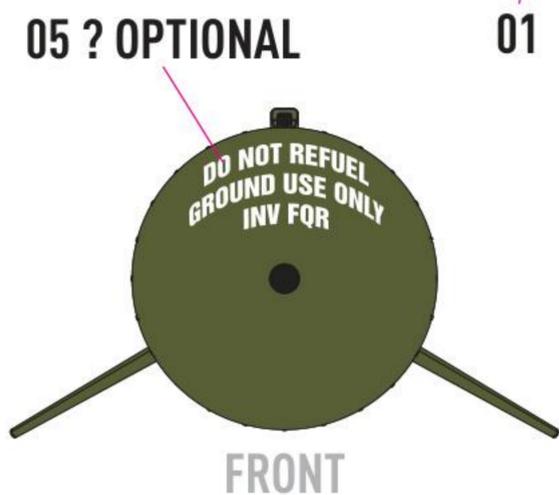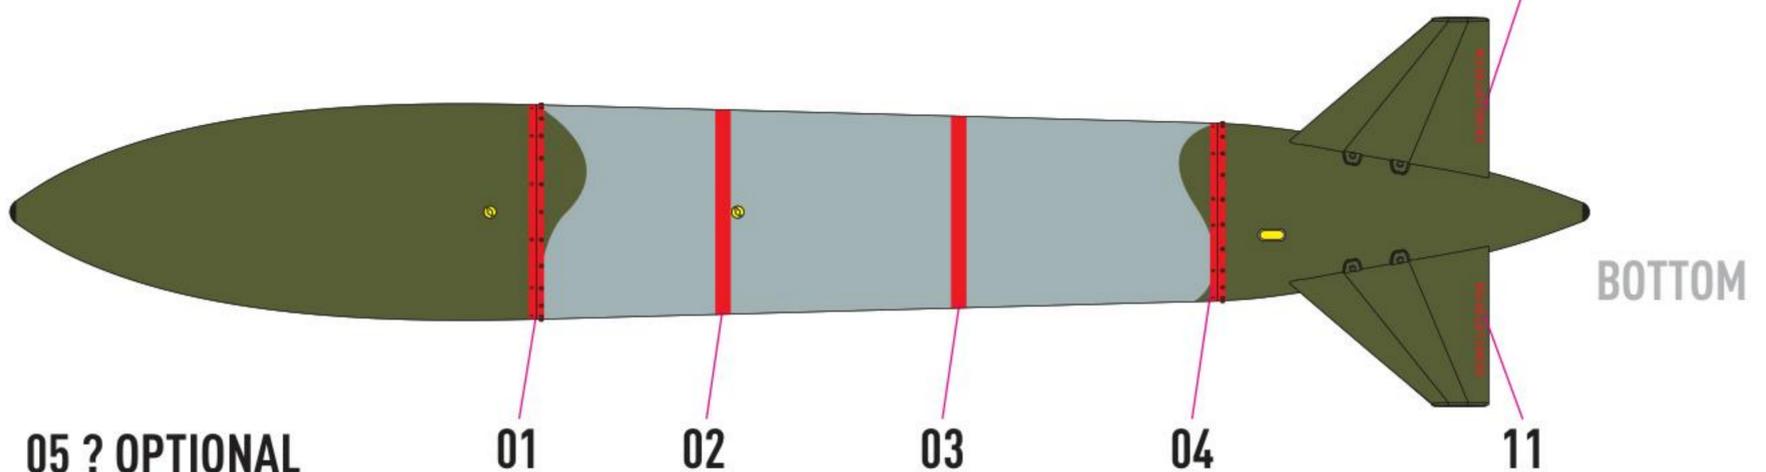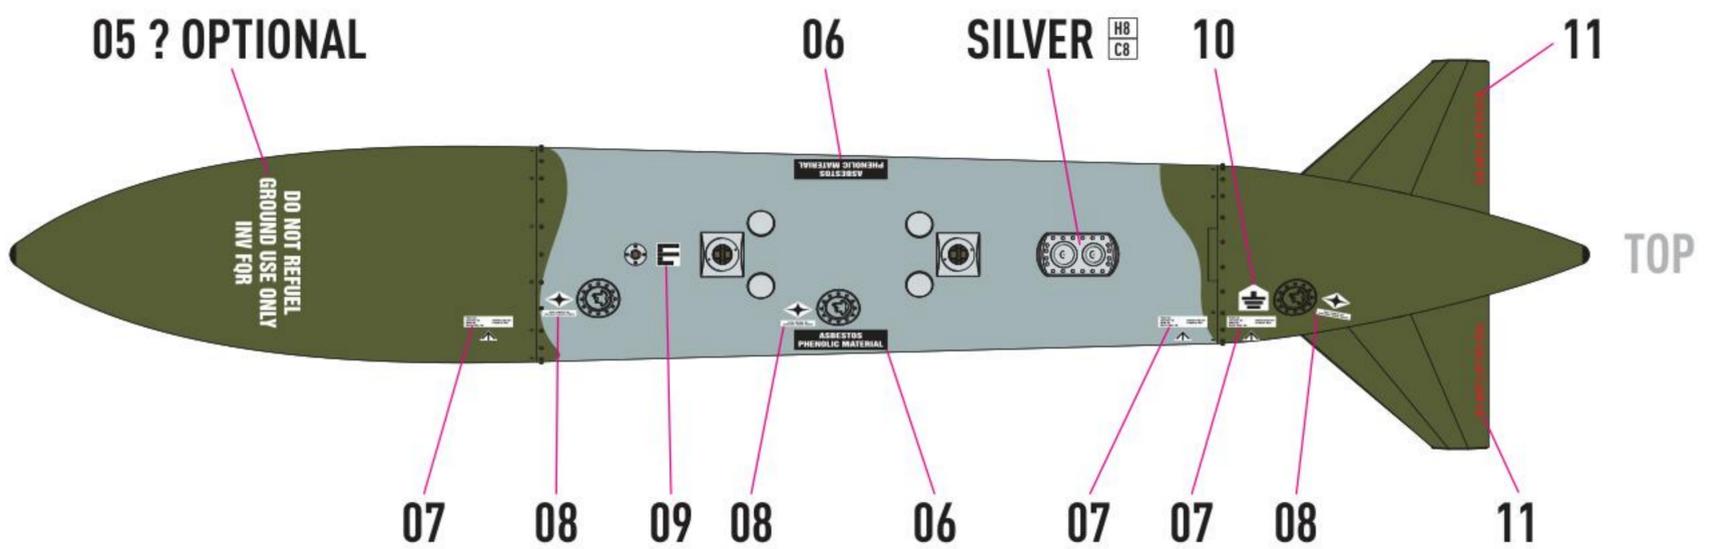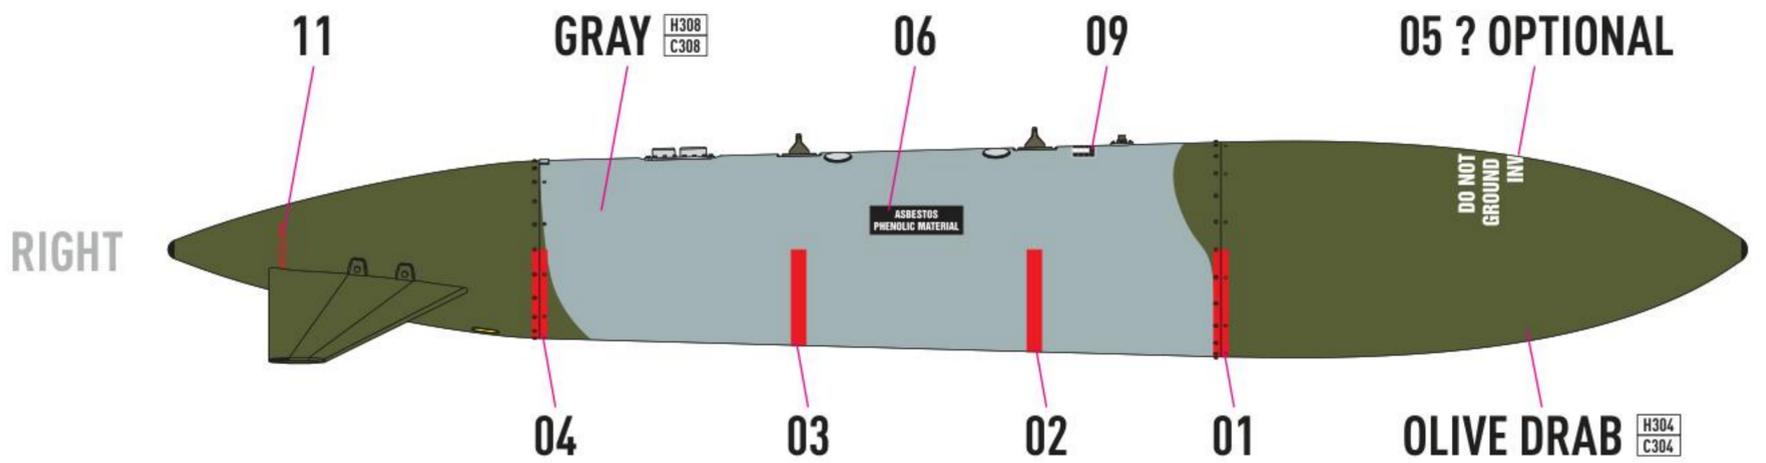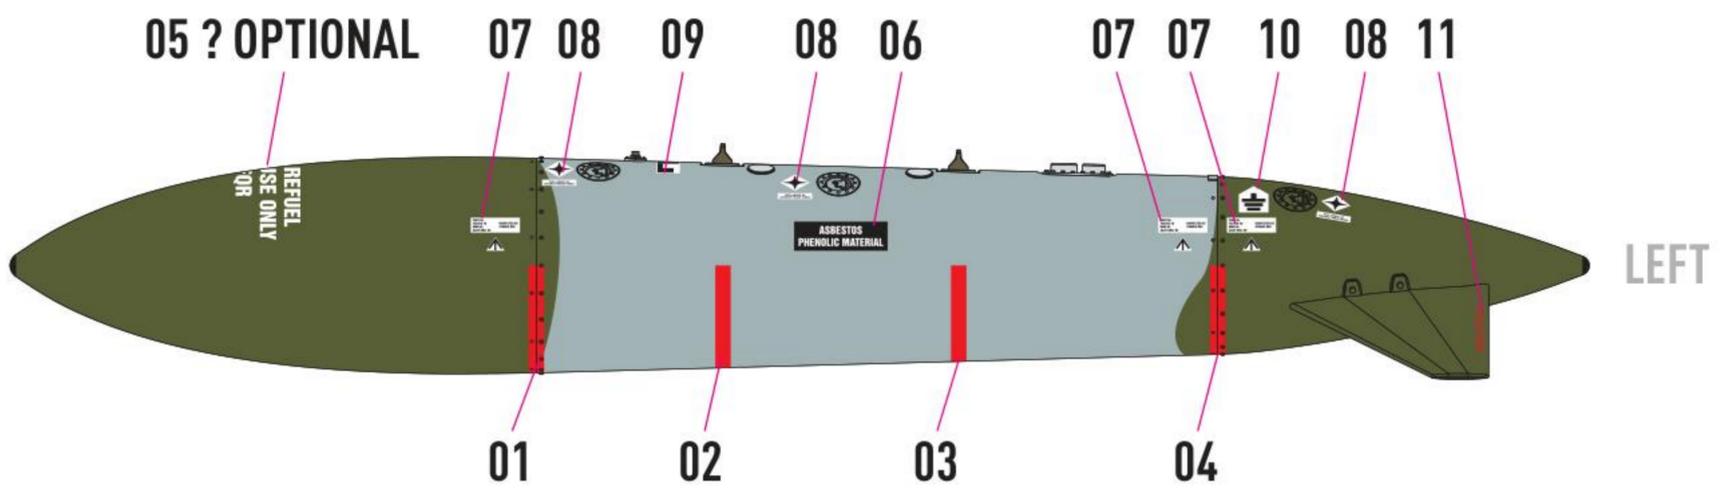

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308
OLIVE DRAB	H304	C304
SILVER	H8	C8