

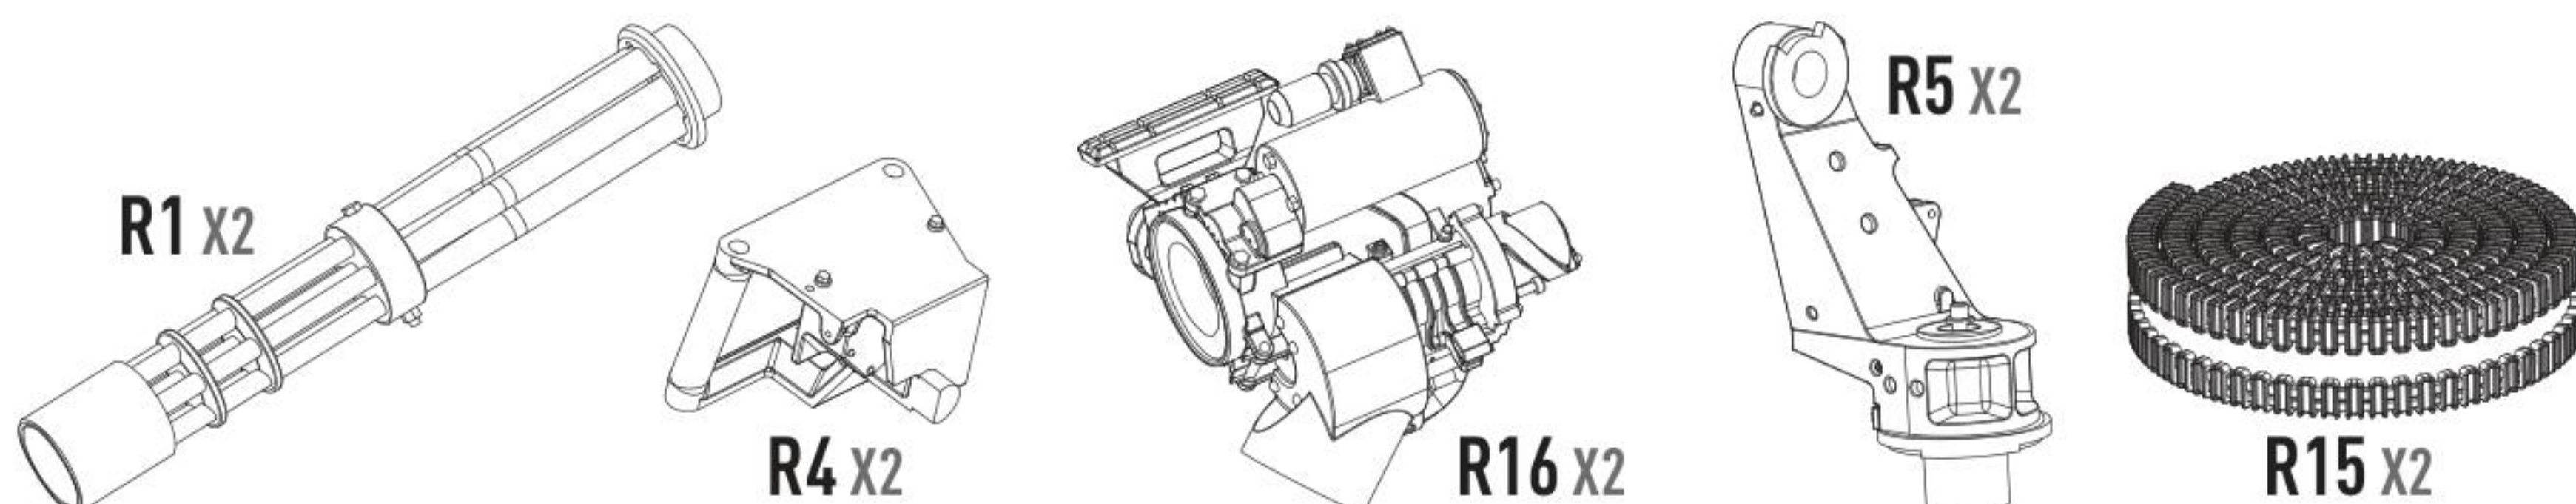
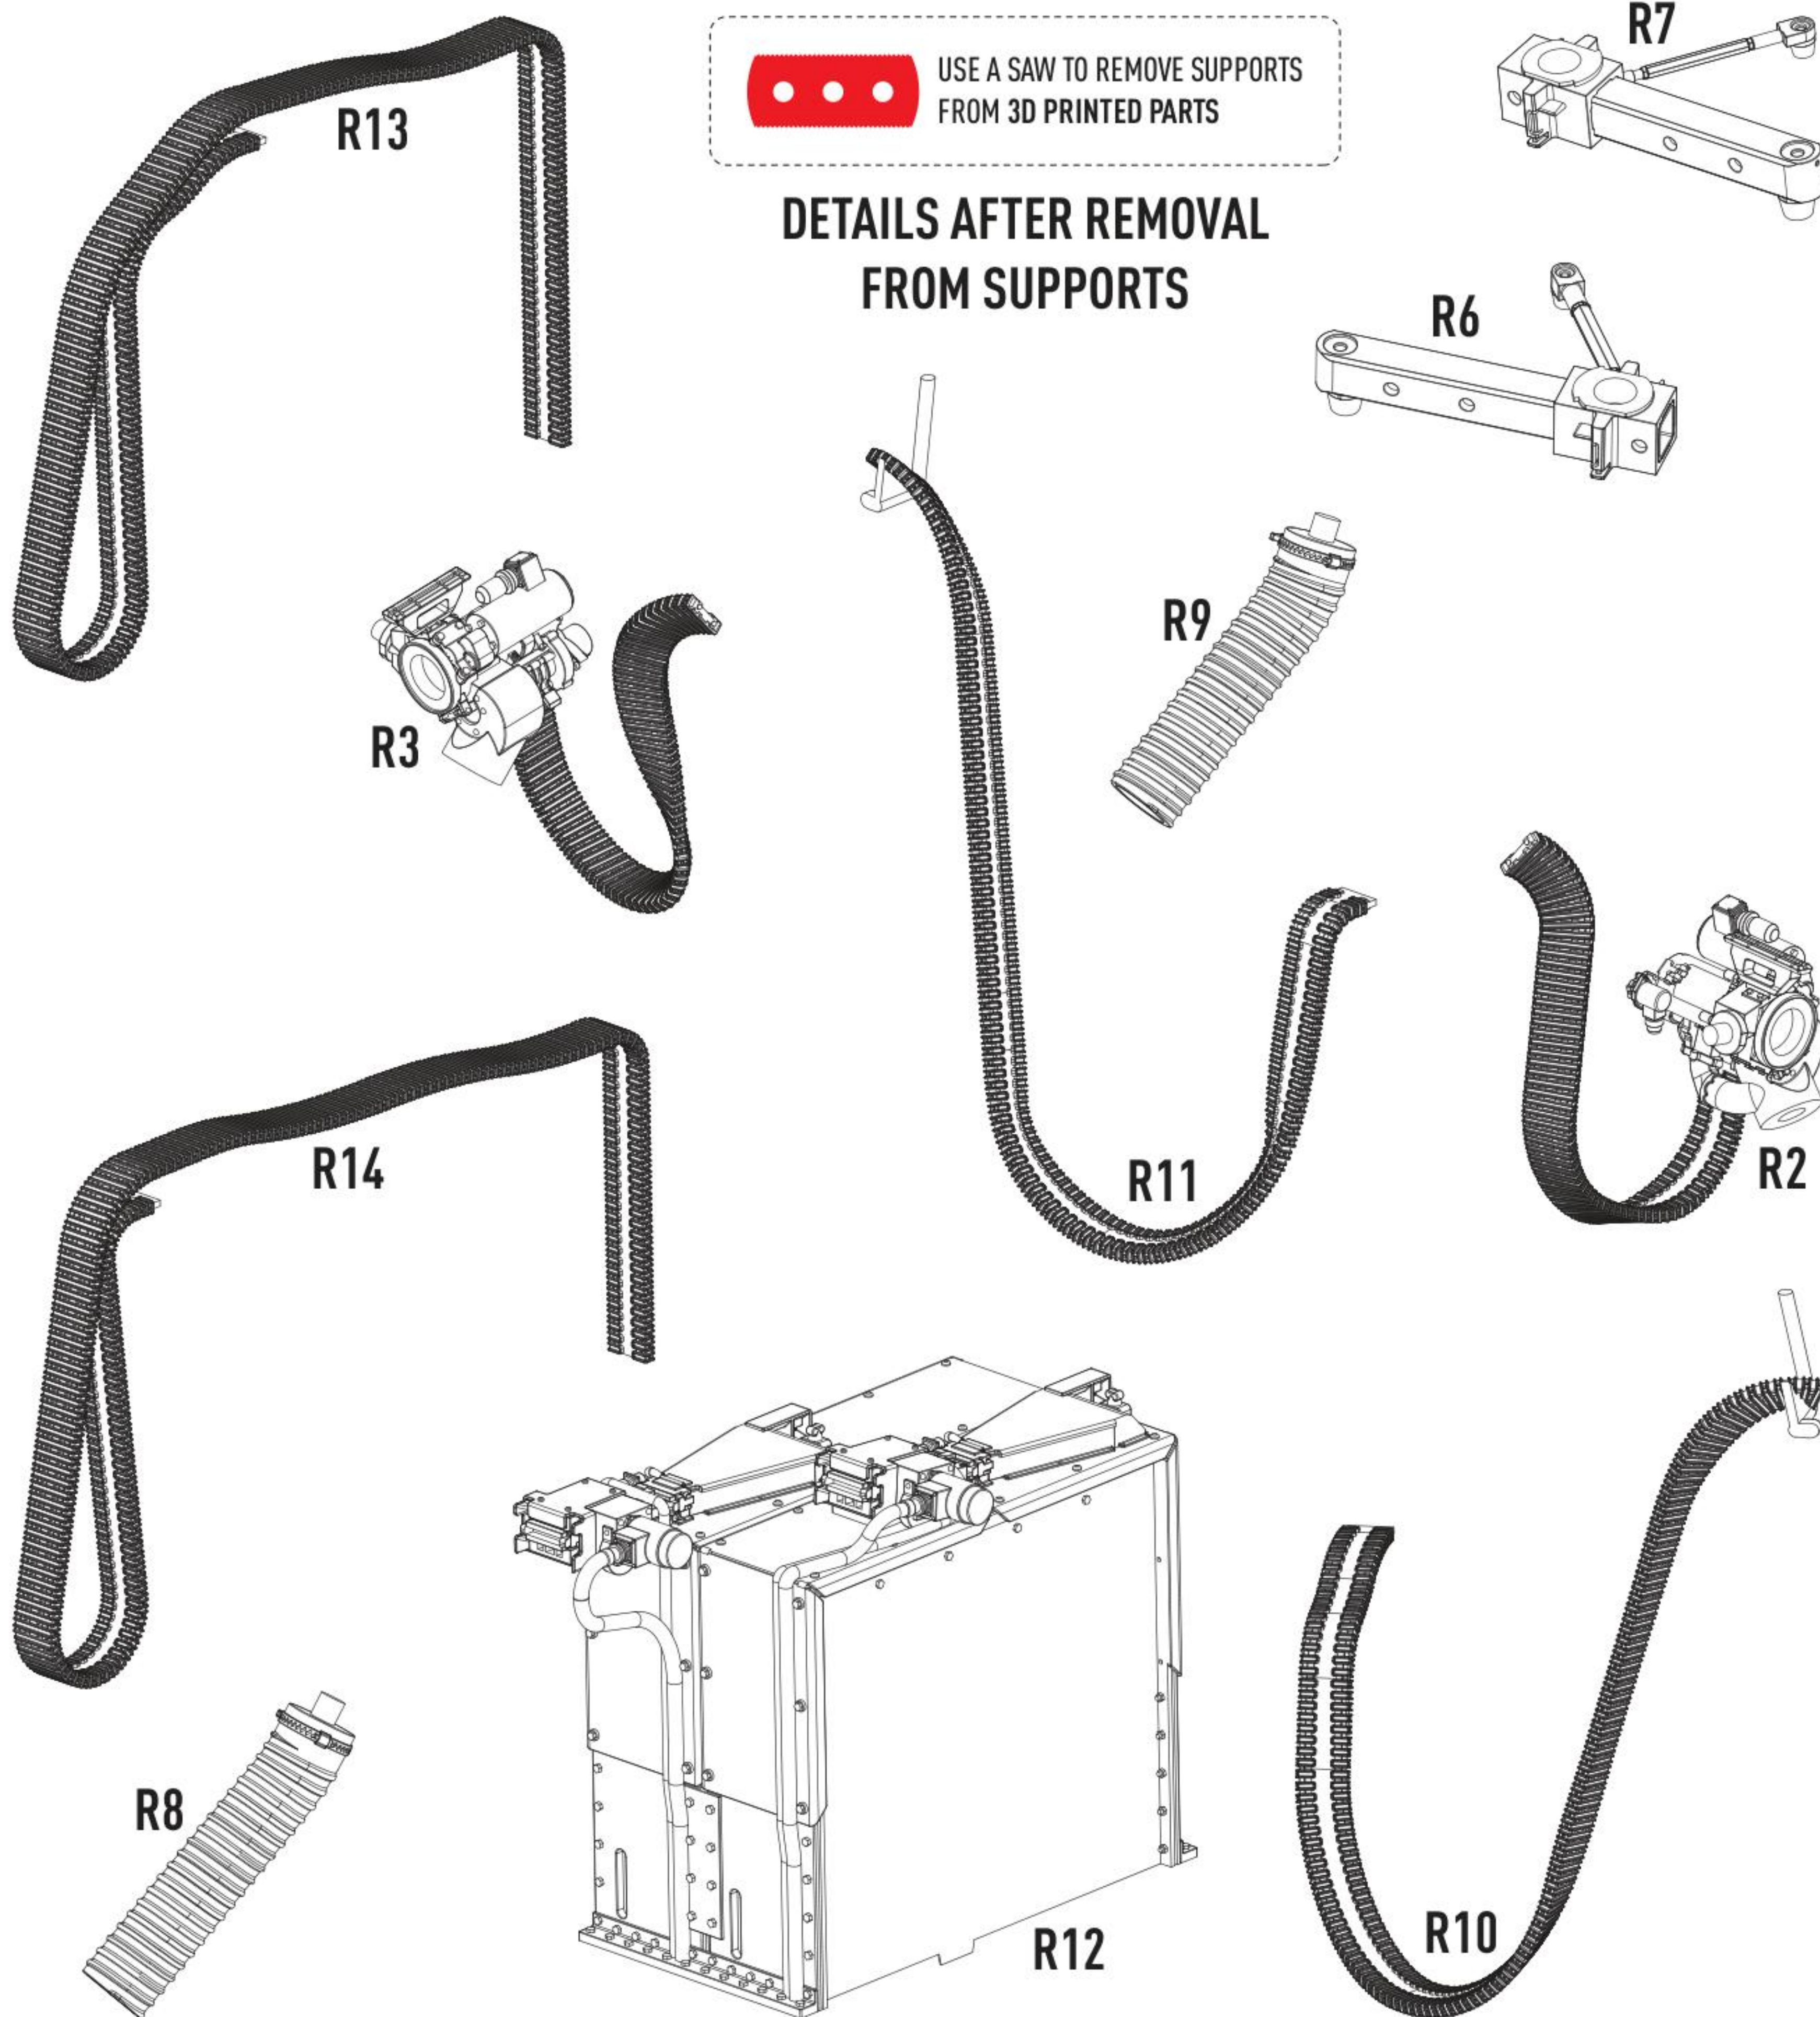
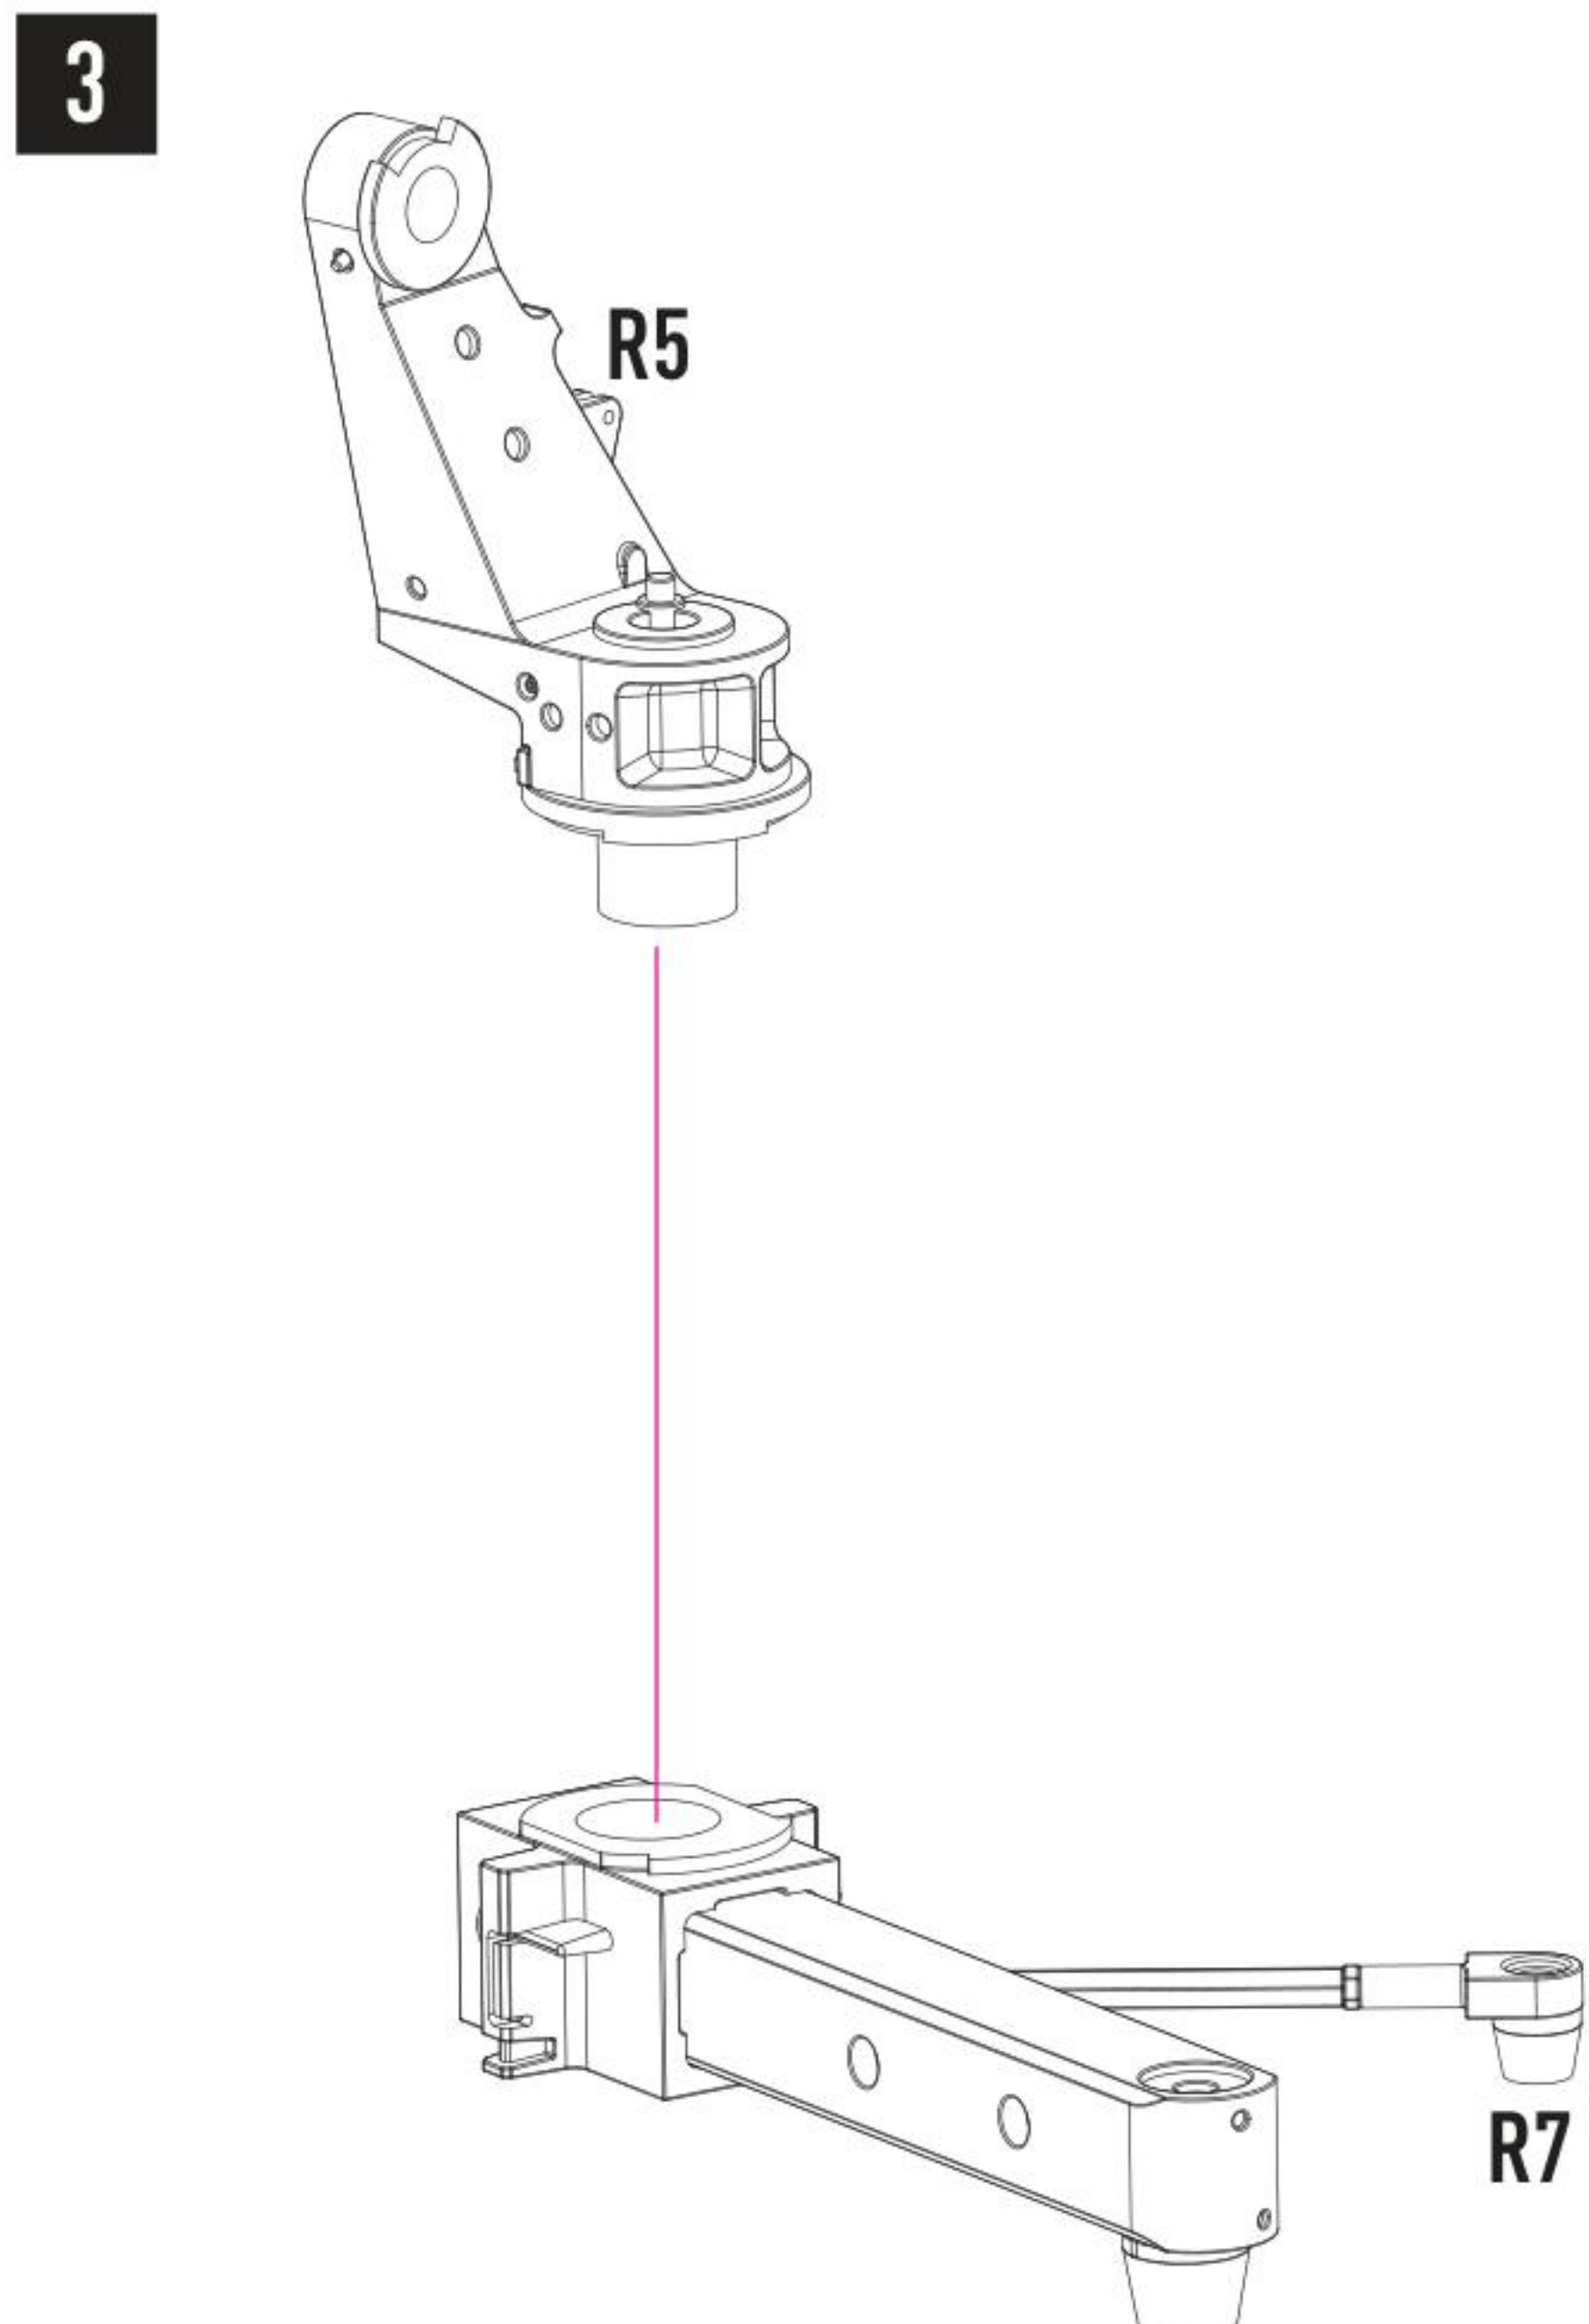



USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

#### DETAILS AFTER REMOVAL FROM SUPPORTS

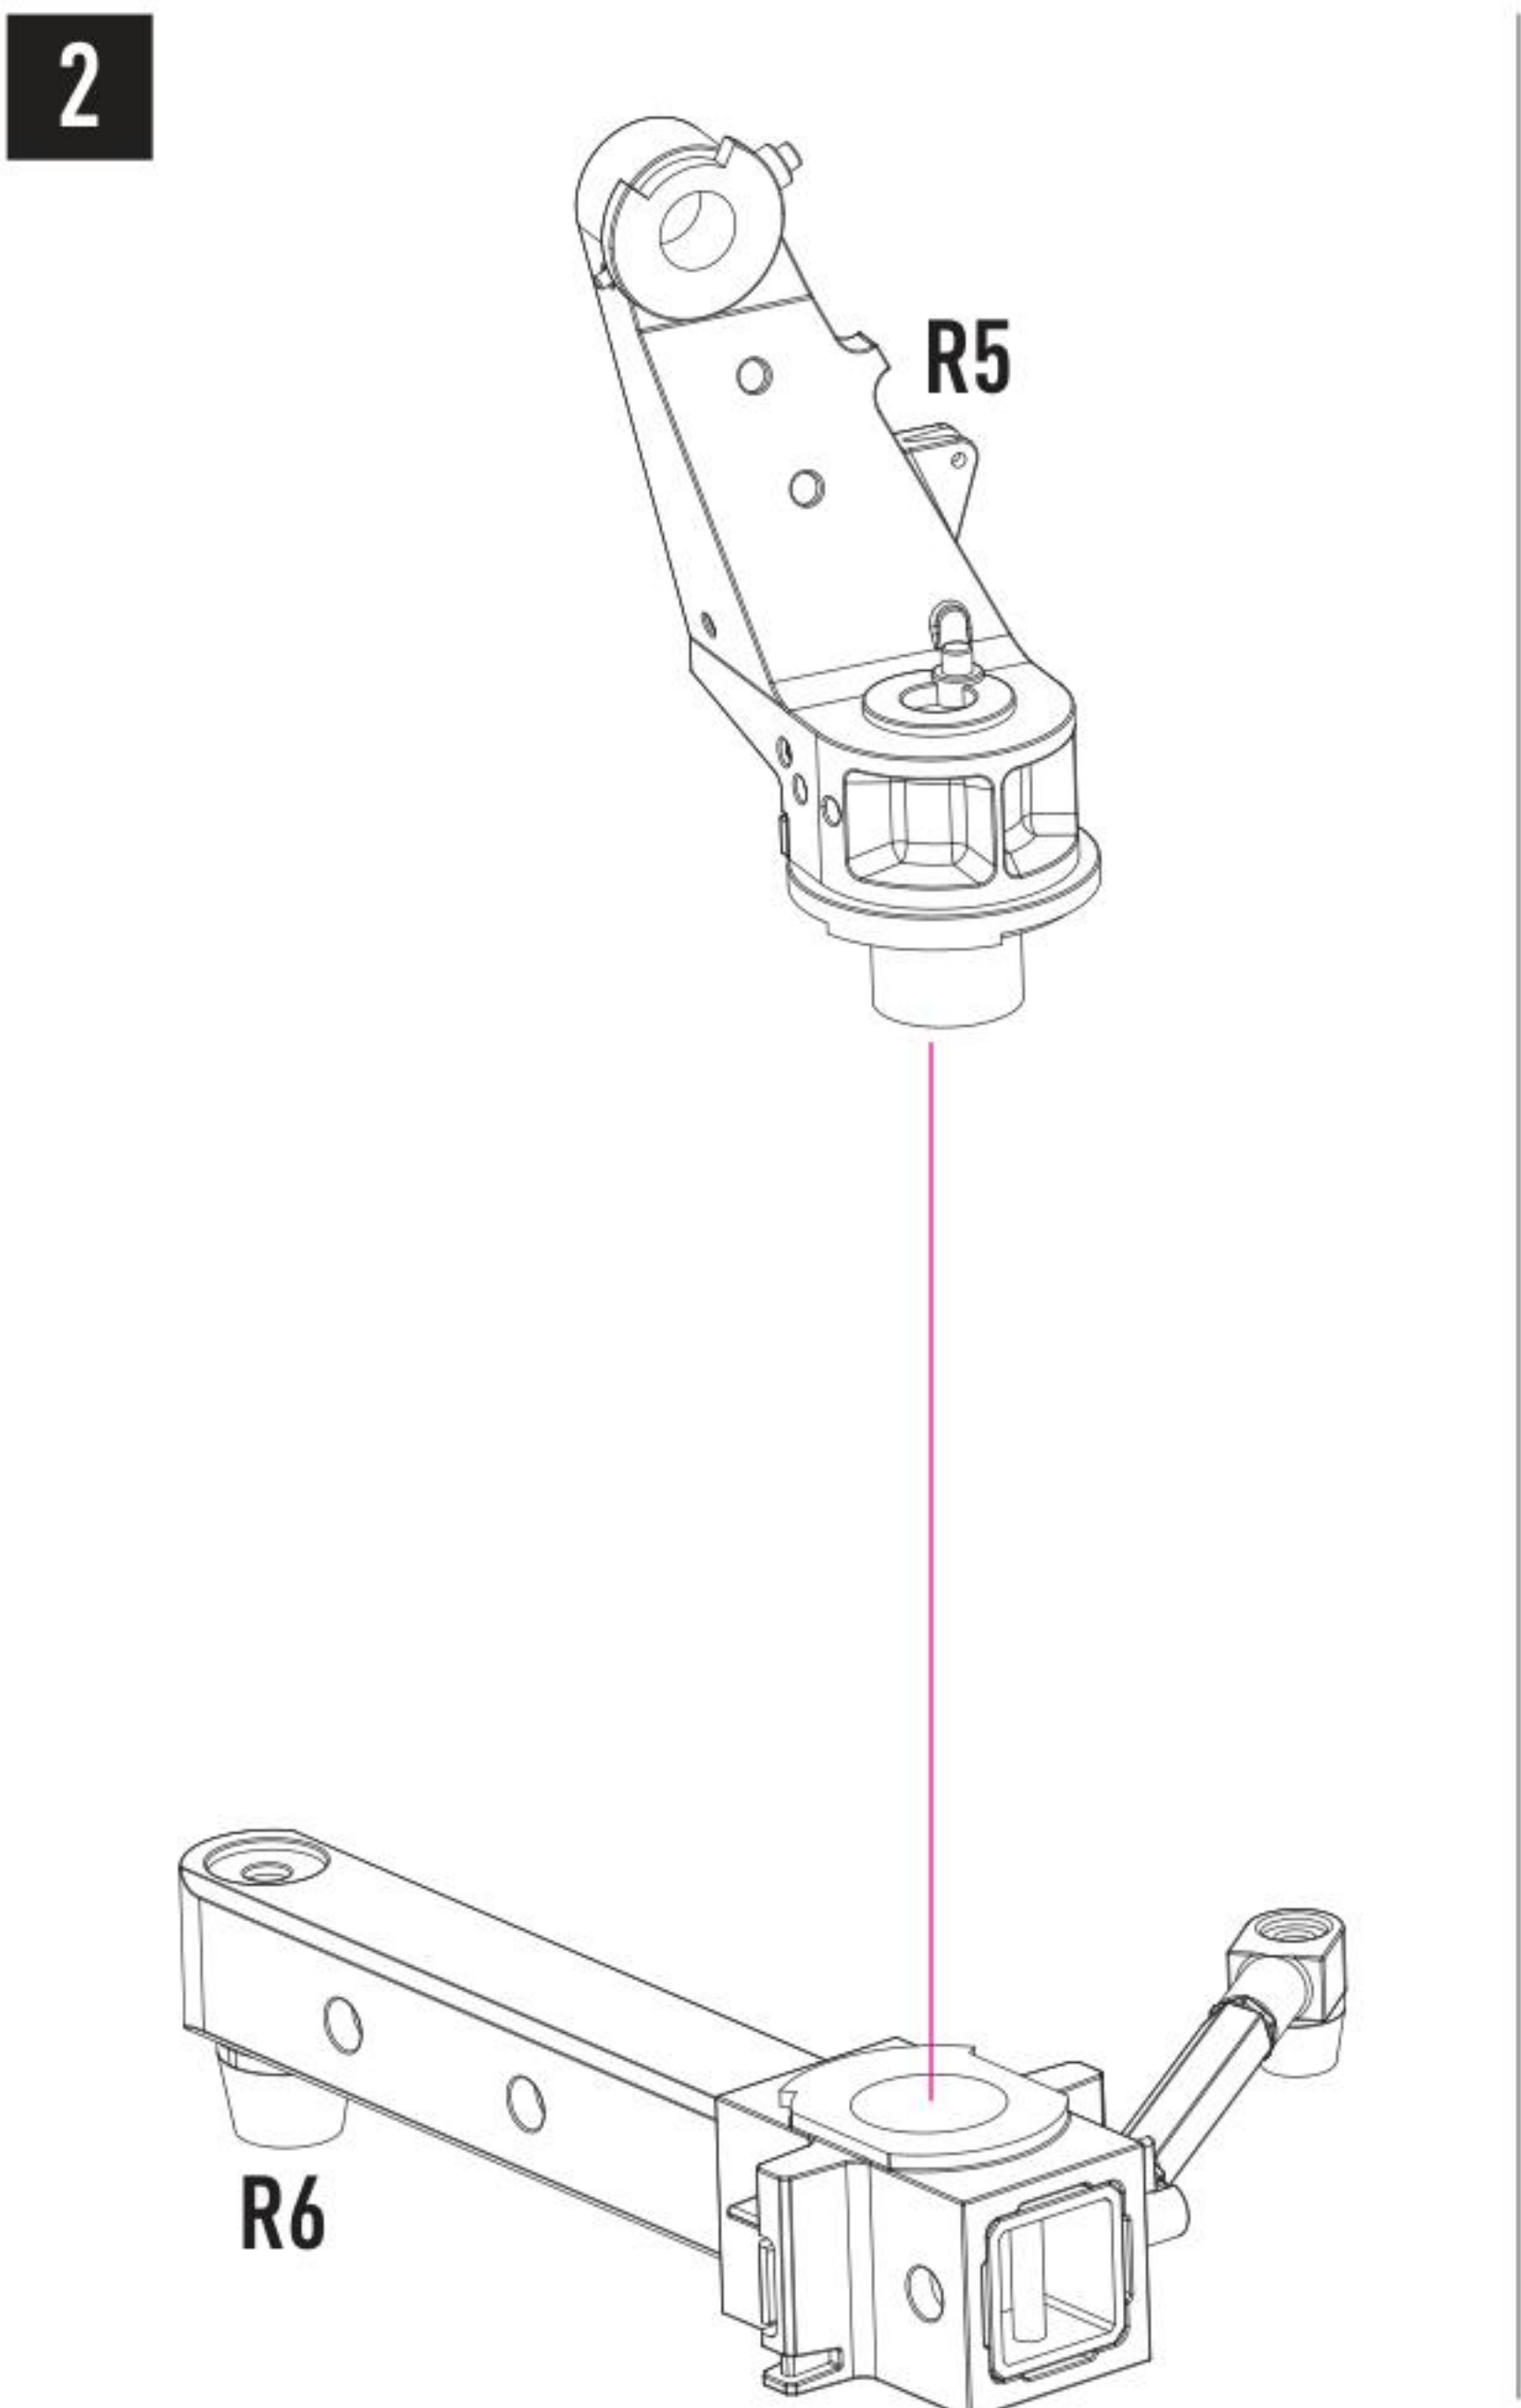


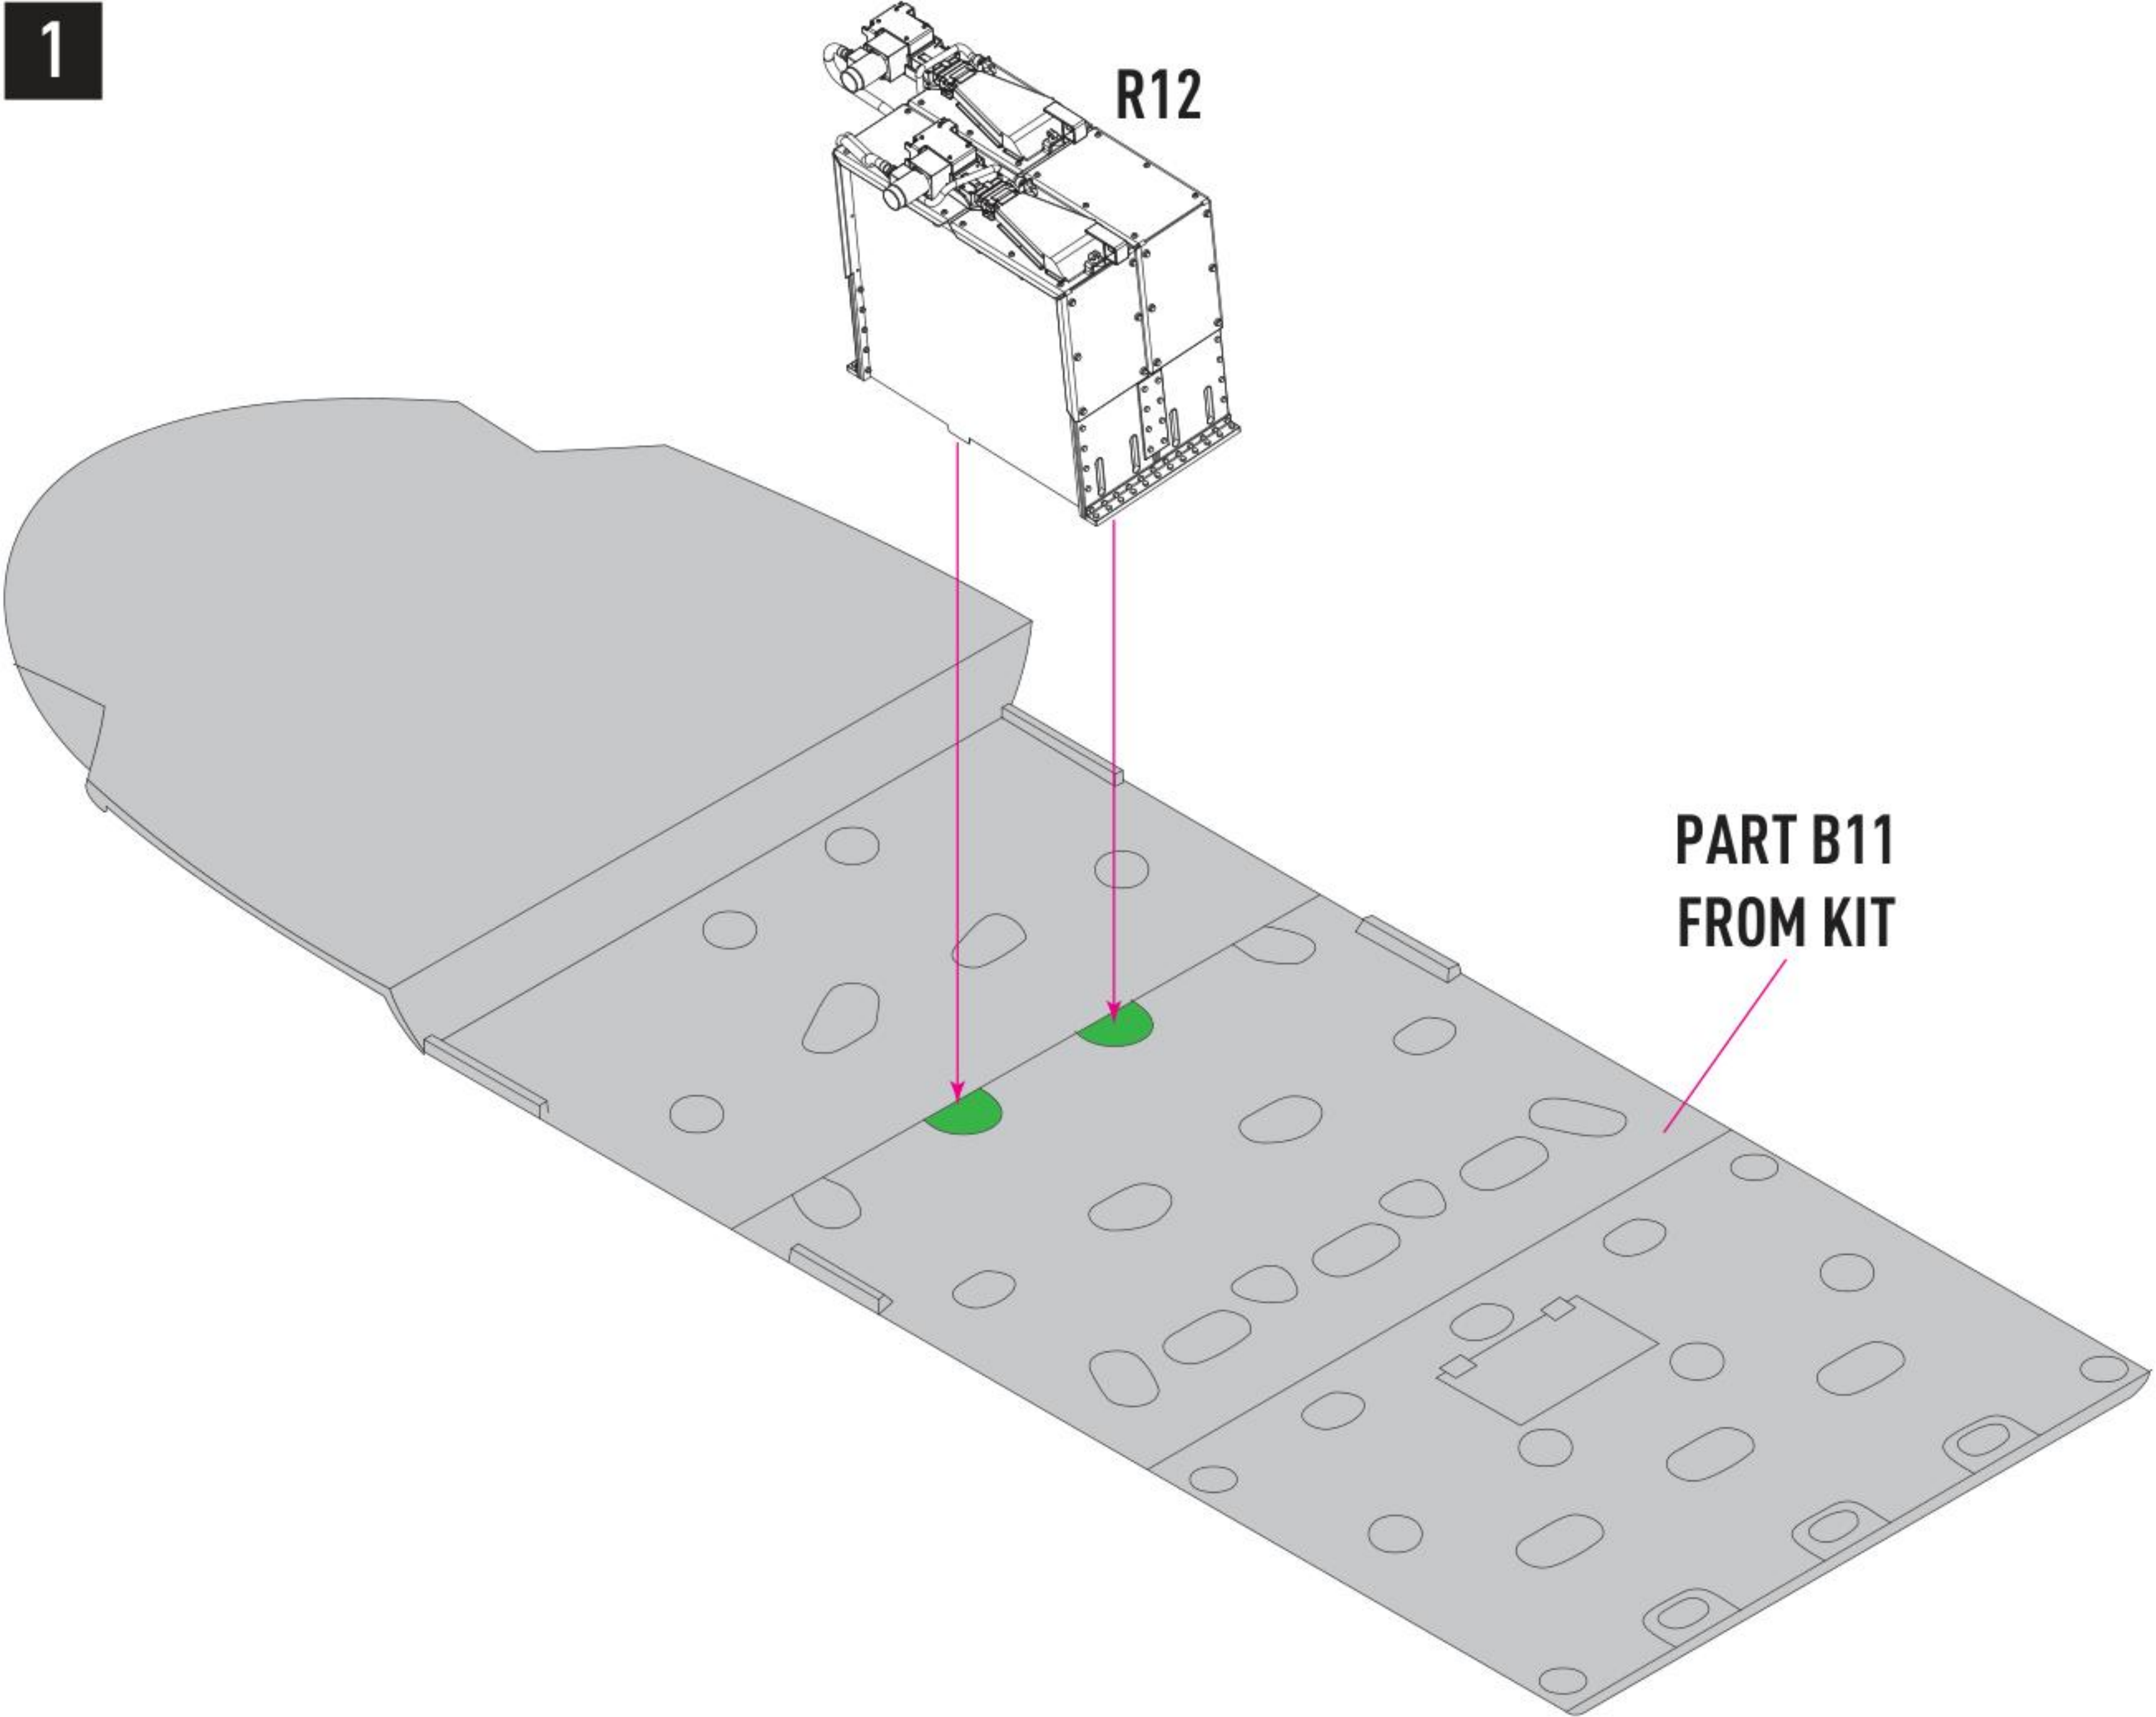


4

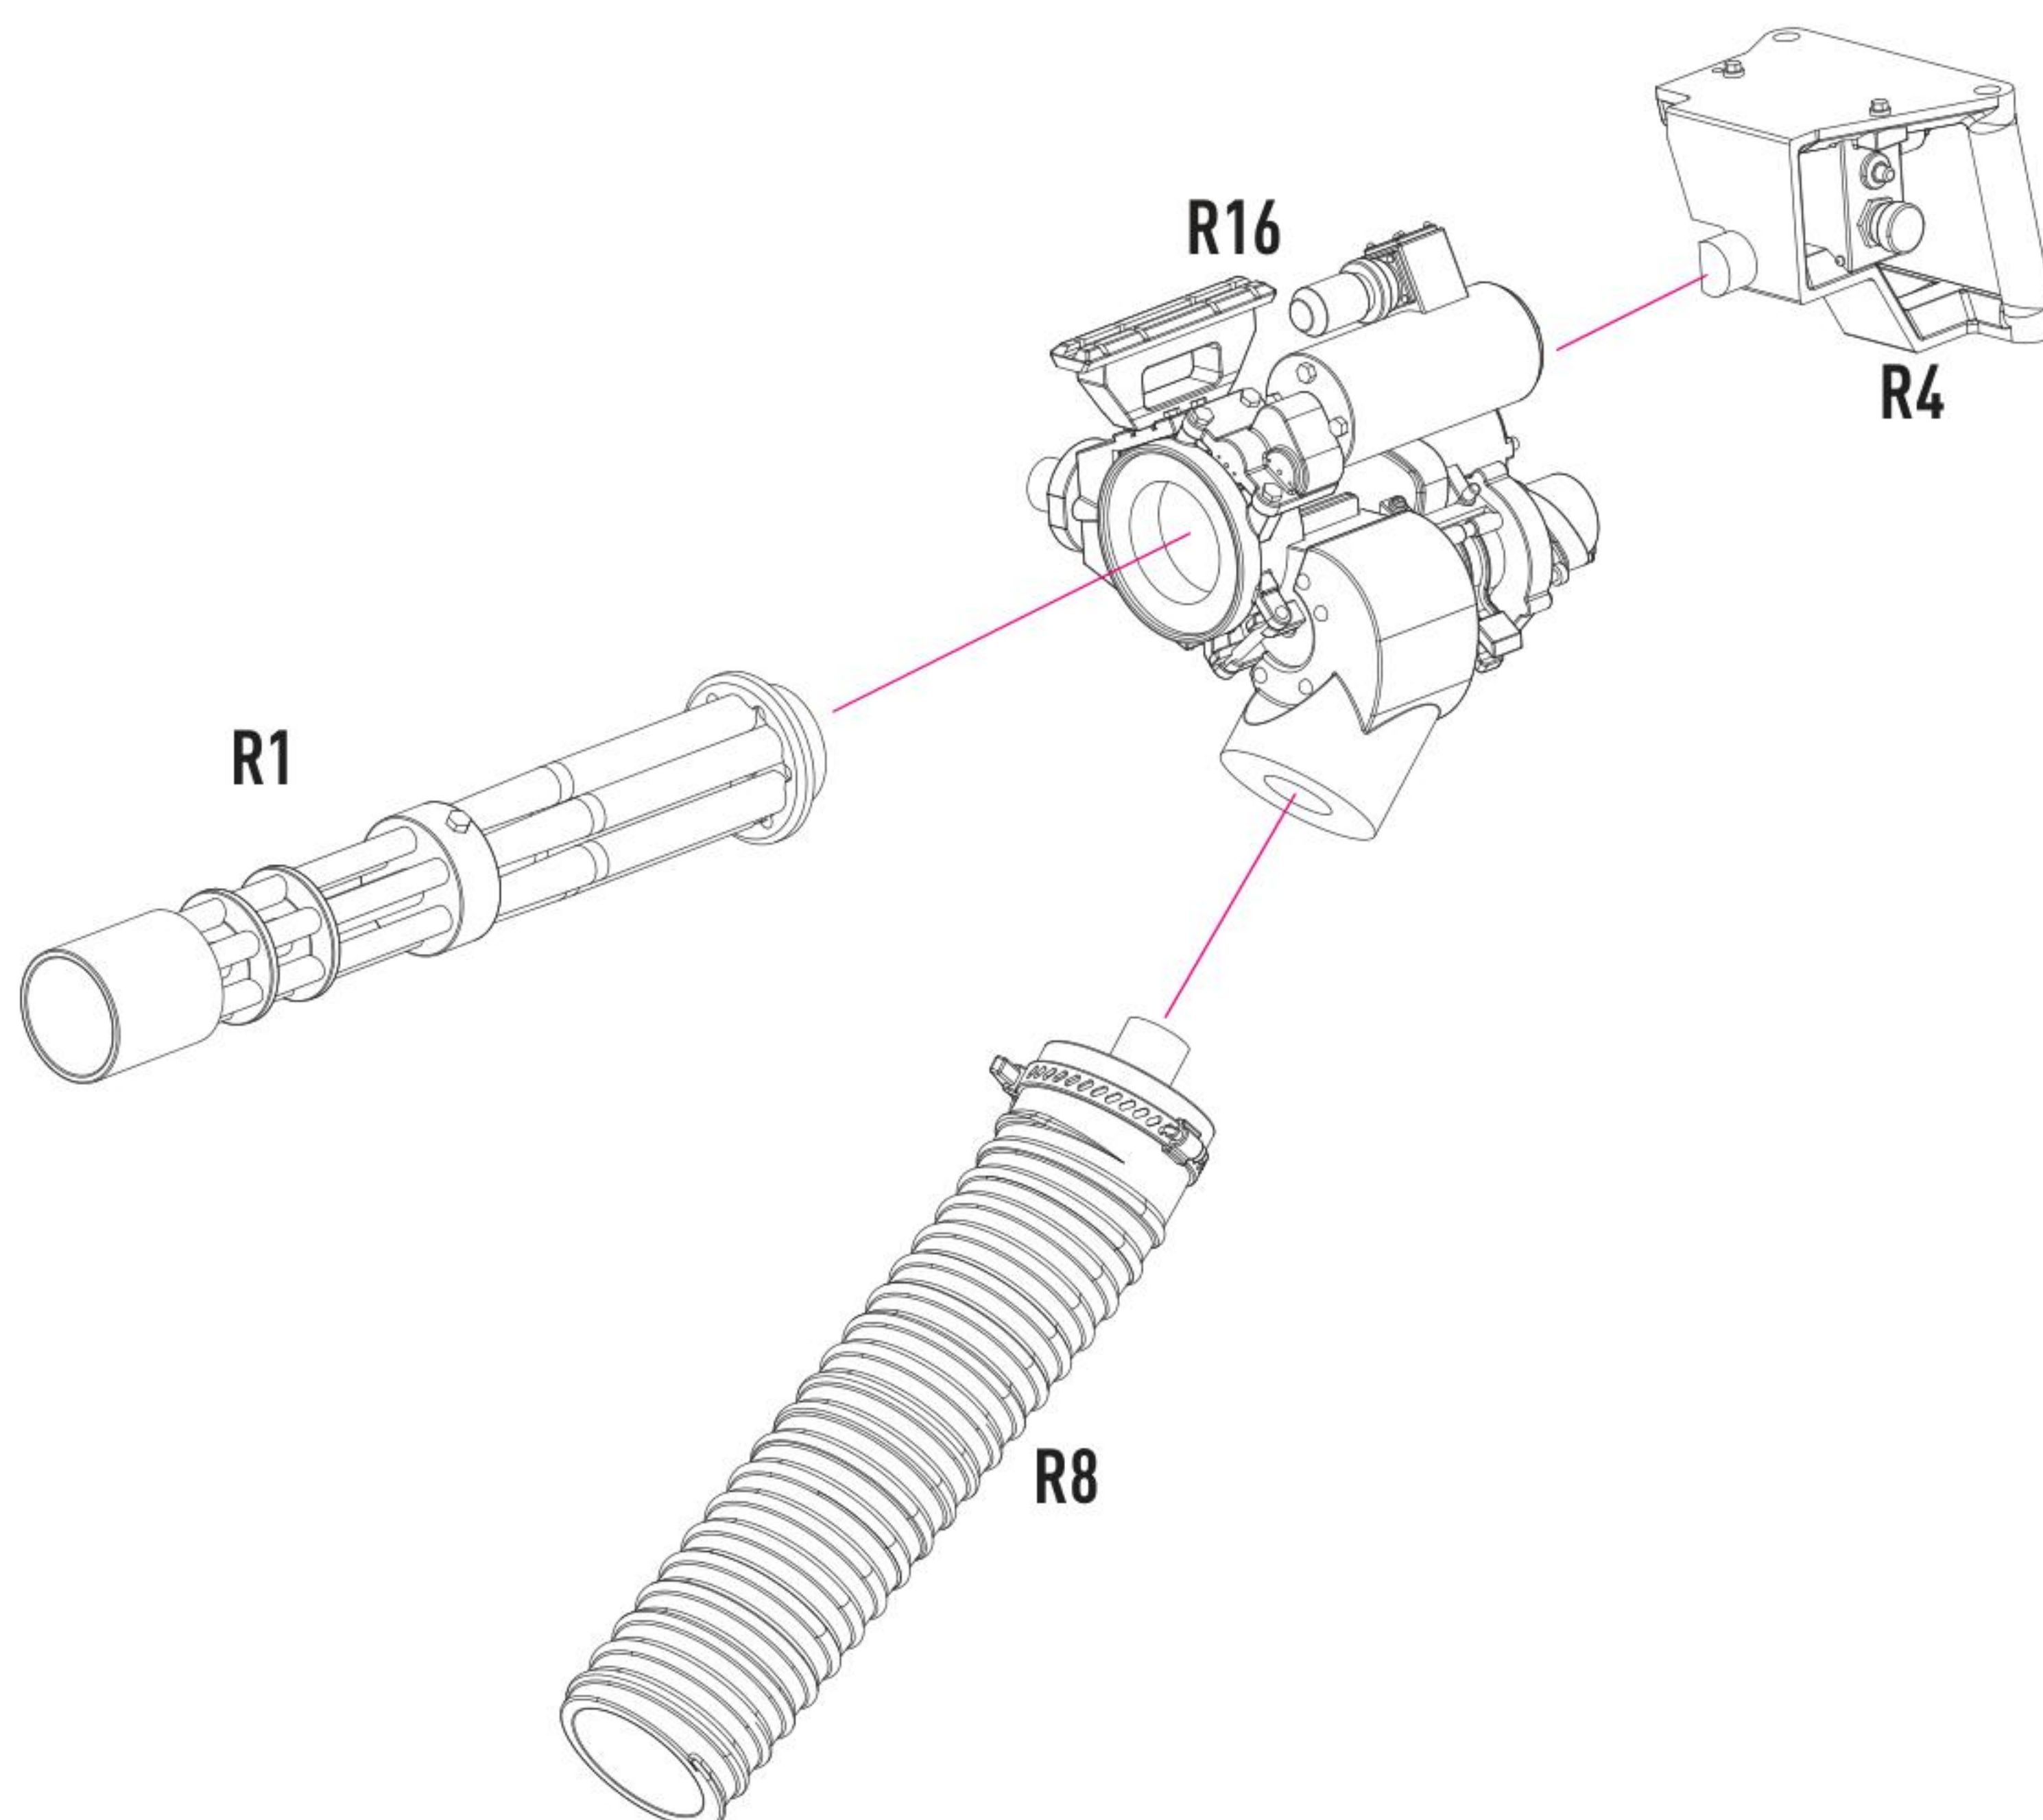


5

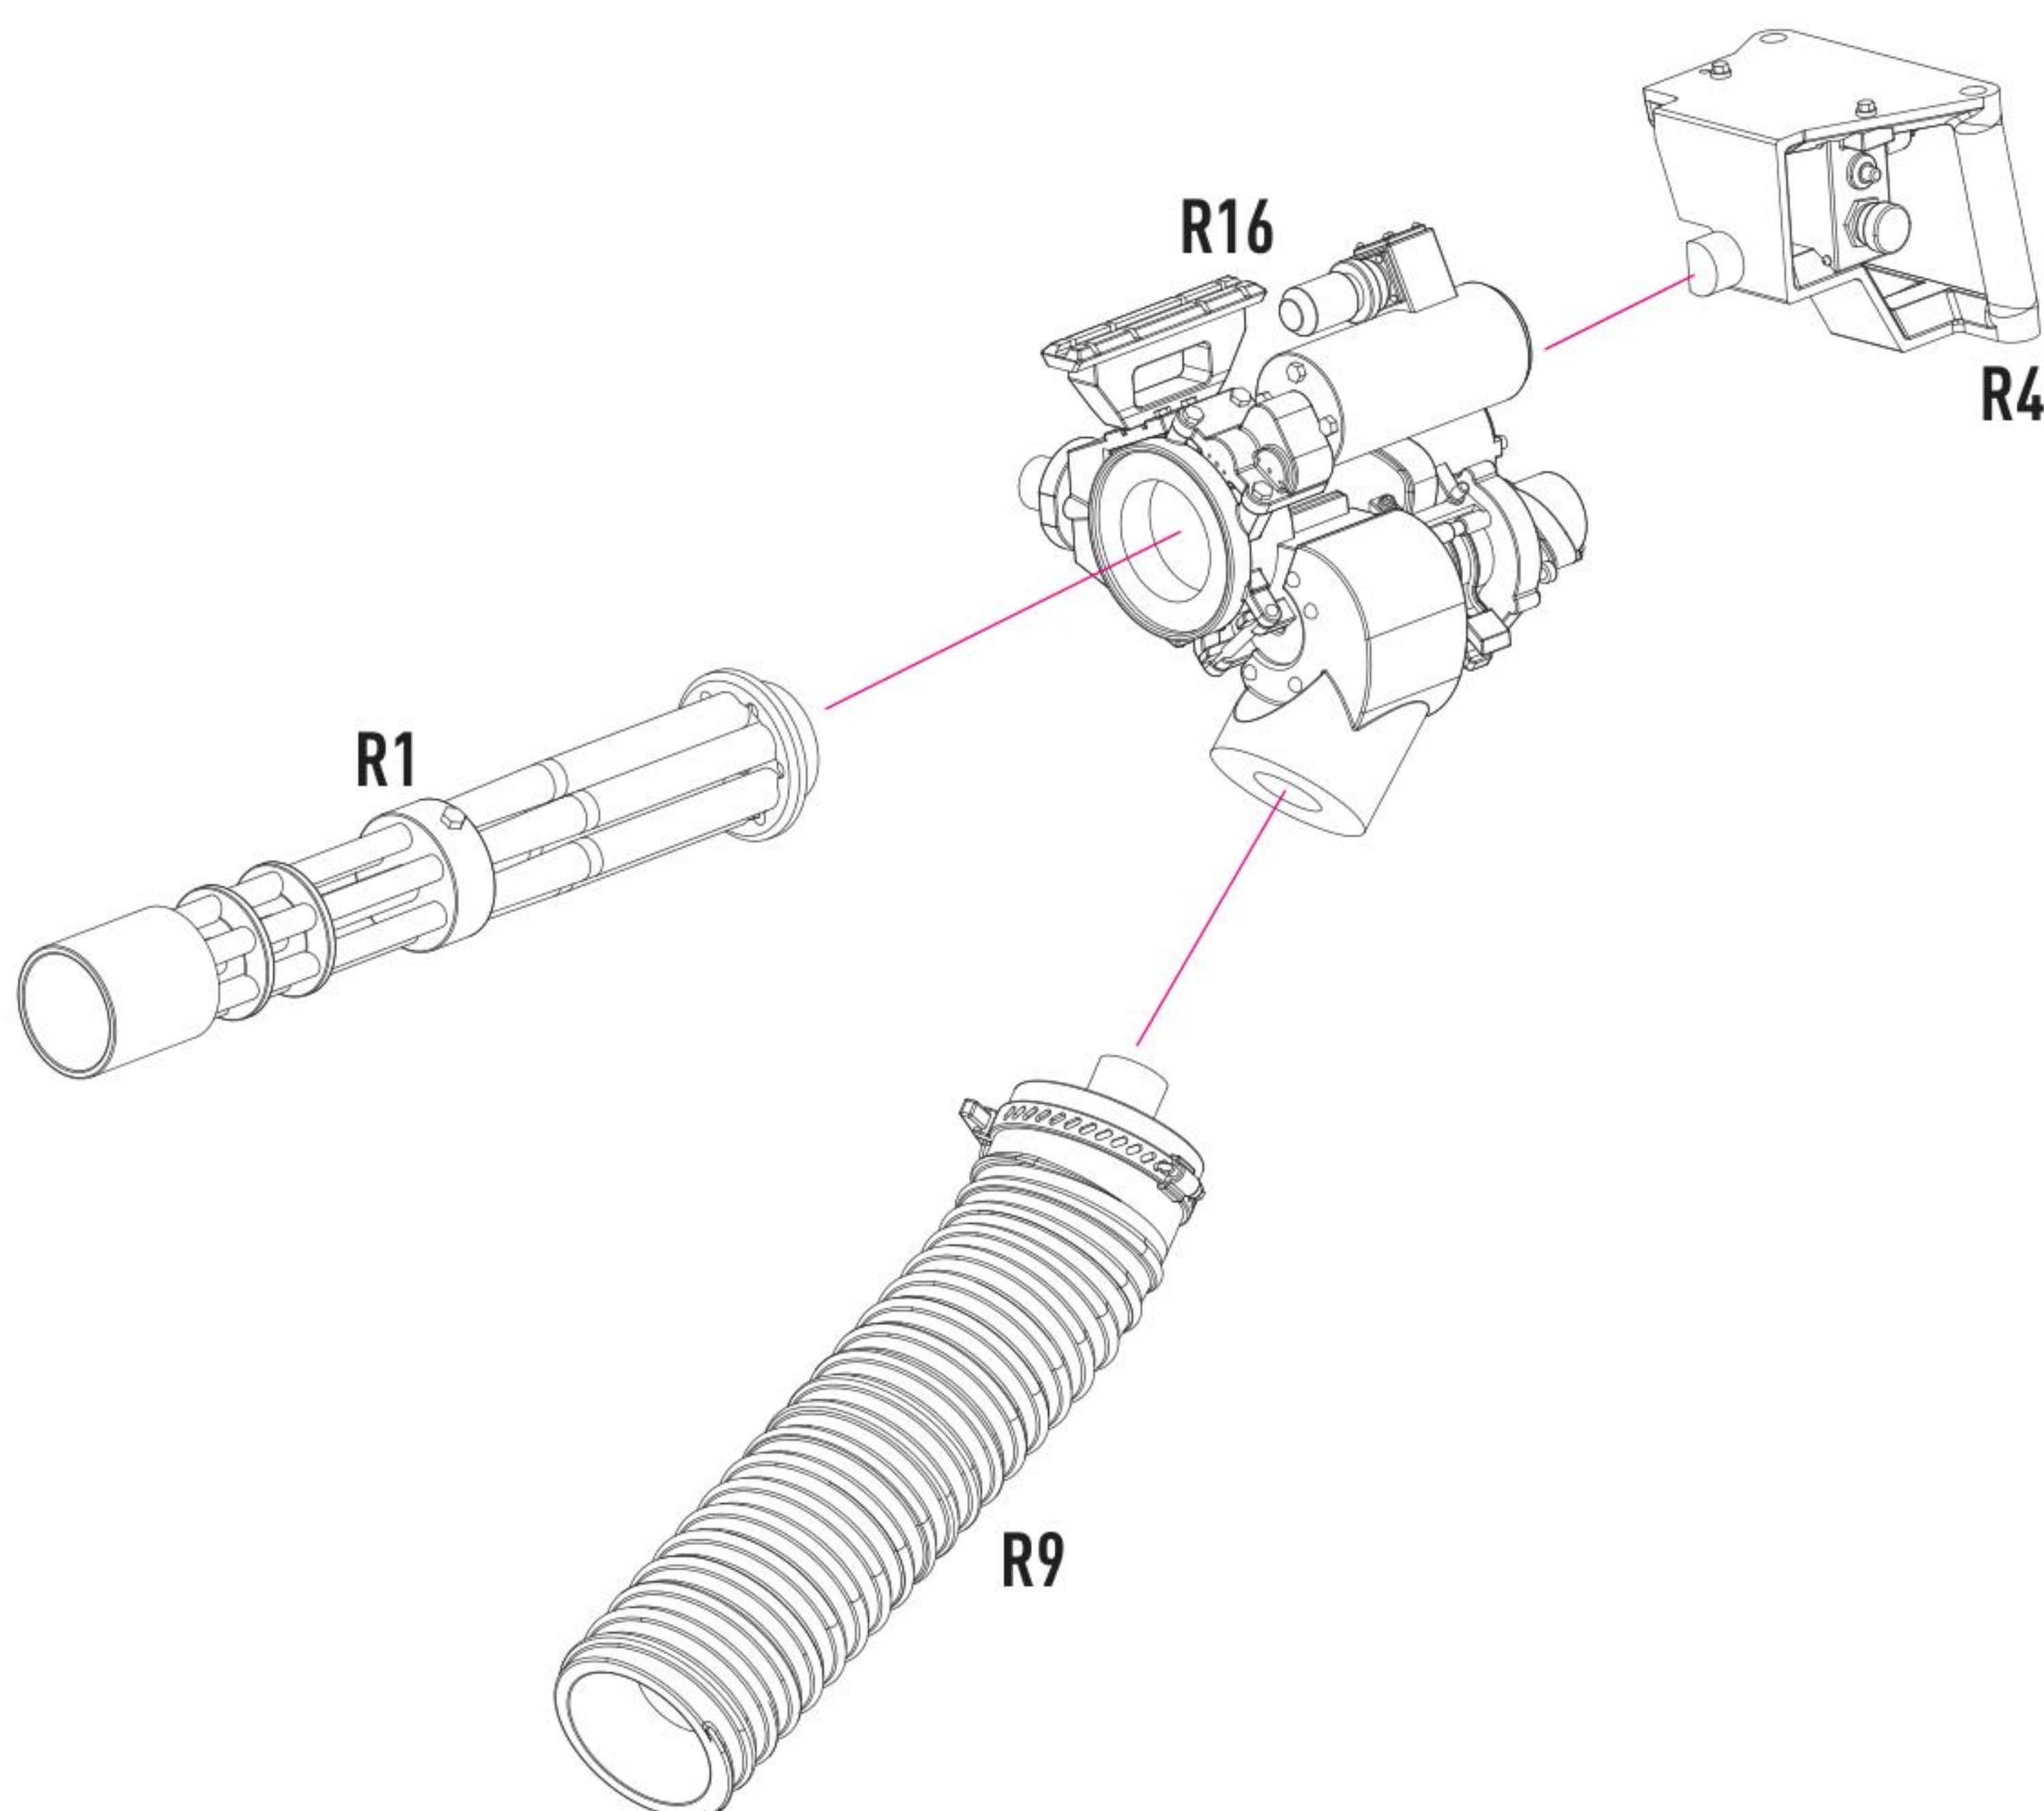

**6** VERSION 1


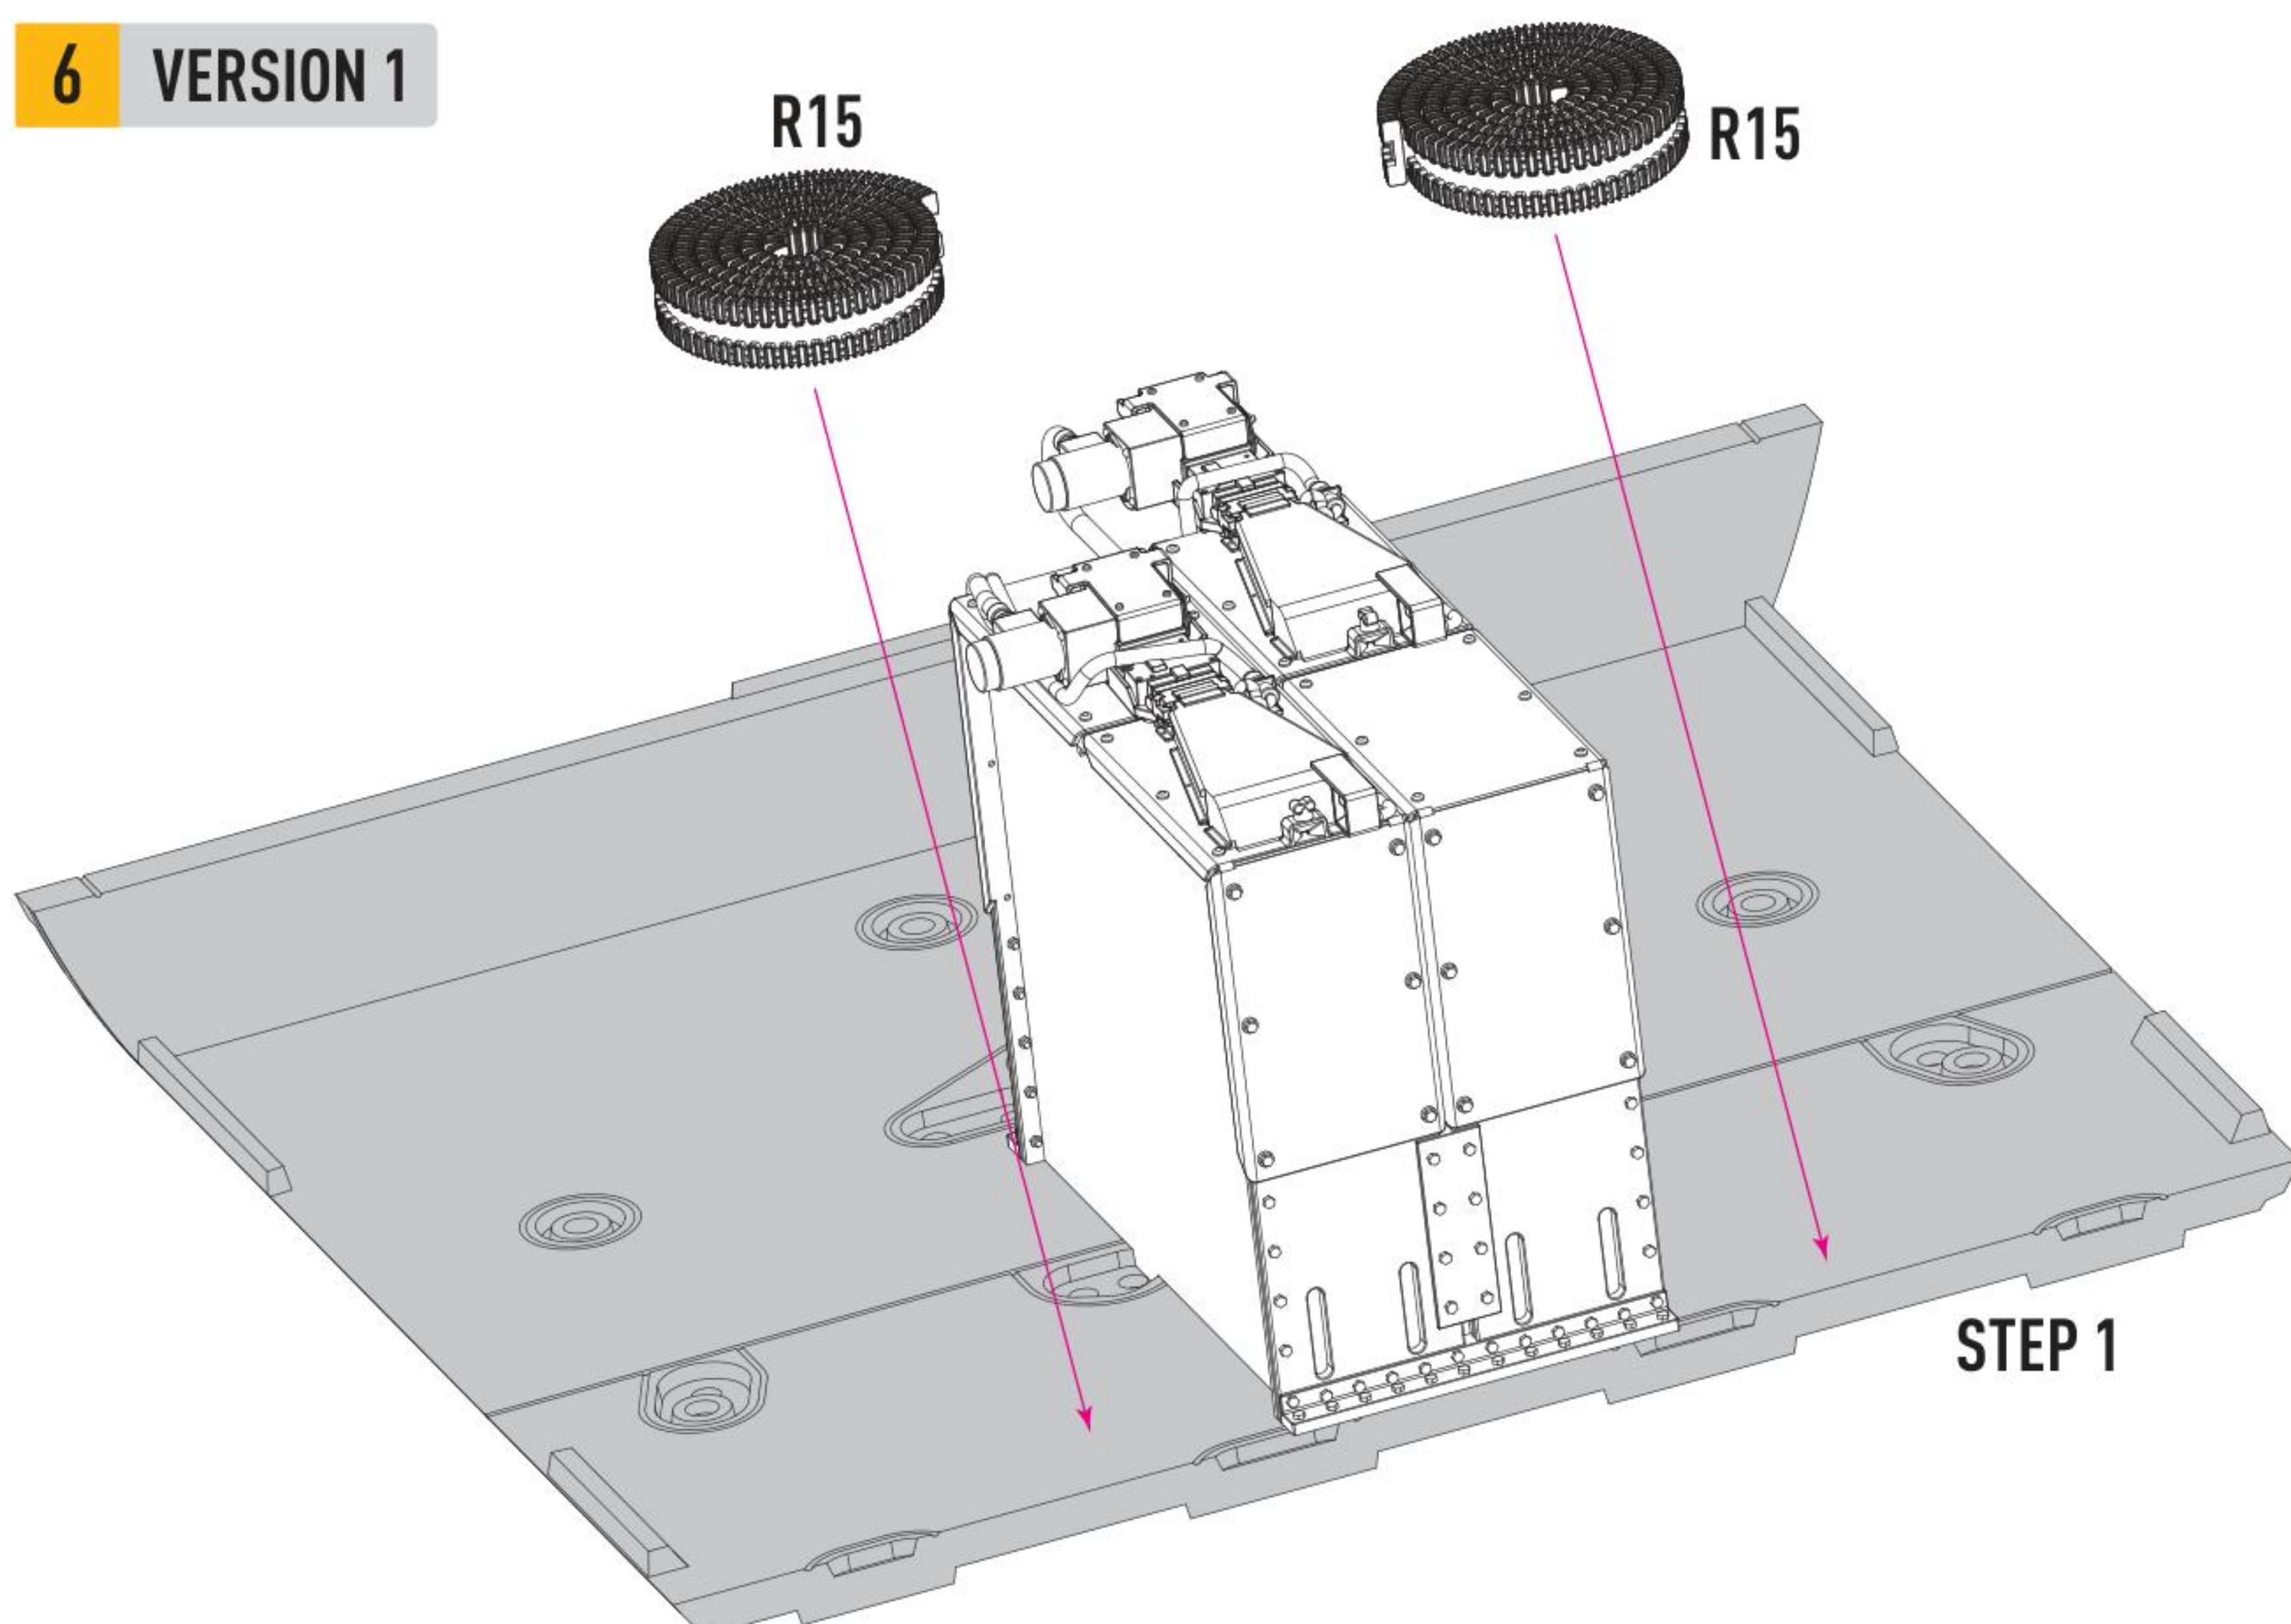


**6** VERSION 2

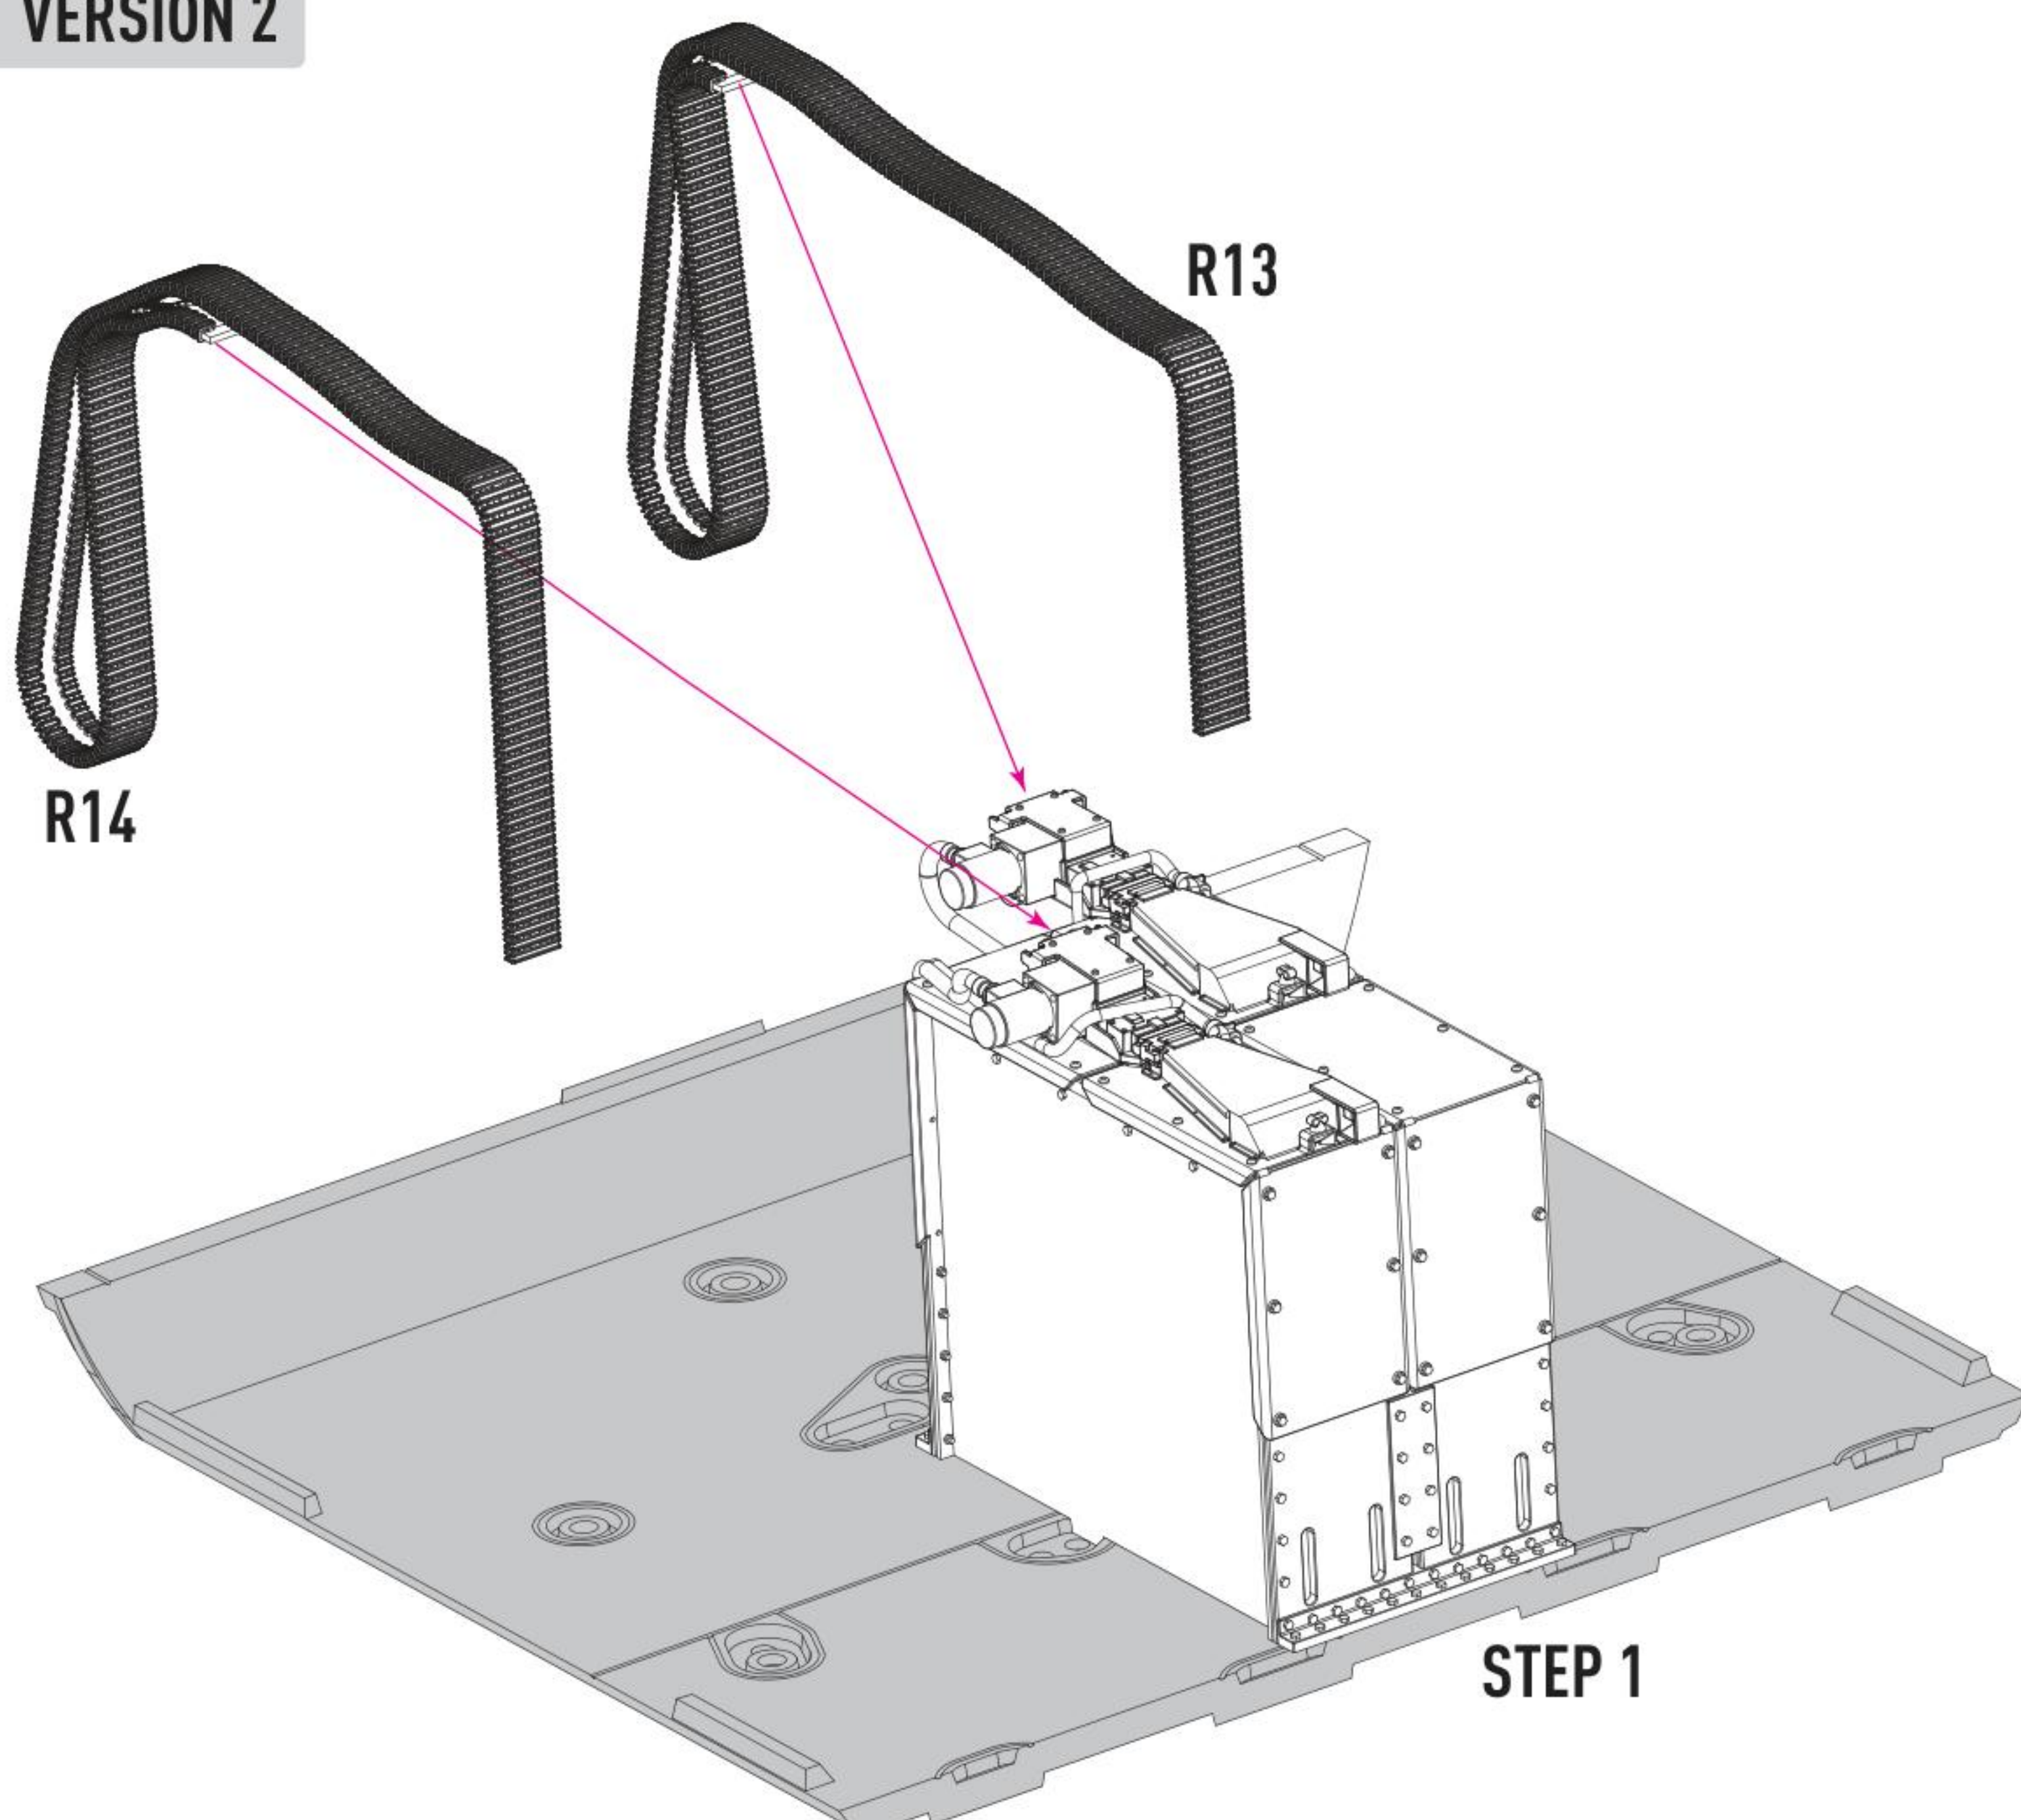

7



STEP 2

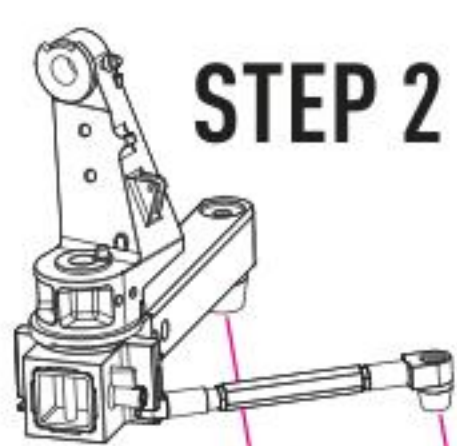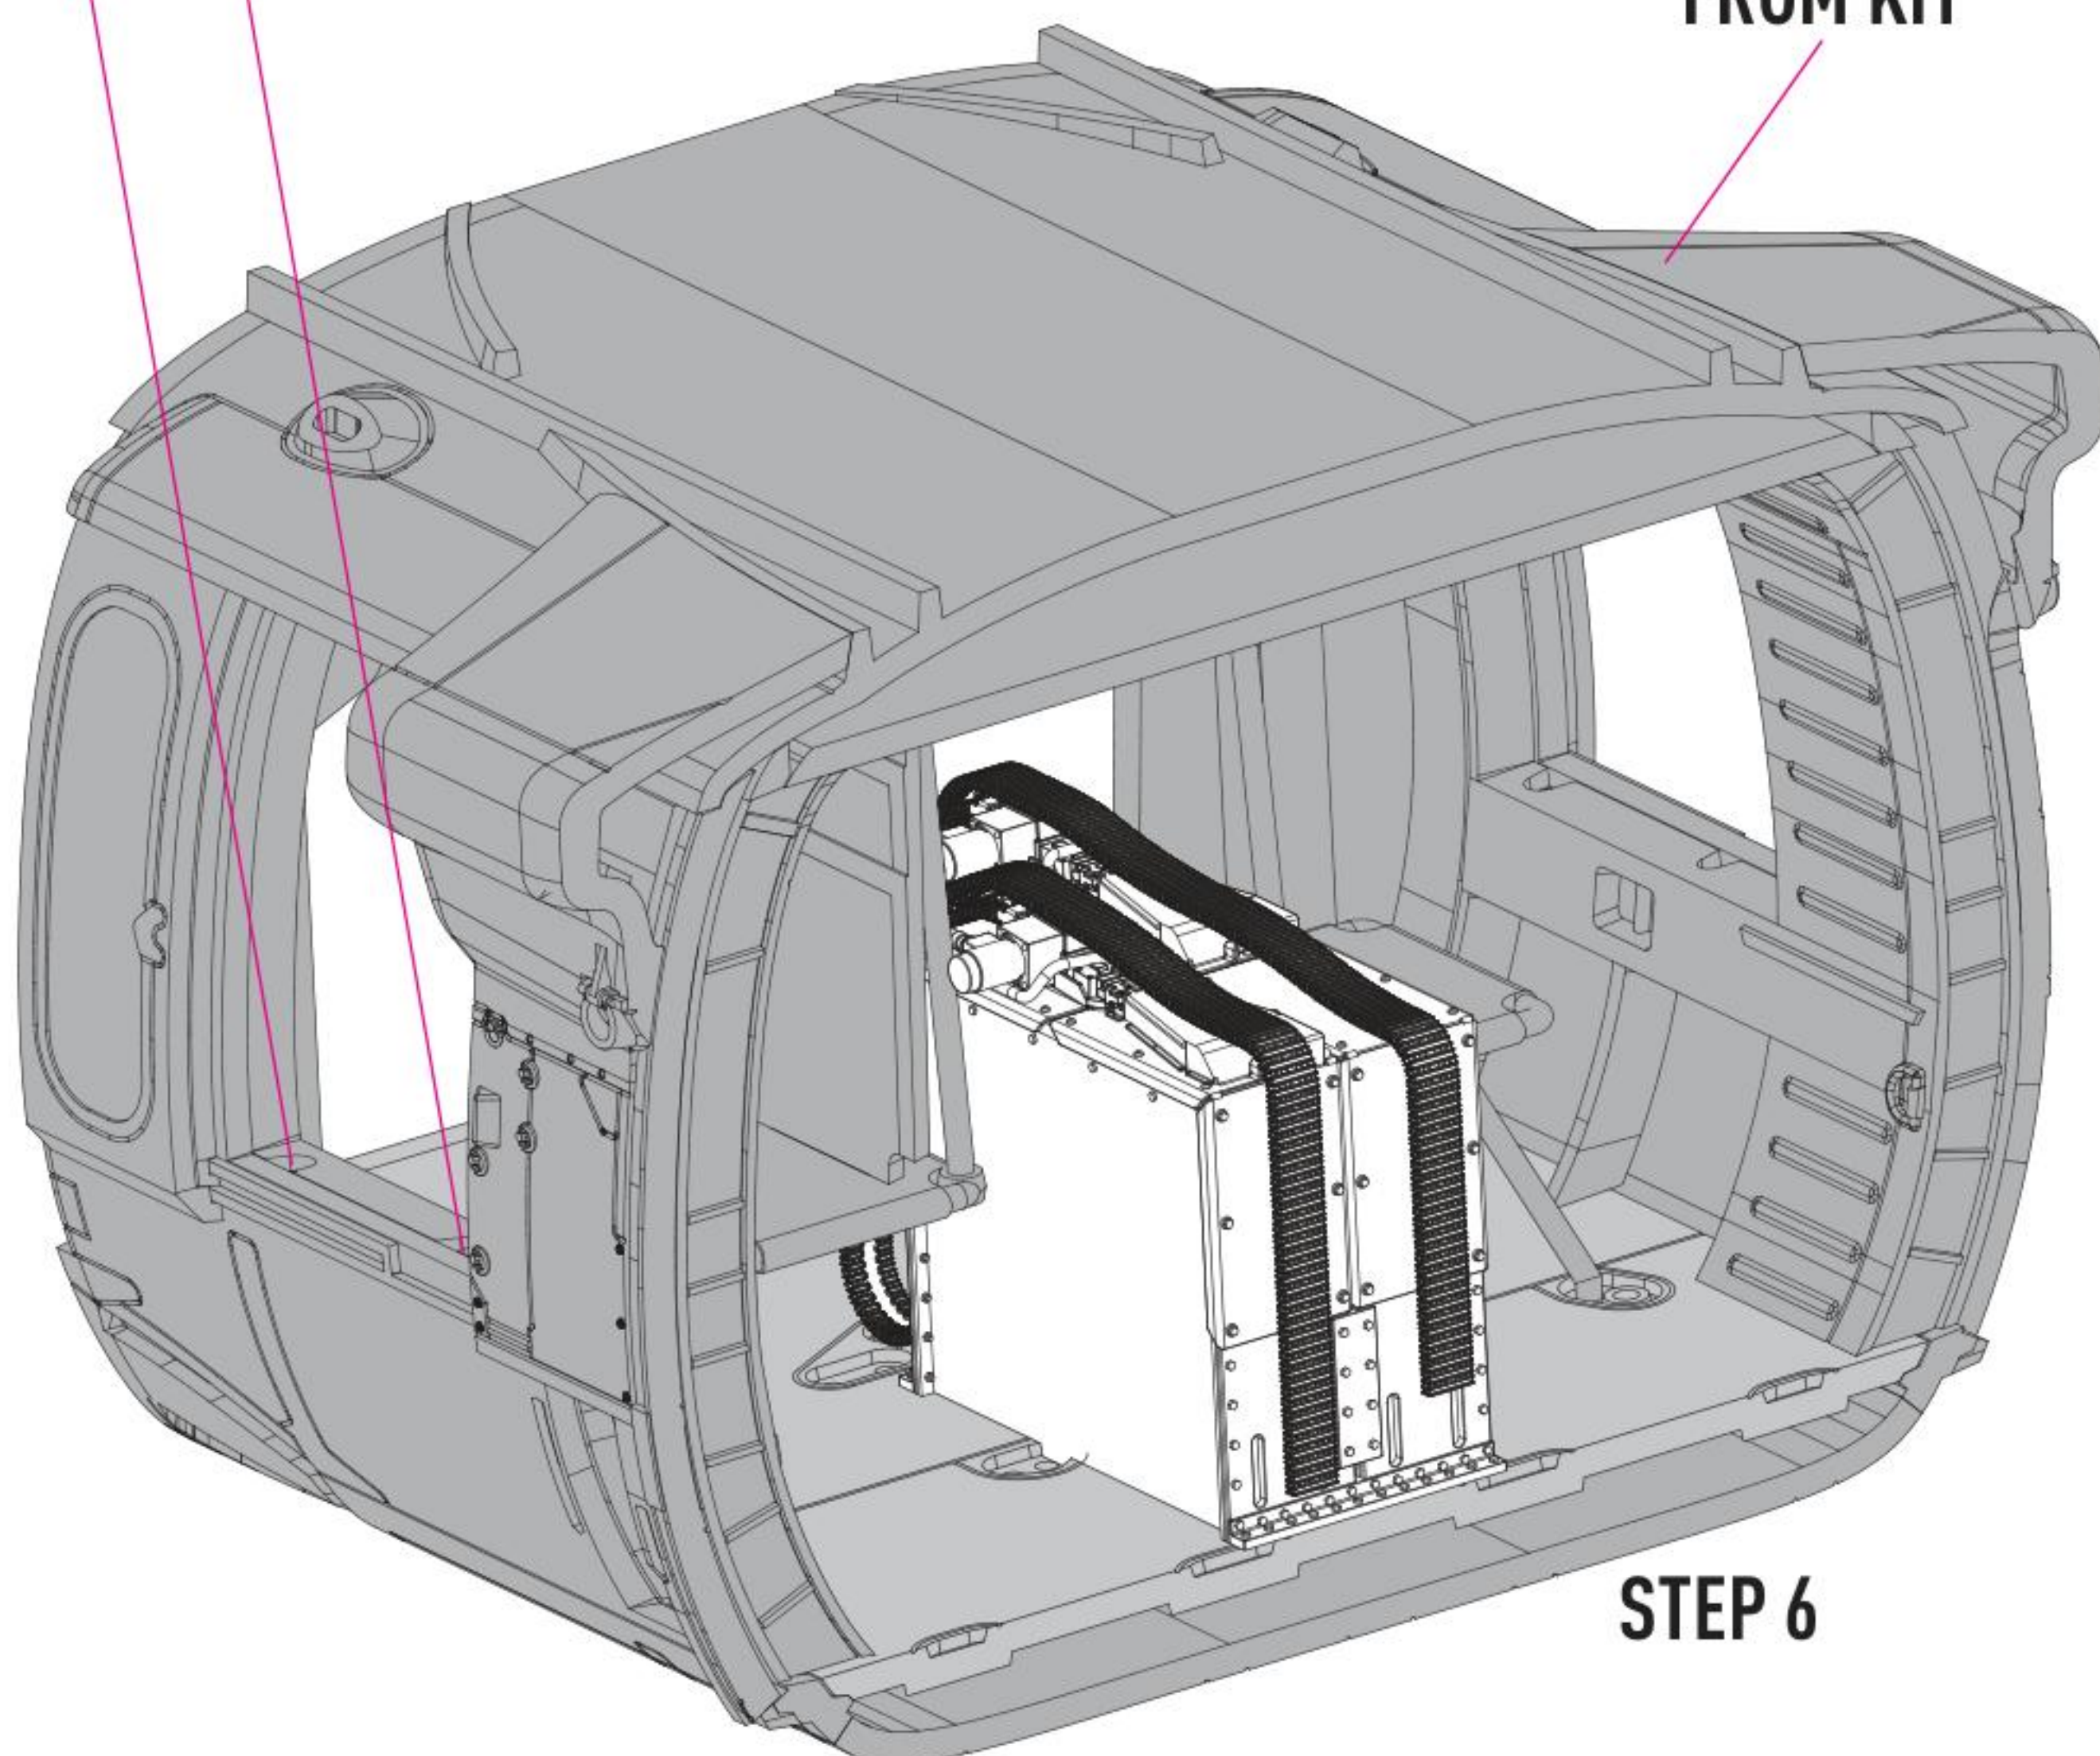PART  
FROM KIT

STEP 6


8

STEP 3

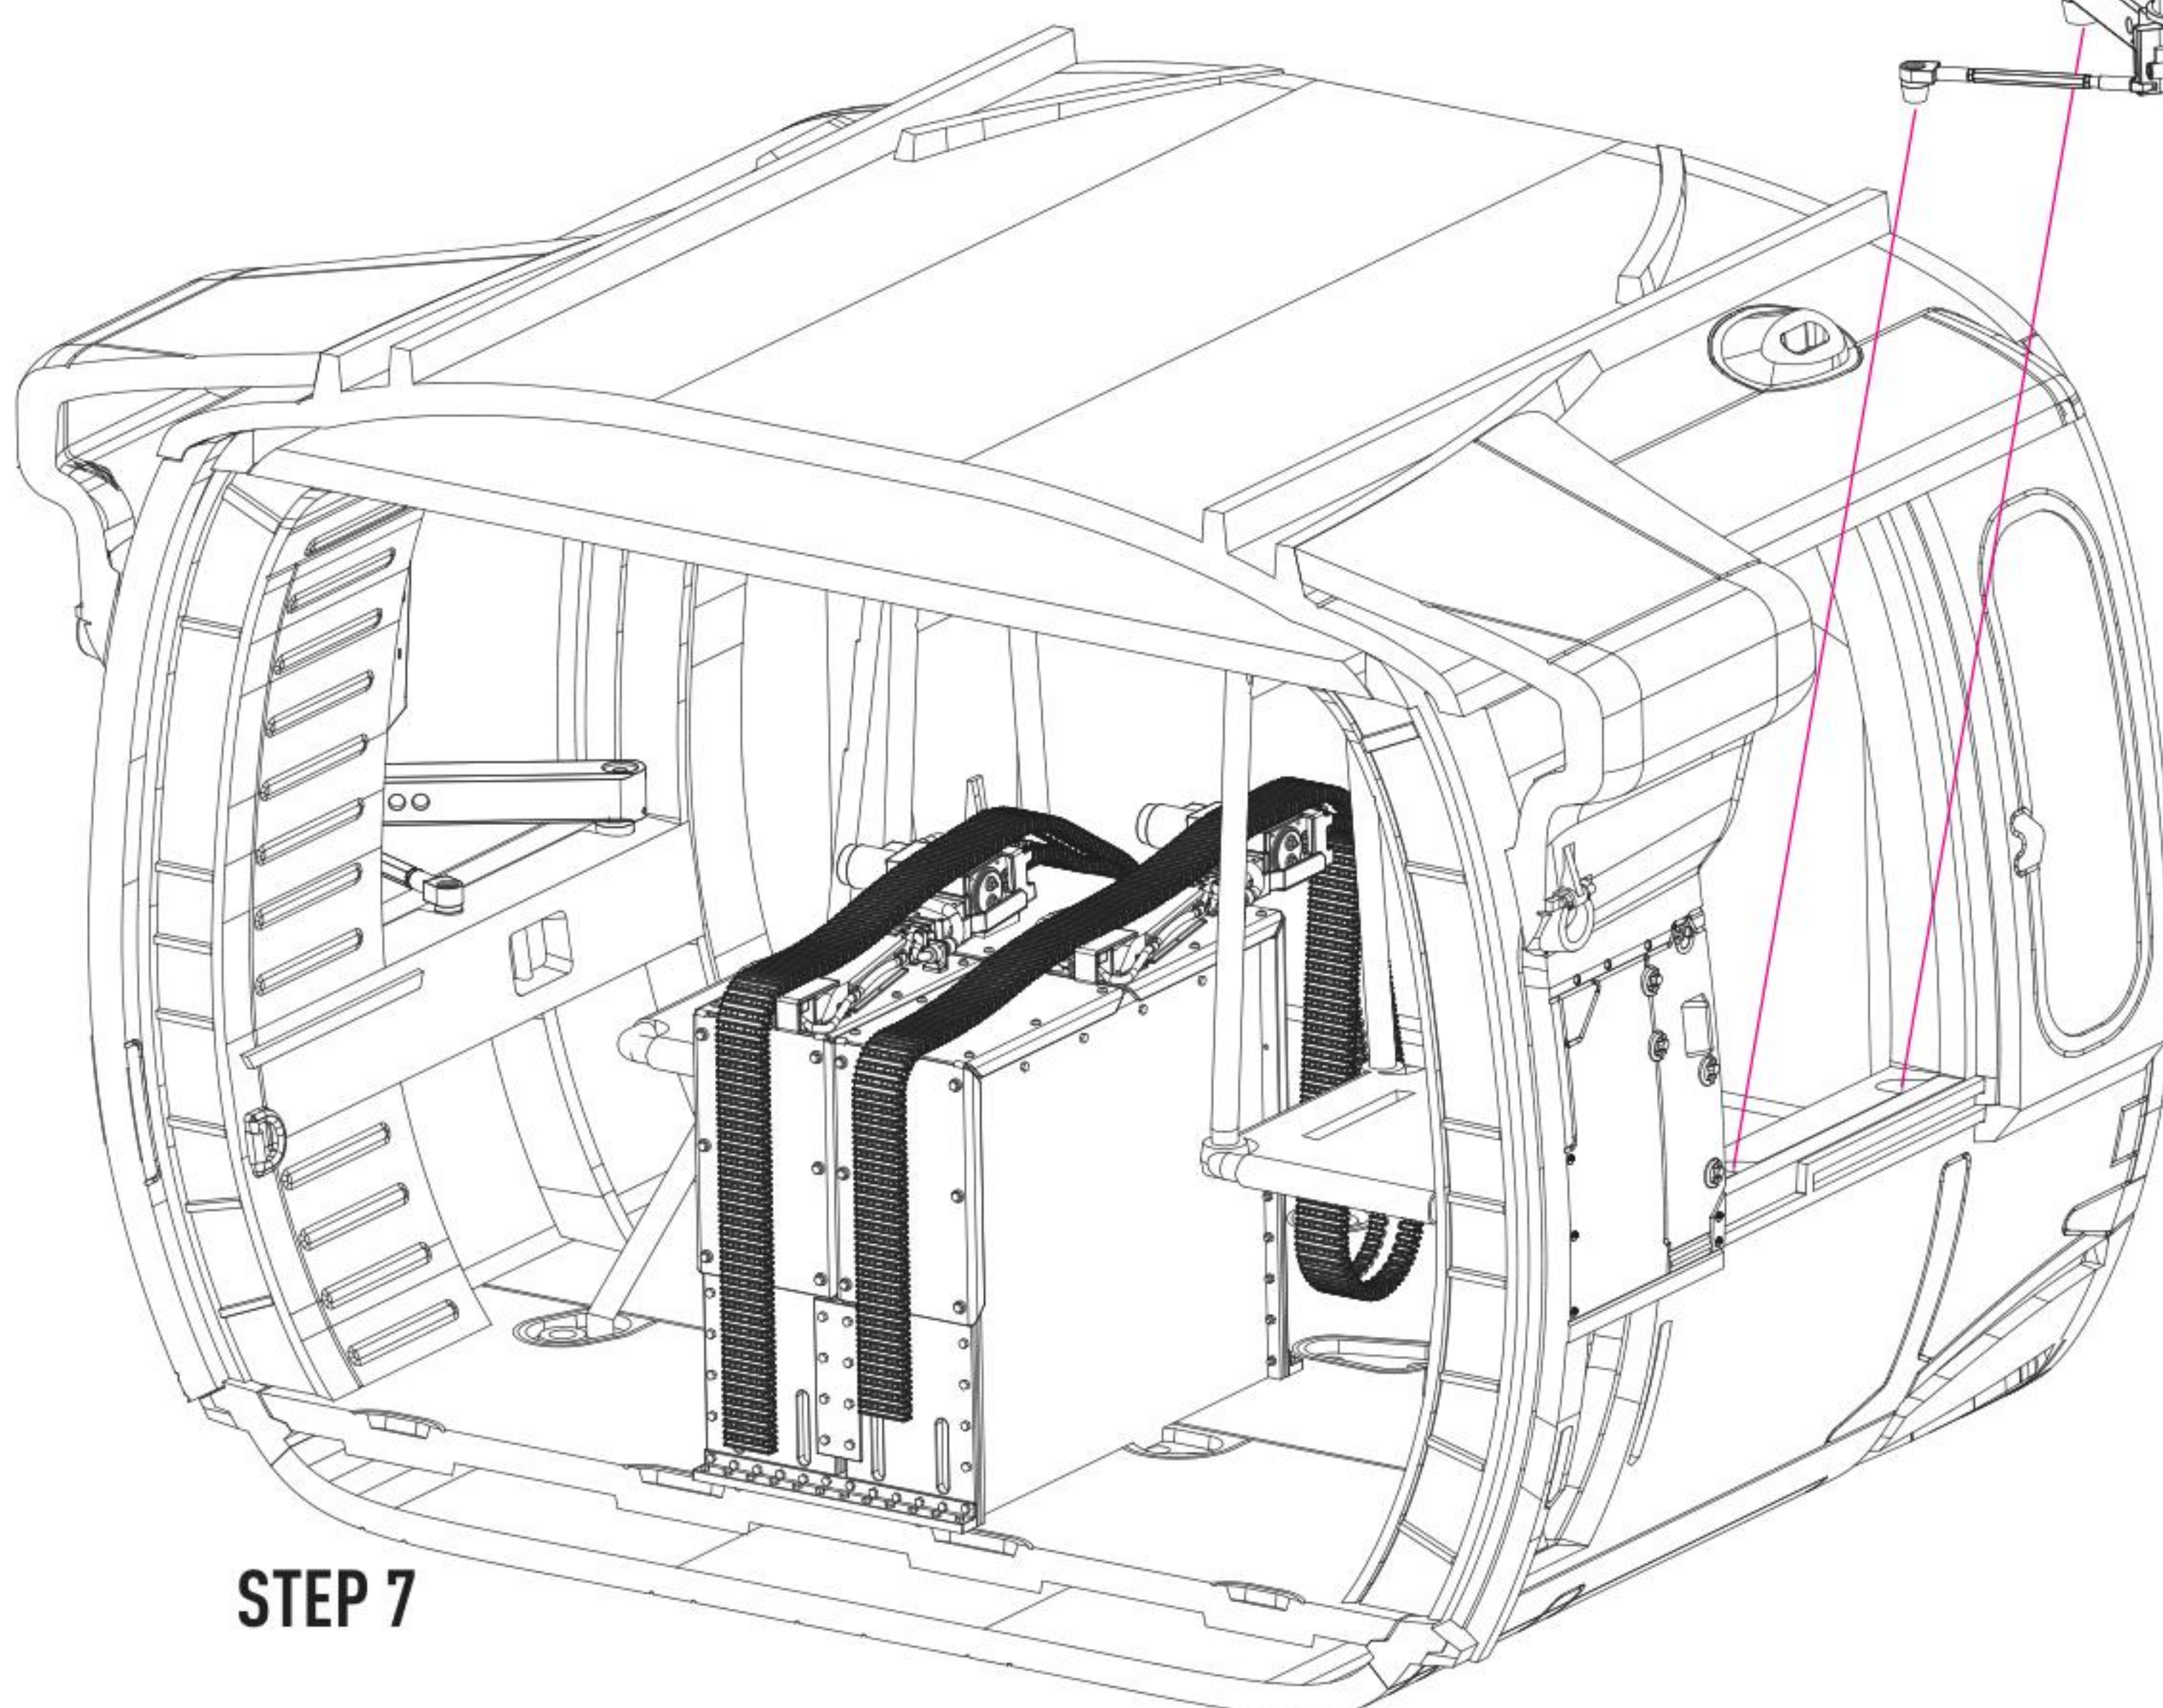
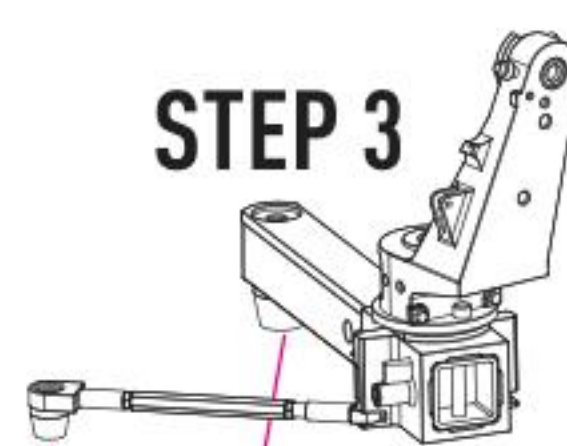


STEP 7

9

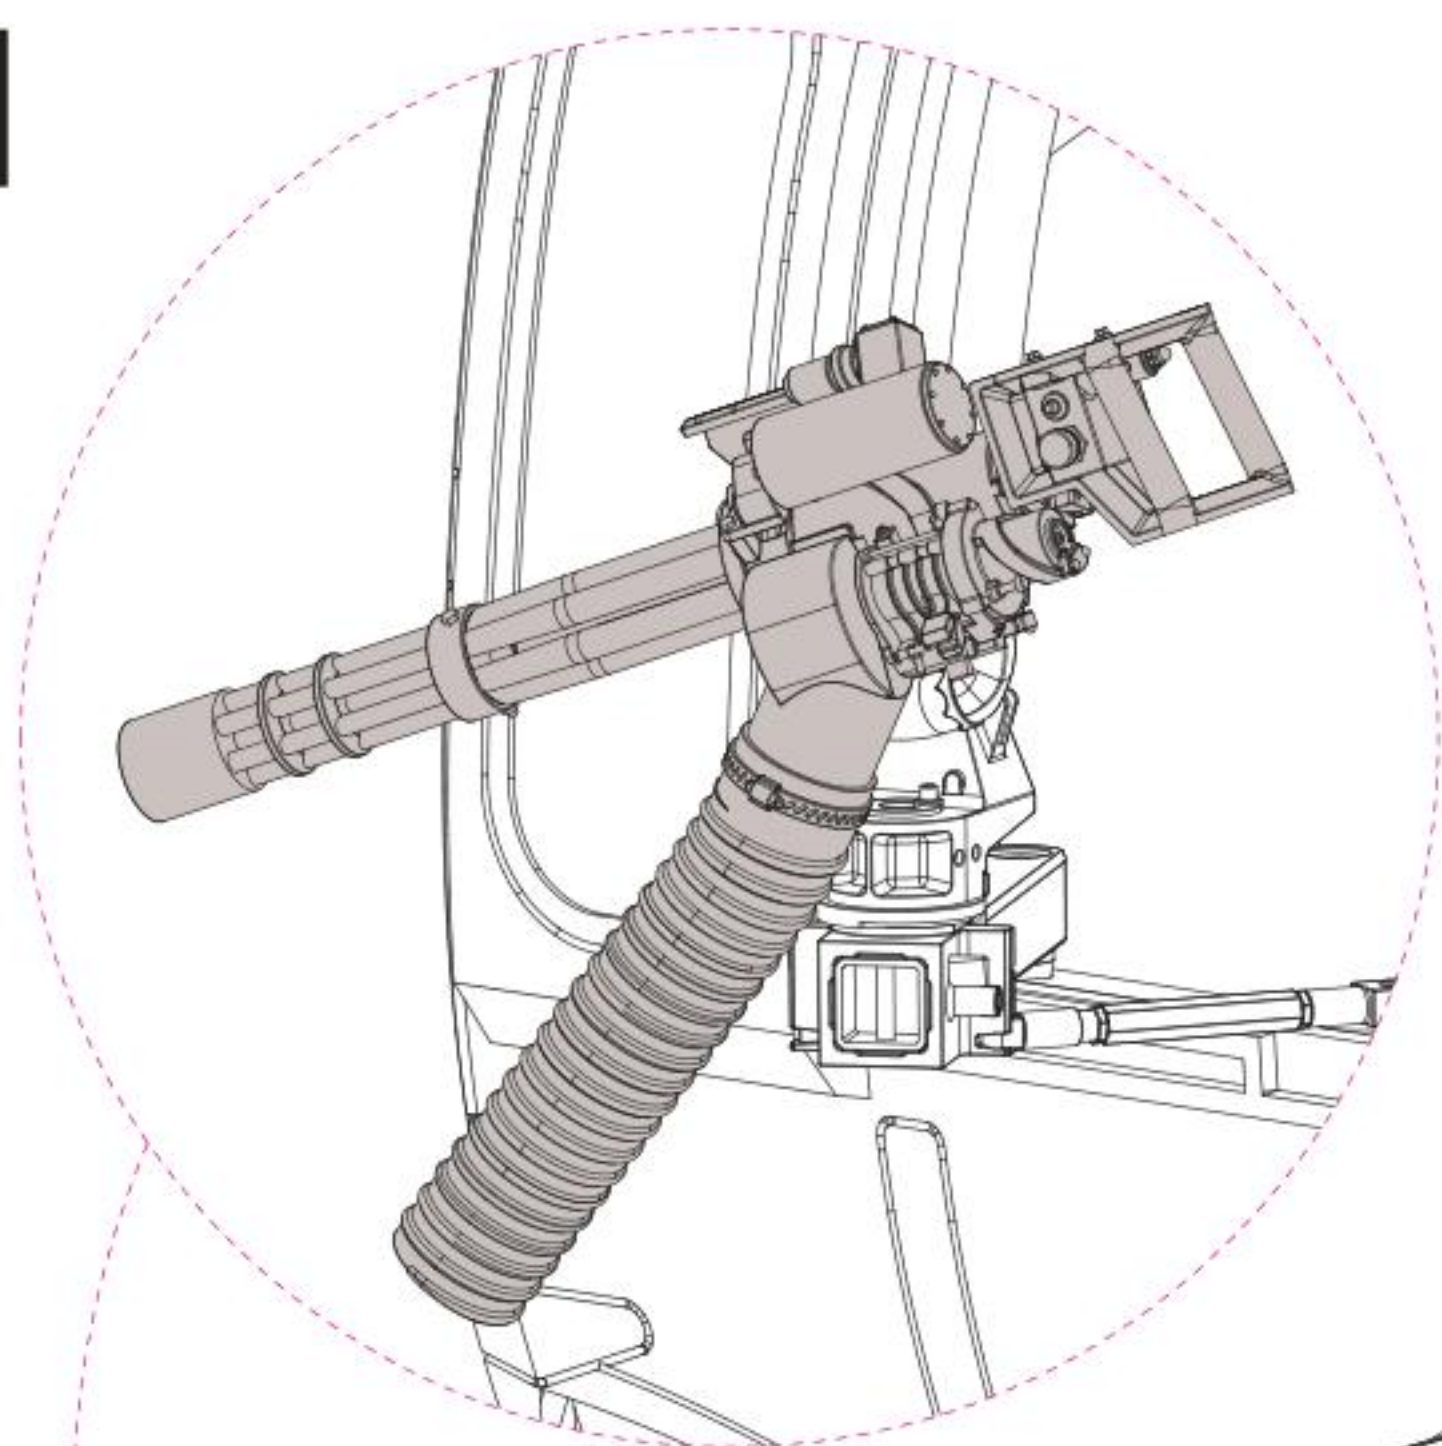


STEP 4

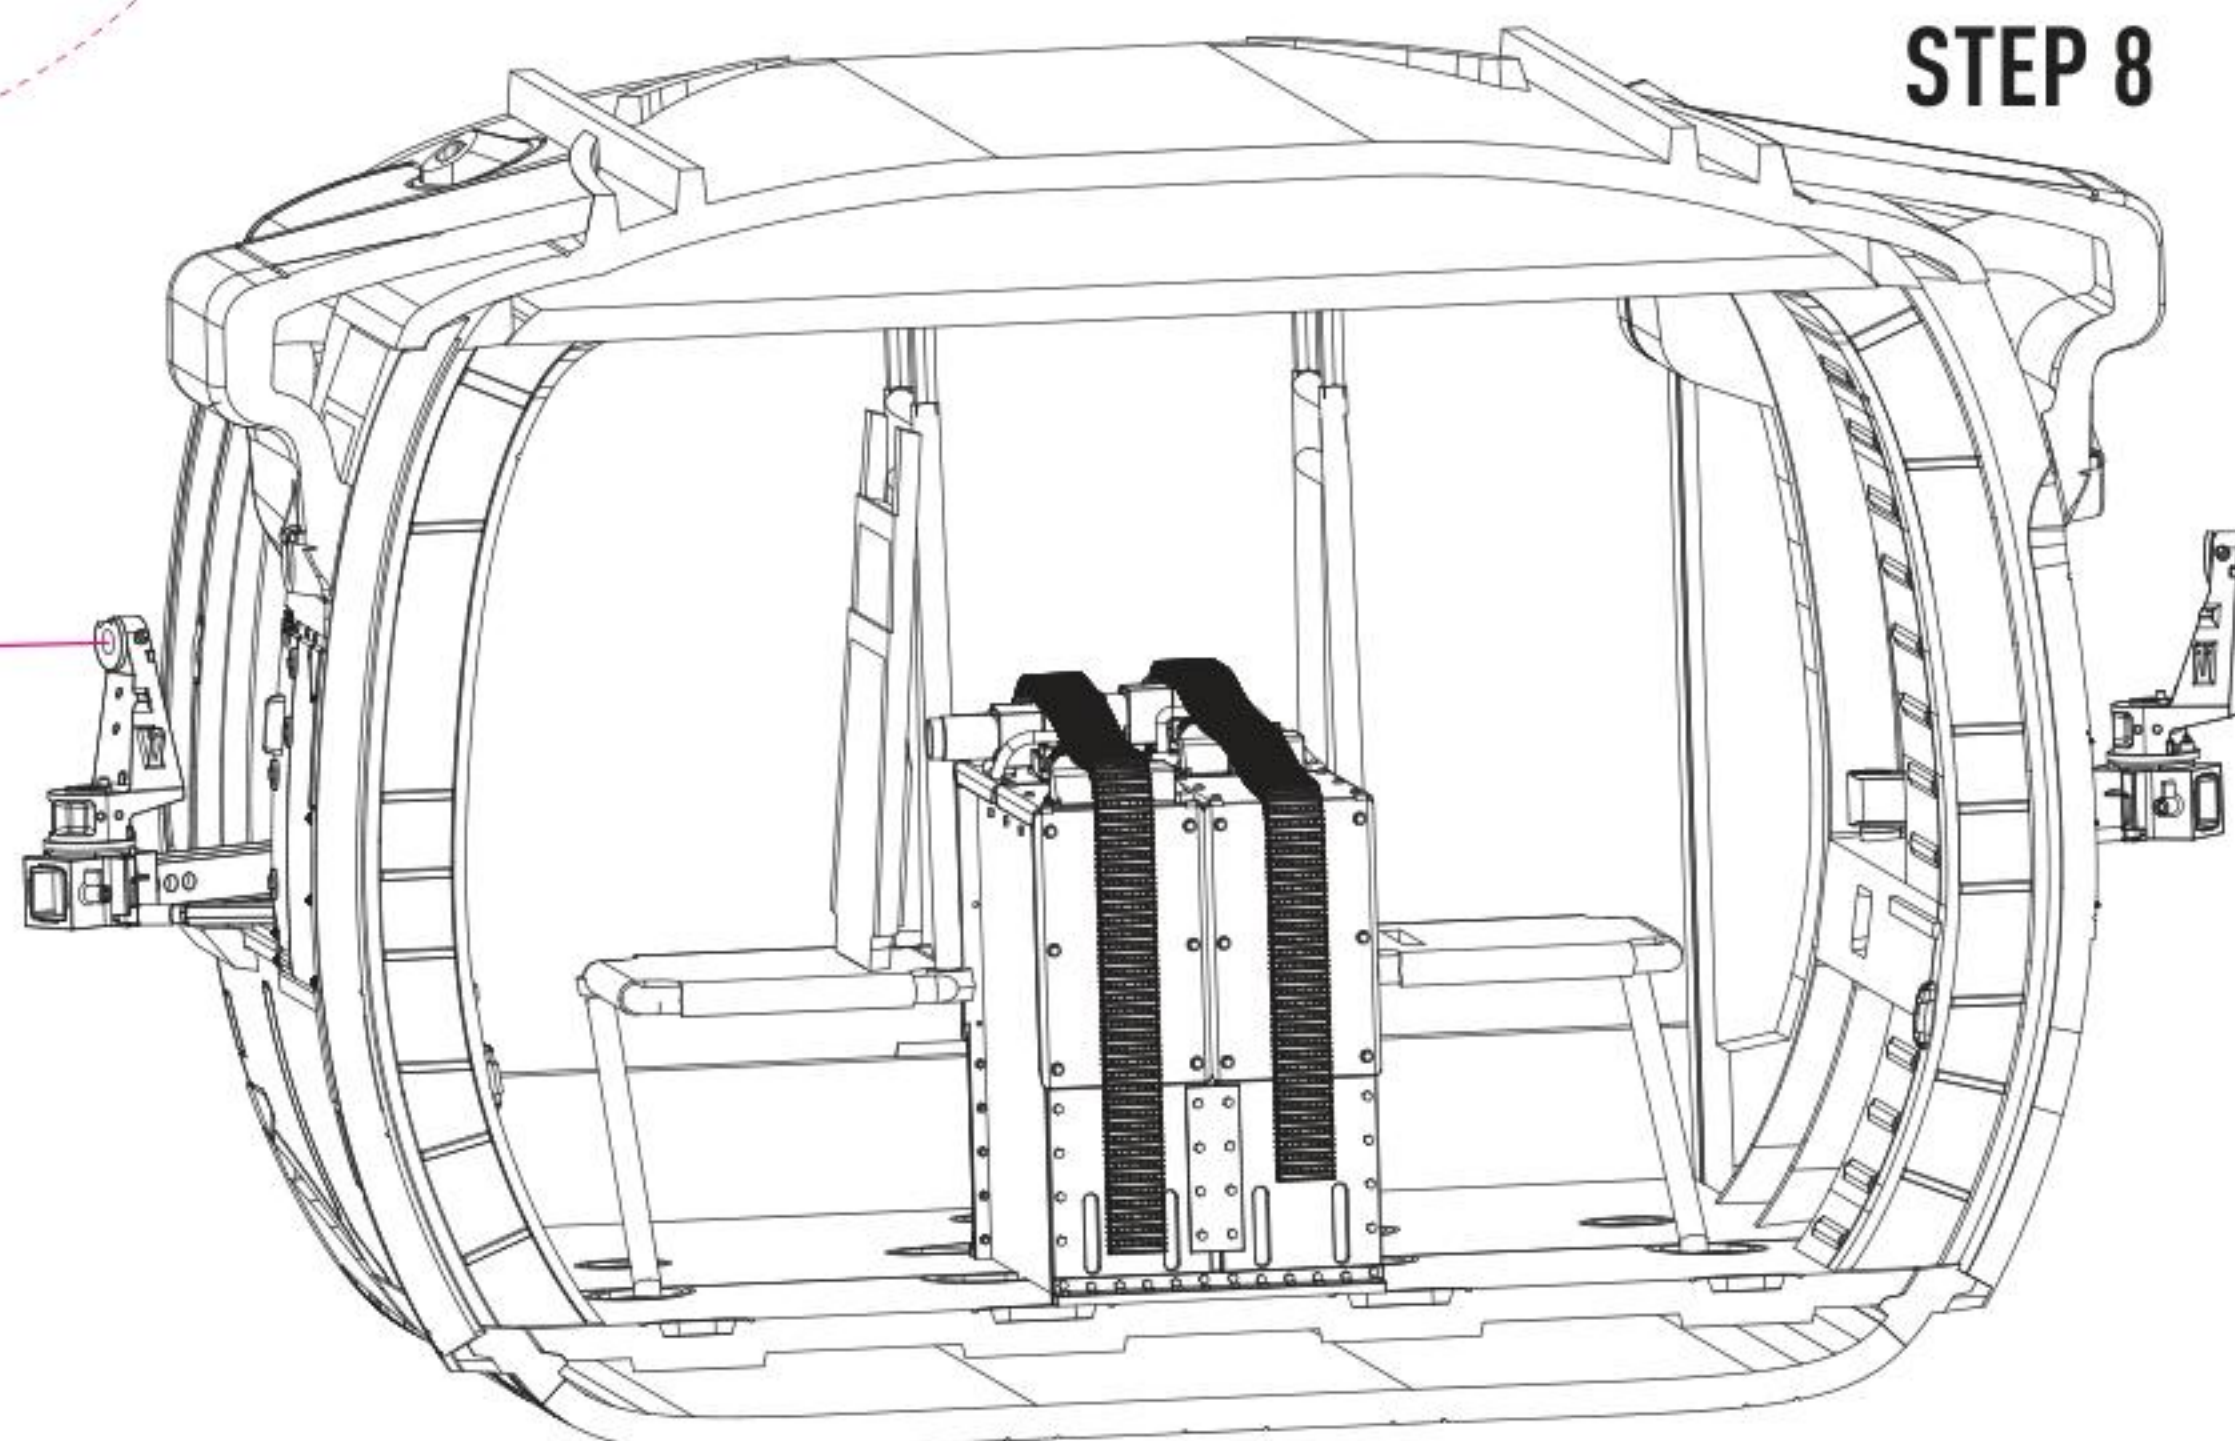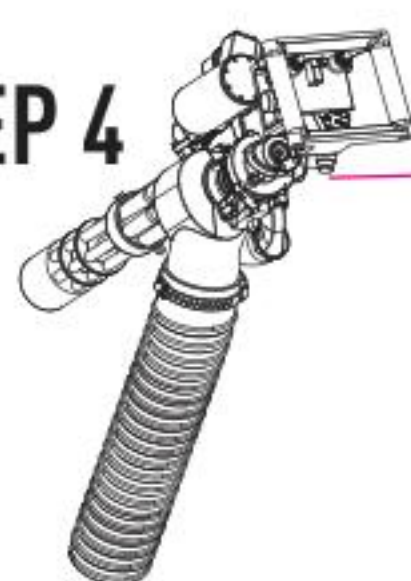


STEP 8


10


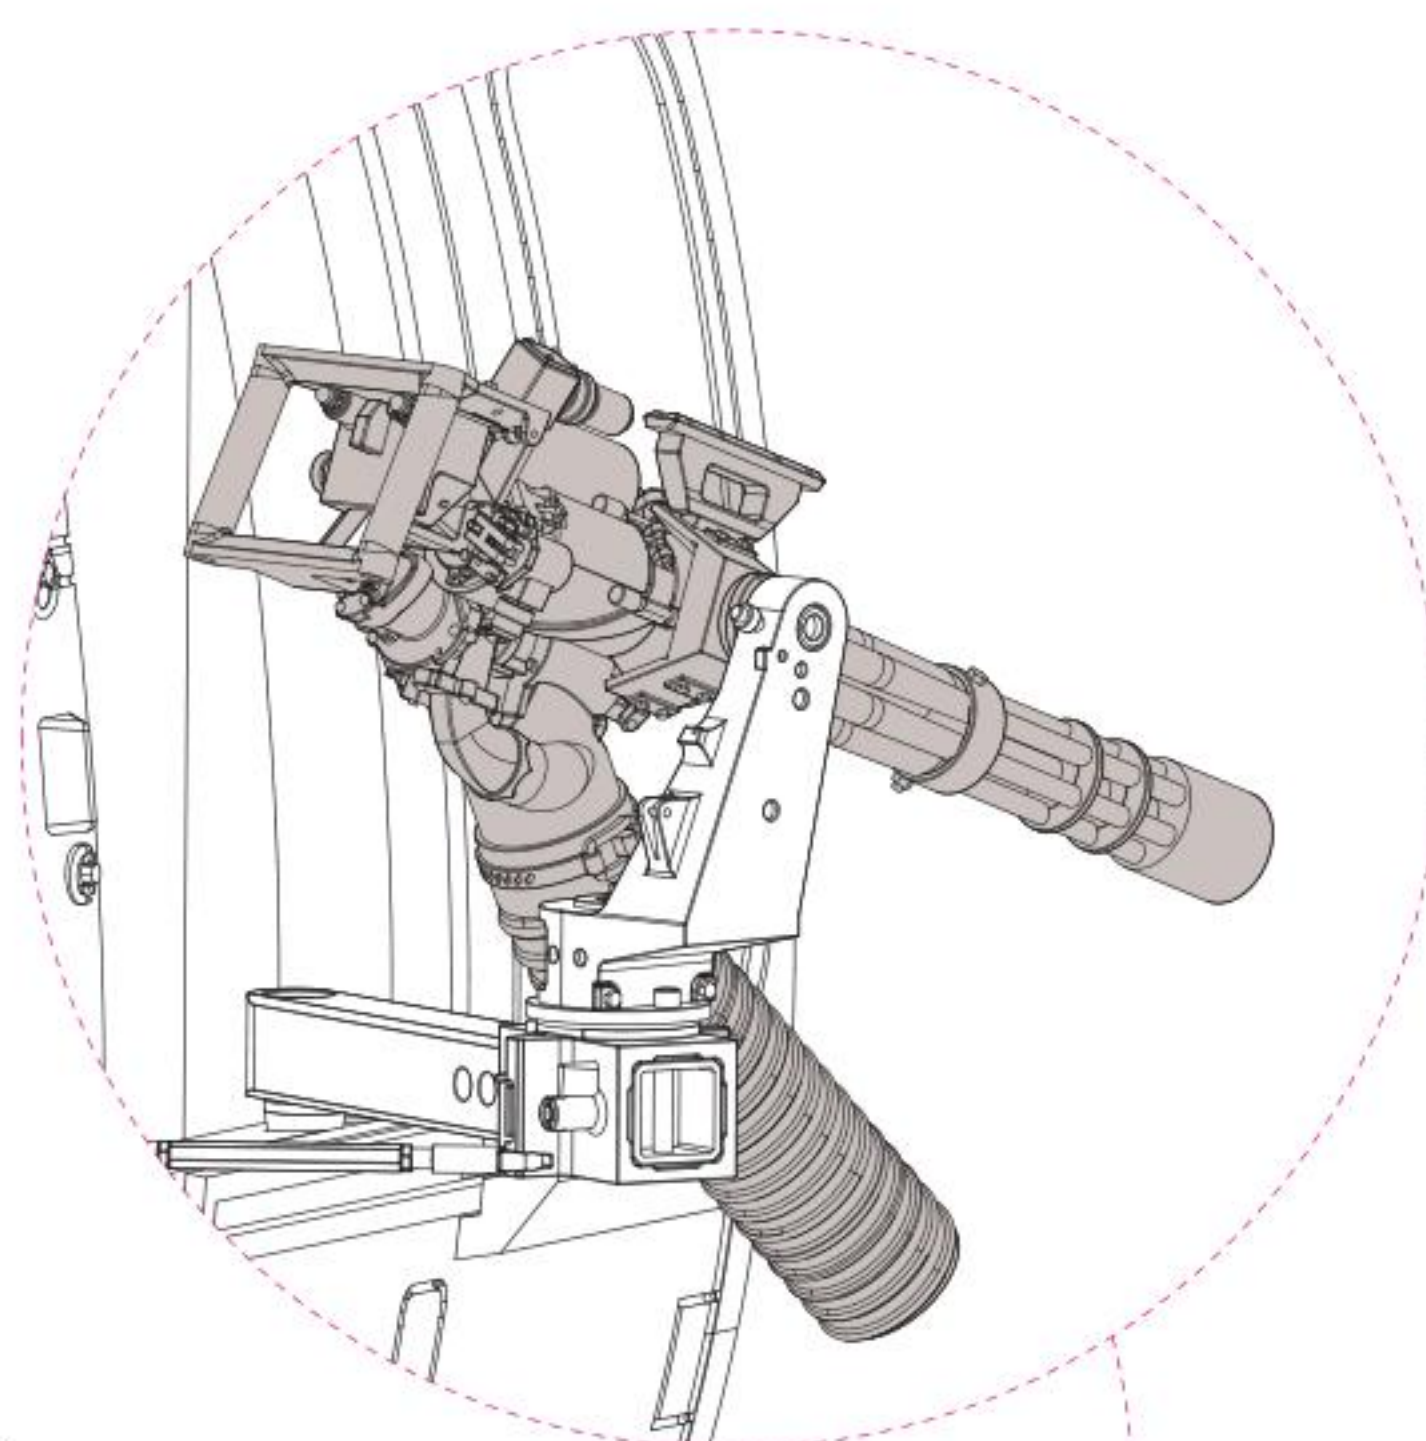


STEP 9

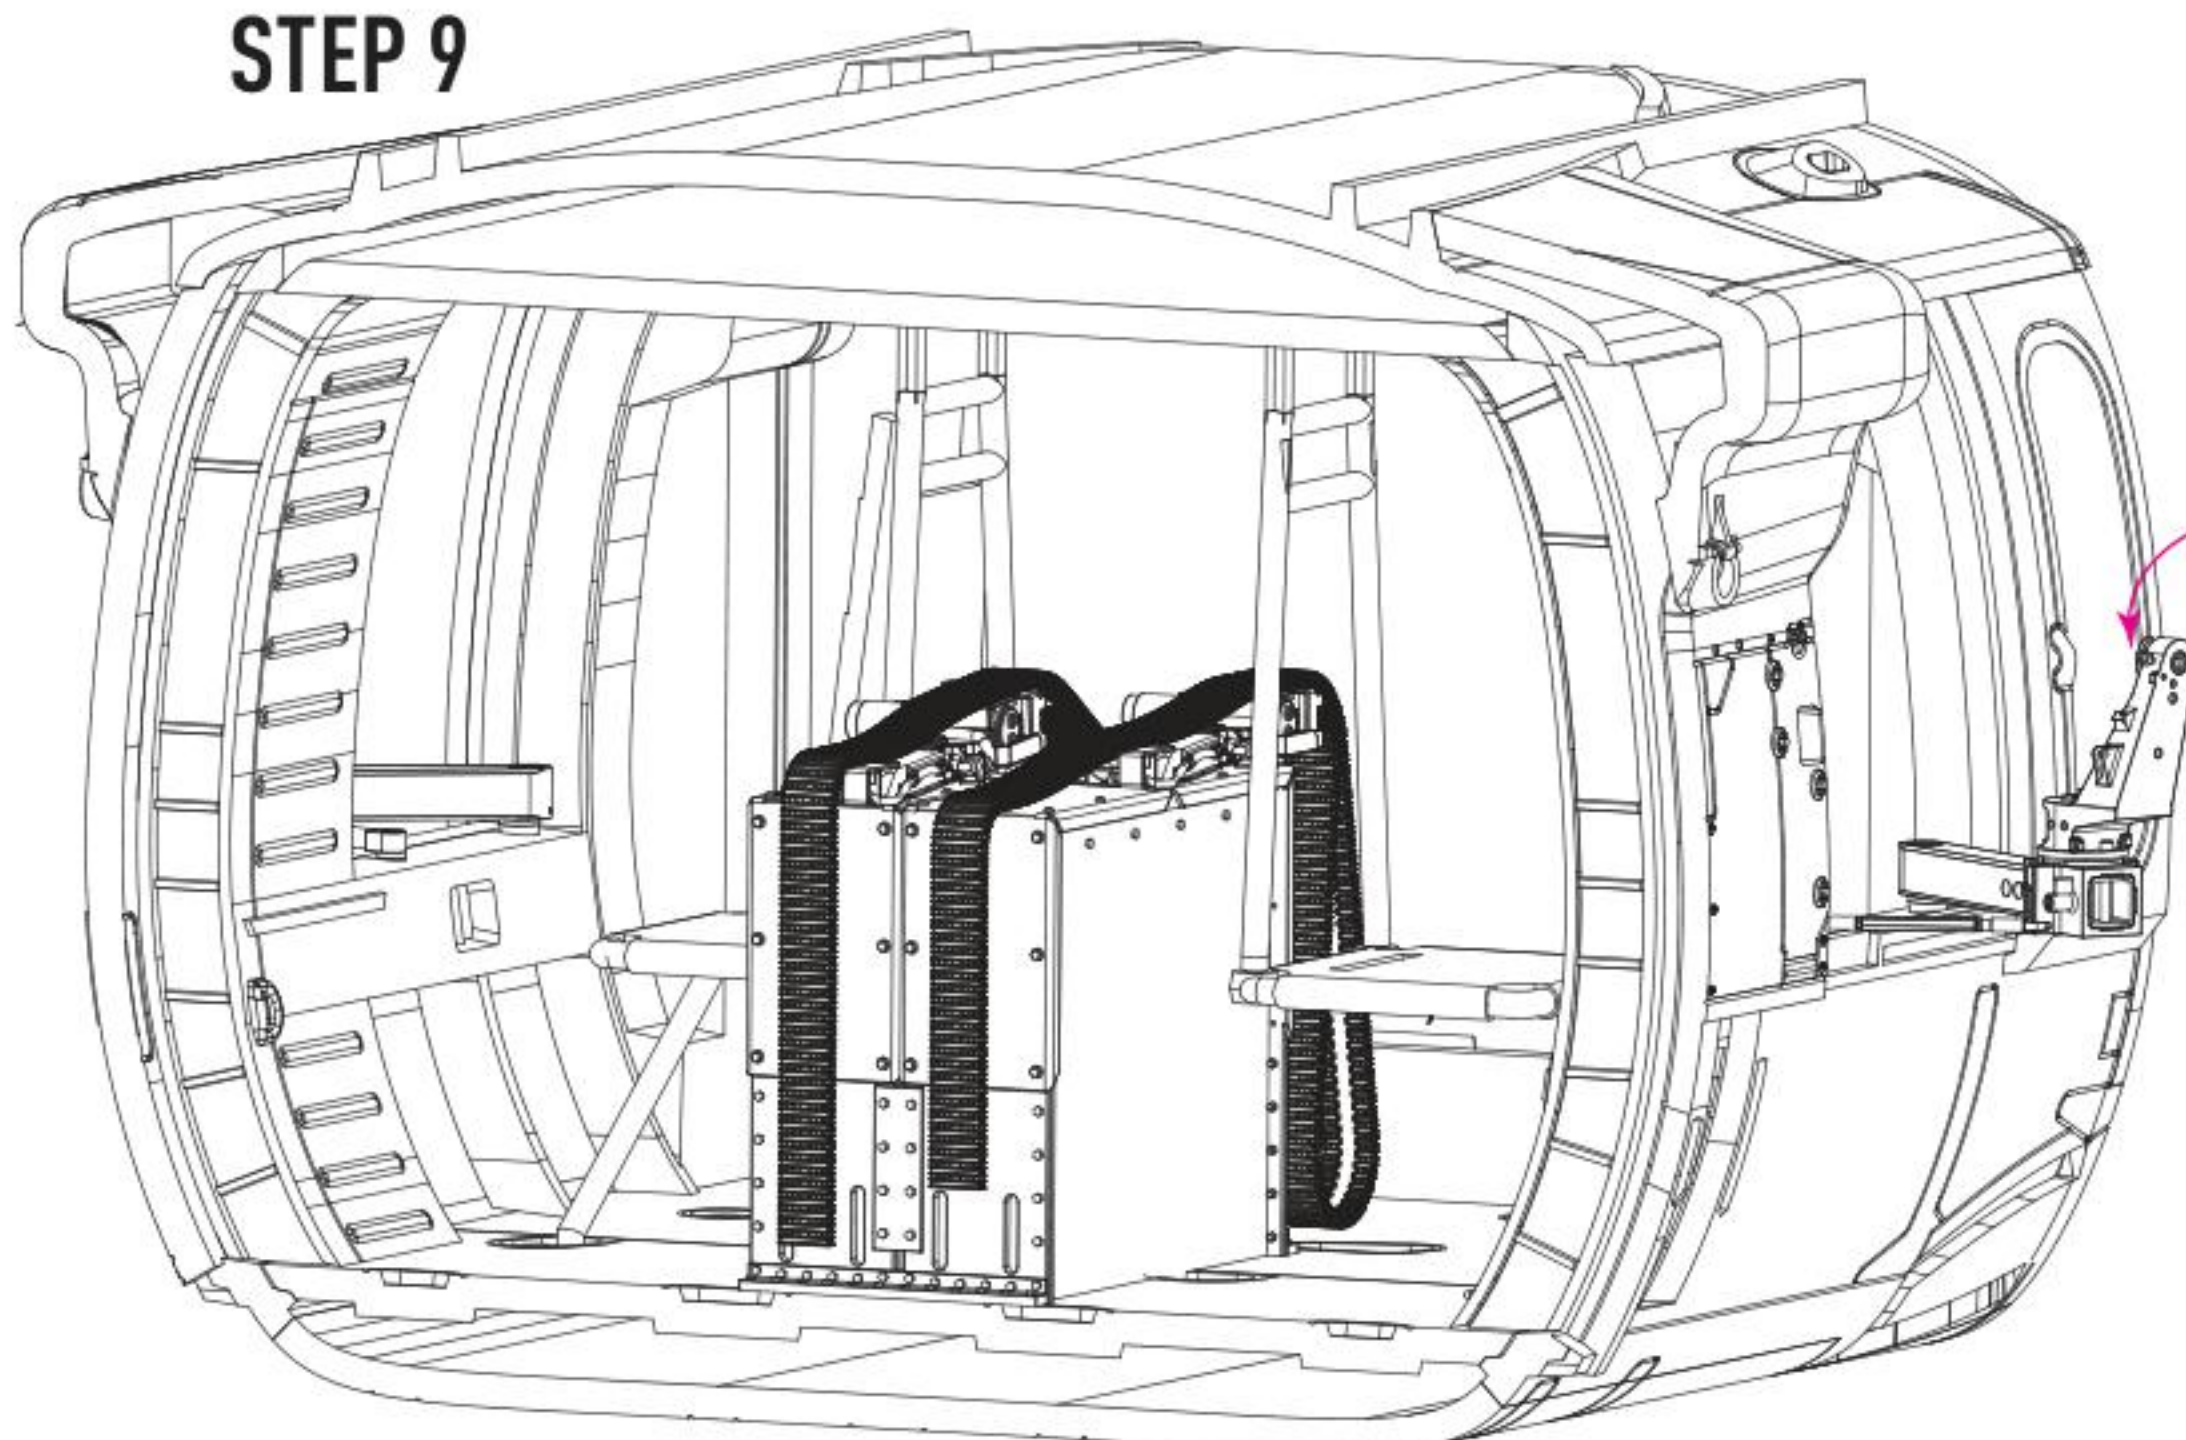


STEP 5

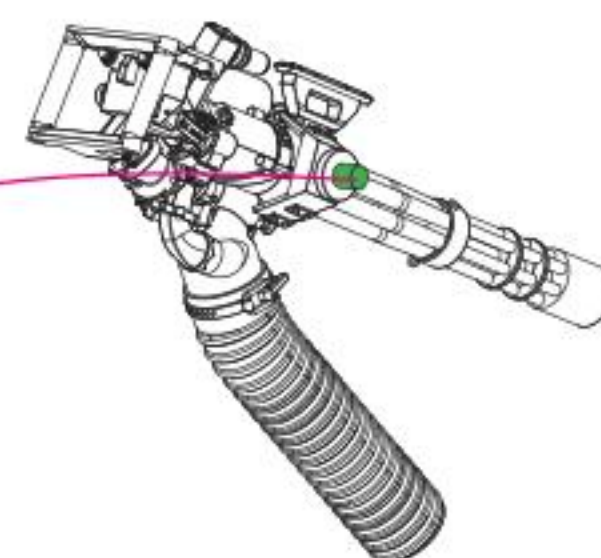


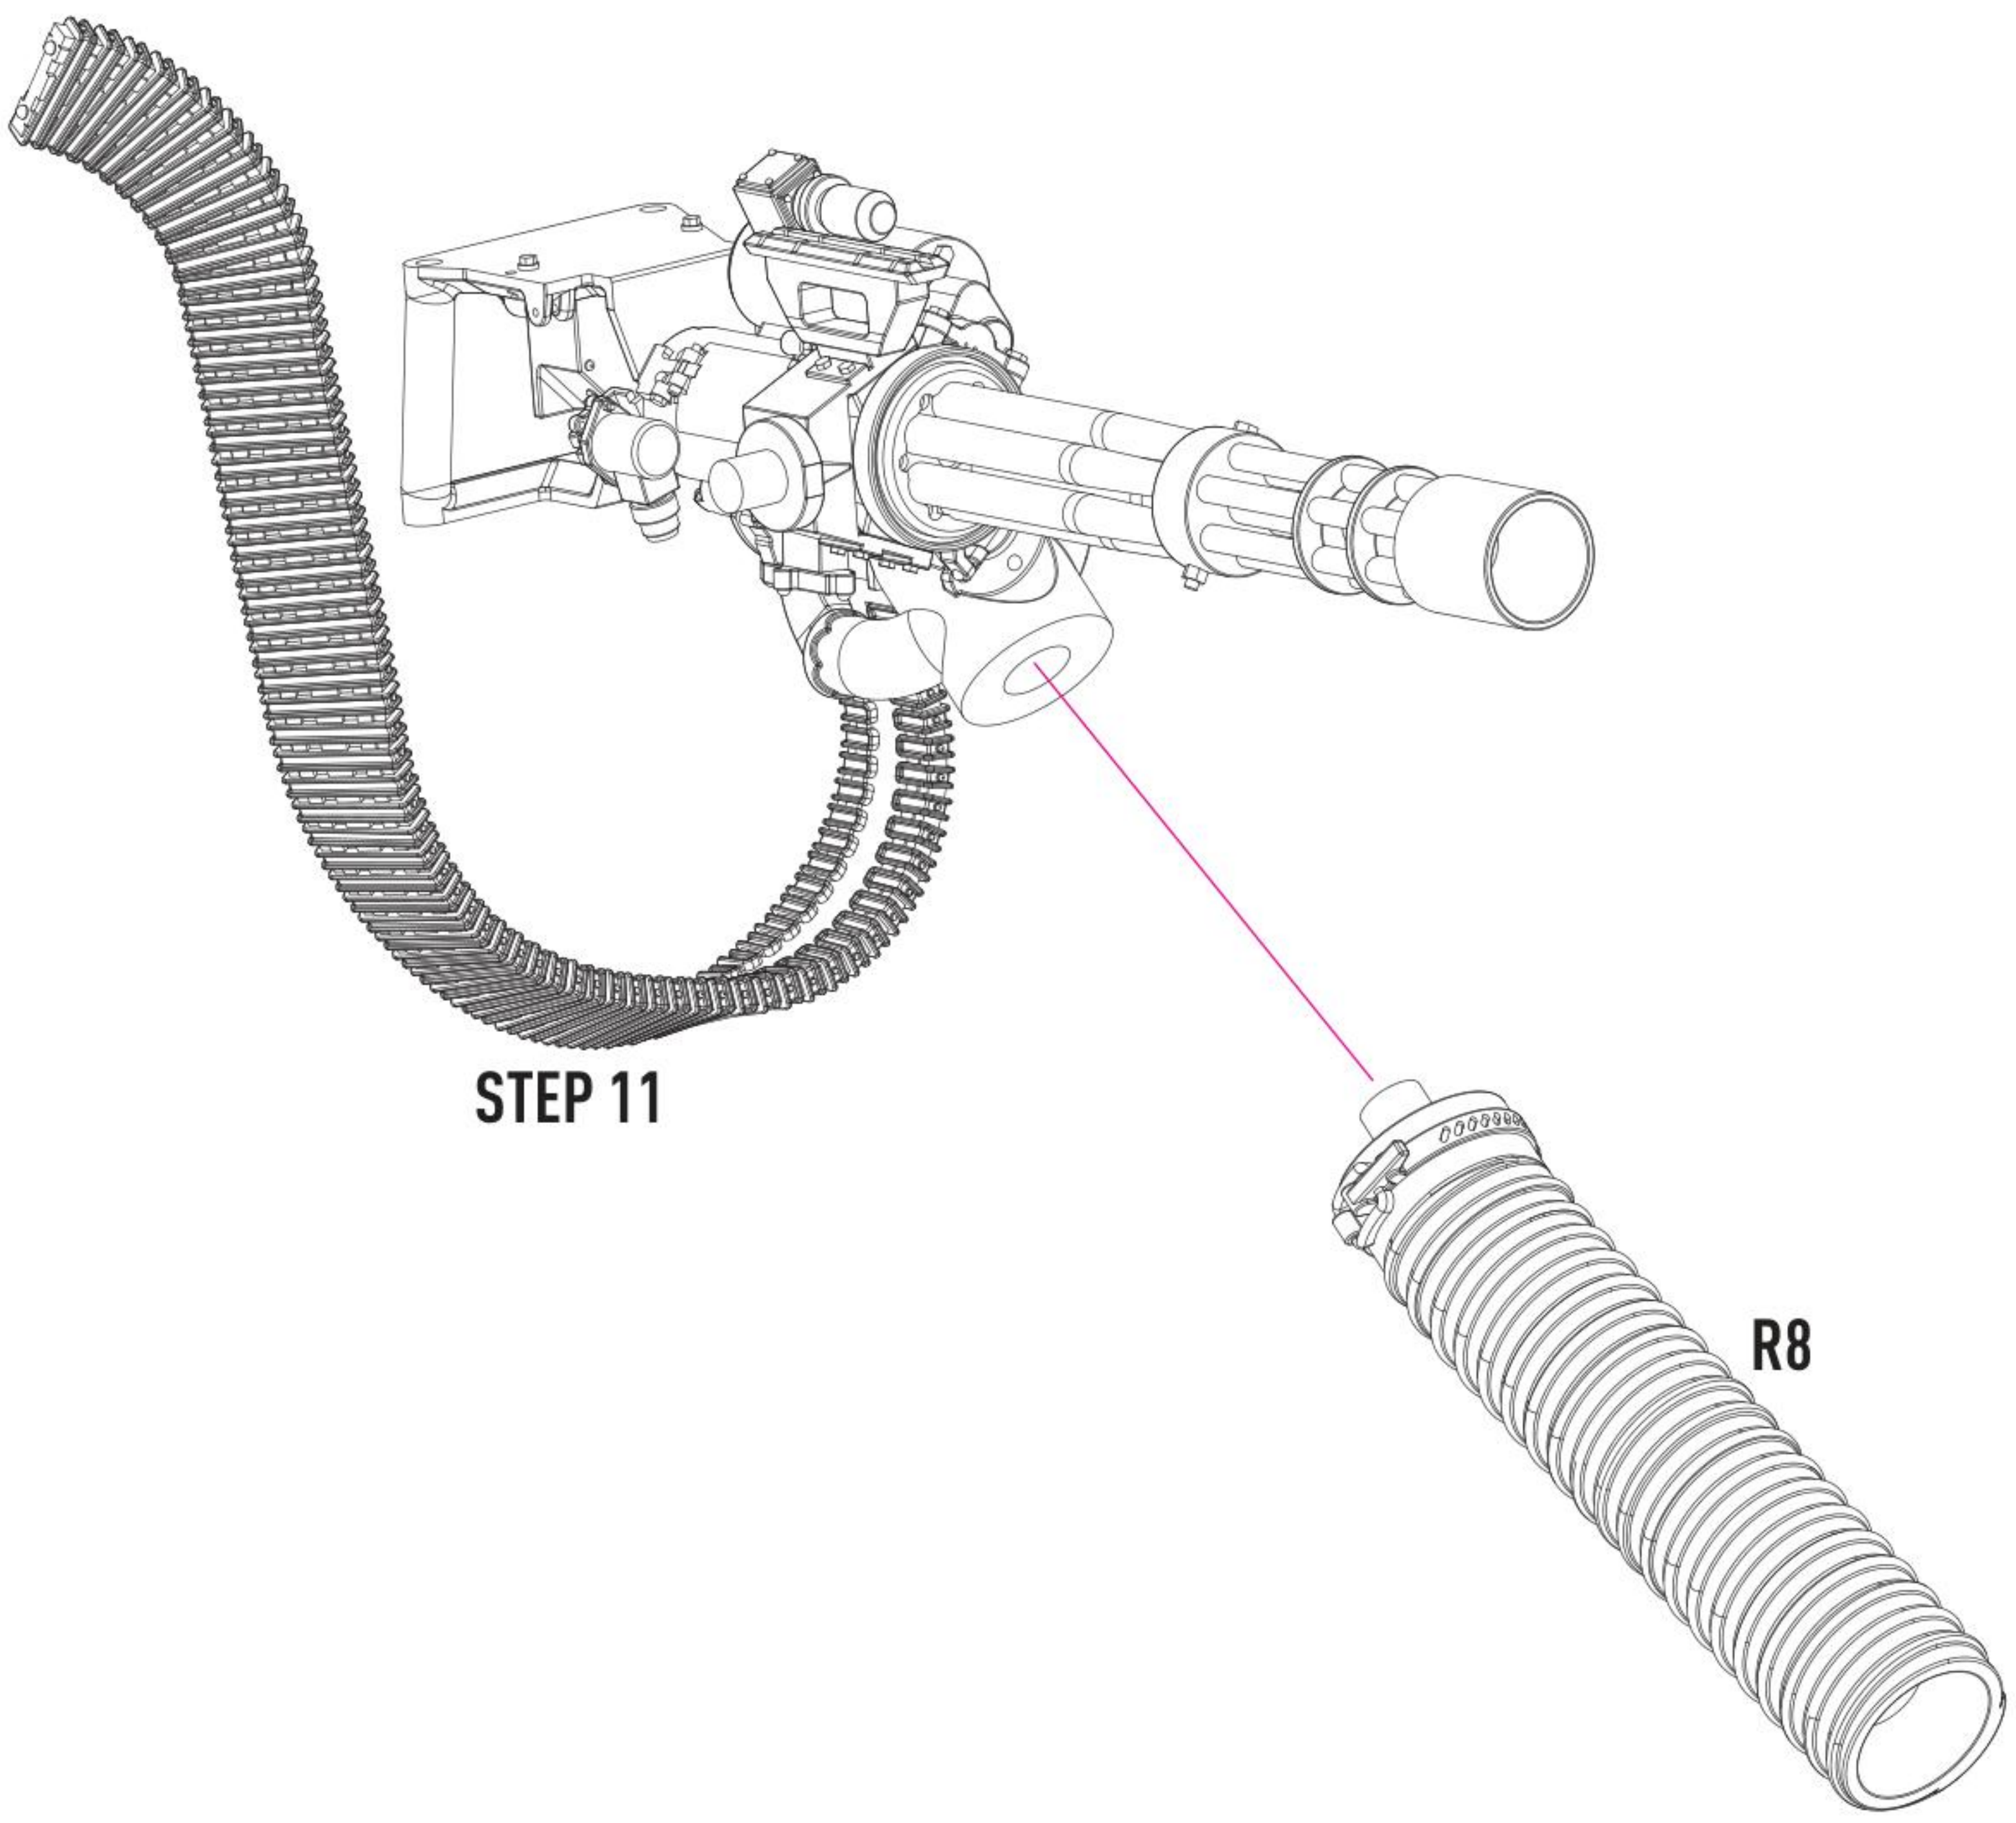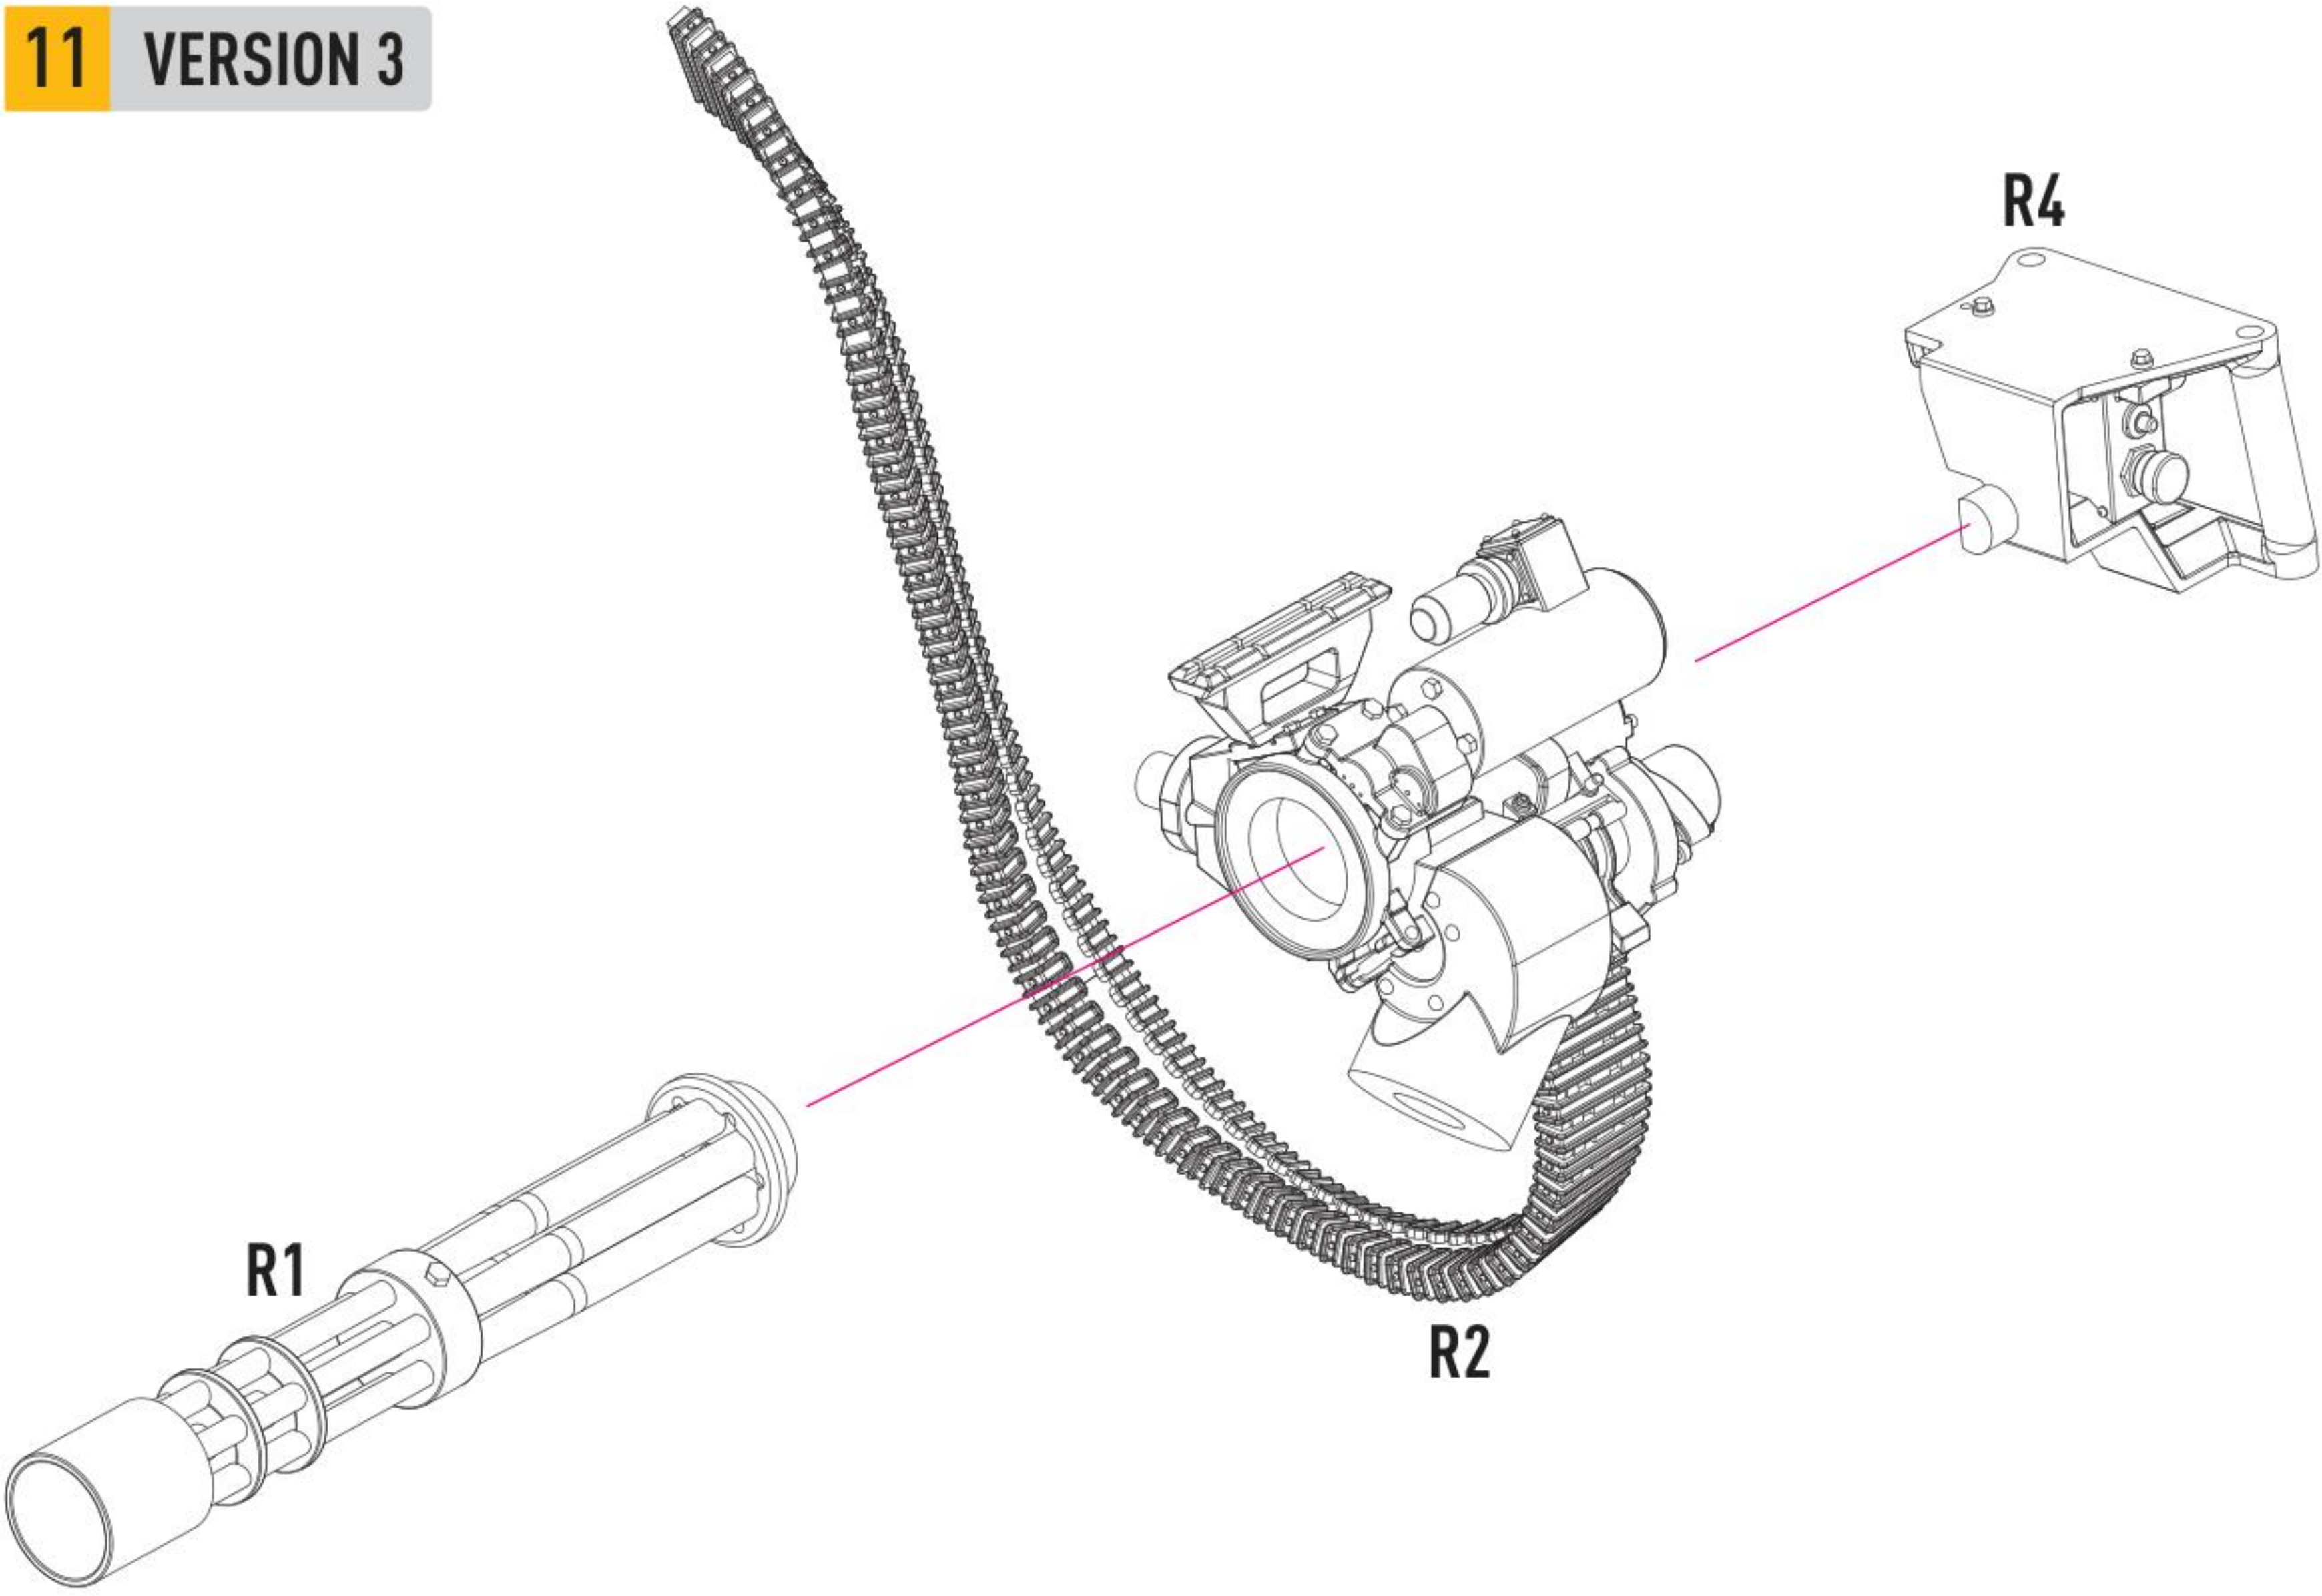

13

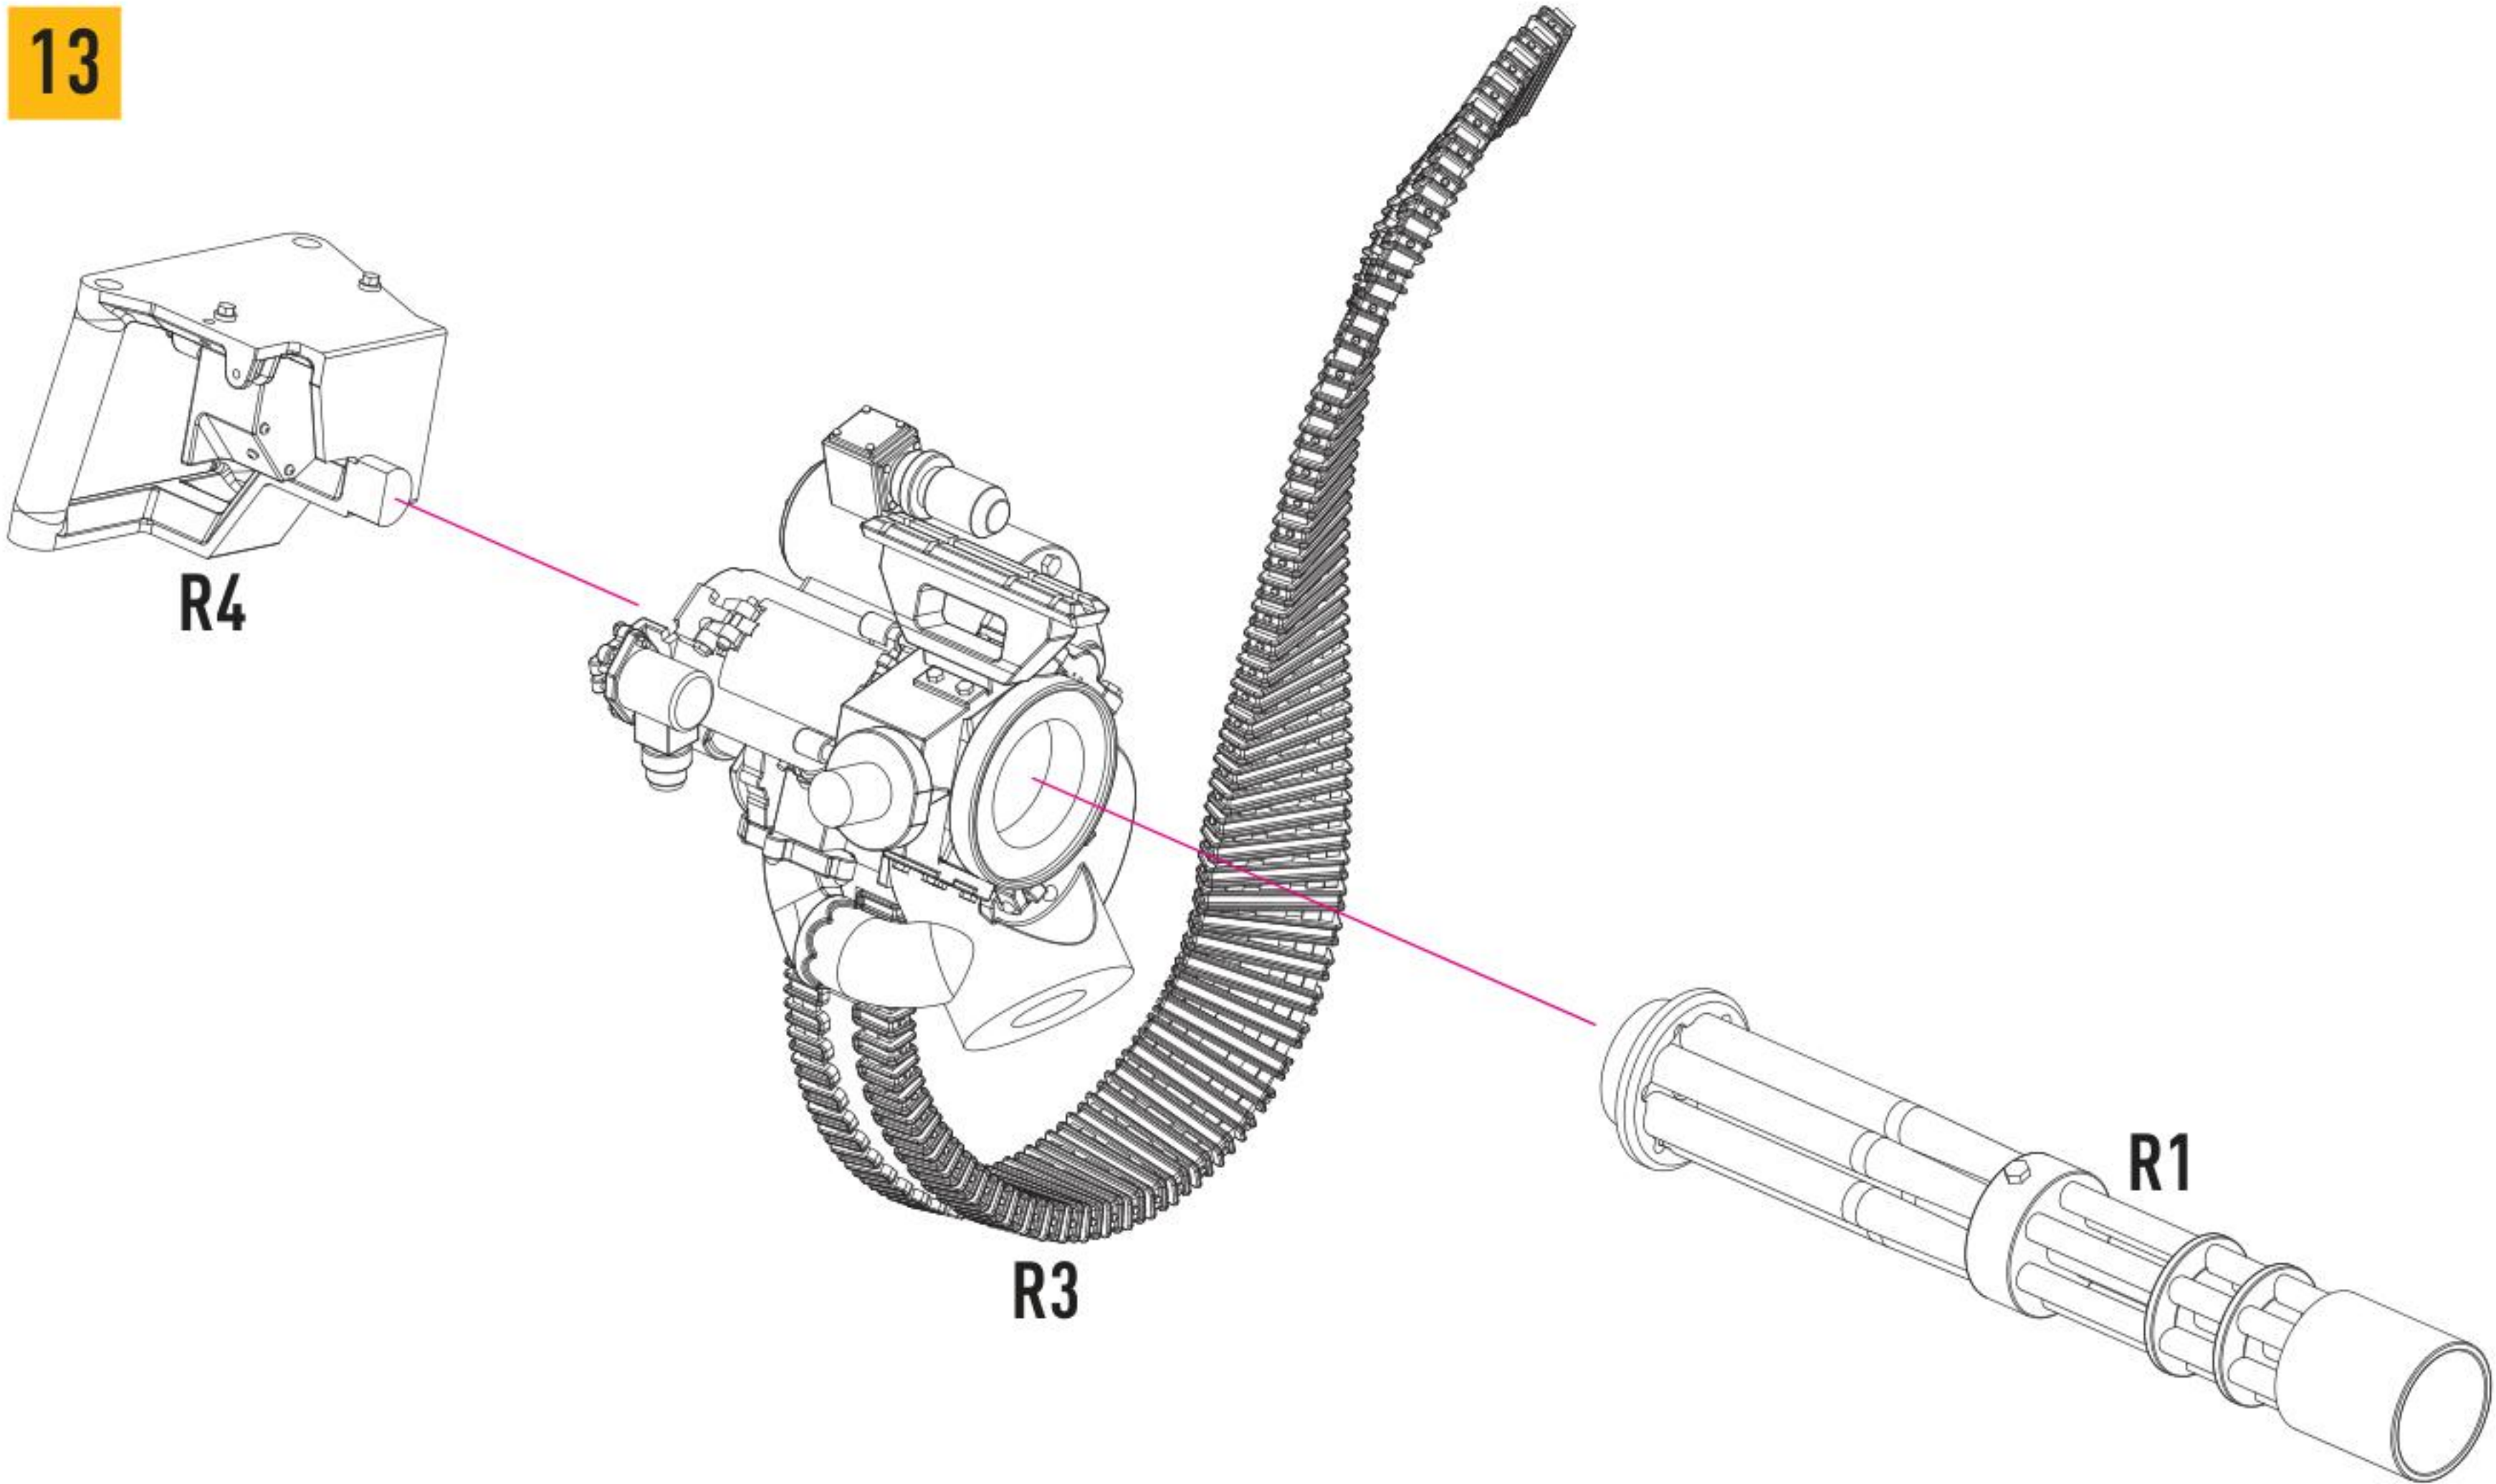


14

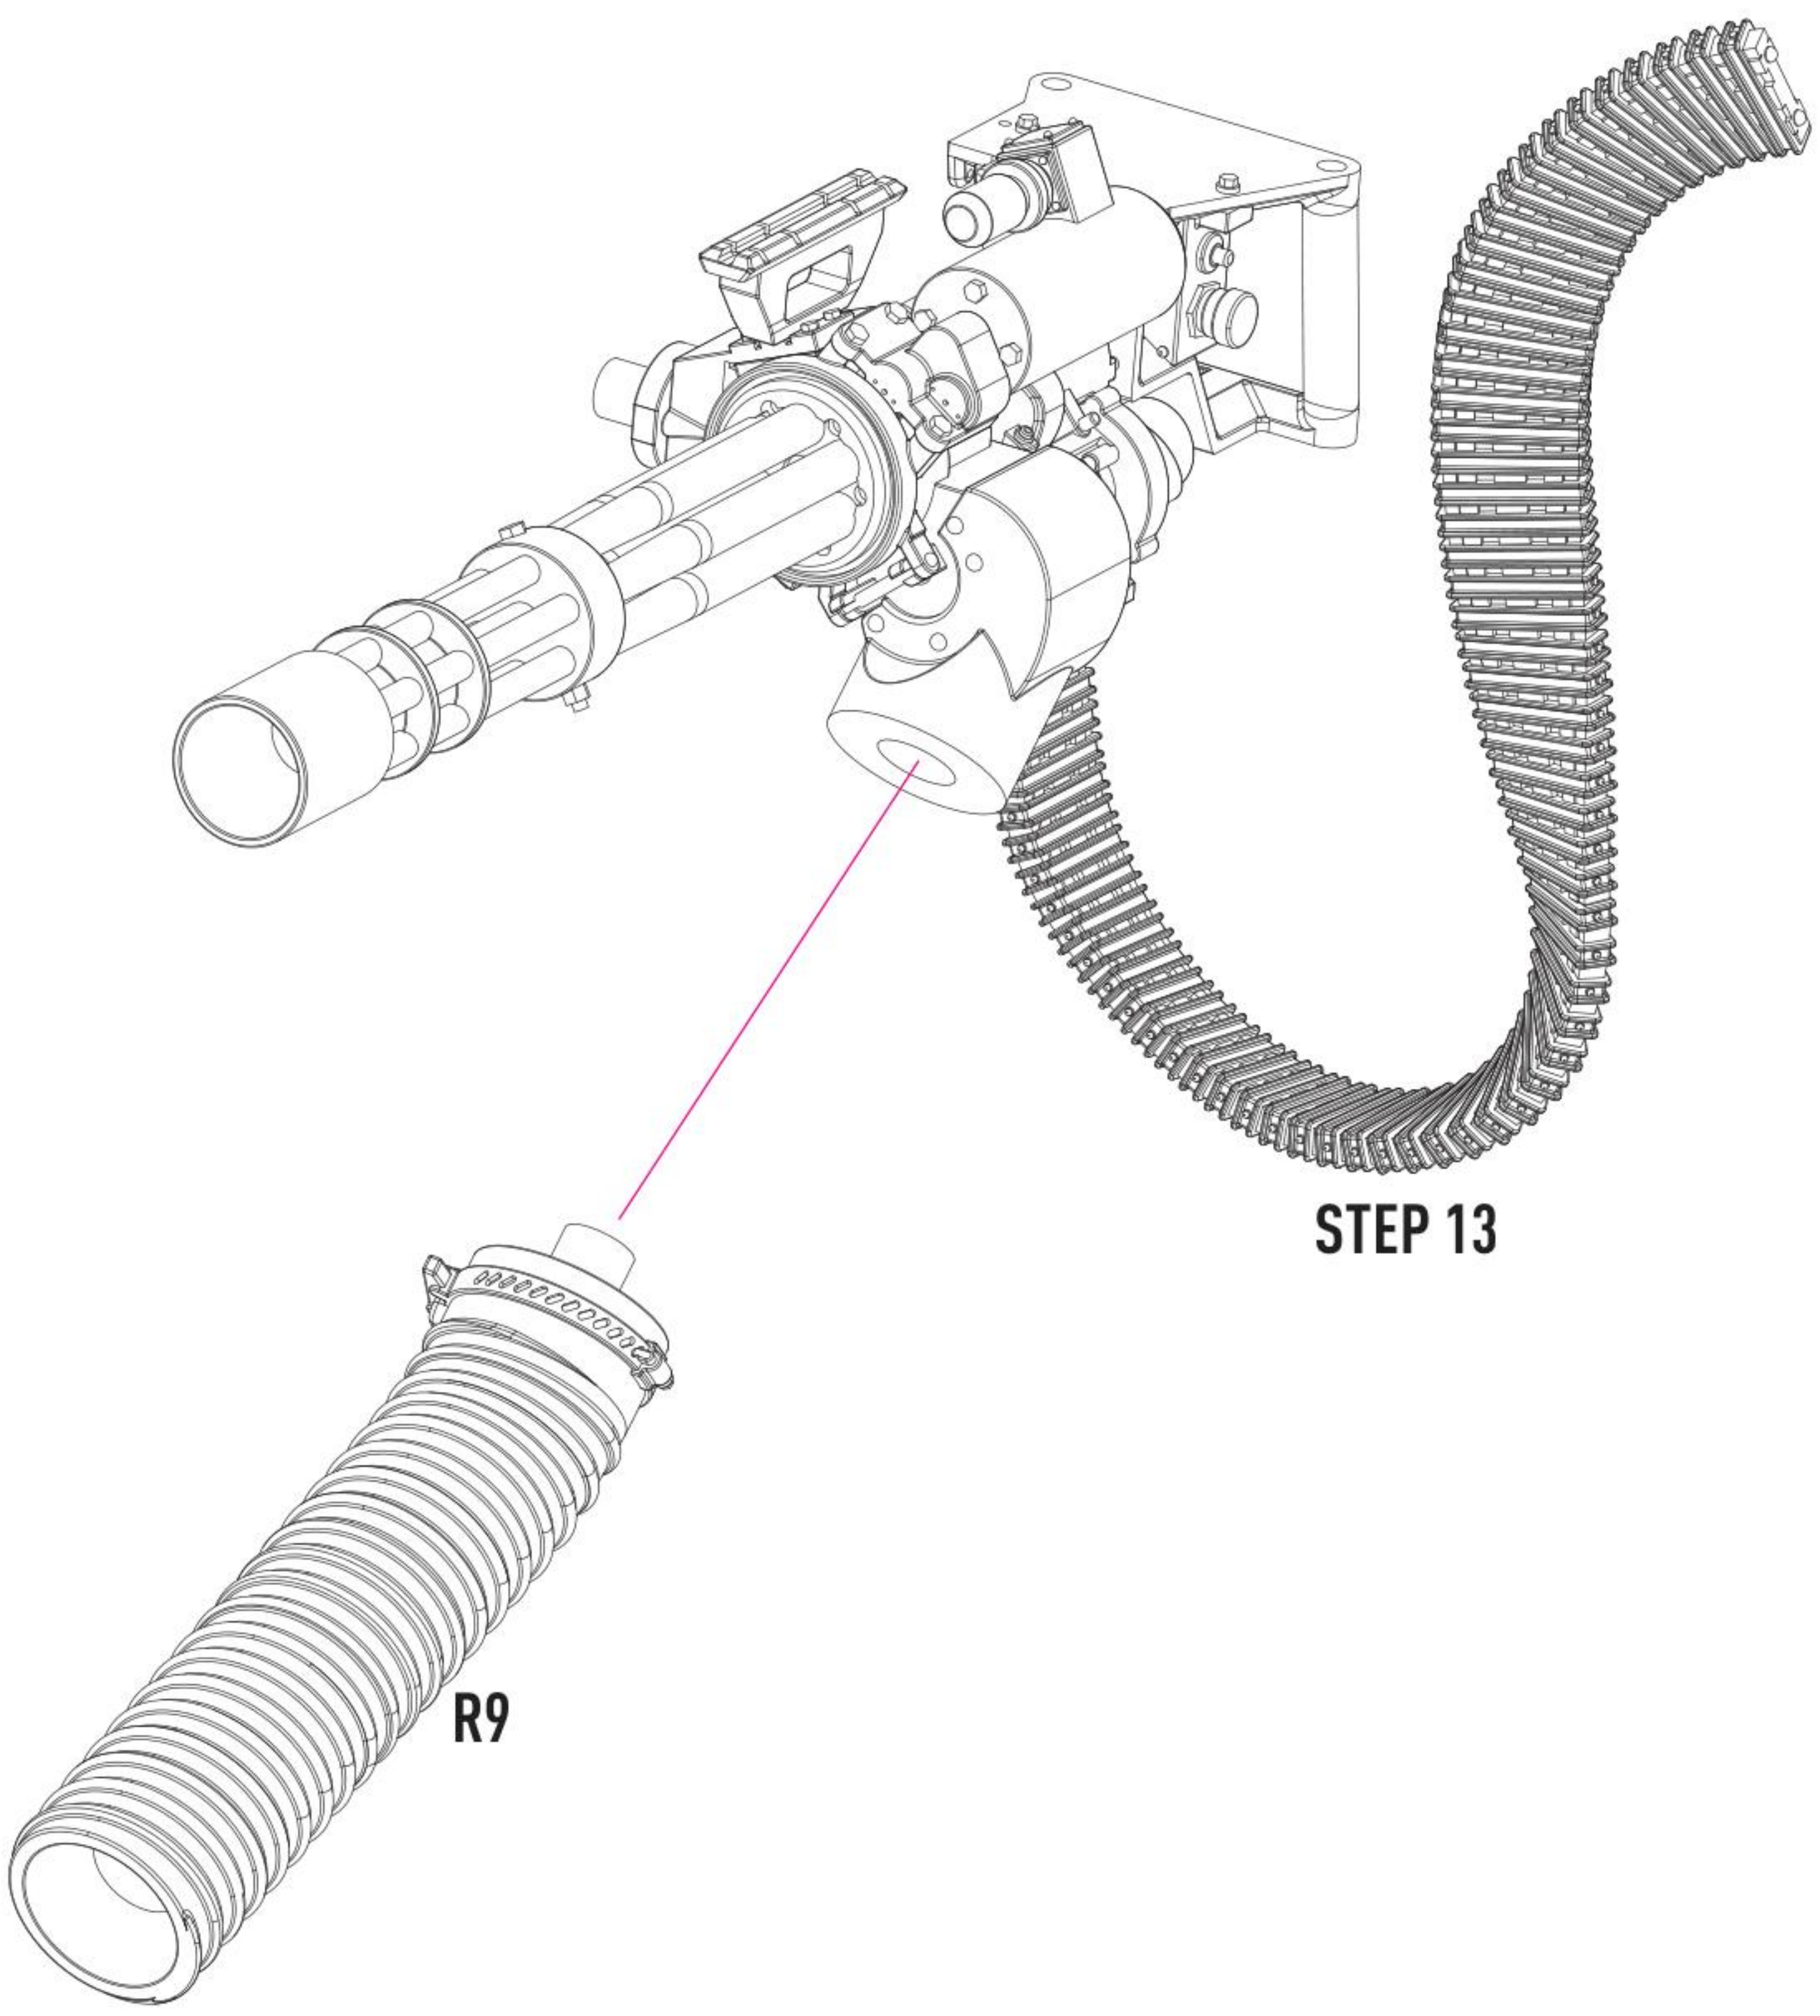

15

STEP 14  
FROM KIT


R11

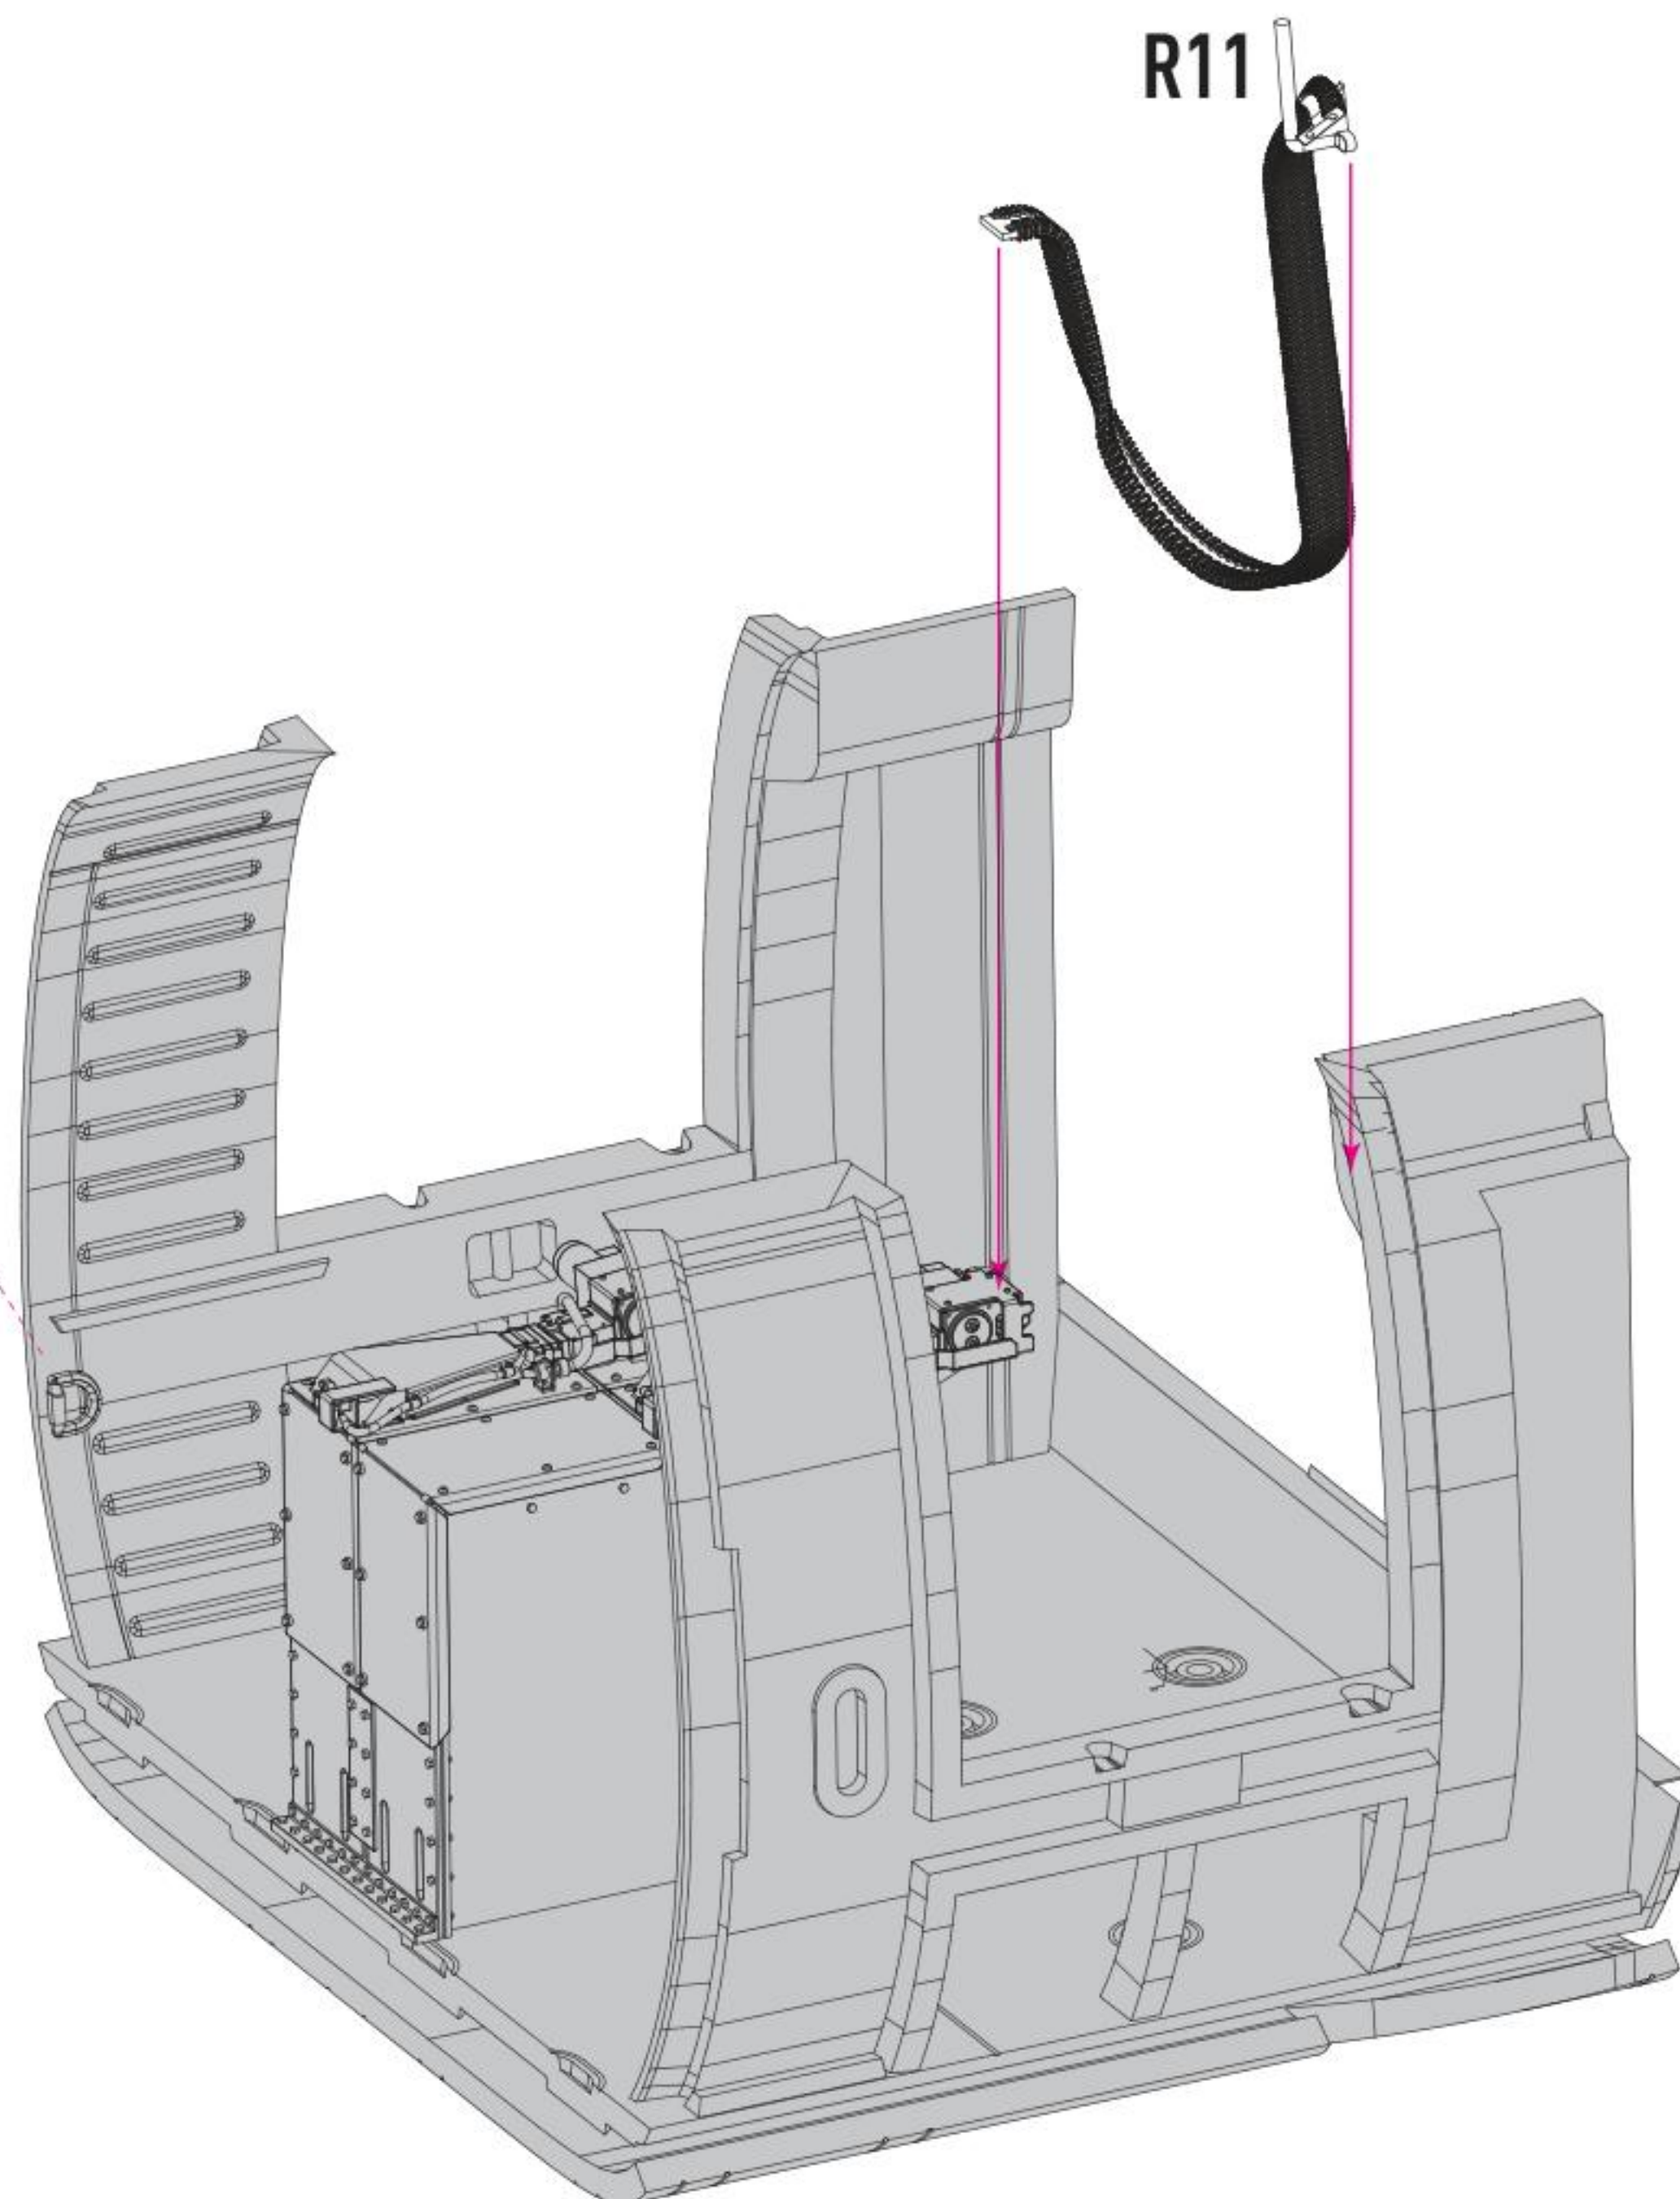


16


R10

STEP 15

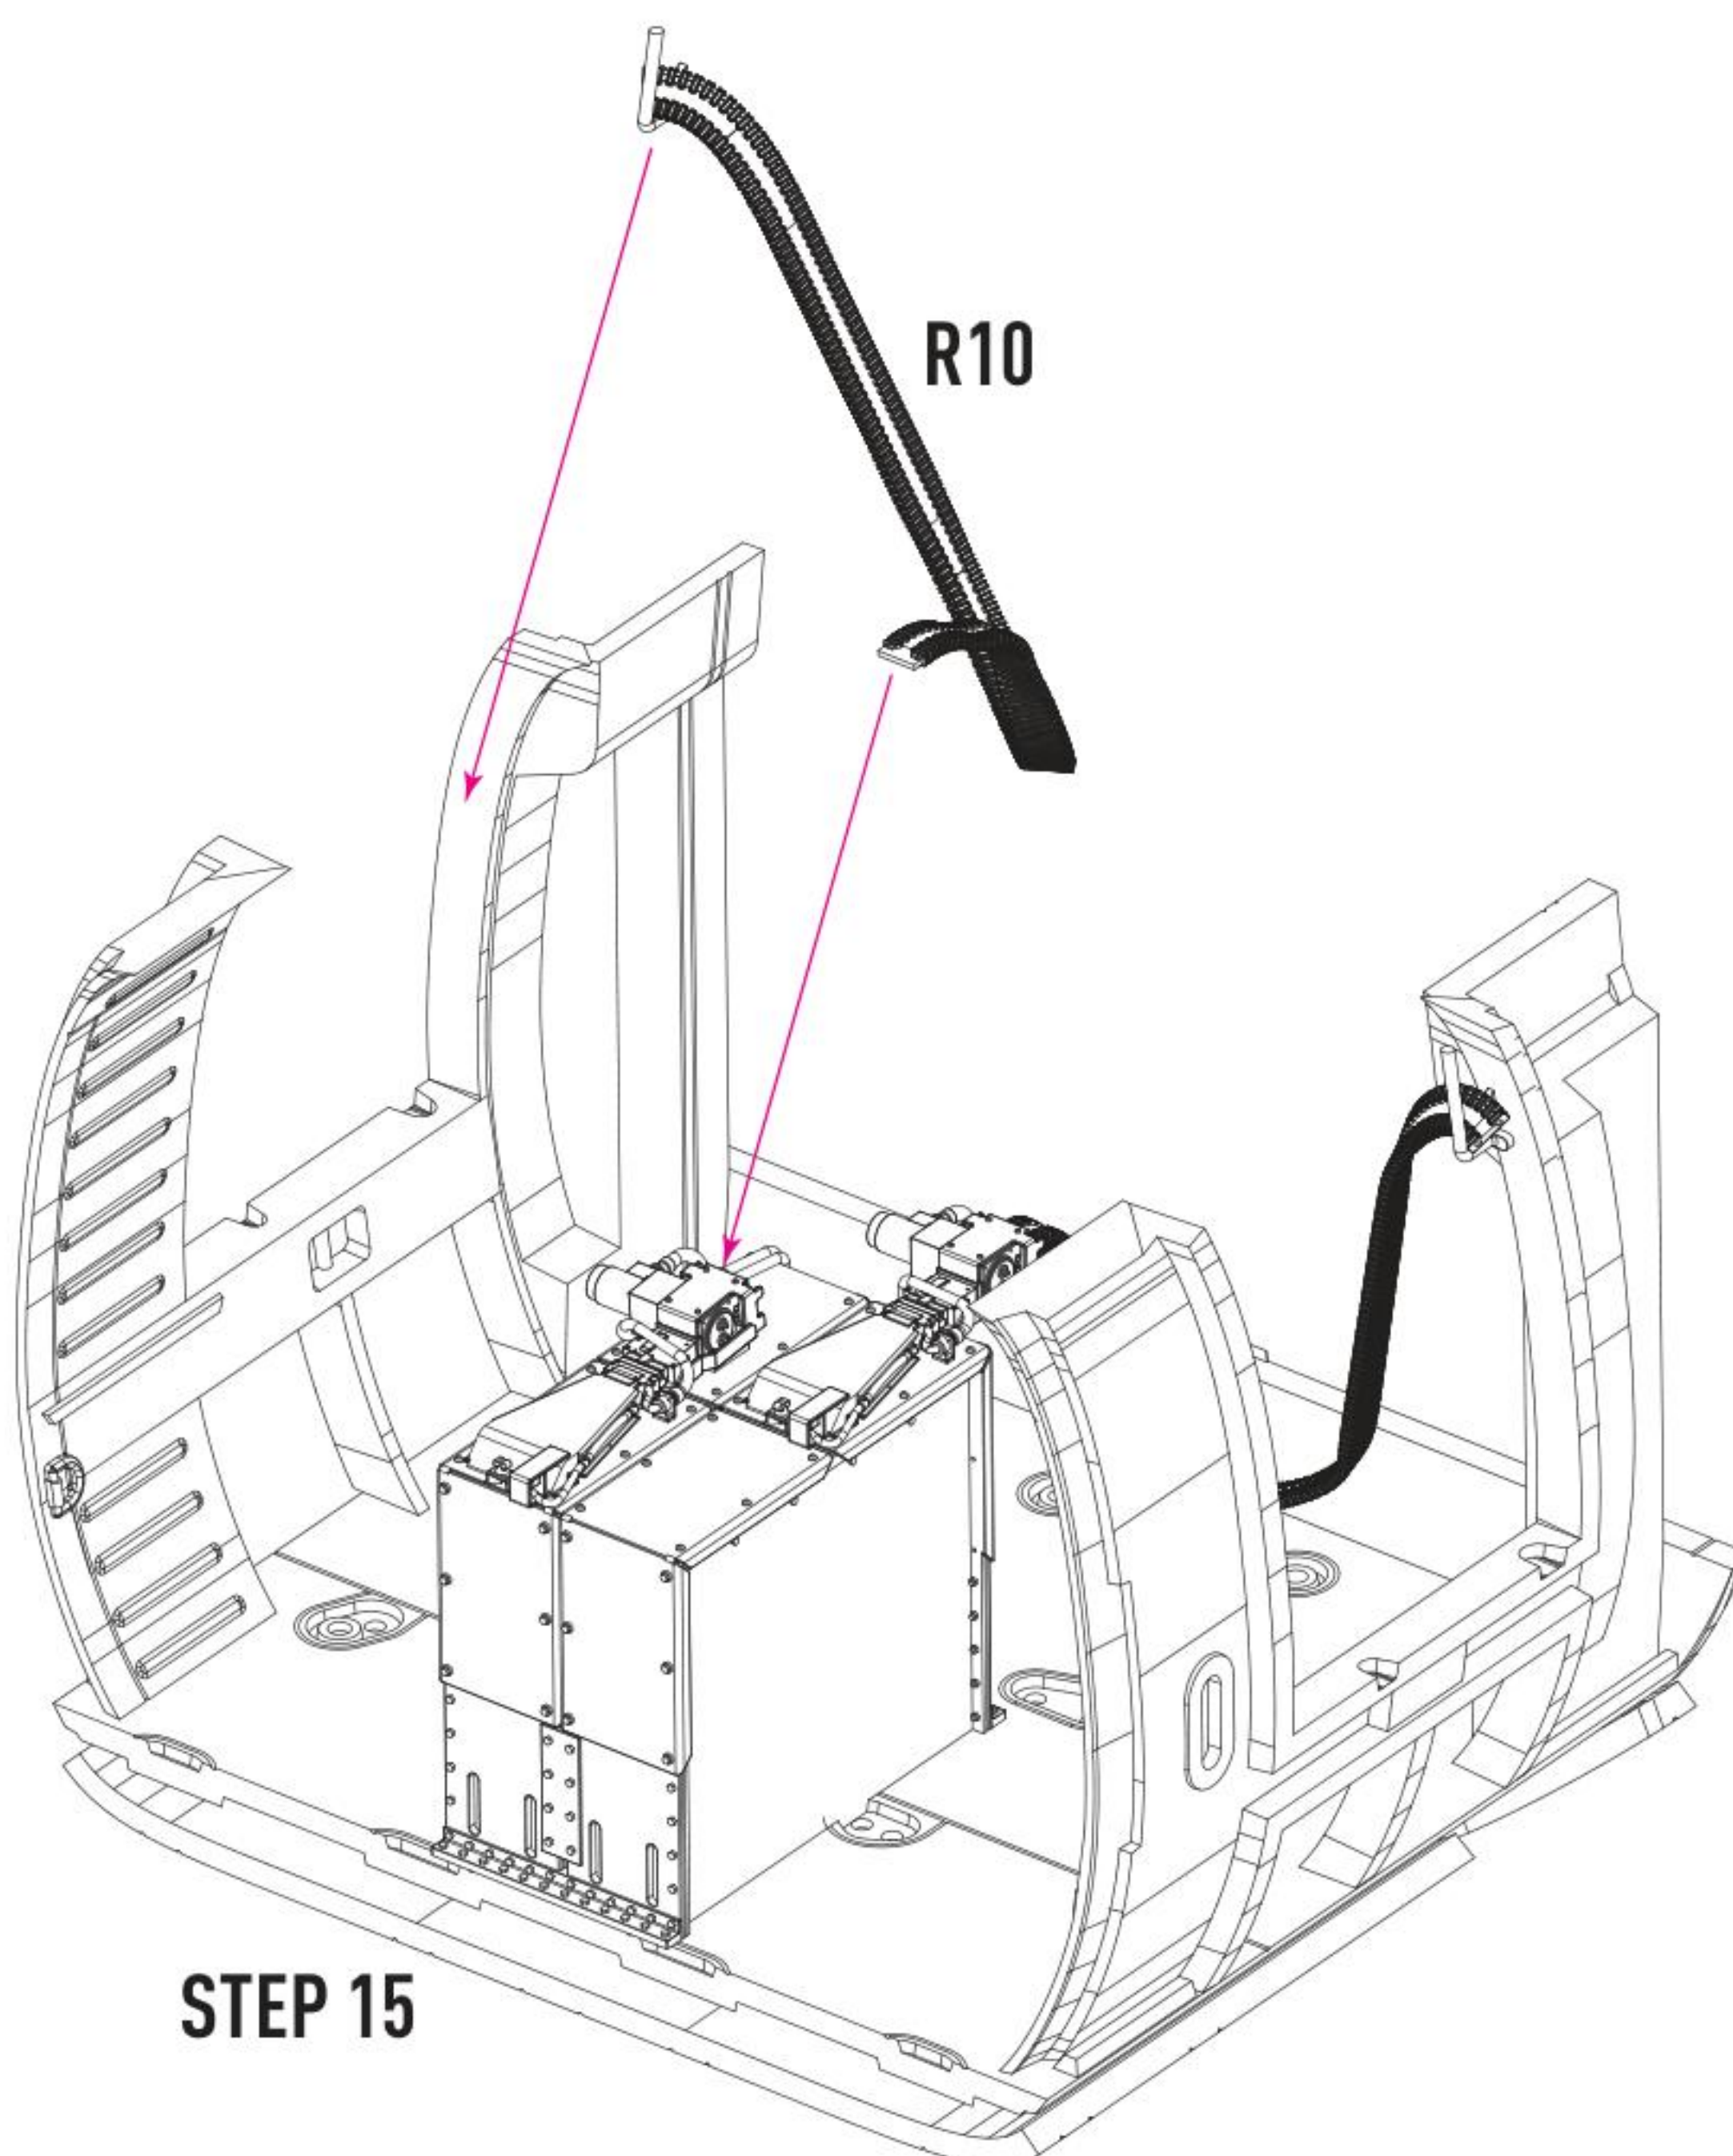


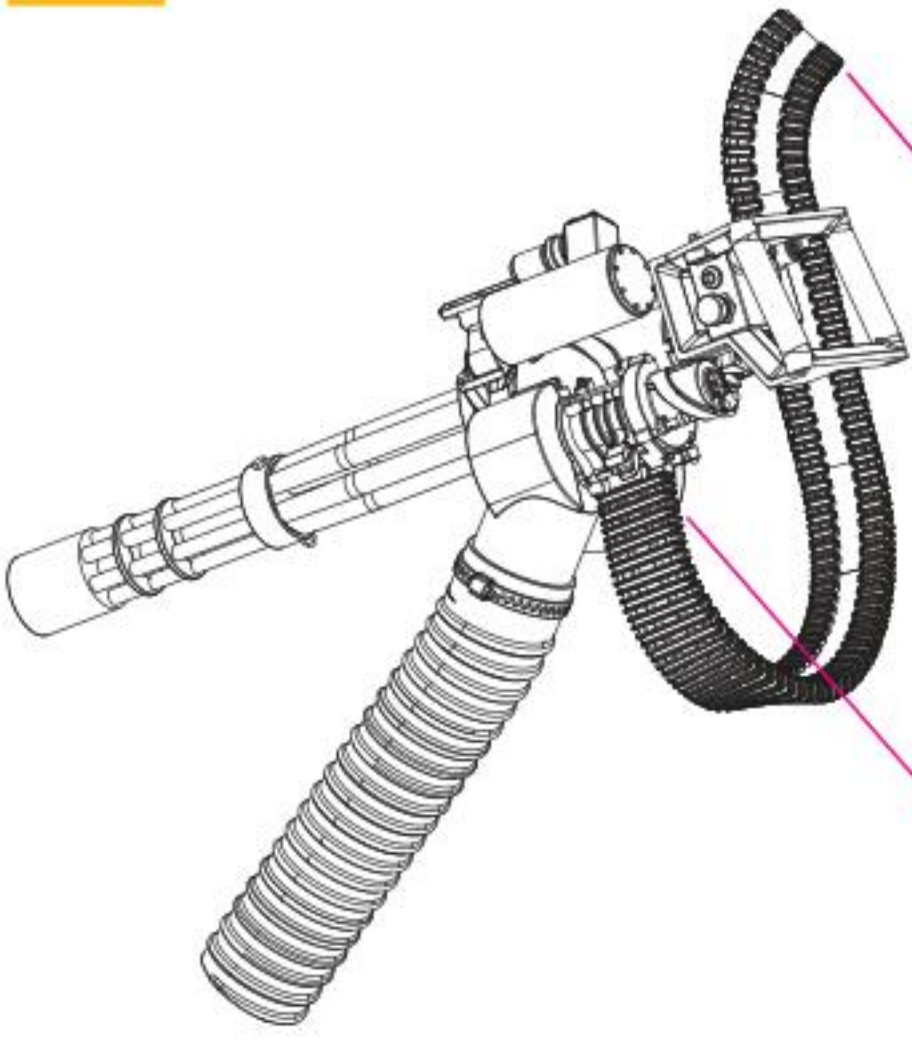


STEP 12

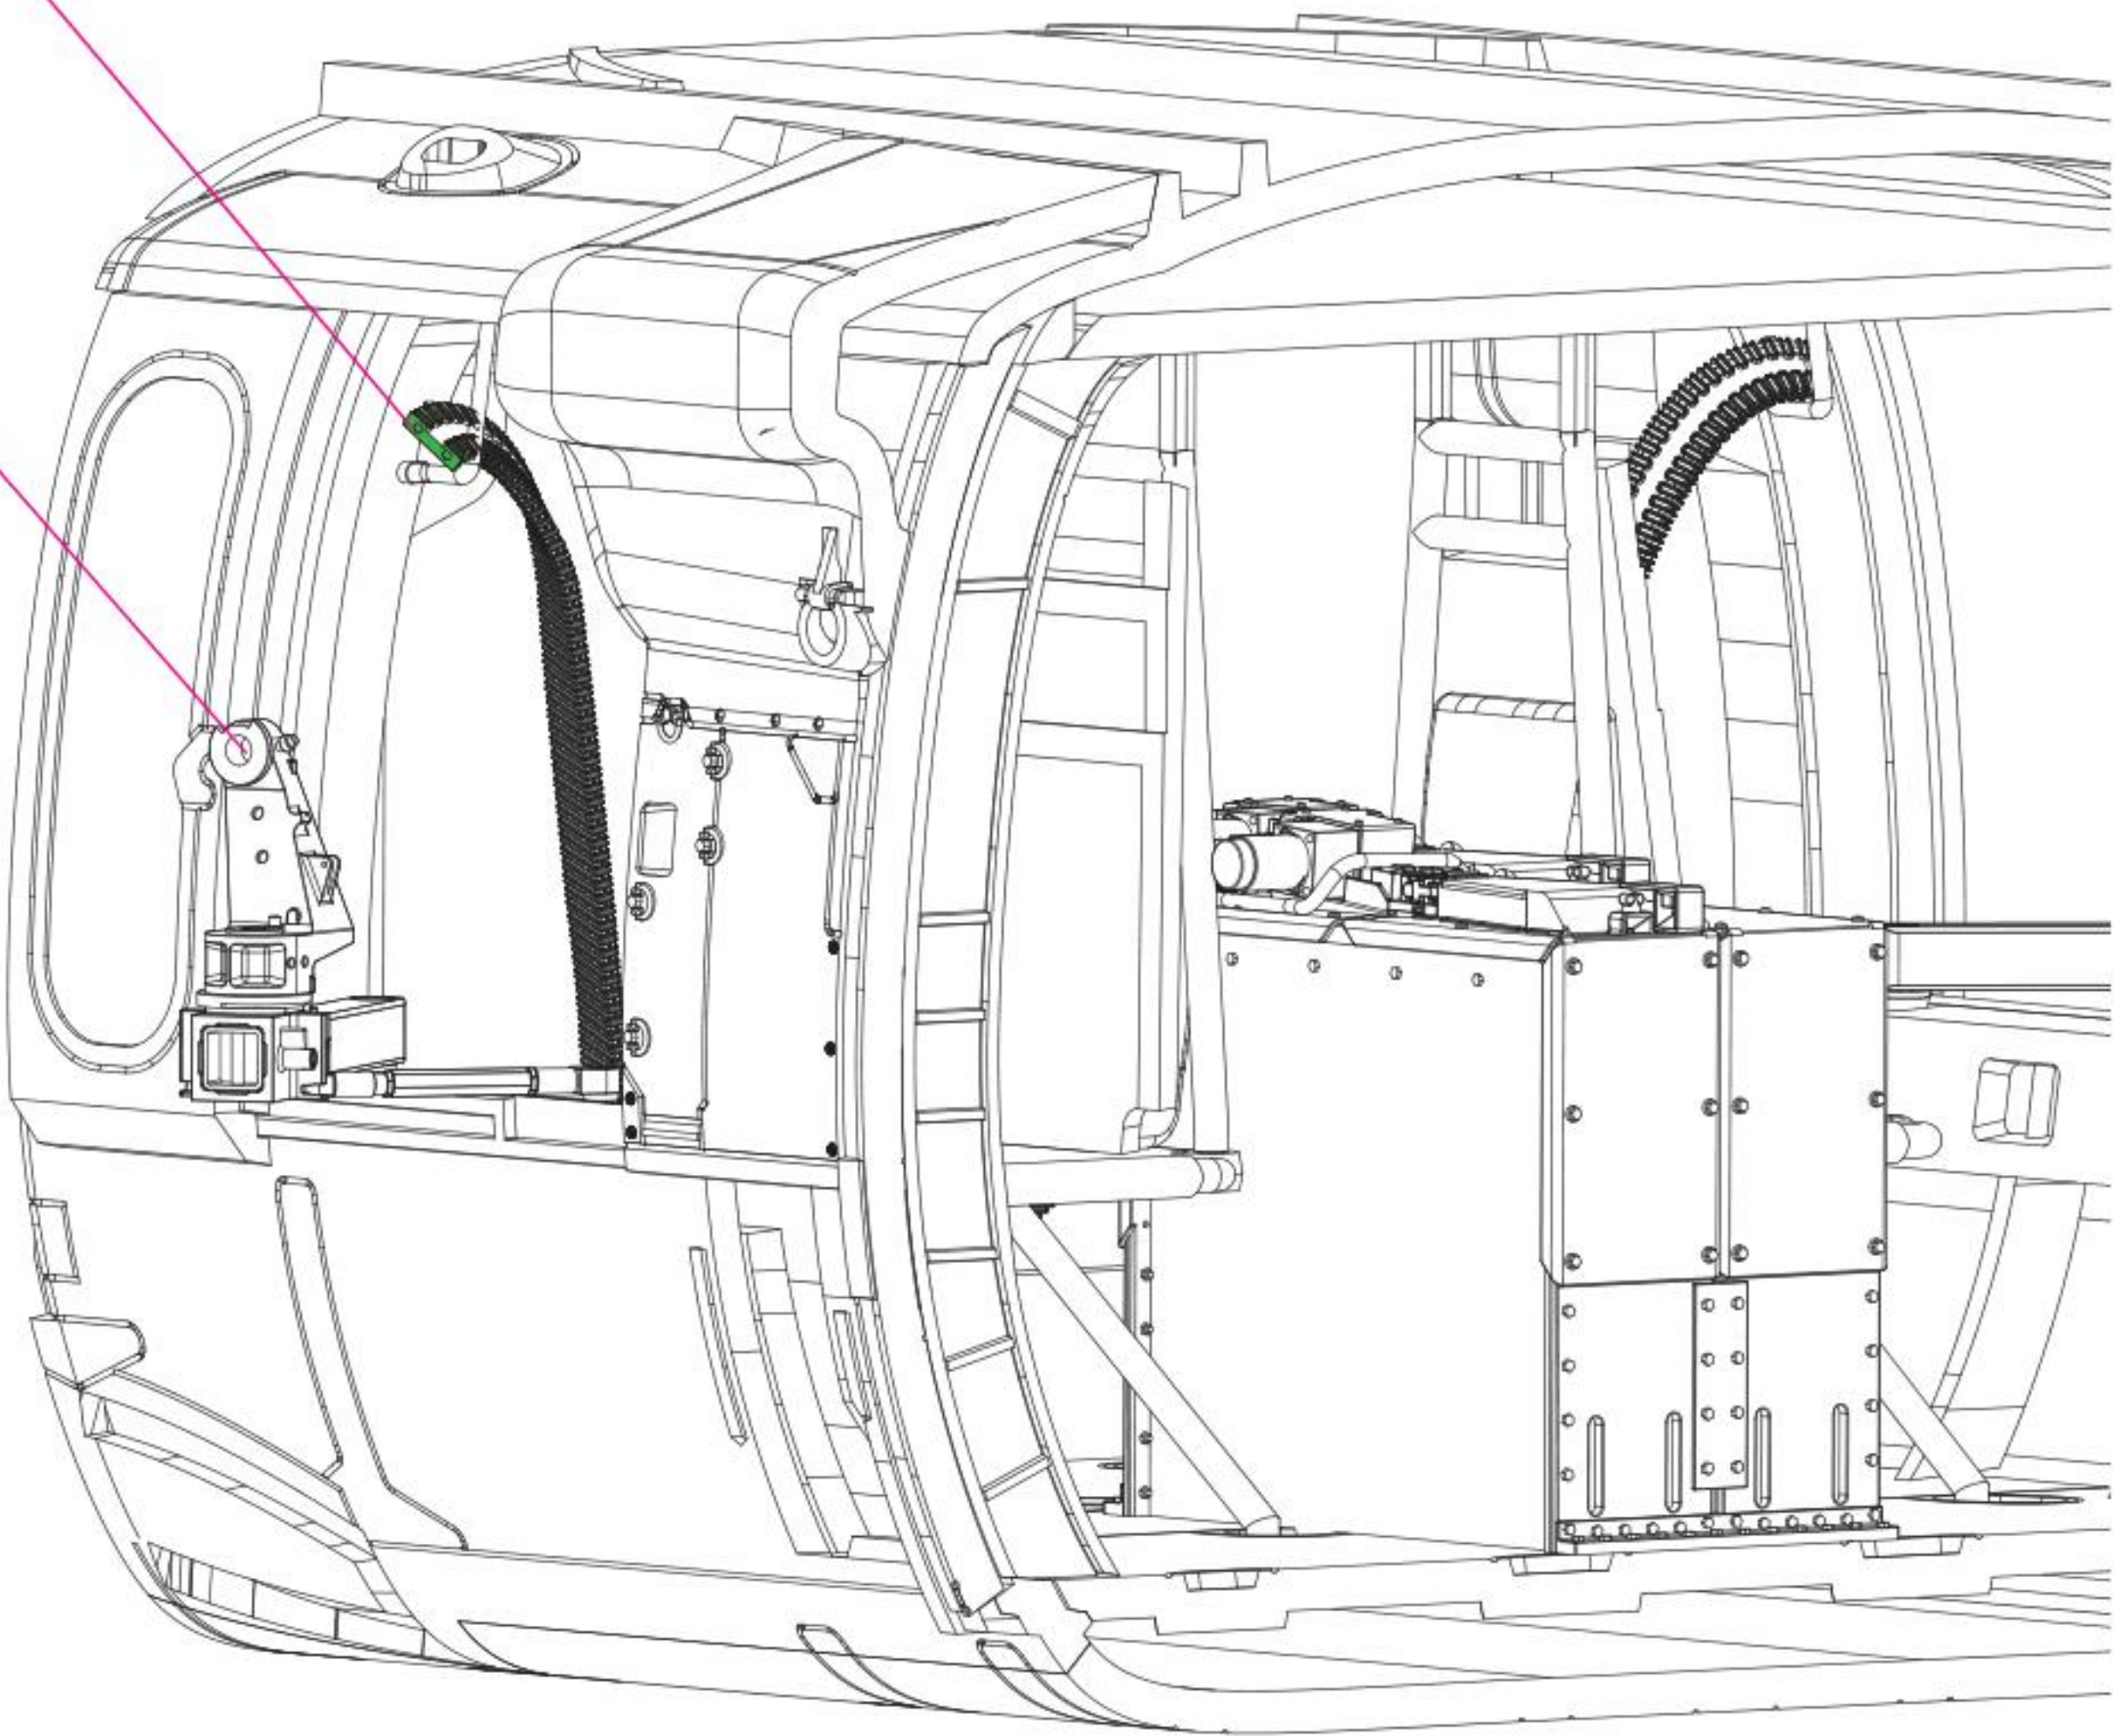


STEP 16

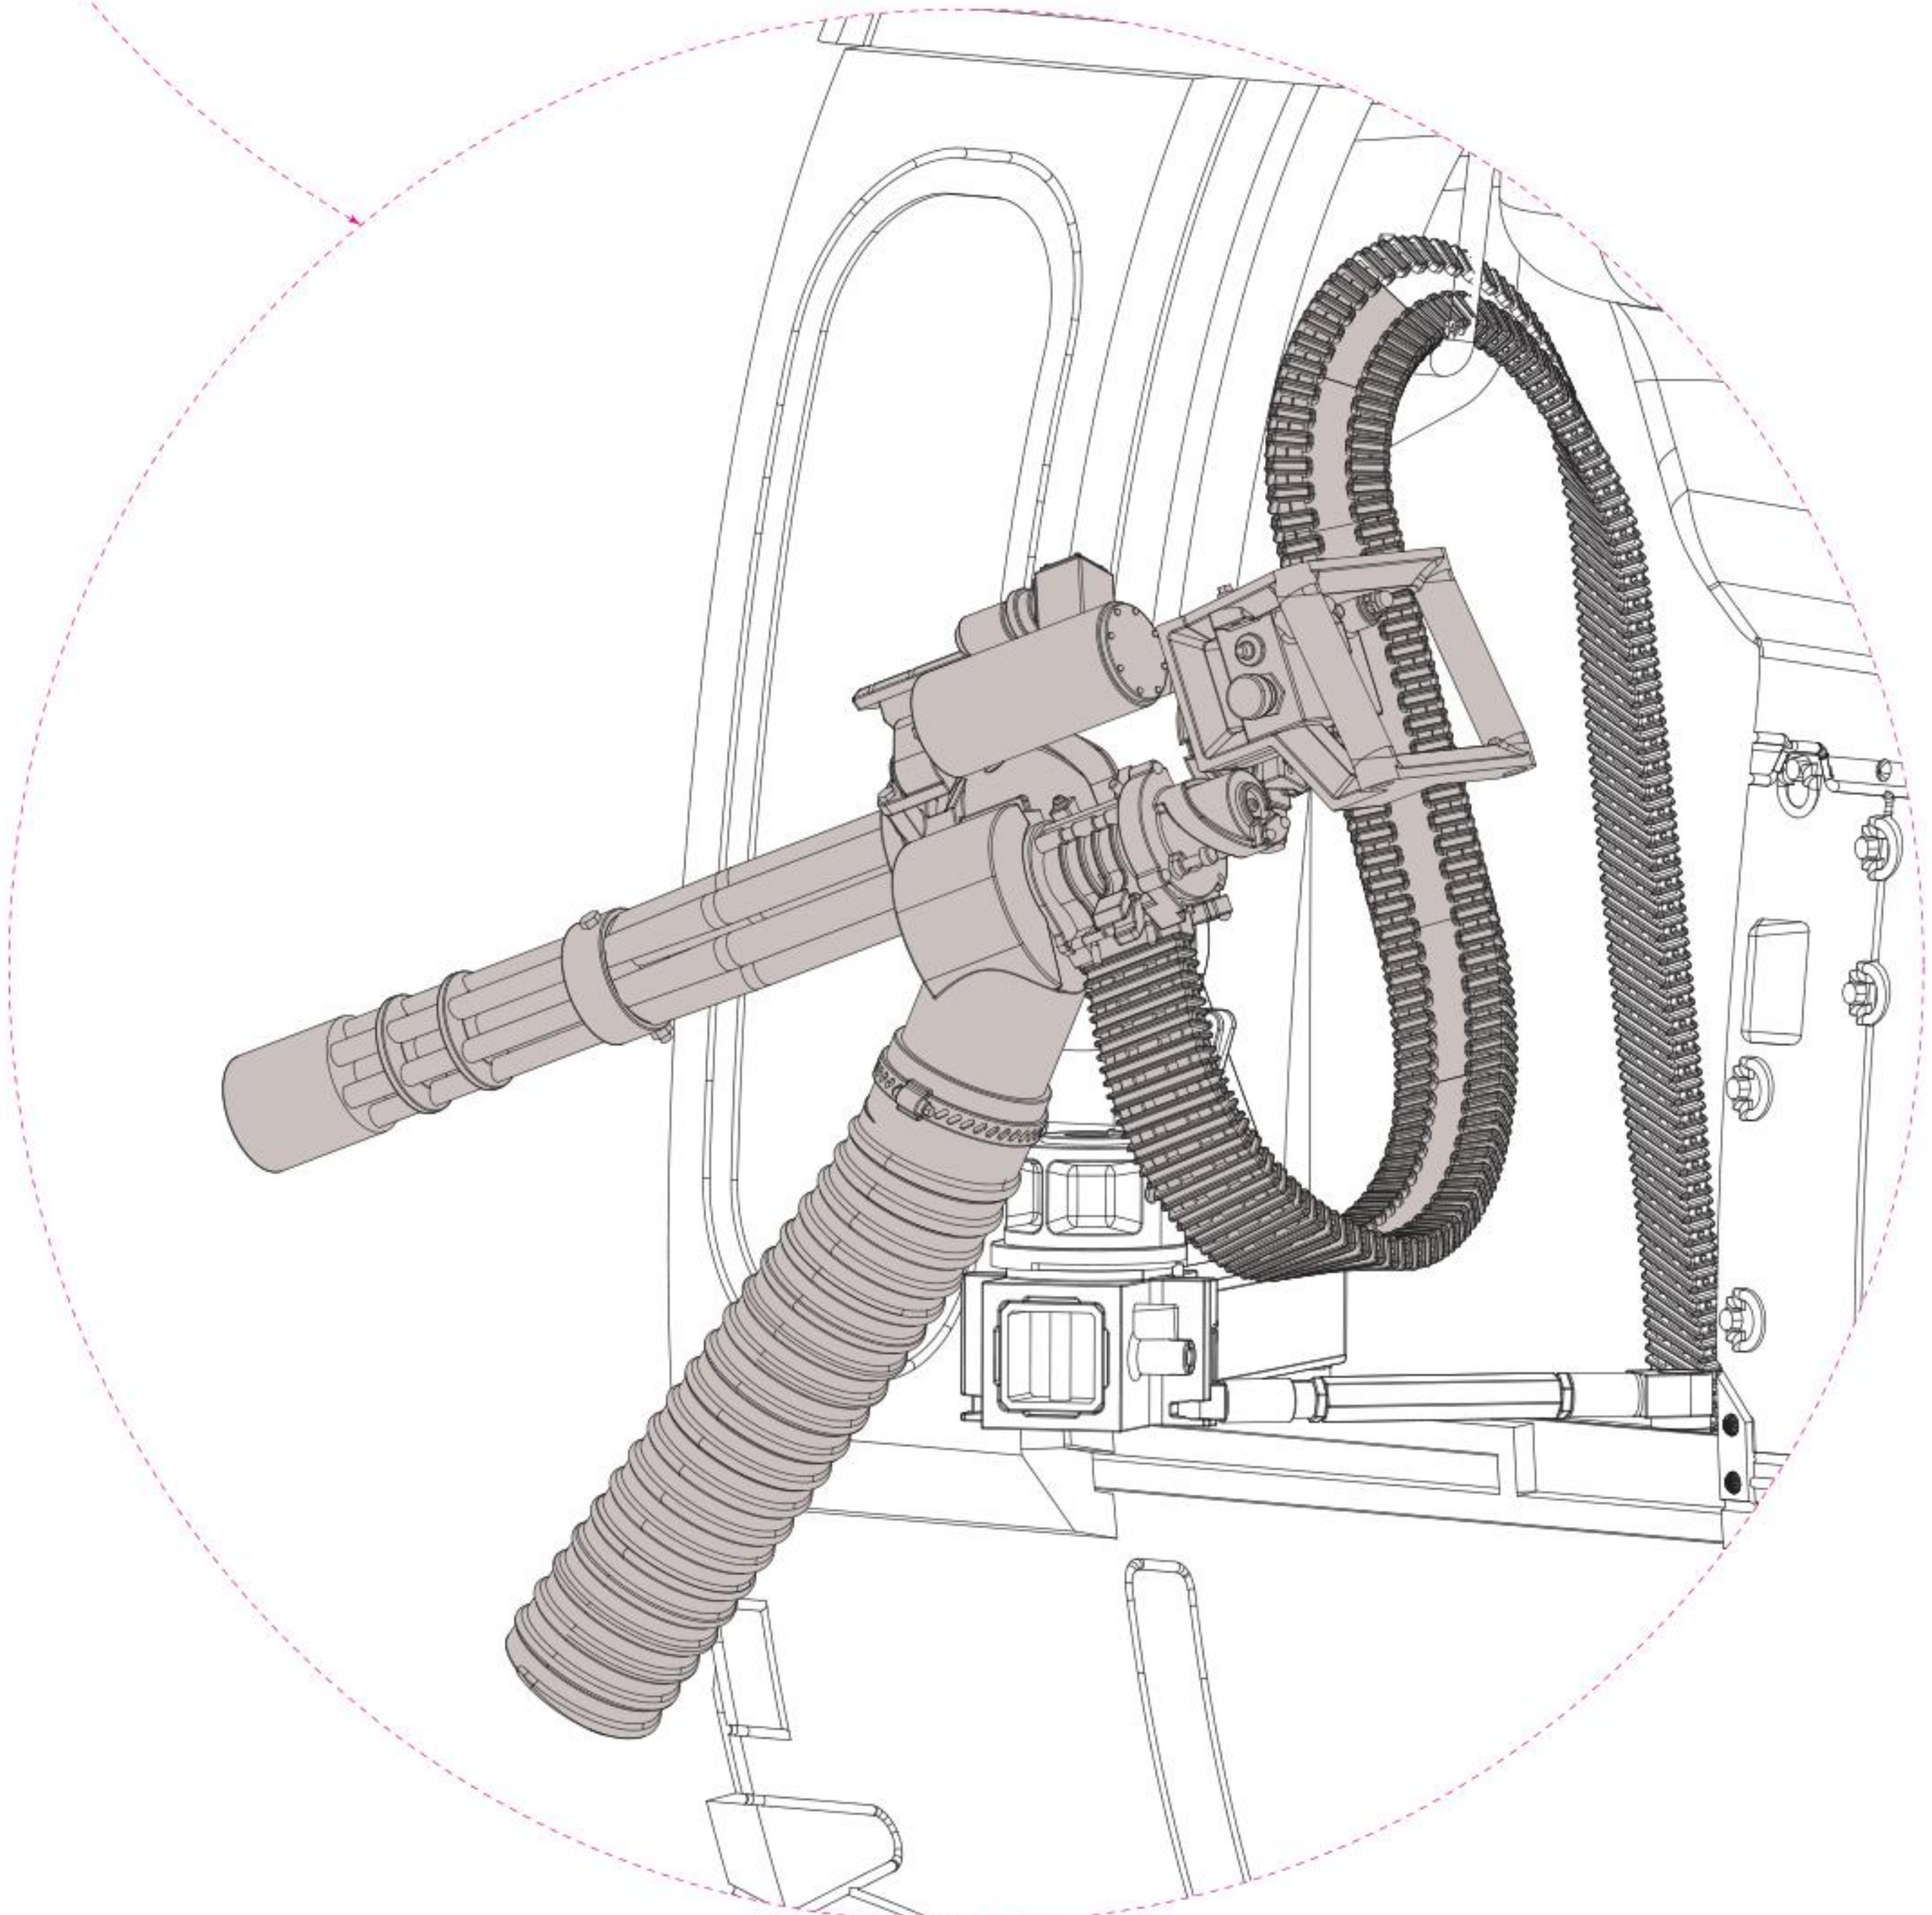

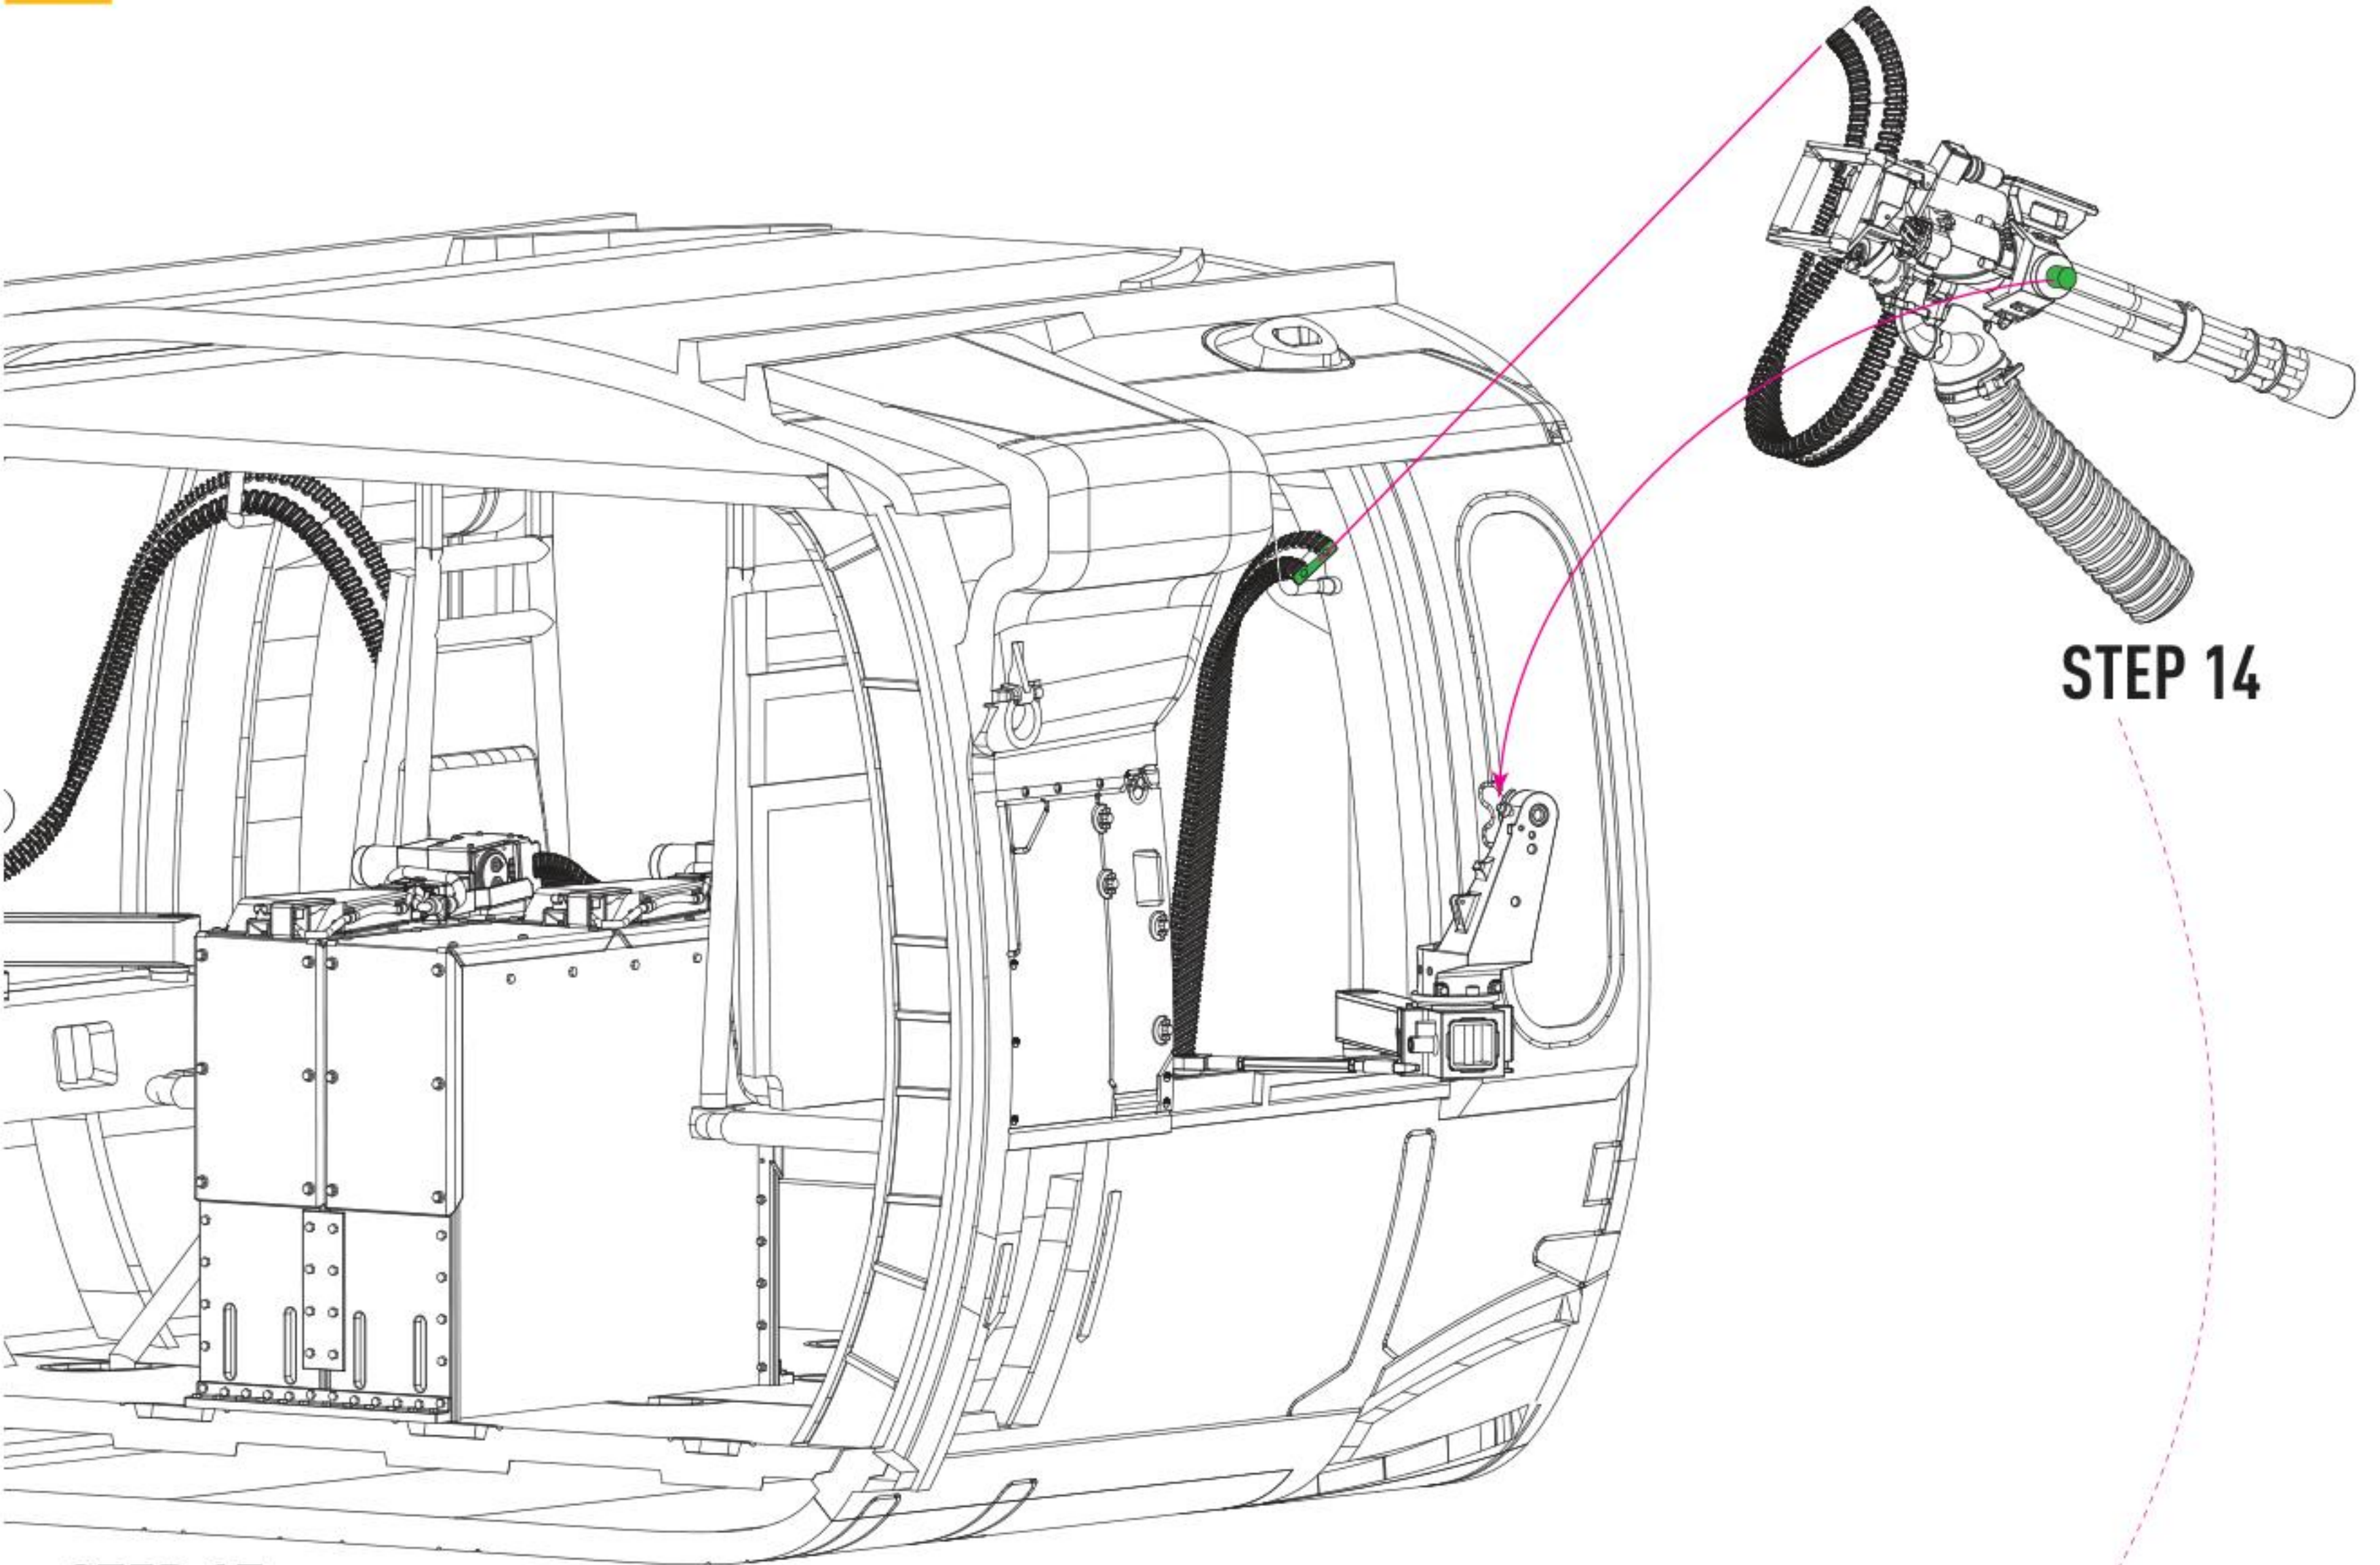


STEP 14


STEP 17

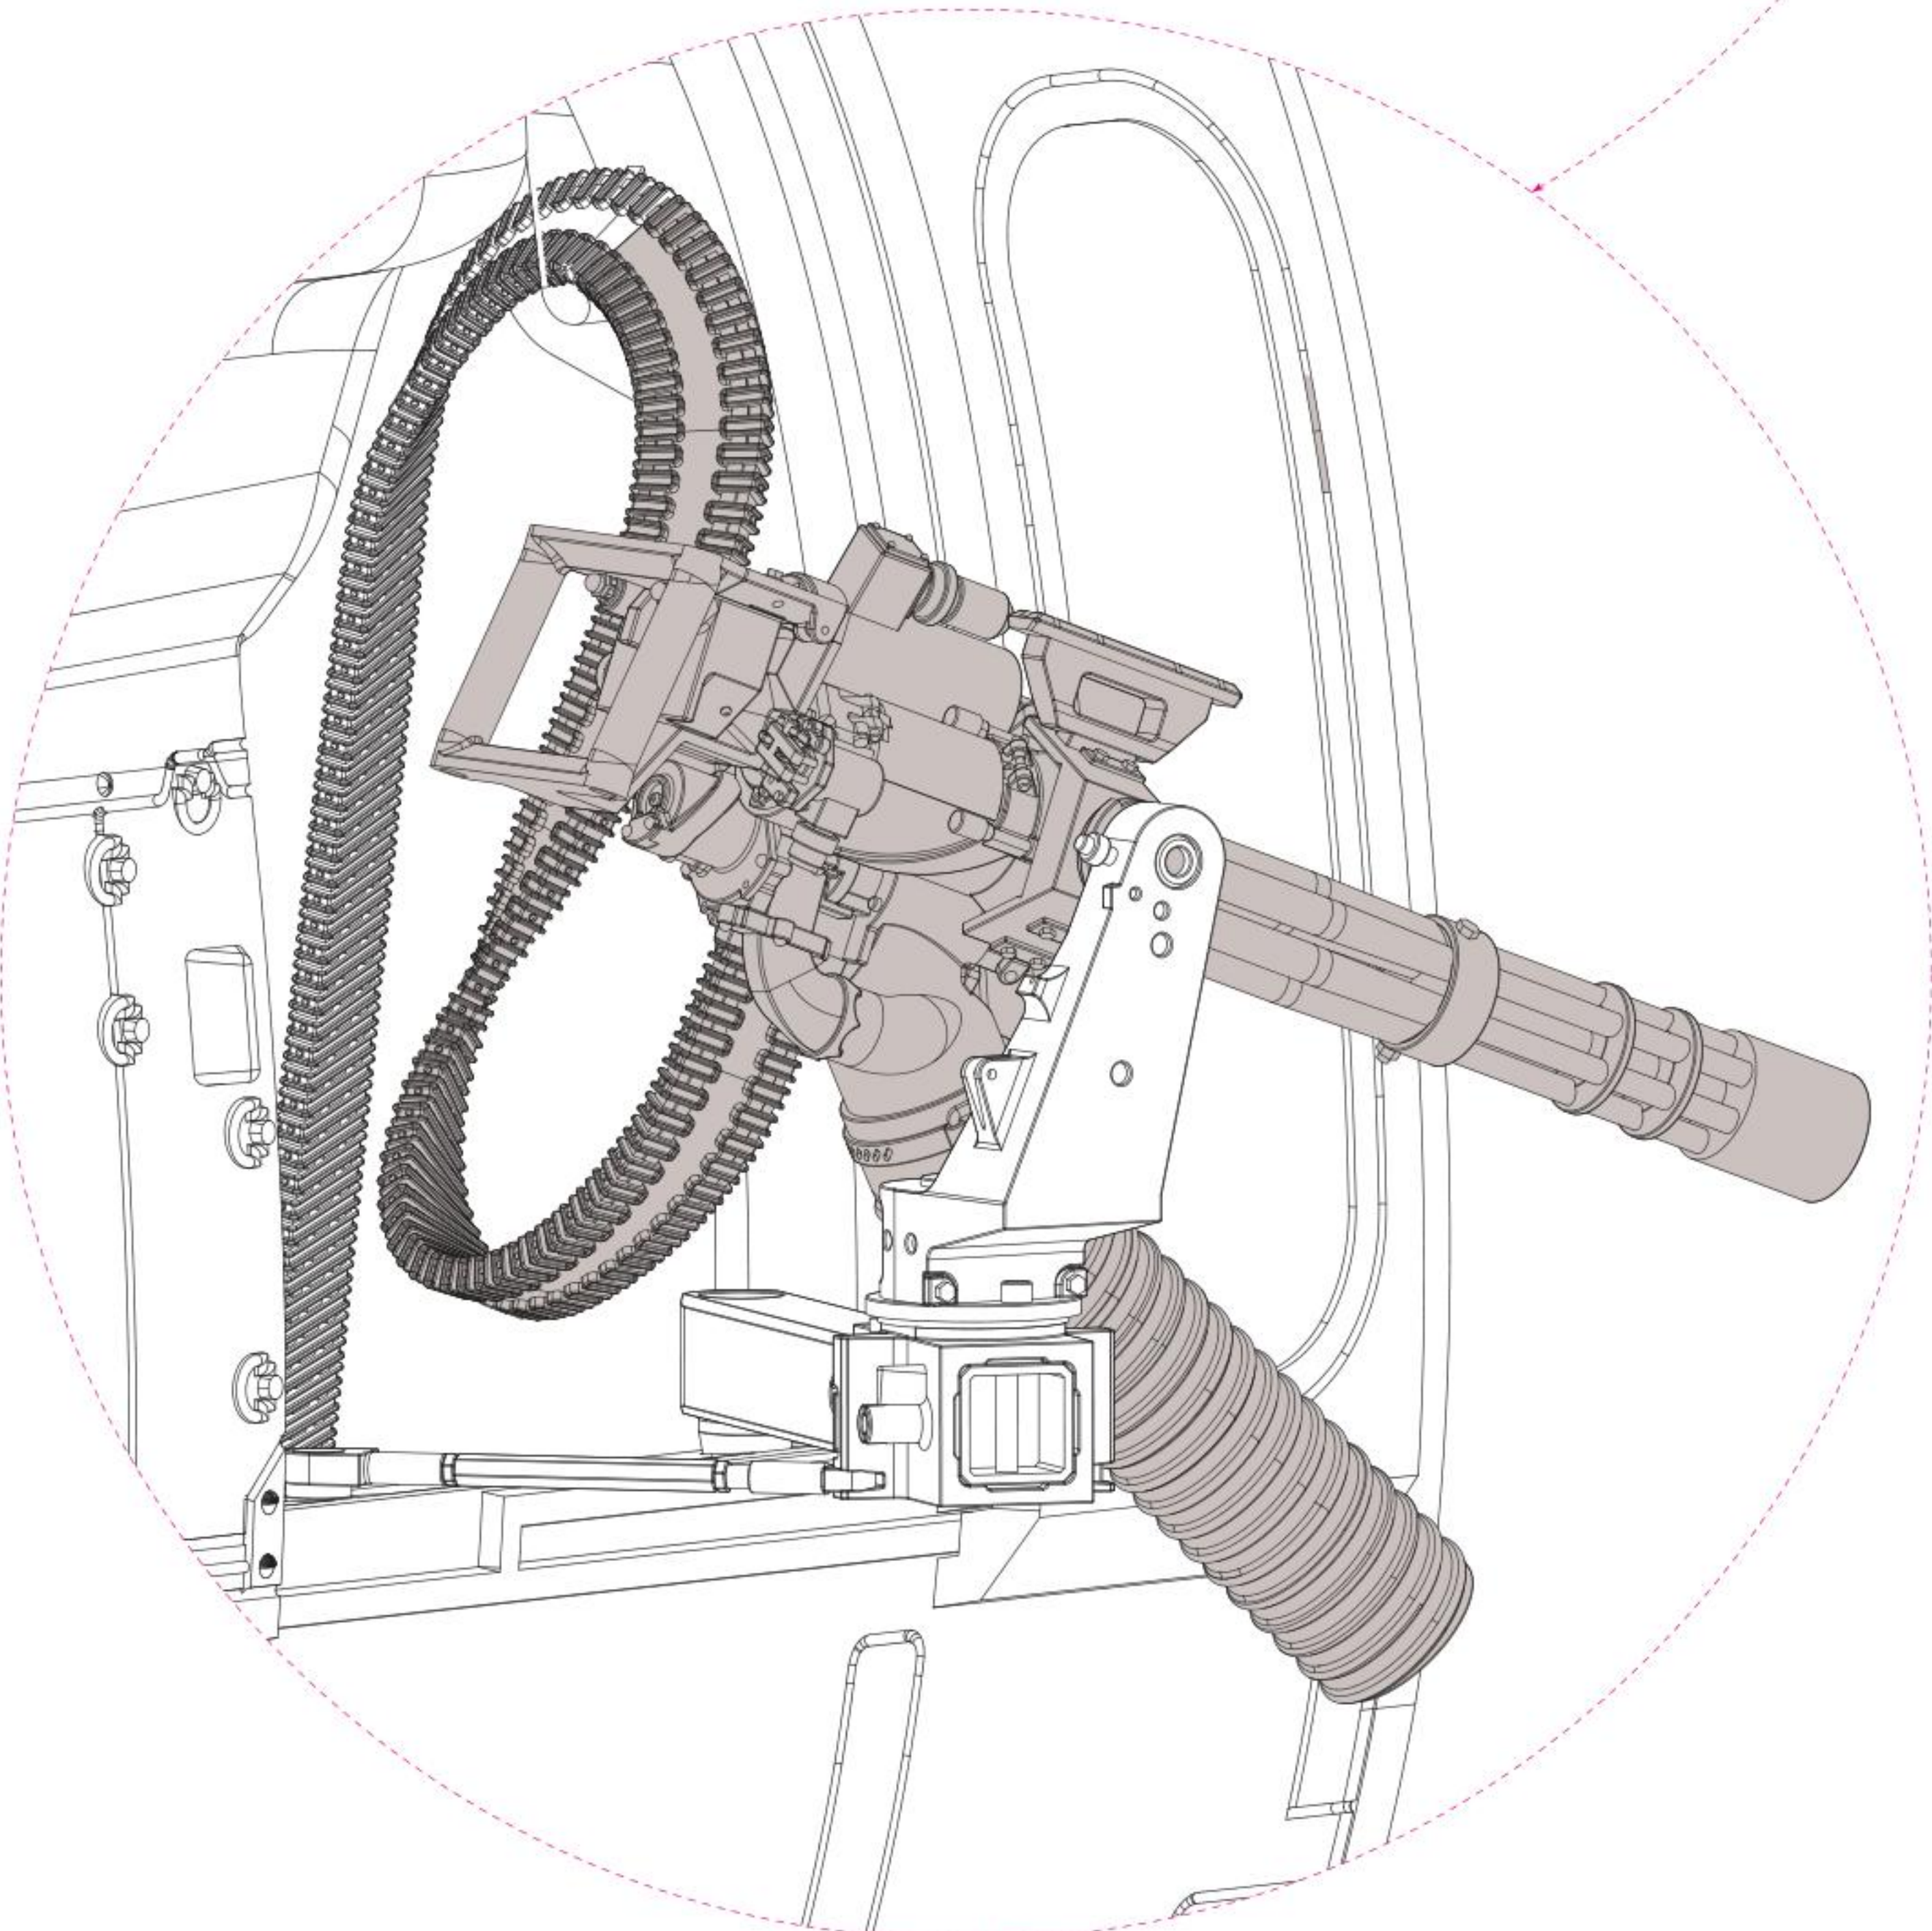


## DECAL INSTRUCTION

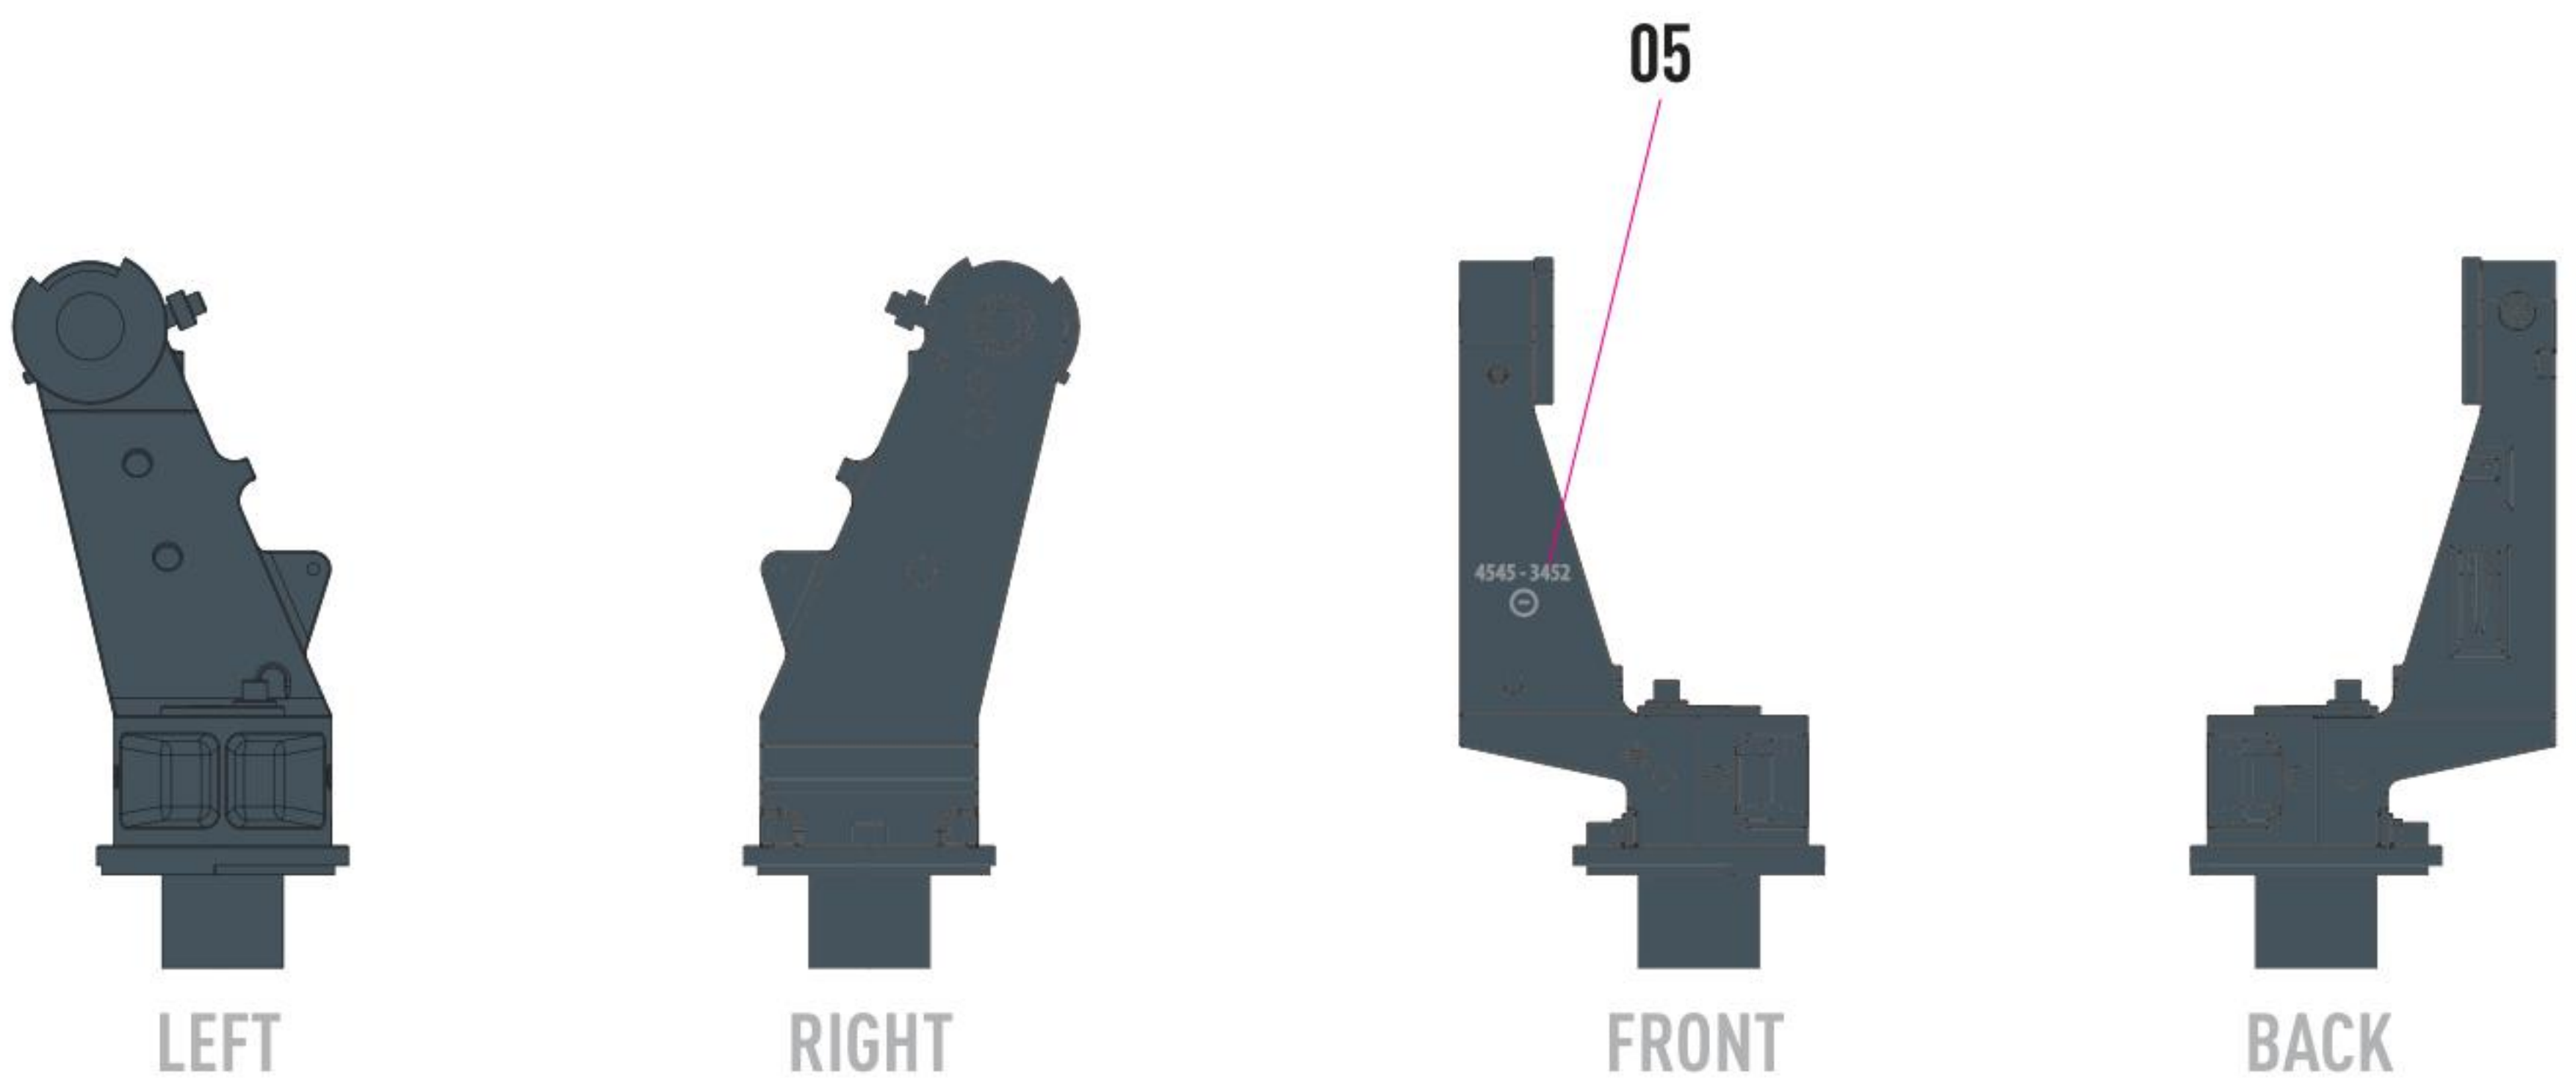

## MOUNTING BRACKET

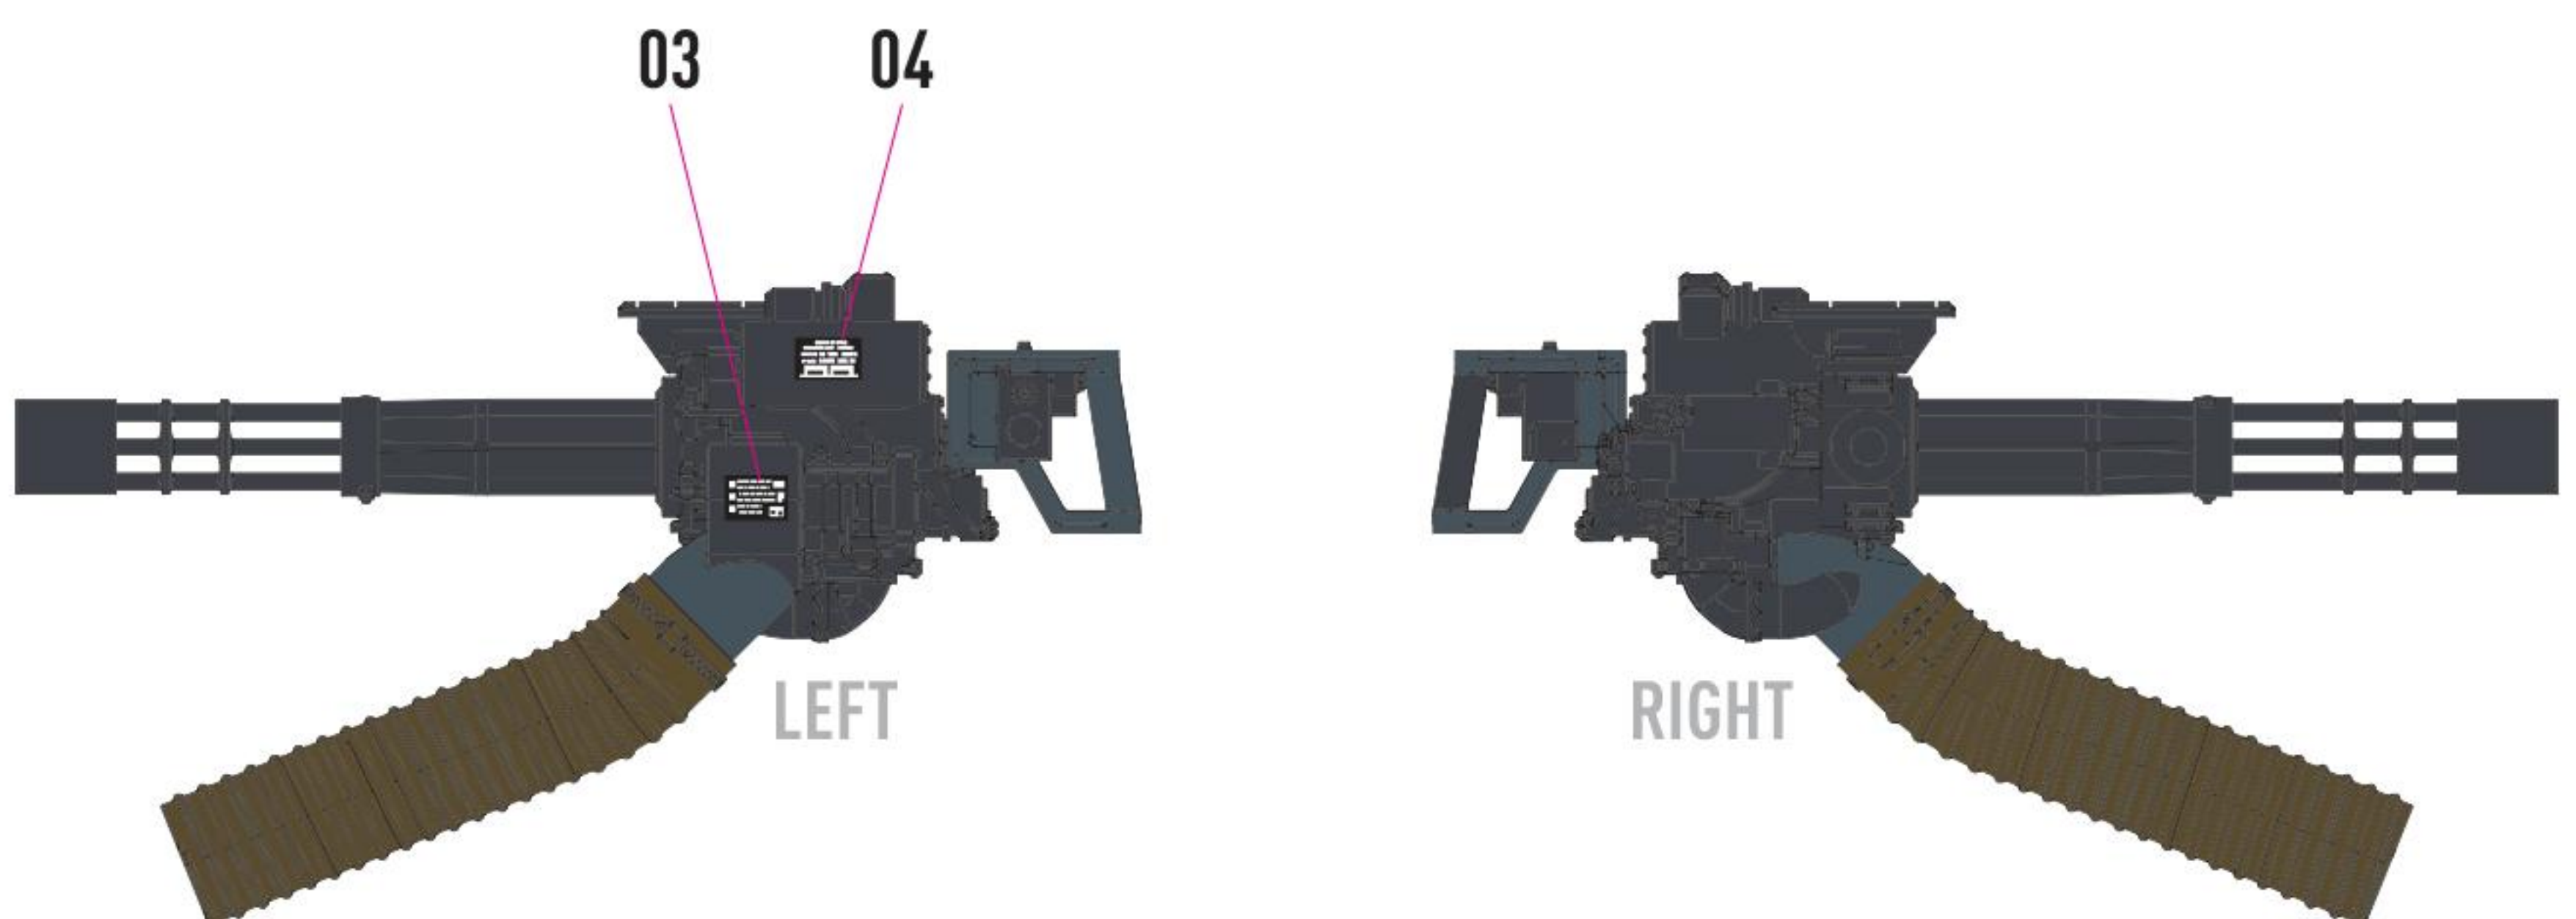

## MINIGAN M 134 7.62 X 51 MM NATO

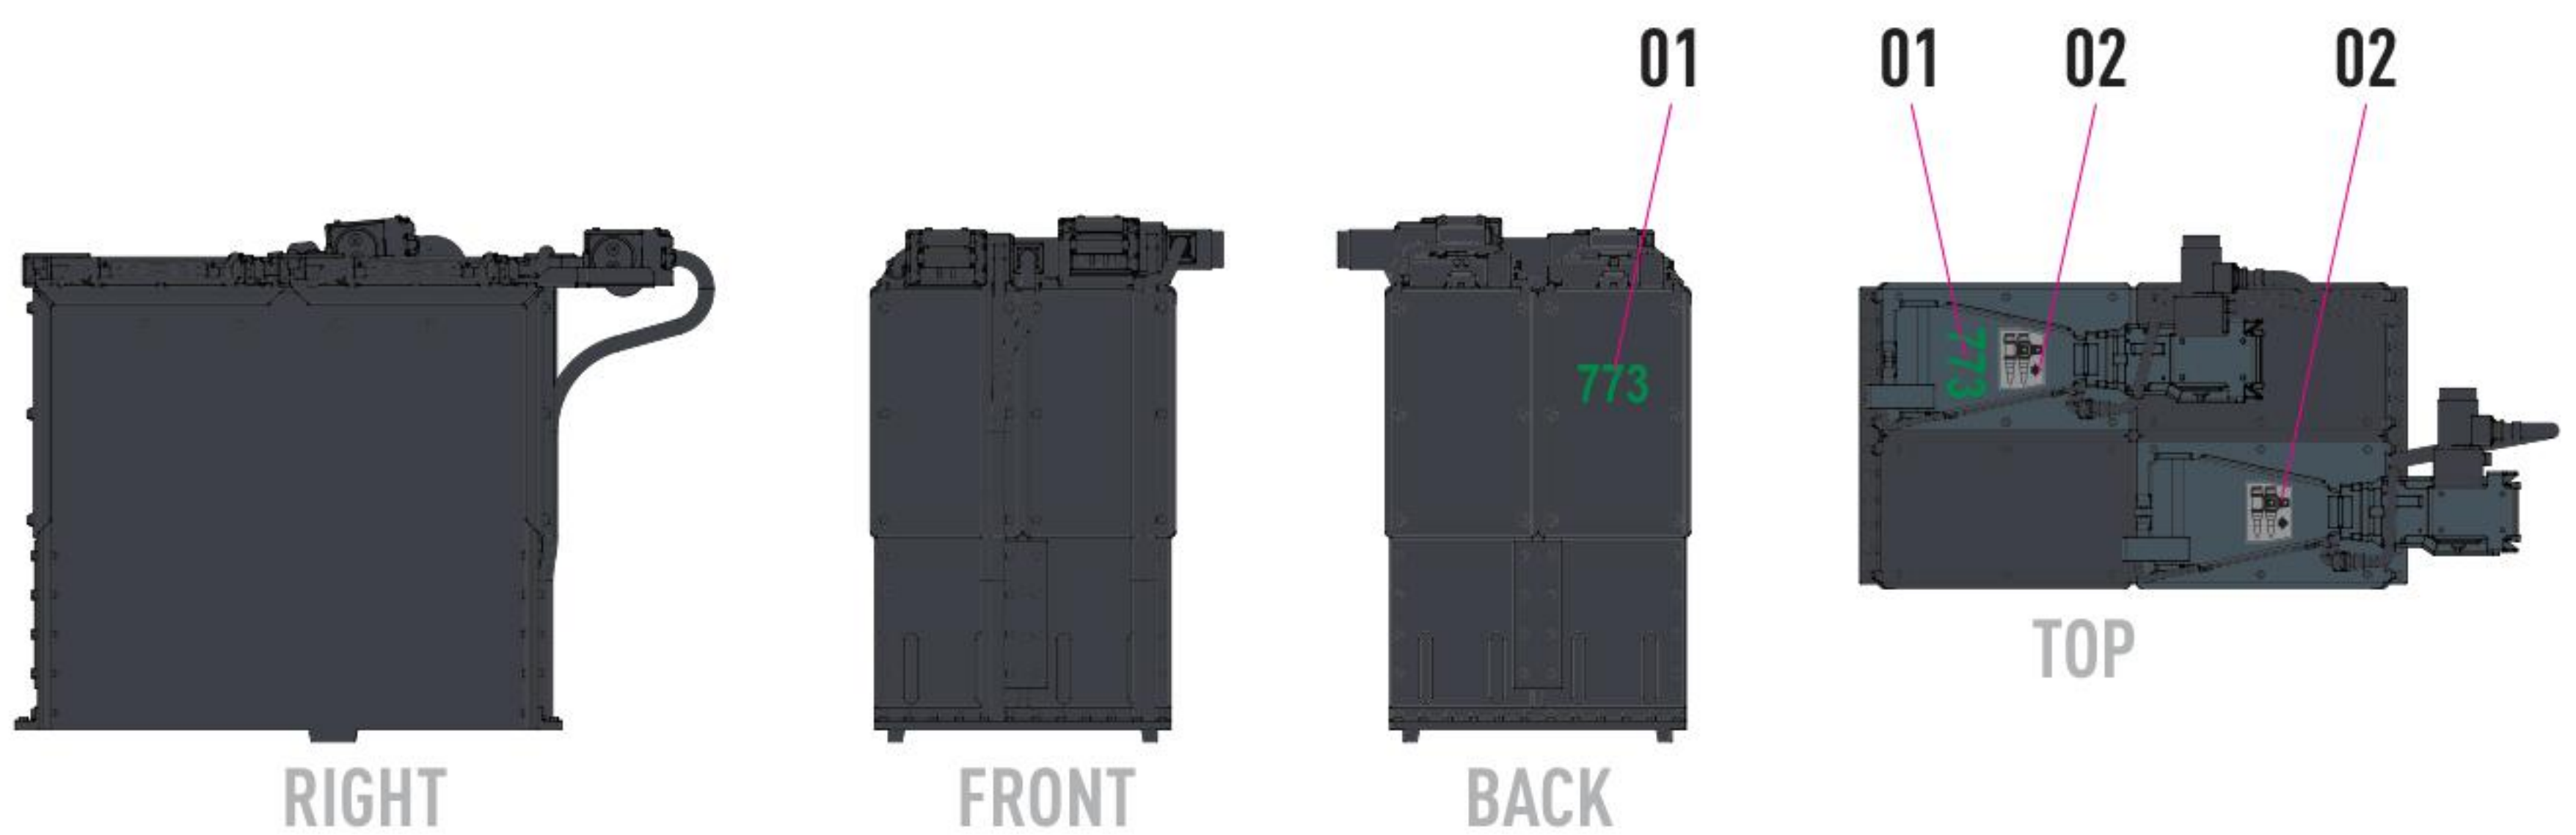

## 50 CAL AMMO BOX 7.62 X 51 MM NATO

general Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua) / claim resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)

**RESKIT-MODELS.COM**

[fb.com/reskit.official](https://fb.com/reskit.official)

[instagram.com/reskit\\_official](https://instagram.com/reskit_official)

[youtube.com/@reskit-usmd](https://youtube.com/@reskit-usmd)