




RESIN PARTS
FOR SCALE PLASTIC KITS

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION **RSU48-0624**


F-4B PHANTOM II COCKPIT

DETAILED EDITION

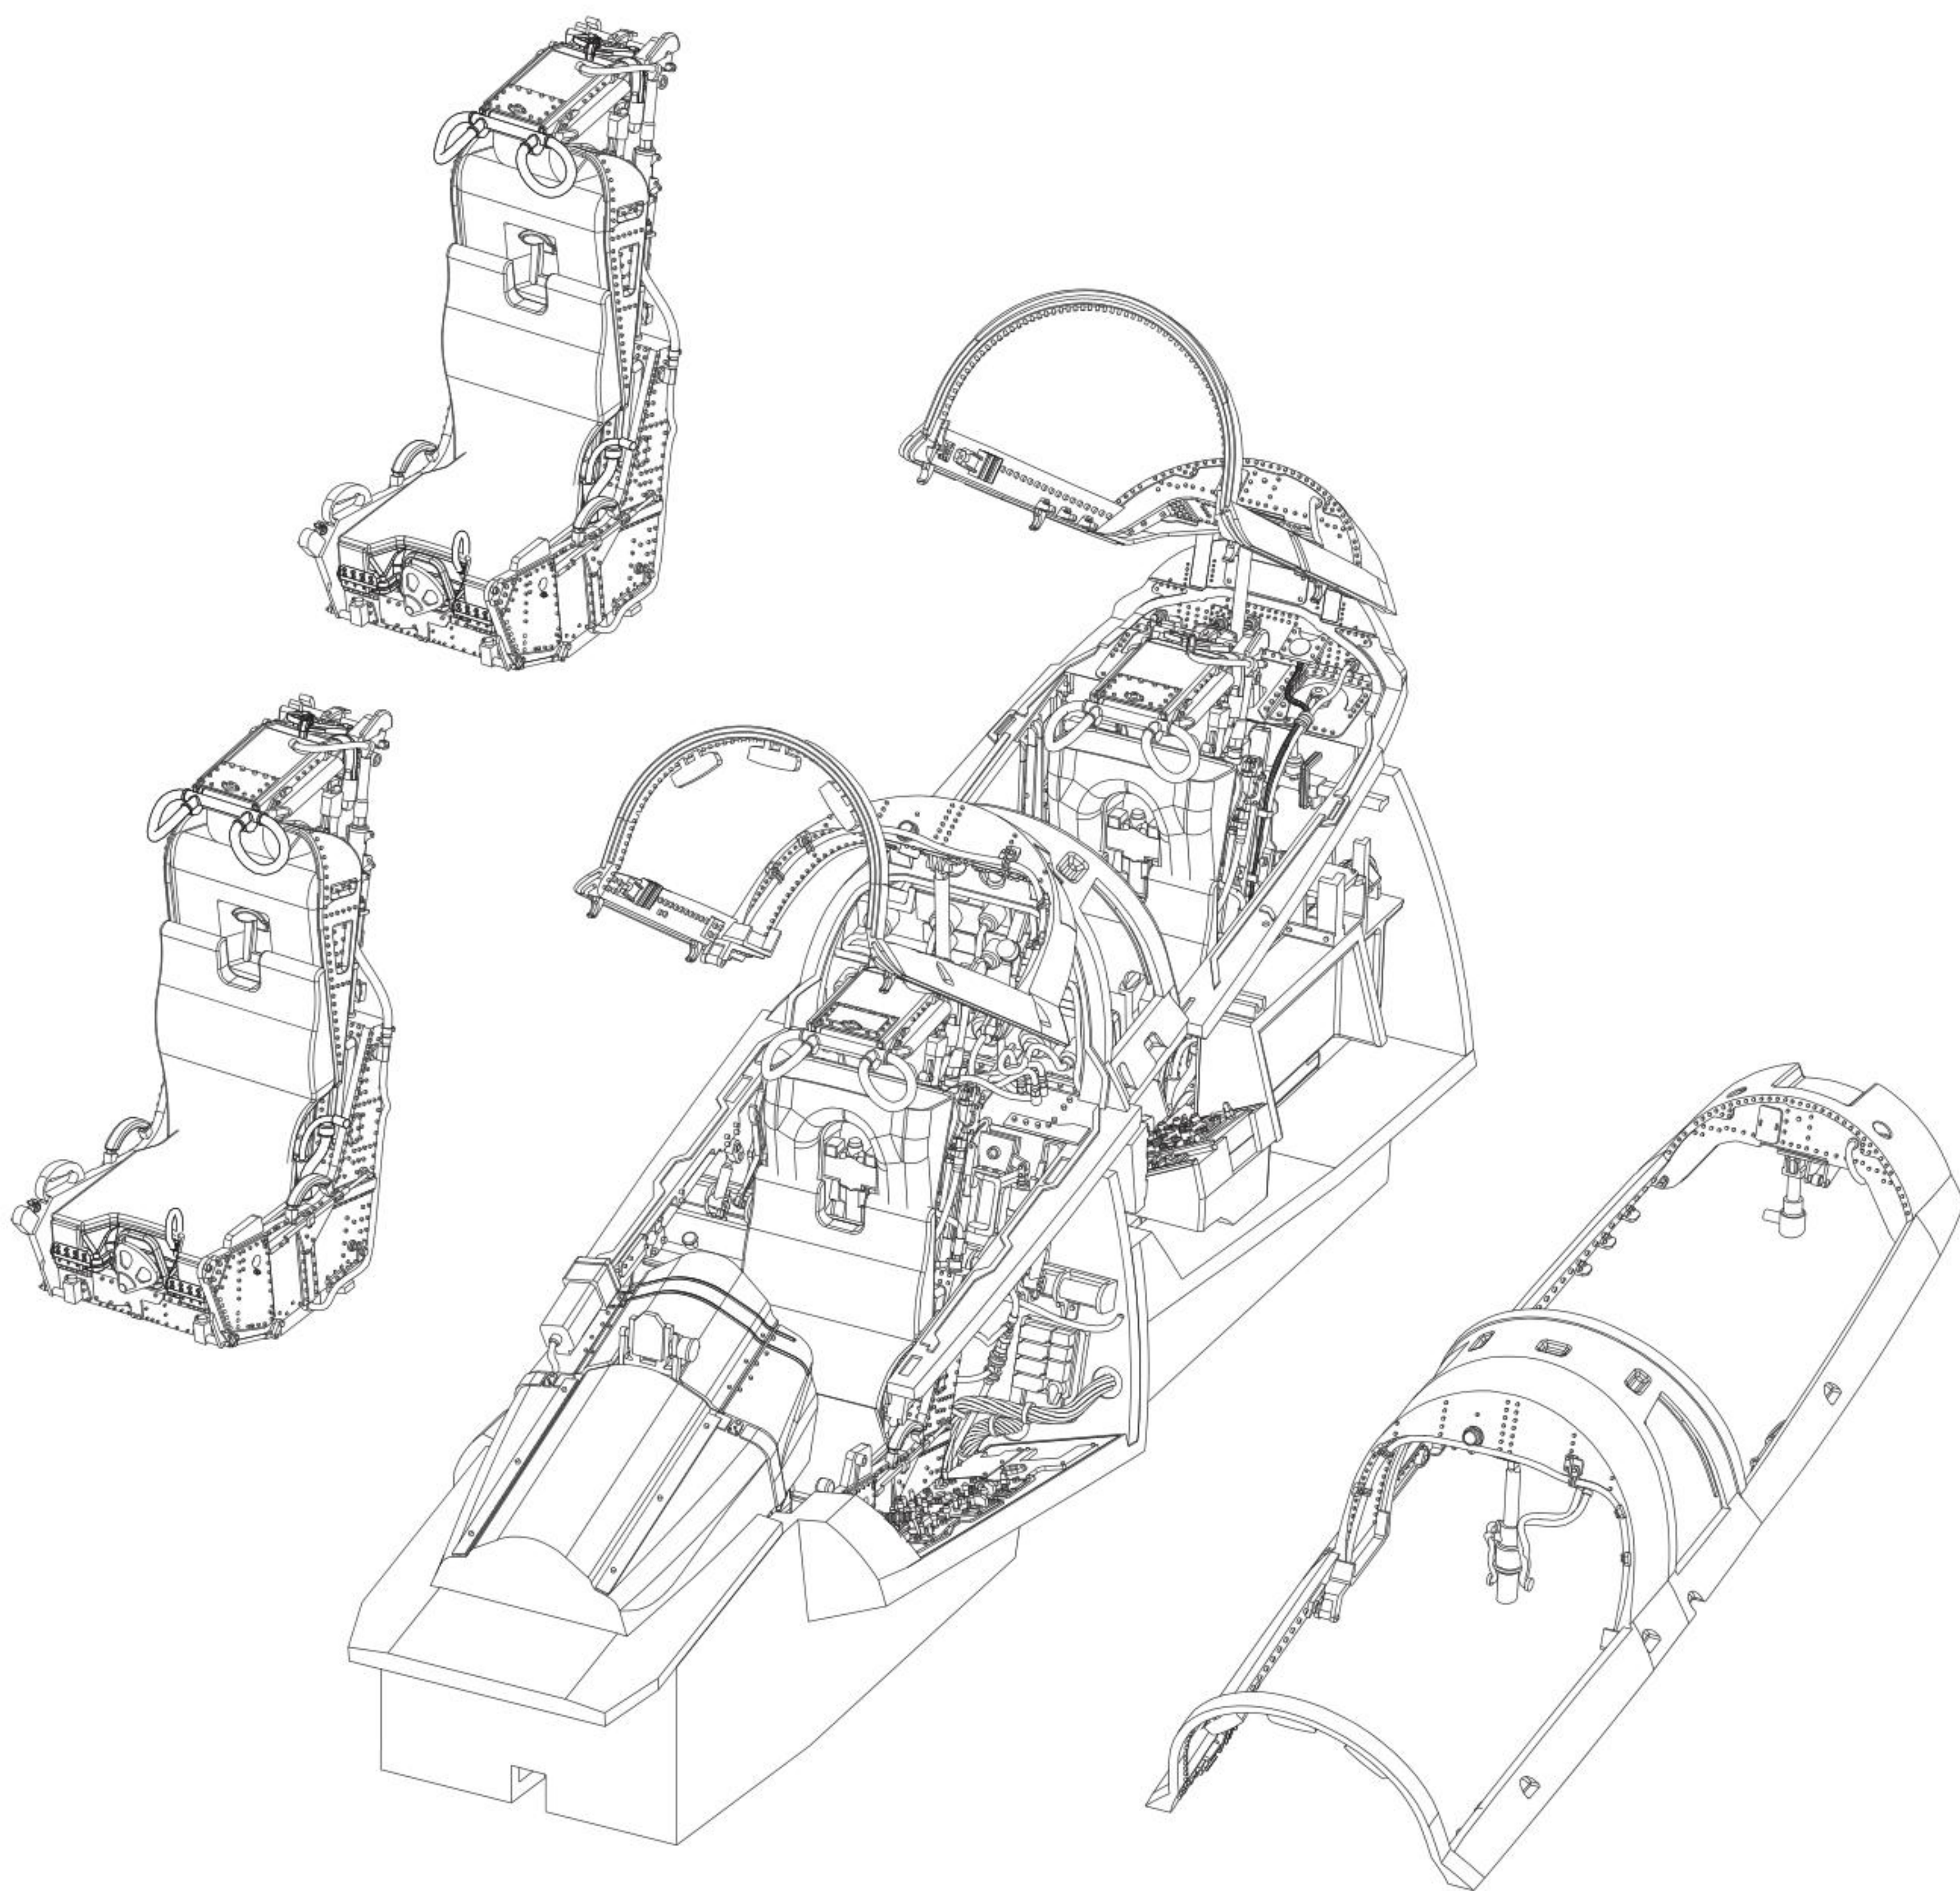


3D PRINTED
PARTS


FOR TAMIYA KIT

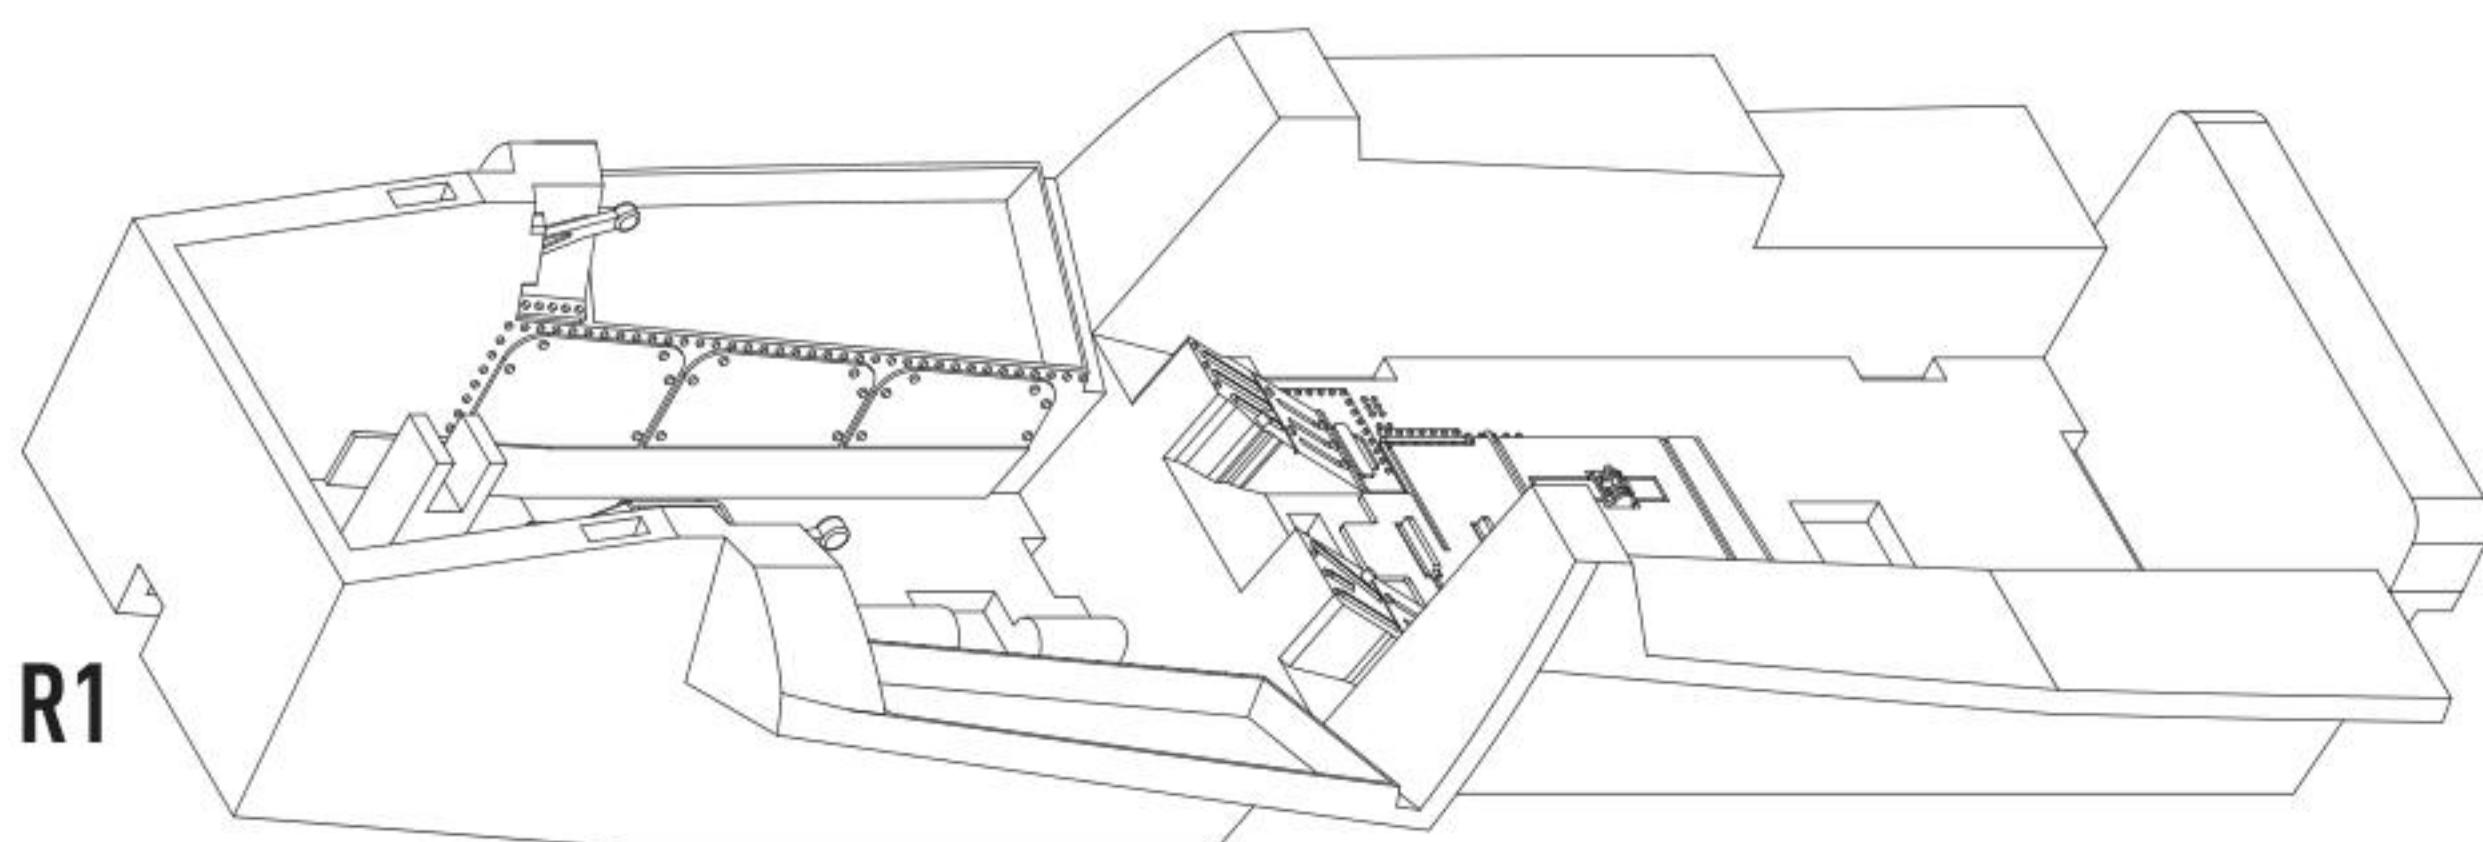

R1

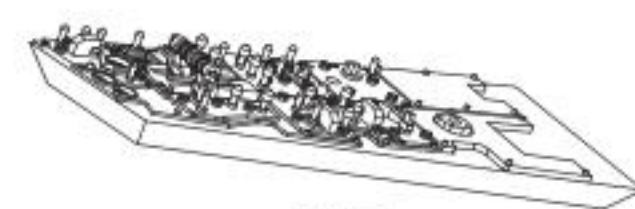


R7

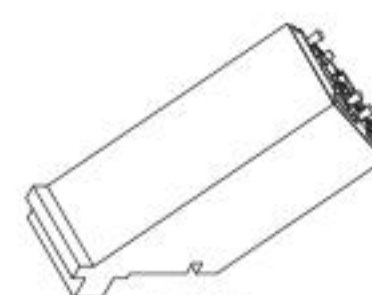


R8




R3

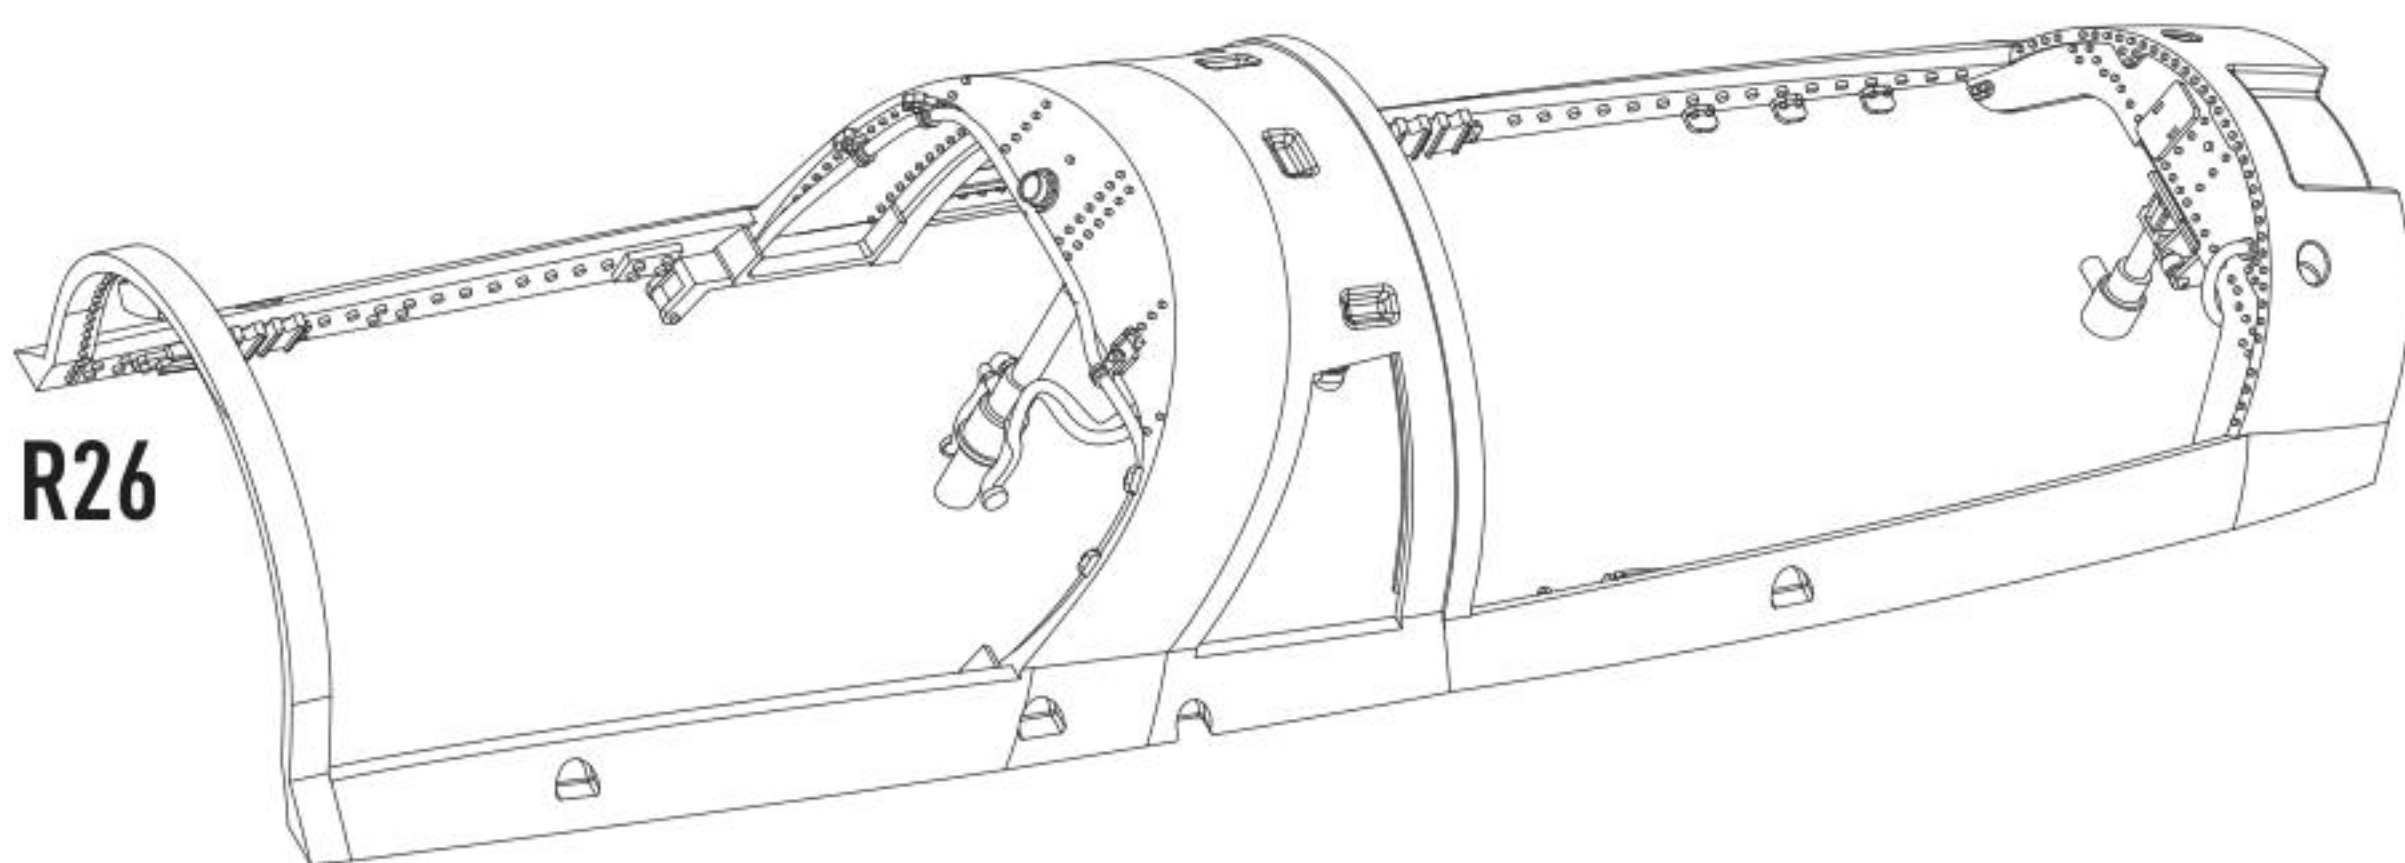


R26

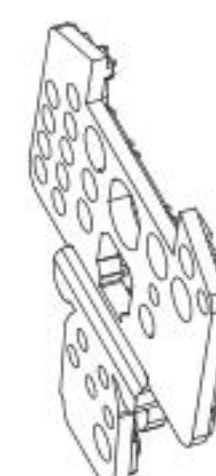


R15

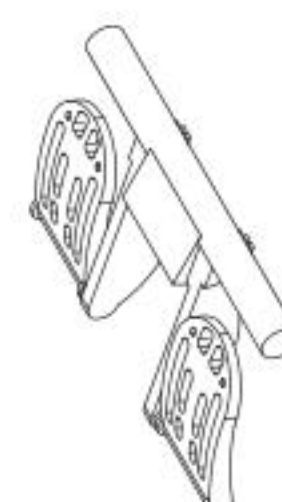


R2

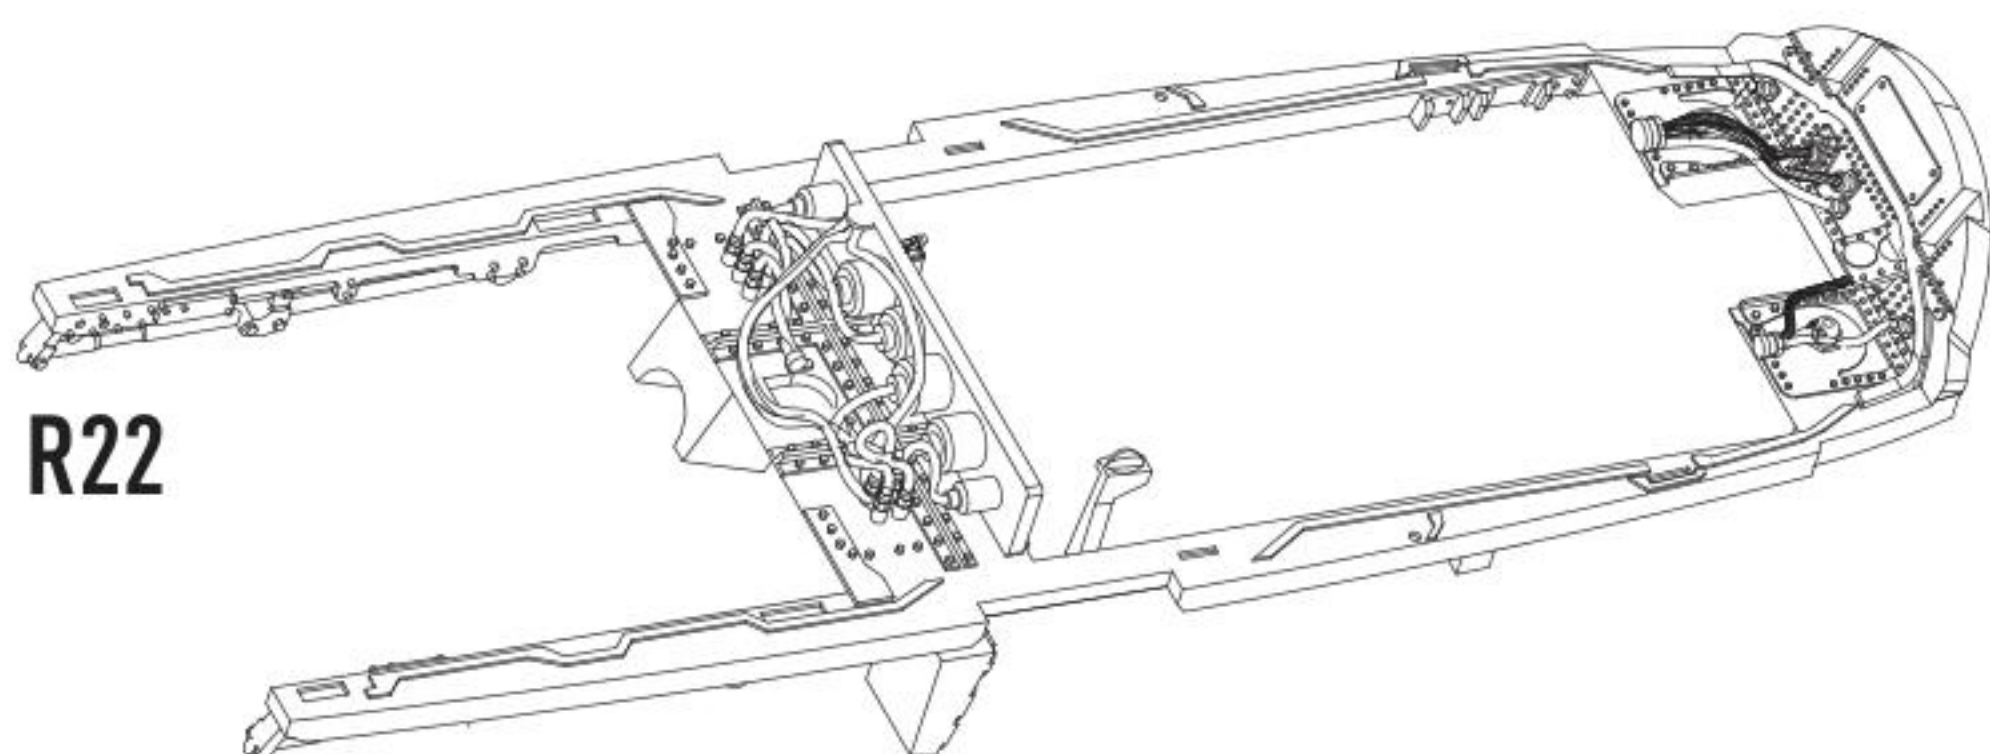


R22

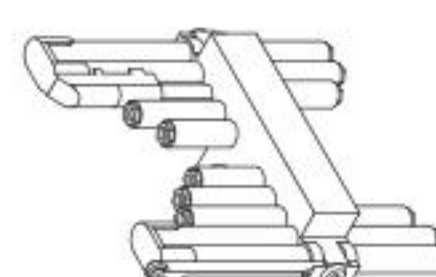


R21 x2

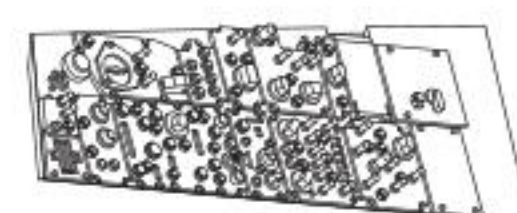

R6

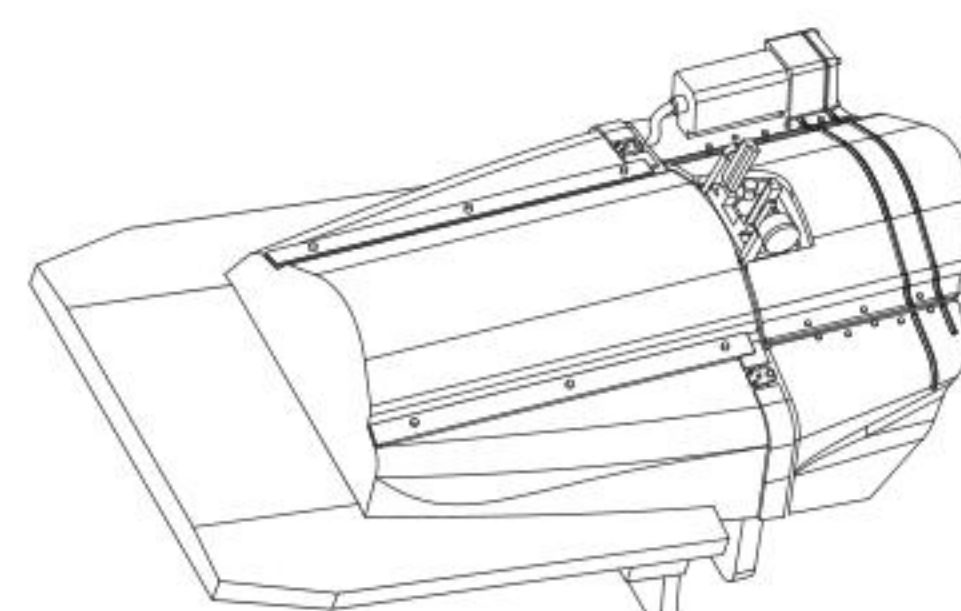

R14

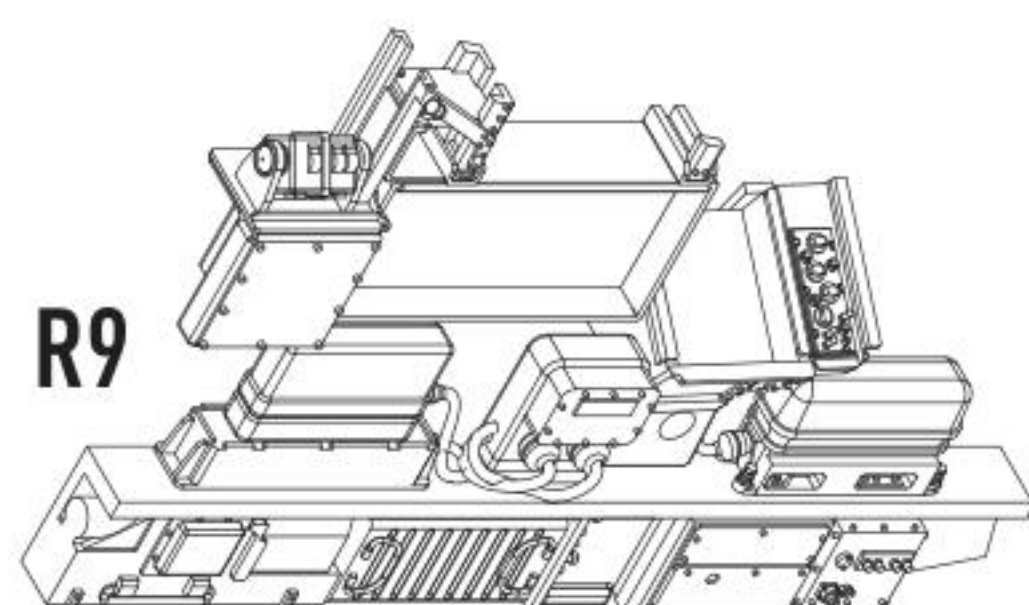


R9



USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

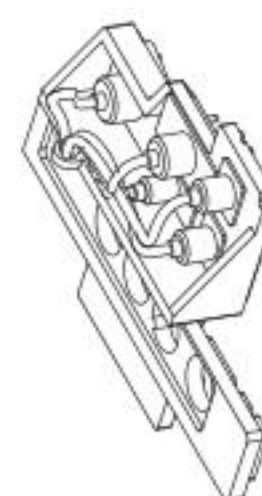


R23




R4

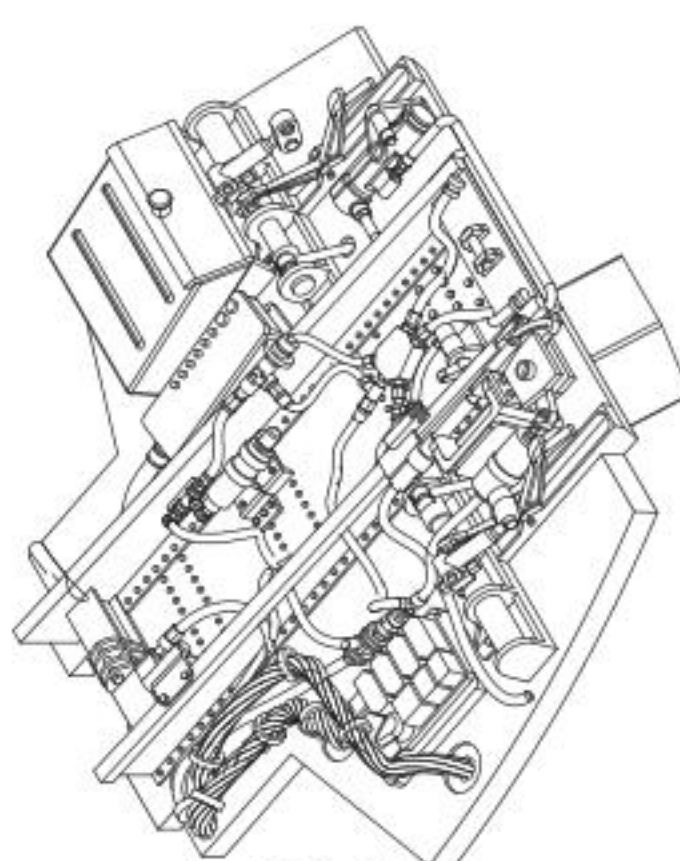


R16

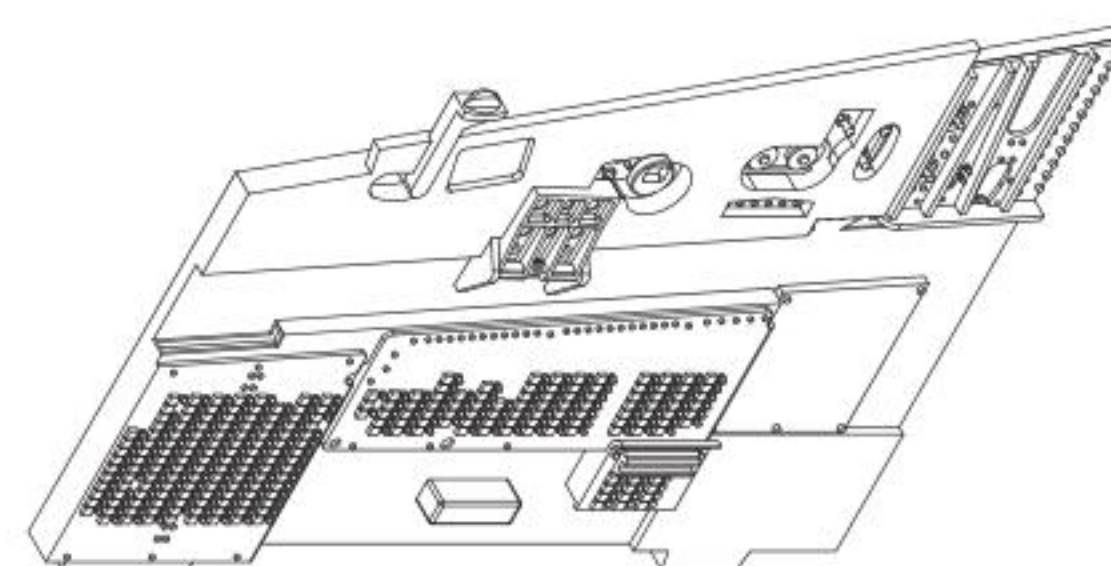


R12

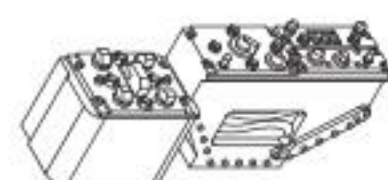

R13

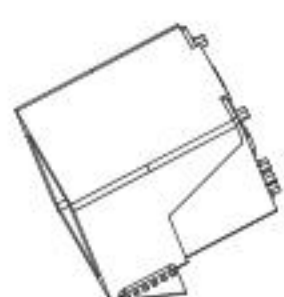

R17

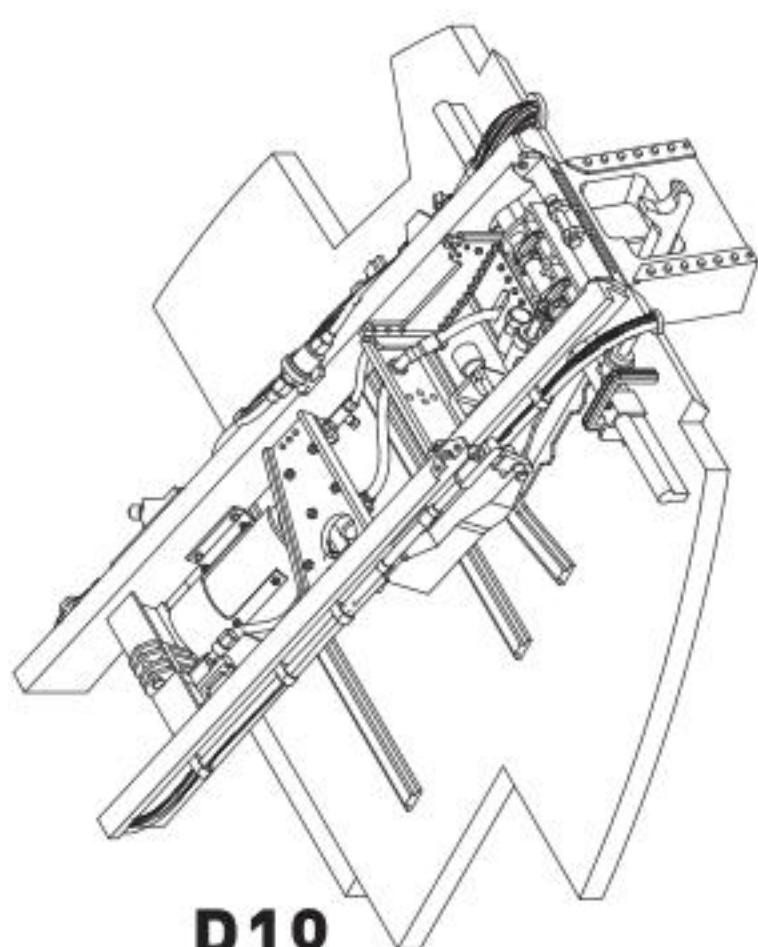


R18




R10



R5

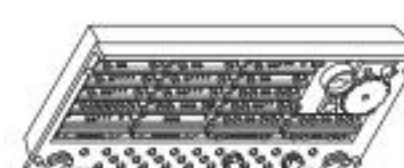

R11

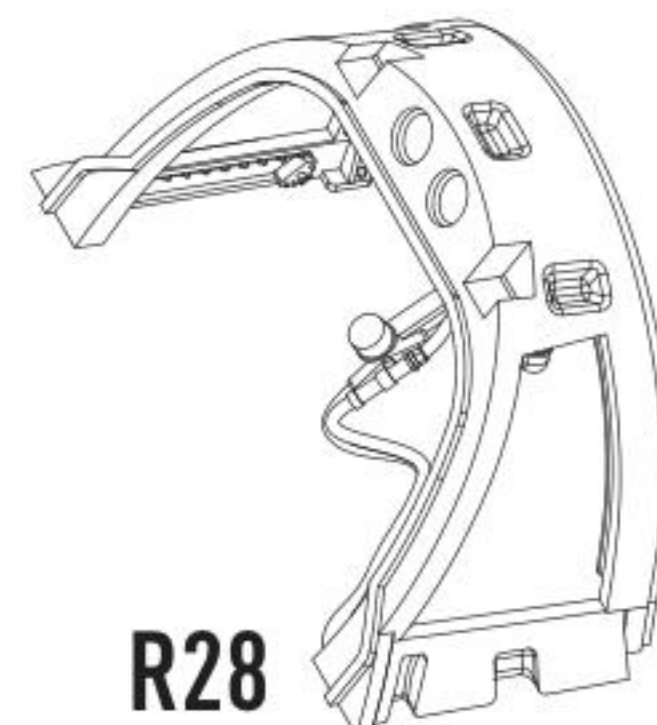

R28




general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM


fb.com/reskit.official

instagram.com/reskit_official


youtube.com/@reskit-usmd

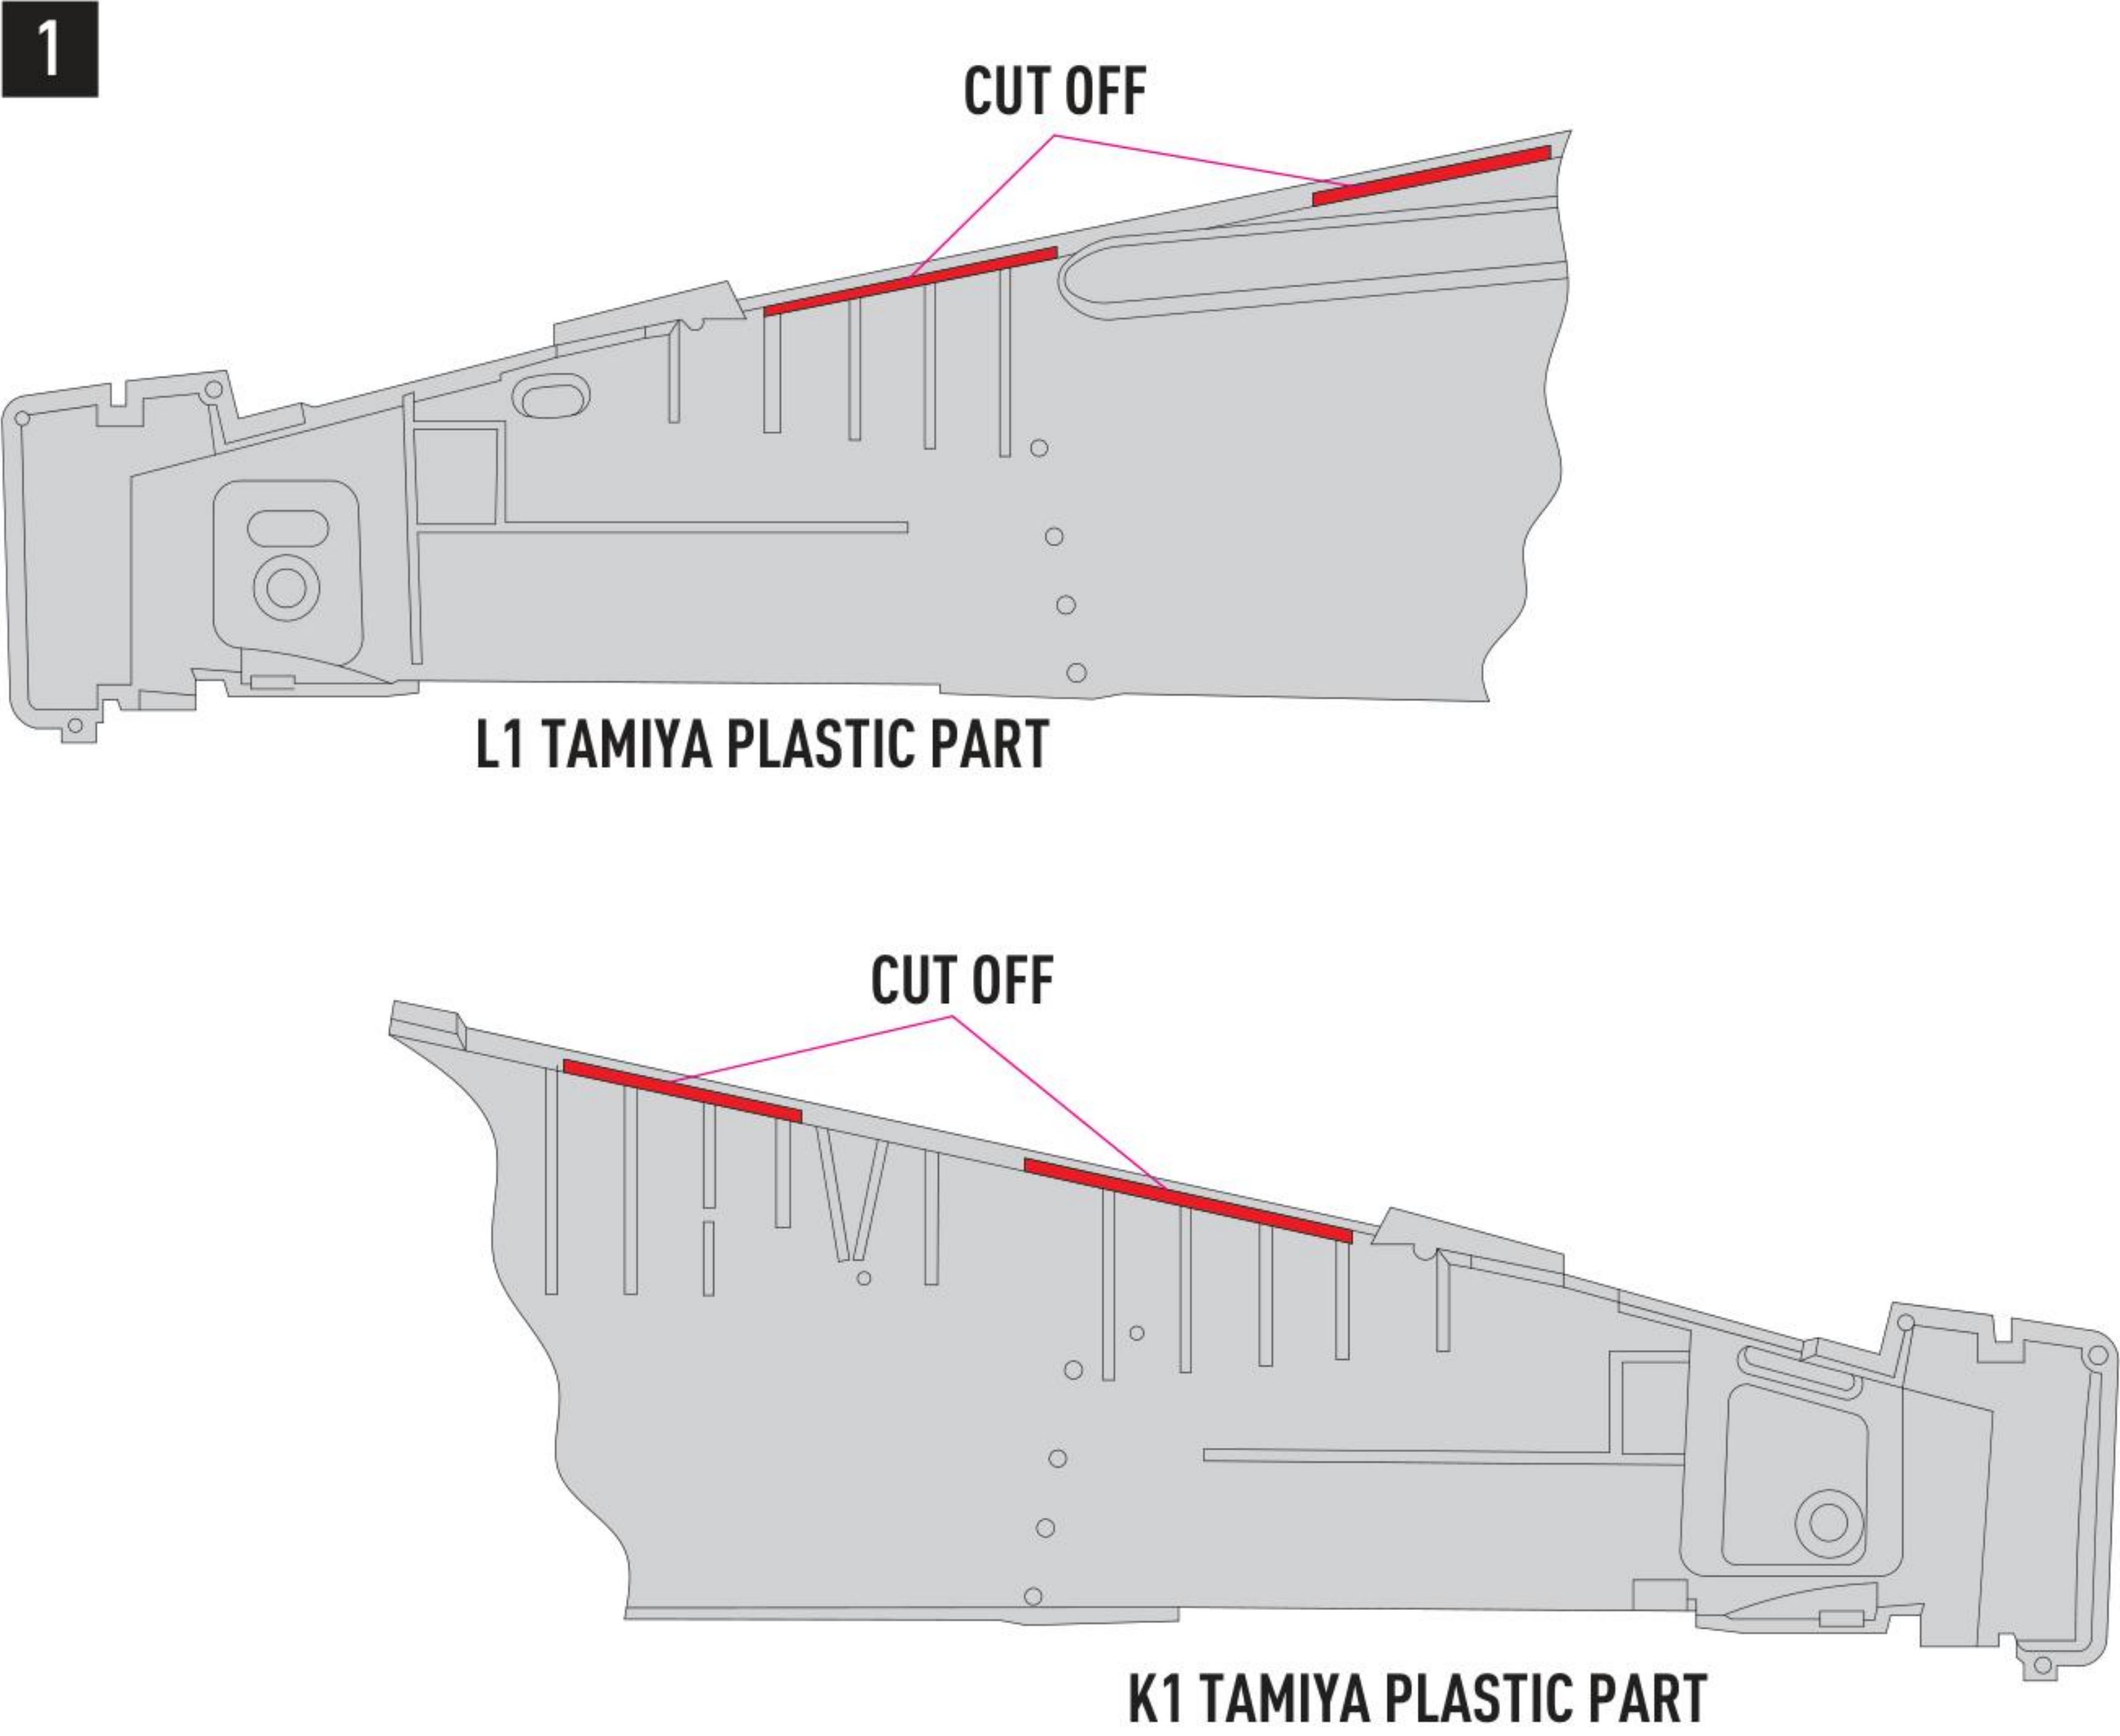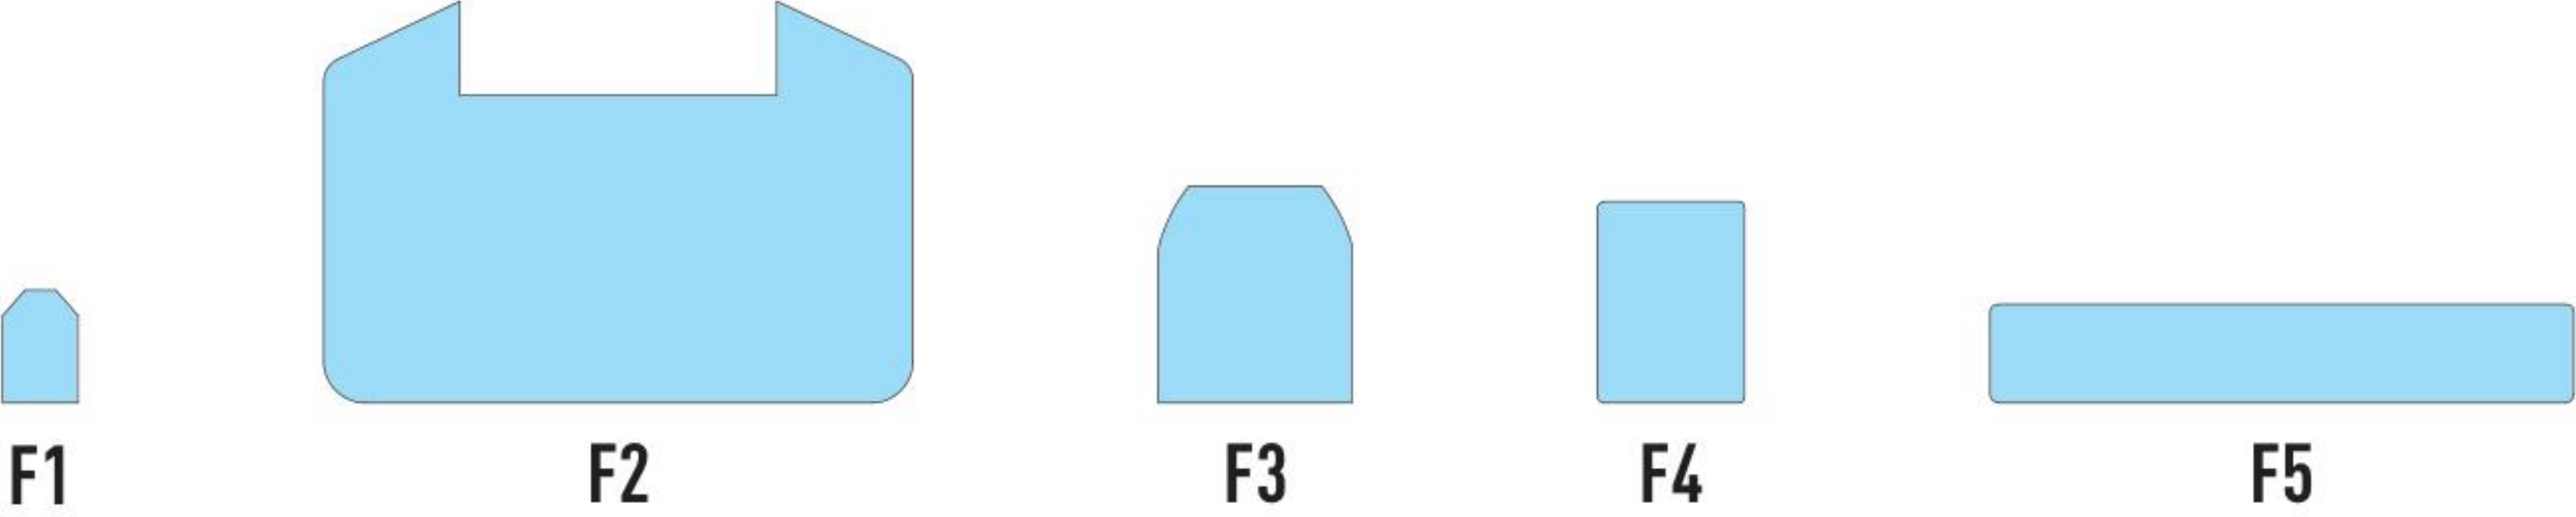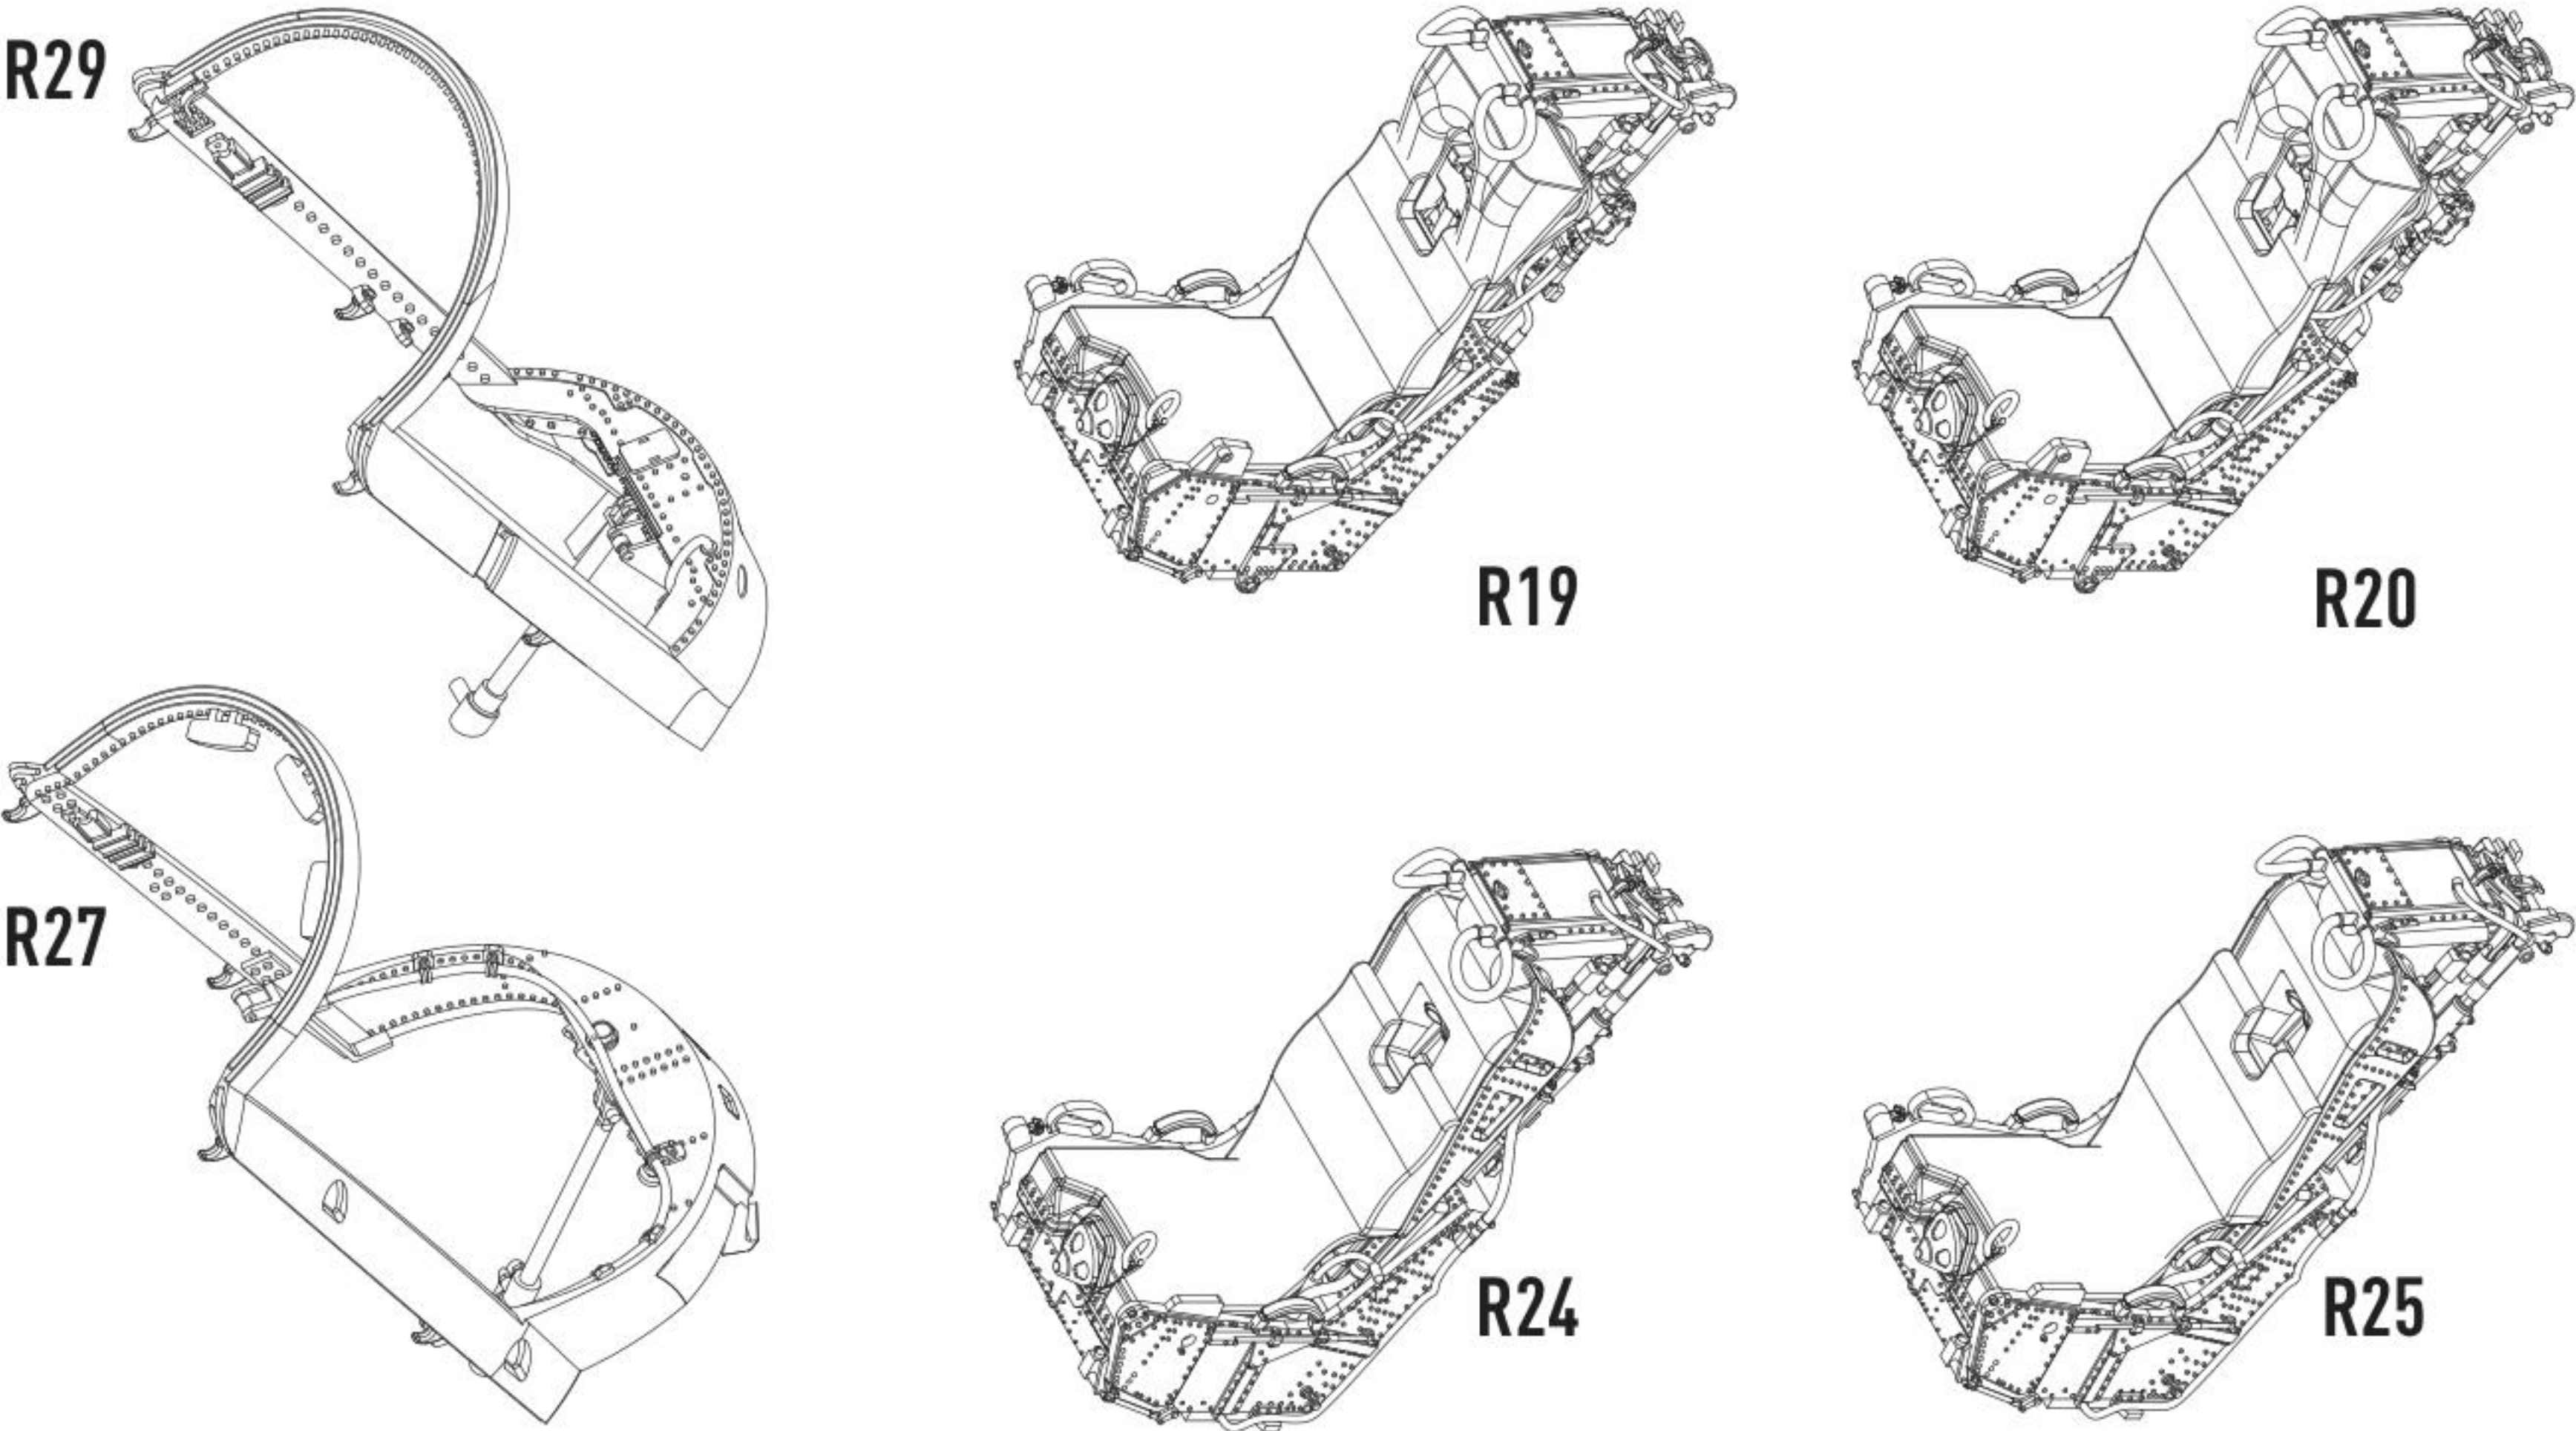


2

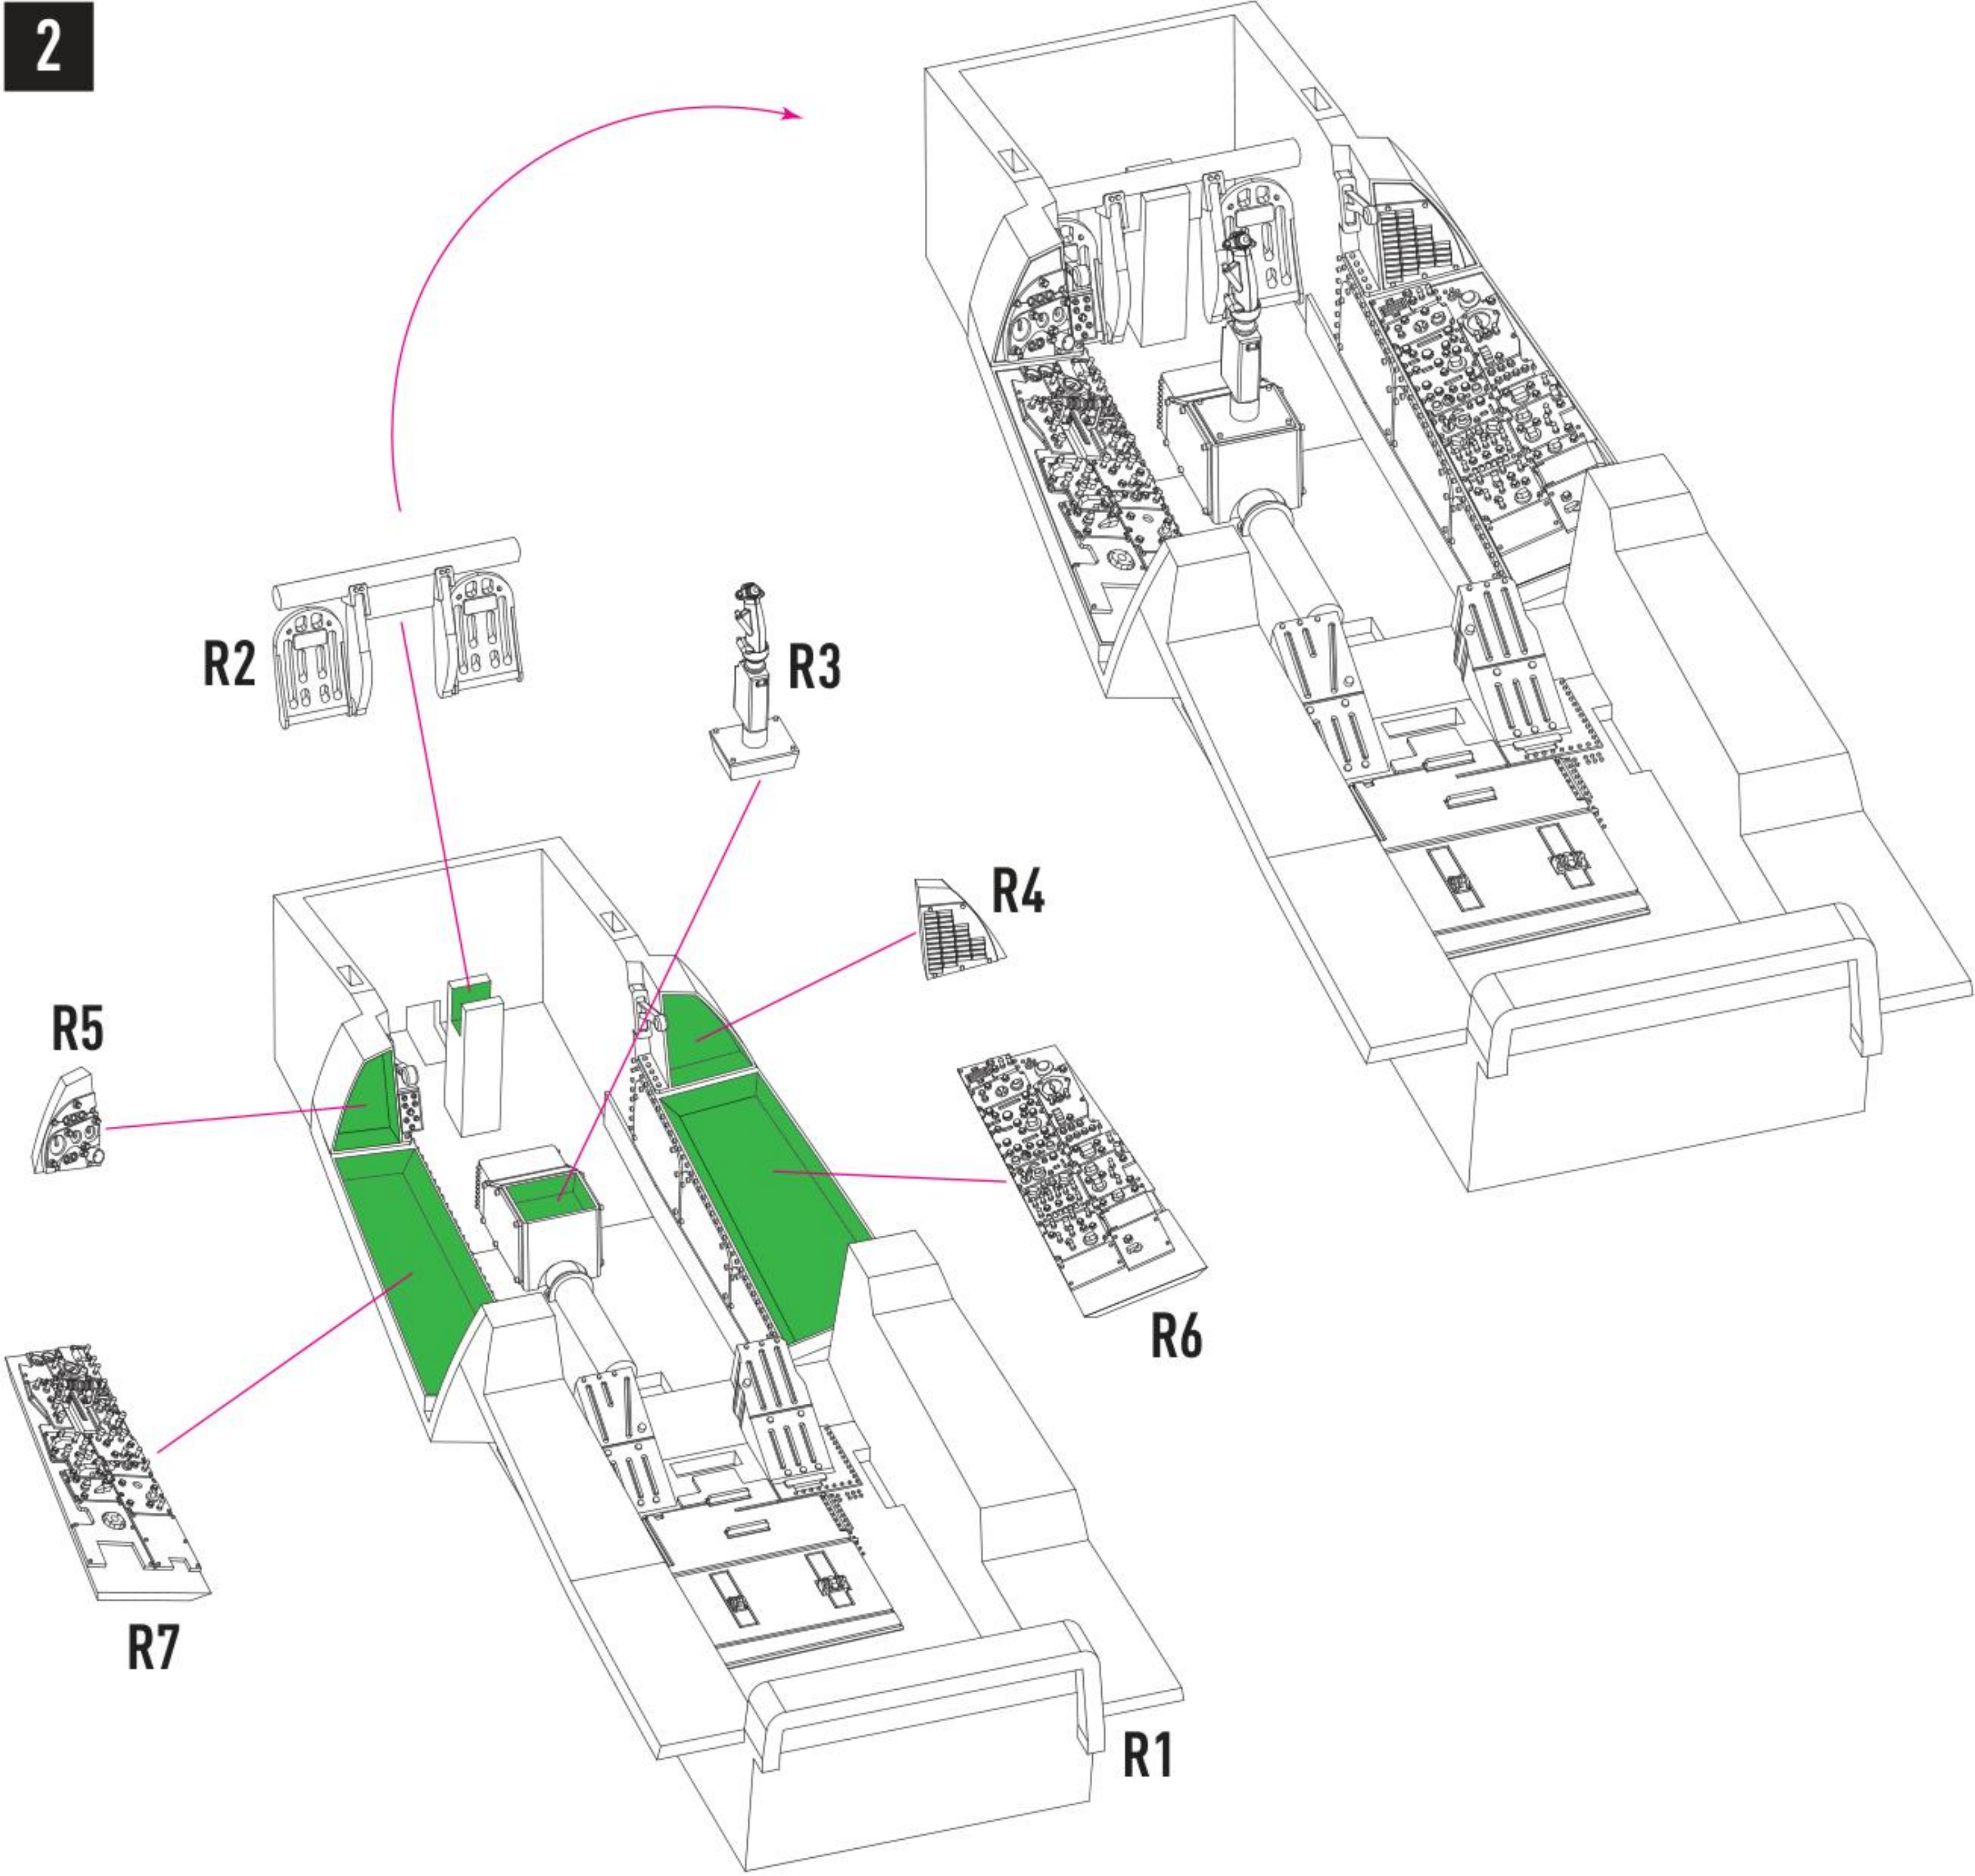


3

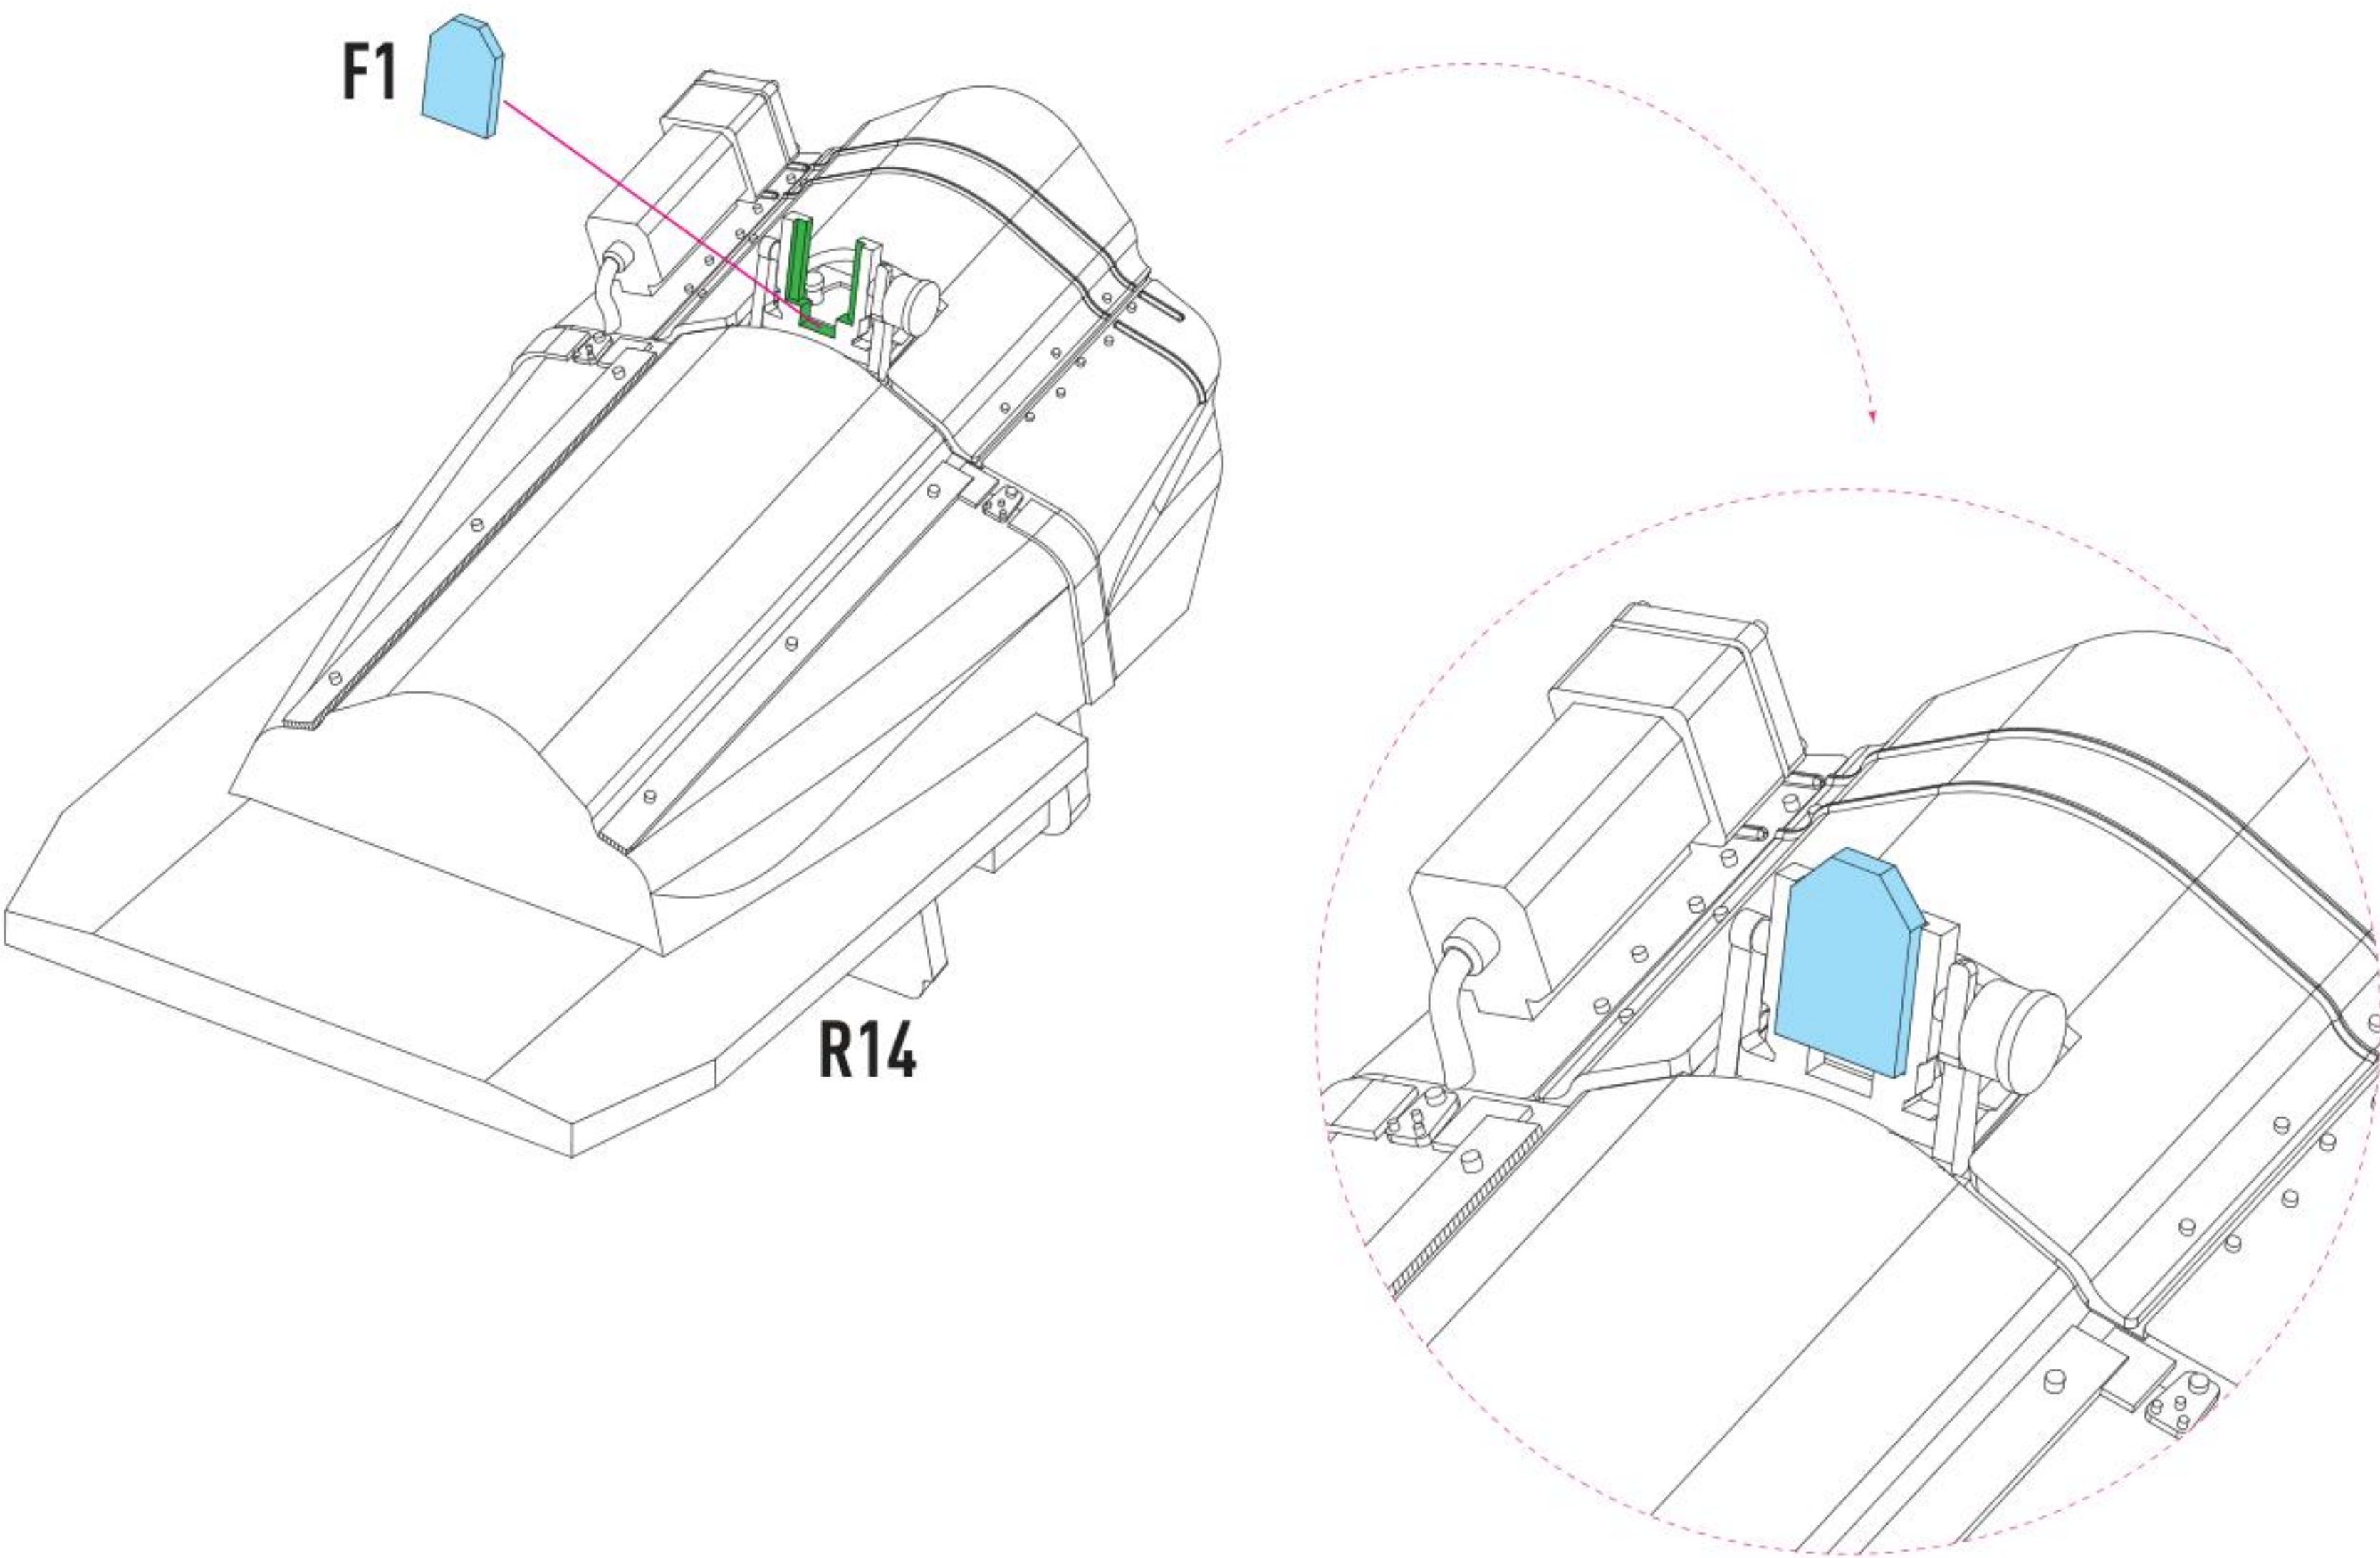


4

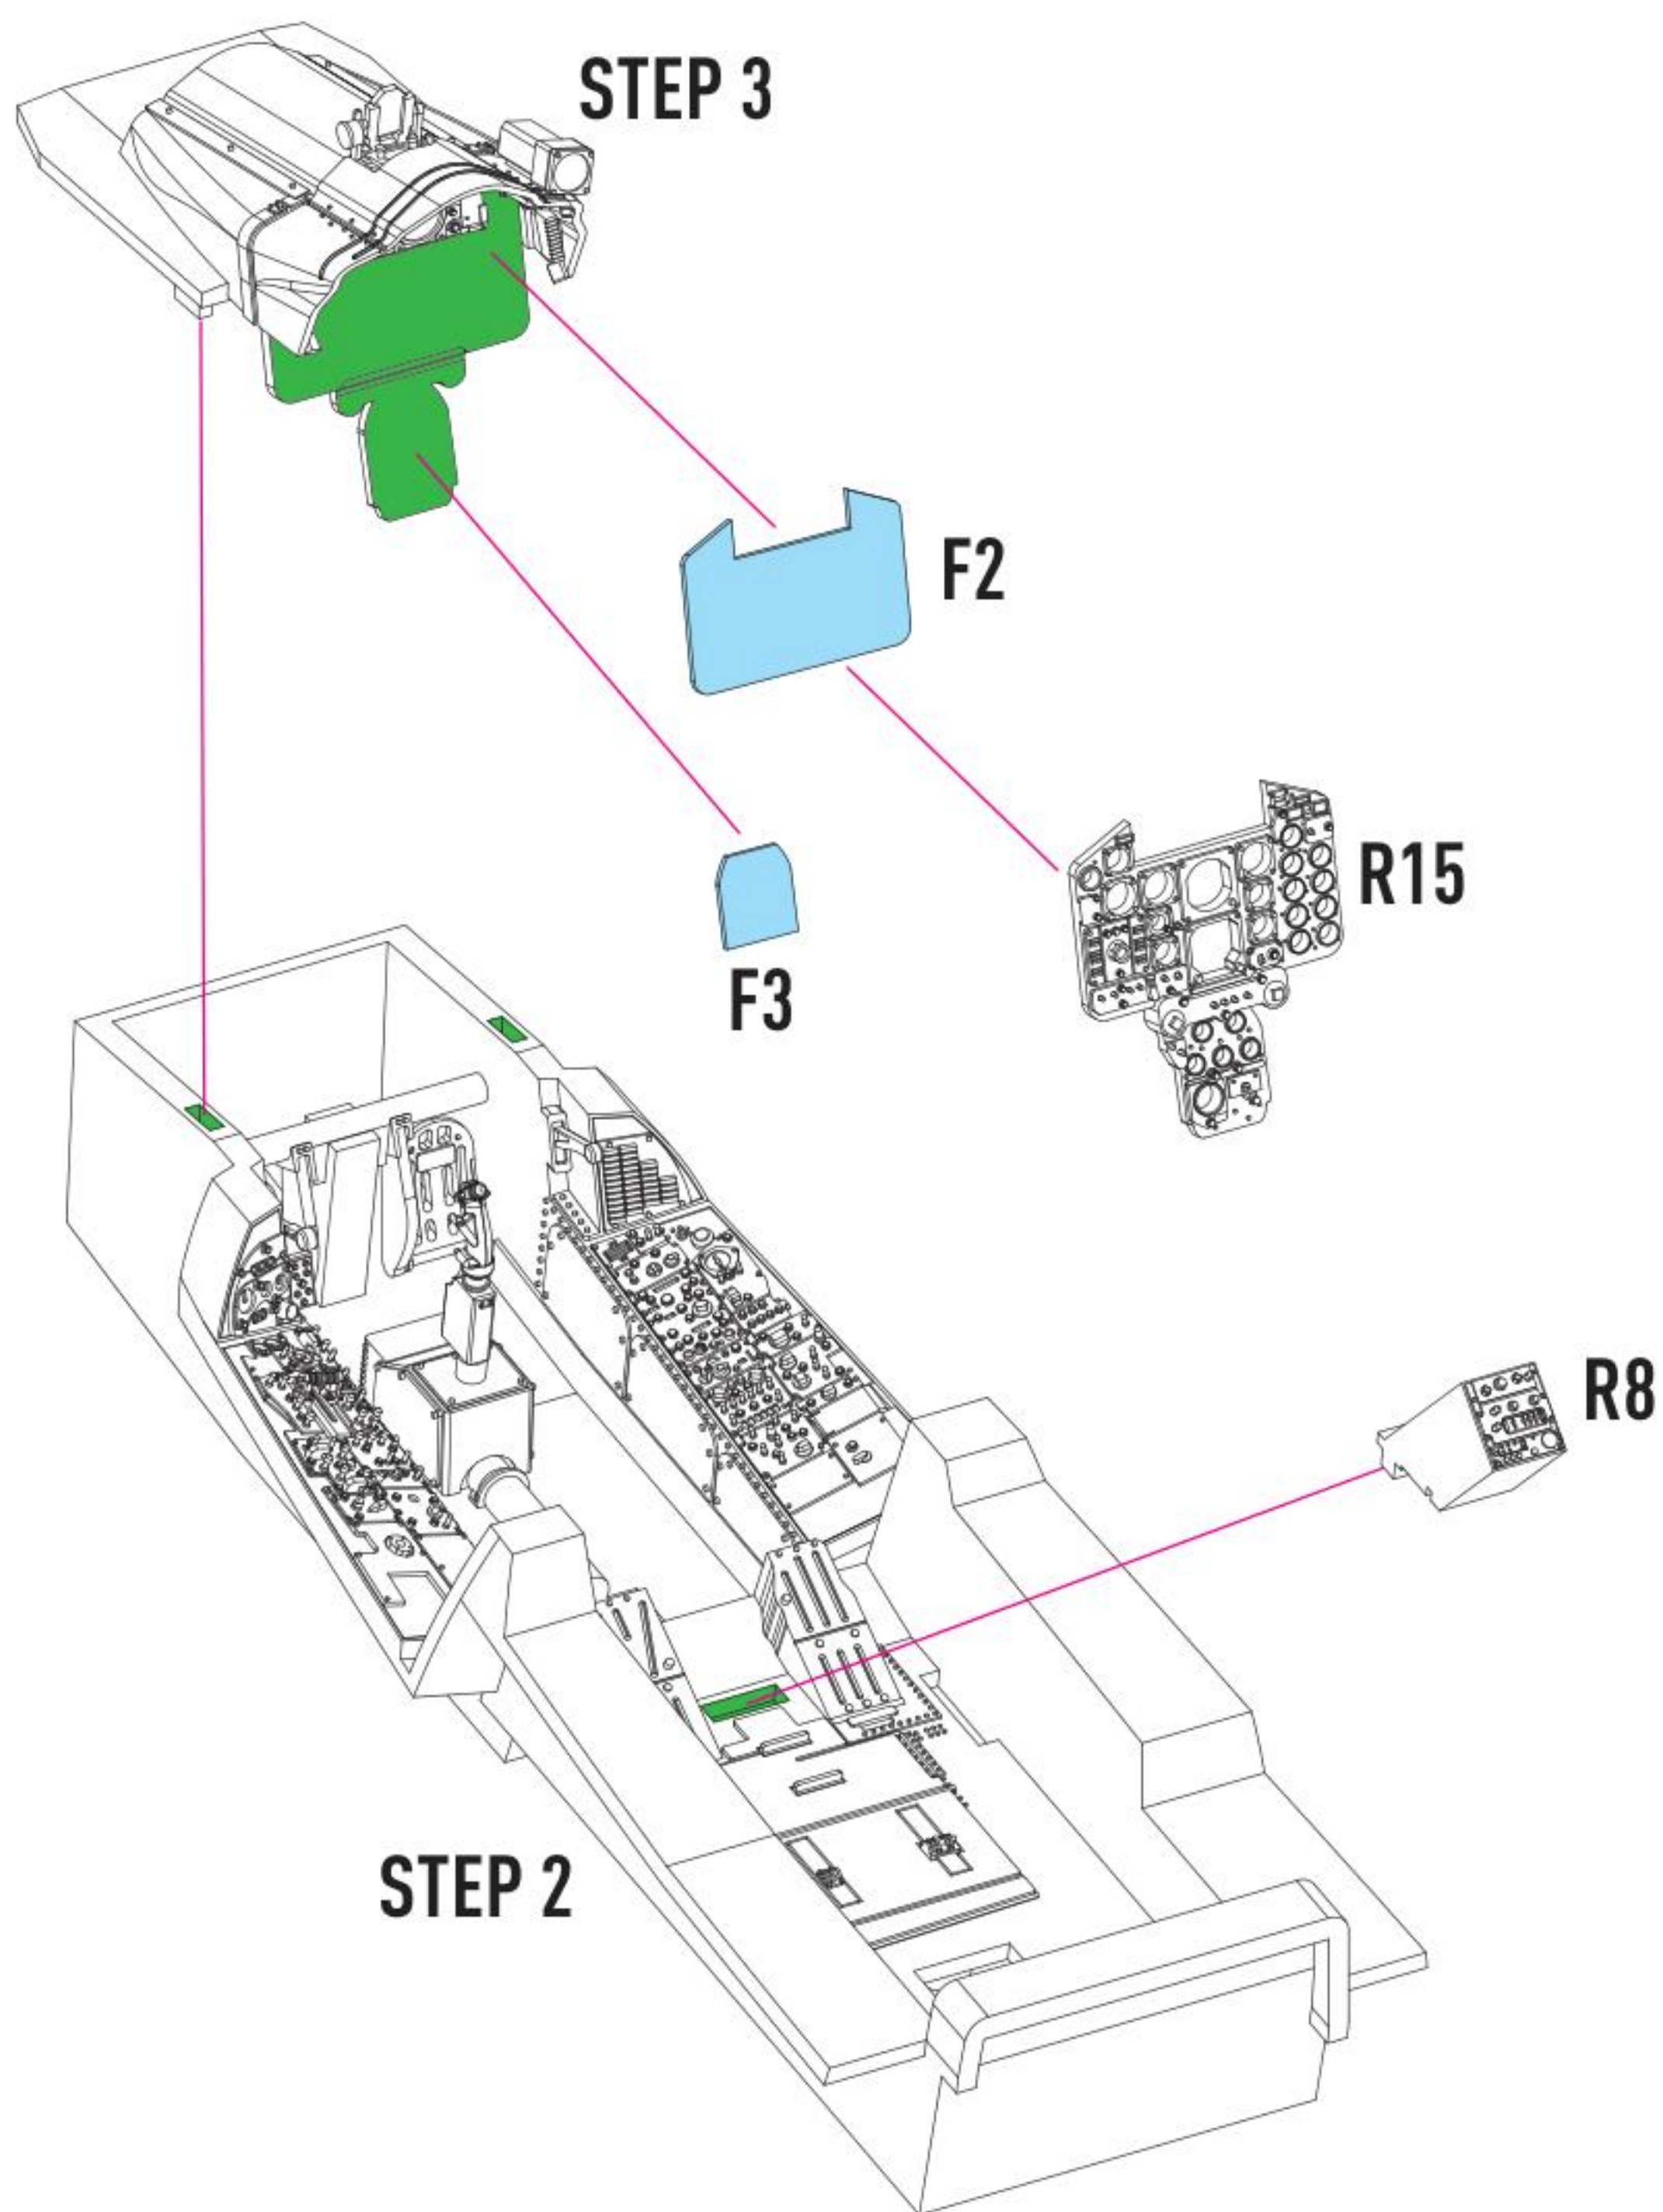


5


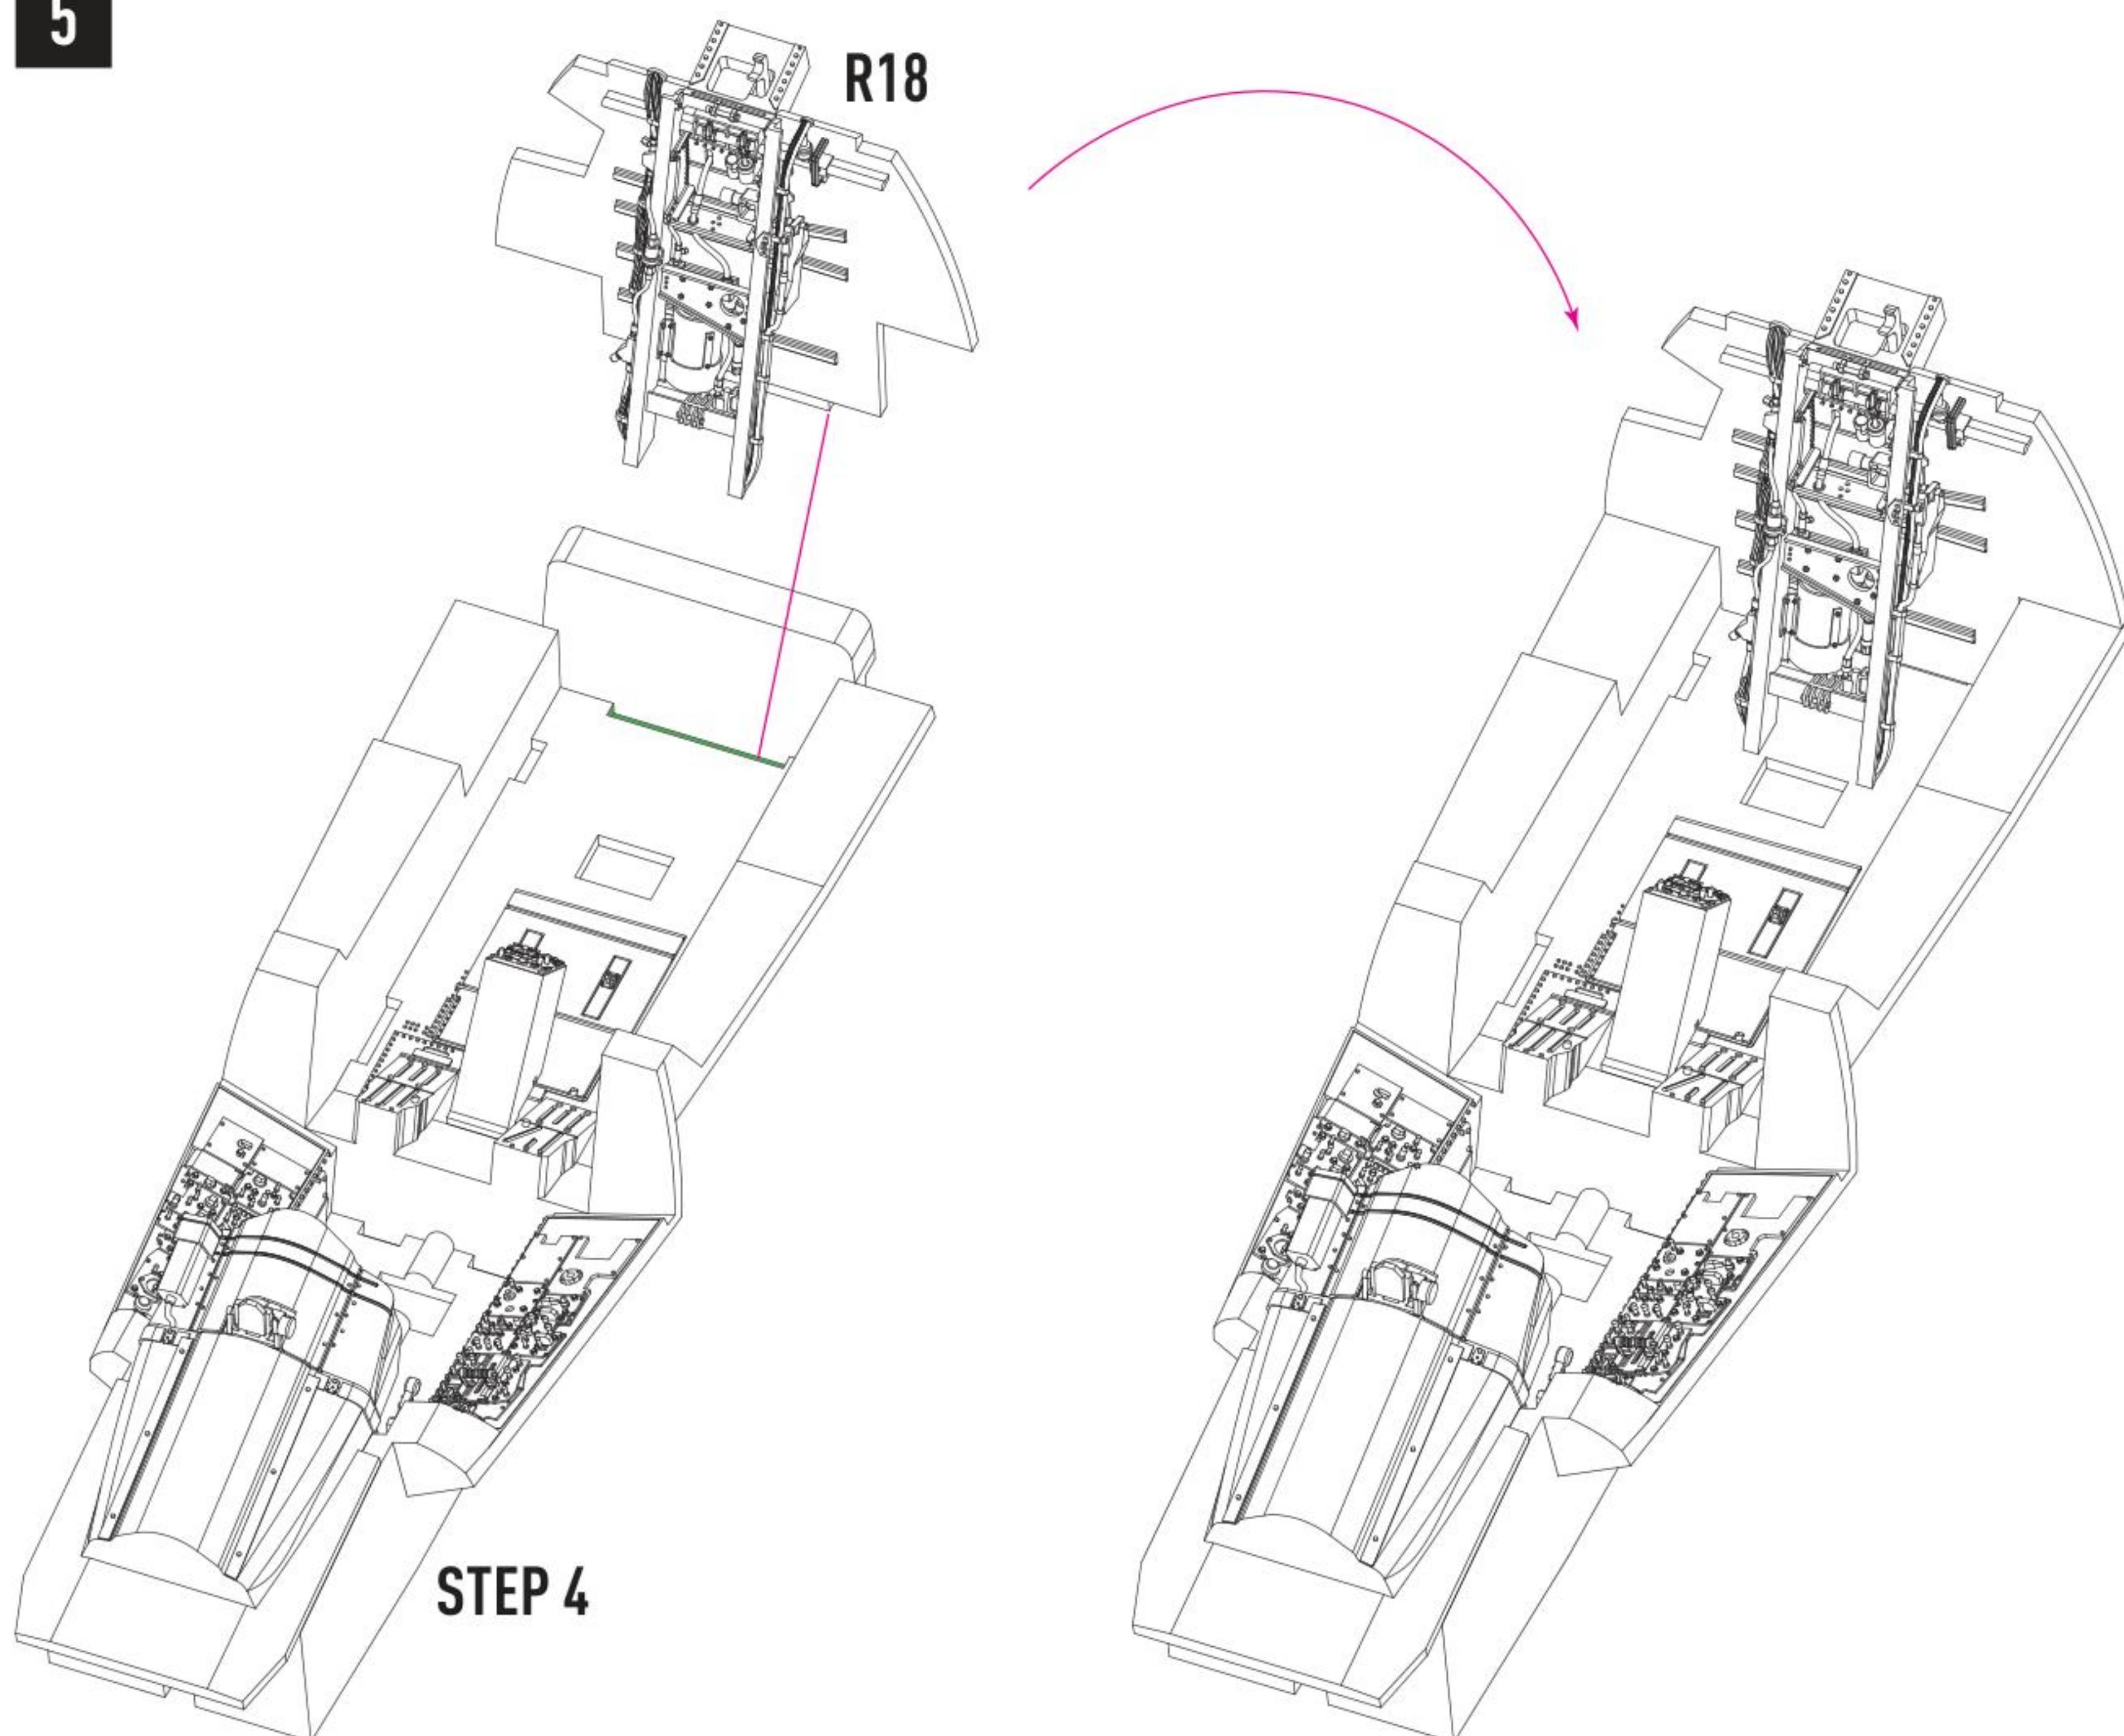


6


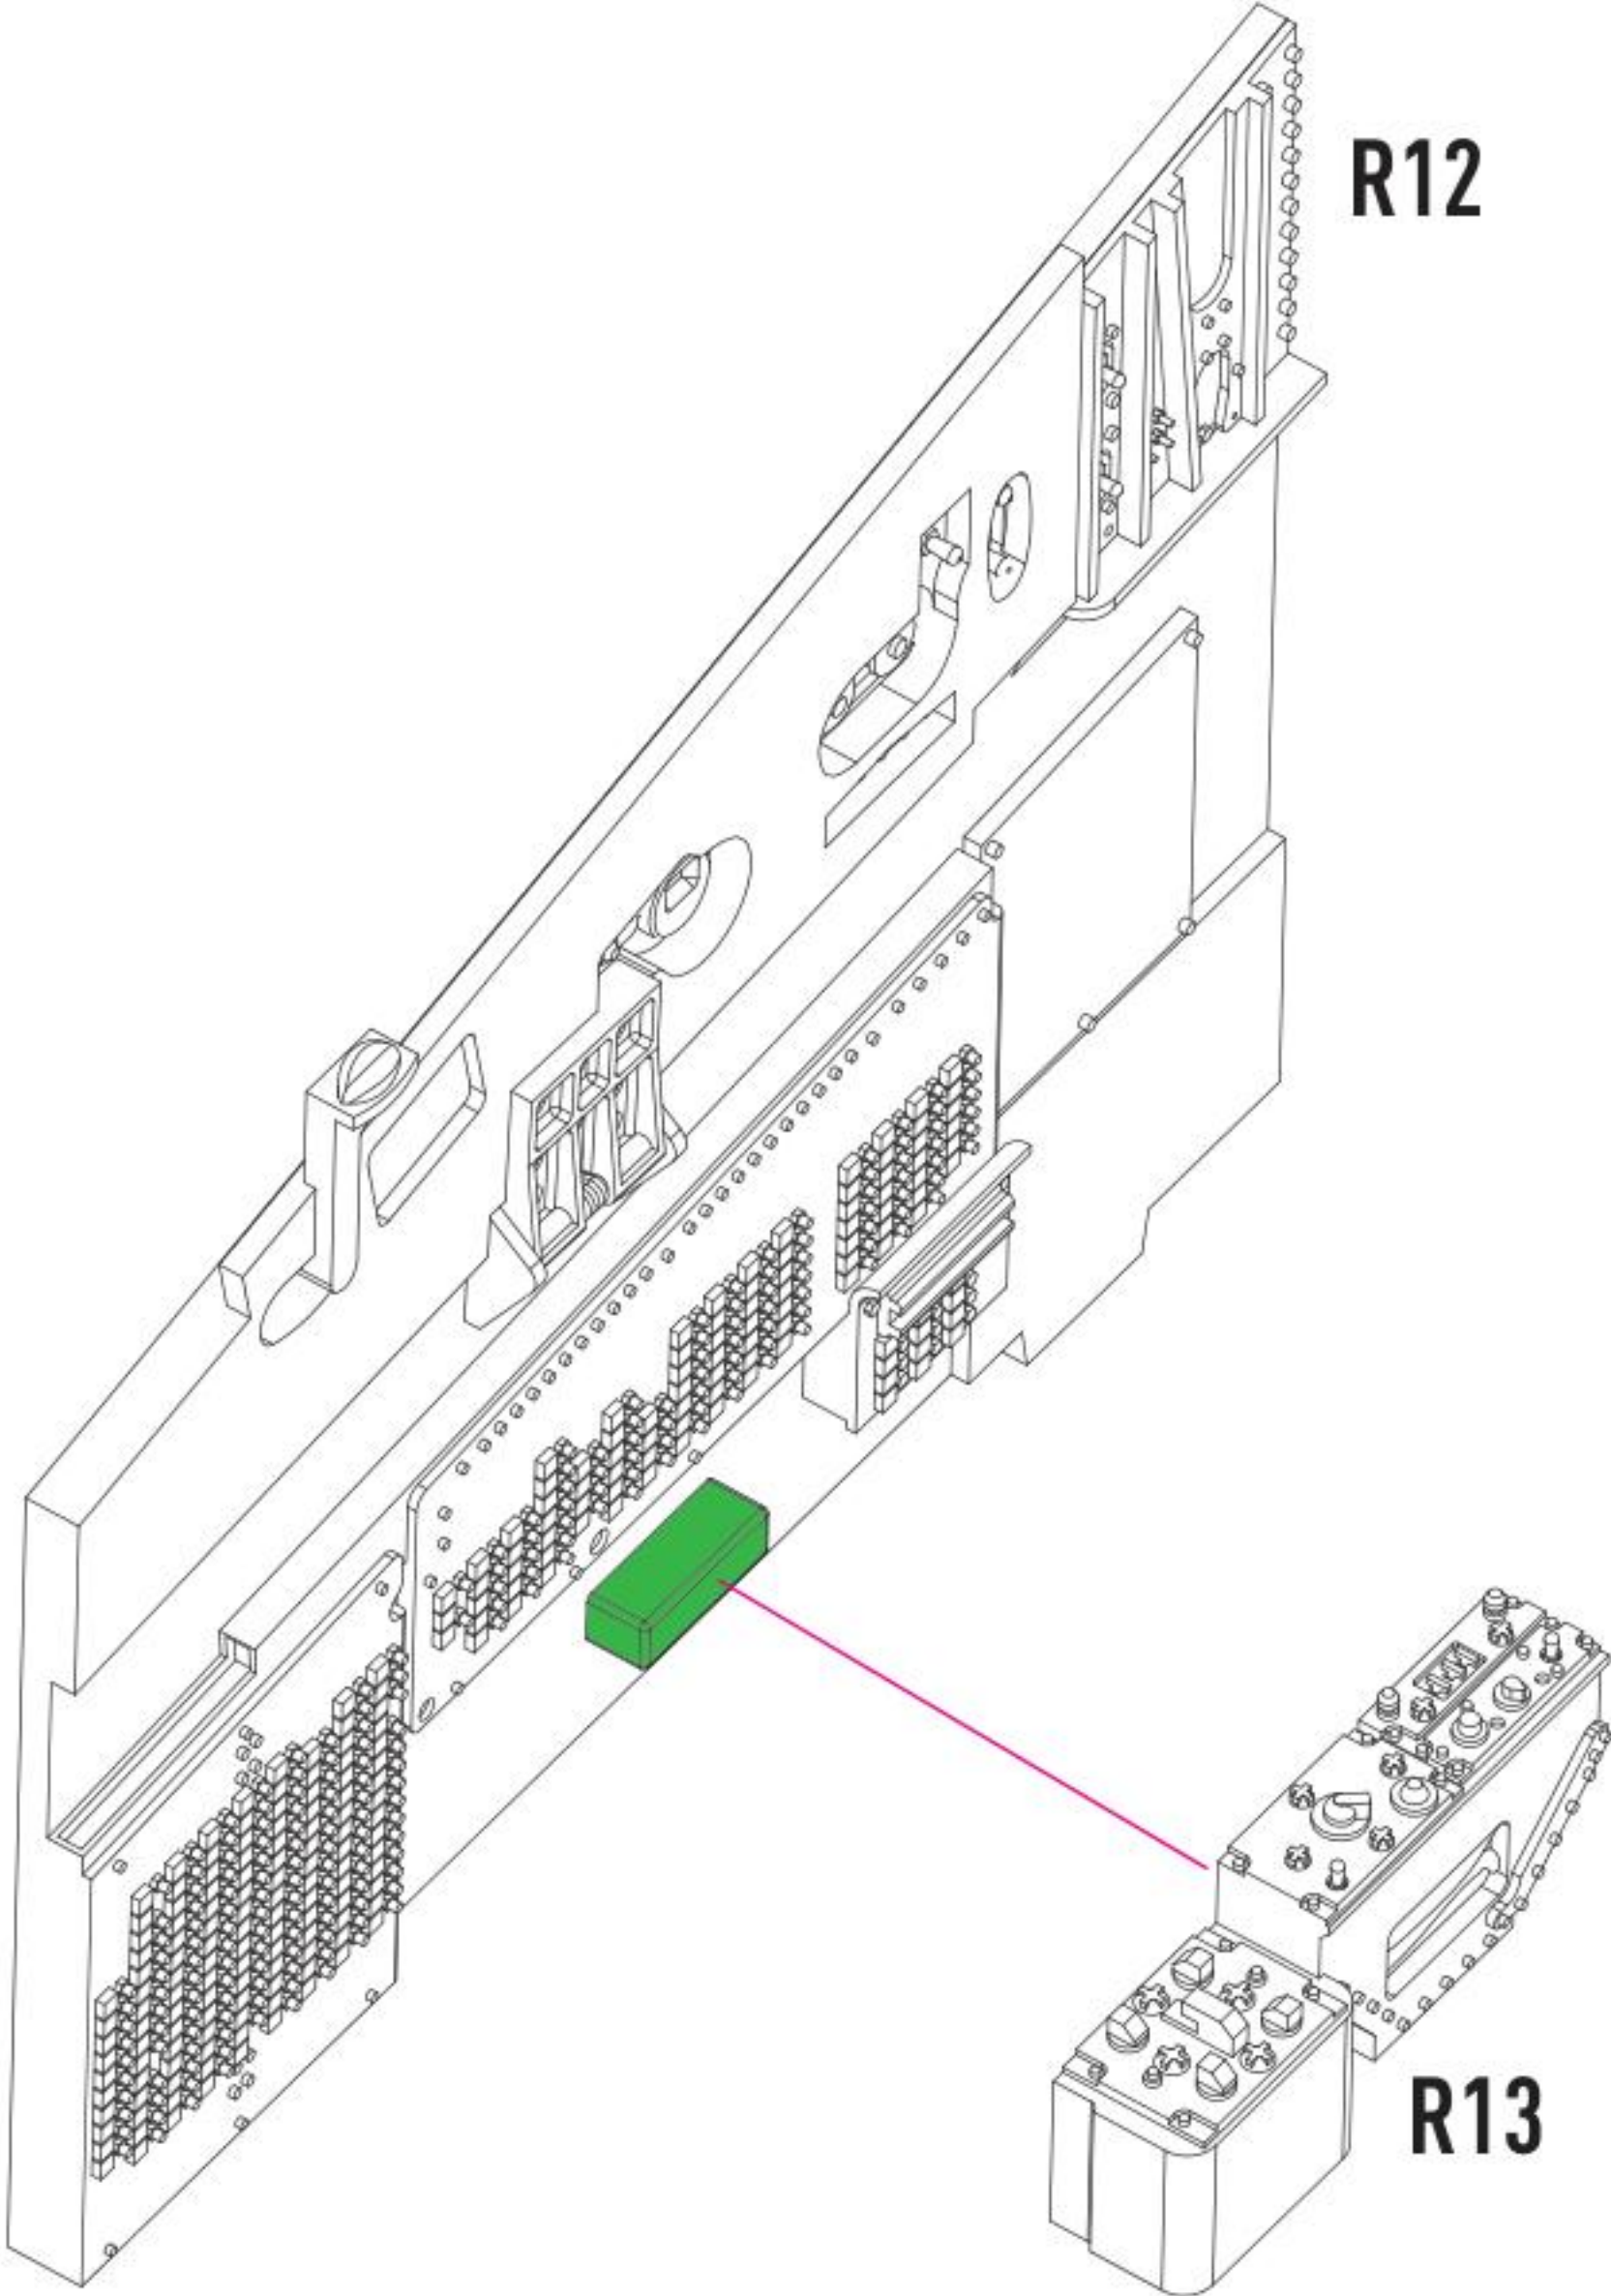


7

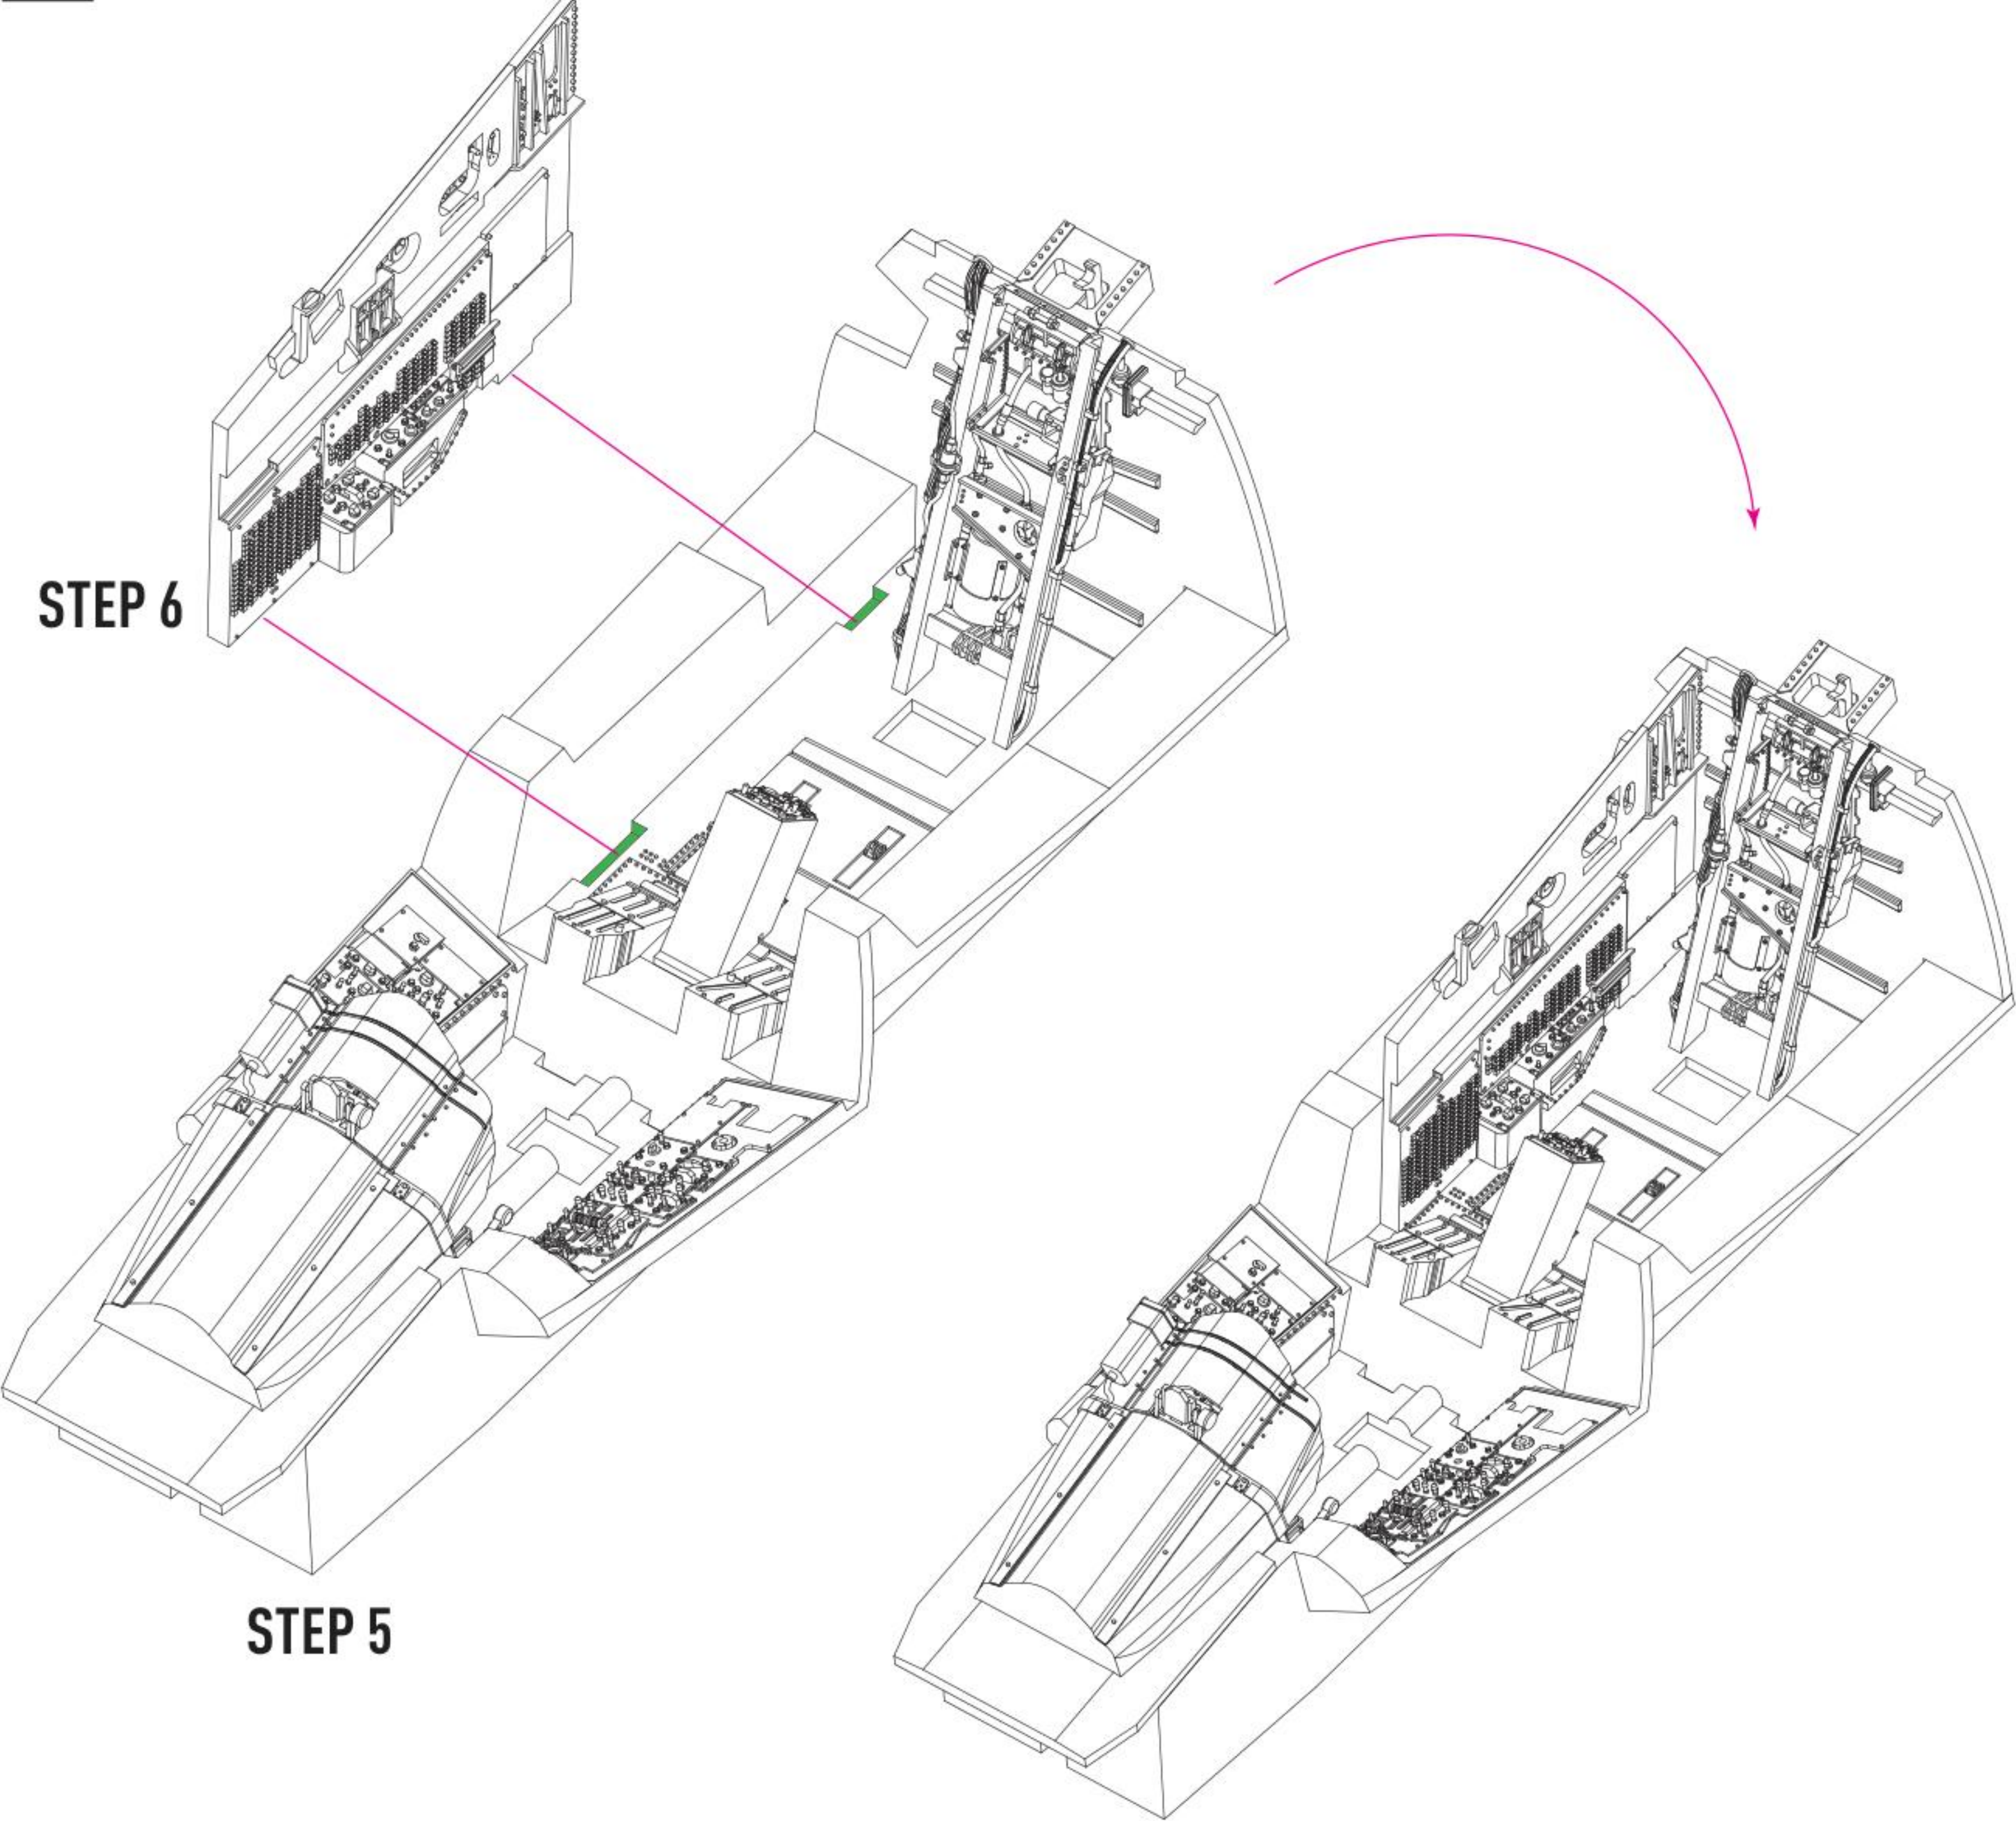

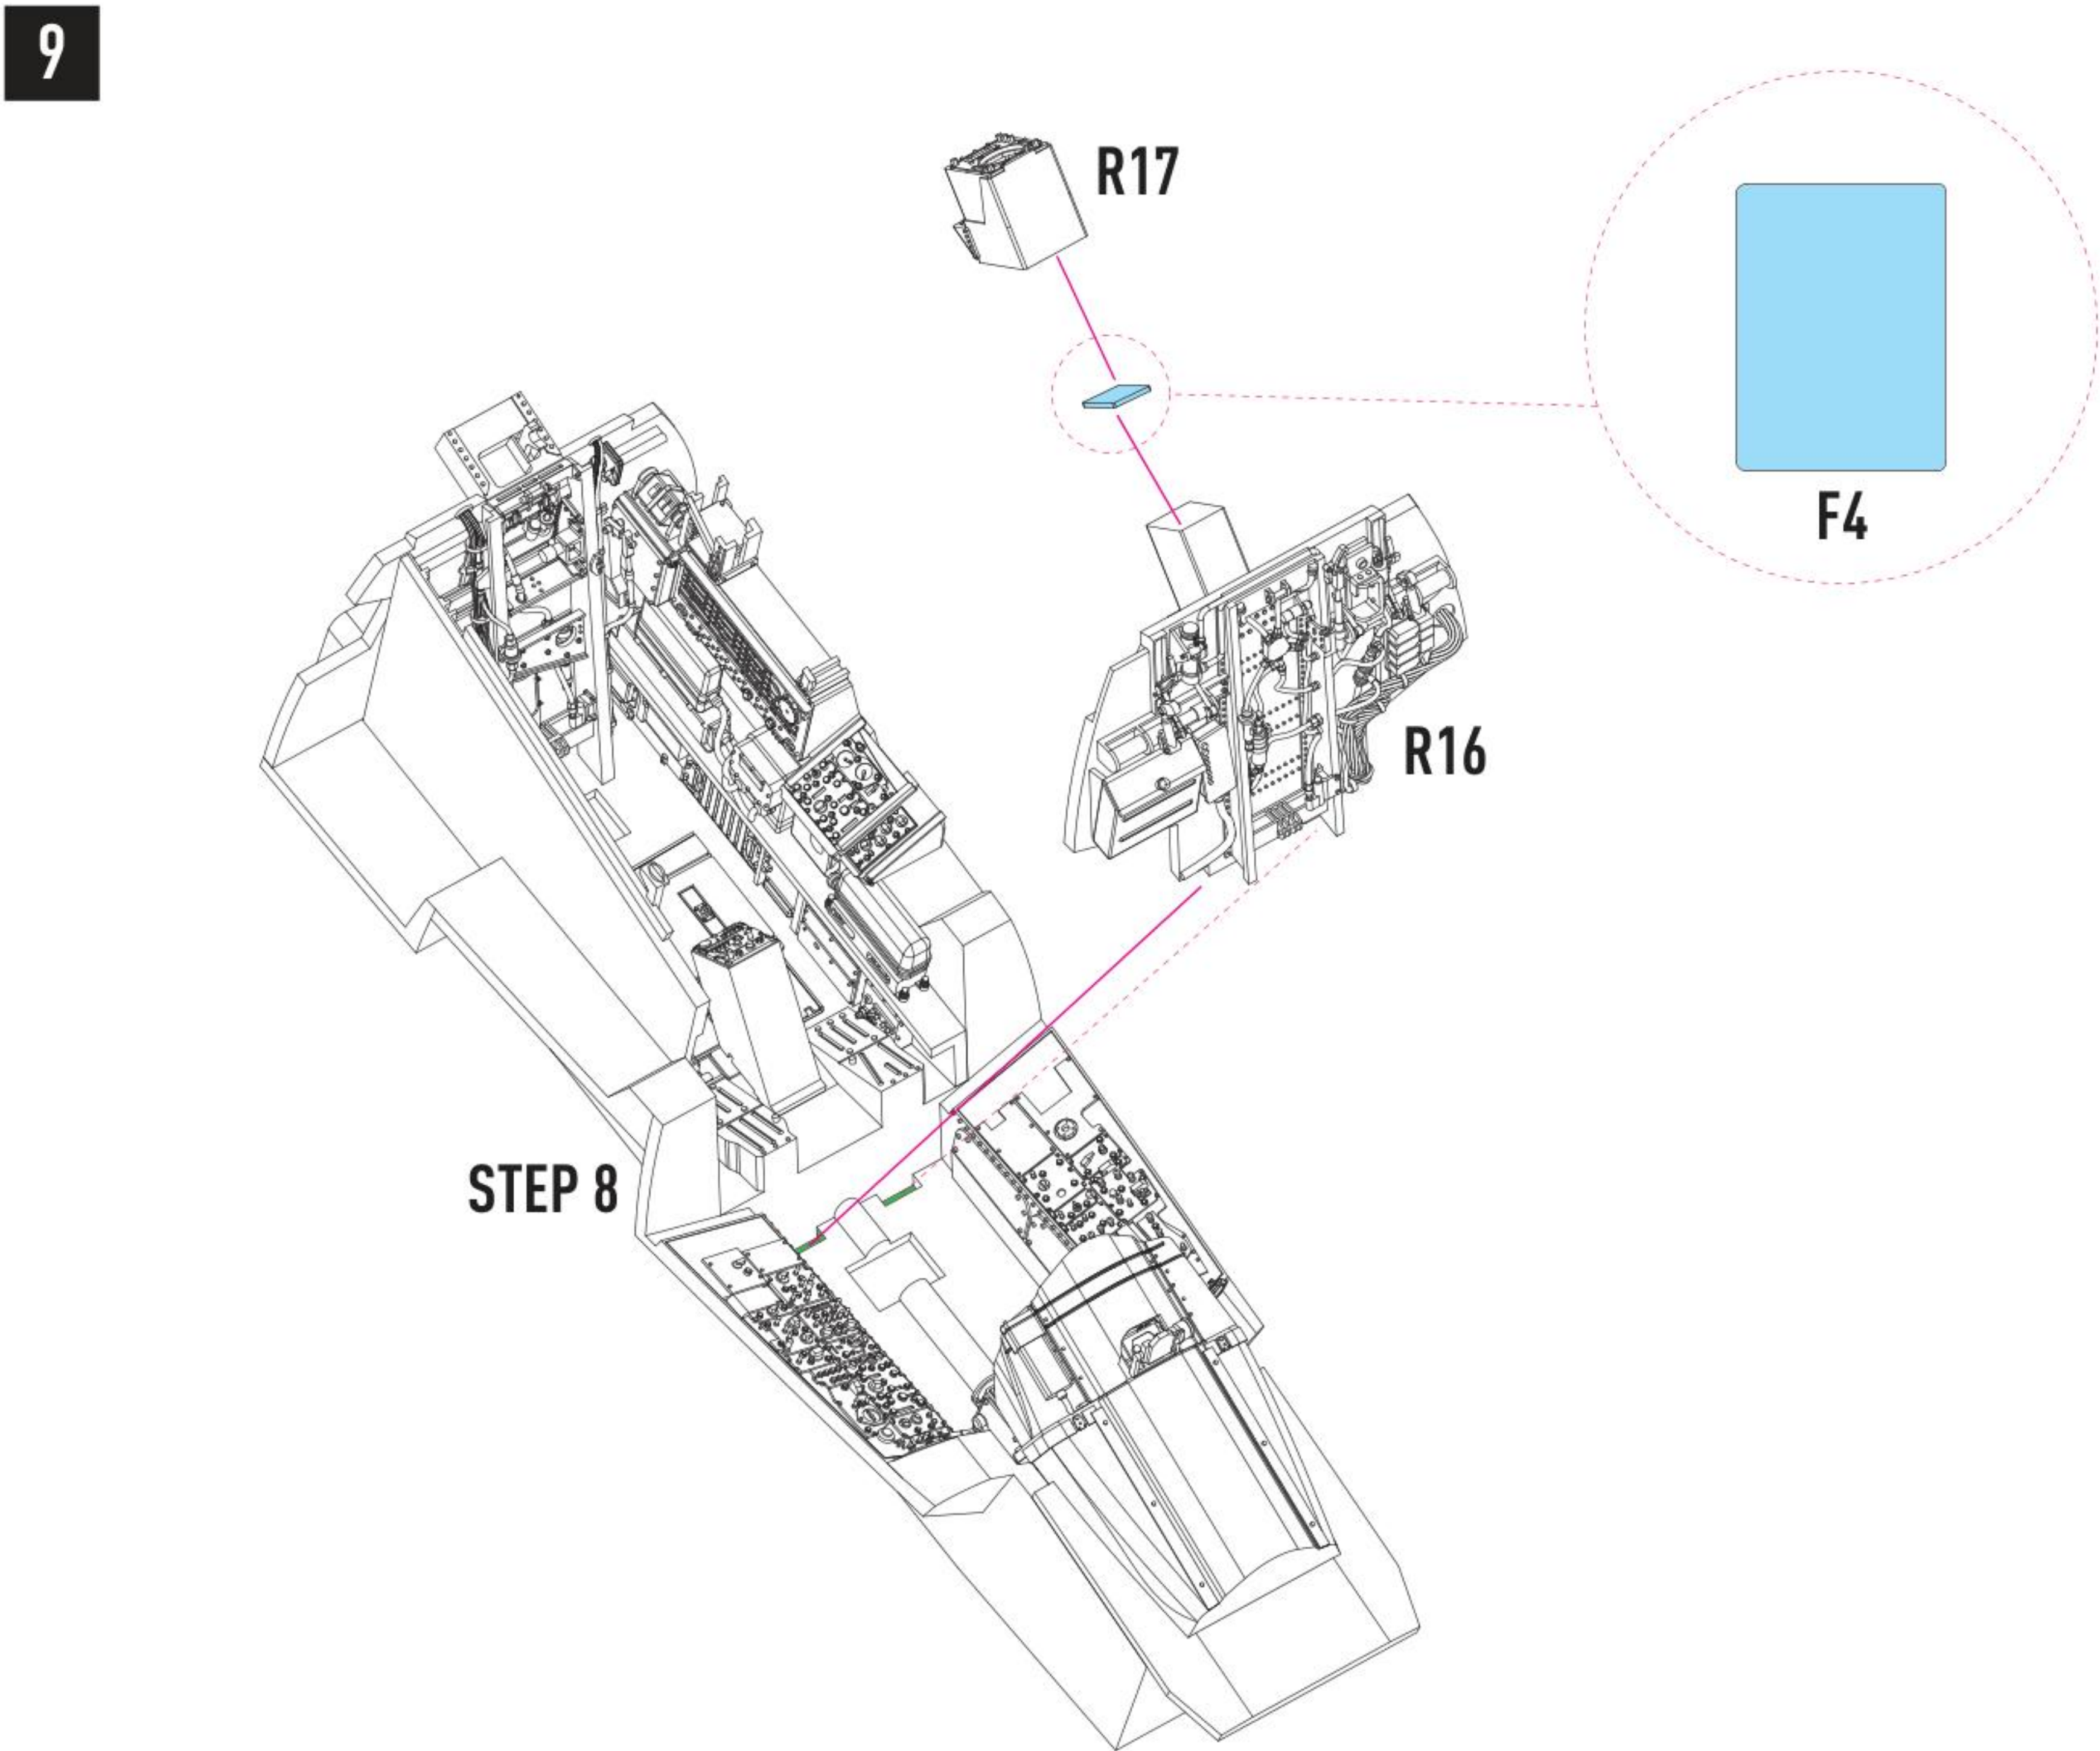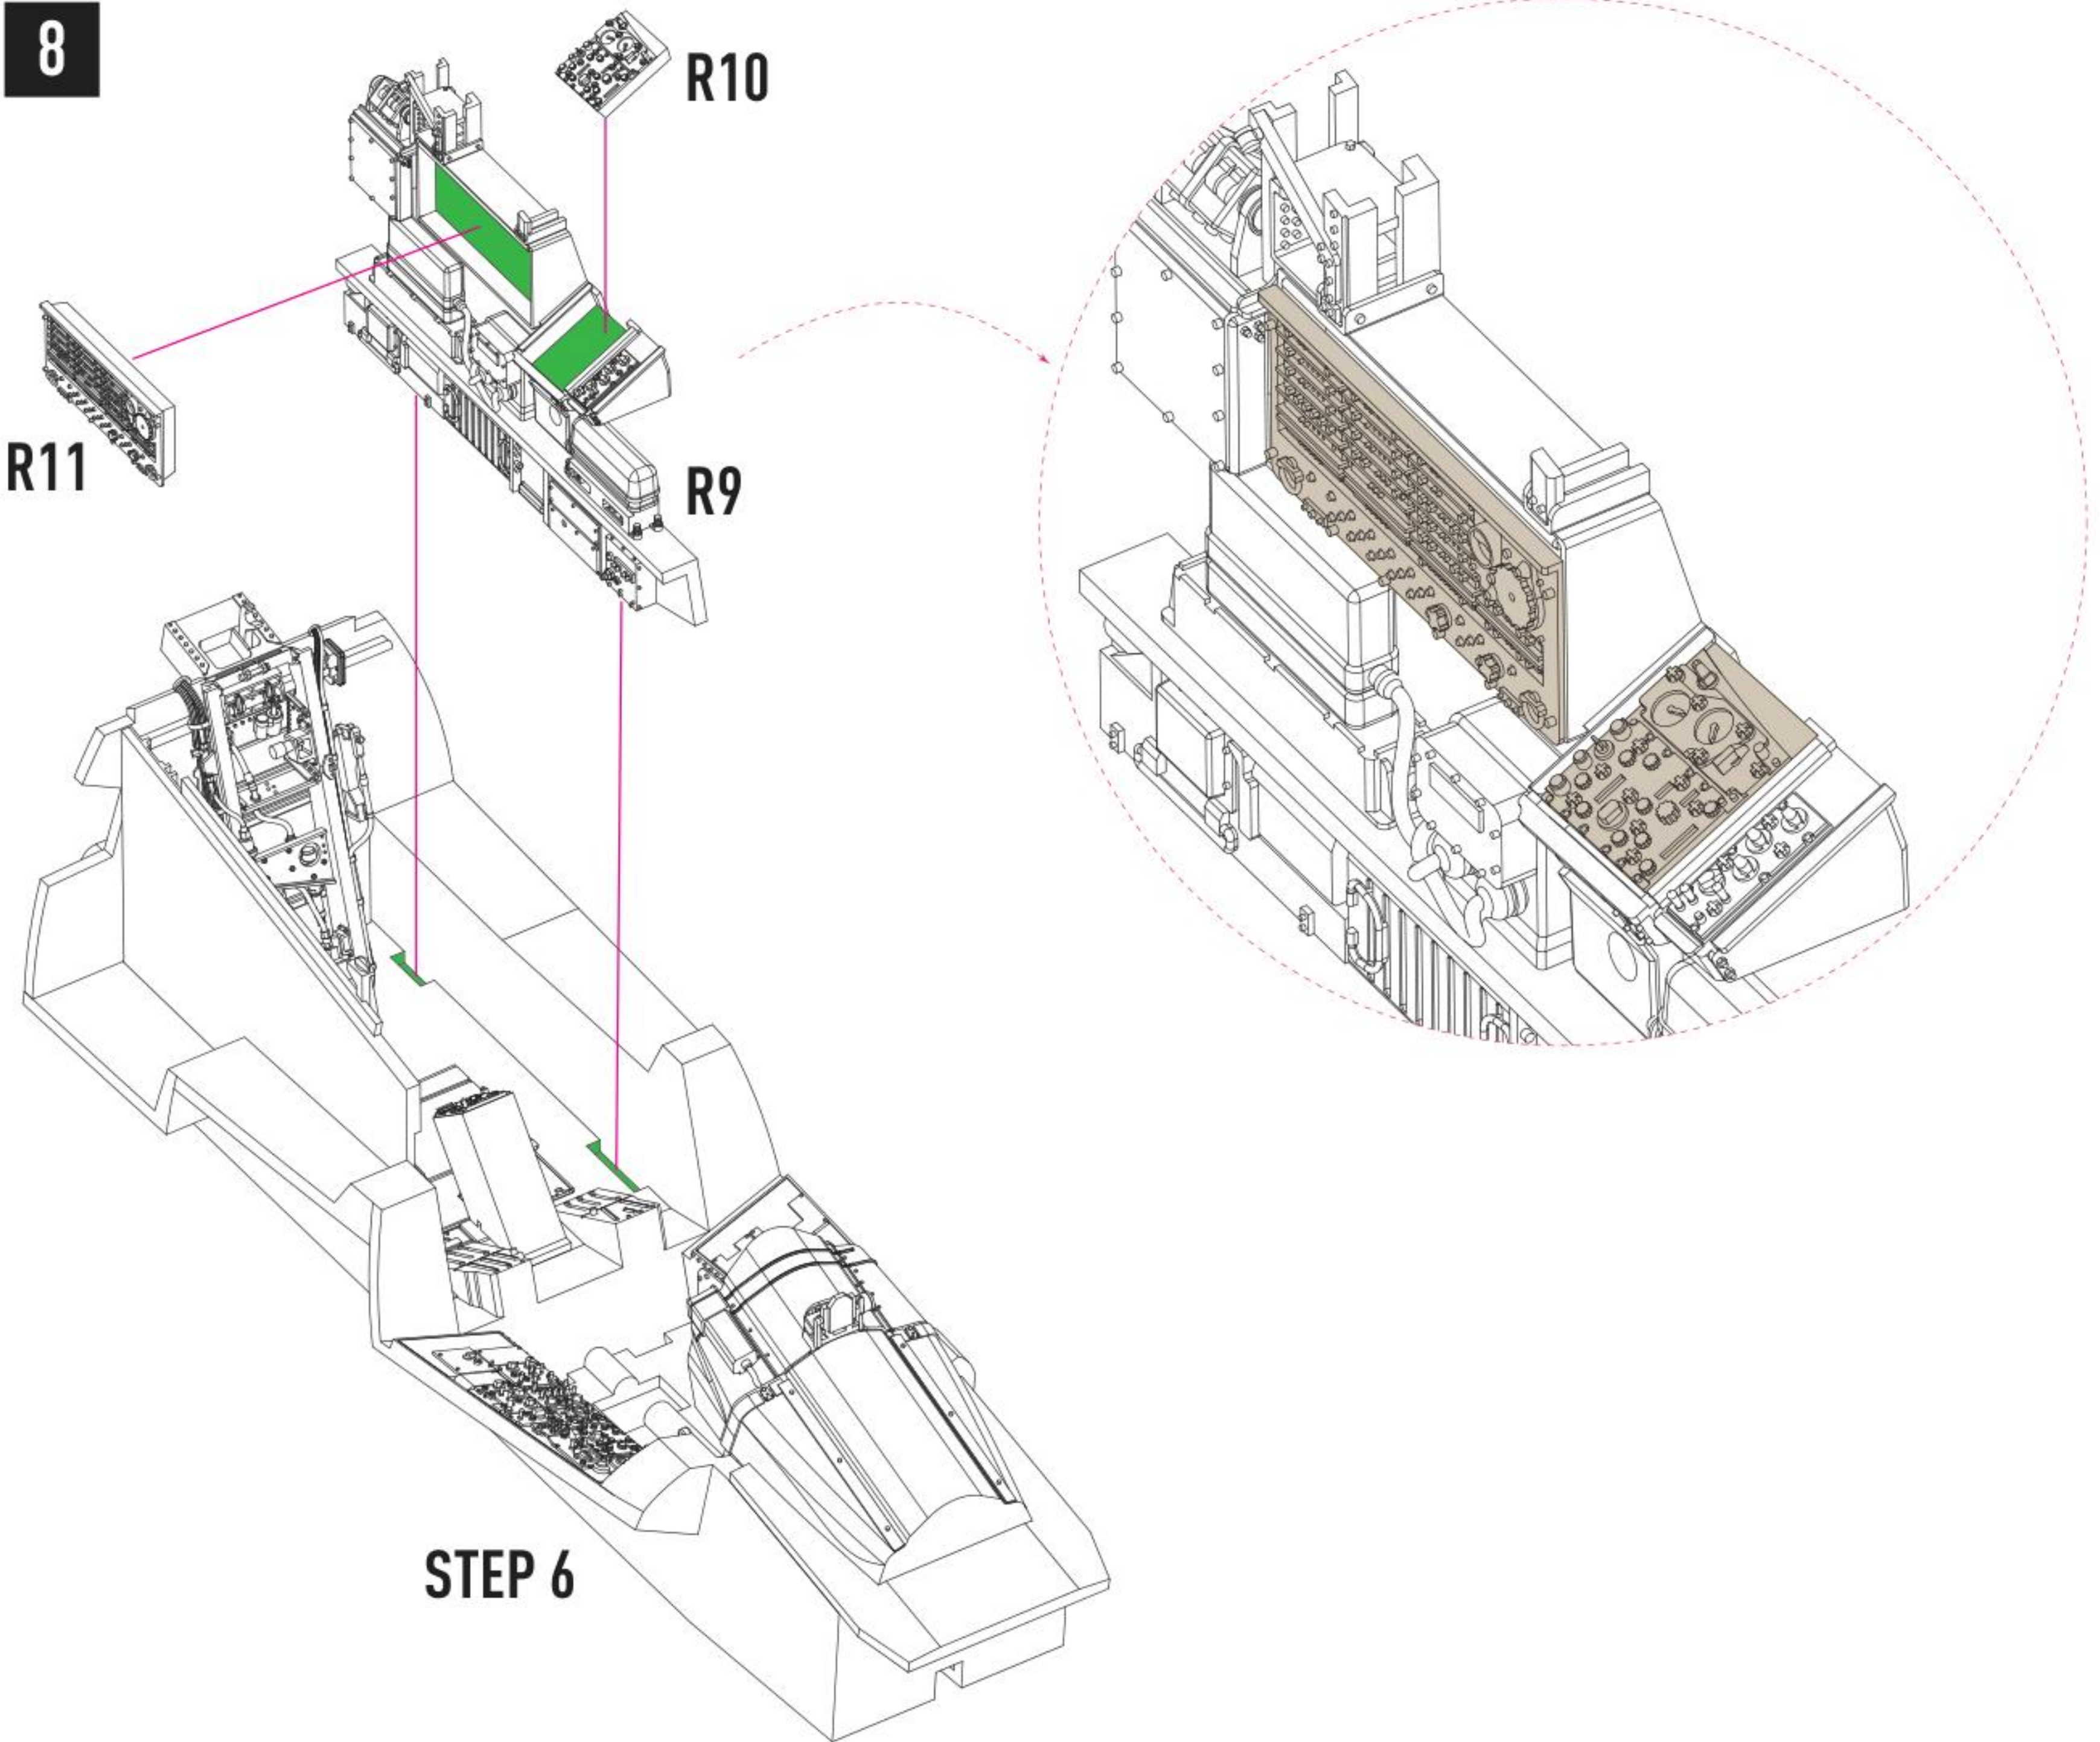





10

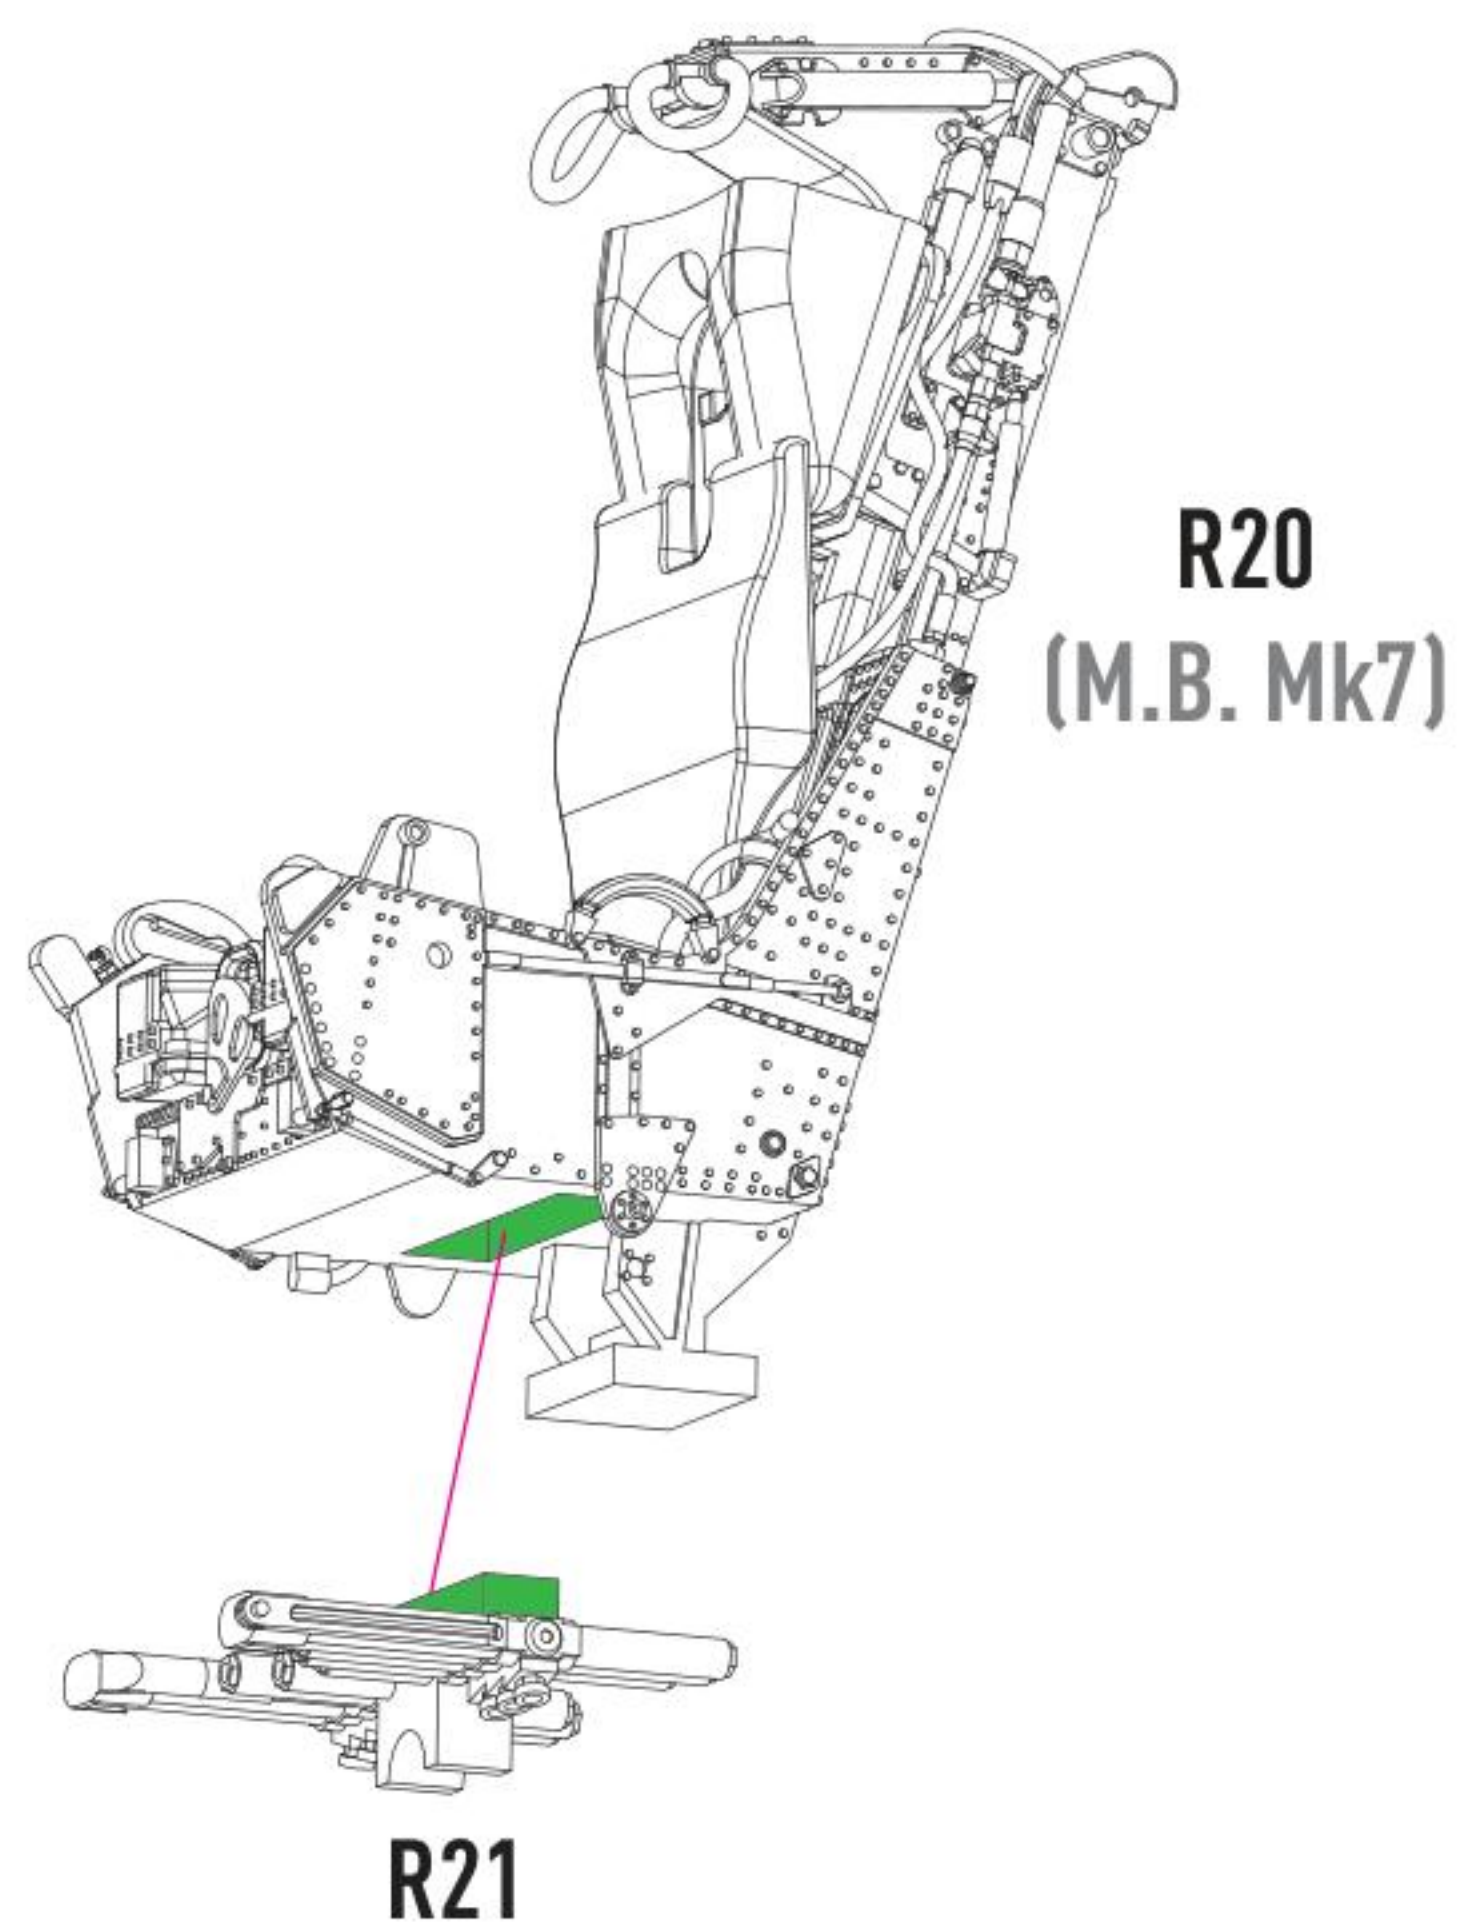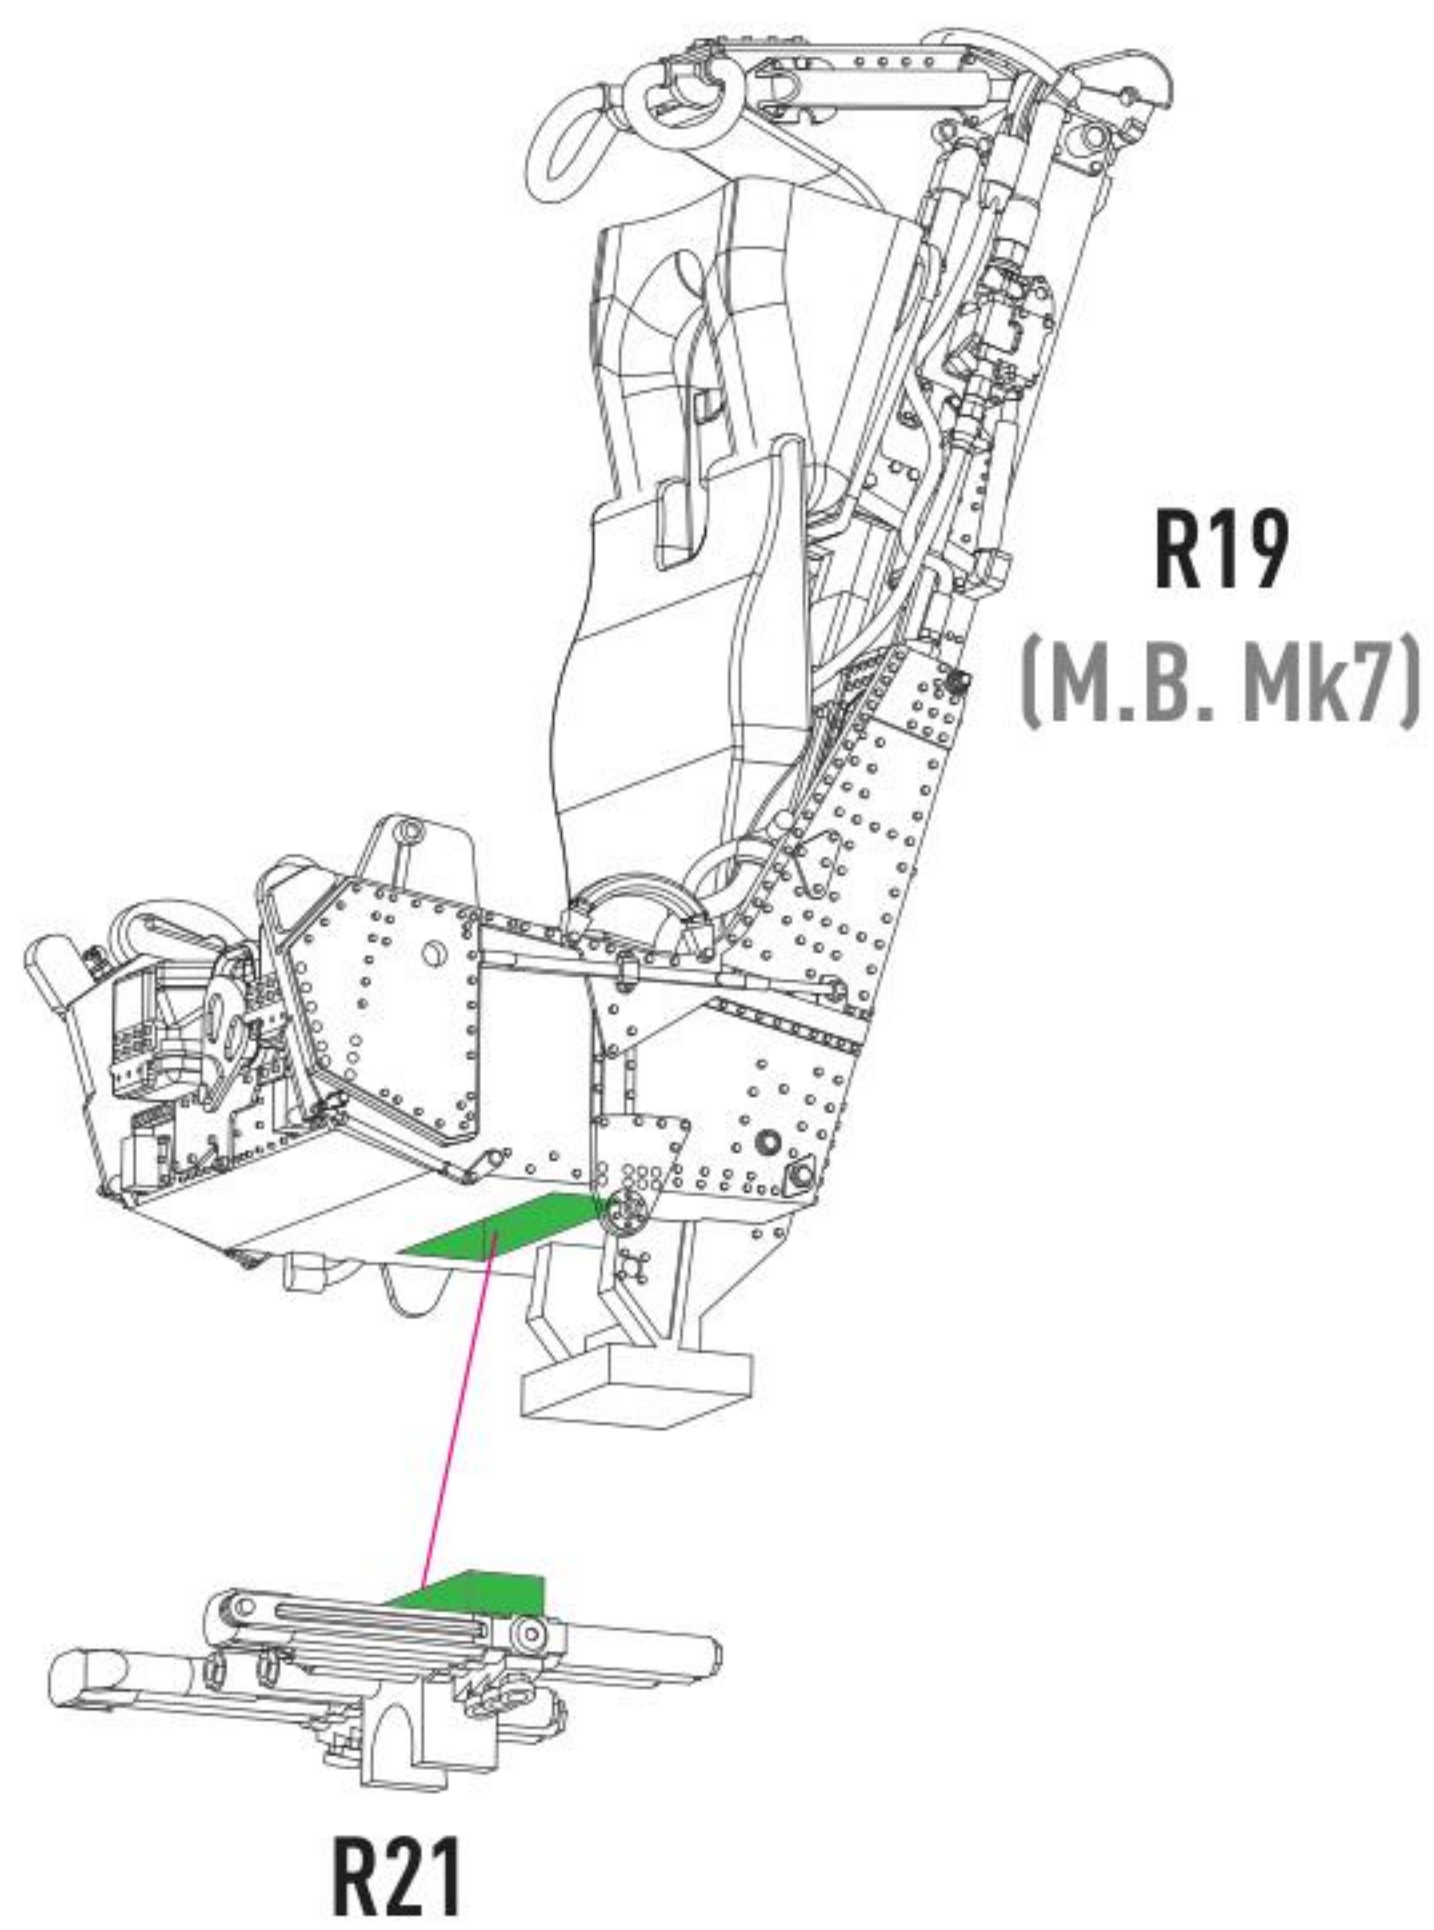

11


R25 (M.B. Mk-H5)

STEP 10 (M.B. Mk7)

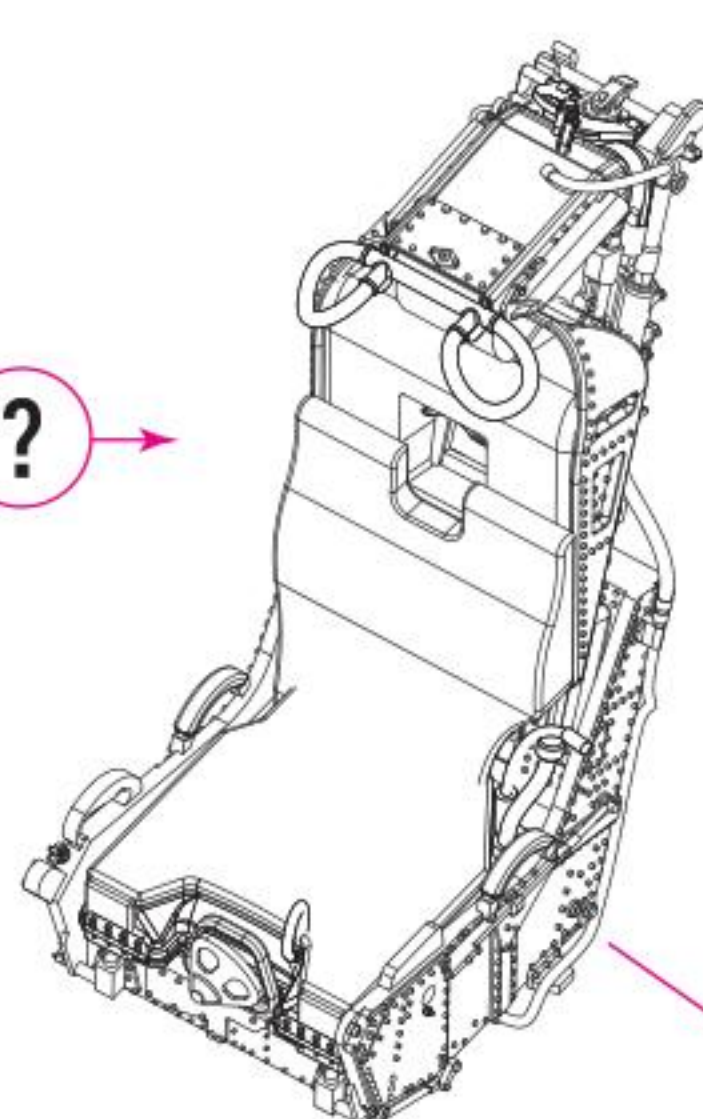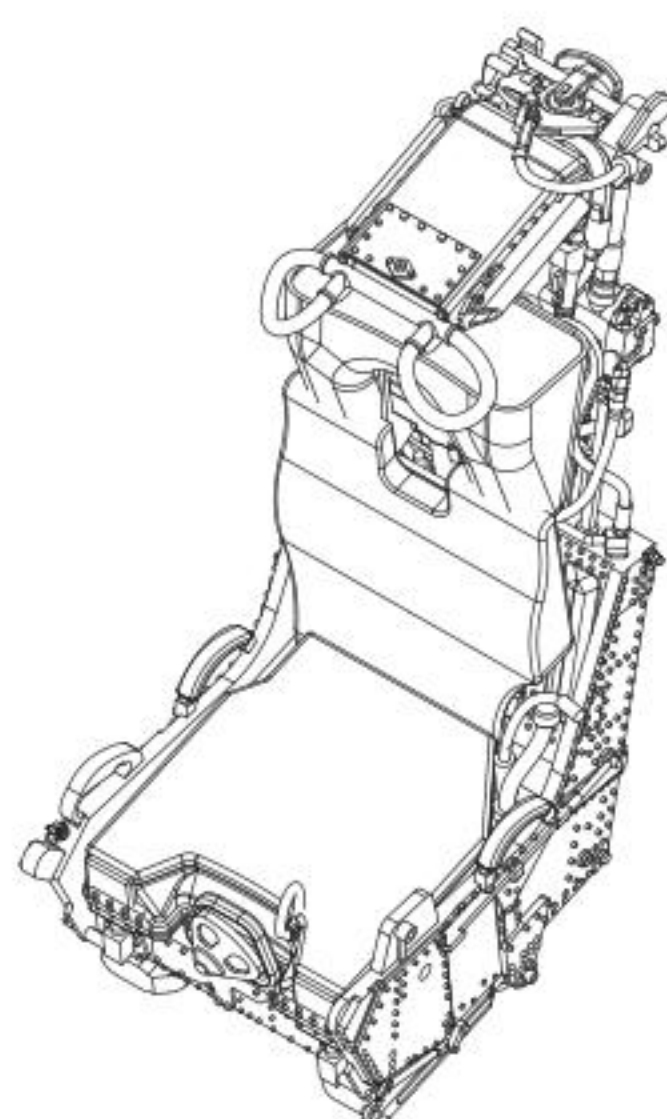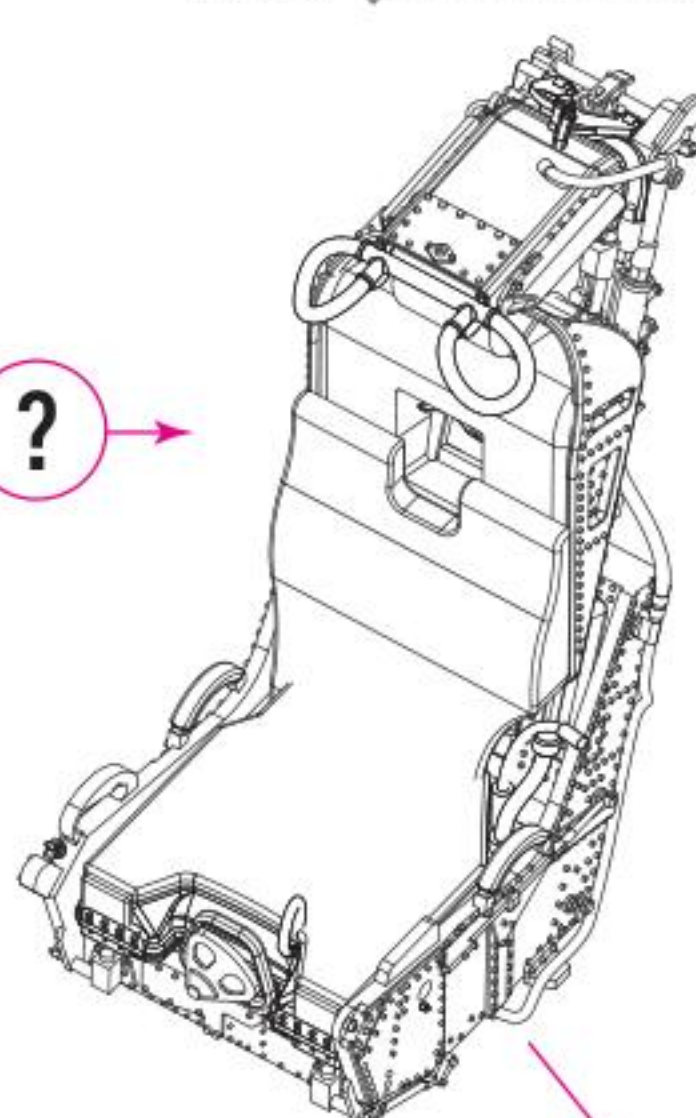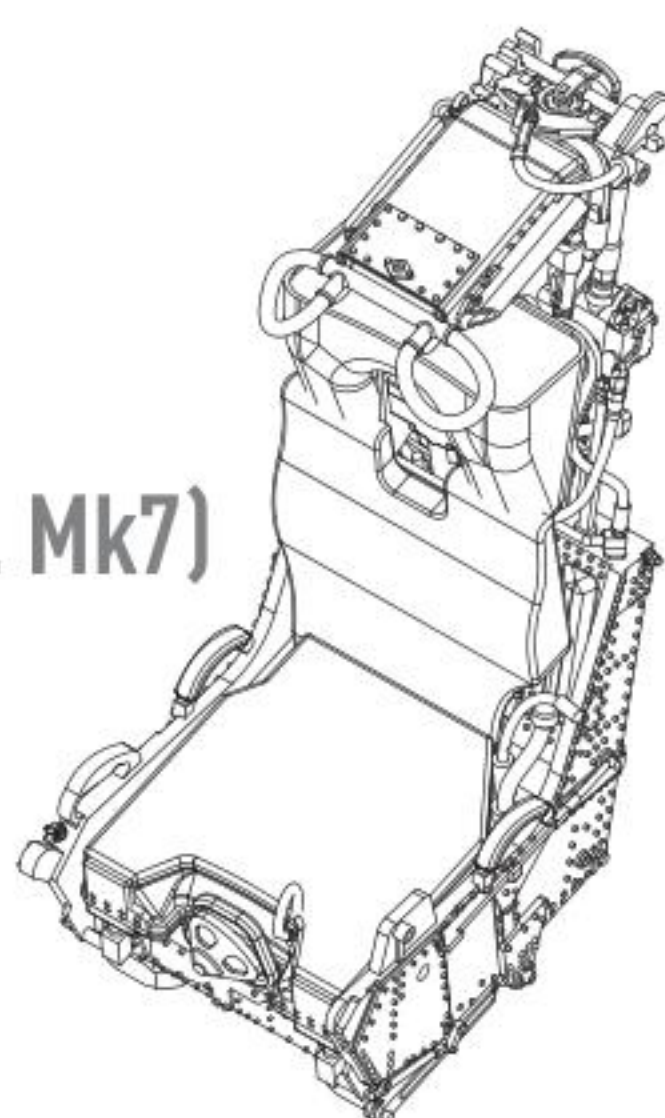


STEP 10 (M.B. Mk7)


R24 (M.B. Mk-H5)

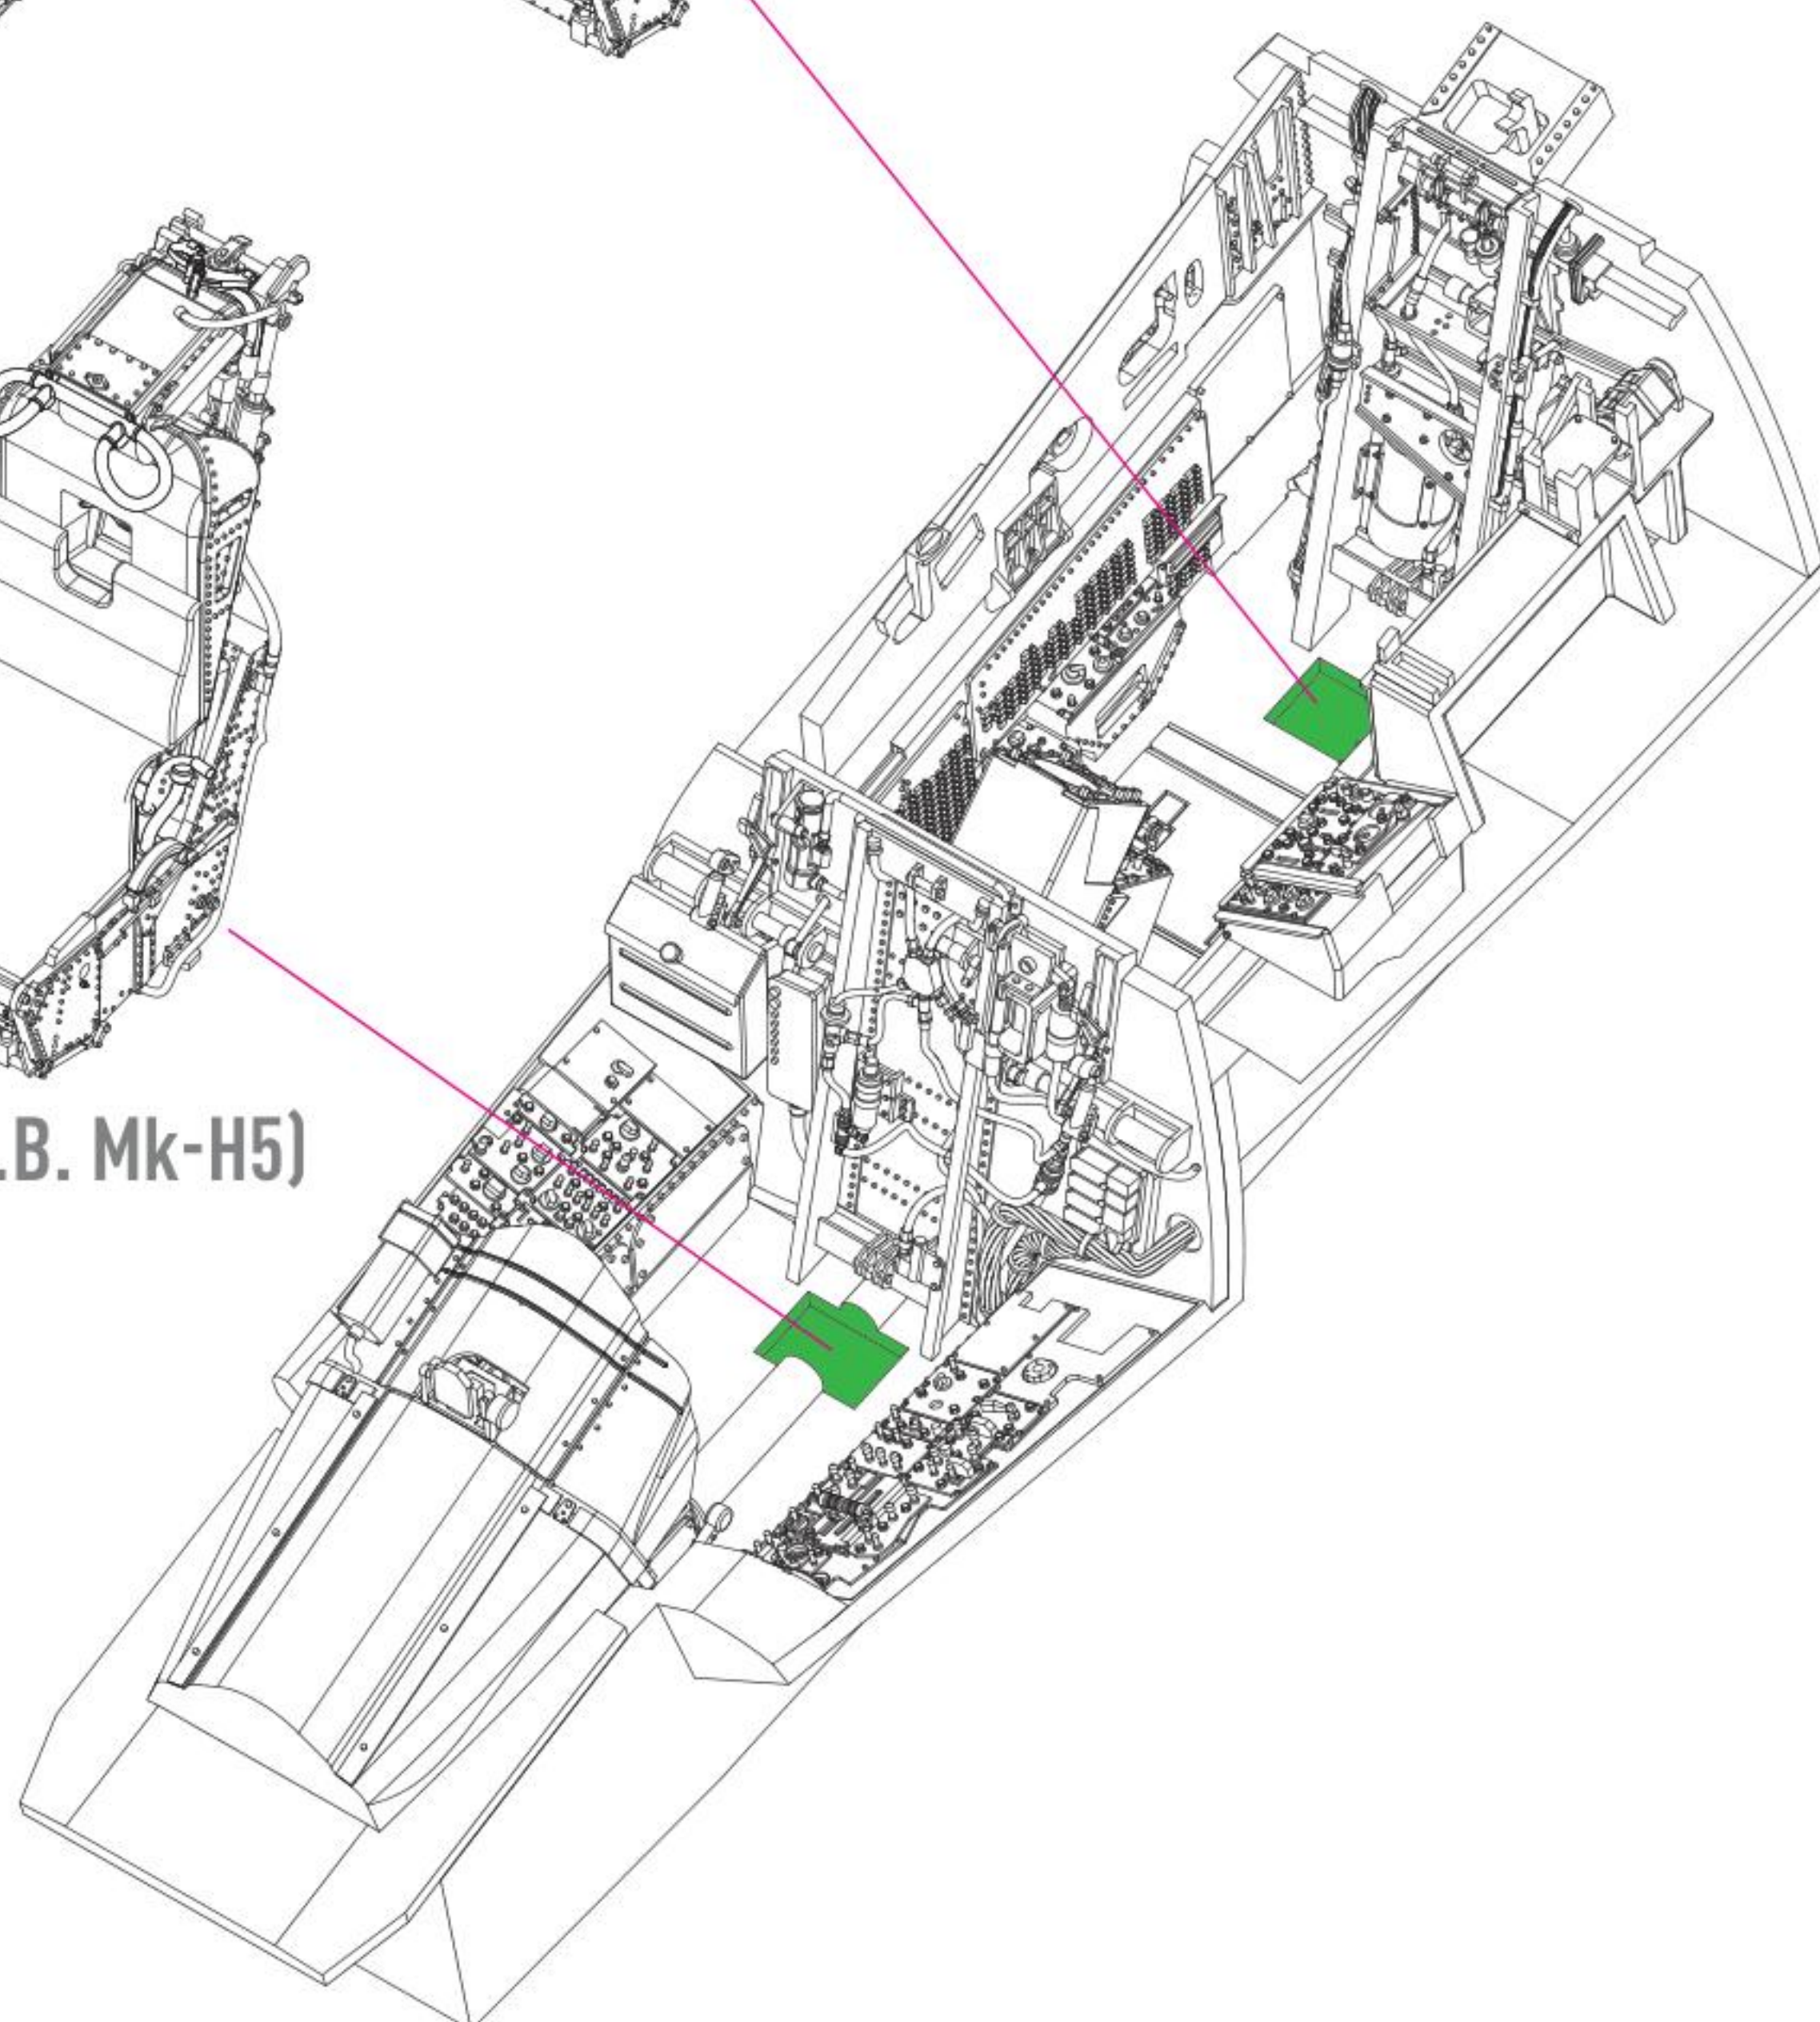


12

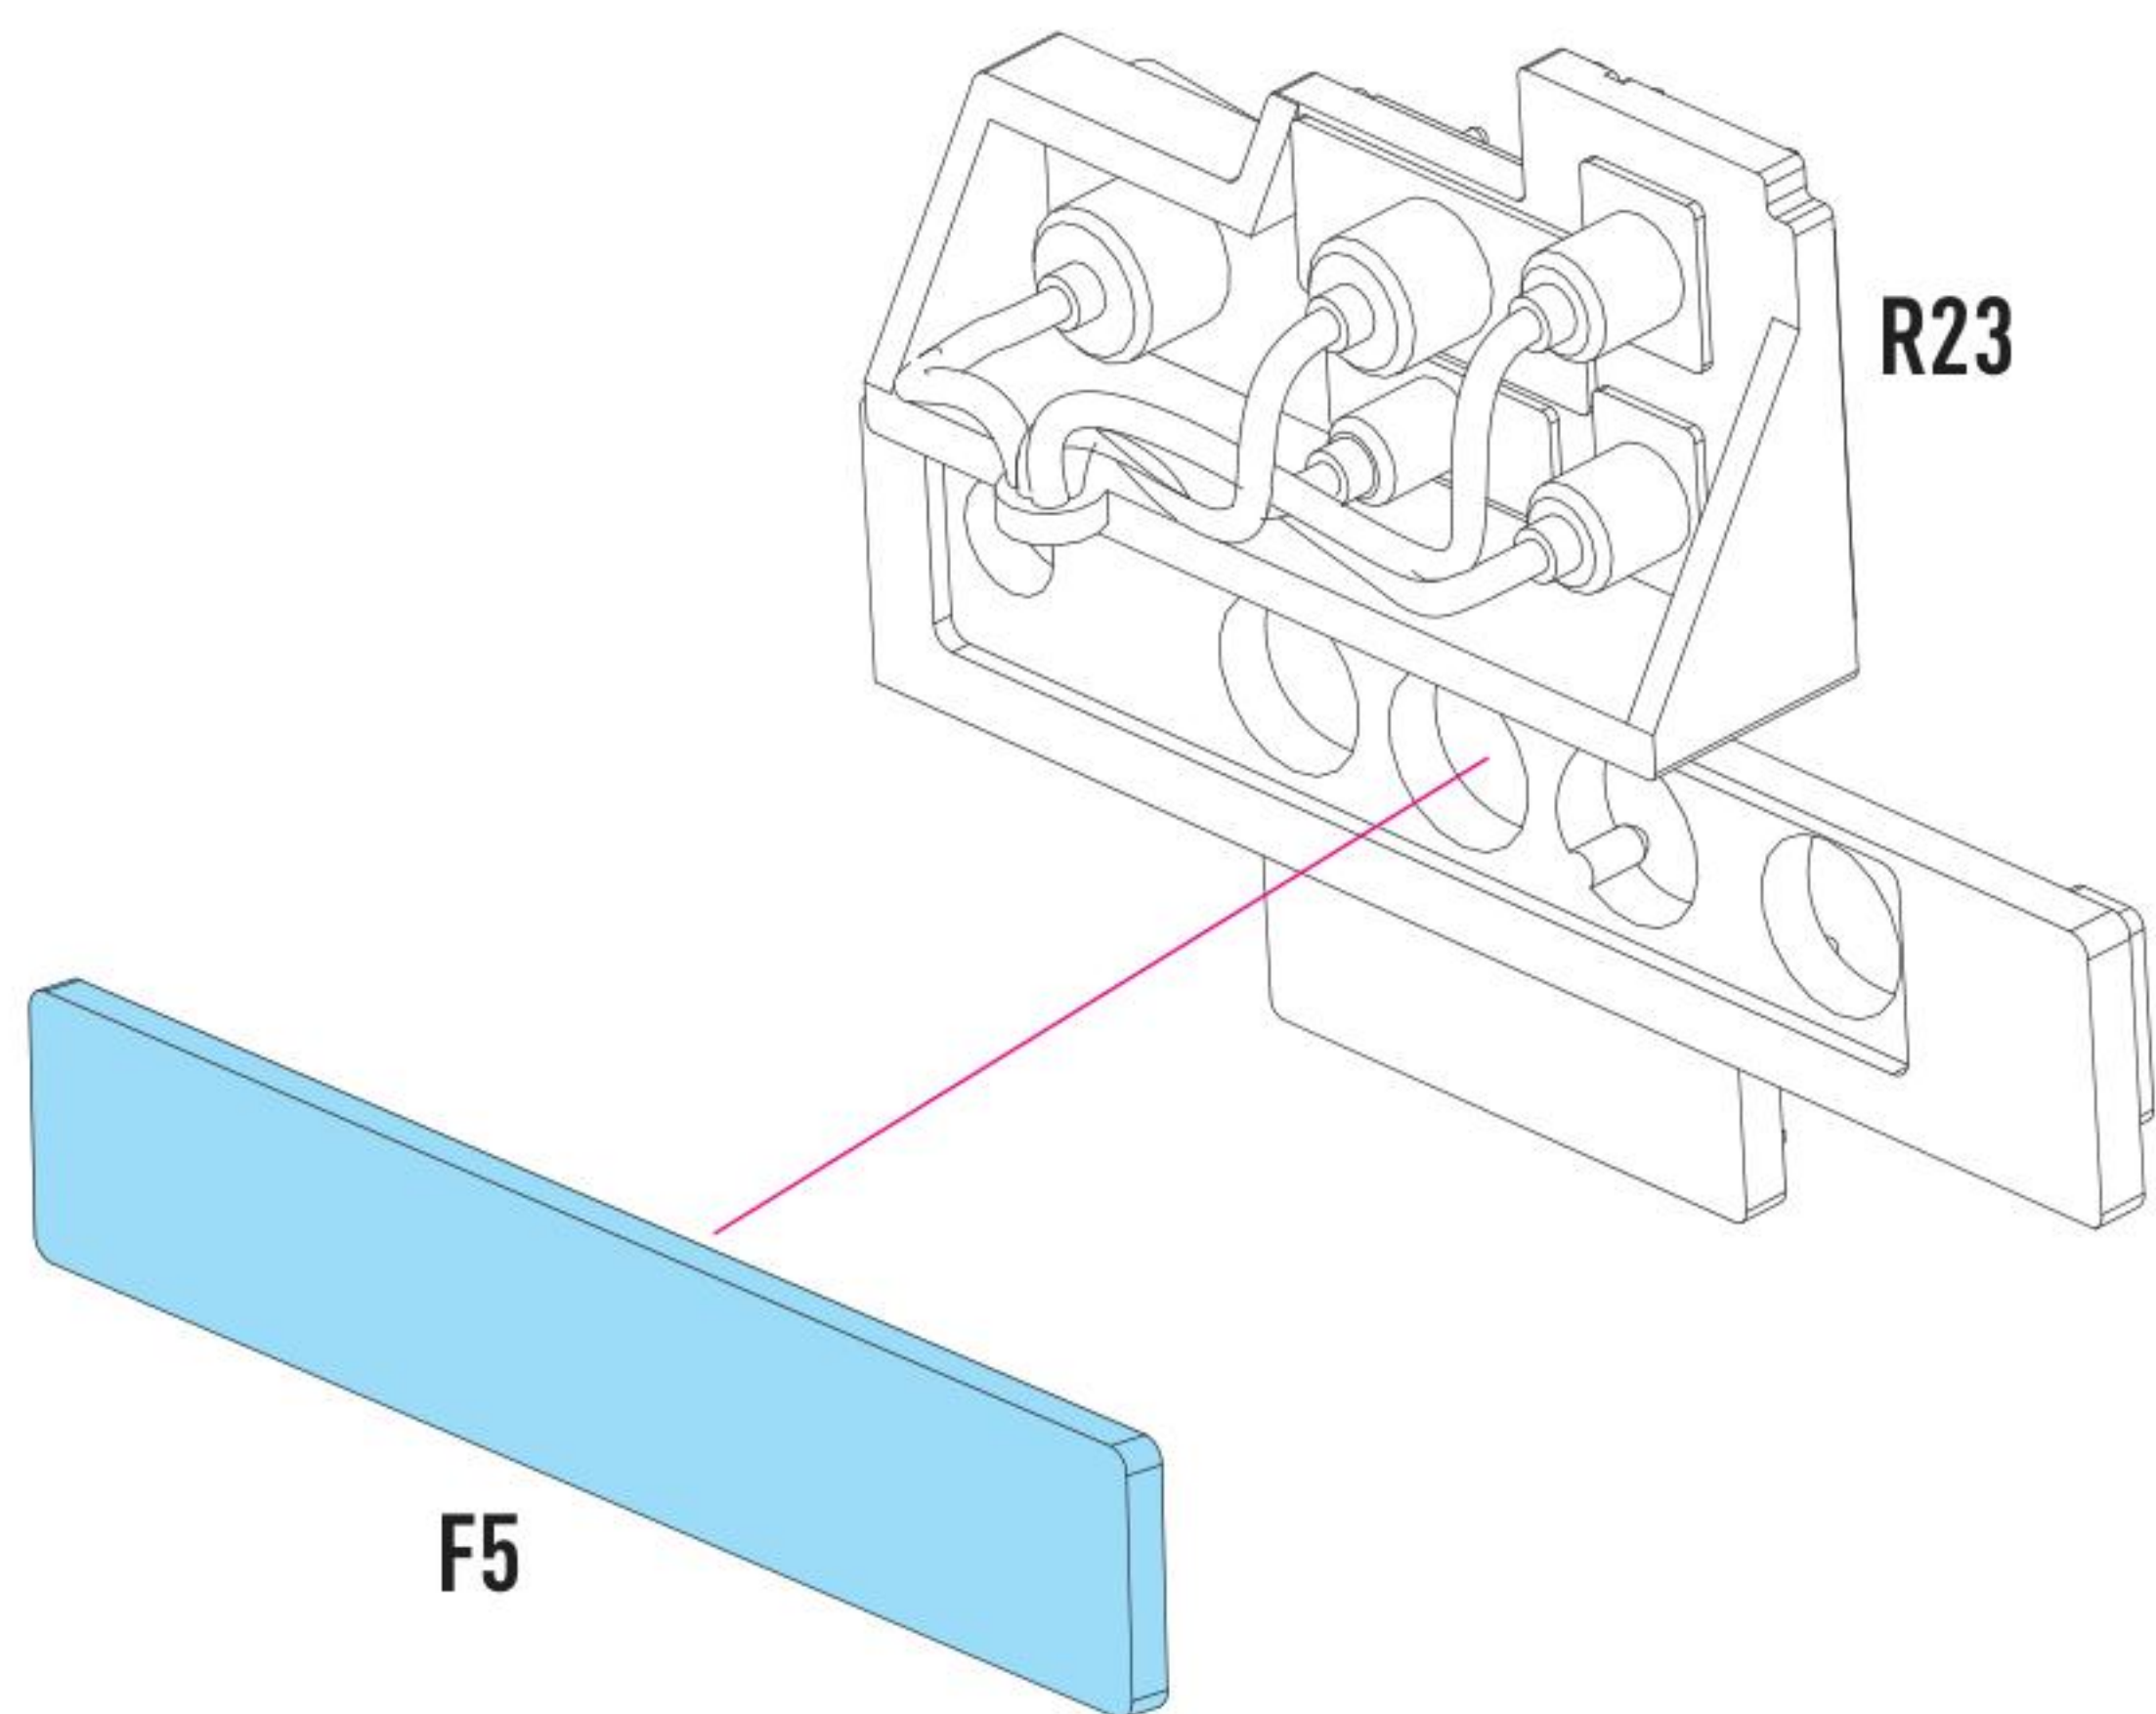



13

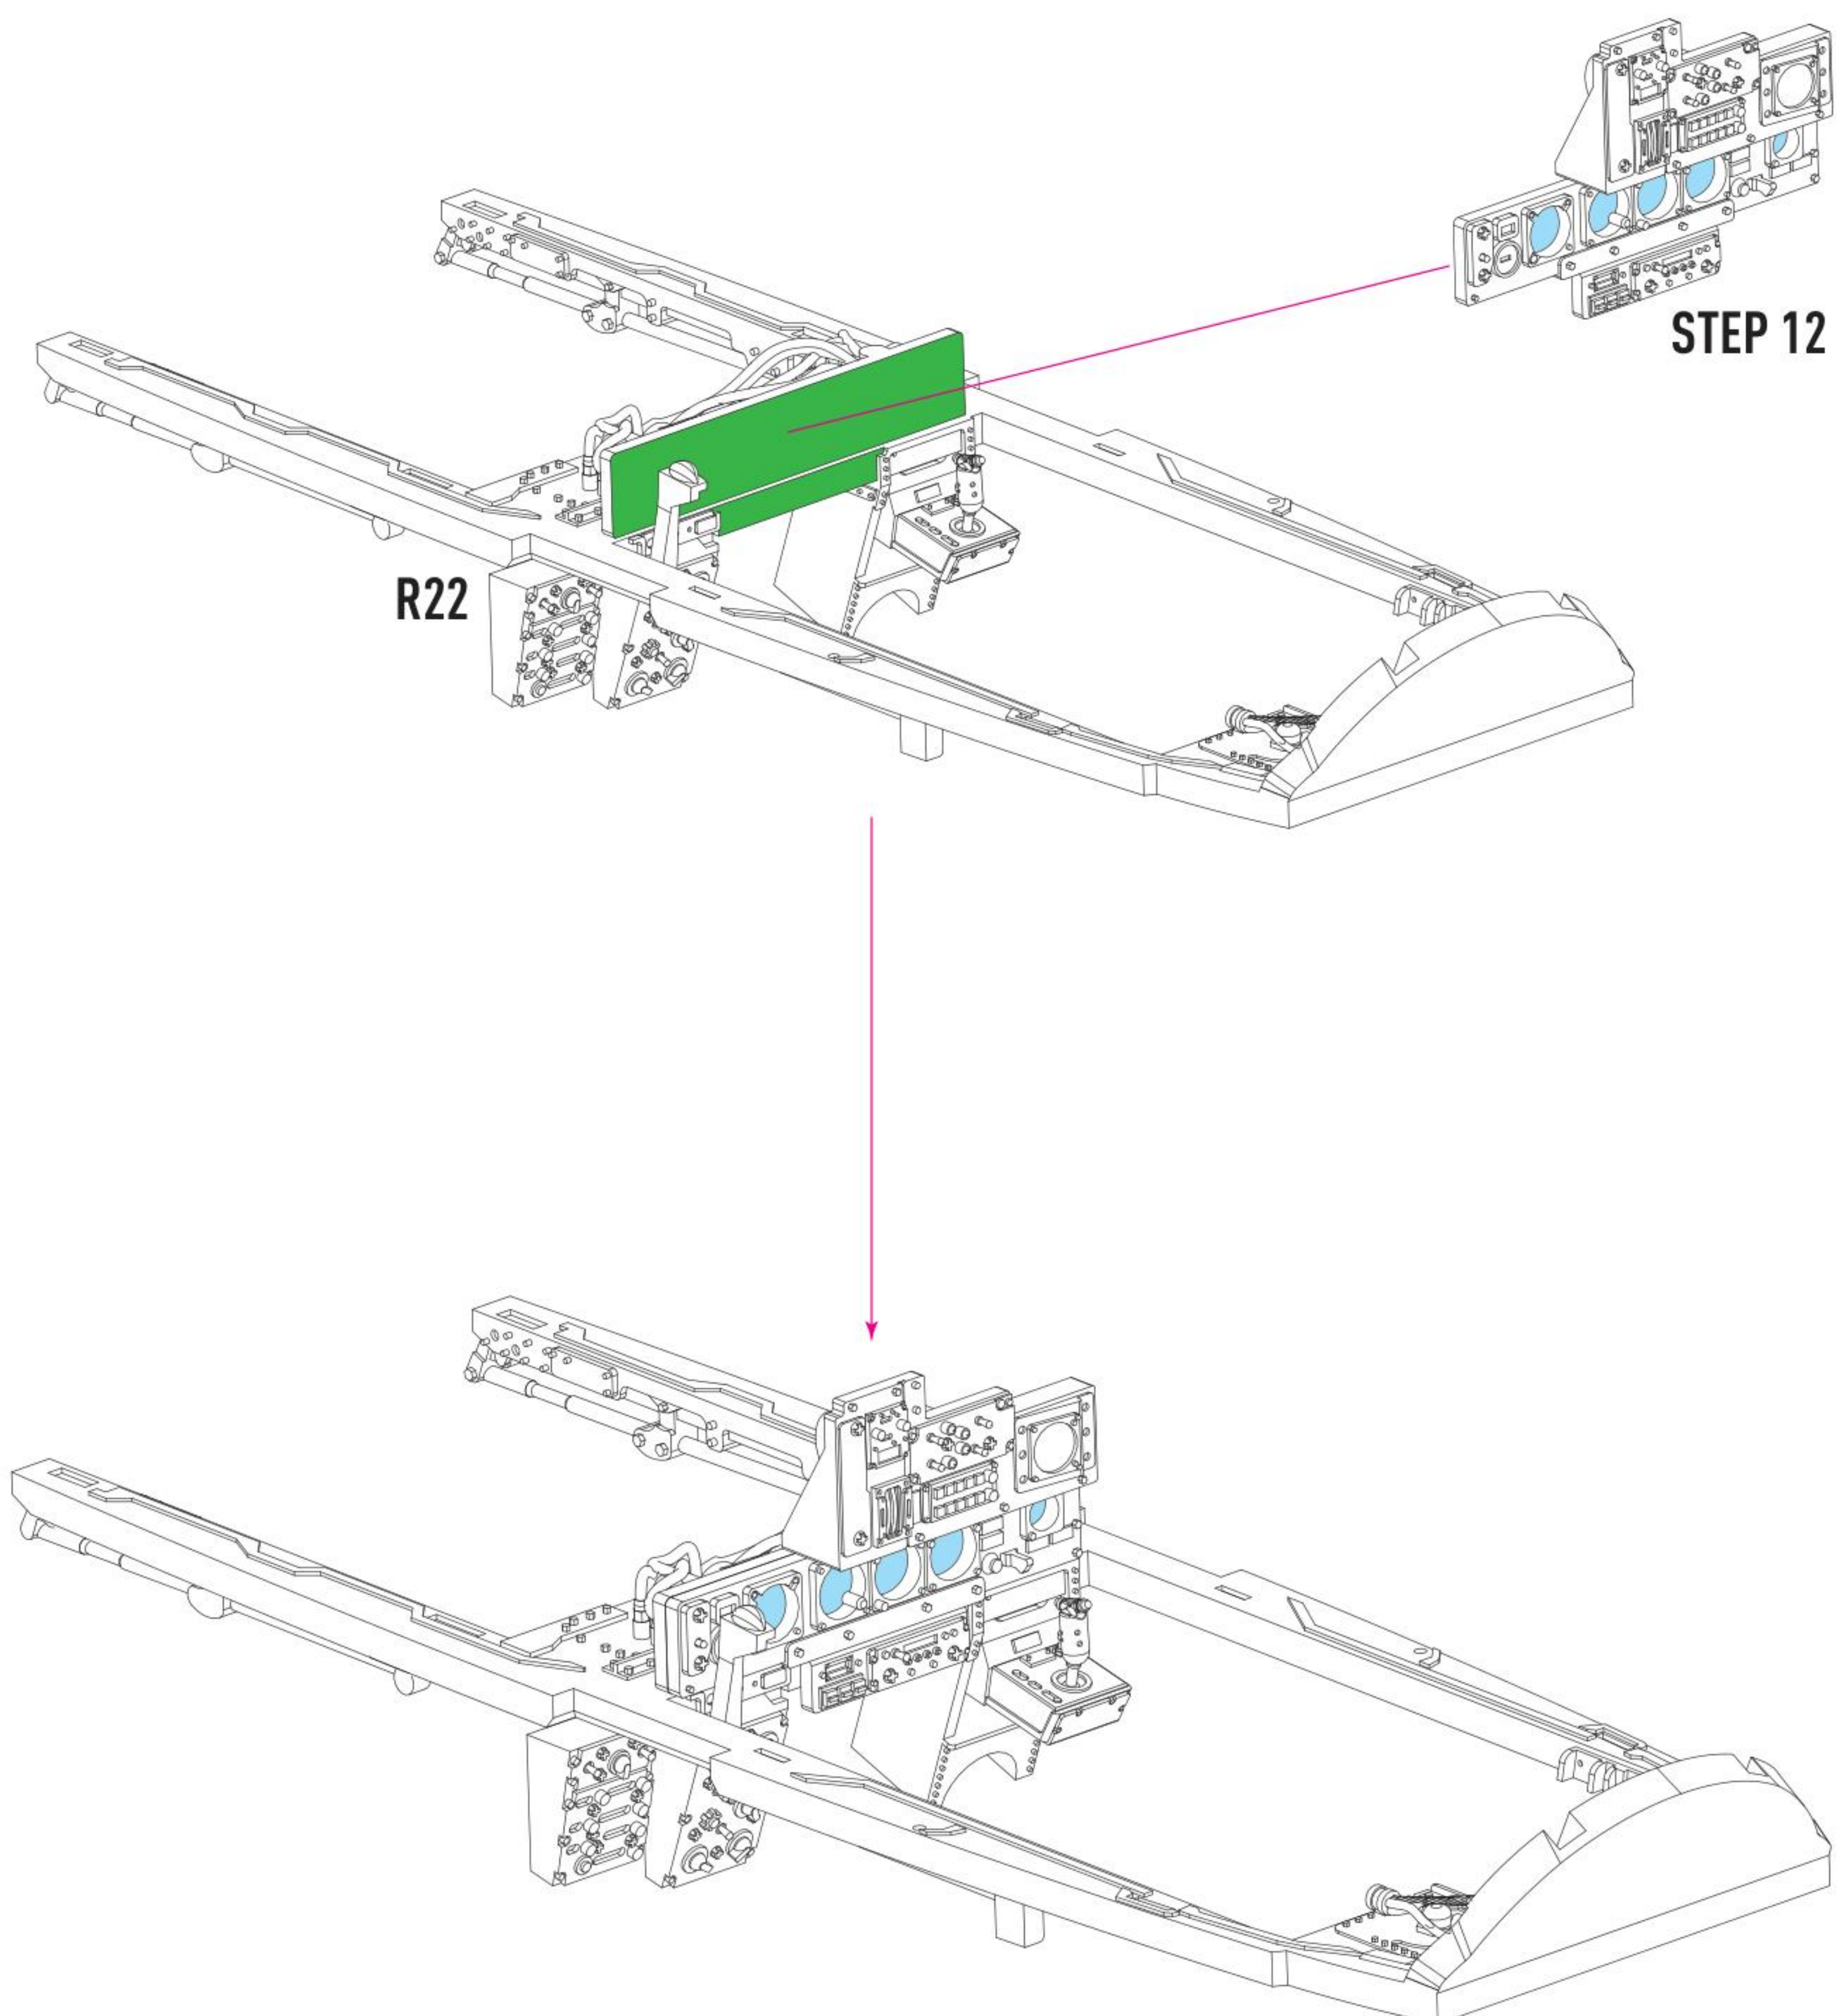


STEP 13

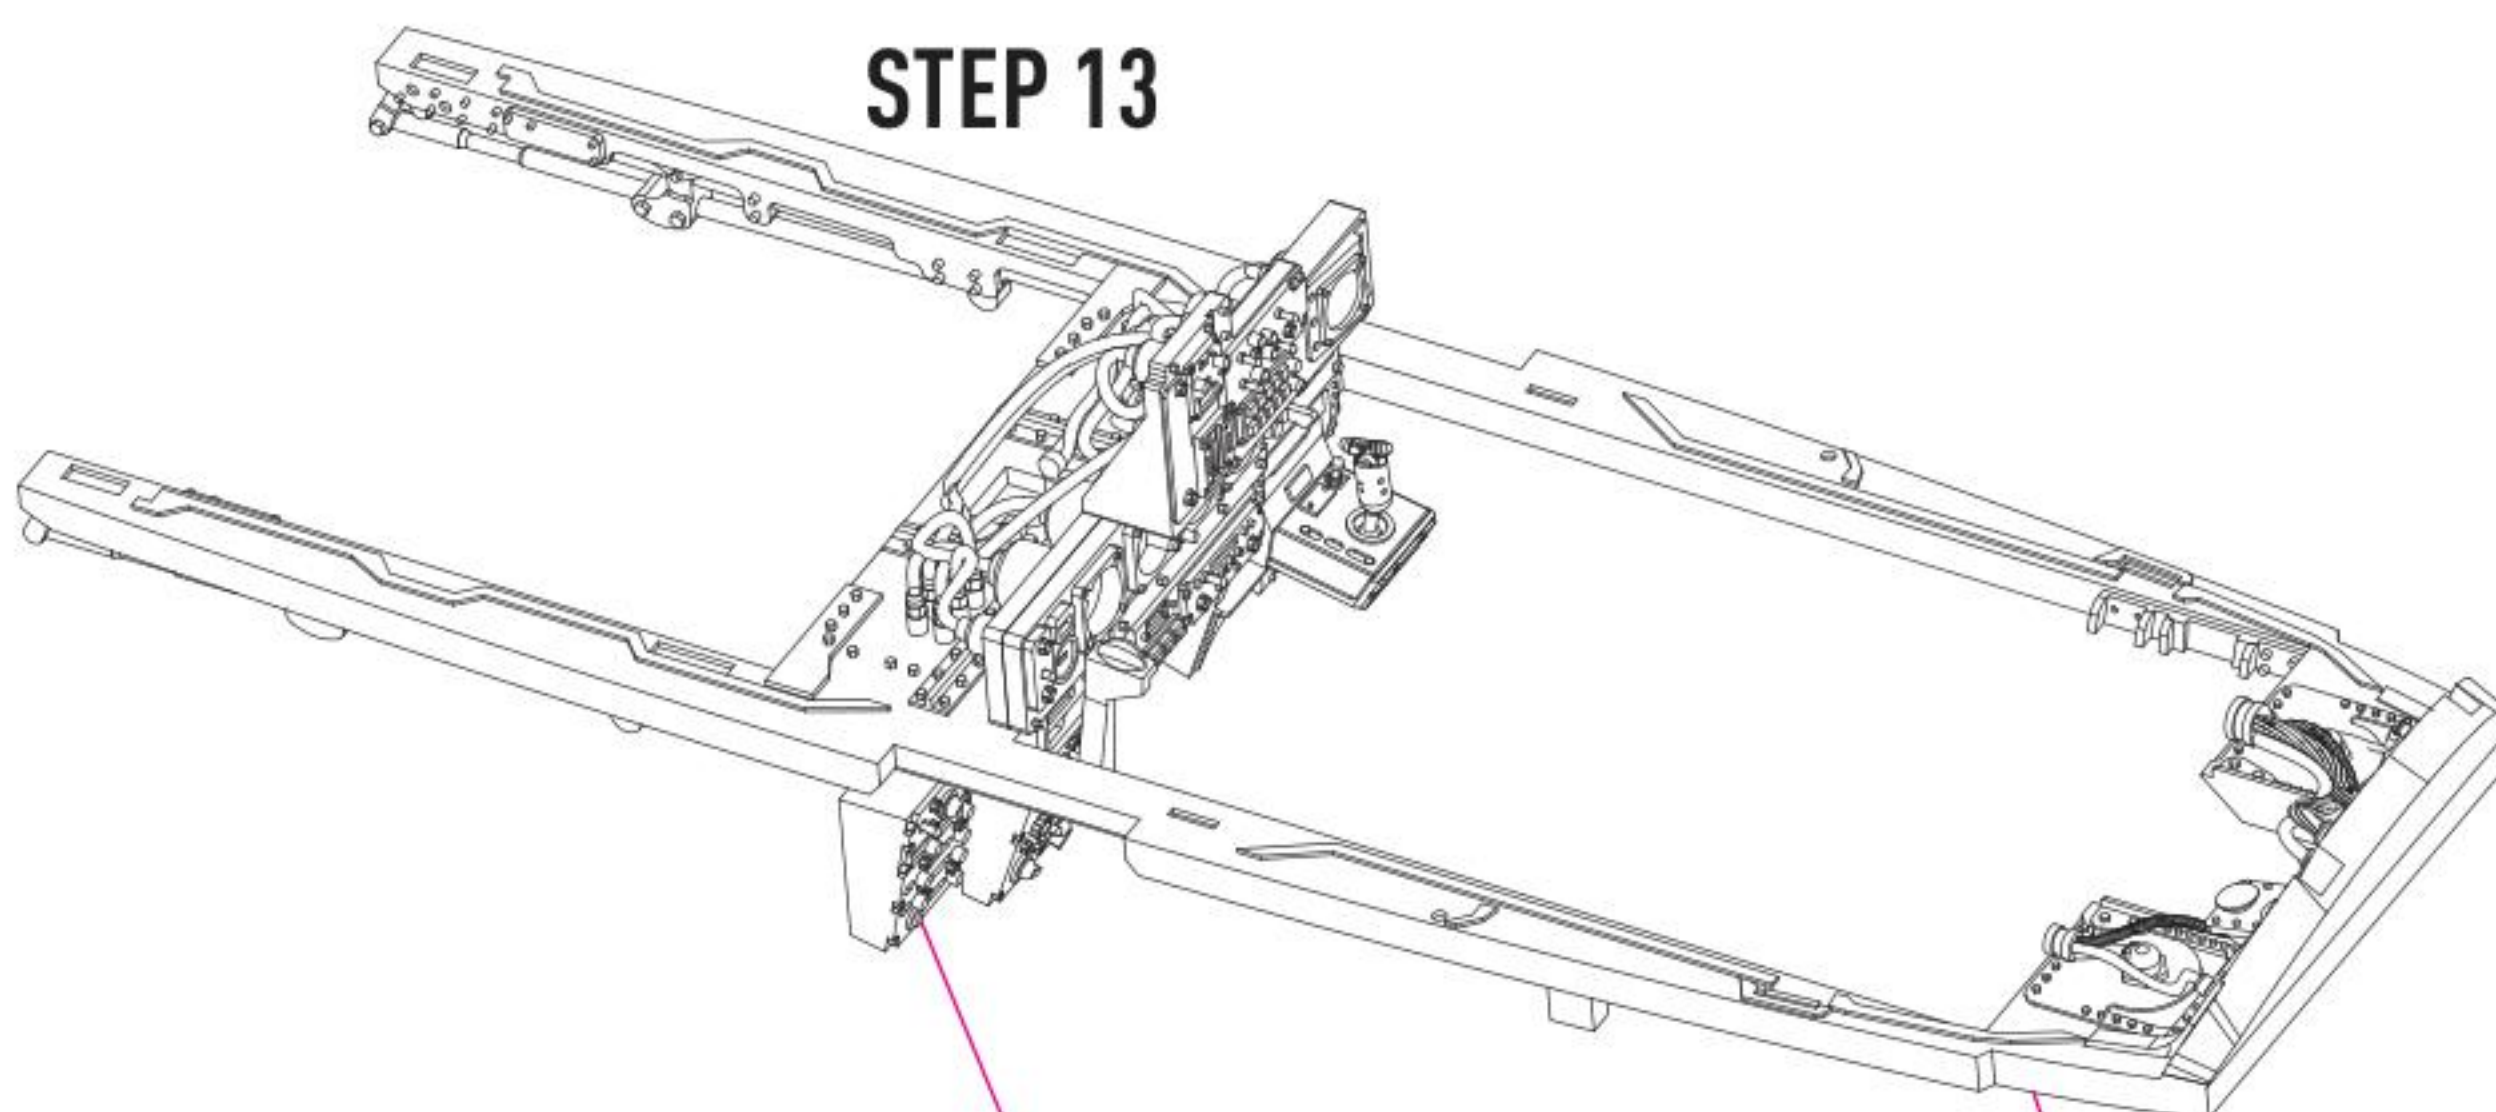


STEP 11

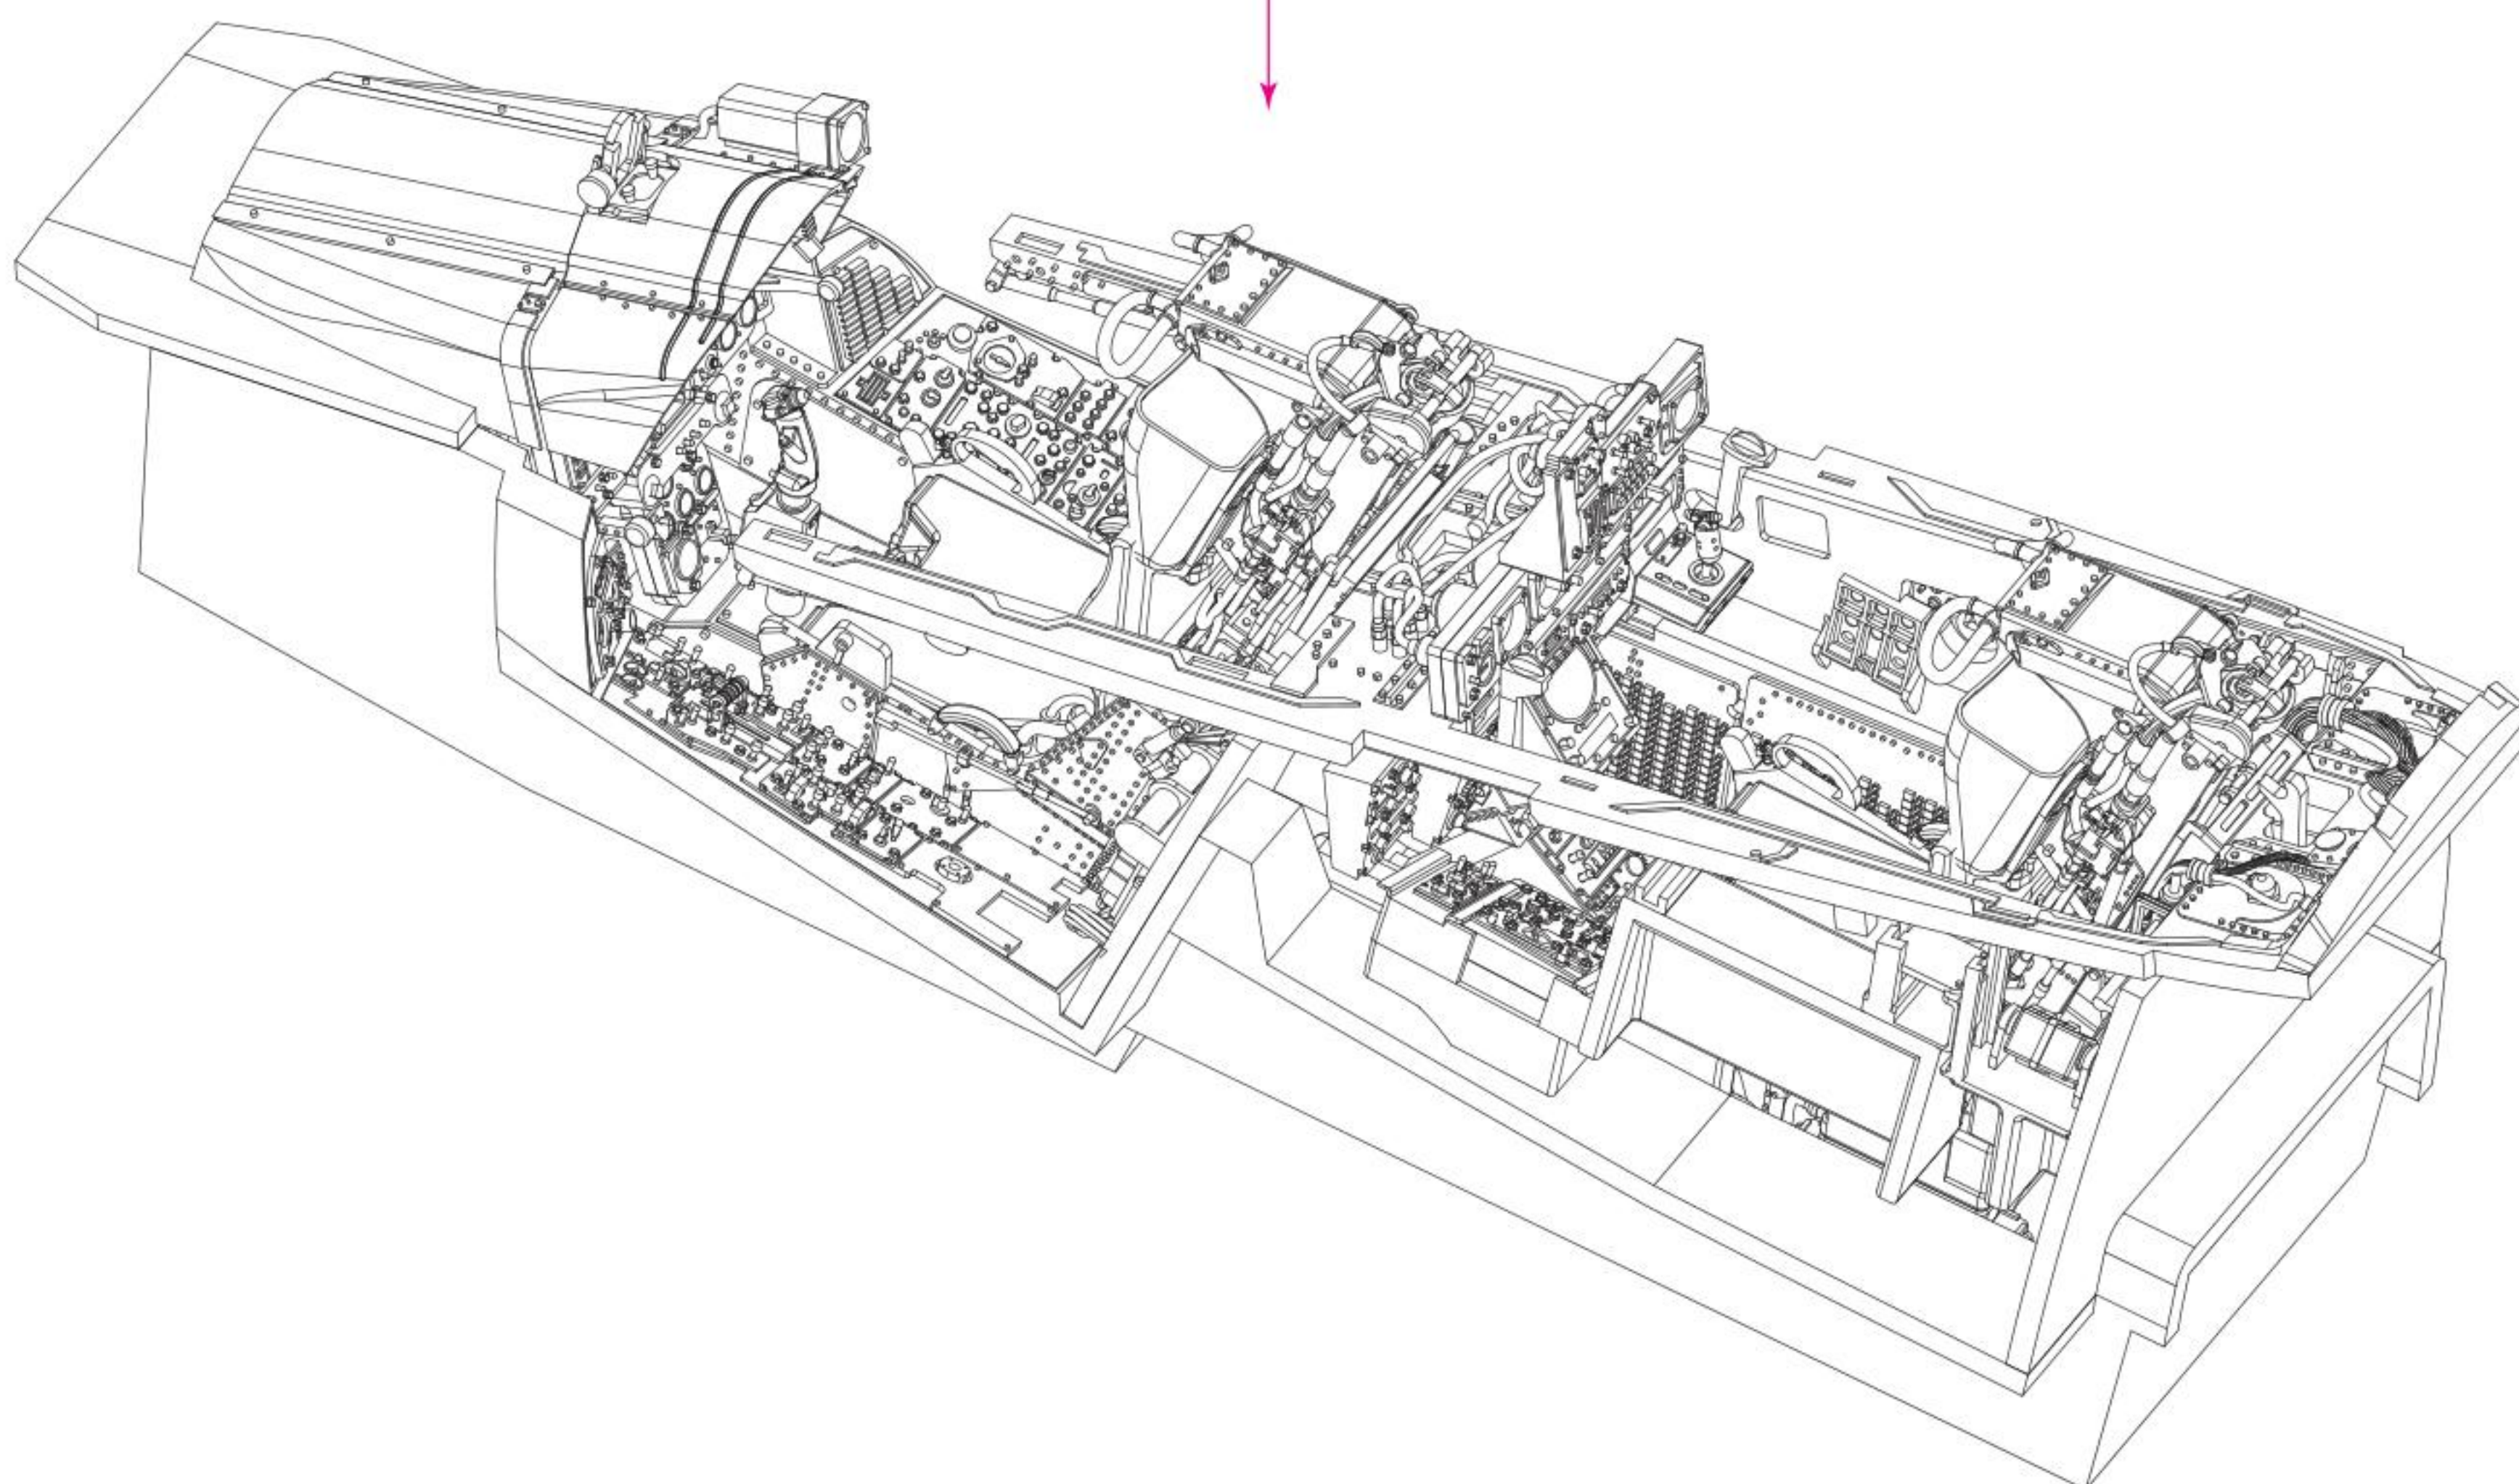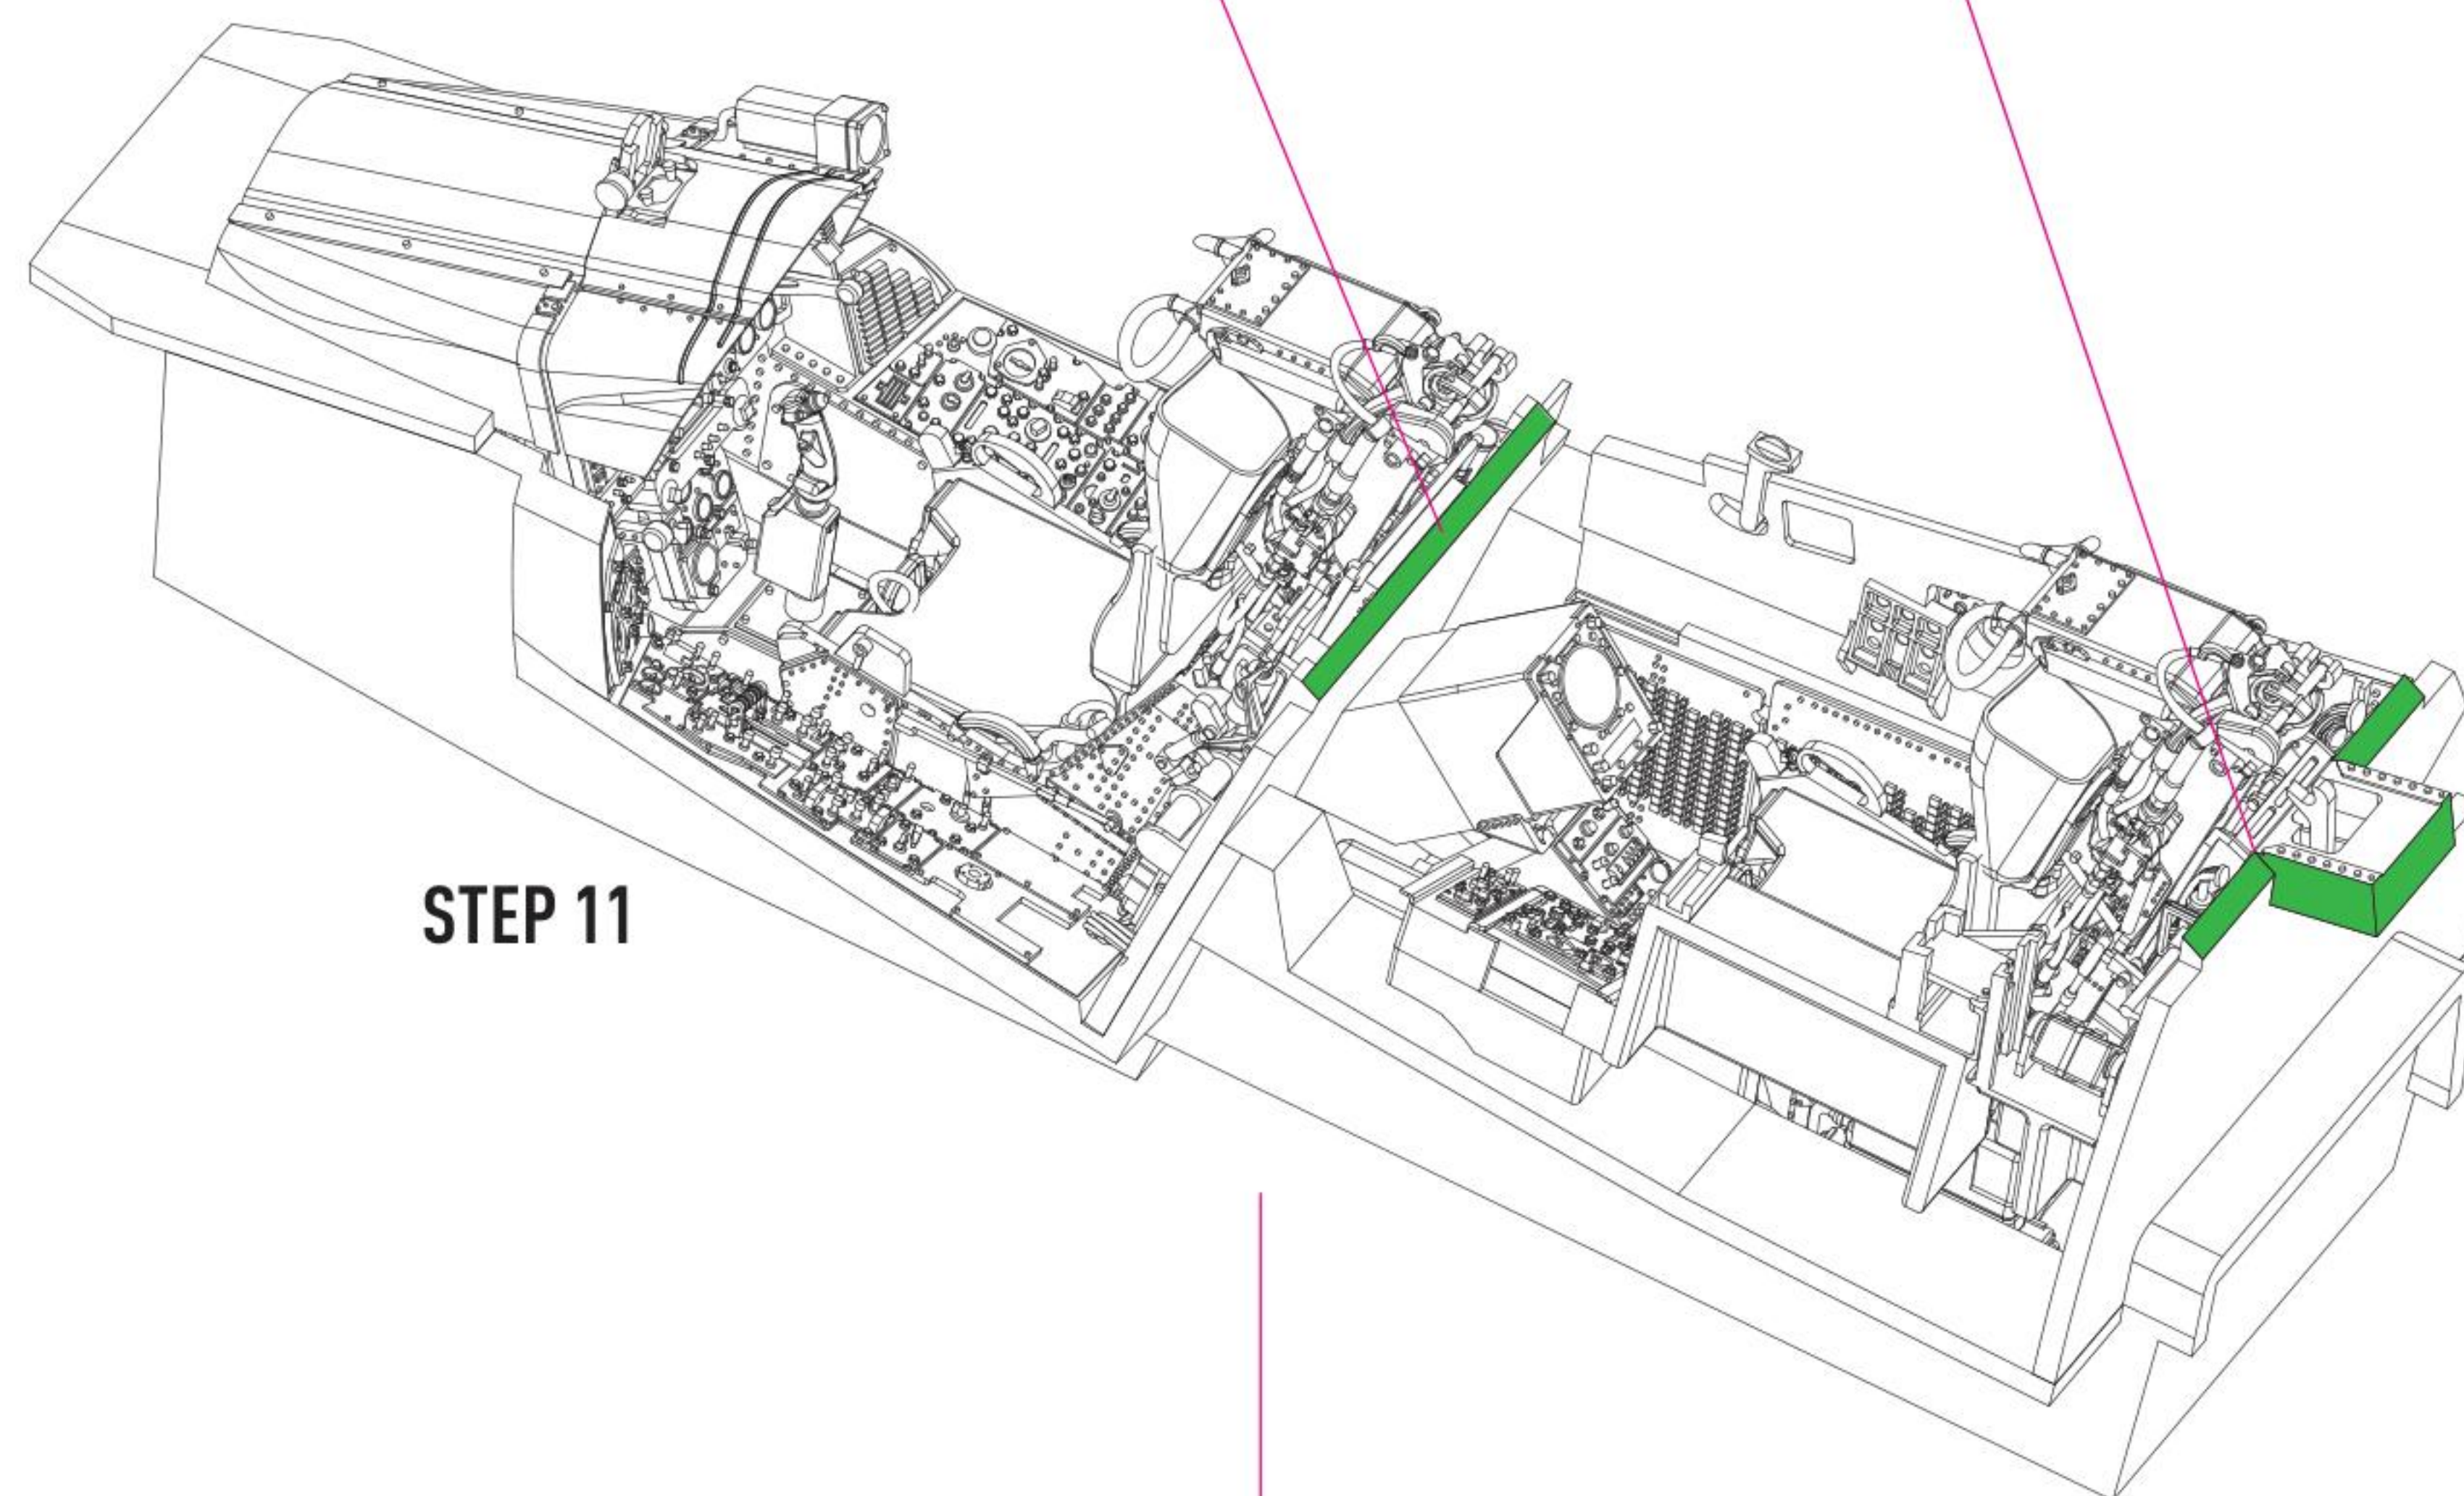

15 AFTER COMPLETING THIS STEP - INSTALL COCKPIT INTO THE TAMIYA FUSELAGE PARTS
(STEP 15 OF THE TAMIYA KIT MANUAL)

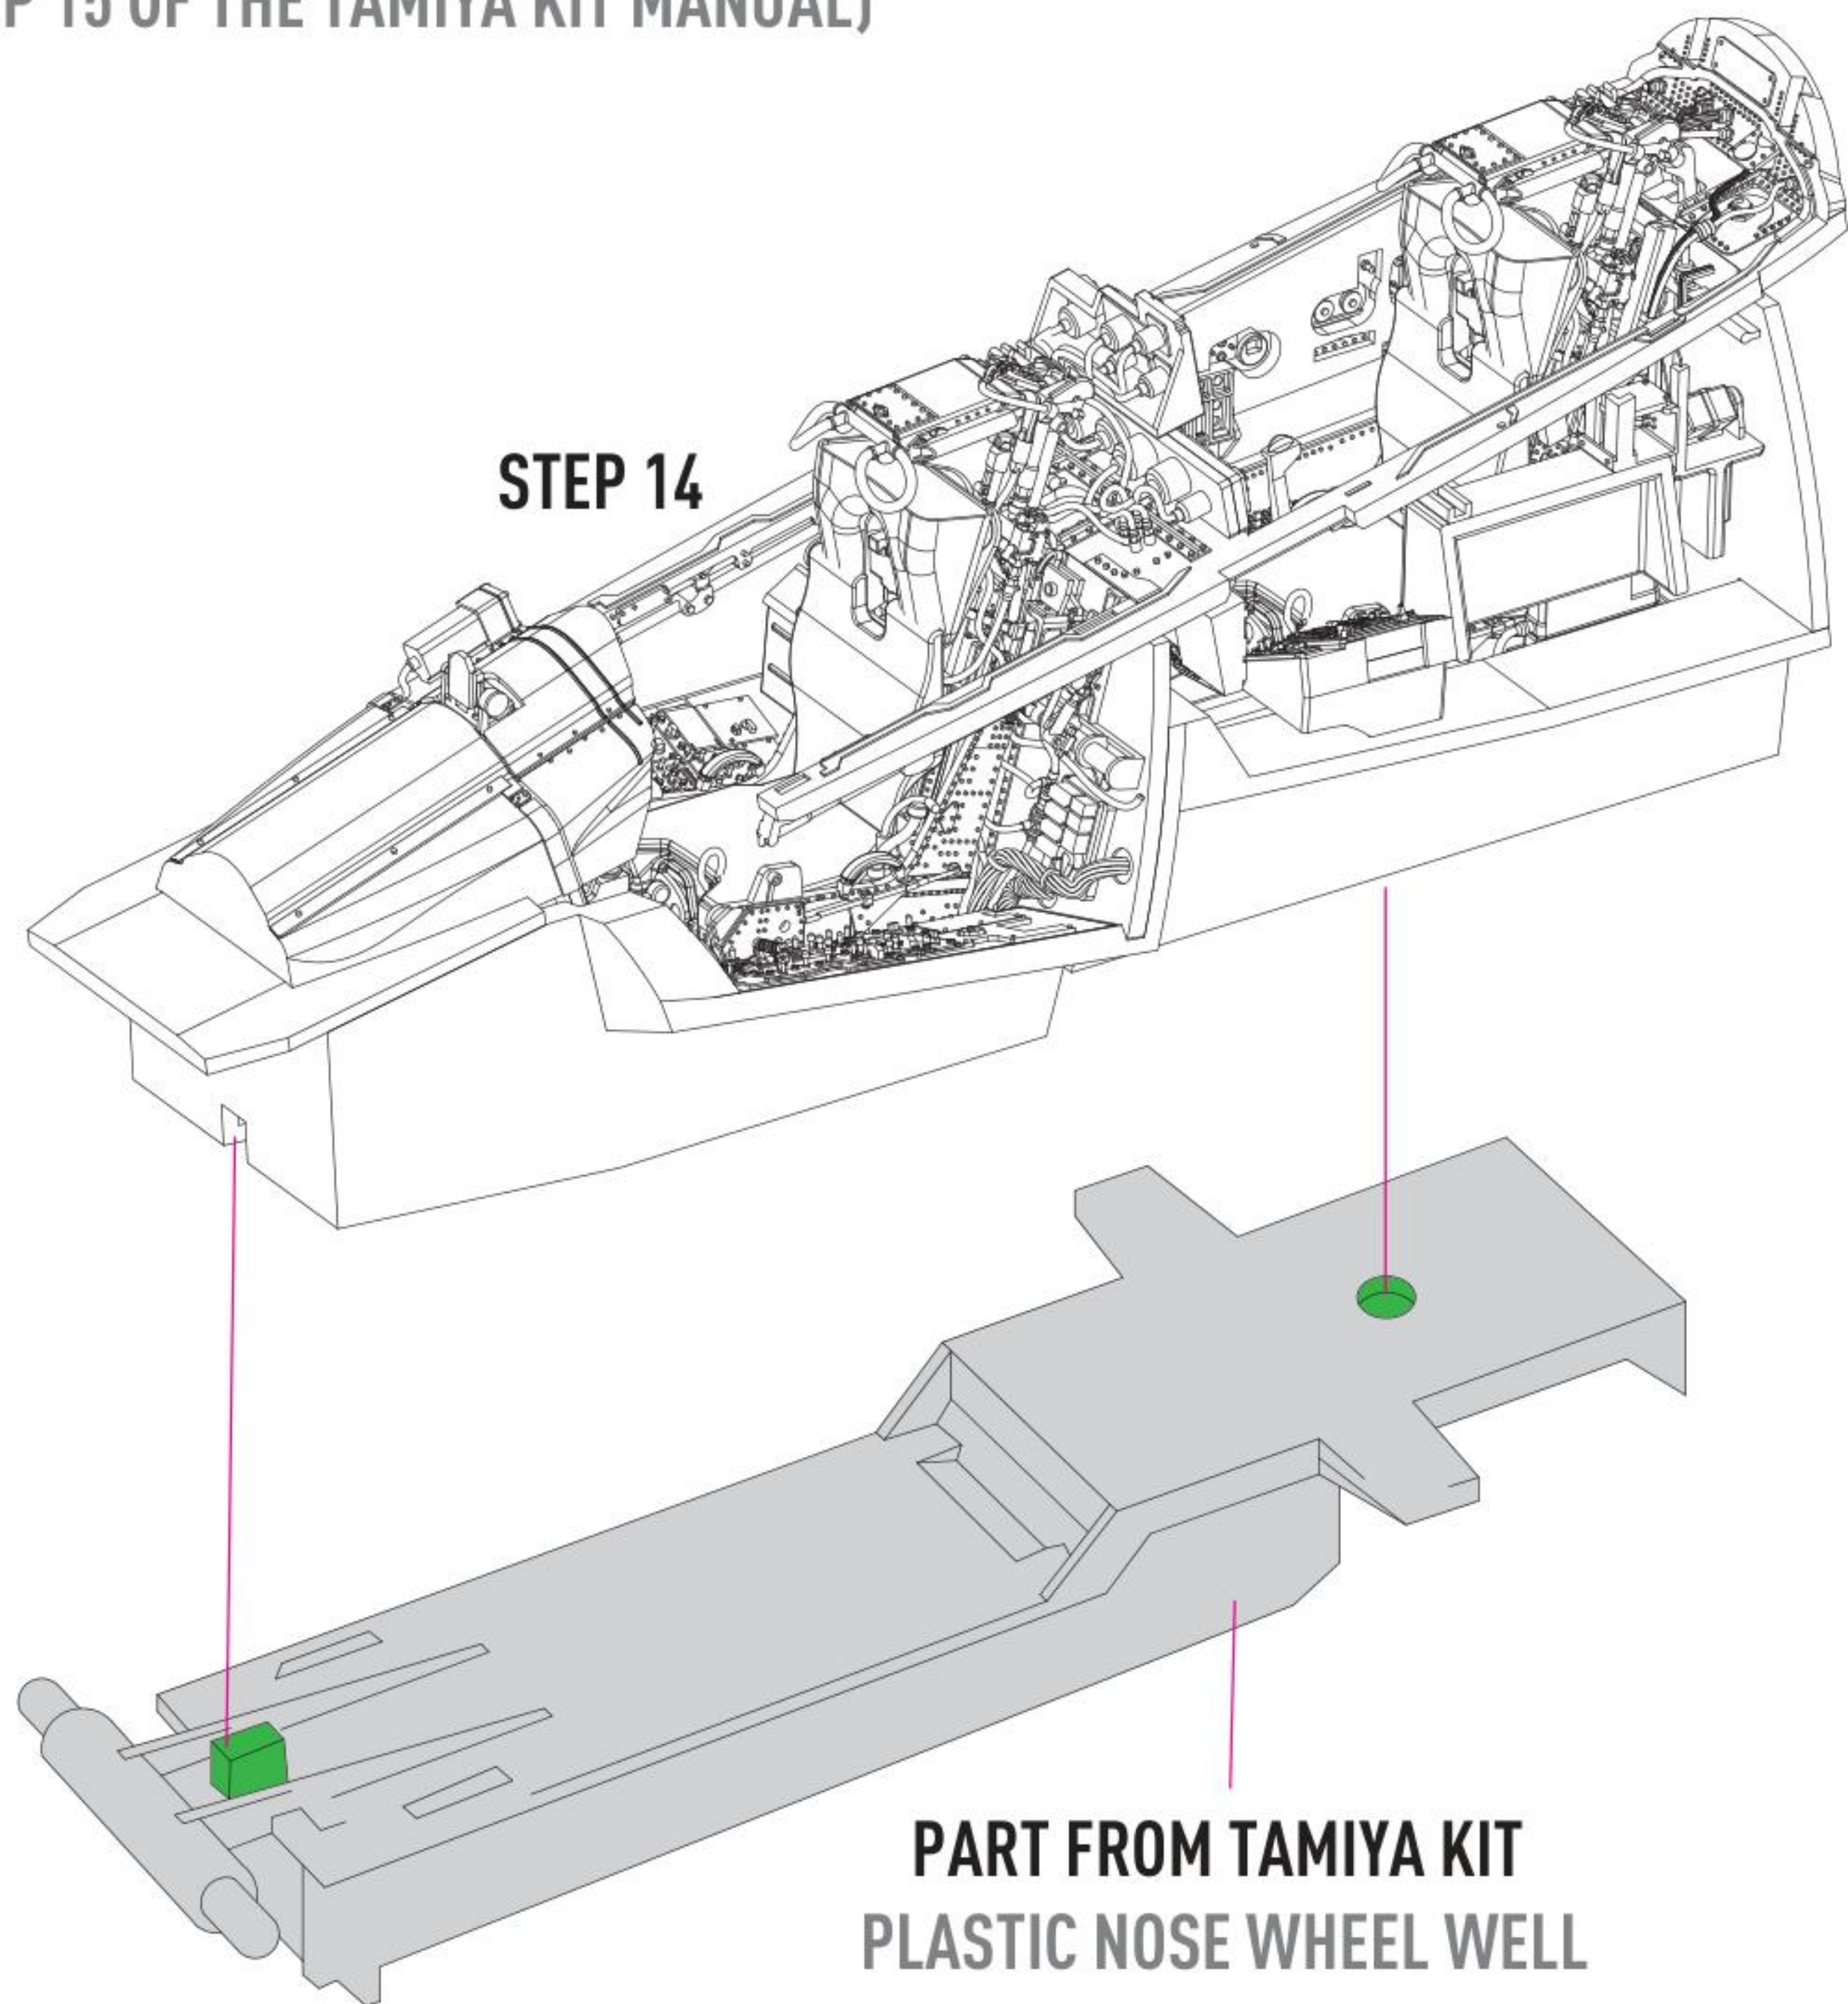


16 CLOSED CANOPY

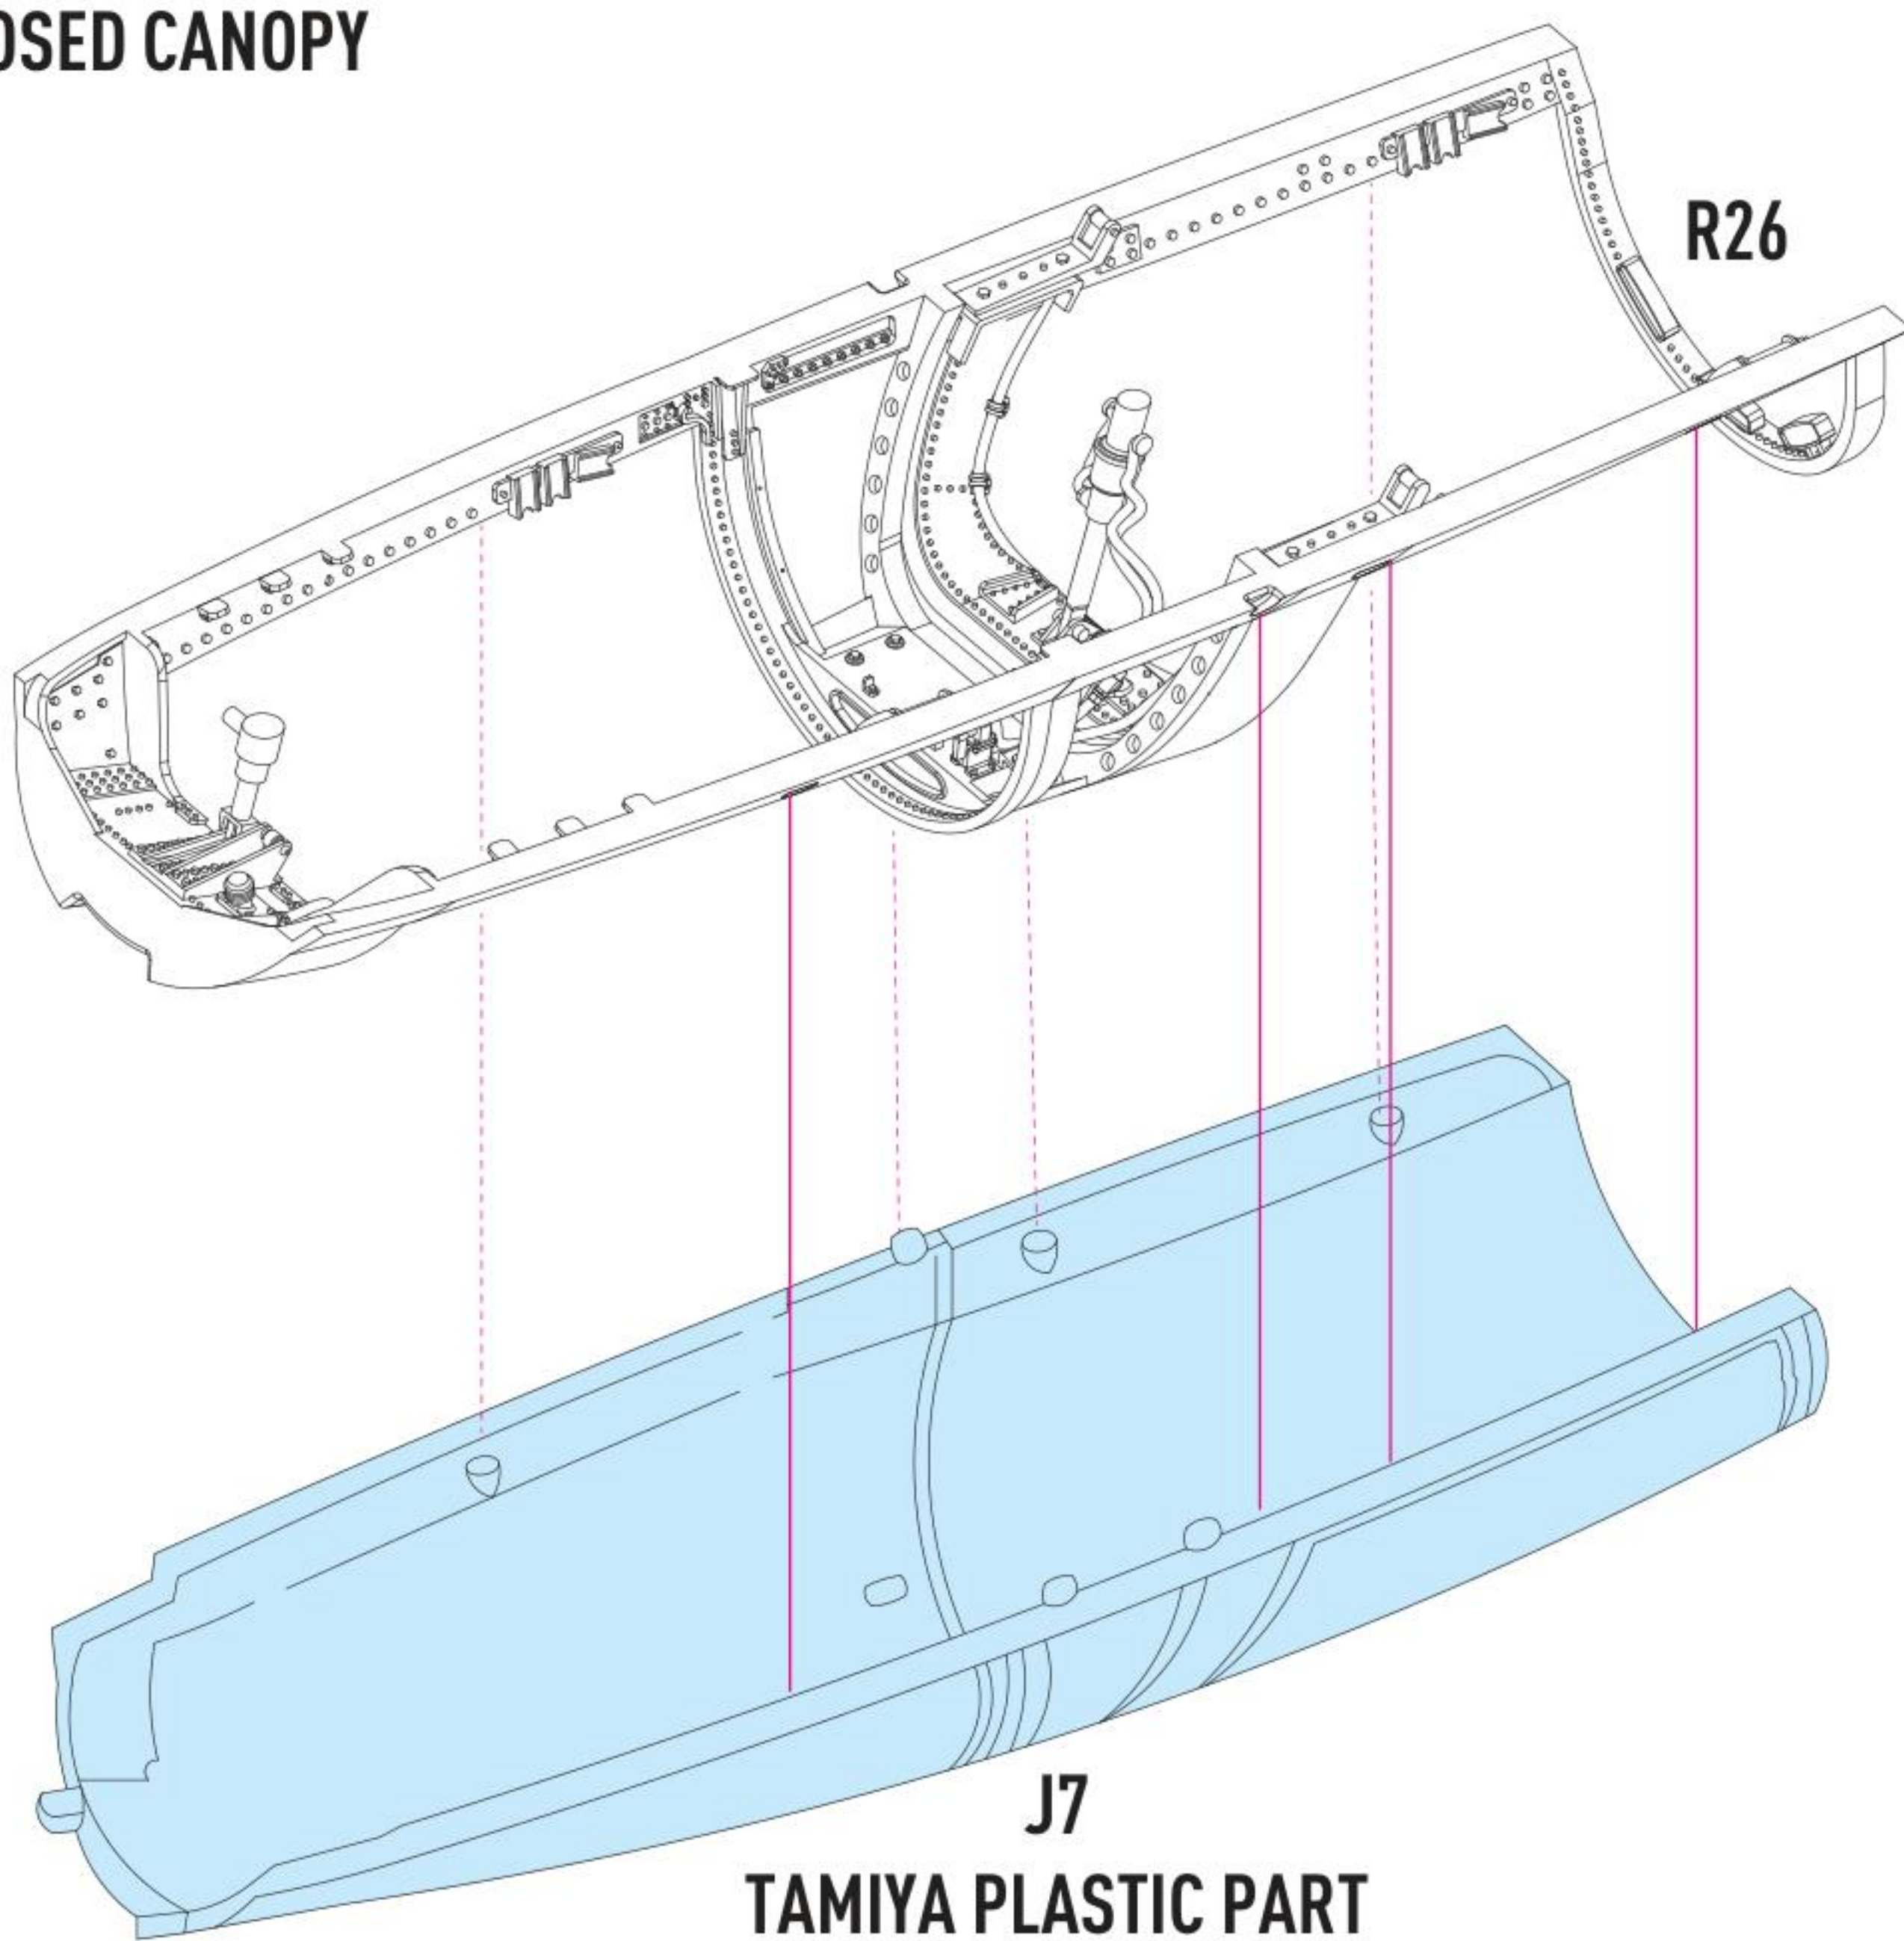

17 CLOSED CANOPY AFTER FINAL TAMIYA COMPLETE NOSE PART ASSEMBLY


STEP 16 TAMIYA
PLASTIC PART J7 NOT SHOWN

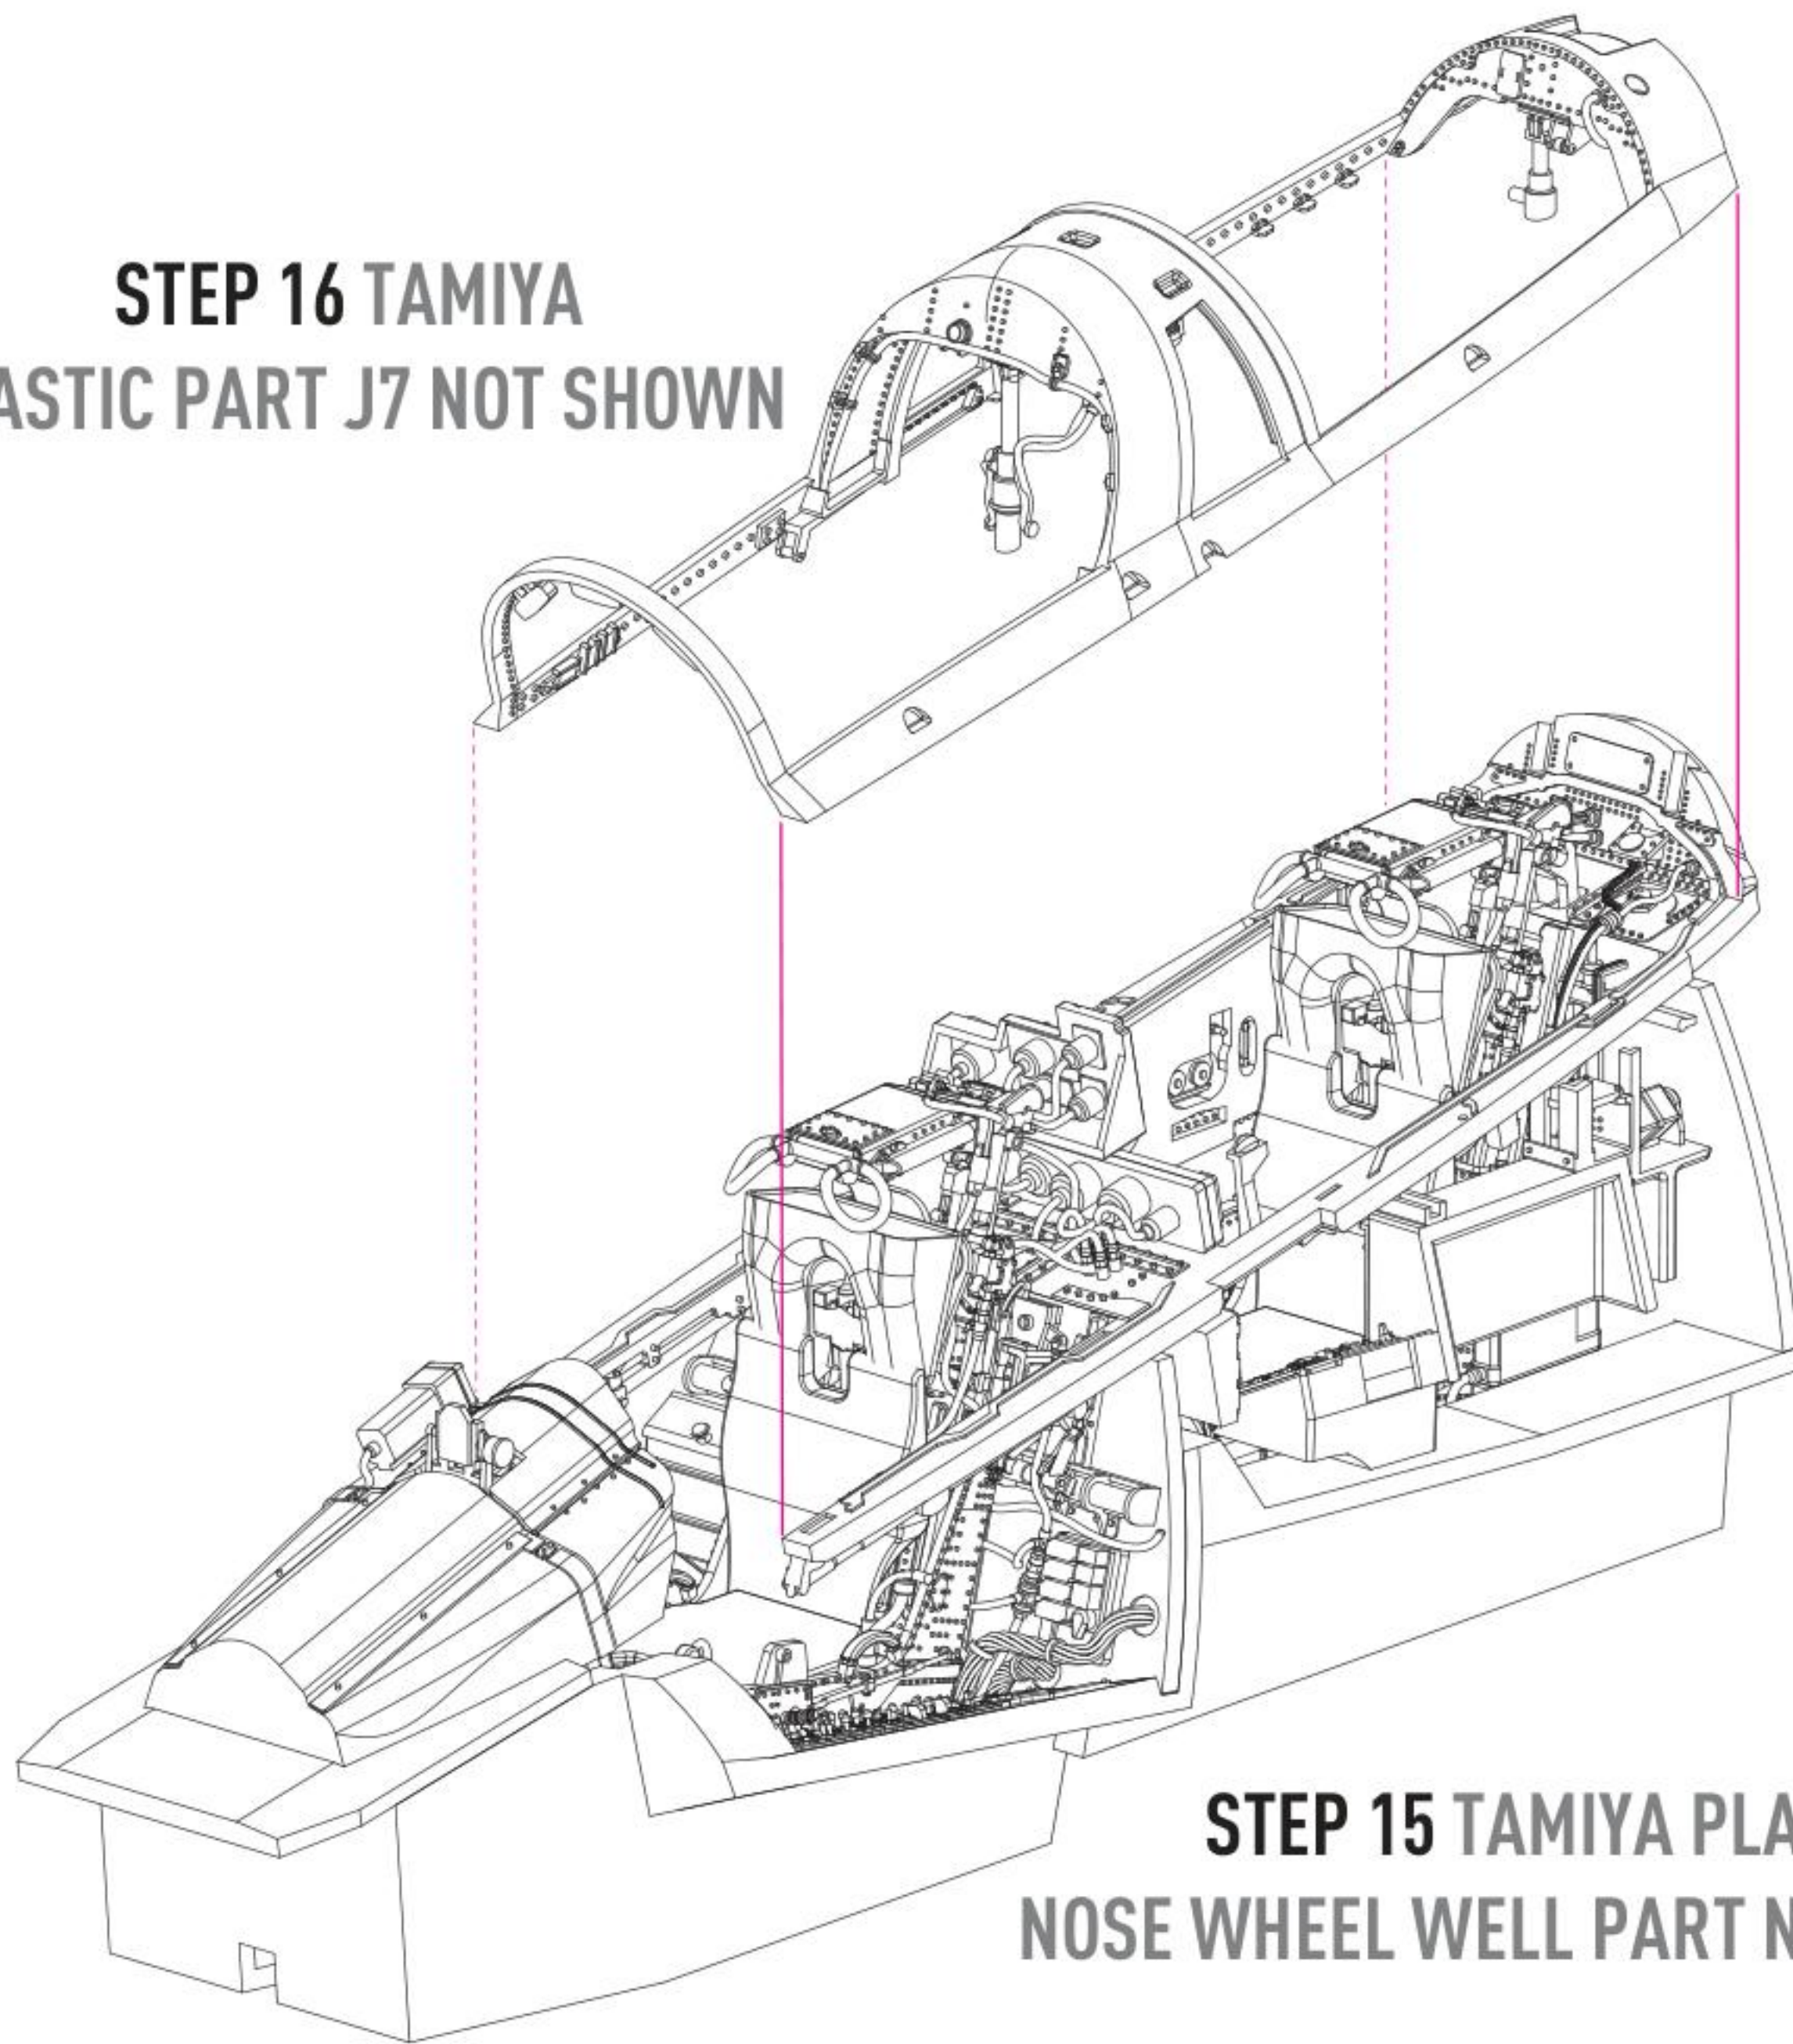

STEP 15 TAMIYA PLASTIC
NOSE WHEEL WELL PART NOT SHOWN

18 OPEN CANOPY

G3
TAMIYA PLASTIC PART

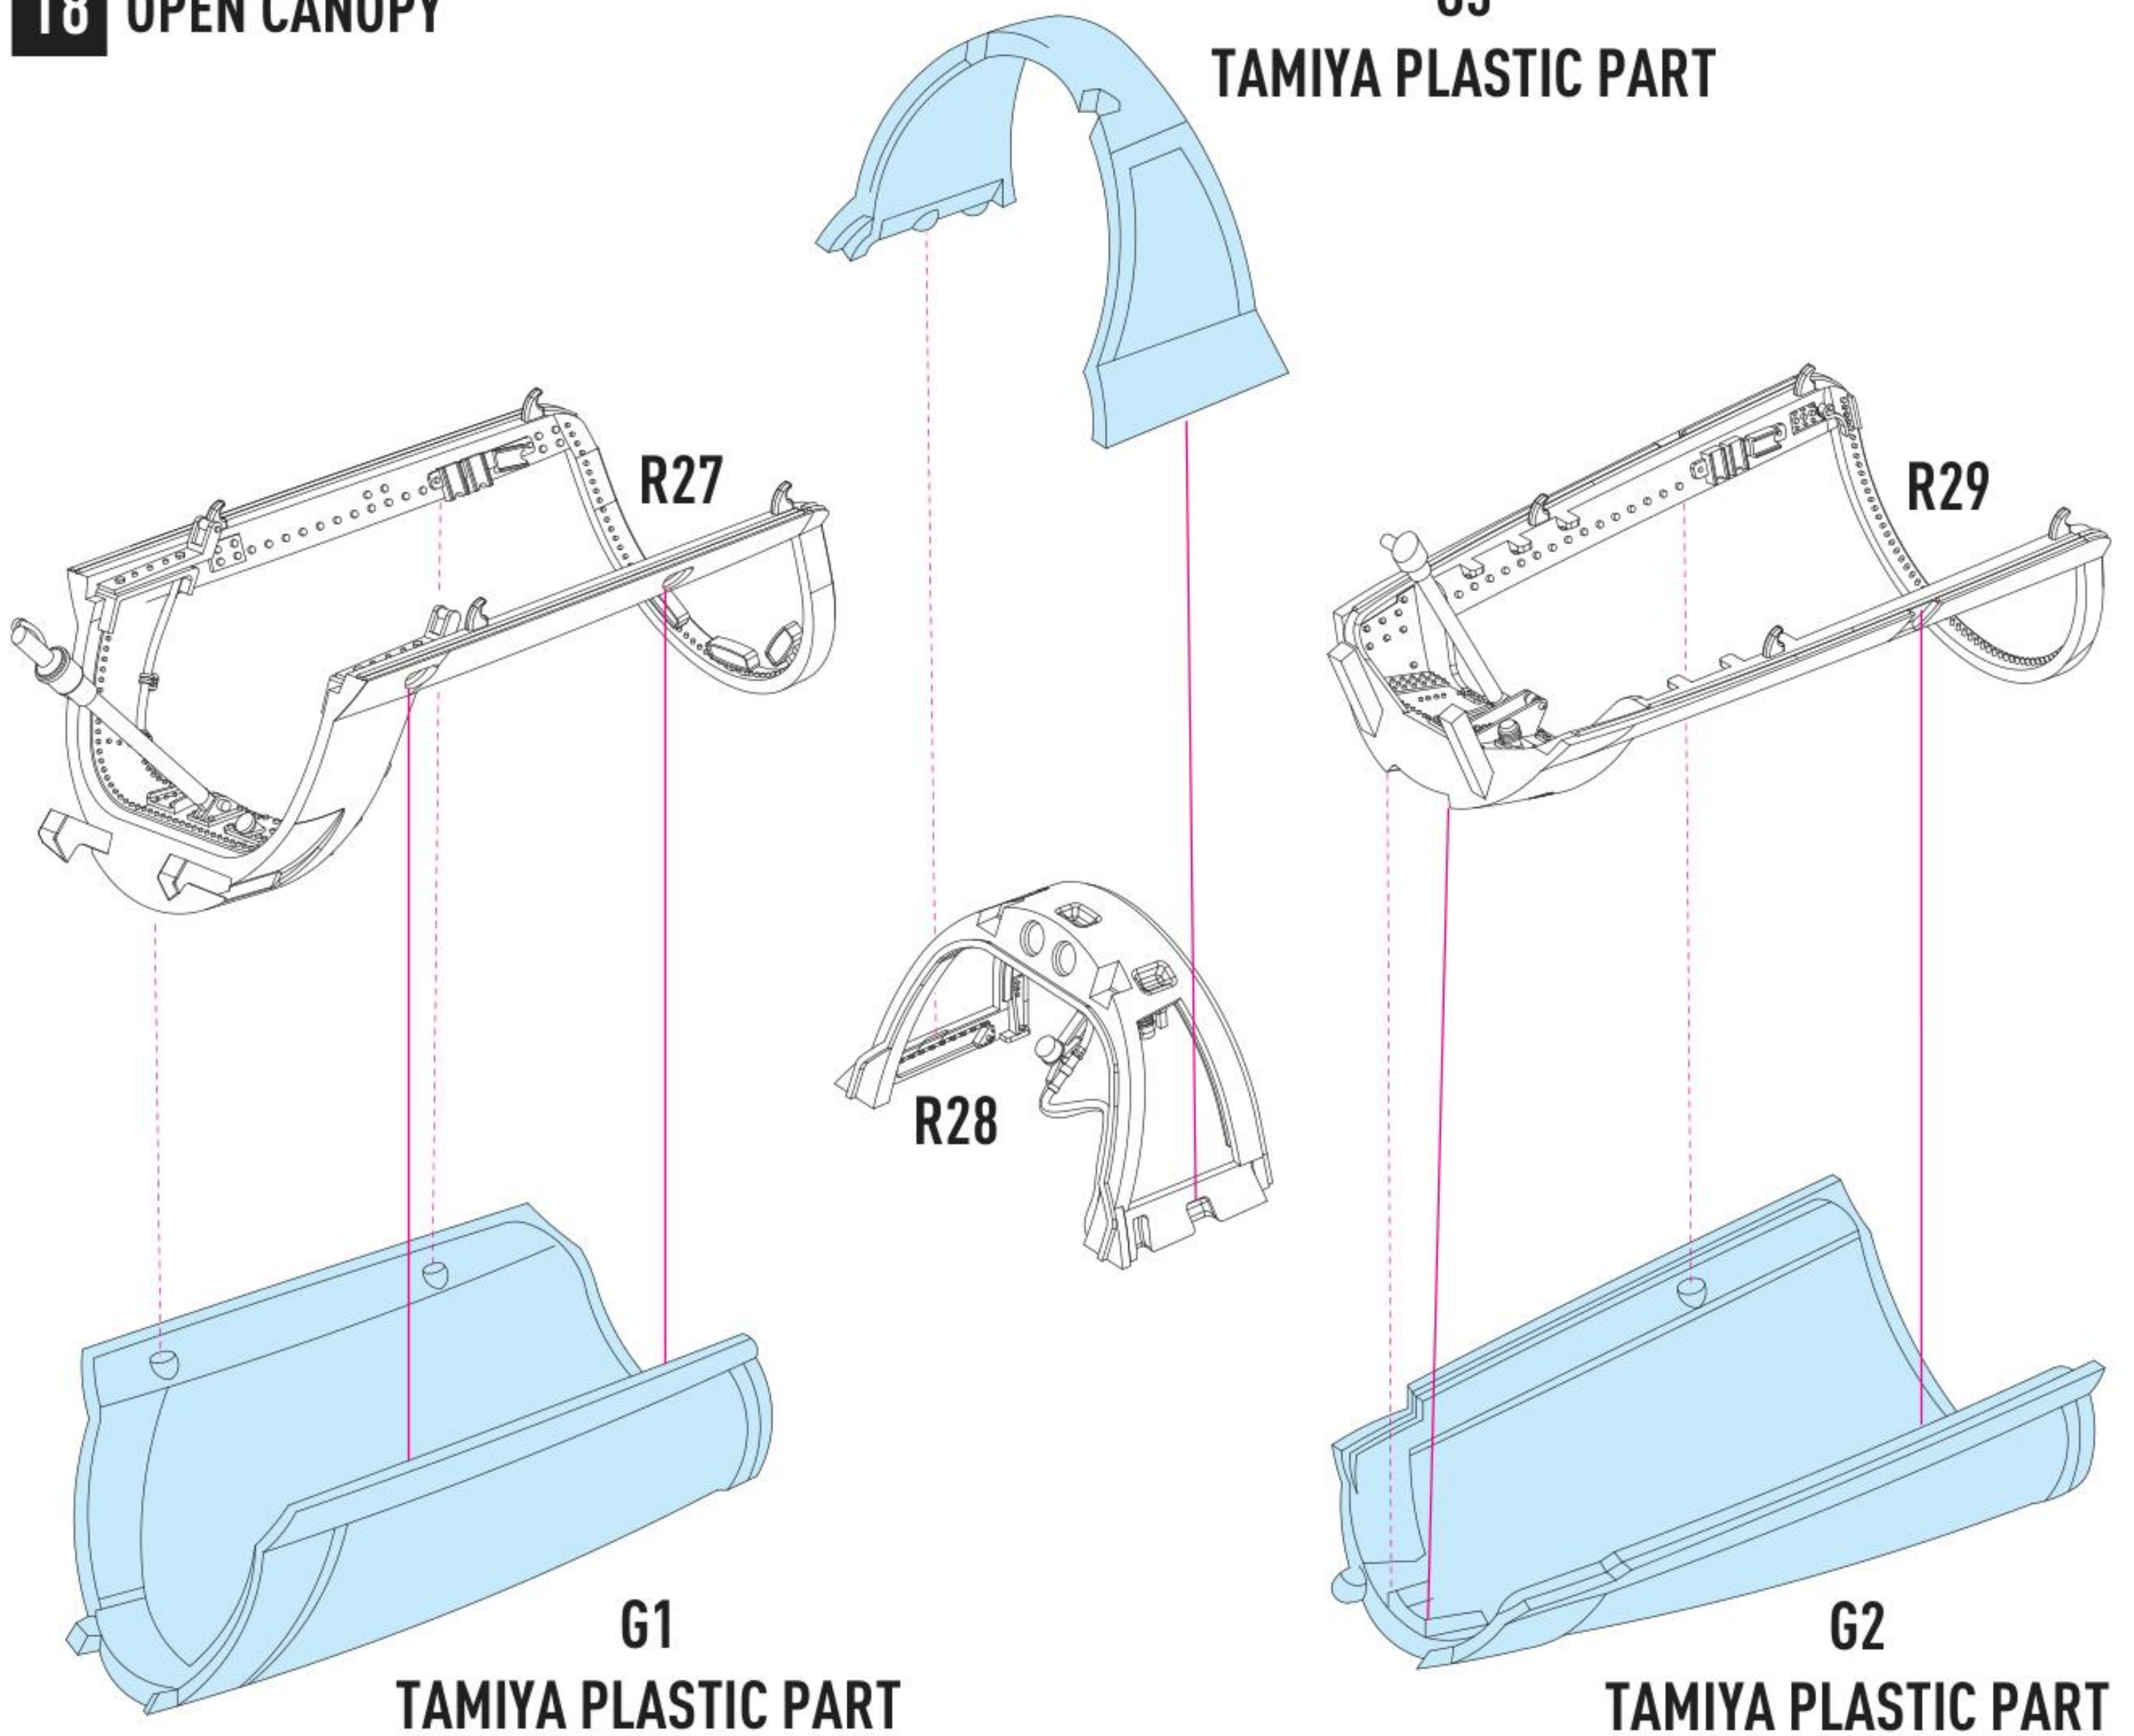


G1
TAMIYA PLASTIC PART

G2
TAMIYA PLASTIC PART


19 OPEN CANOPY

STEP 18 TAMIYA PLASTIC PART G3 NOT SHOWN

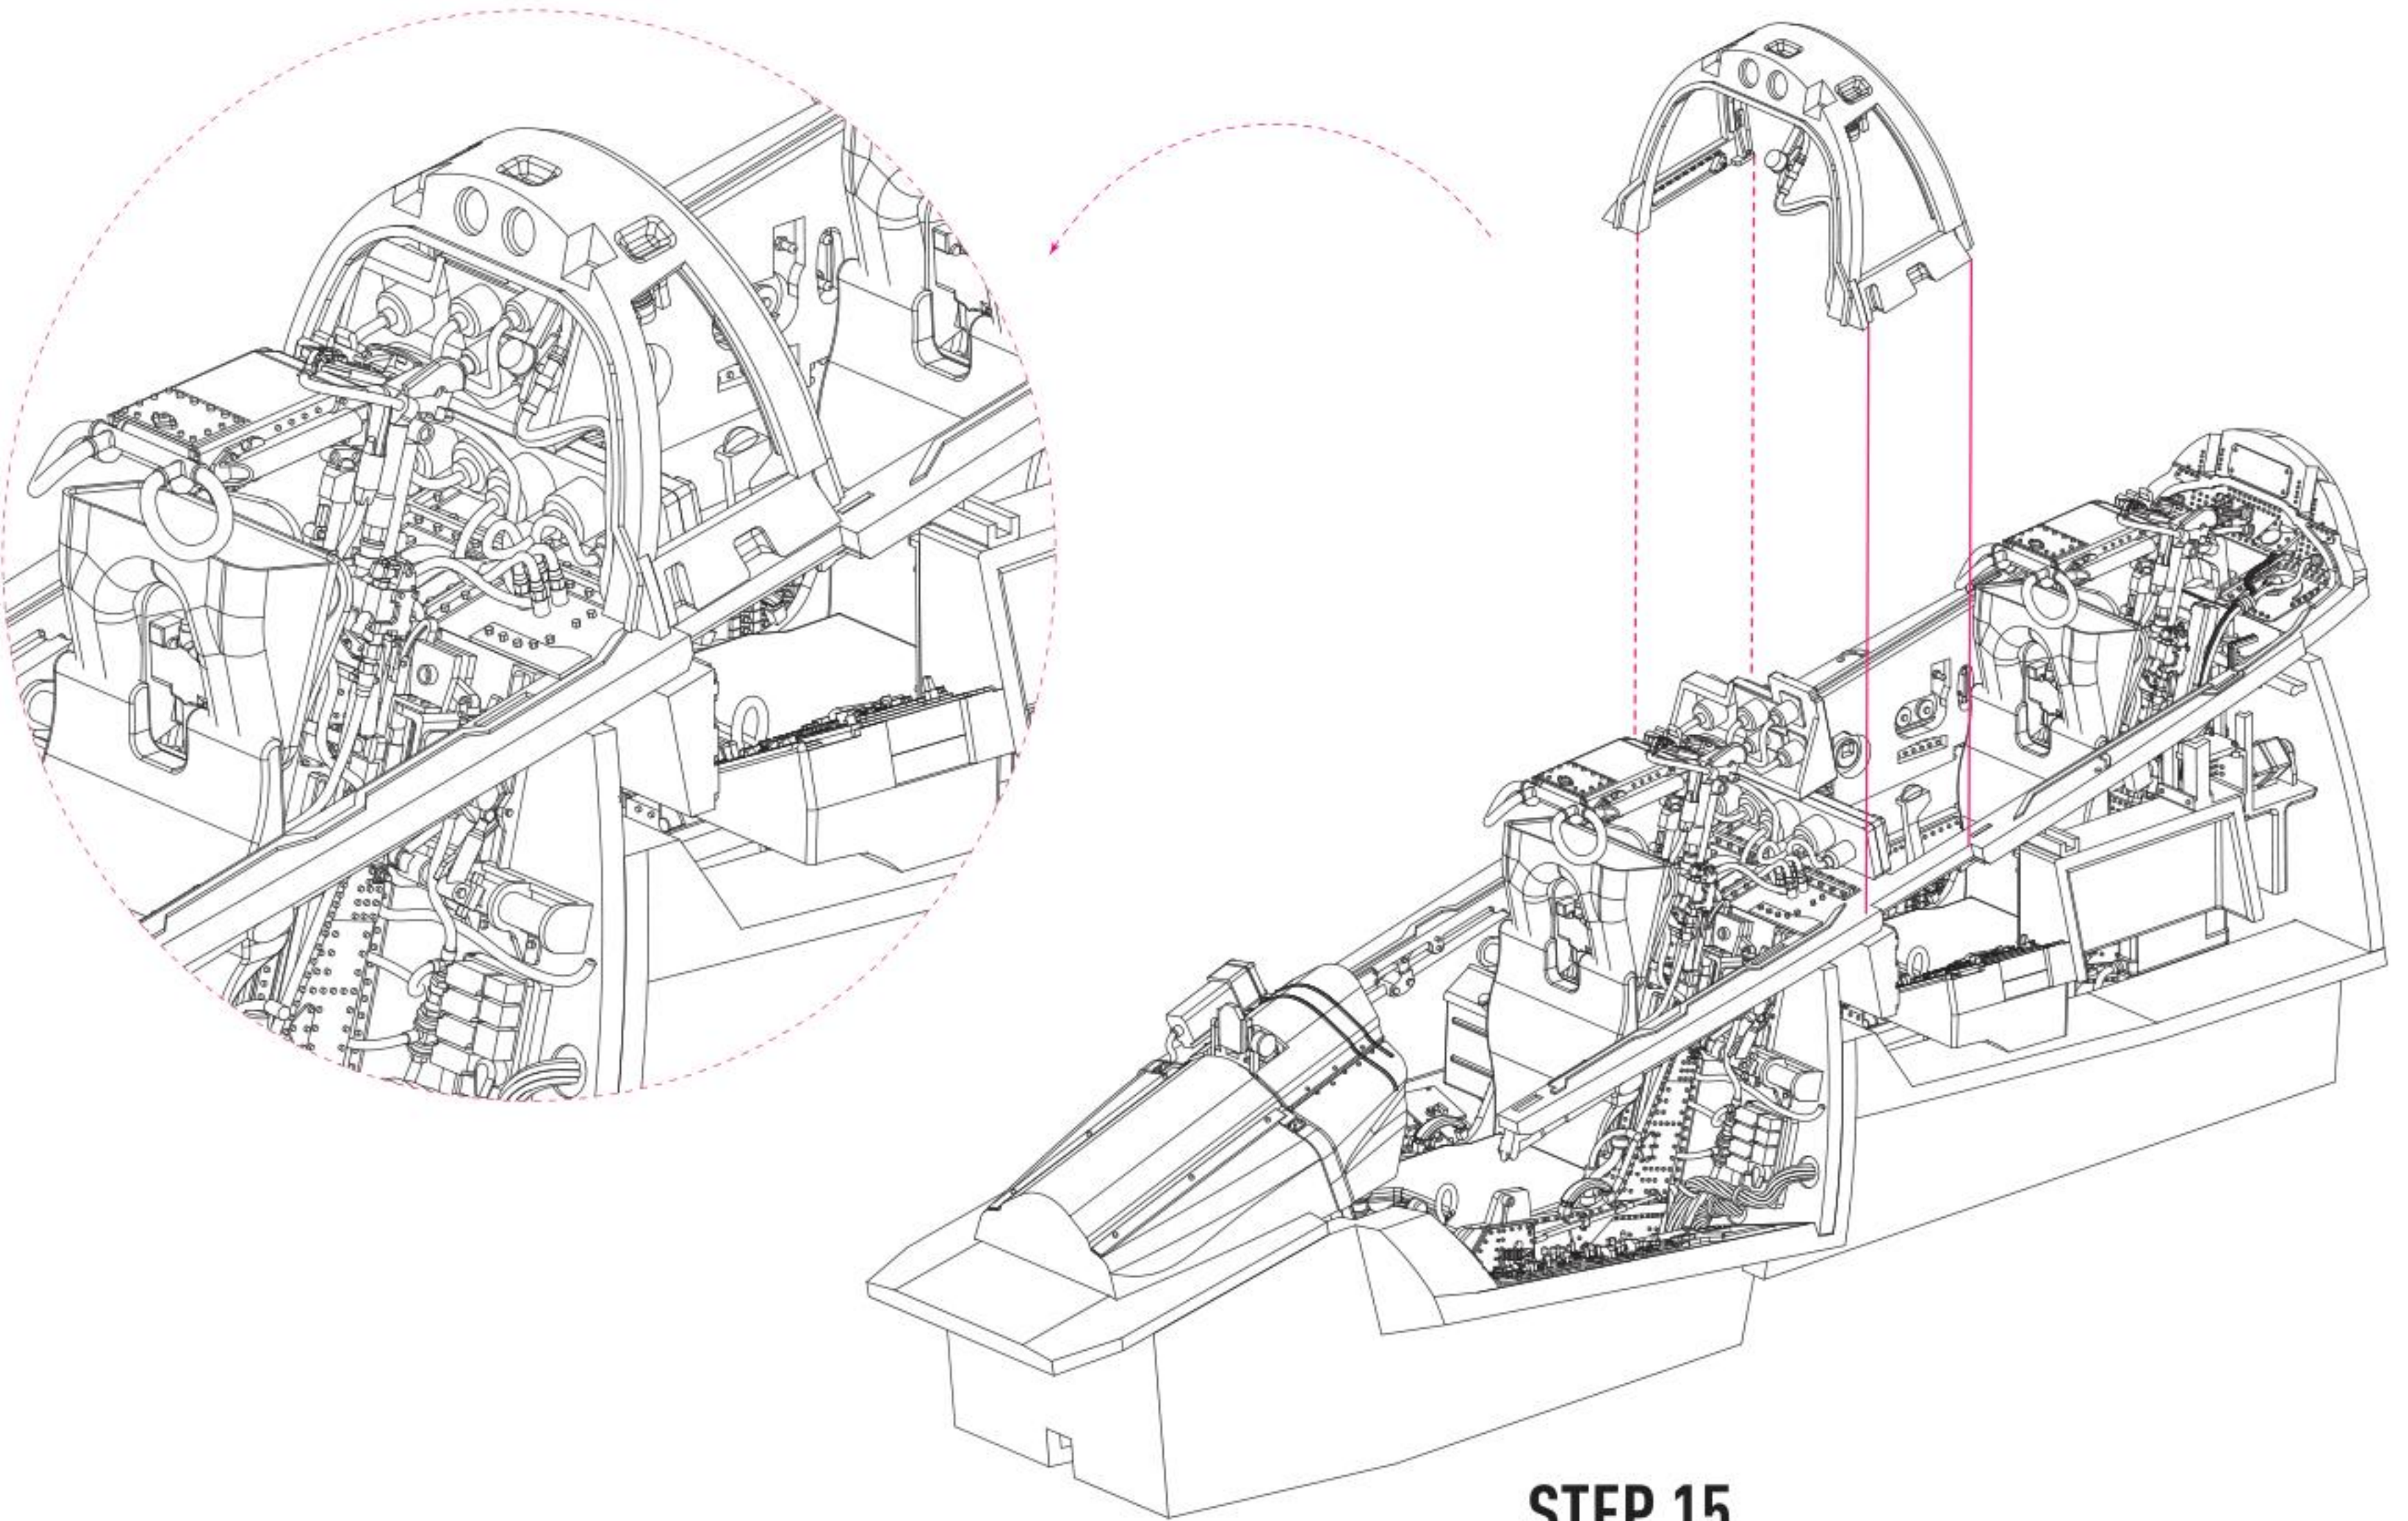

STEP 15 TAMIYA PLASTIC NOSE WHEEL WELL PART NOT SHOWN

20 OPEN CANOPY AFTER FINAL TAMIYA COMPLETE NOSE PART ASSEMBLY

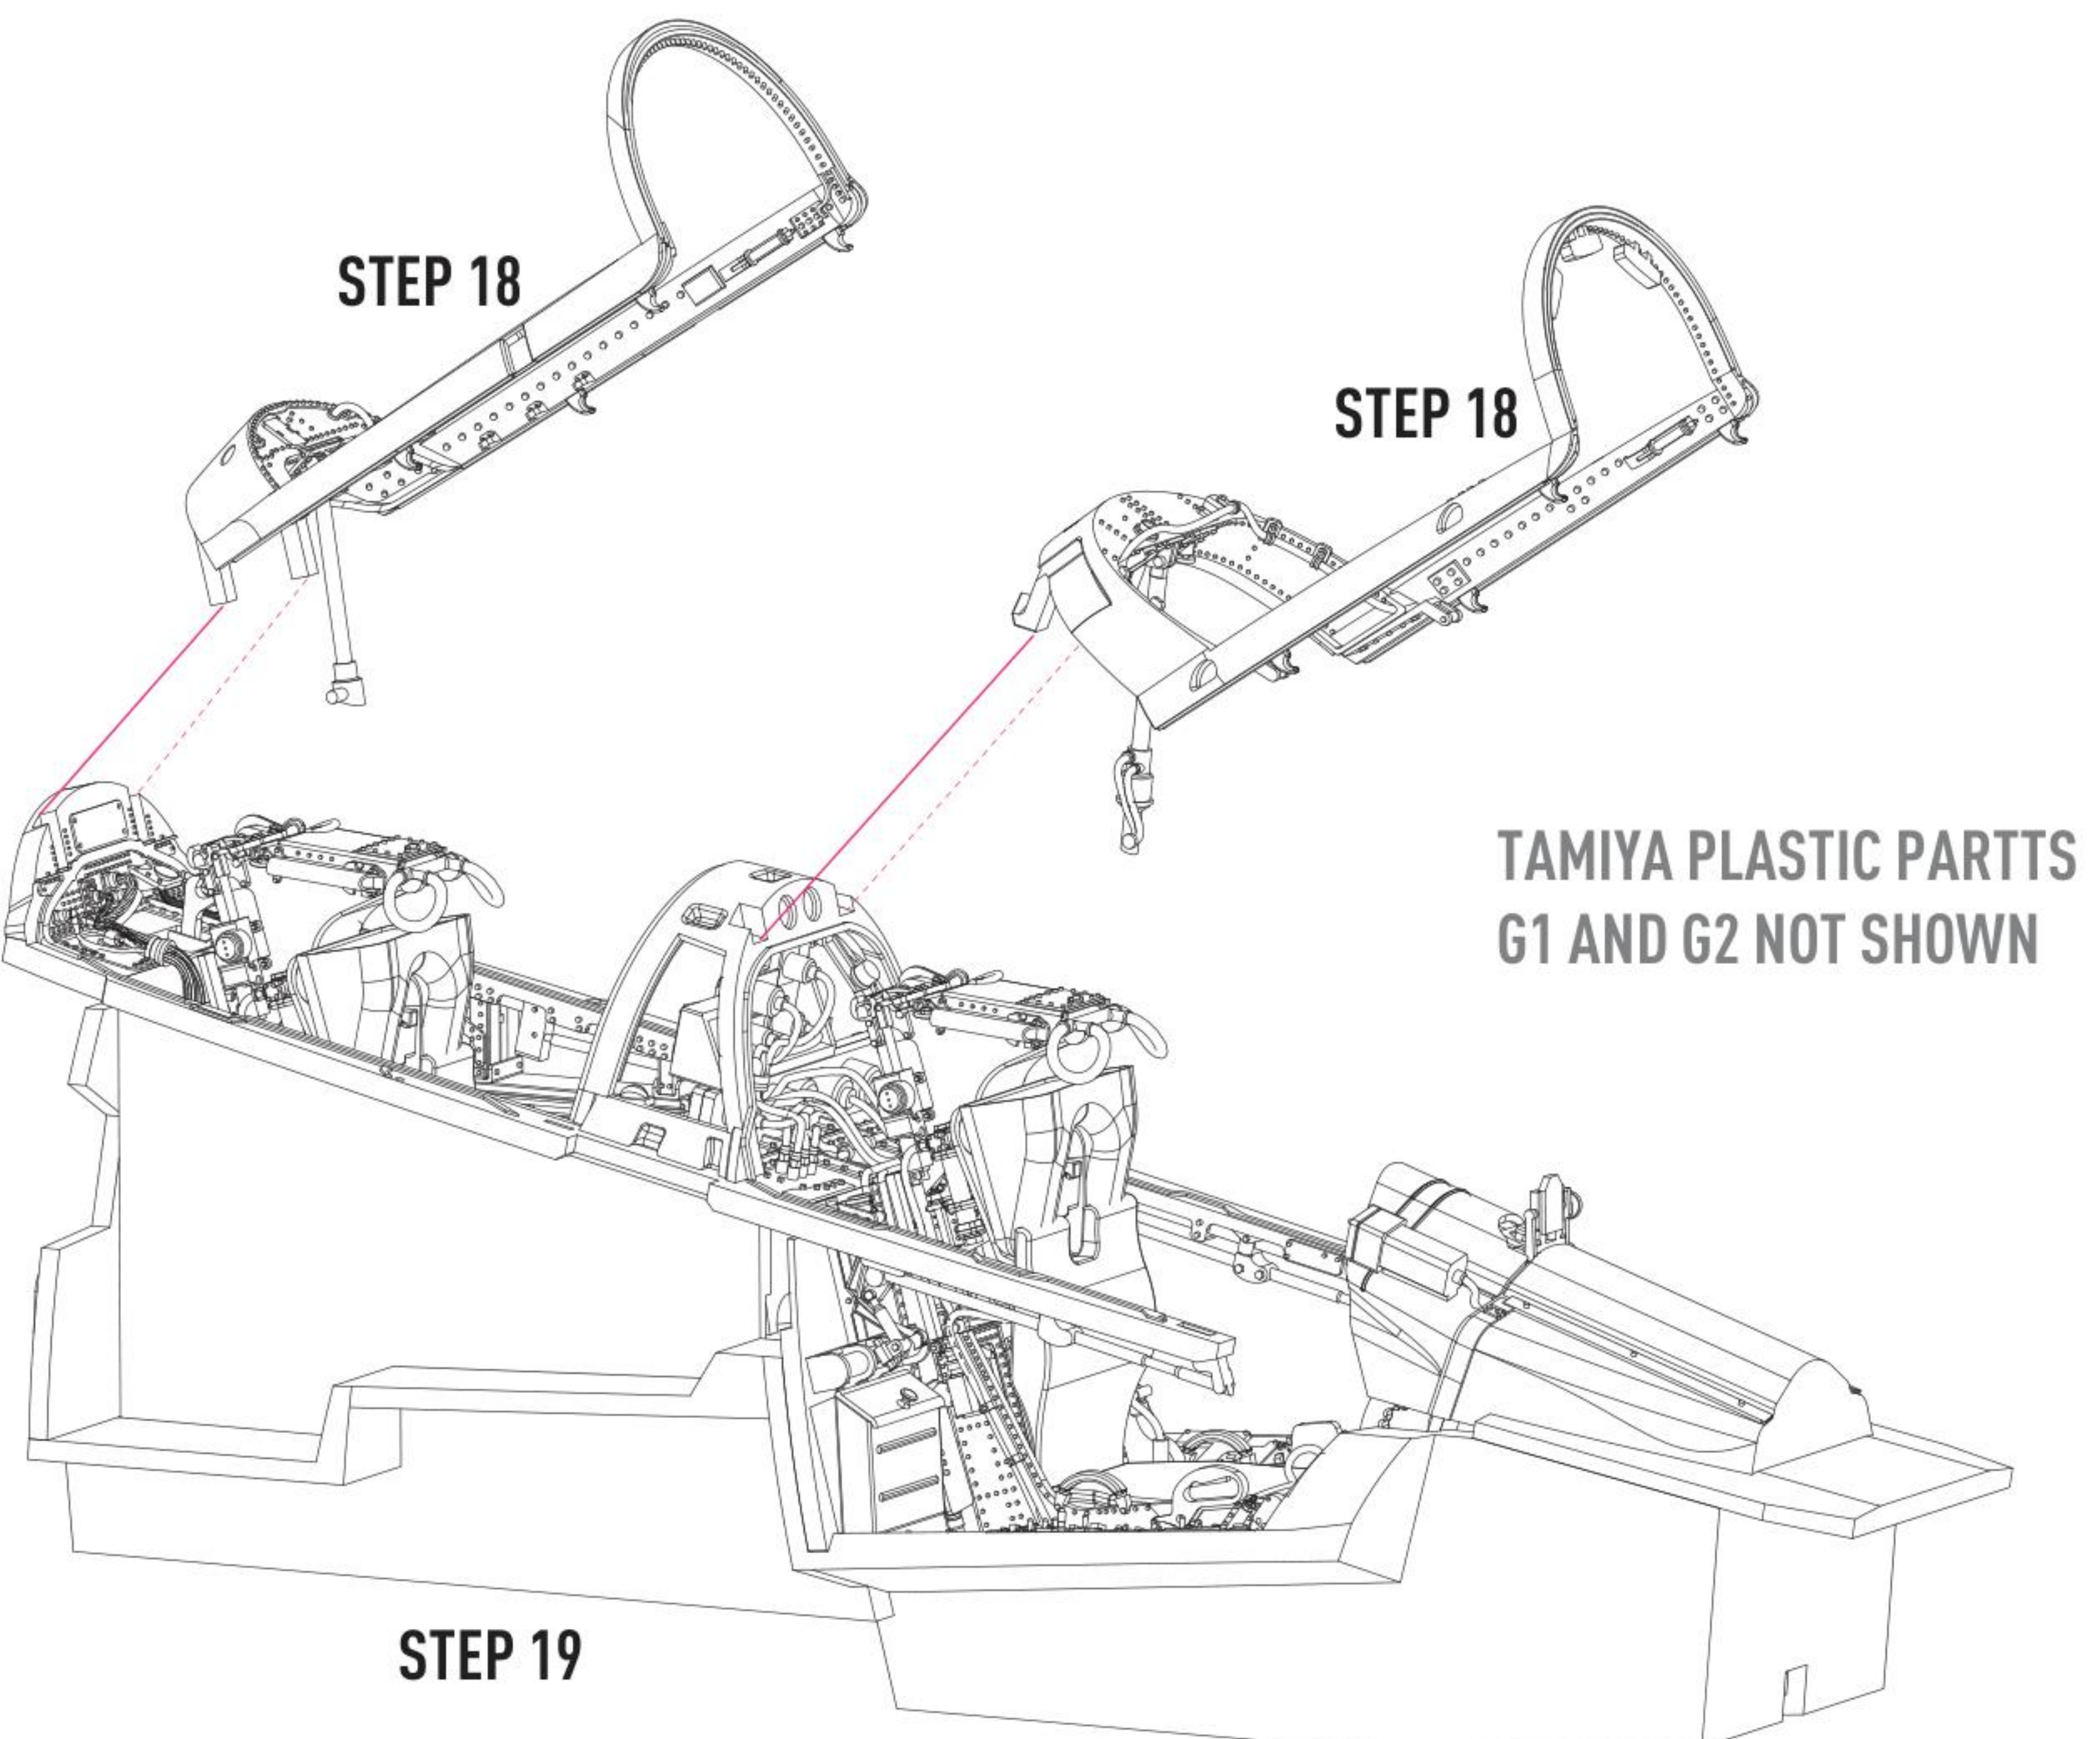


STEP 18

STEP 18


TAMIYA PLASTIC PARTS
G1 AND G2 NOT SHOWN

STEP 19


DECAL INSTRUCTION

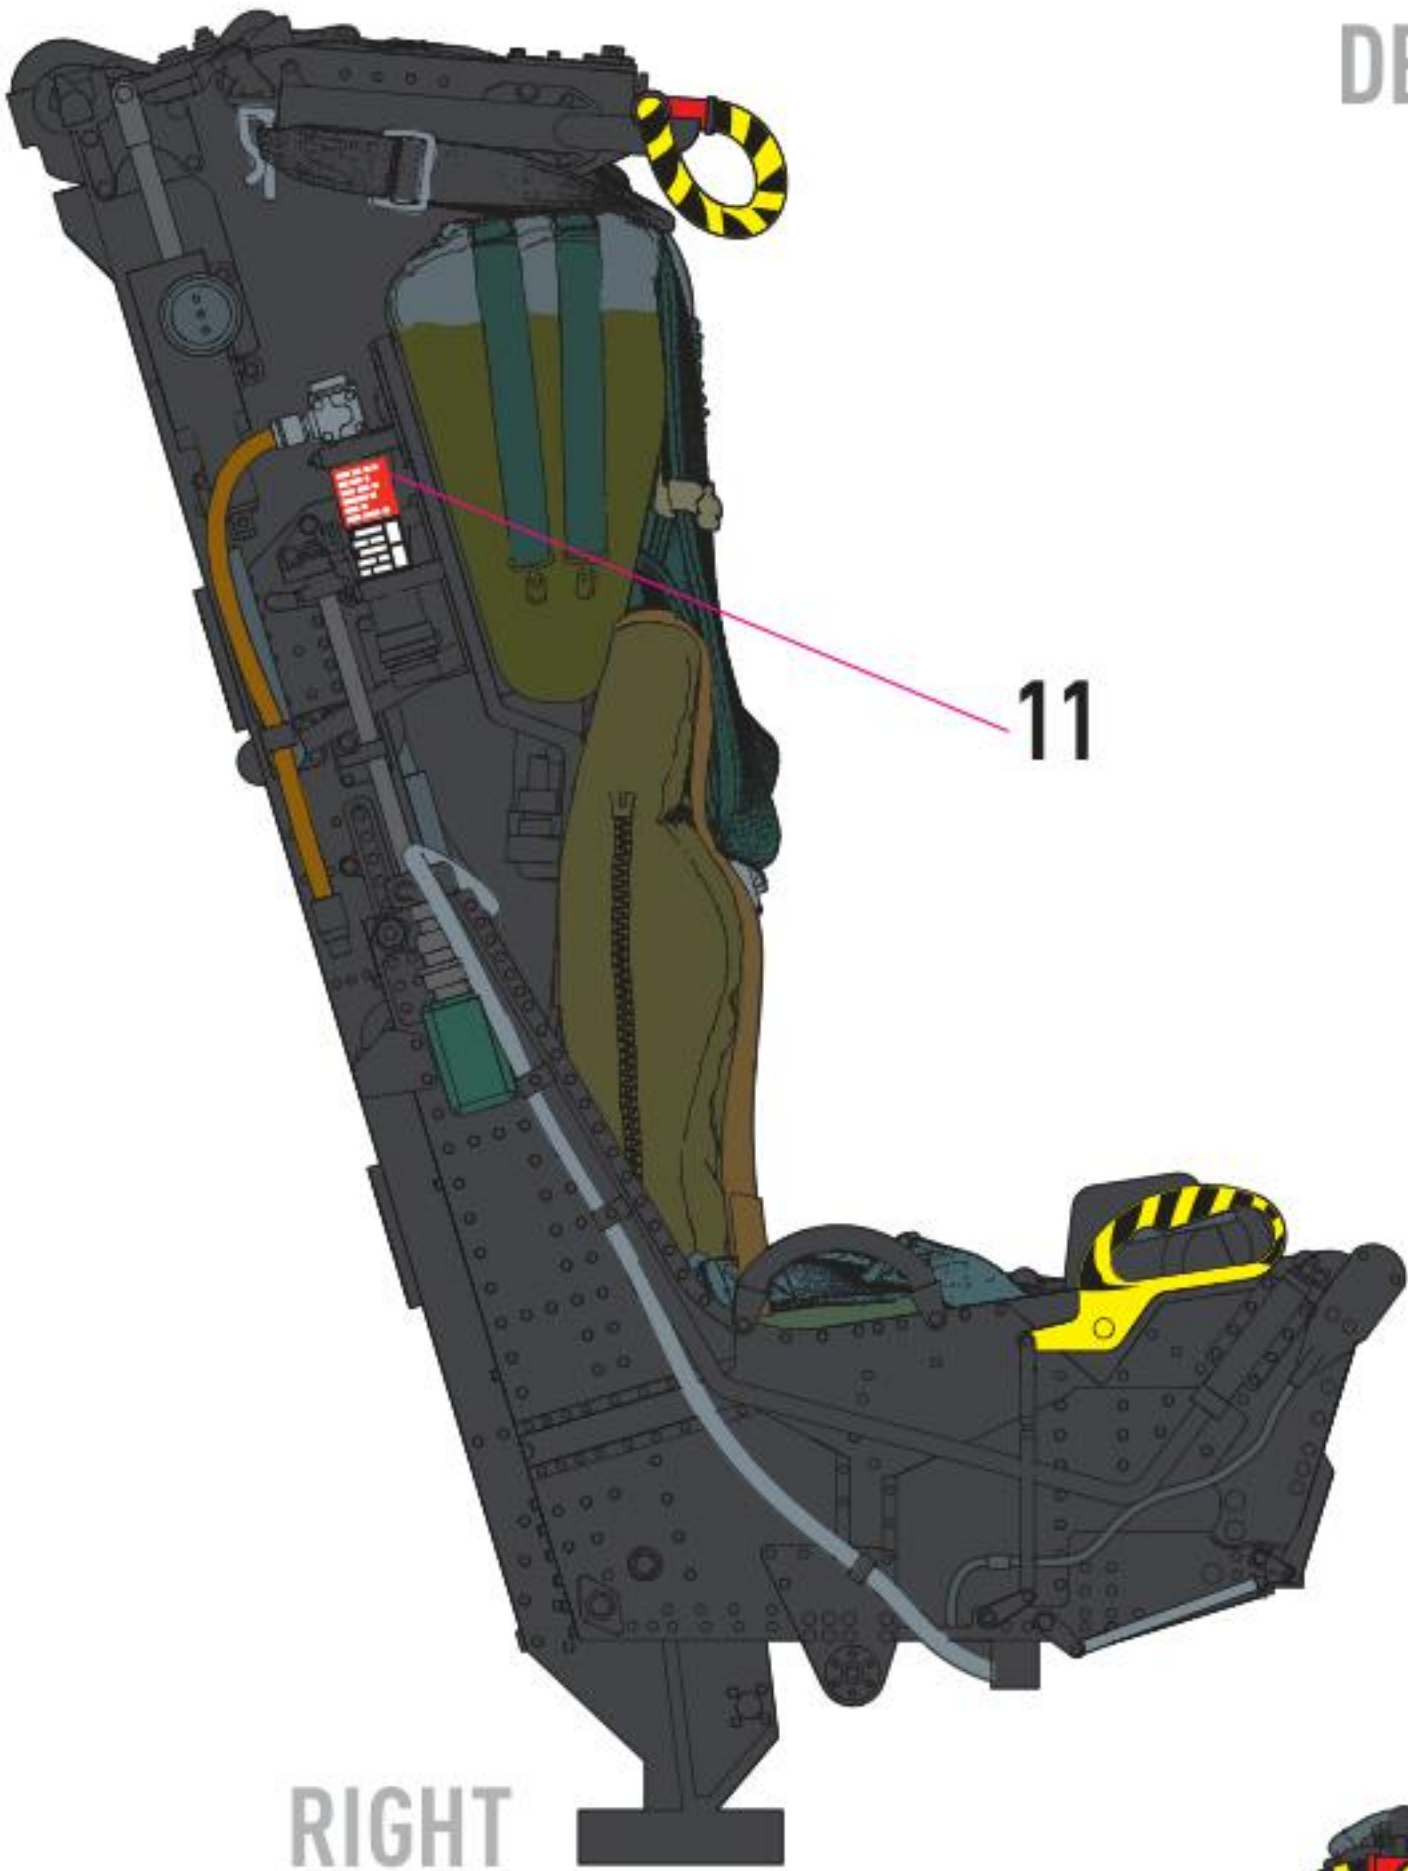


RIGHT

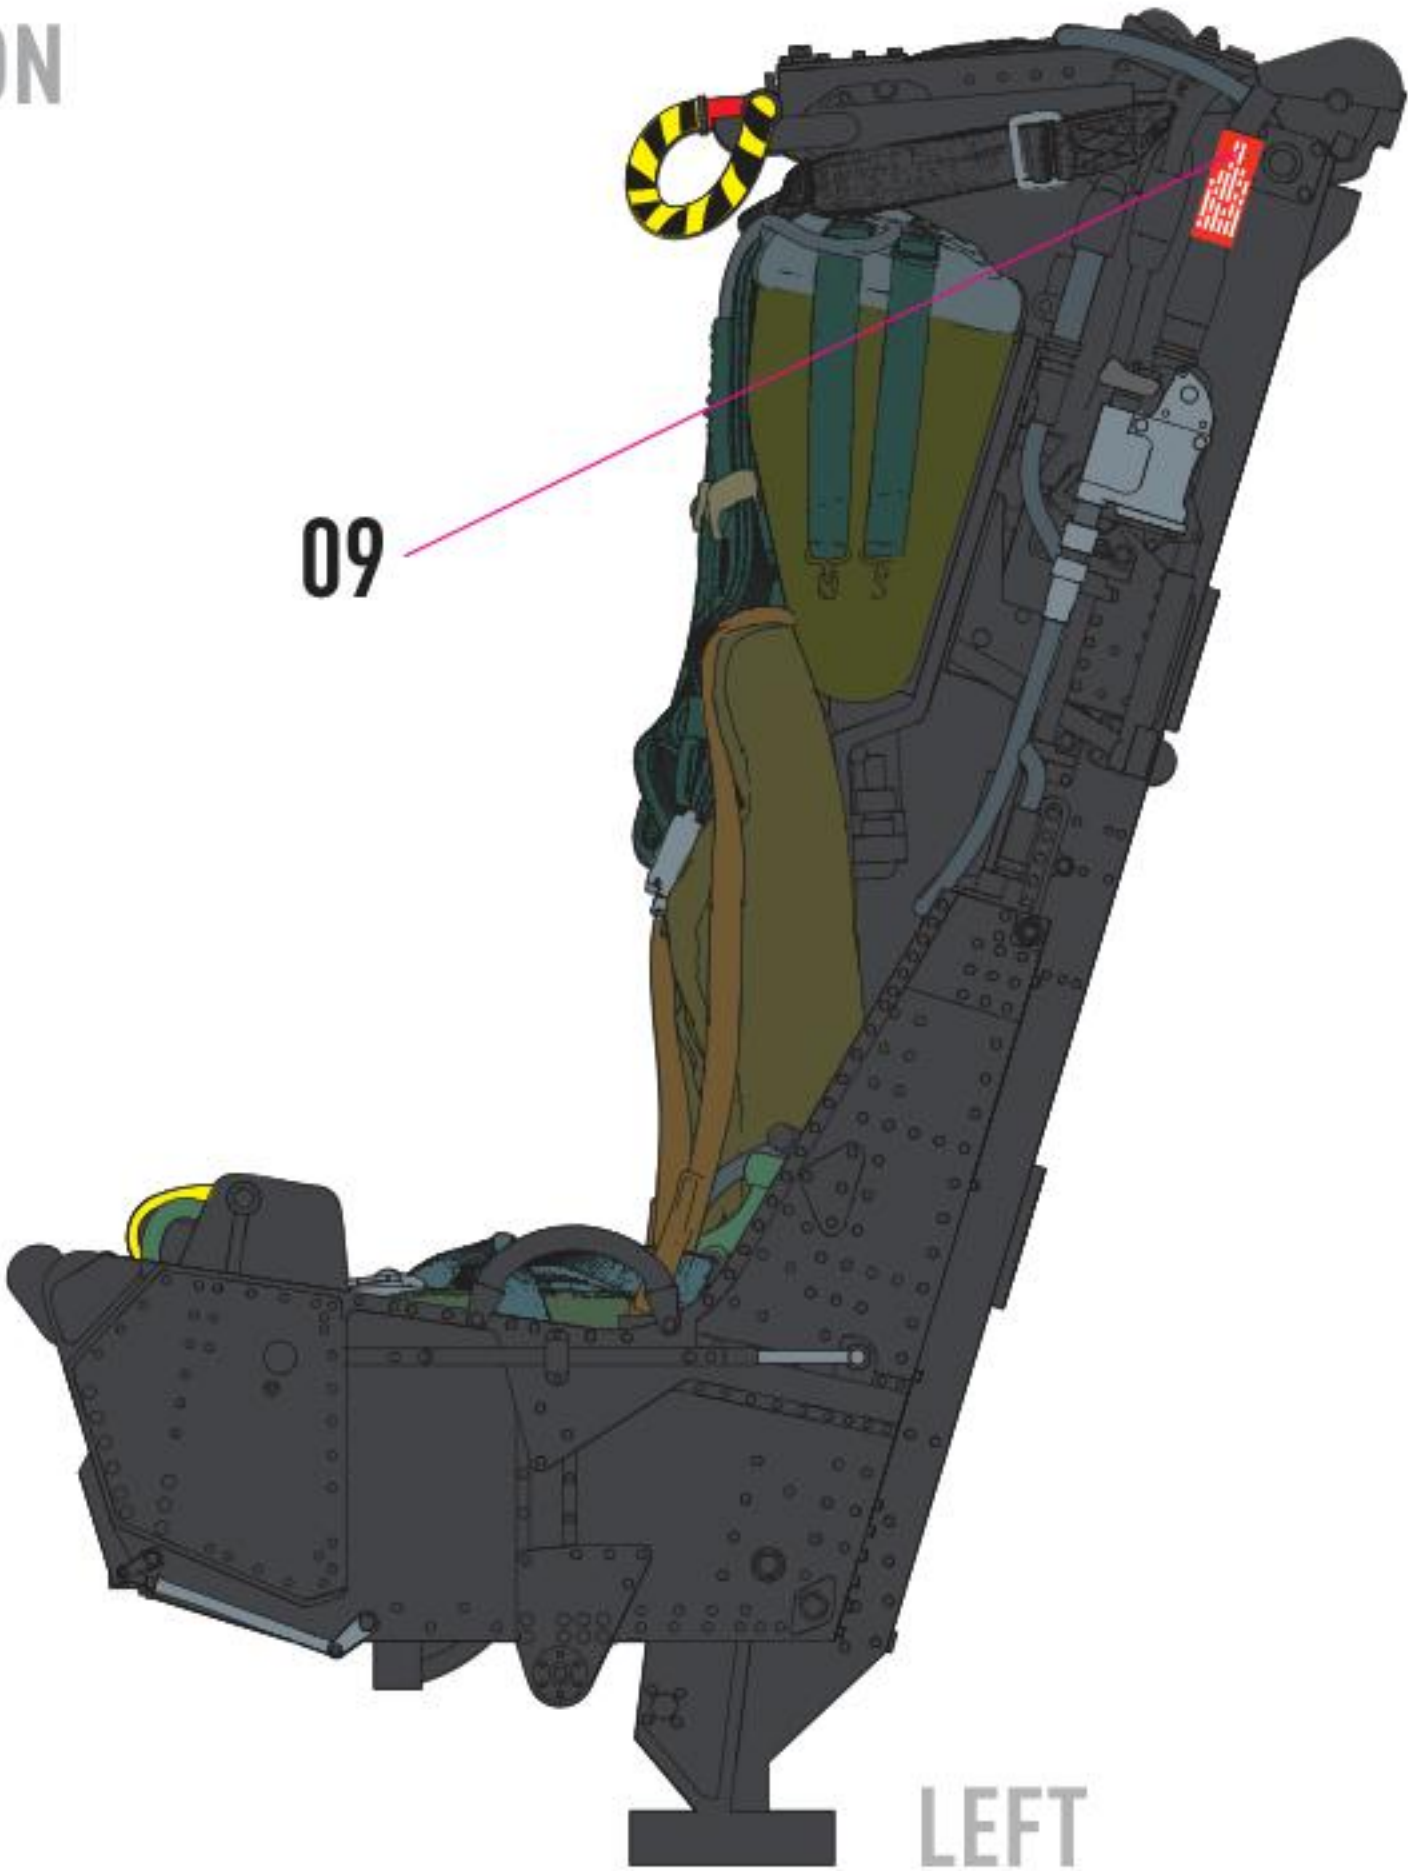

LEFT

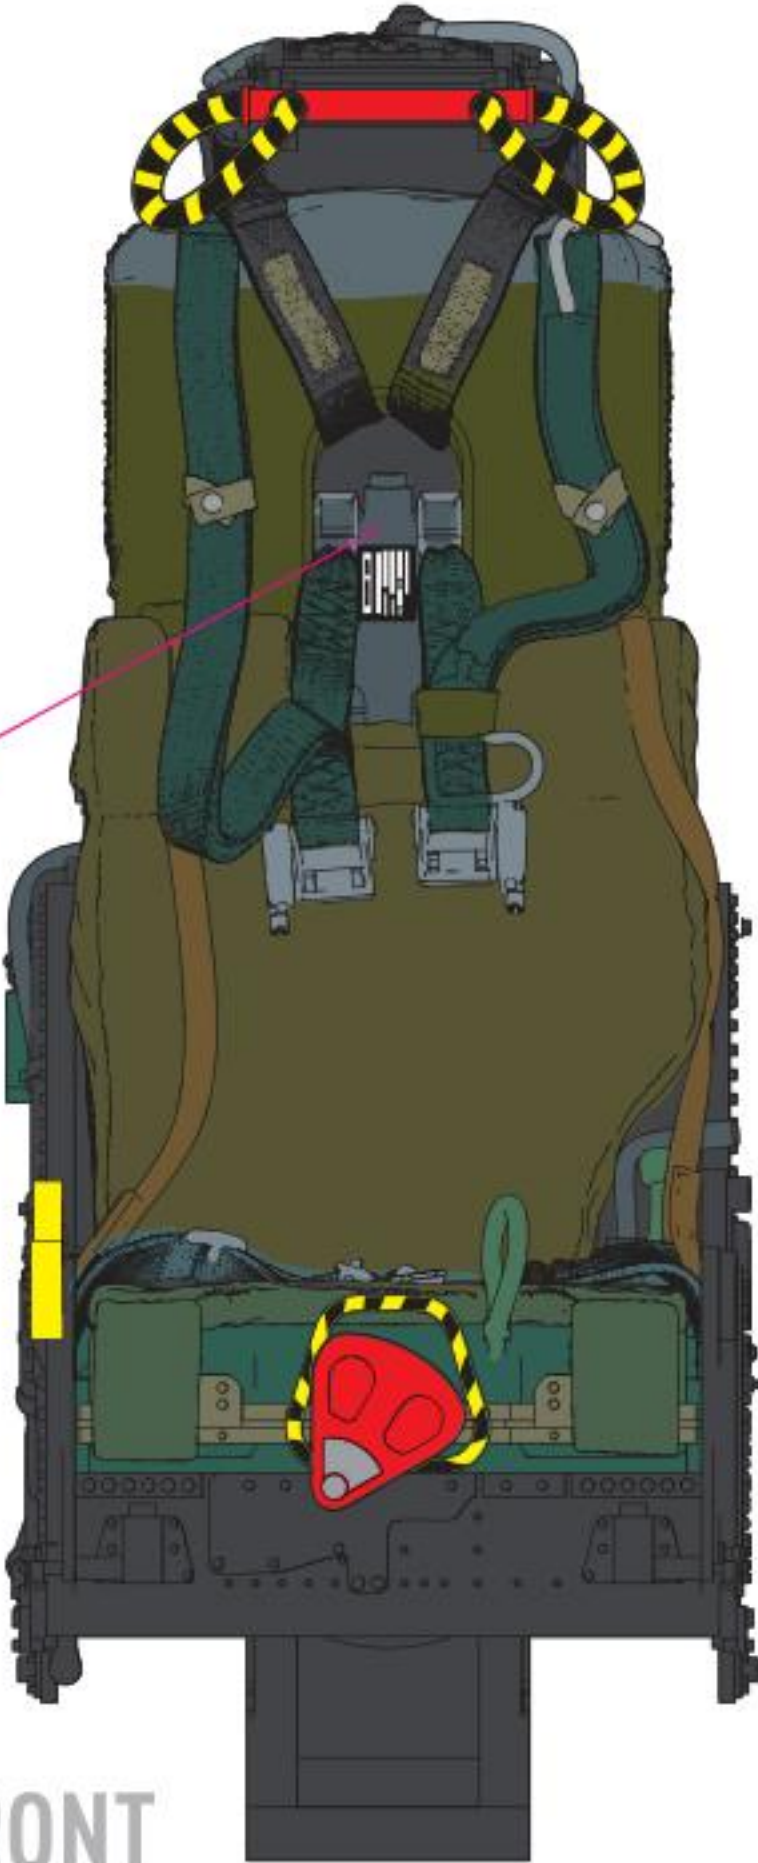


FRONT

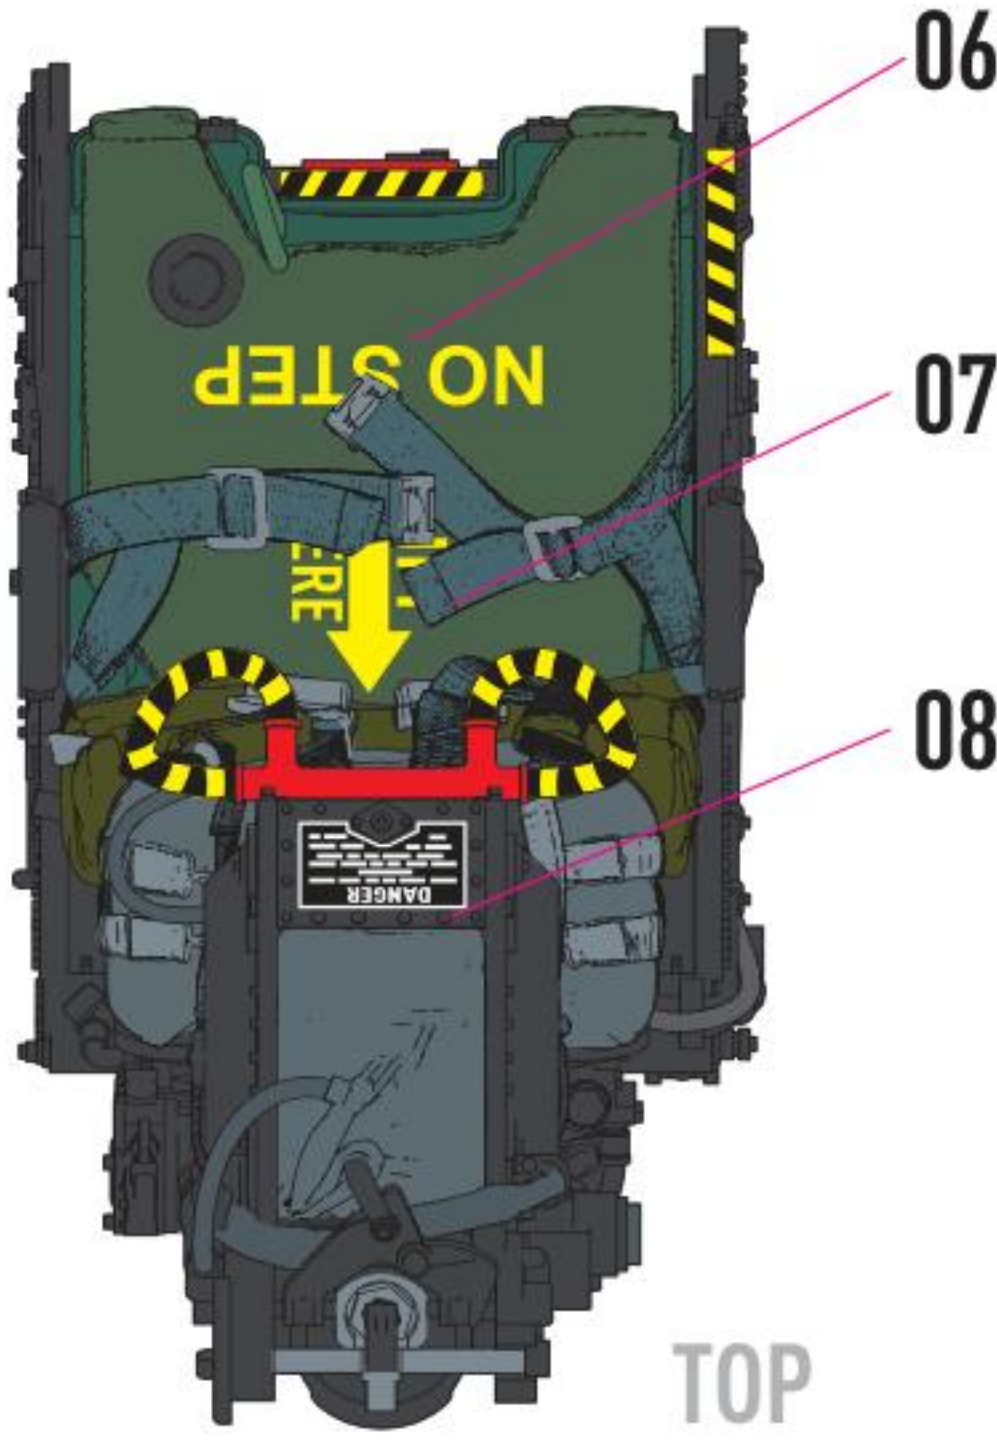


TOP

M.B. Mk7





M.B. Mk-H5

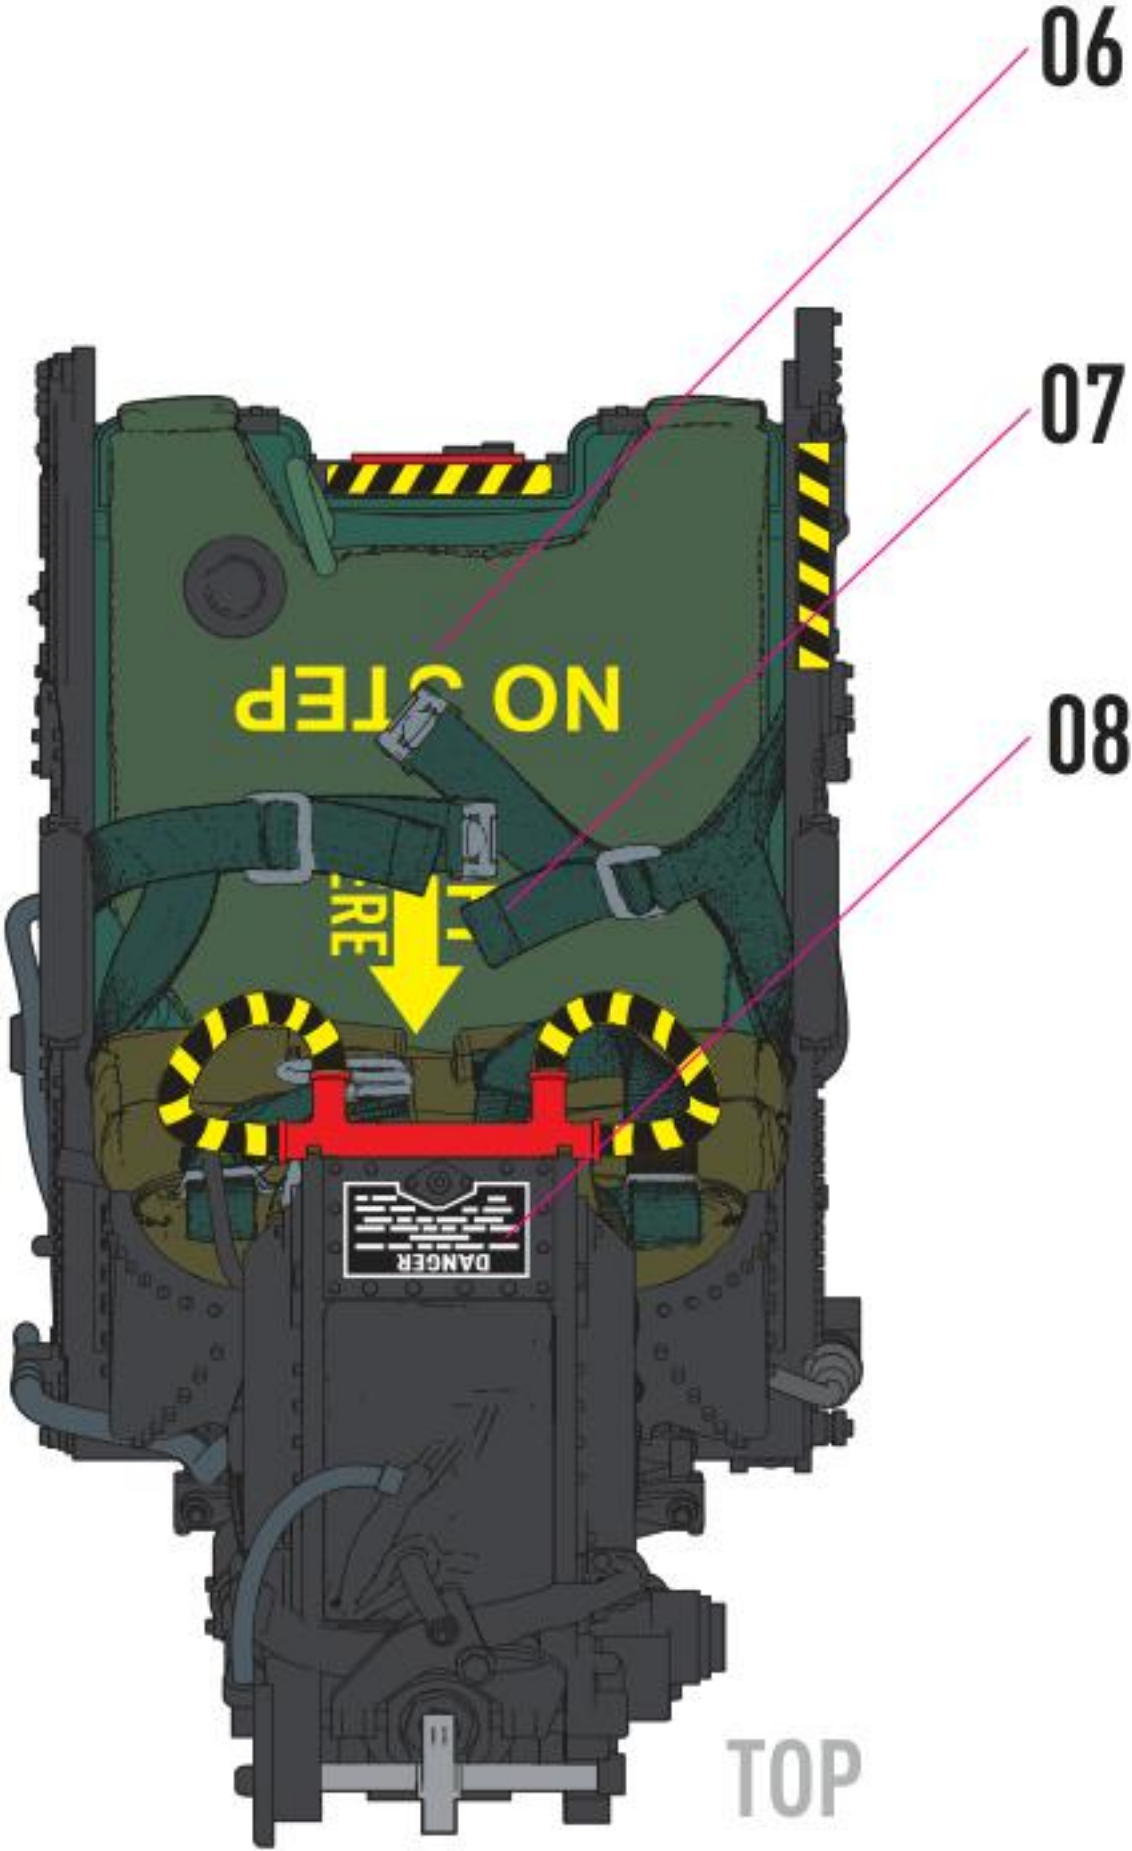

TOP

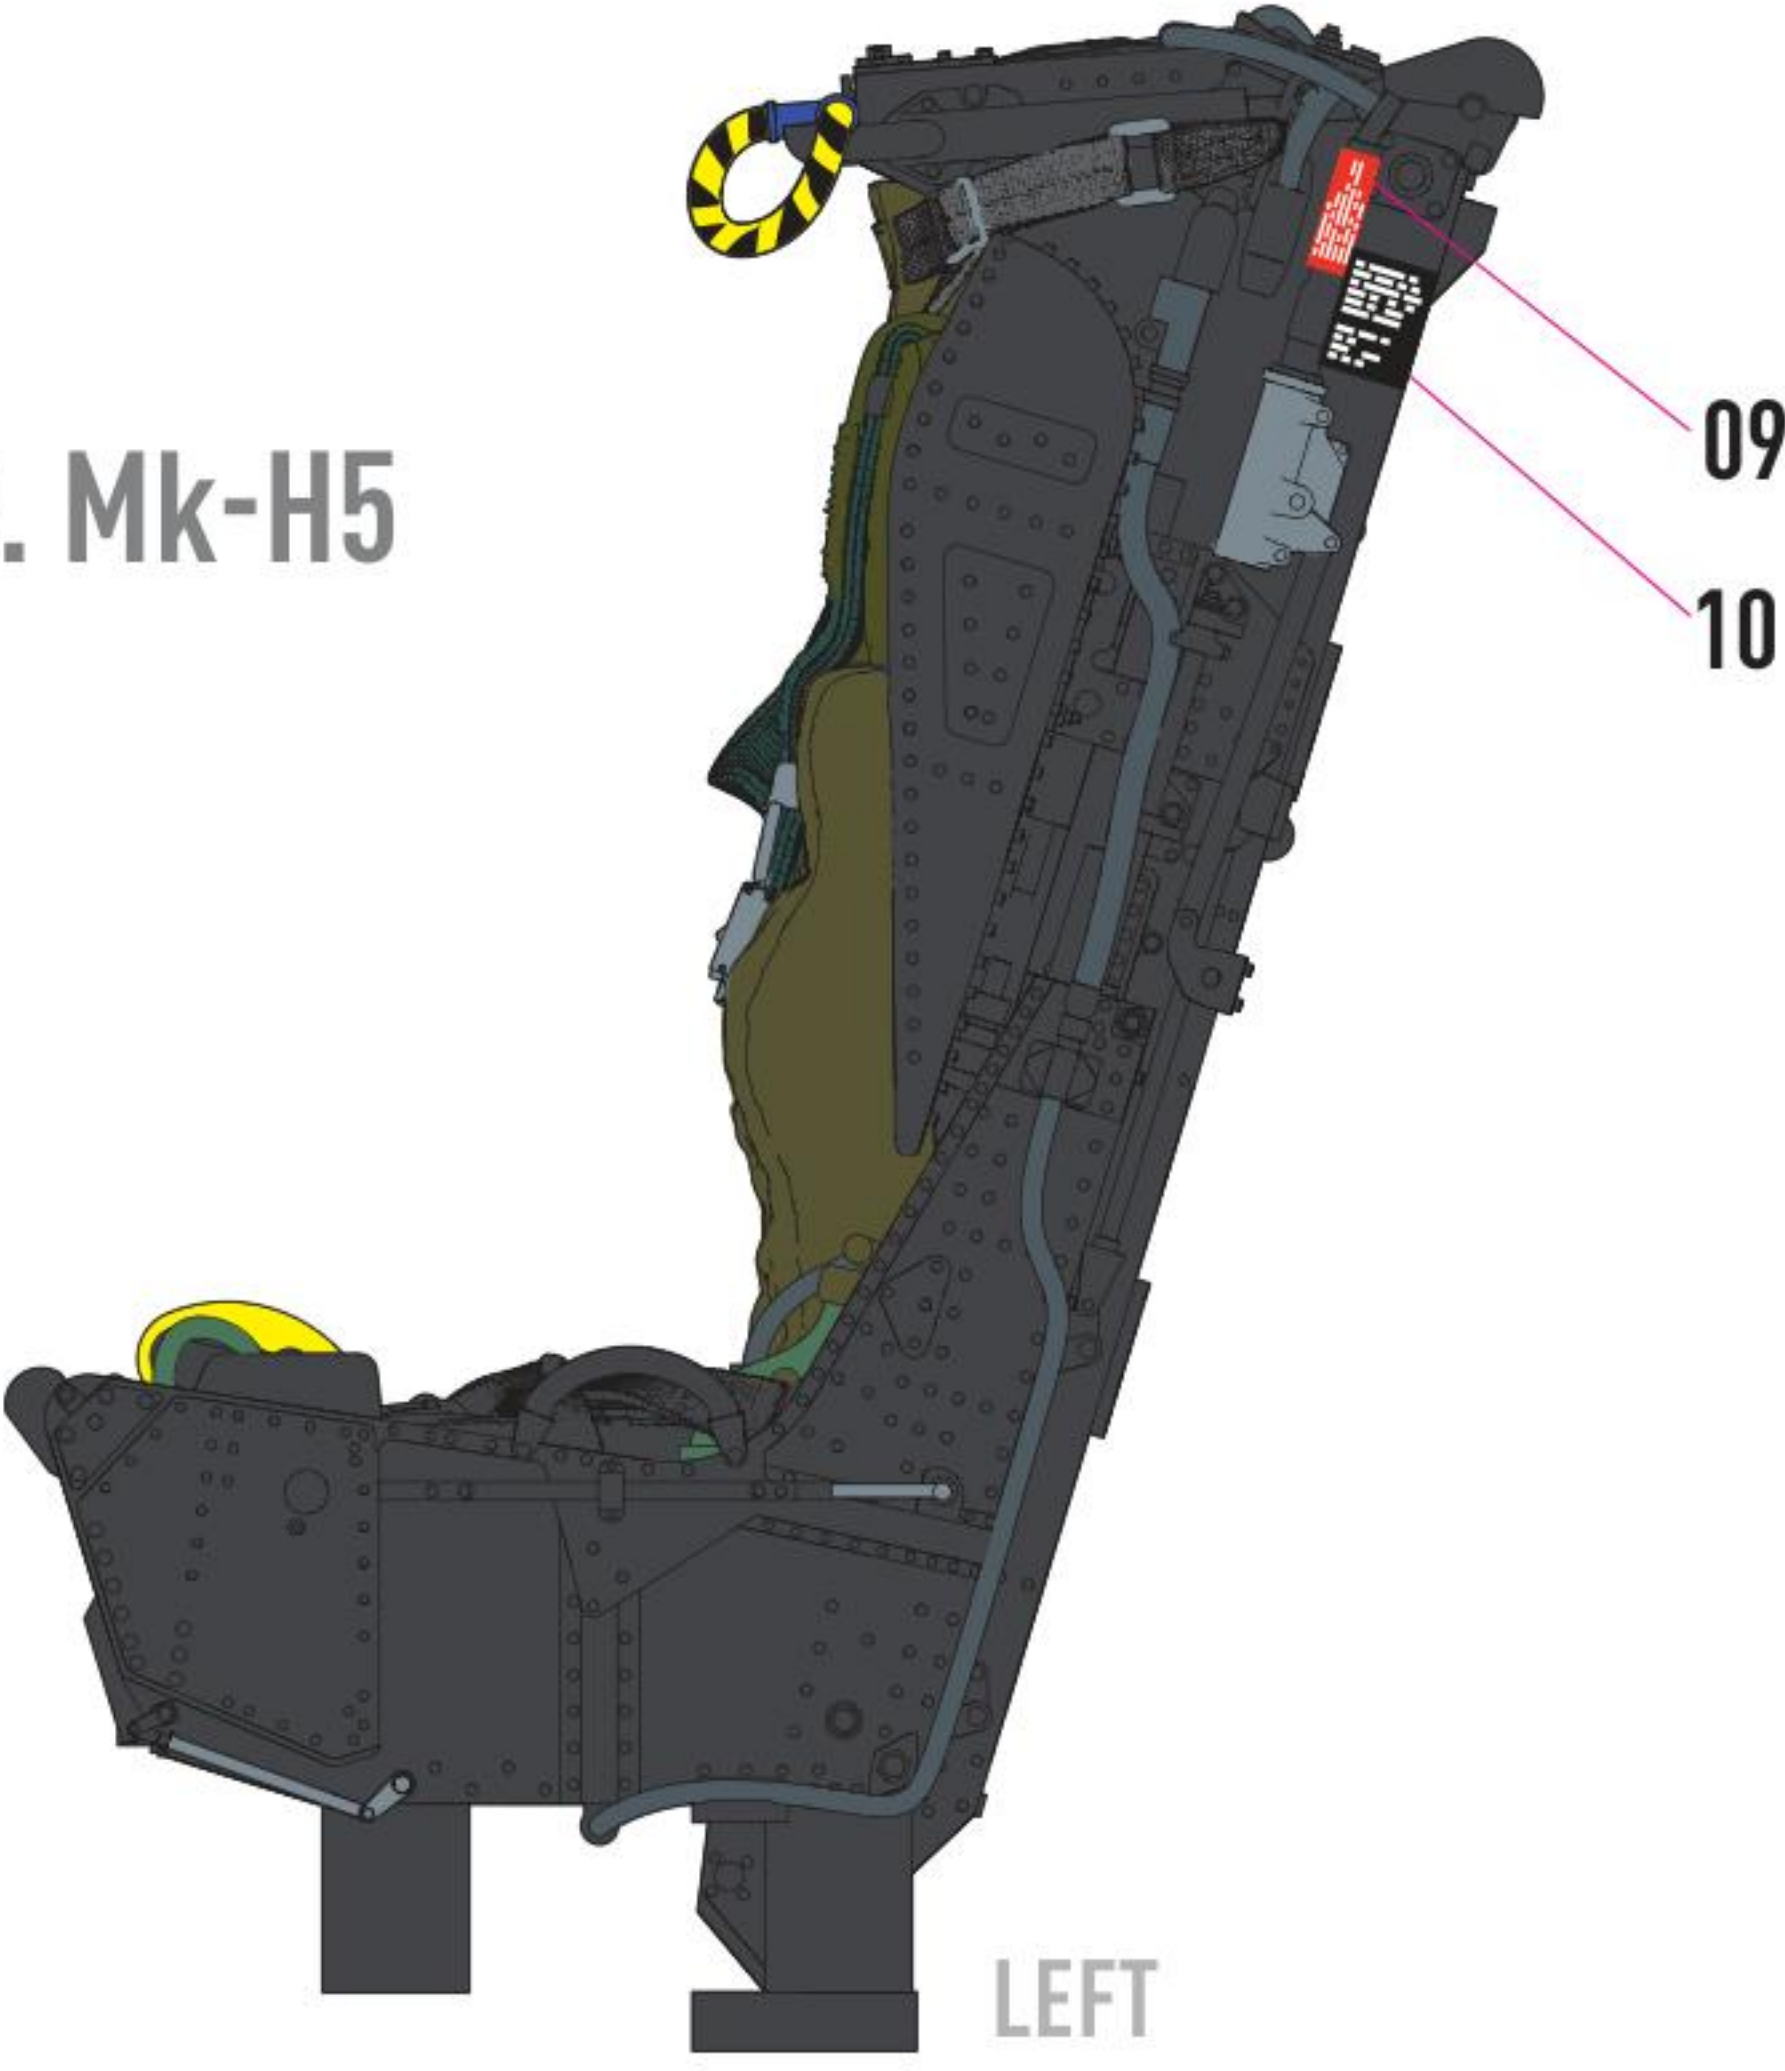

LEFT

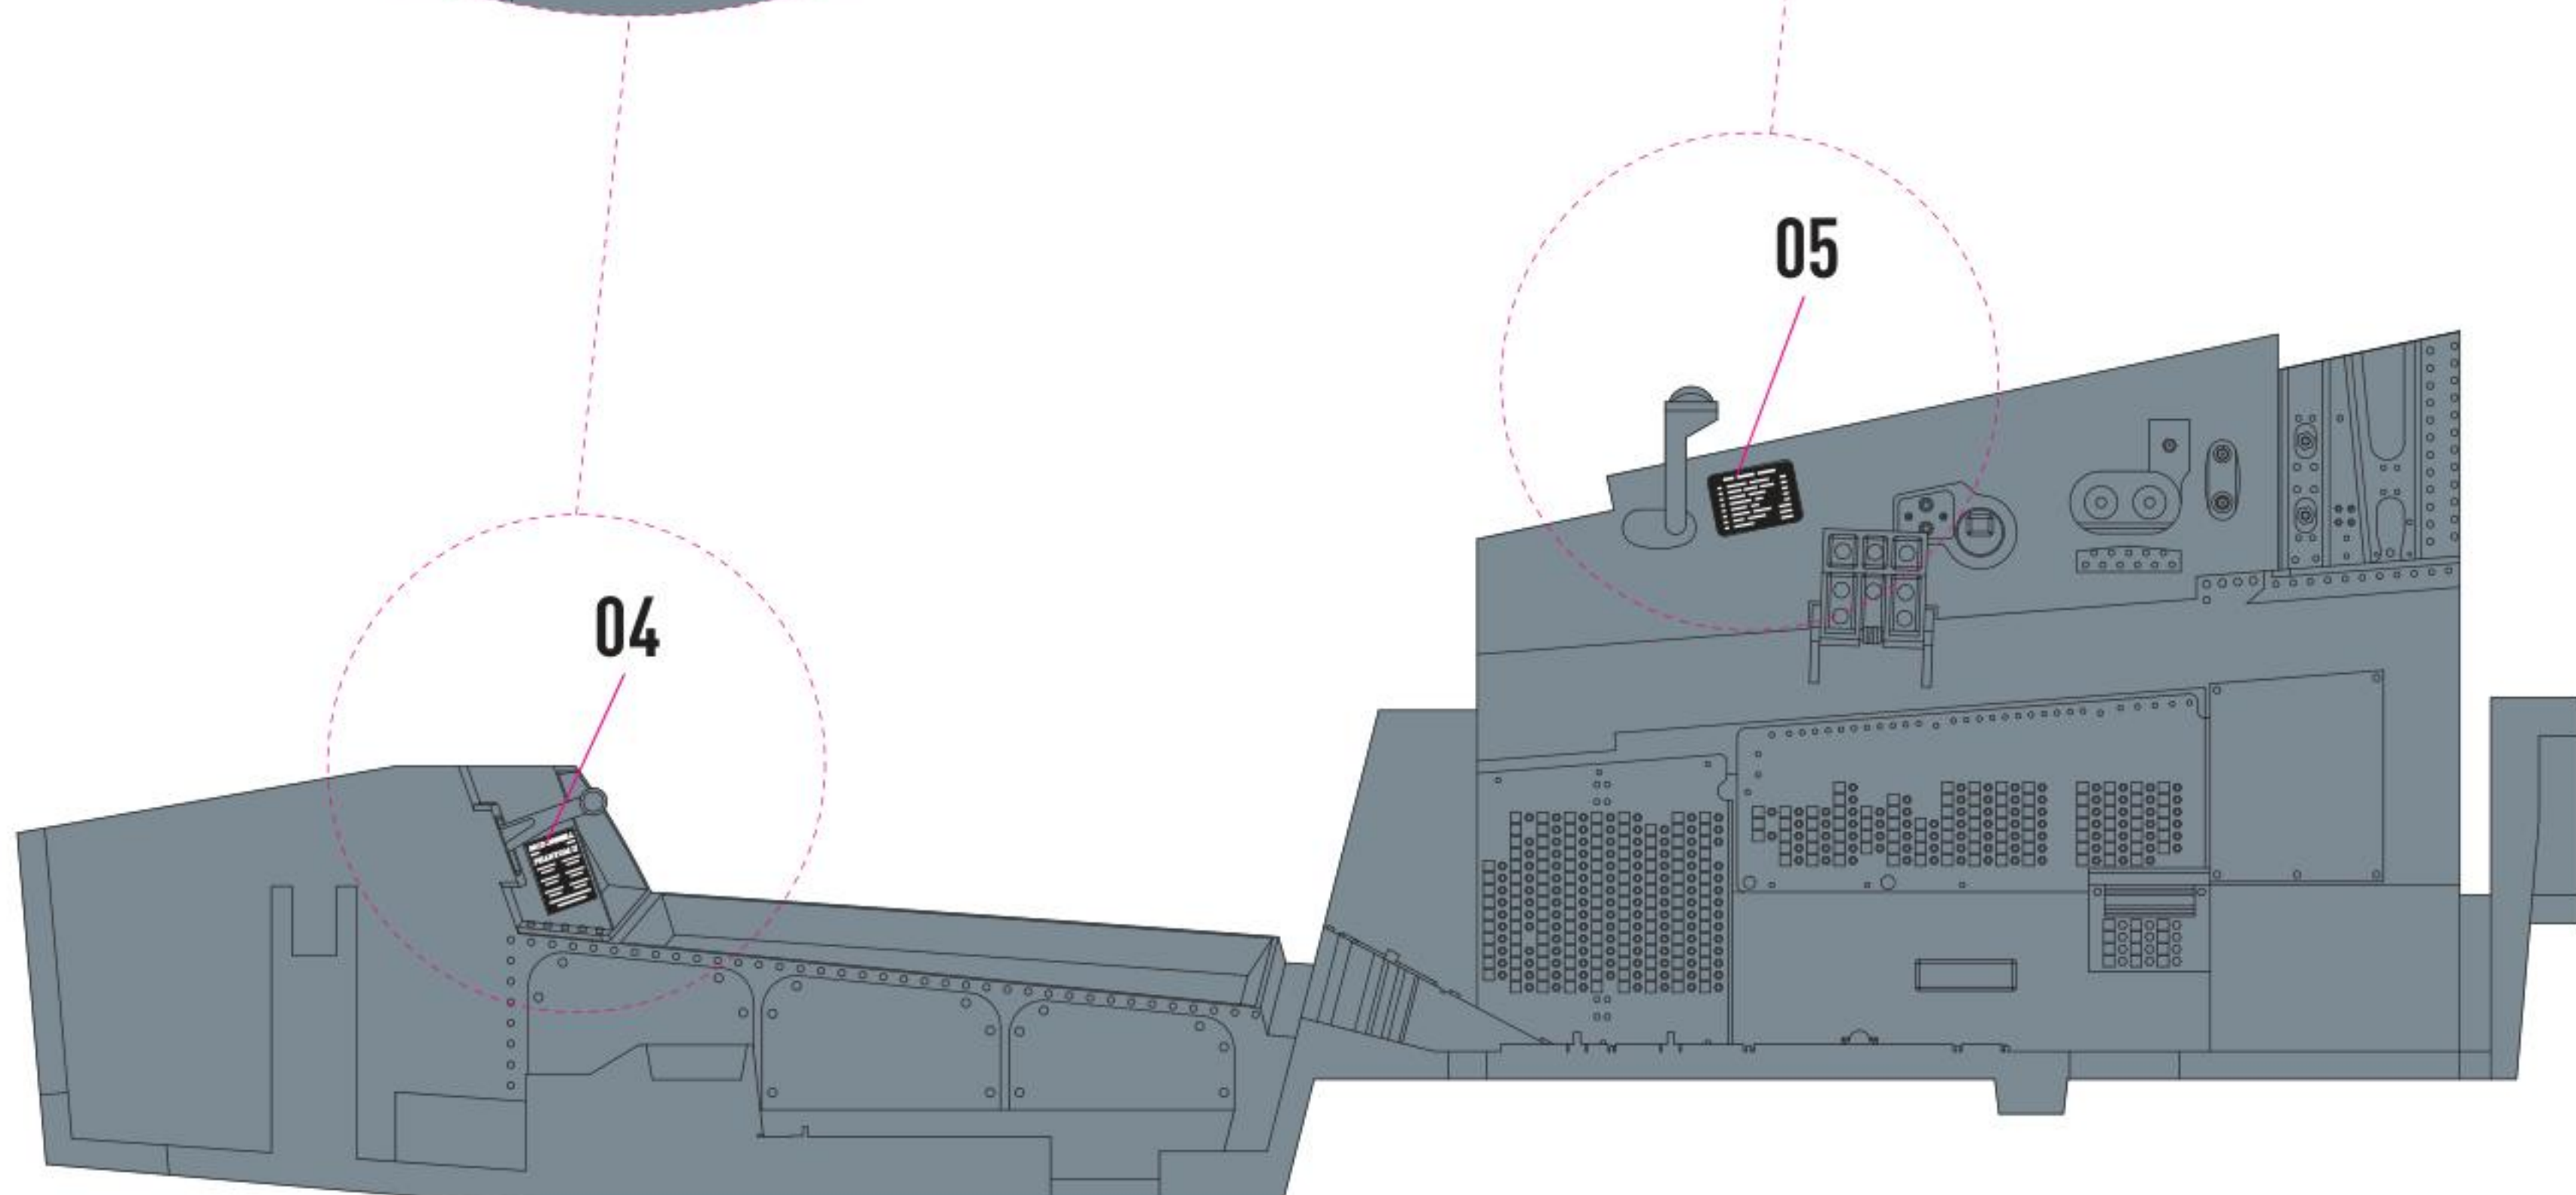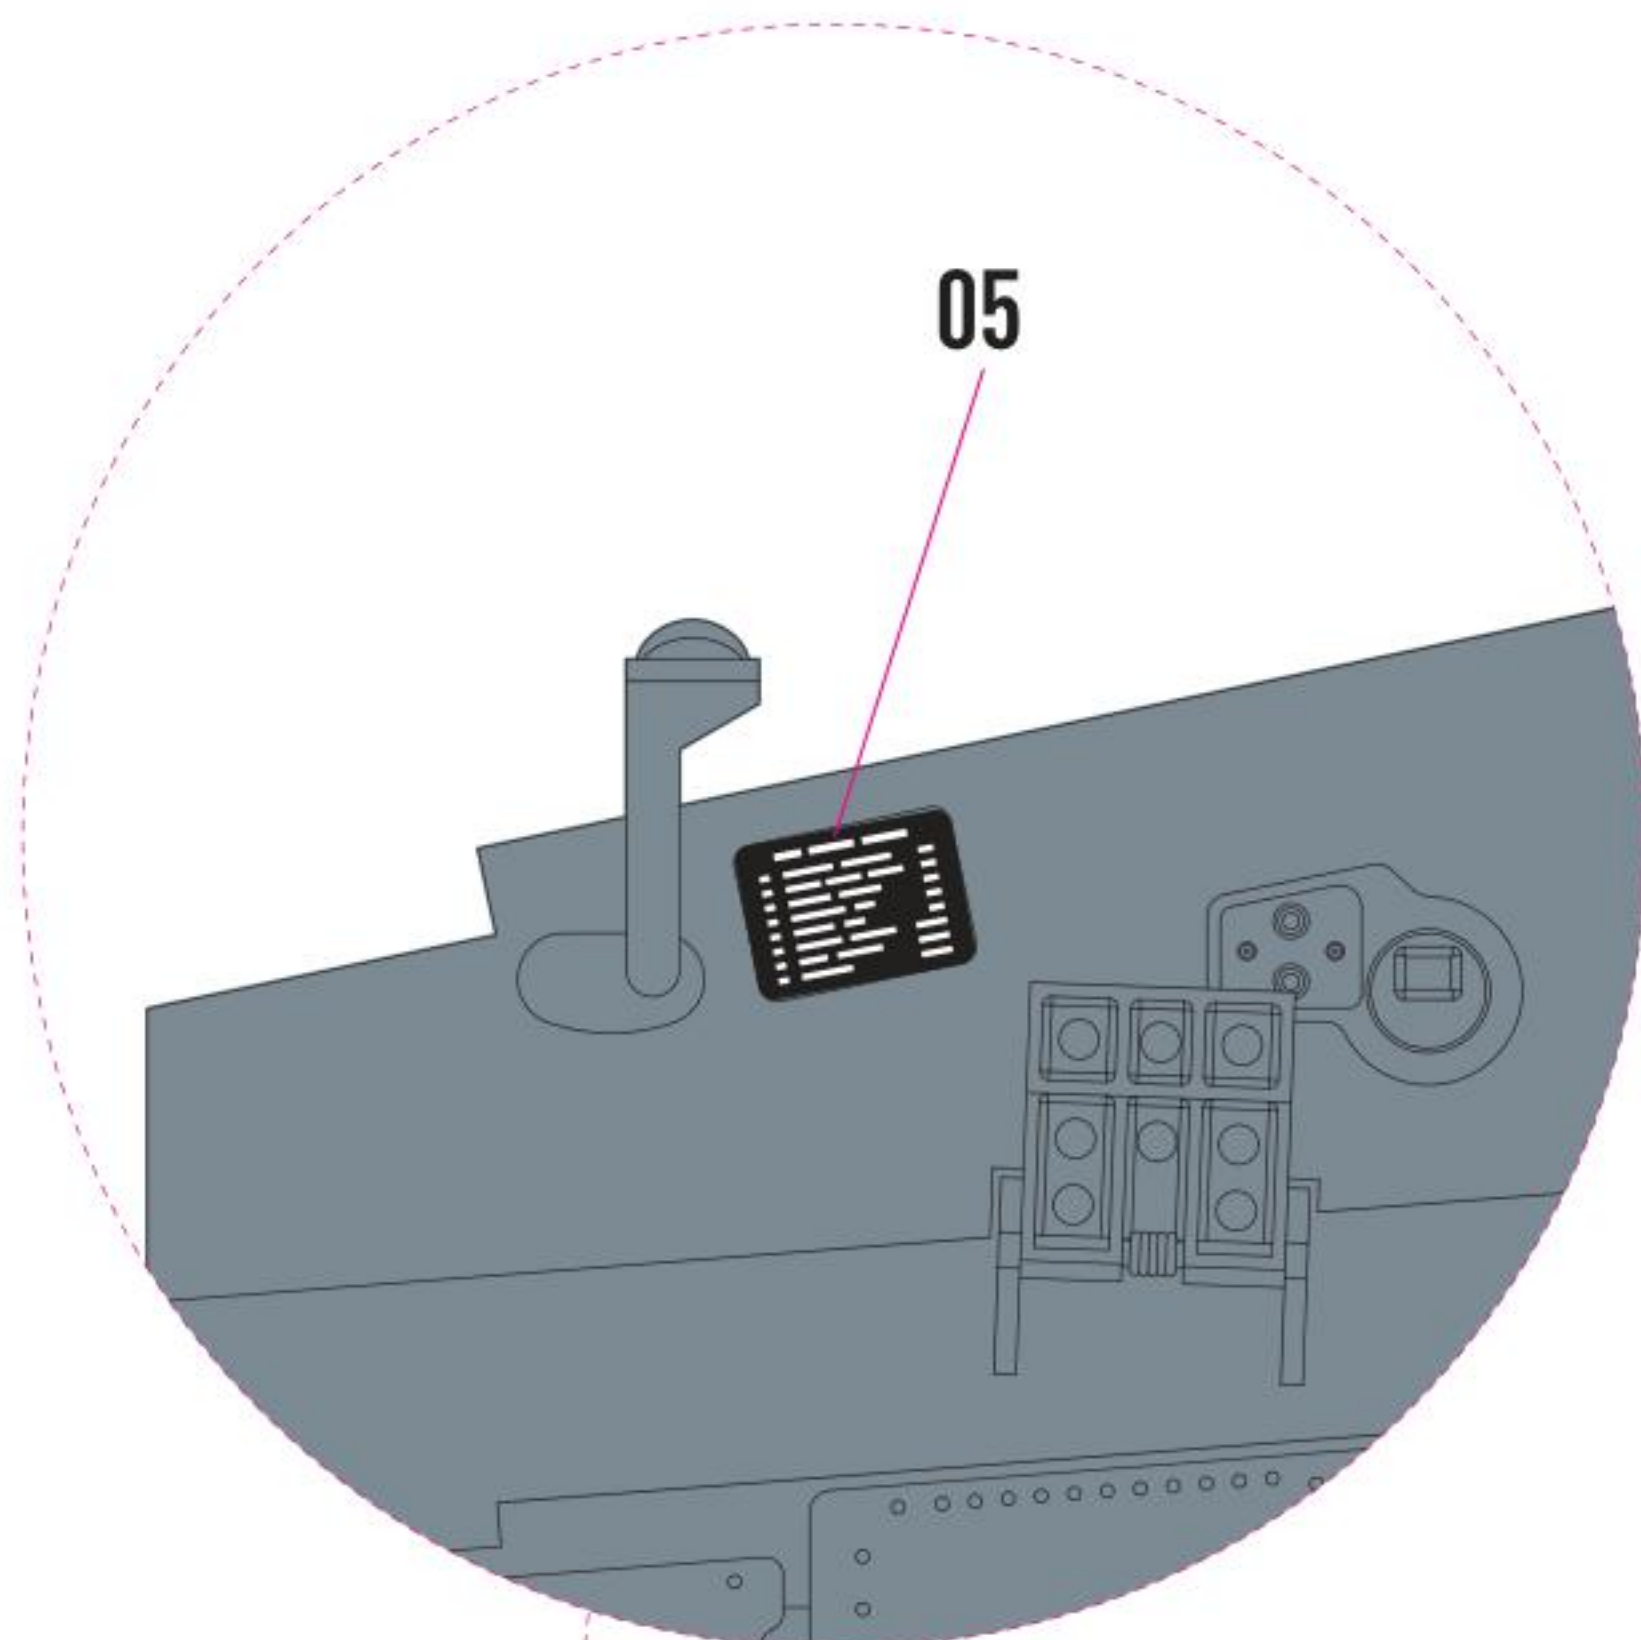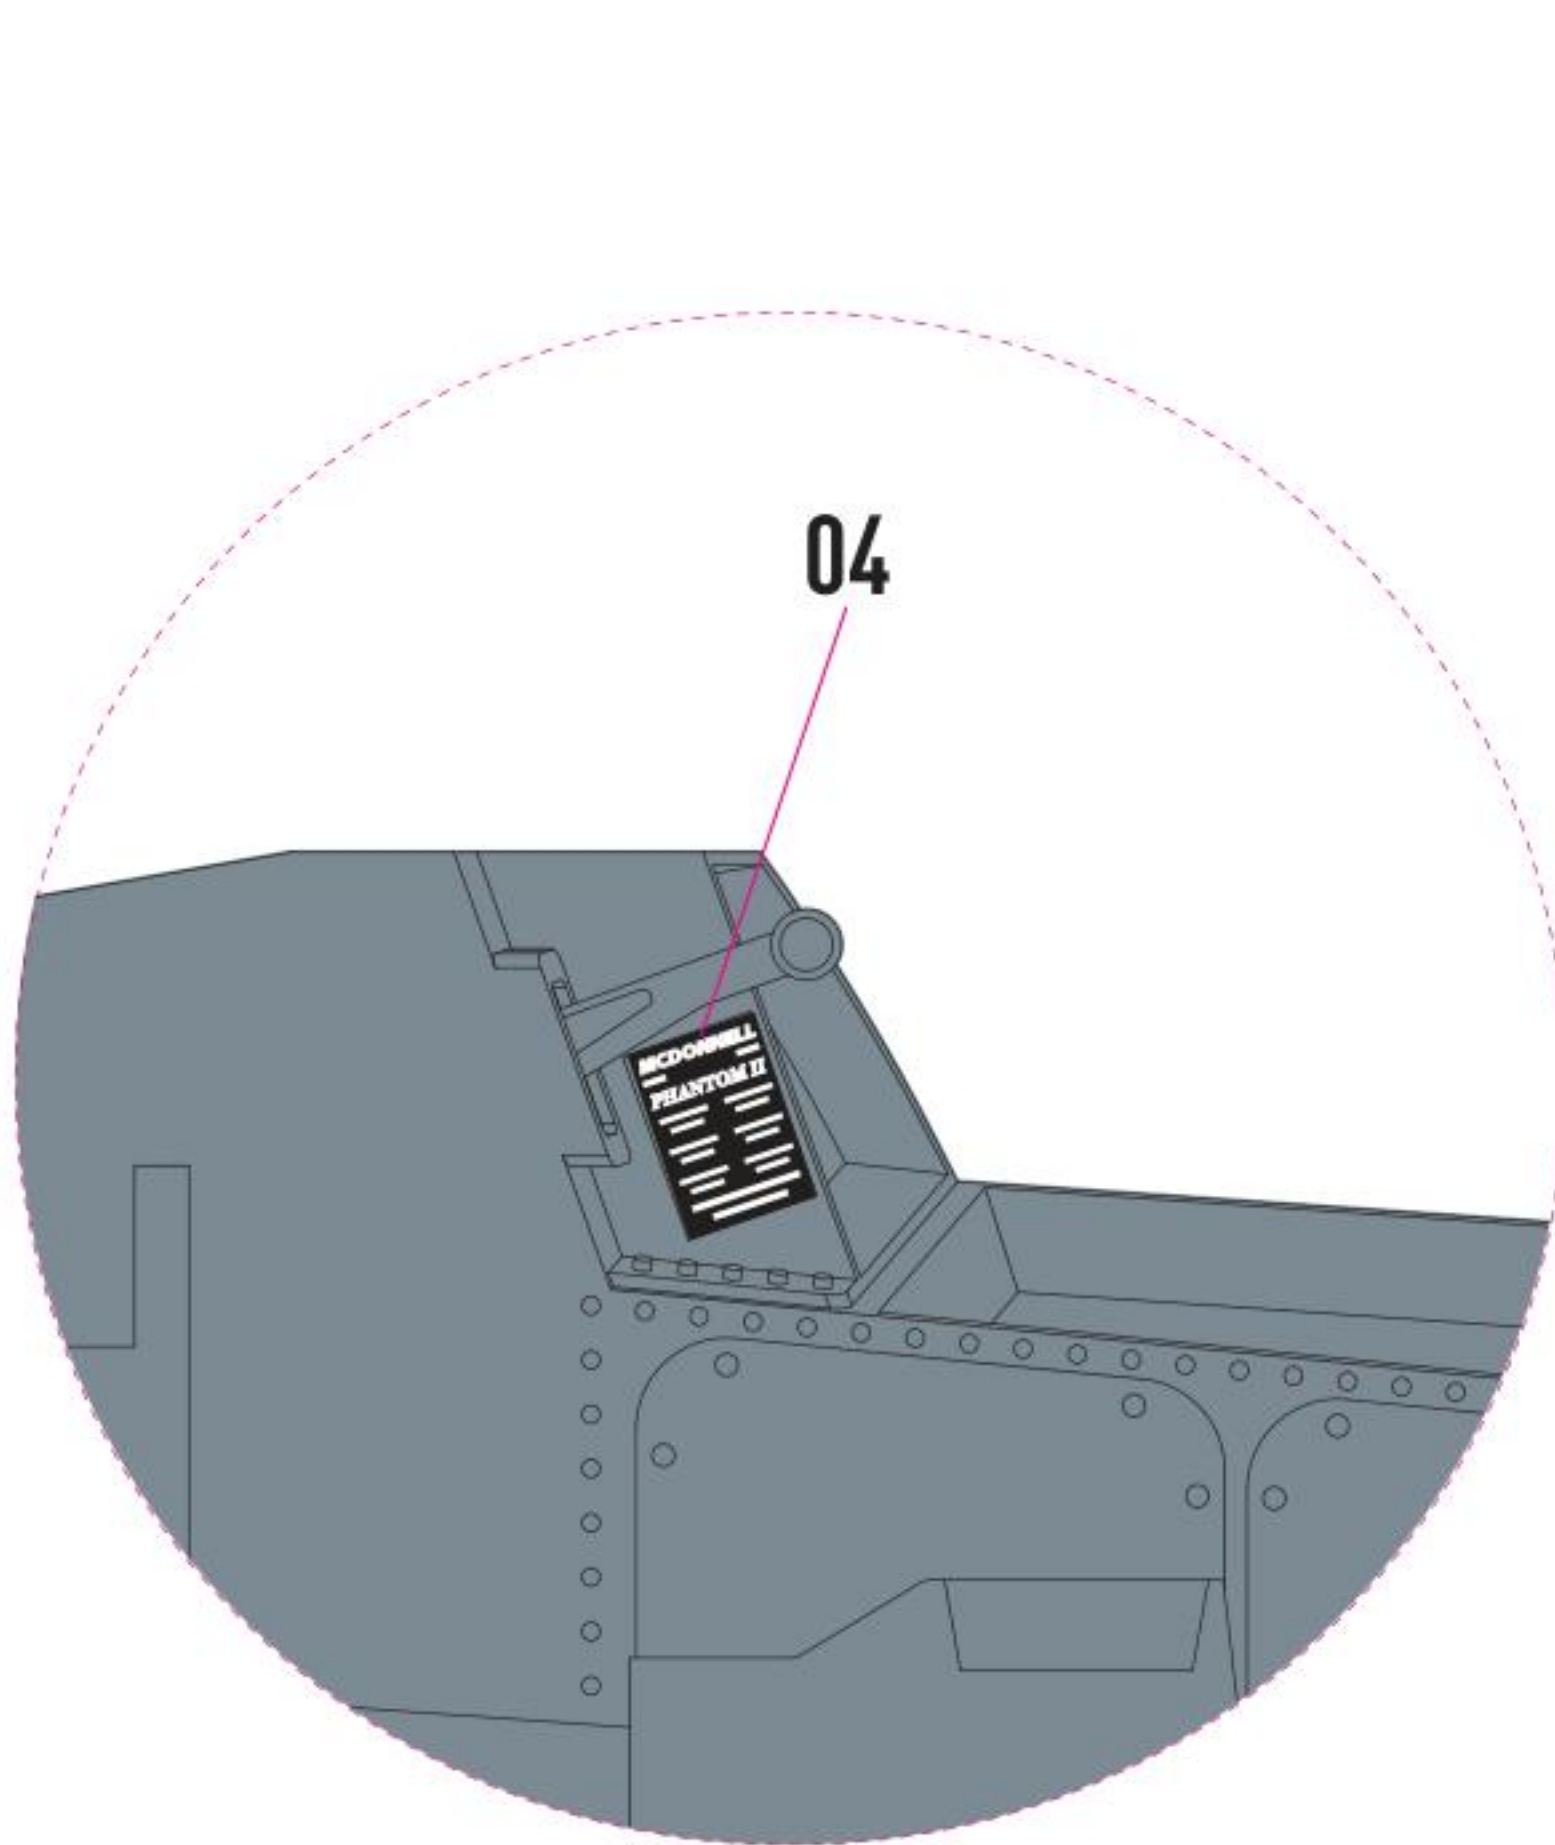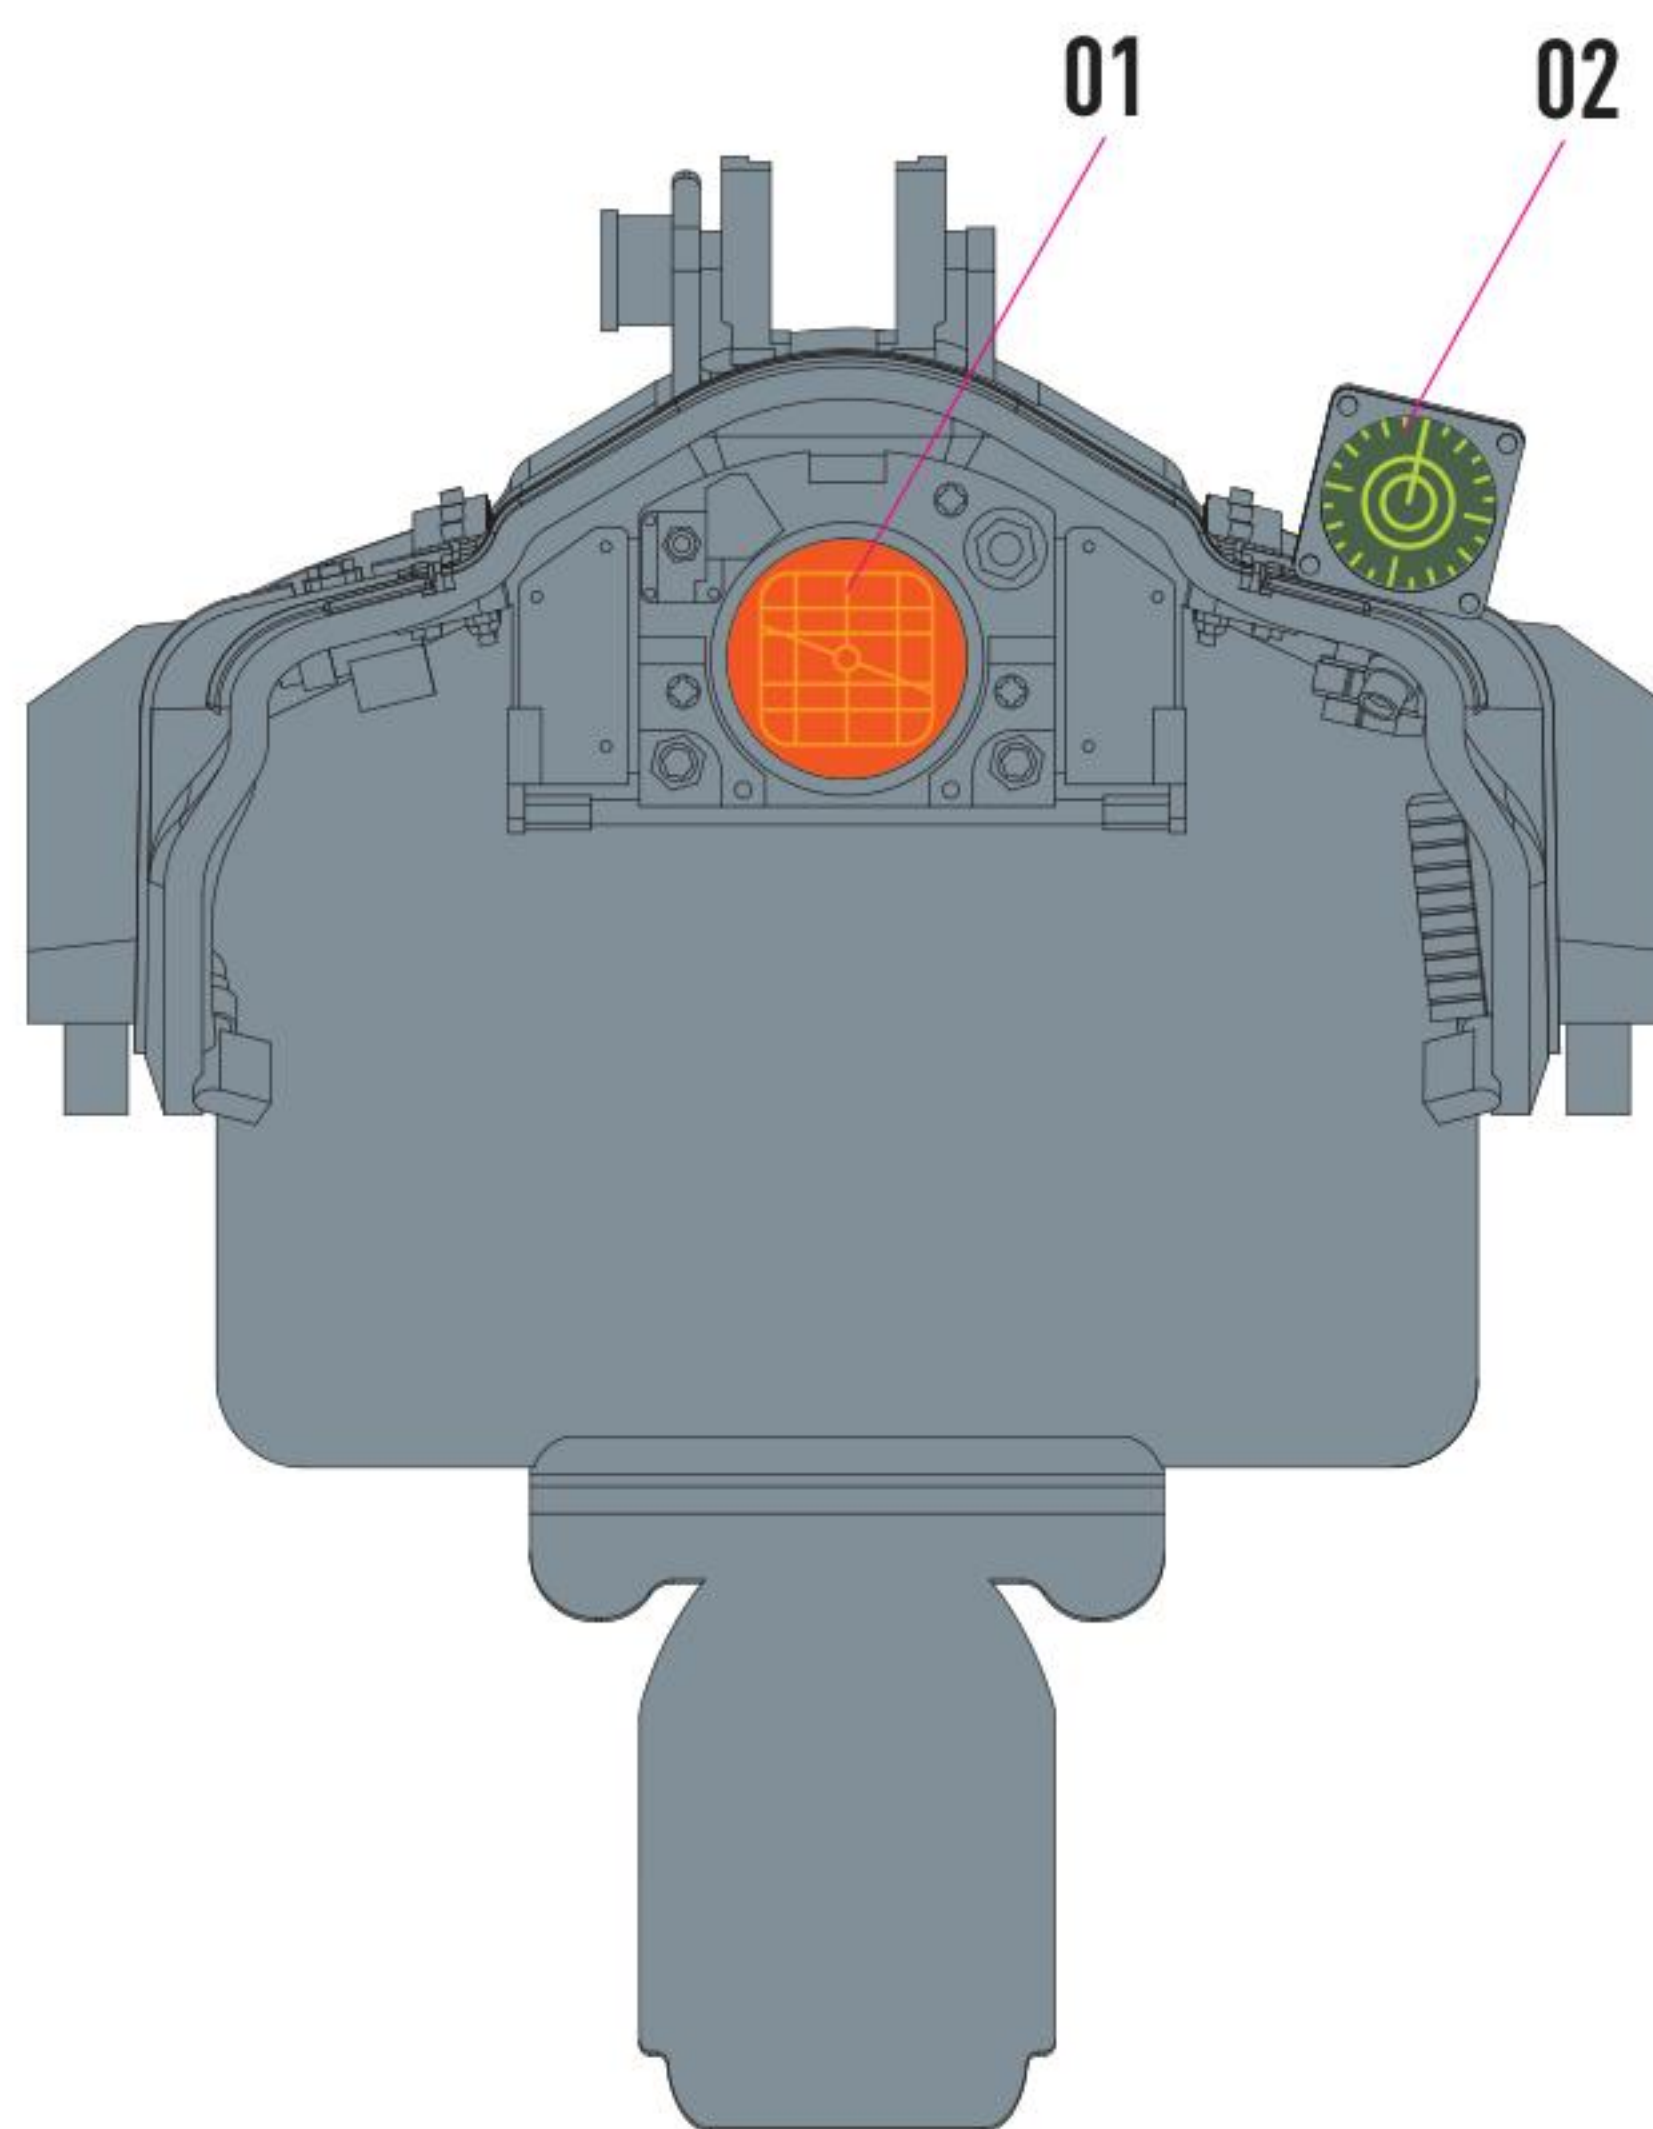

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua