



## DETAILS AFTER REMOVAL FROM SUPPORTS

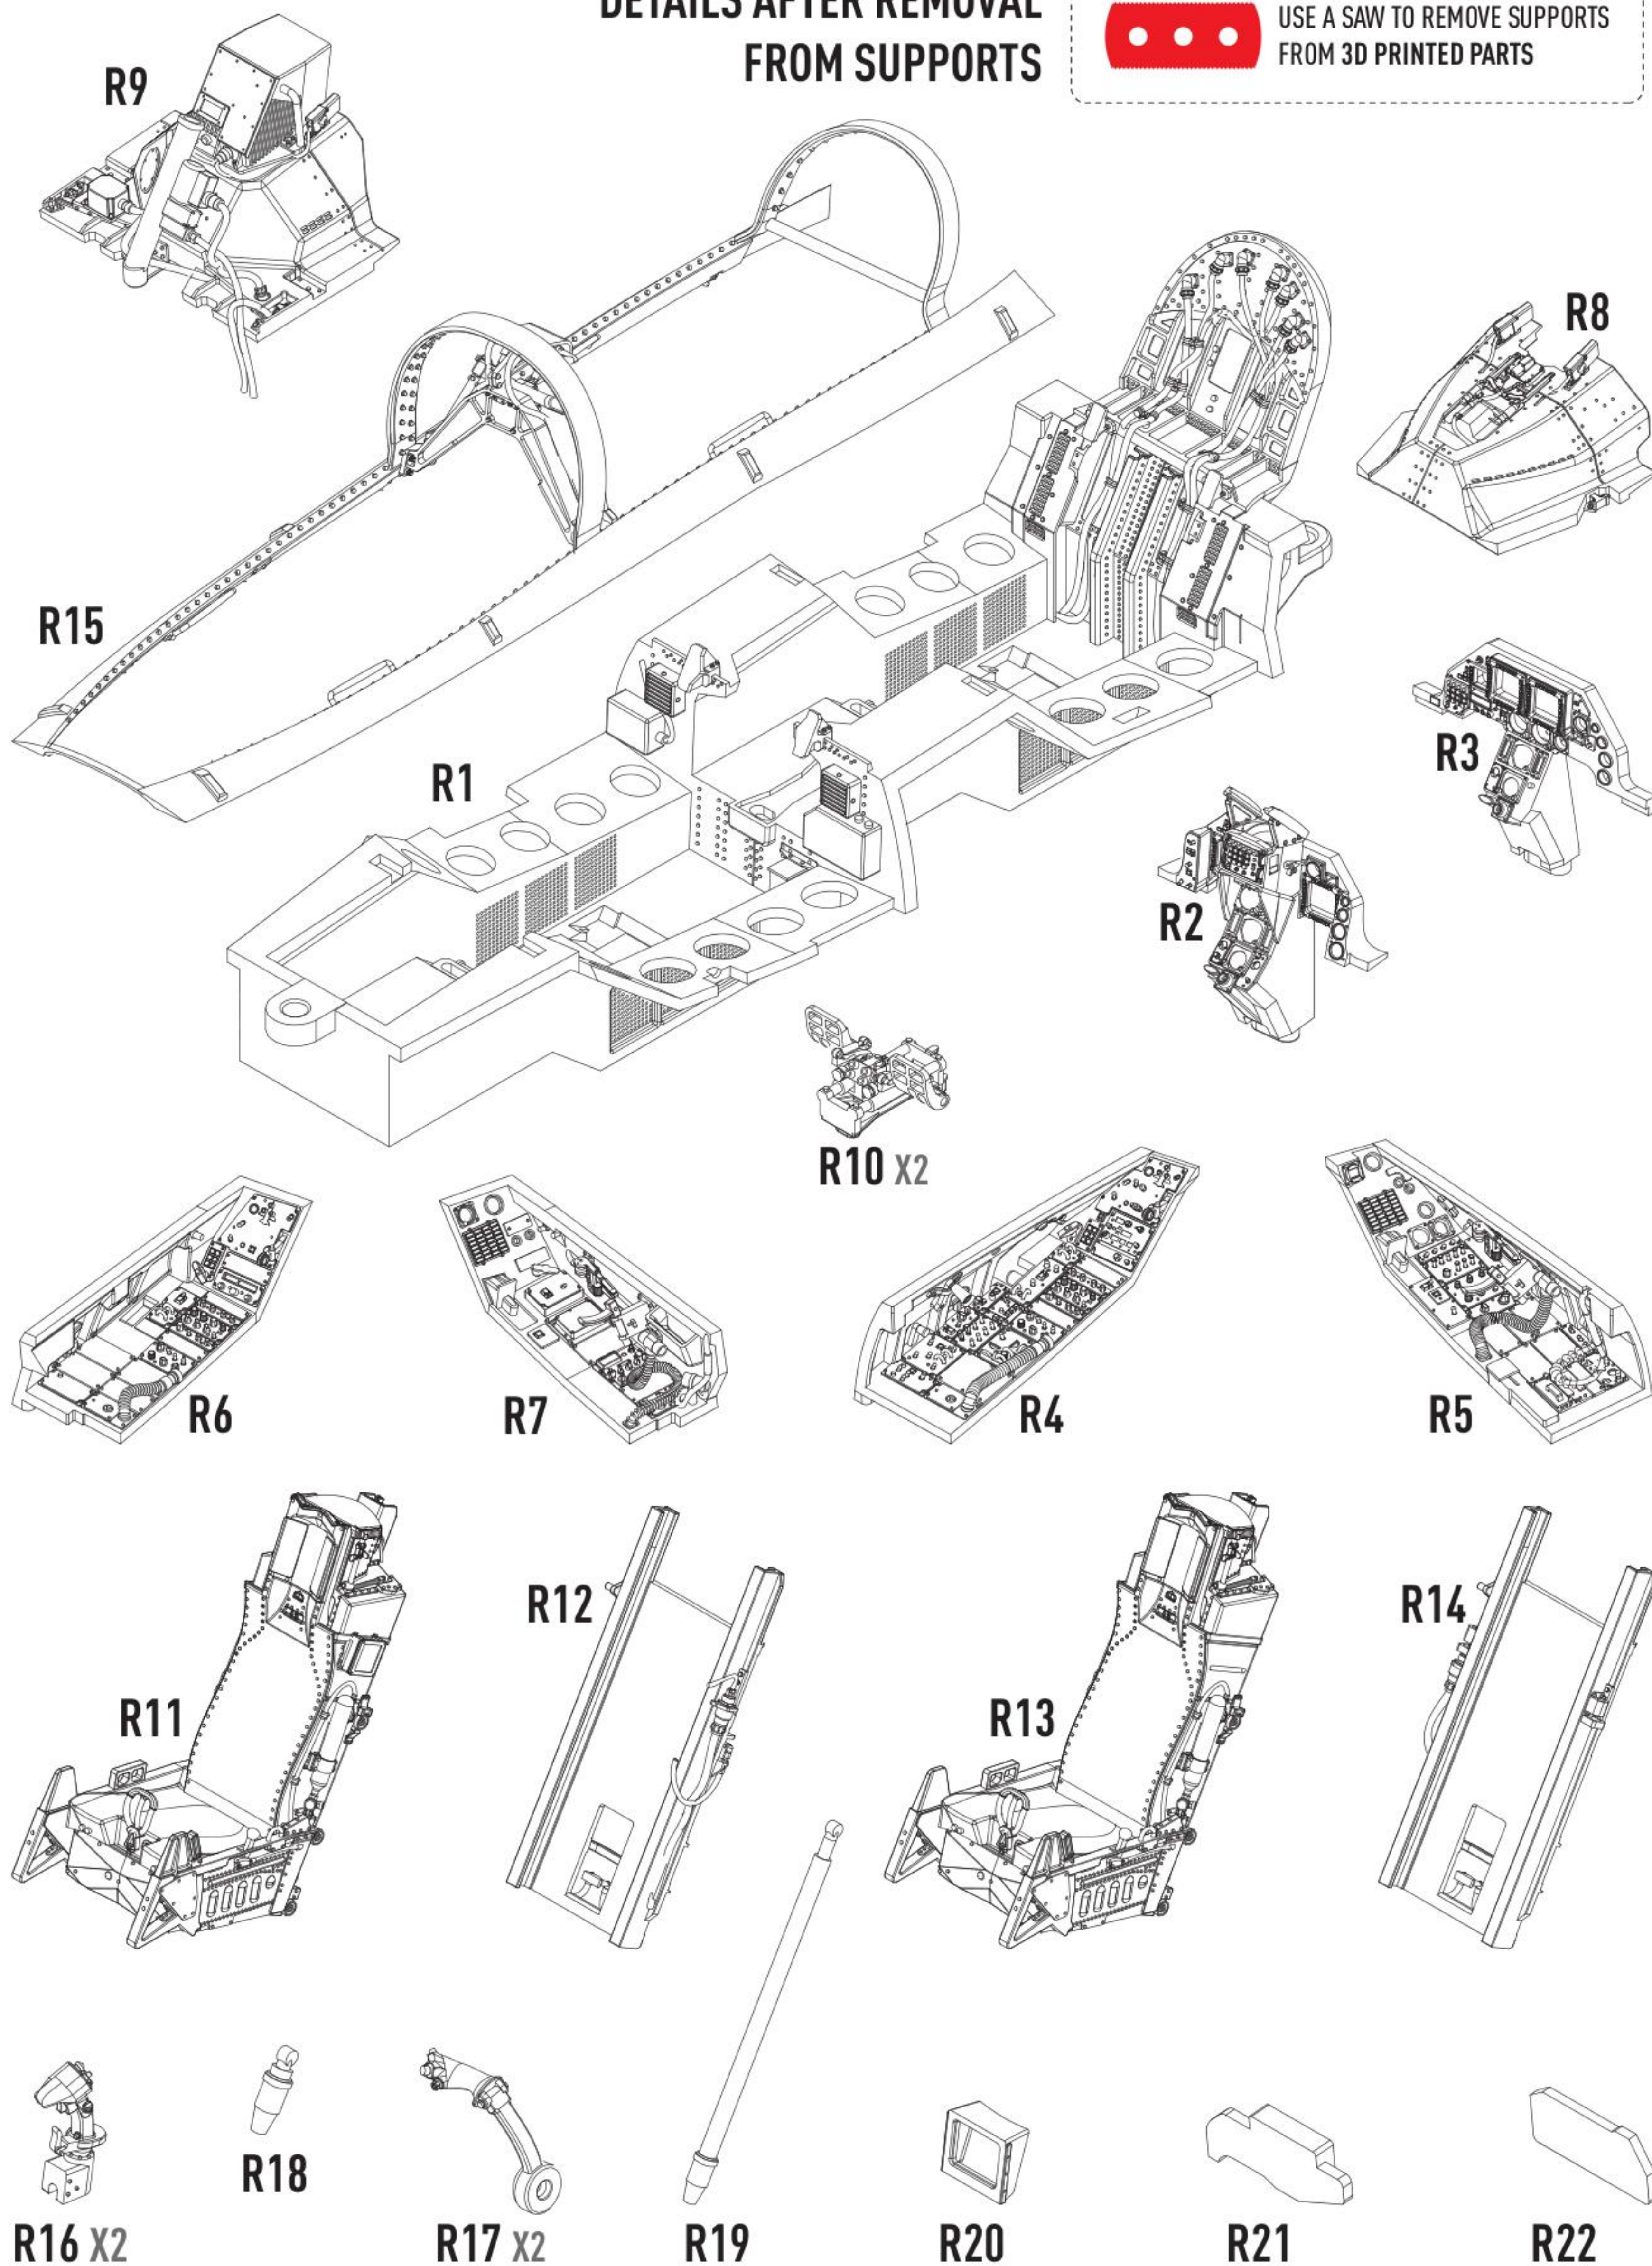


USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS






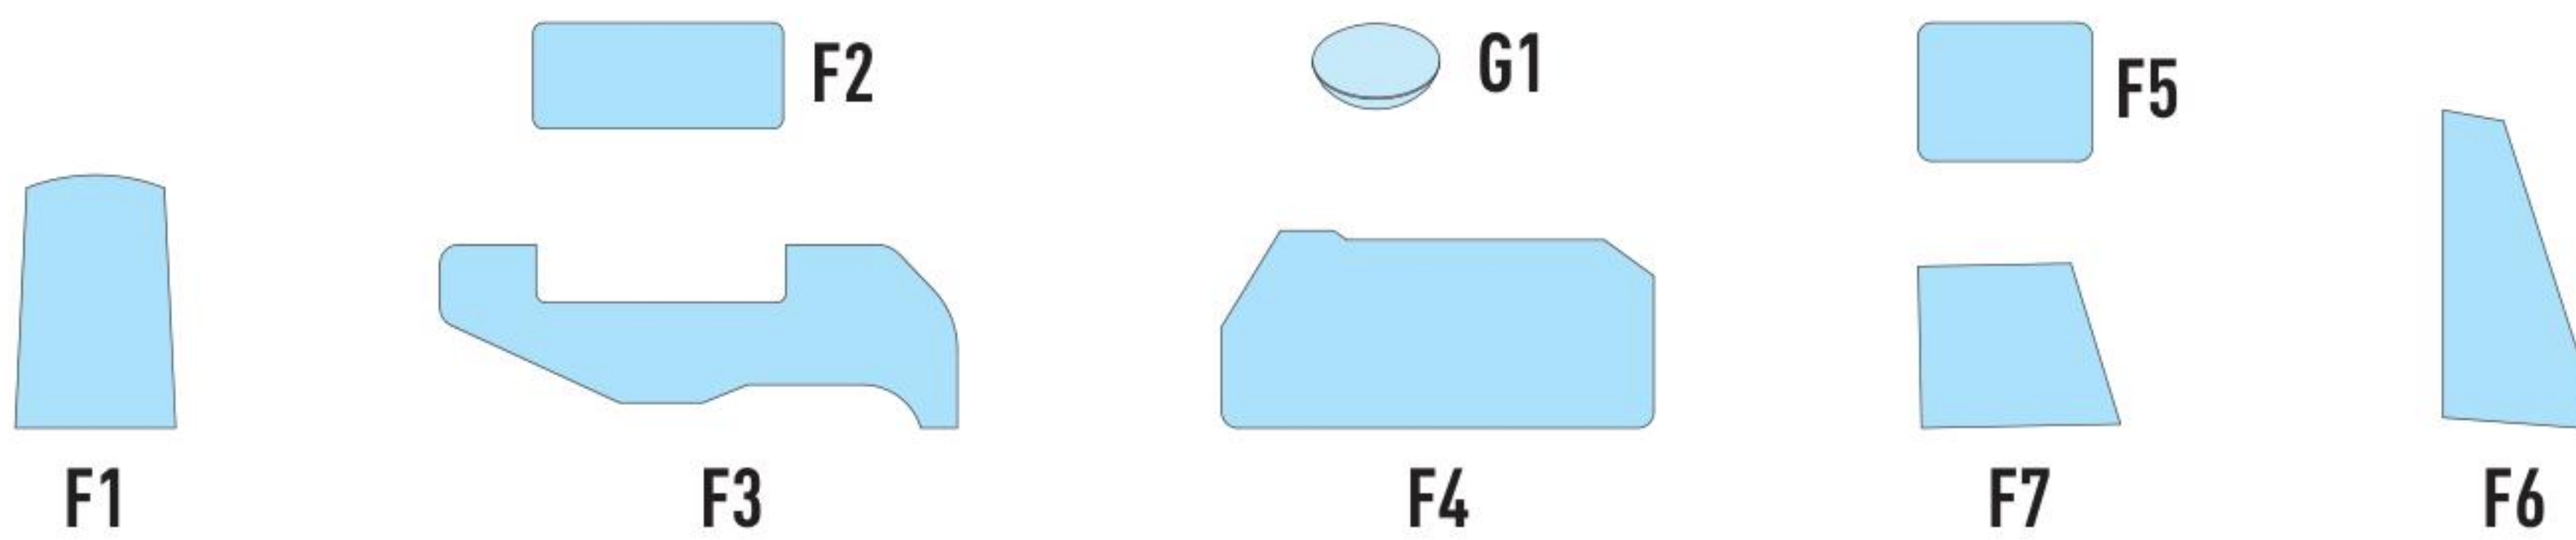


1

PART A9  
FROM GWH KIT

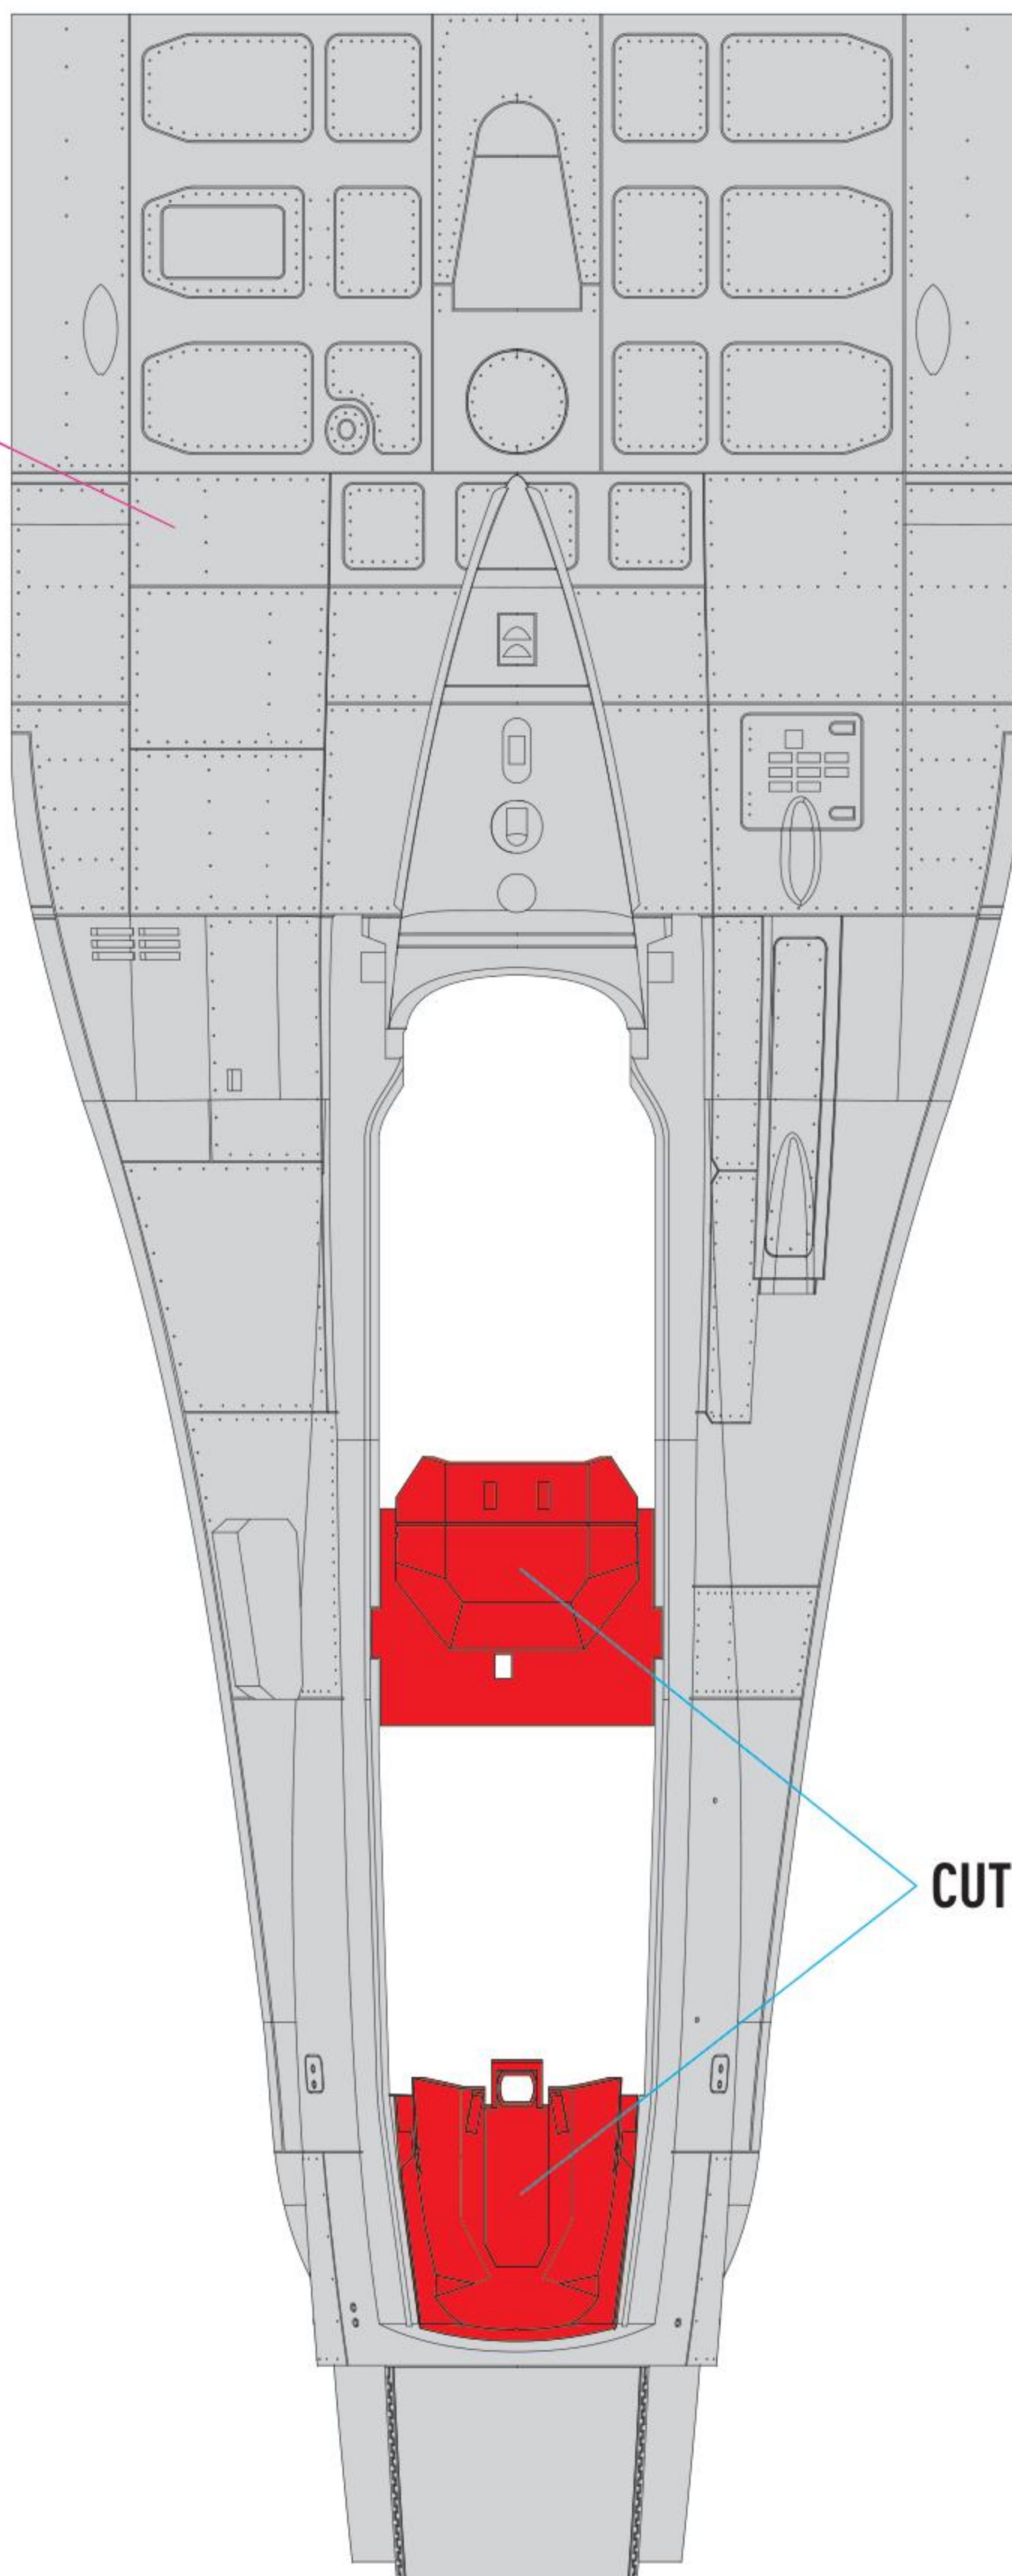


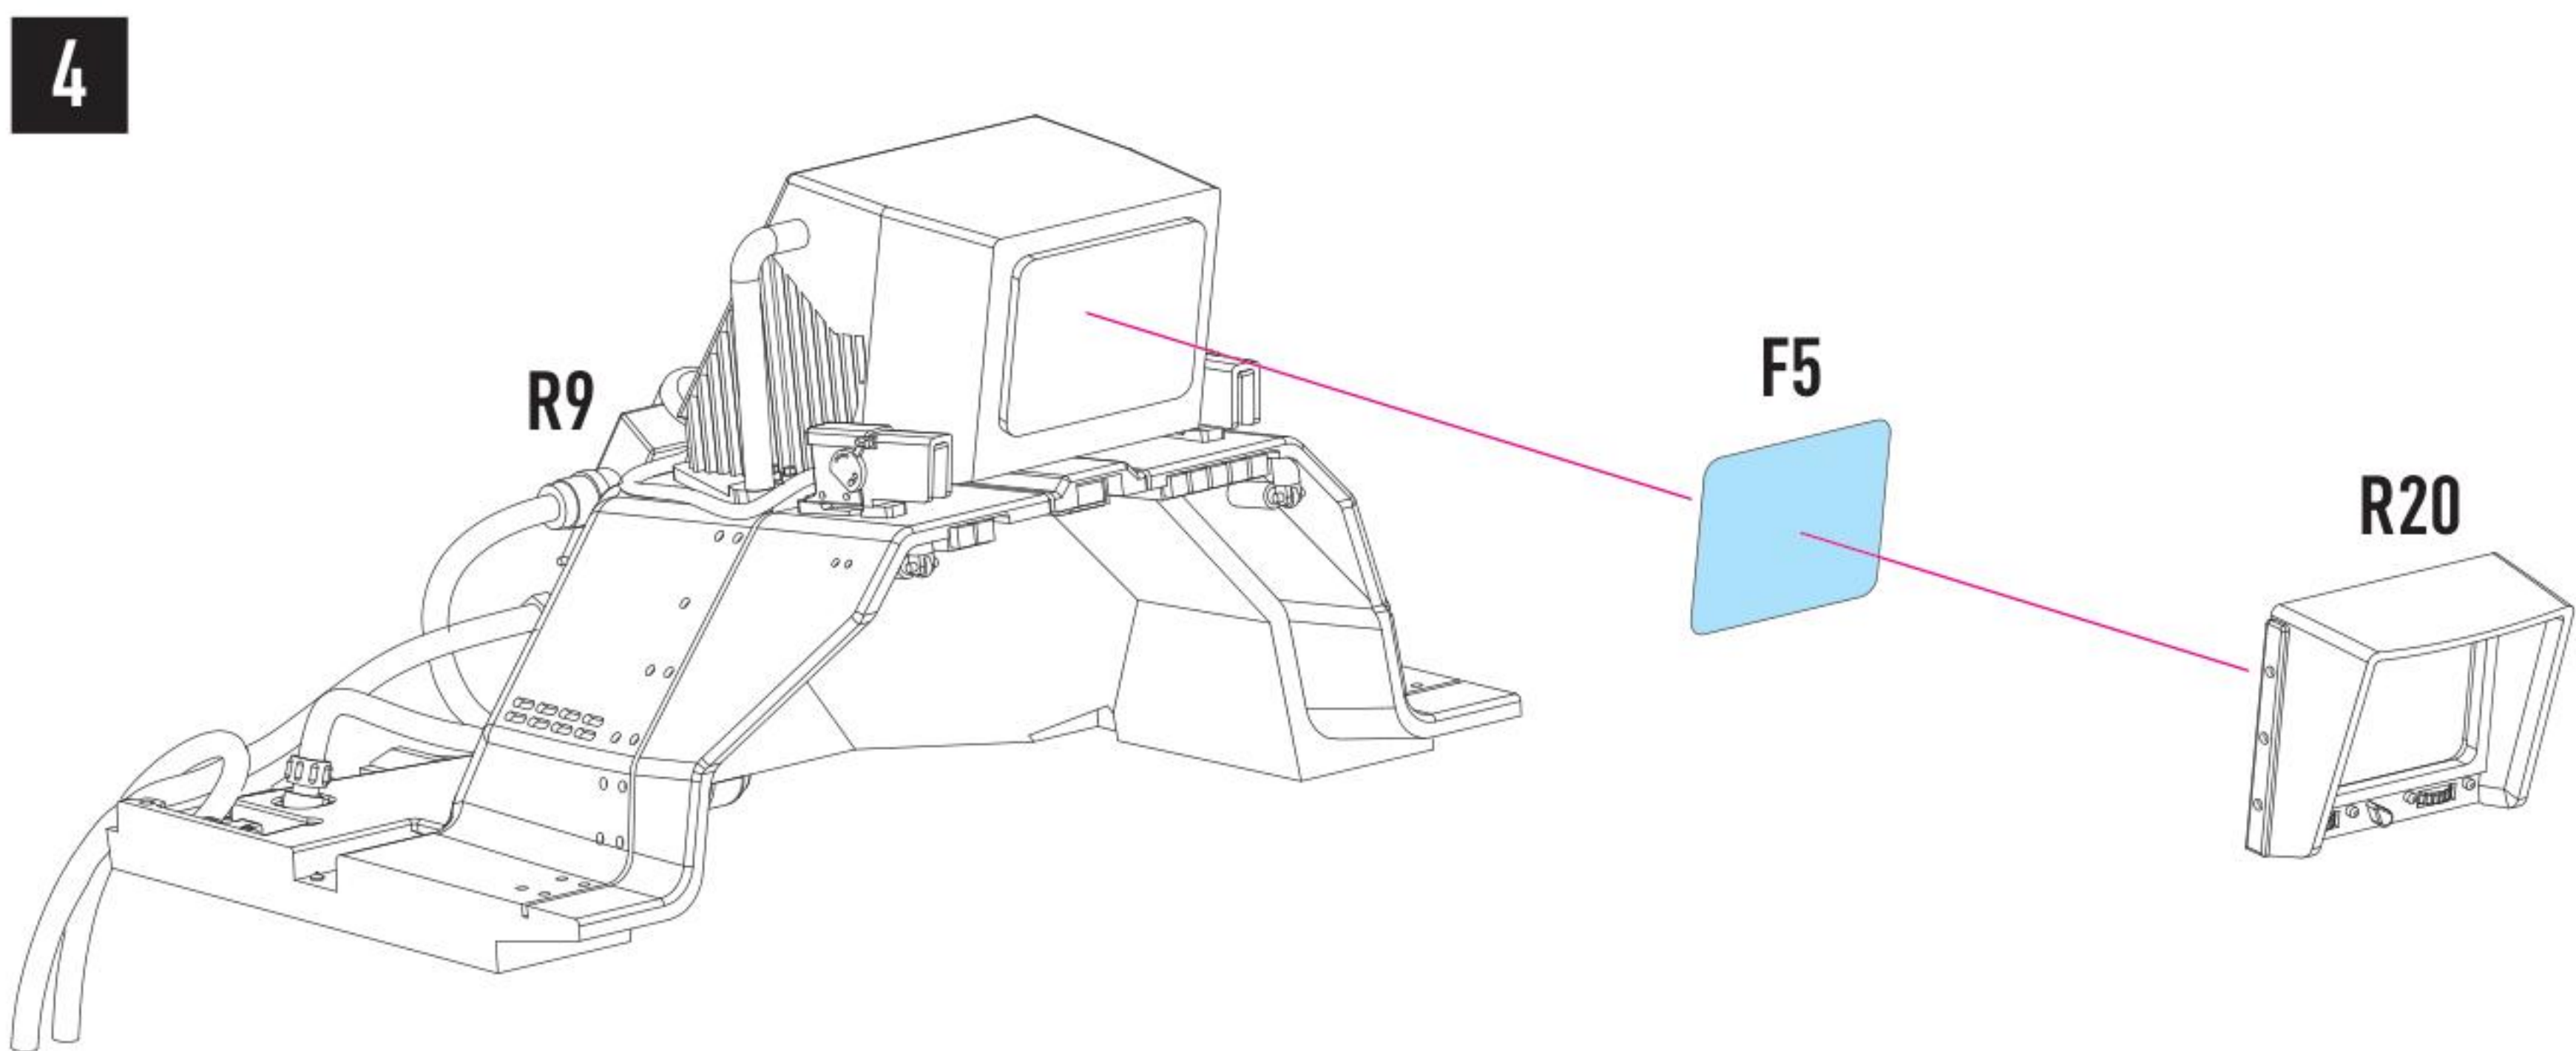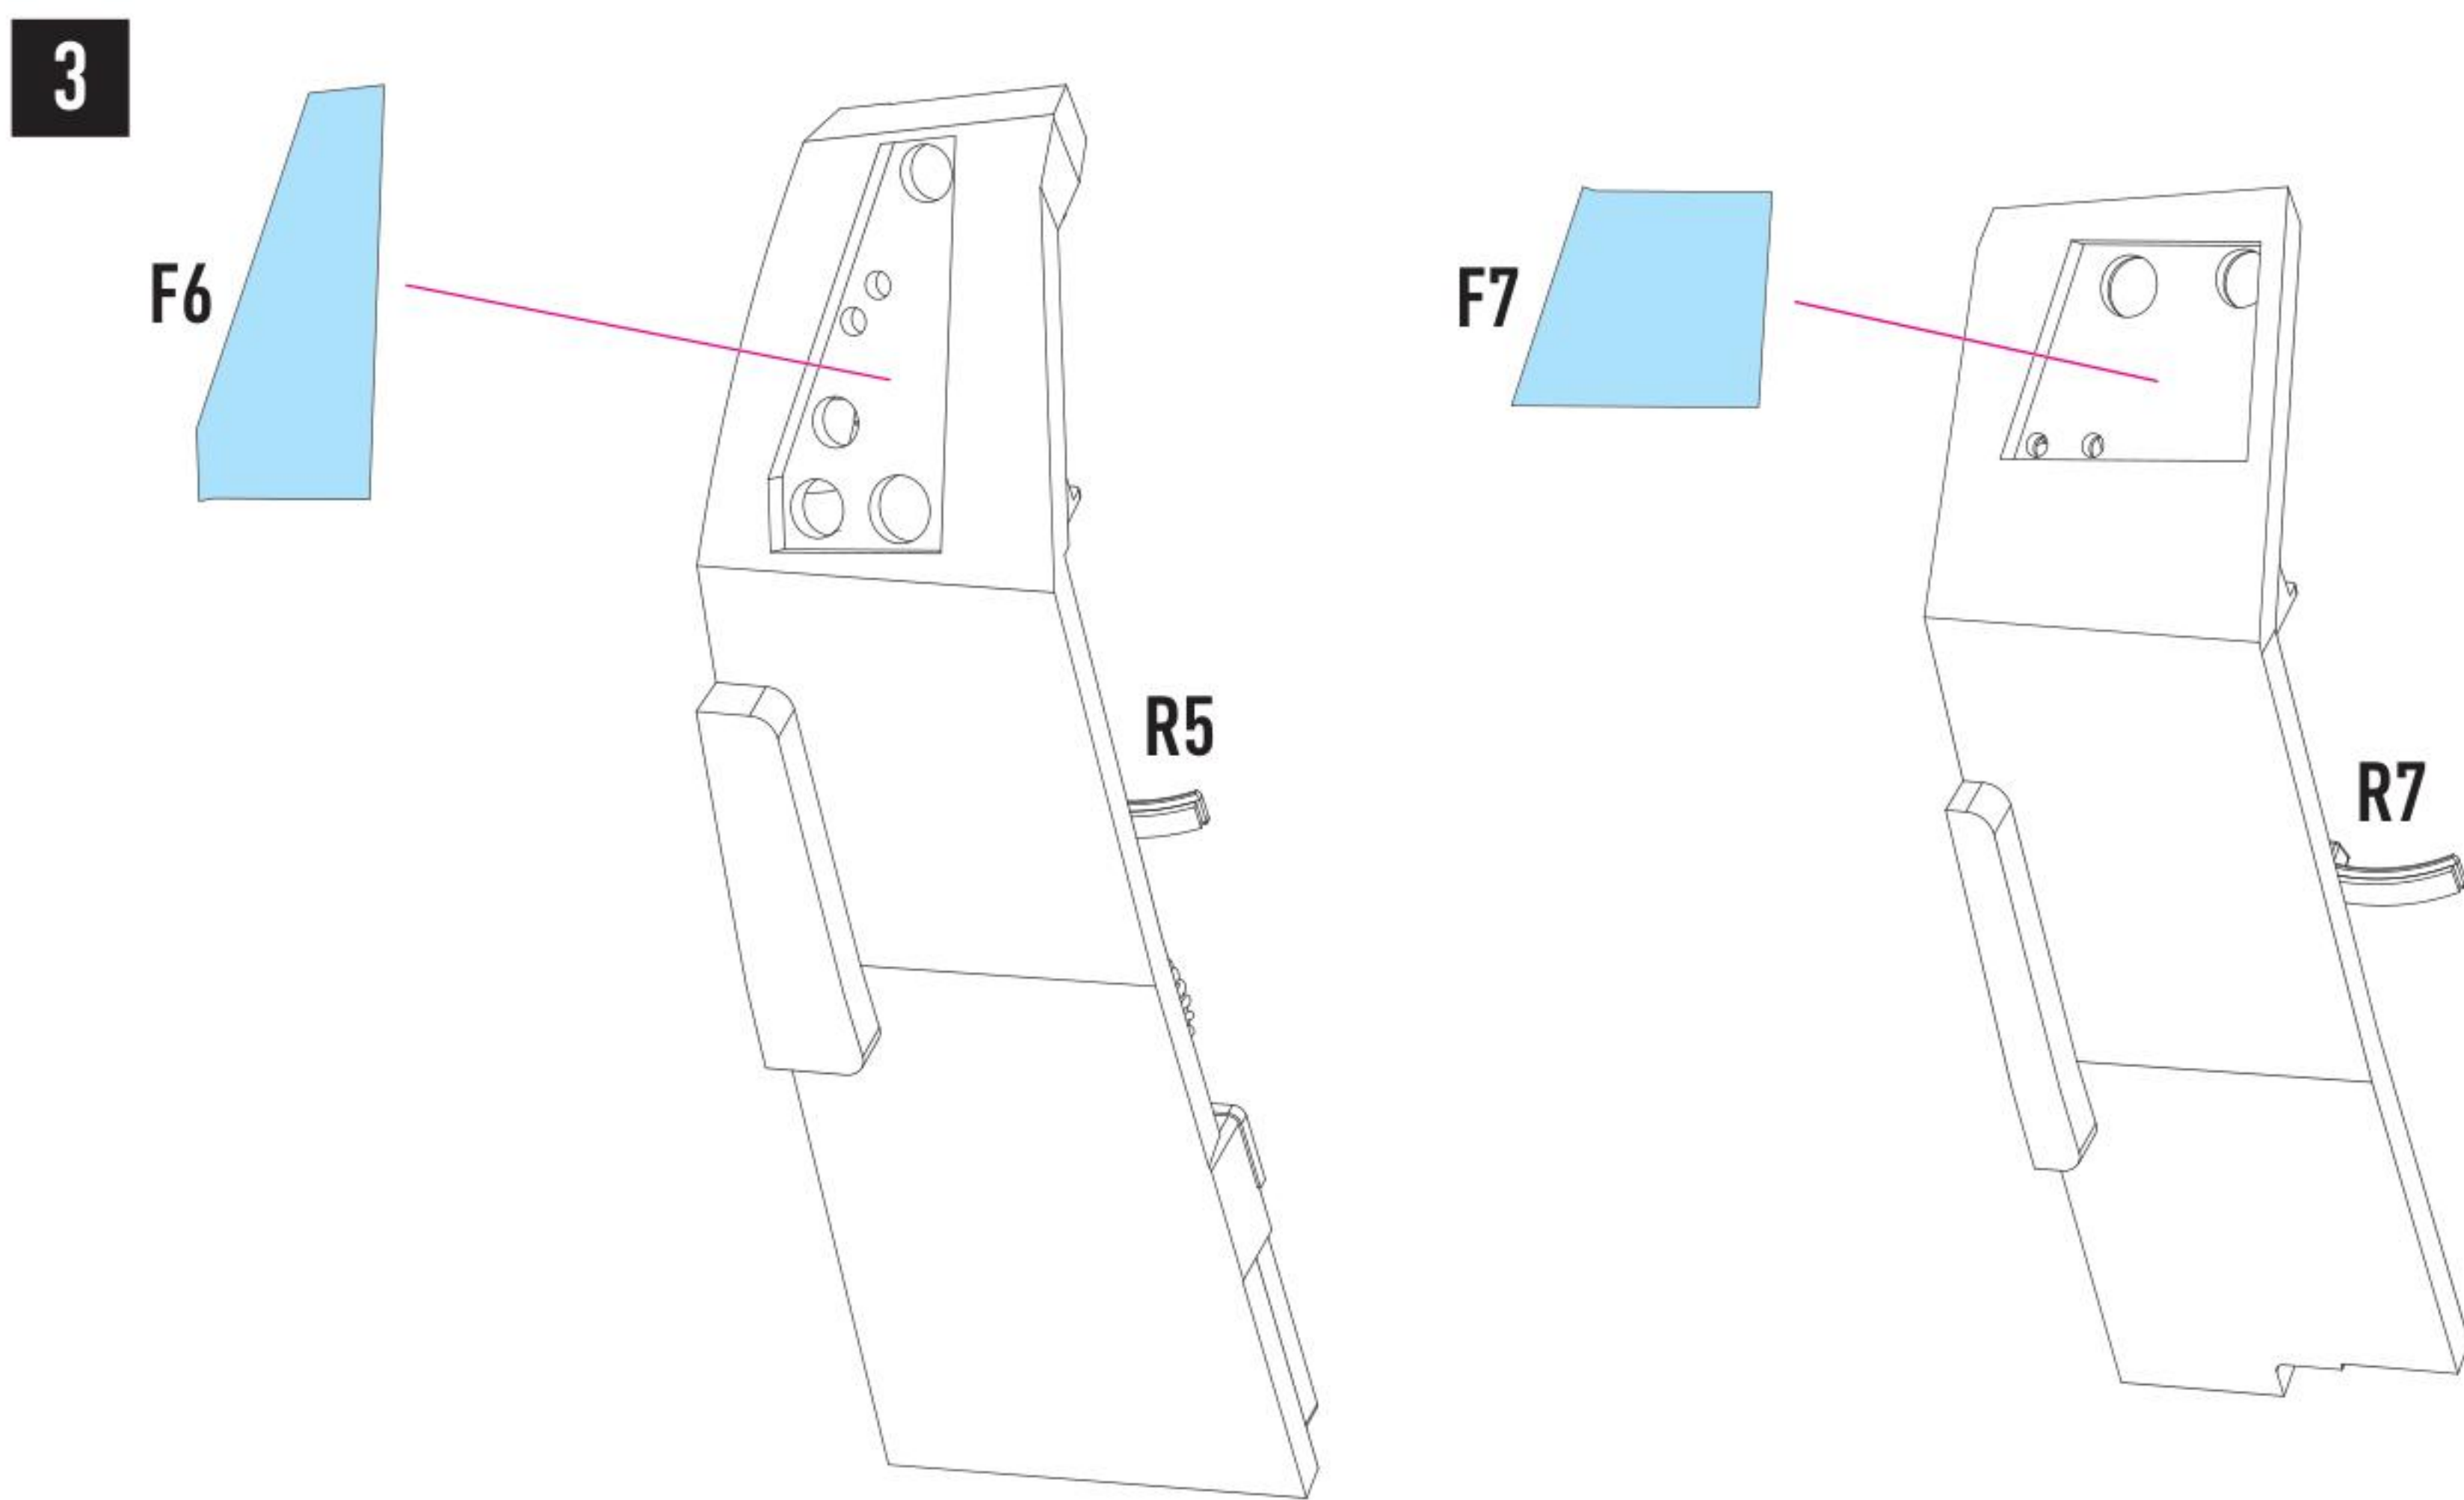
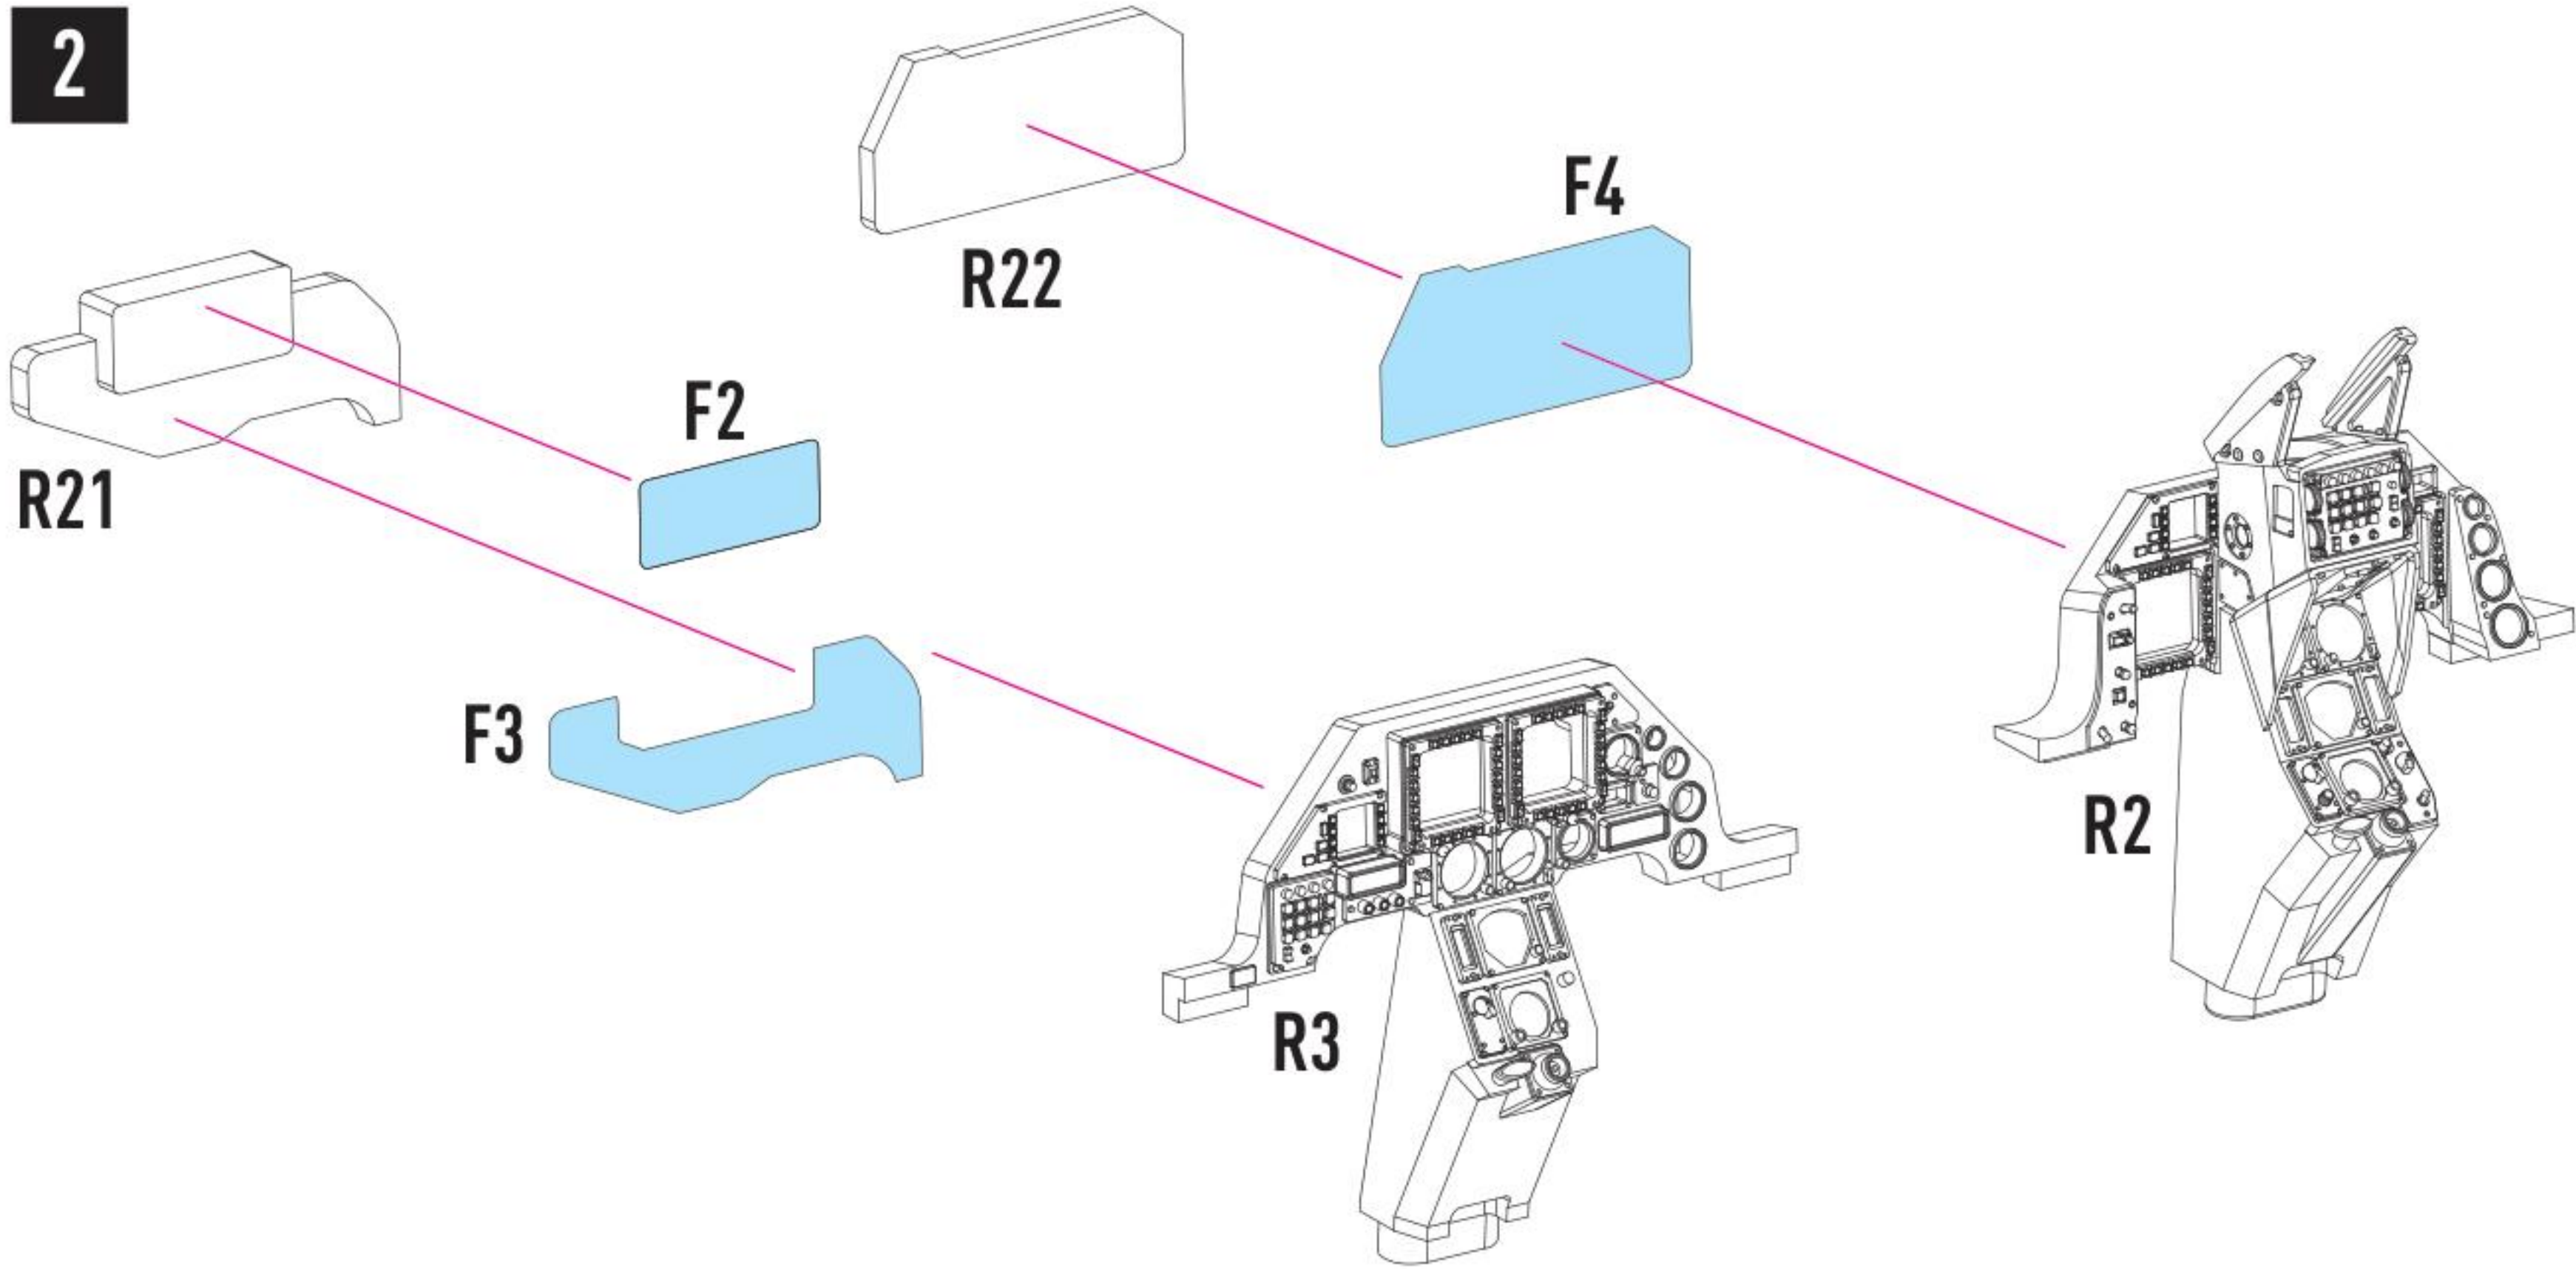



5

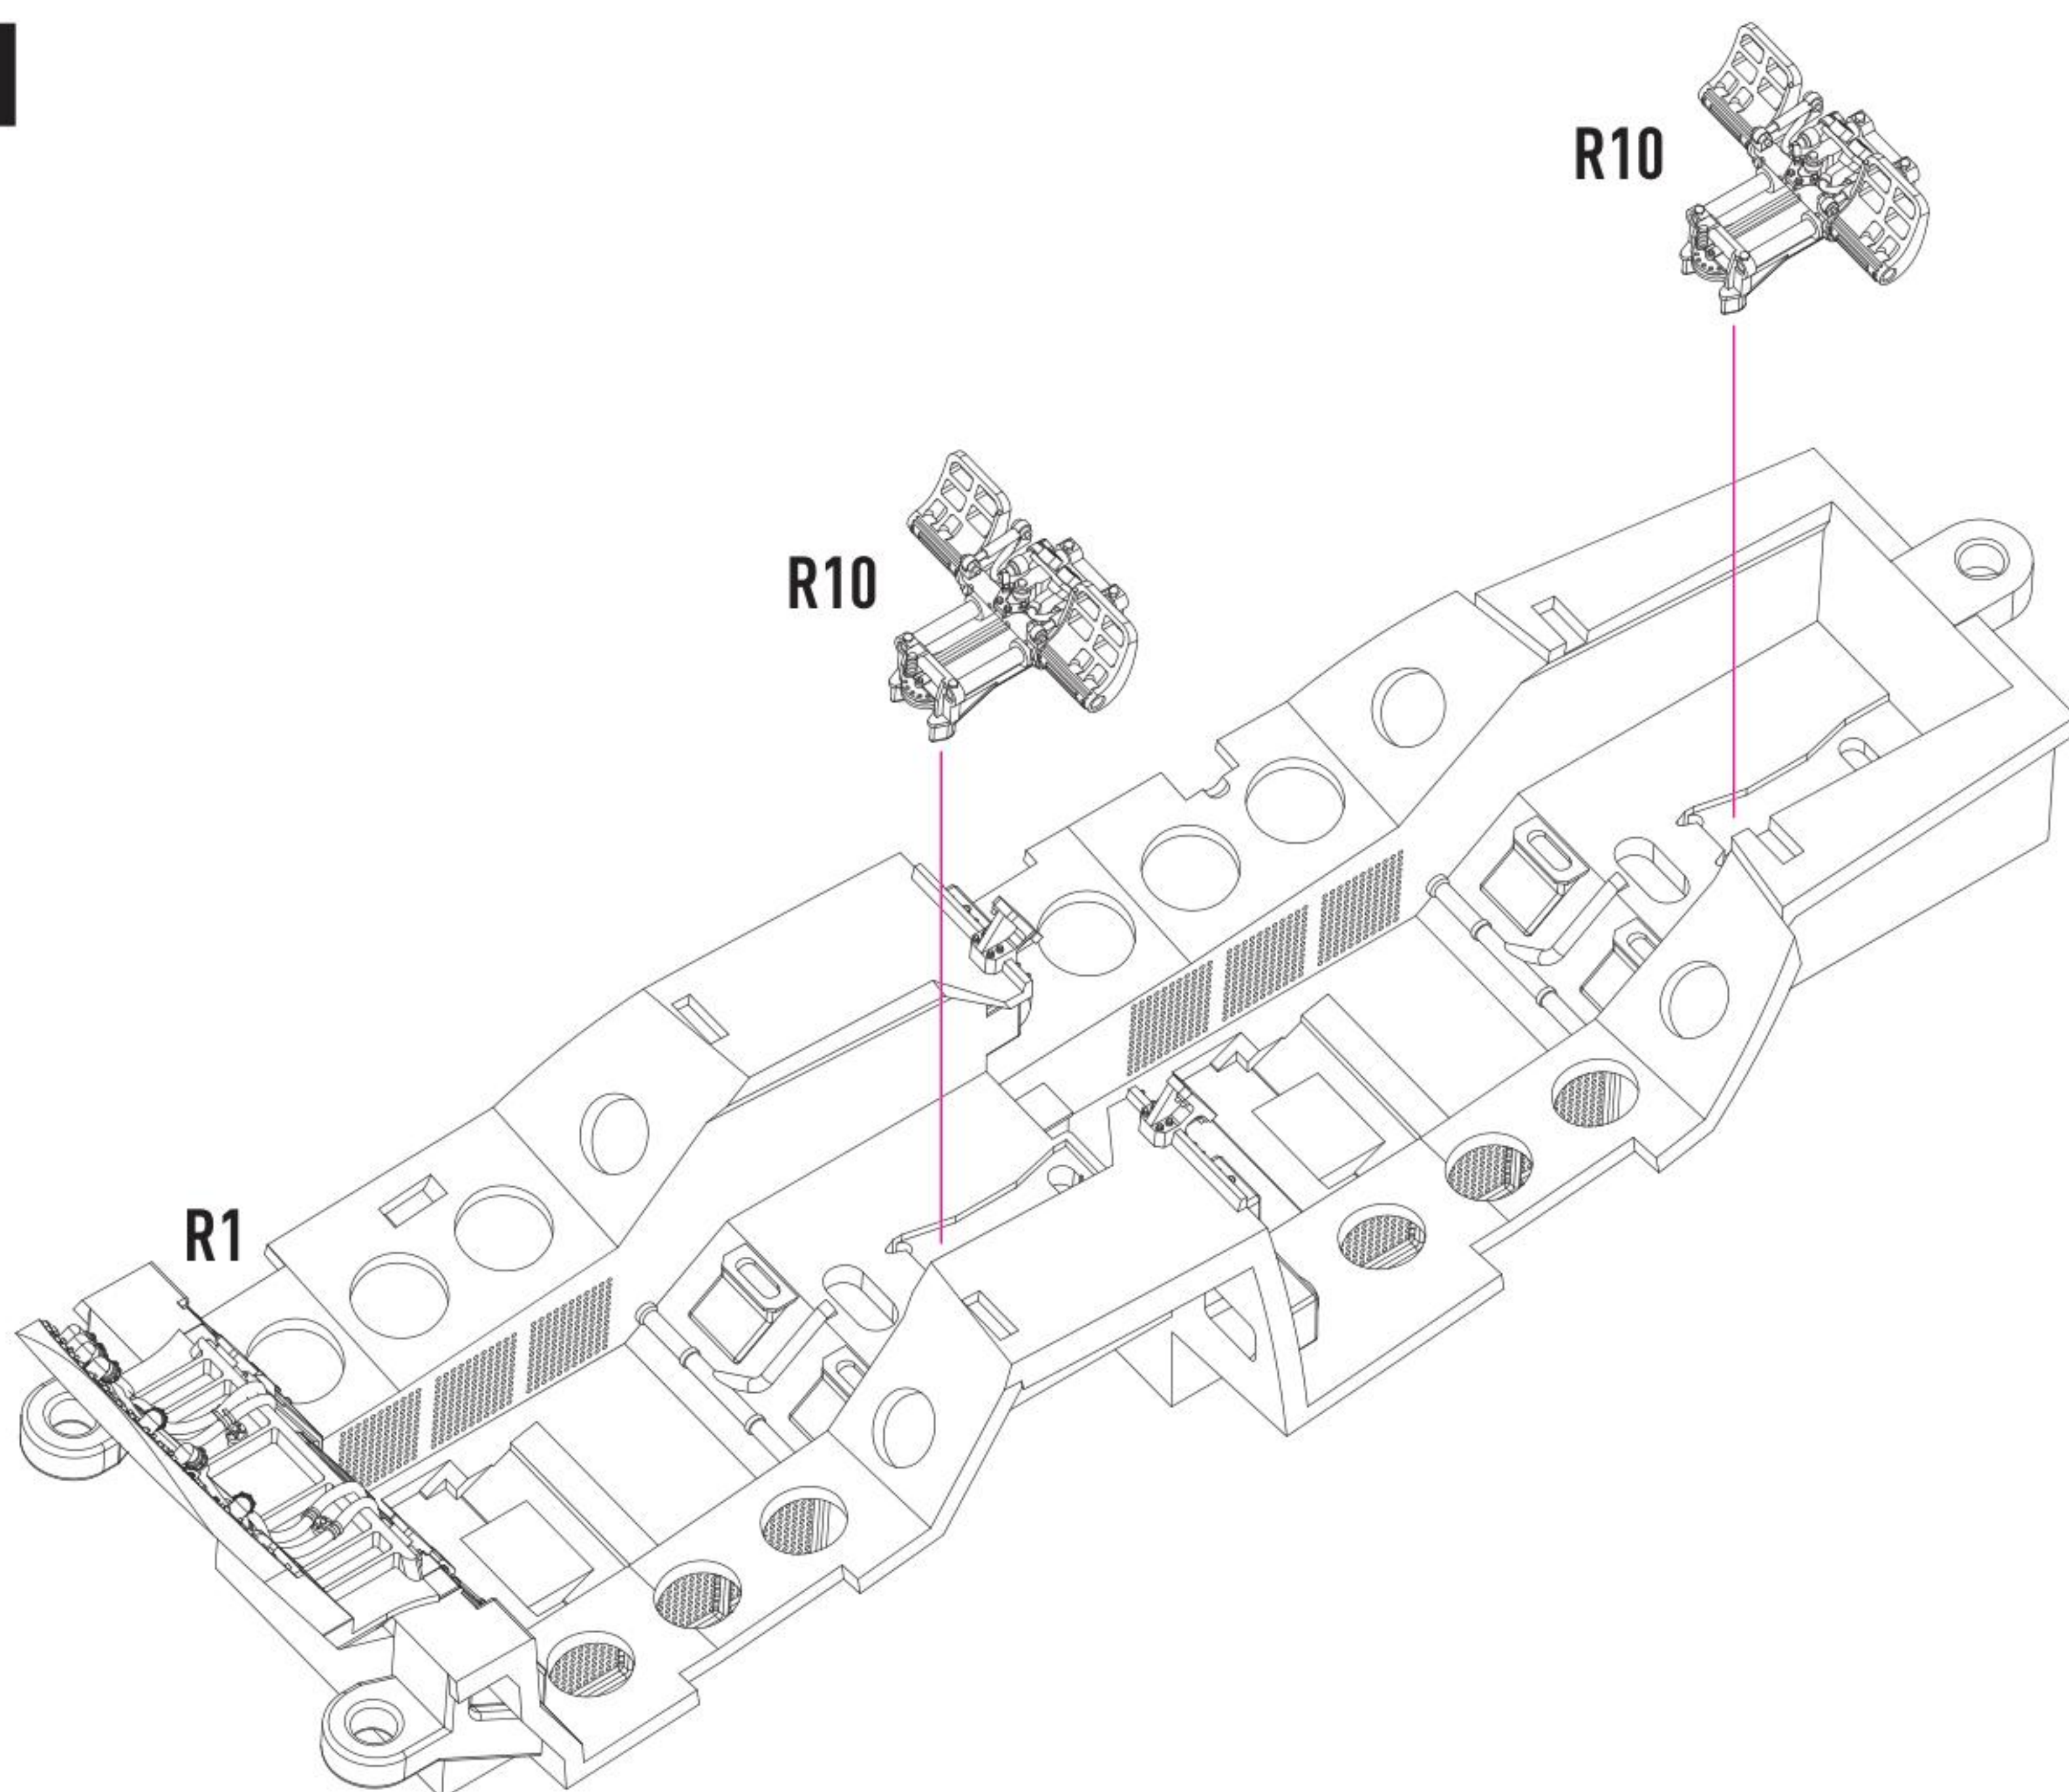


6

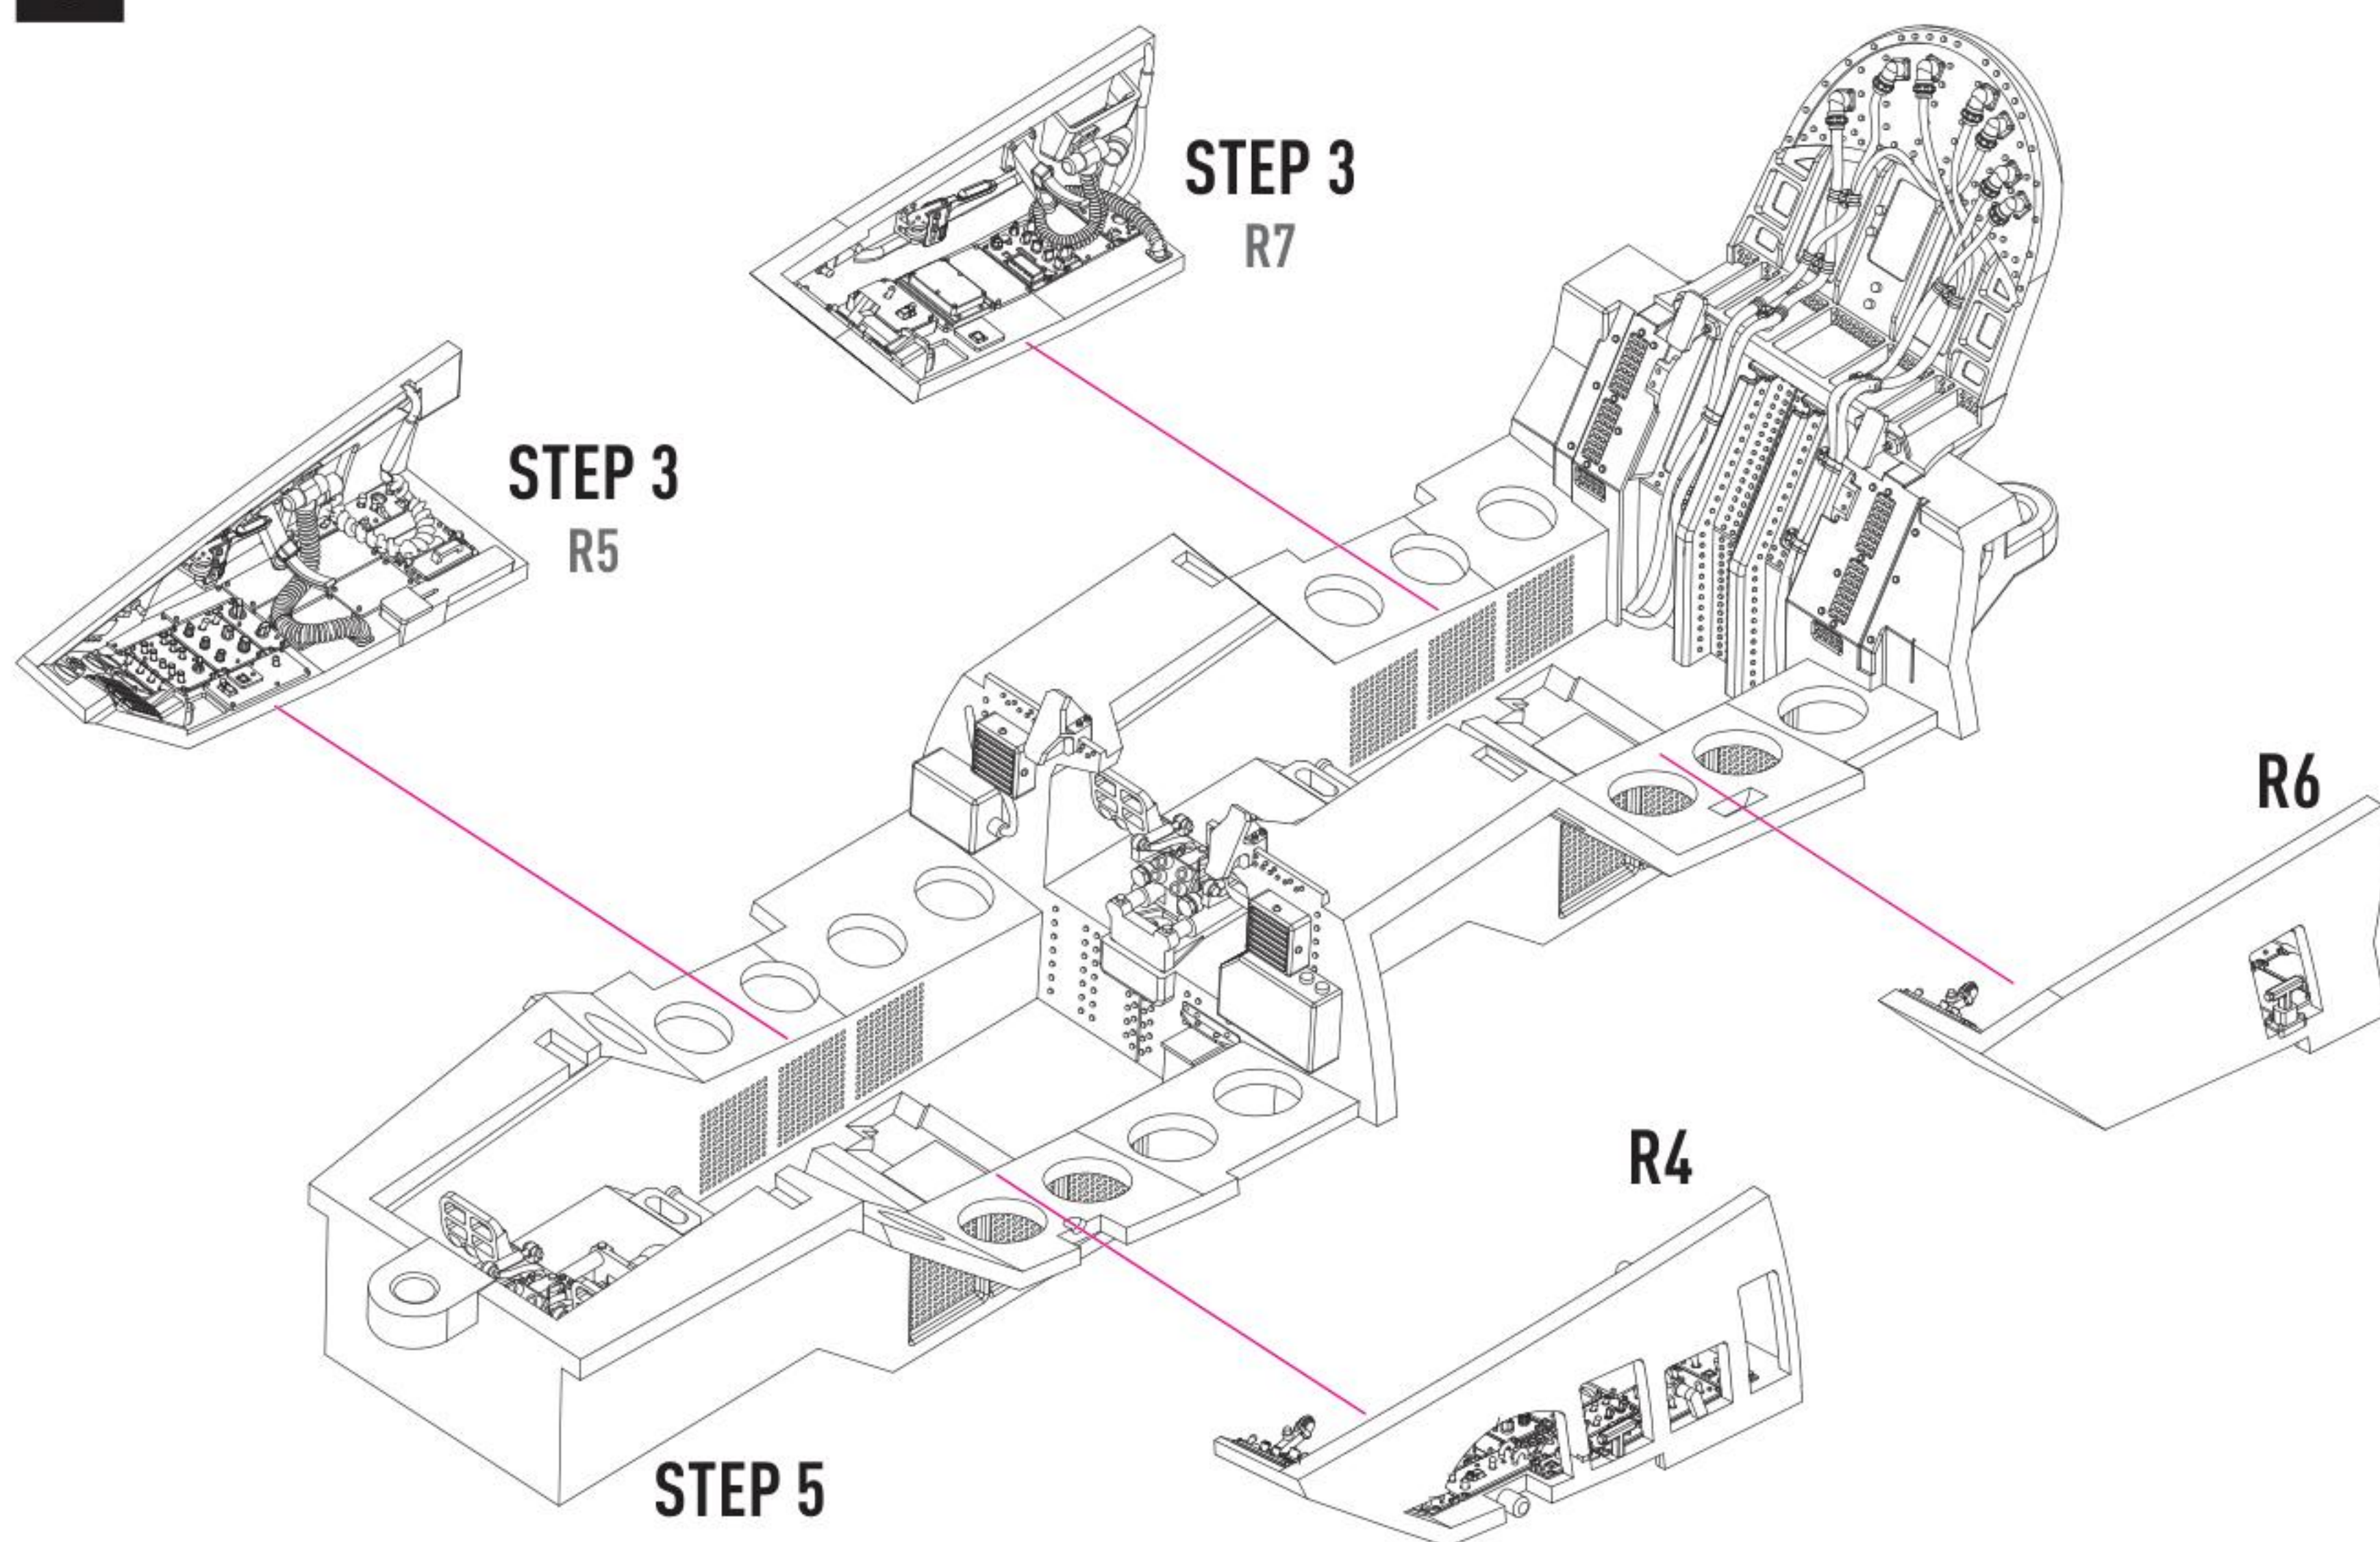

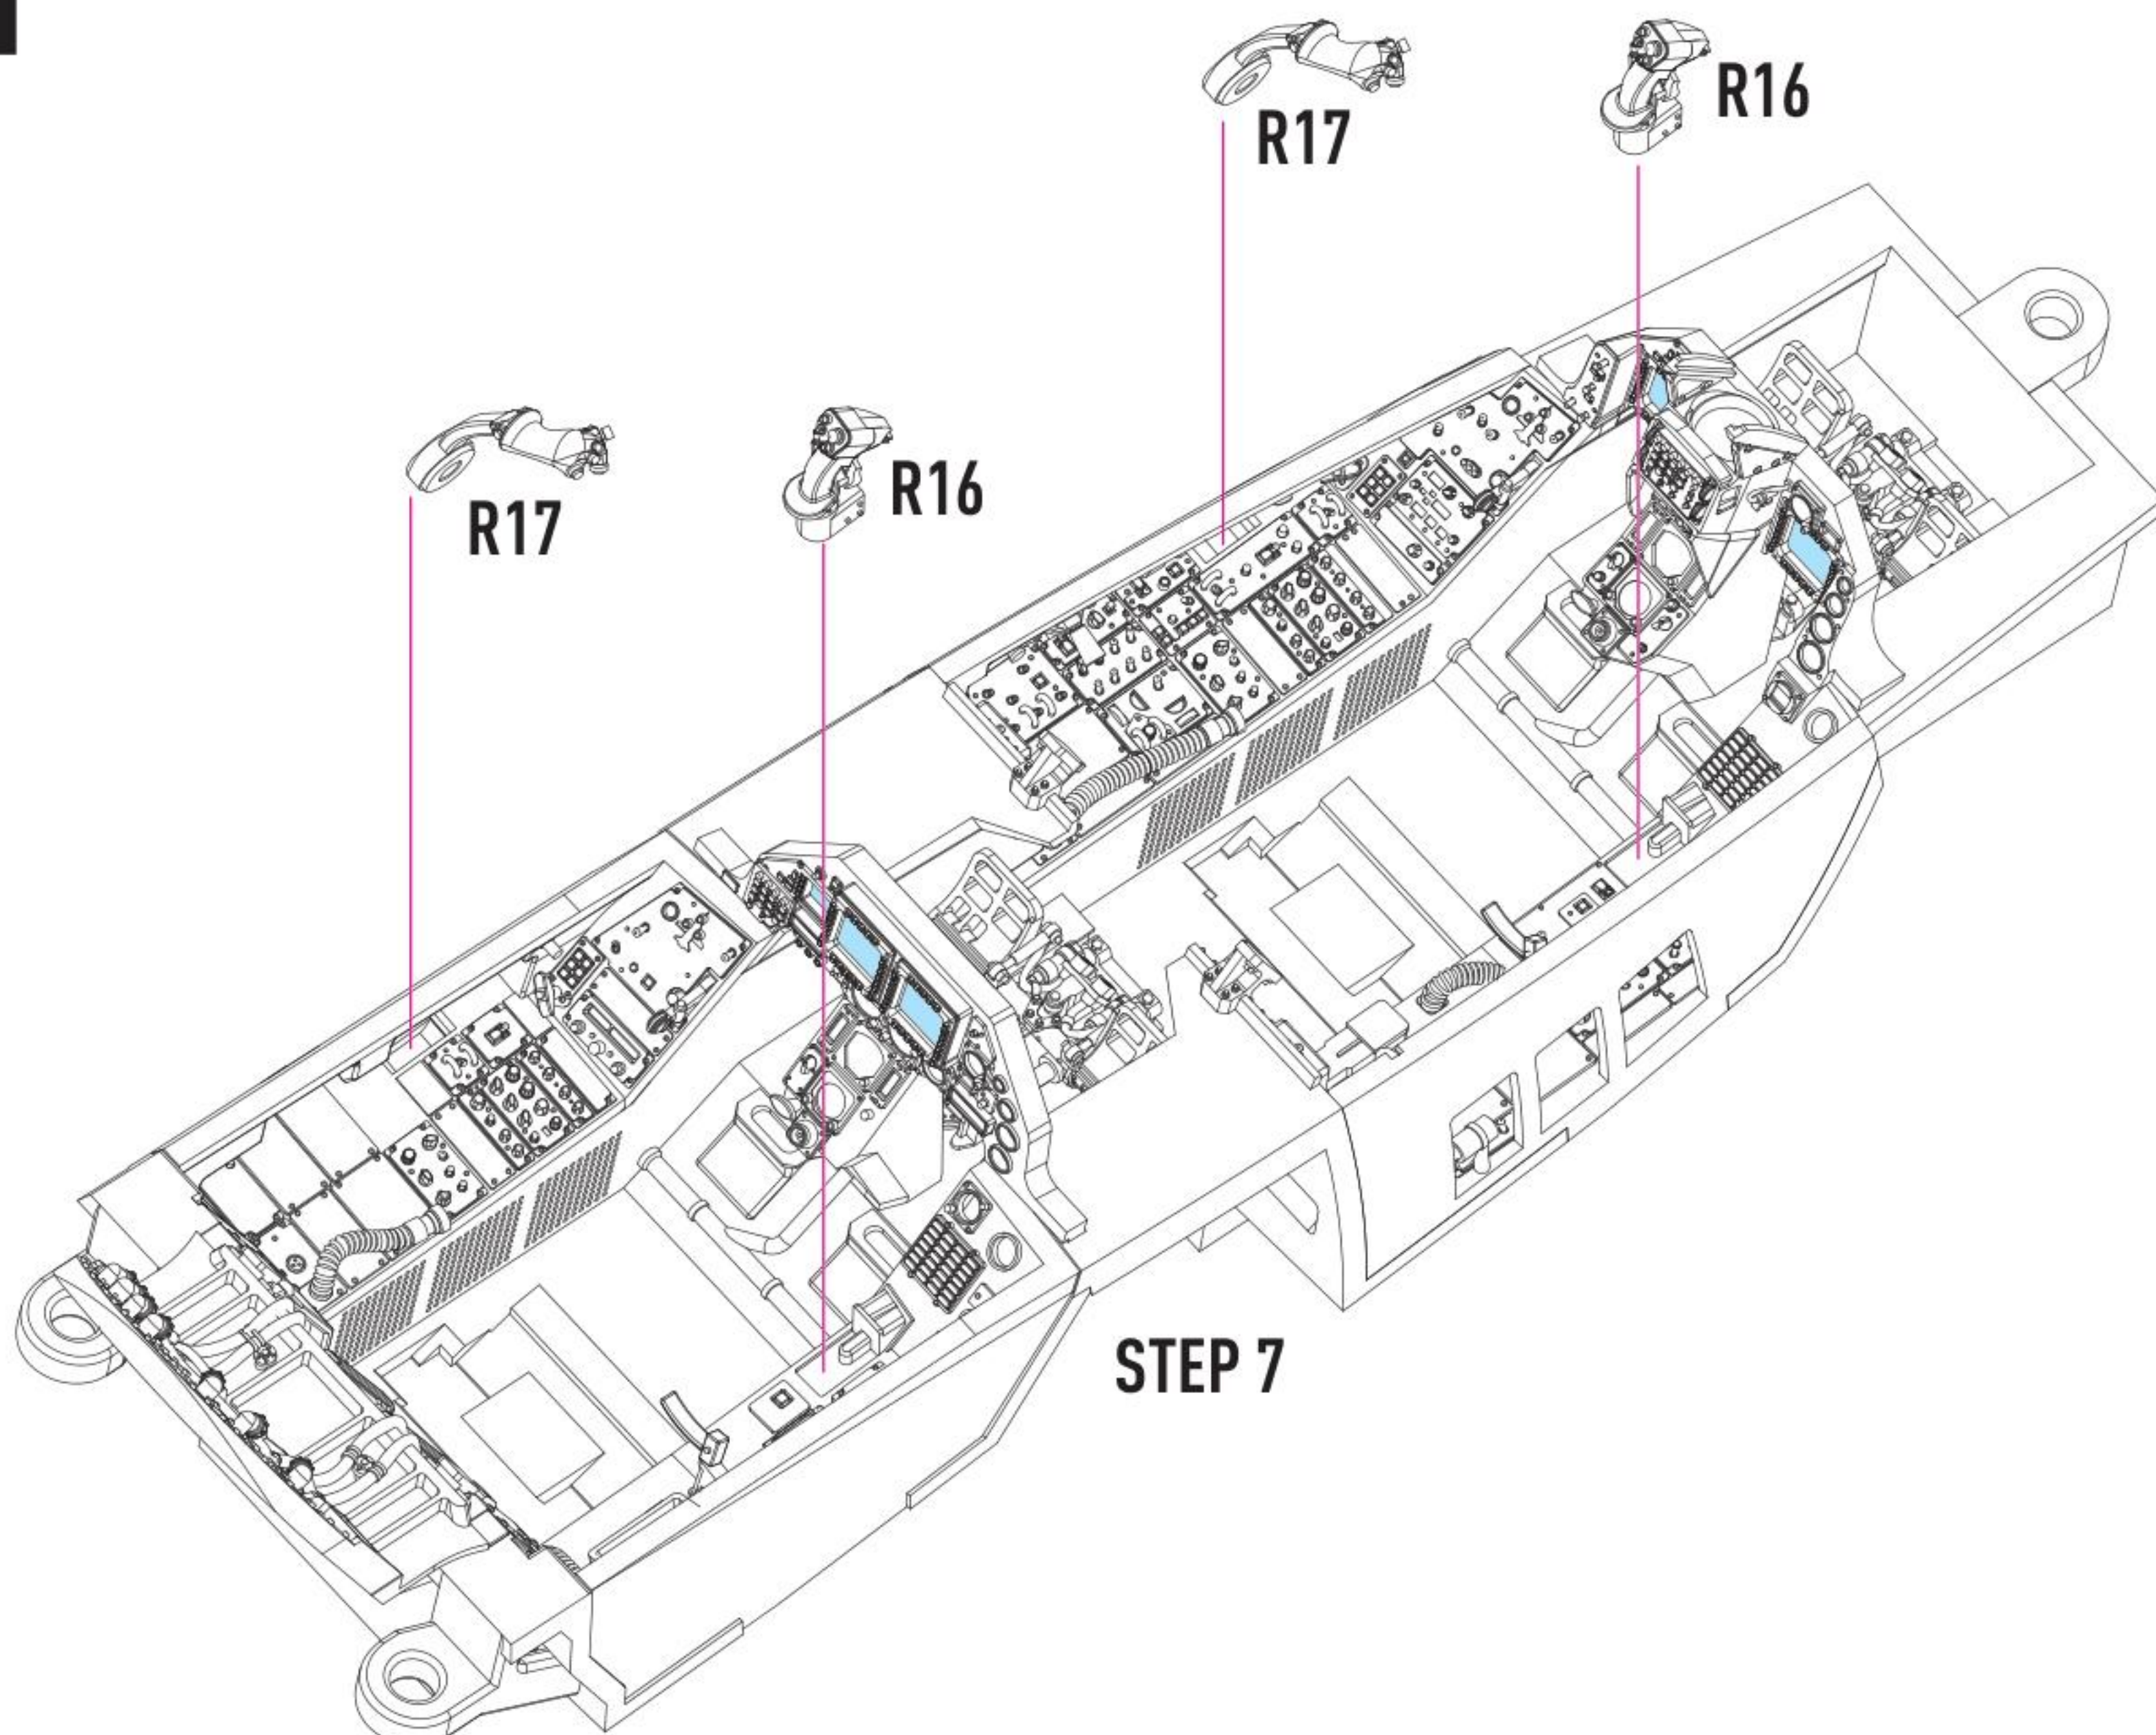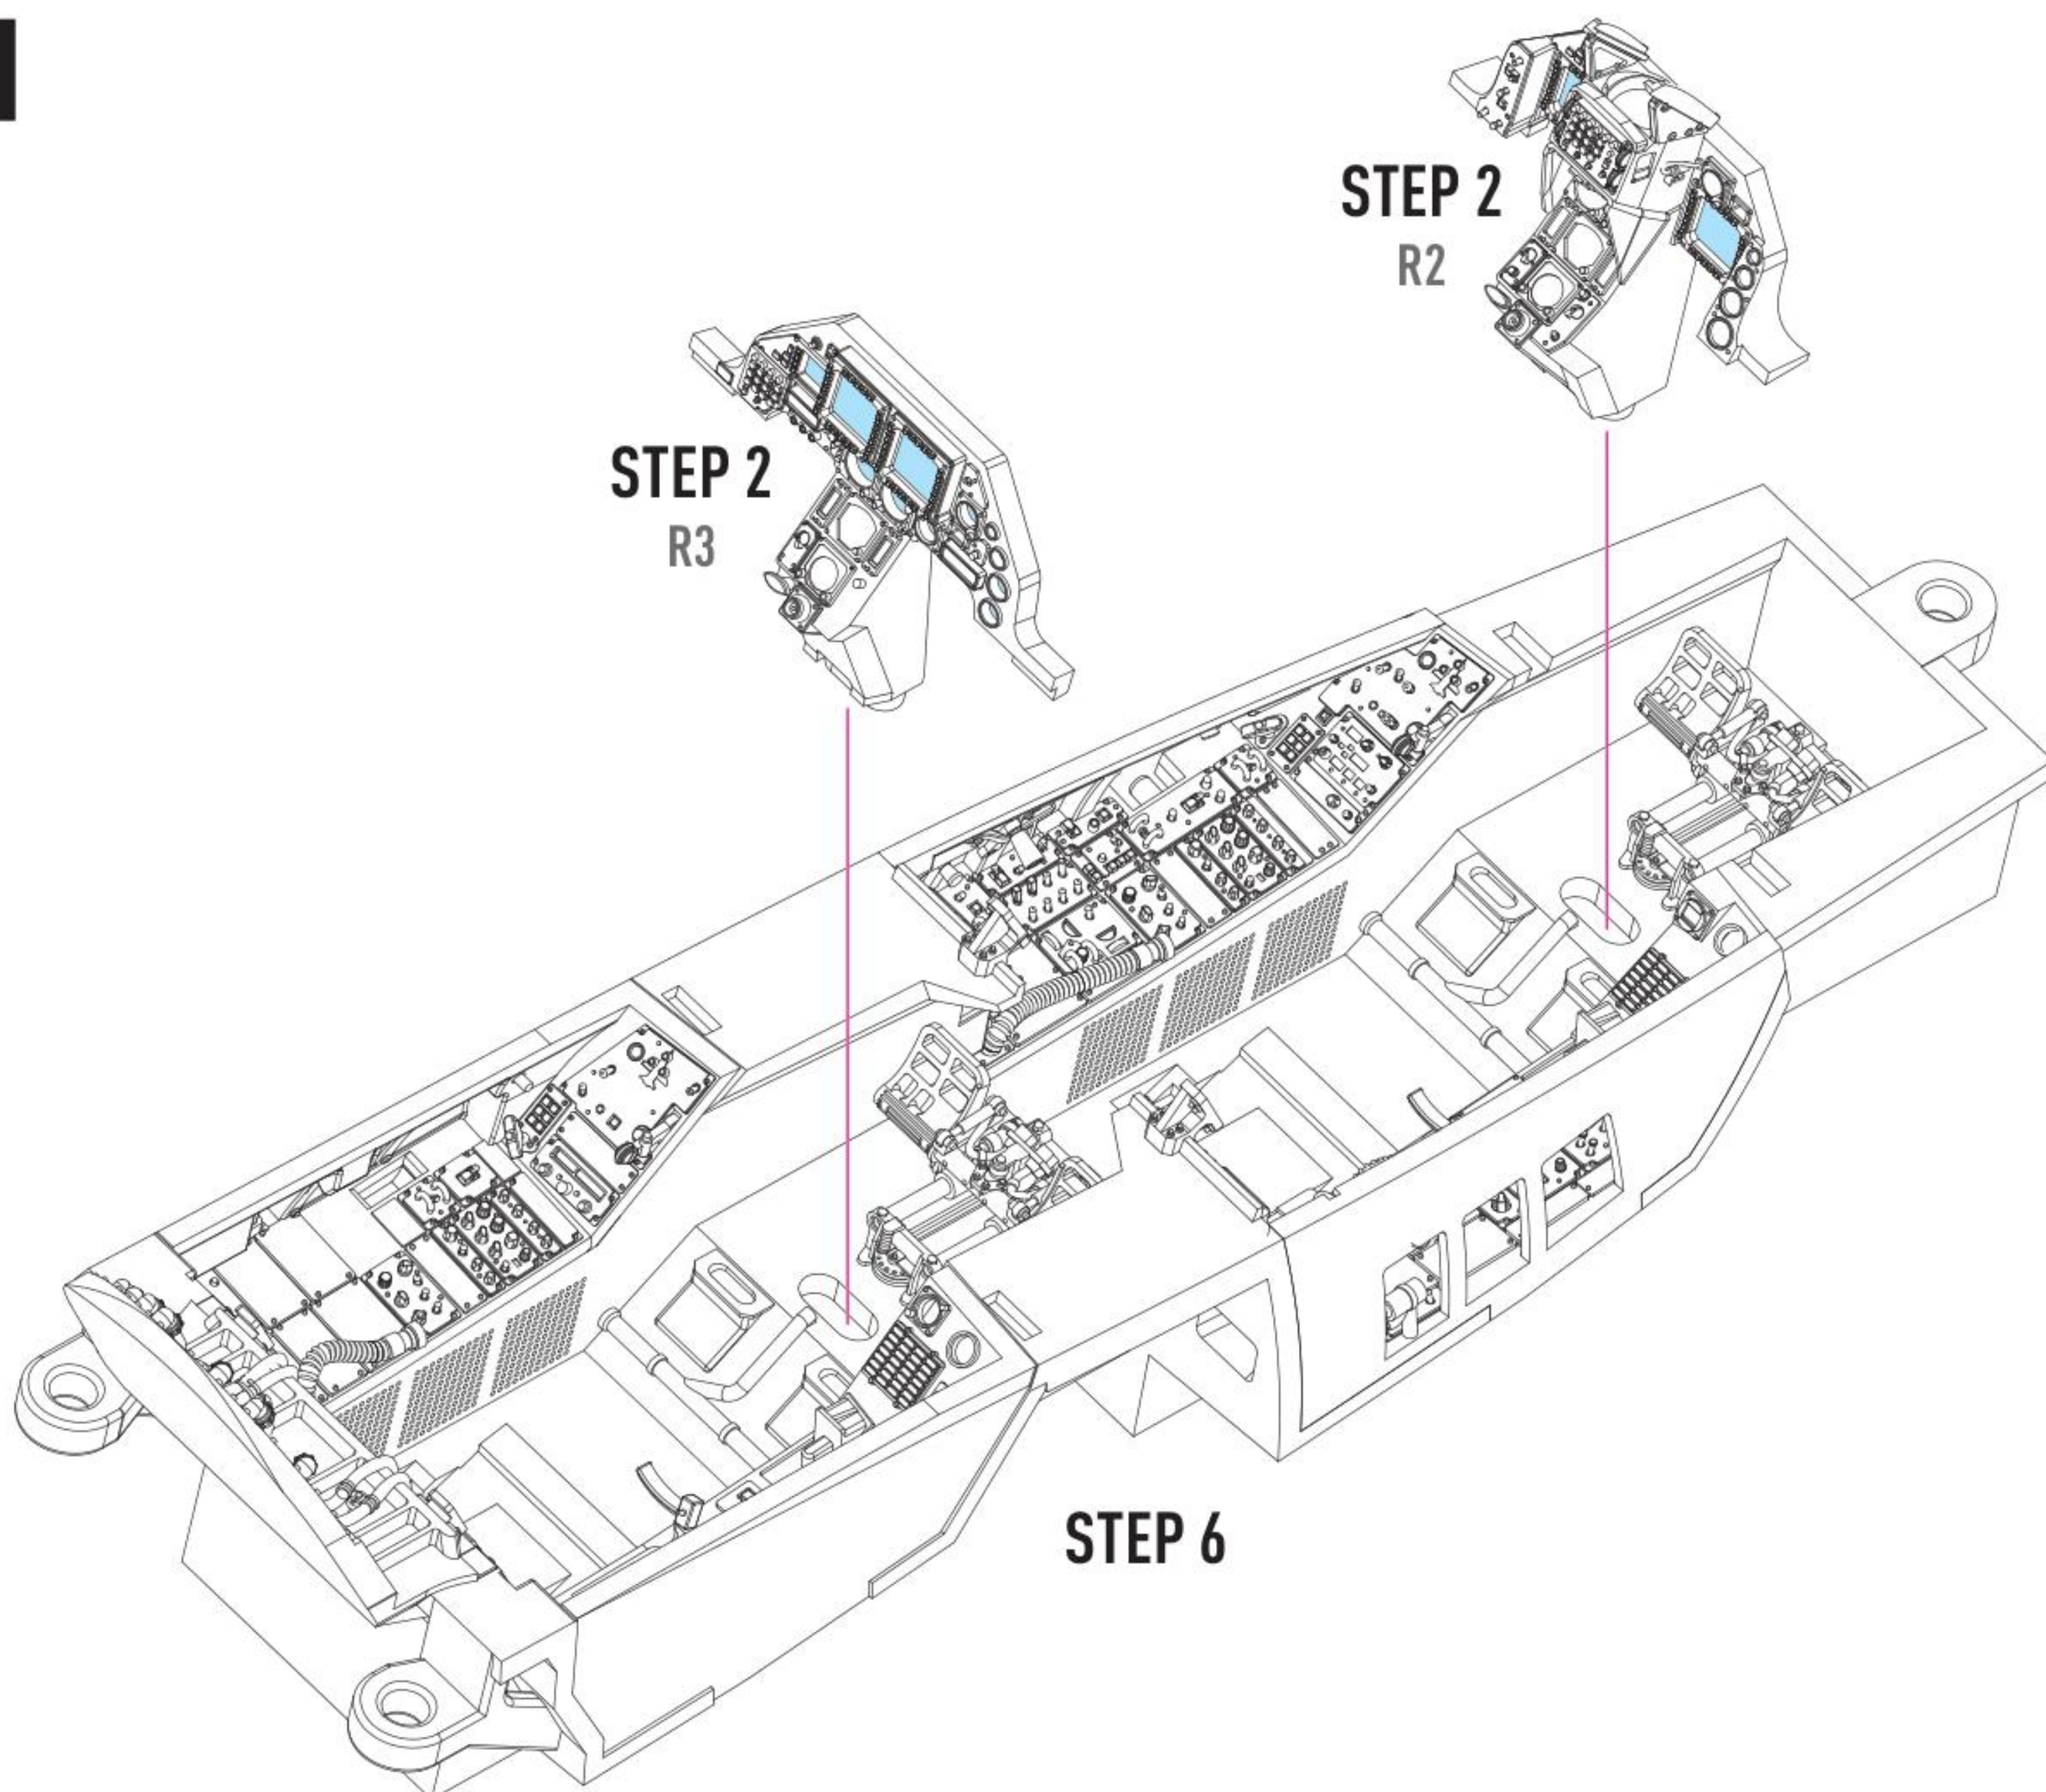



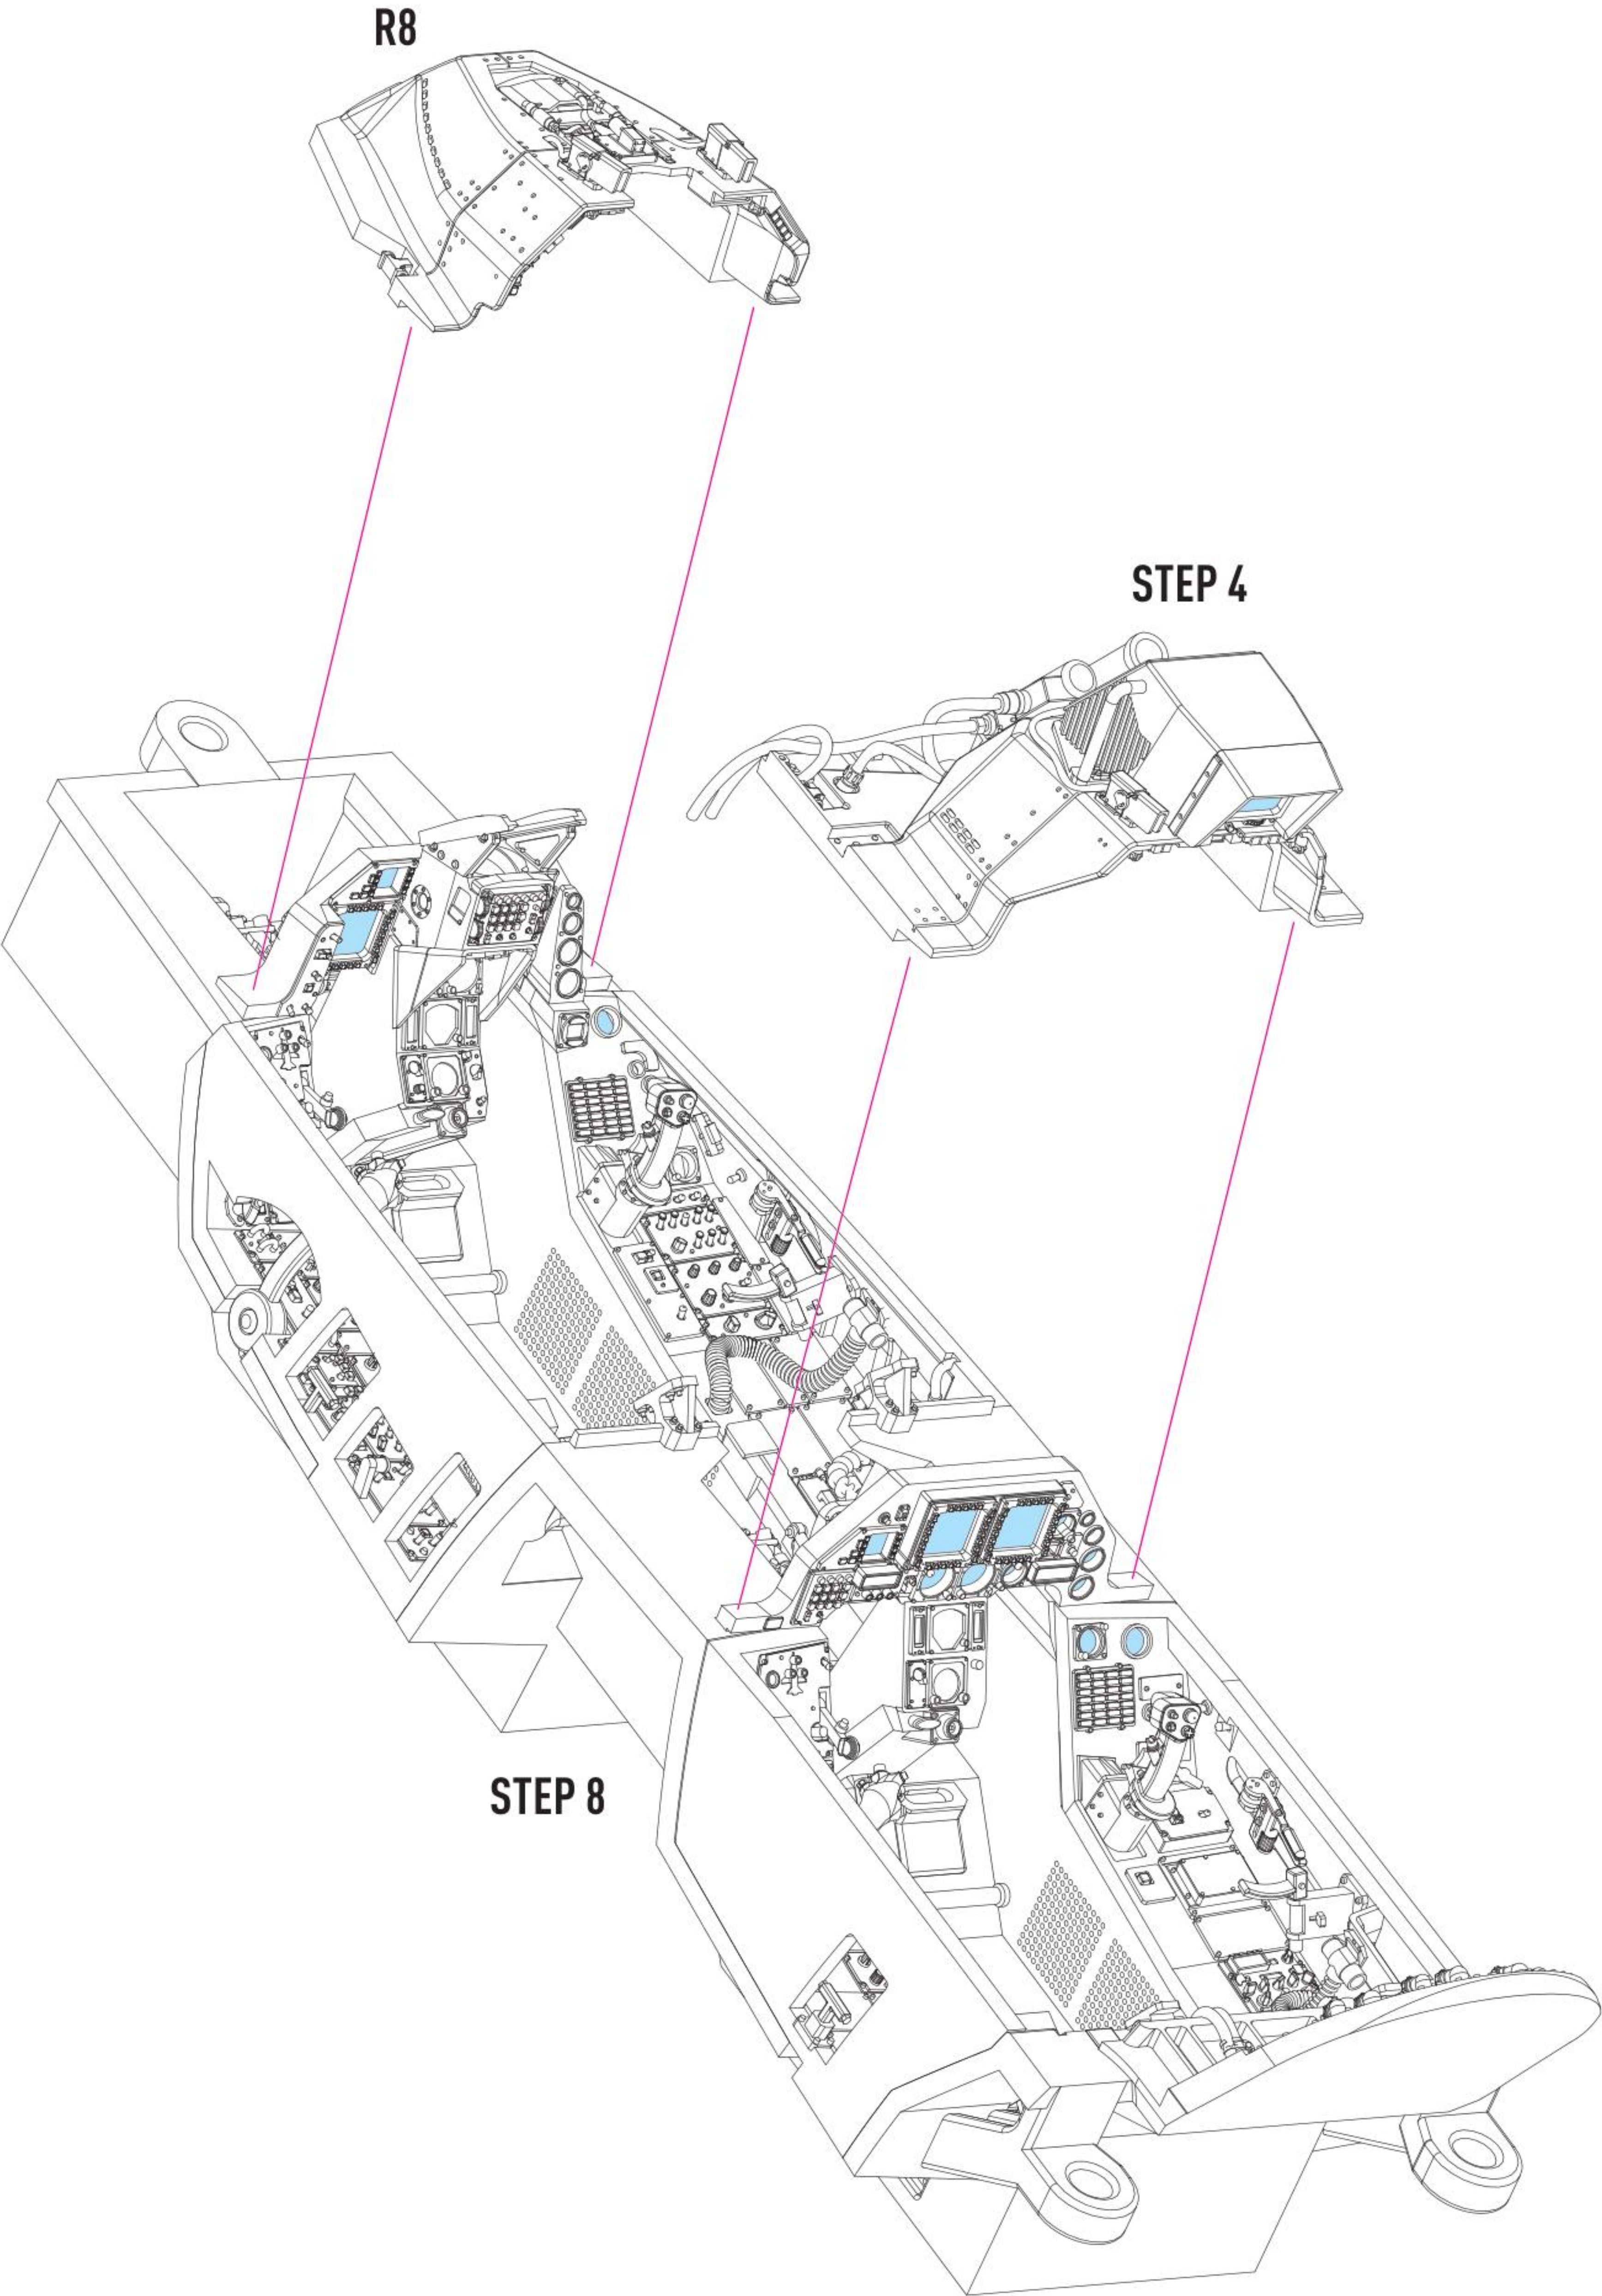




**10 FRONT SEAT**

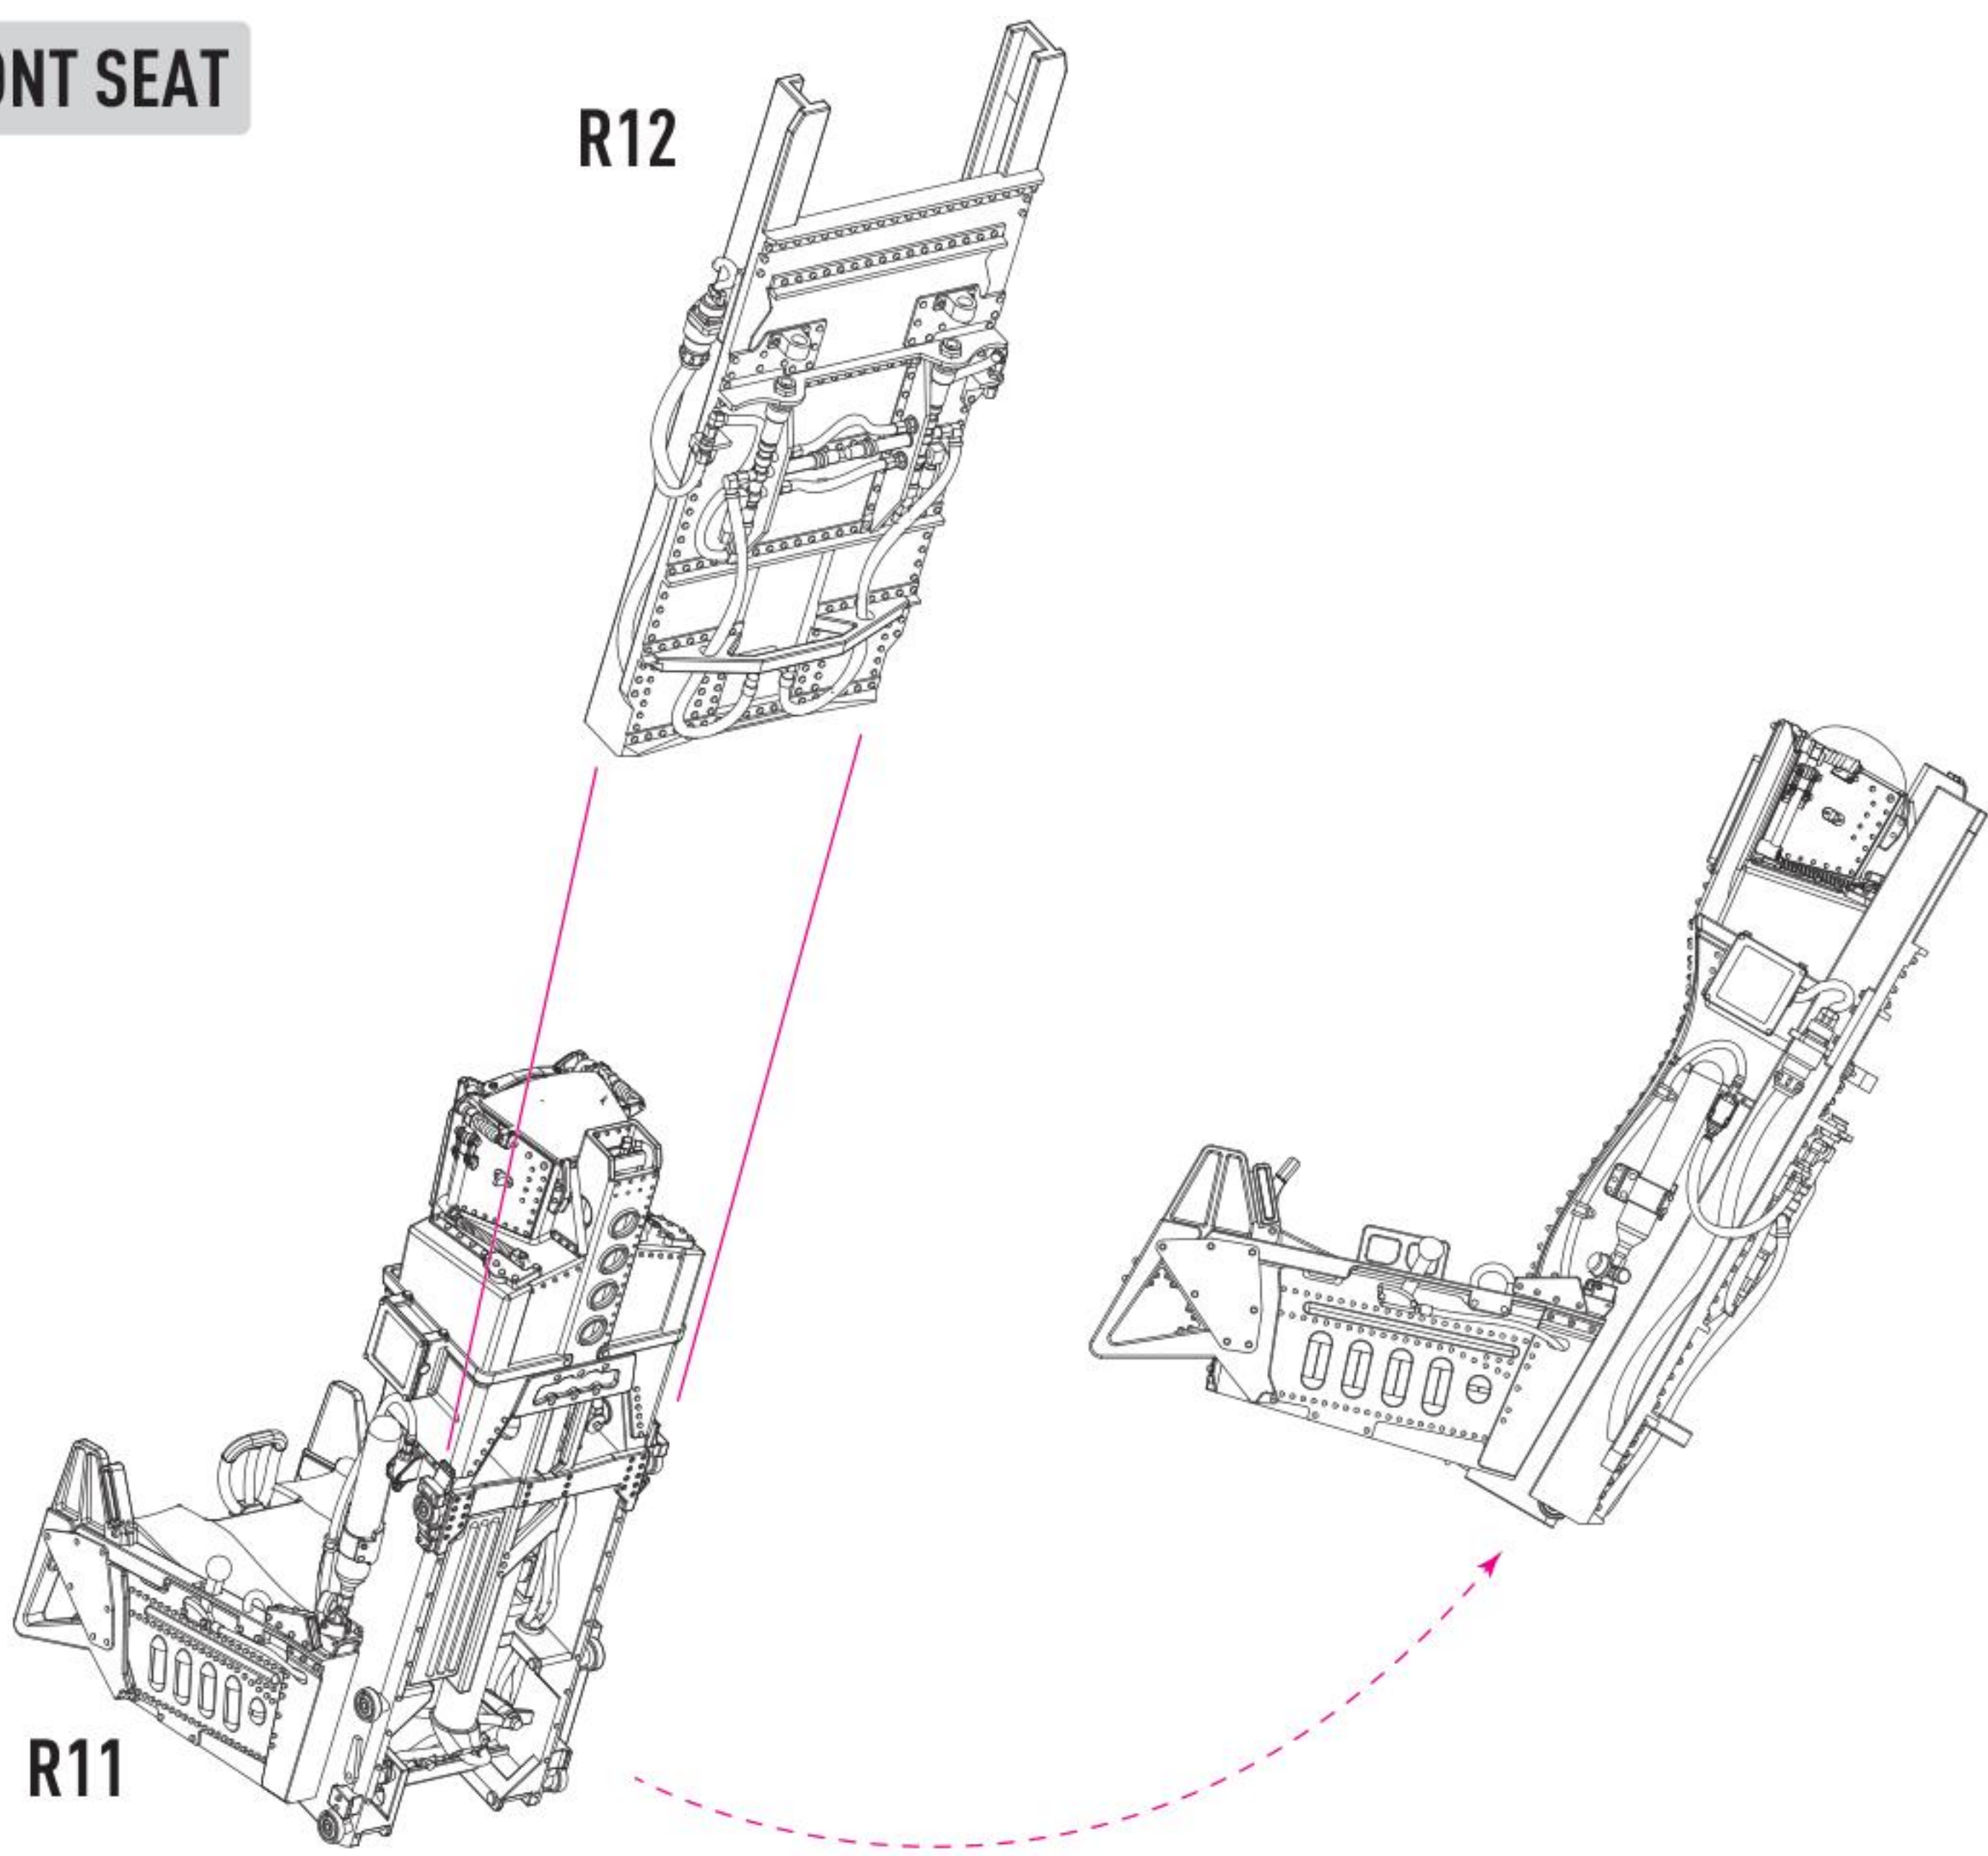


**11 BACK SEAT**

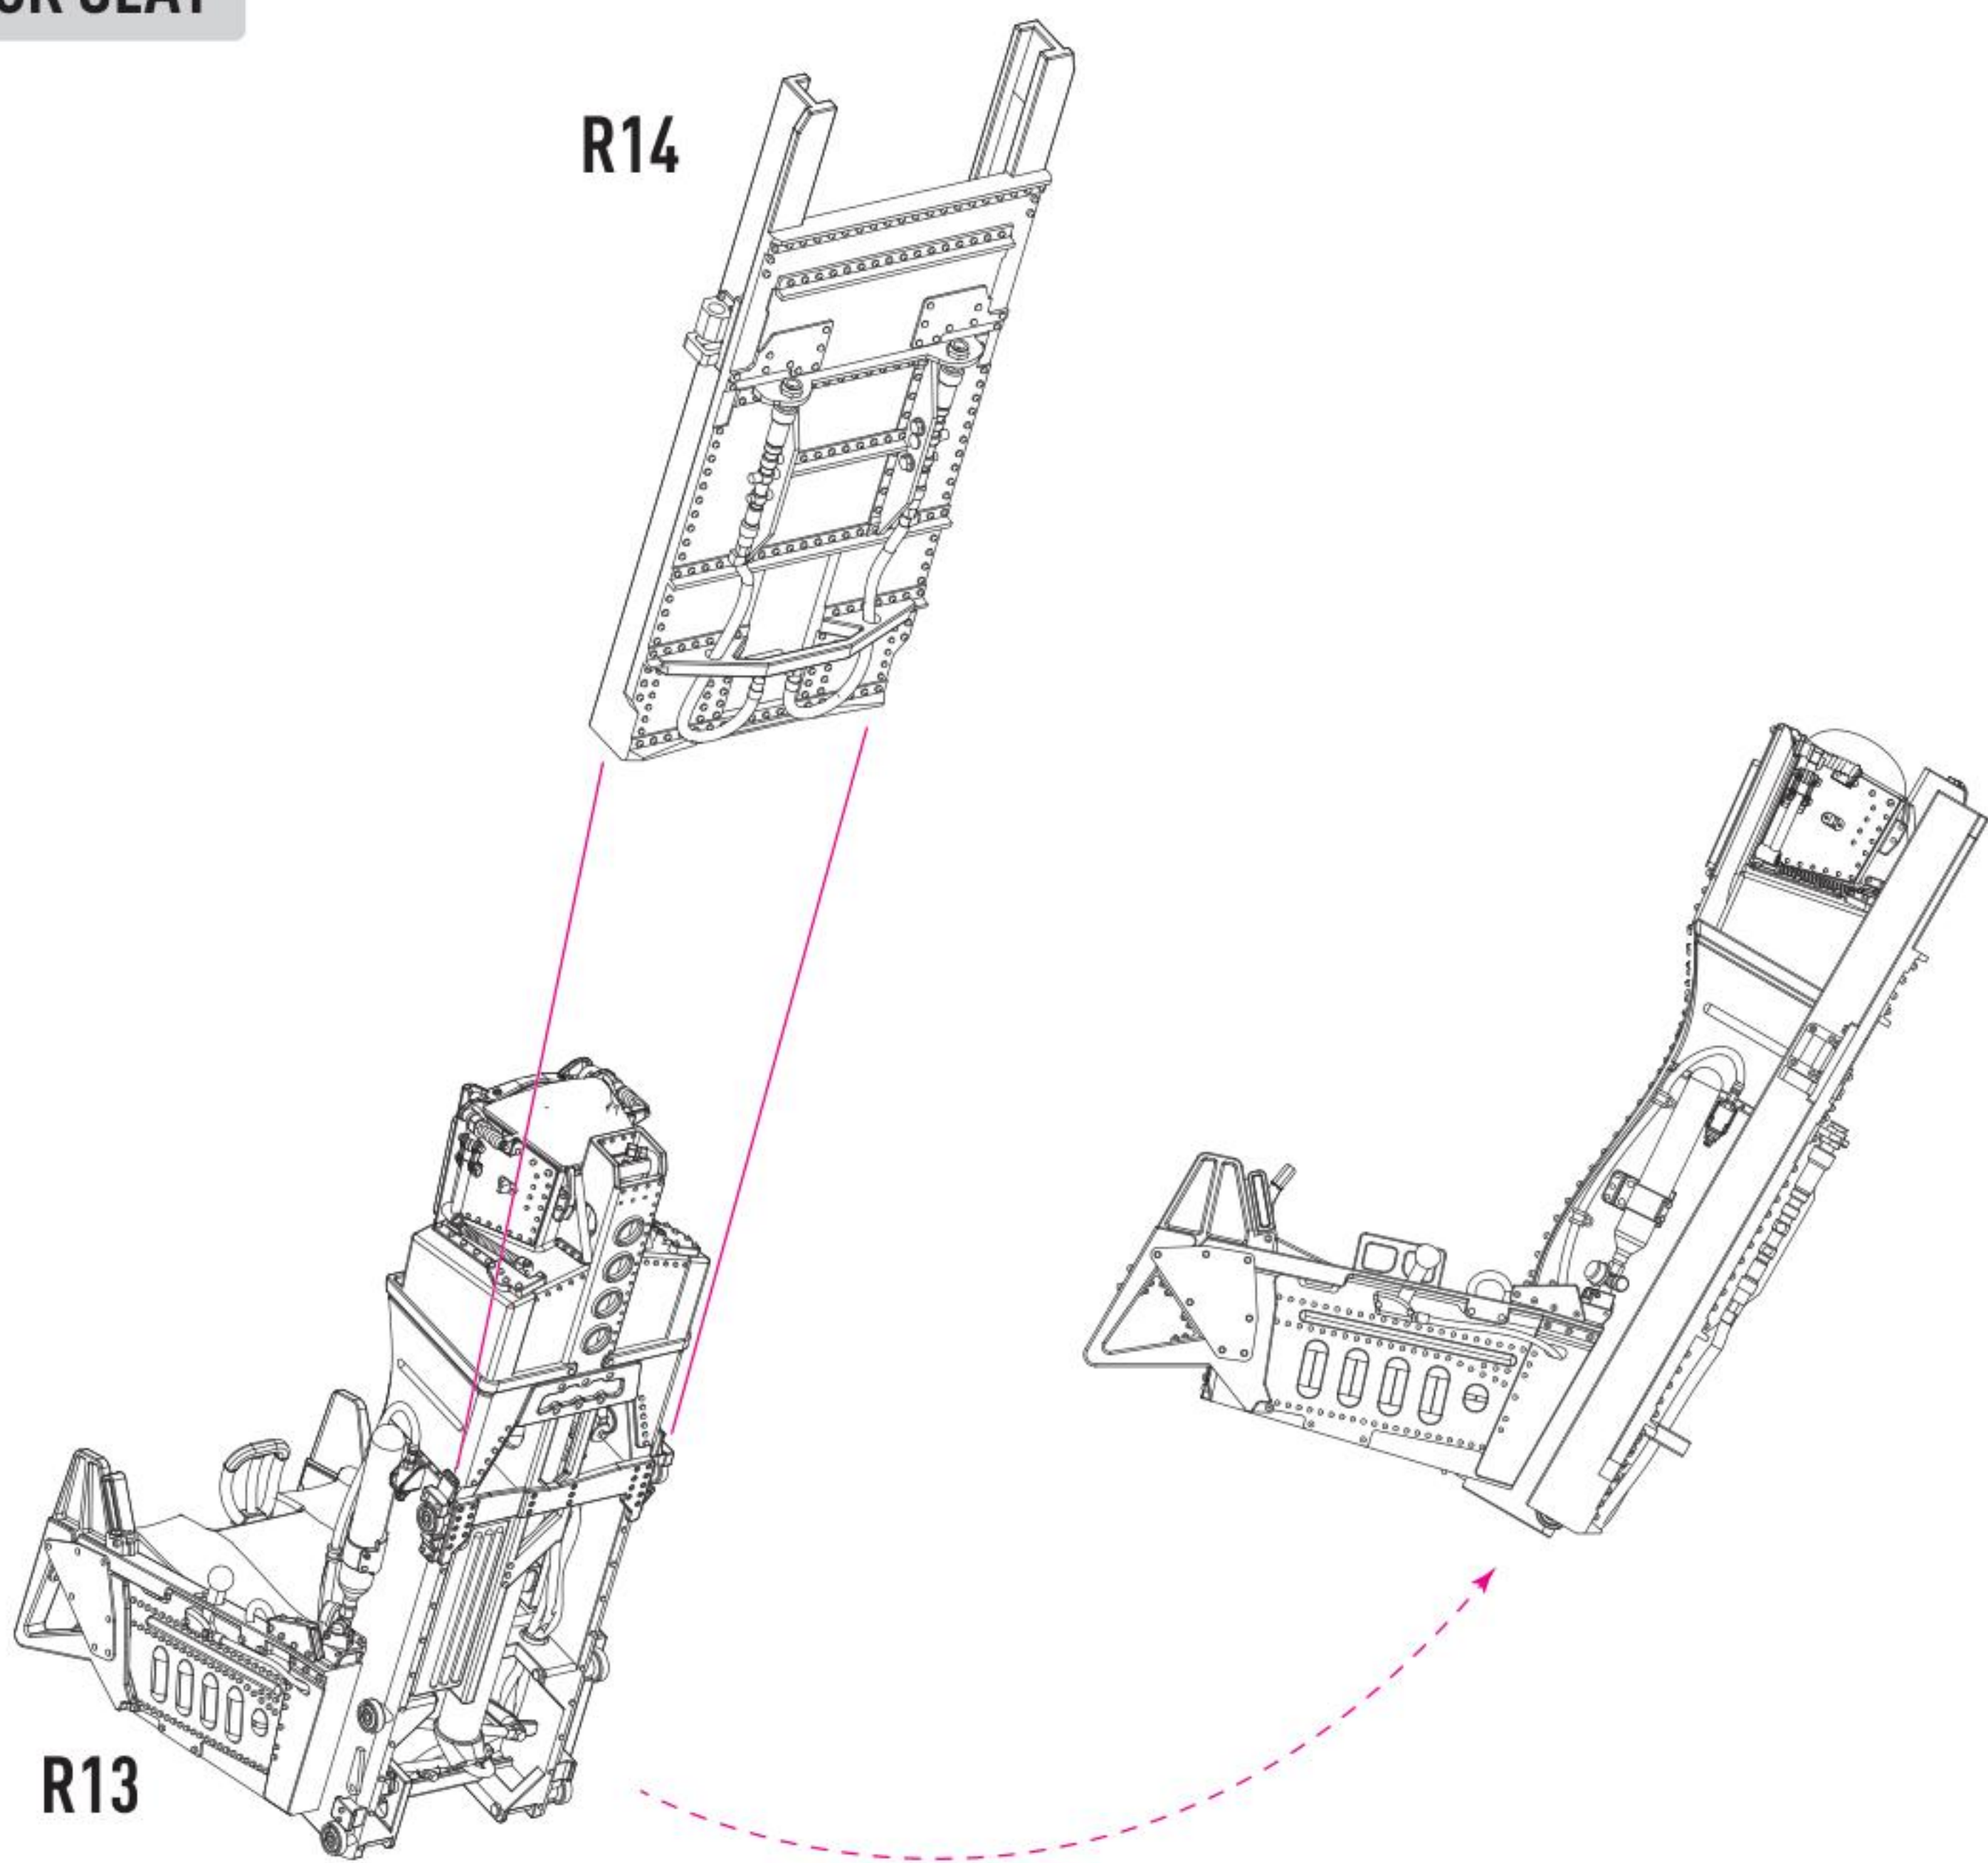


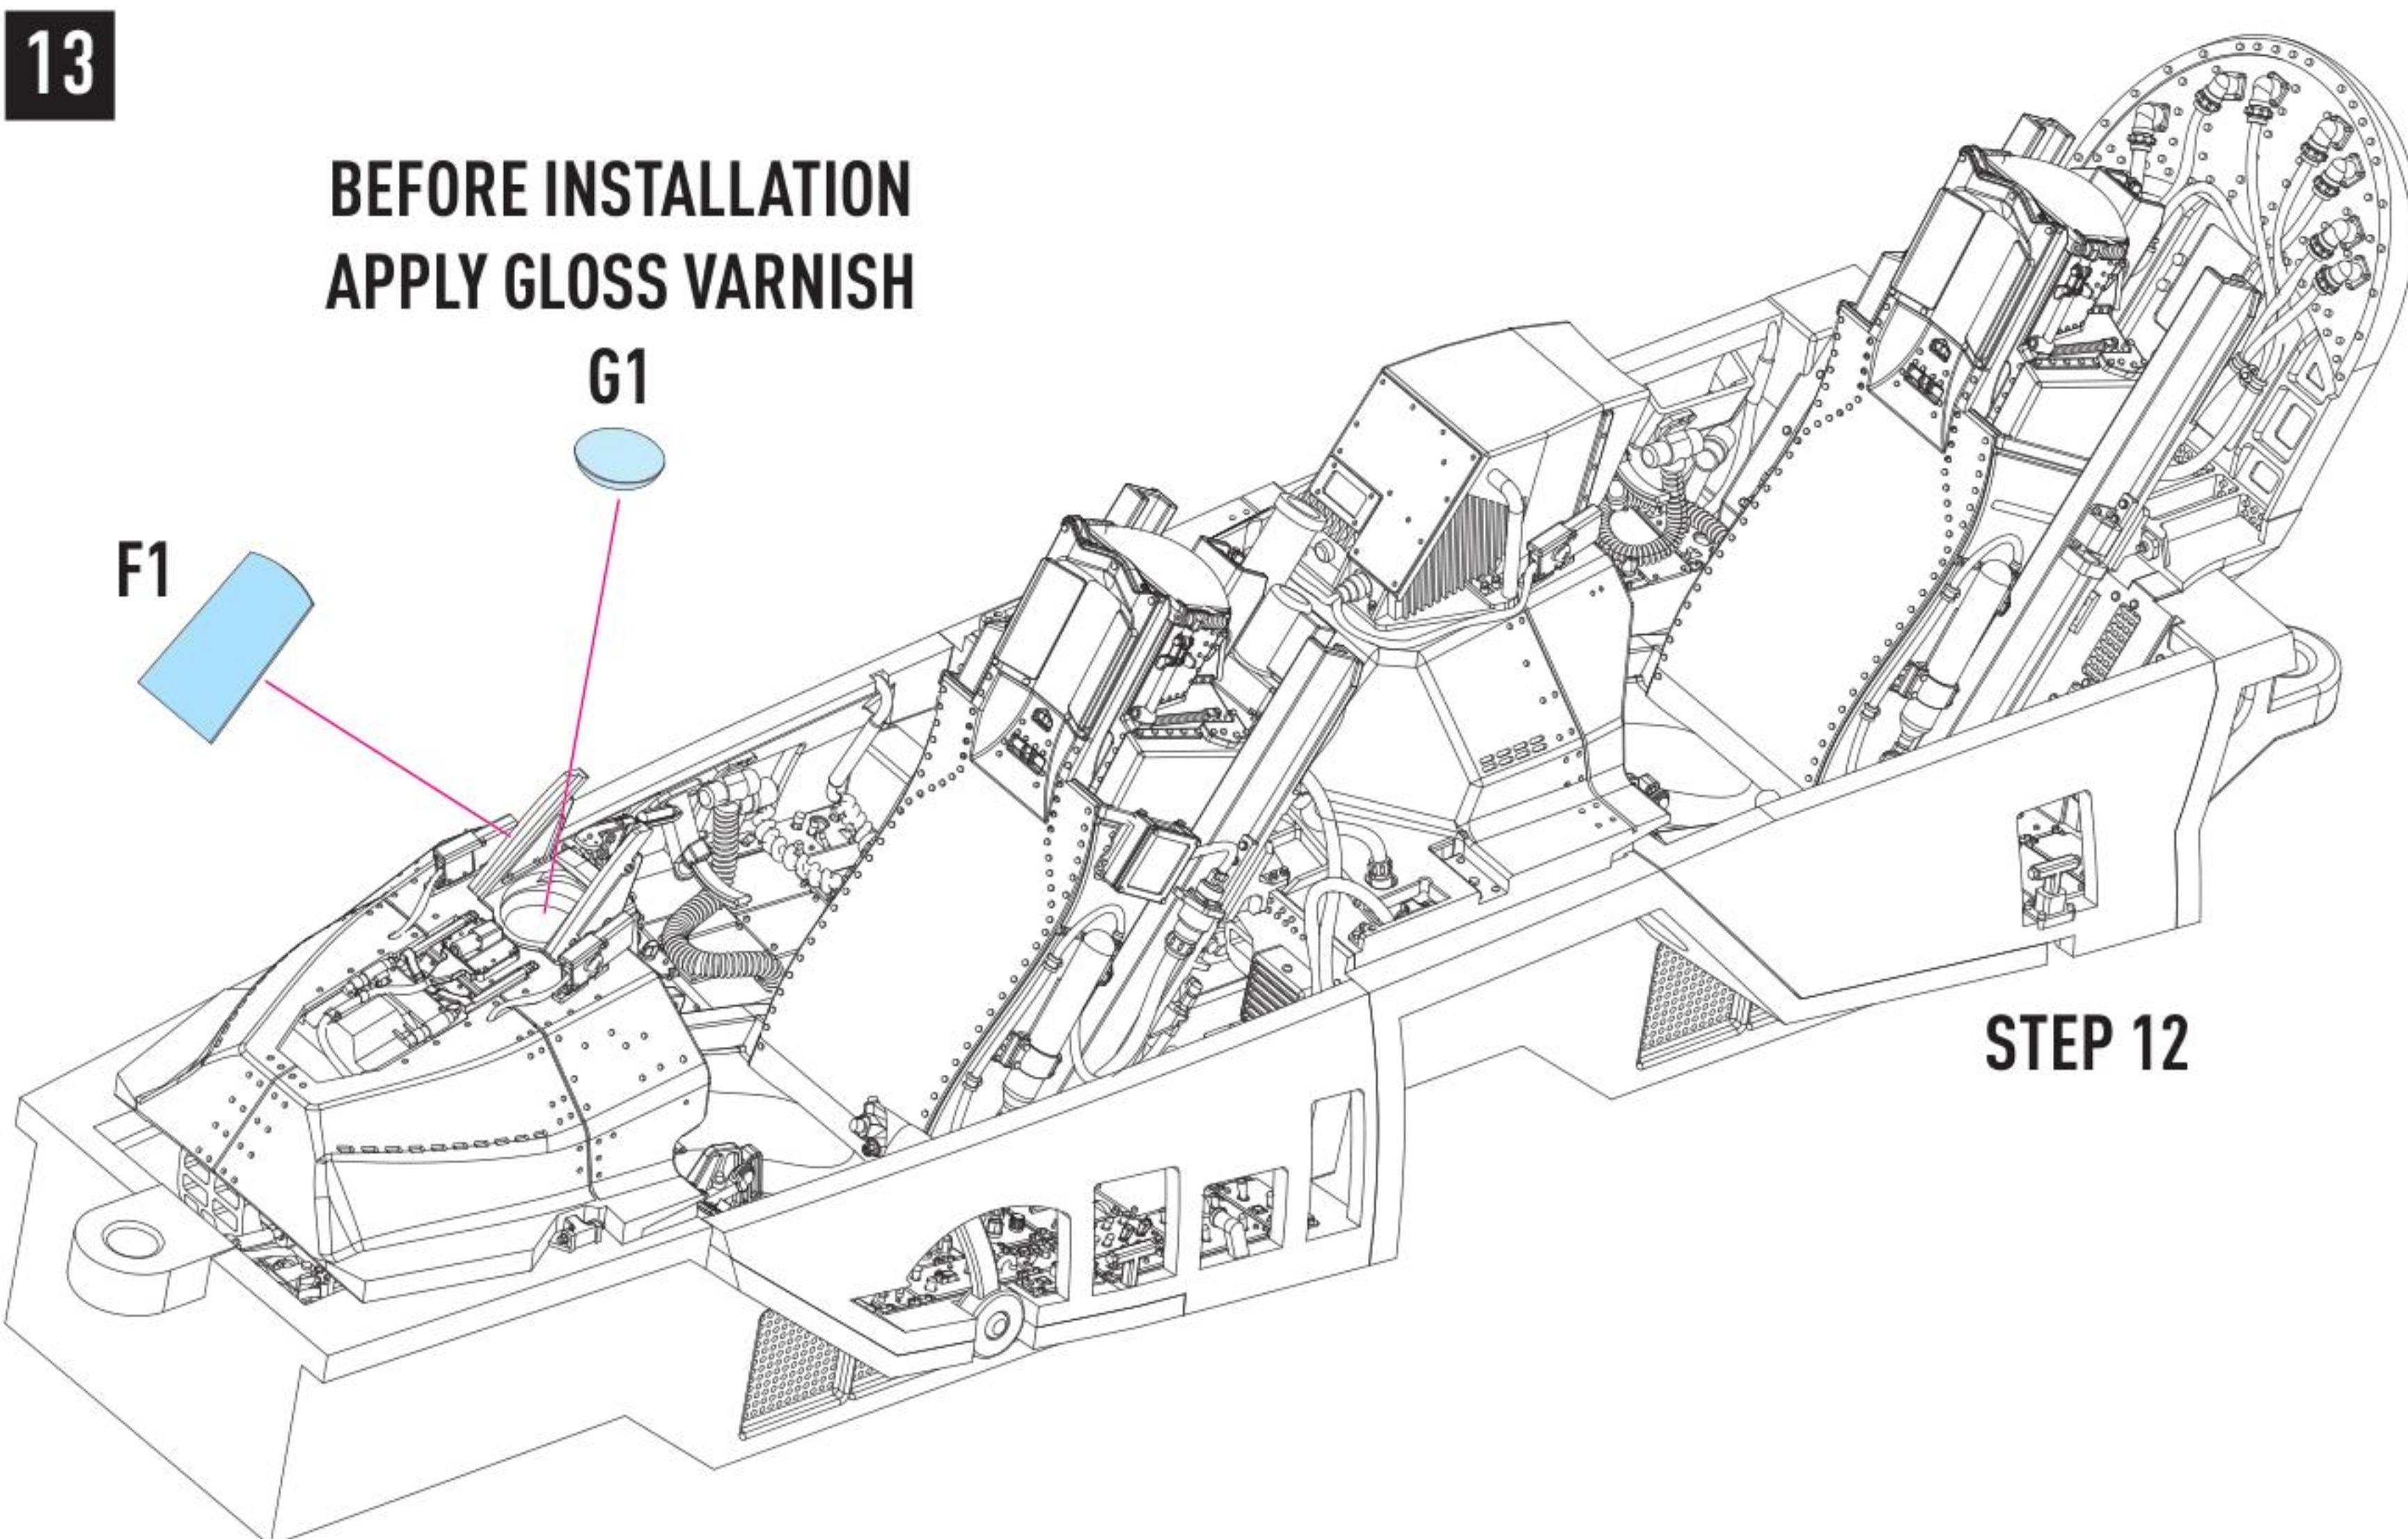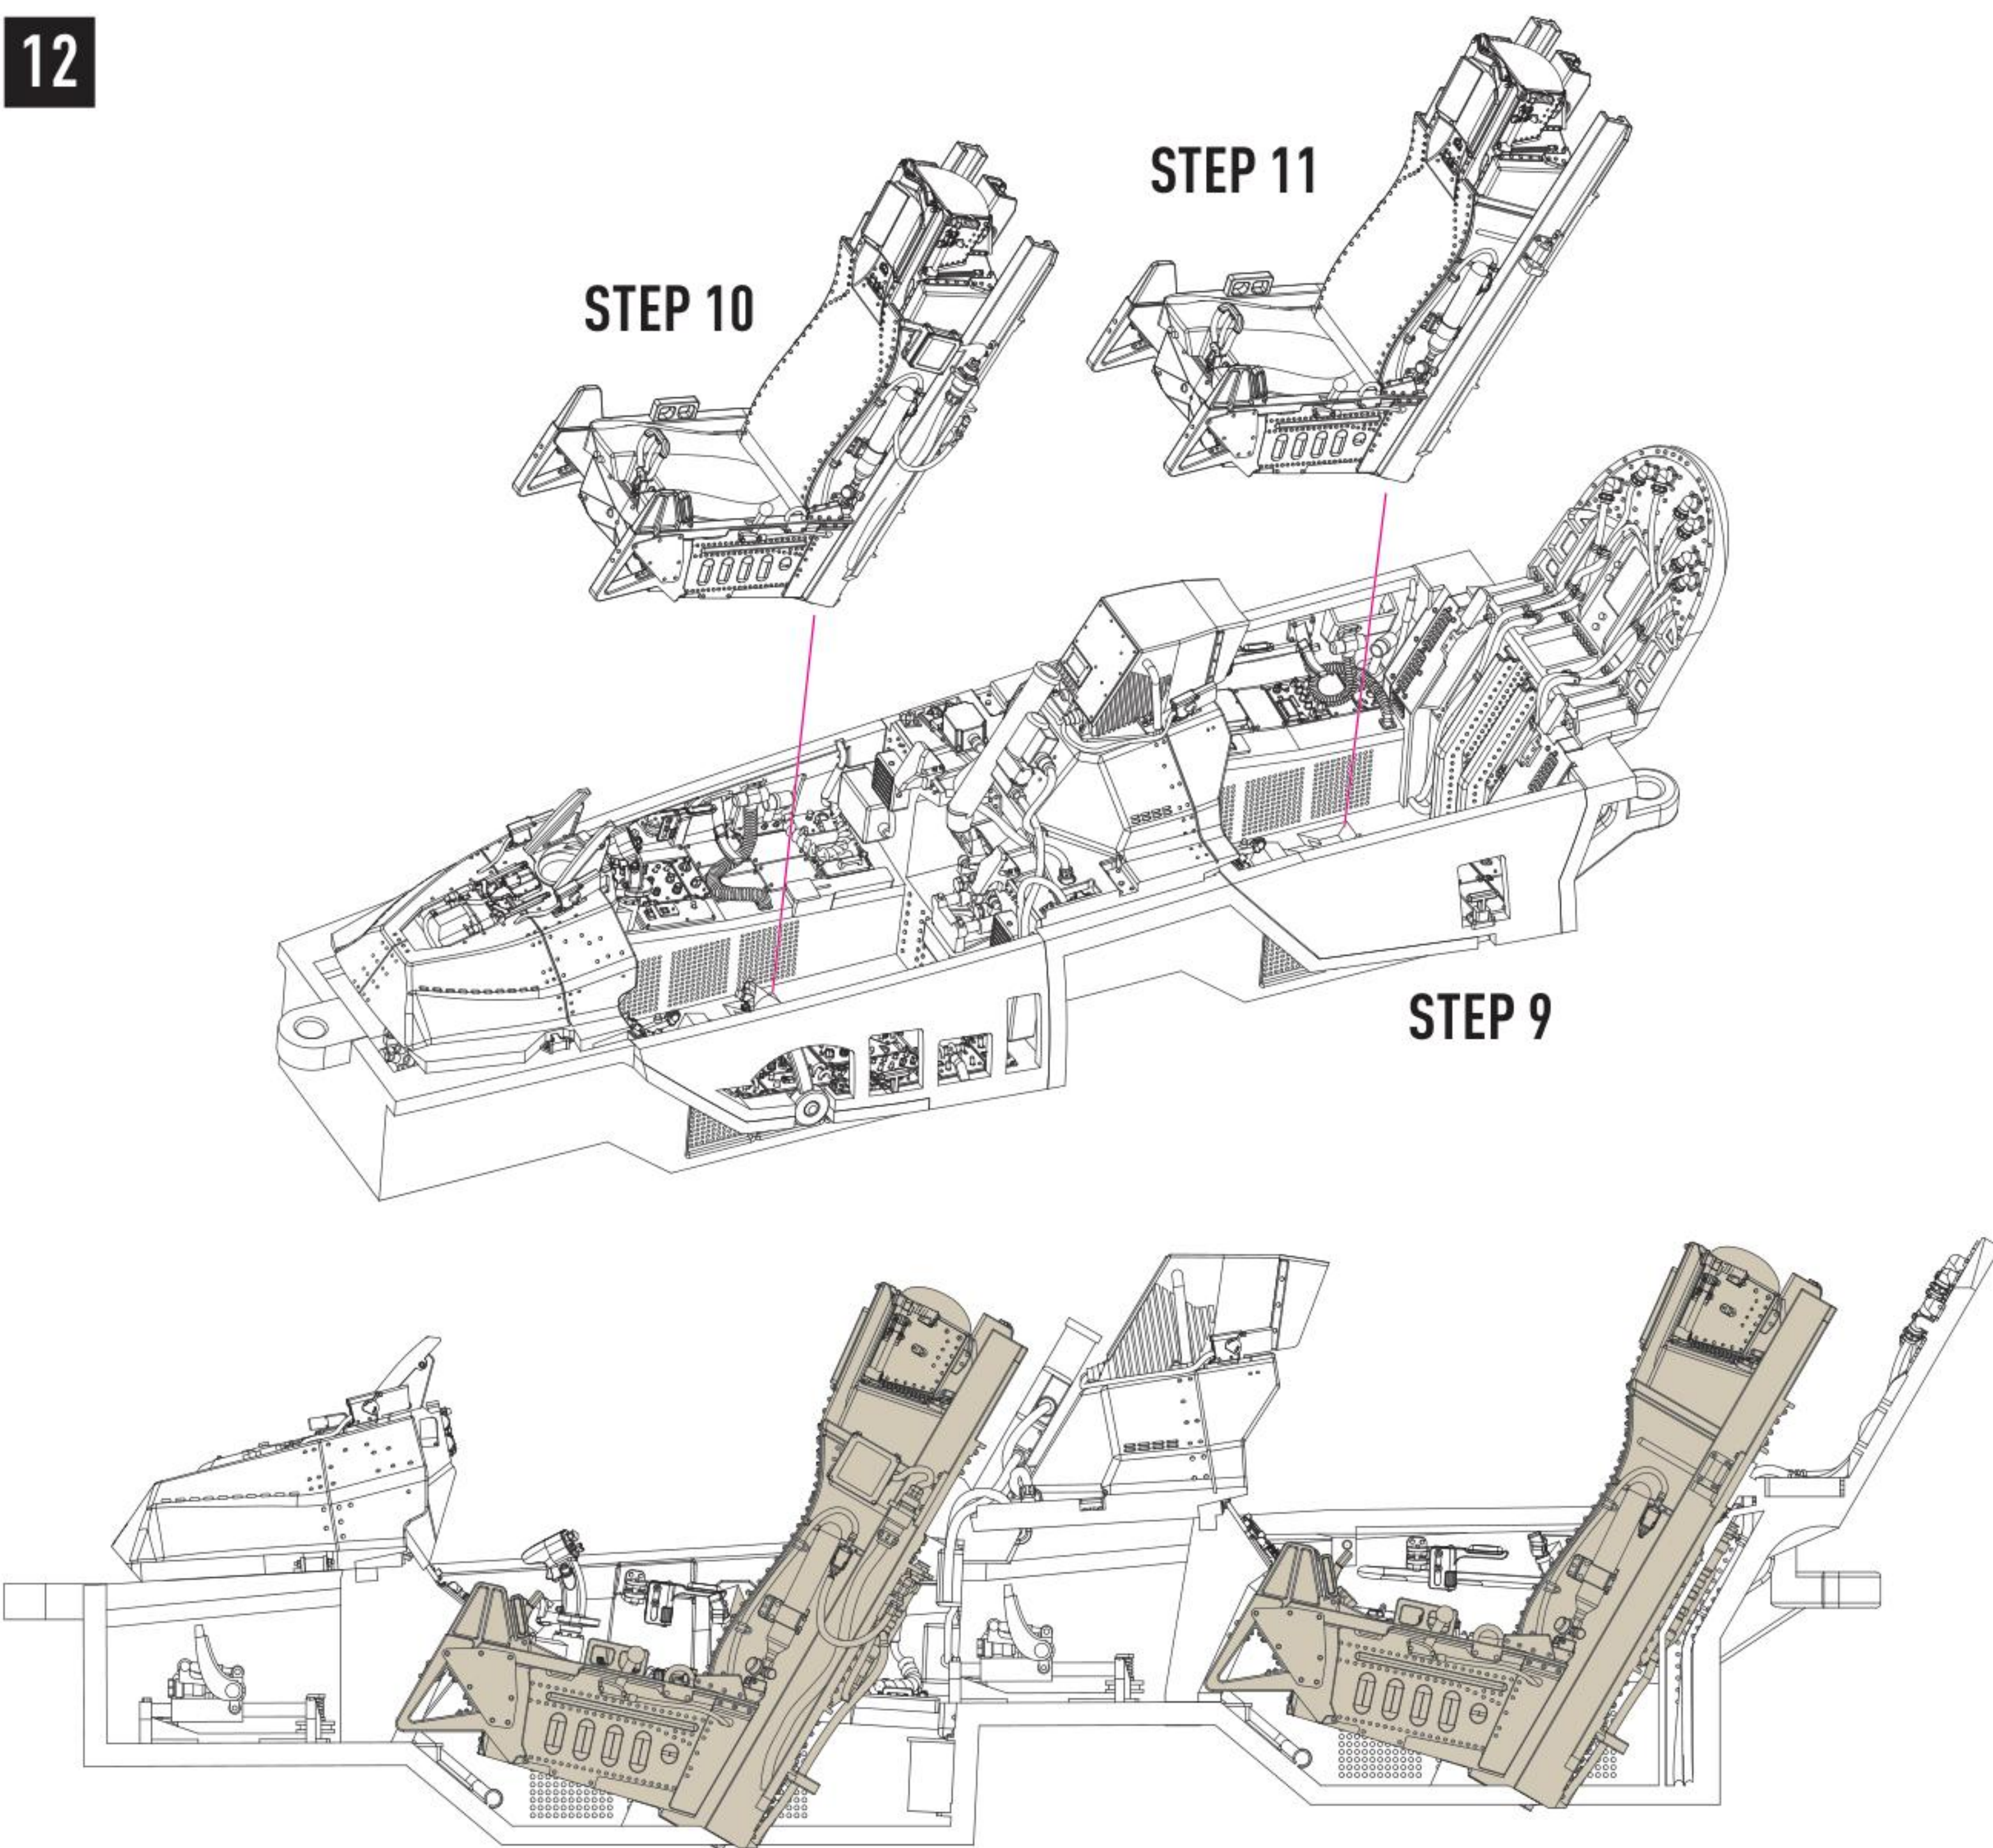

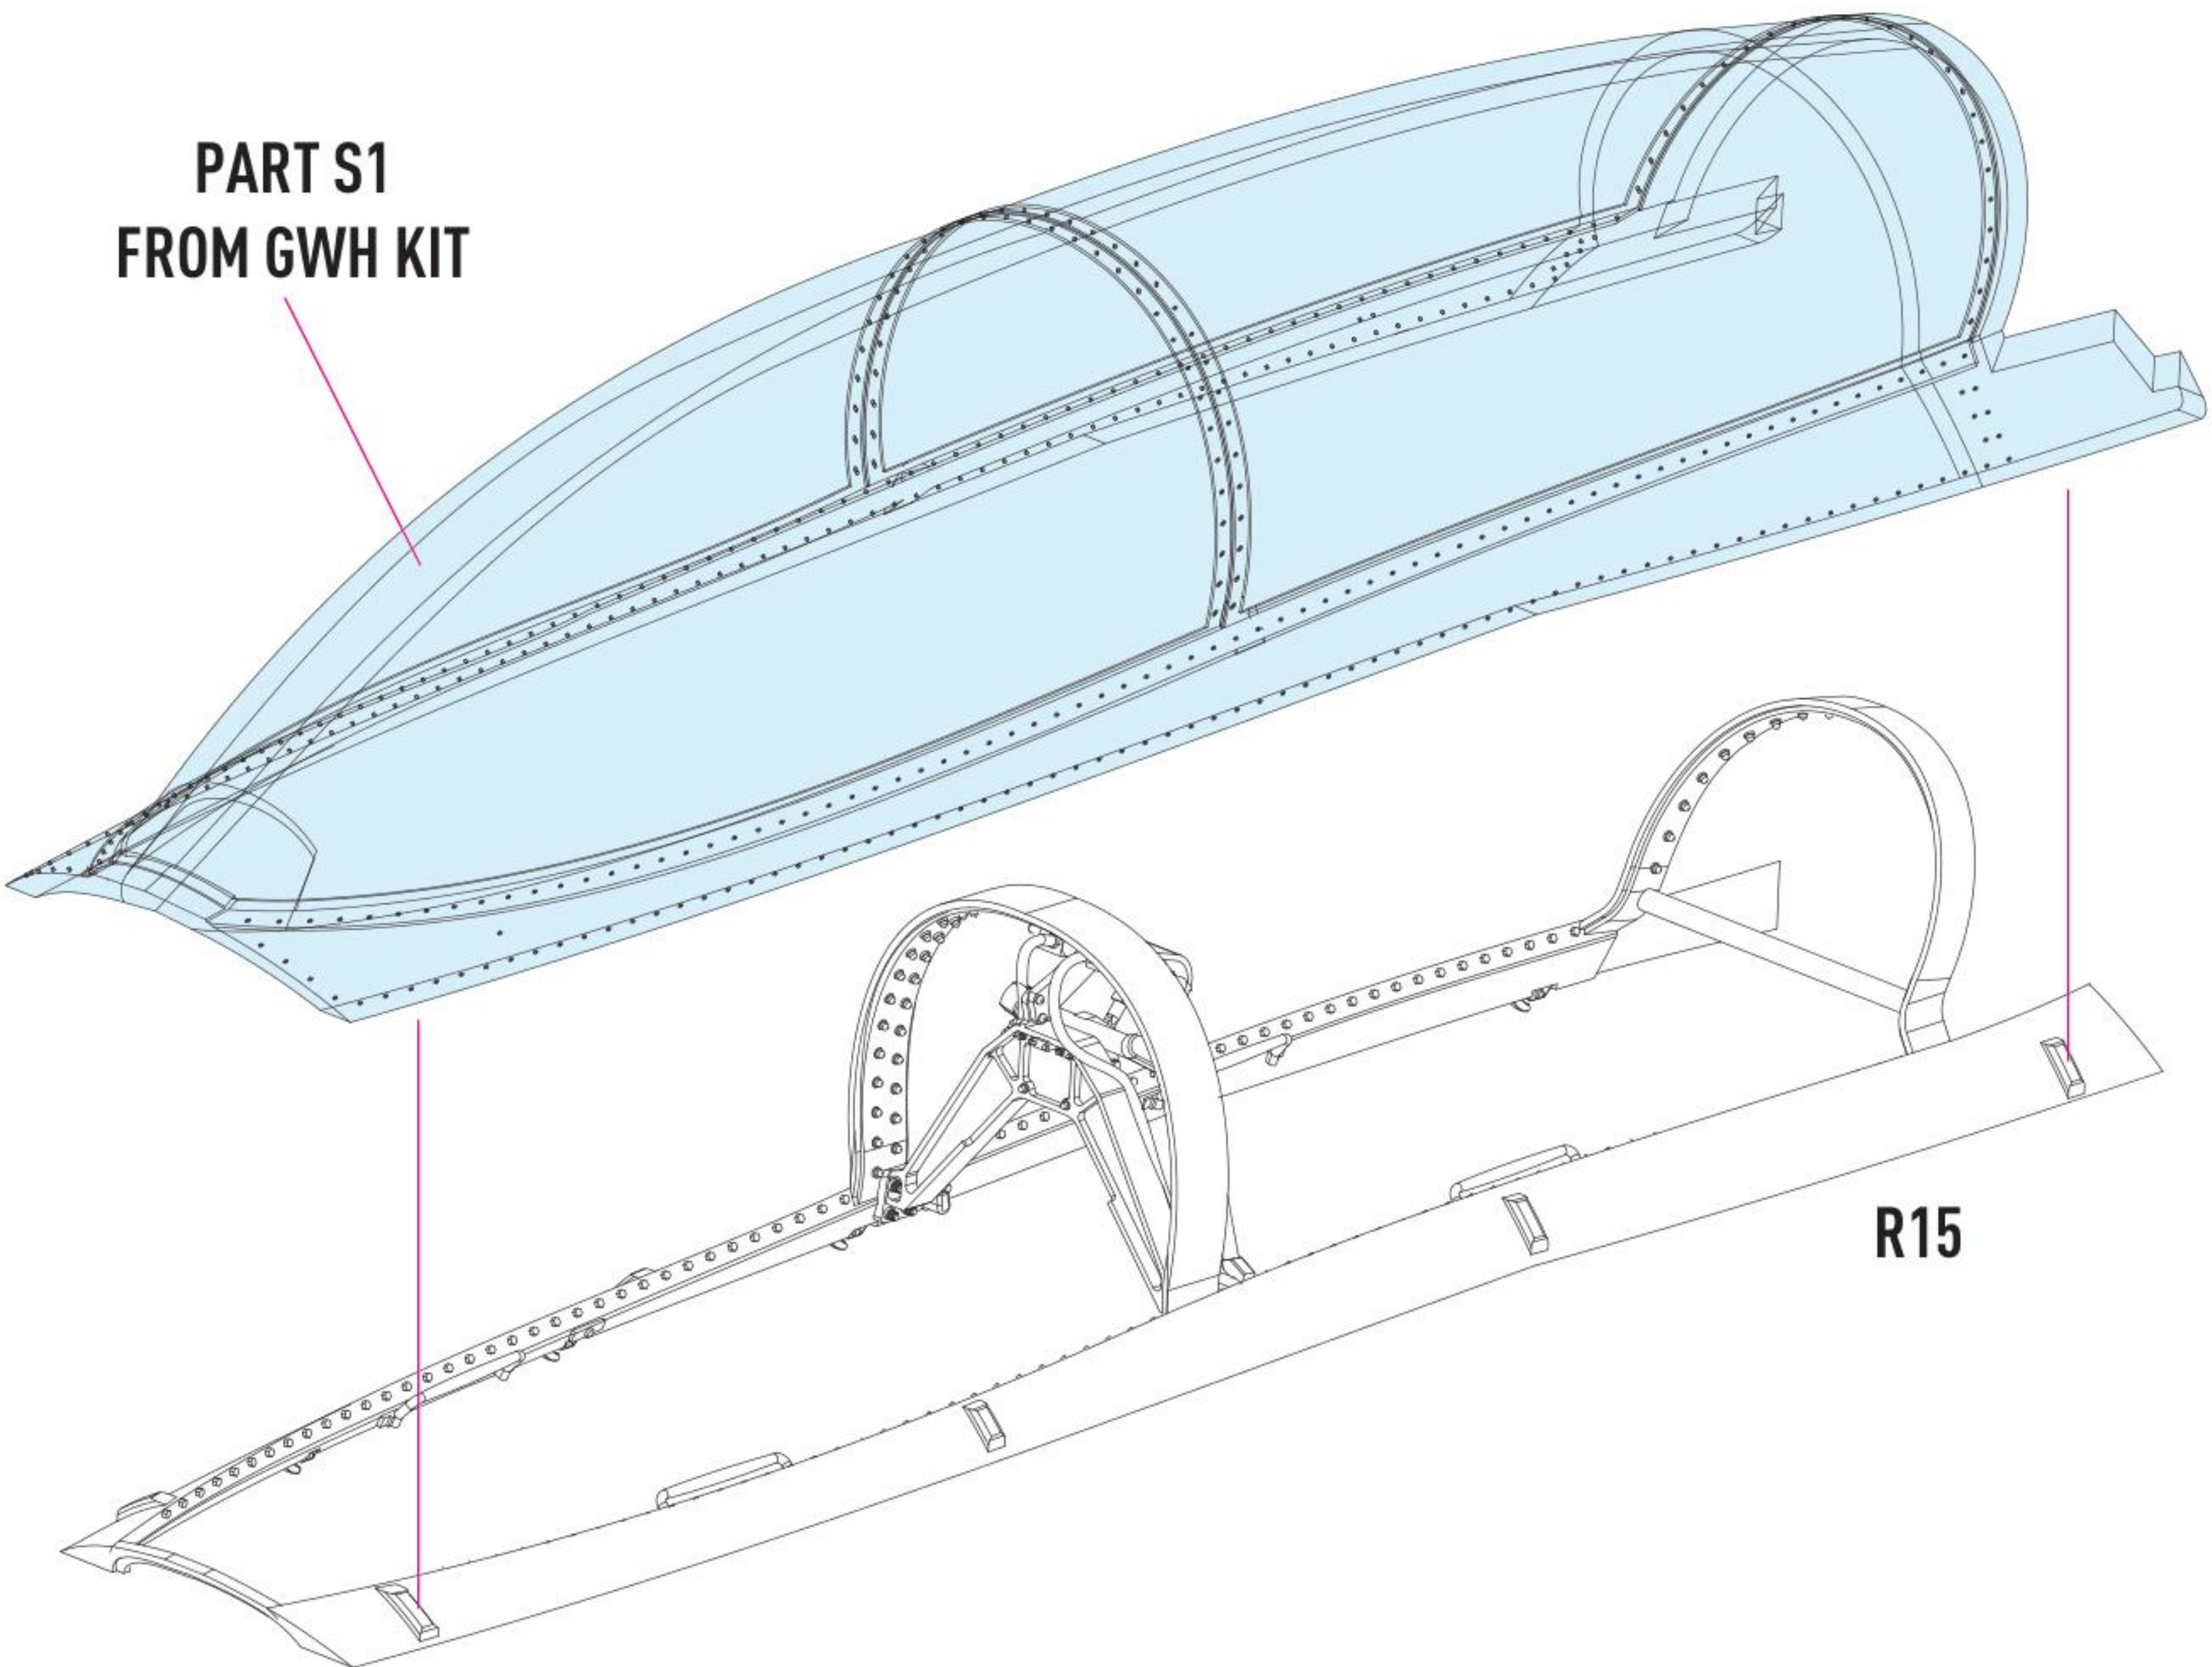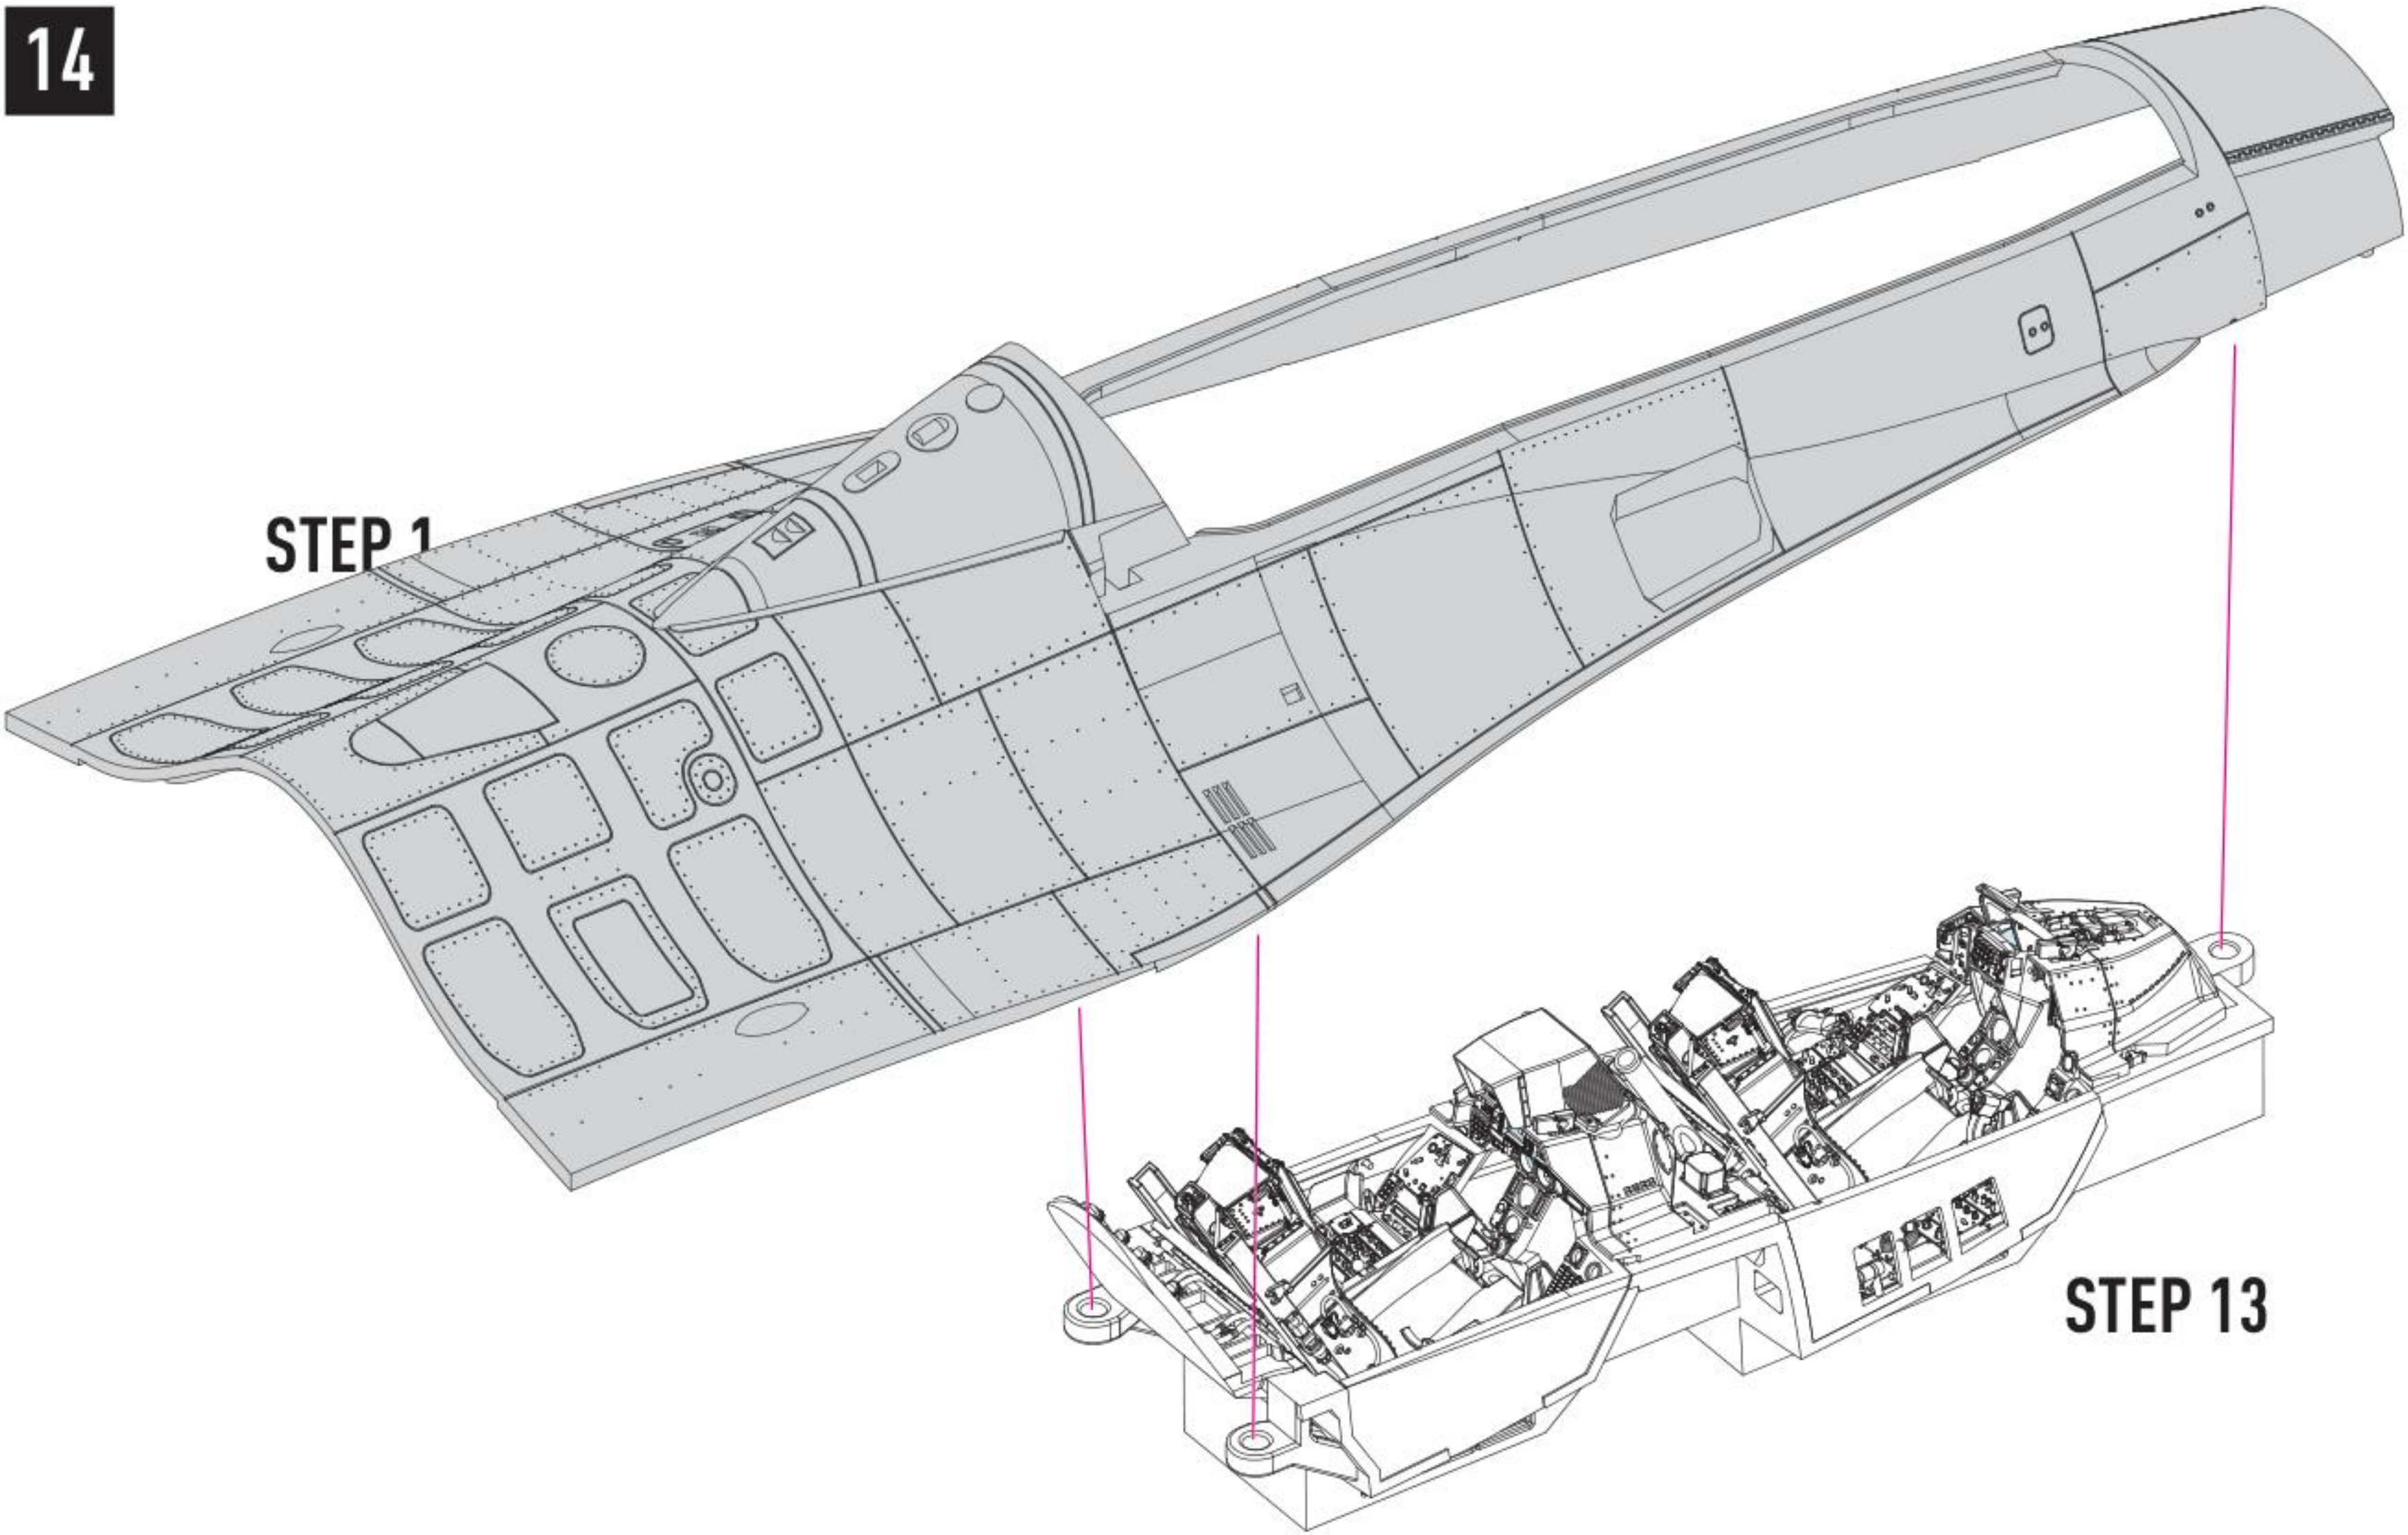

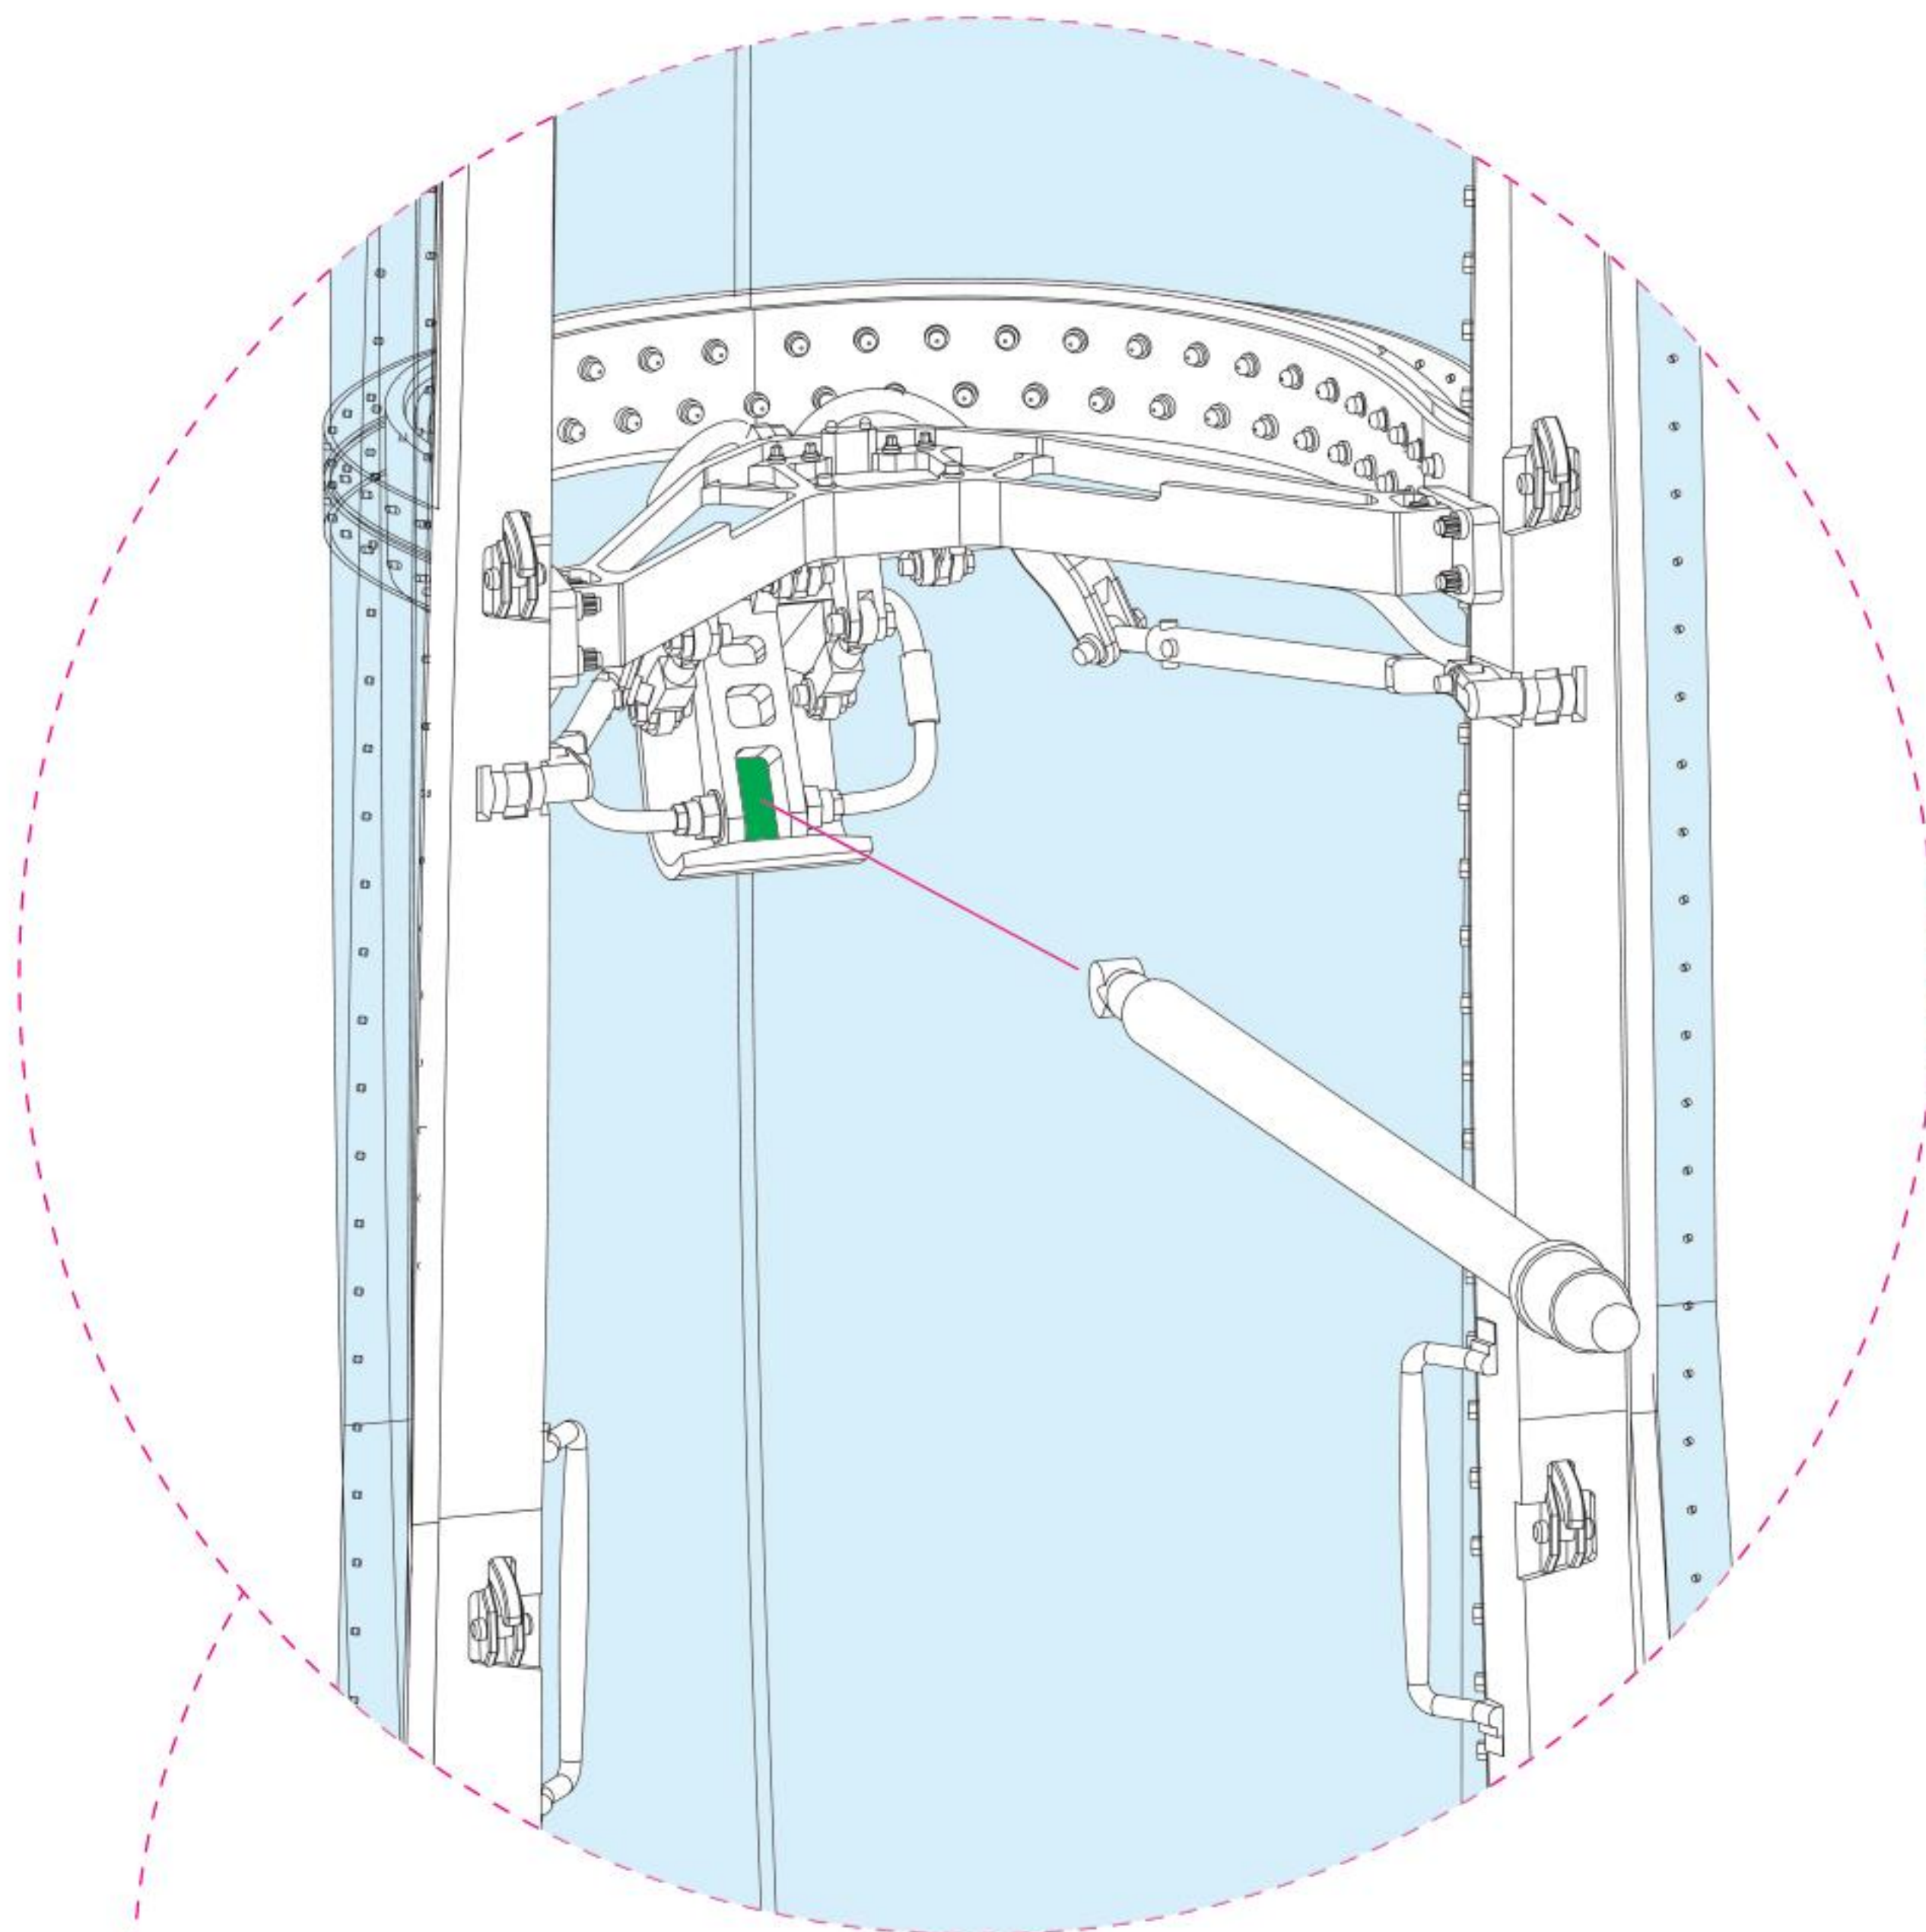

## STEP 15

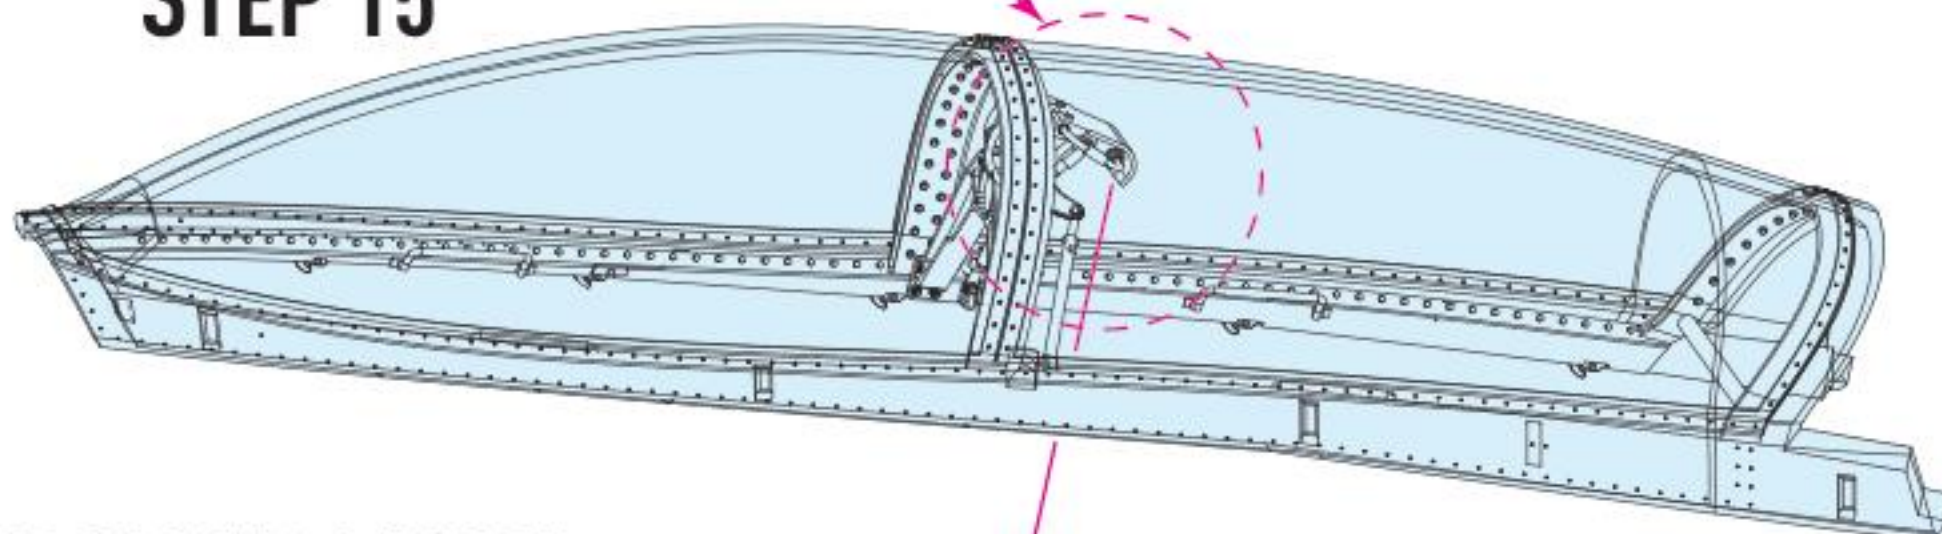


USE R18 FOR CLOSED CANOPY  
OR R19 FOR OPEN CANOPY


R18




R19

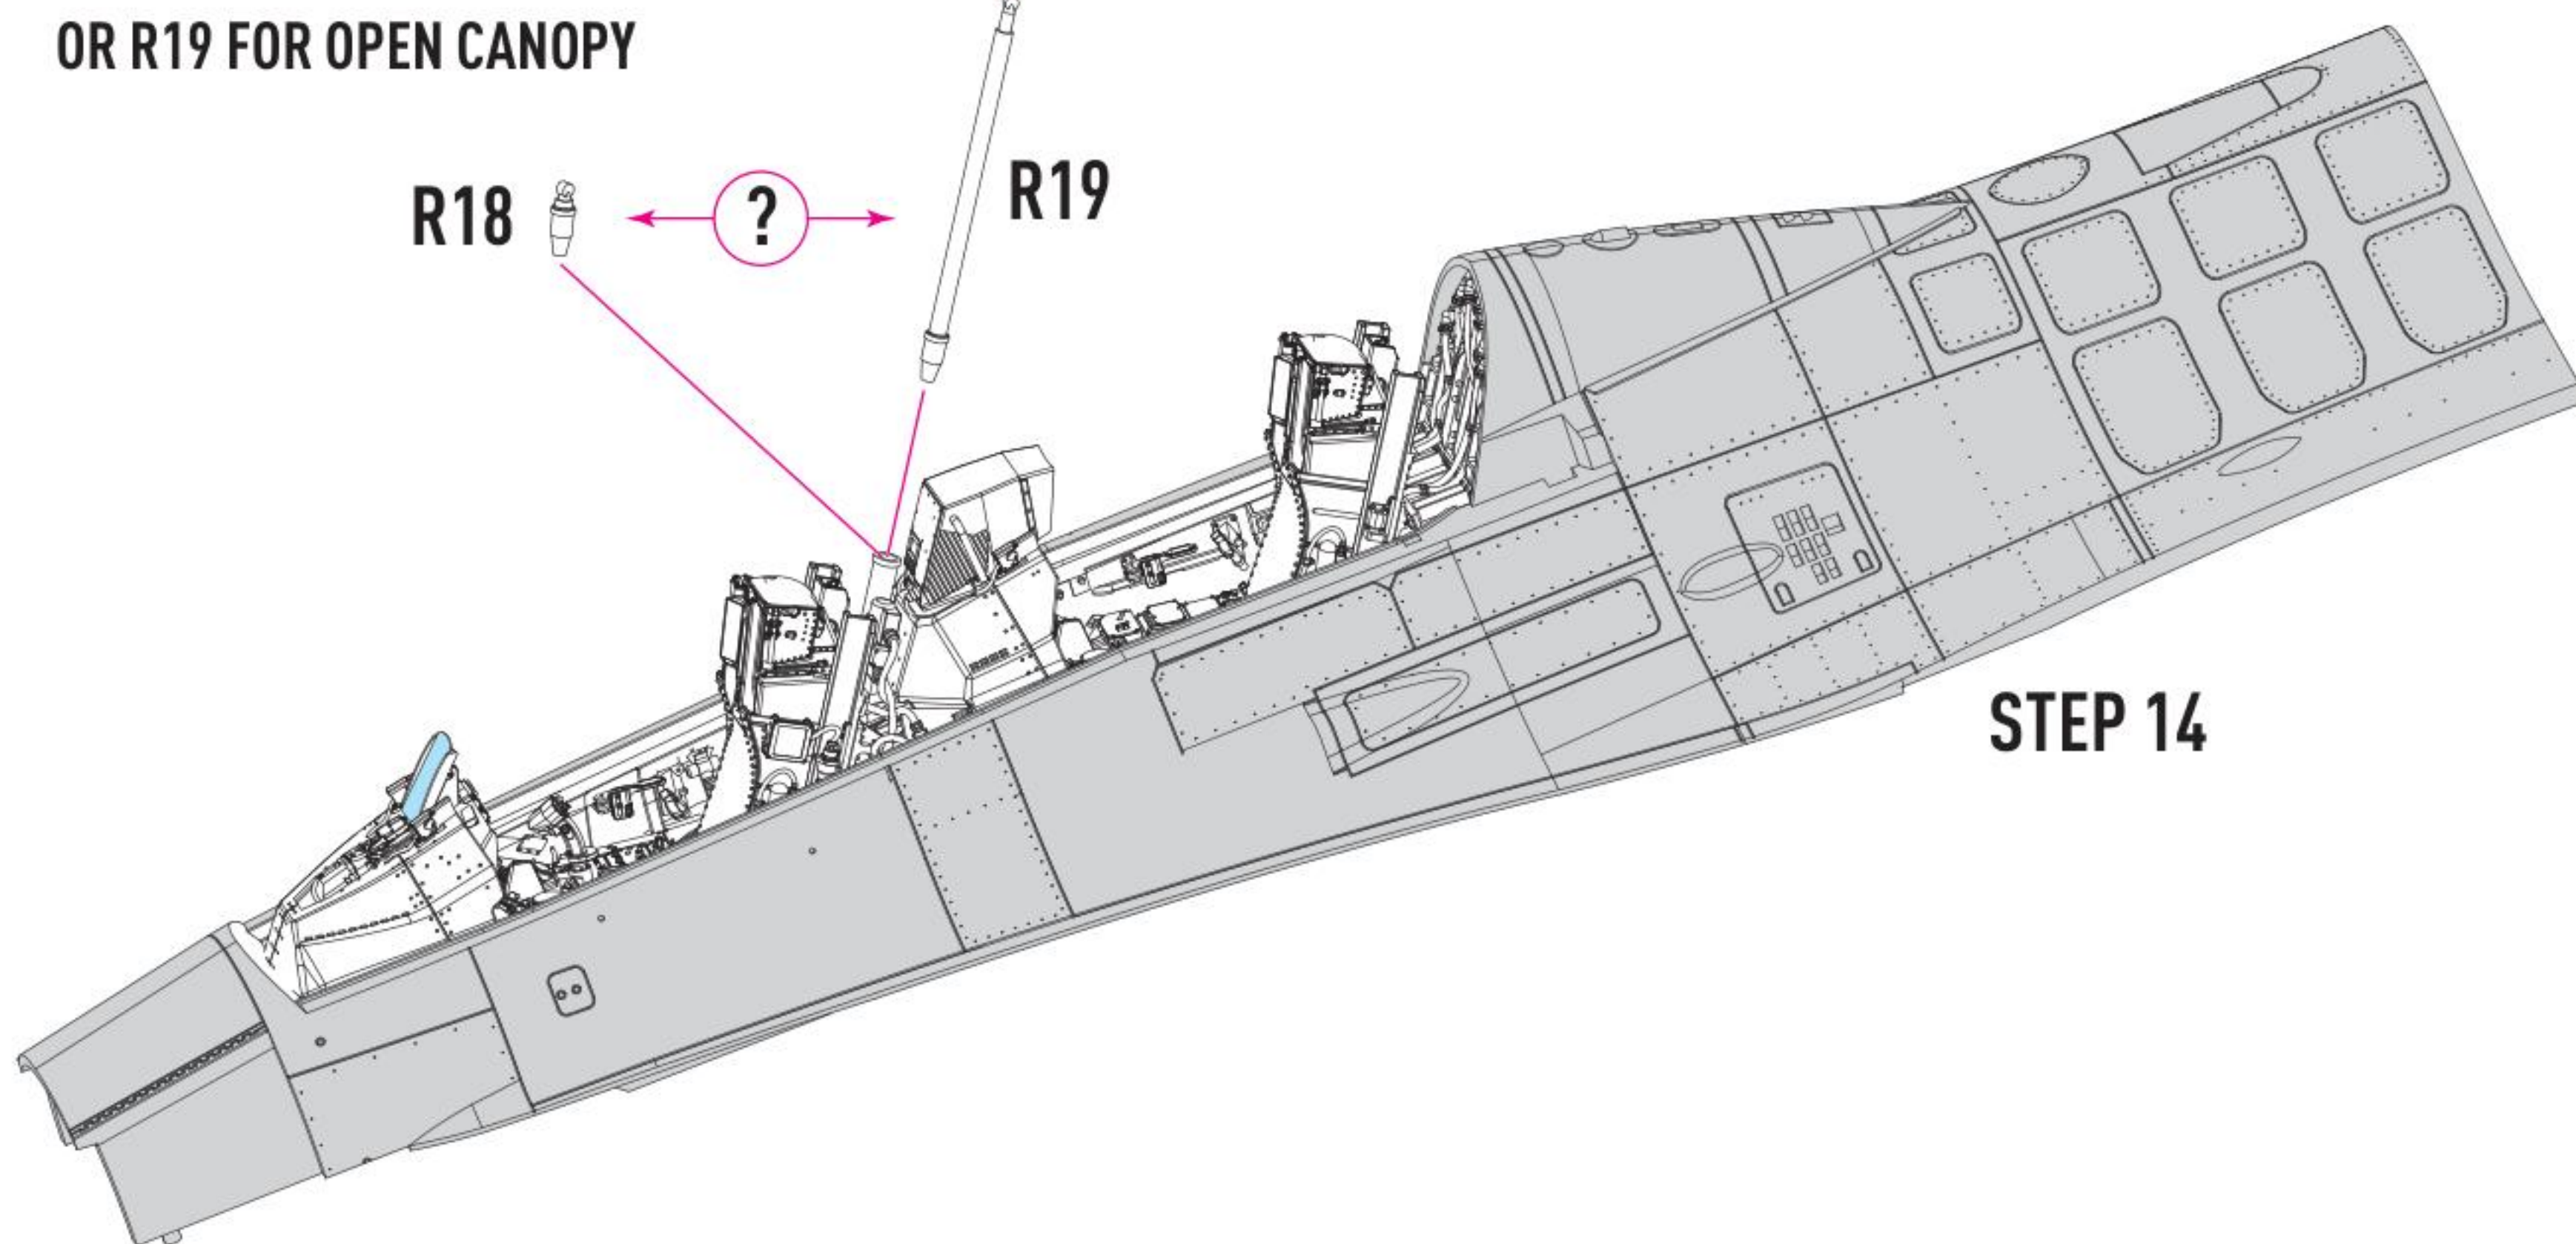

## STEP 14

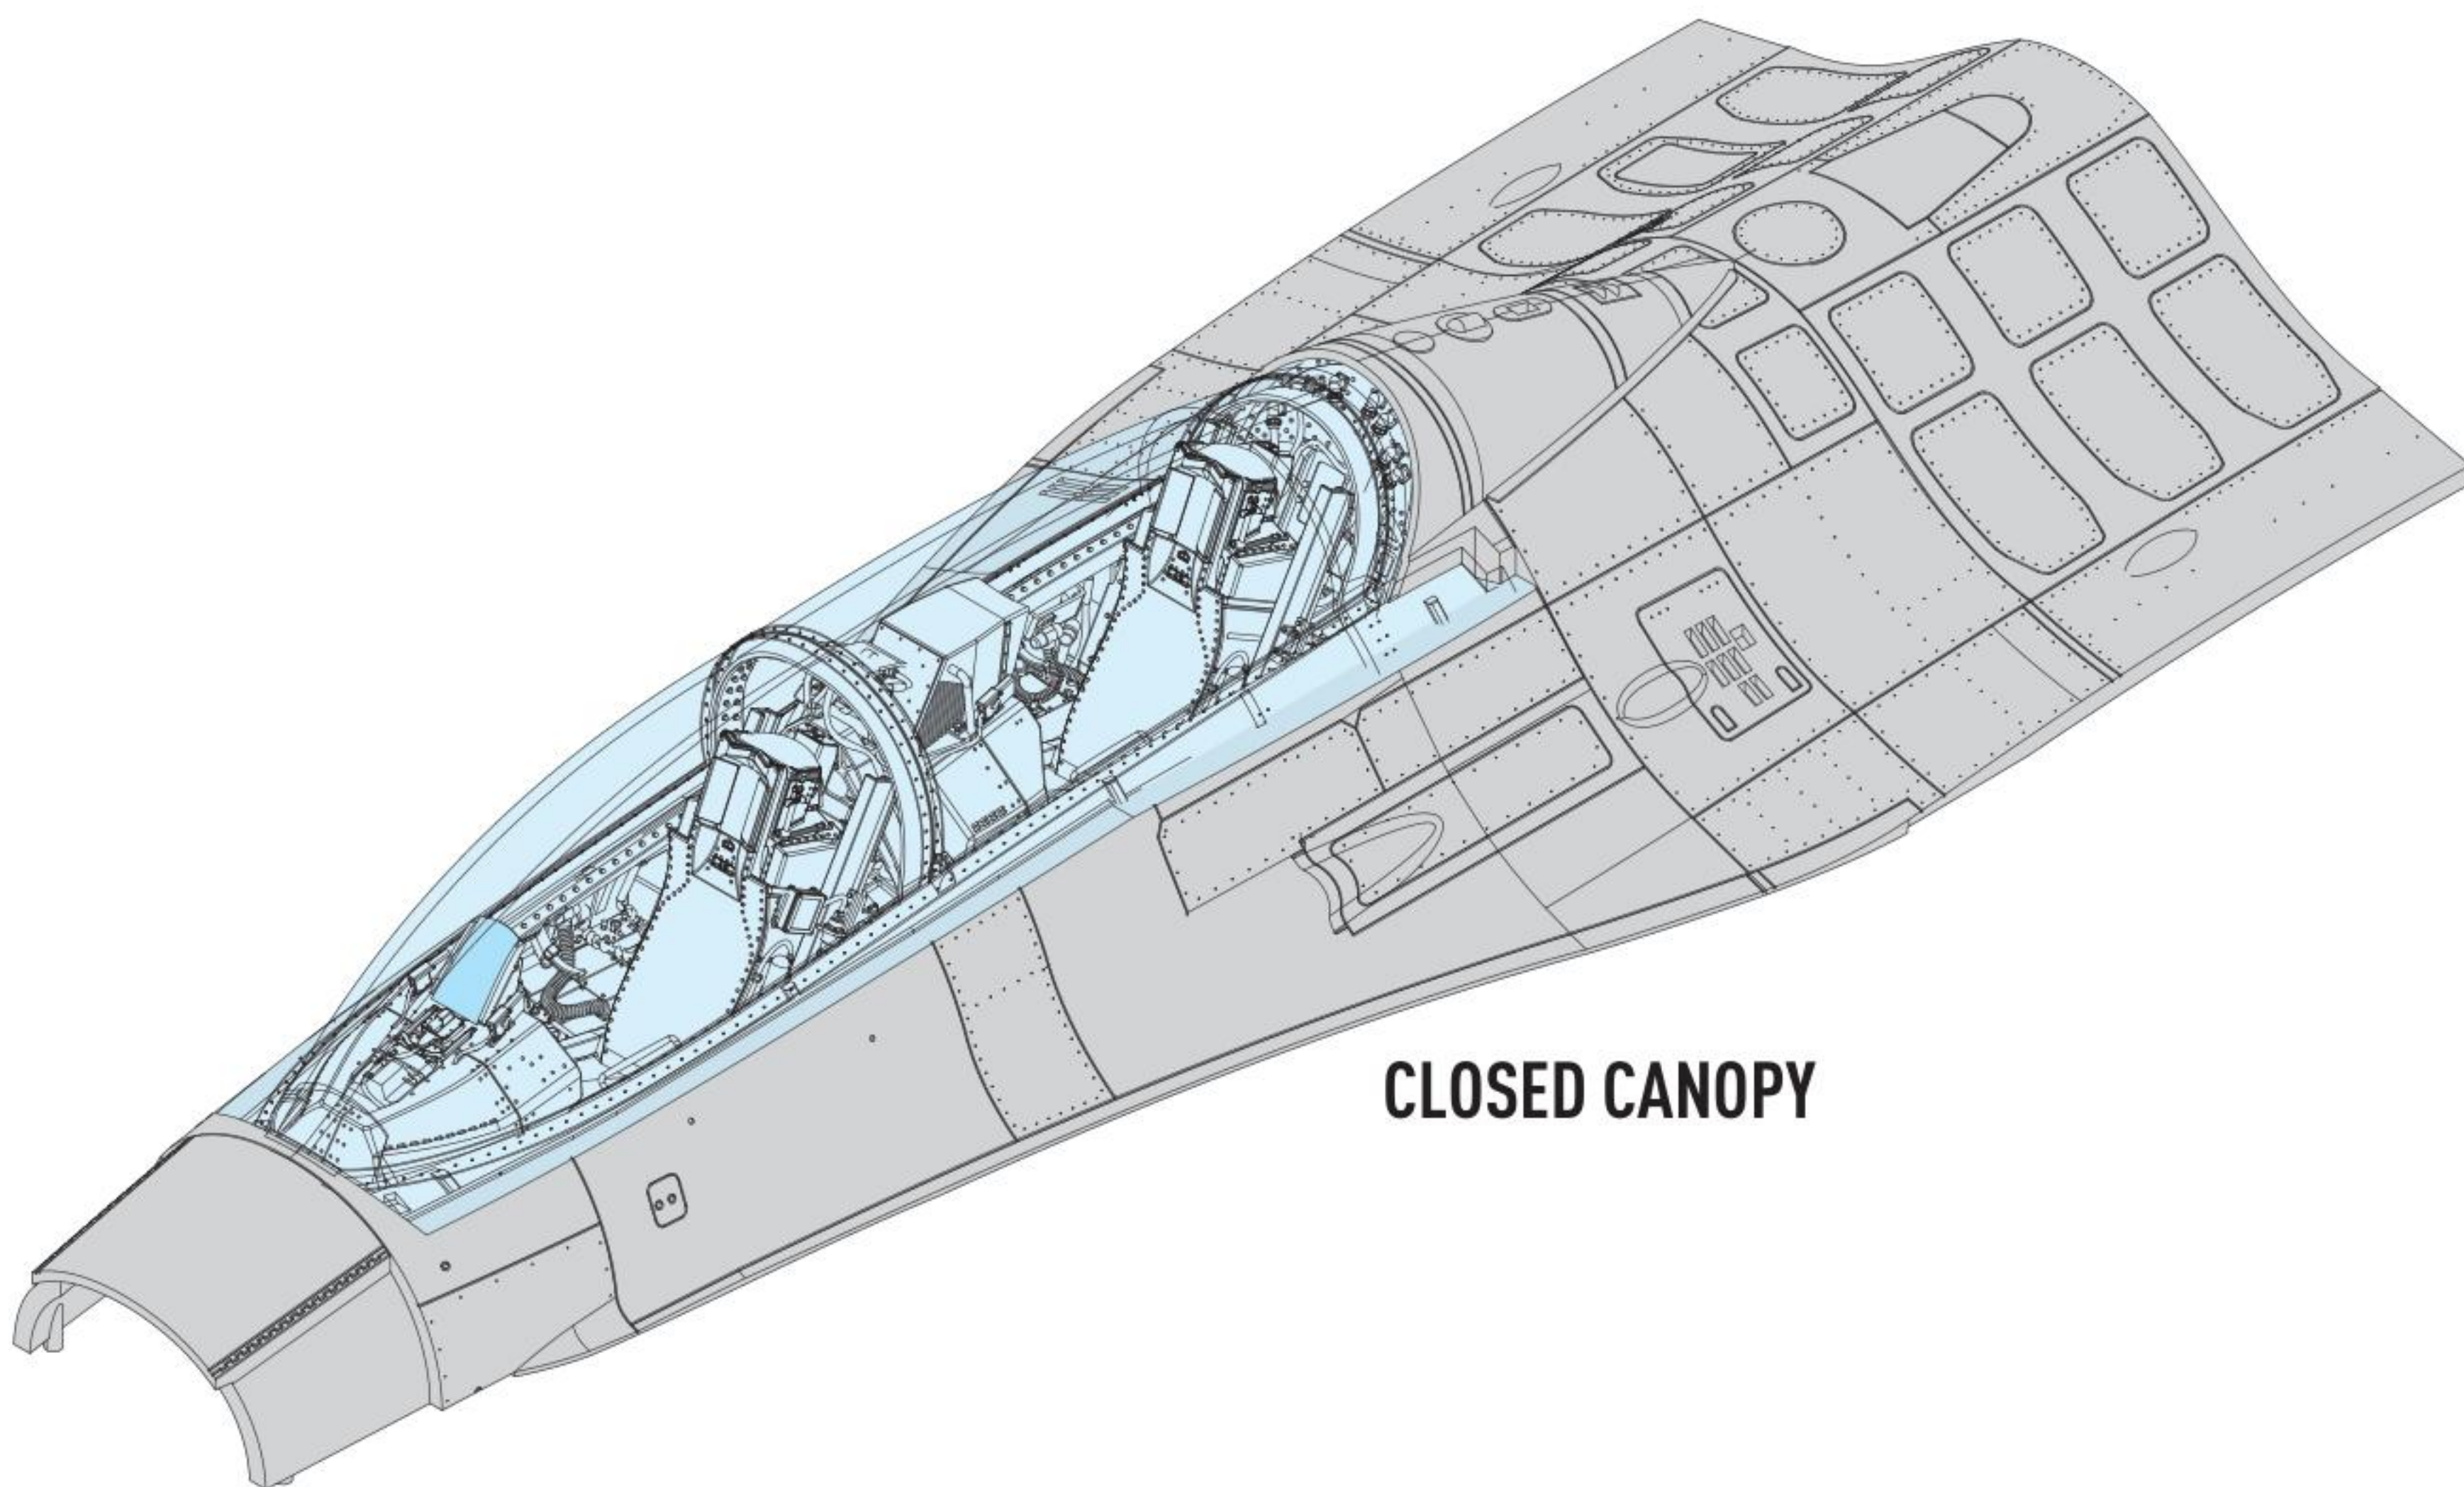


**CLOSED CANOPY**

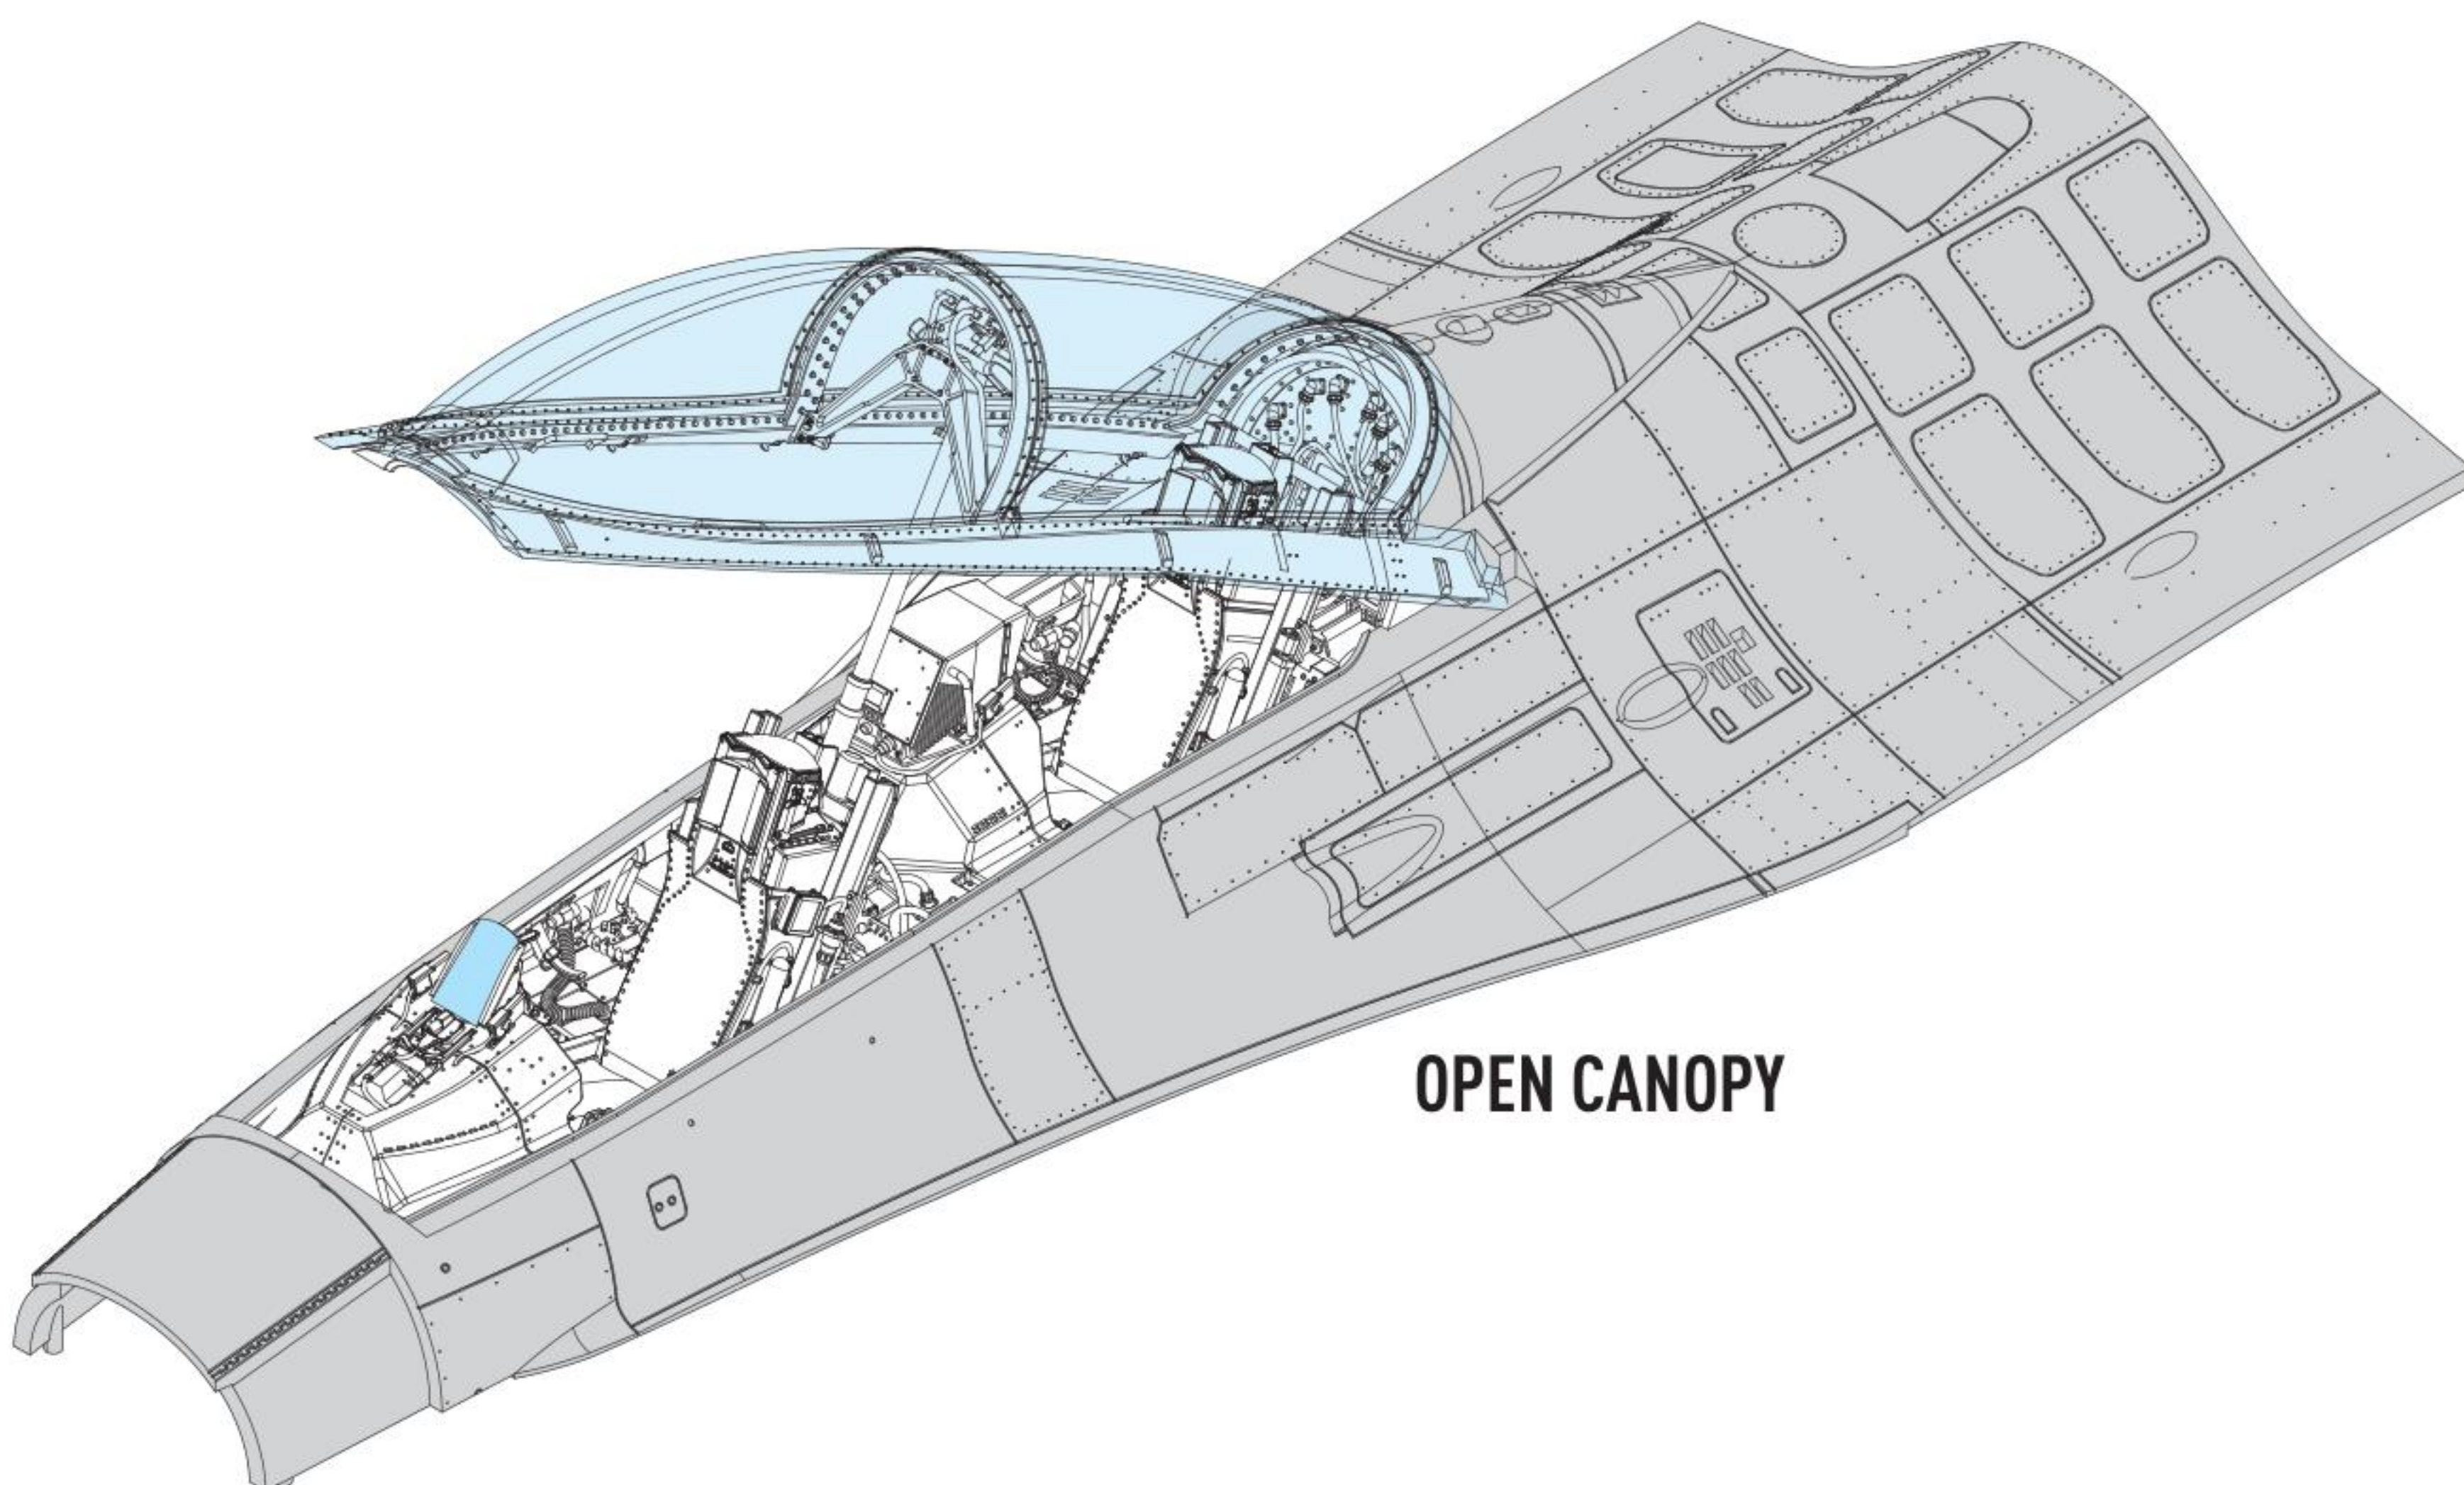


**OPEN CANOPY**

# DECAL INSTRUCTION


FRD COCKPIT  
LEFT

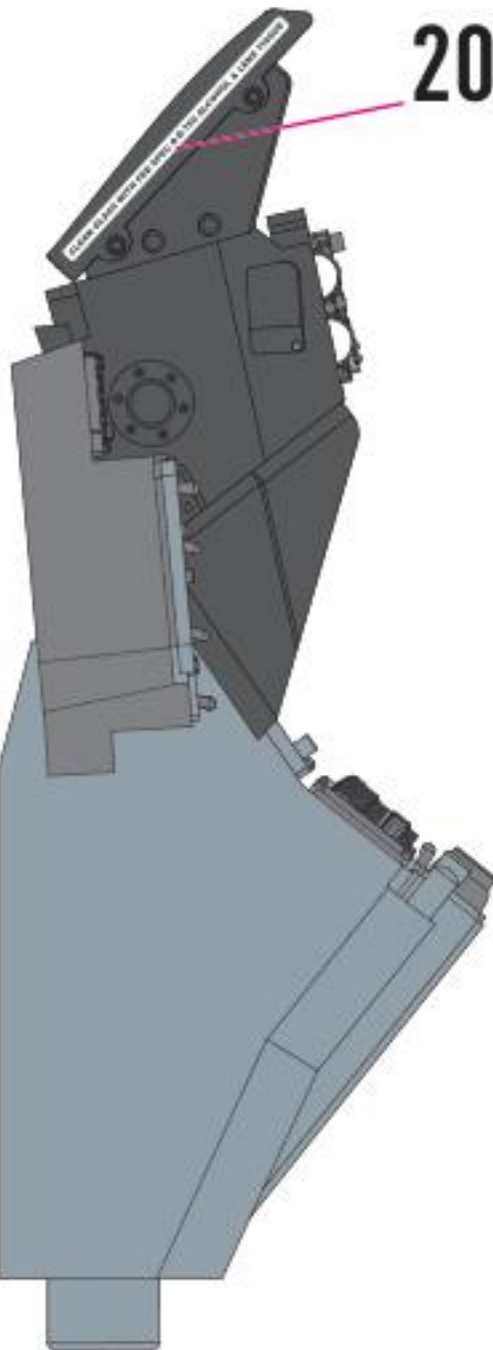


FRD COCKPIT  
FRONT

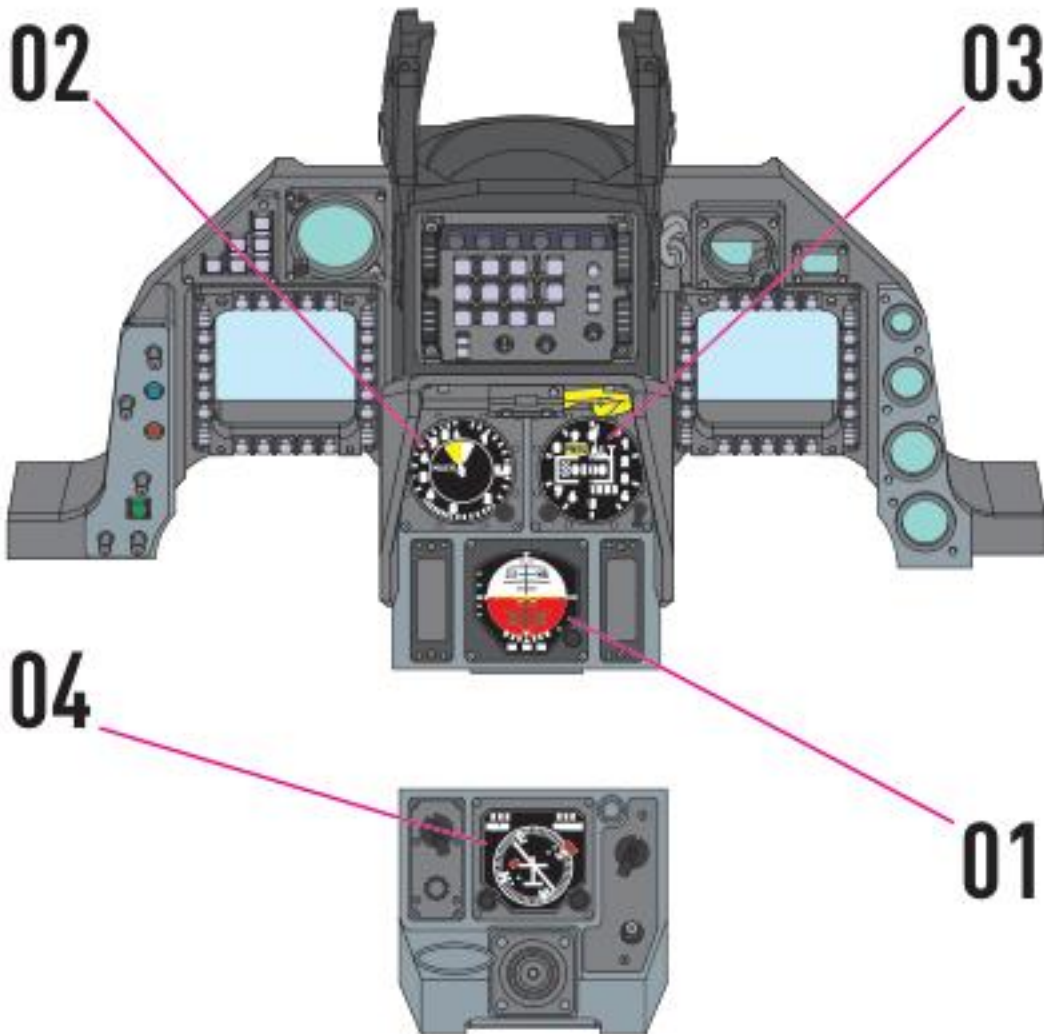


AFT COCKPIT  
FRONT

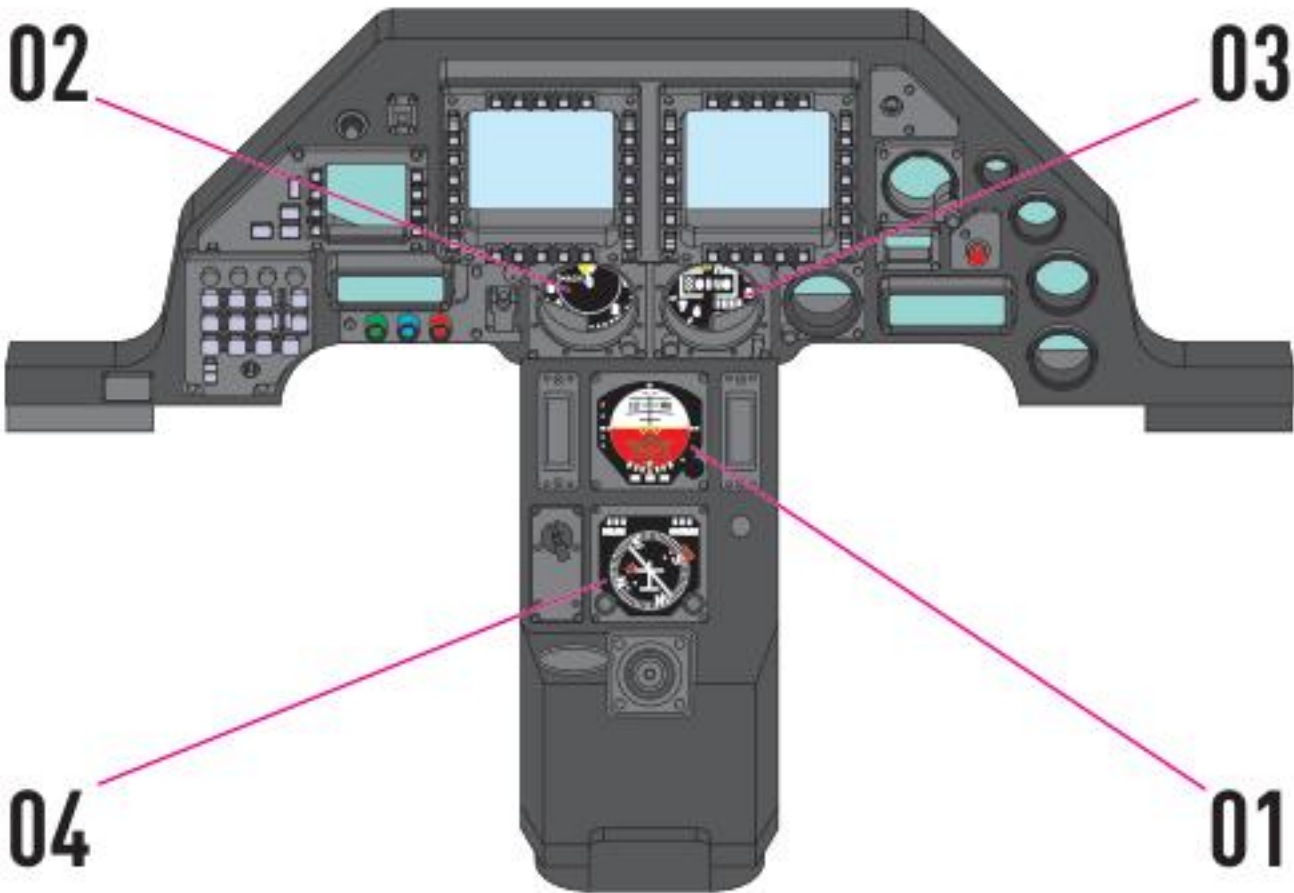


FRD SEAT  
RIGHT

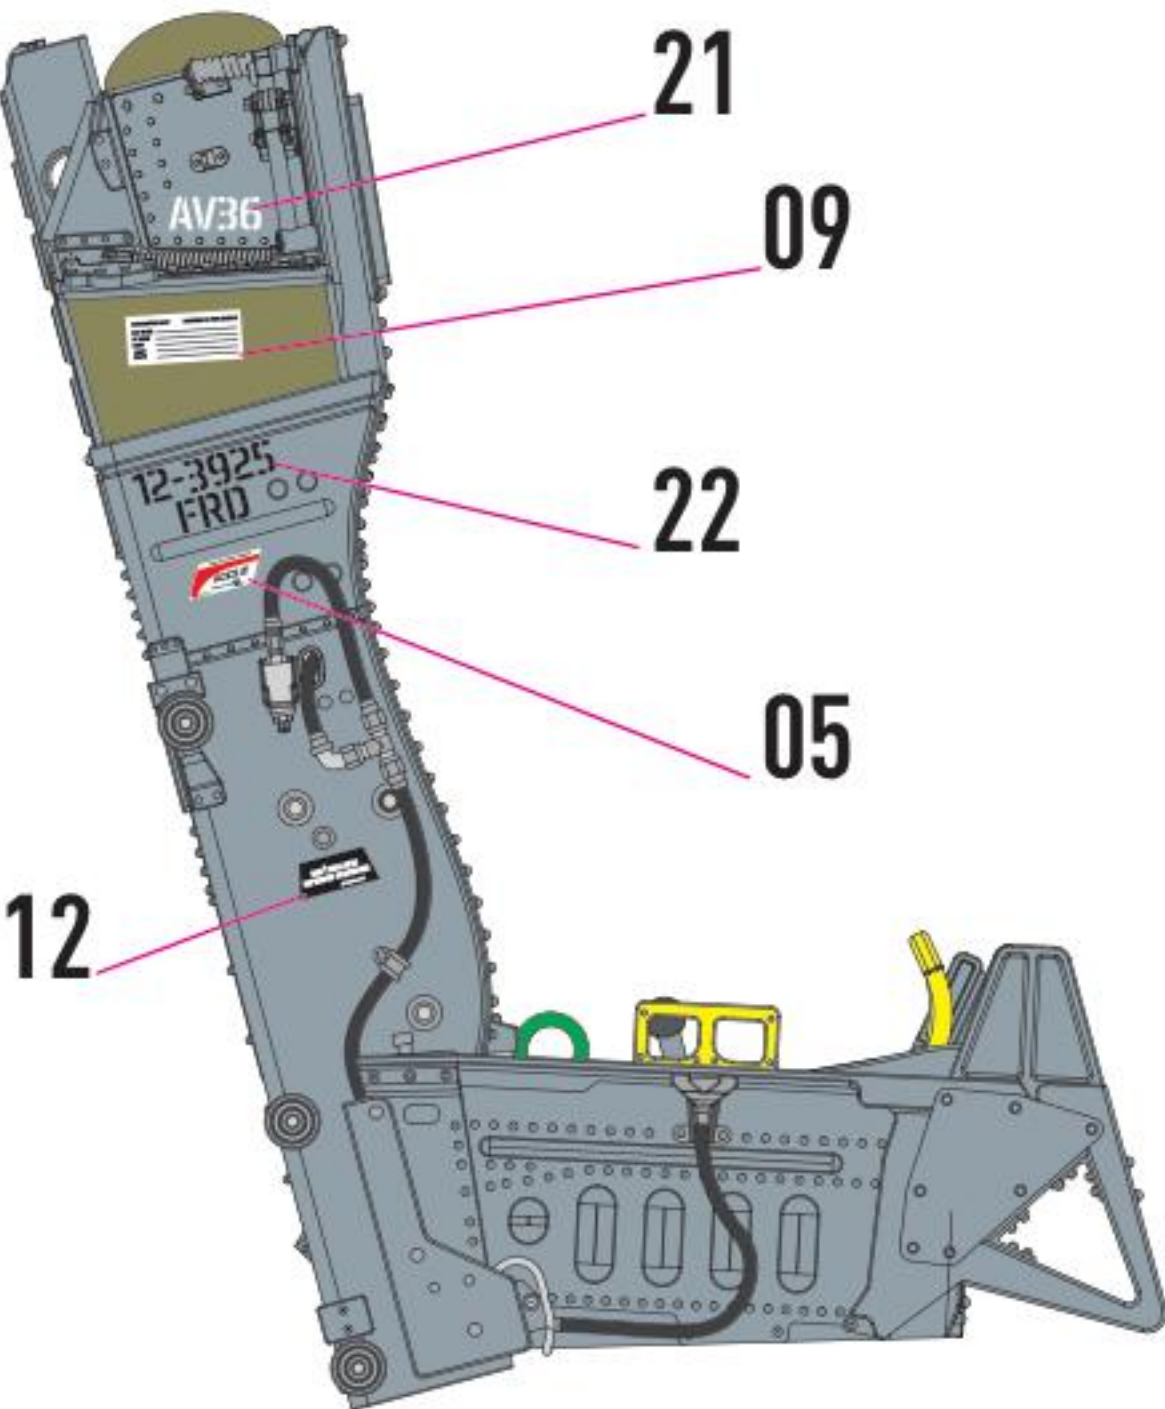


FRD & AFT SEAT  
TOP

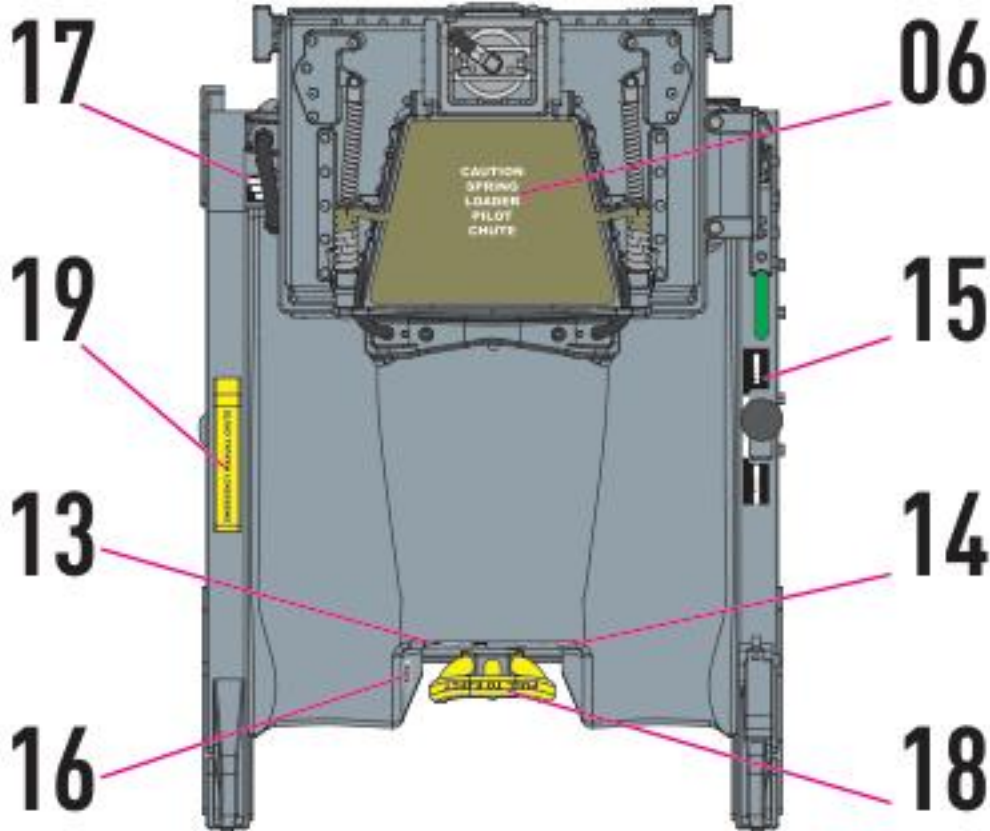


FRD & AFT SEAT  
LEFT

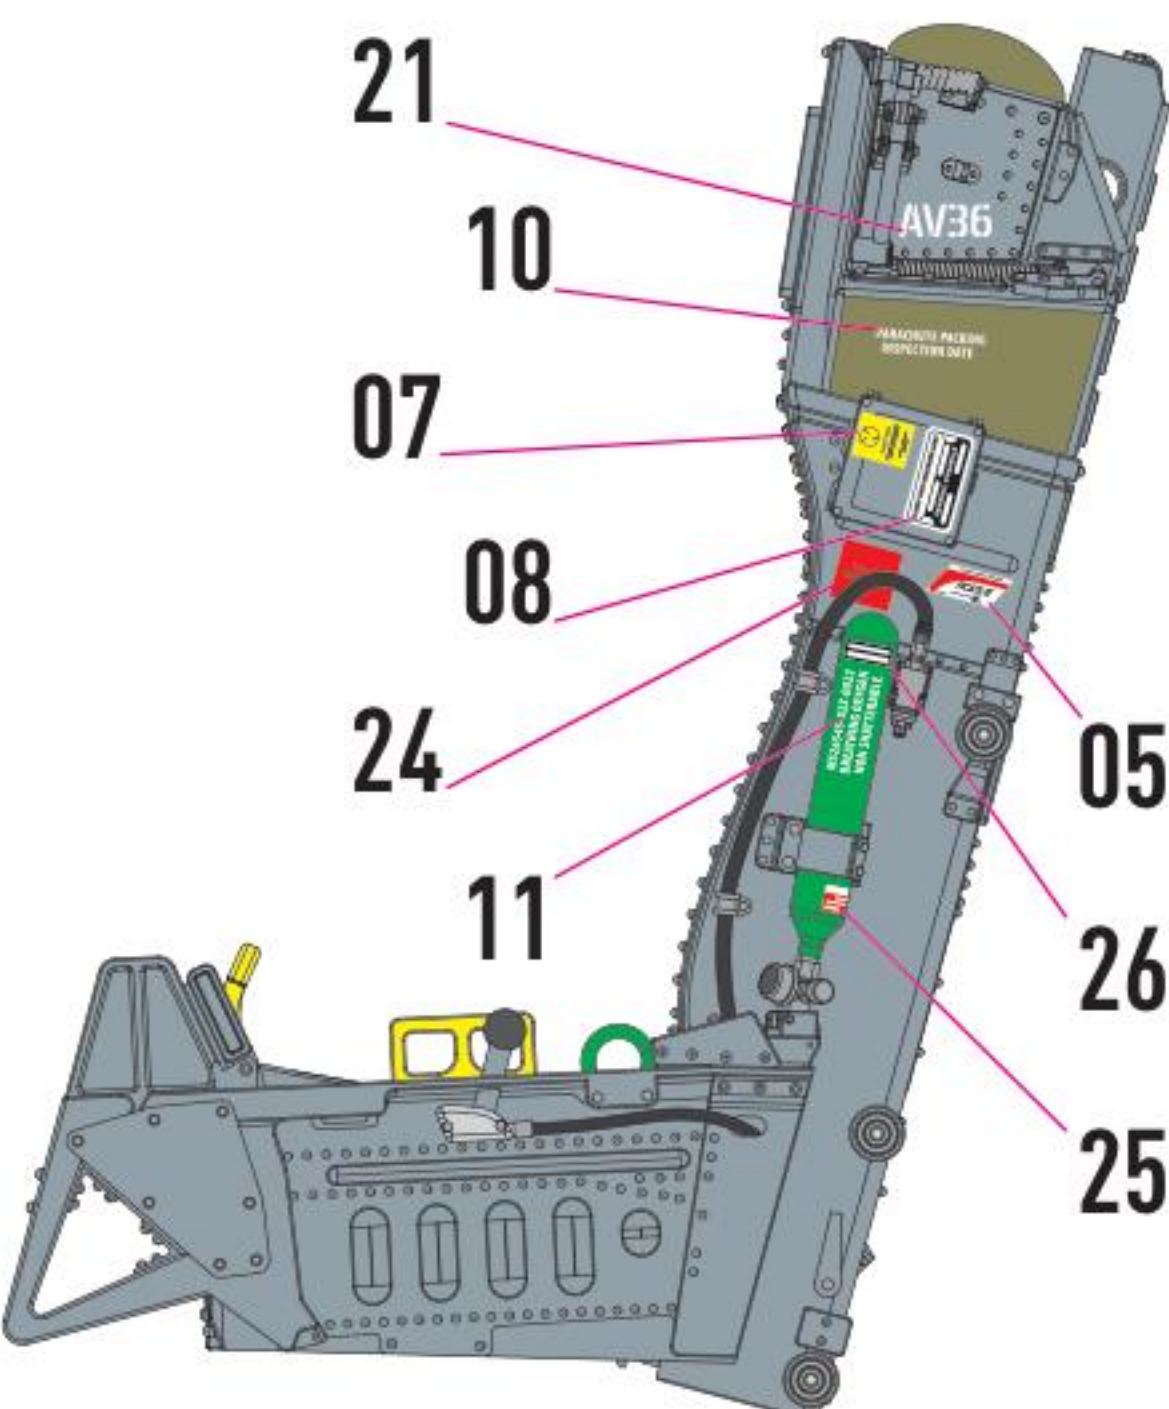

AFT SEAT  
RIGHT

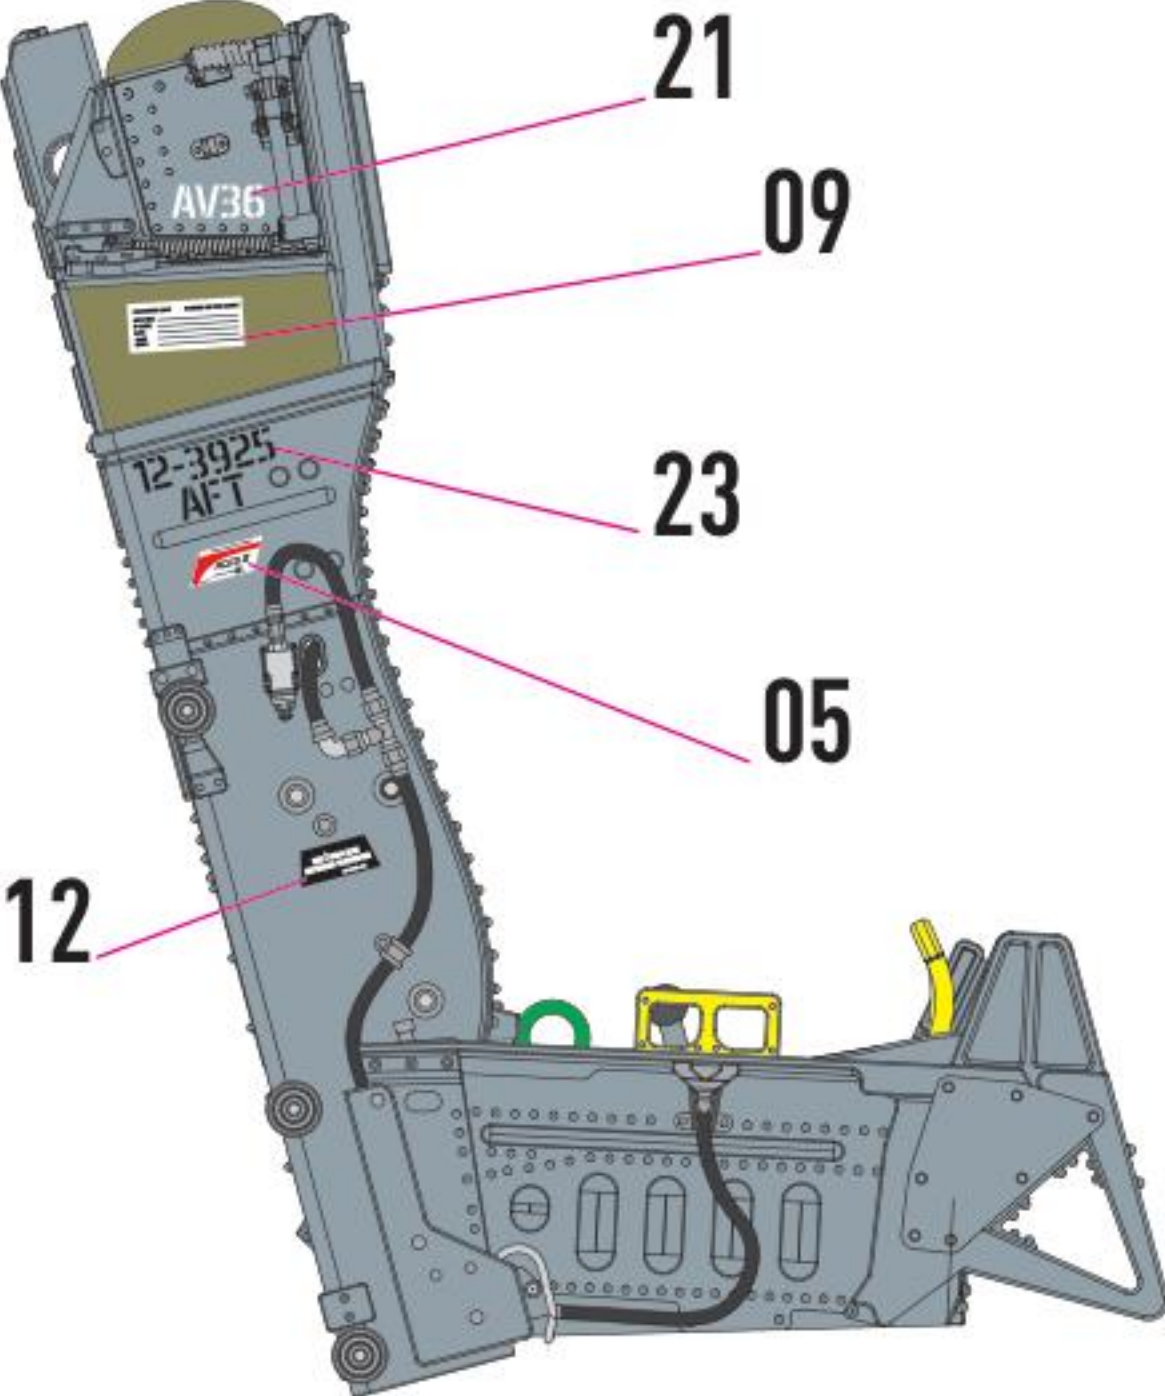

FRD & AFT SEAT  
FRONT

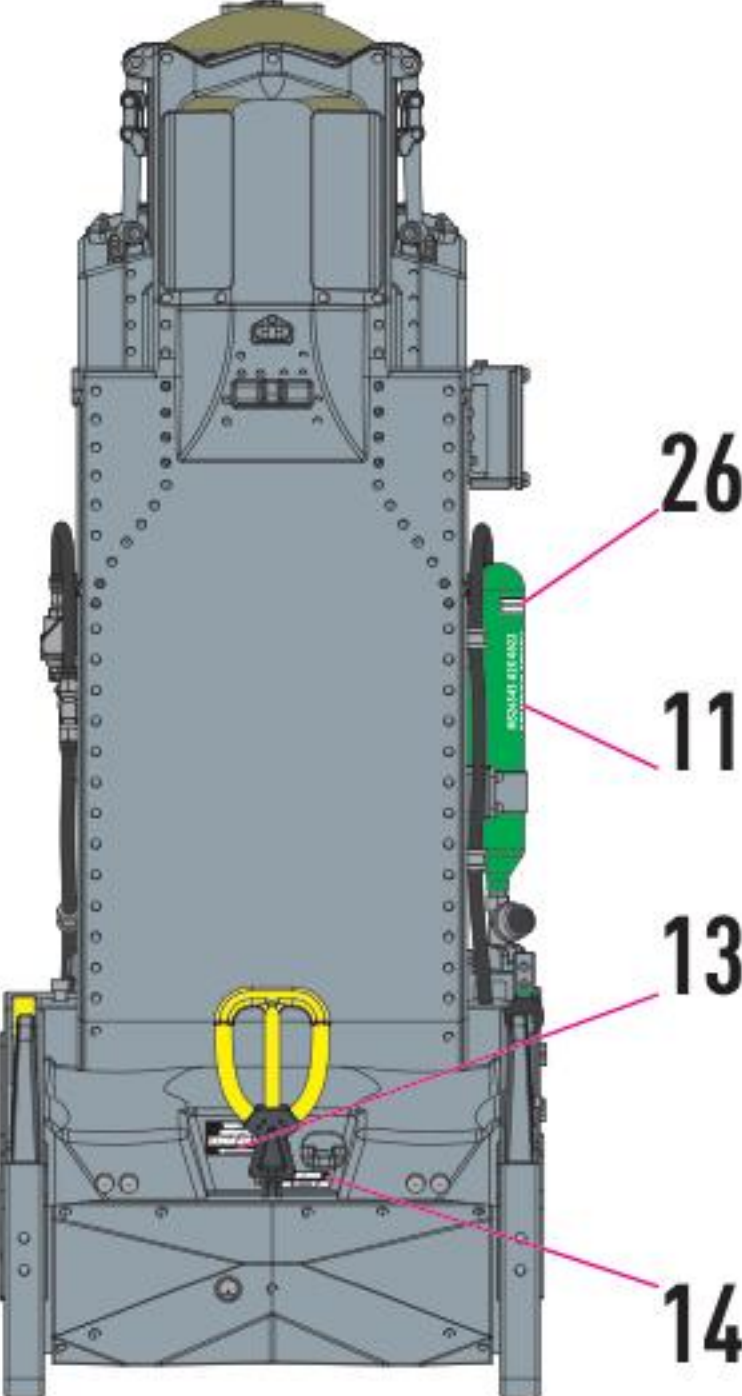

FRD & AFT SEAT  
BACK

