


DETAILS AFTER REMOVAL FROM SUPPORTS




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

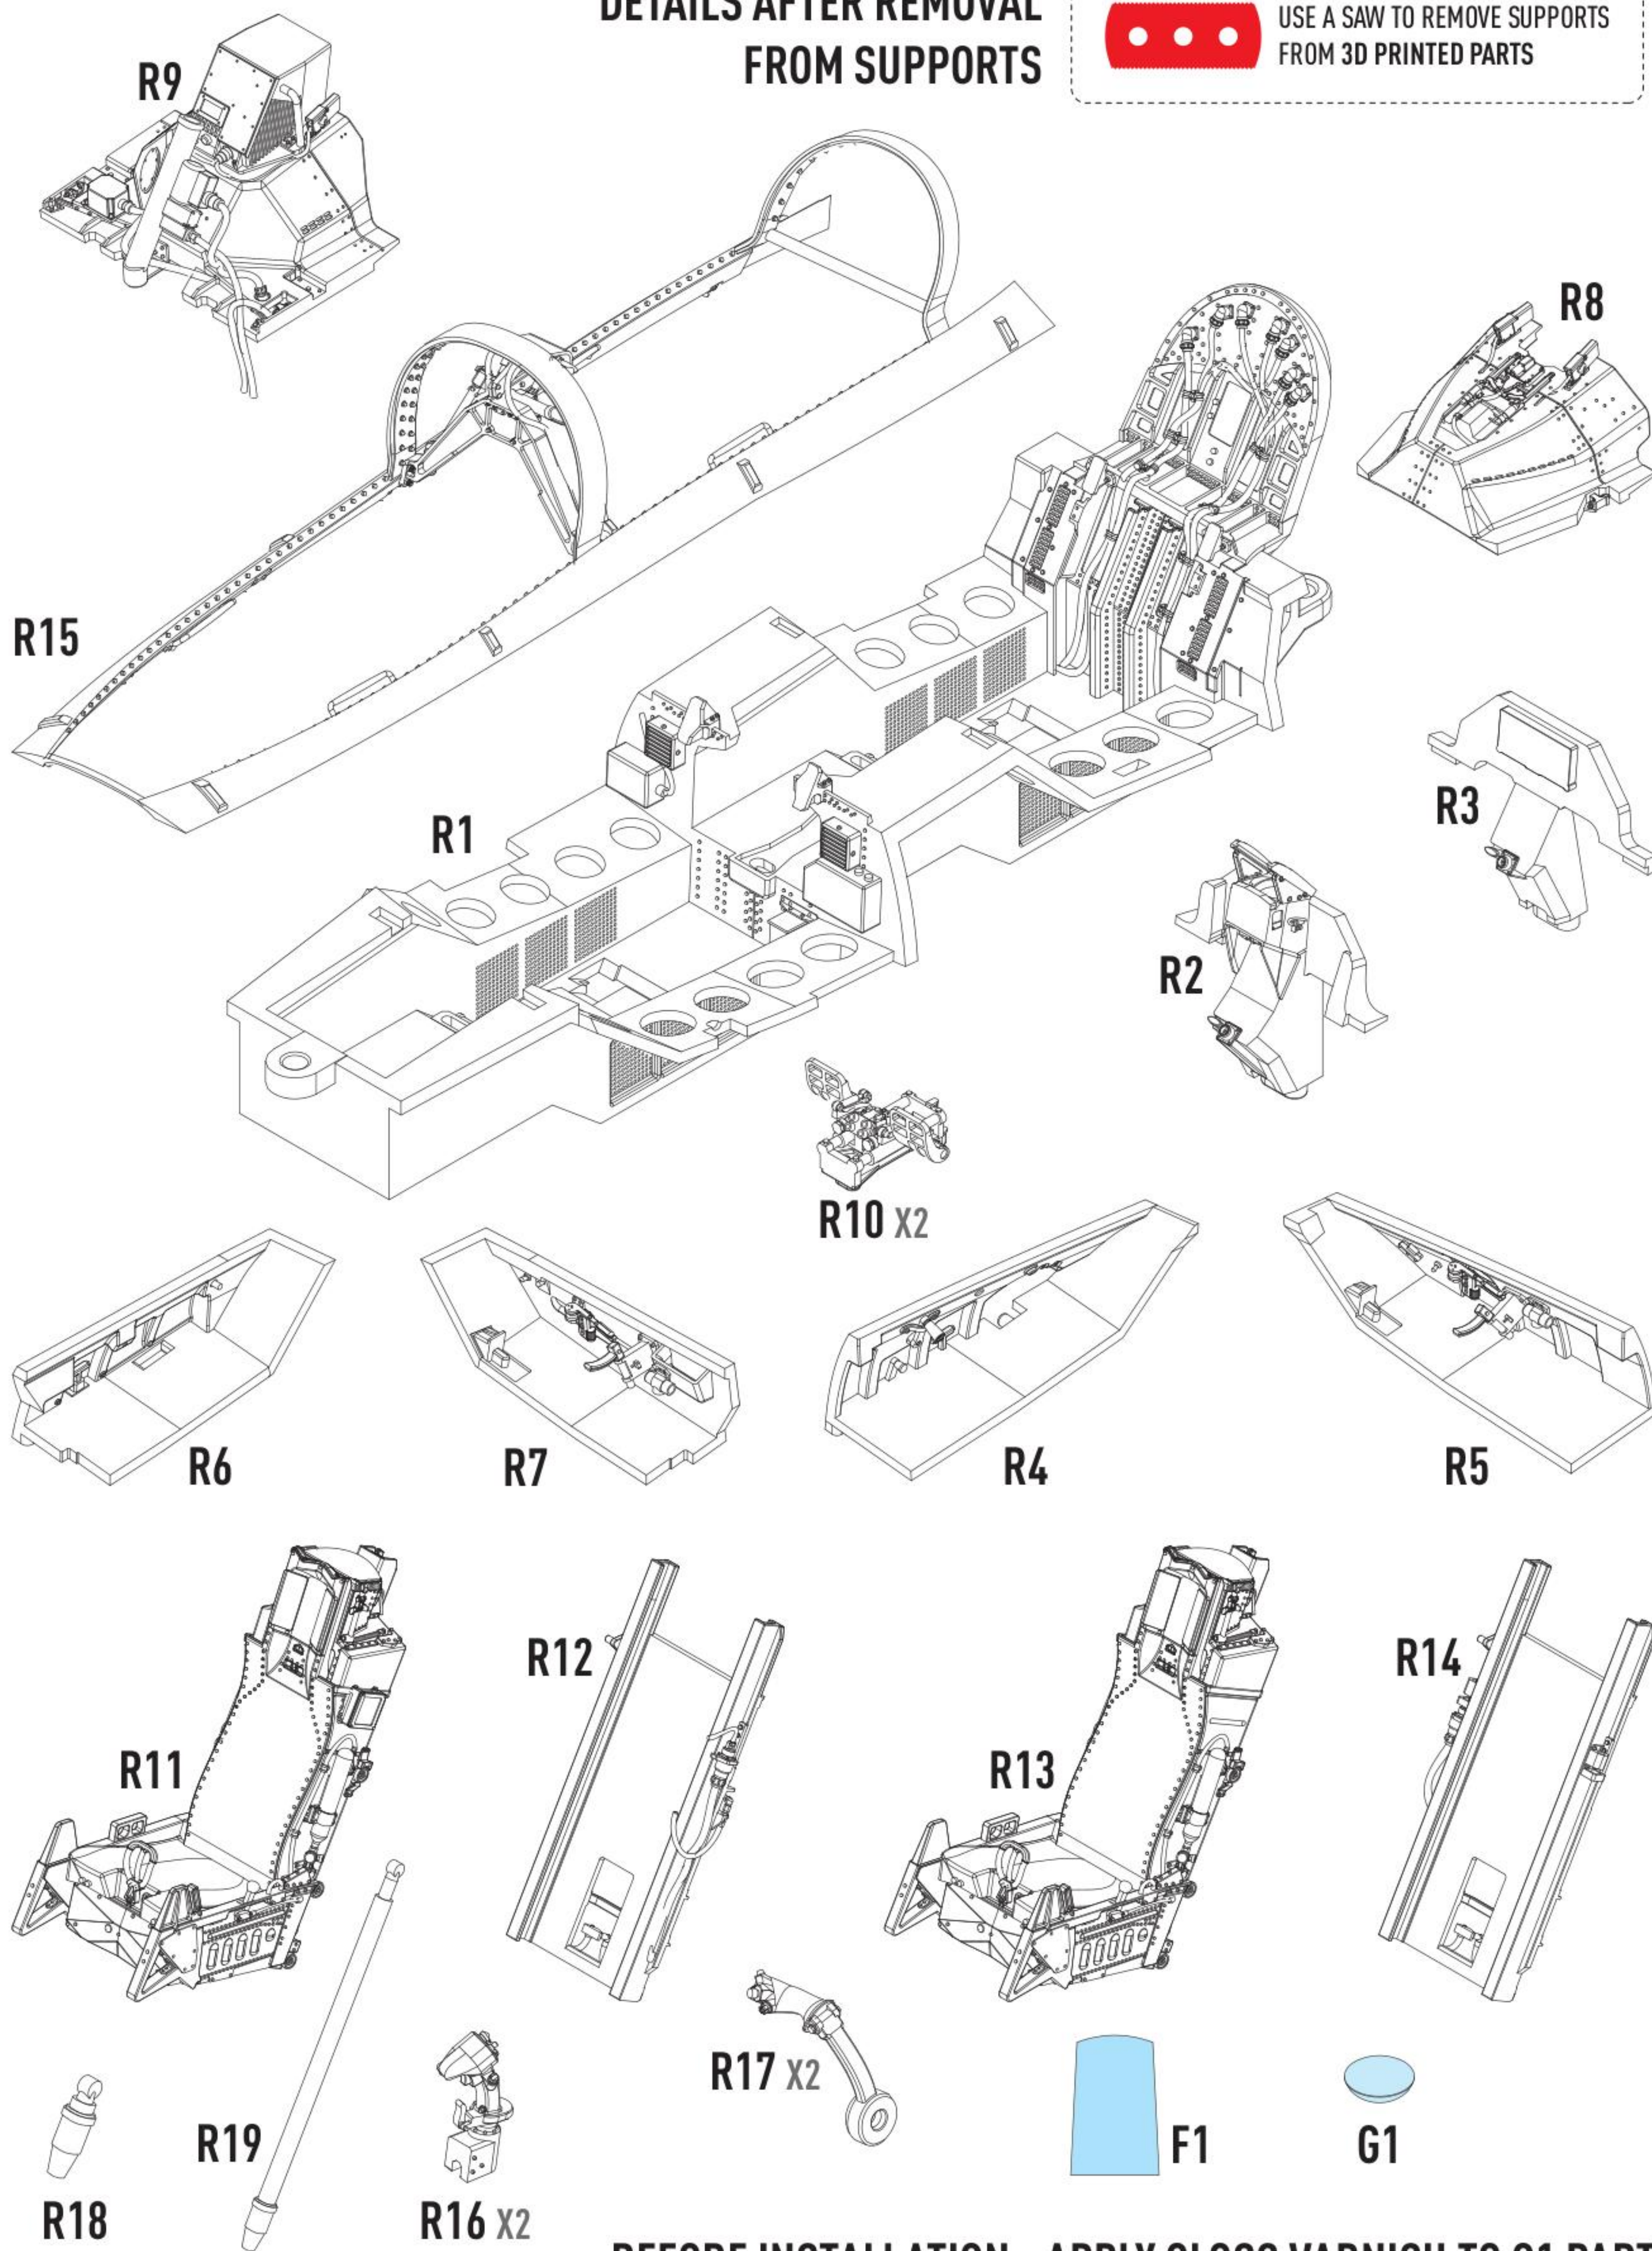


BEFORE INSTALLATION - APPLY GLOSS VARNISH TO G1 PART


3D-DECALS INSTRUCTION

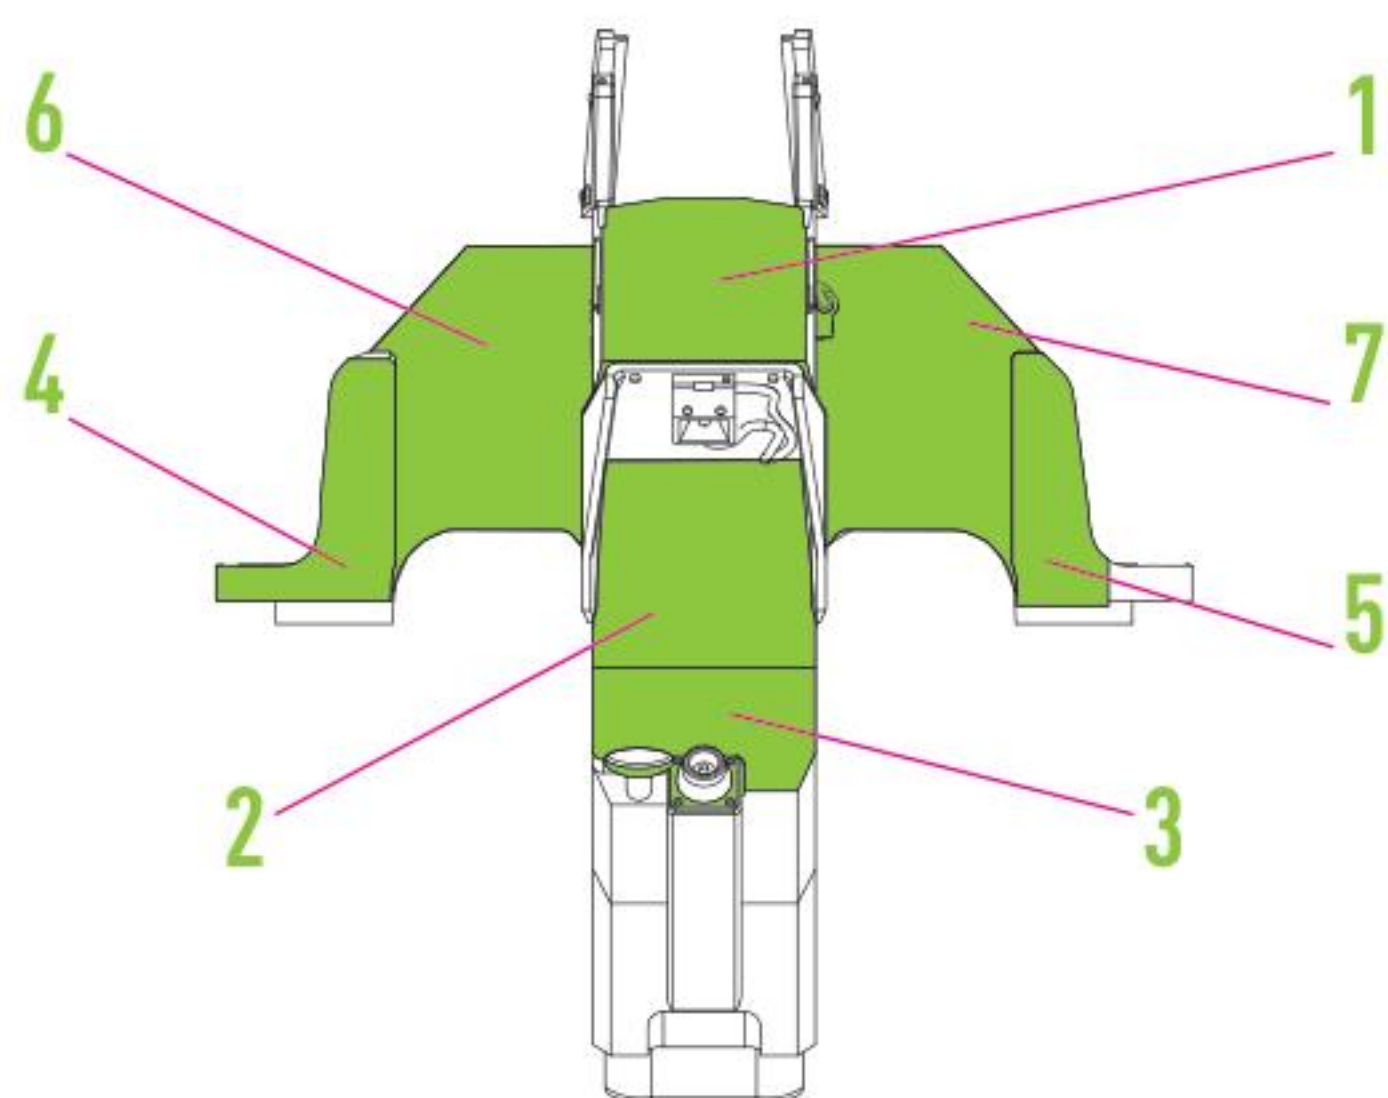


R2

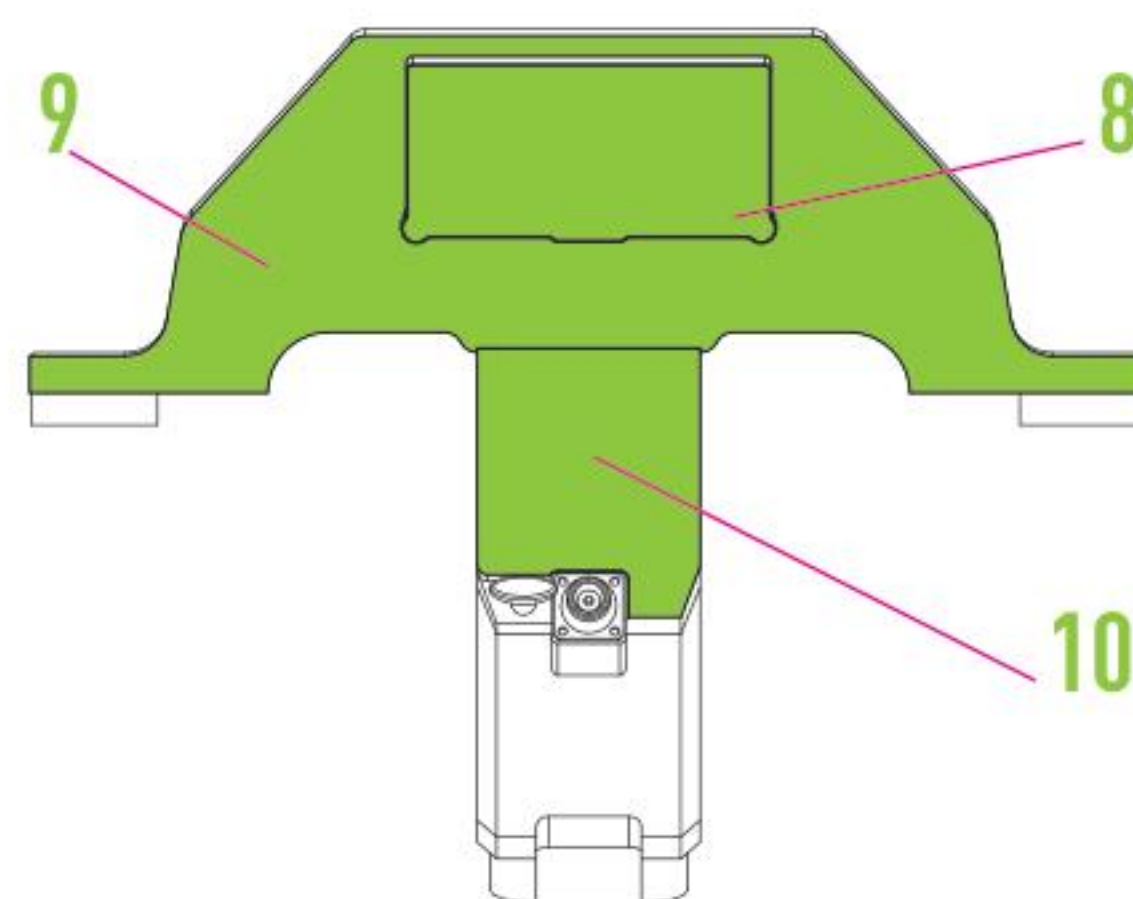


R3

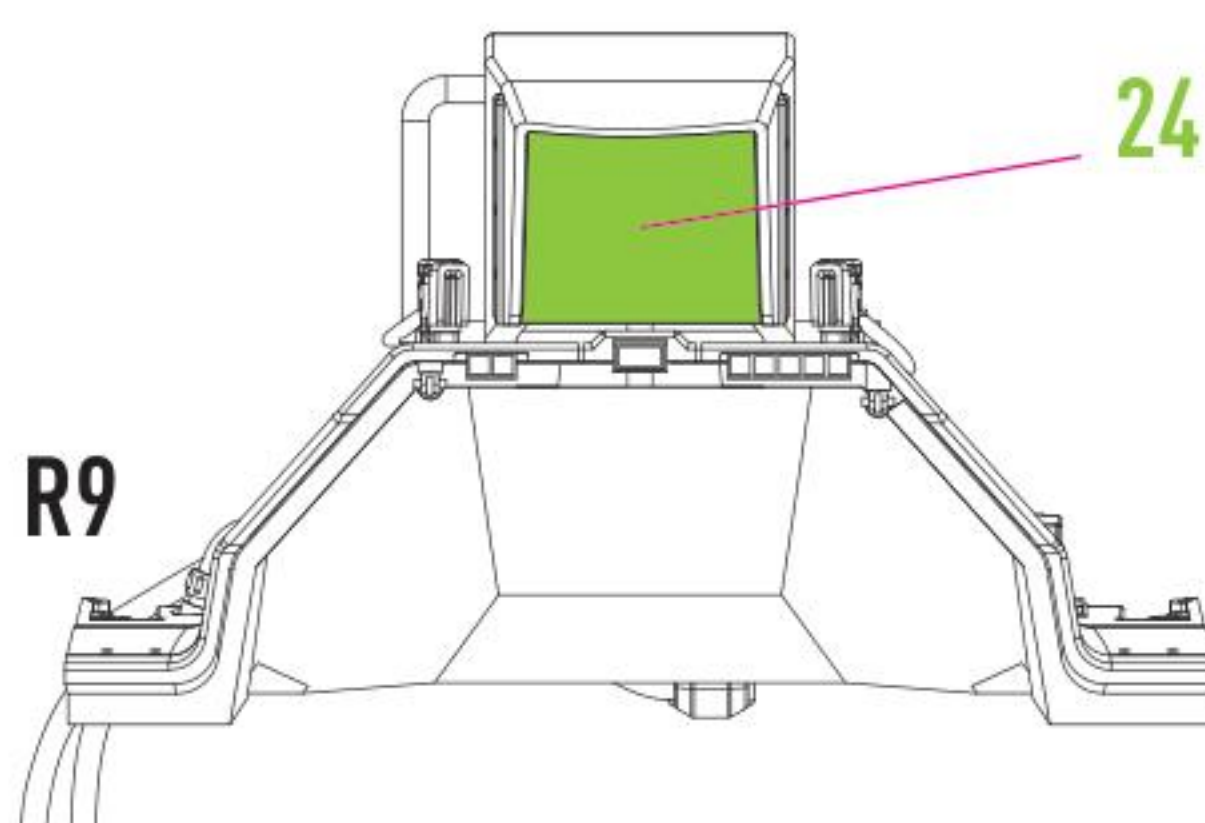


R9

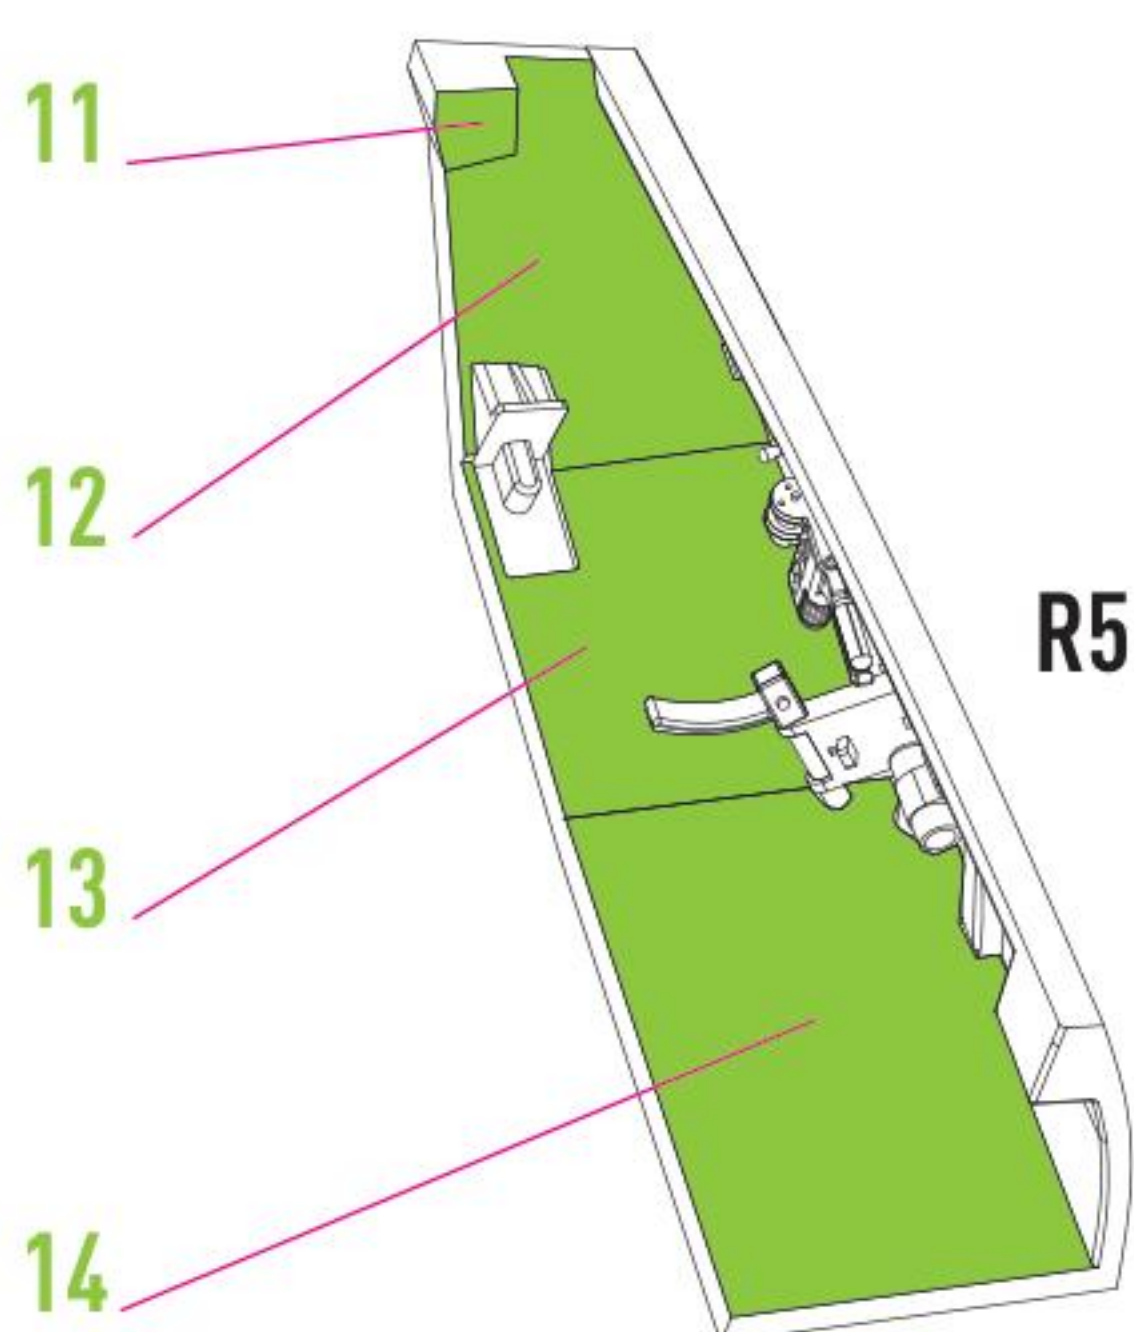


R5

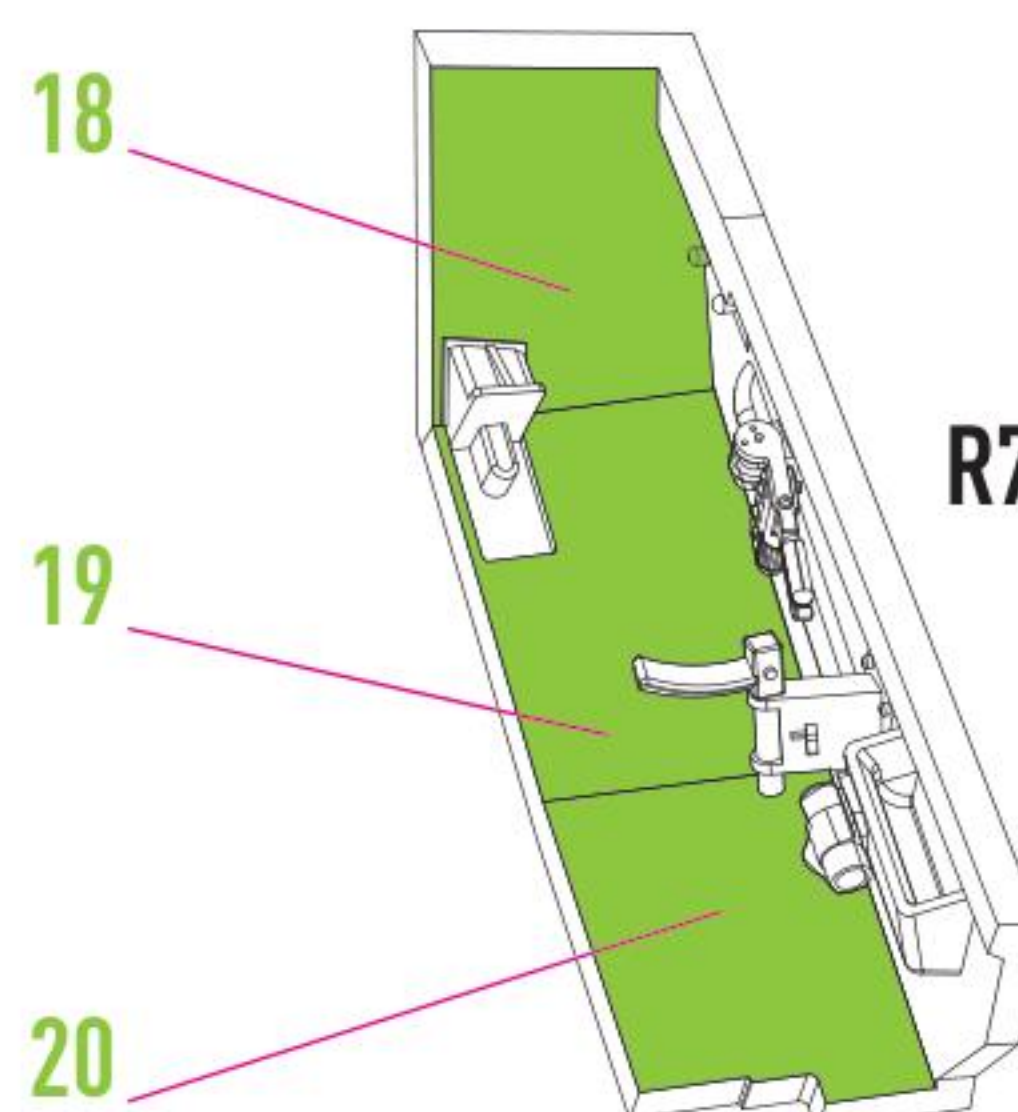


R7

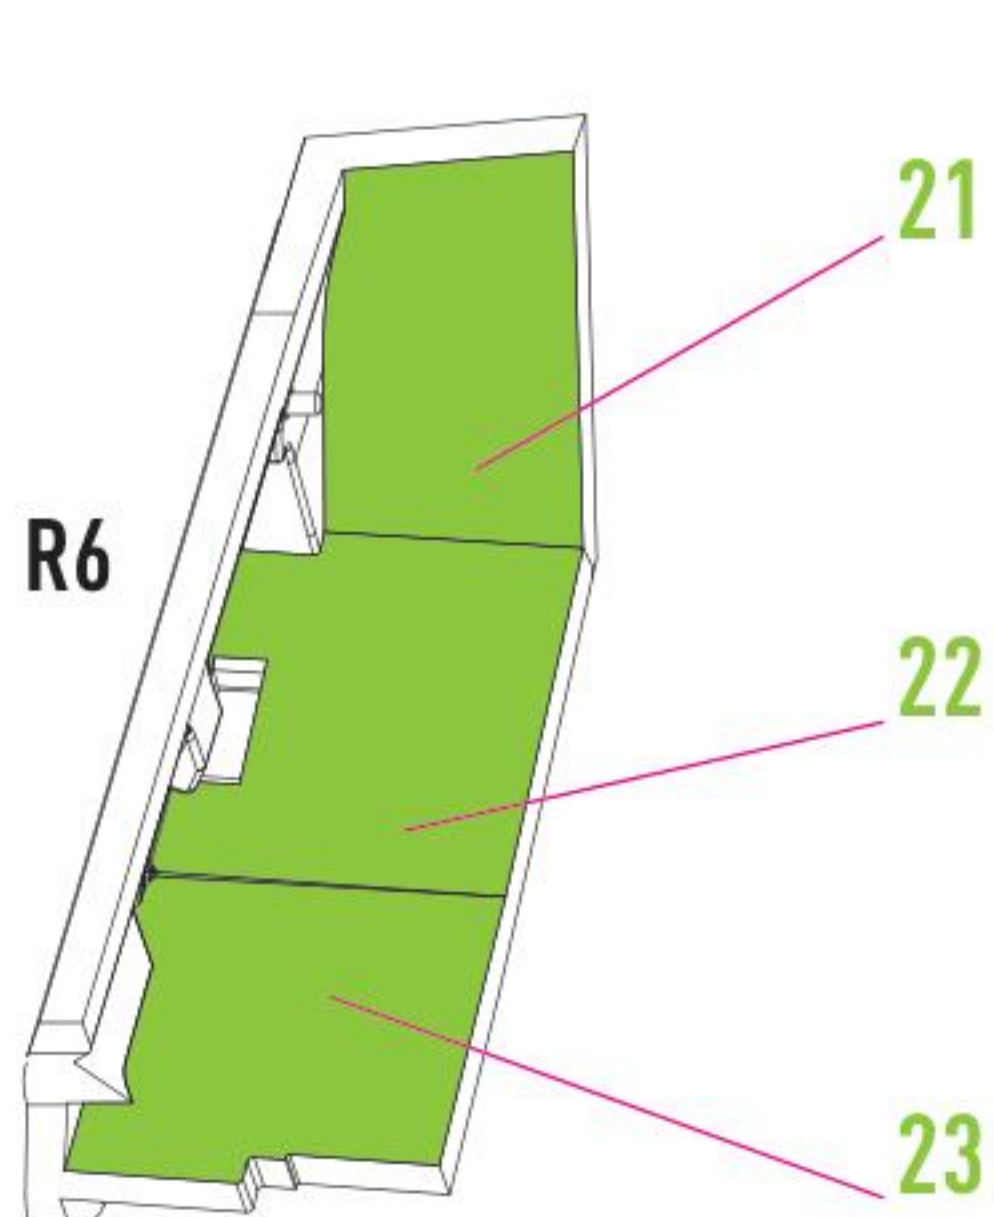

R6

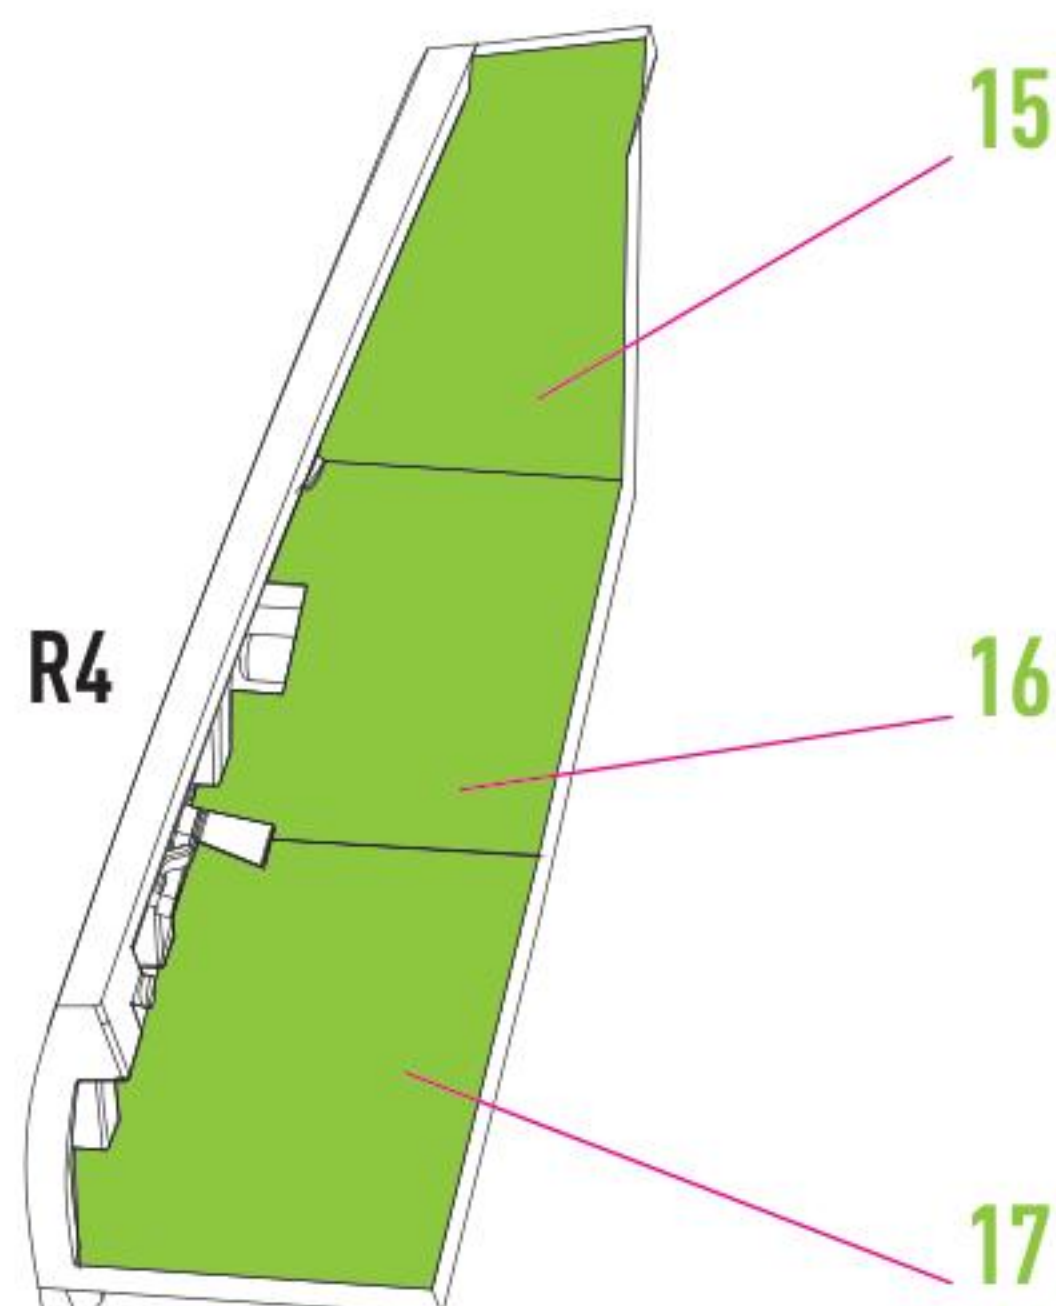


R4

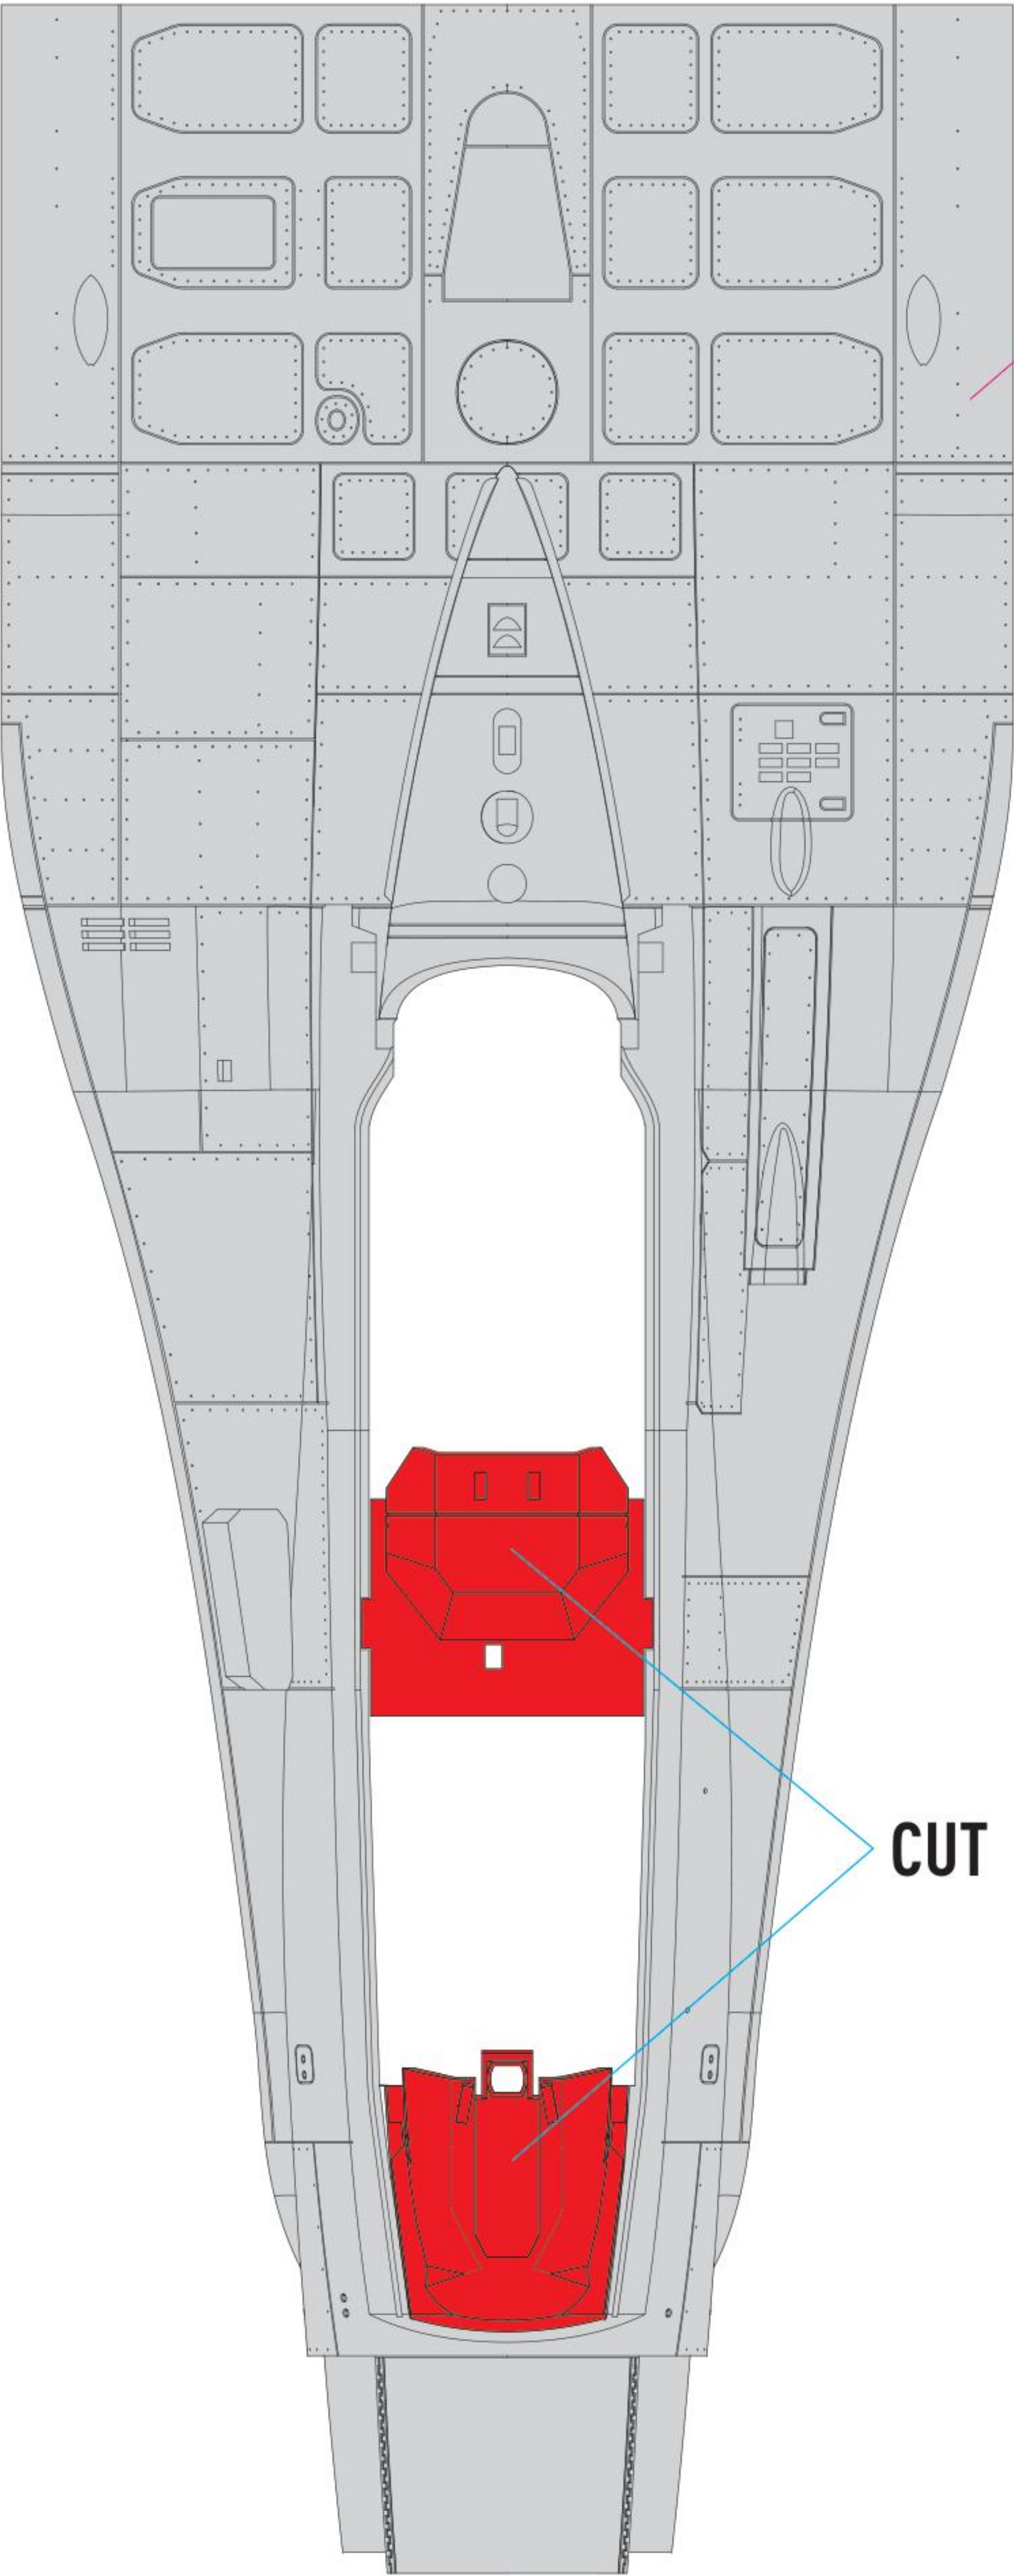


PART A9
FROM GWH KIT

CUT


2

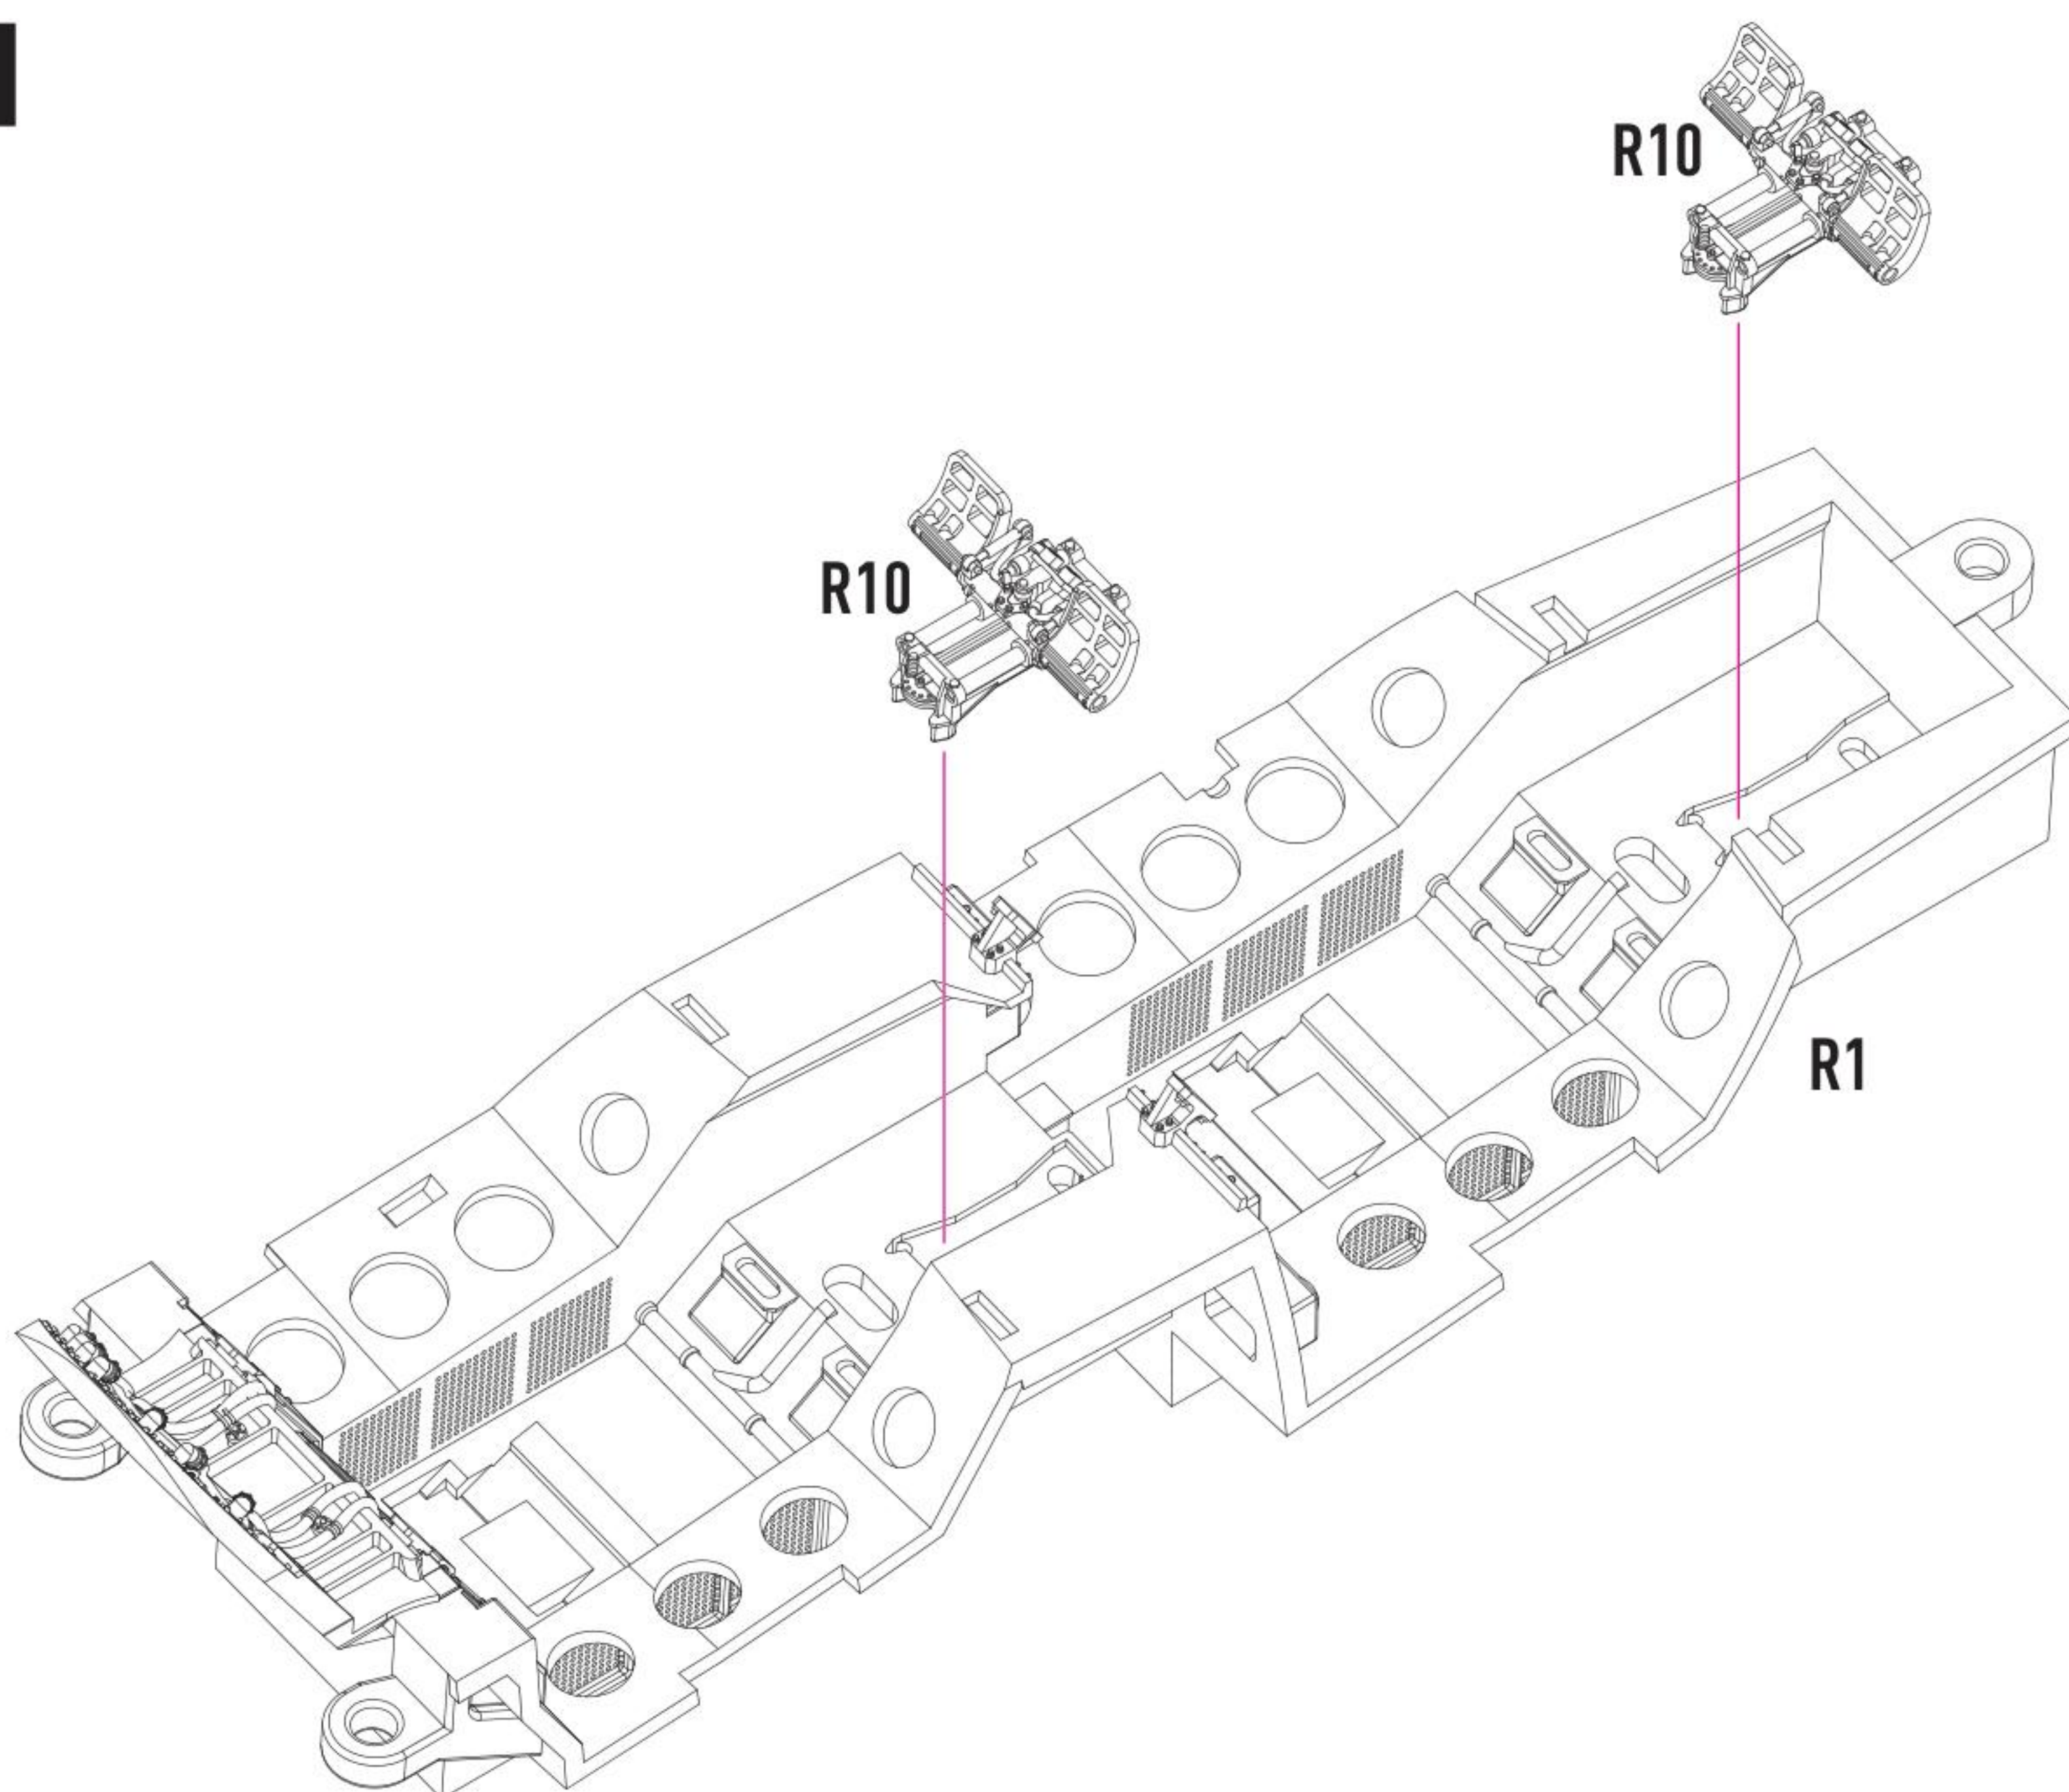


3

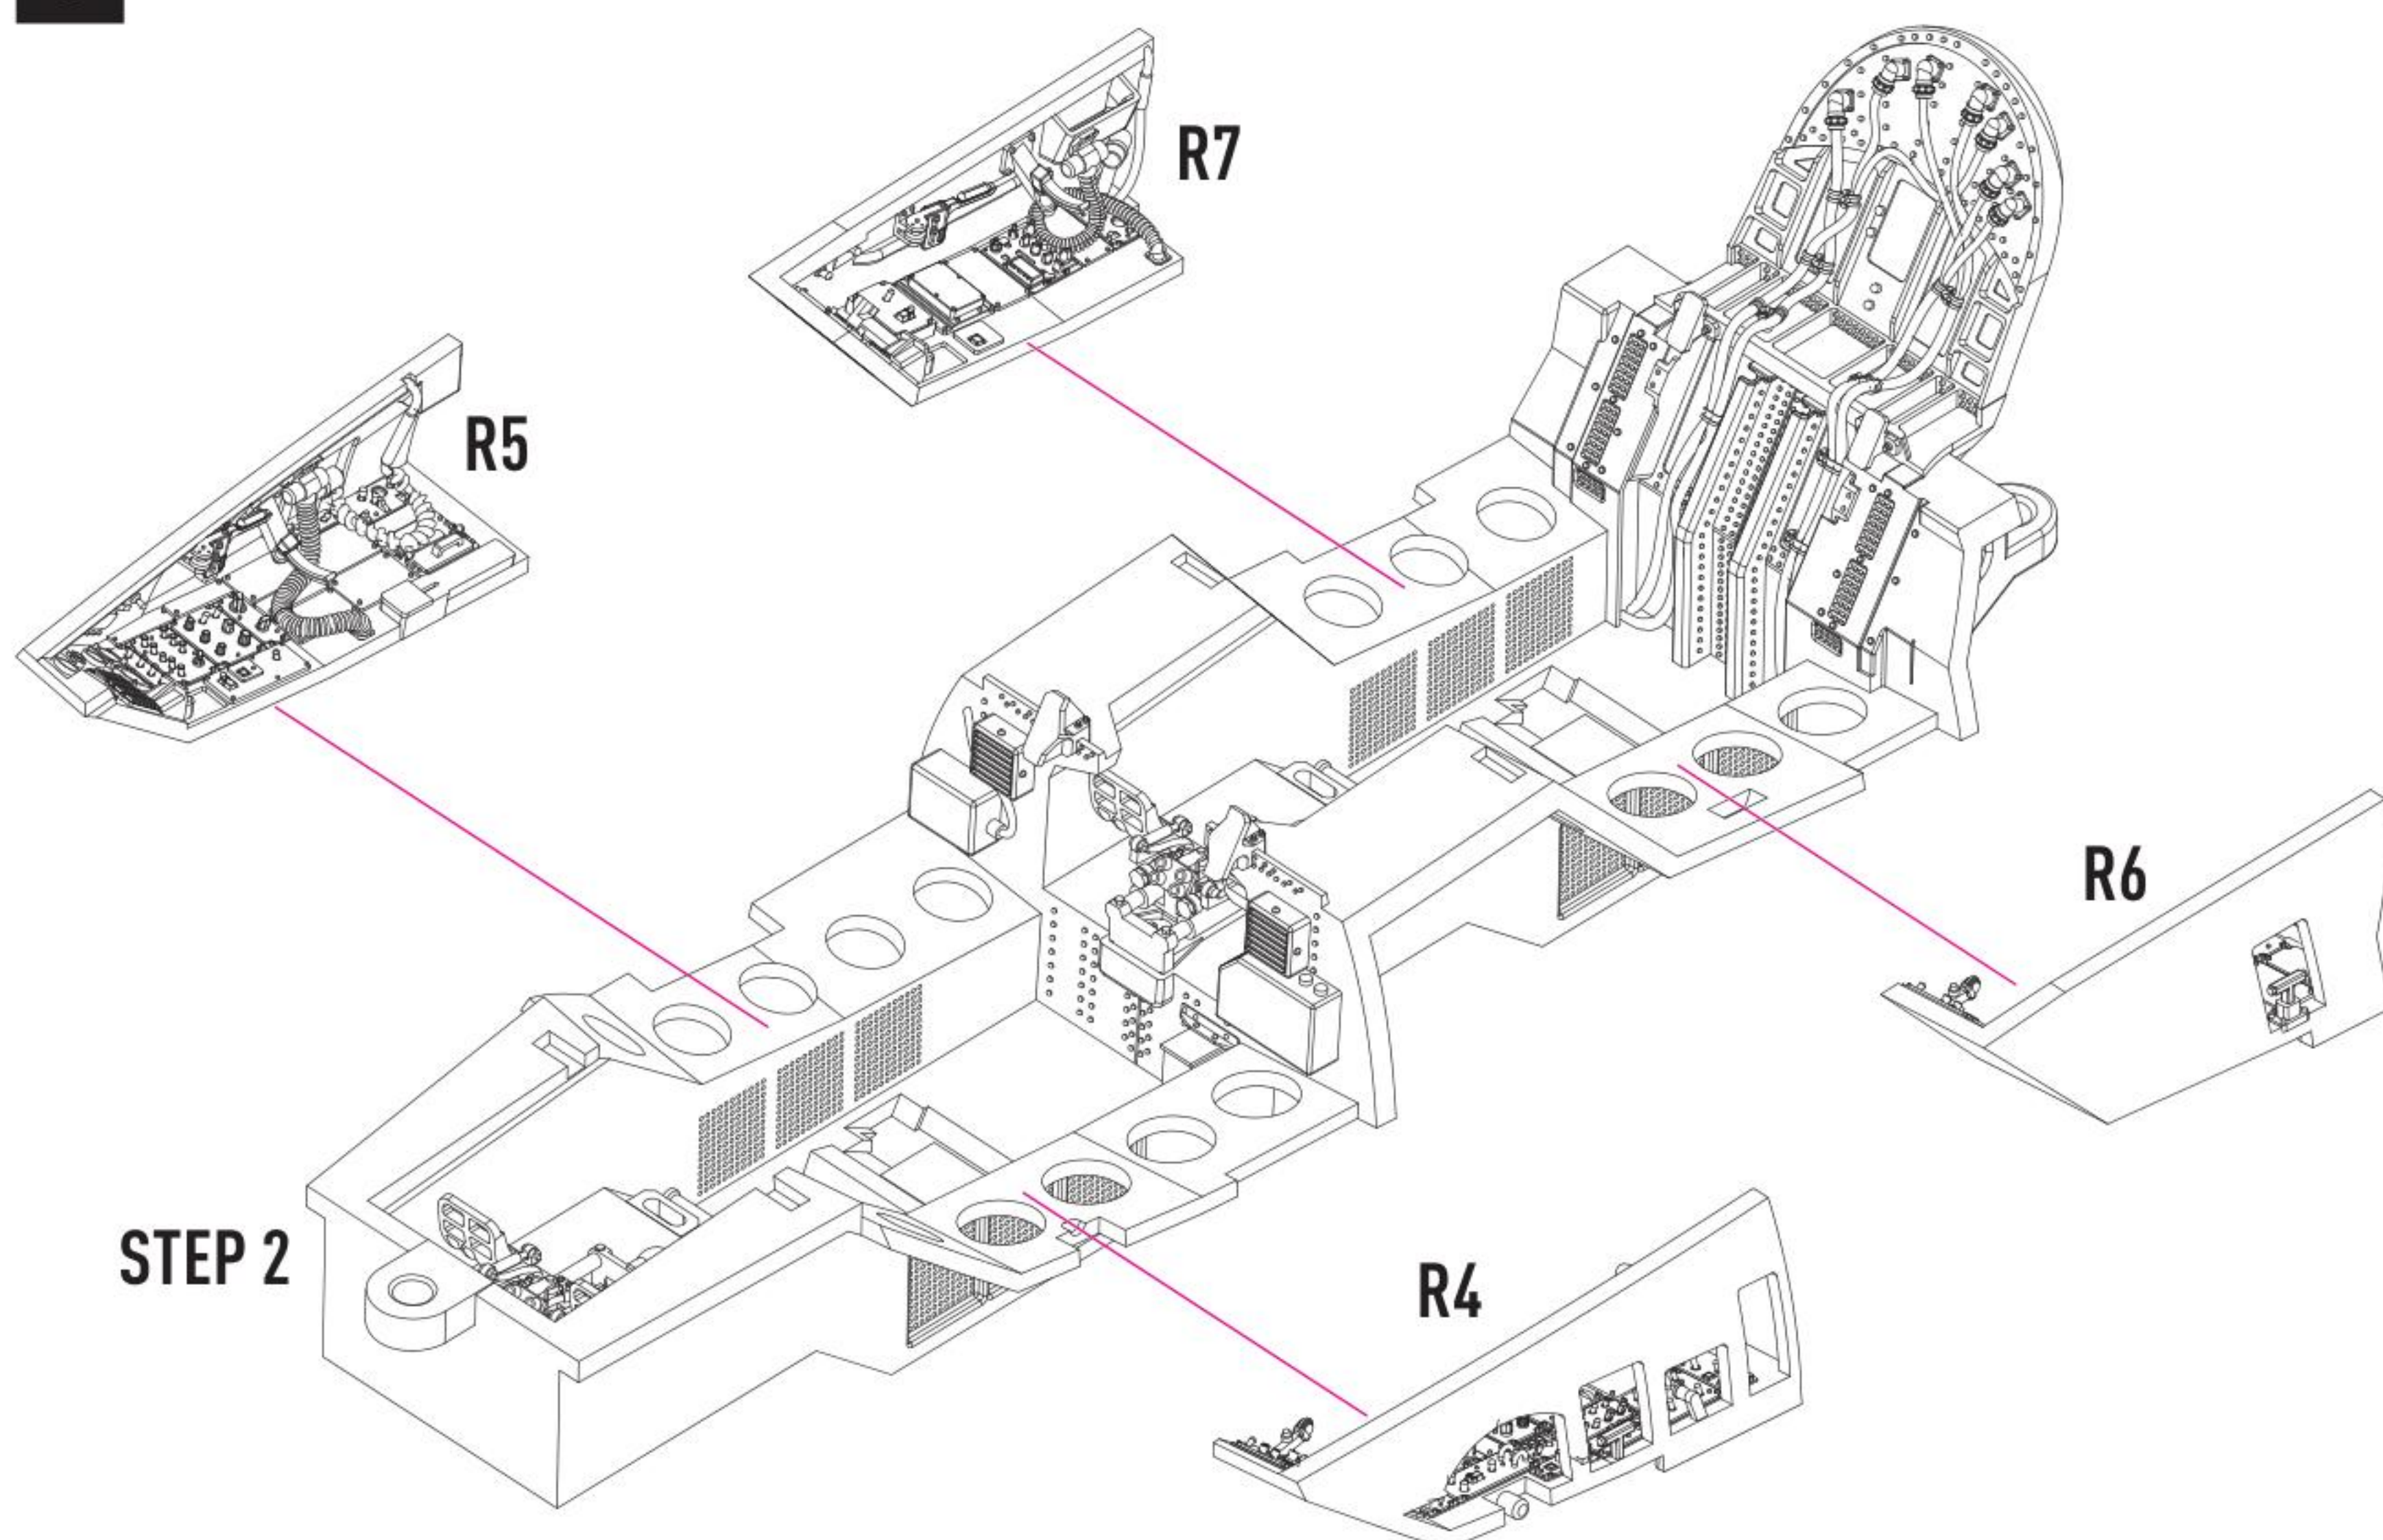


4

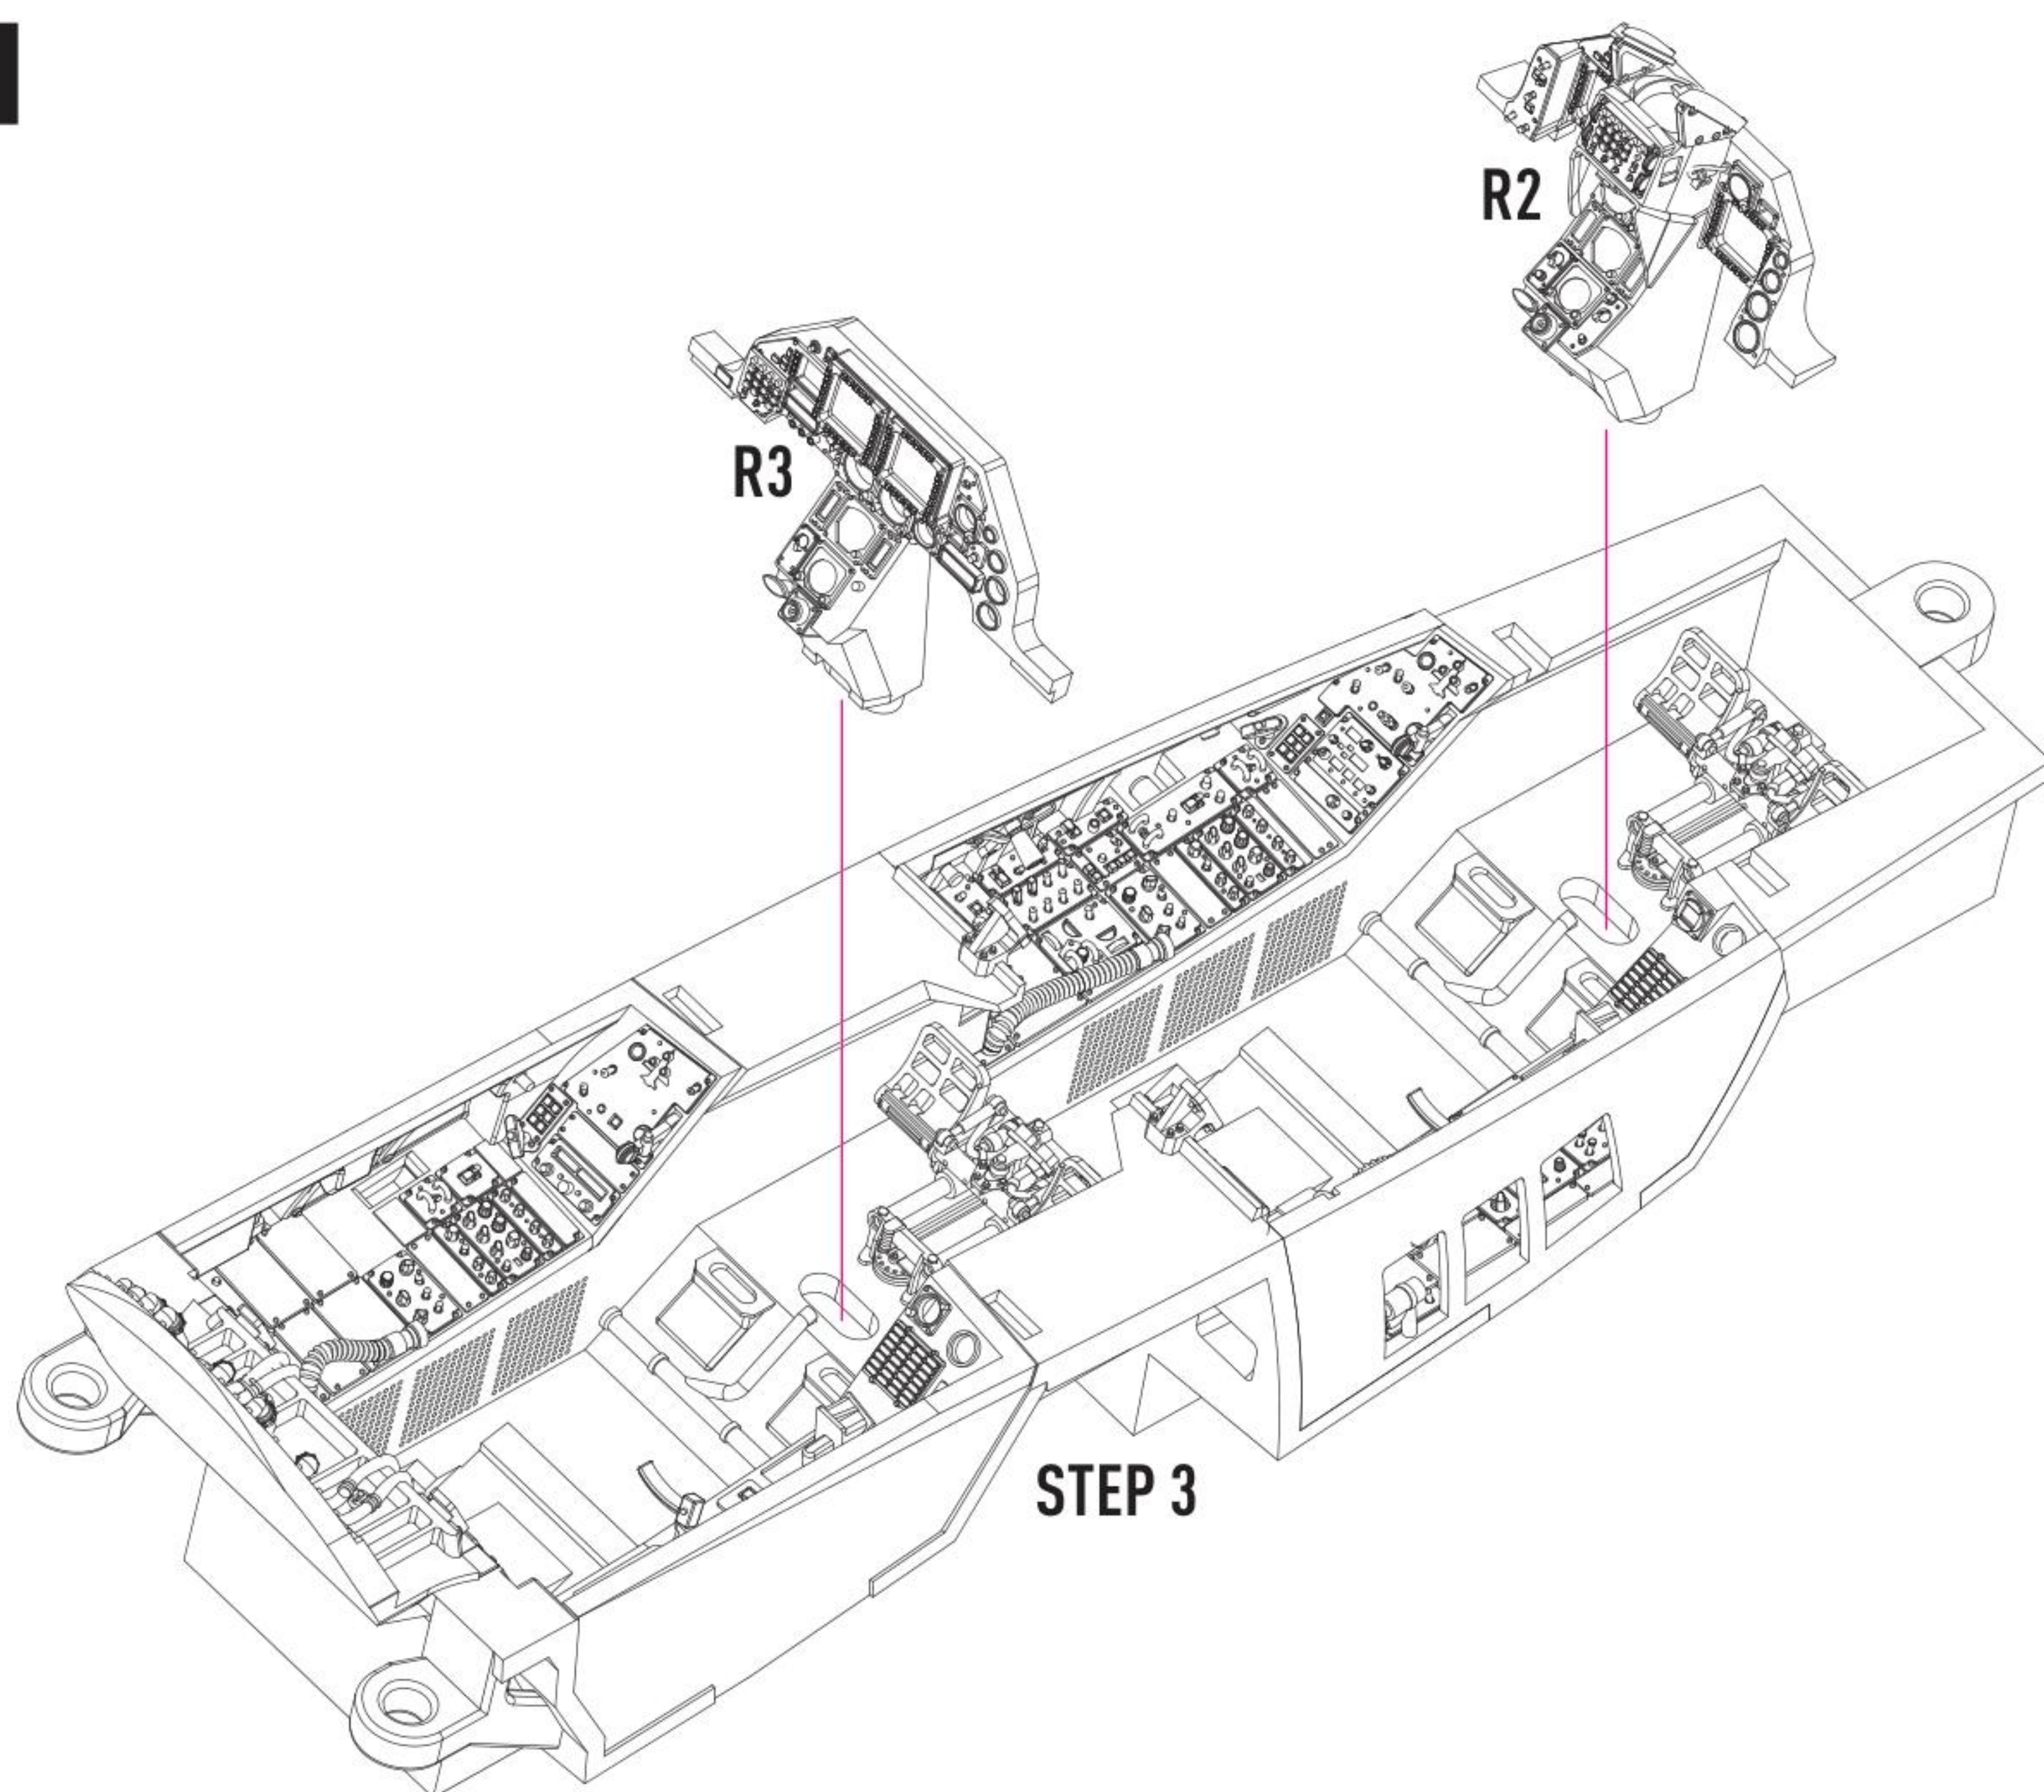


5

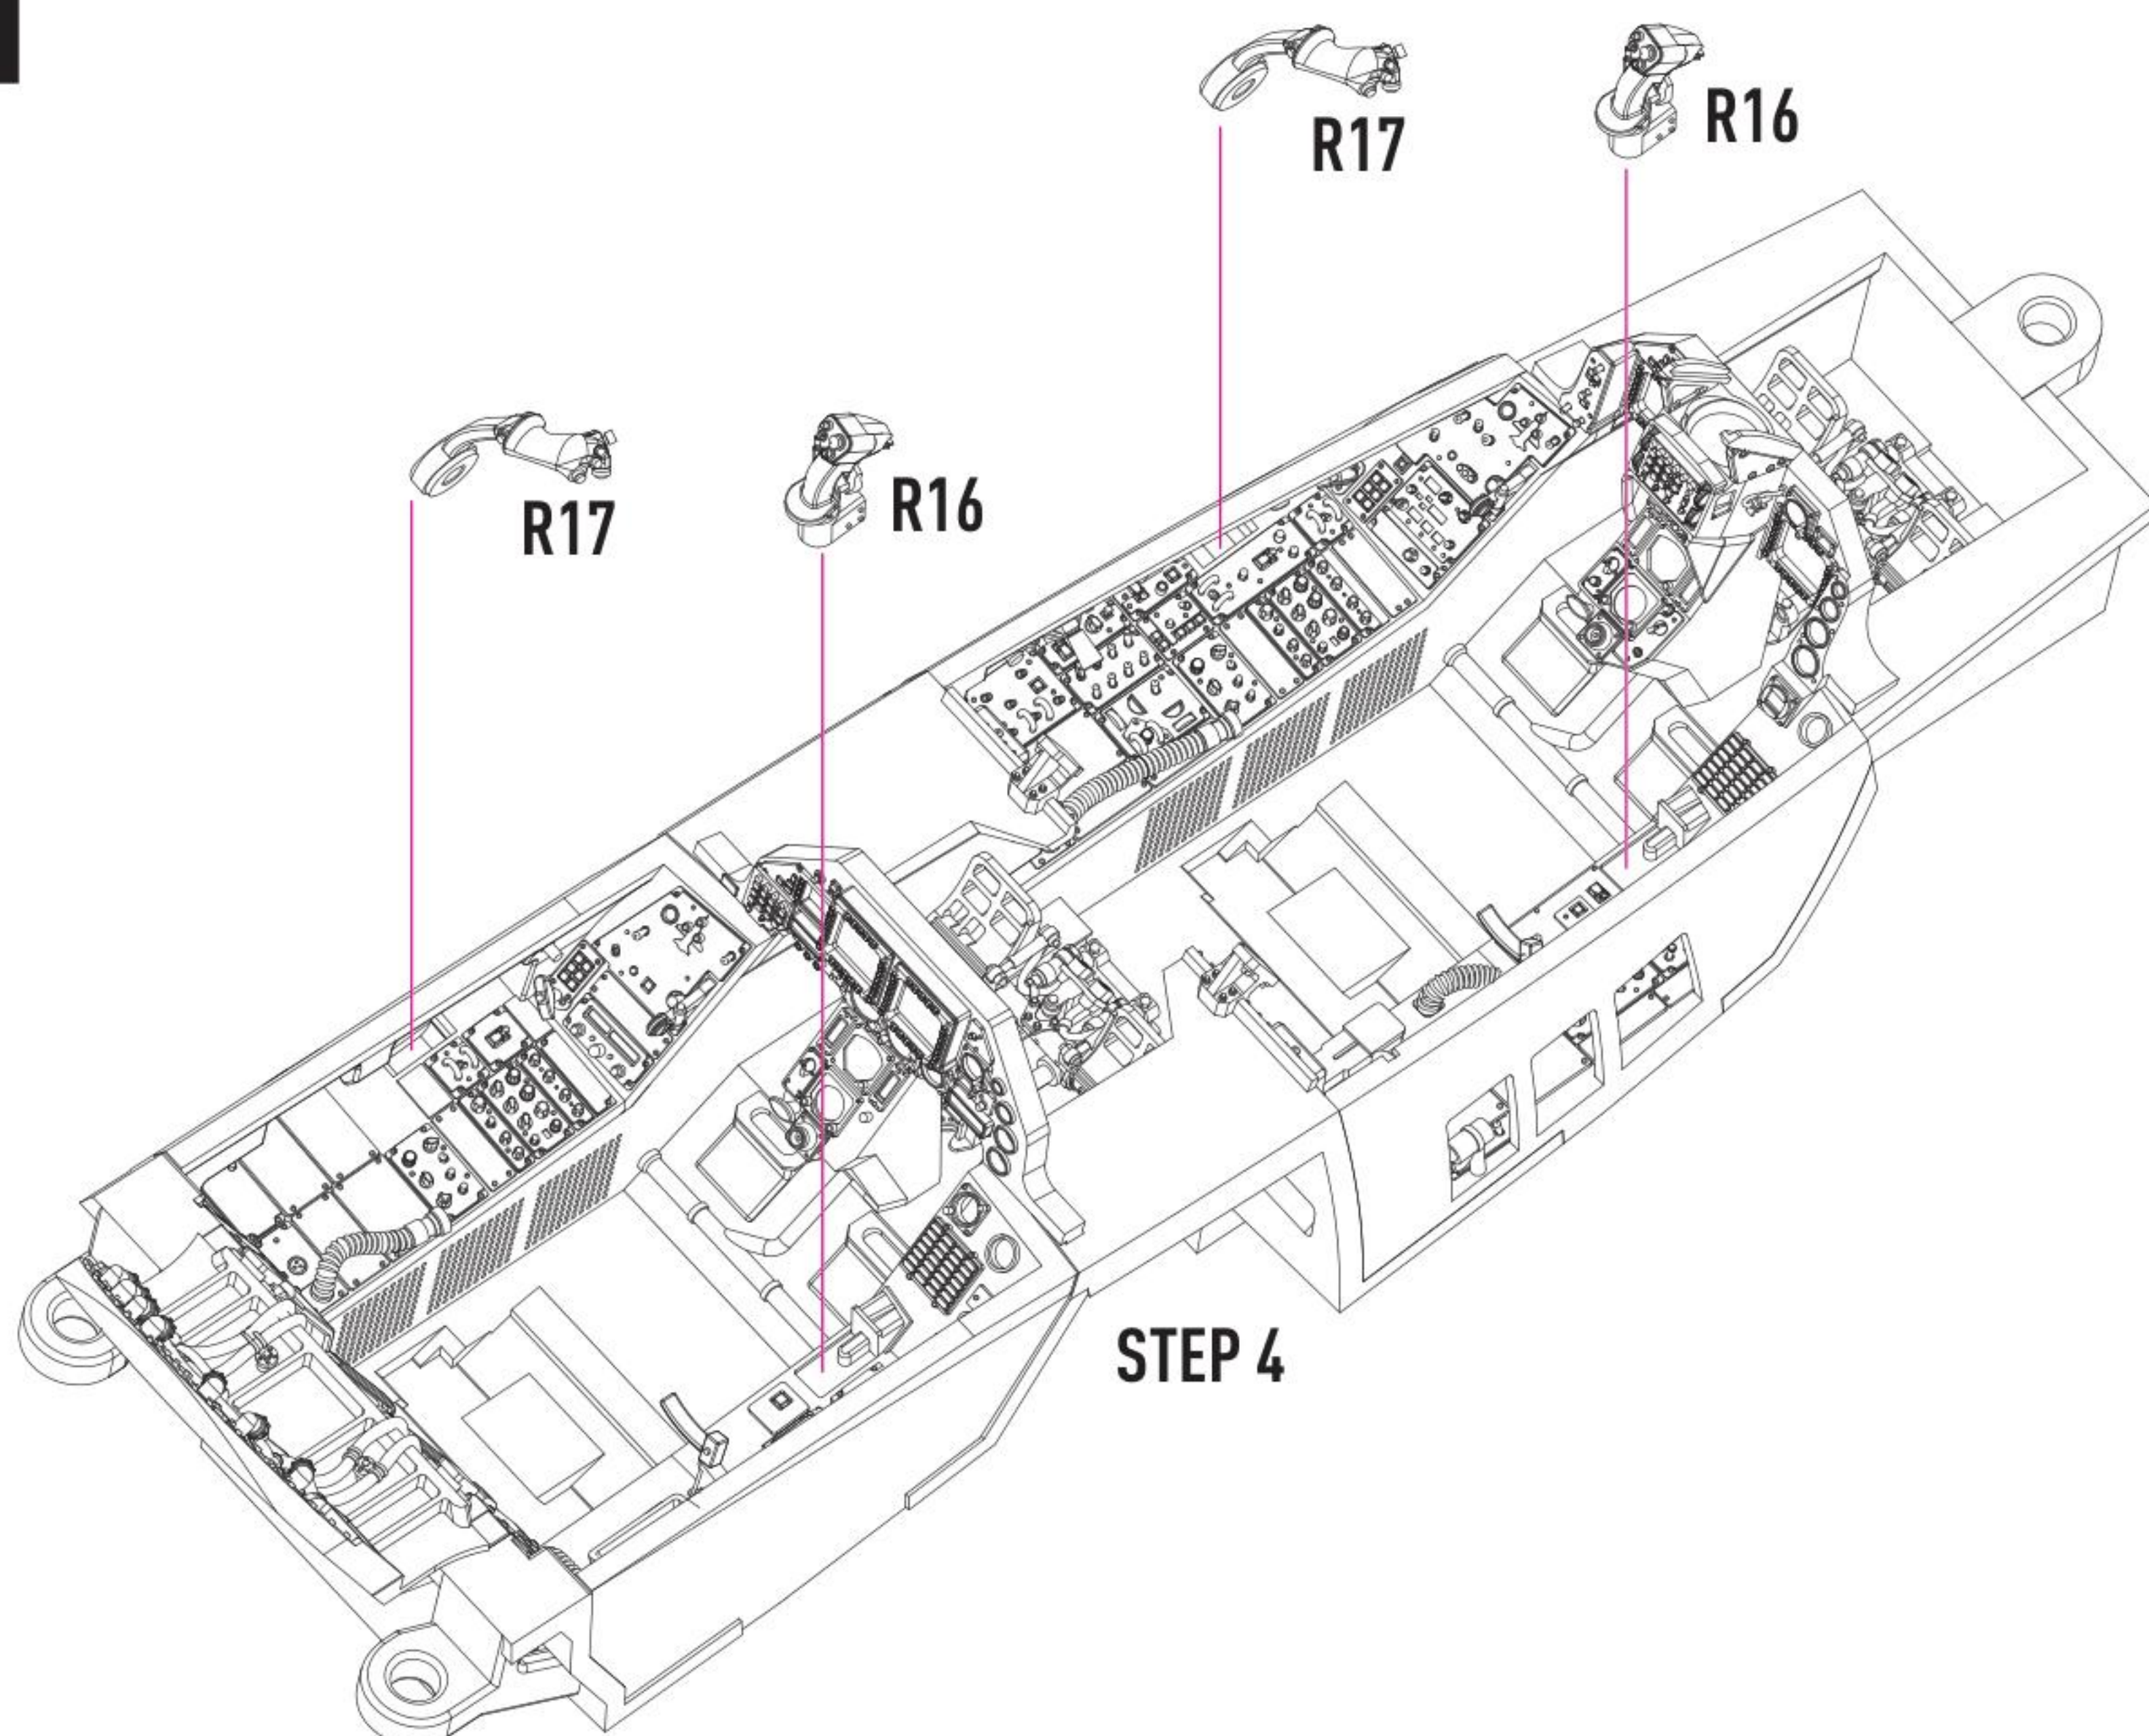



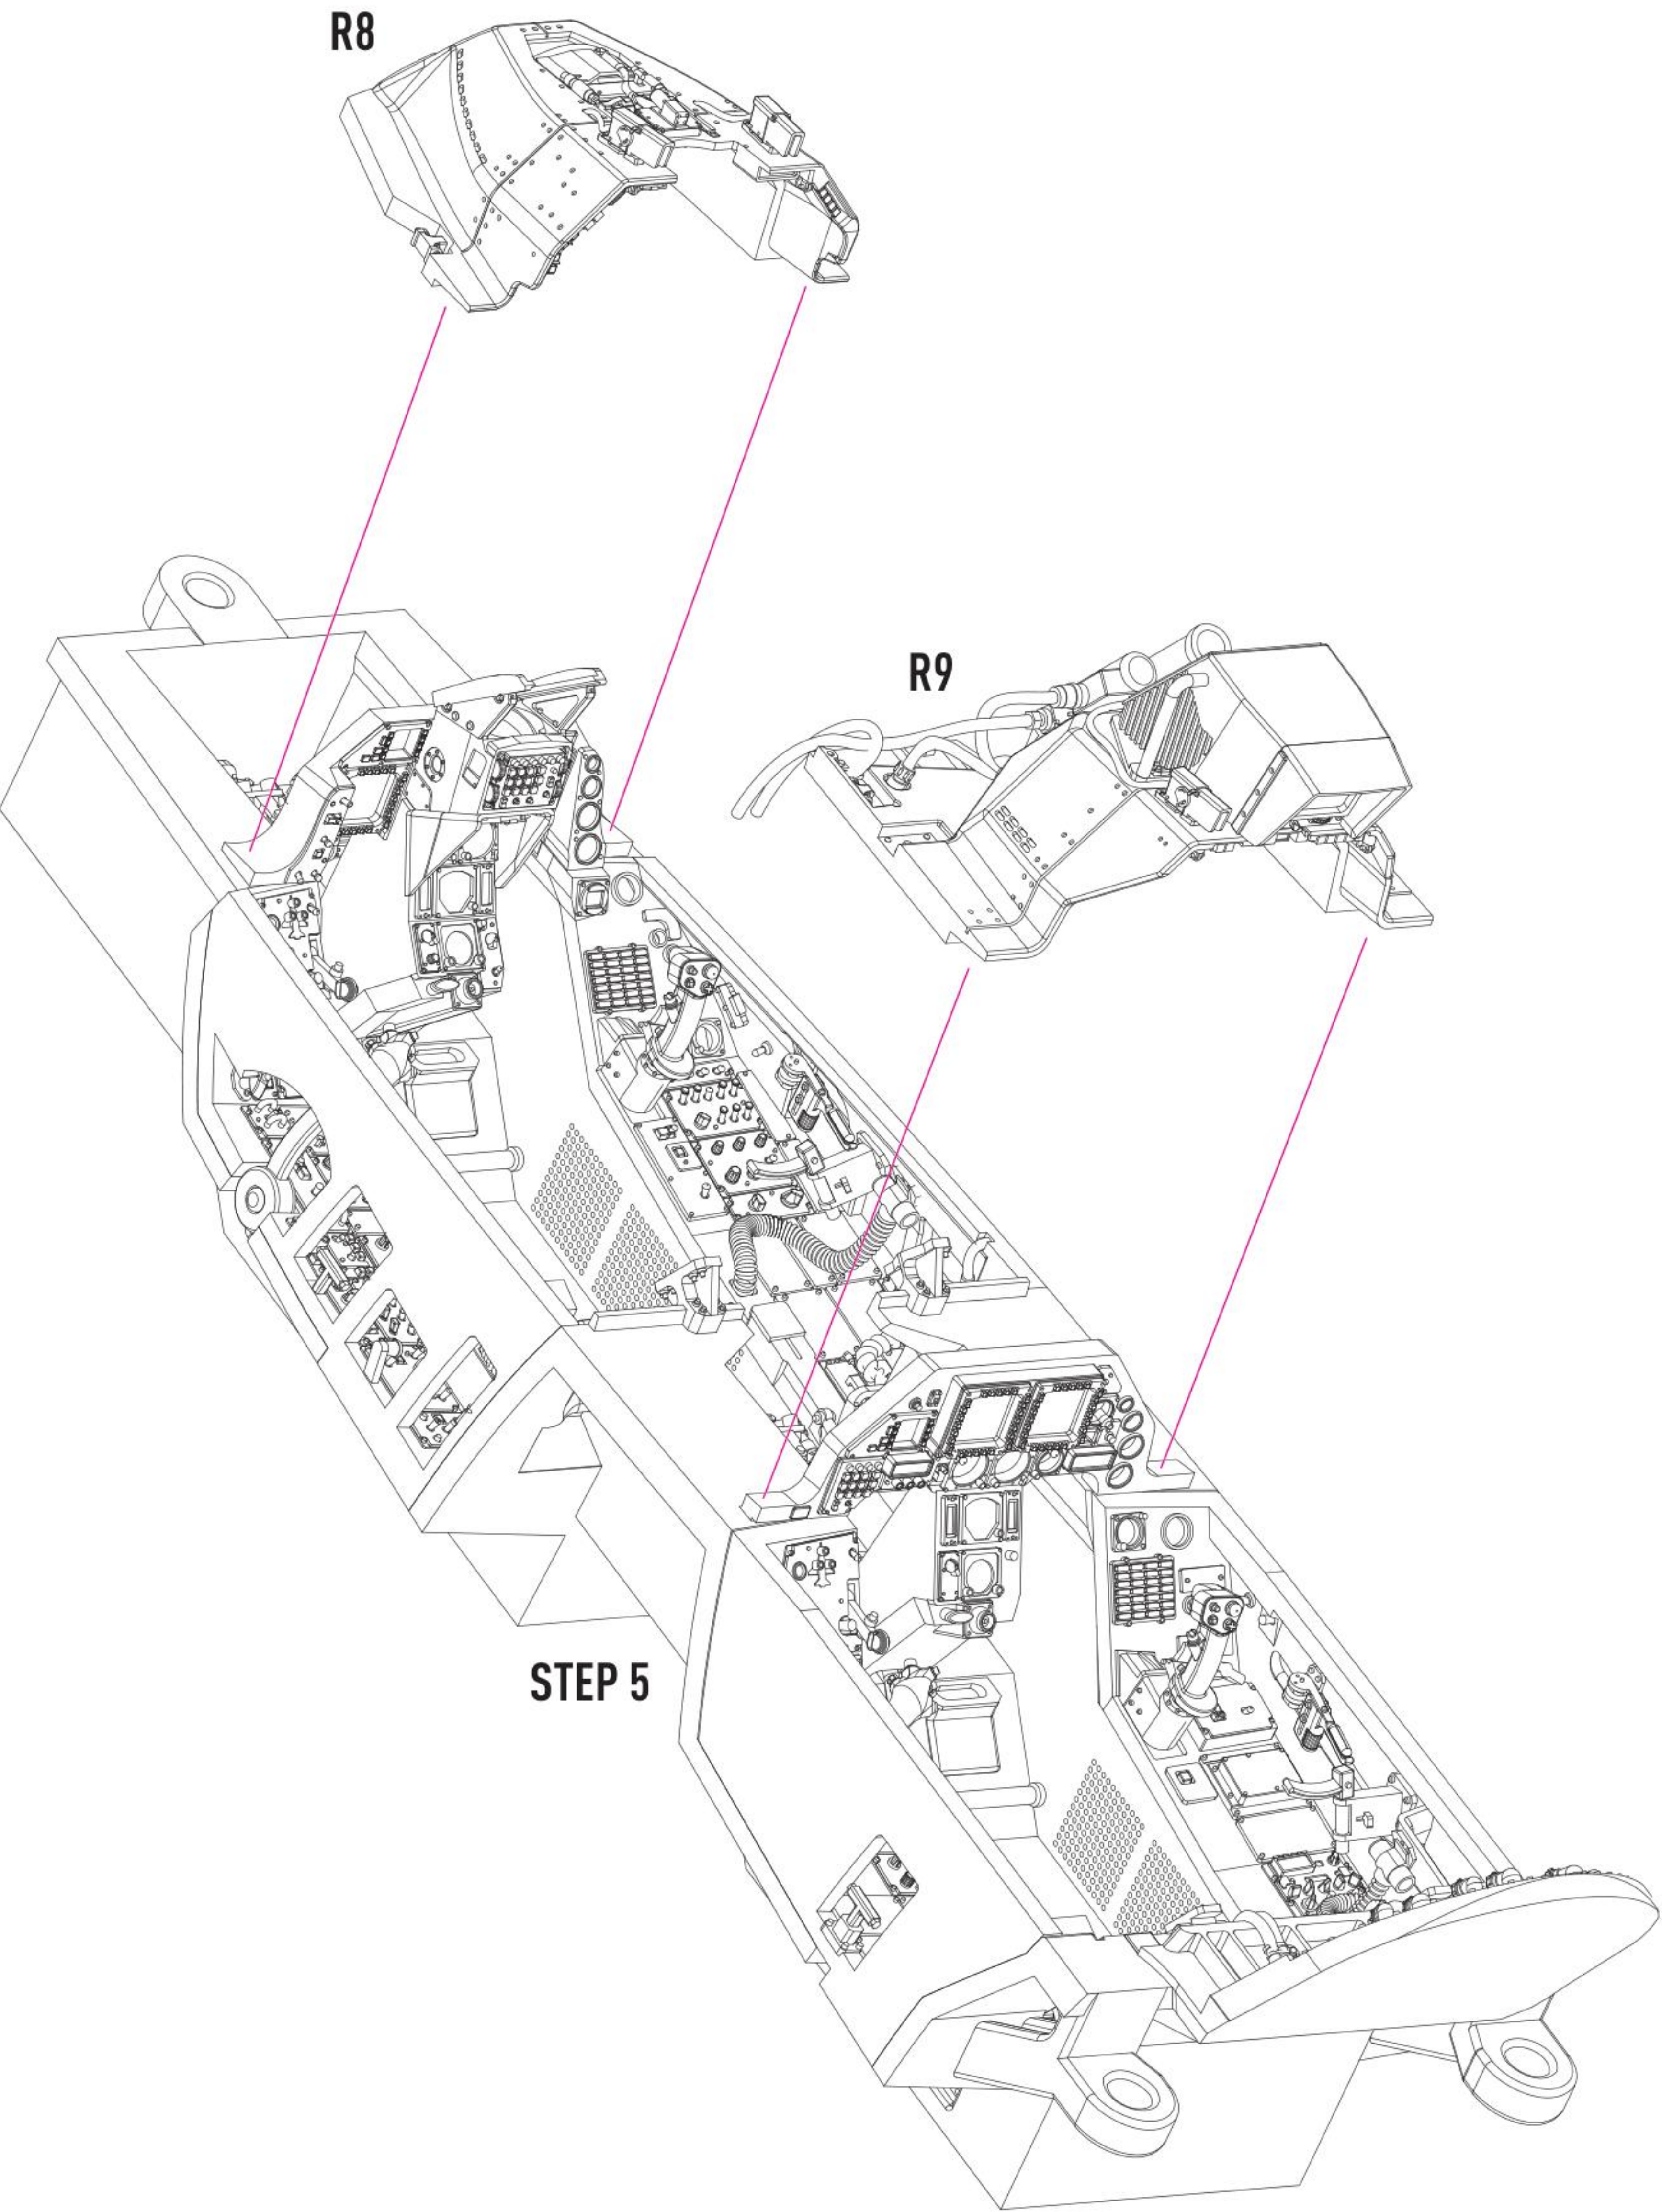



7 FRONT SEAT

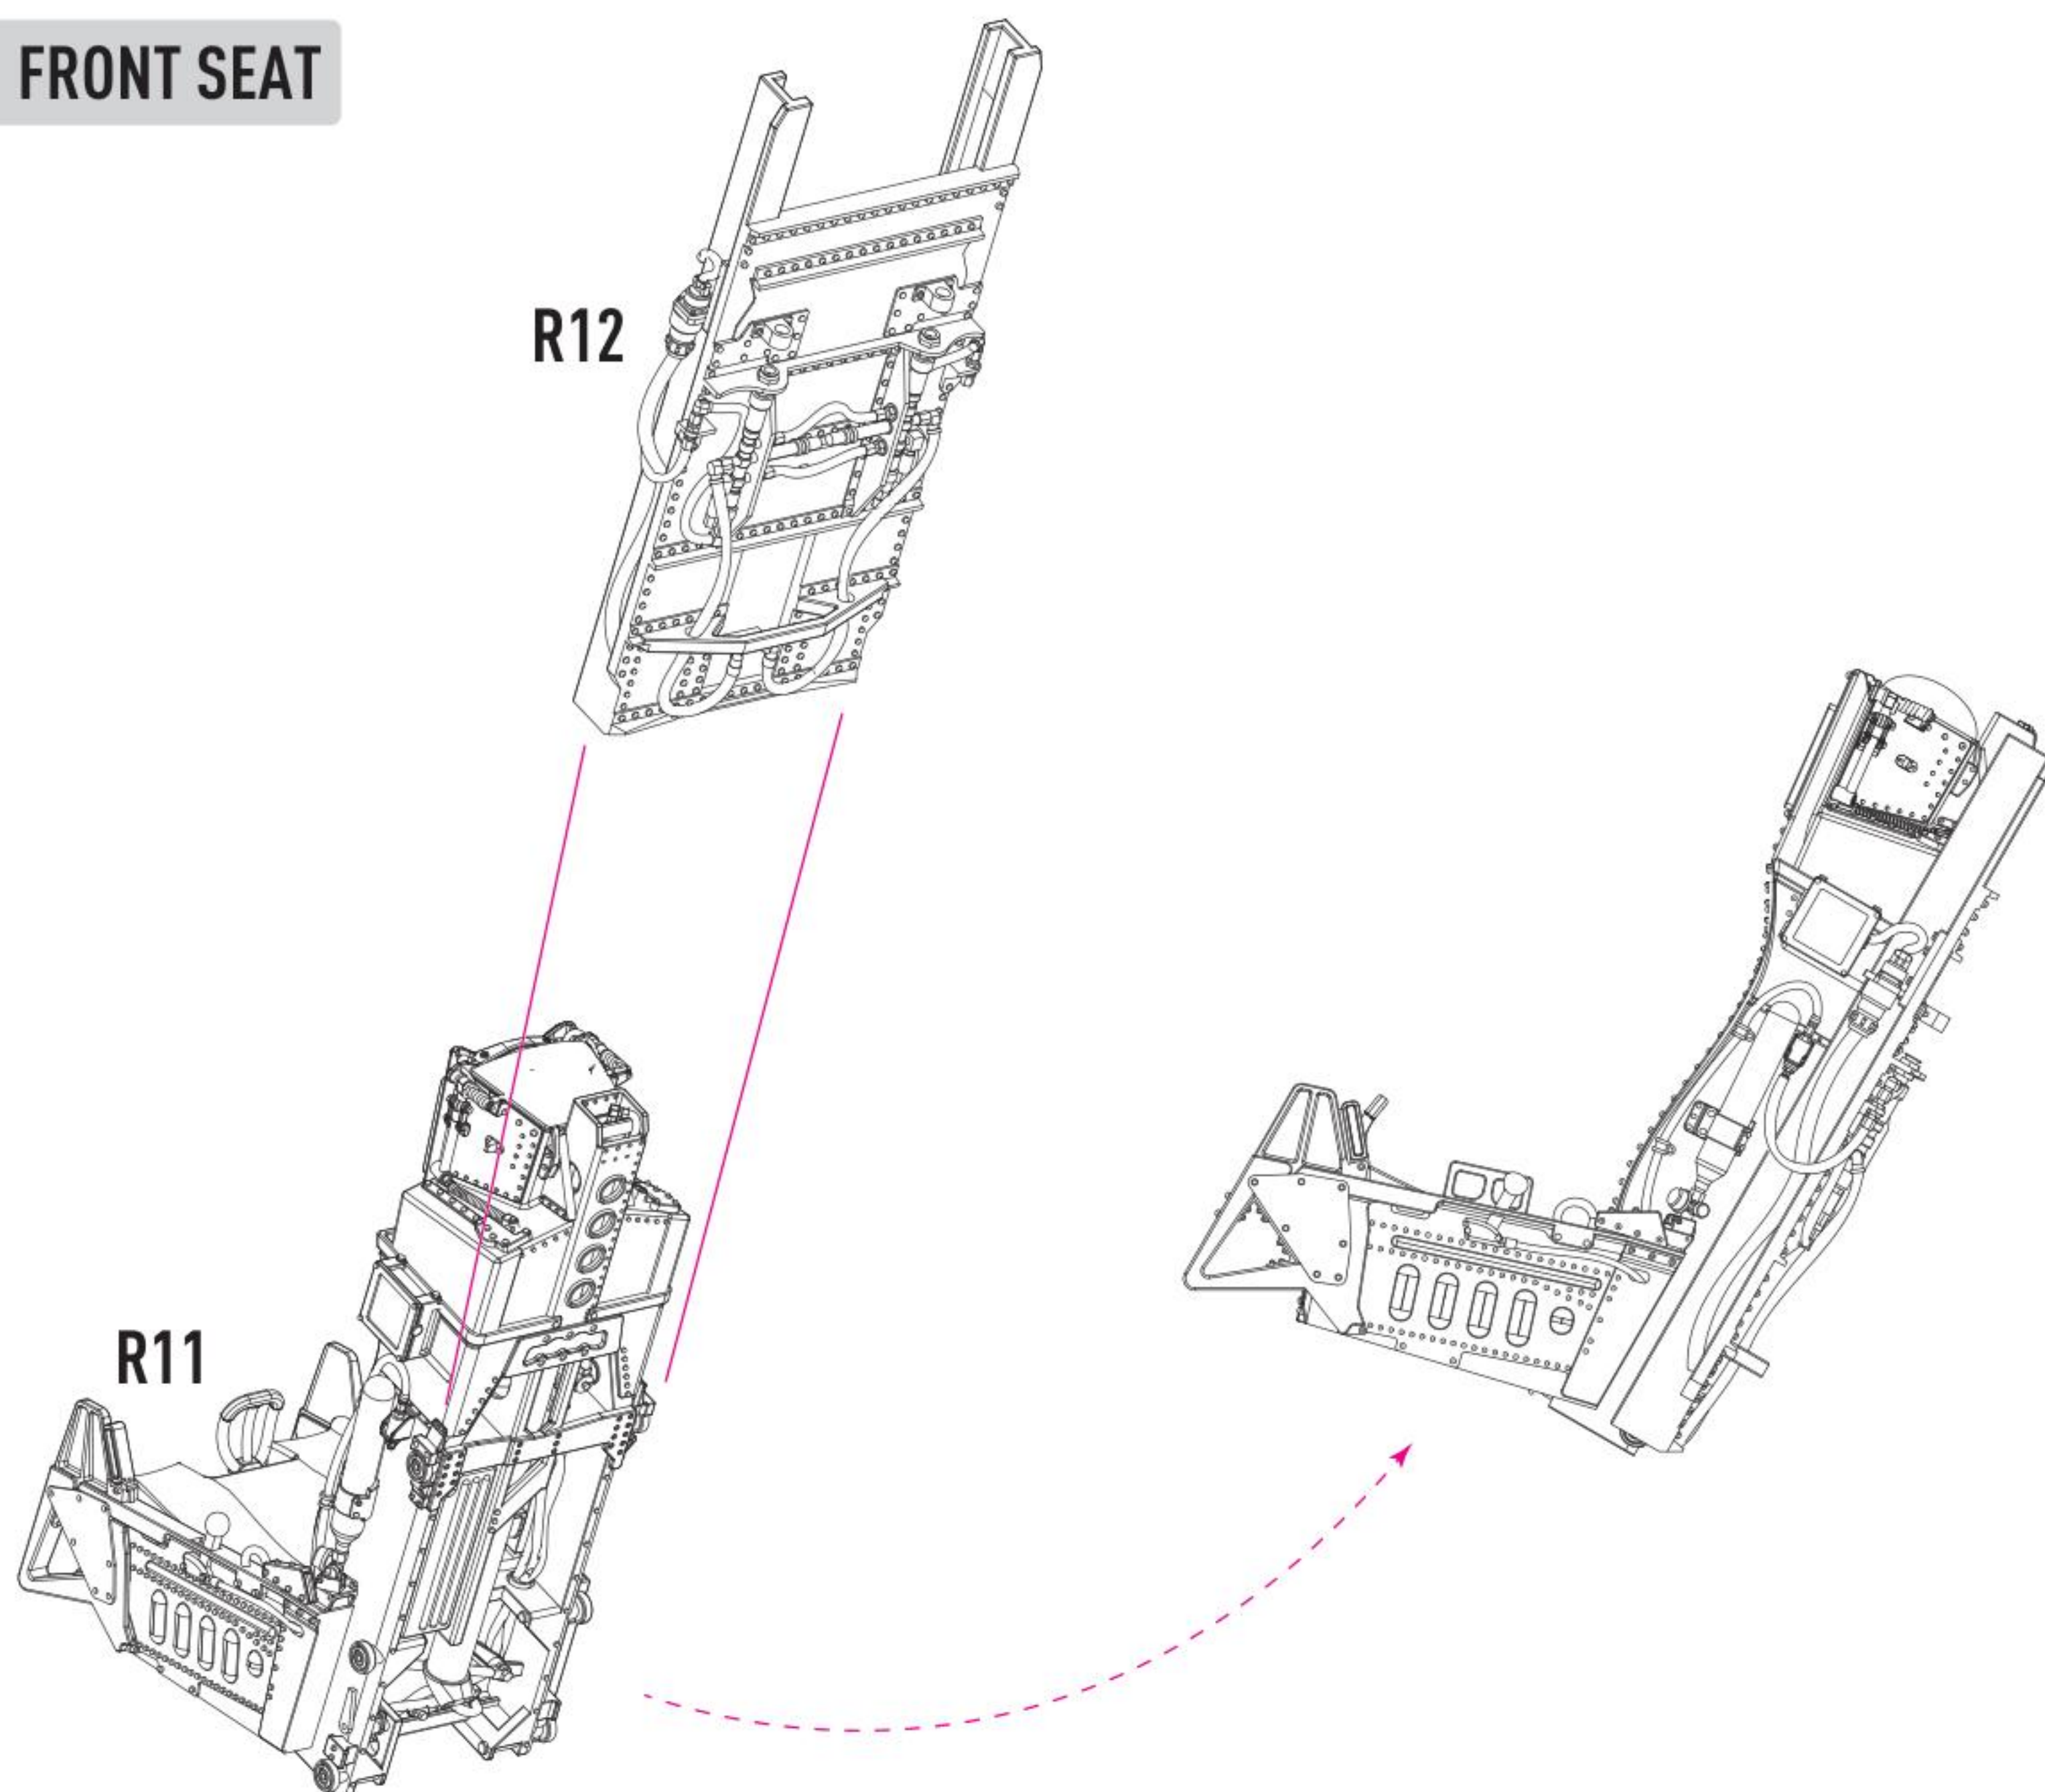

8 BACK SEAT

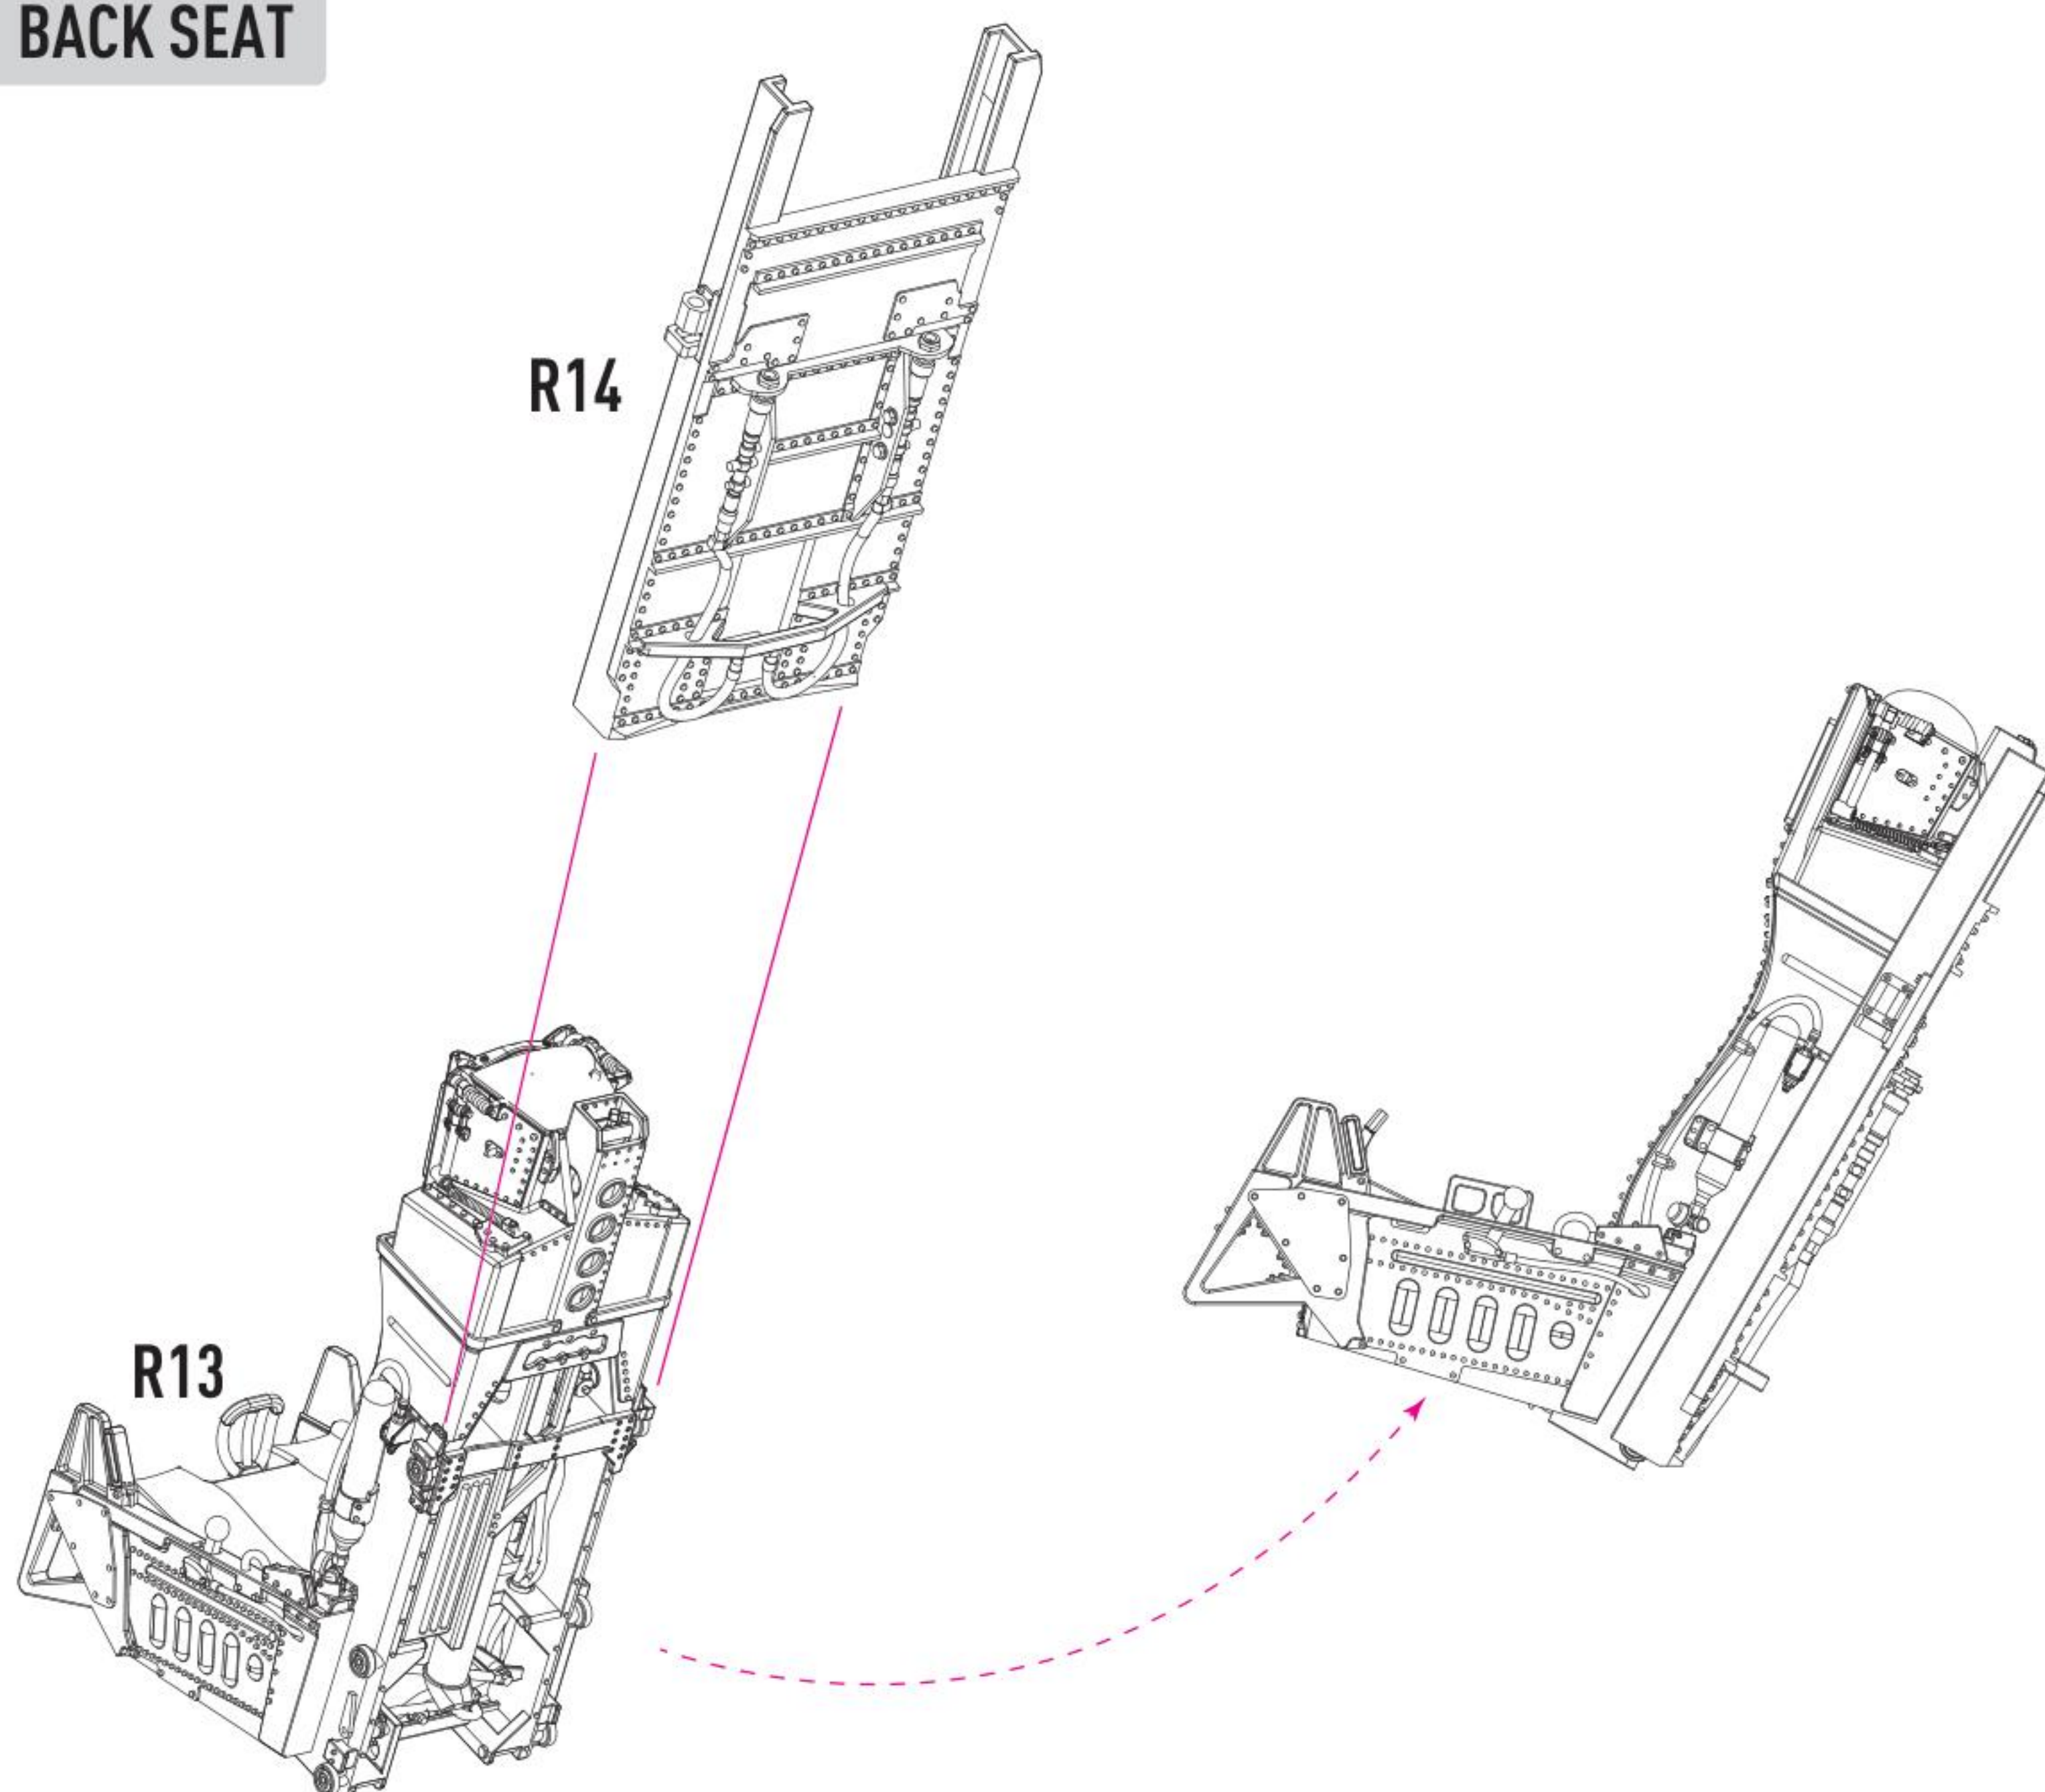


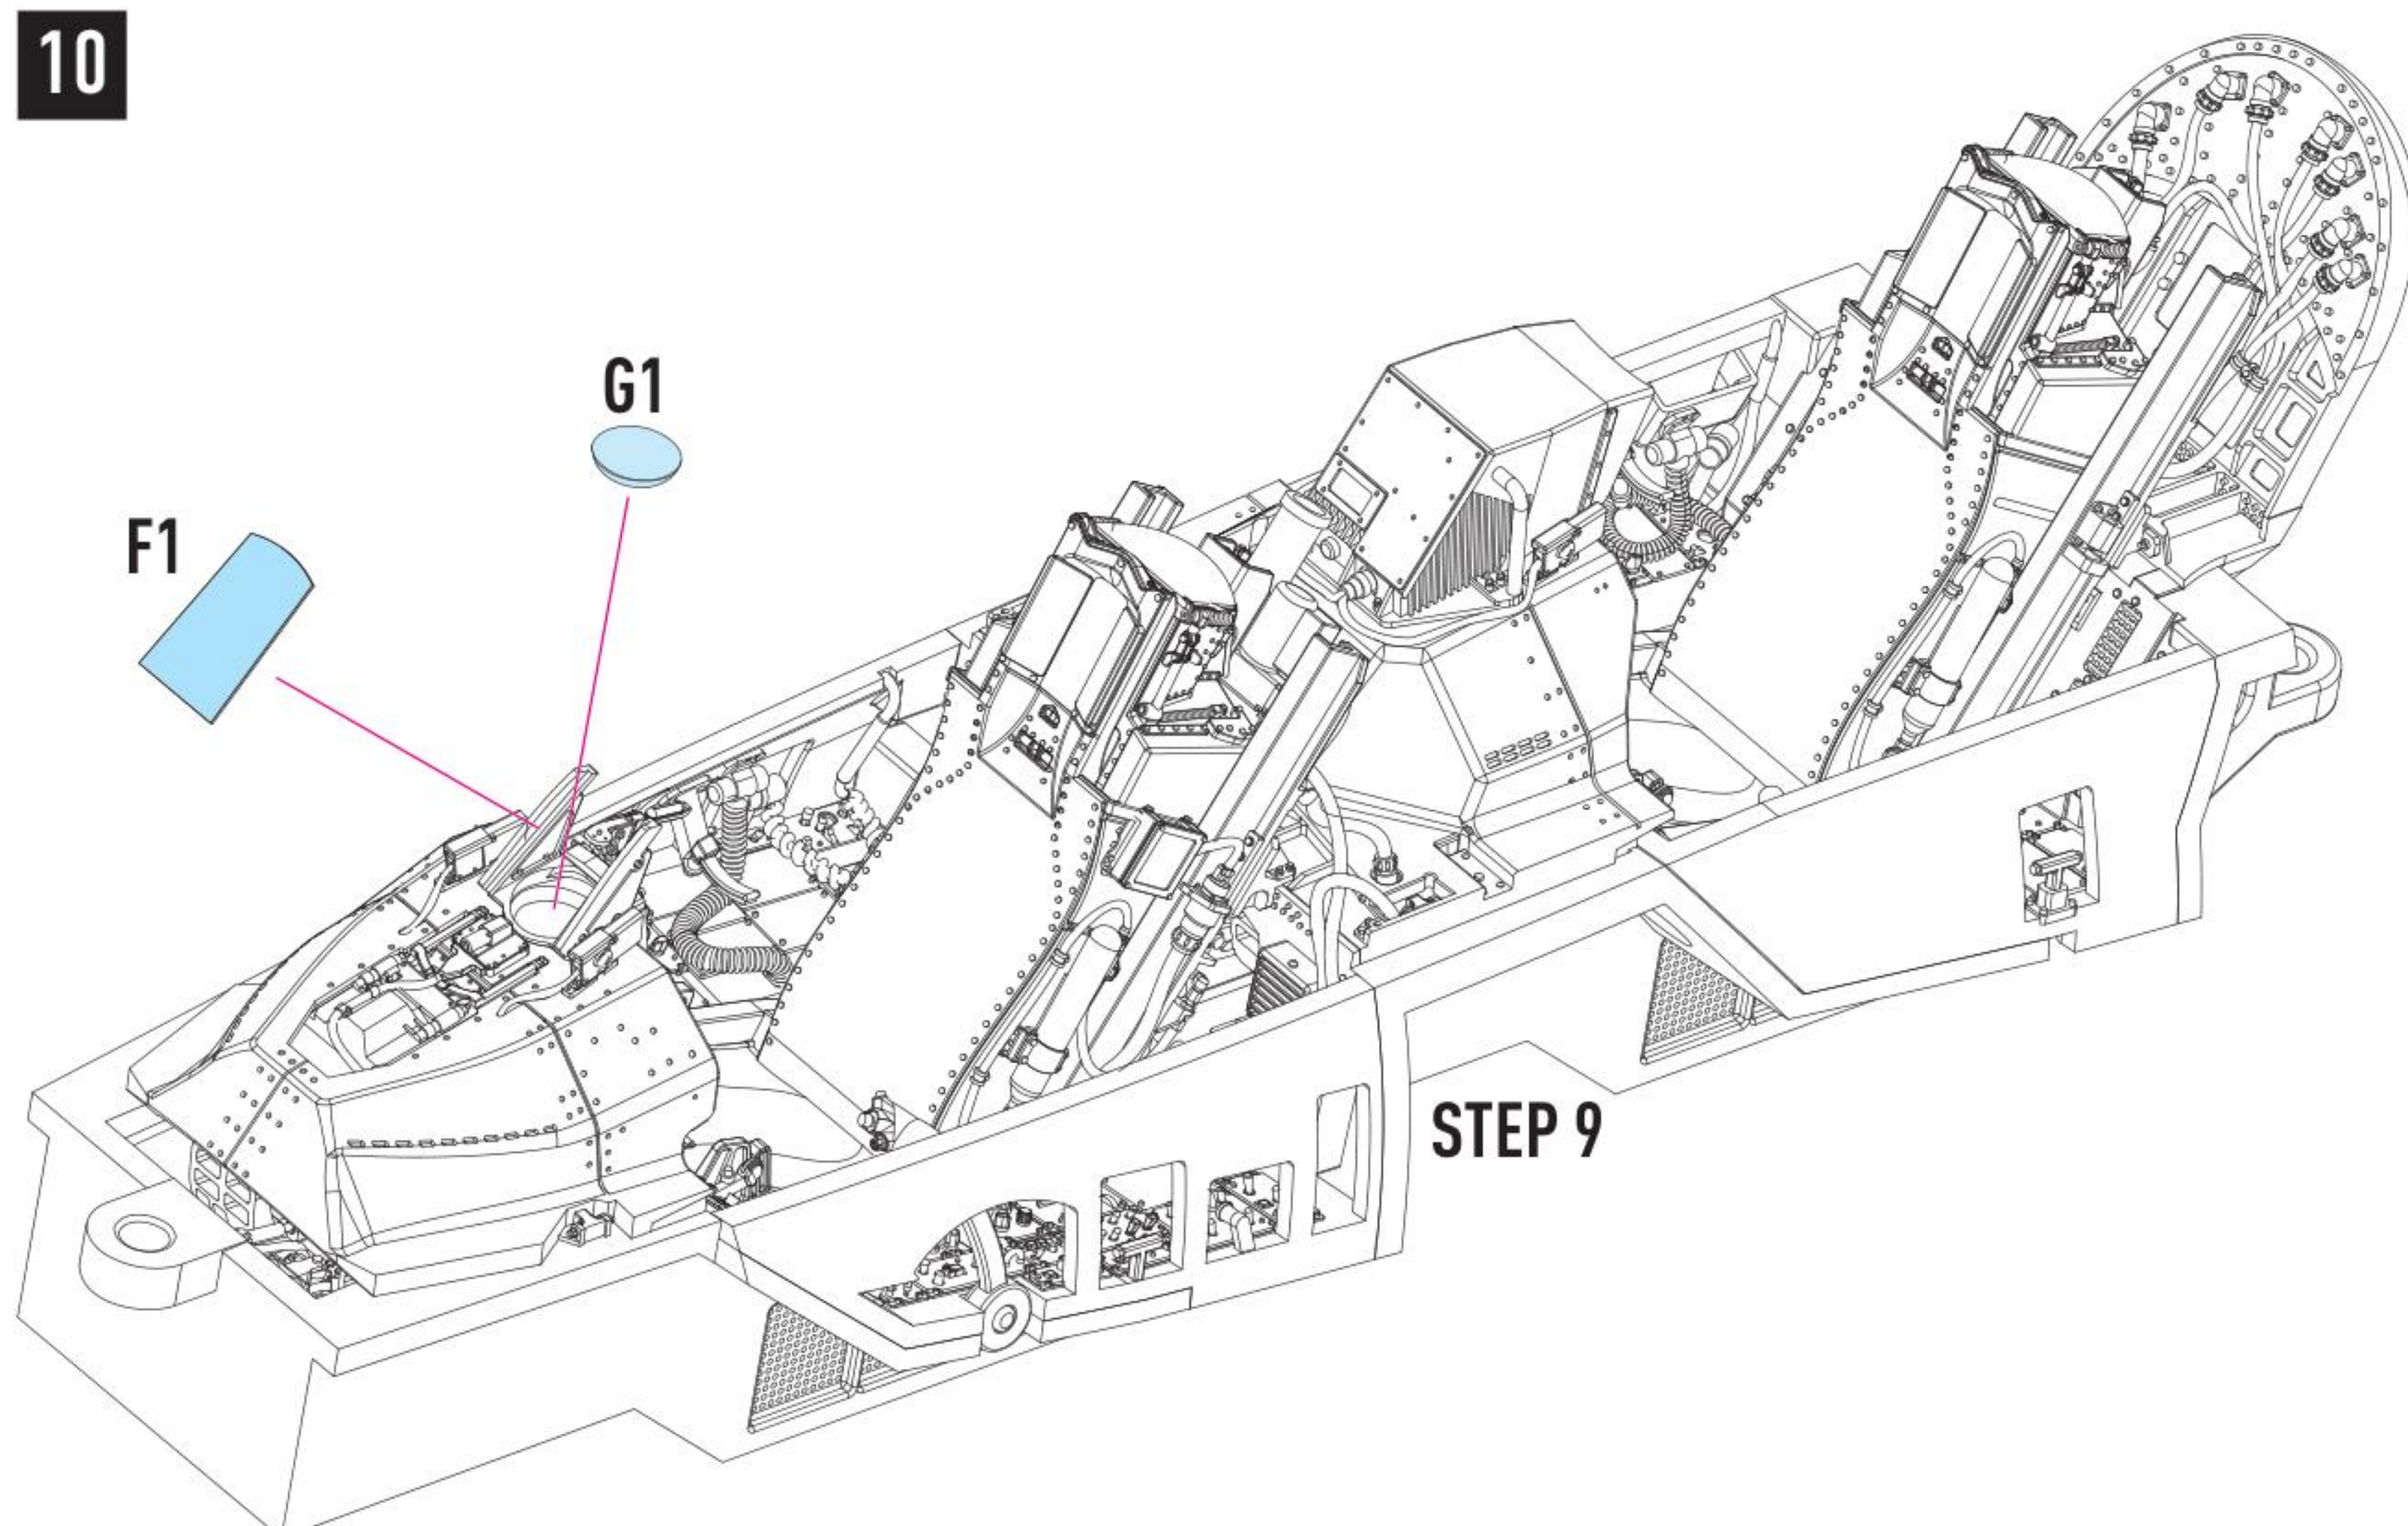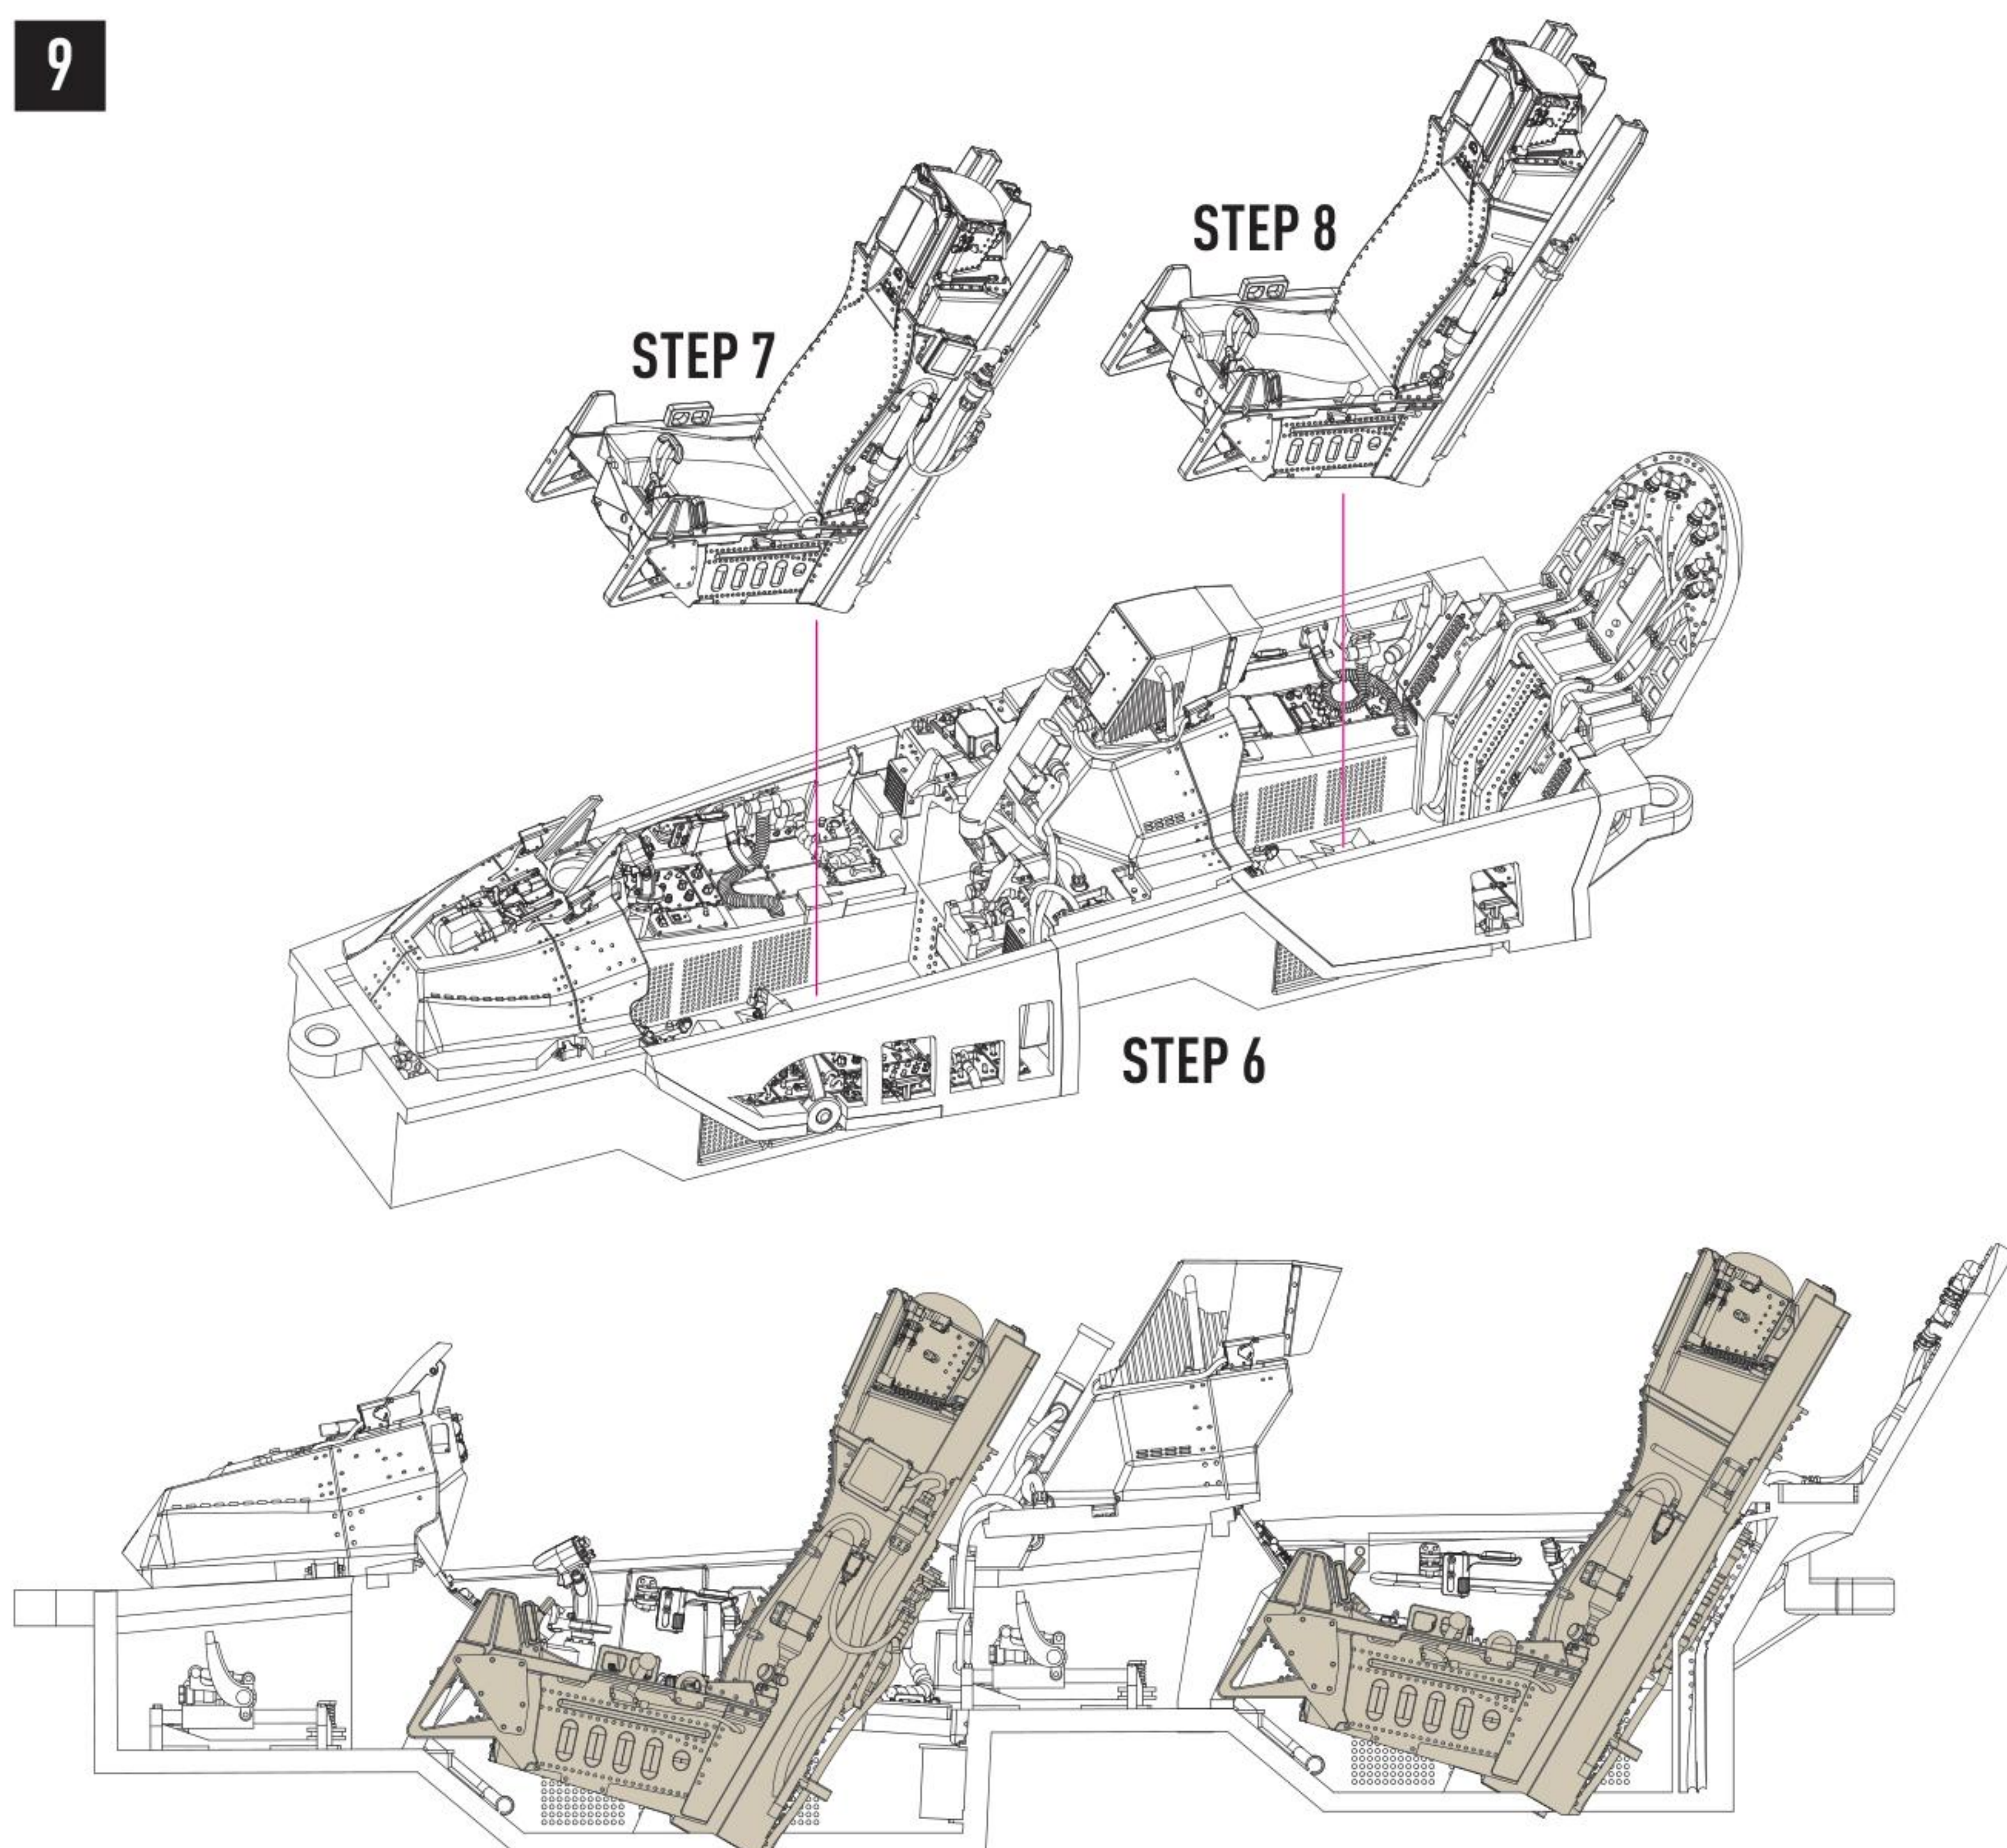

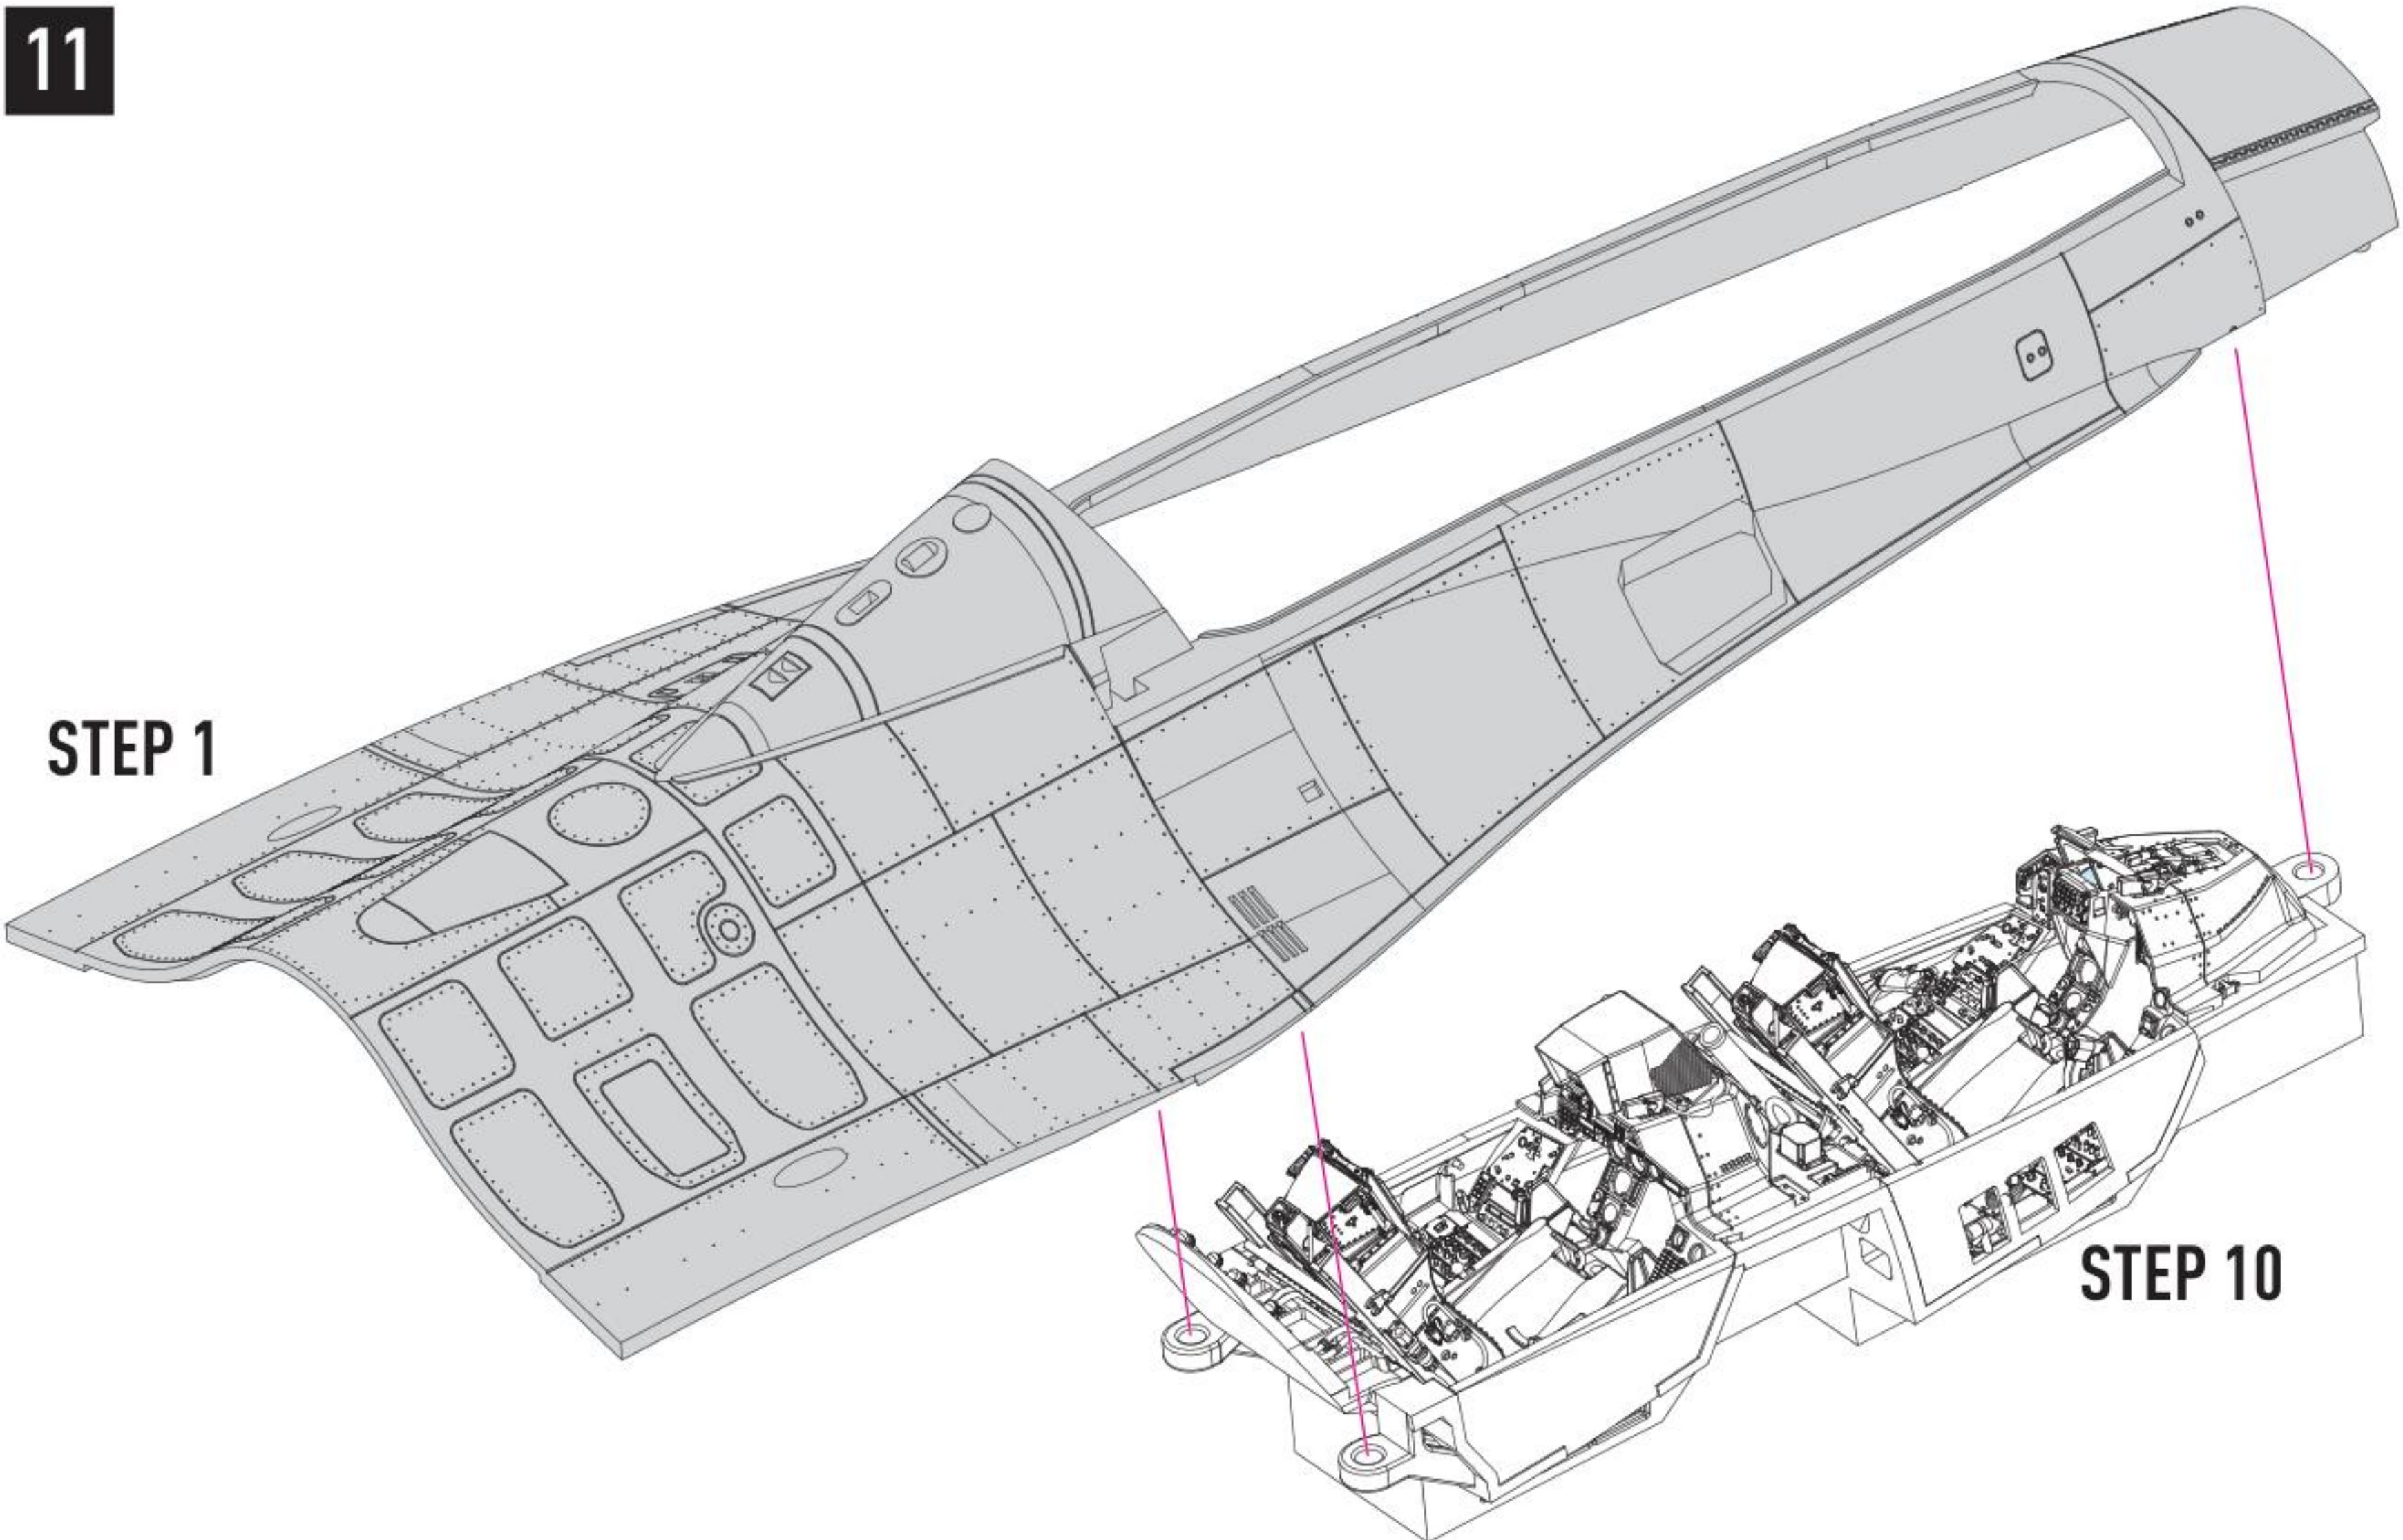


STEP 1

STEP 10

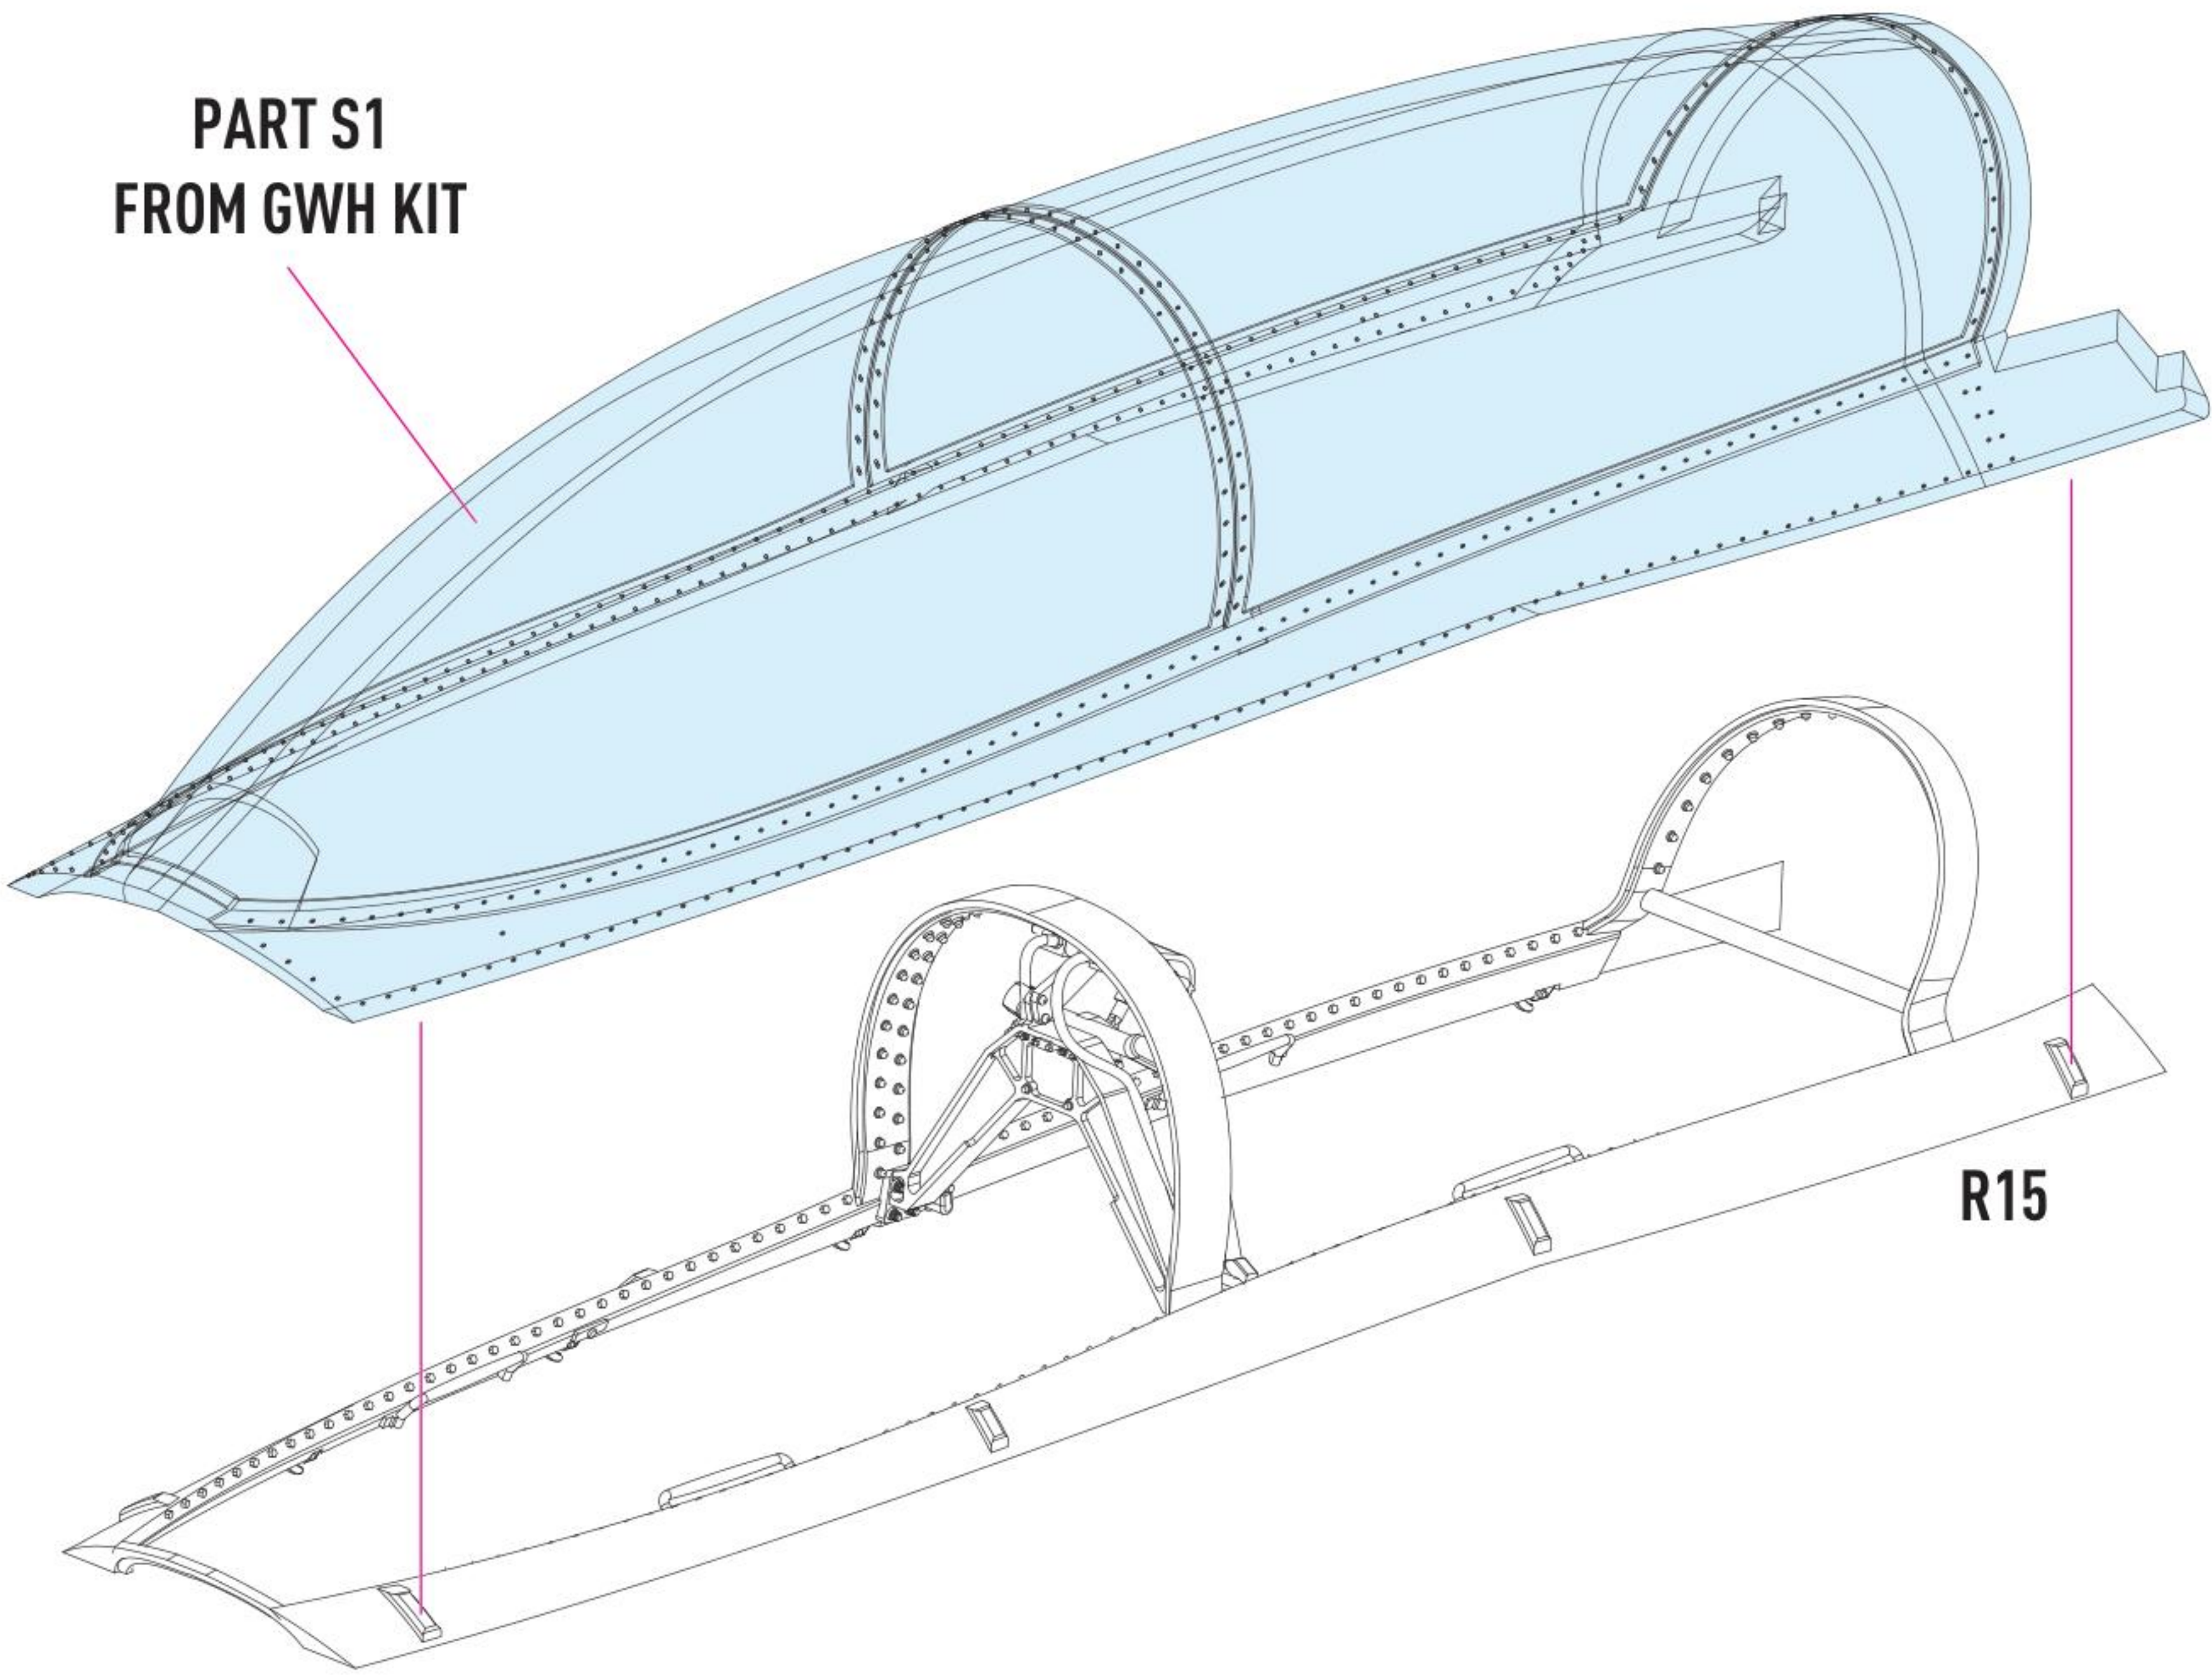


PART S1
FROM GWH KIT

R15

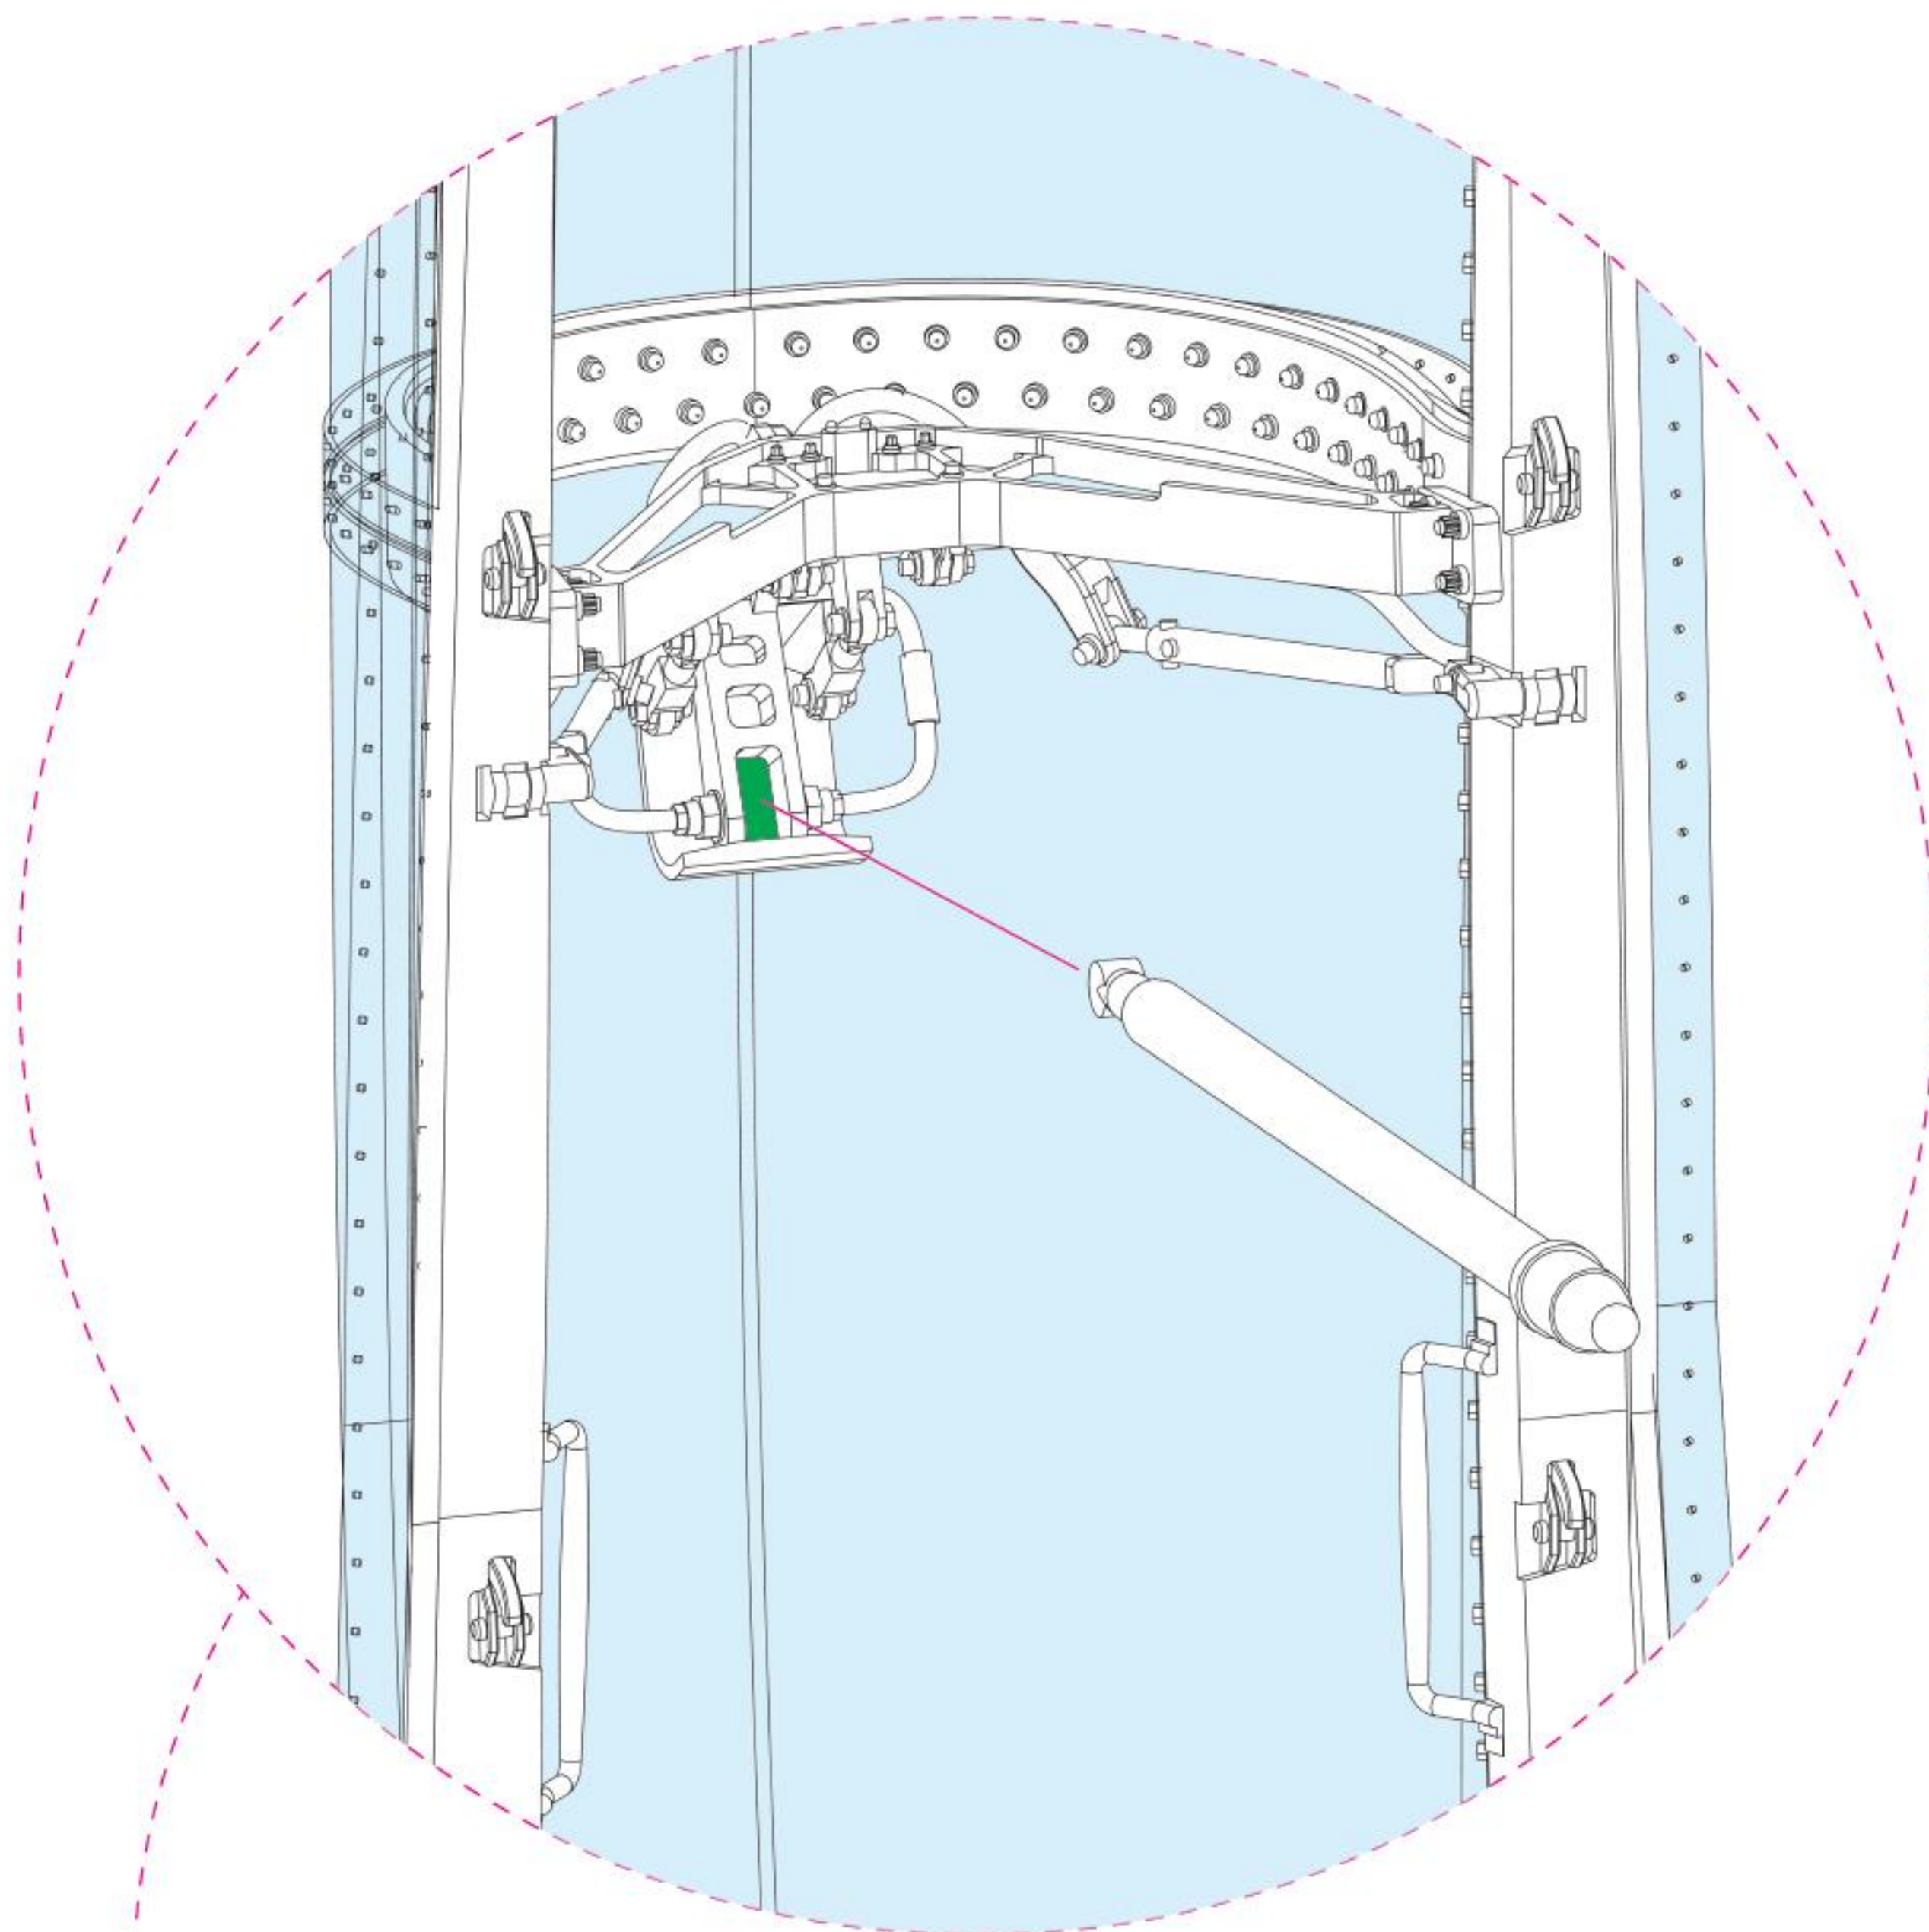

STEP 12

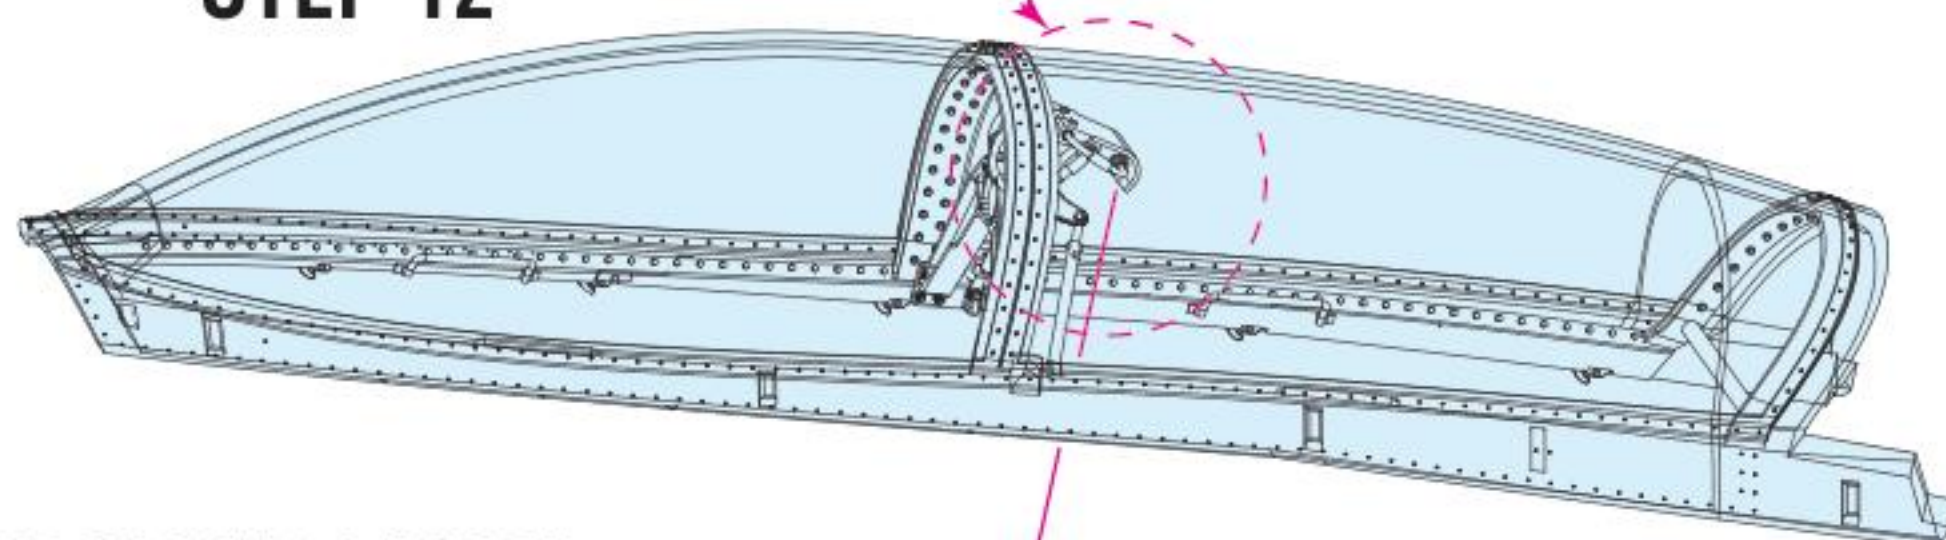


USE R18 FOR CLOSED CANOPY
OR R19 FOR OPEN CANOPY


R18




R19

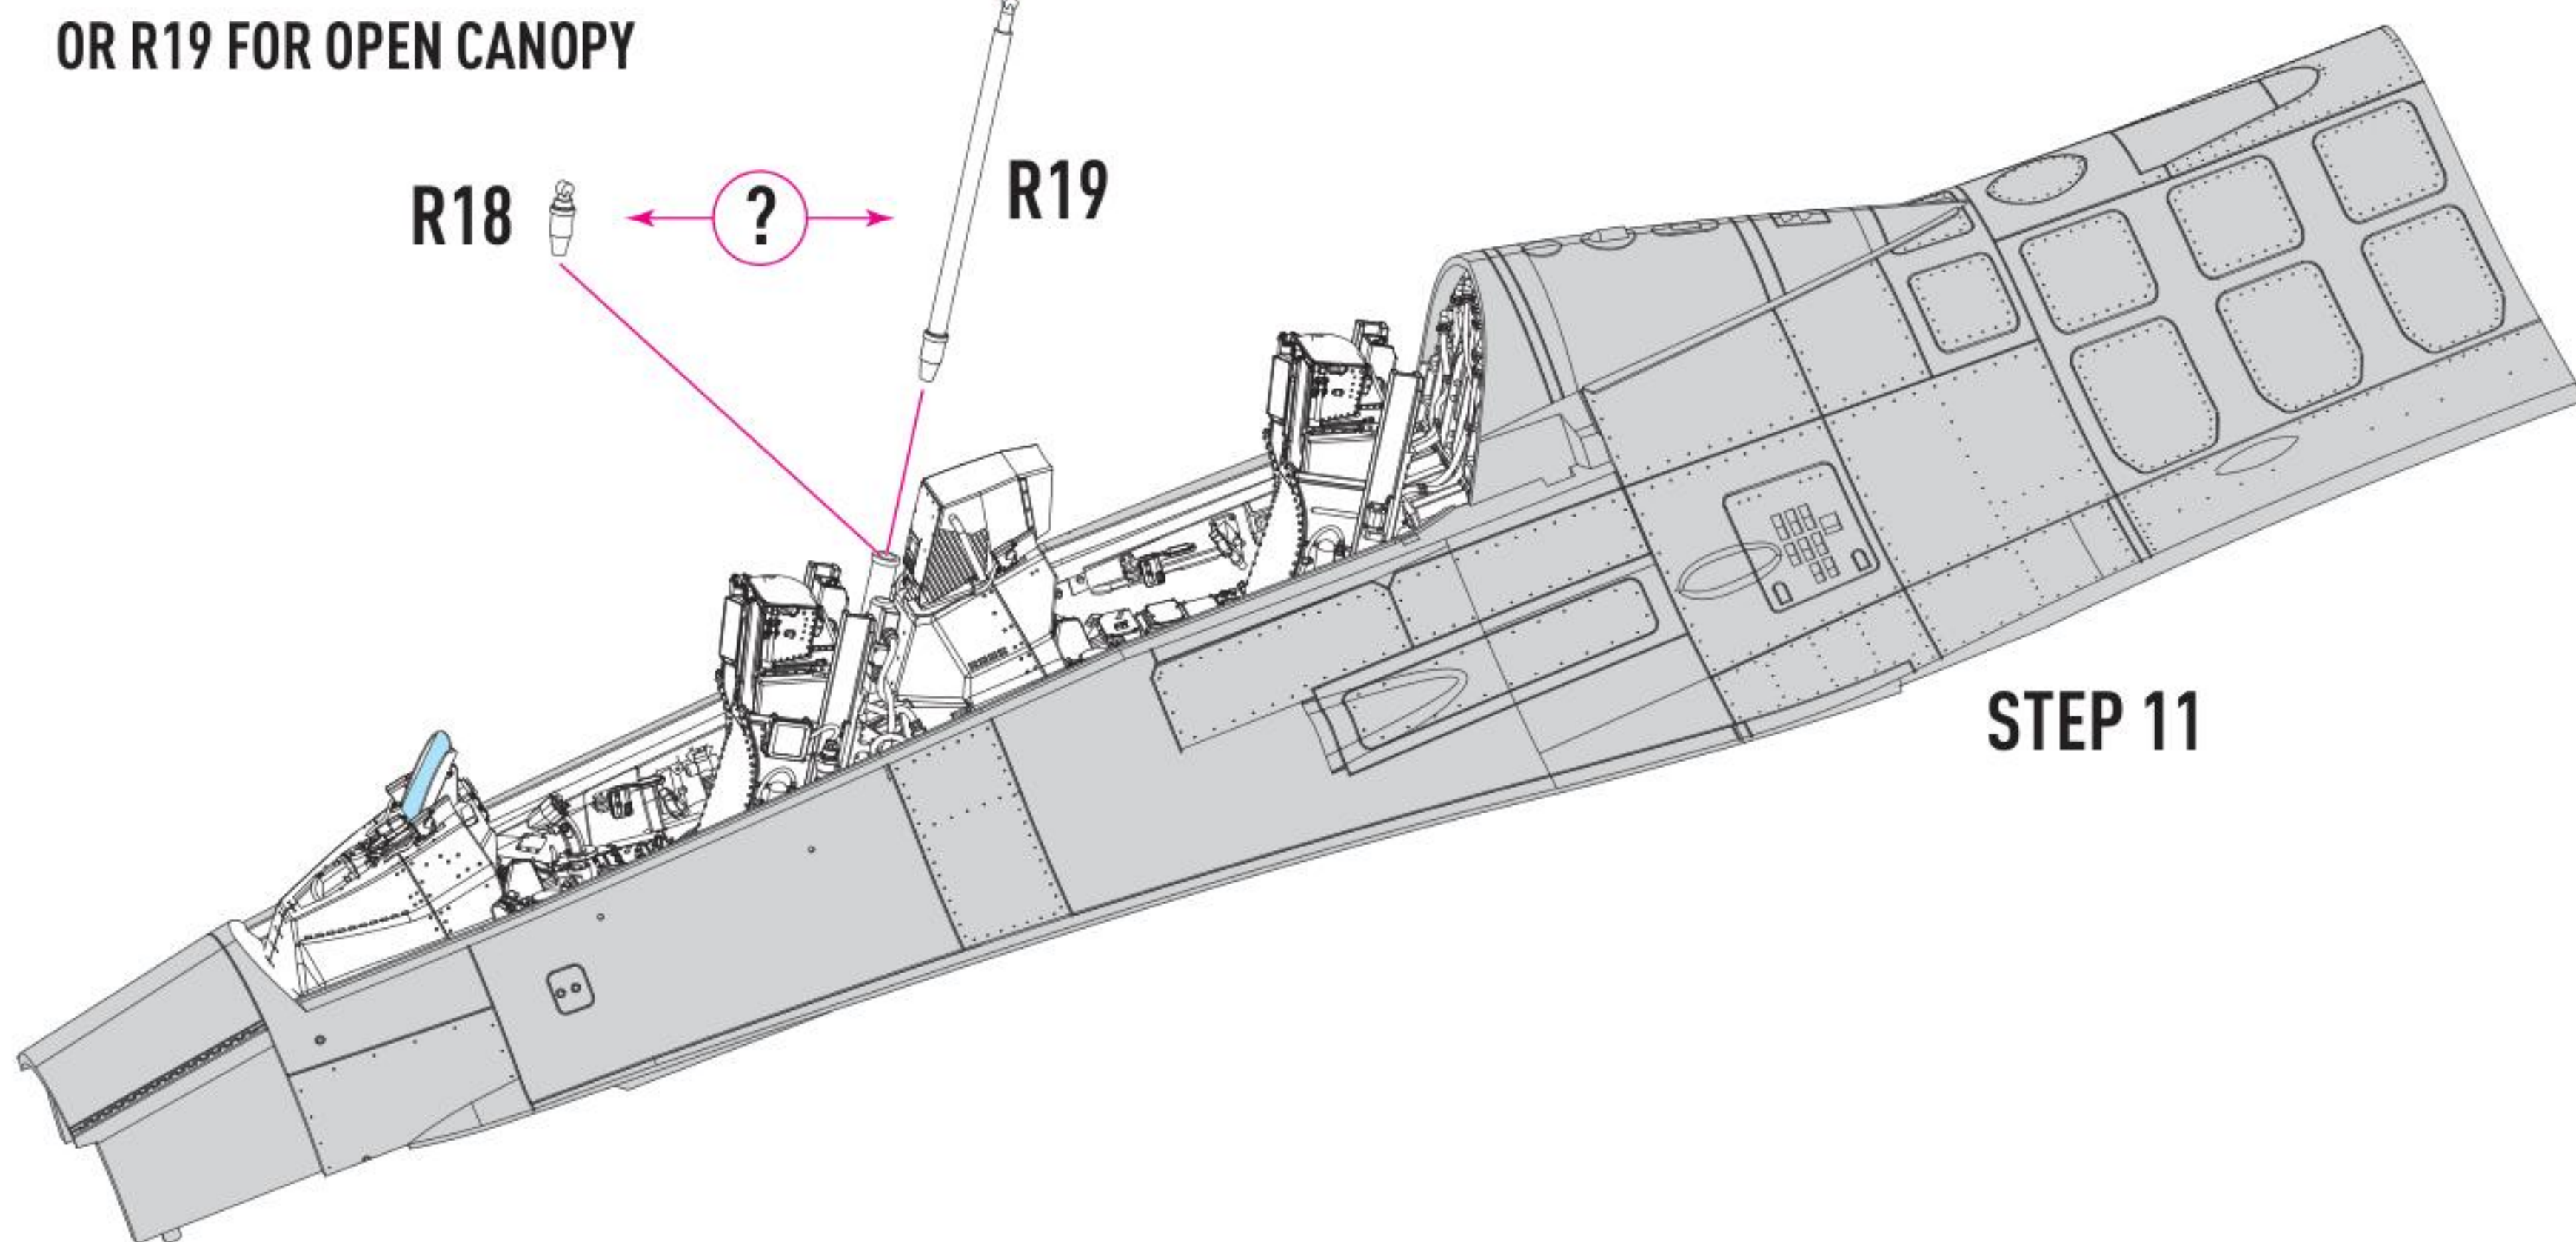

STEP 11

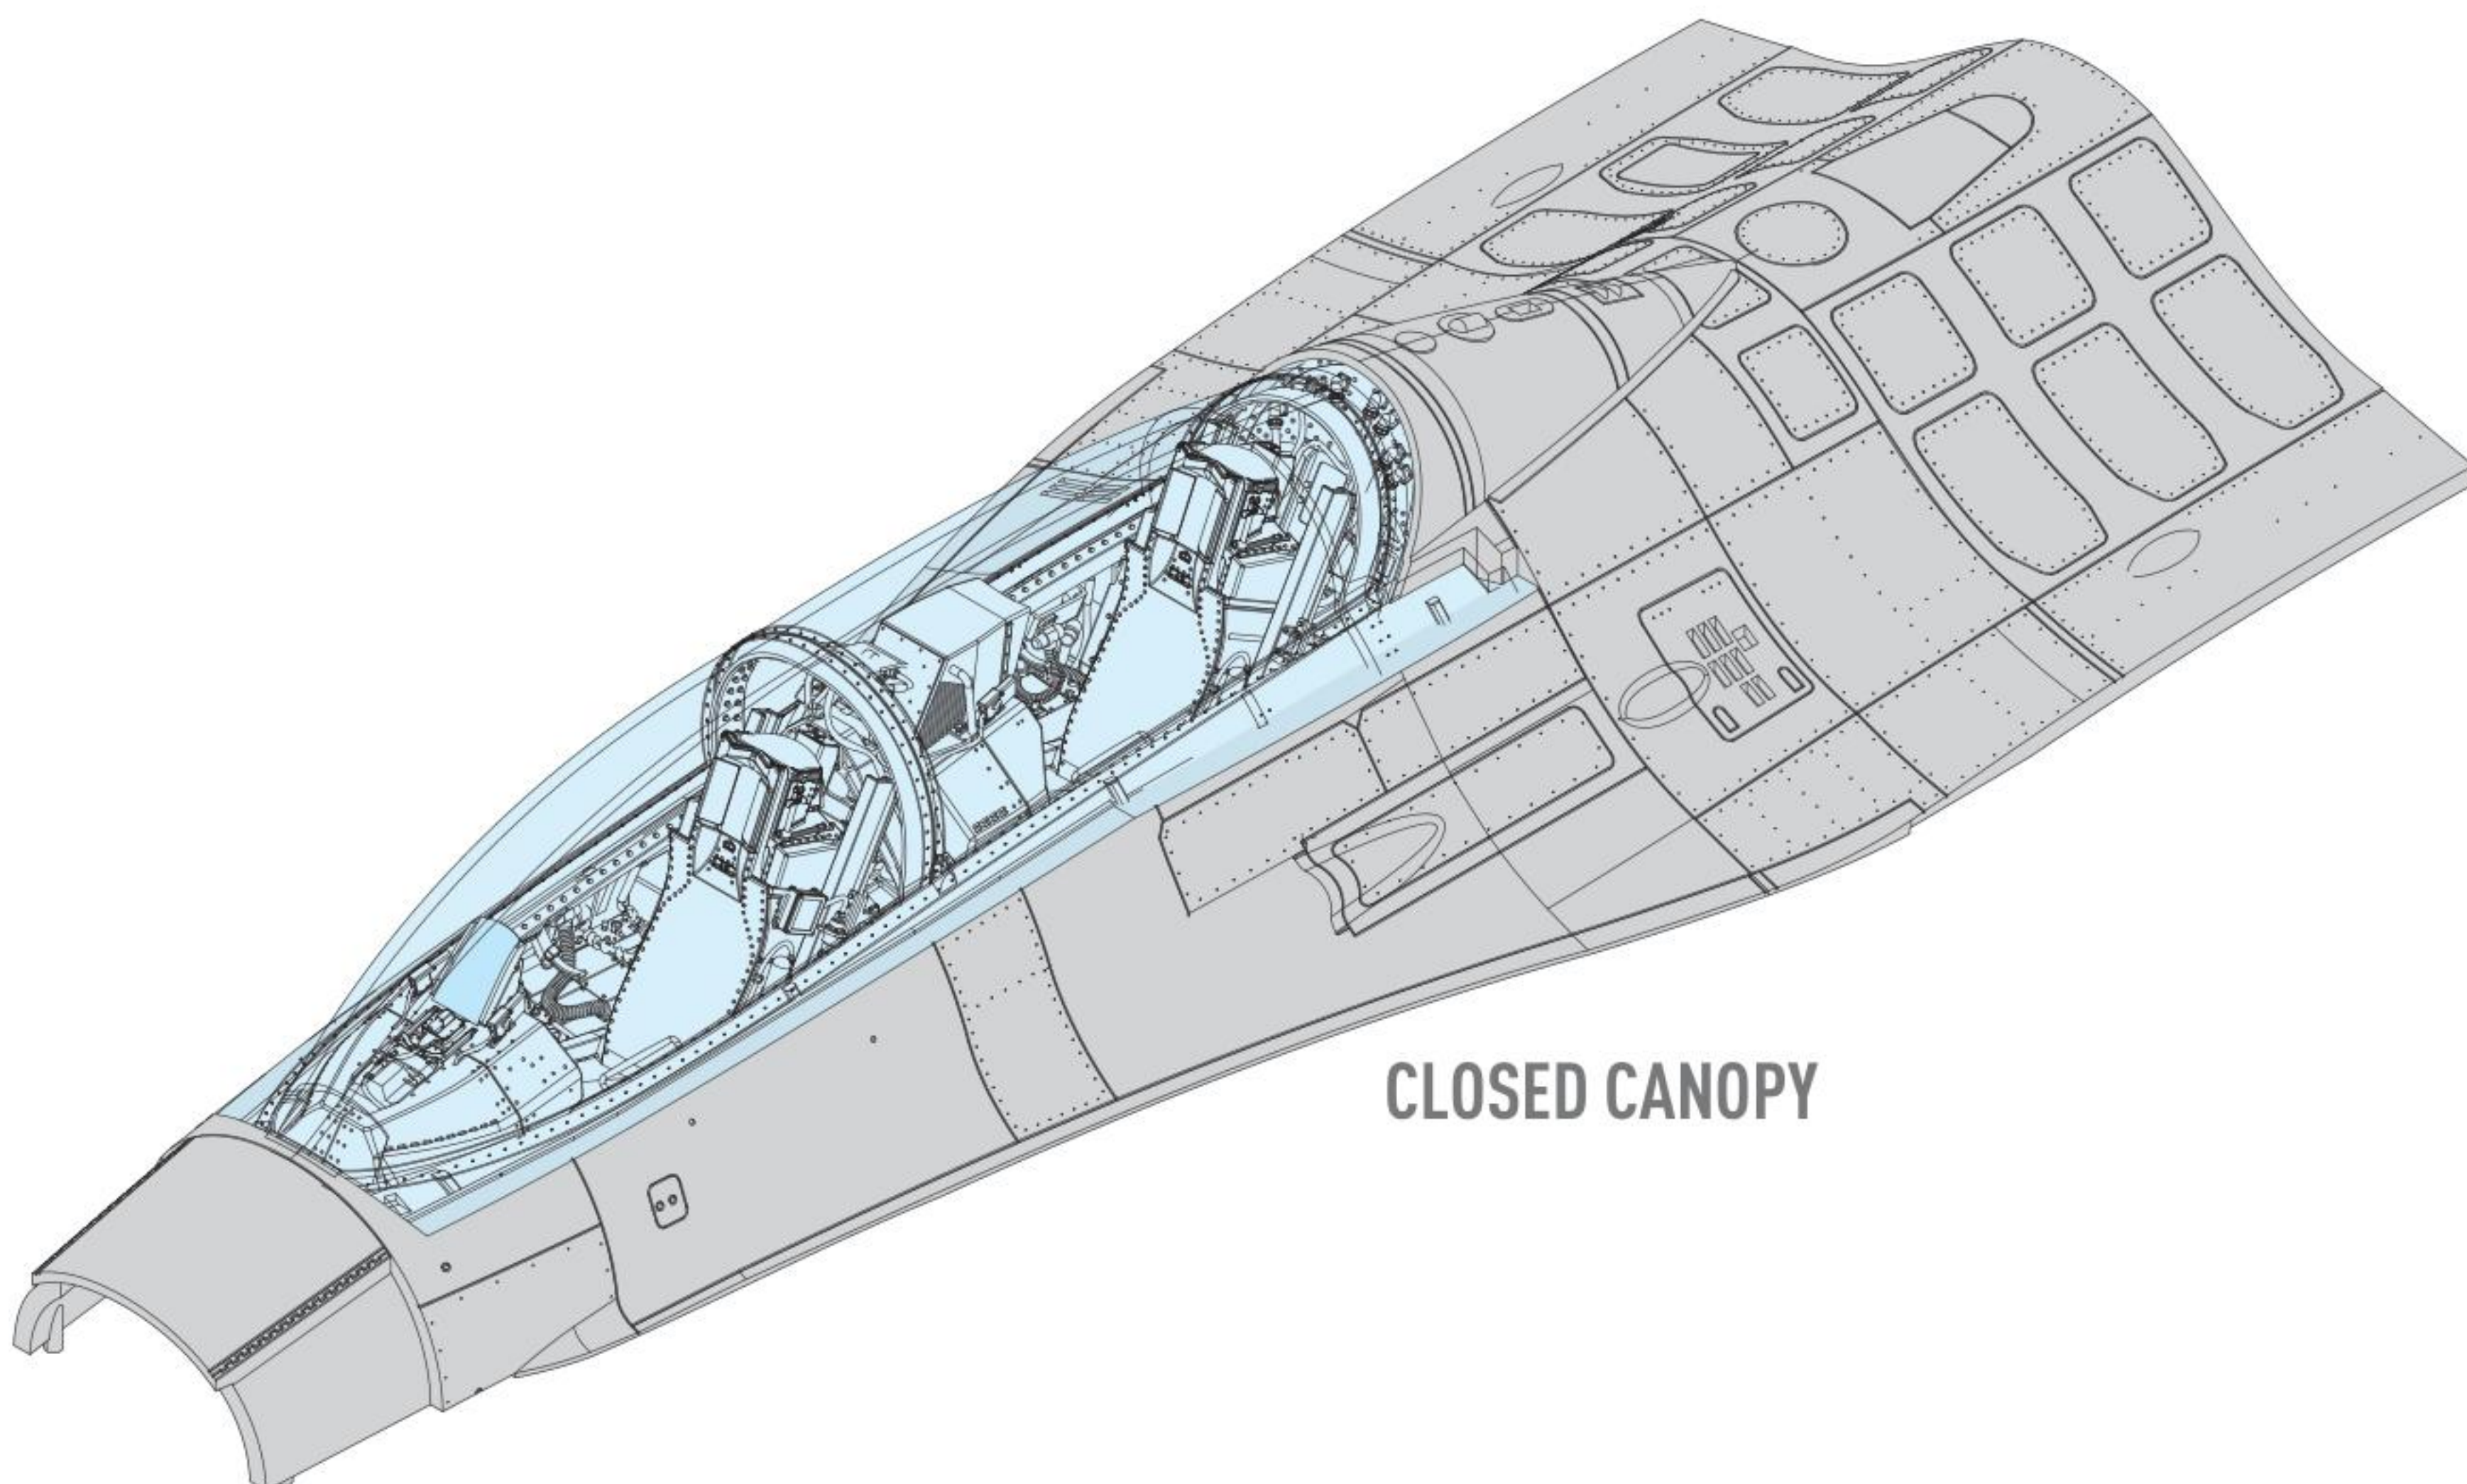

CLOSED CANOPY

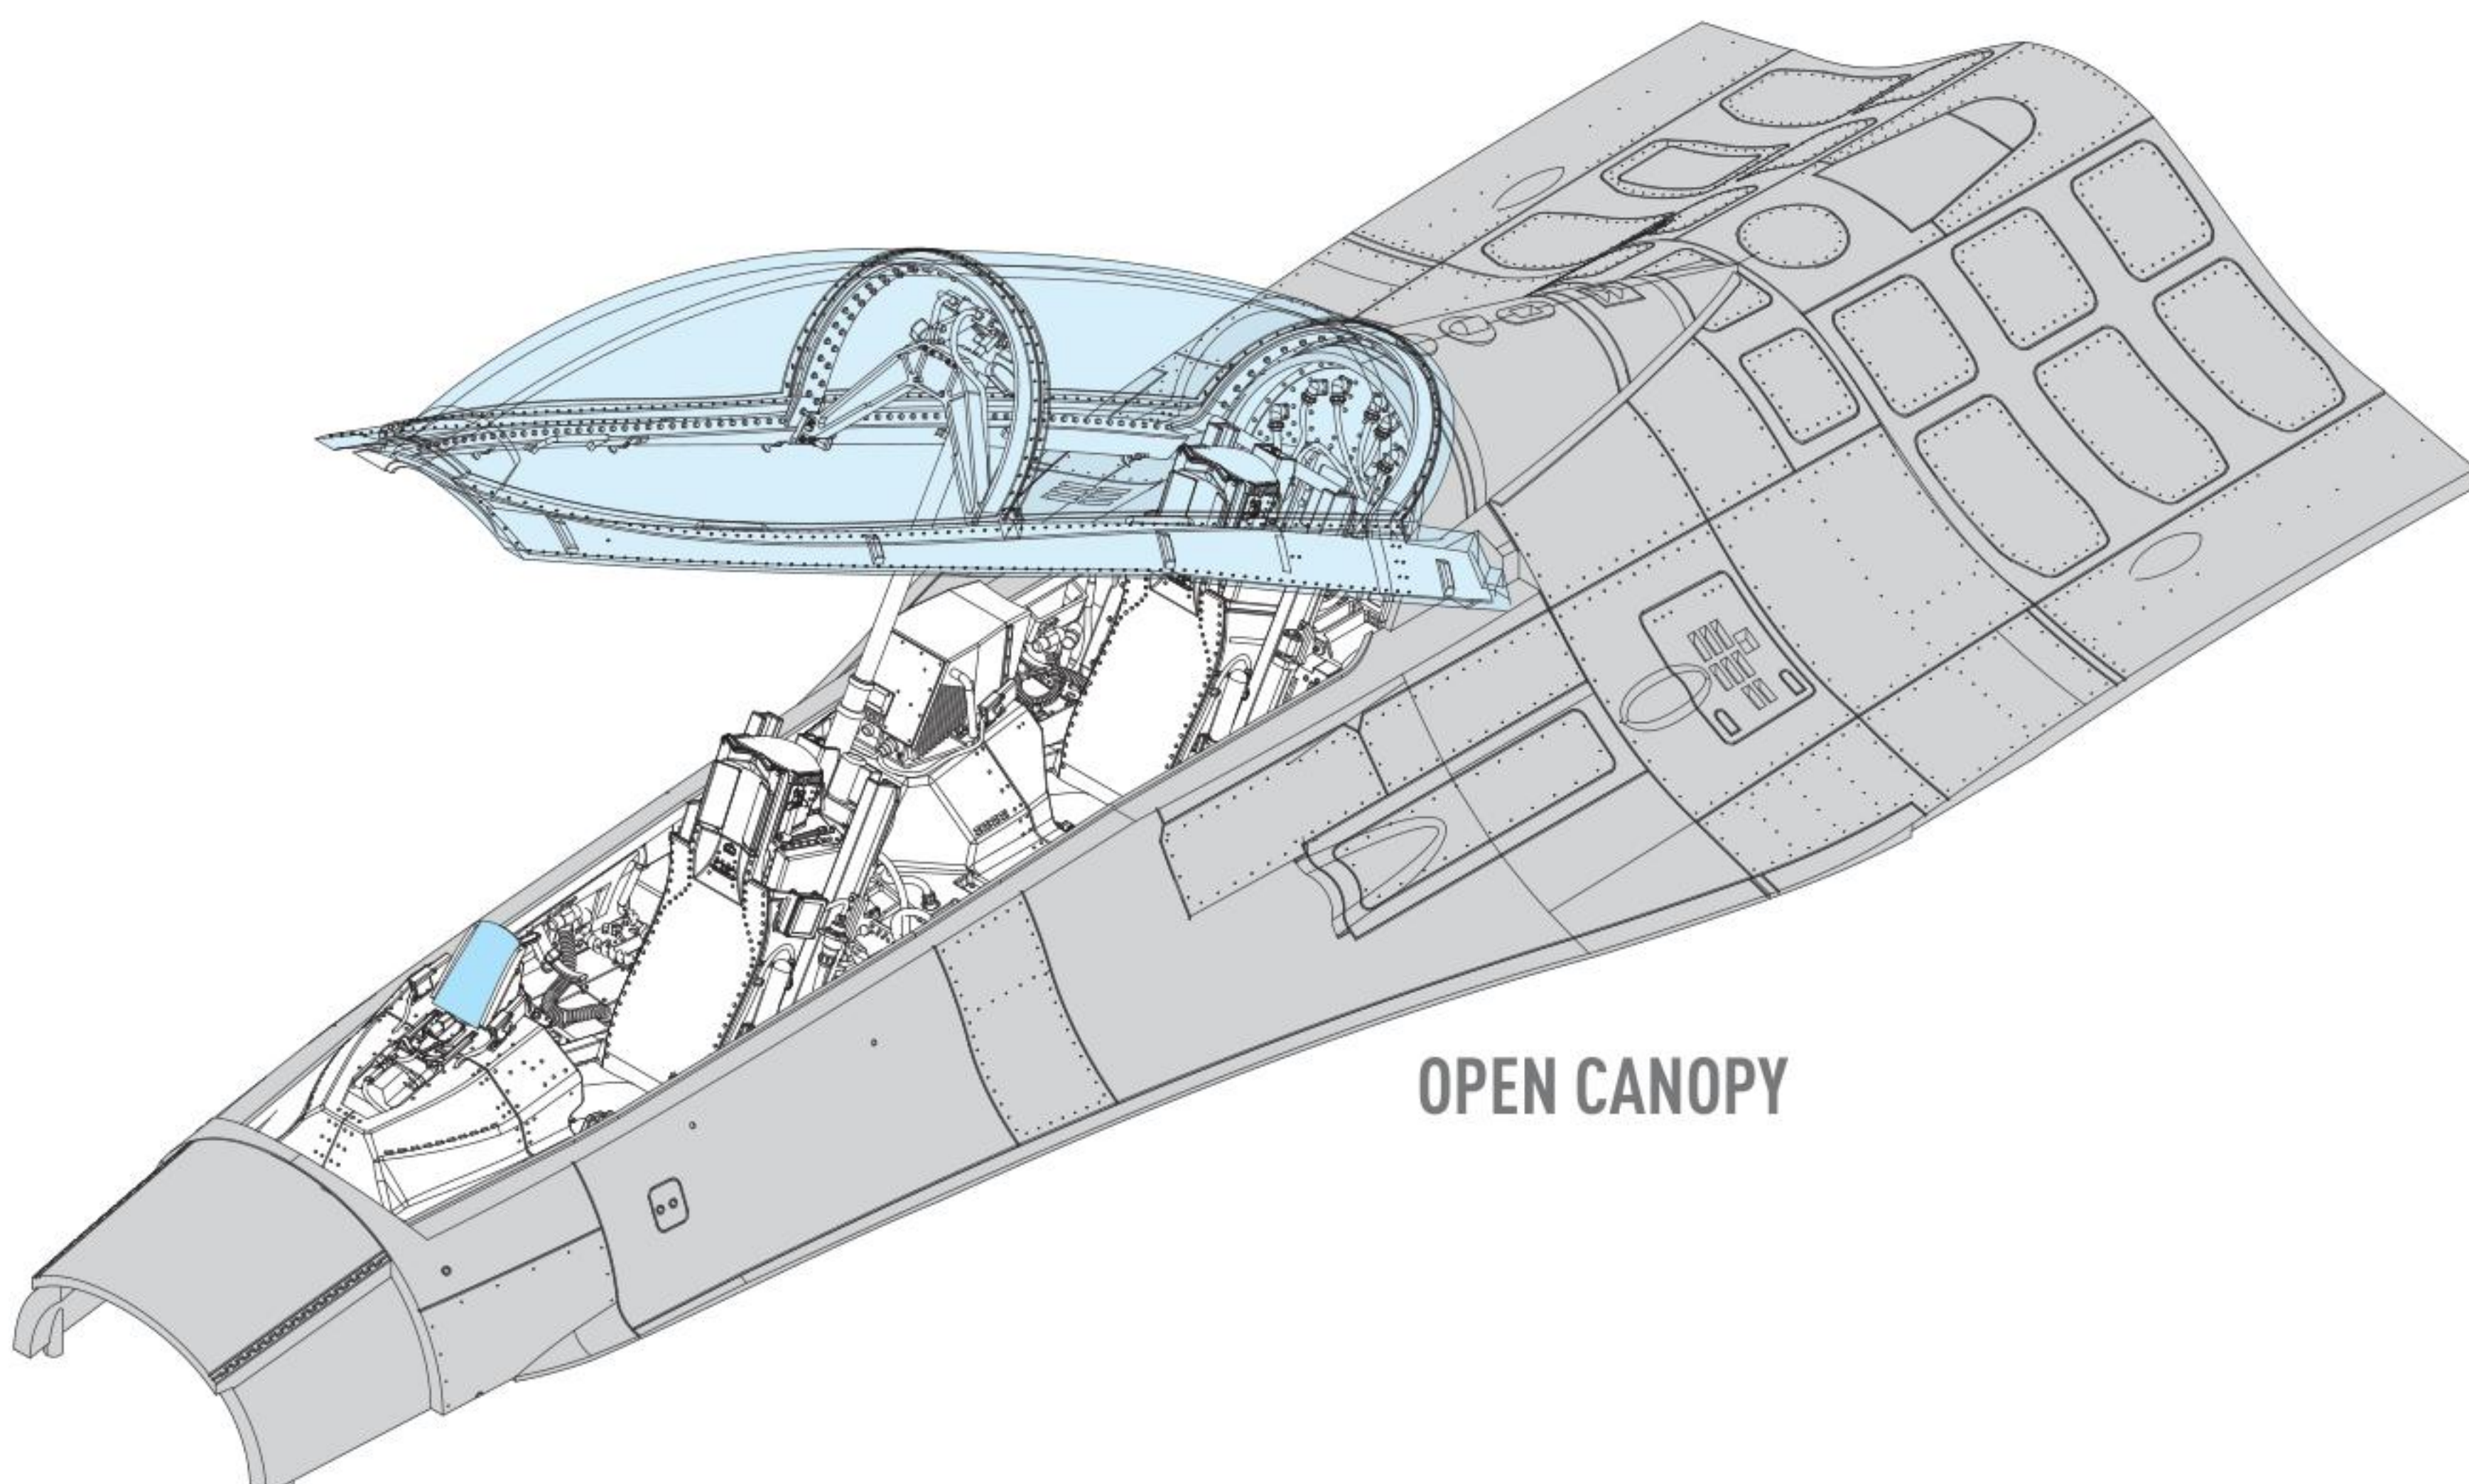

OPEN CANOPY

DECAL INSTRUCTION

FRD & AFT SEAT

