


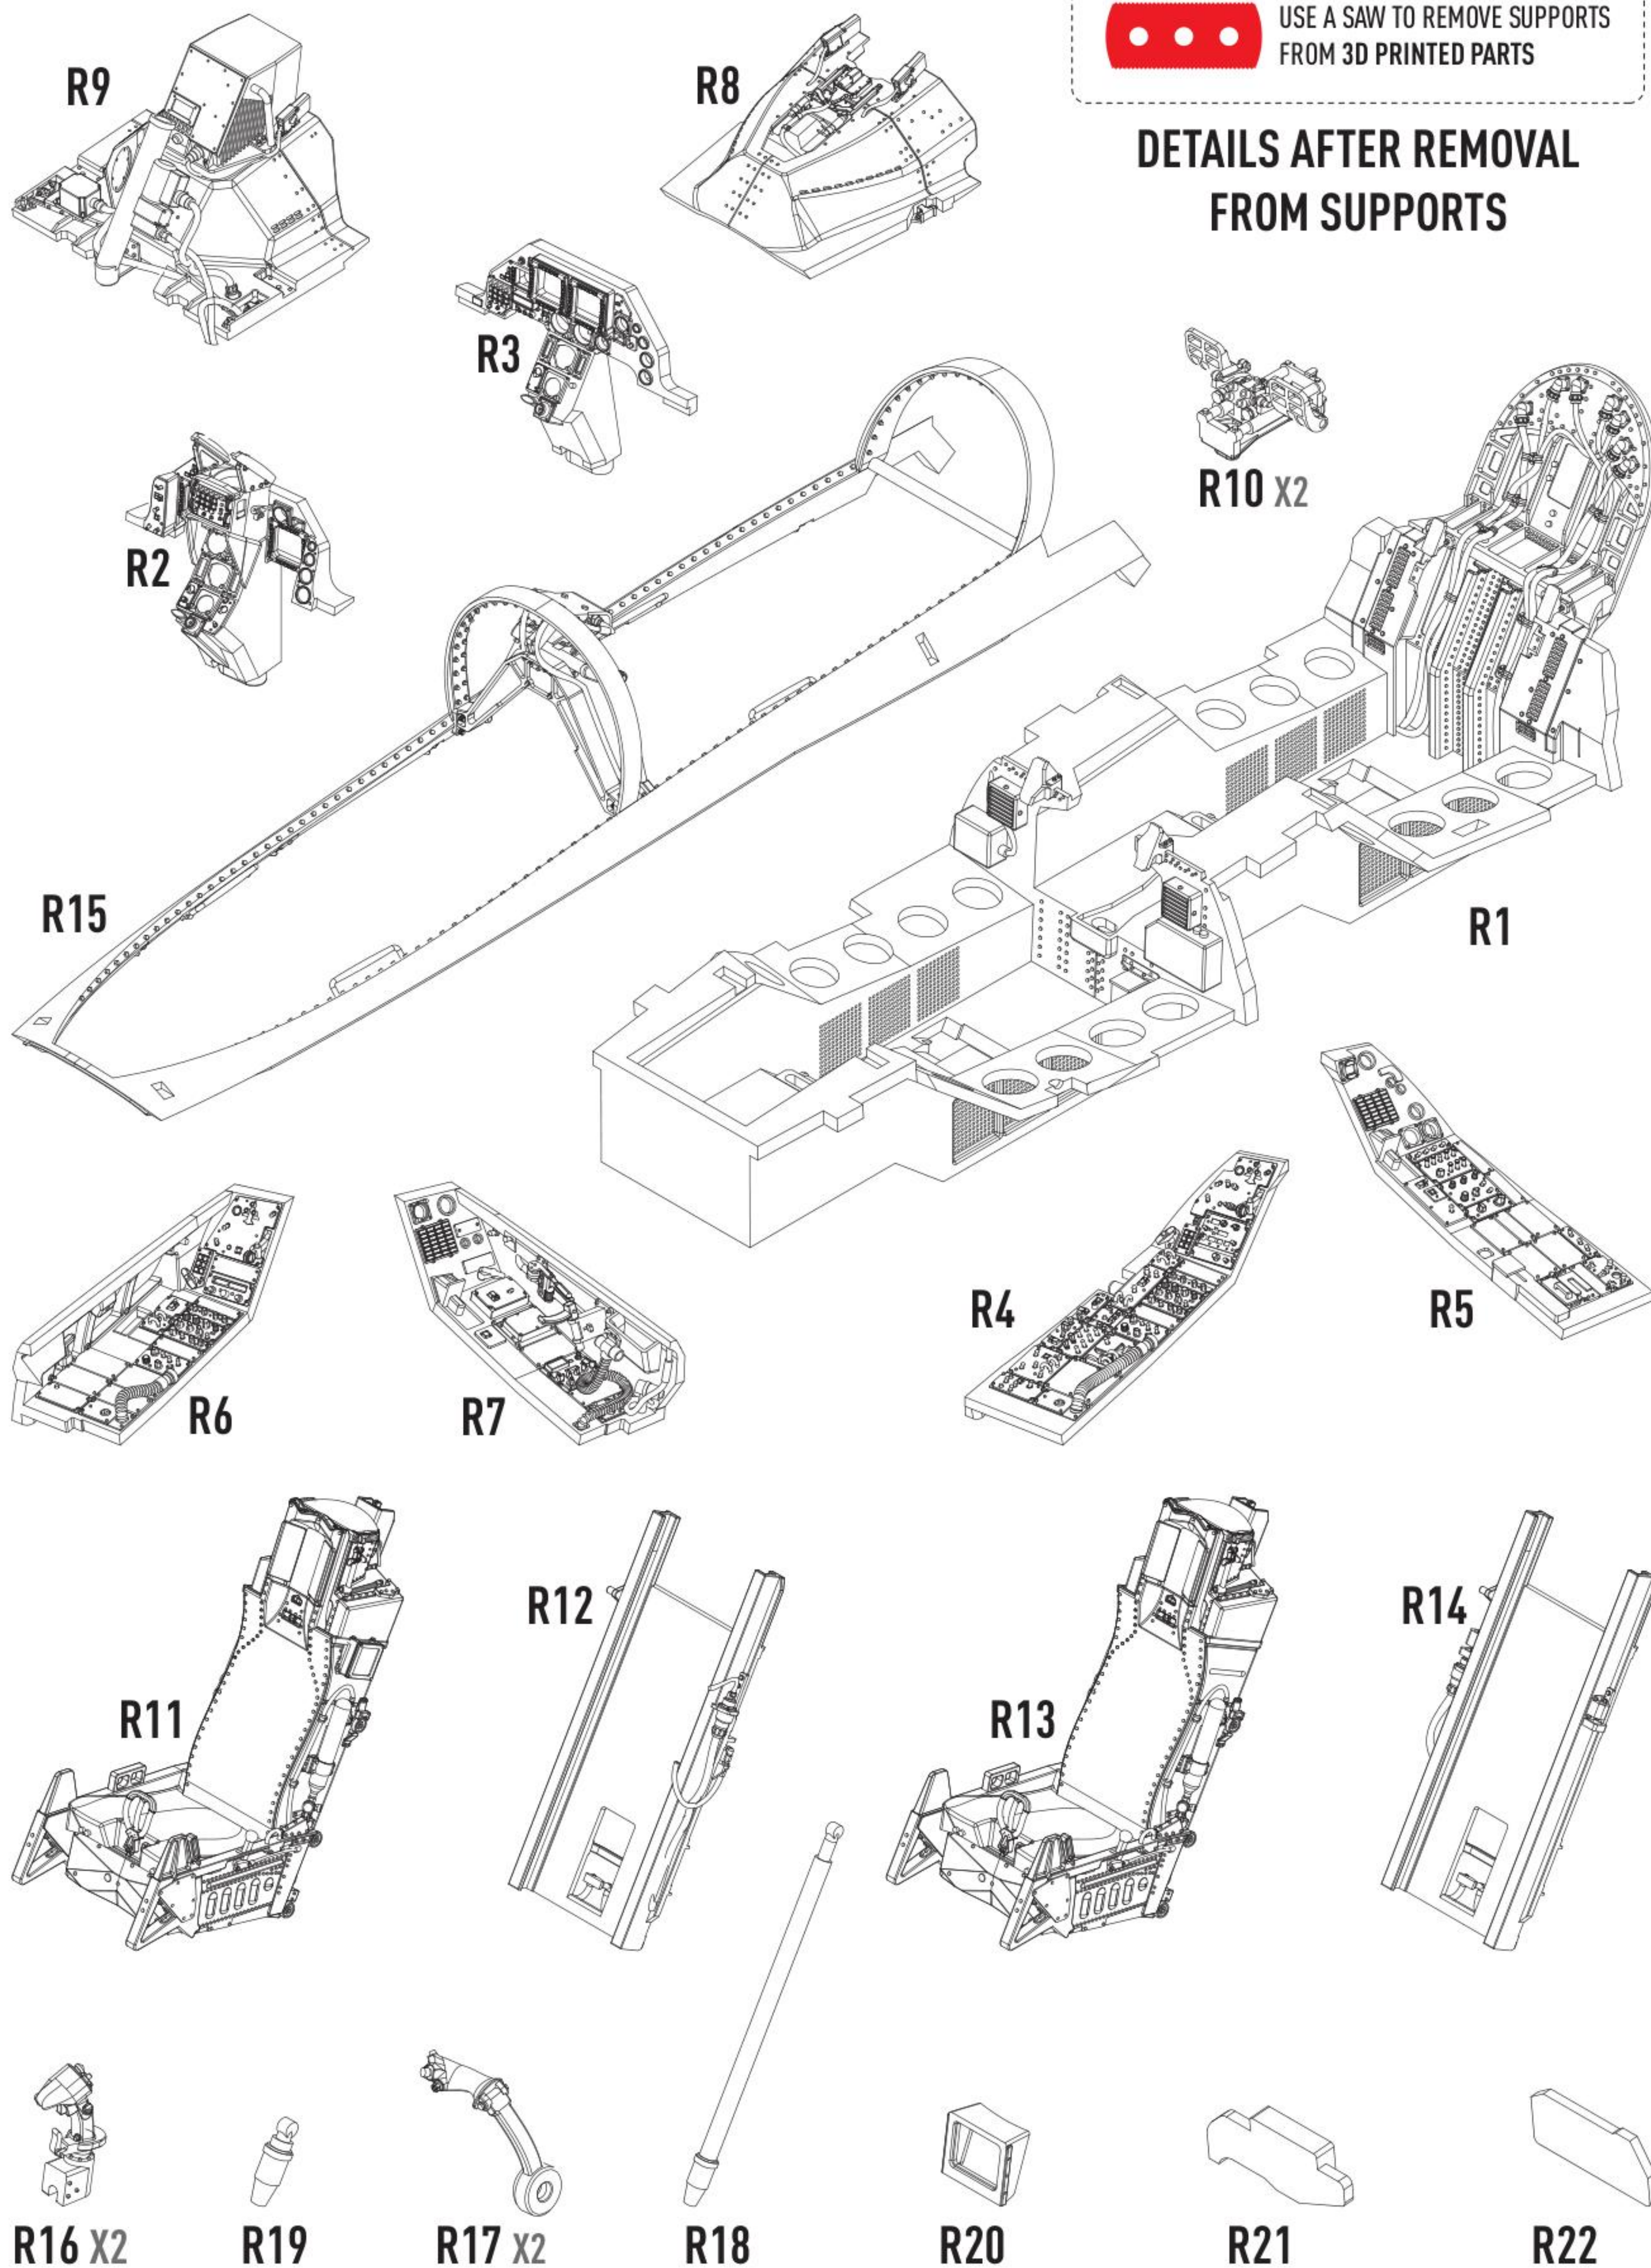




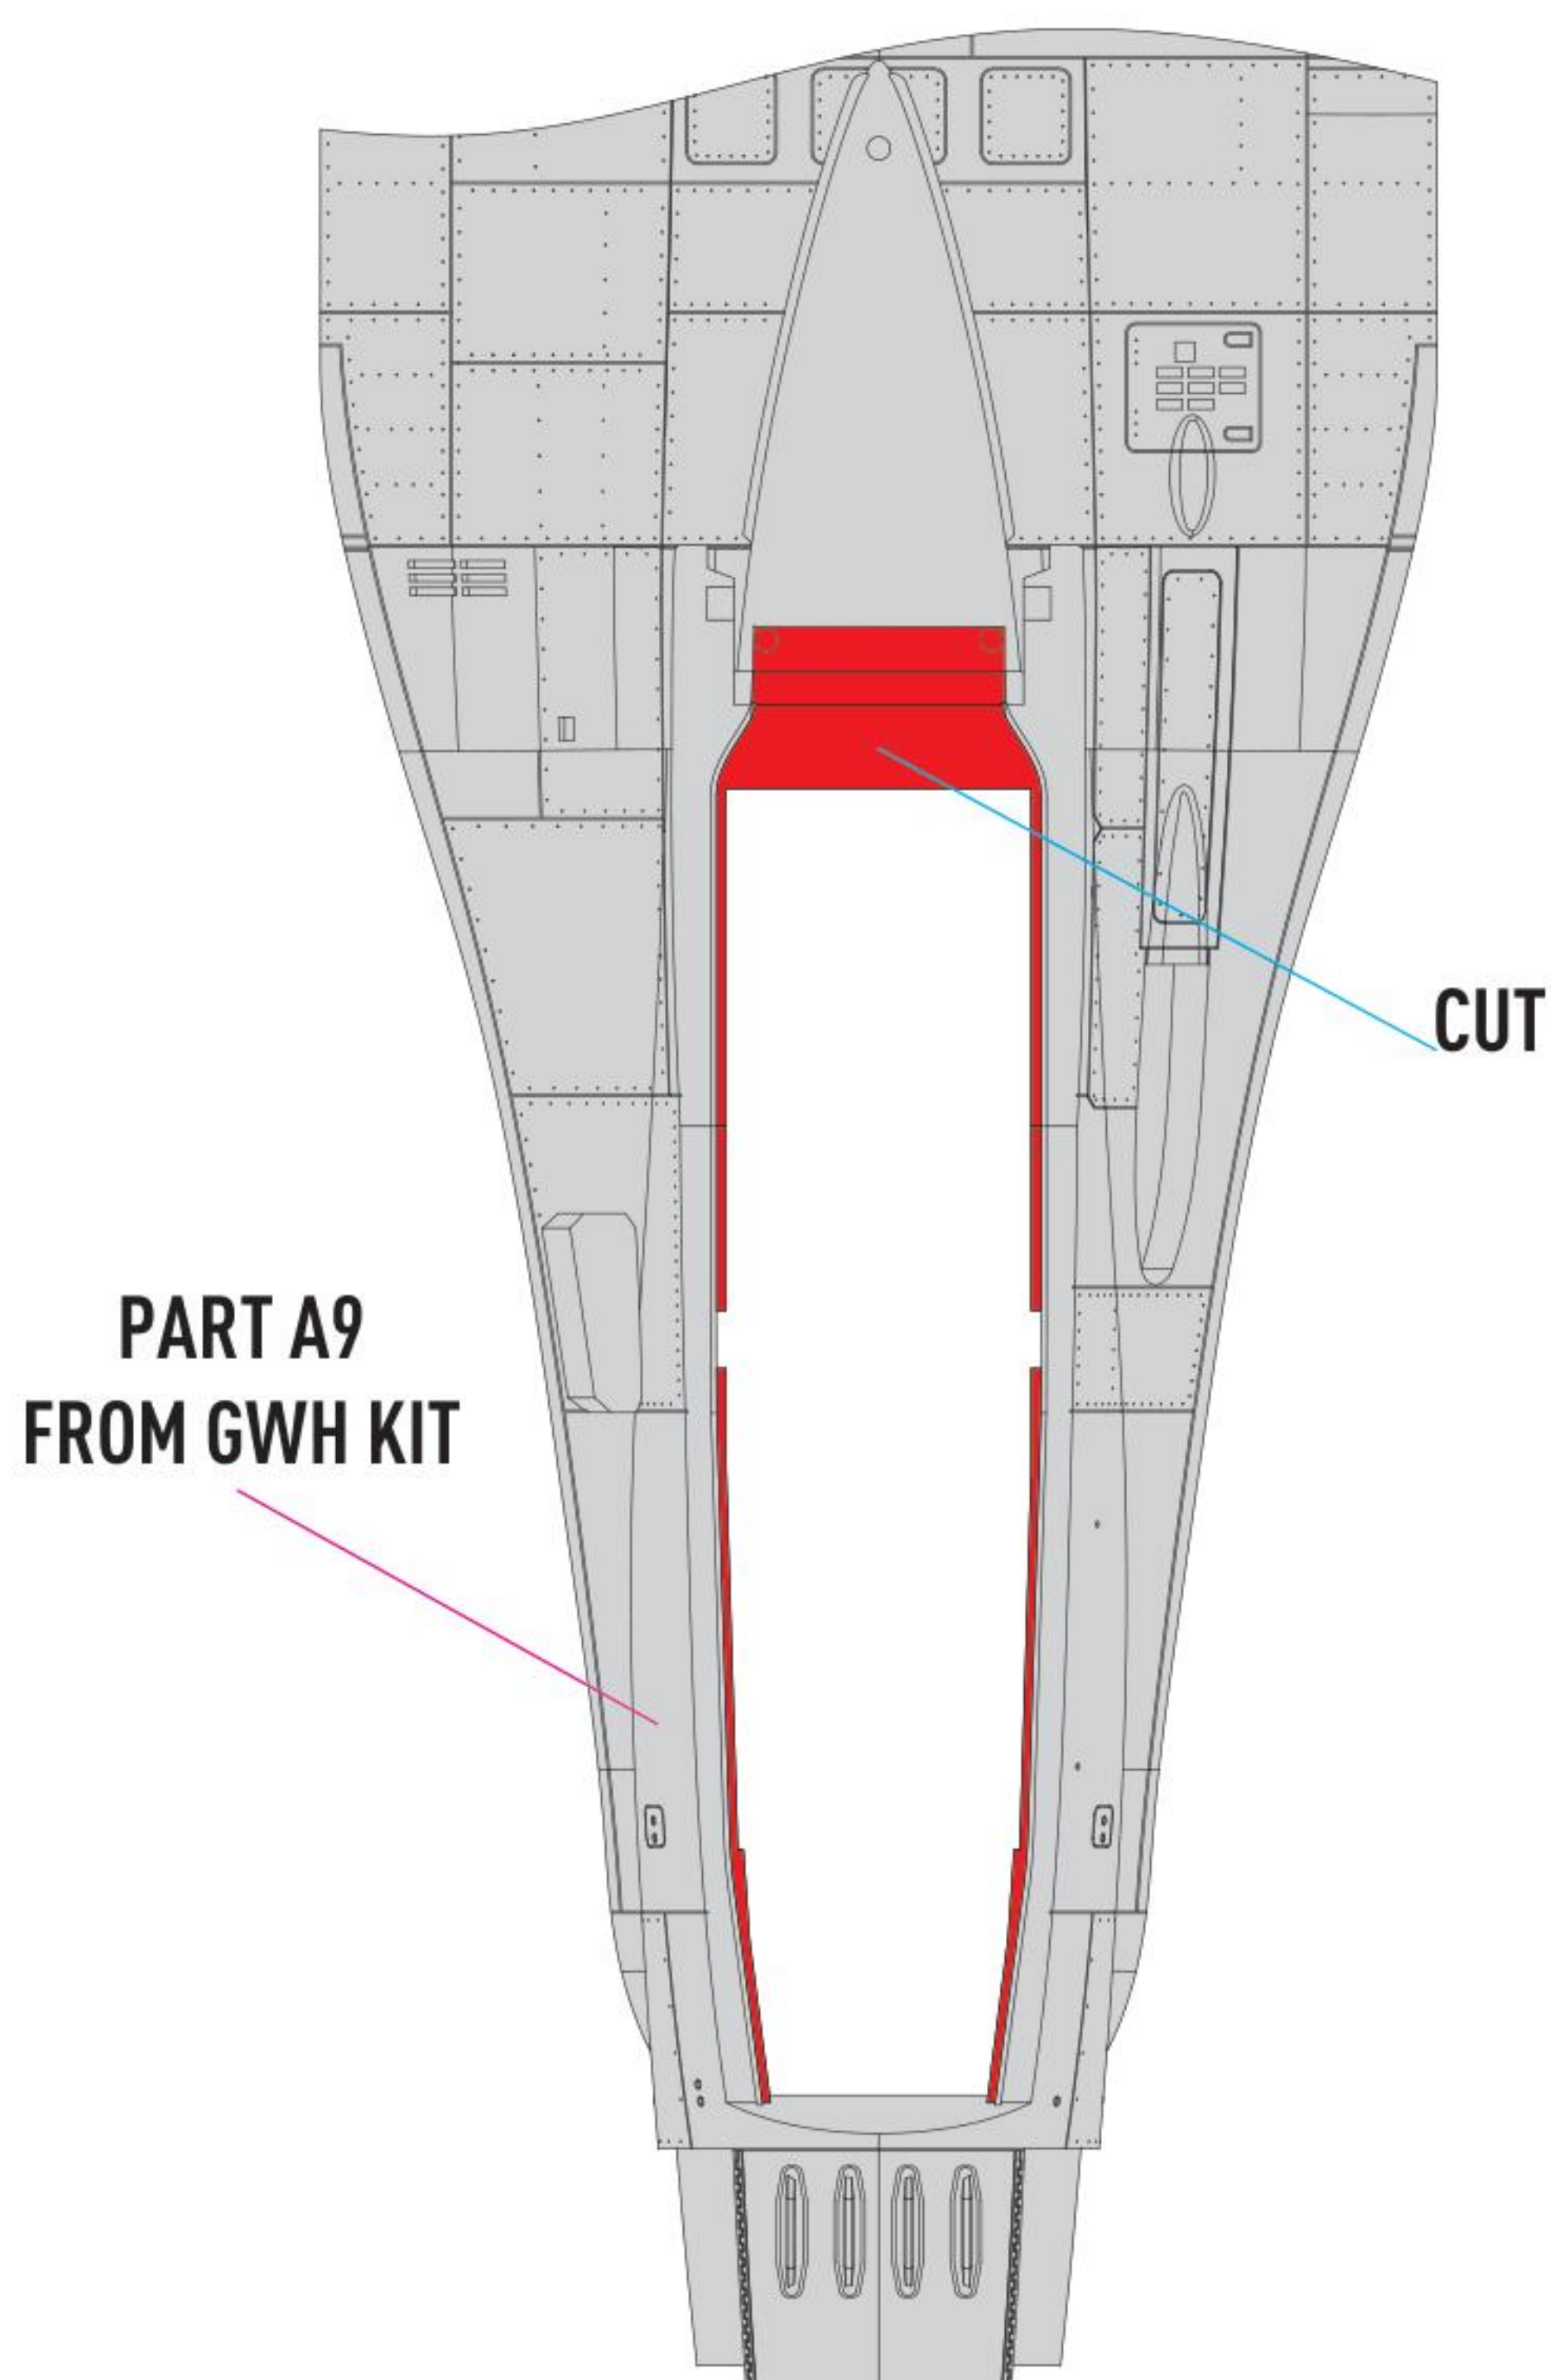


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

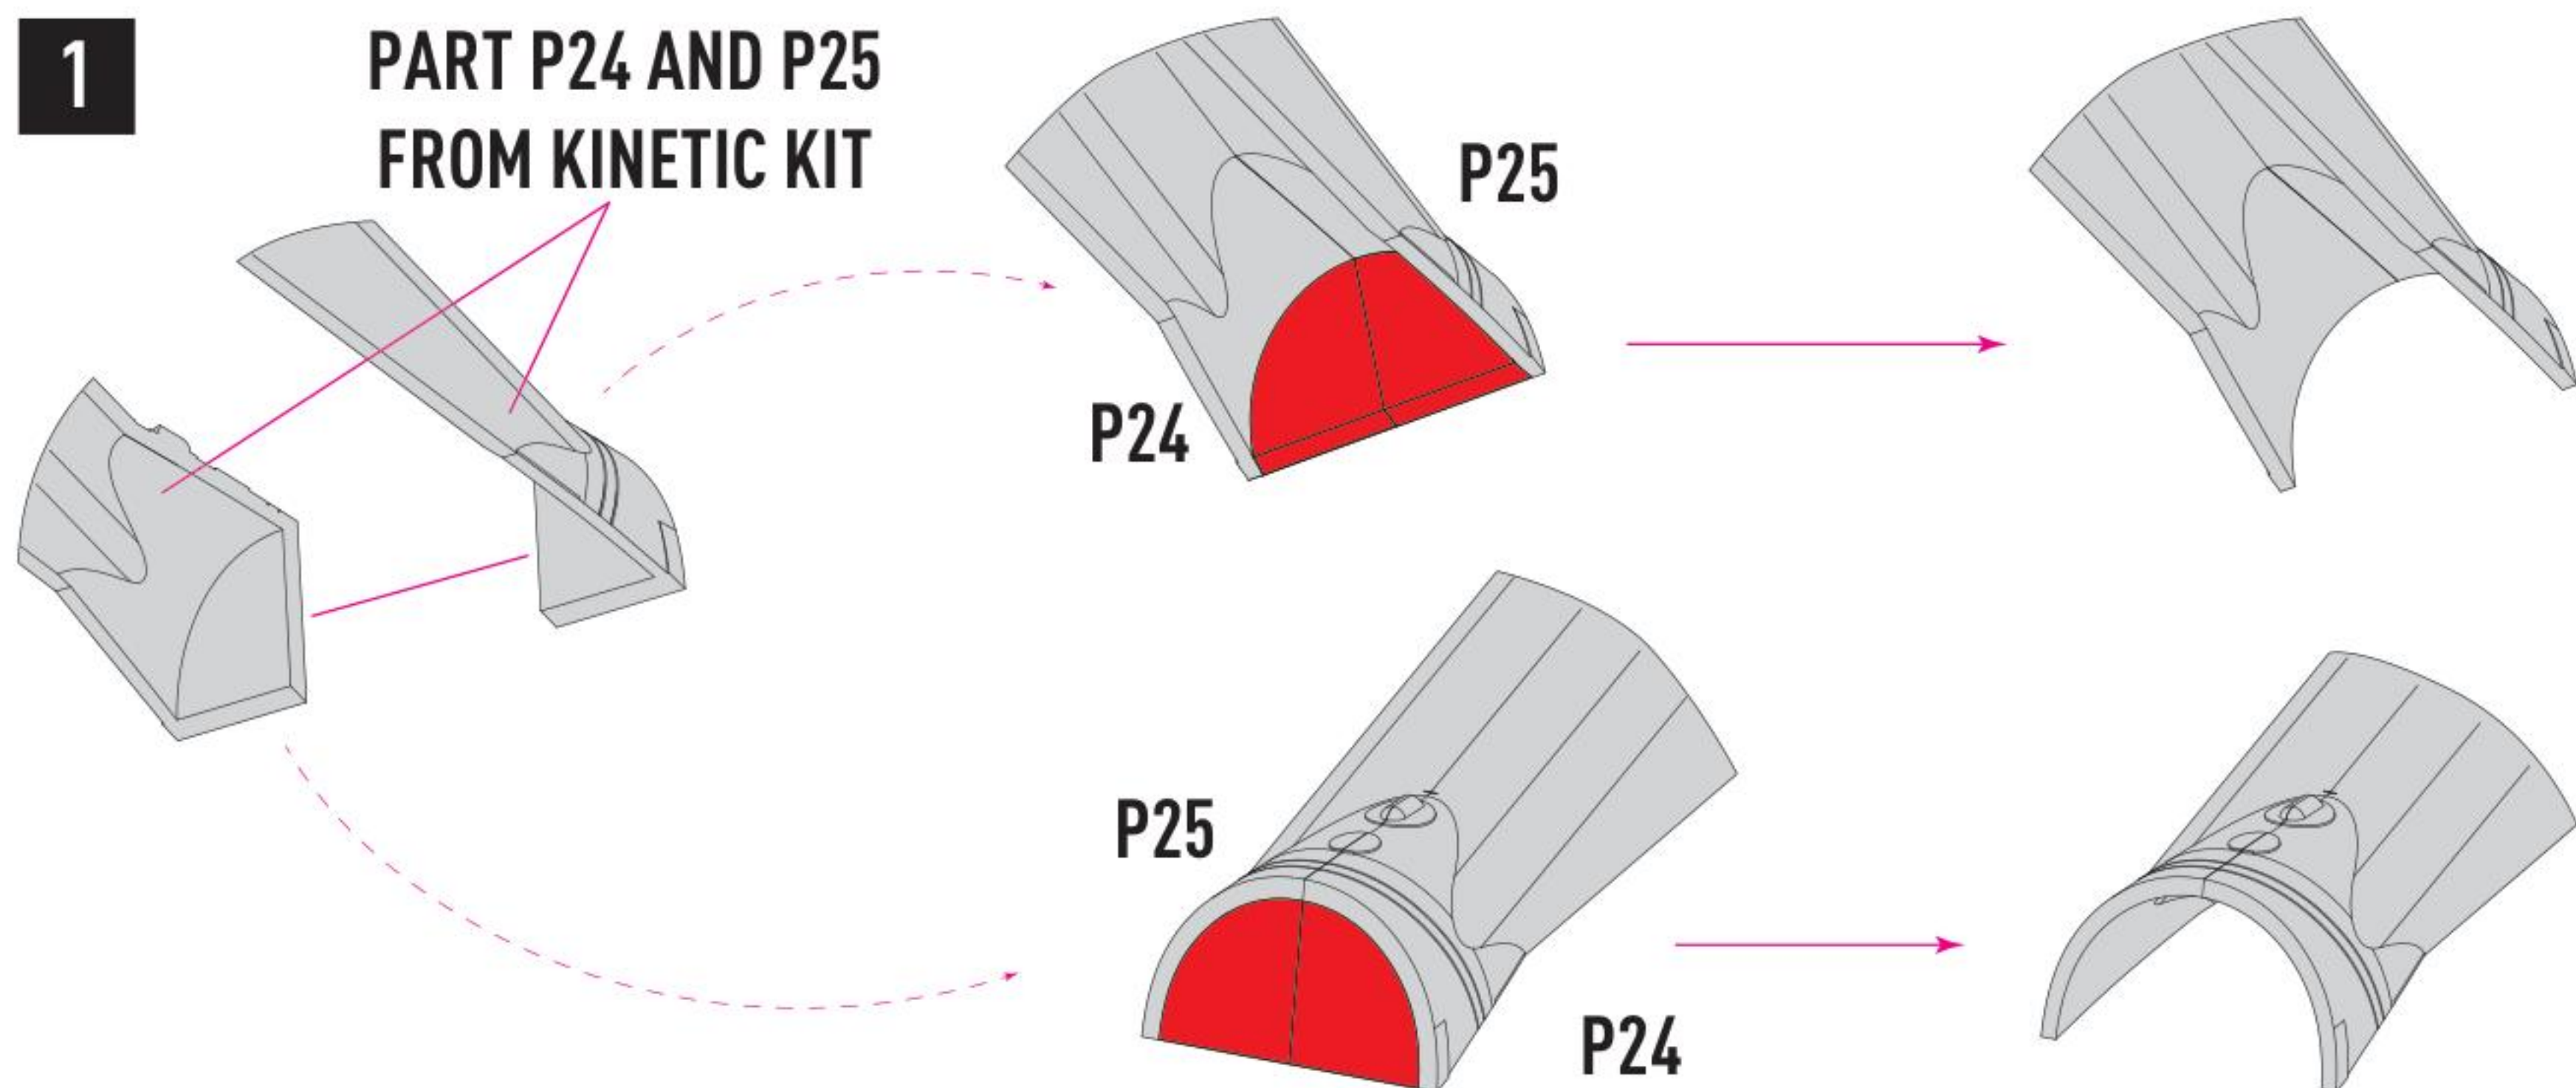

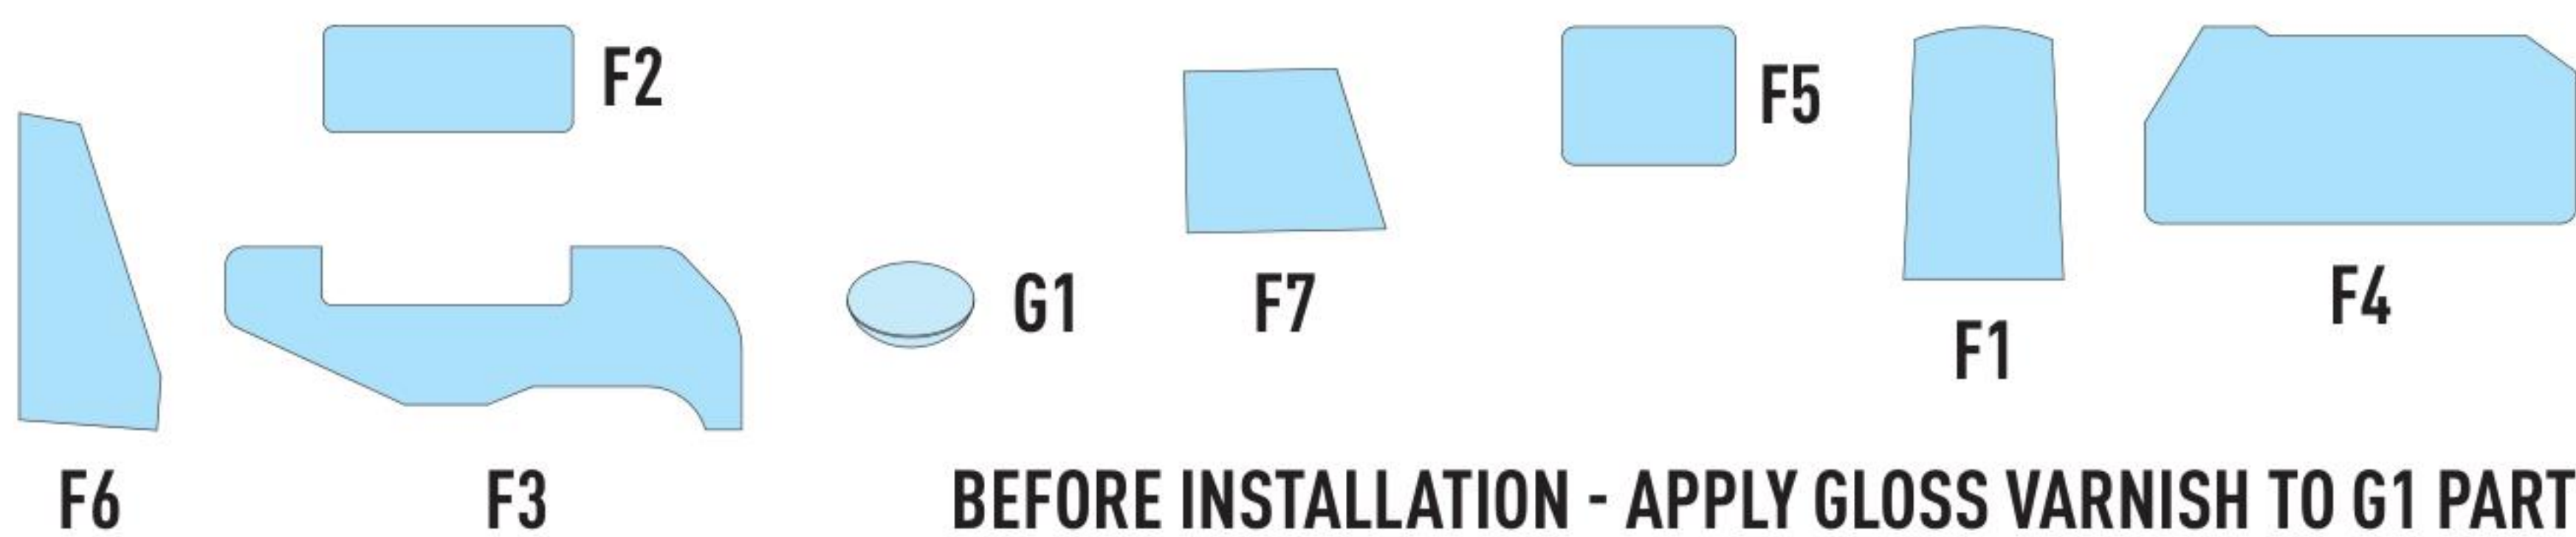


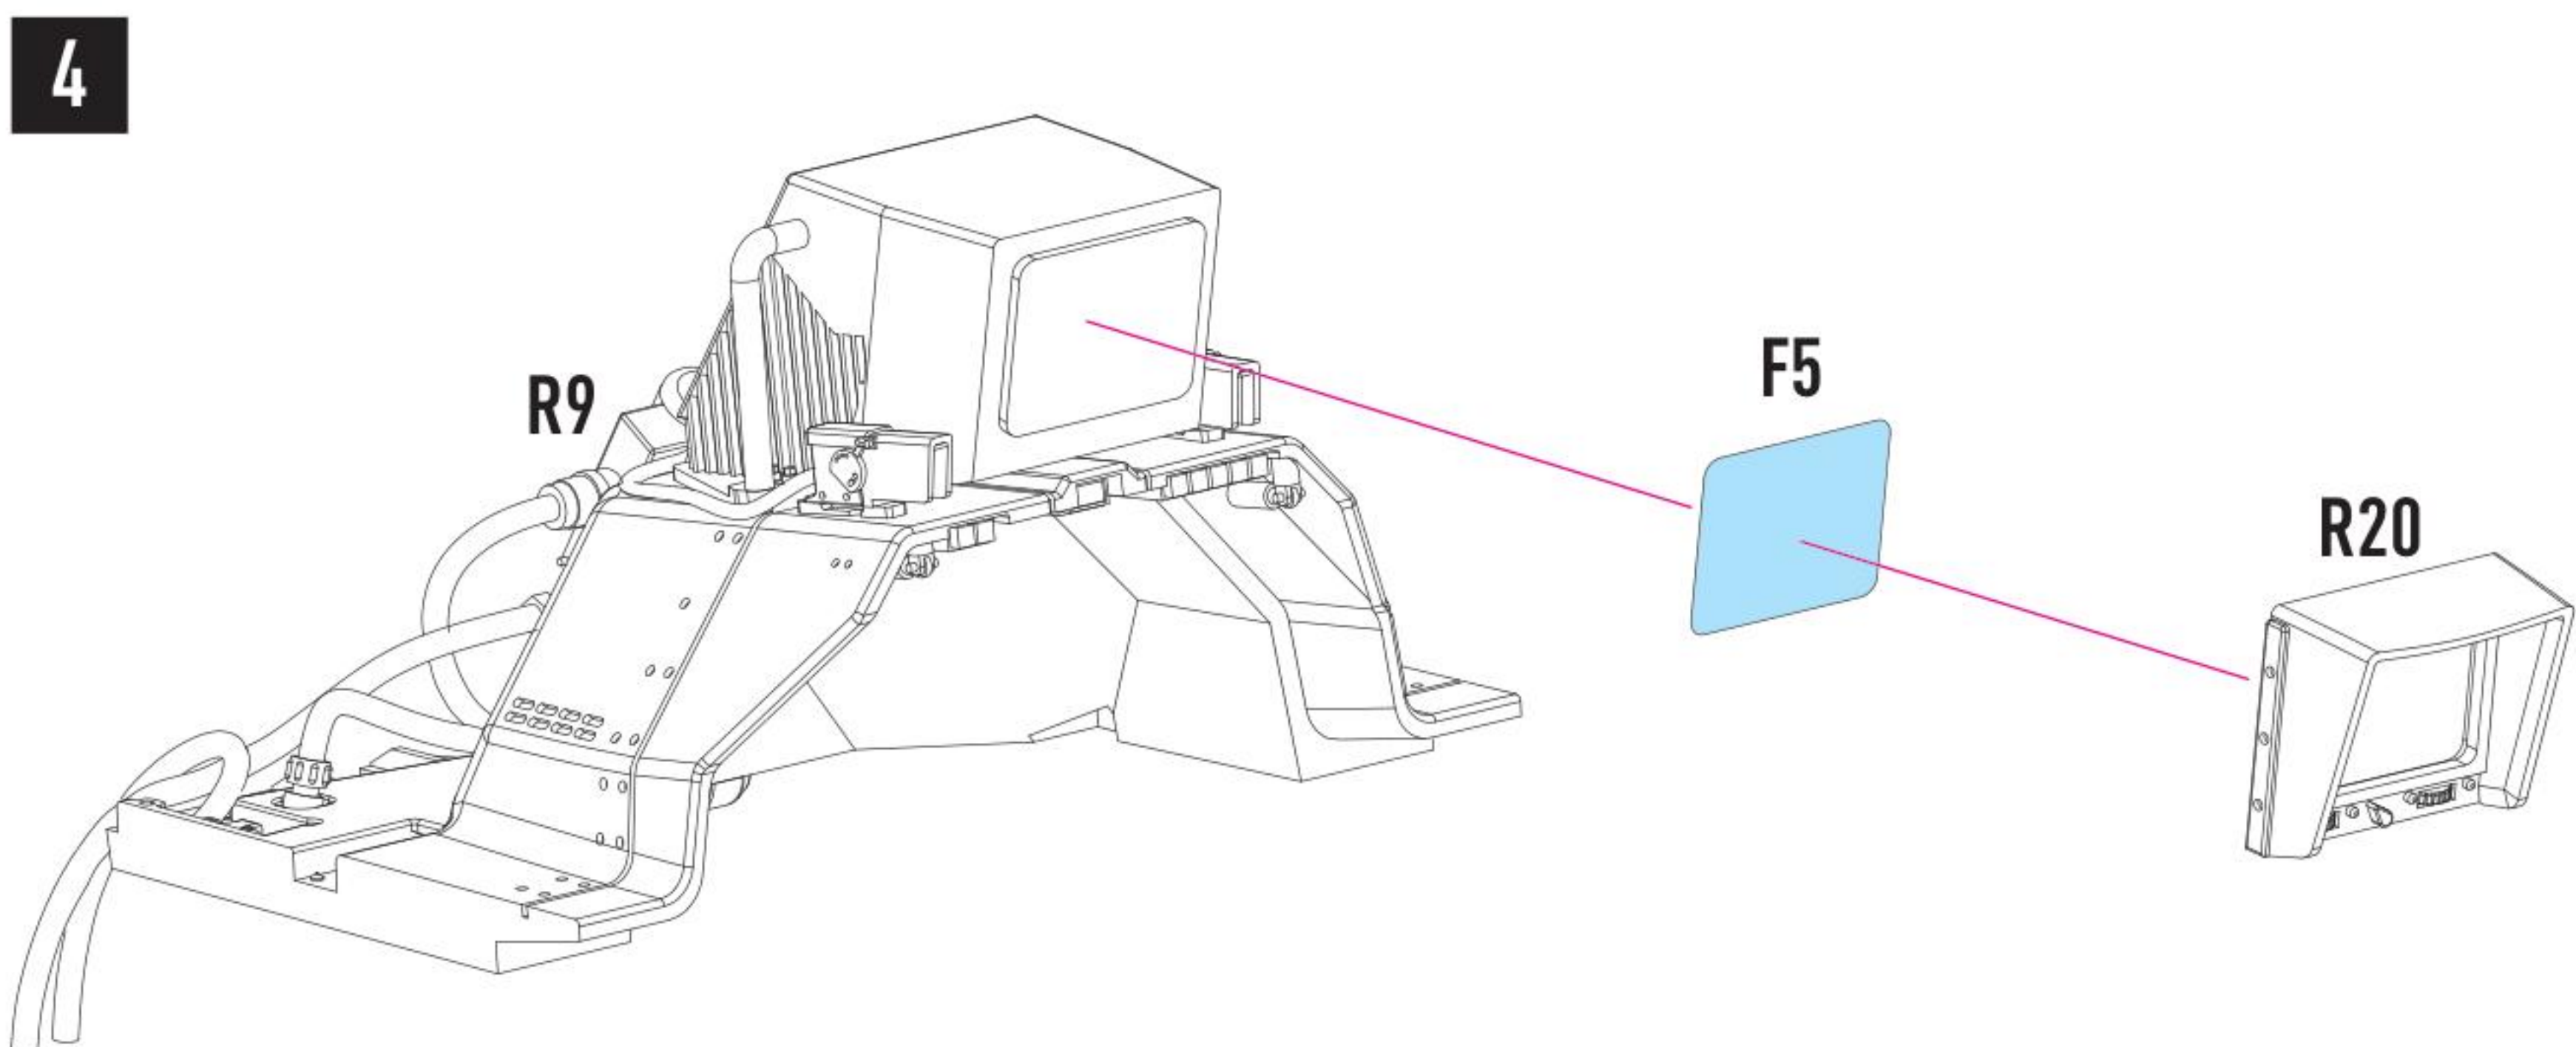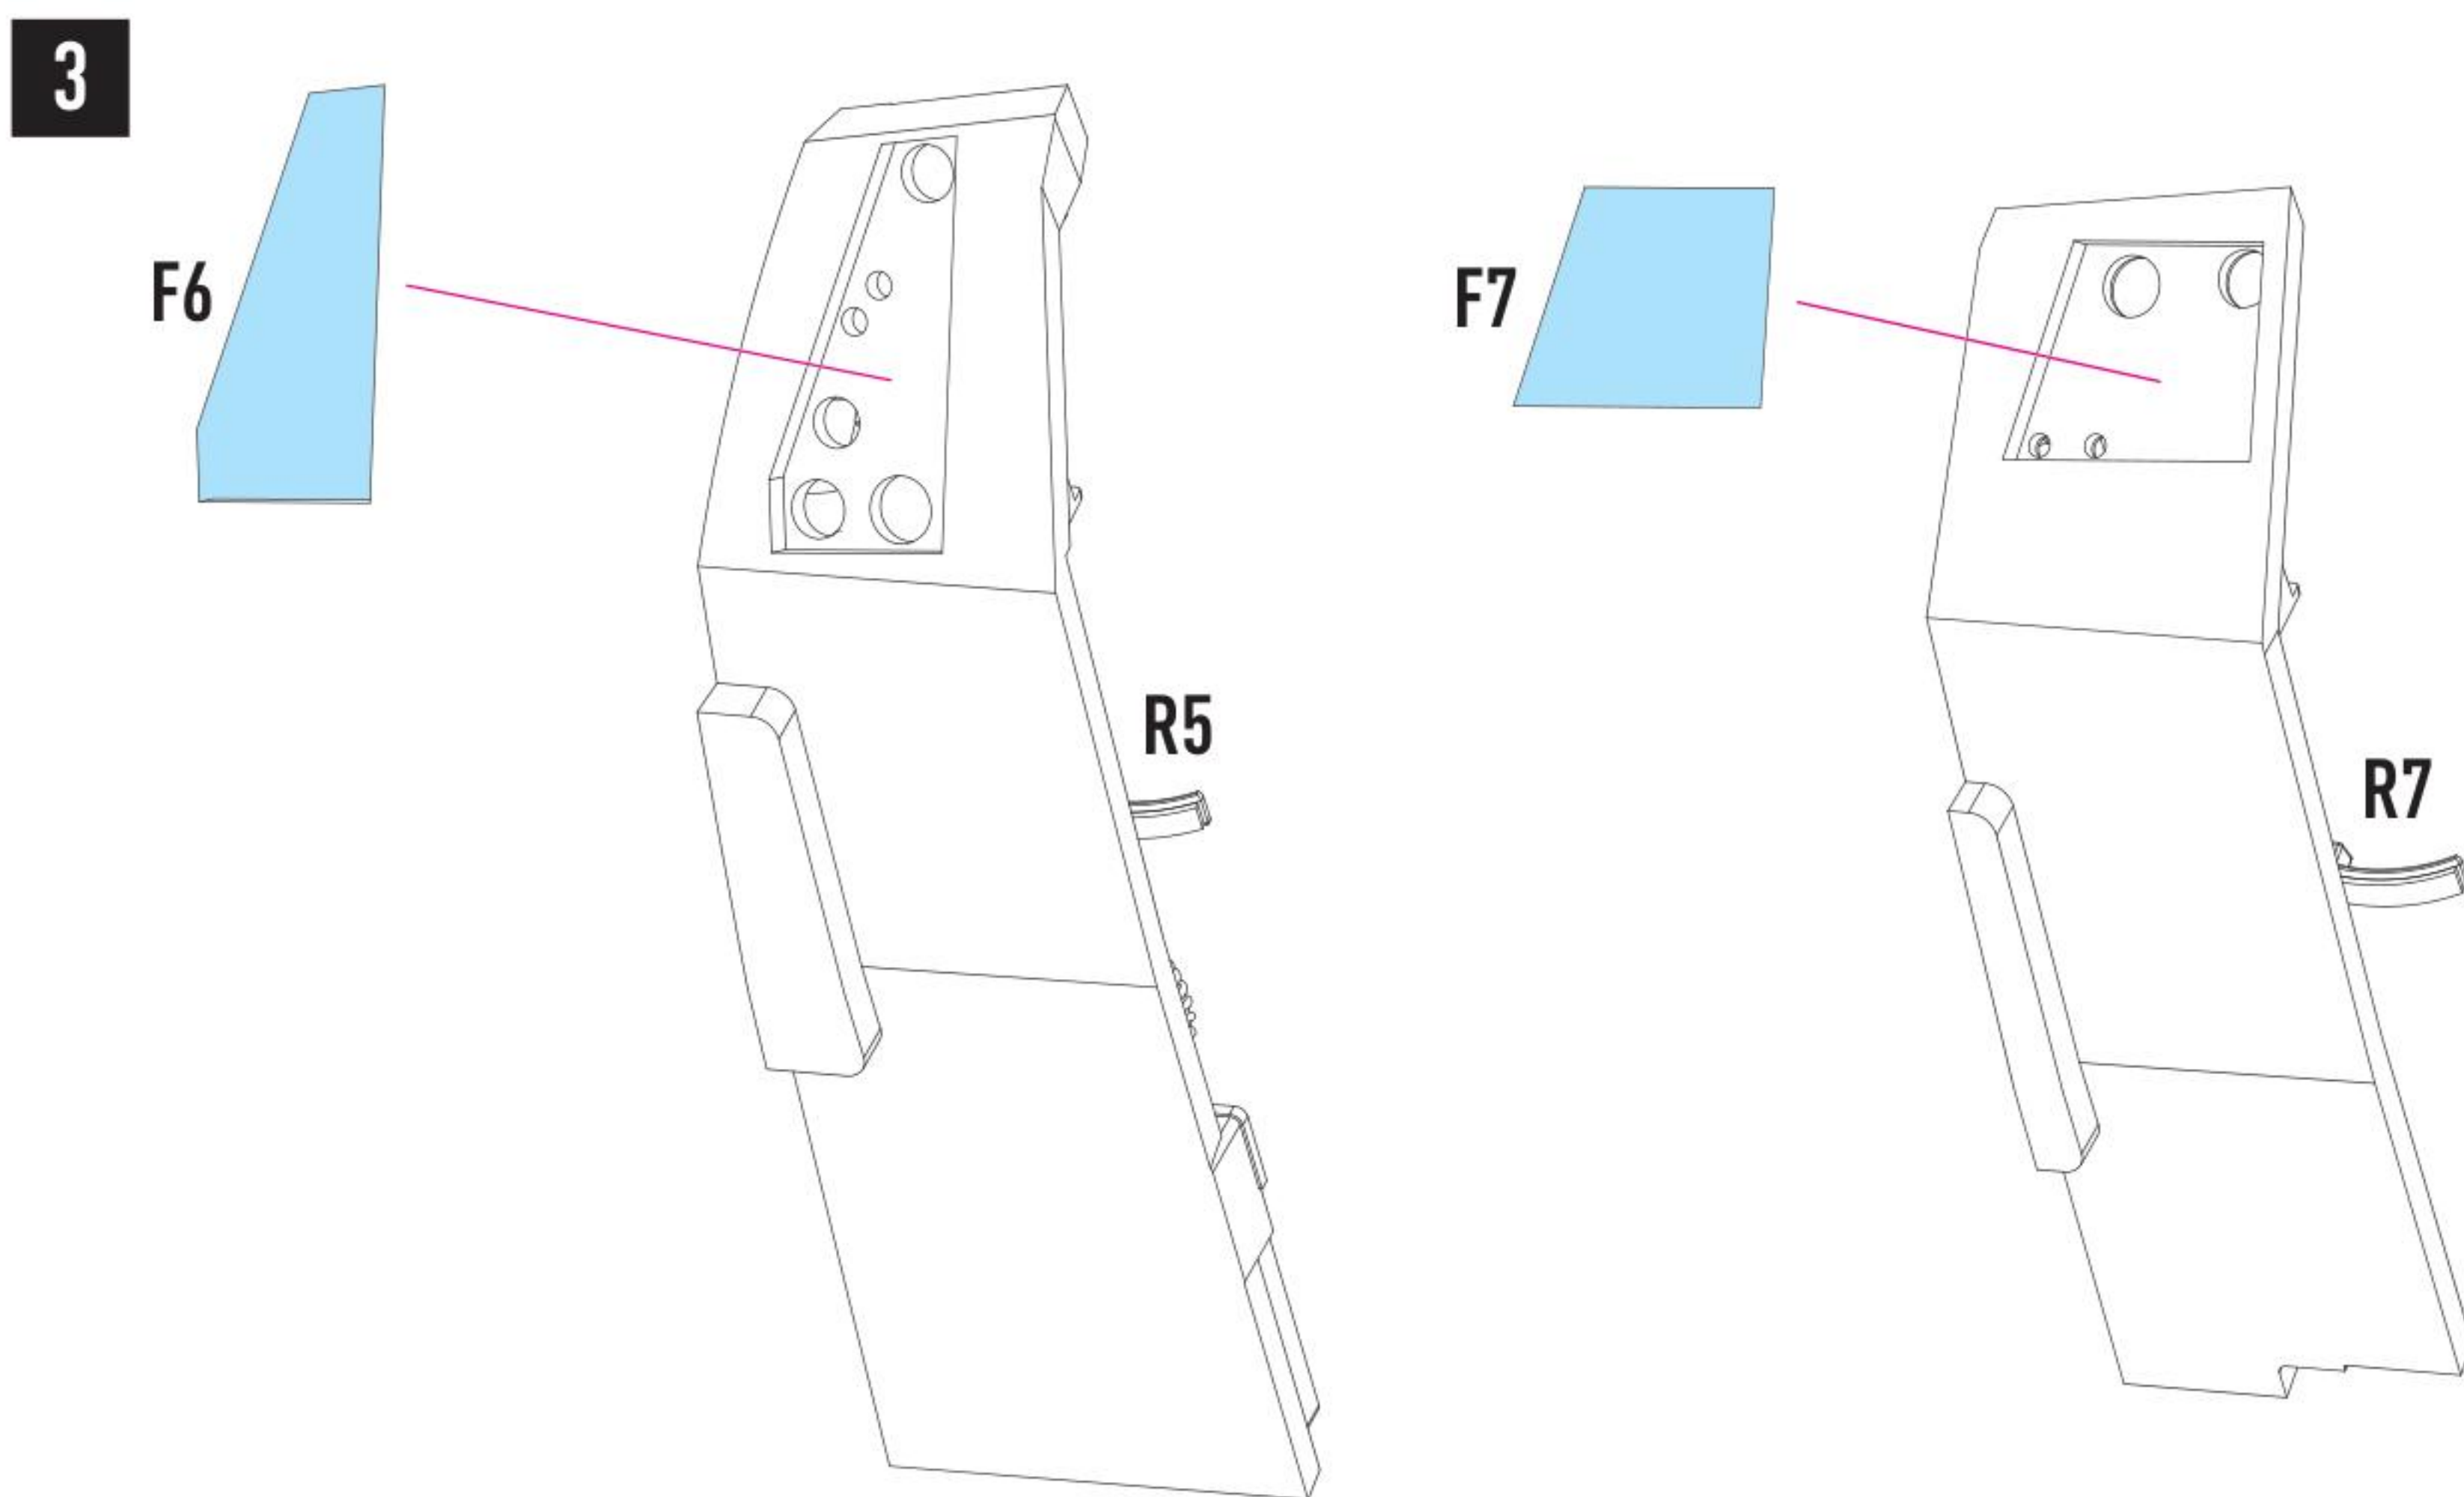
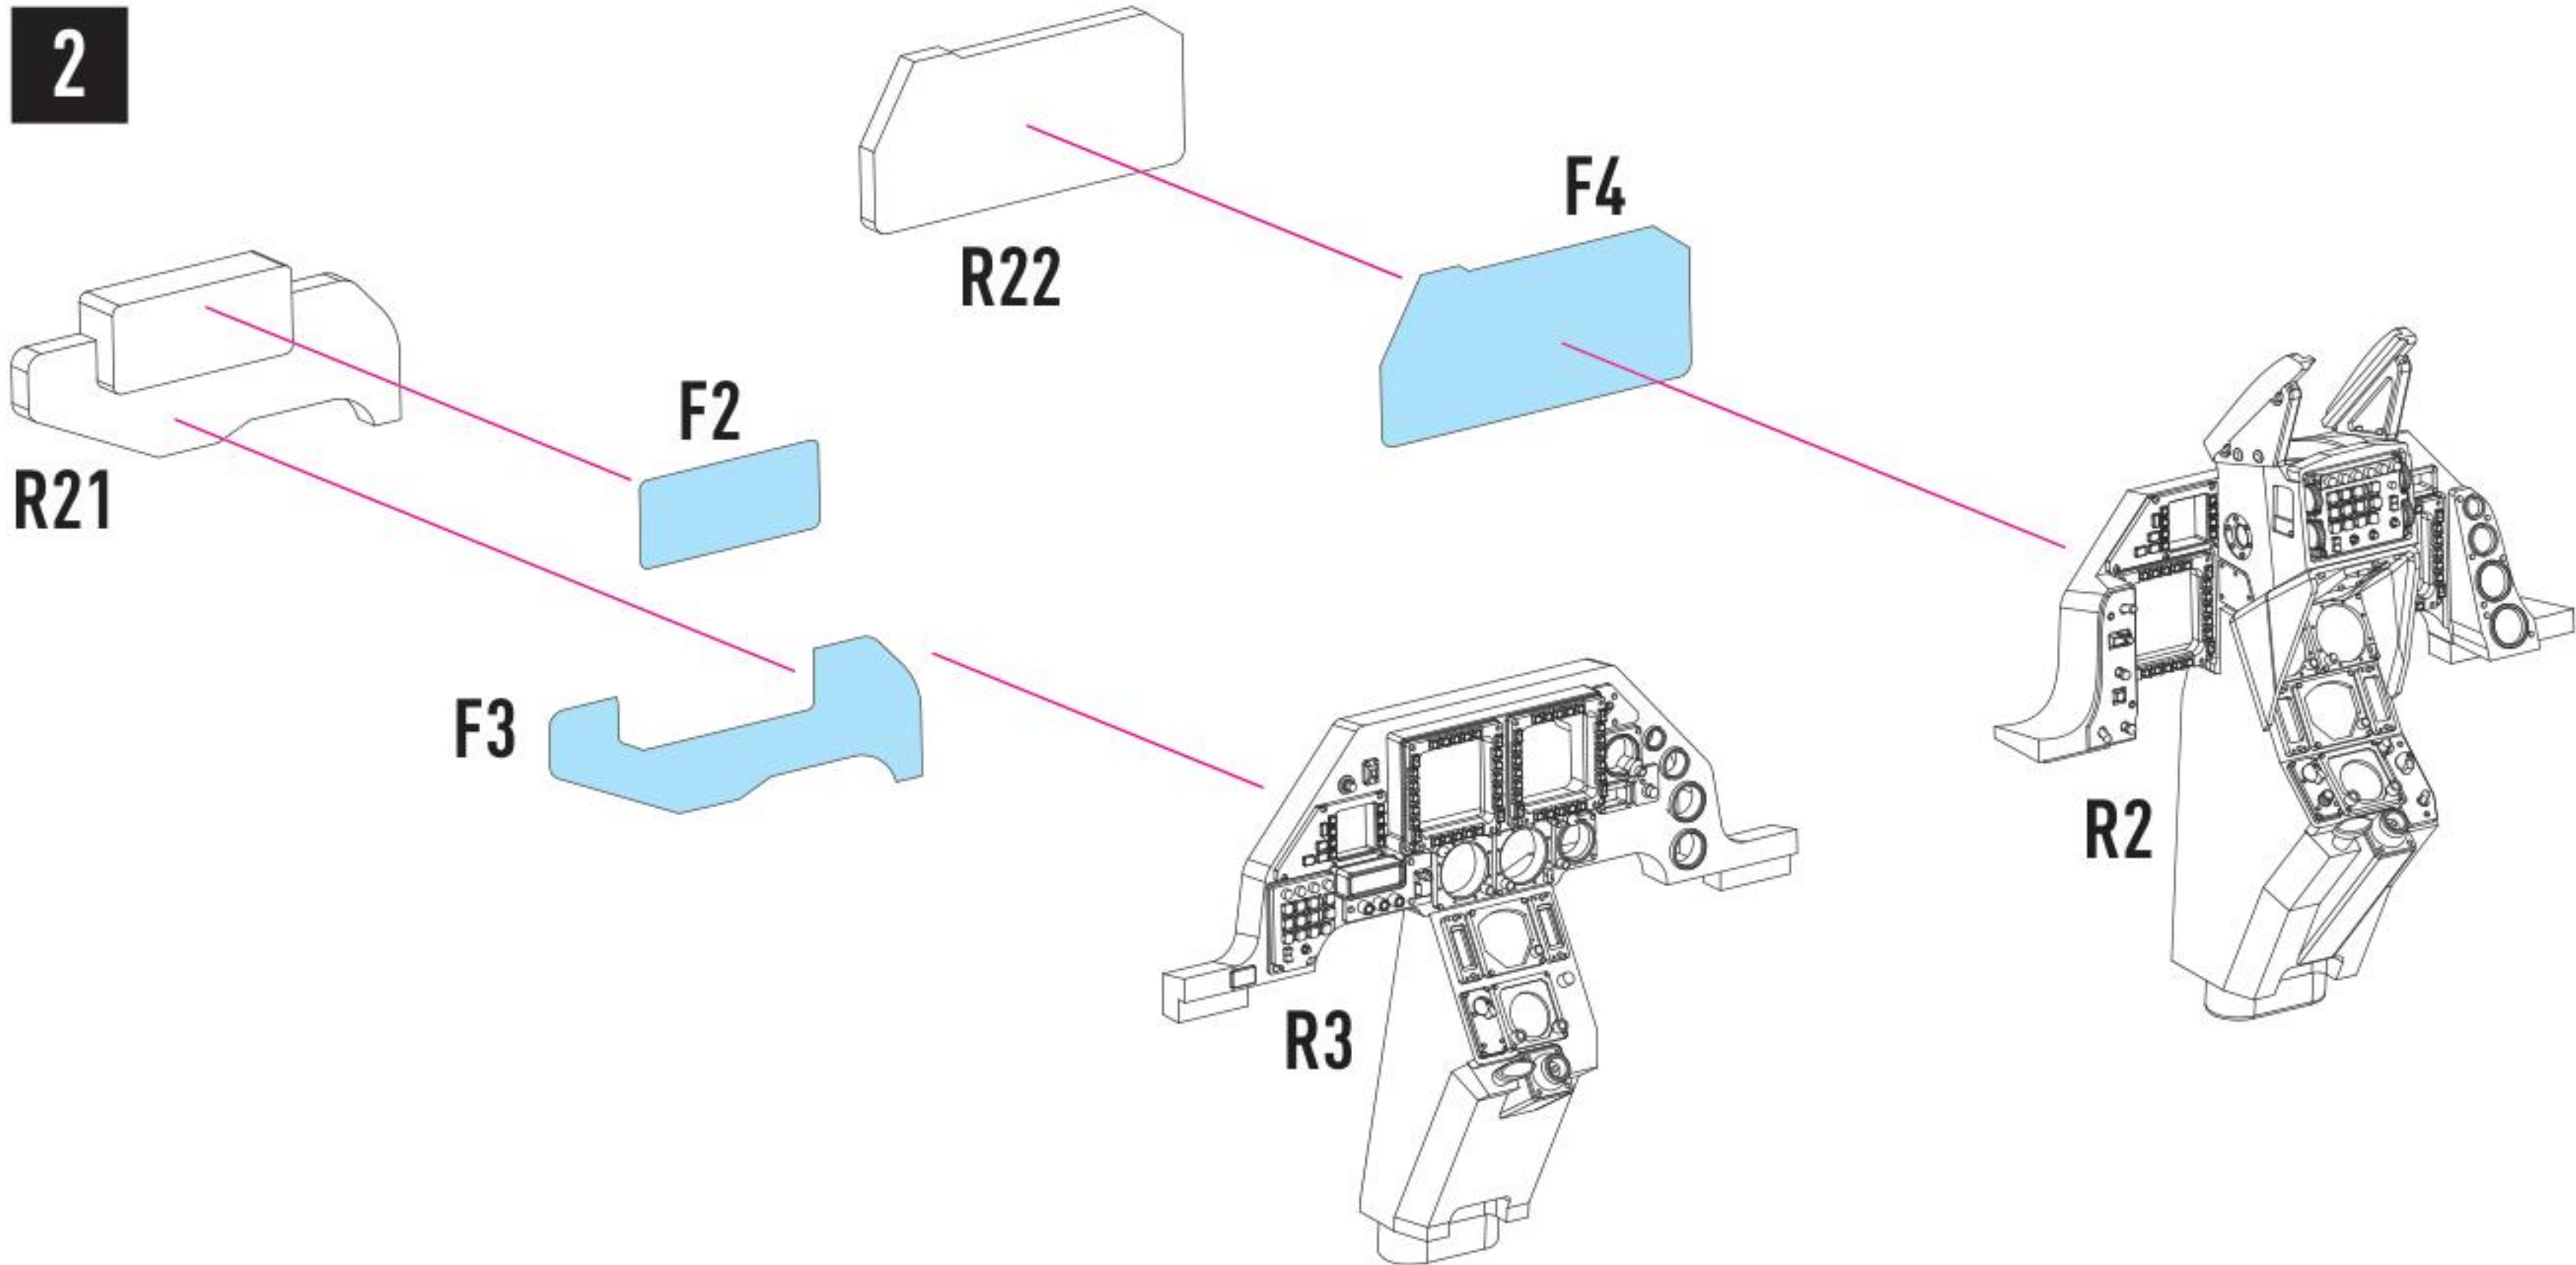



5

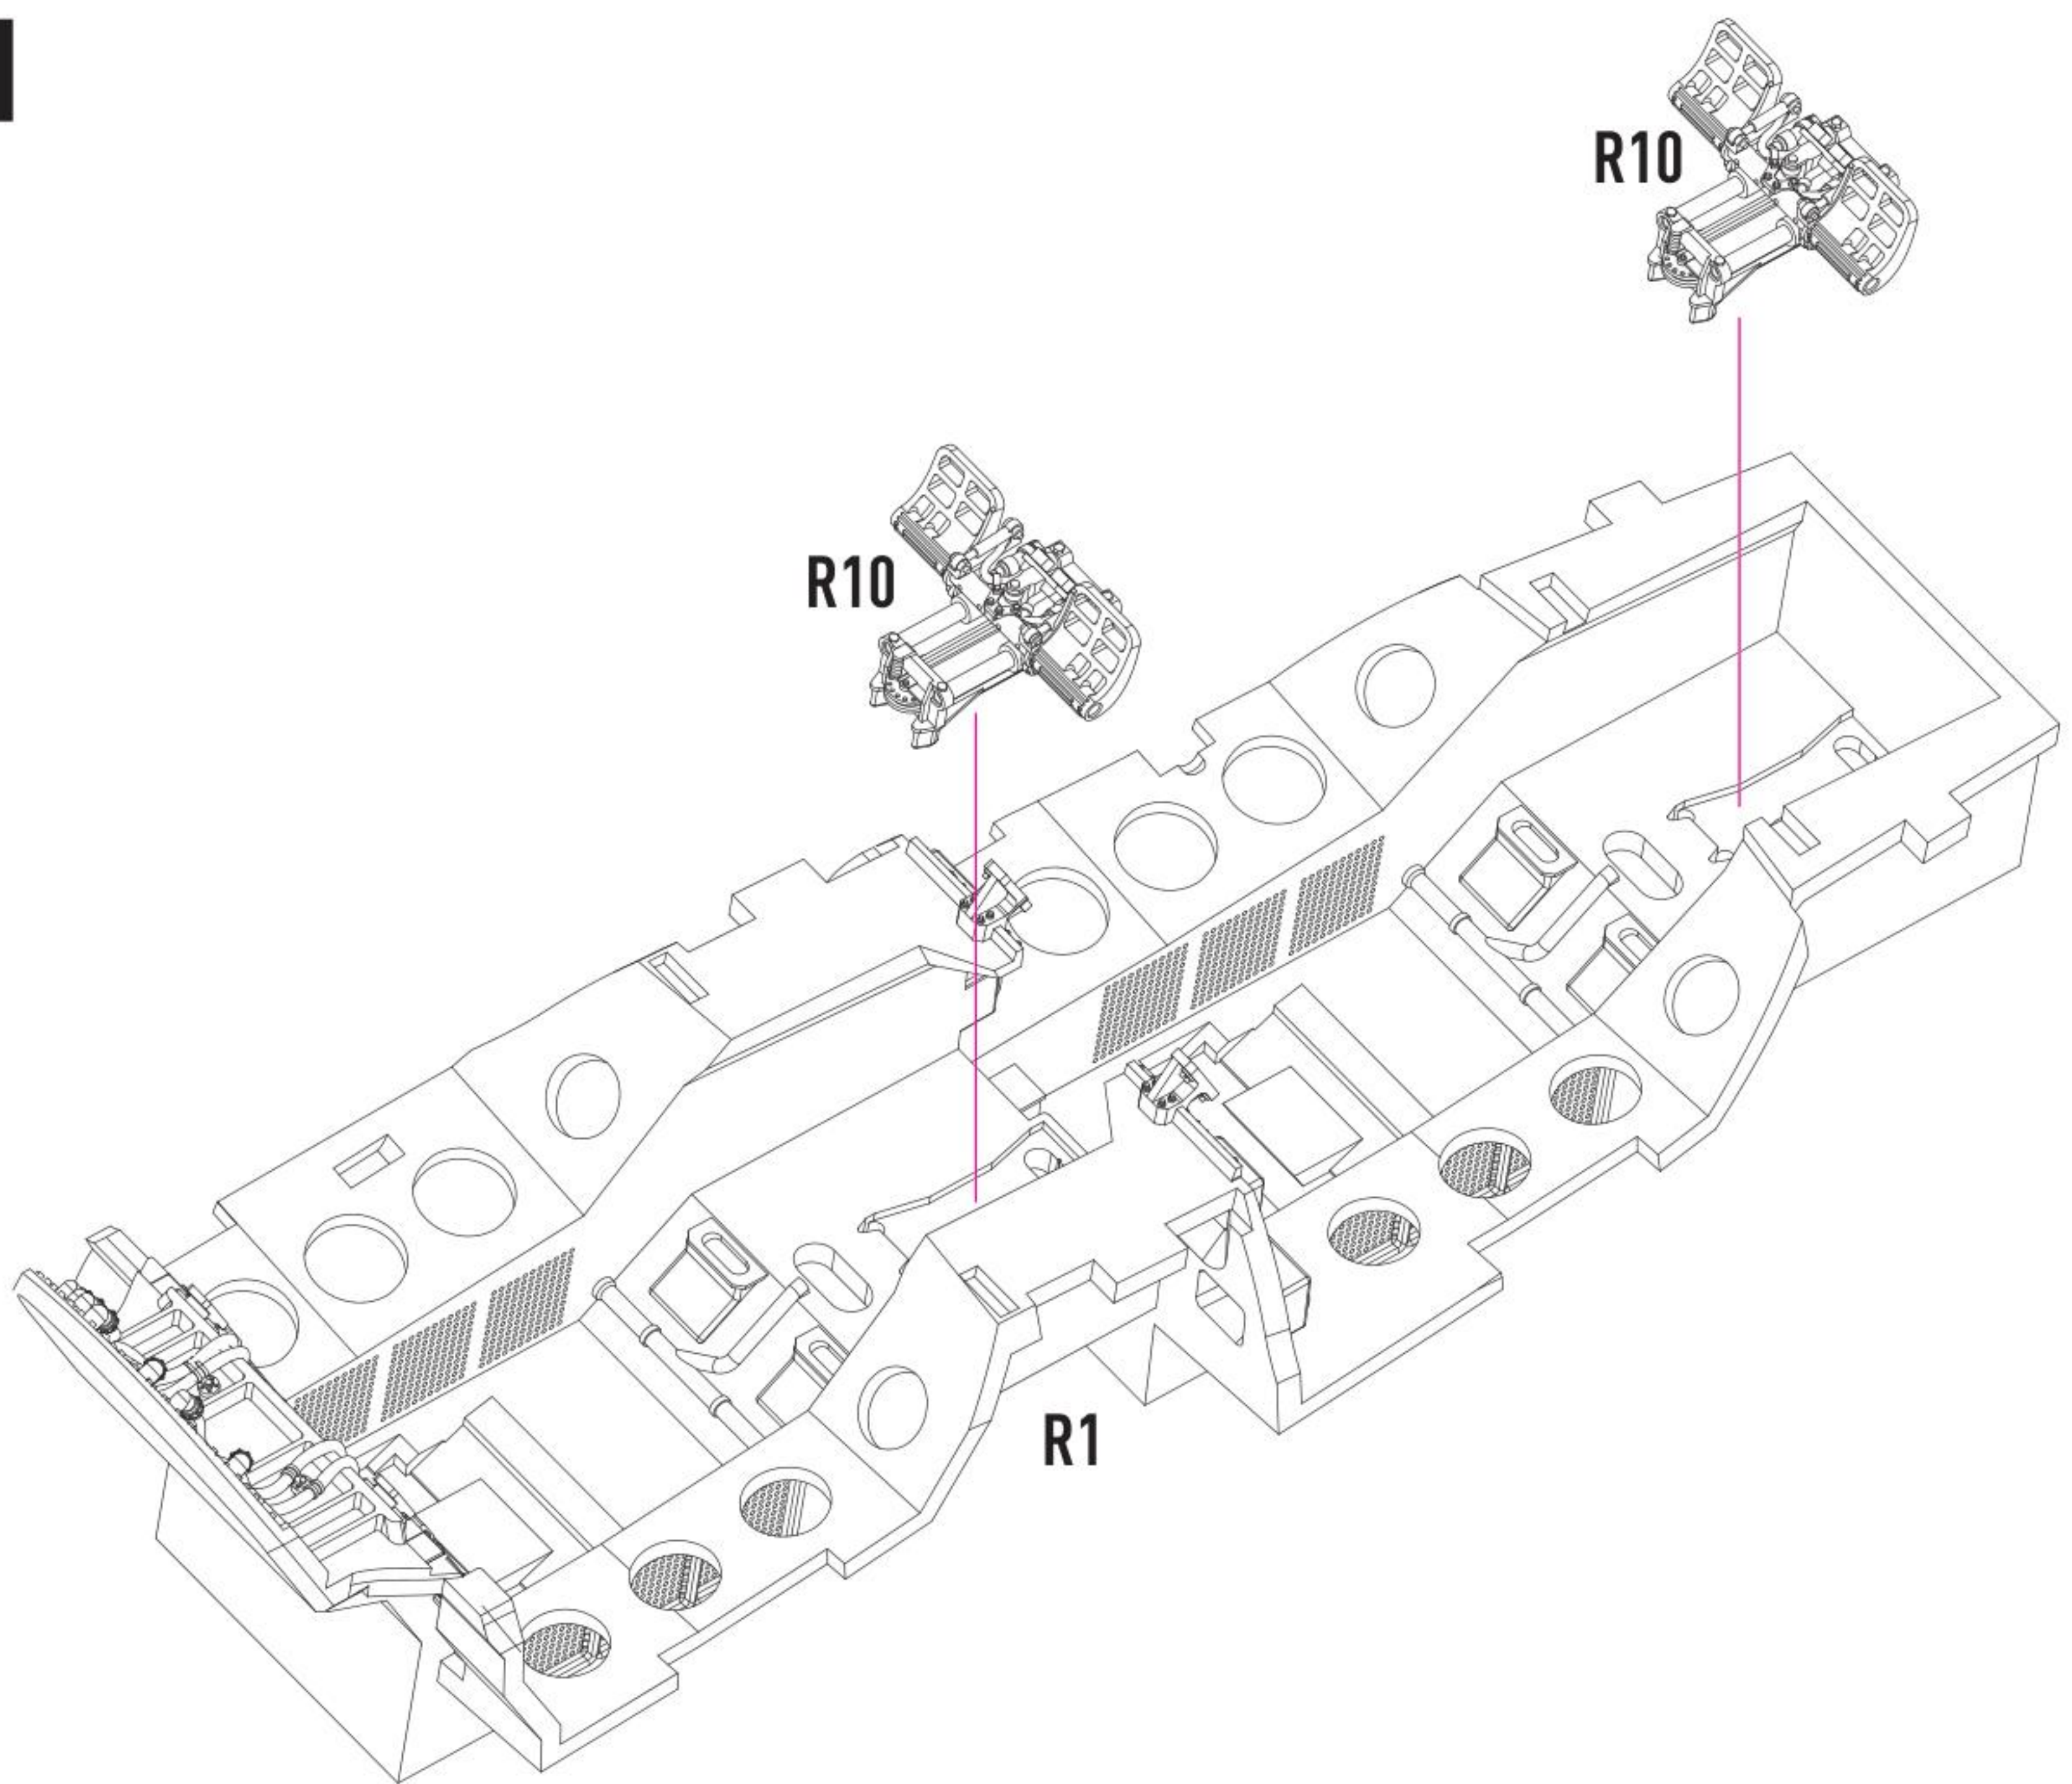


6

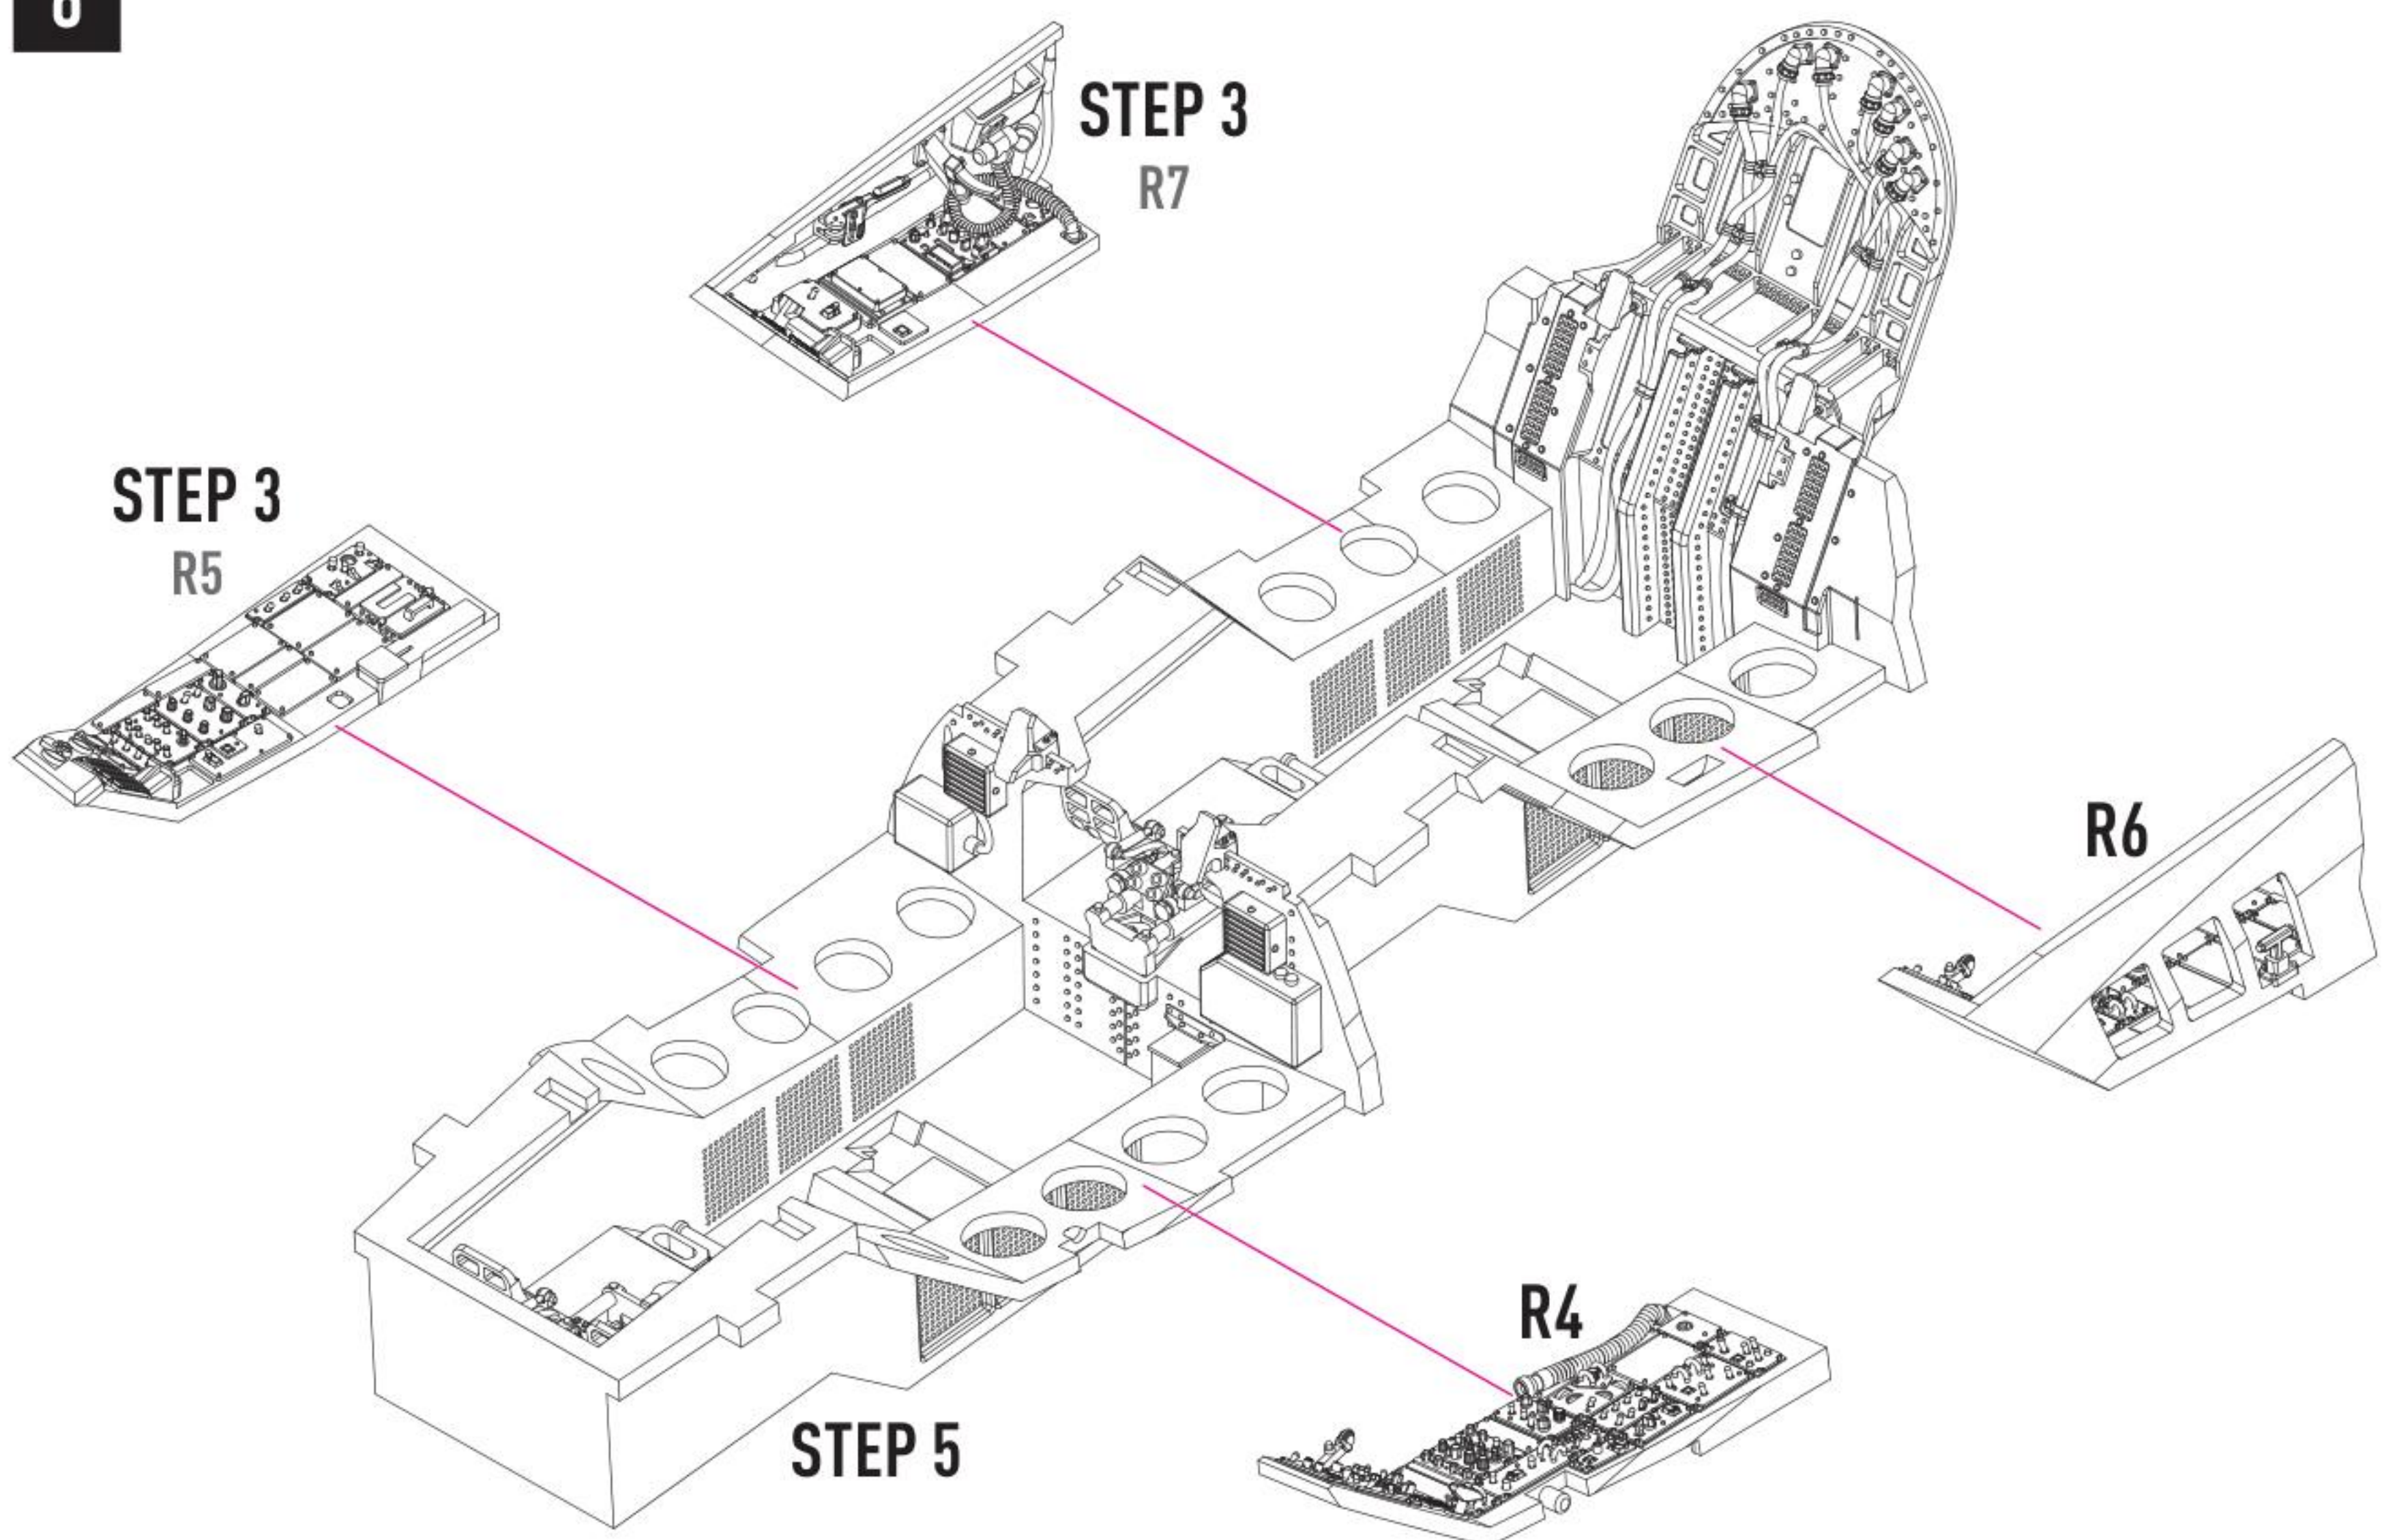

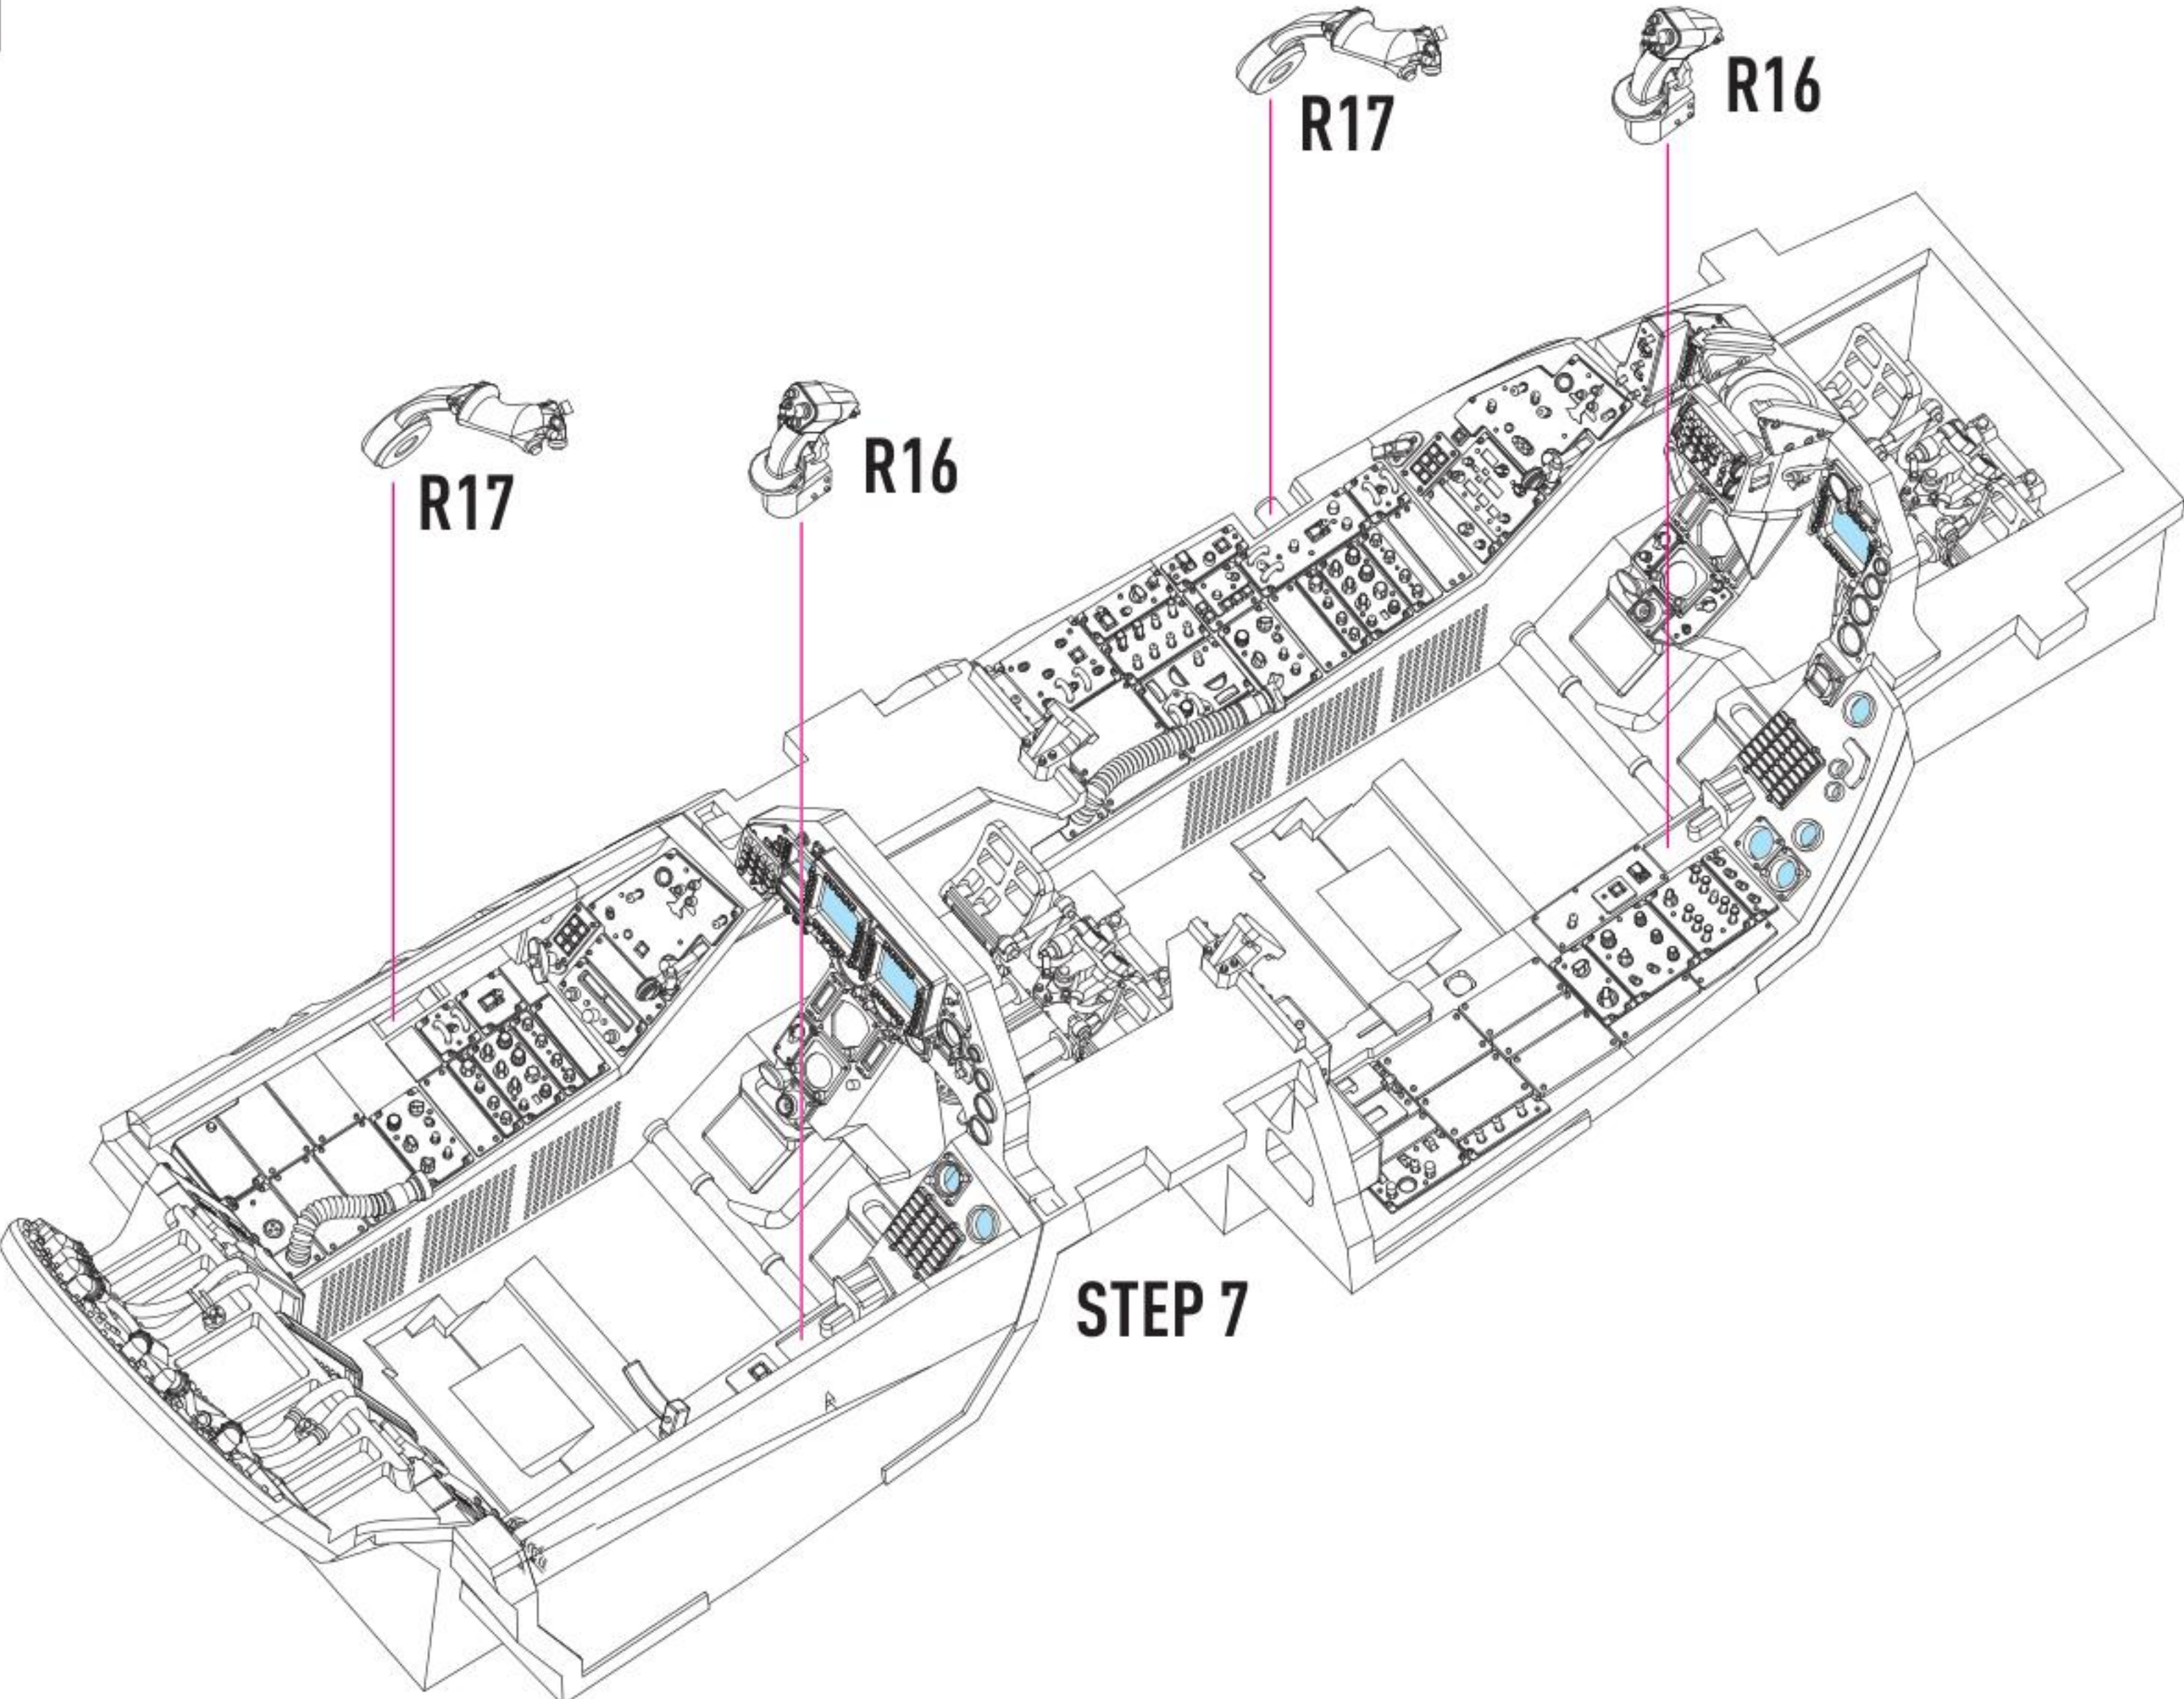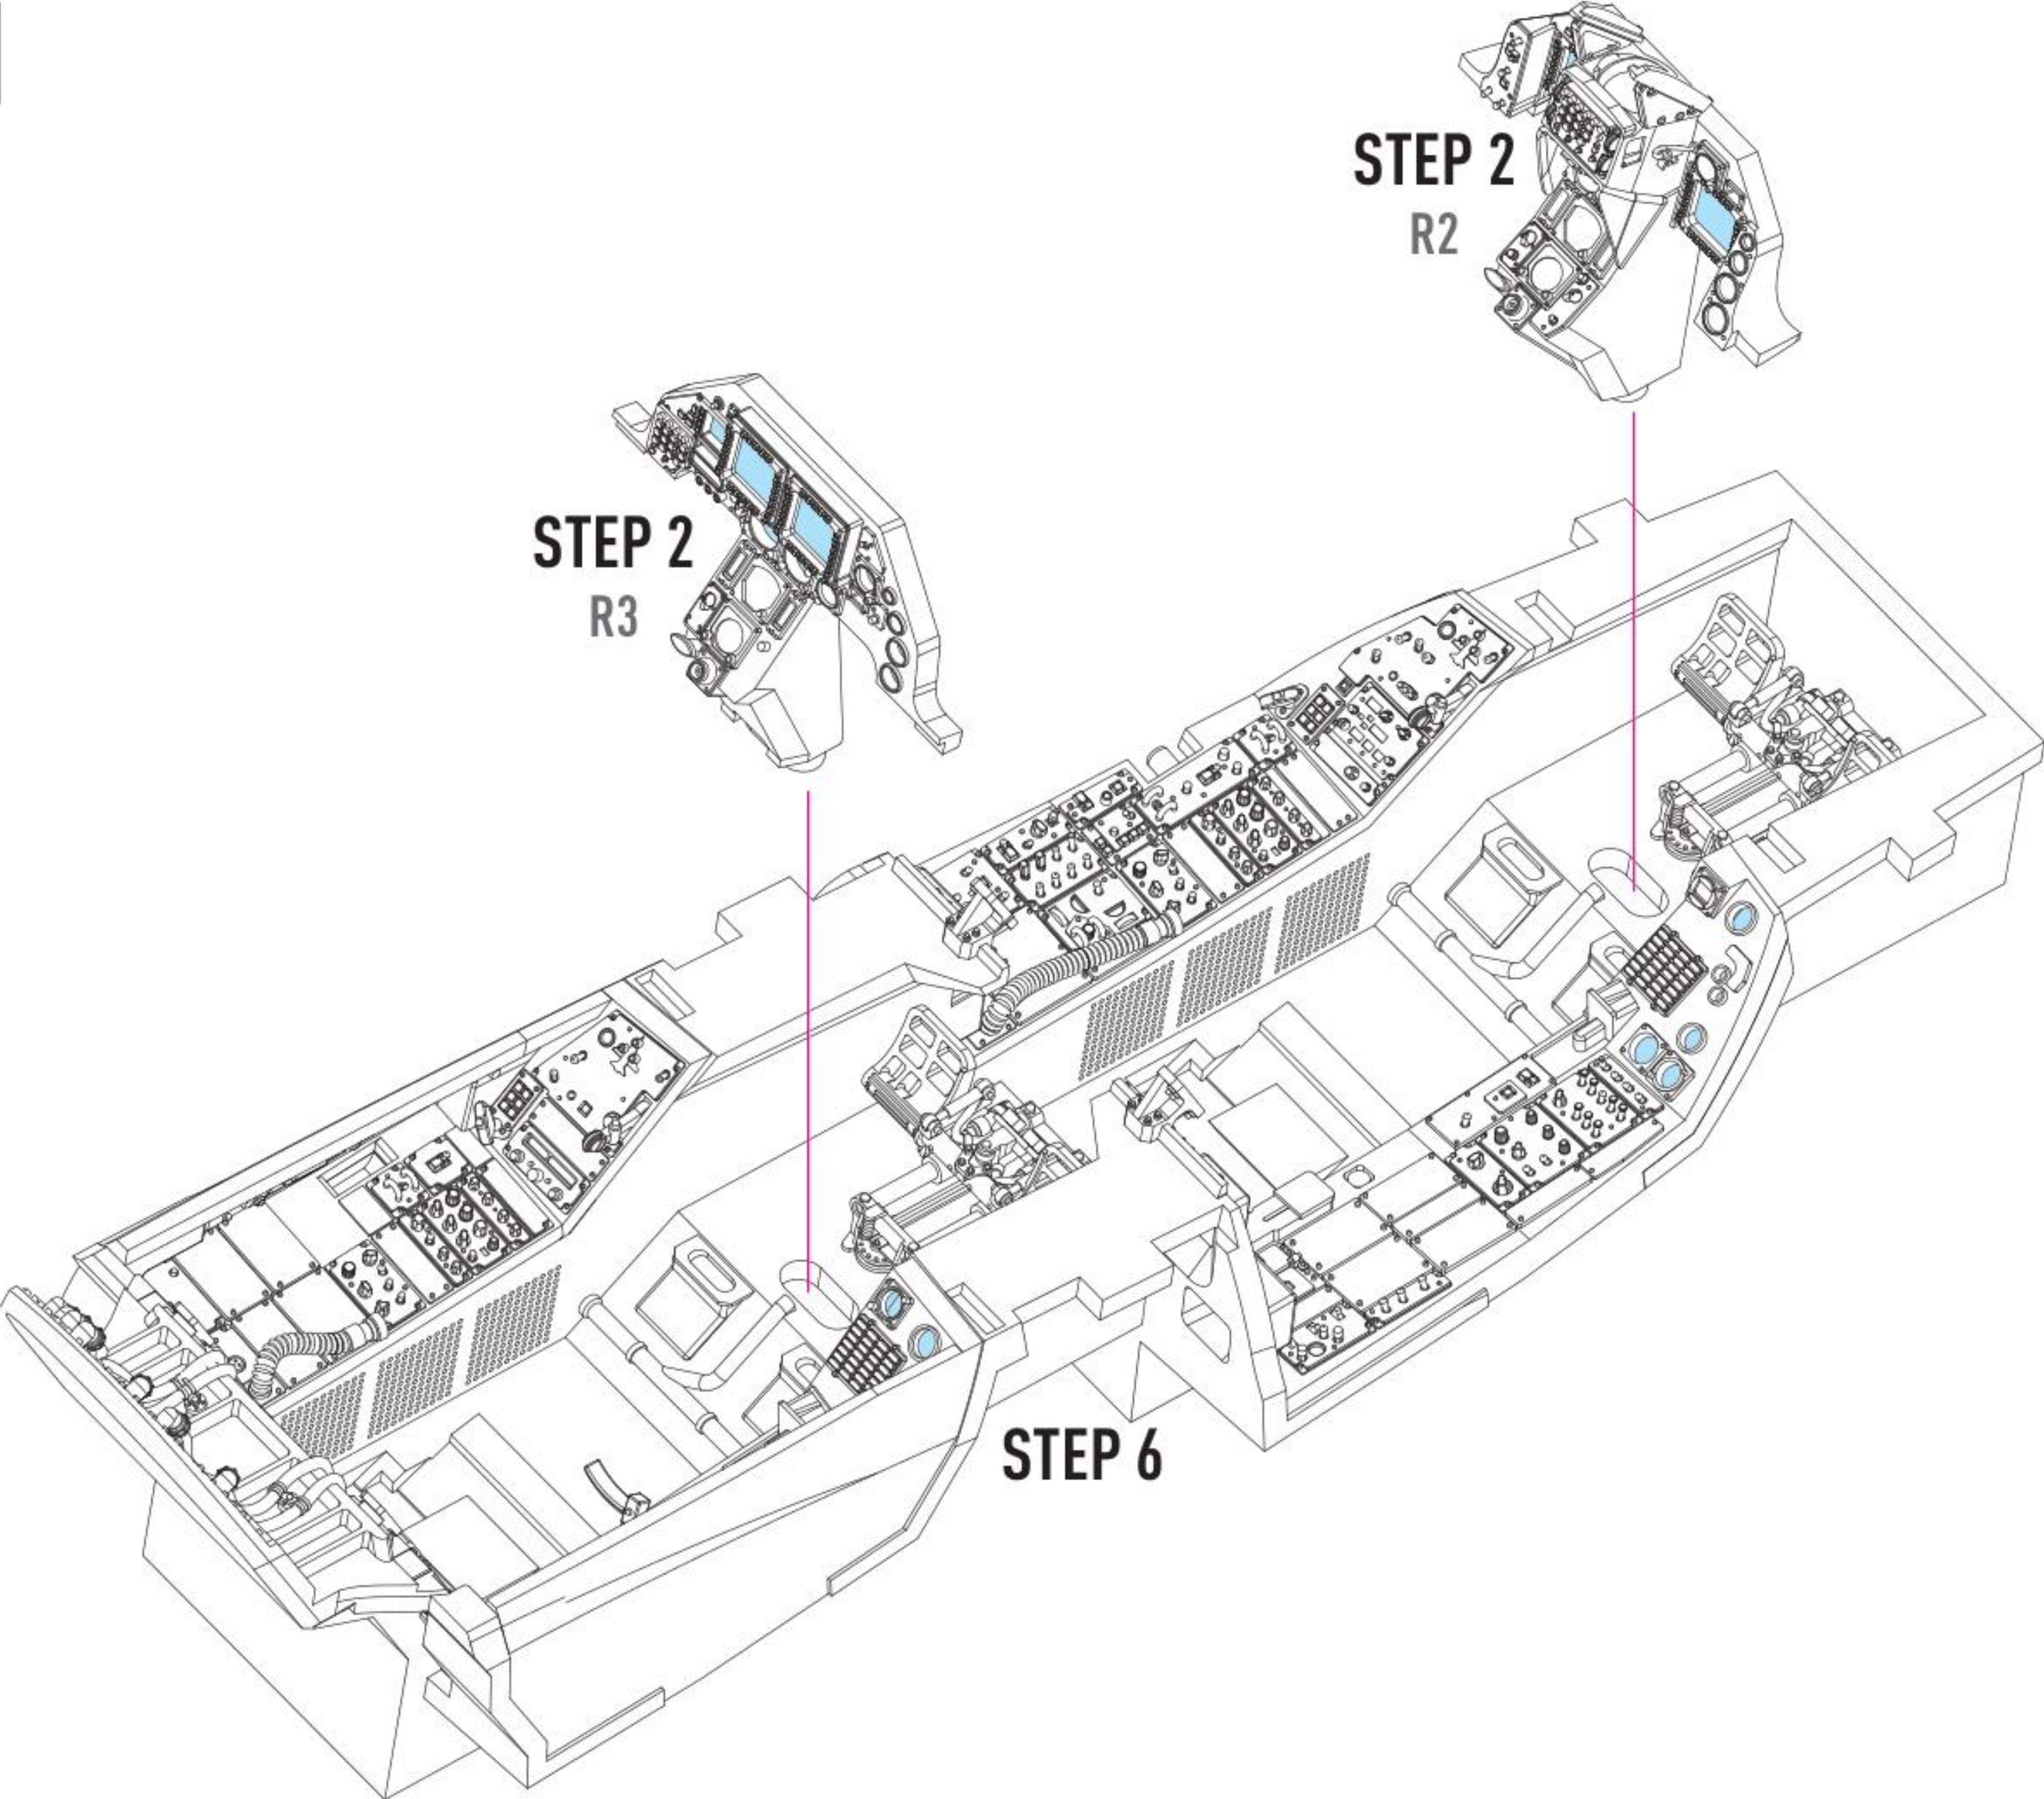



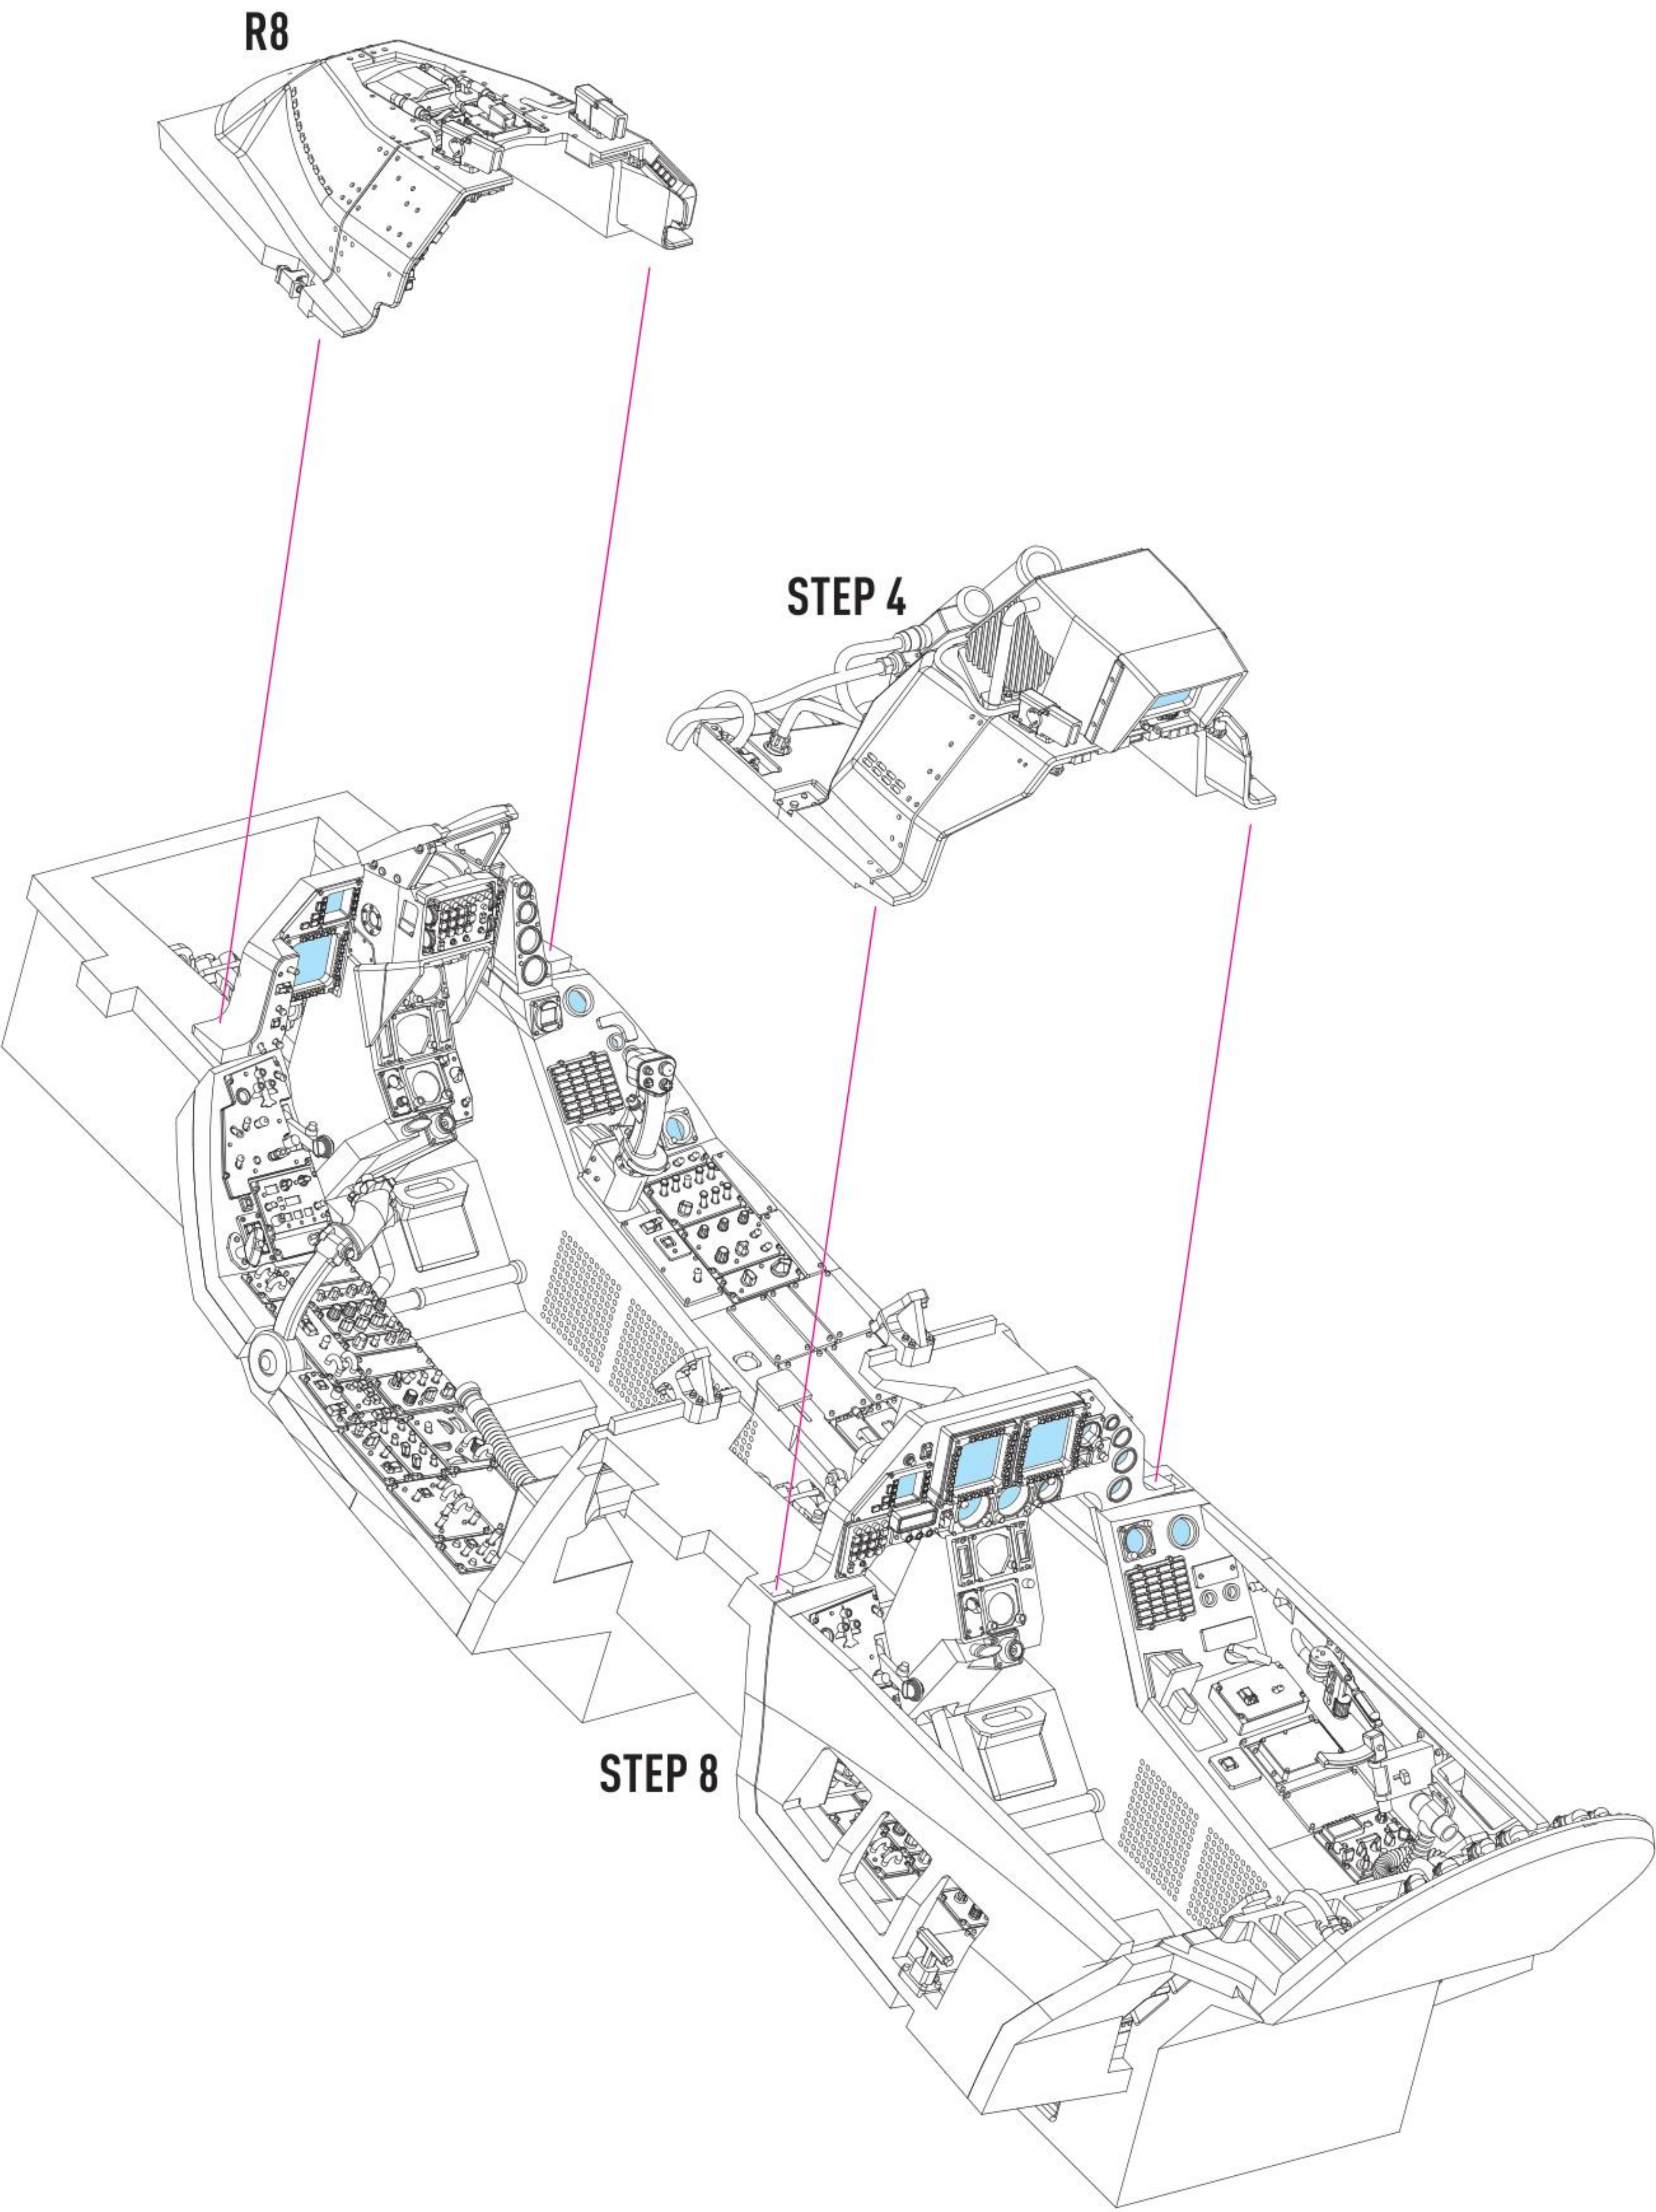



10 FRONT SEAT

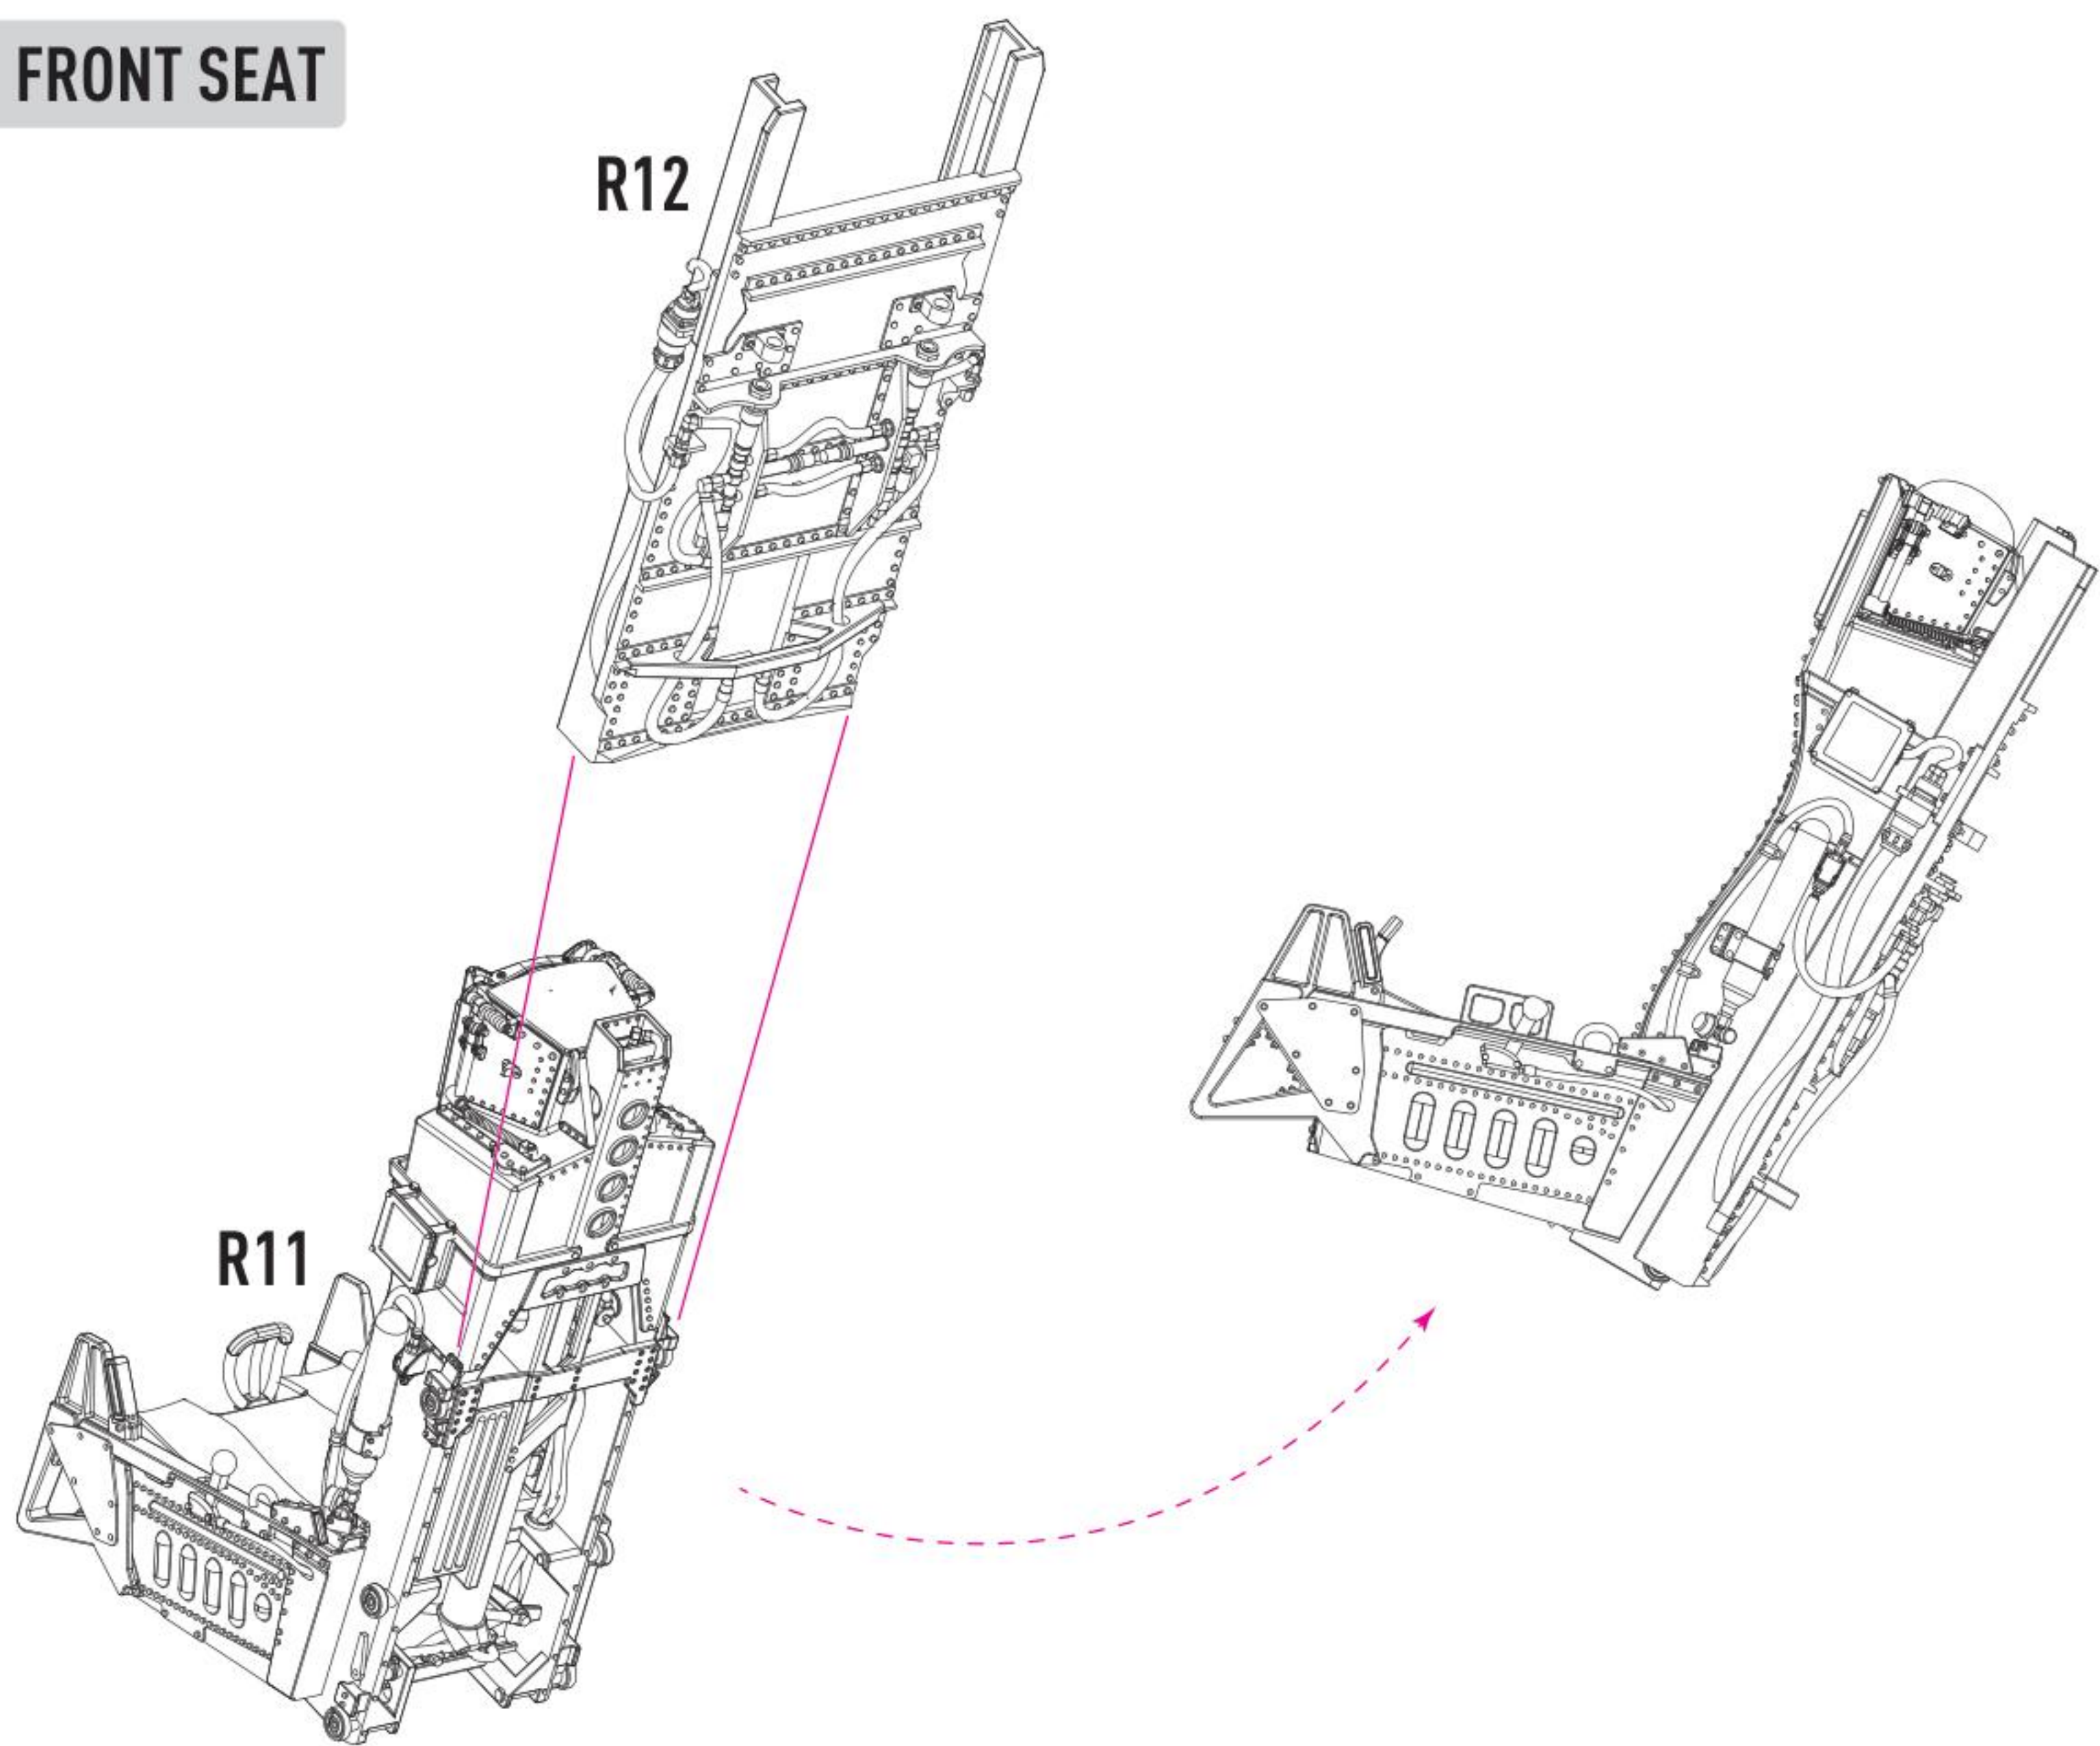


11 BACK SEAT

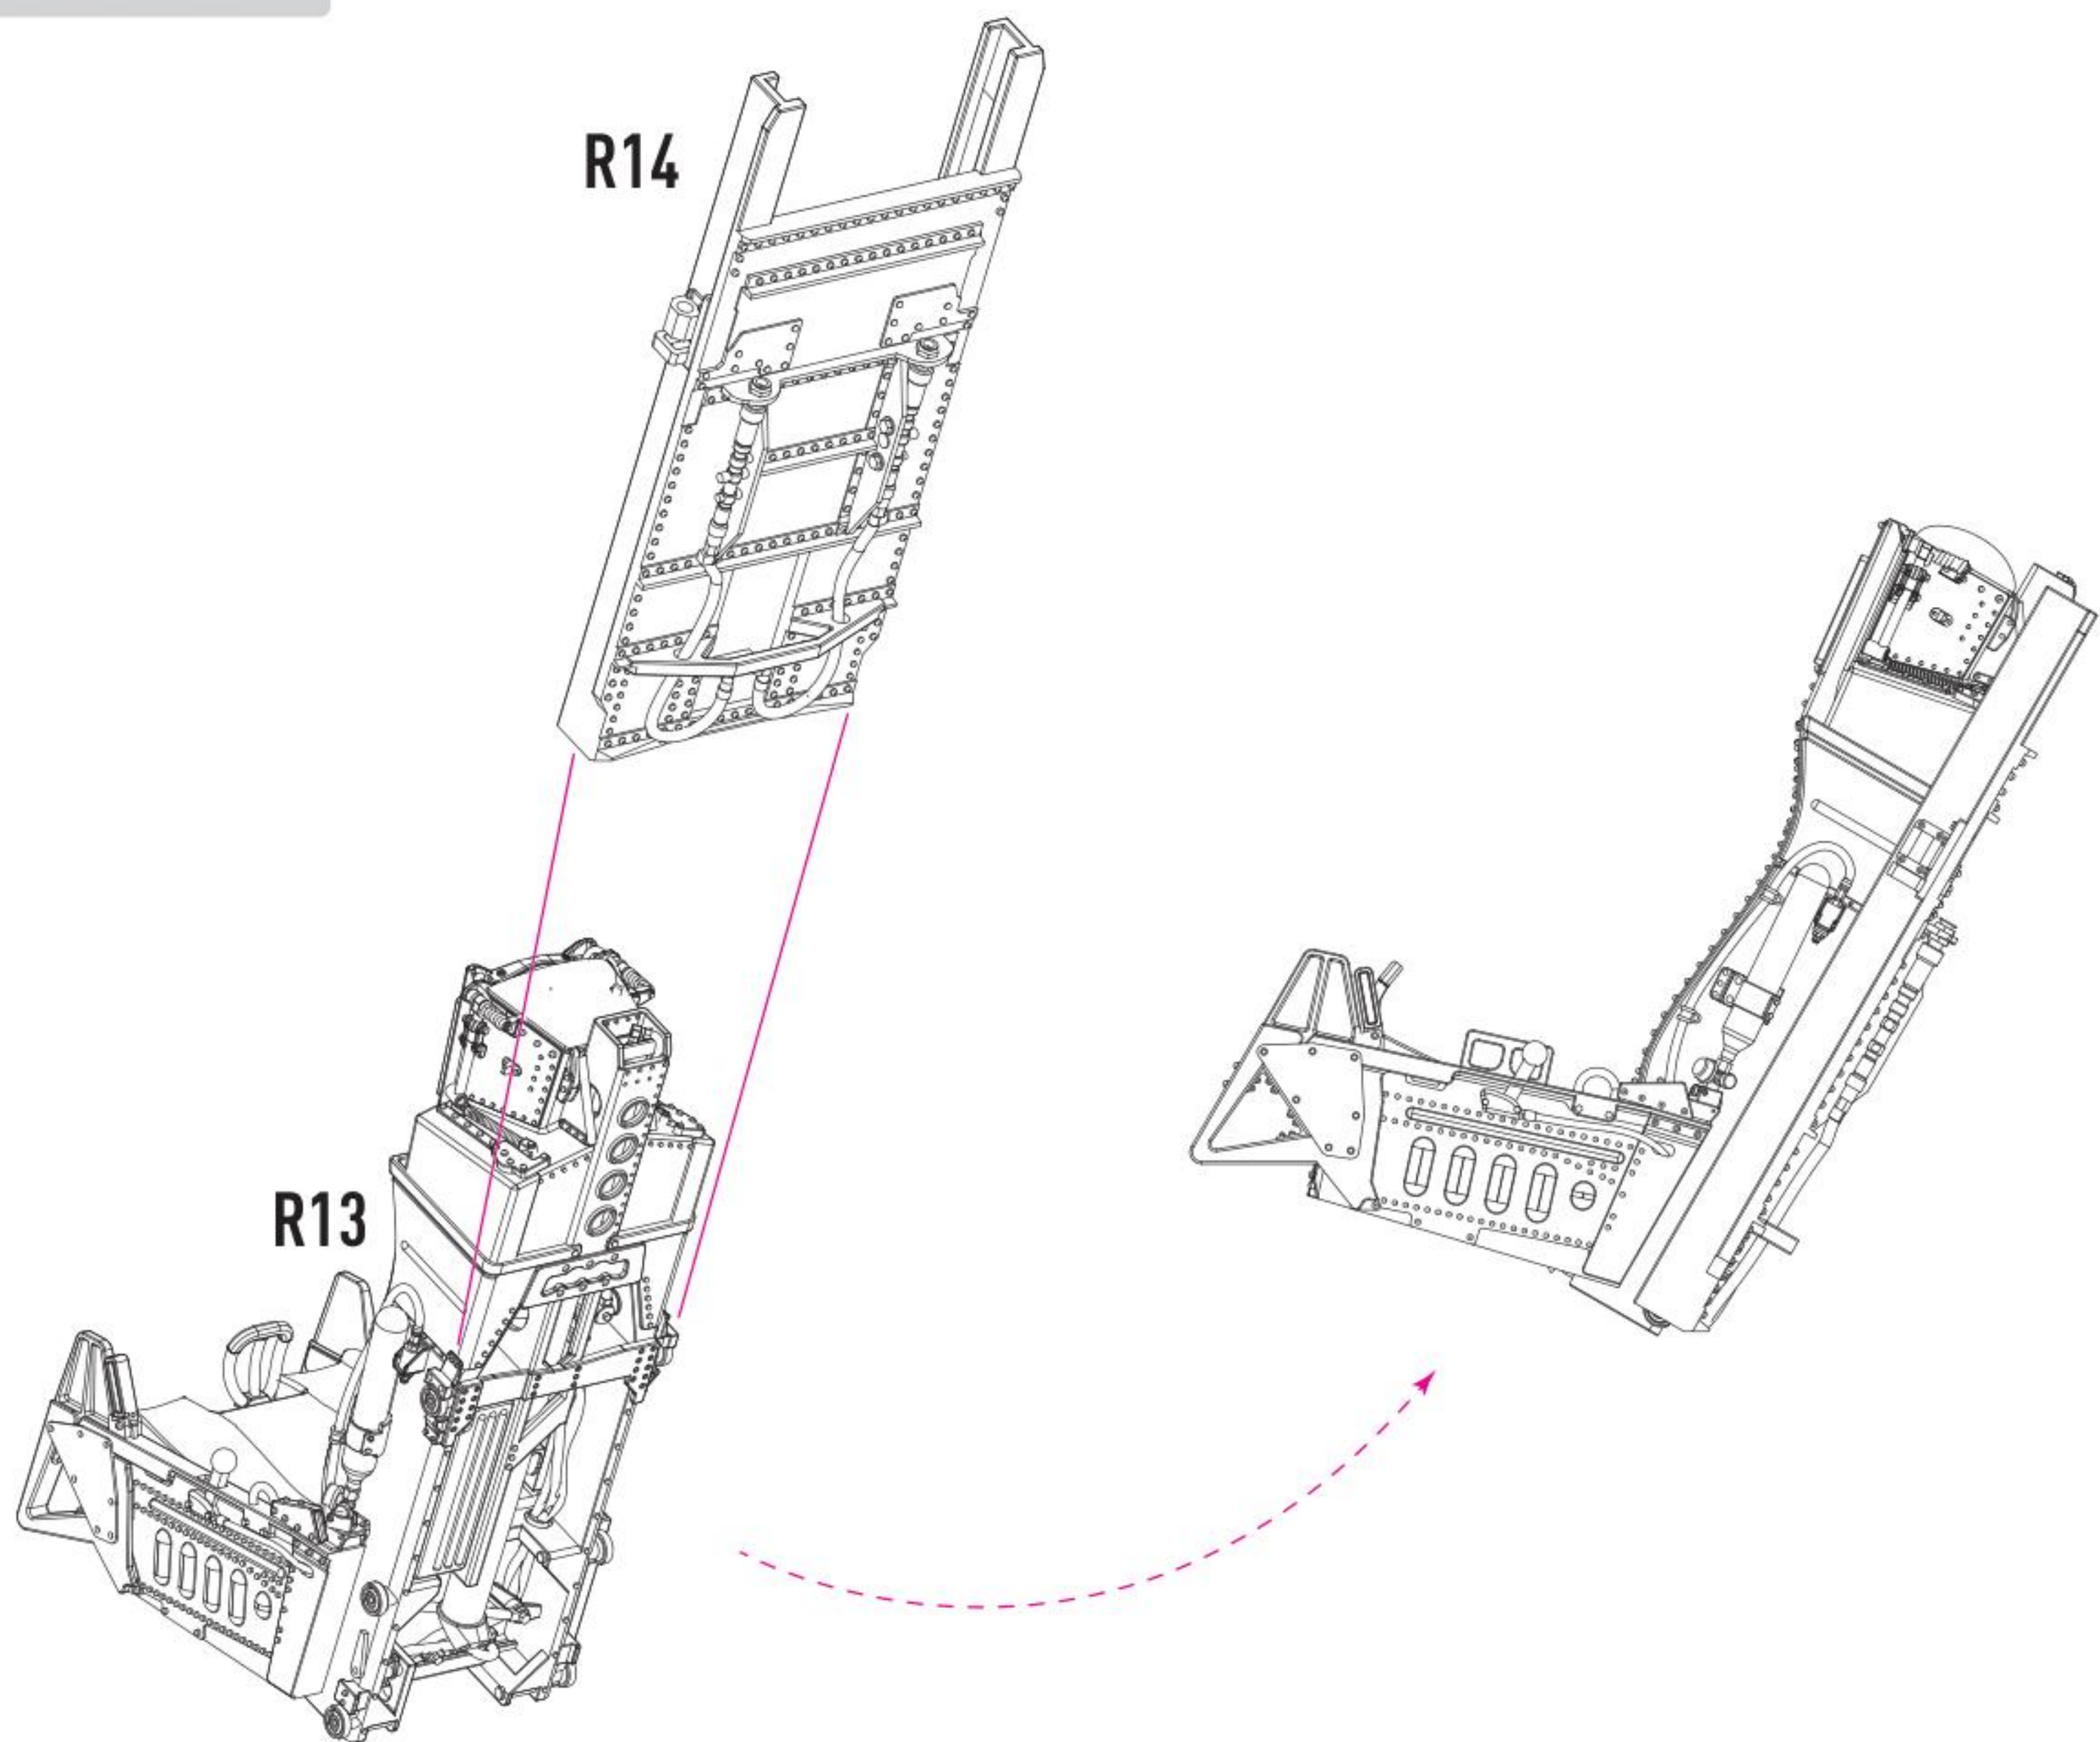


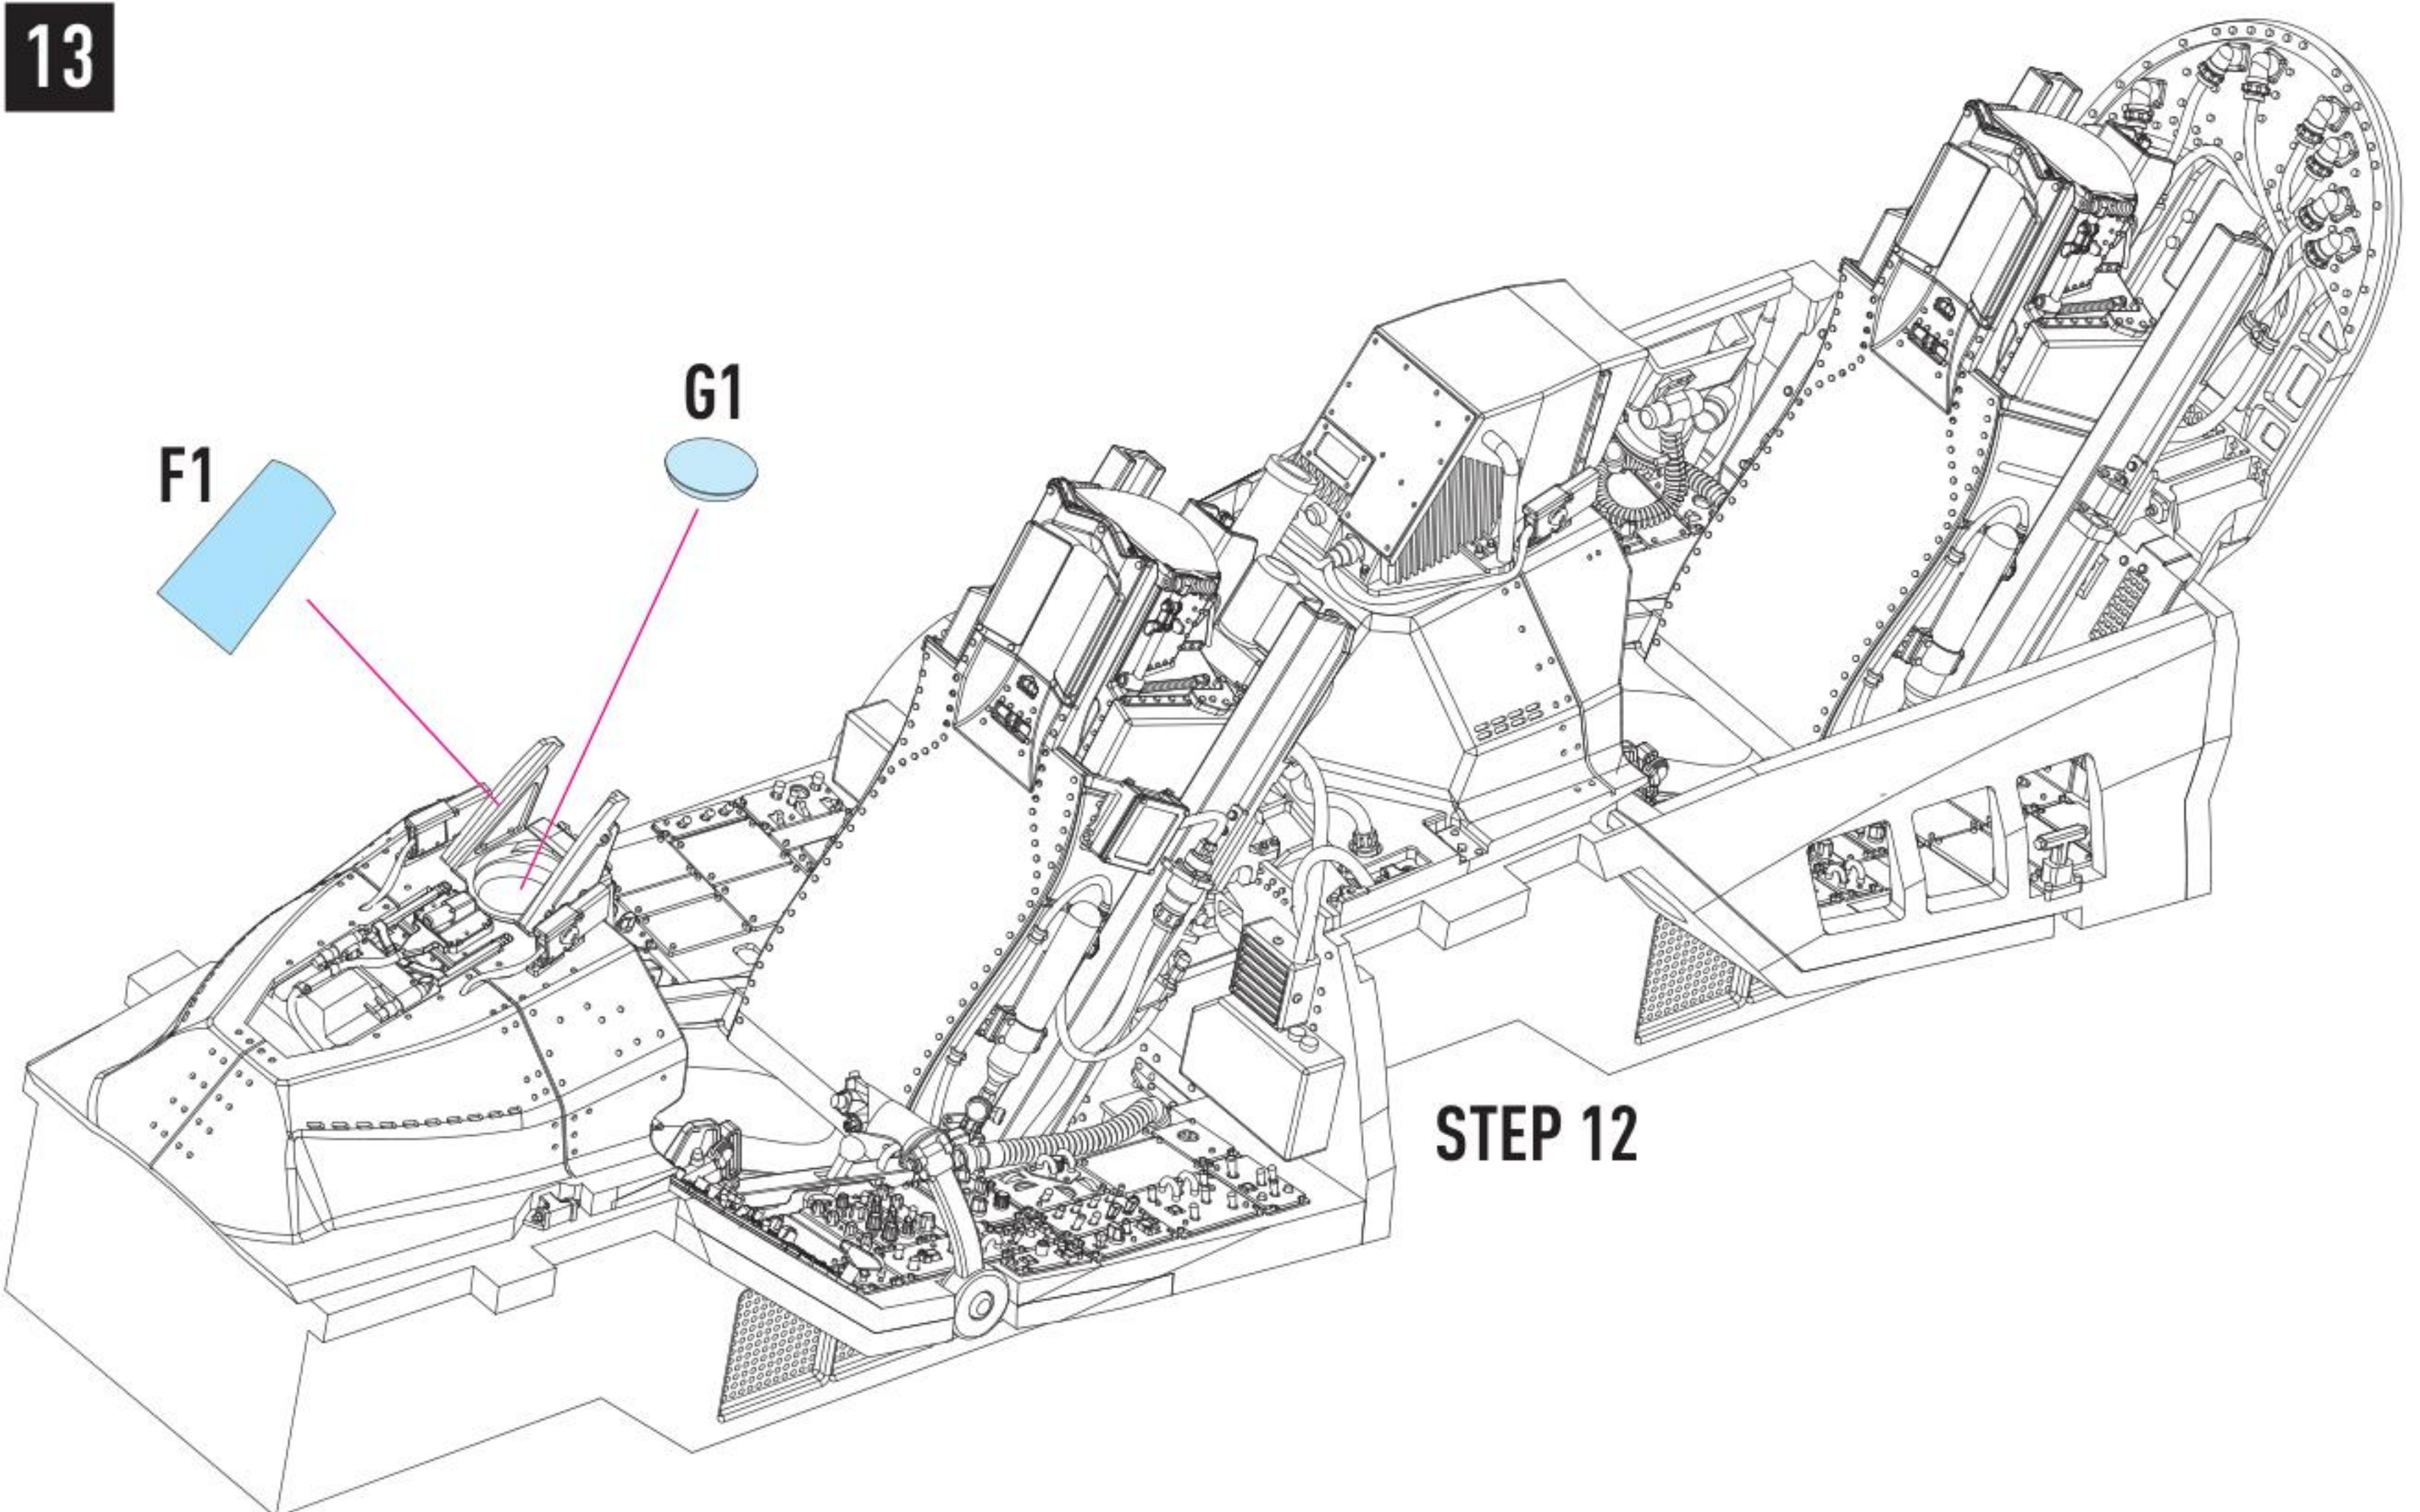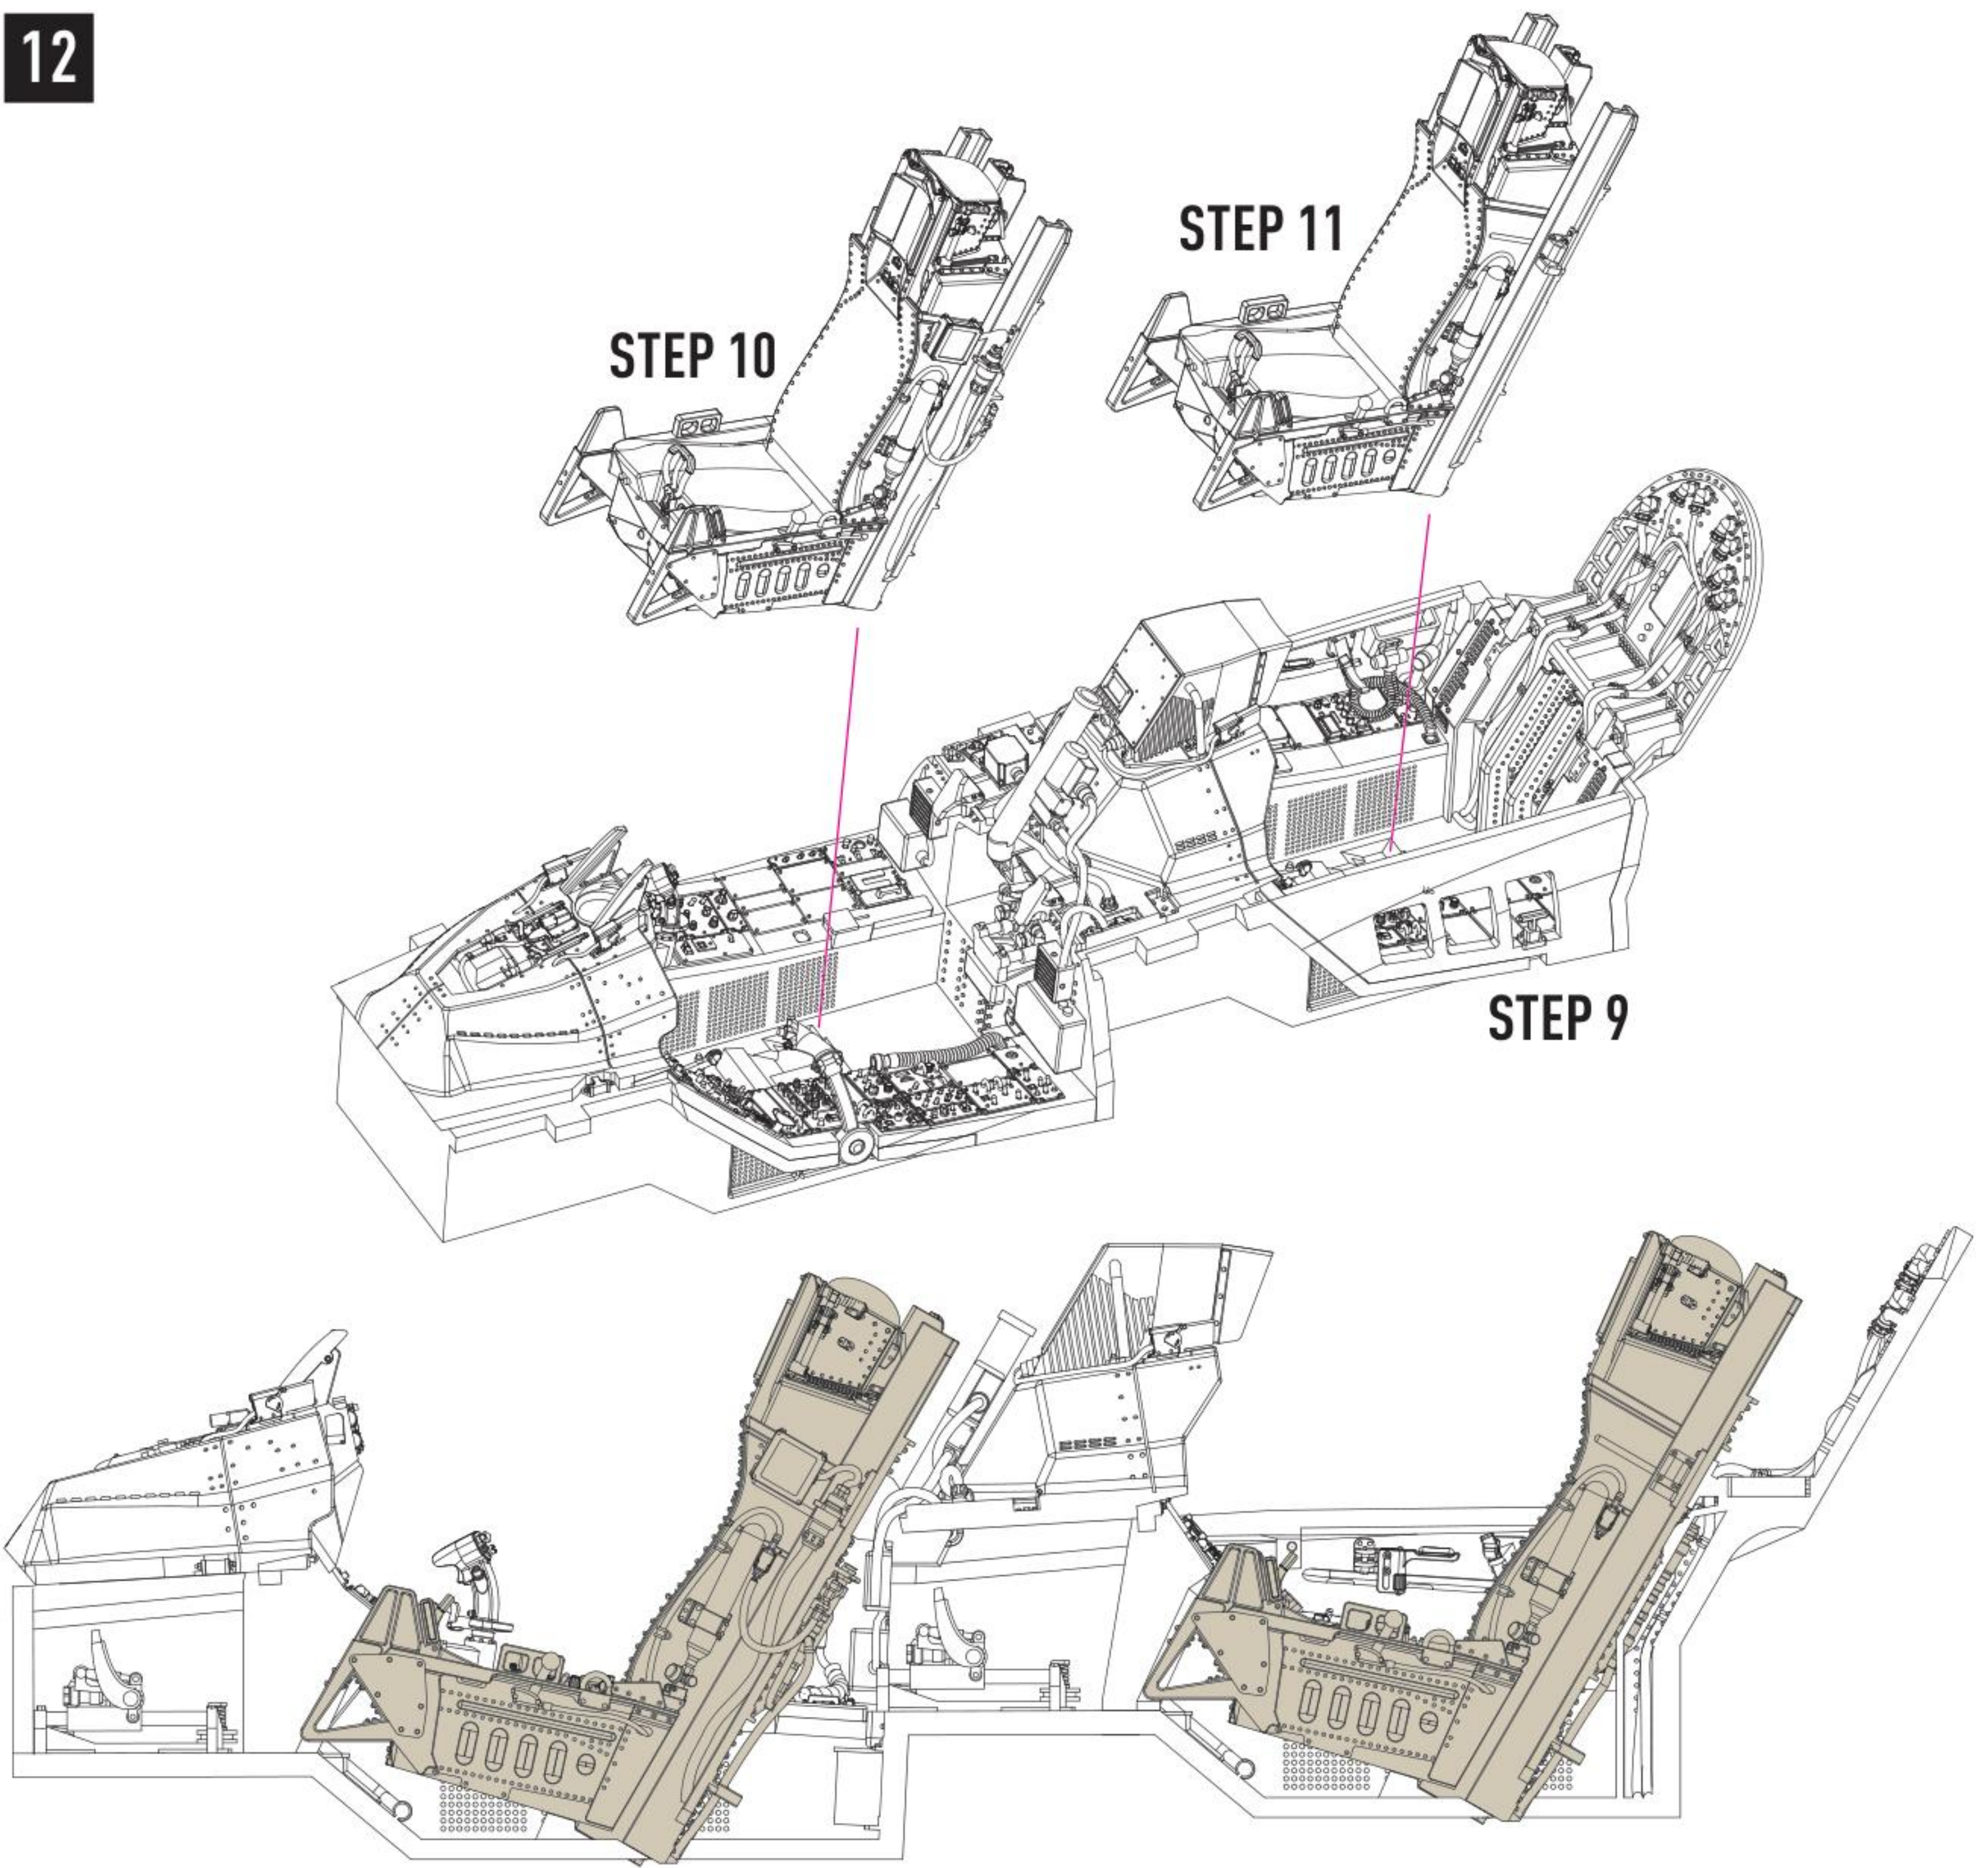

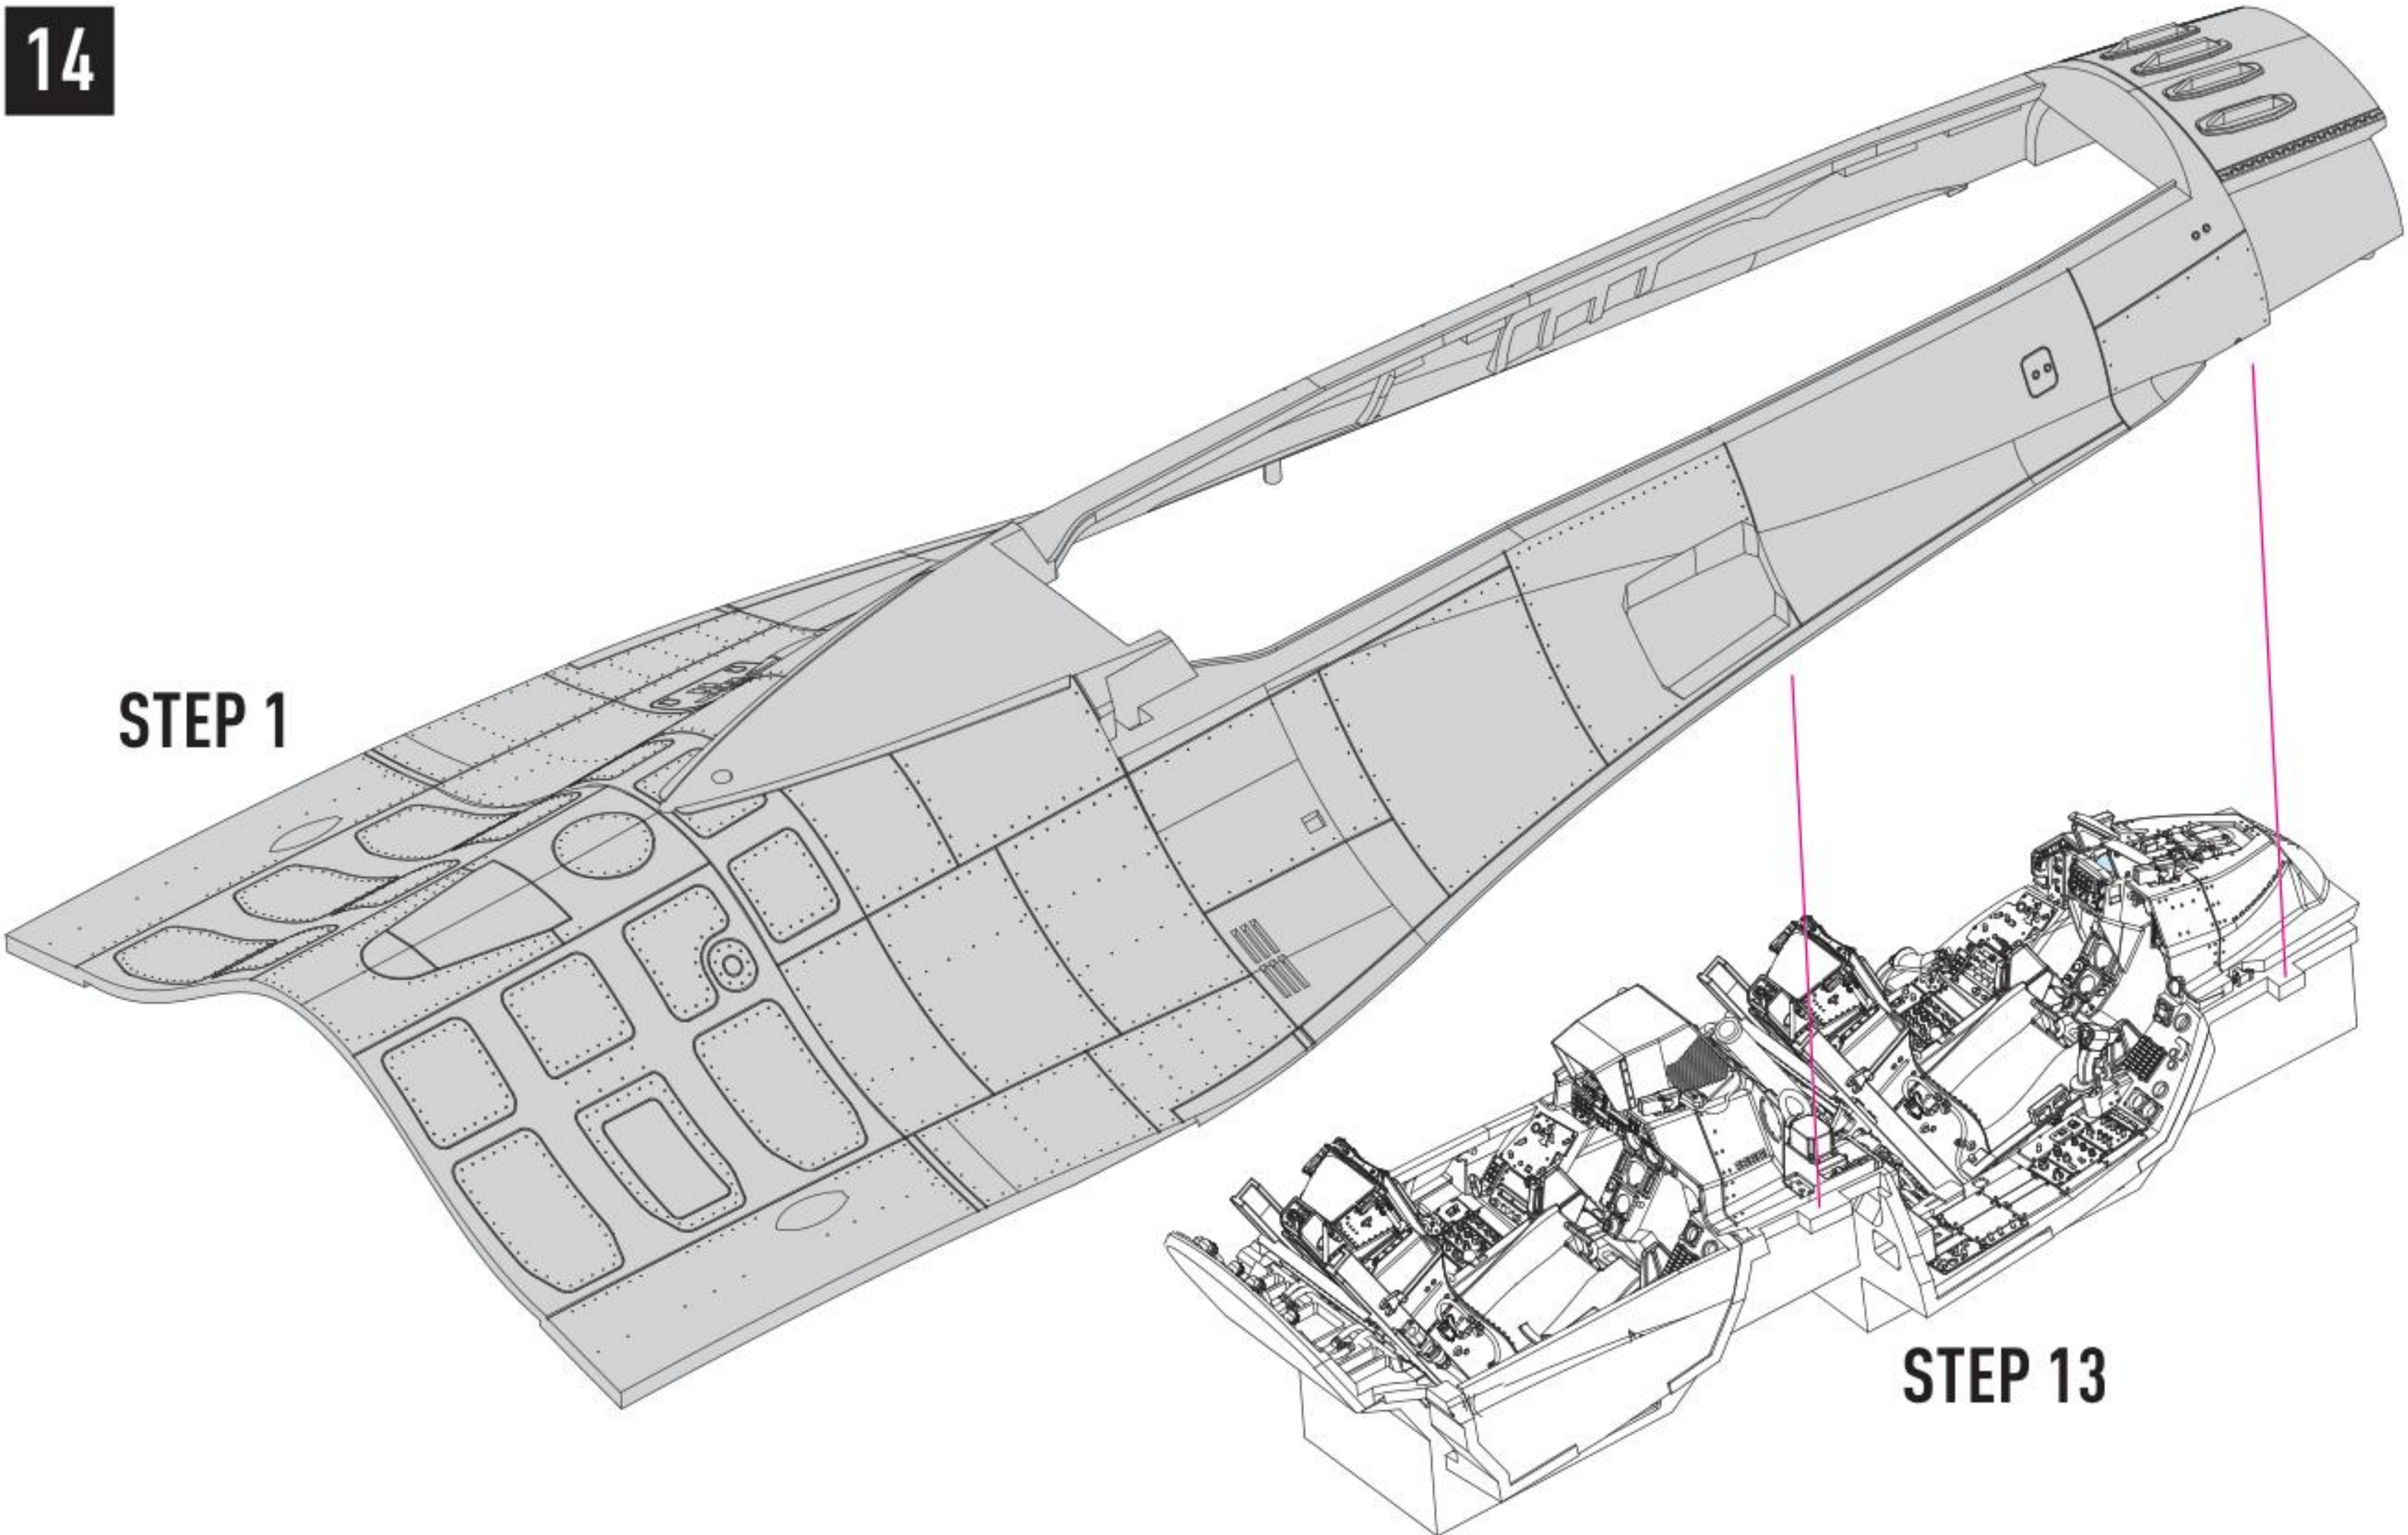


PART G23
FROM KINETIC KIT

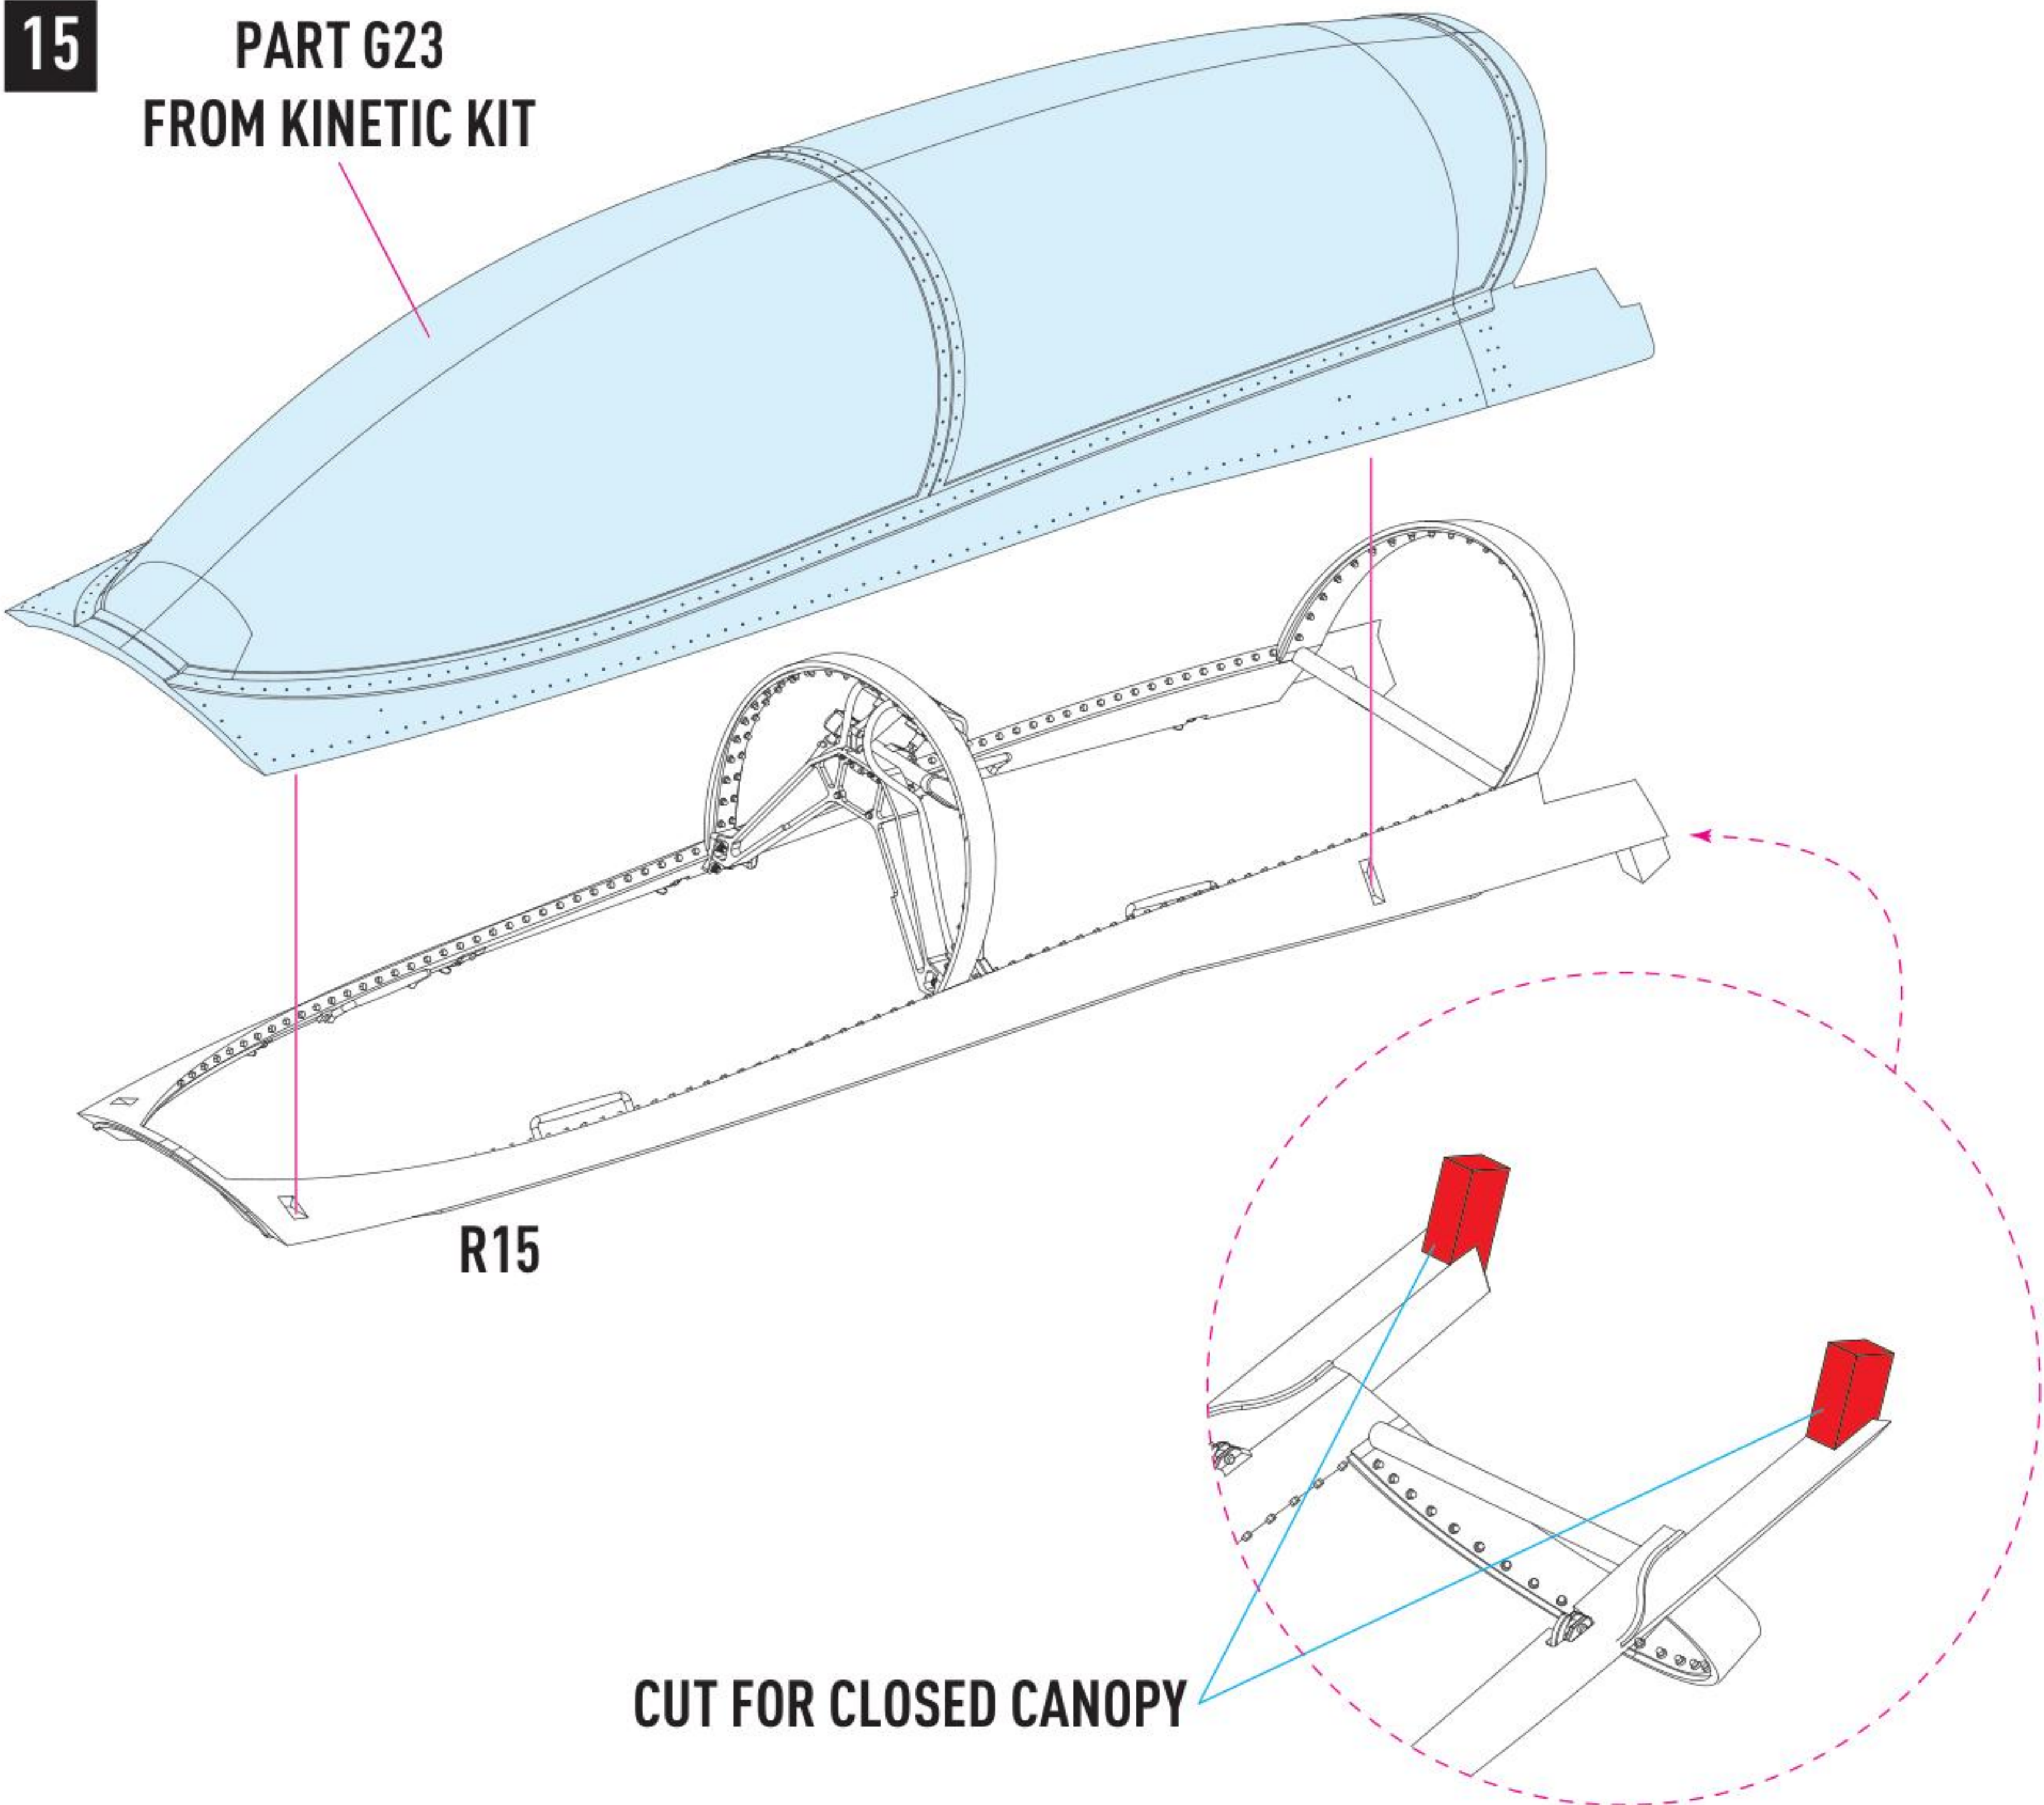

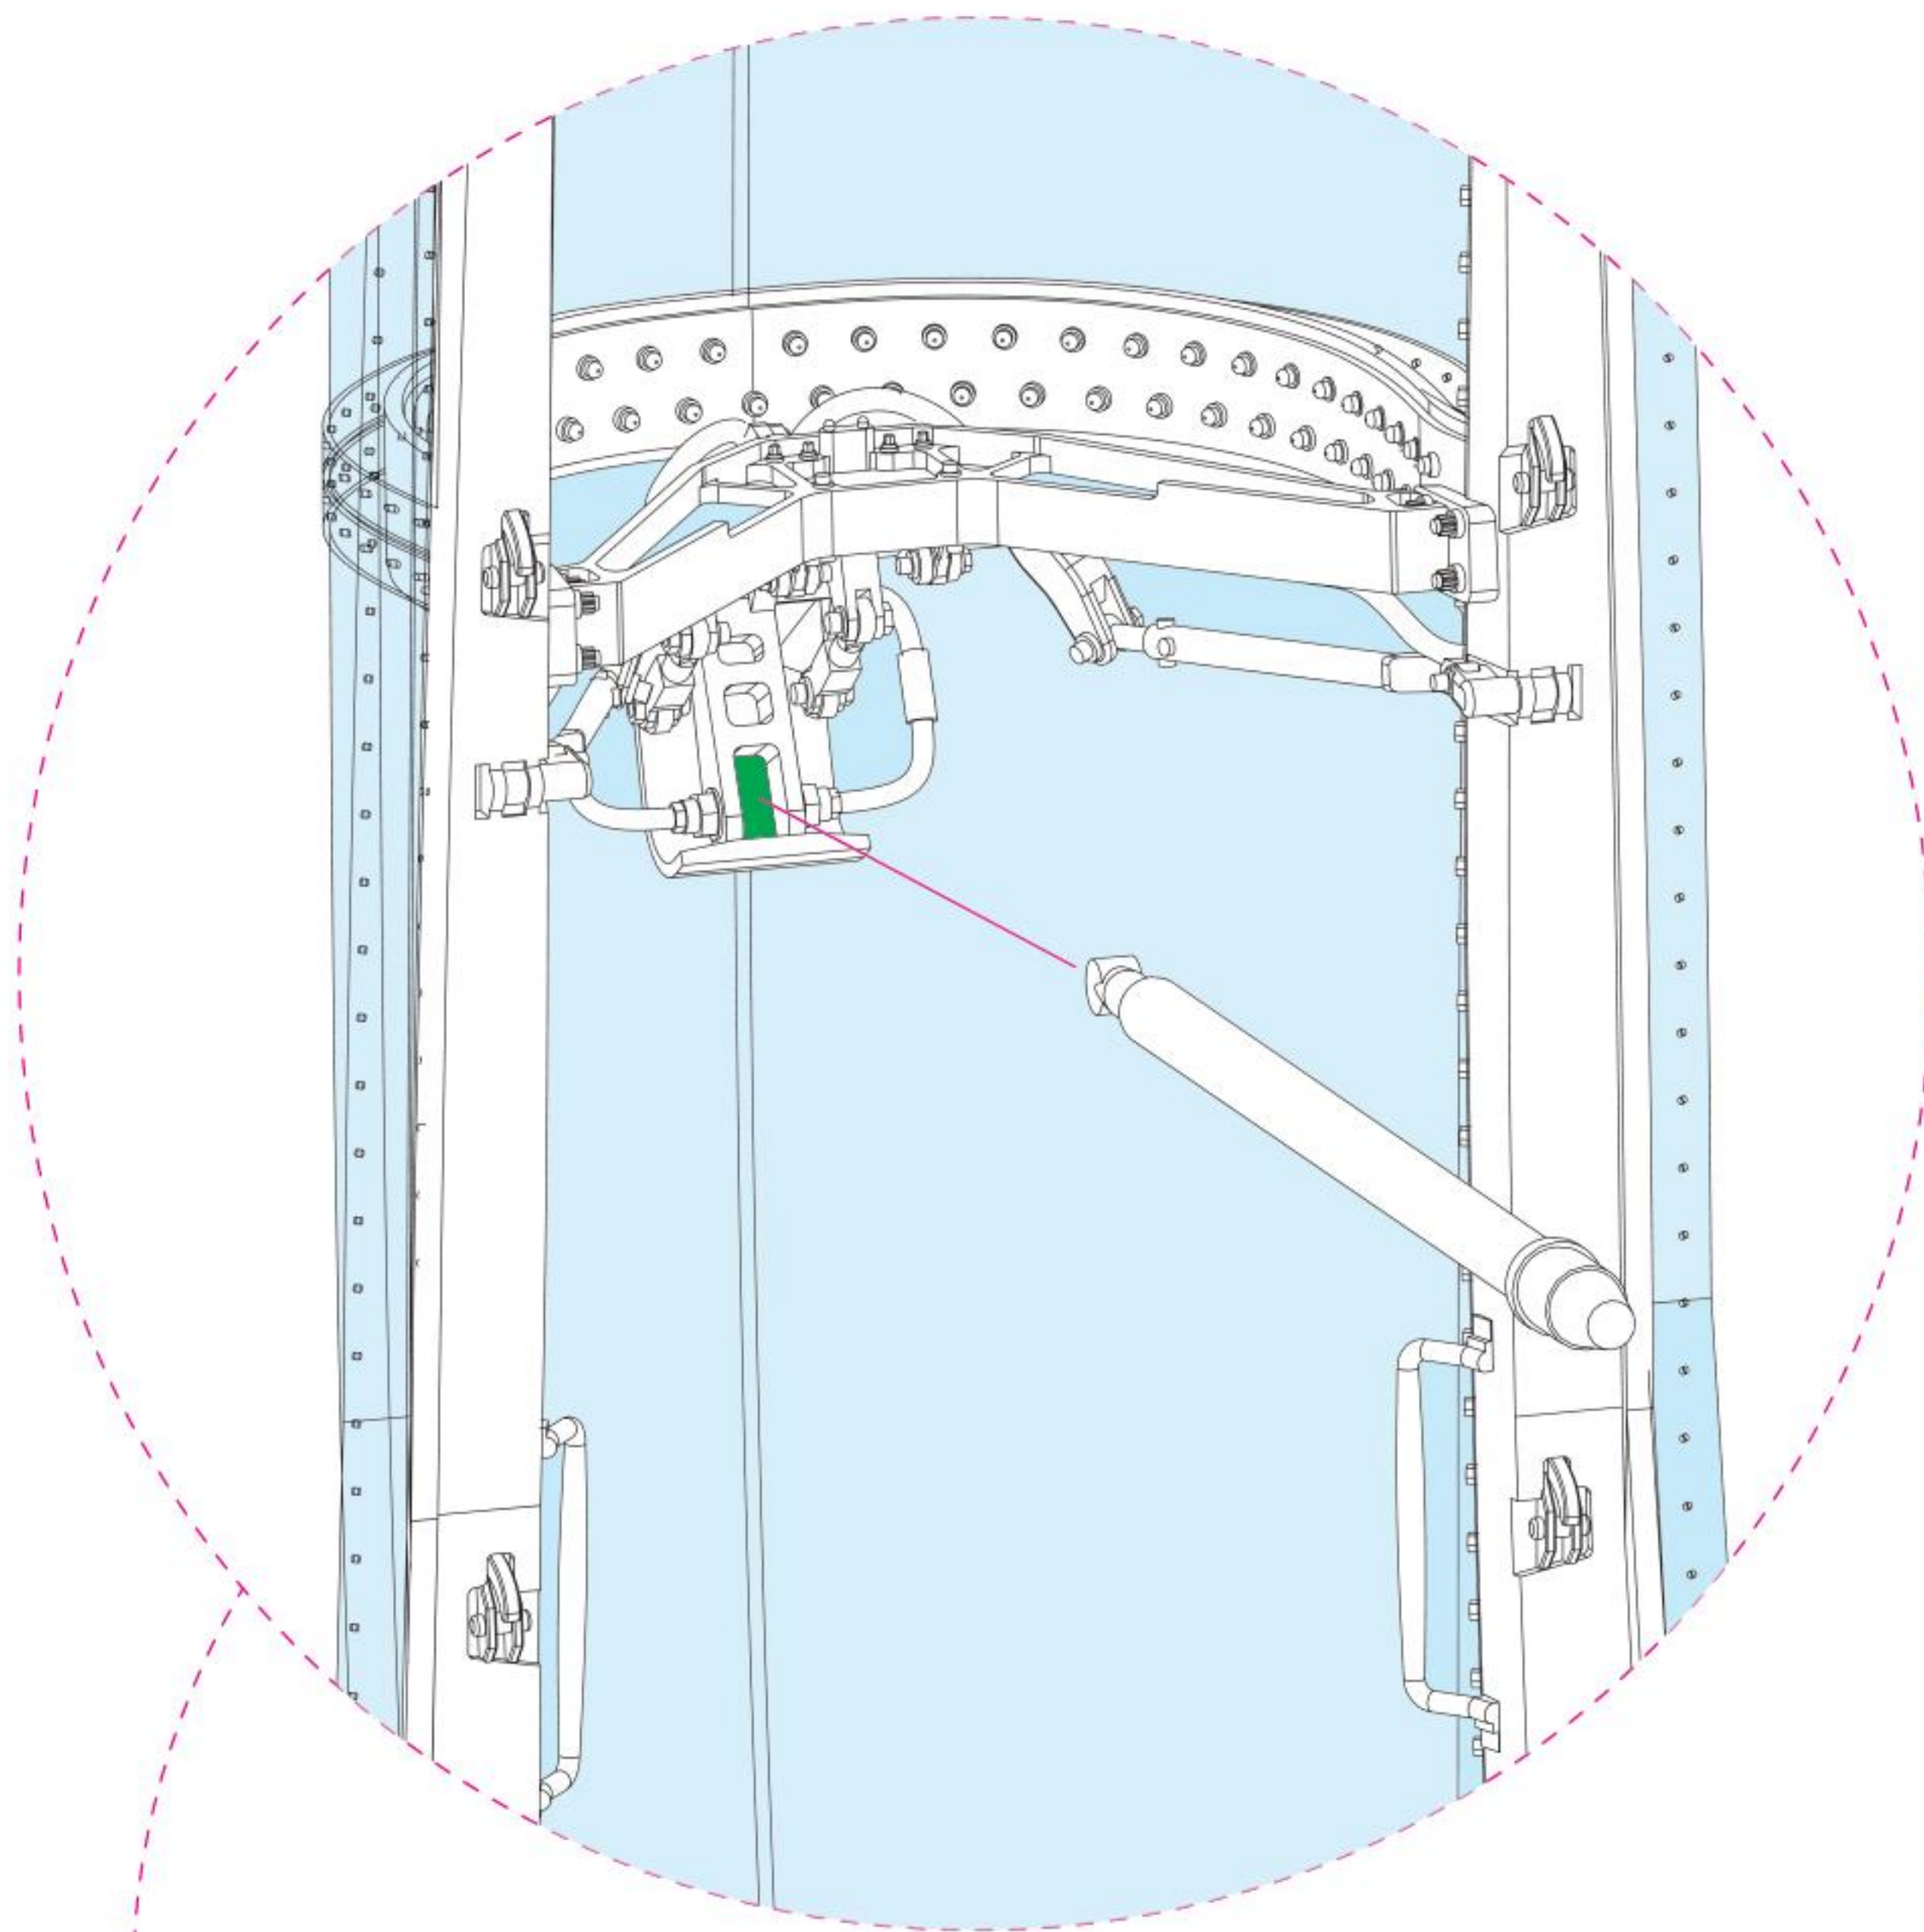

STEP 15

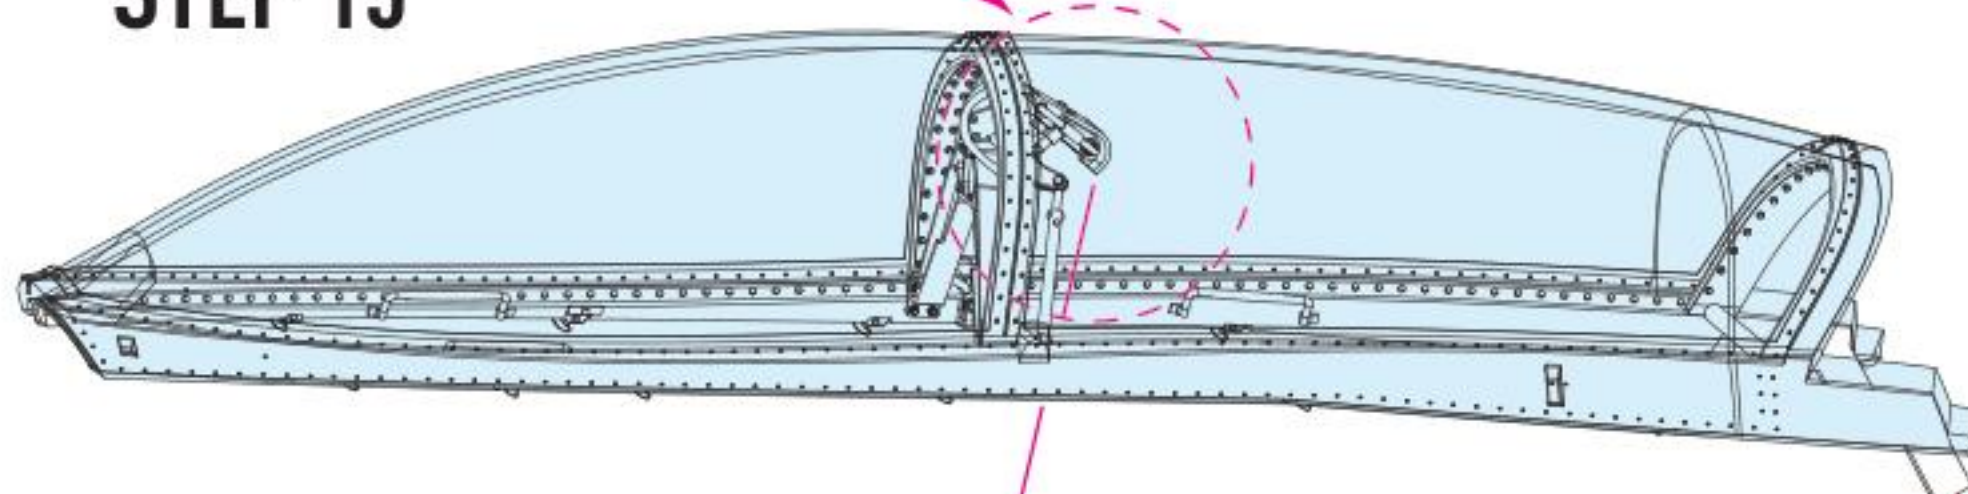


USE R18 FOR CLOSED CANOPY
OR R19 FOR OPEN CANOPY


R19




R18

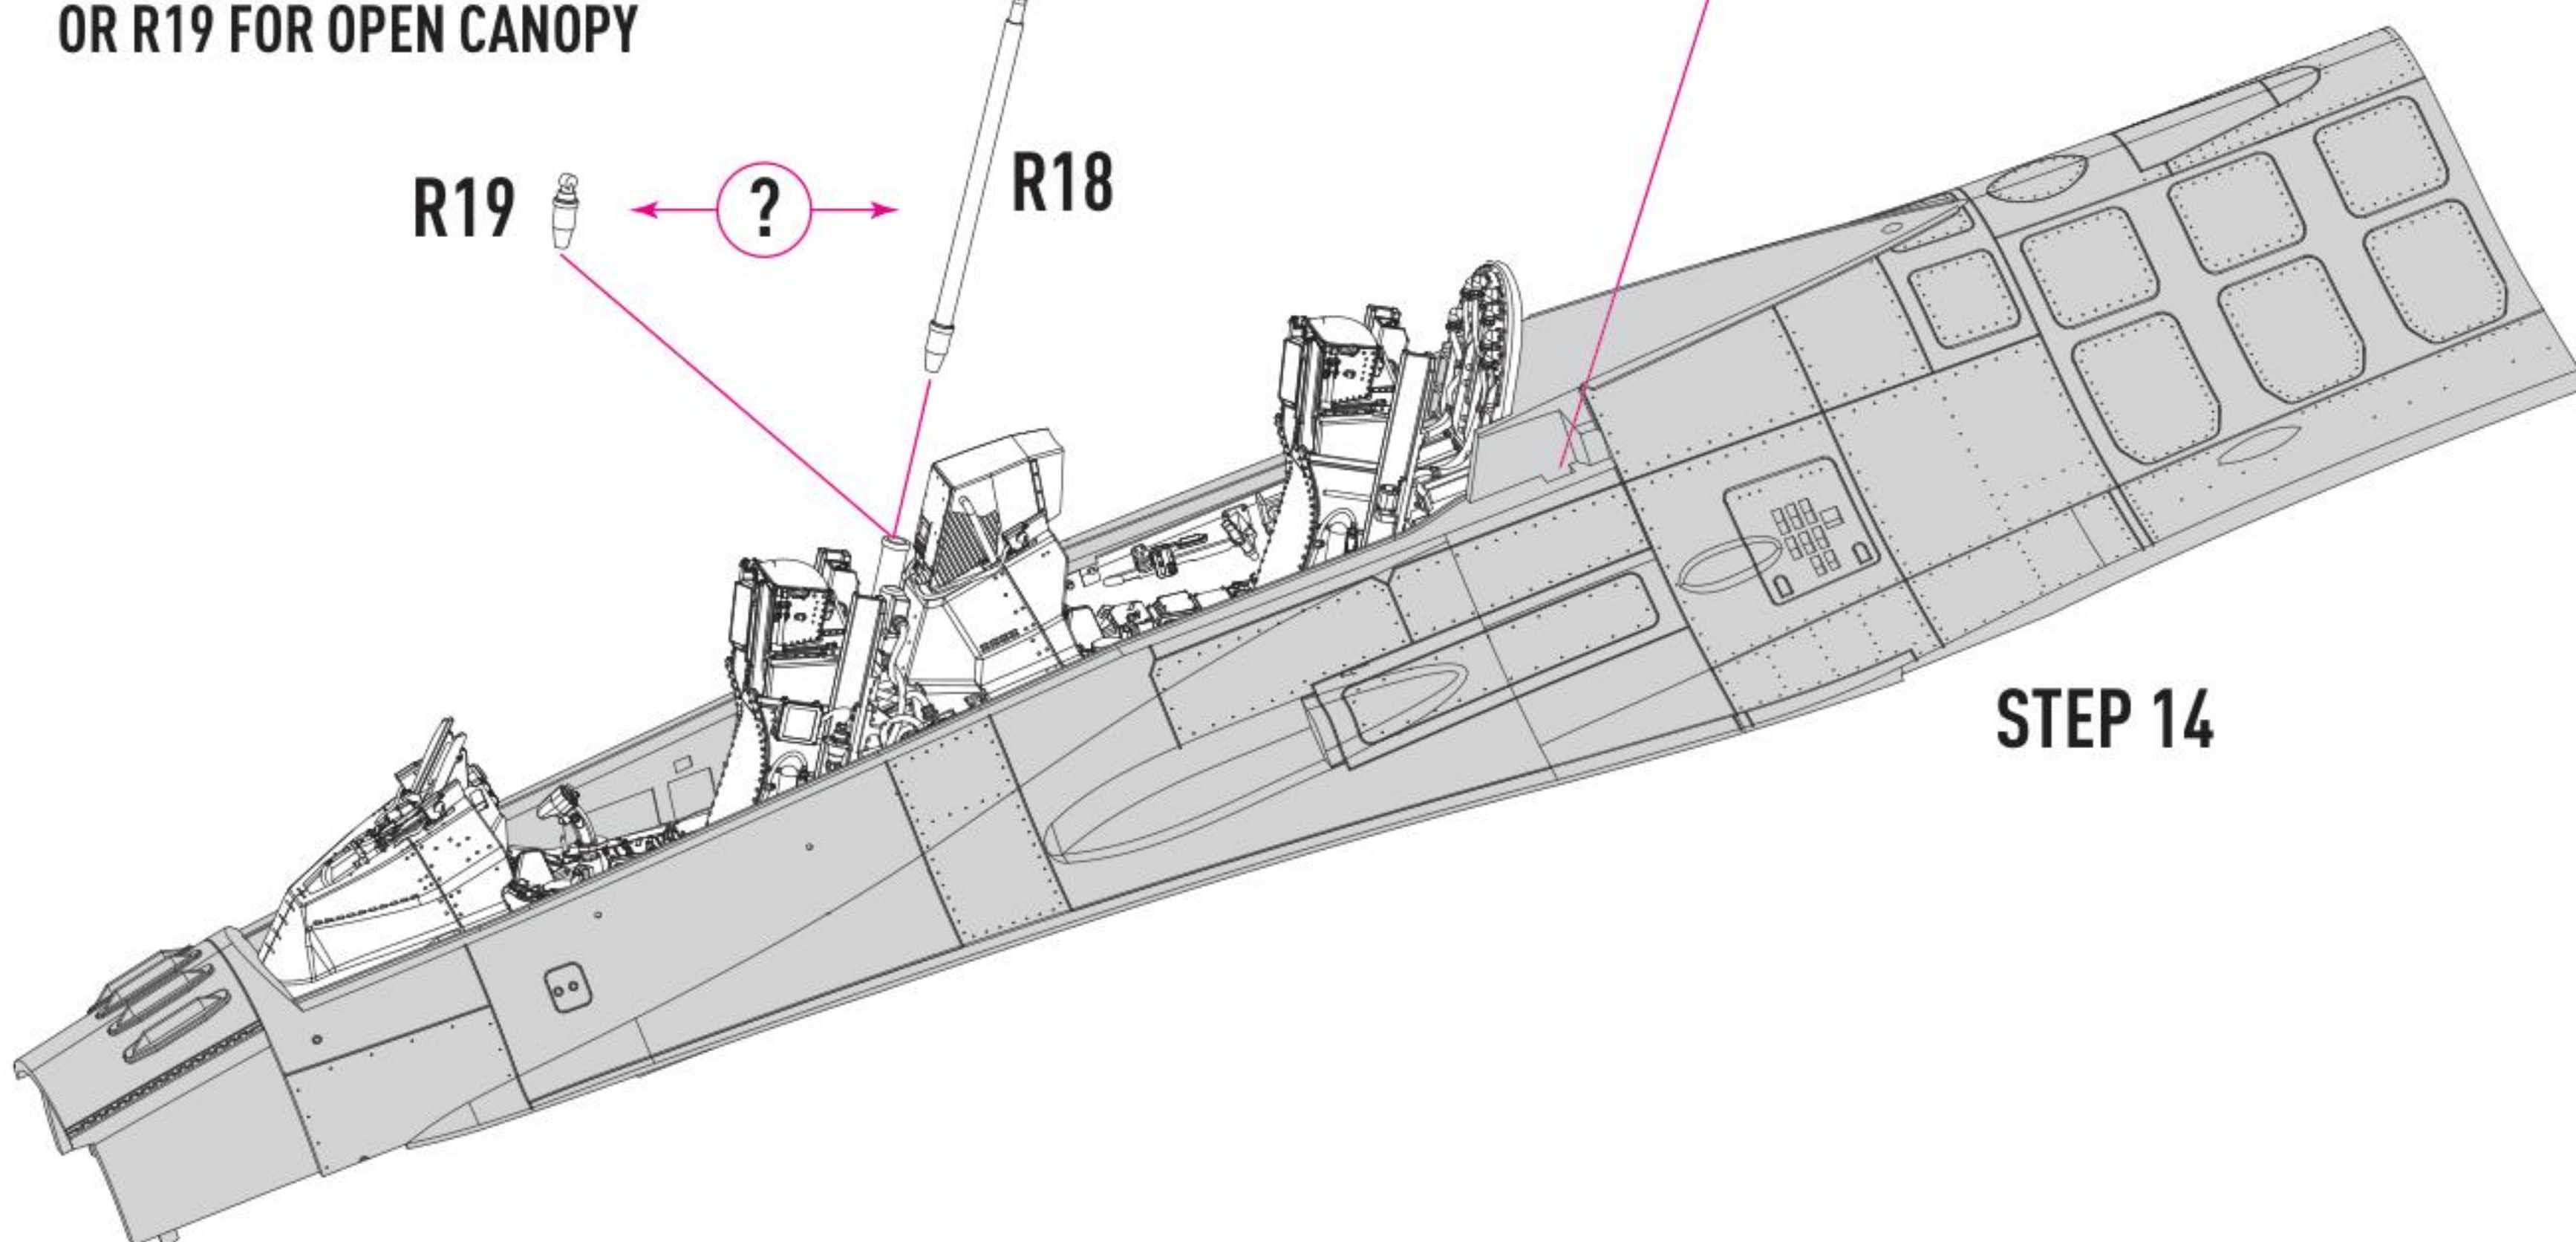

STEP 14

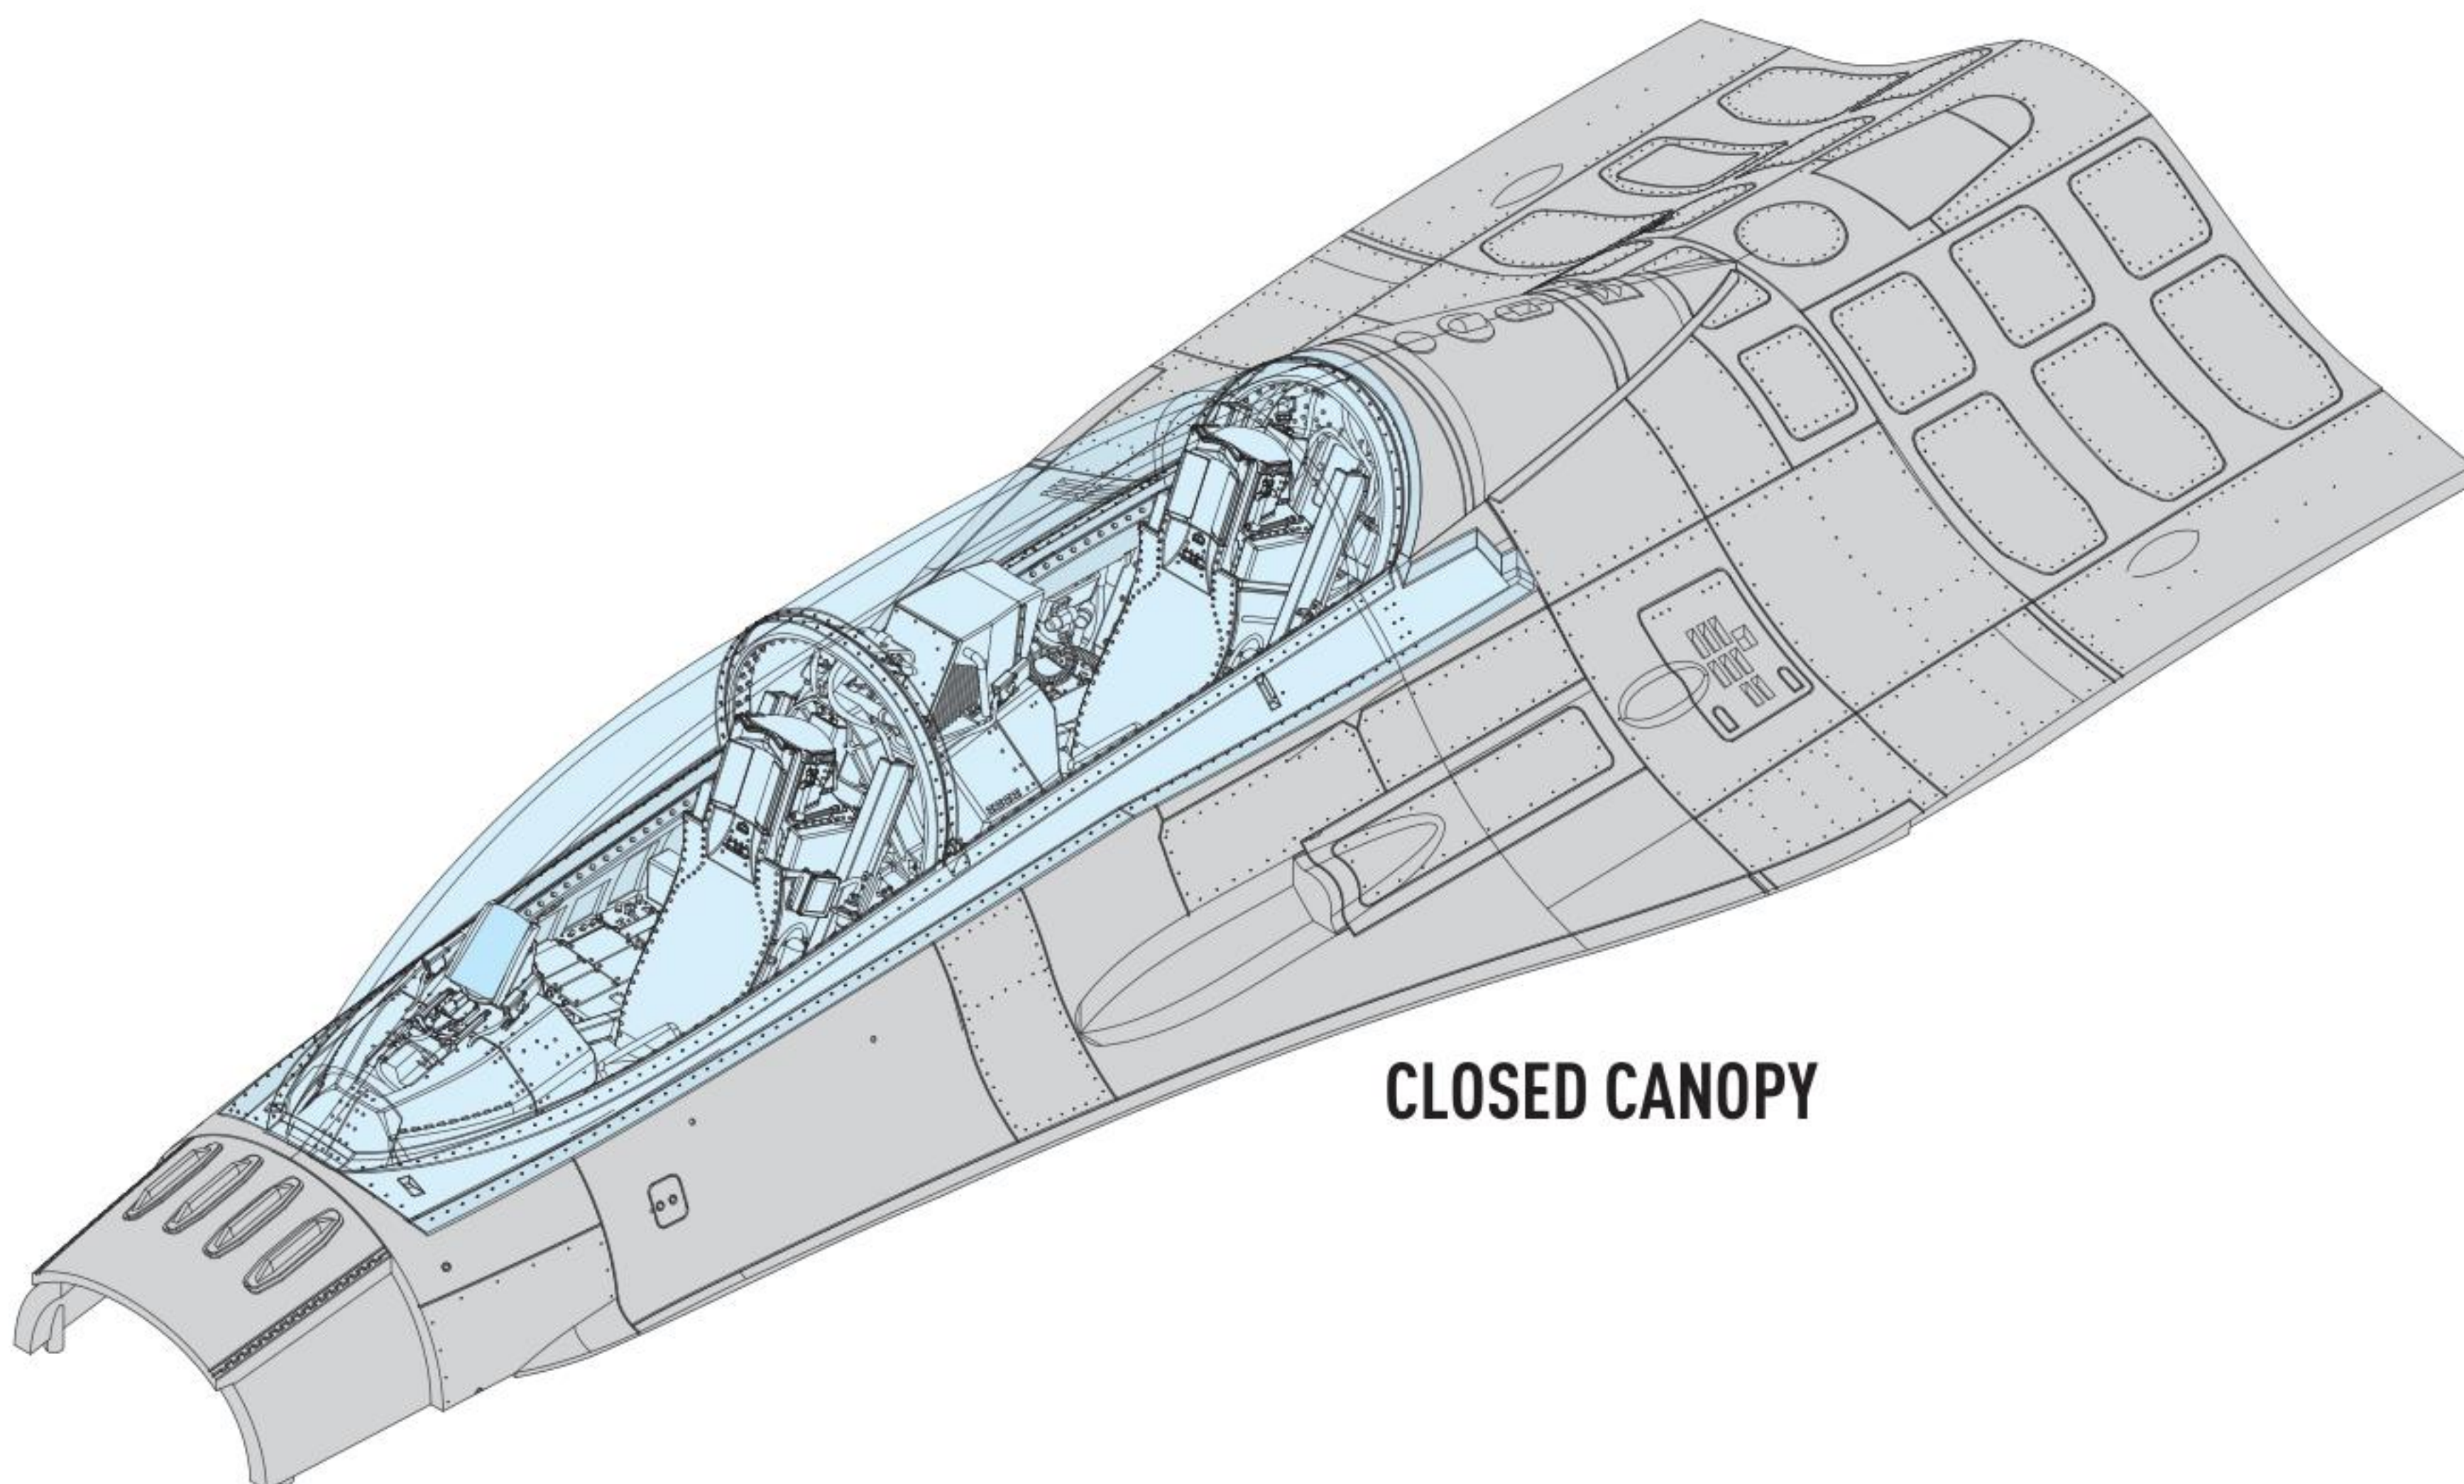


CLOSED CANOPY

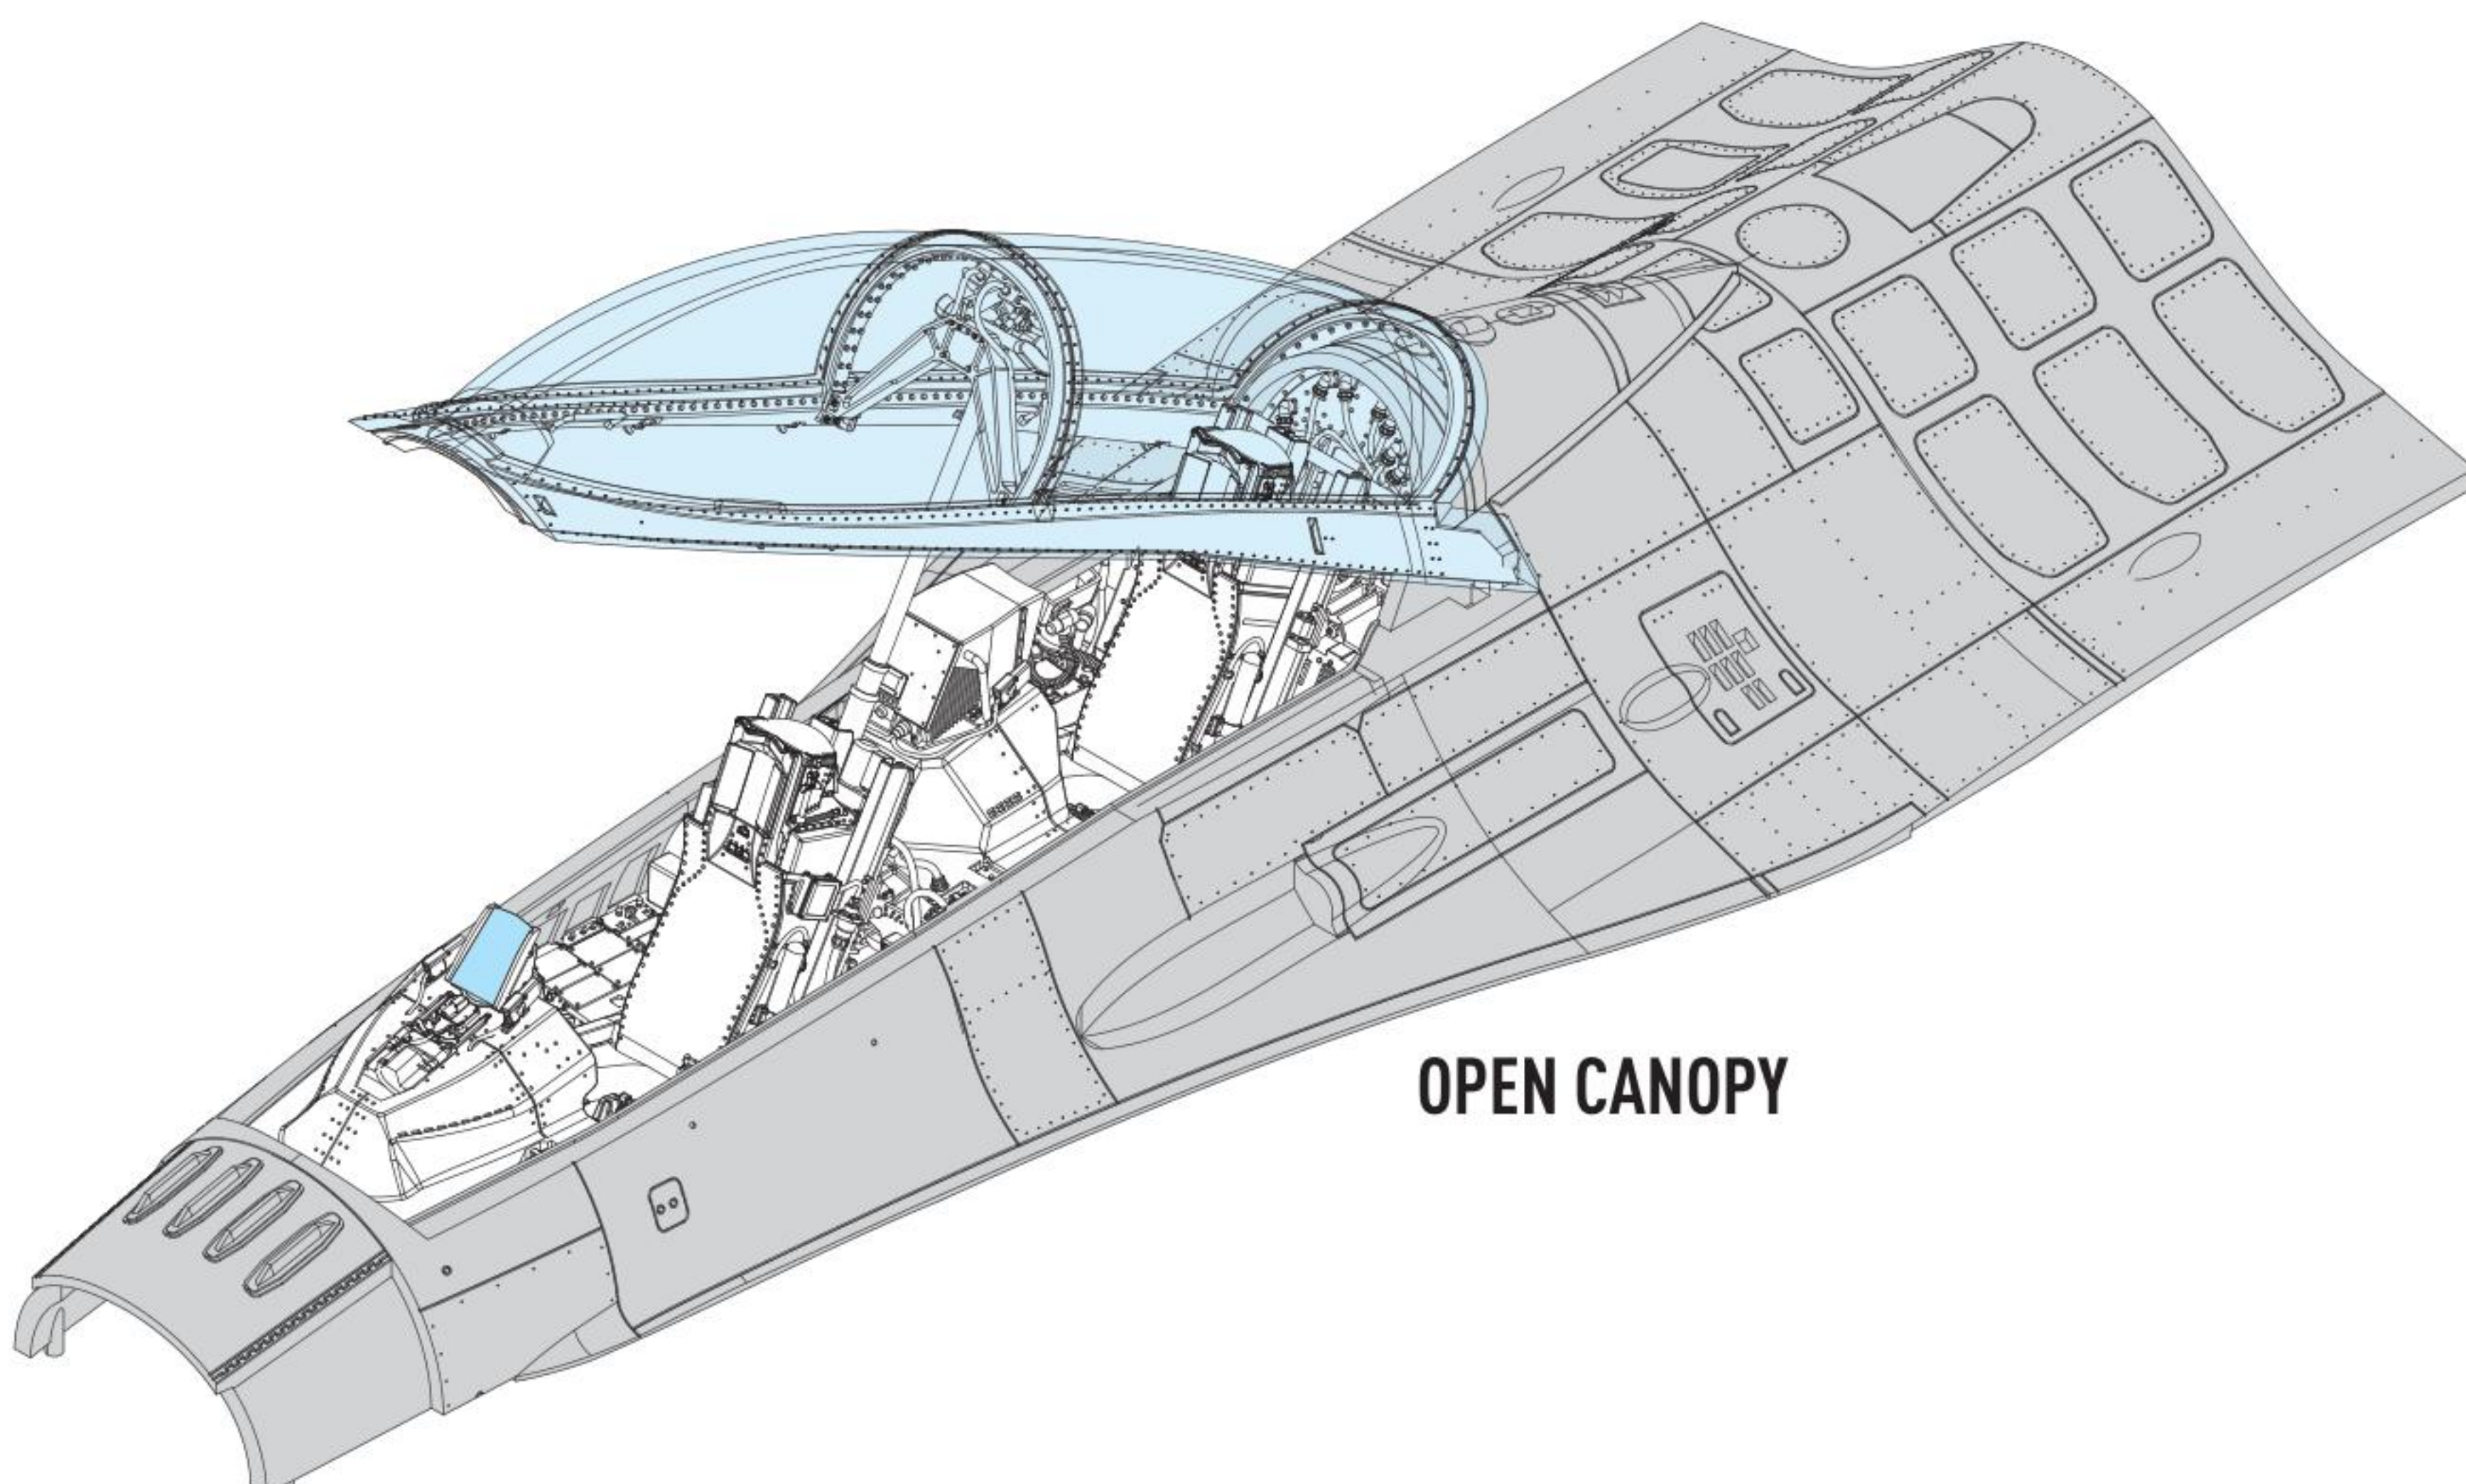


OPEN CANOPY

DECAL INSTRUCTION


FRD COCKPIT
LEFT

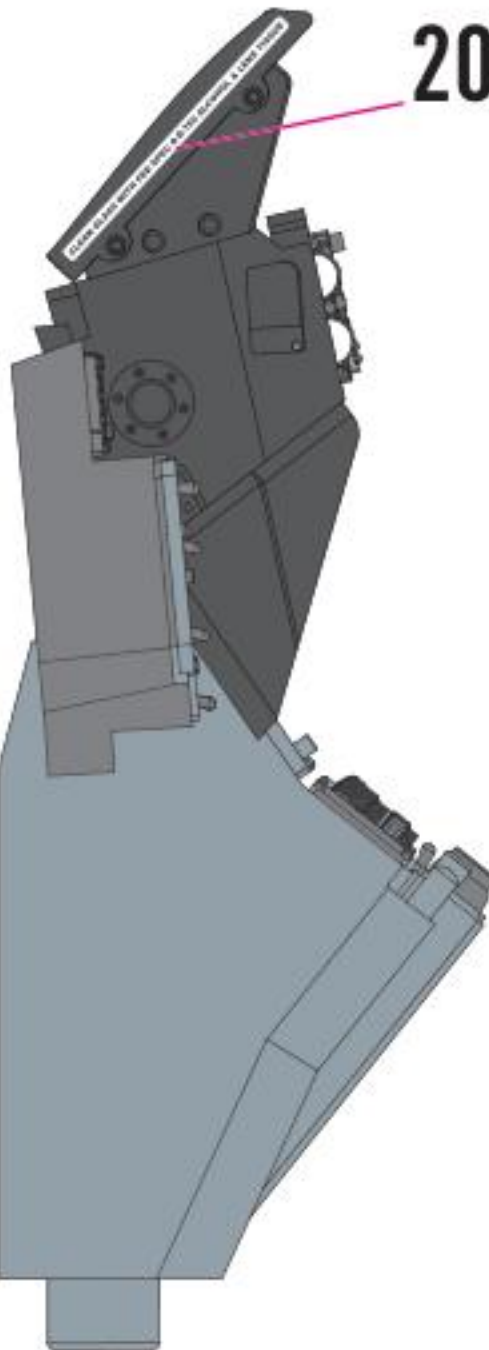


FRD COCKPIT
FRONT

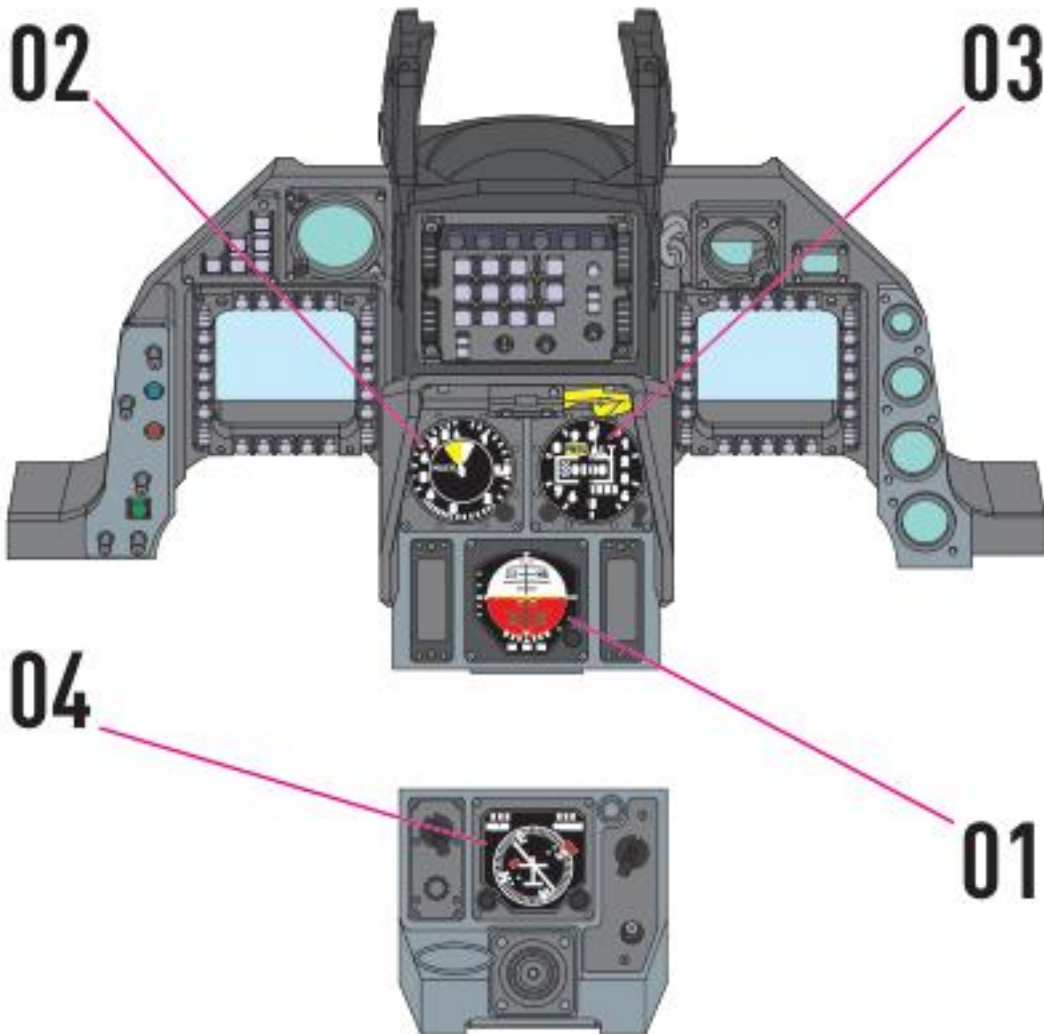


AFT COCKPIT
FRONT

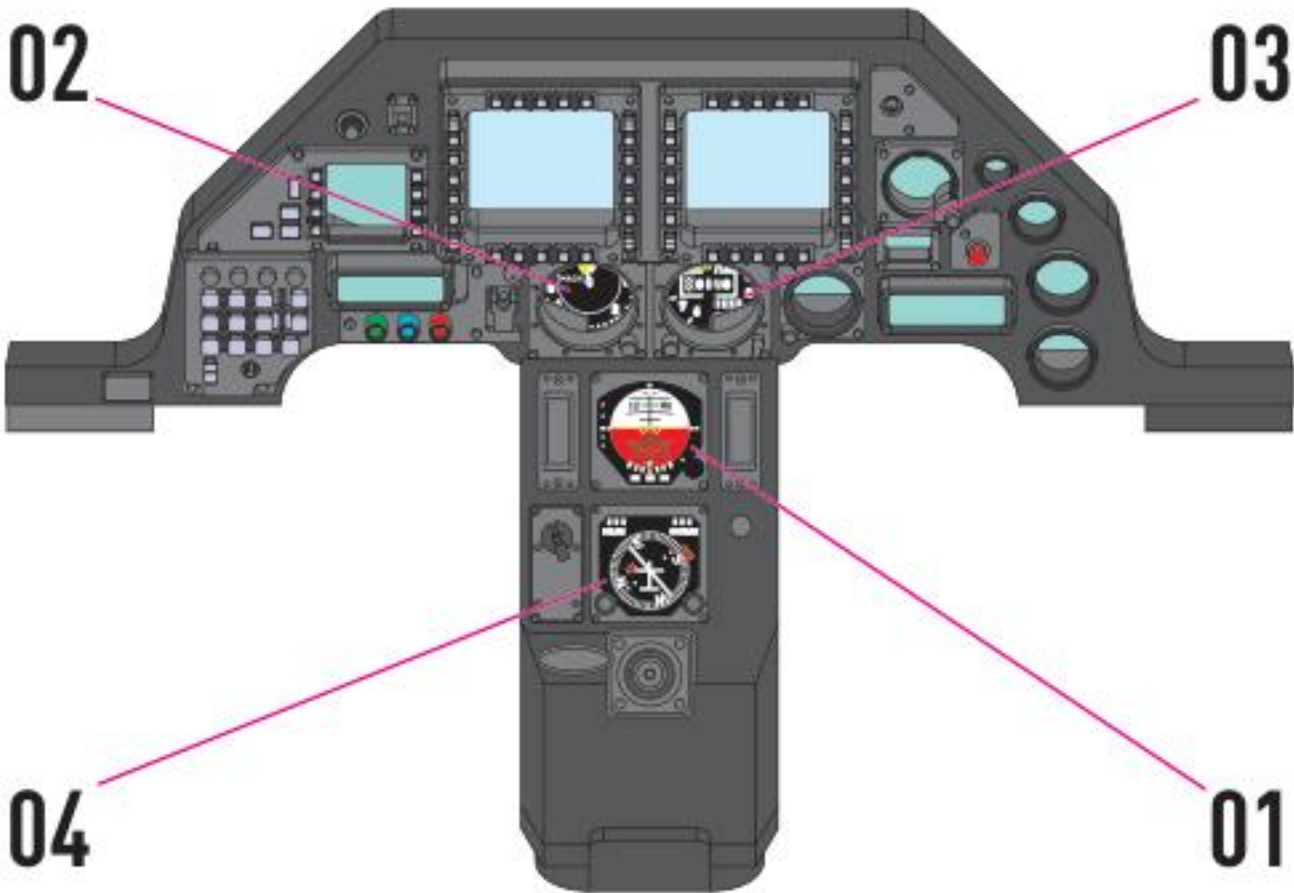


FRD SEAT
RIGHT

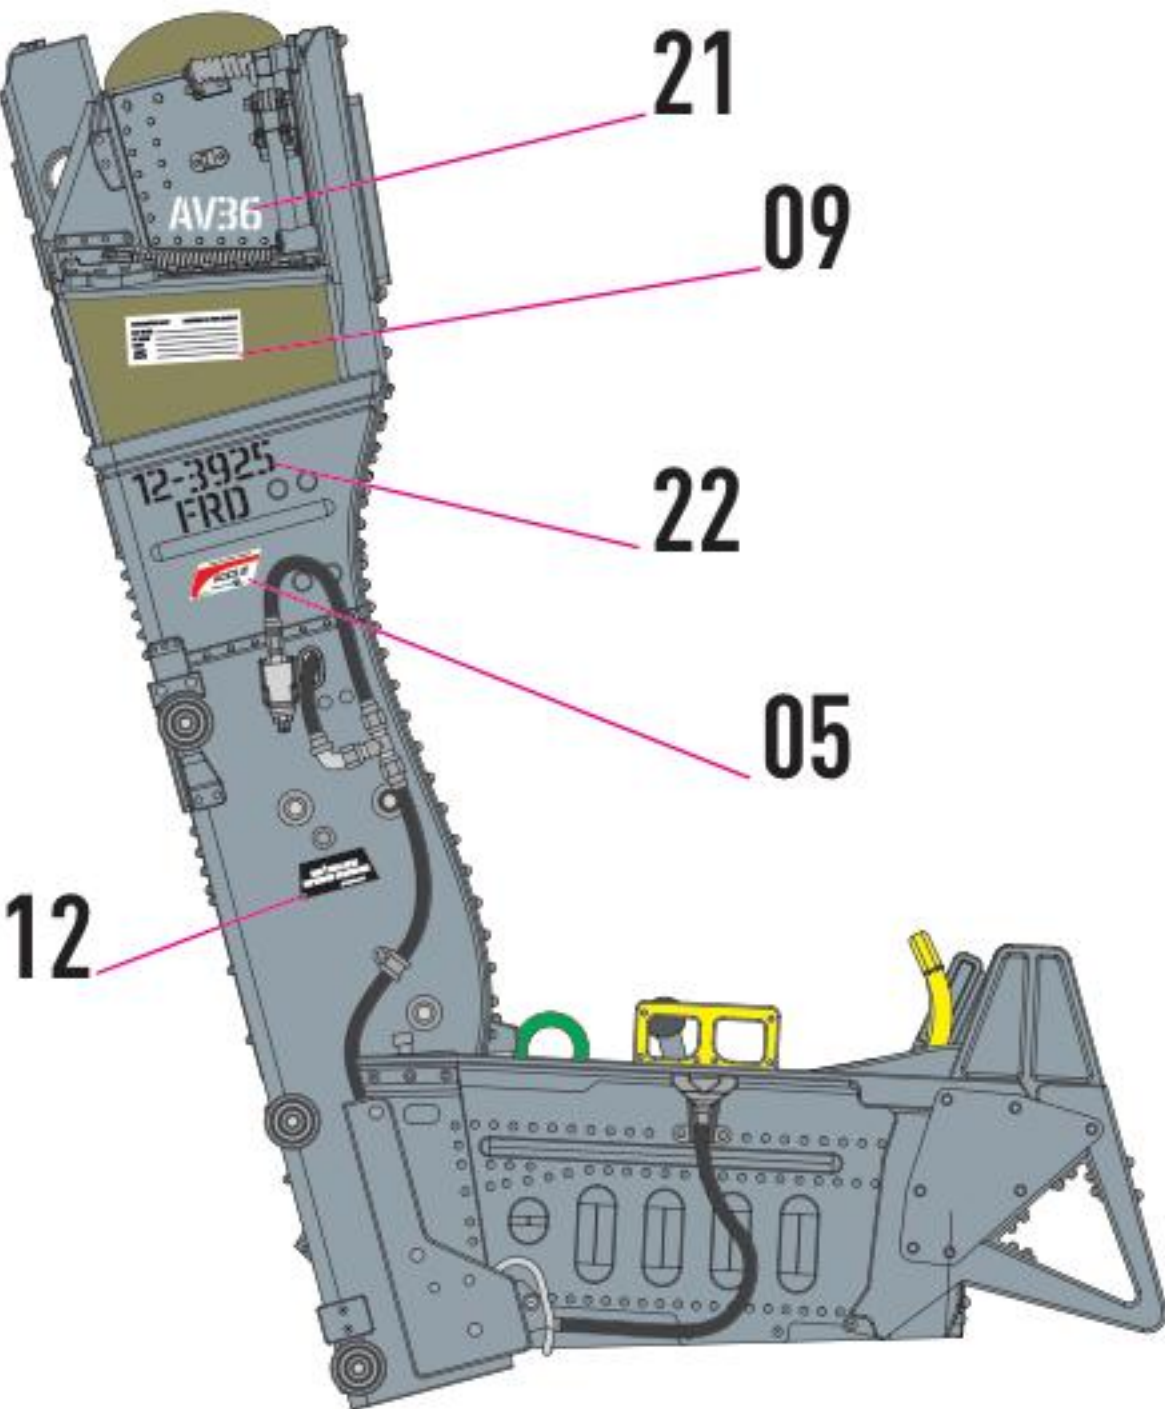


FRD & AFT SEAT
TOP

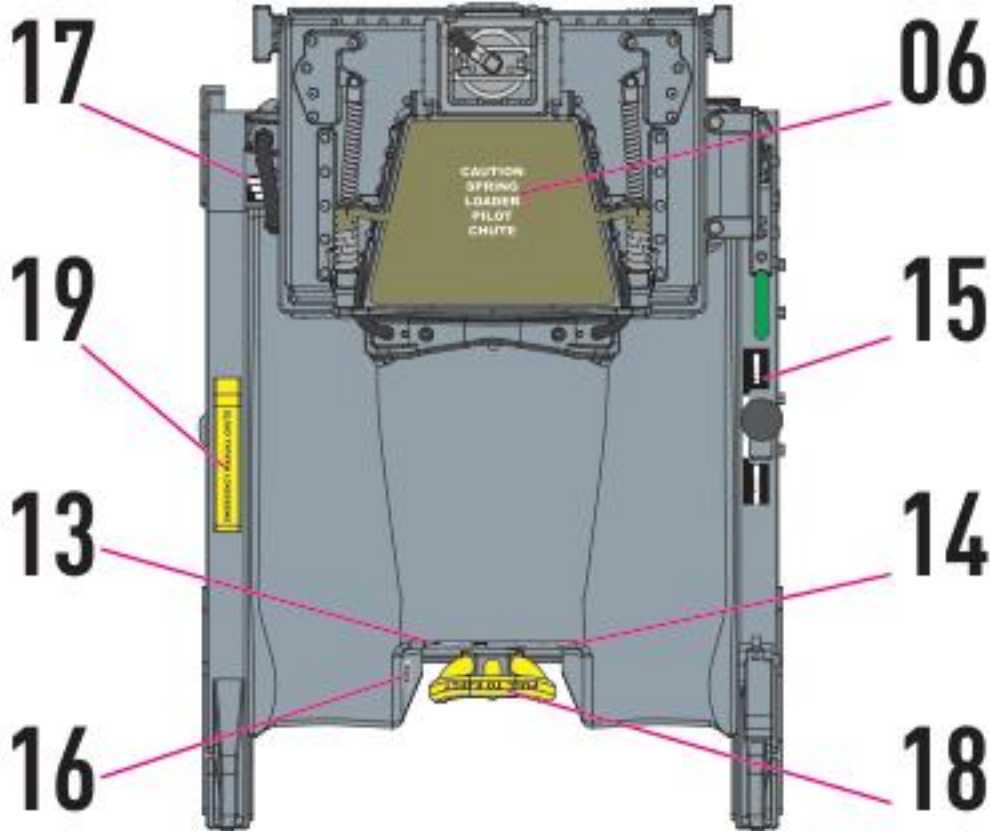


FRD & AFT SEAT
LEFT

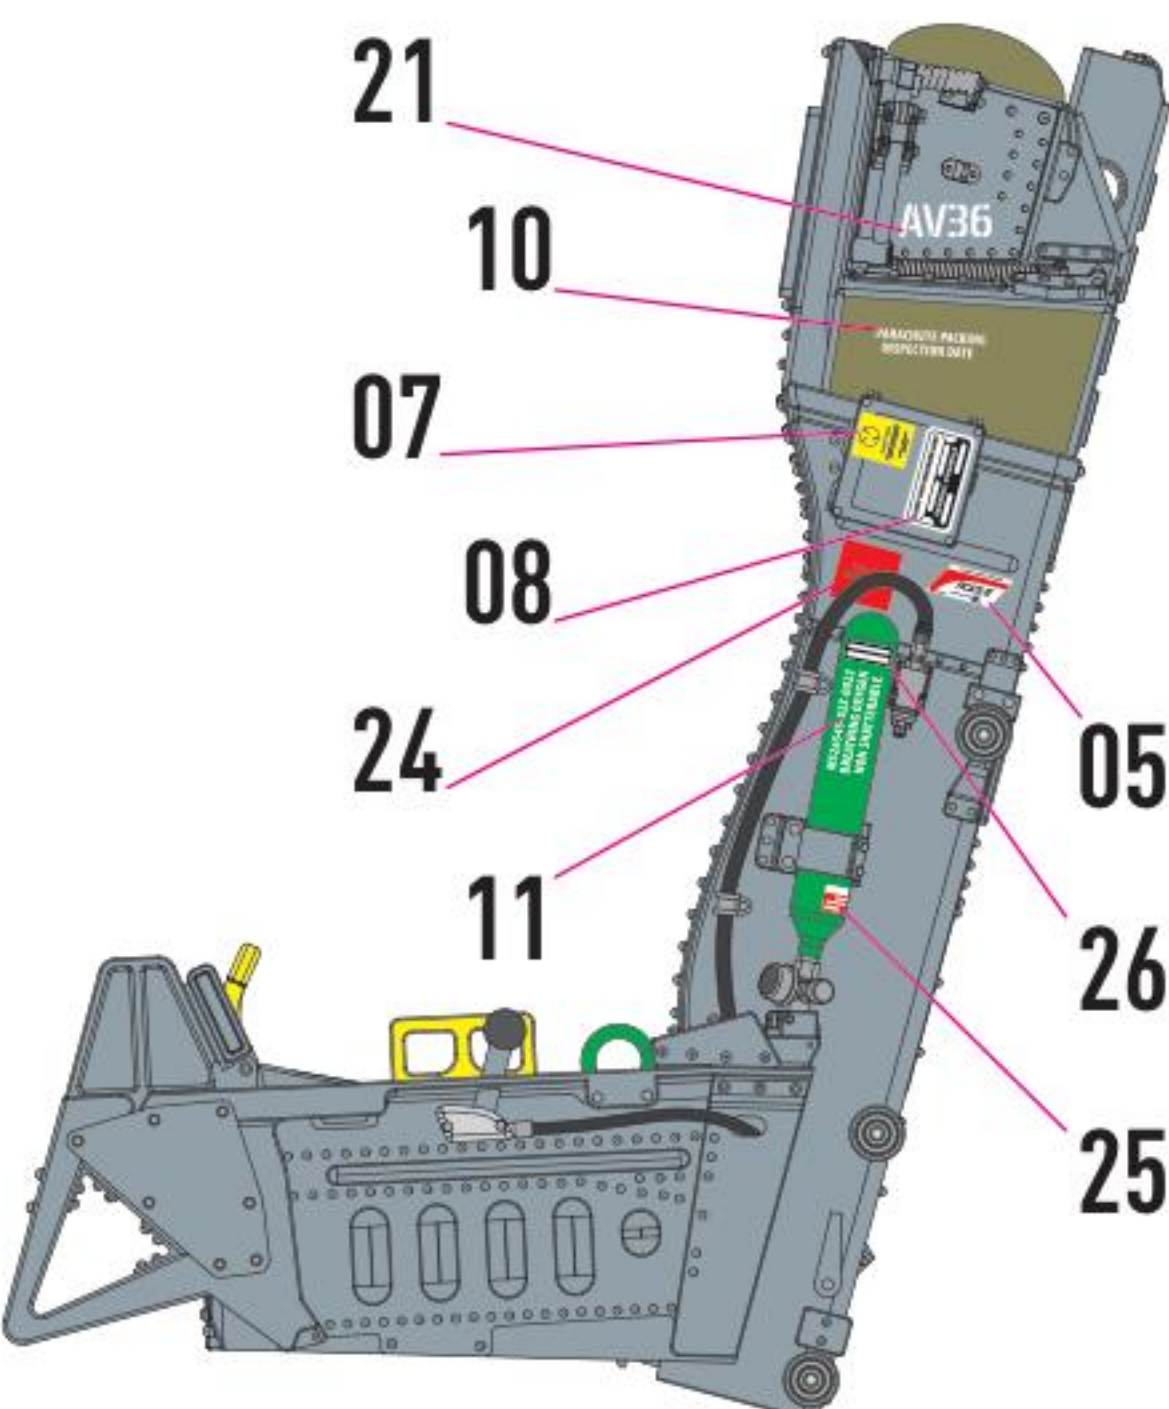

AFT SEAT
RIGHT

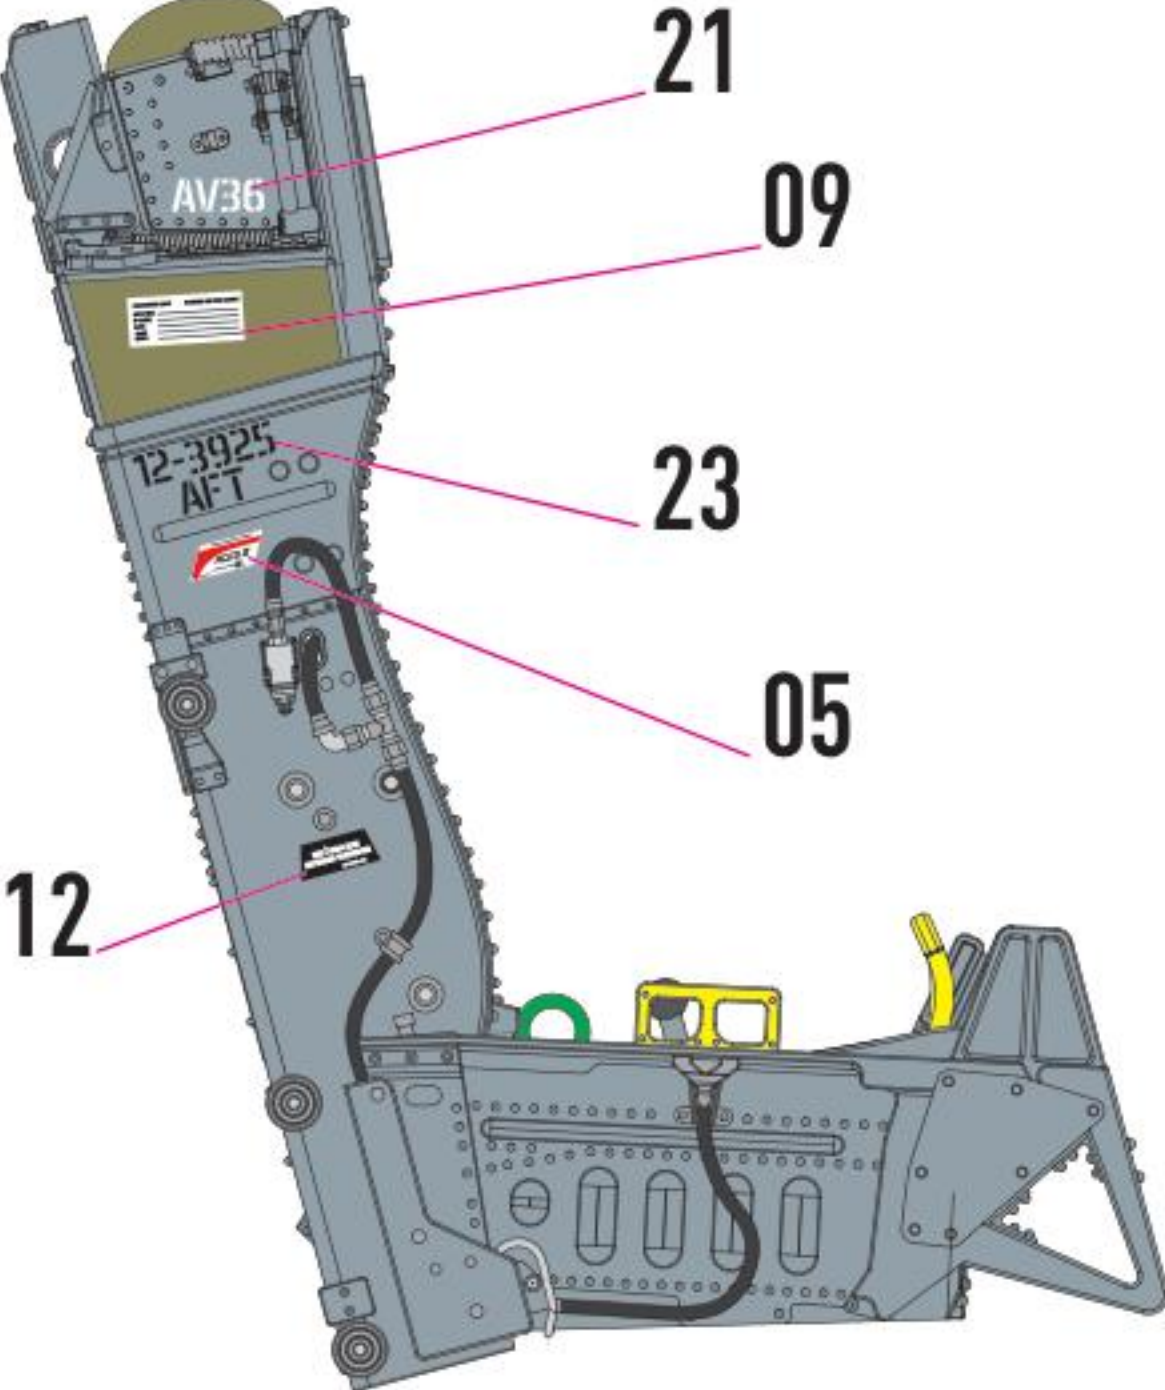

FRD & AFT SEAT
FRONT

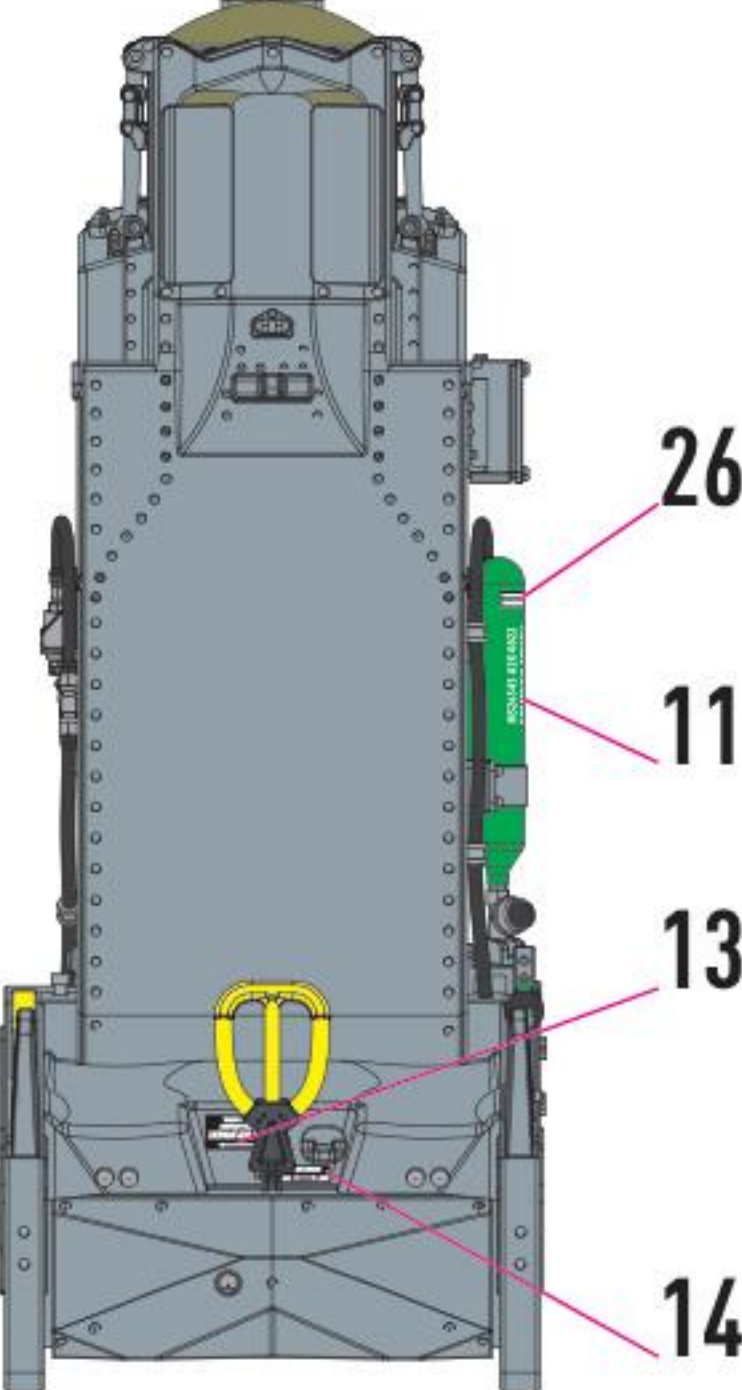

FRD & AFT SEAT
BACK

