





USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS

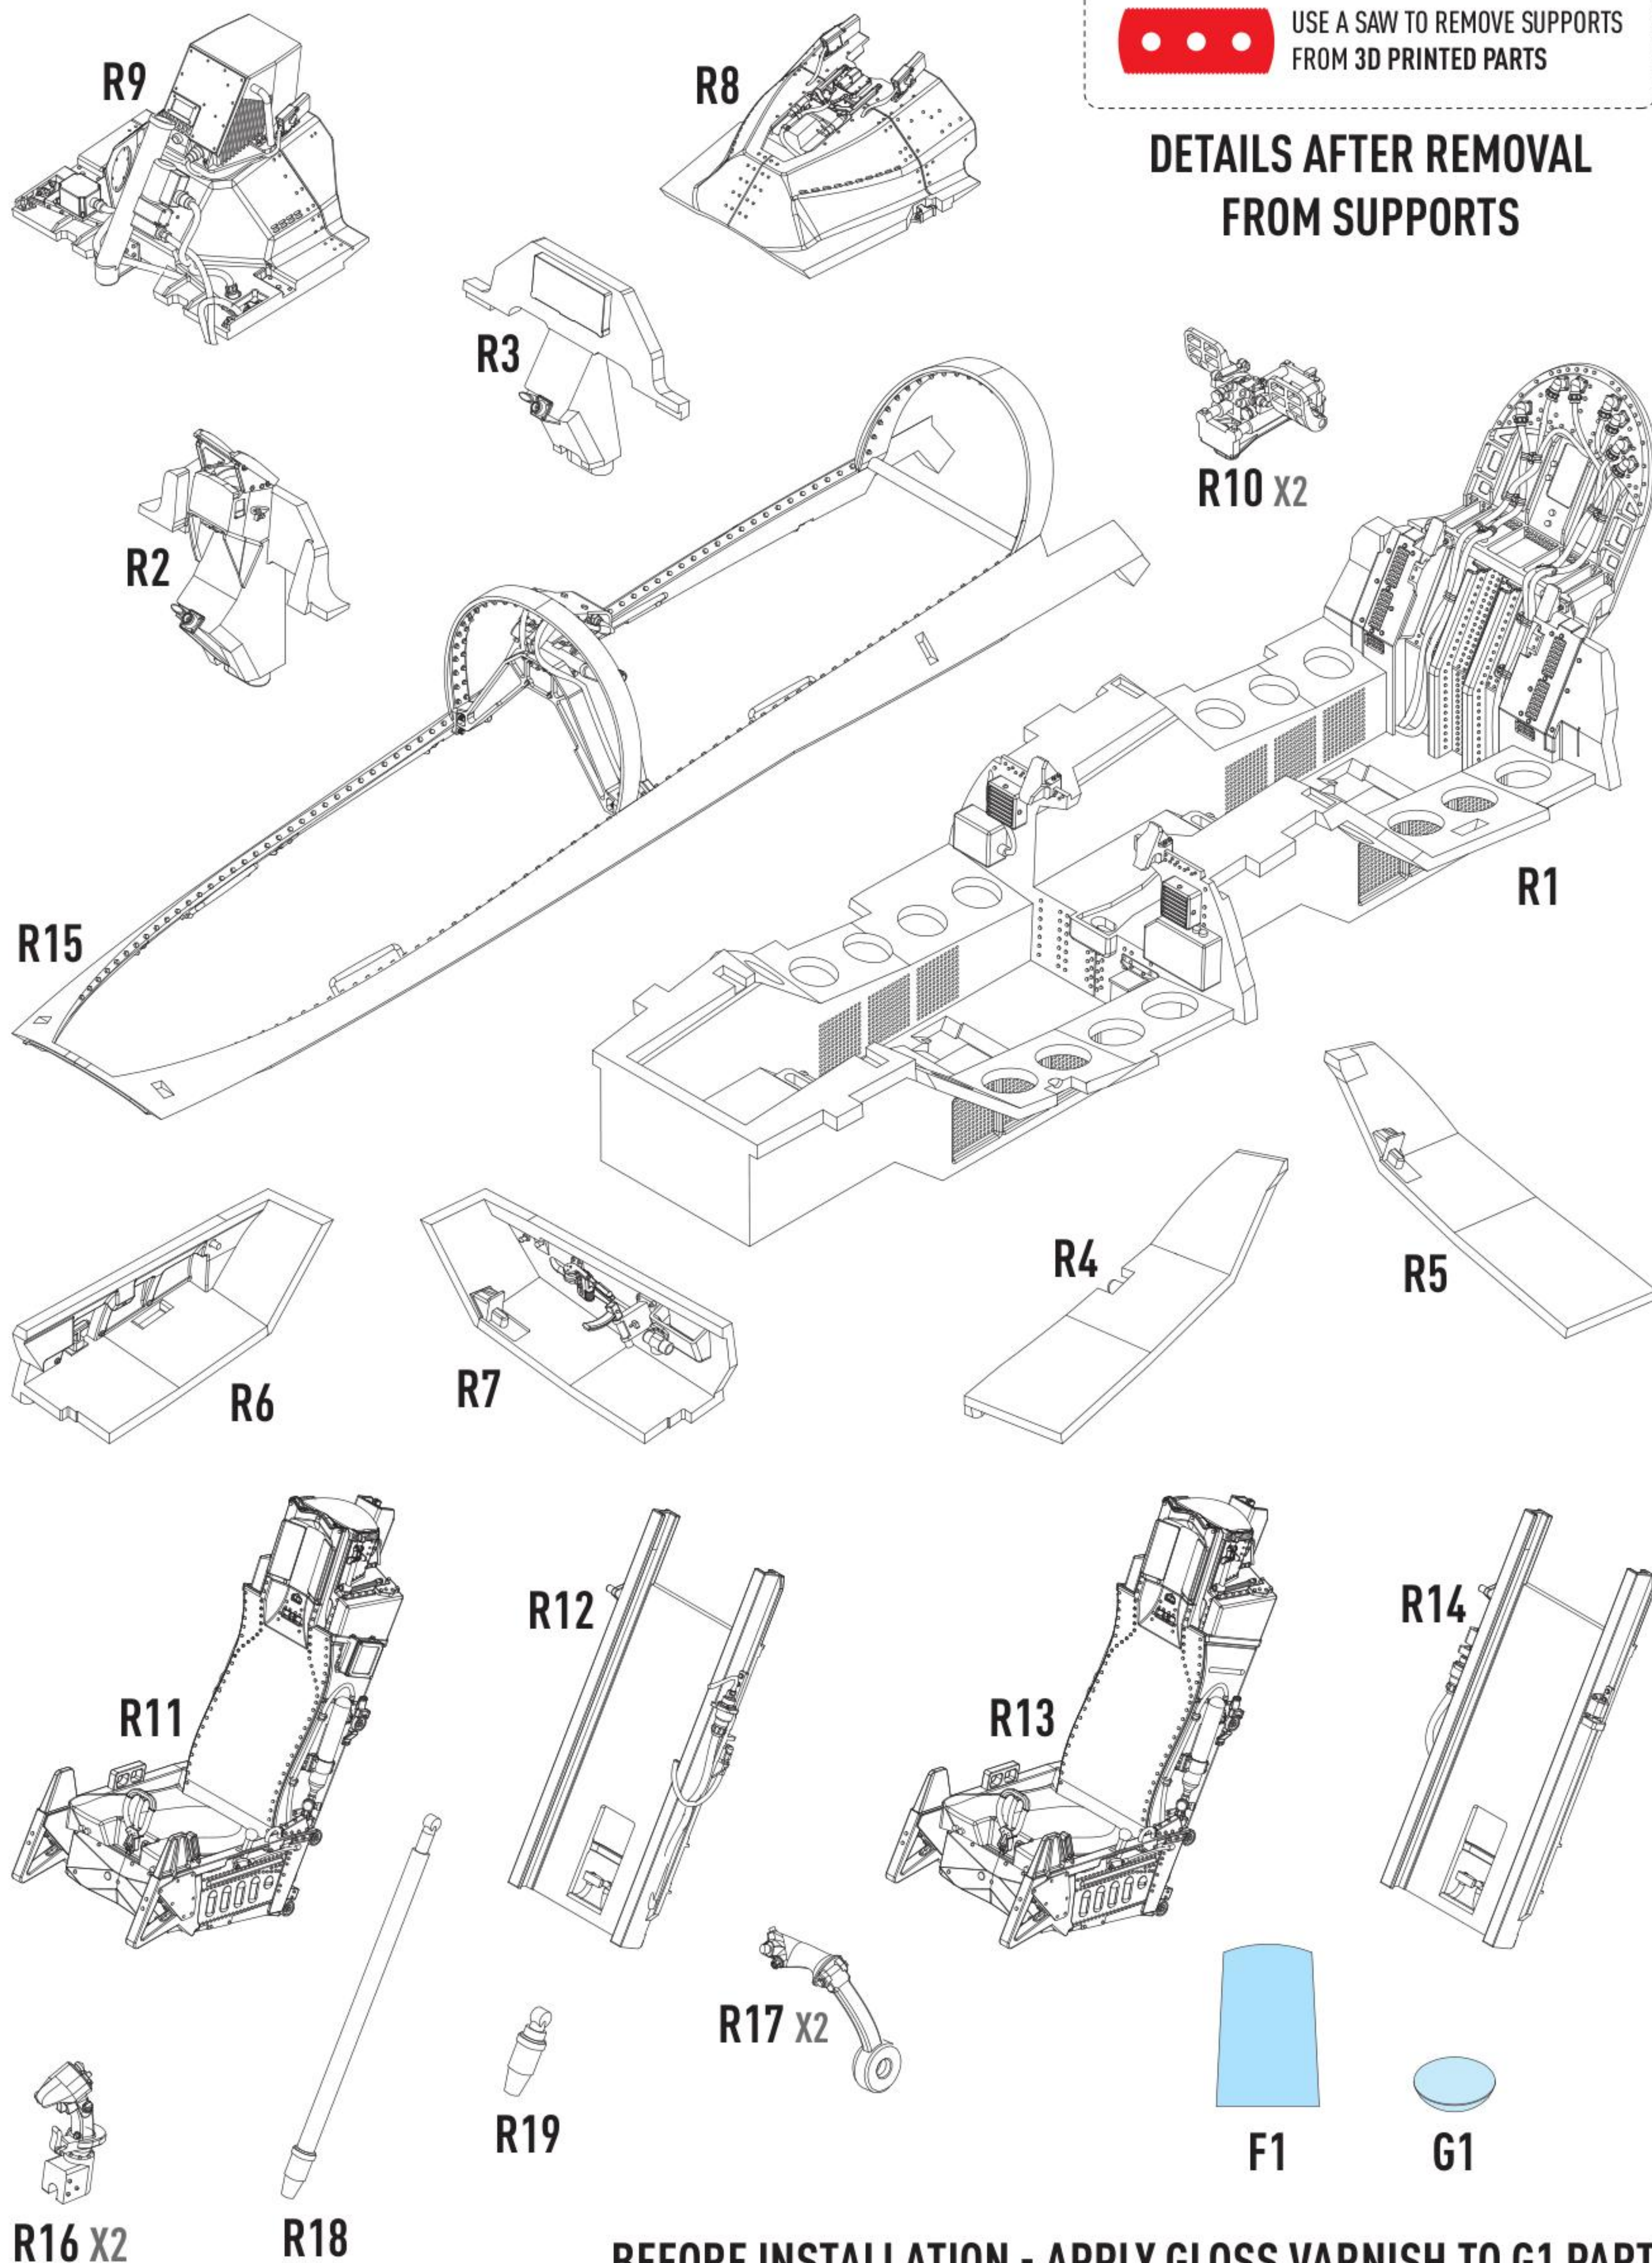


BEFORE INSTALLATION - APPLY GLOSS VARNISH TO G1 PART


3D-DECALS INSTRUCTION

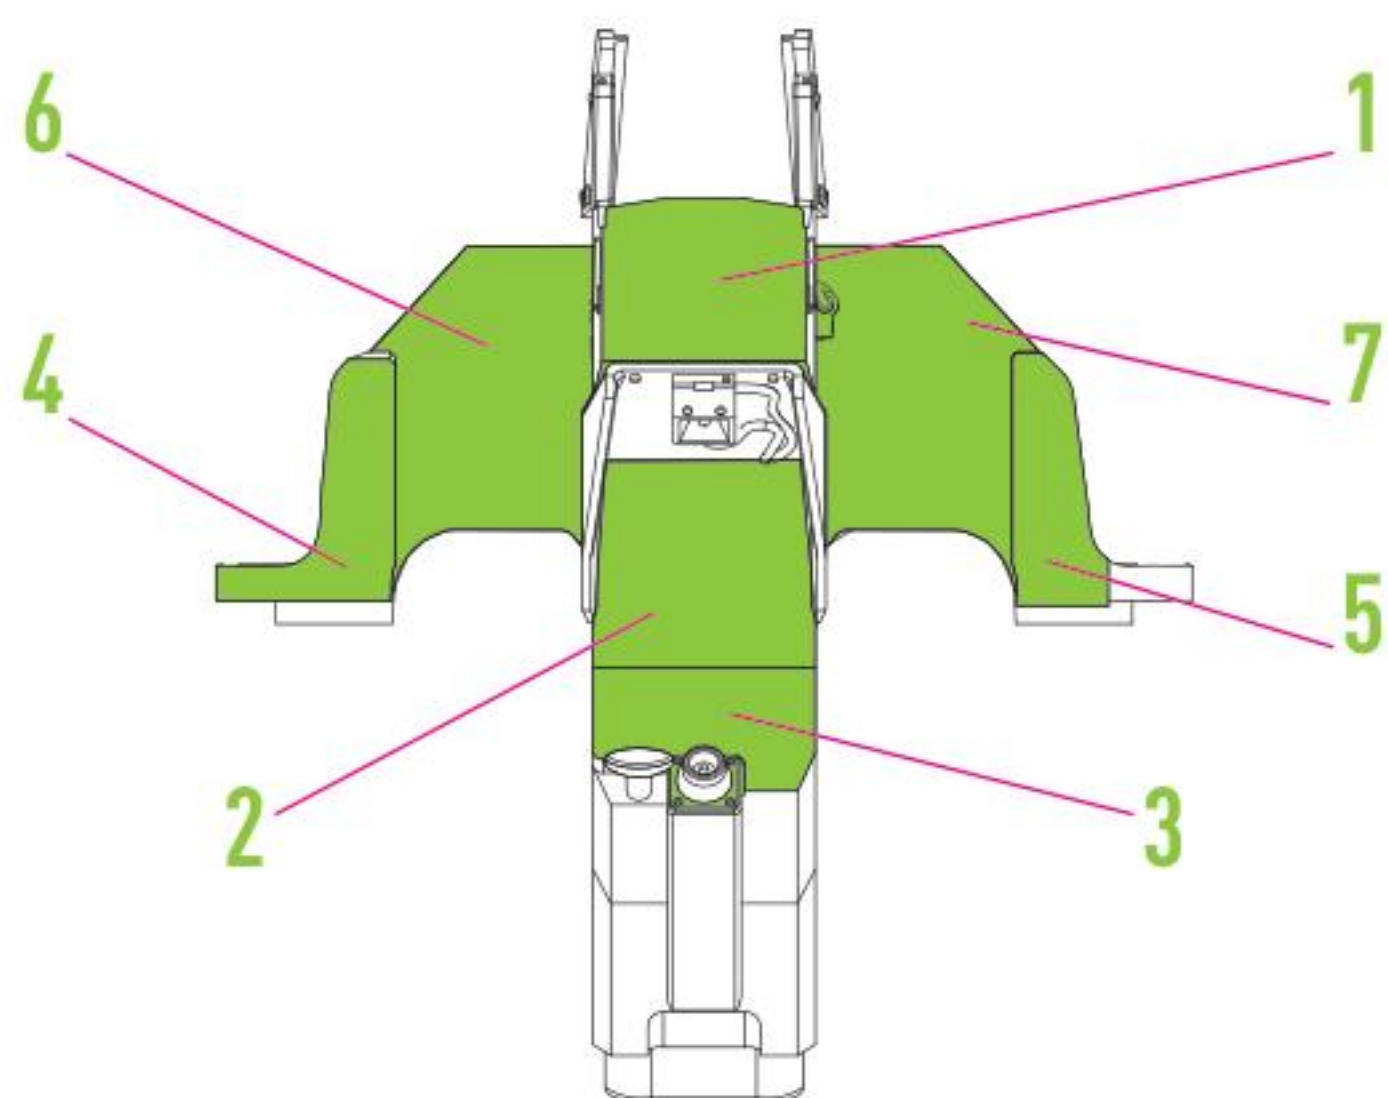


R2

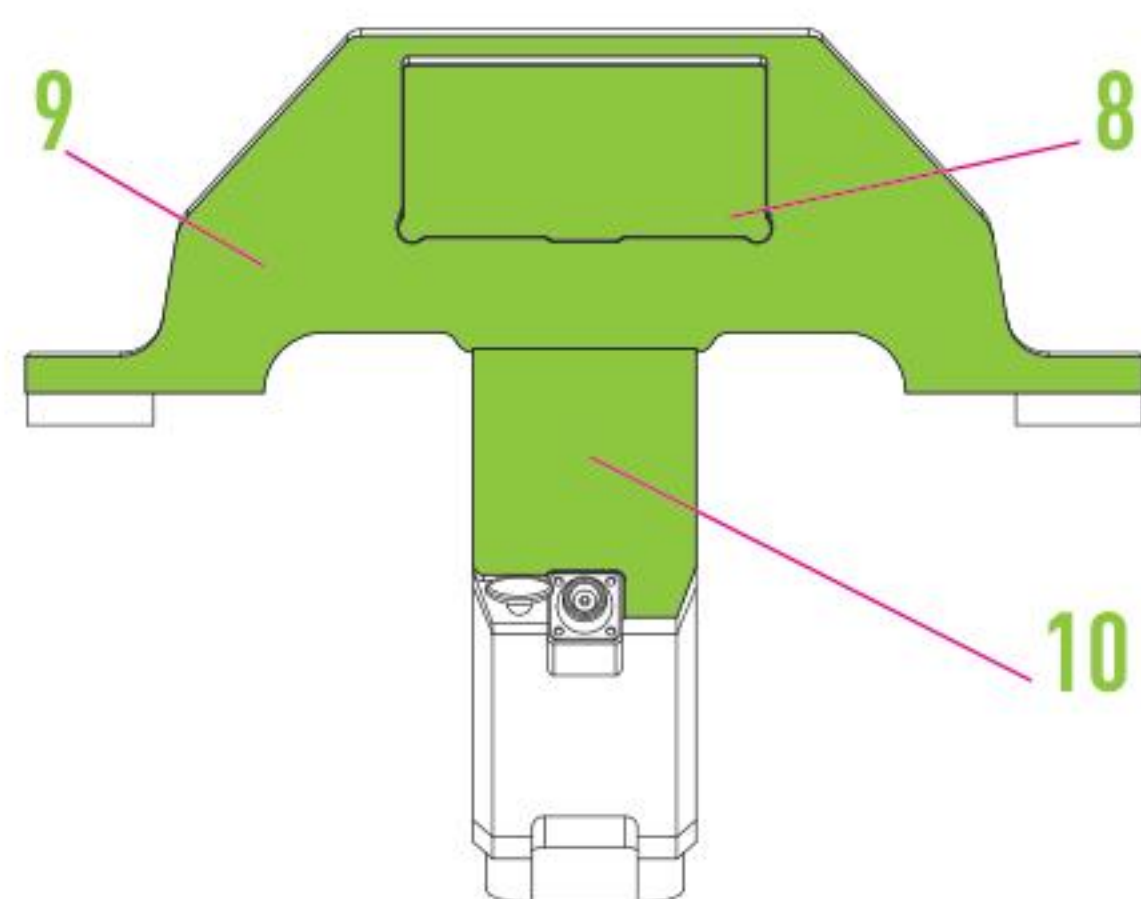


R3

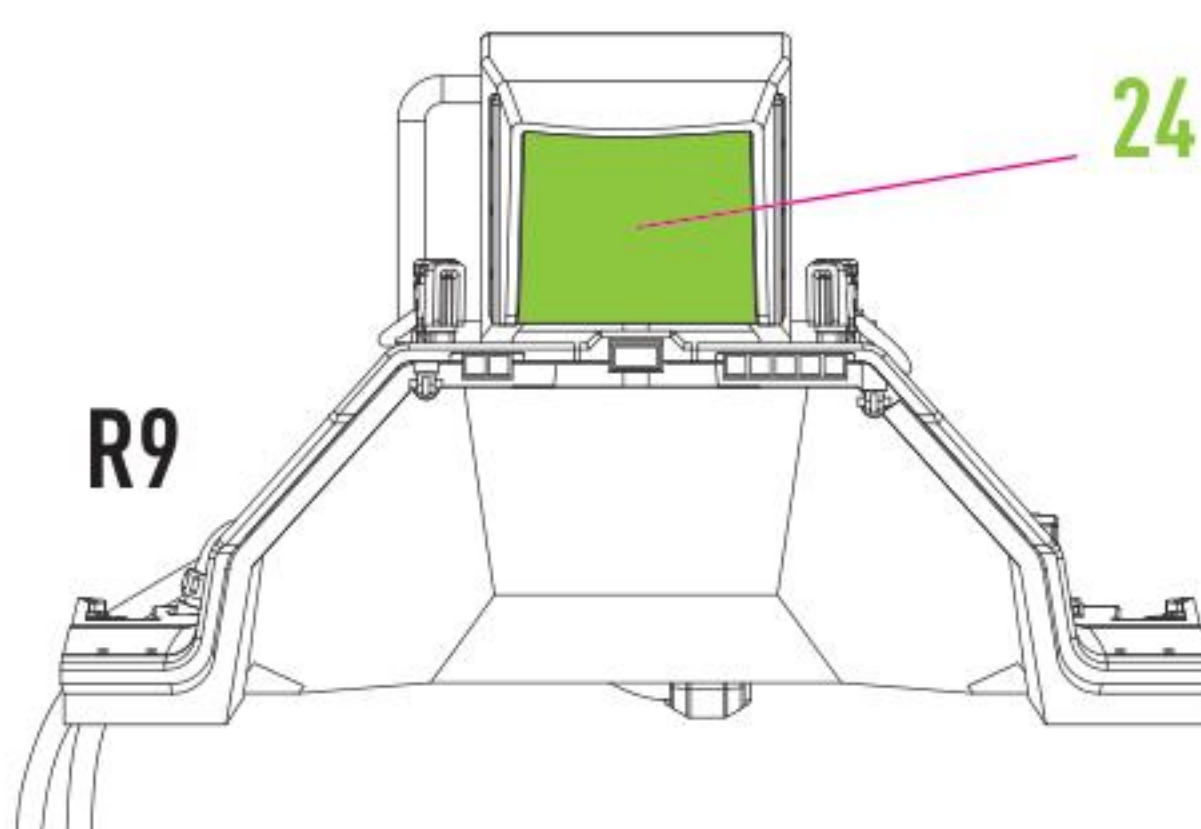


R9

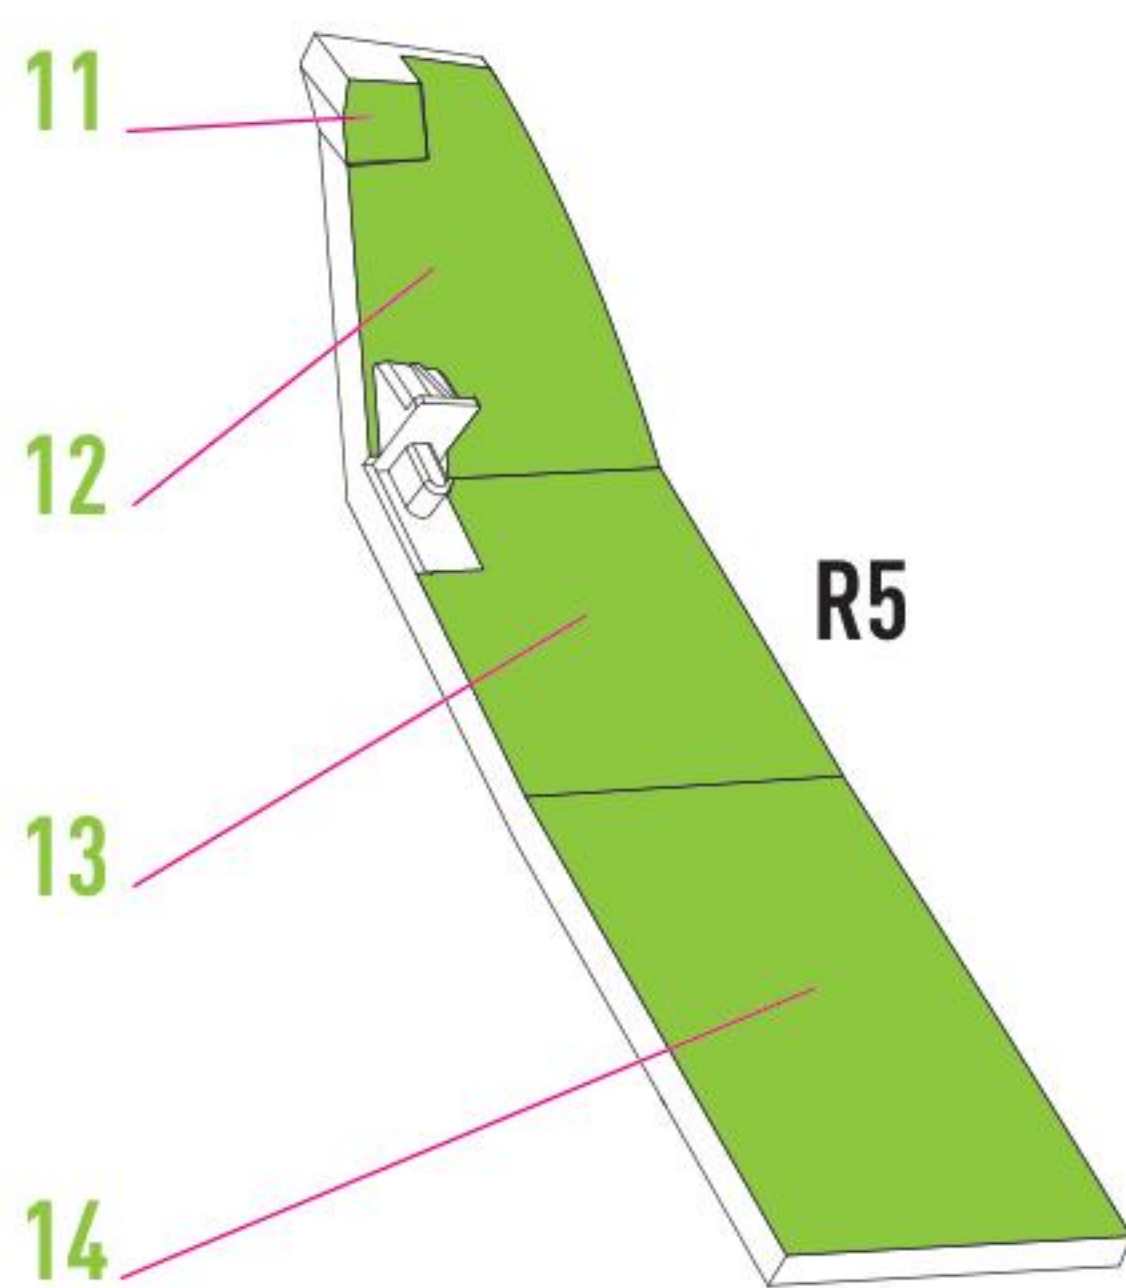


R5

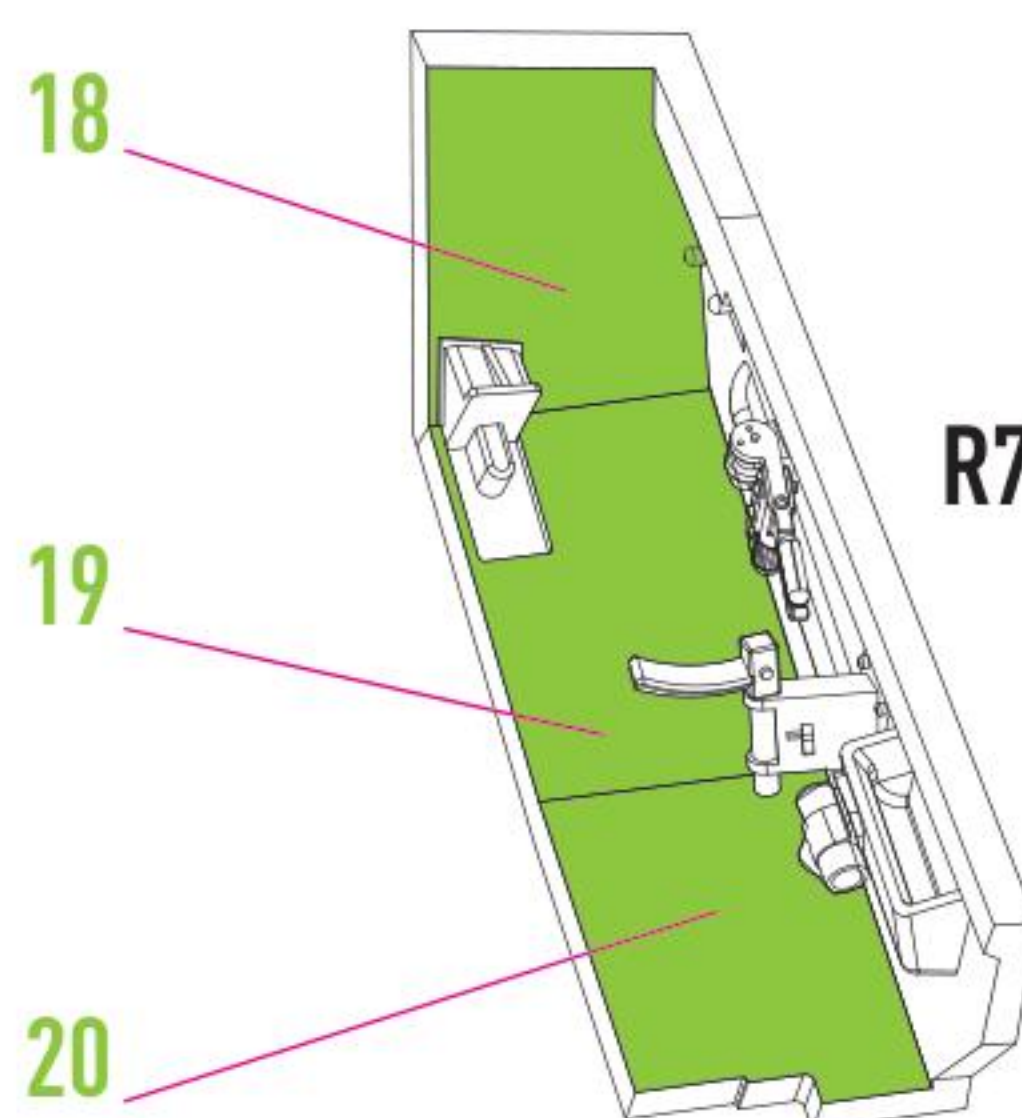

R7

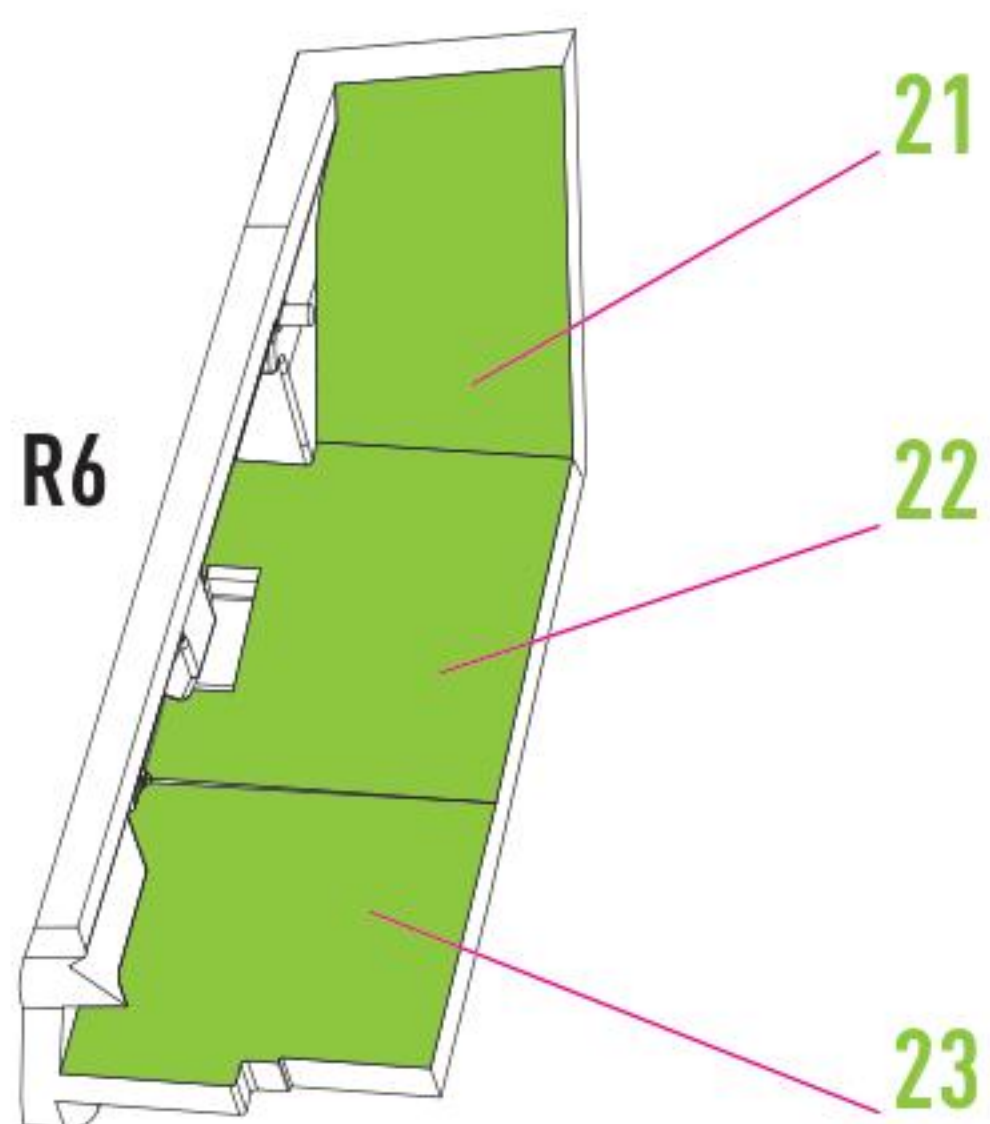



R6

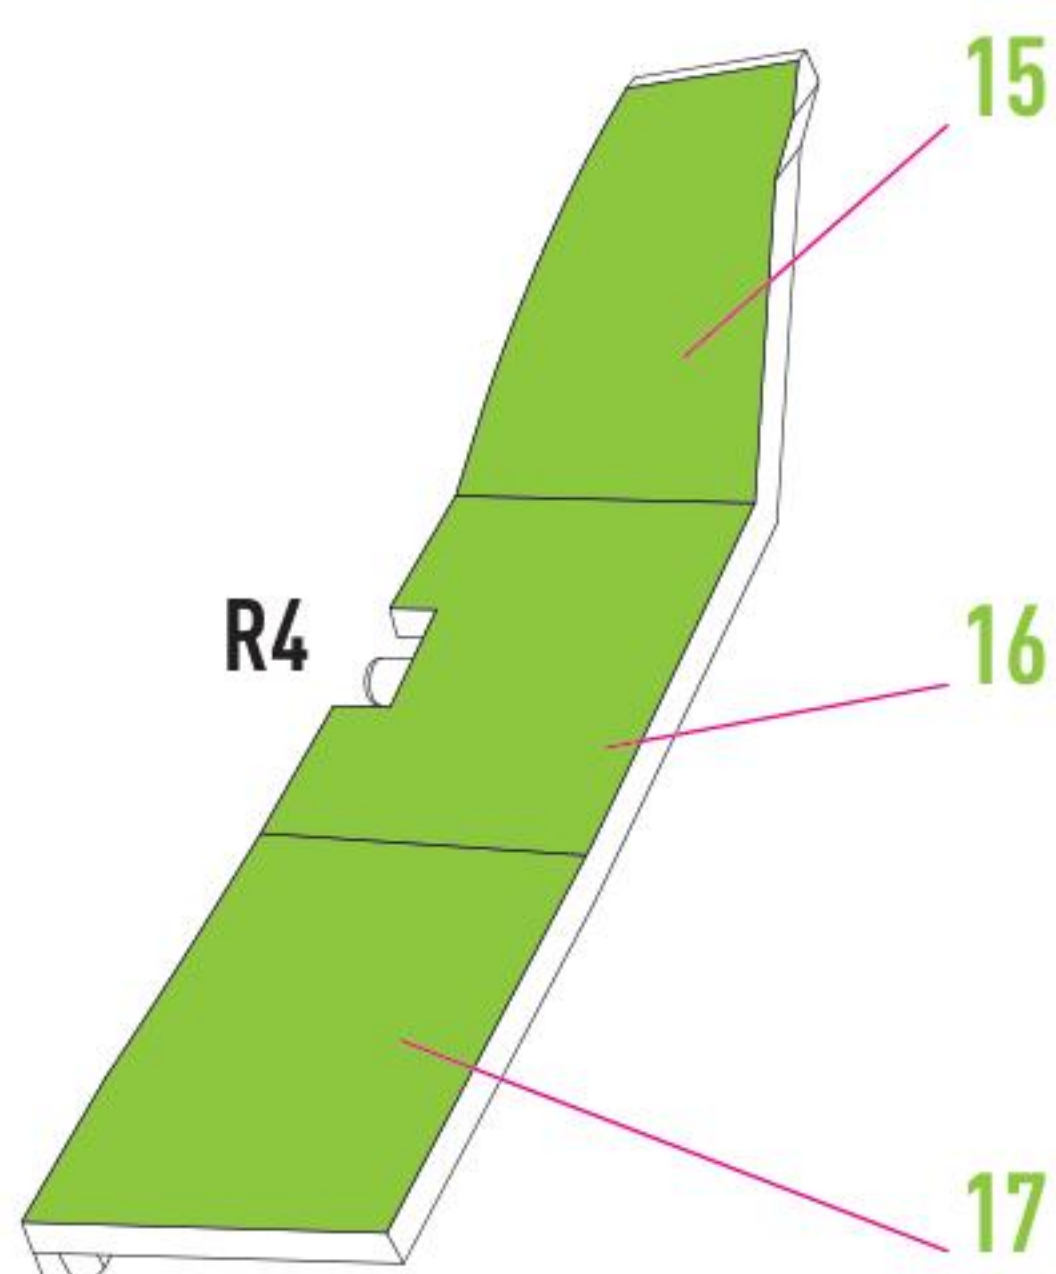


R4

1


PART P24 AND P25
FROM KINETIC KIT

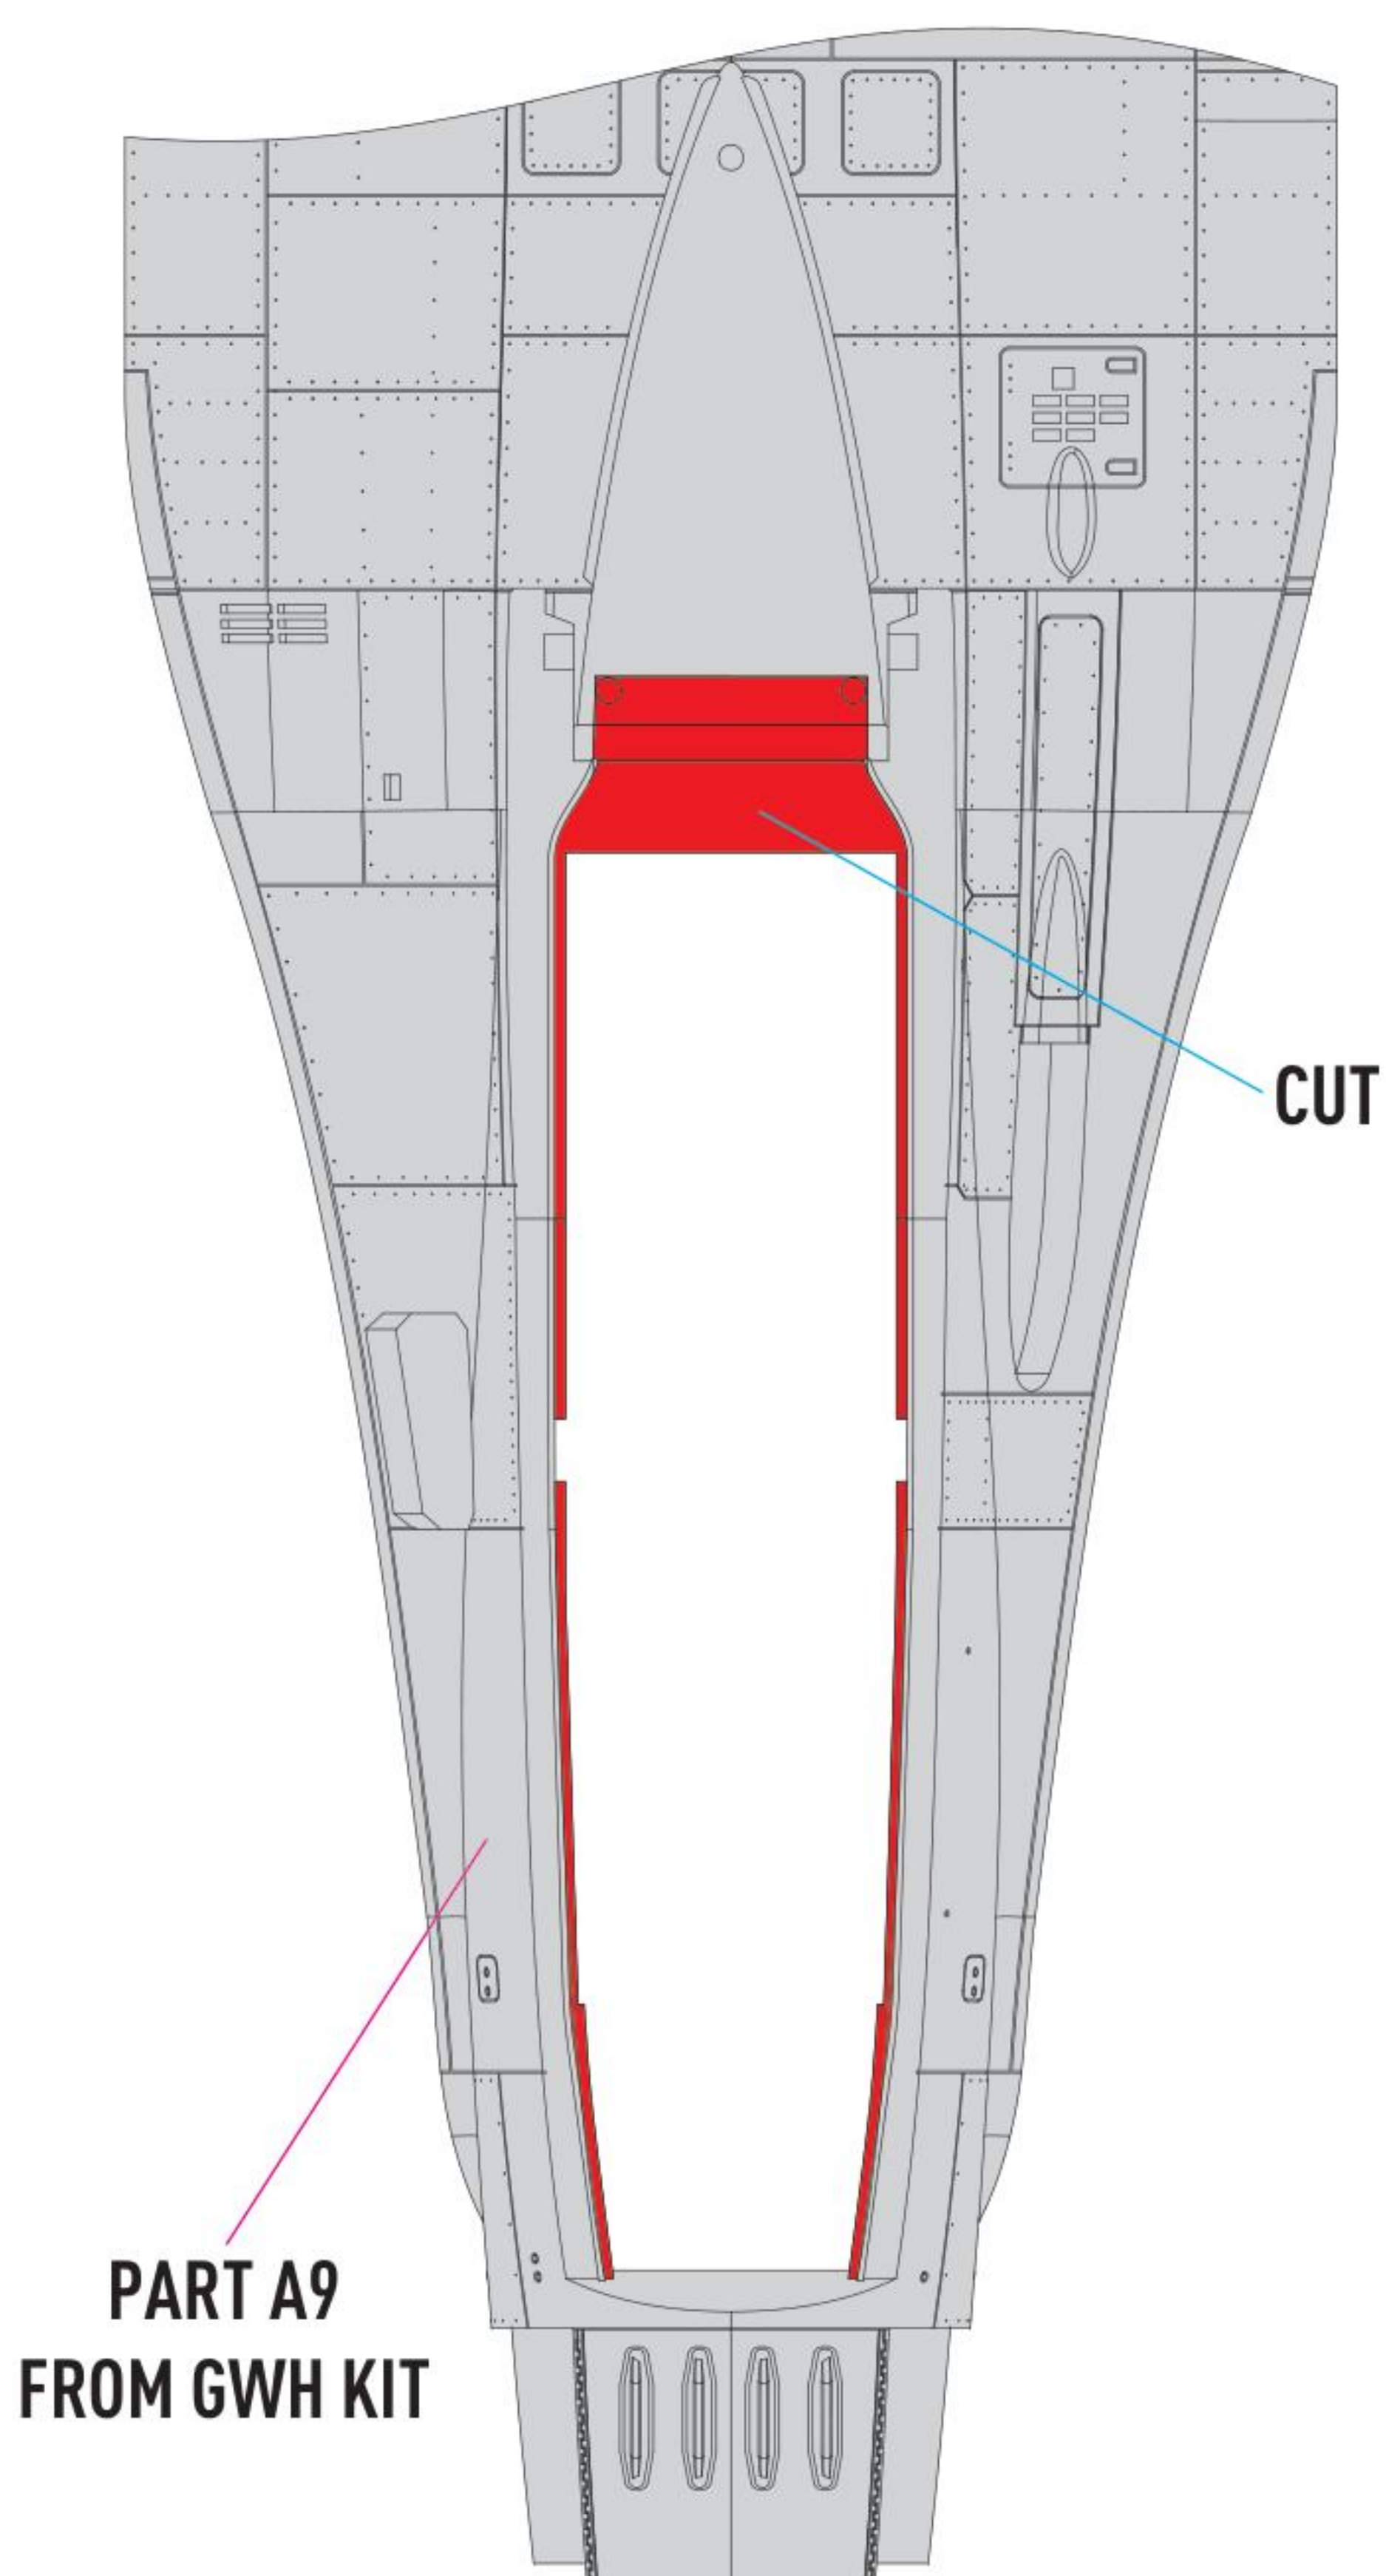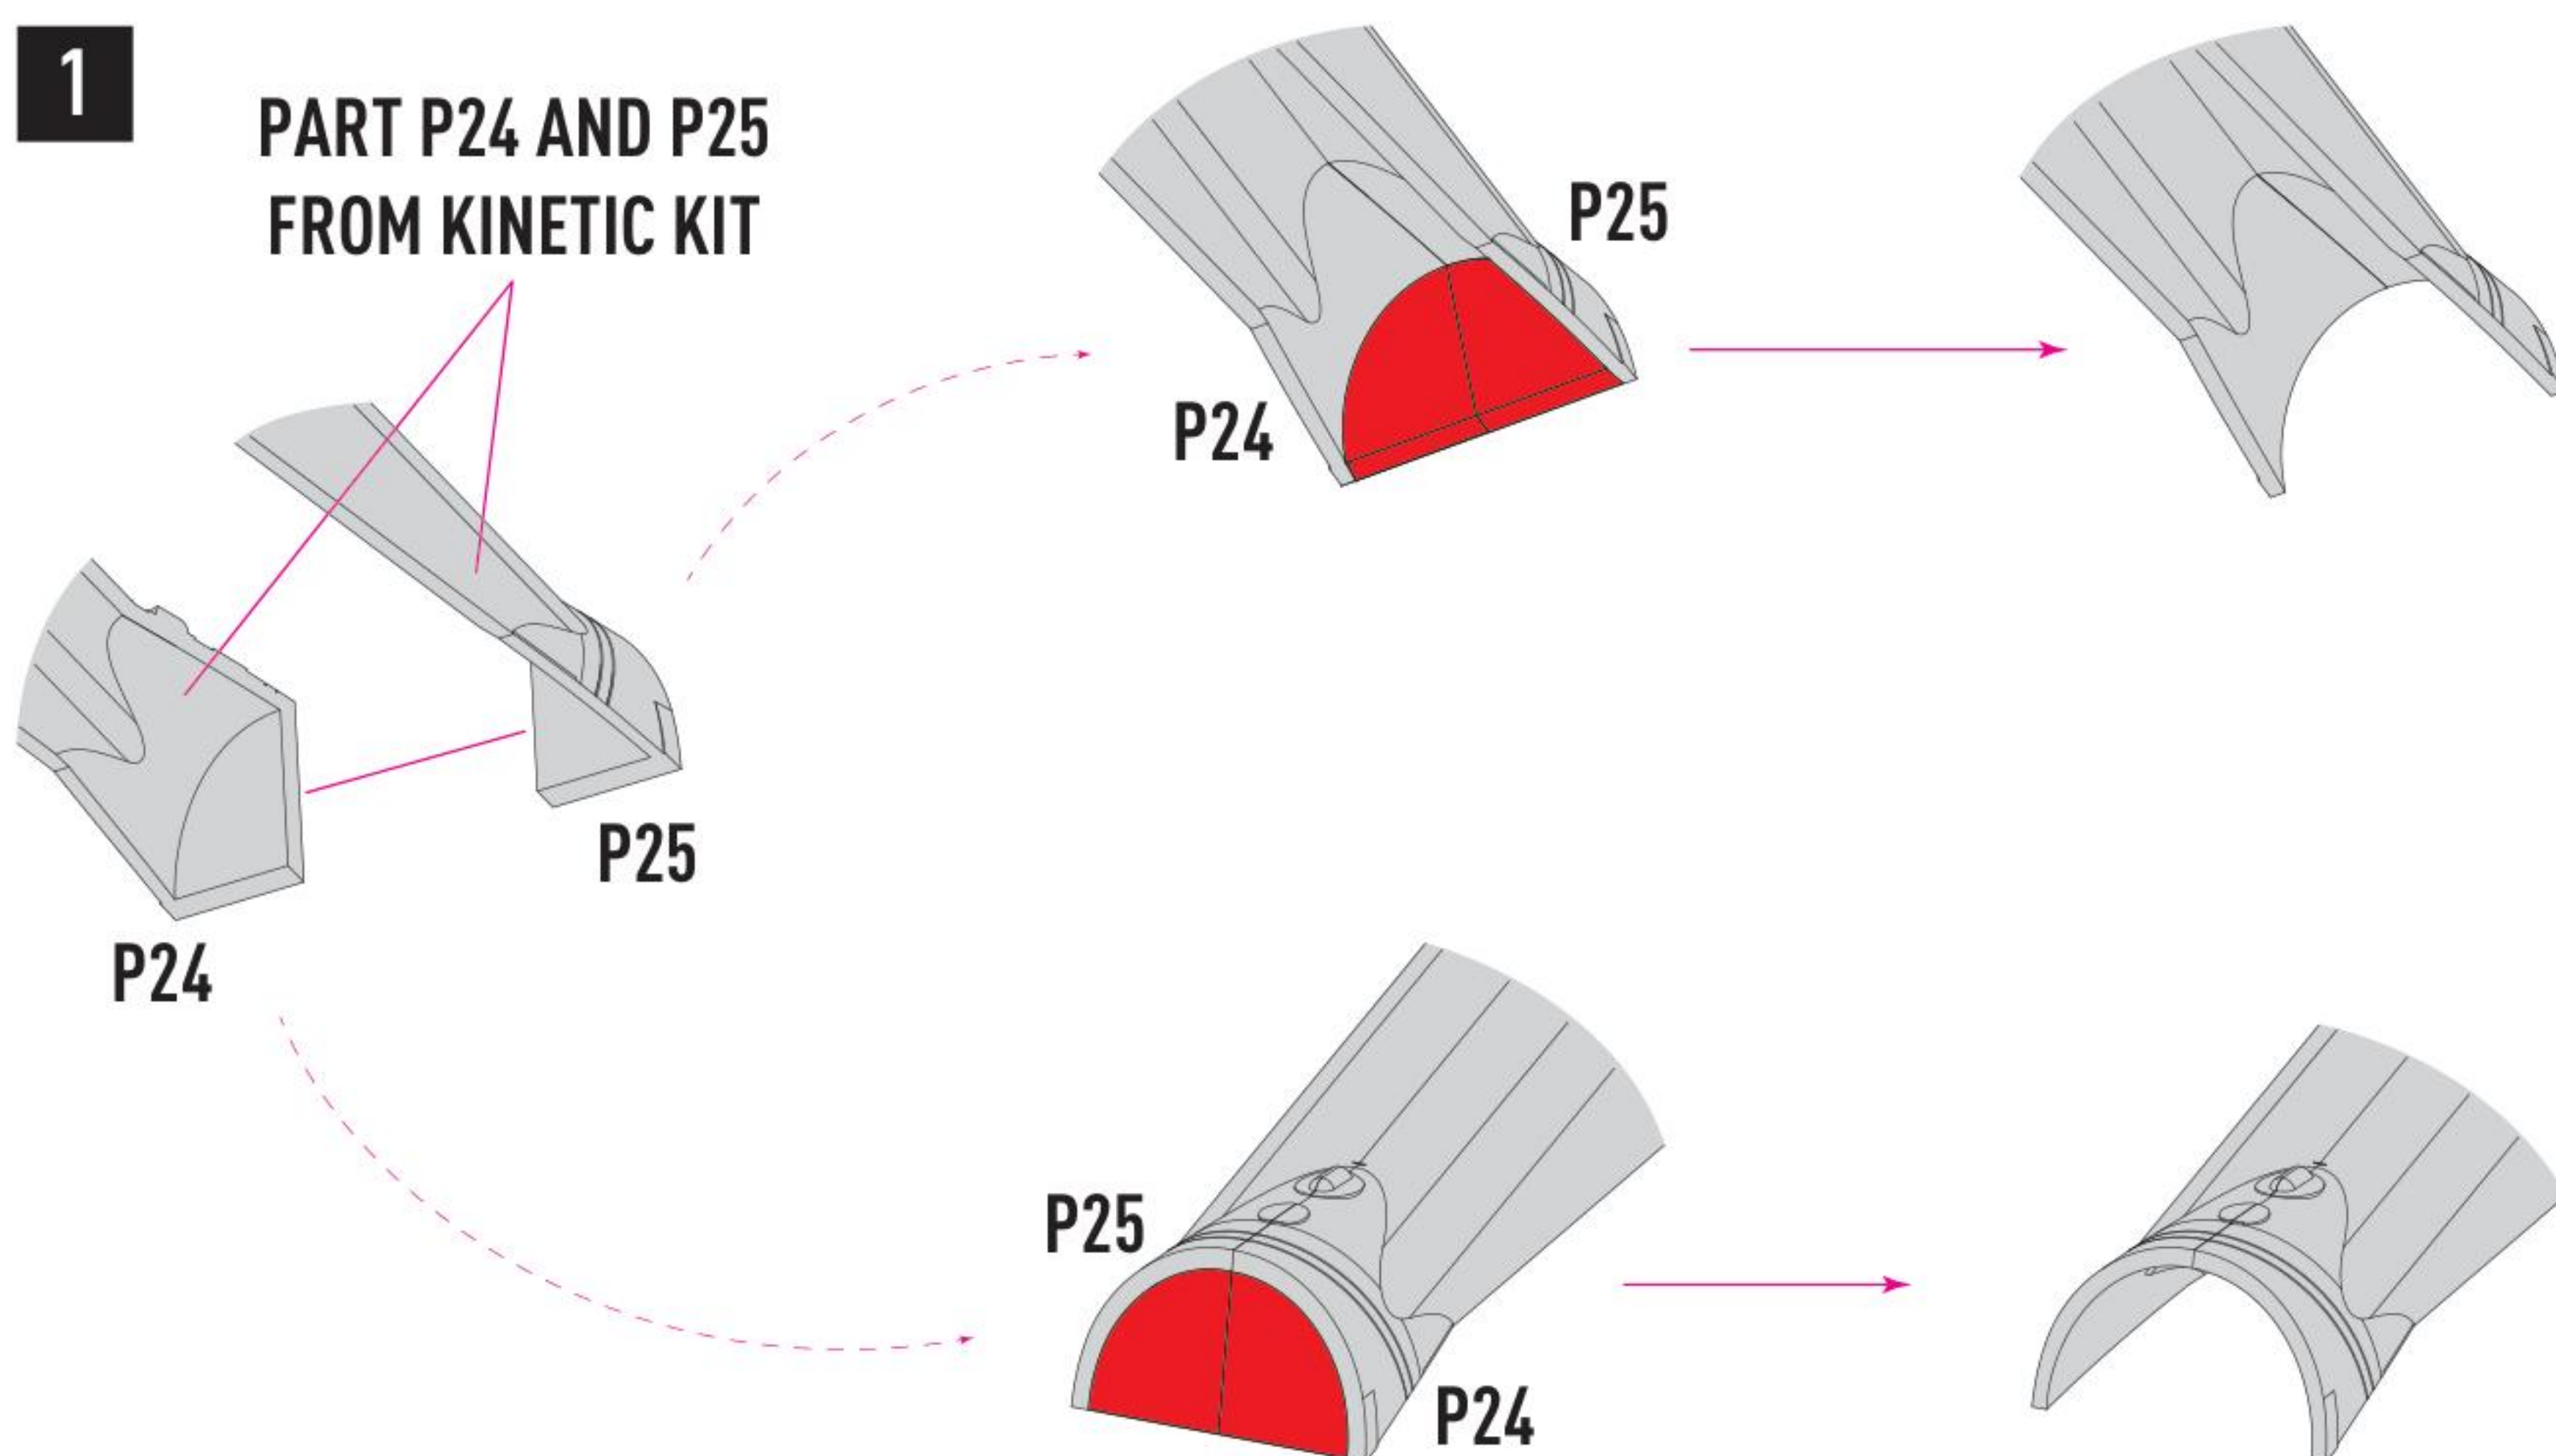


2

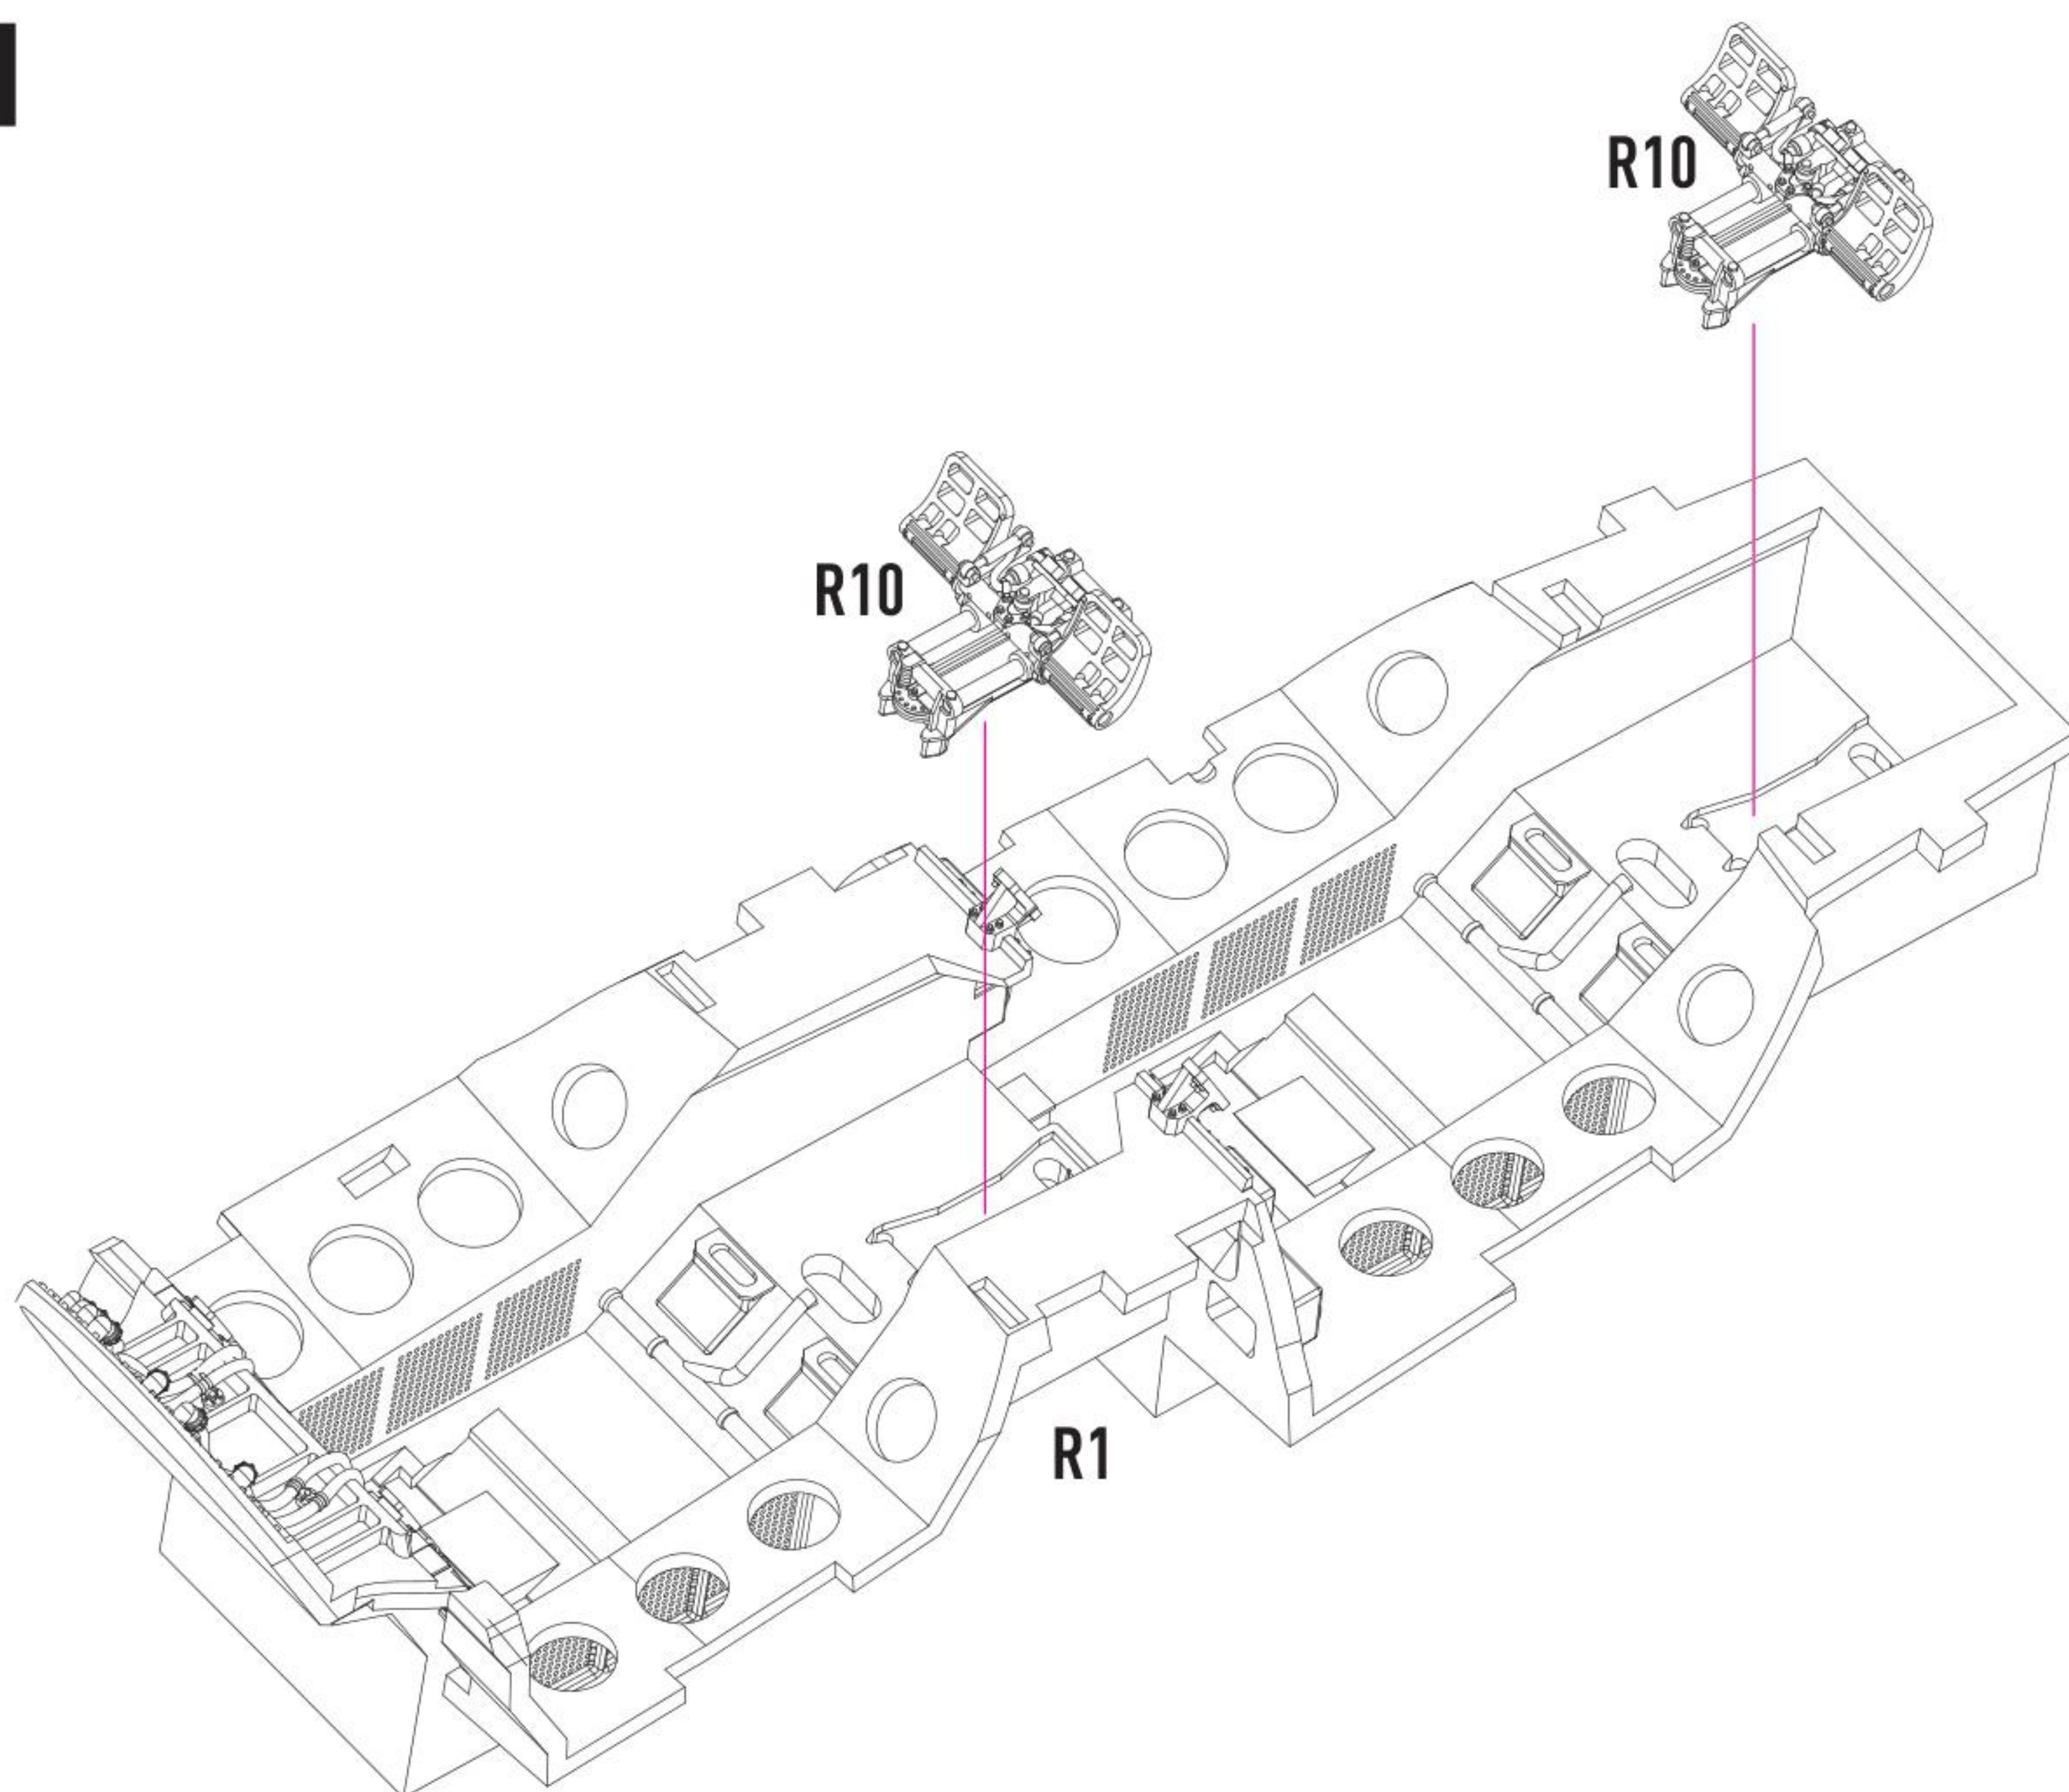


3

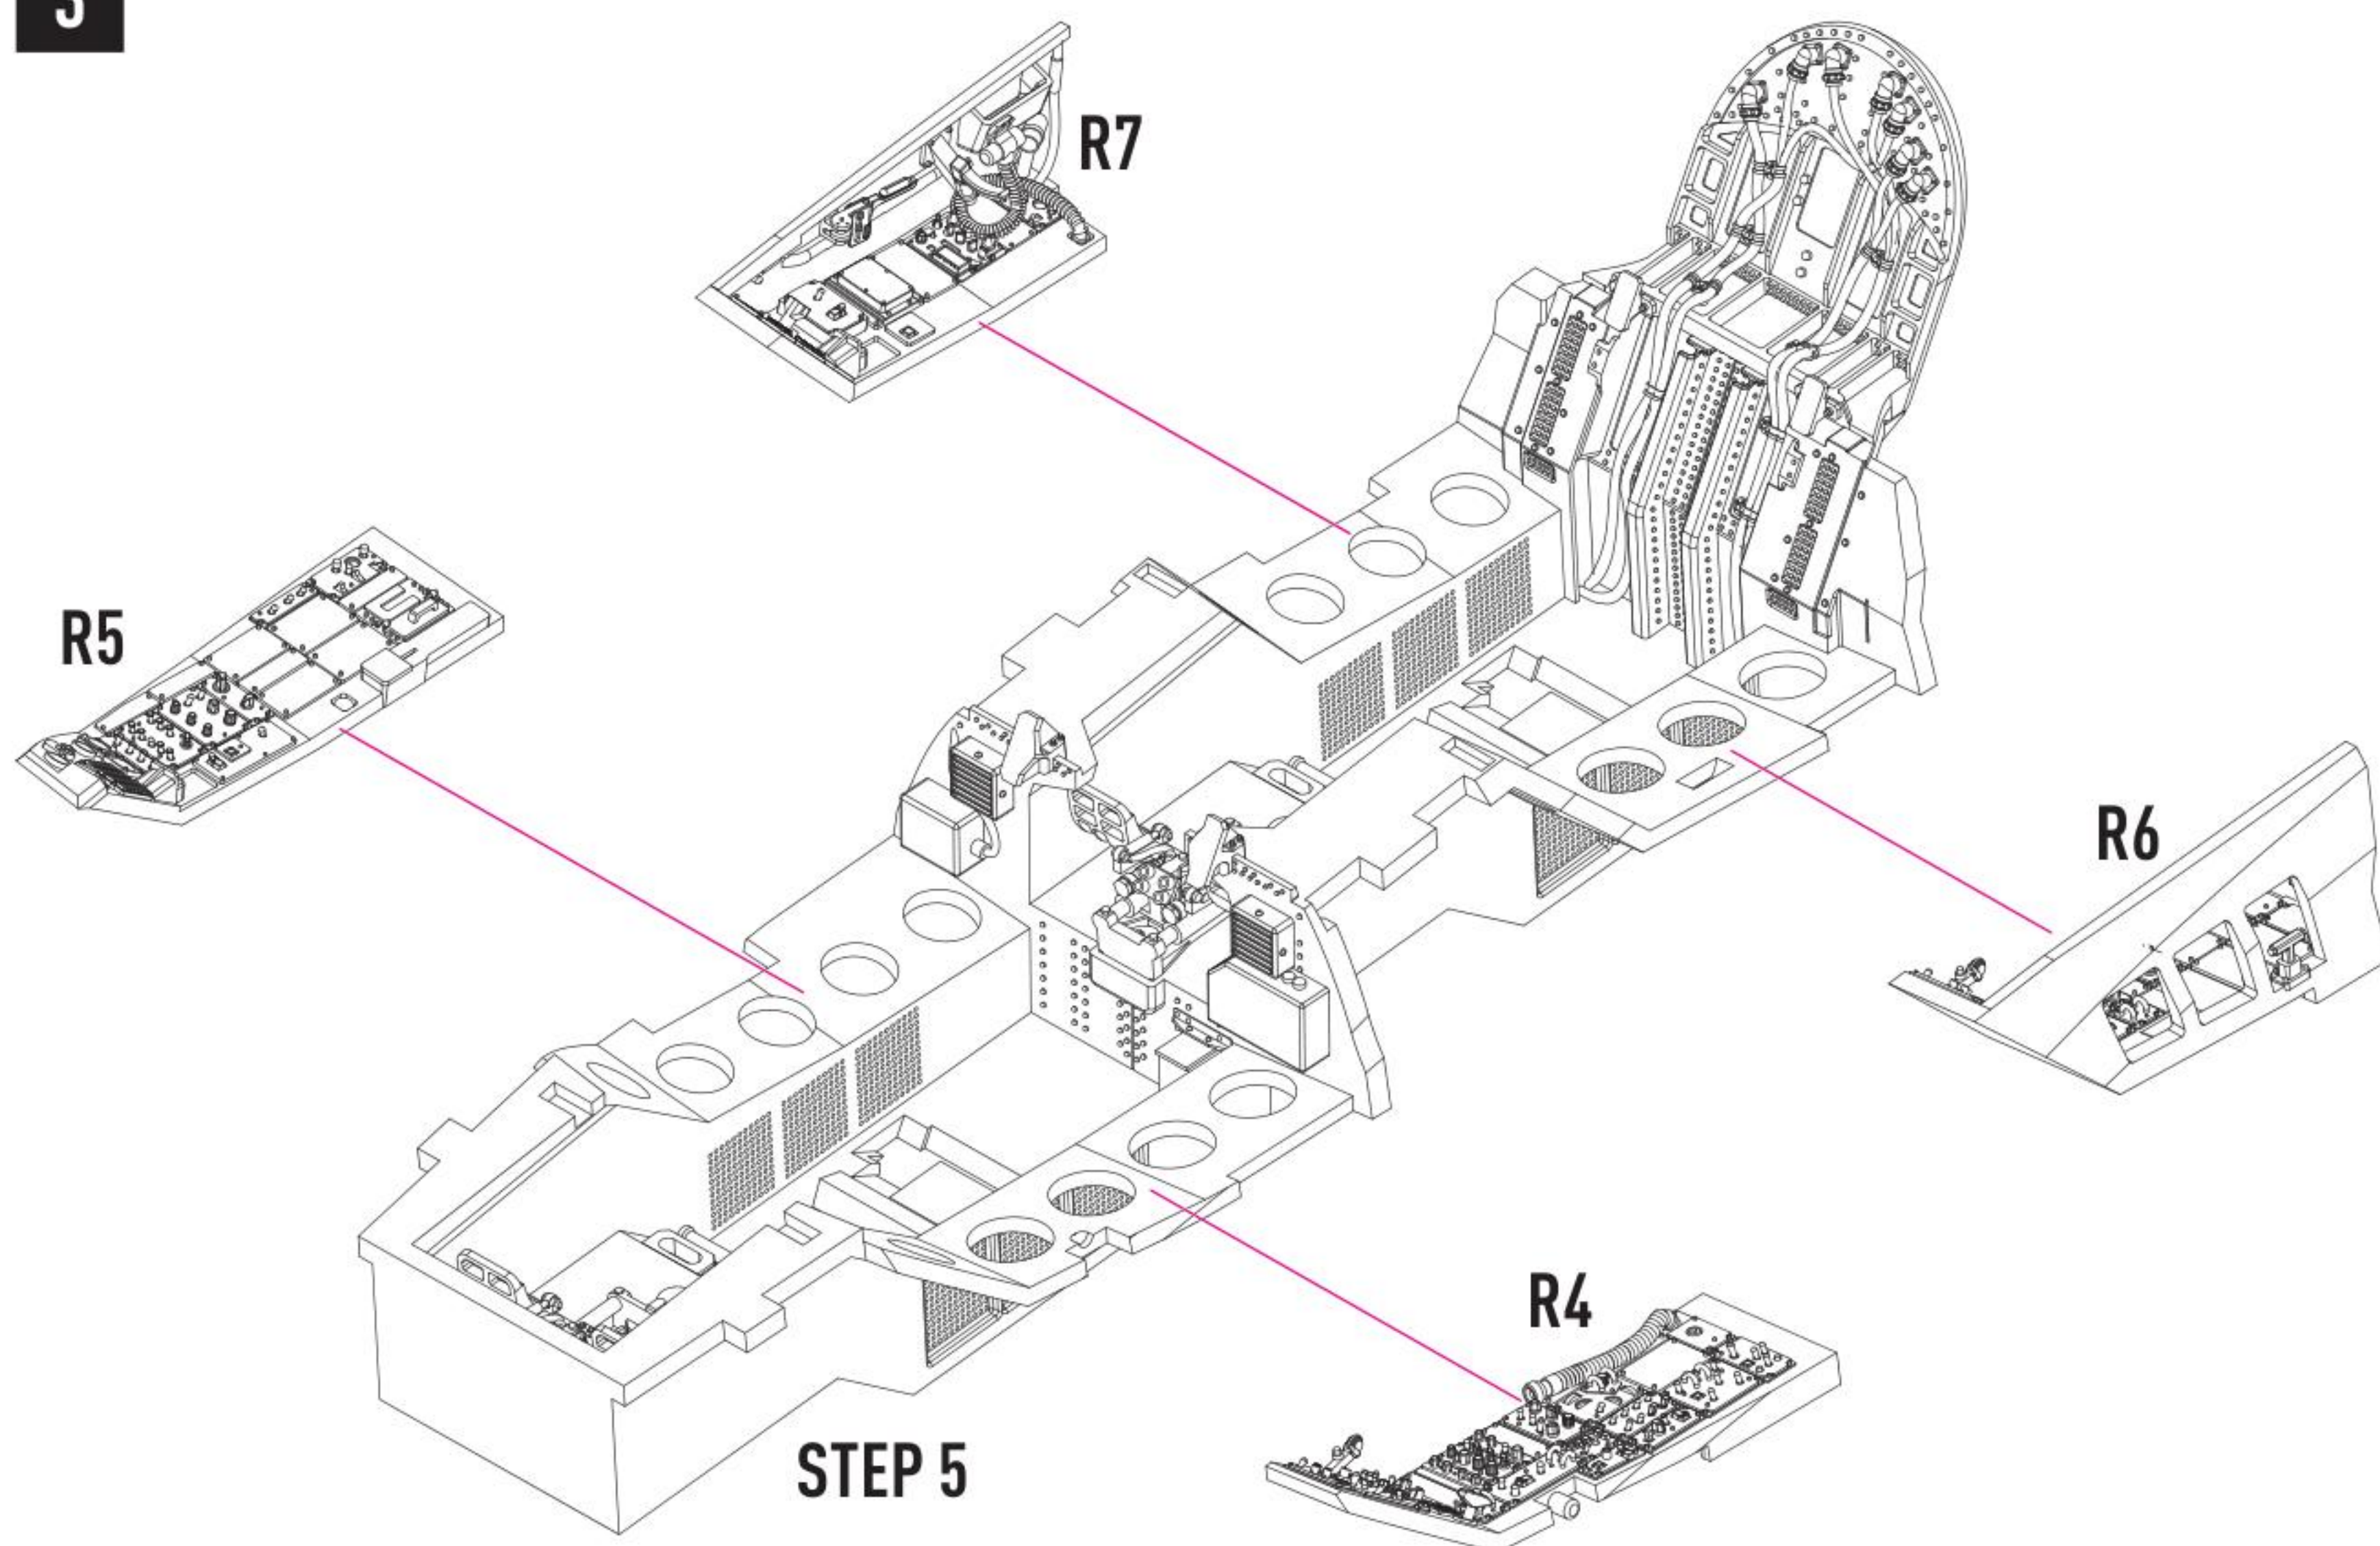


4

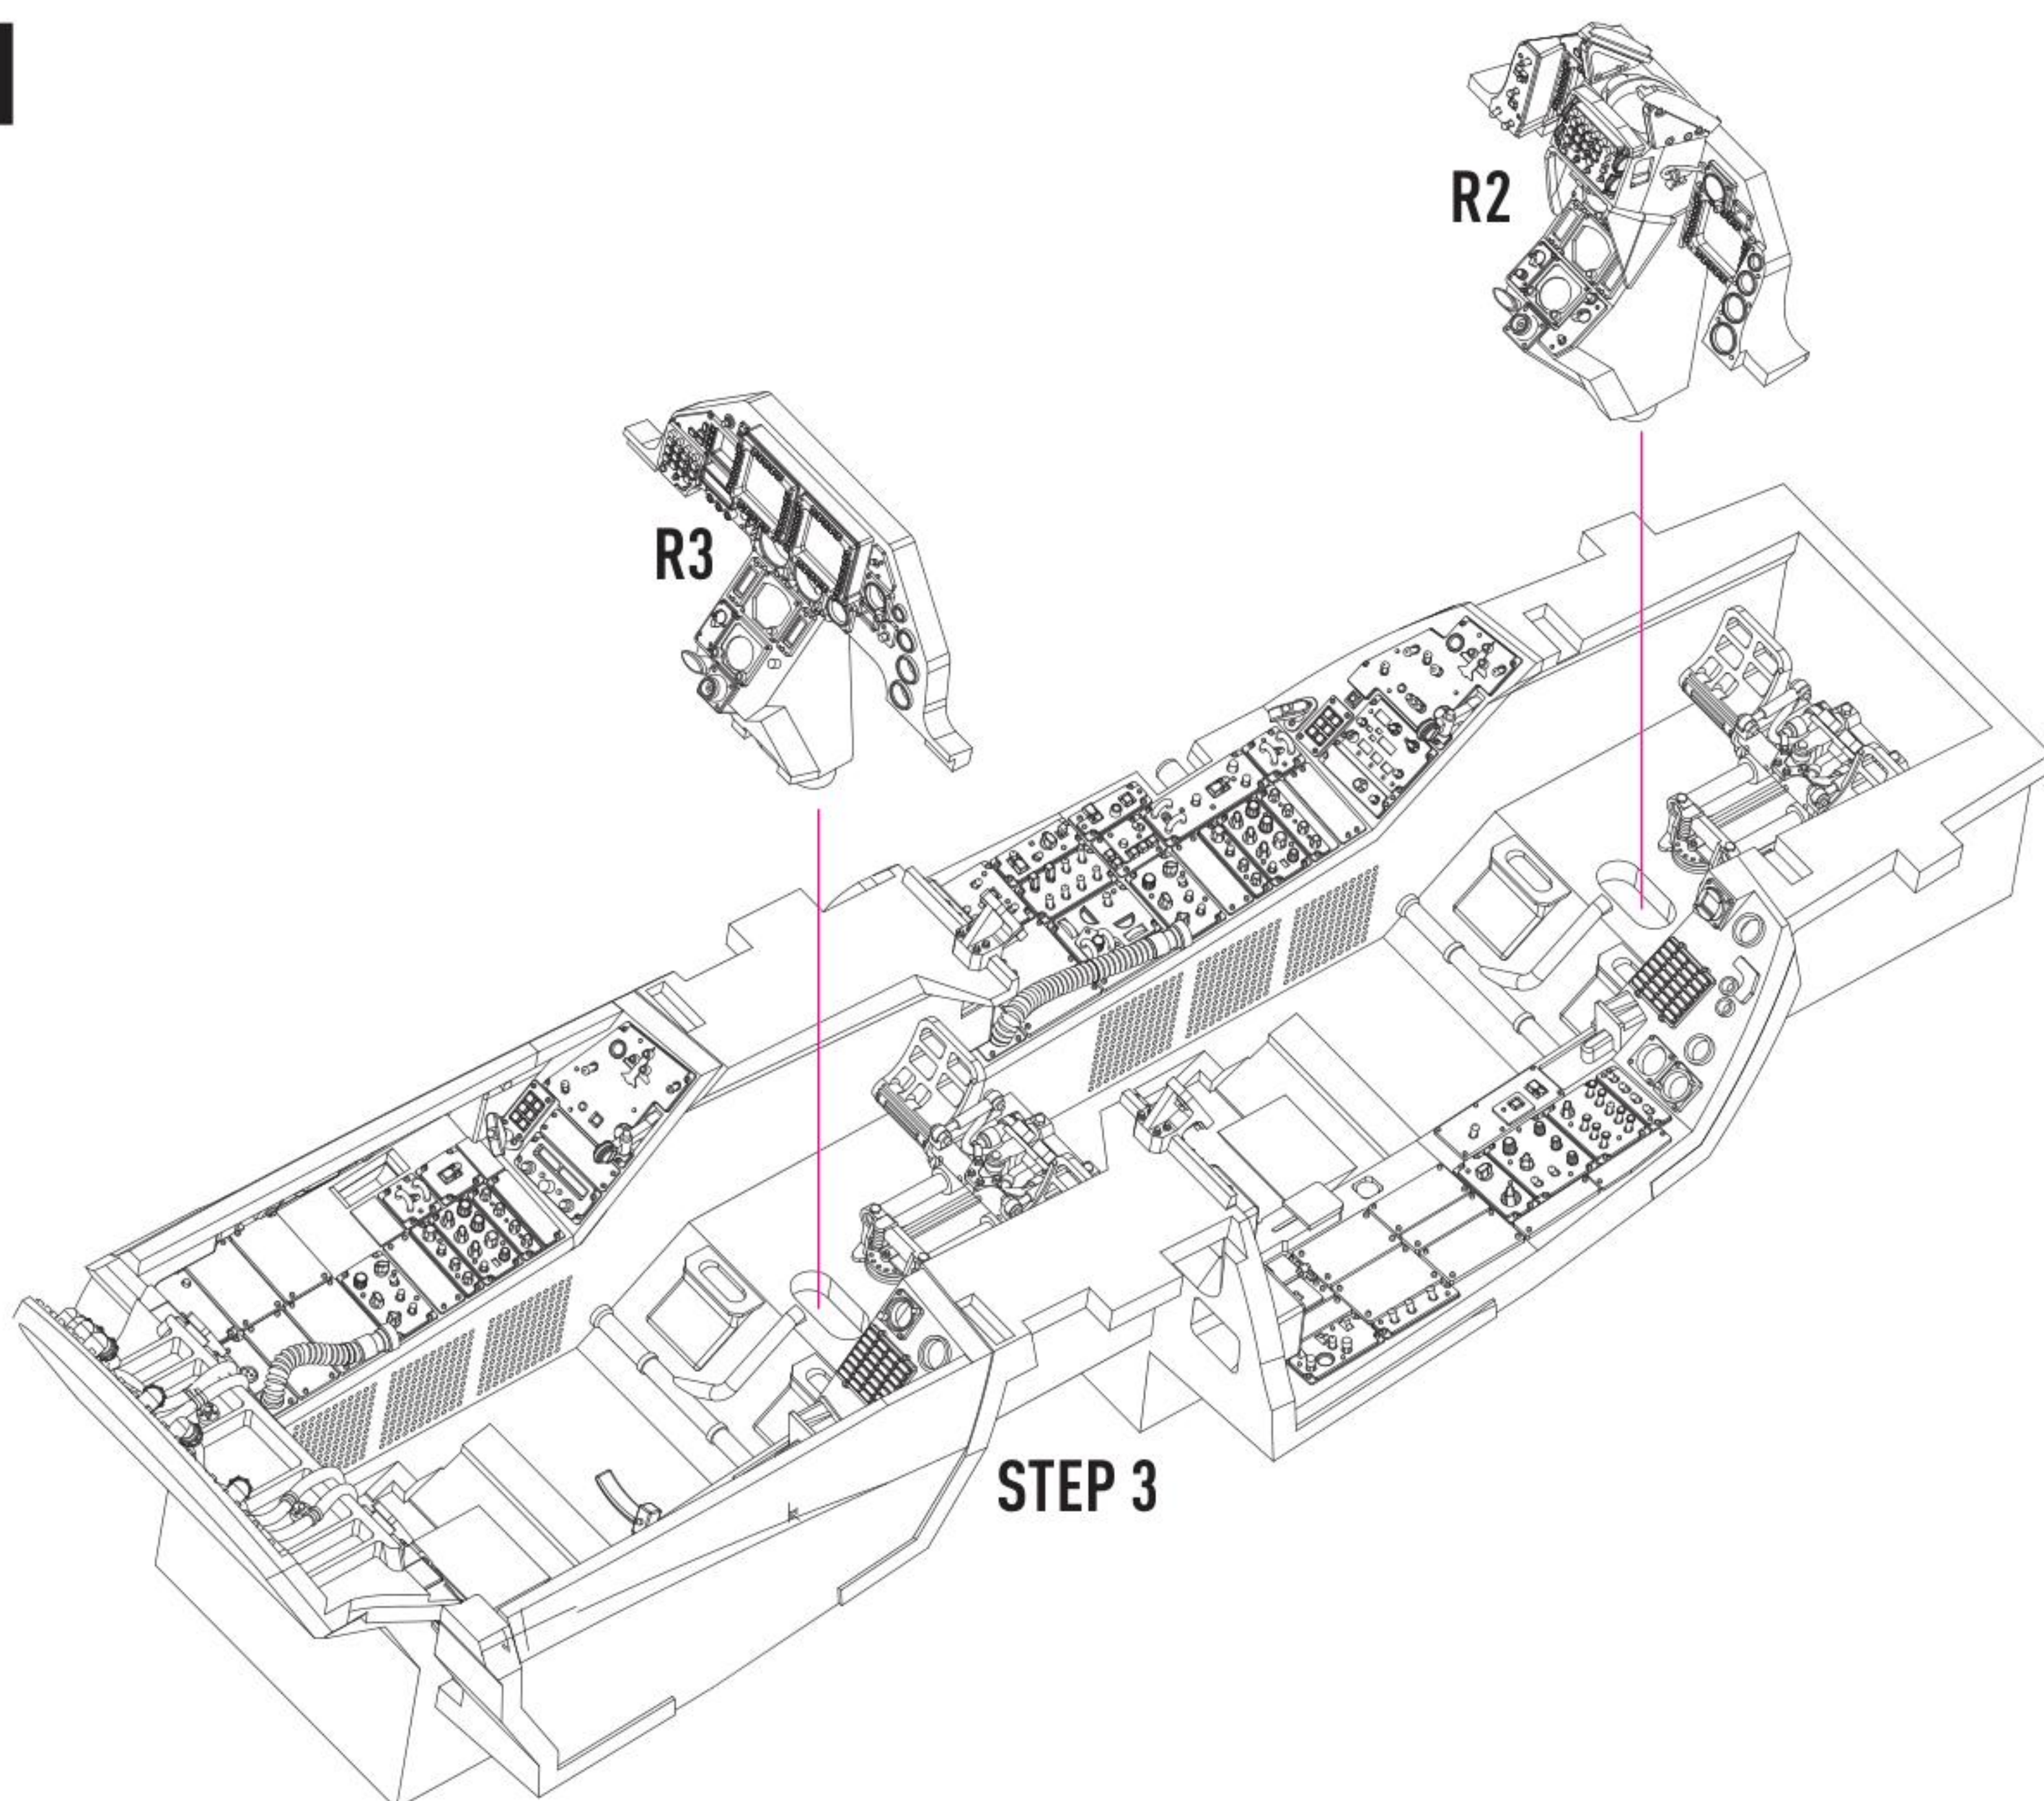


5

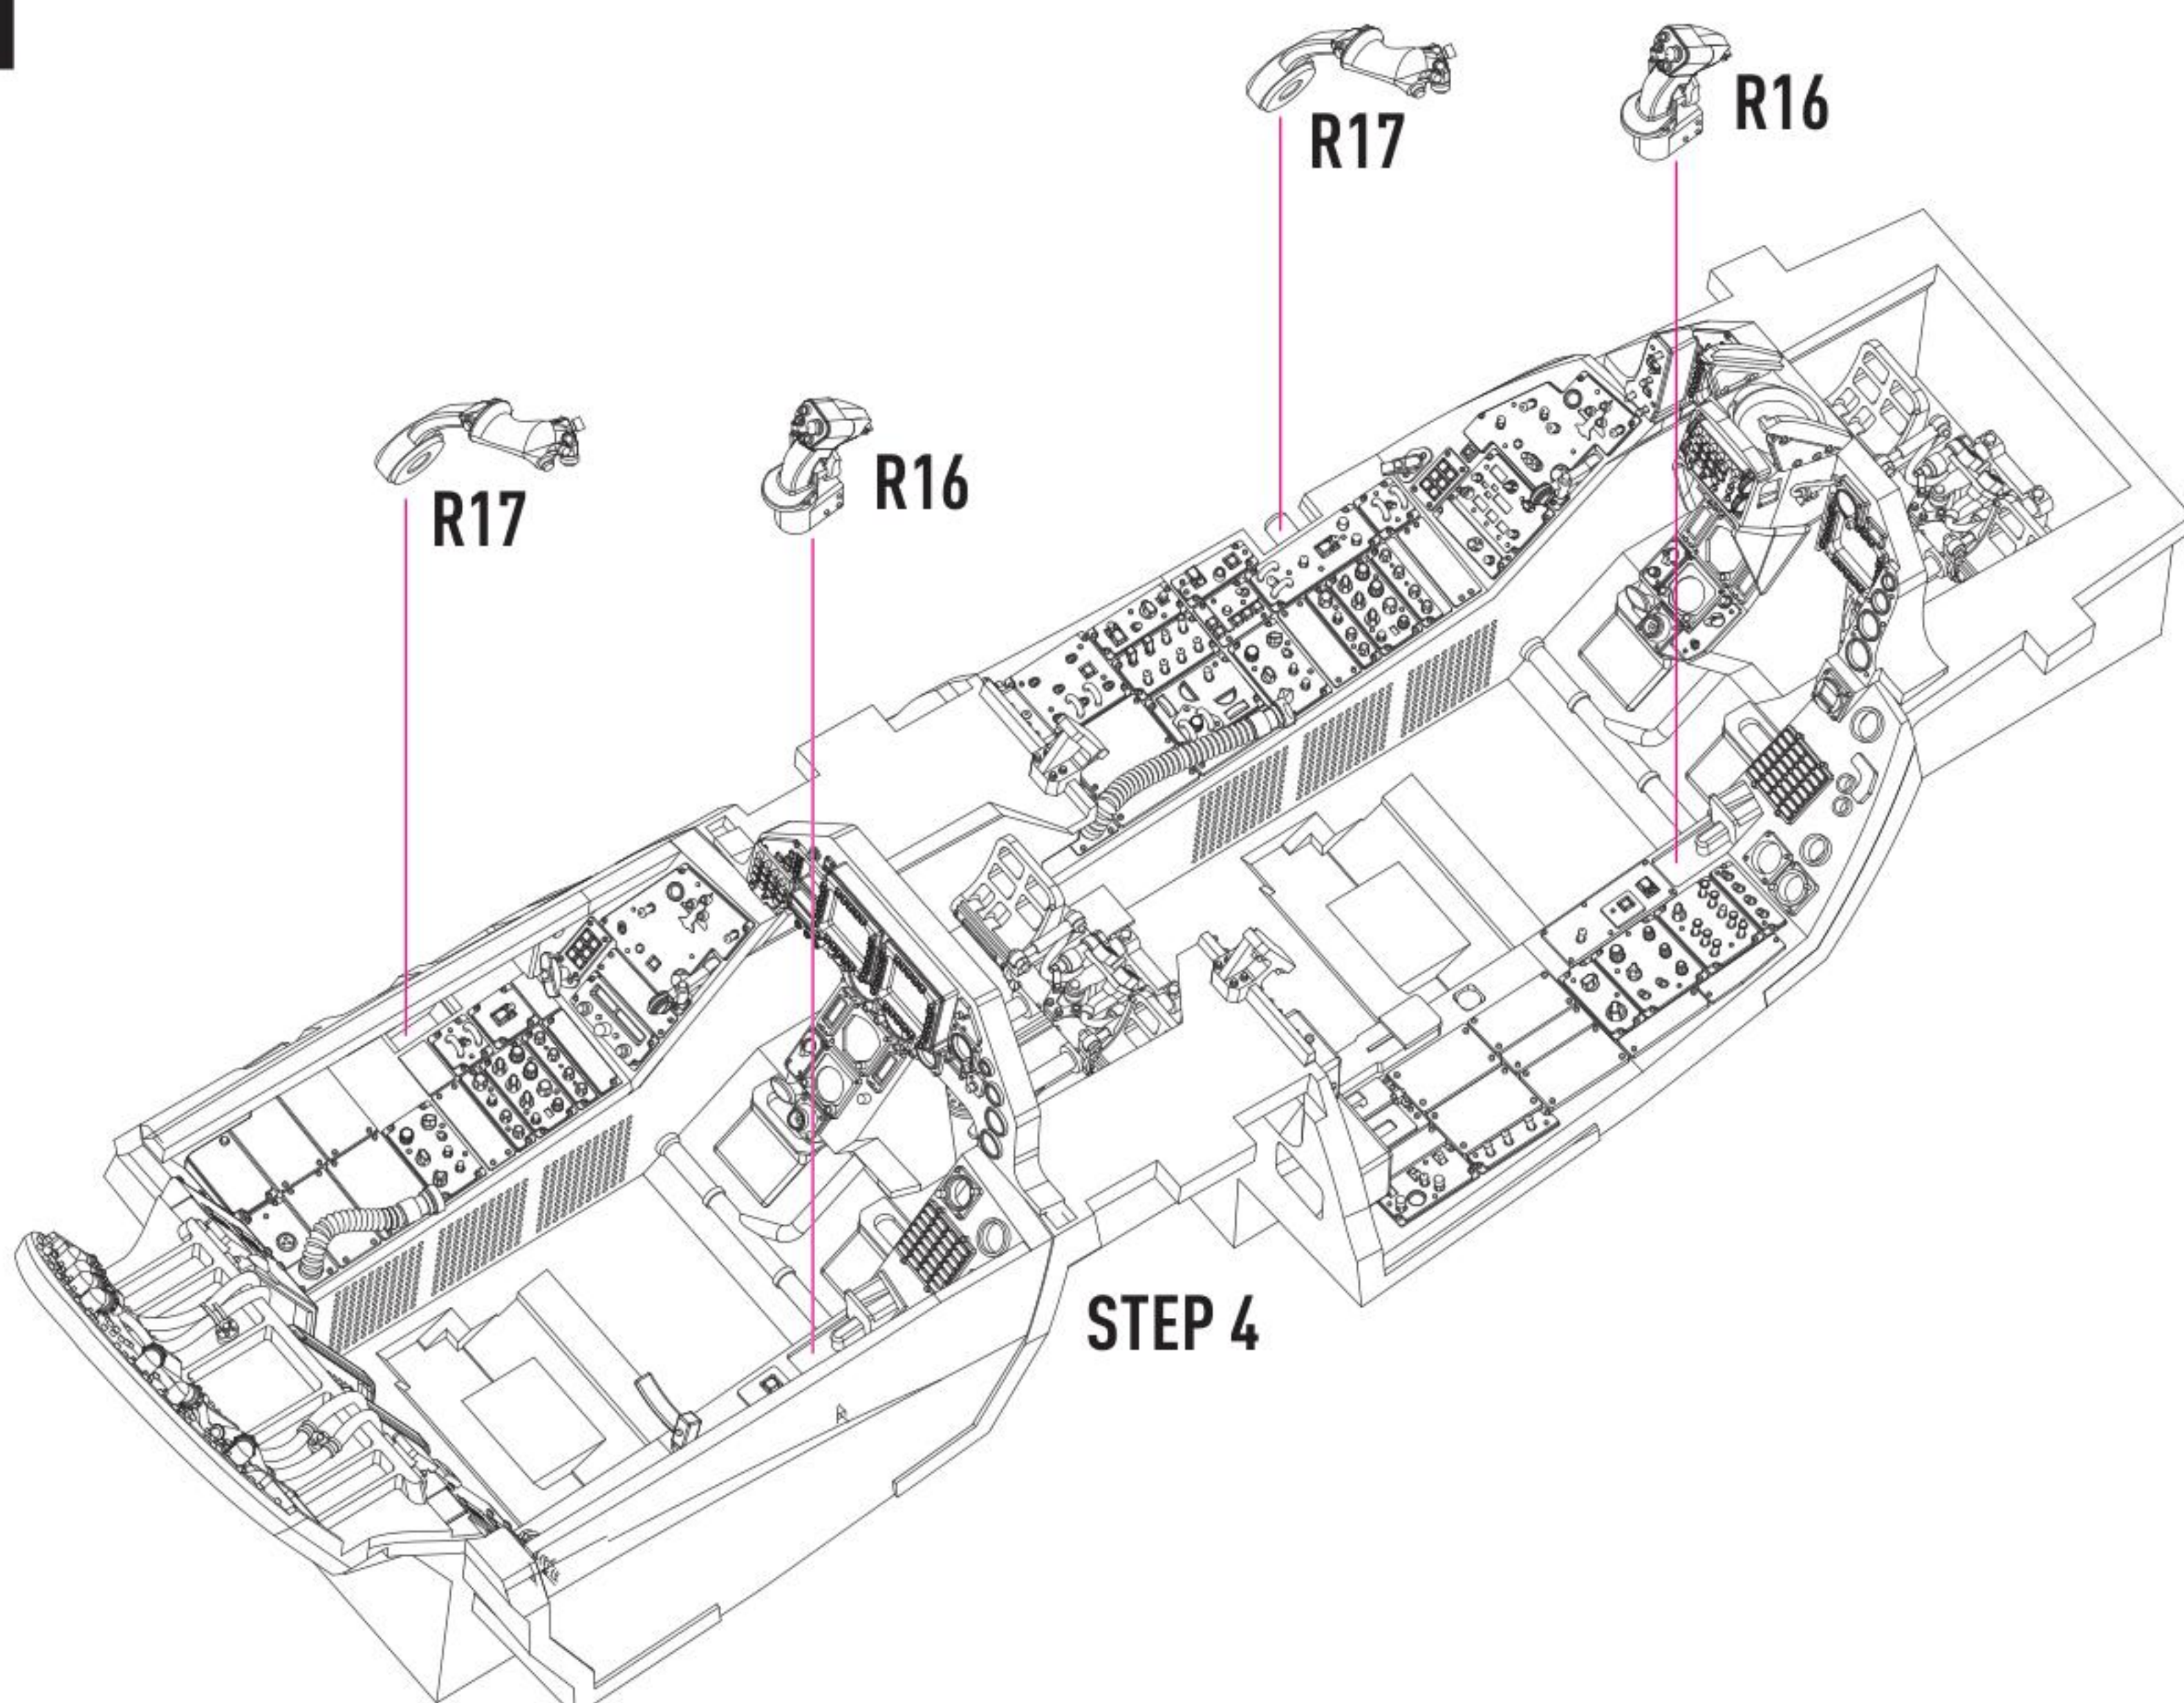



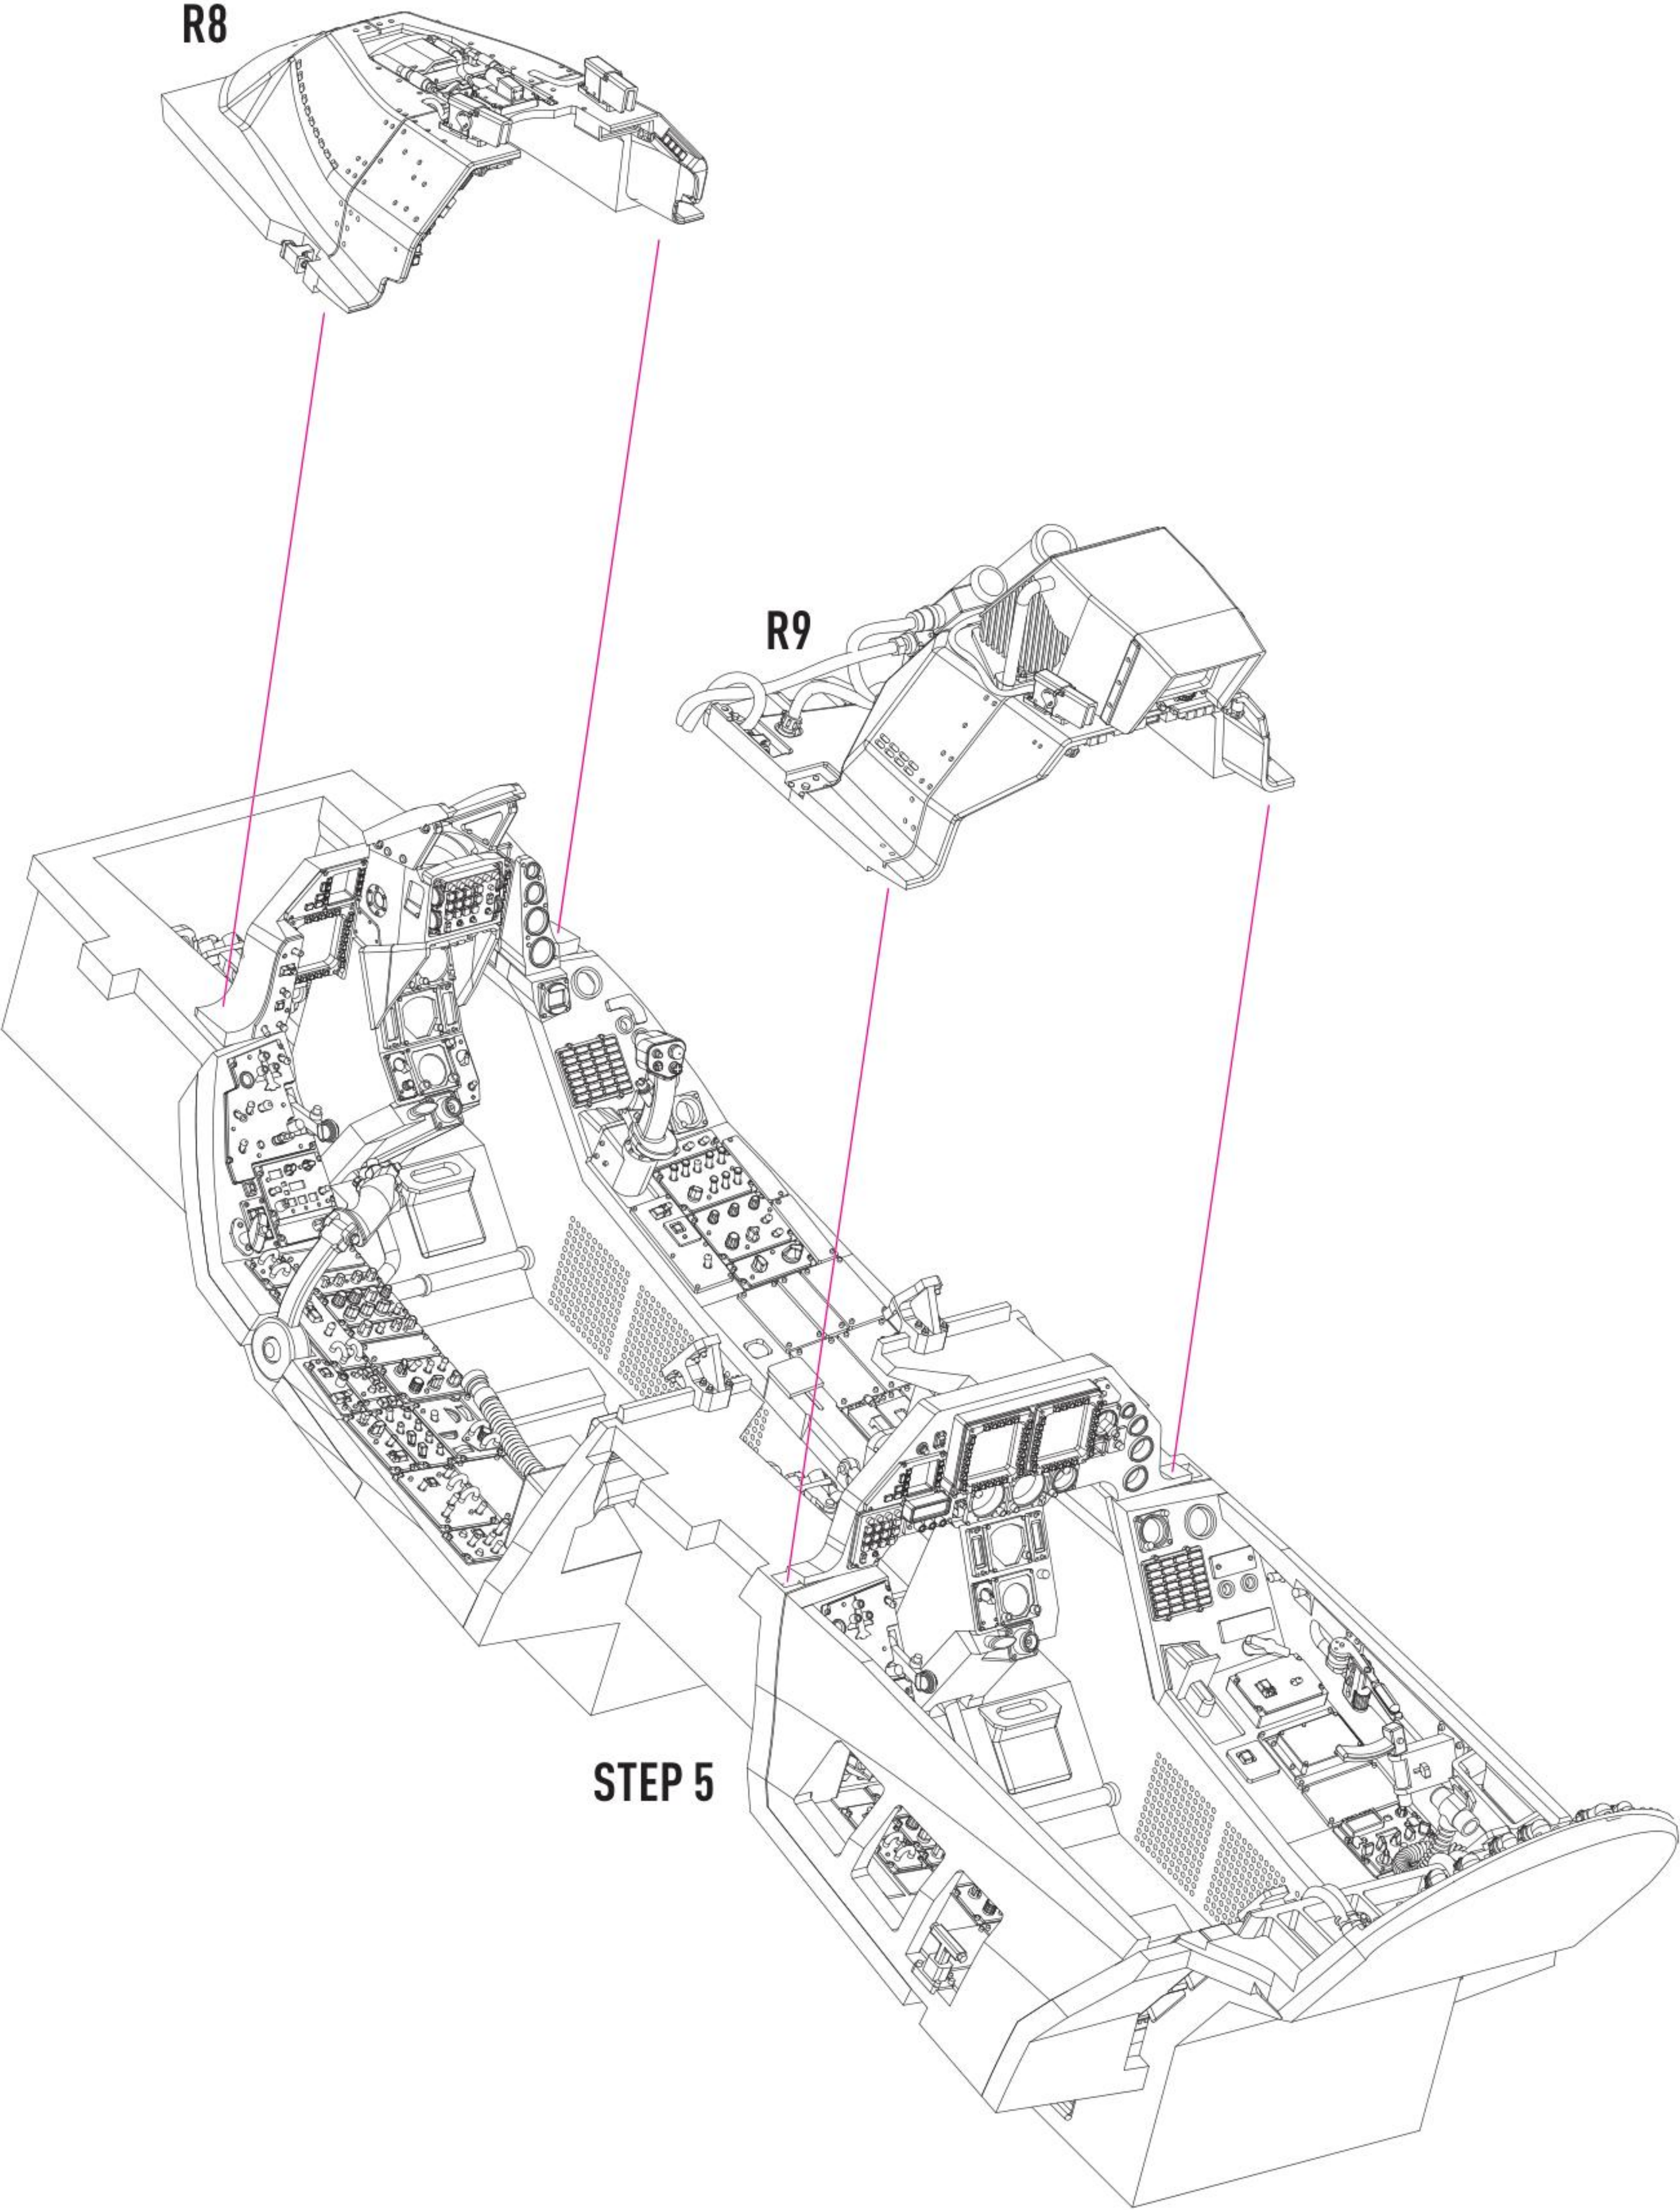



7 FRONT SEAT

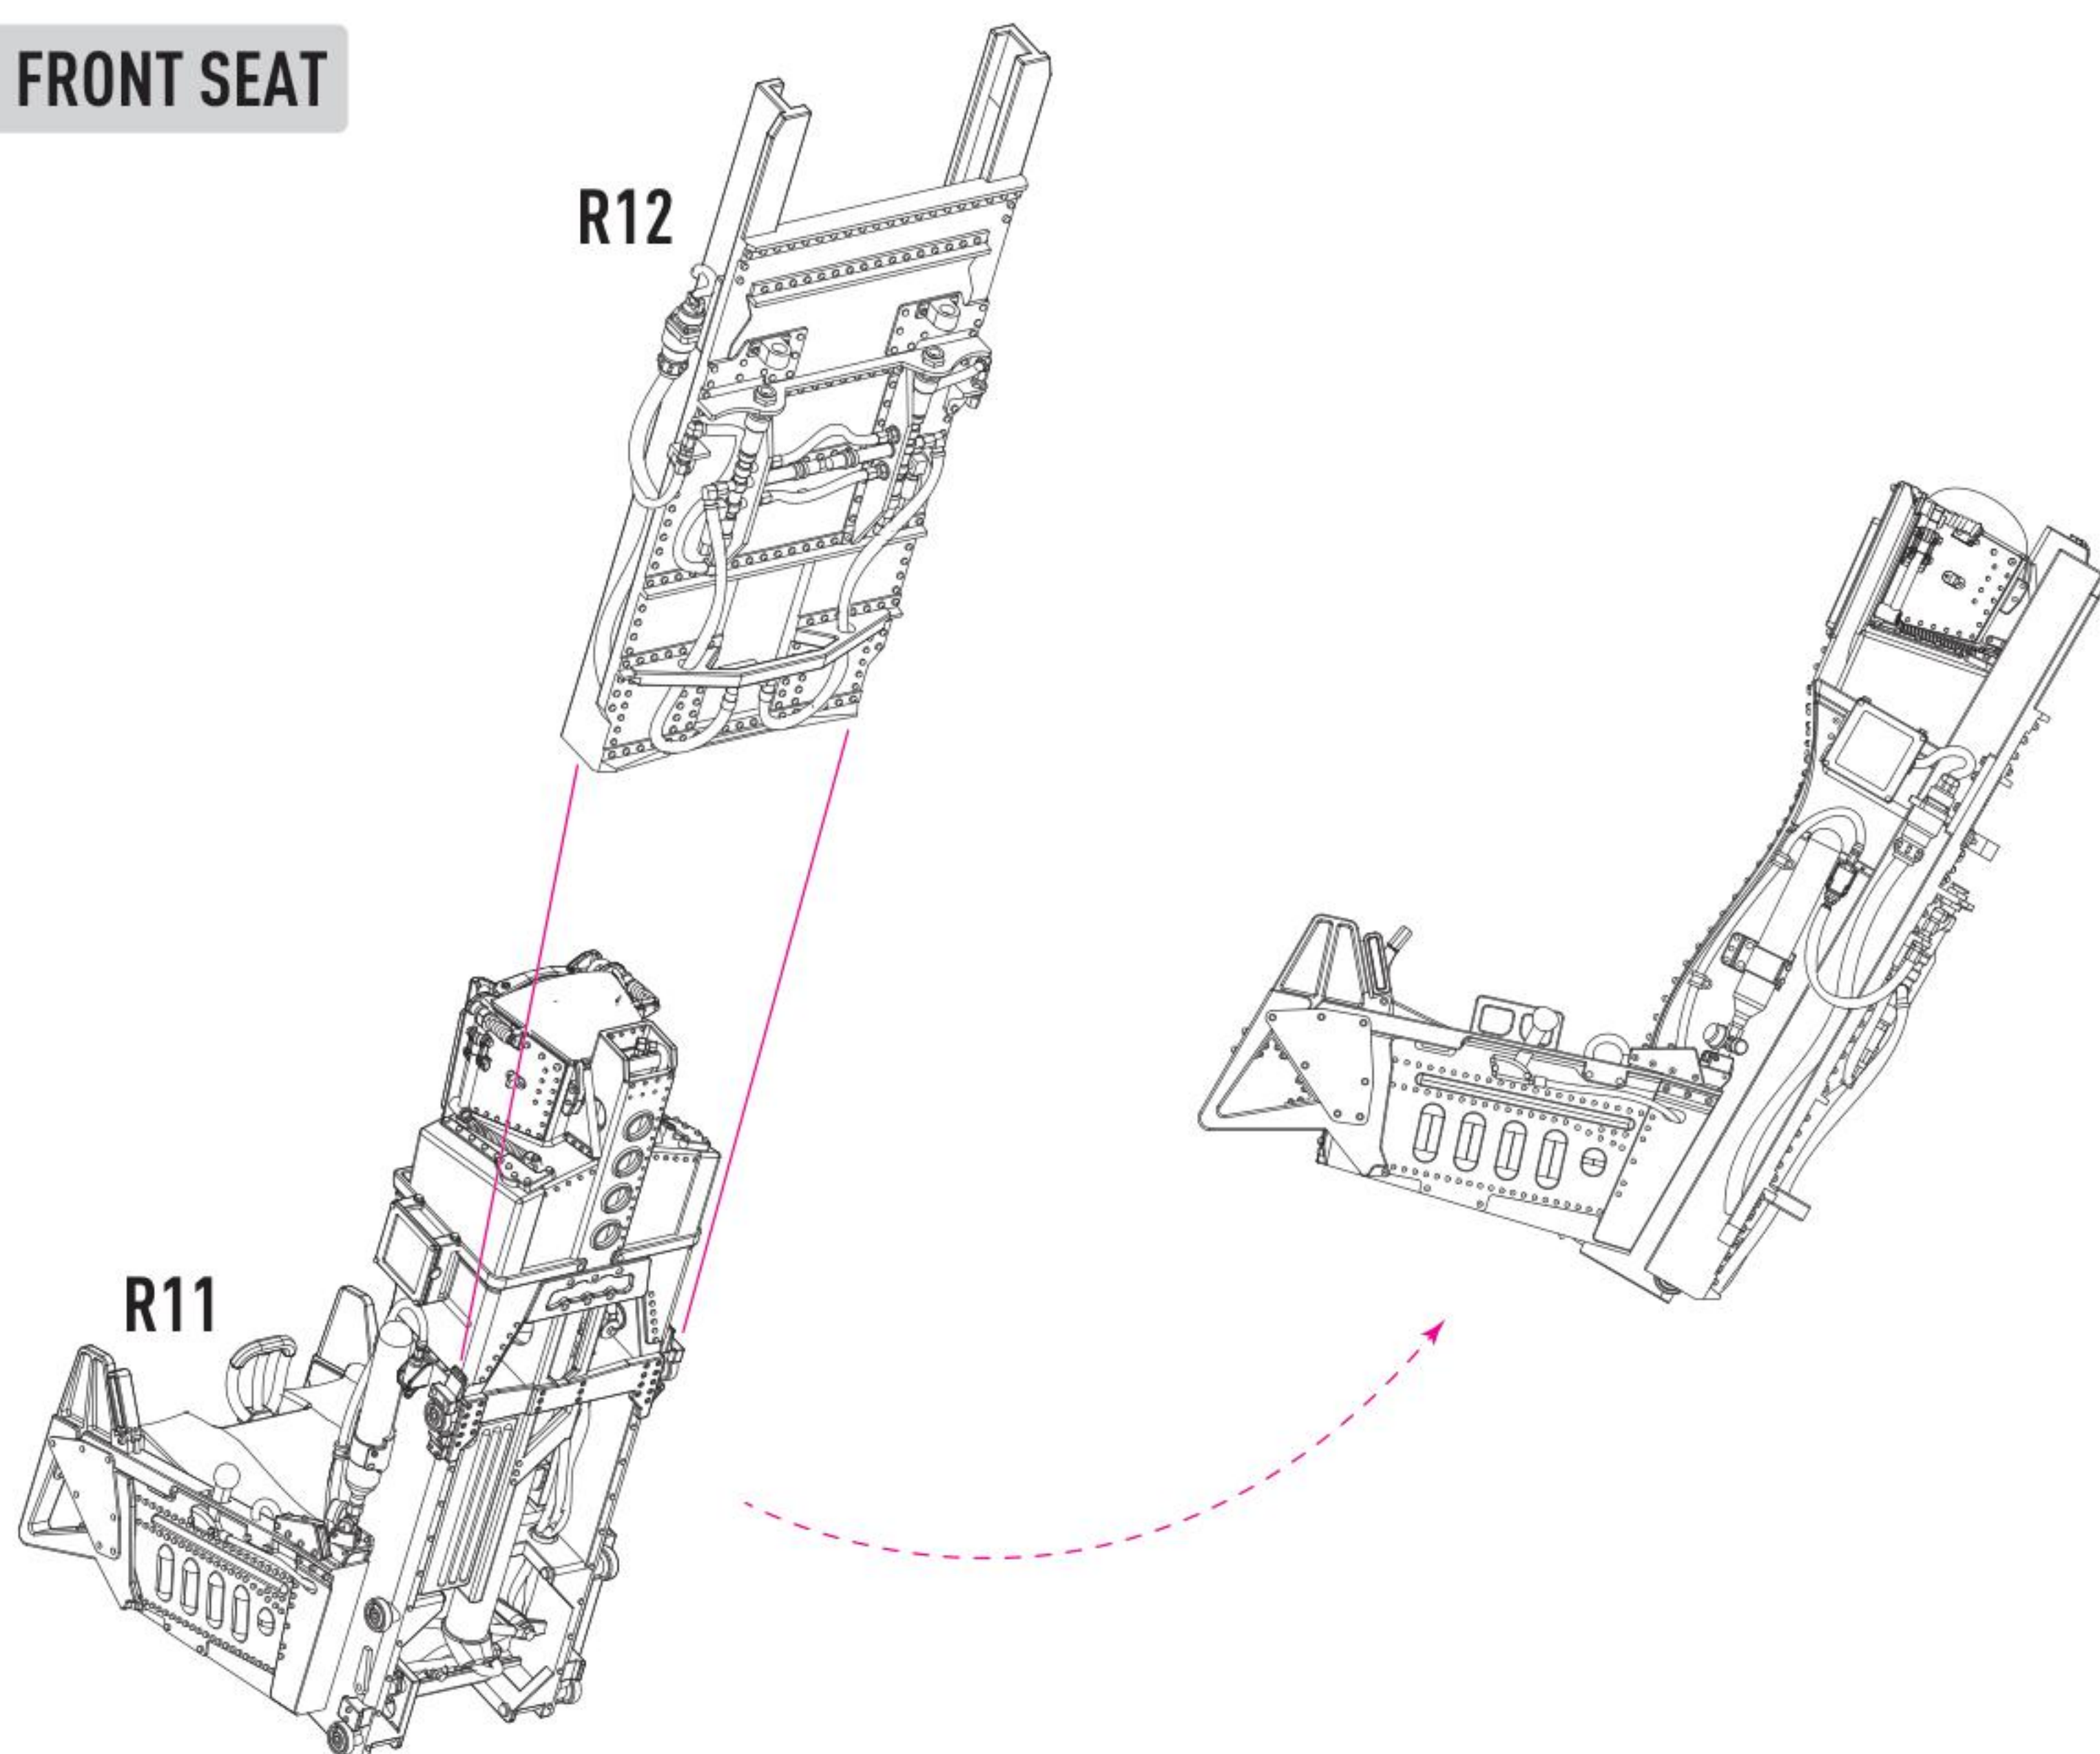

8 BACK SEAT

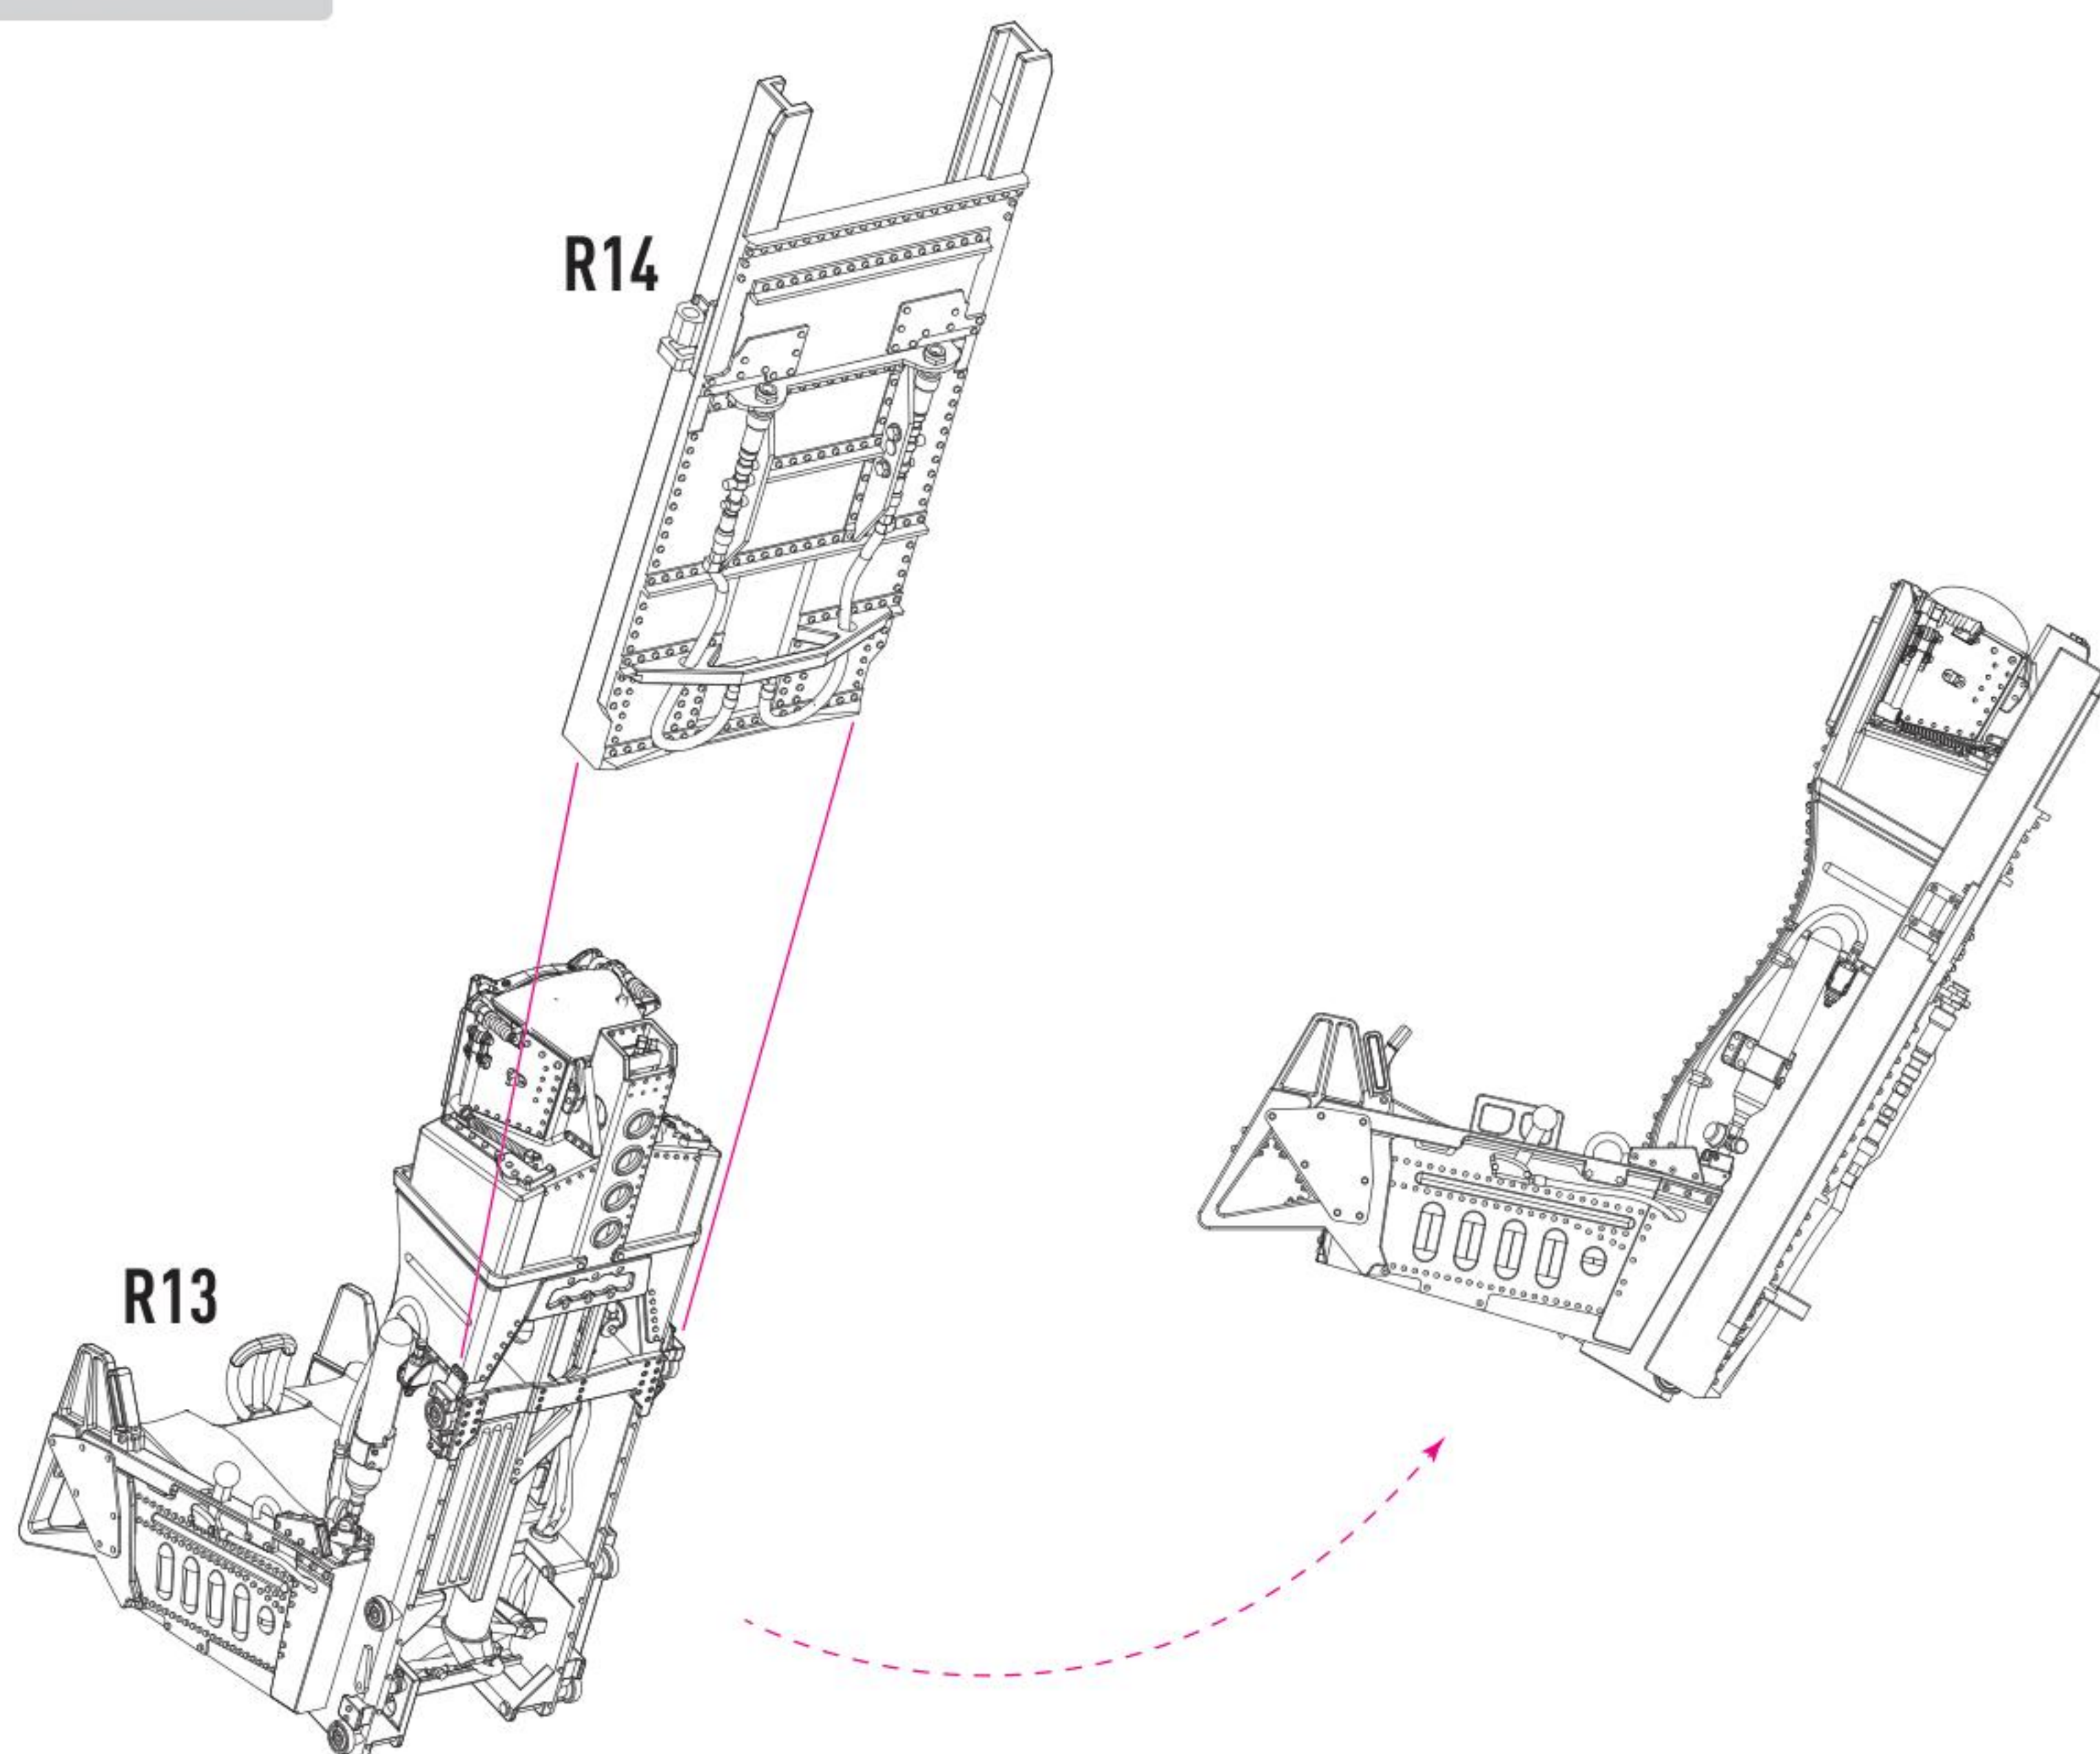

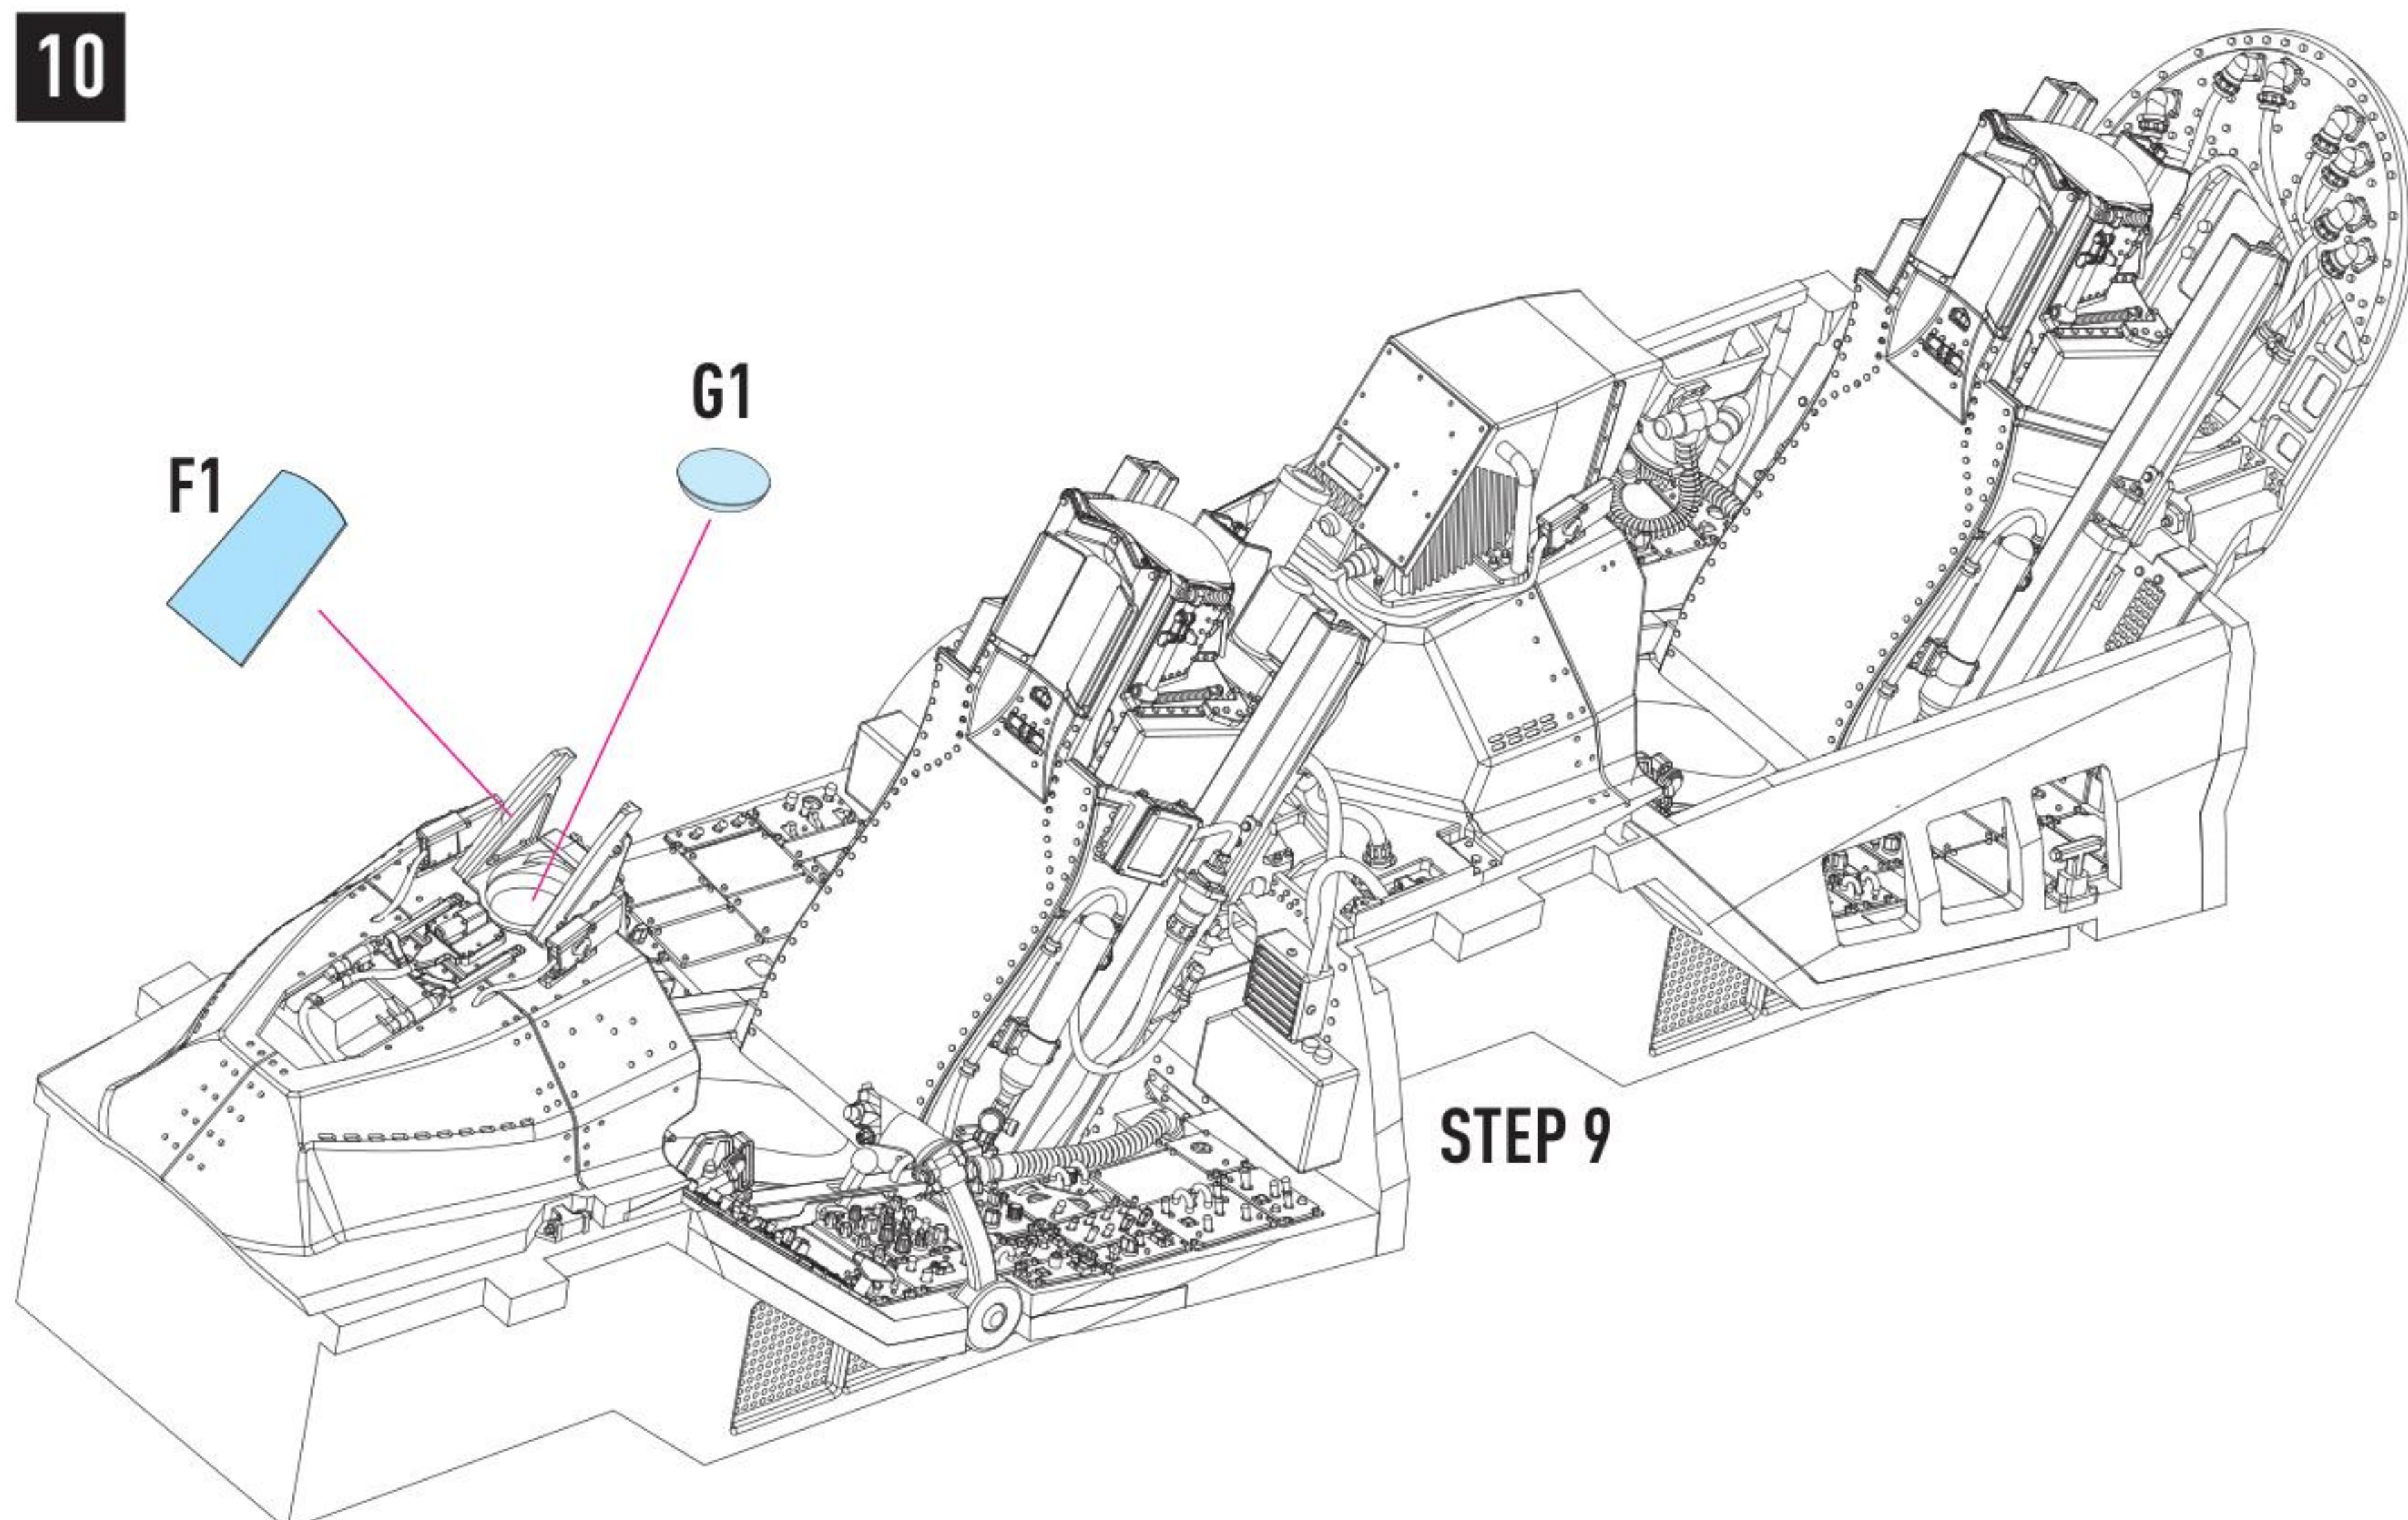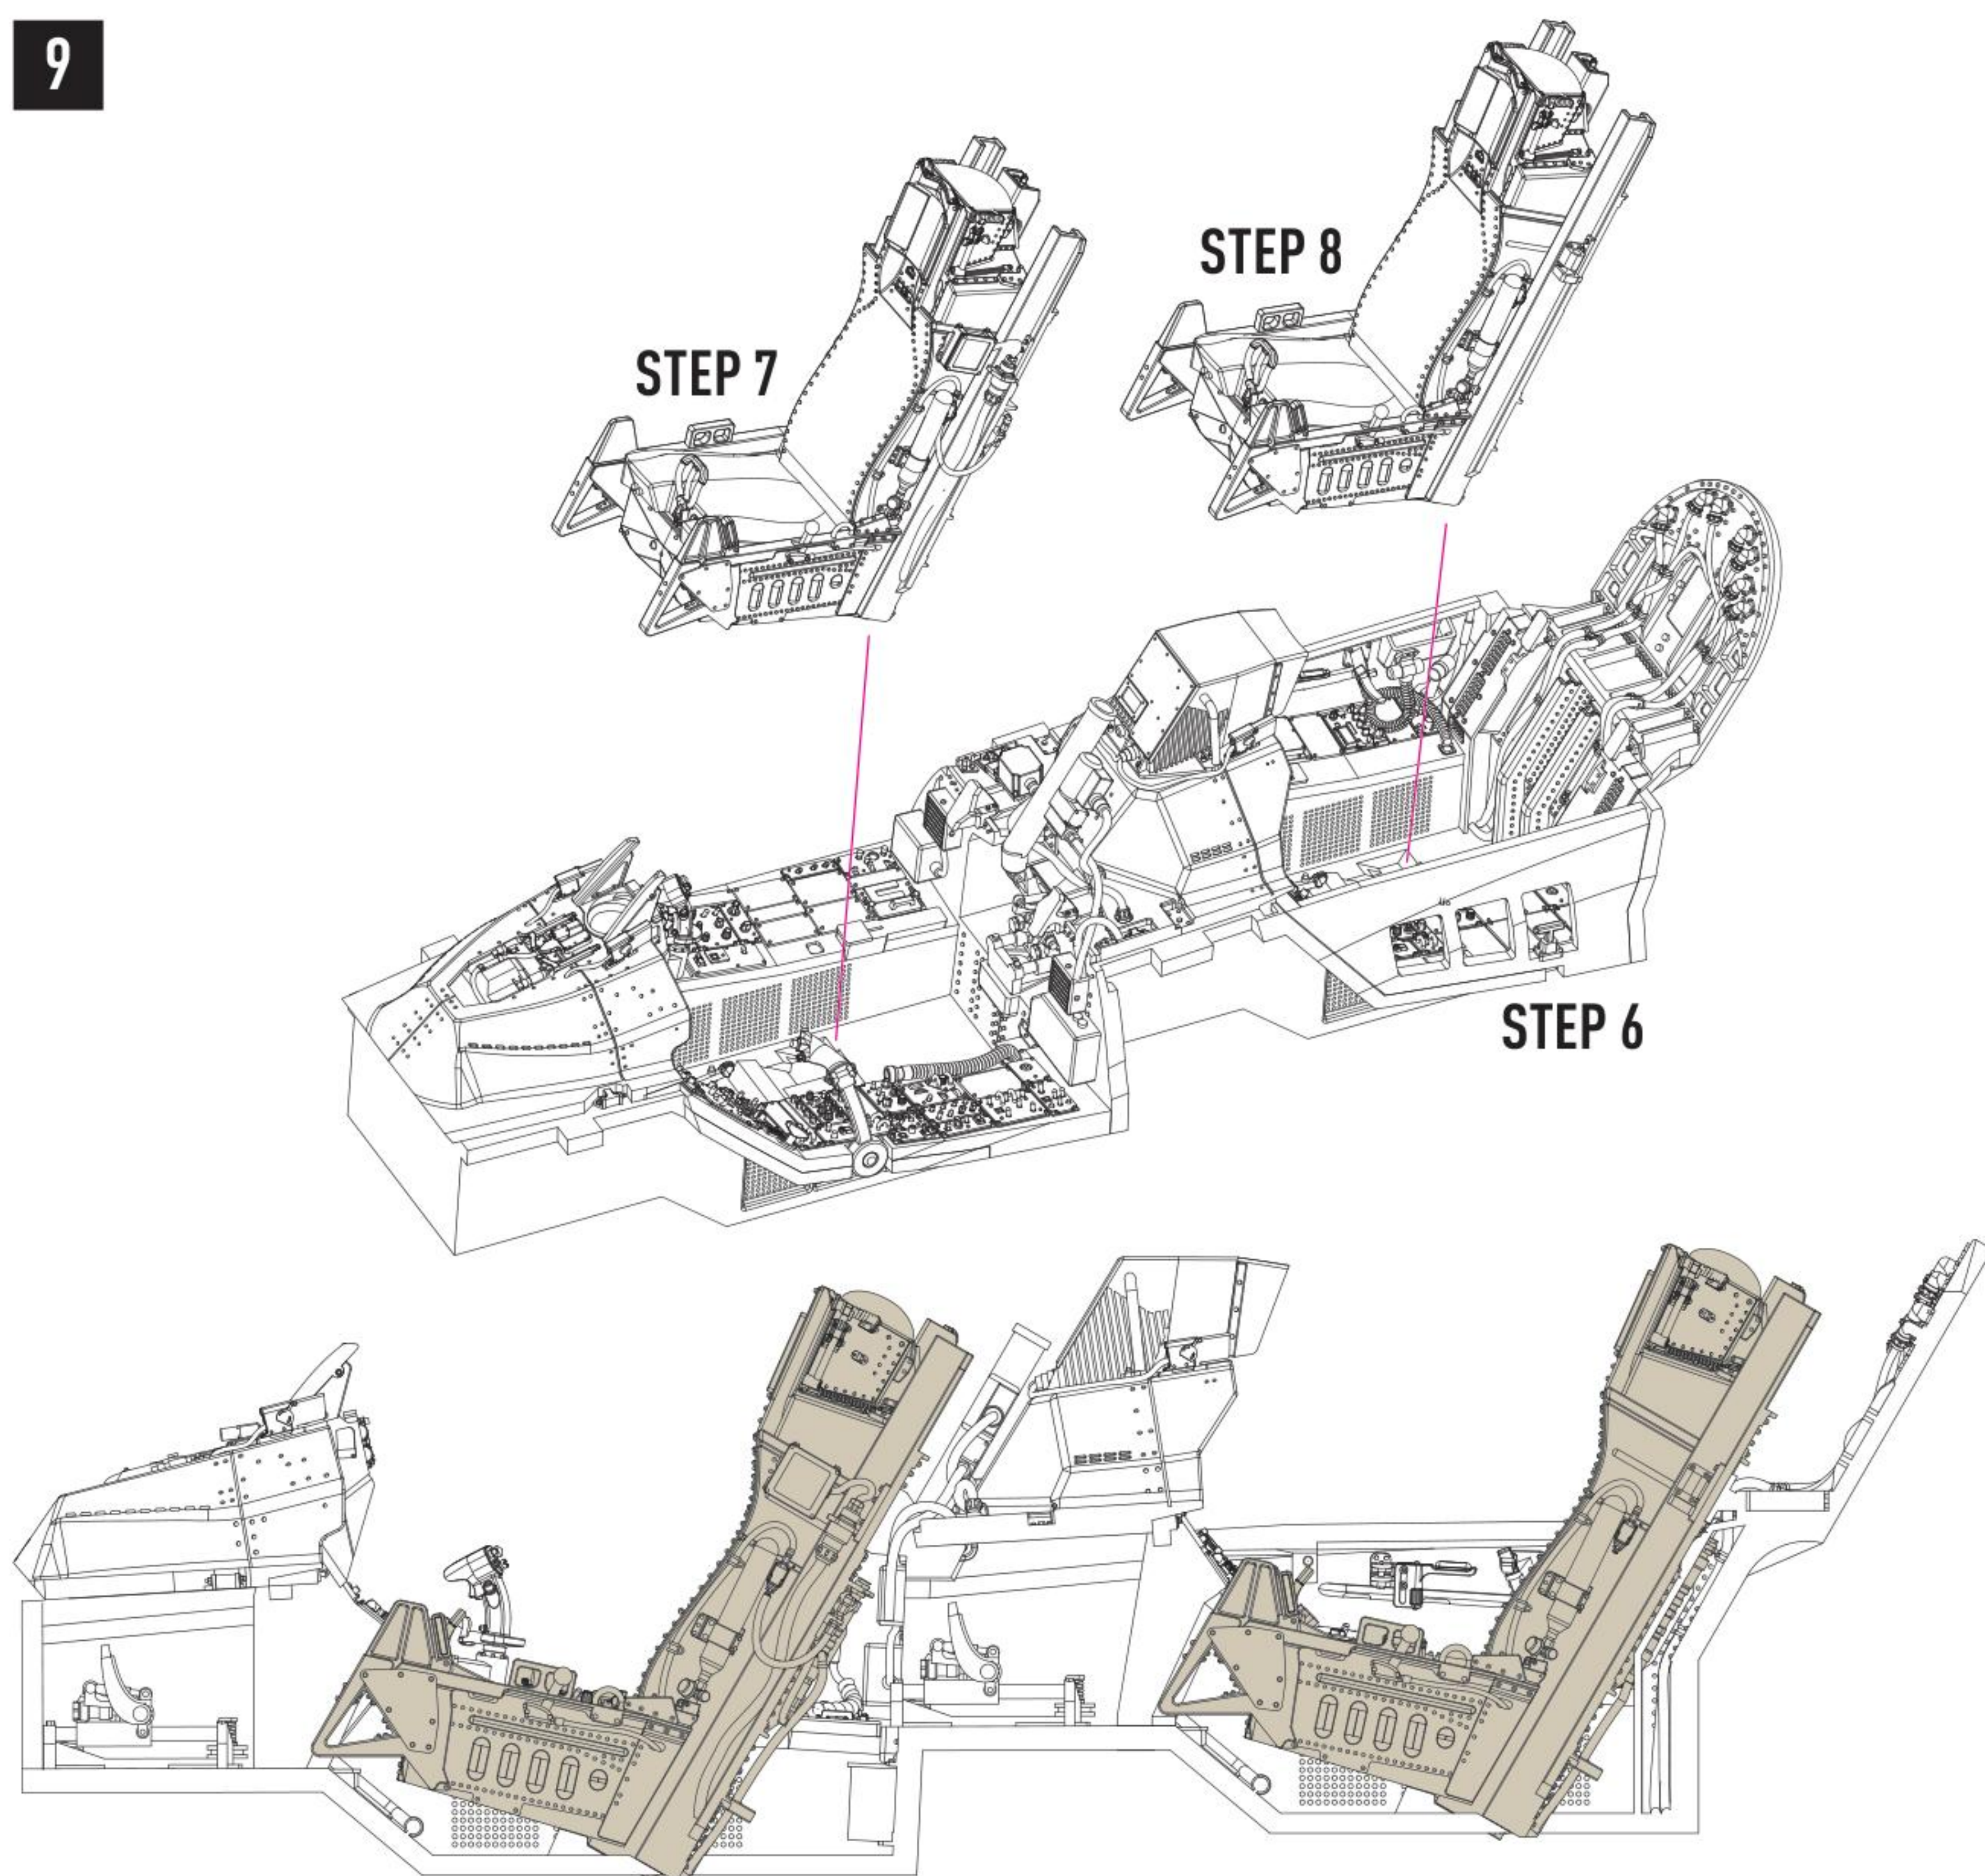


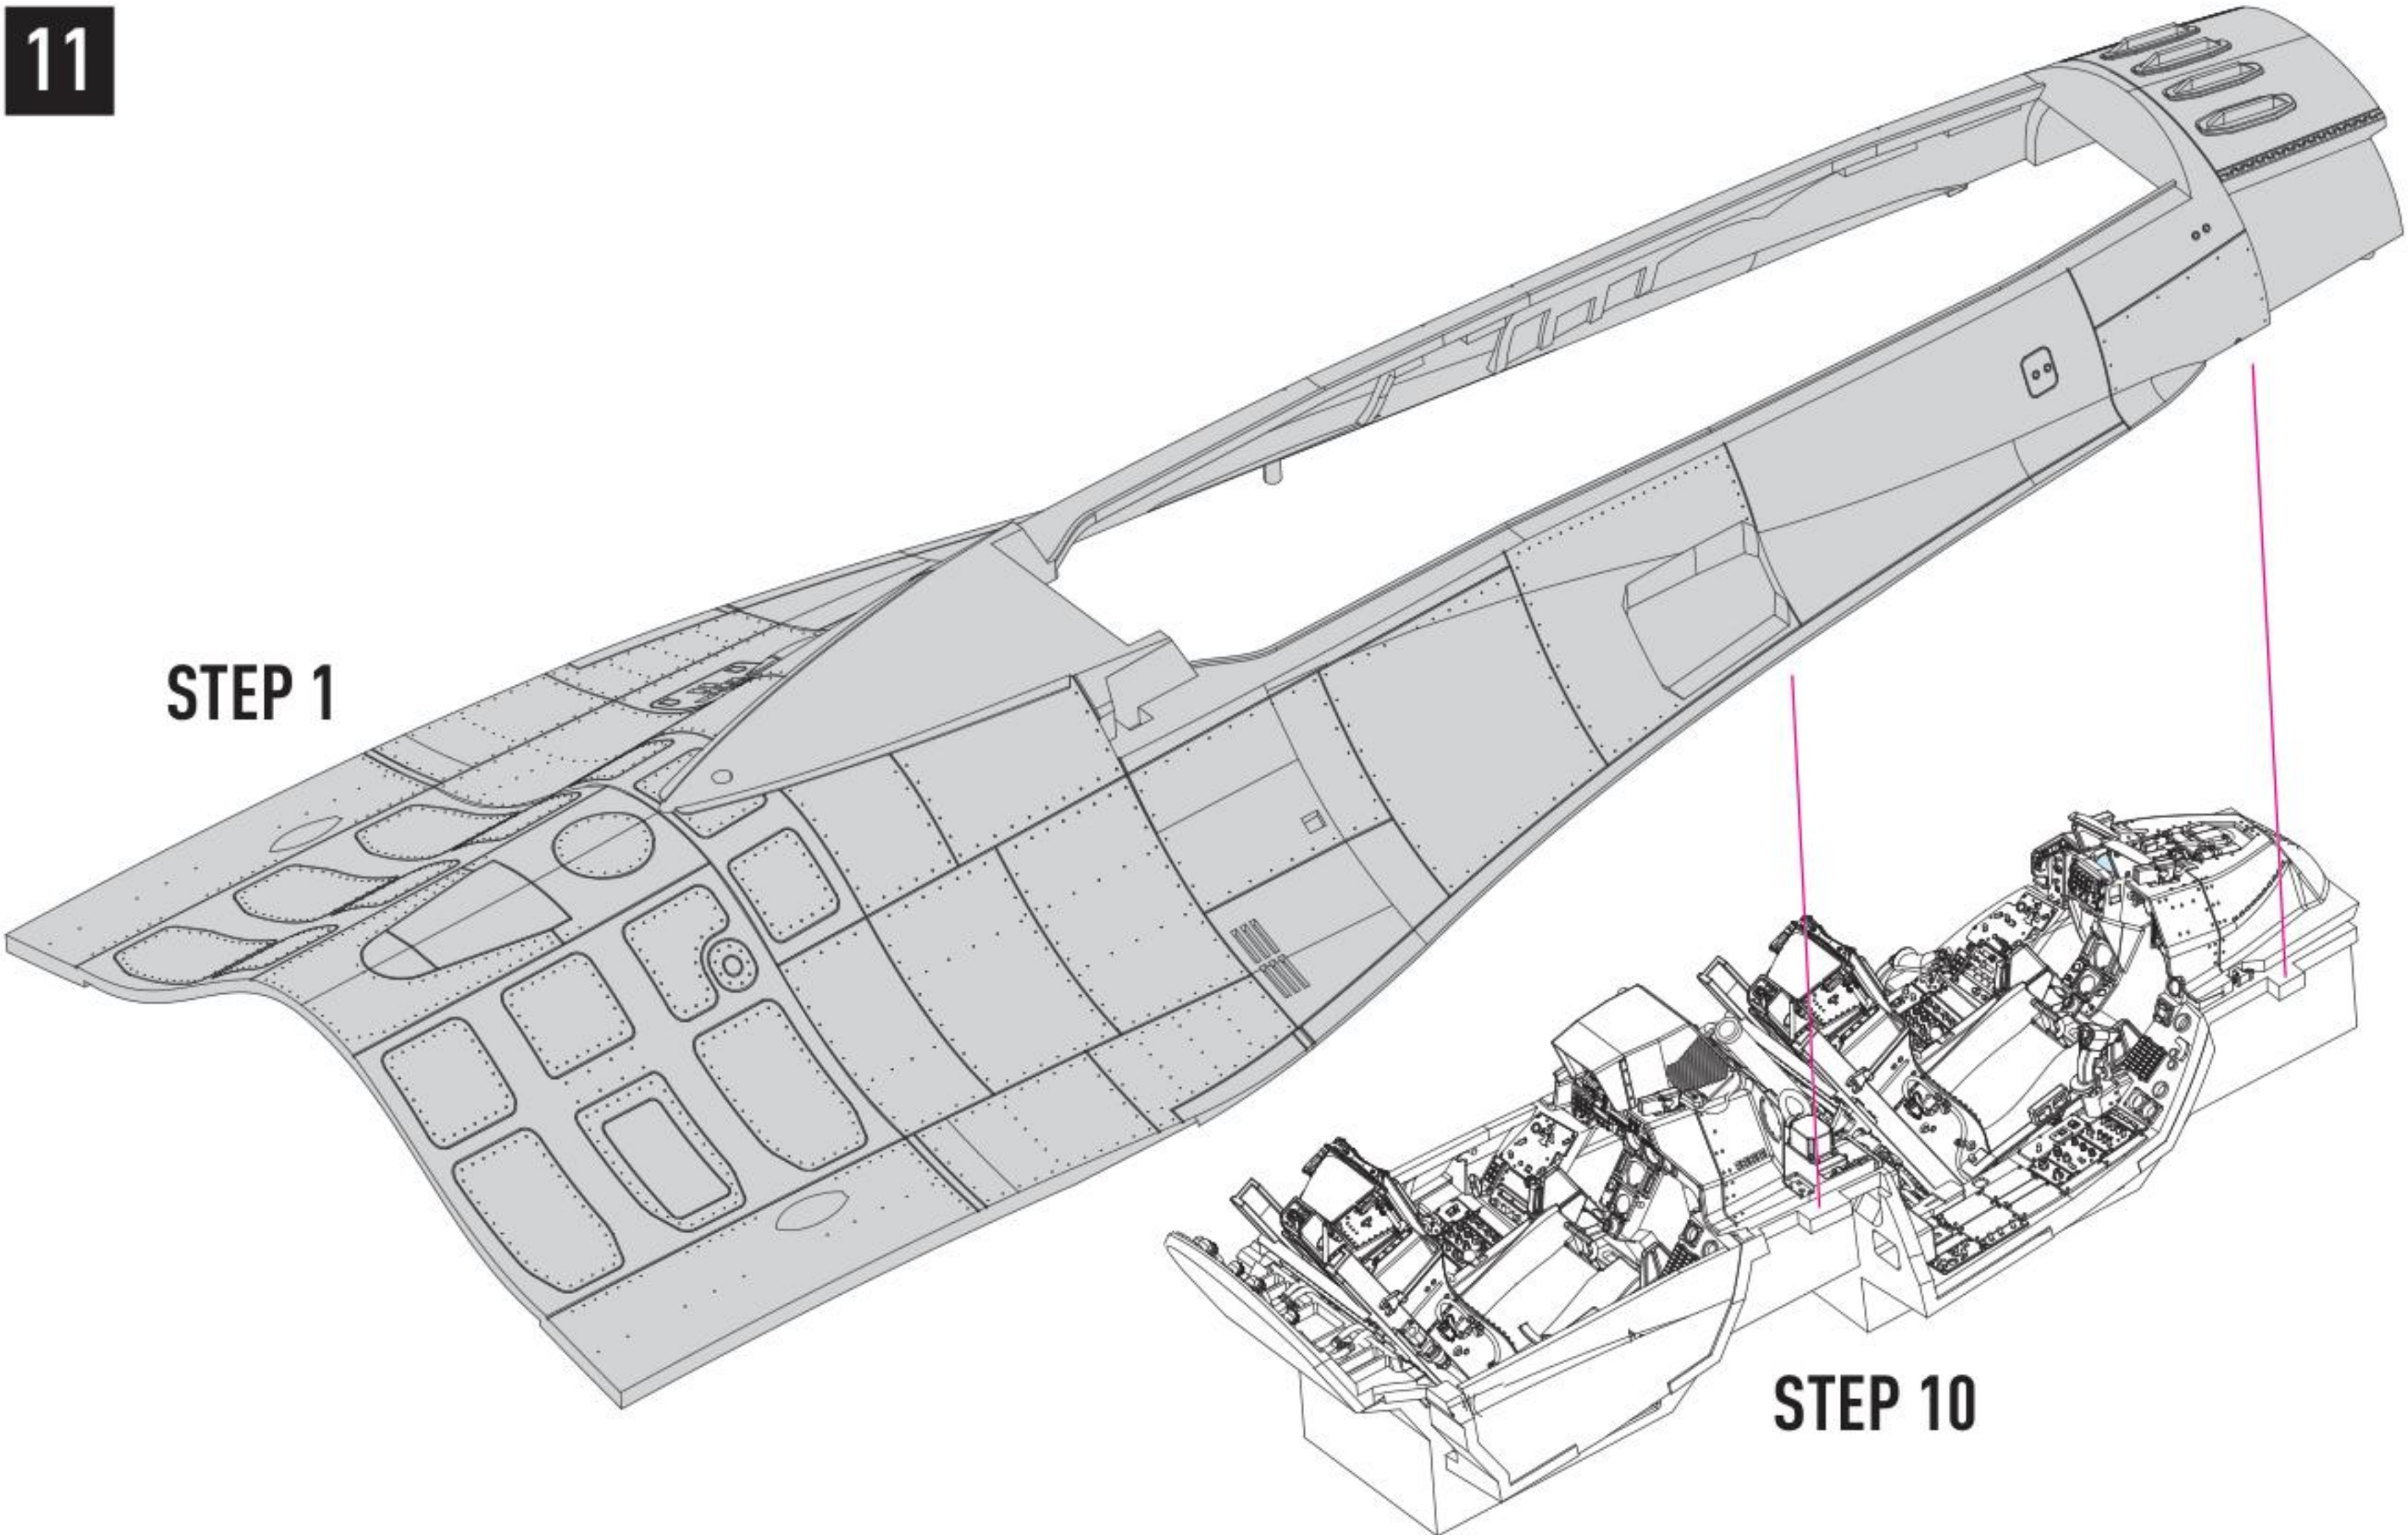

STEP 1


STEP 10

PART G23
FROM KINETIC KIT

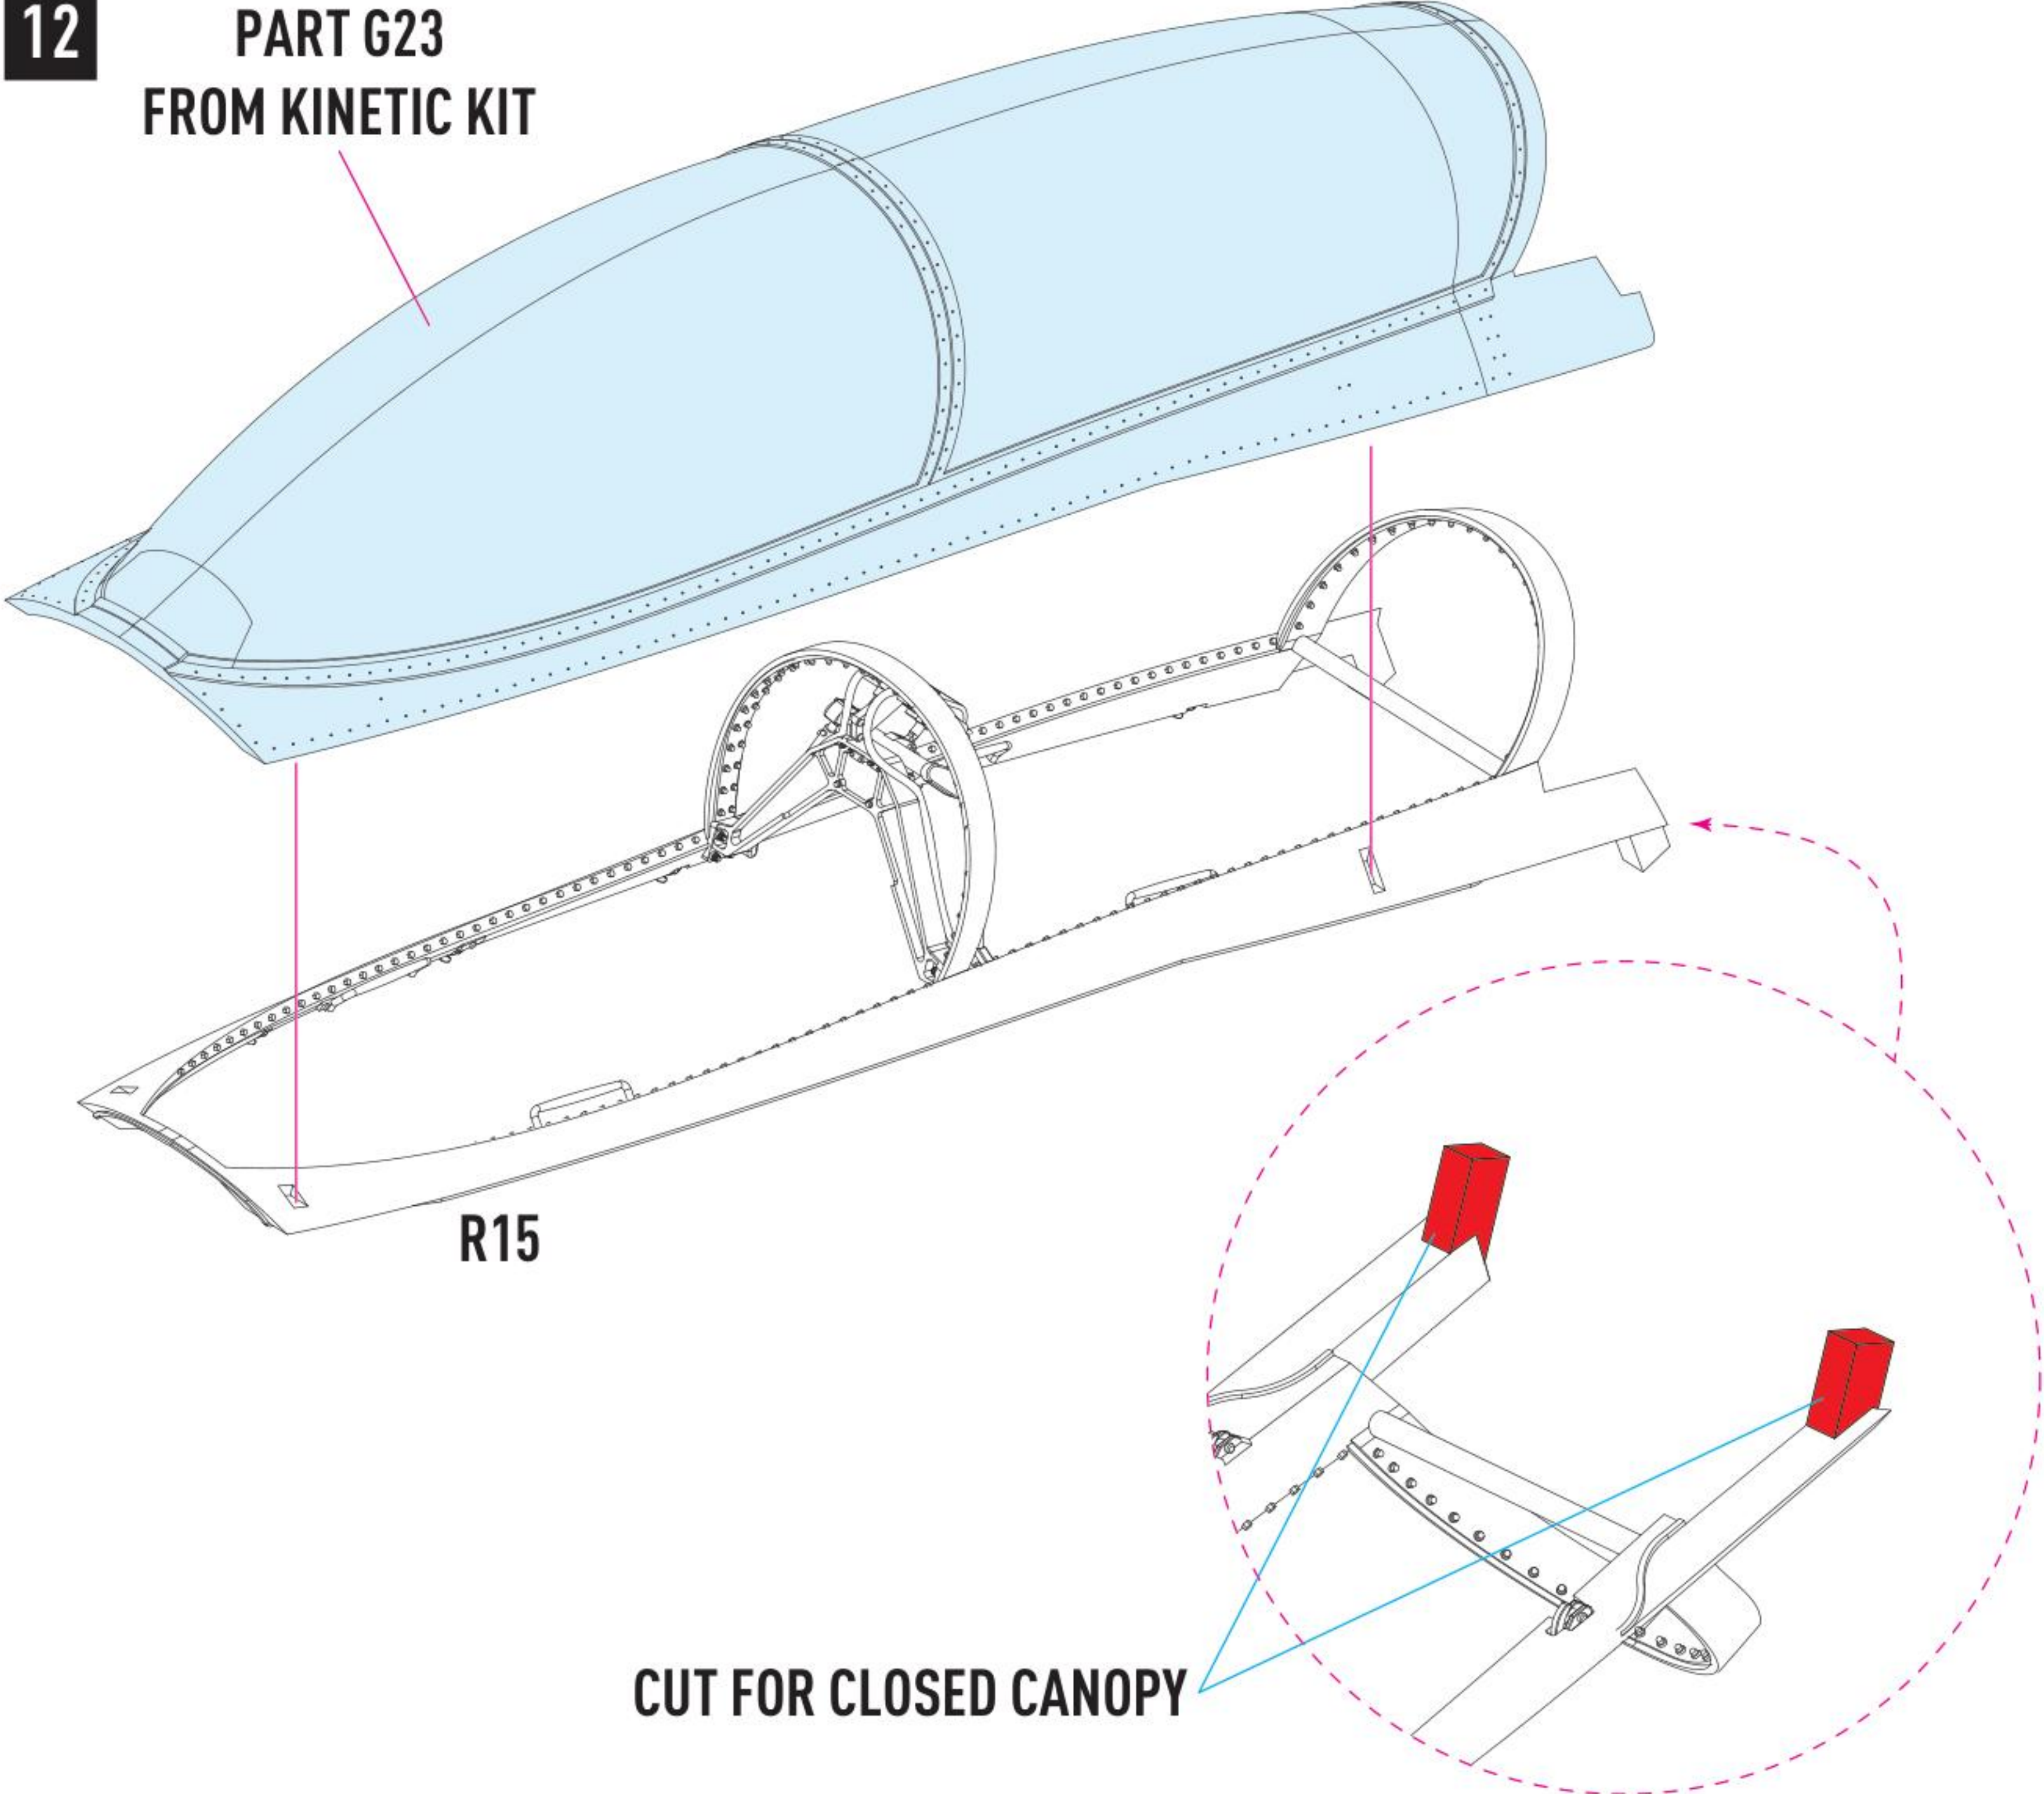


R15



CUT FOR CLOSED CANOPY

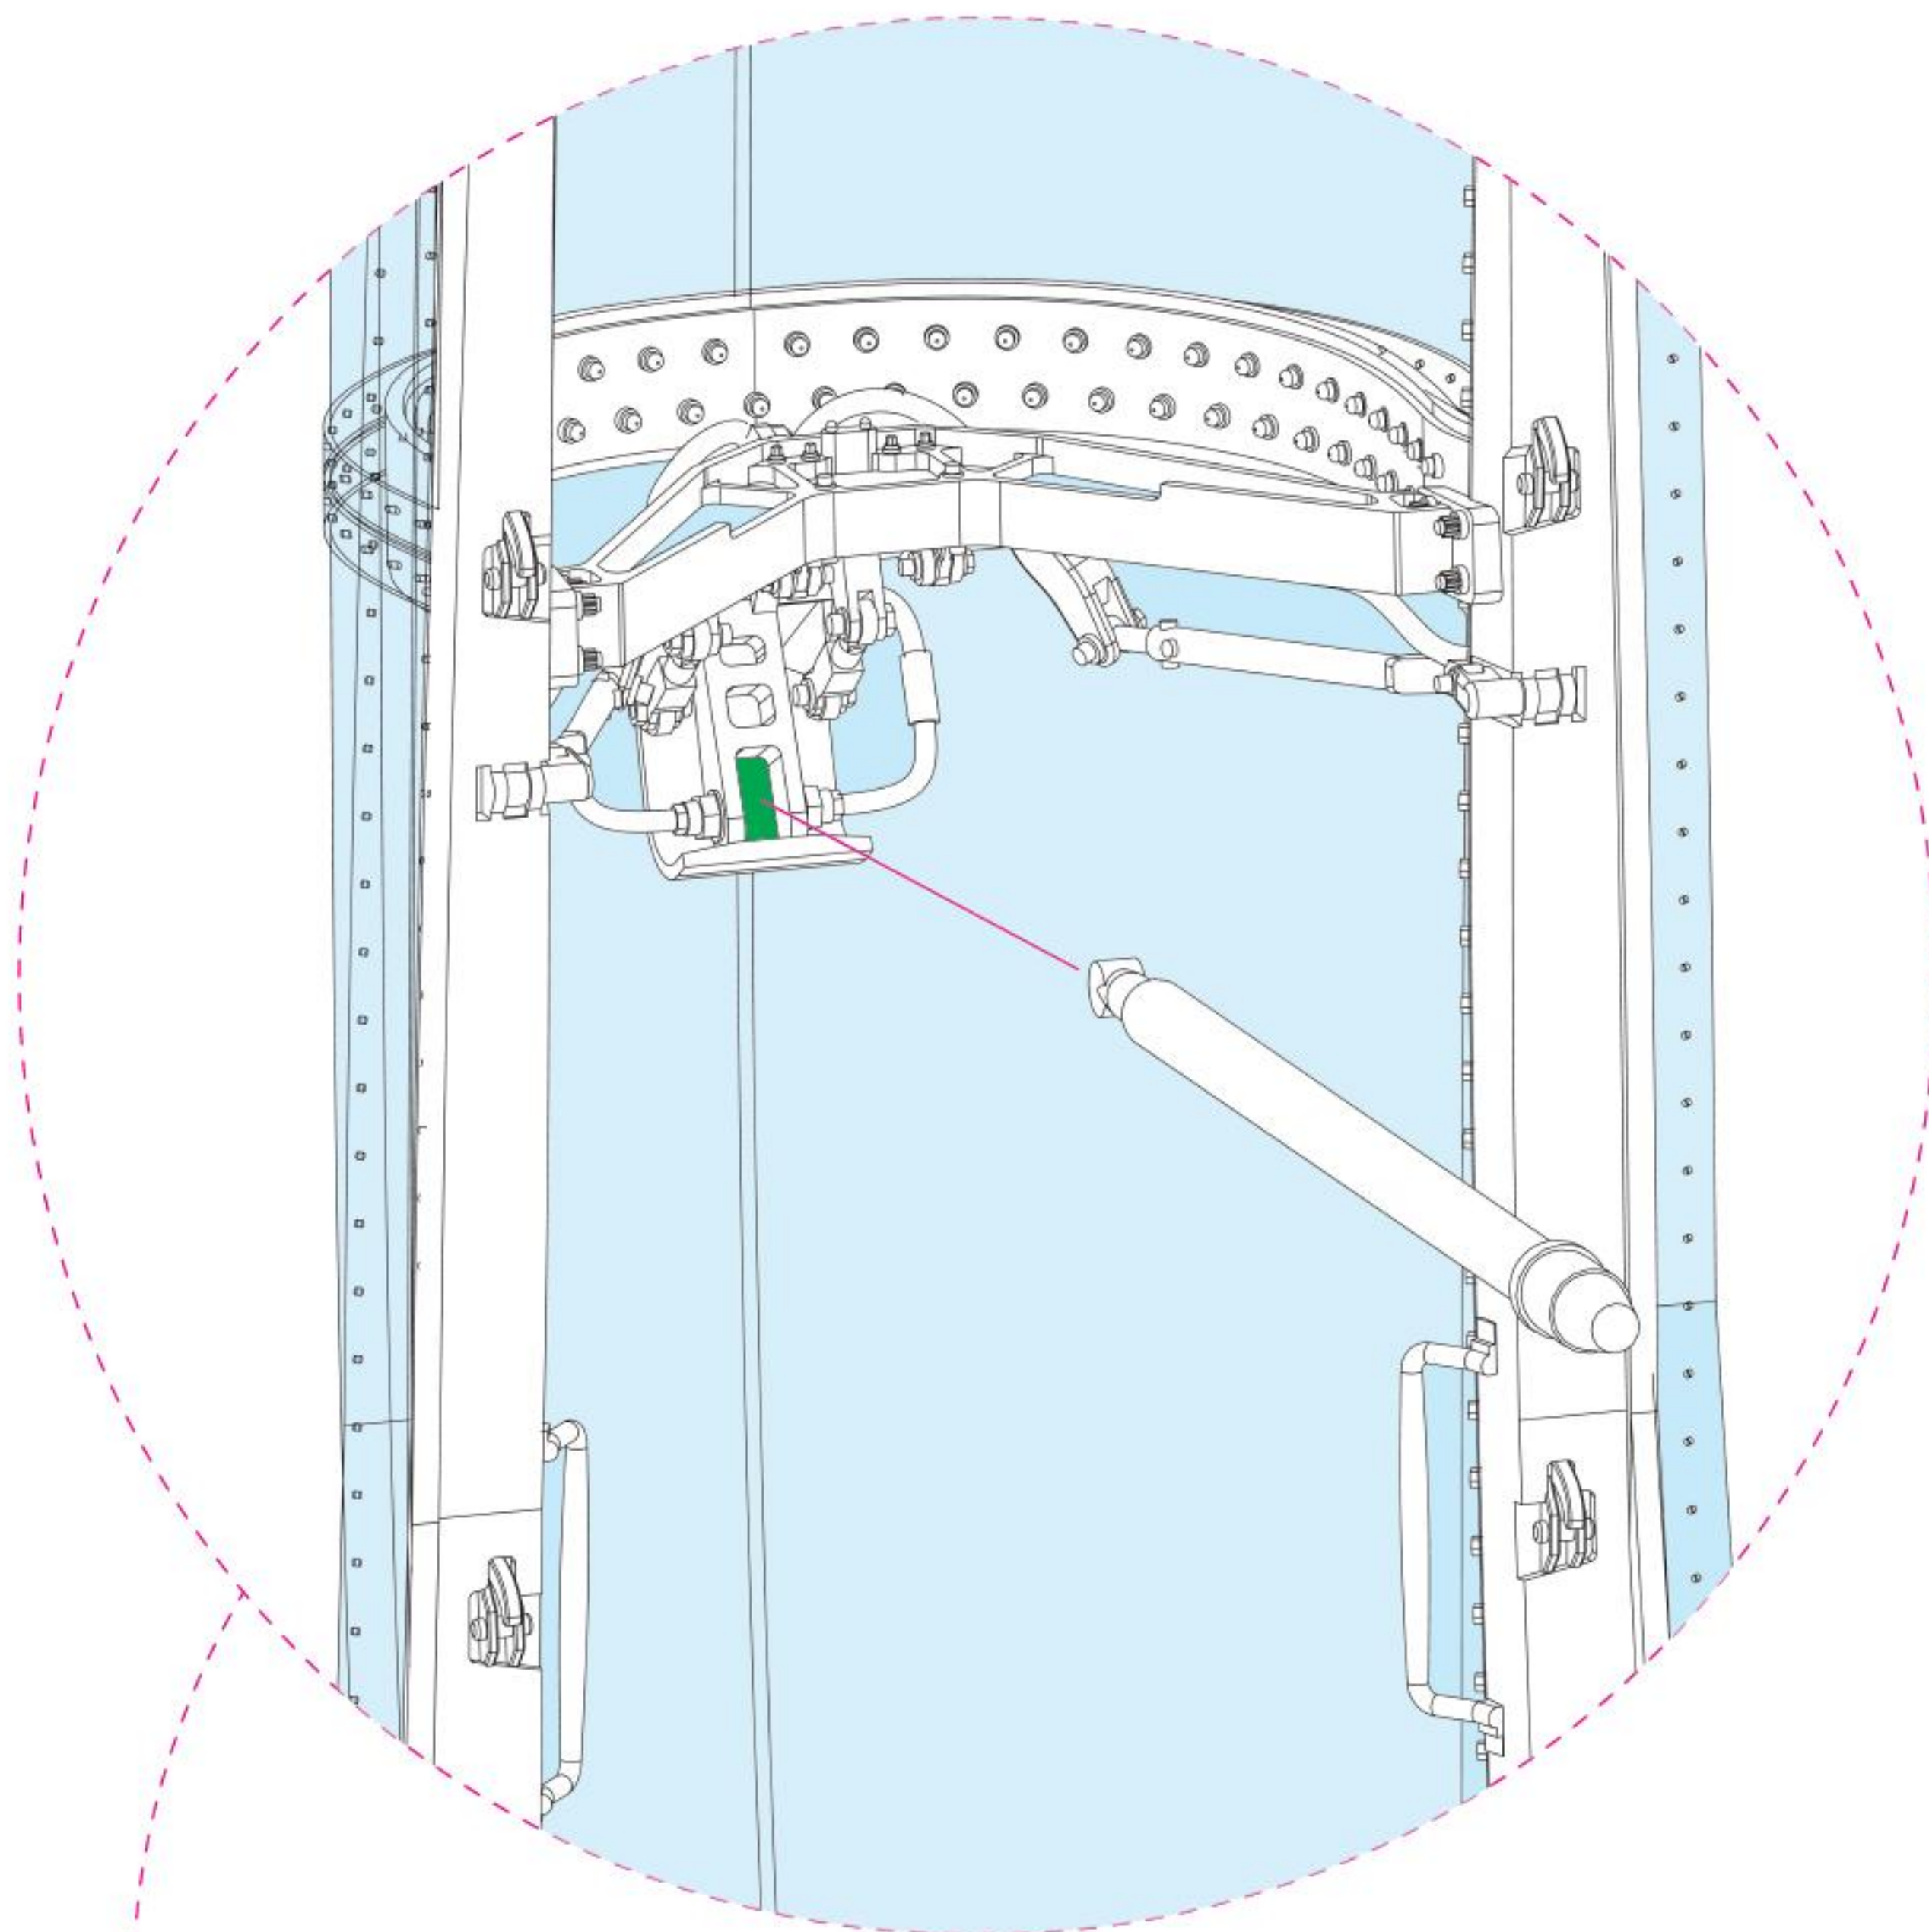


STEP 12

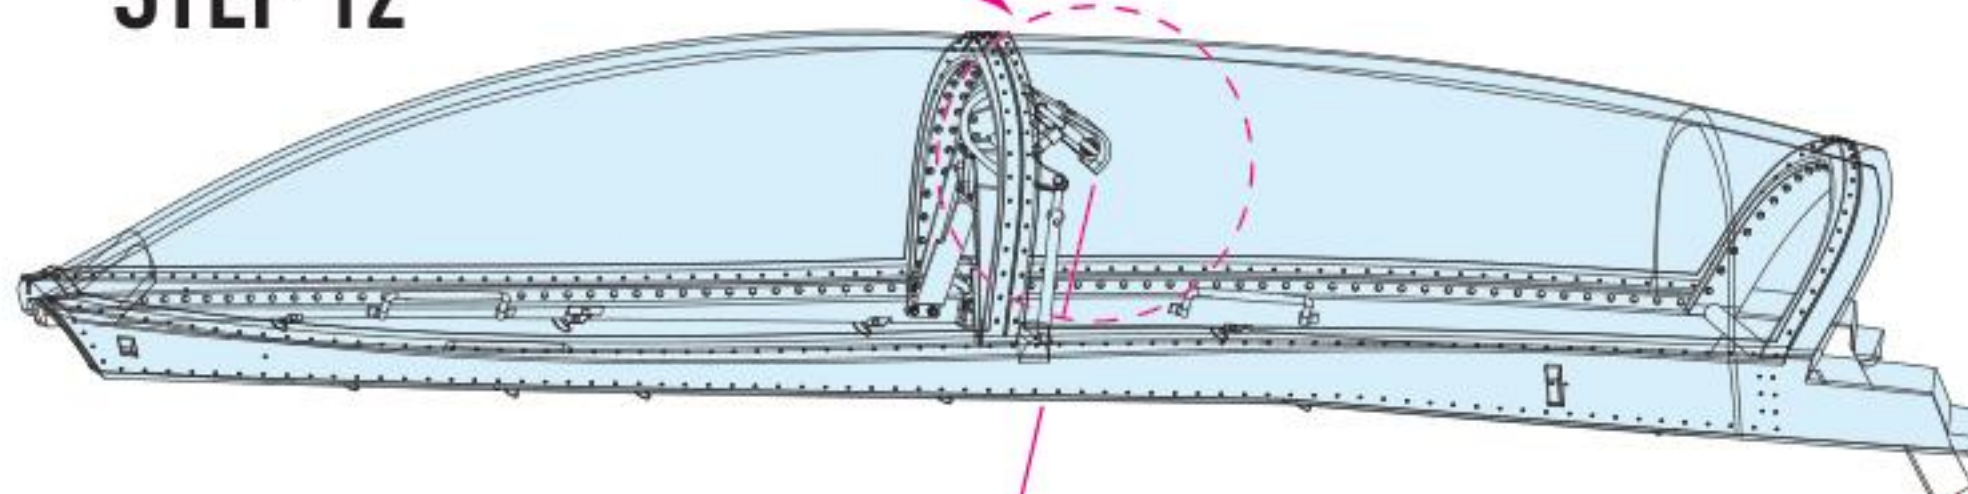


USE R18 FOR CLOSED CANOPY
OR R19 FOR OPEN CANOPY

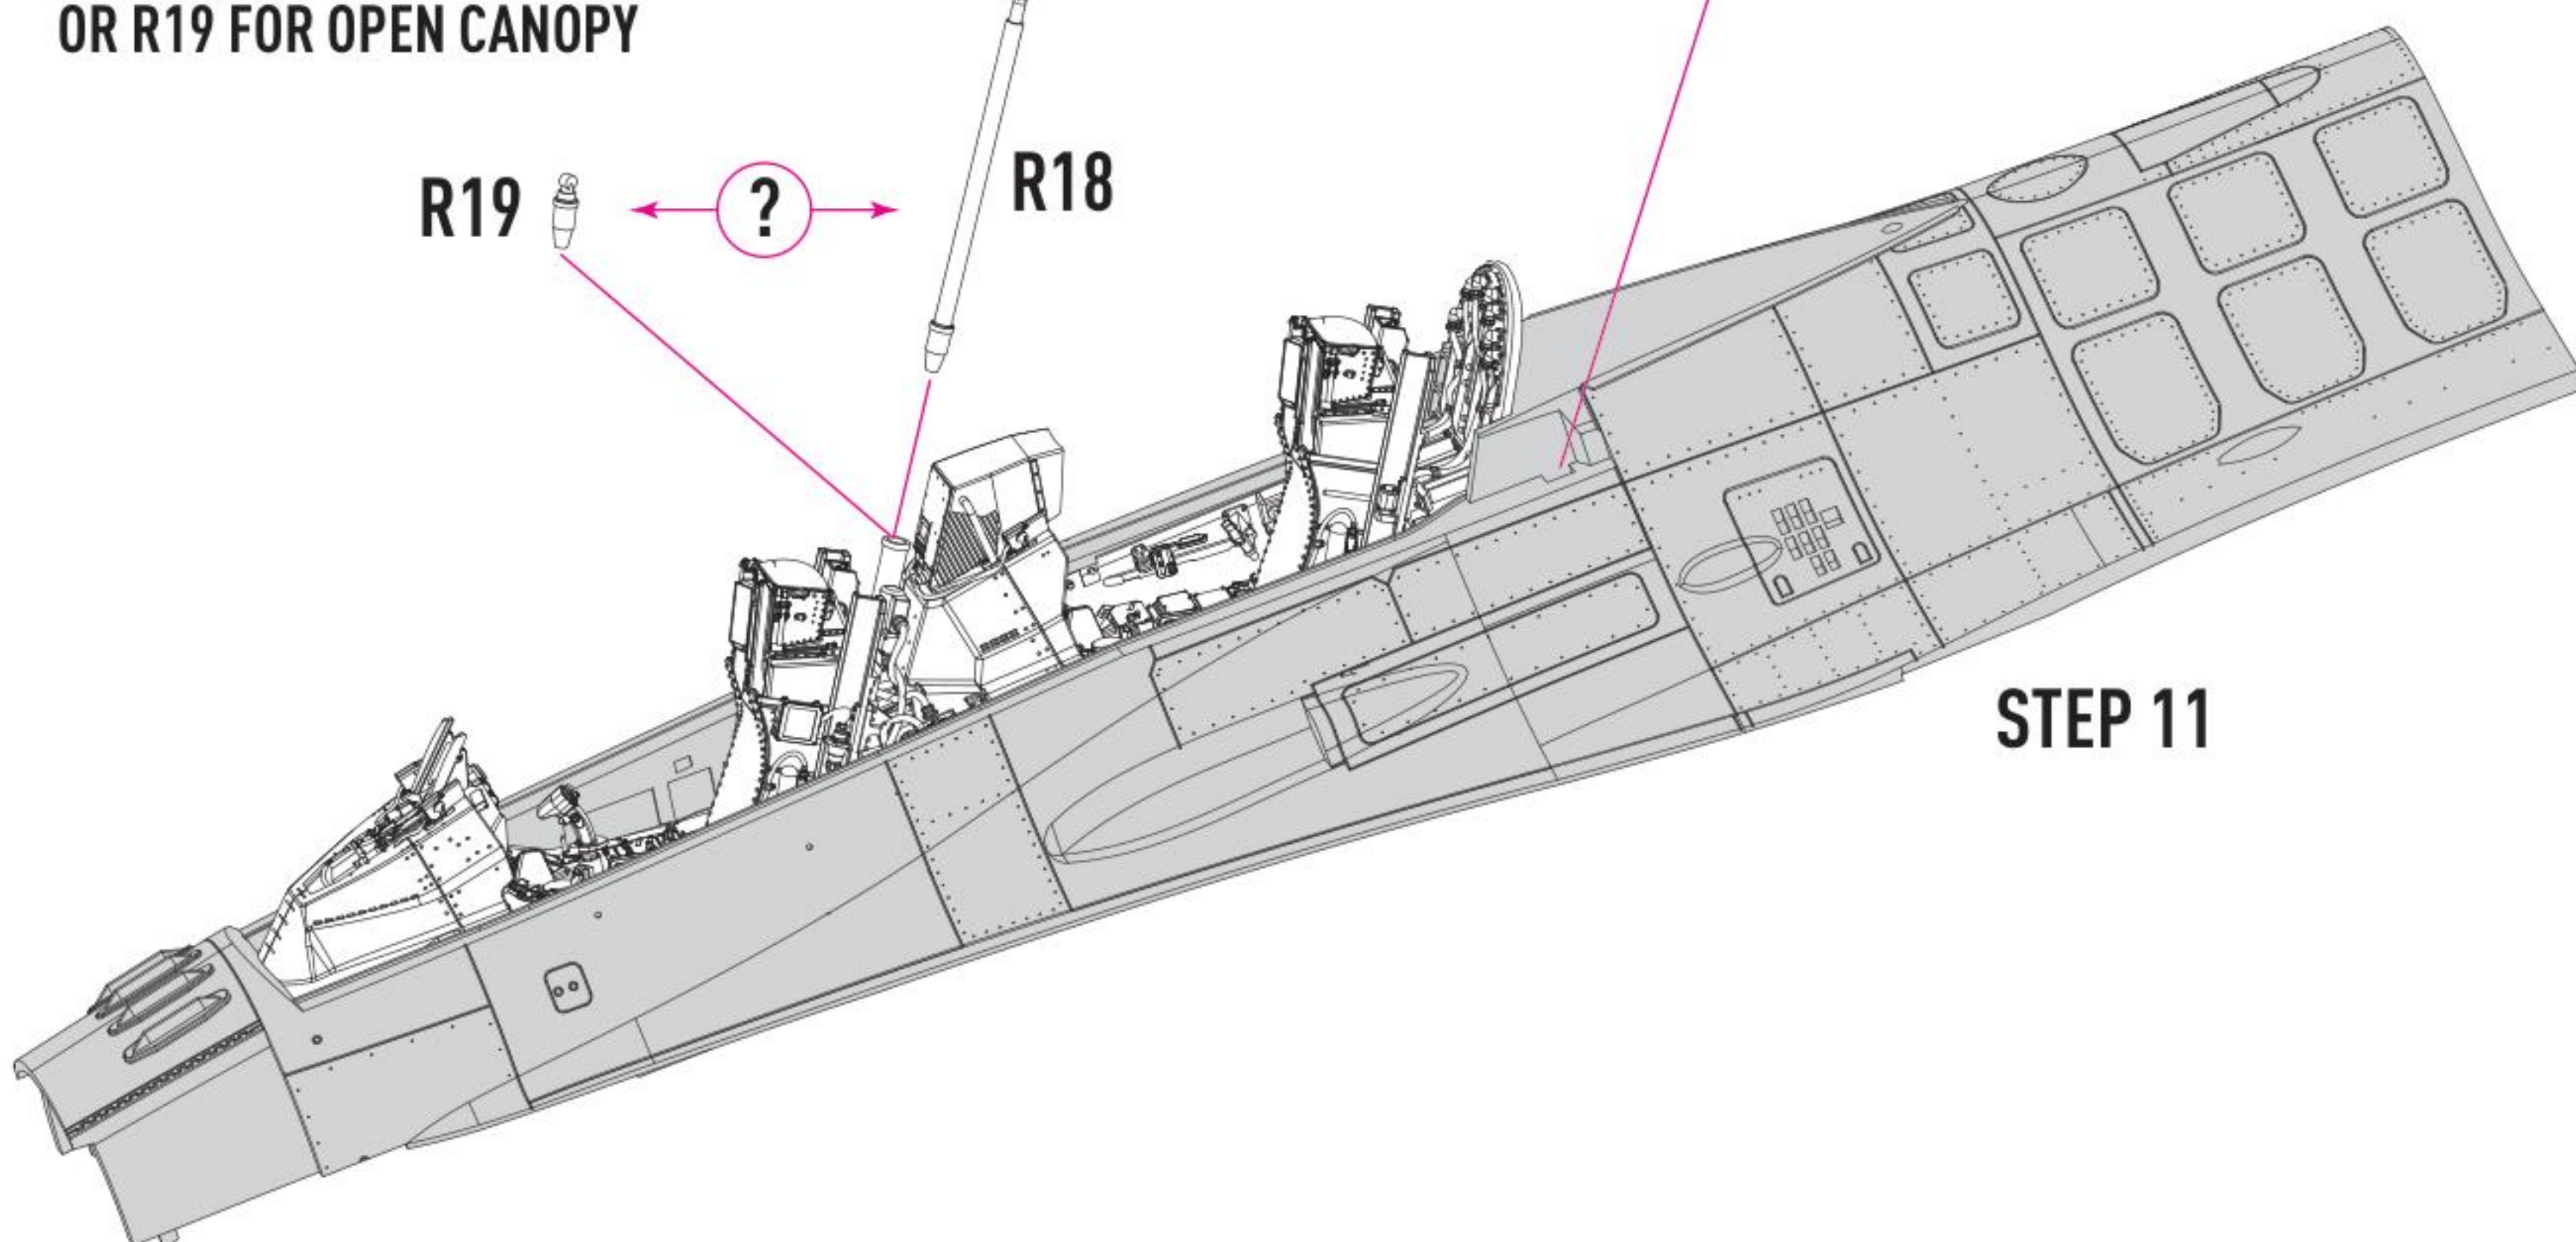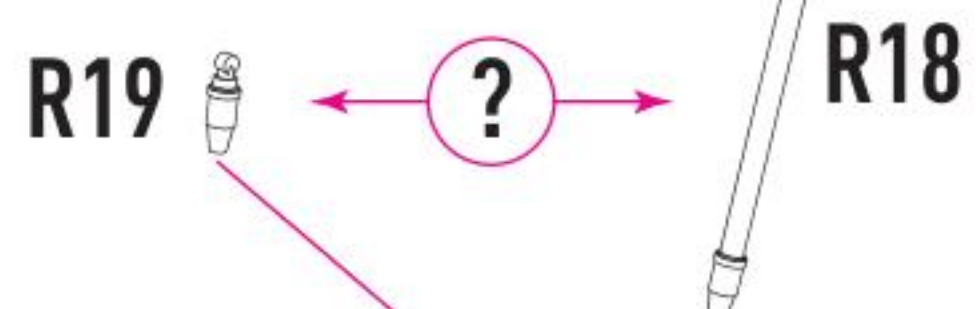

STEP 11

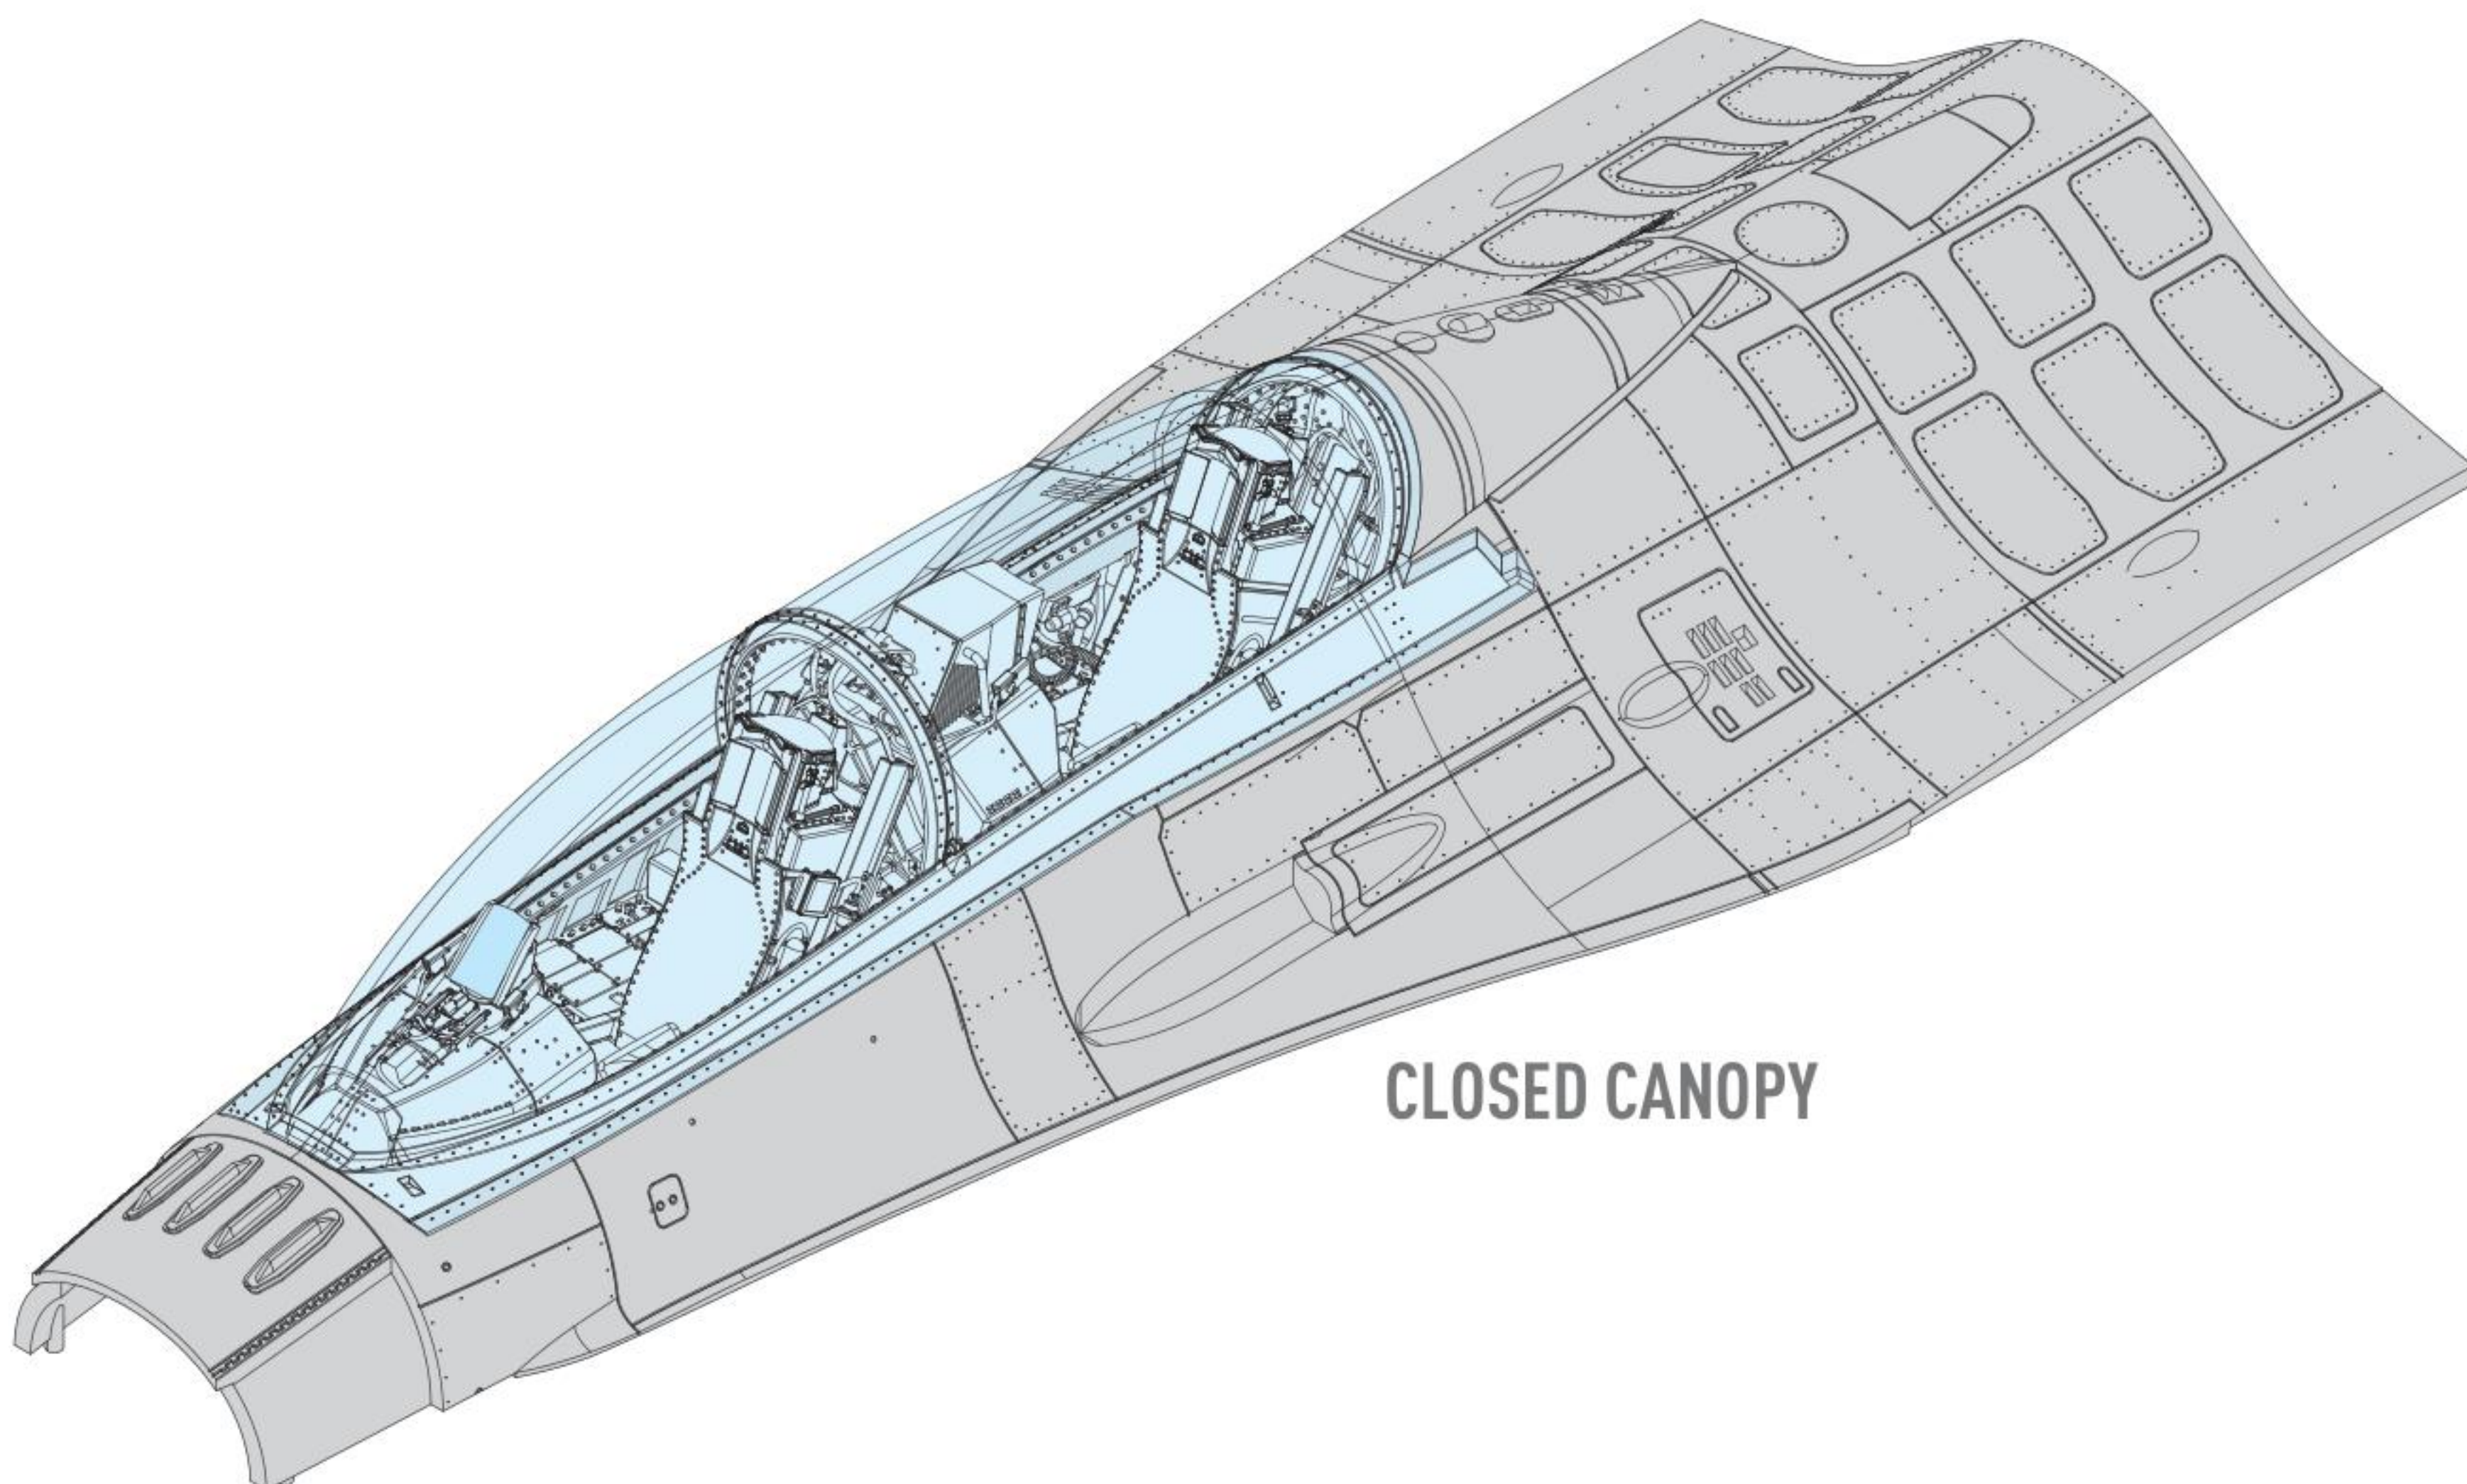

CLOSED CANOPY

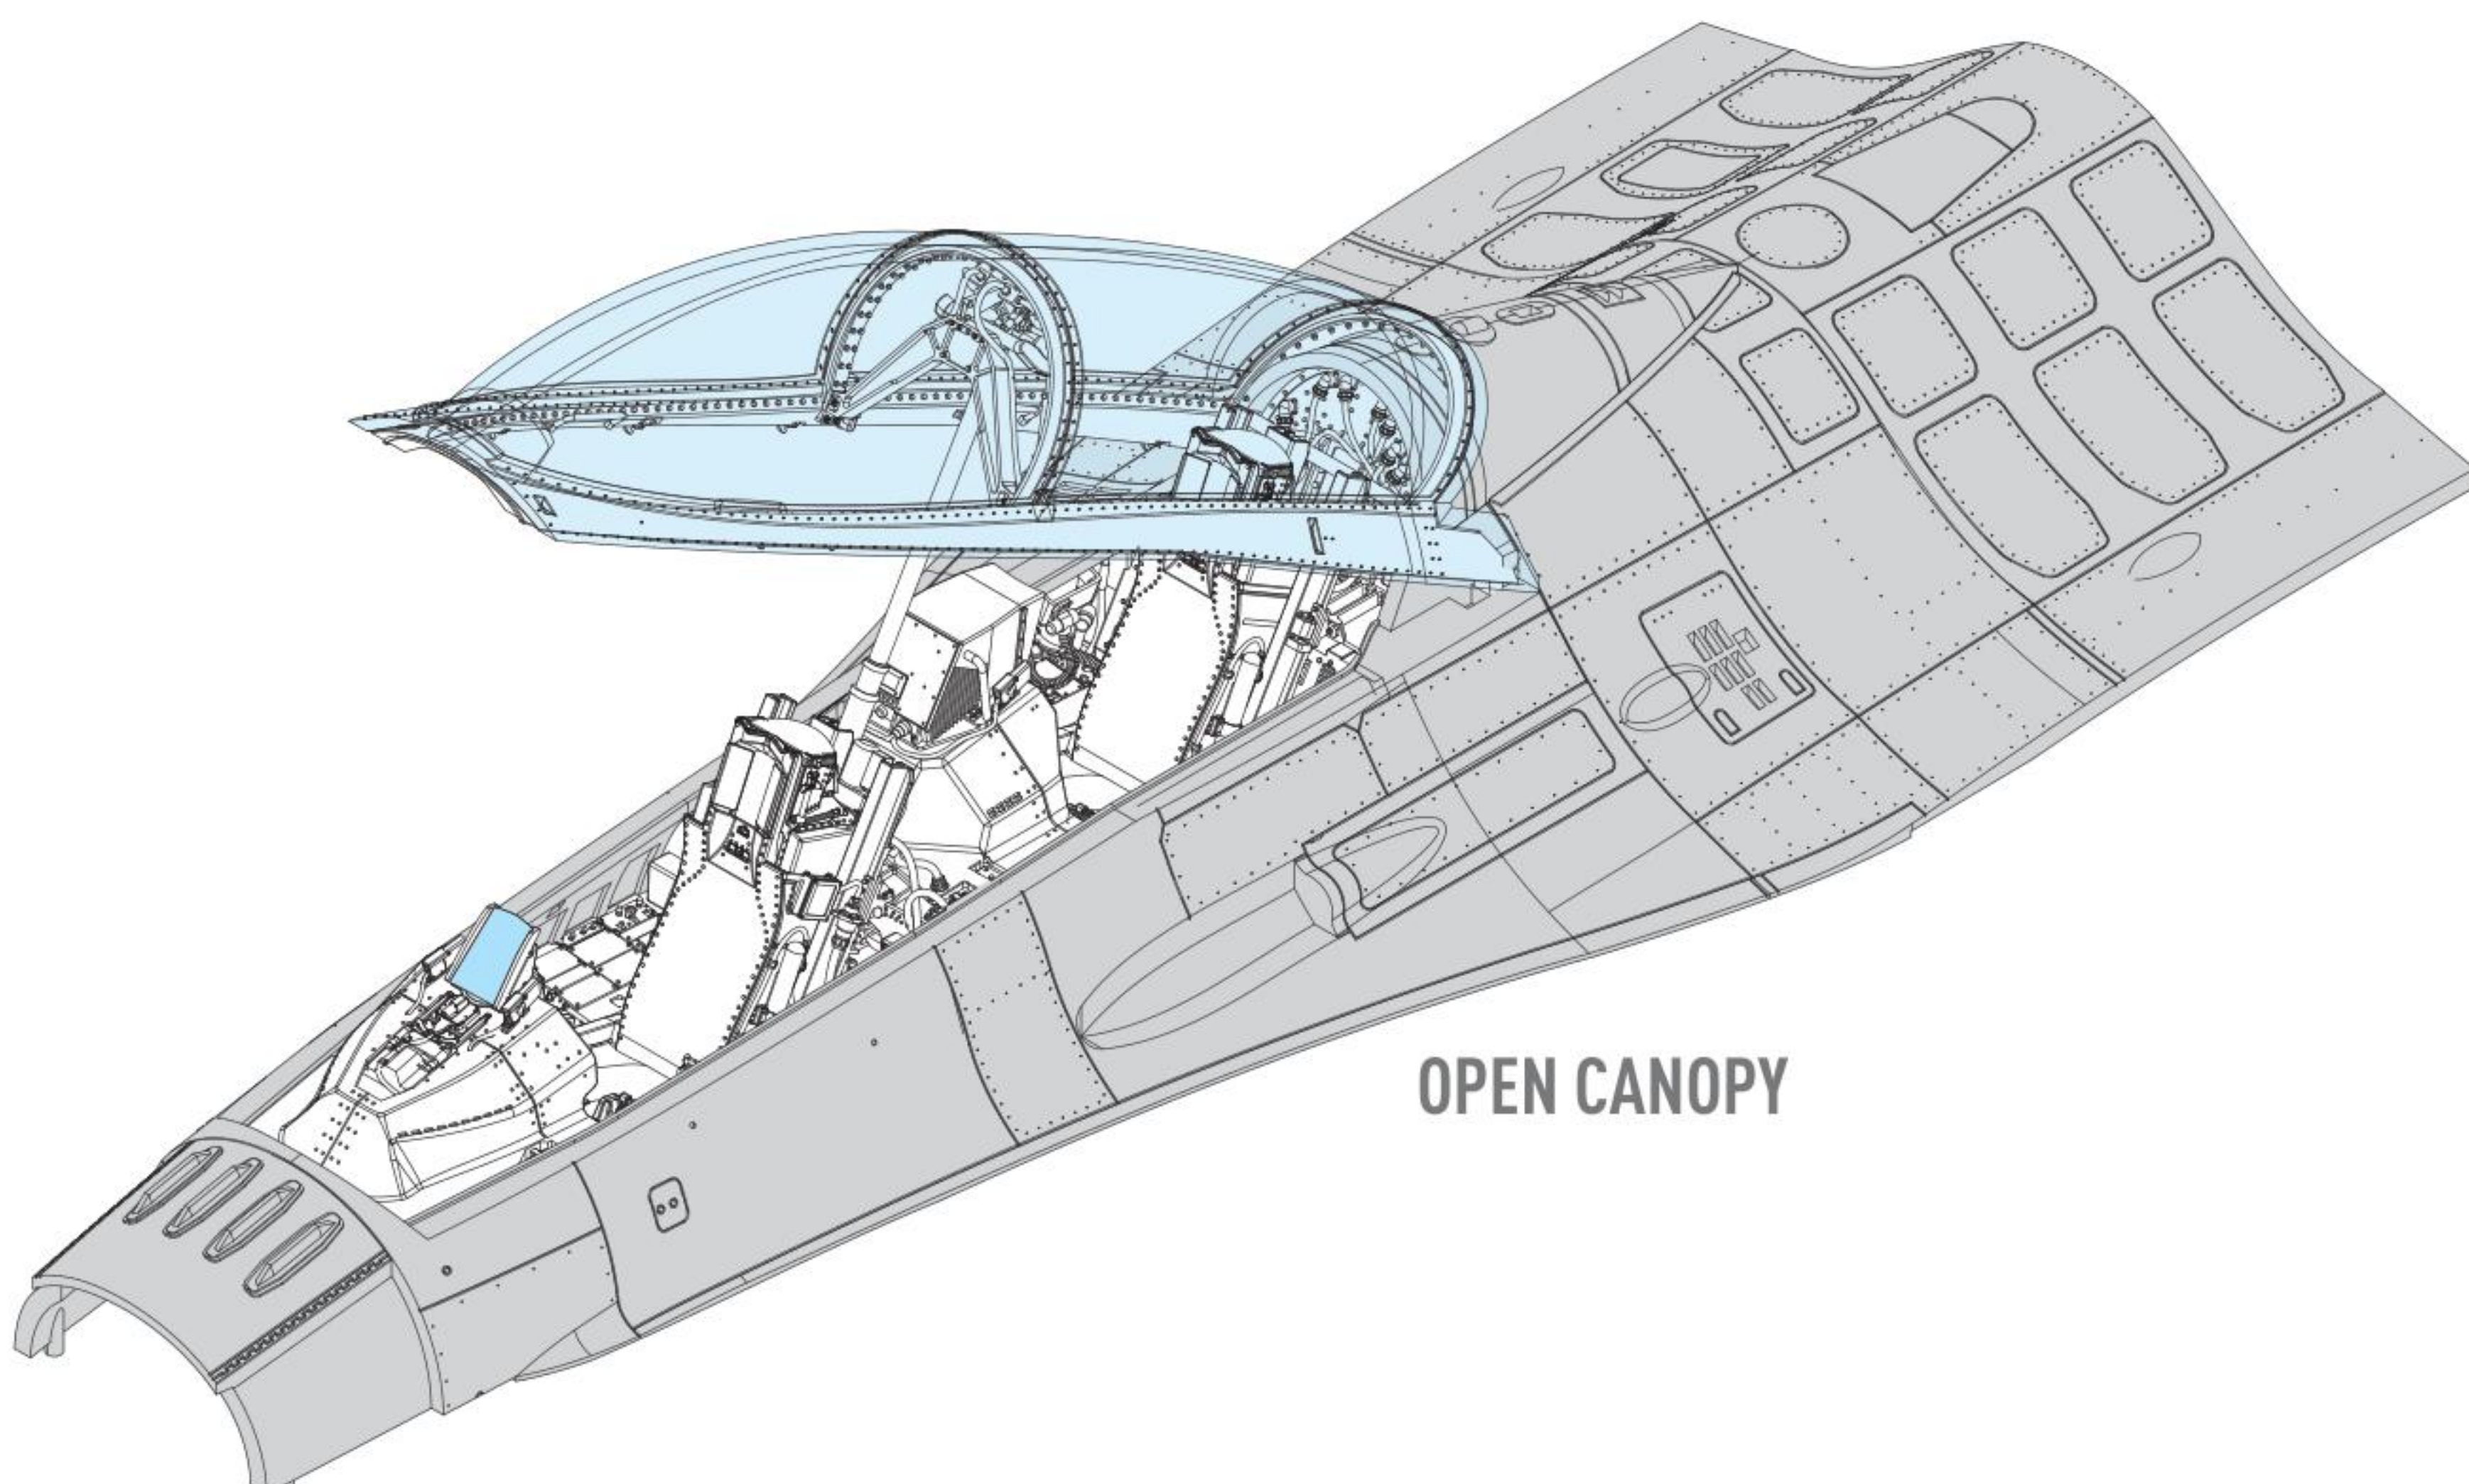

OPEN CANOPY

DECAL INSTRUCTION
FRD & AFT SEAT

