





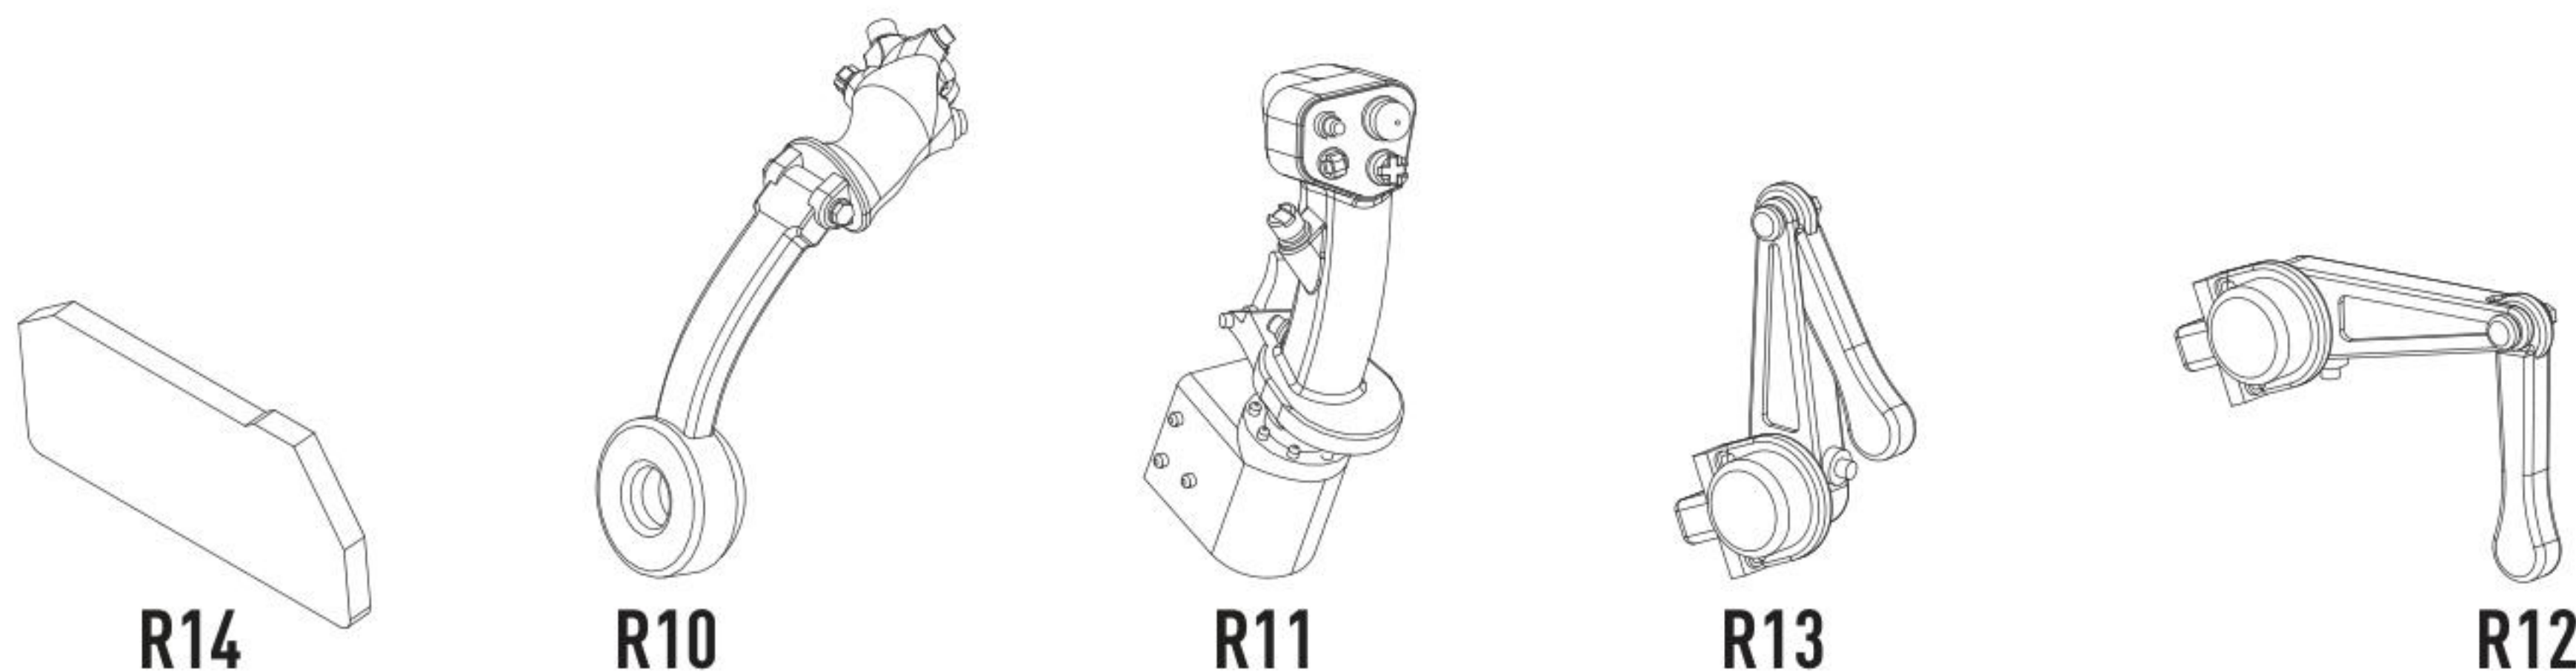


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

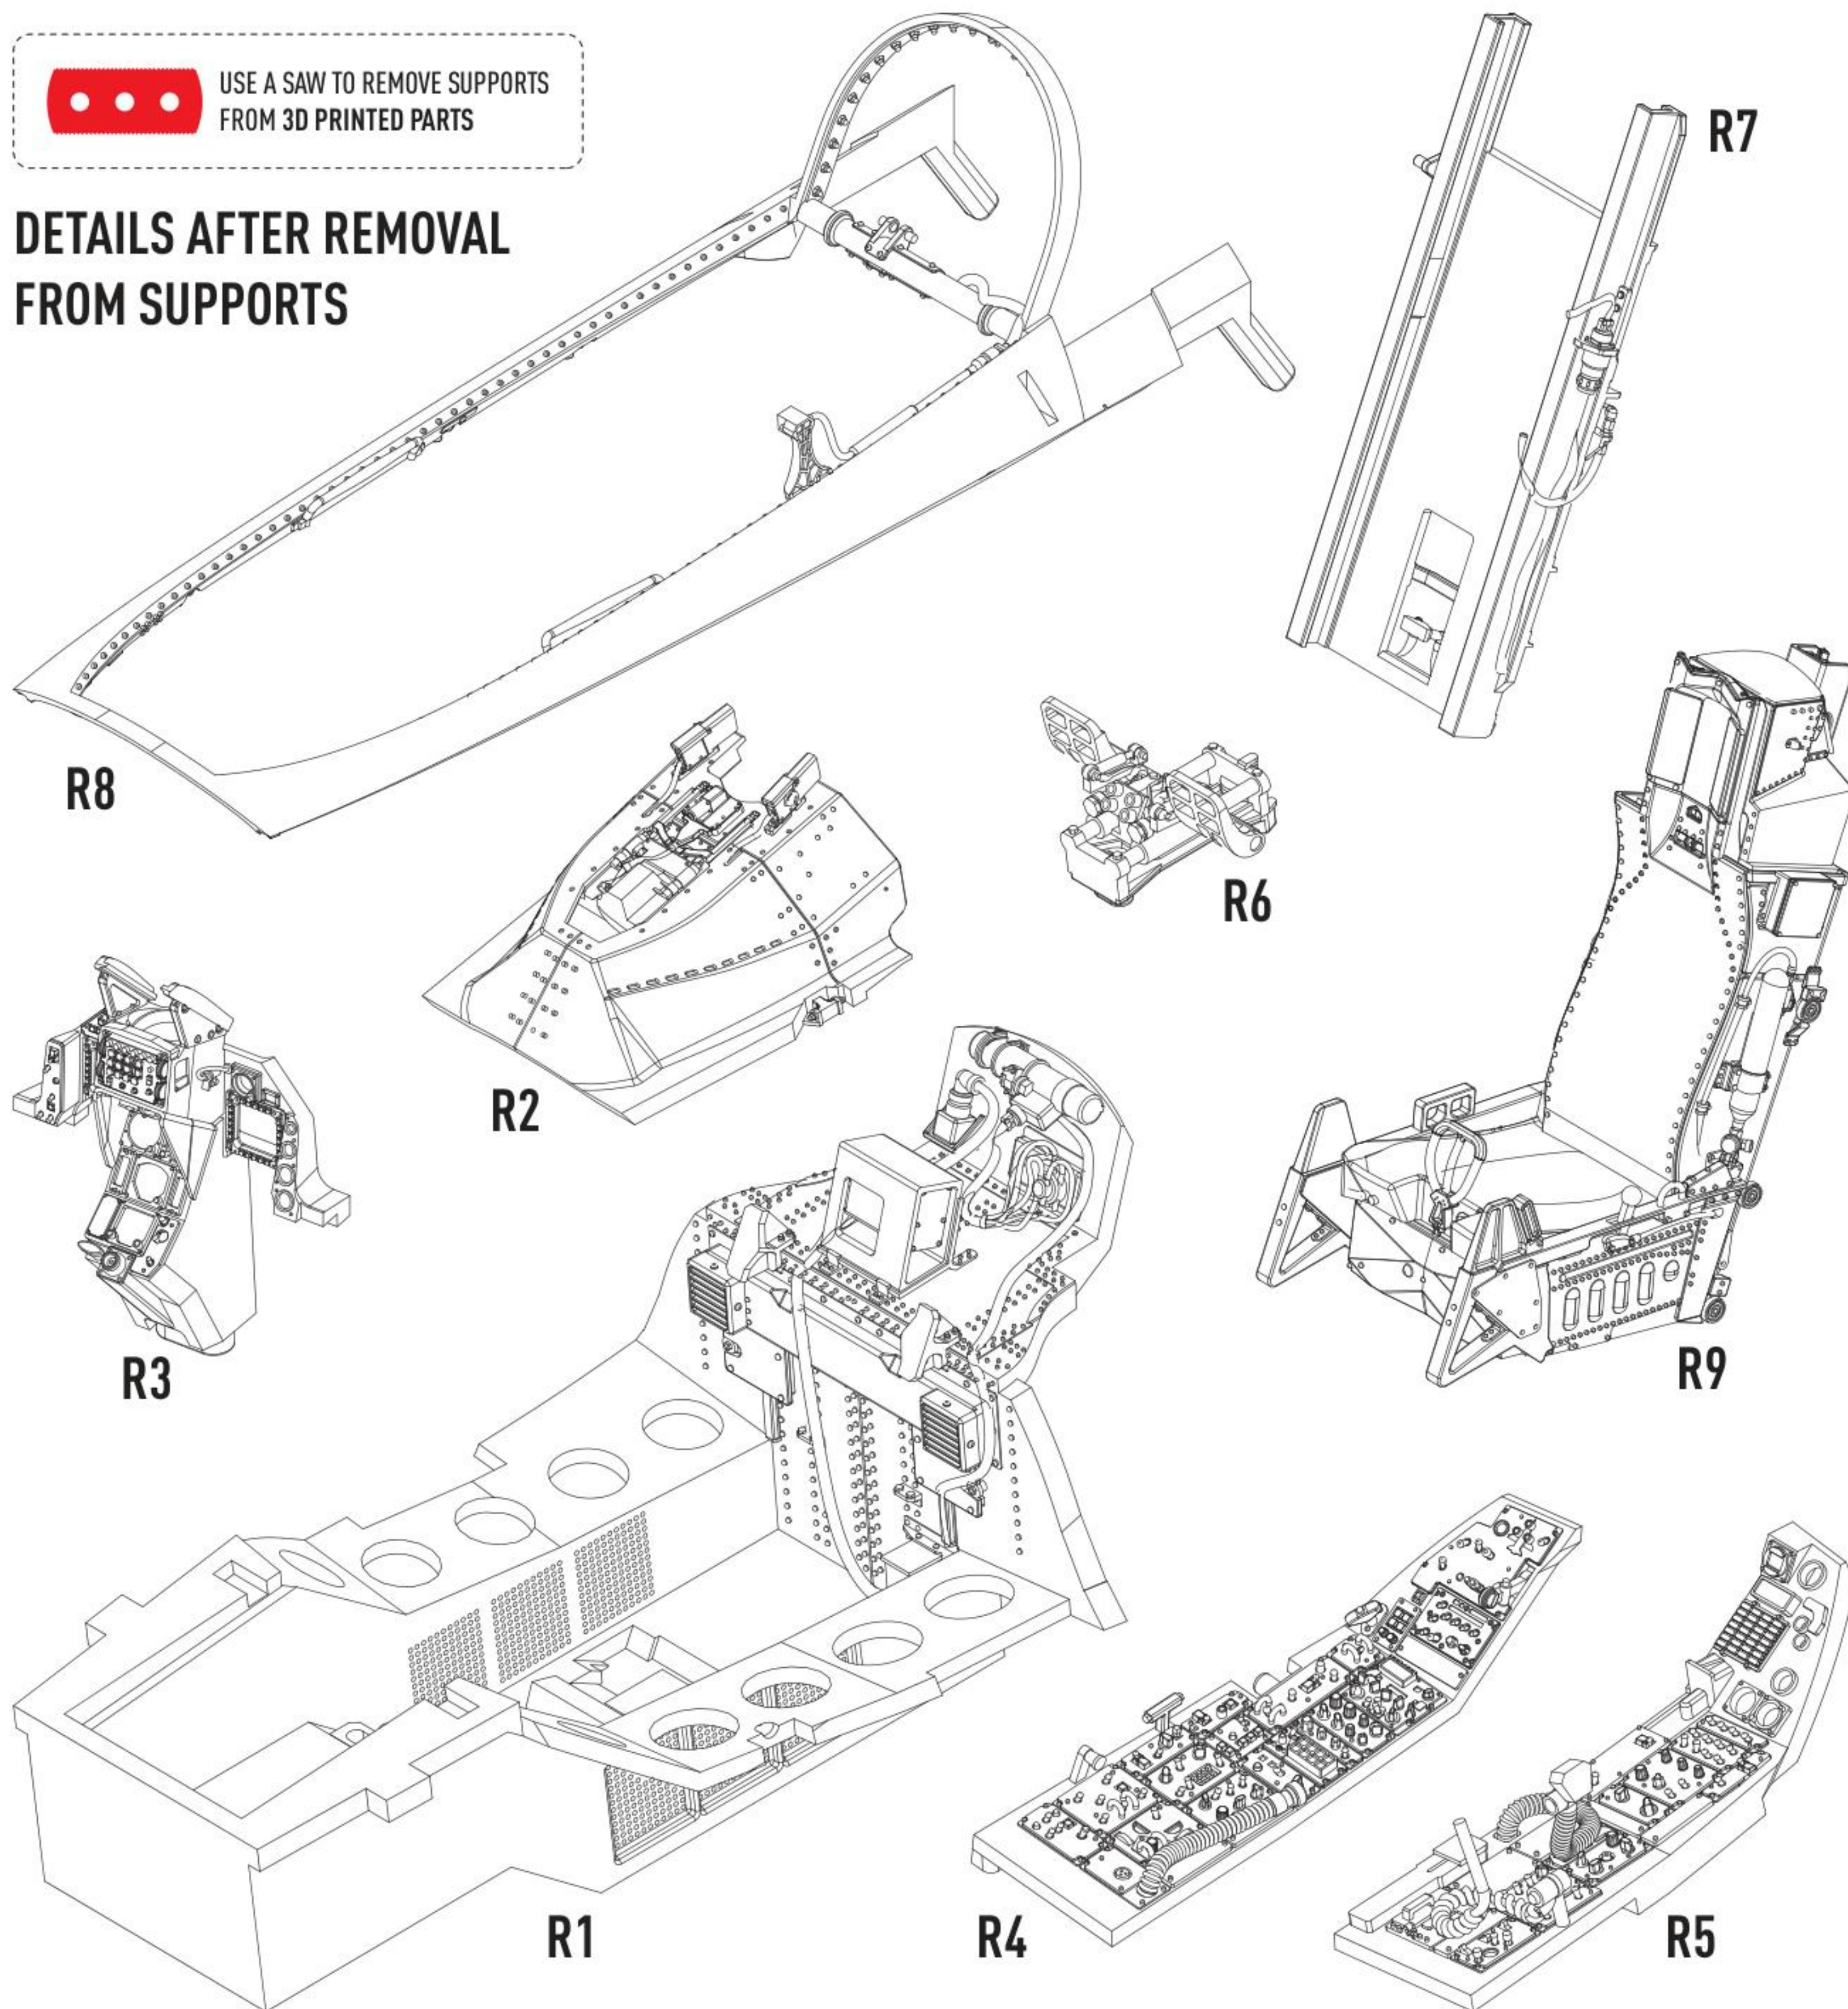


BEFORE INSTALLATION APPLY
GLOSS VARNISH TO G1 PART

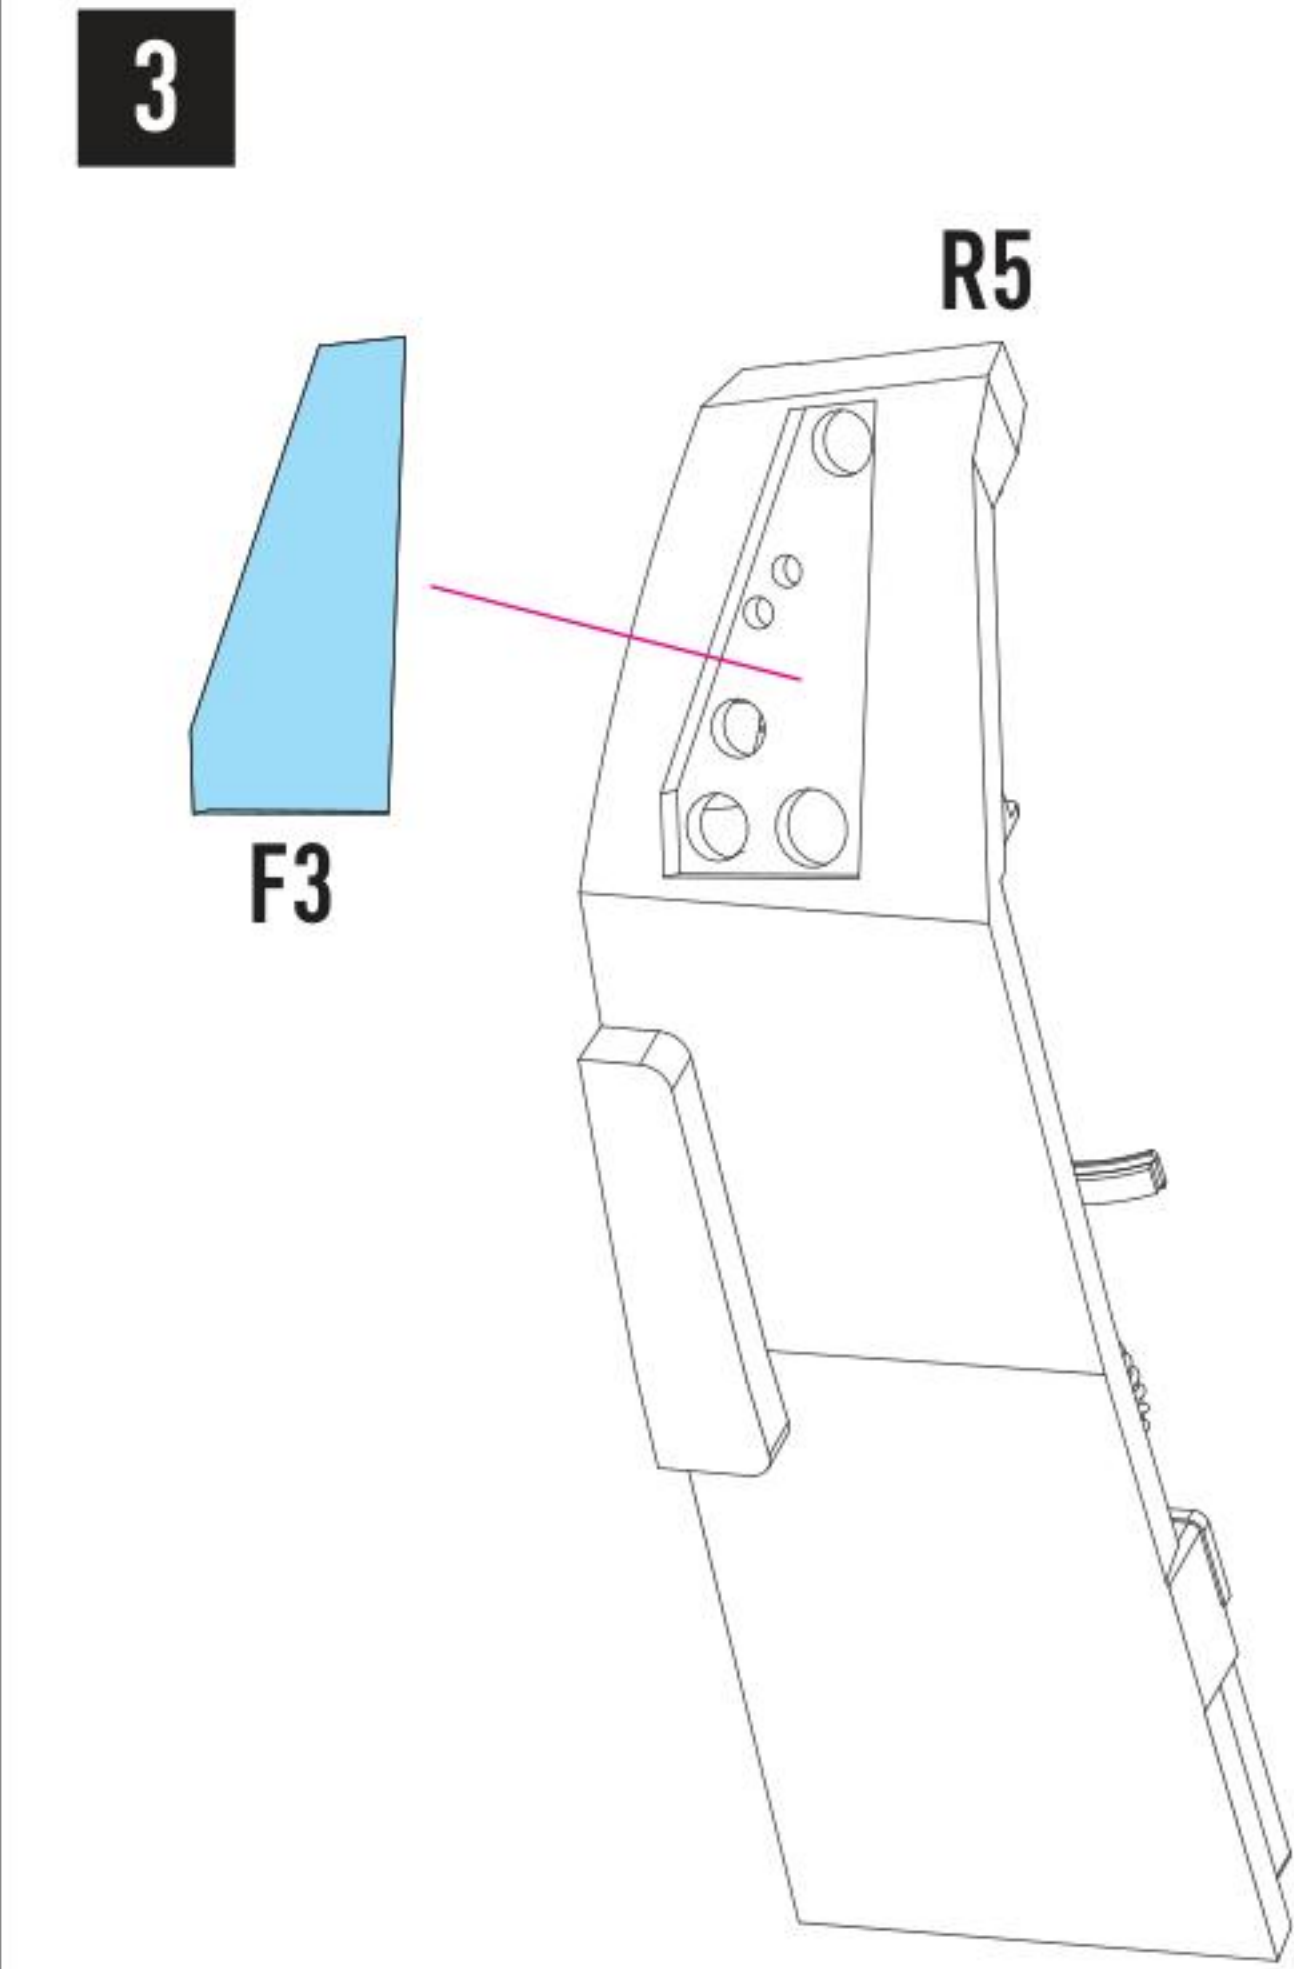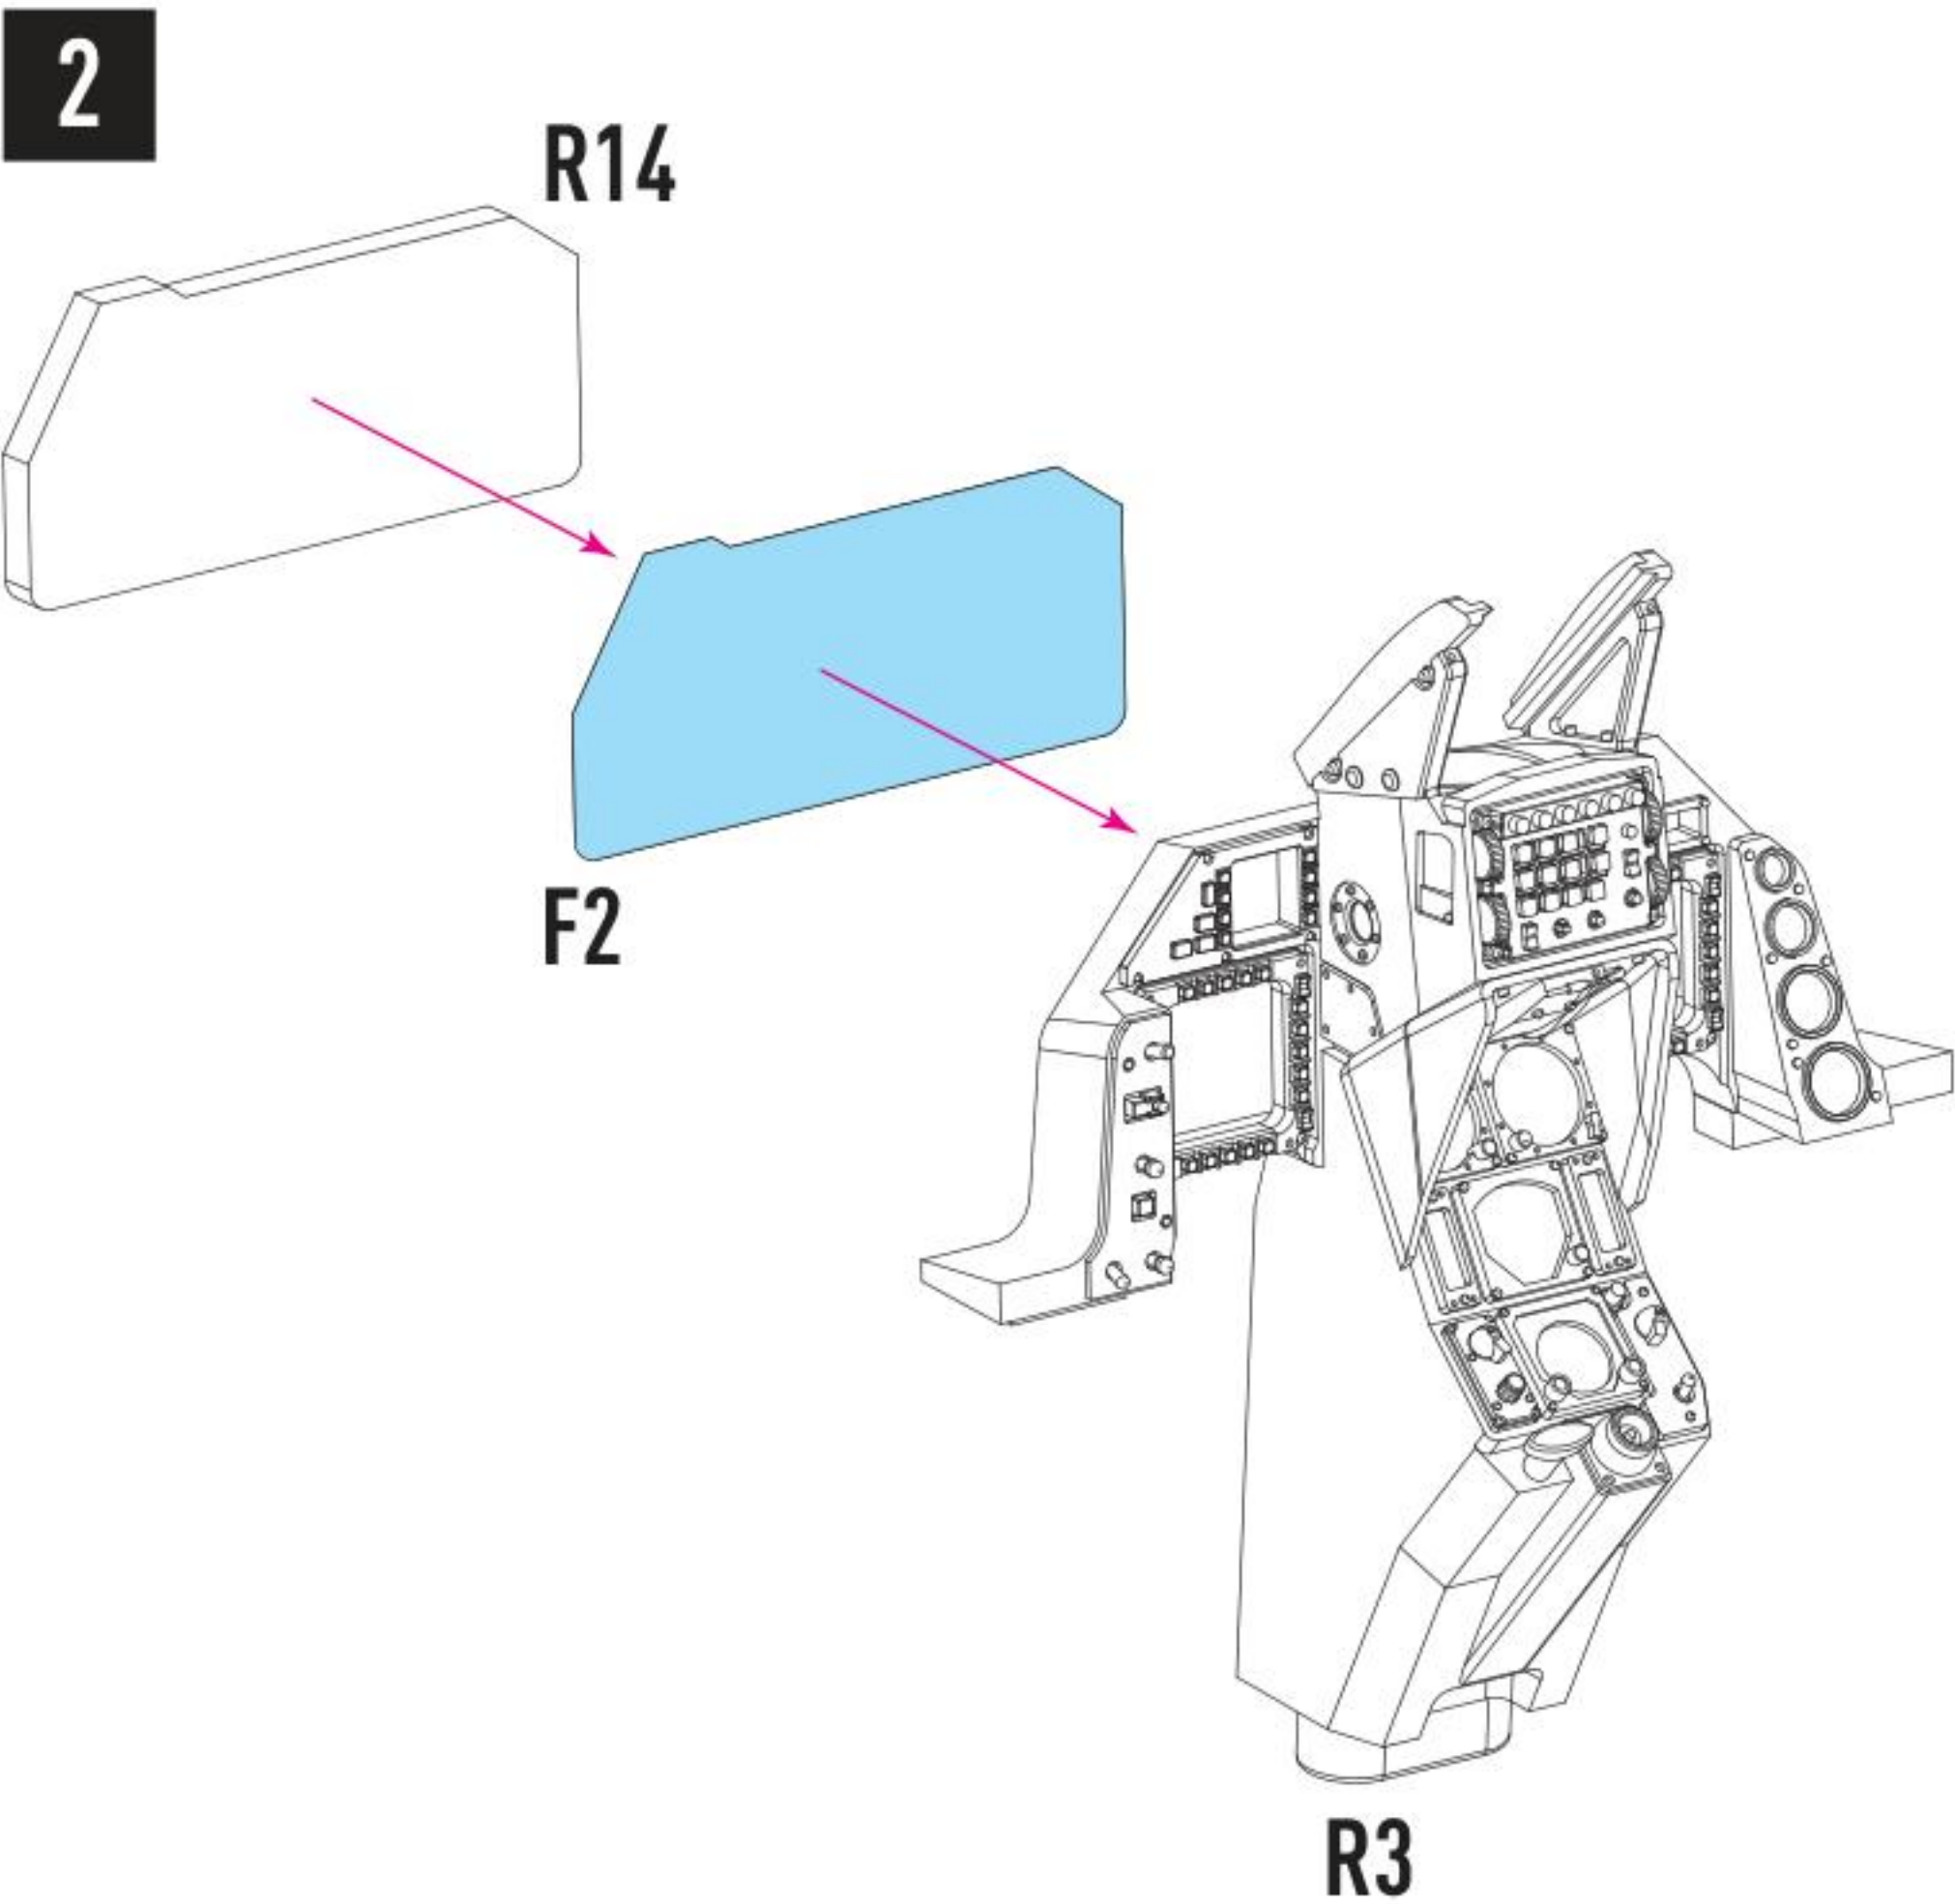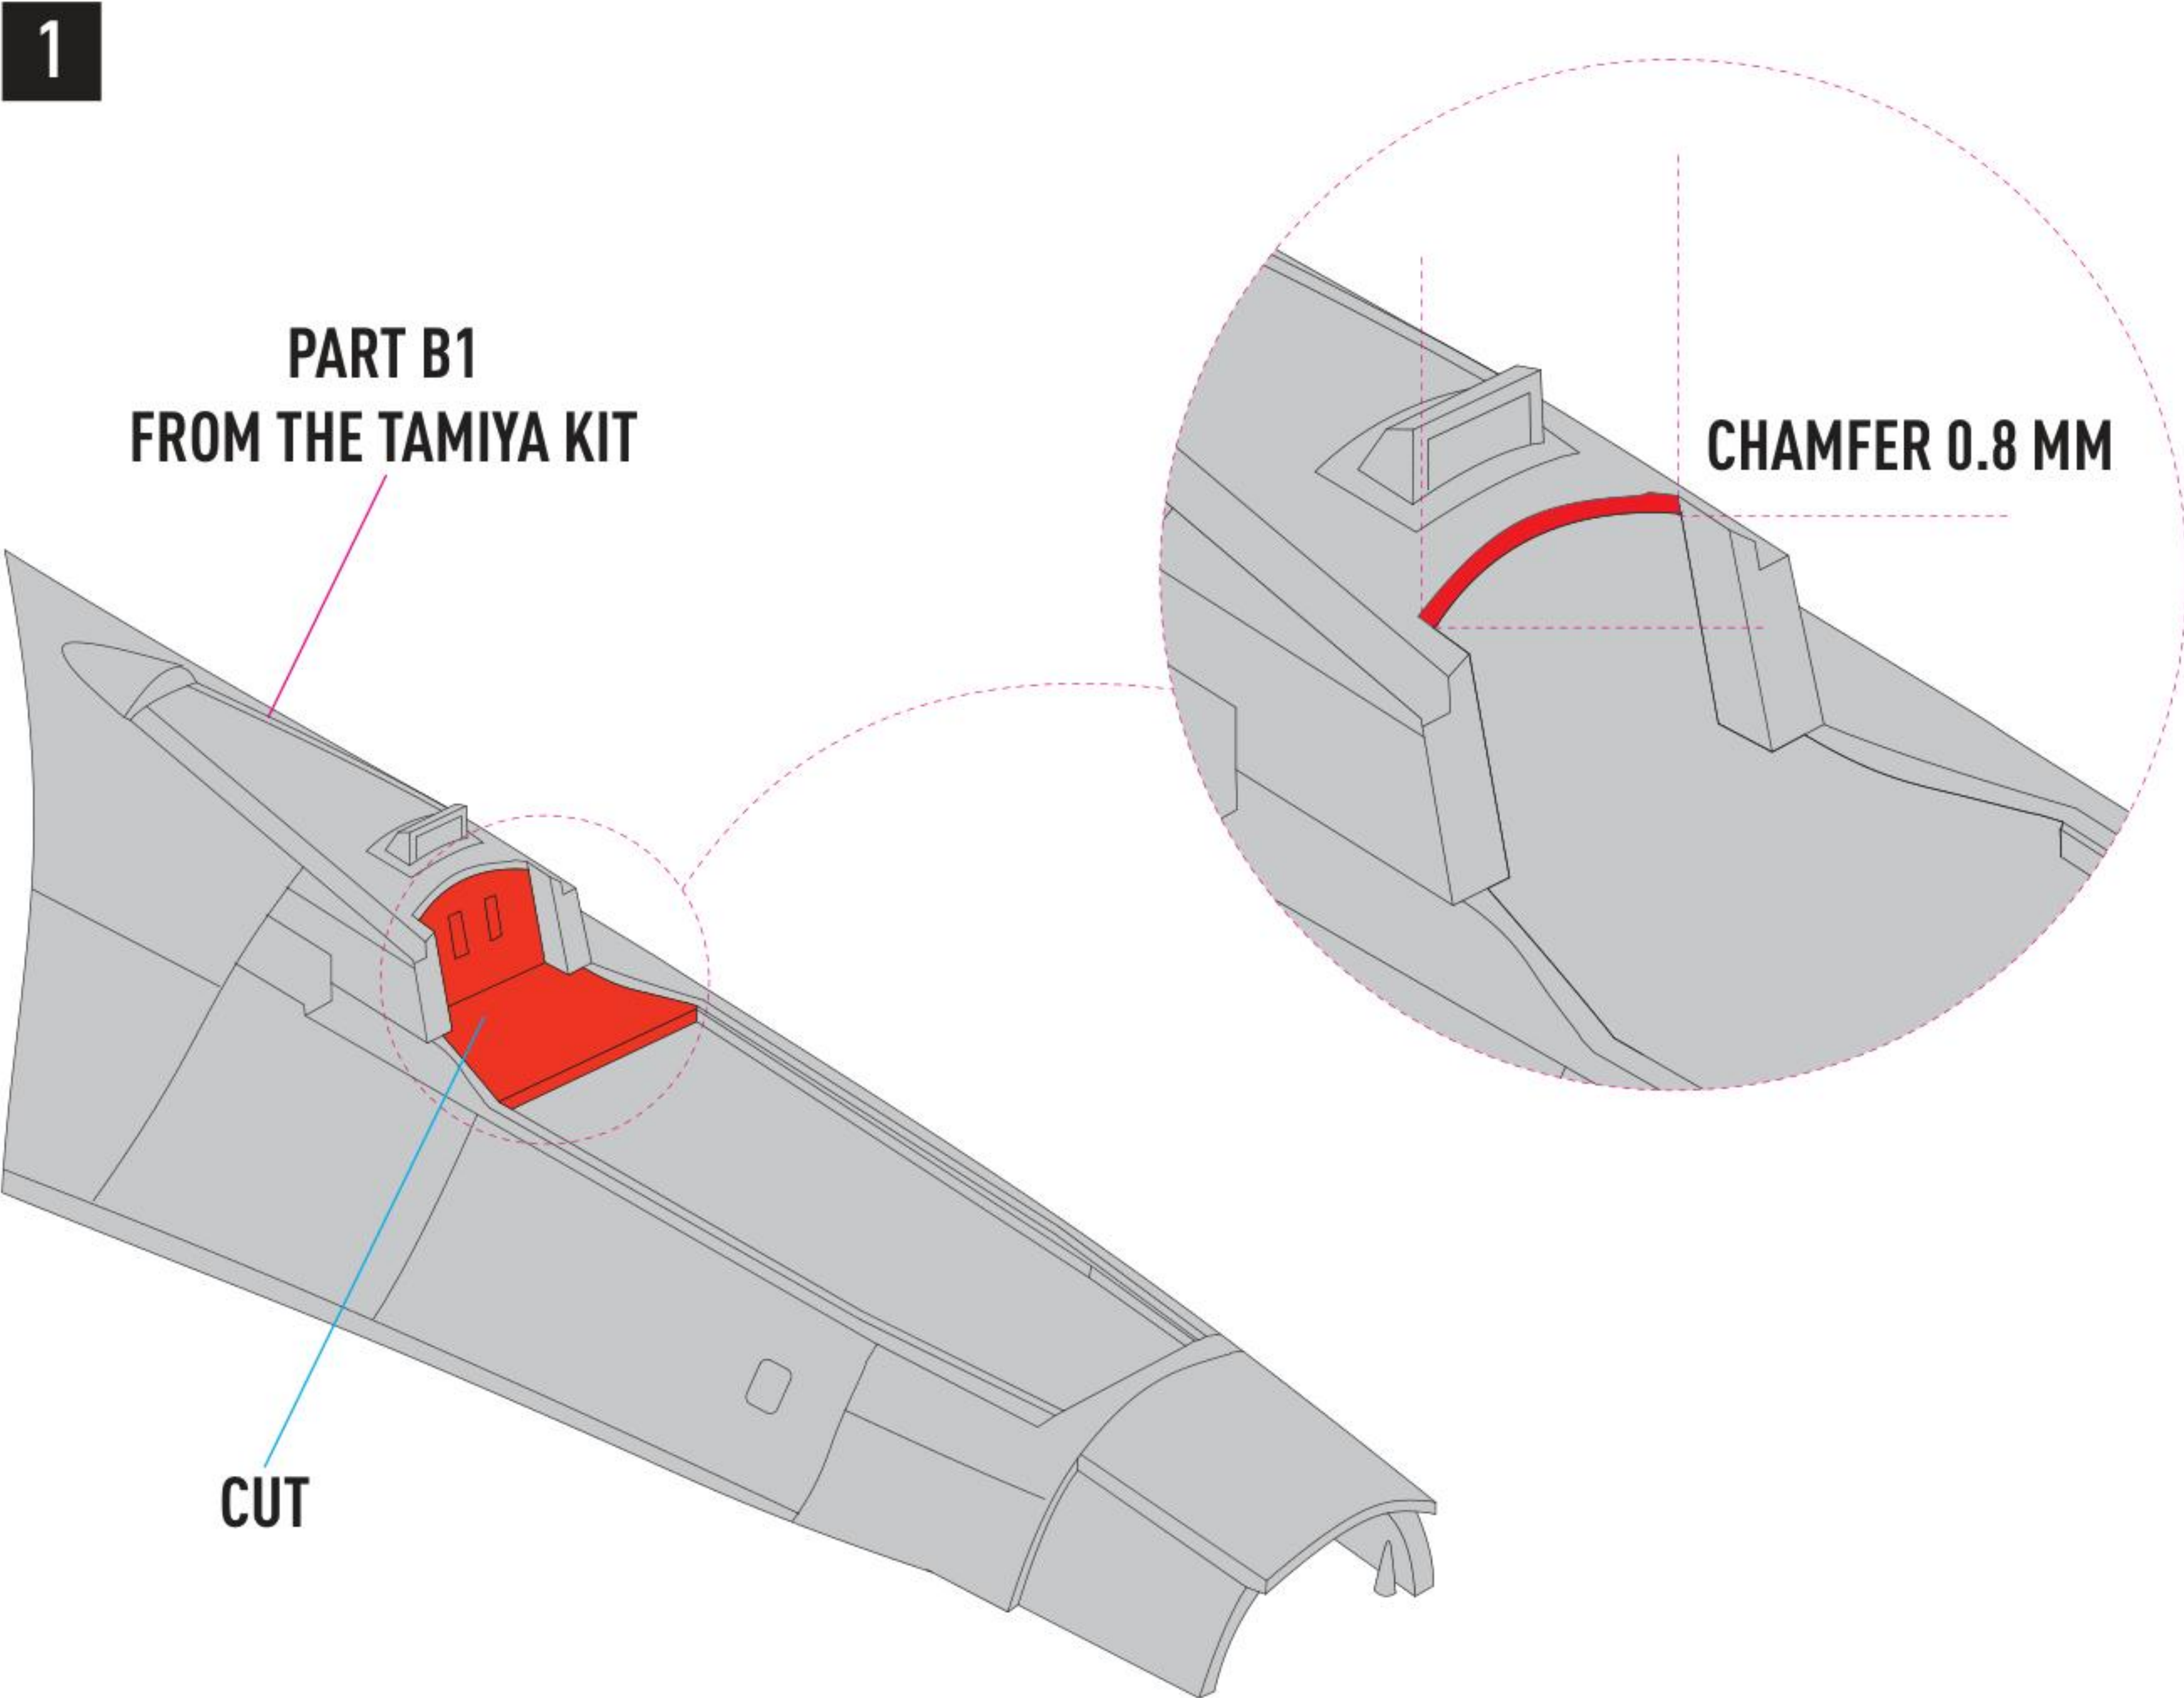


4

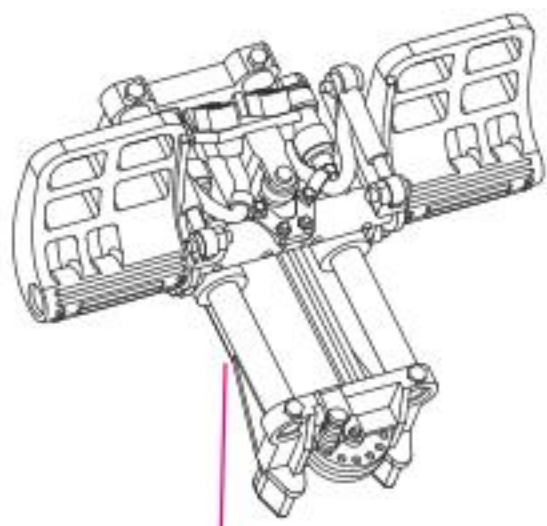


R6

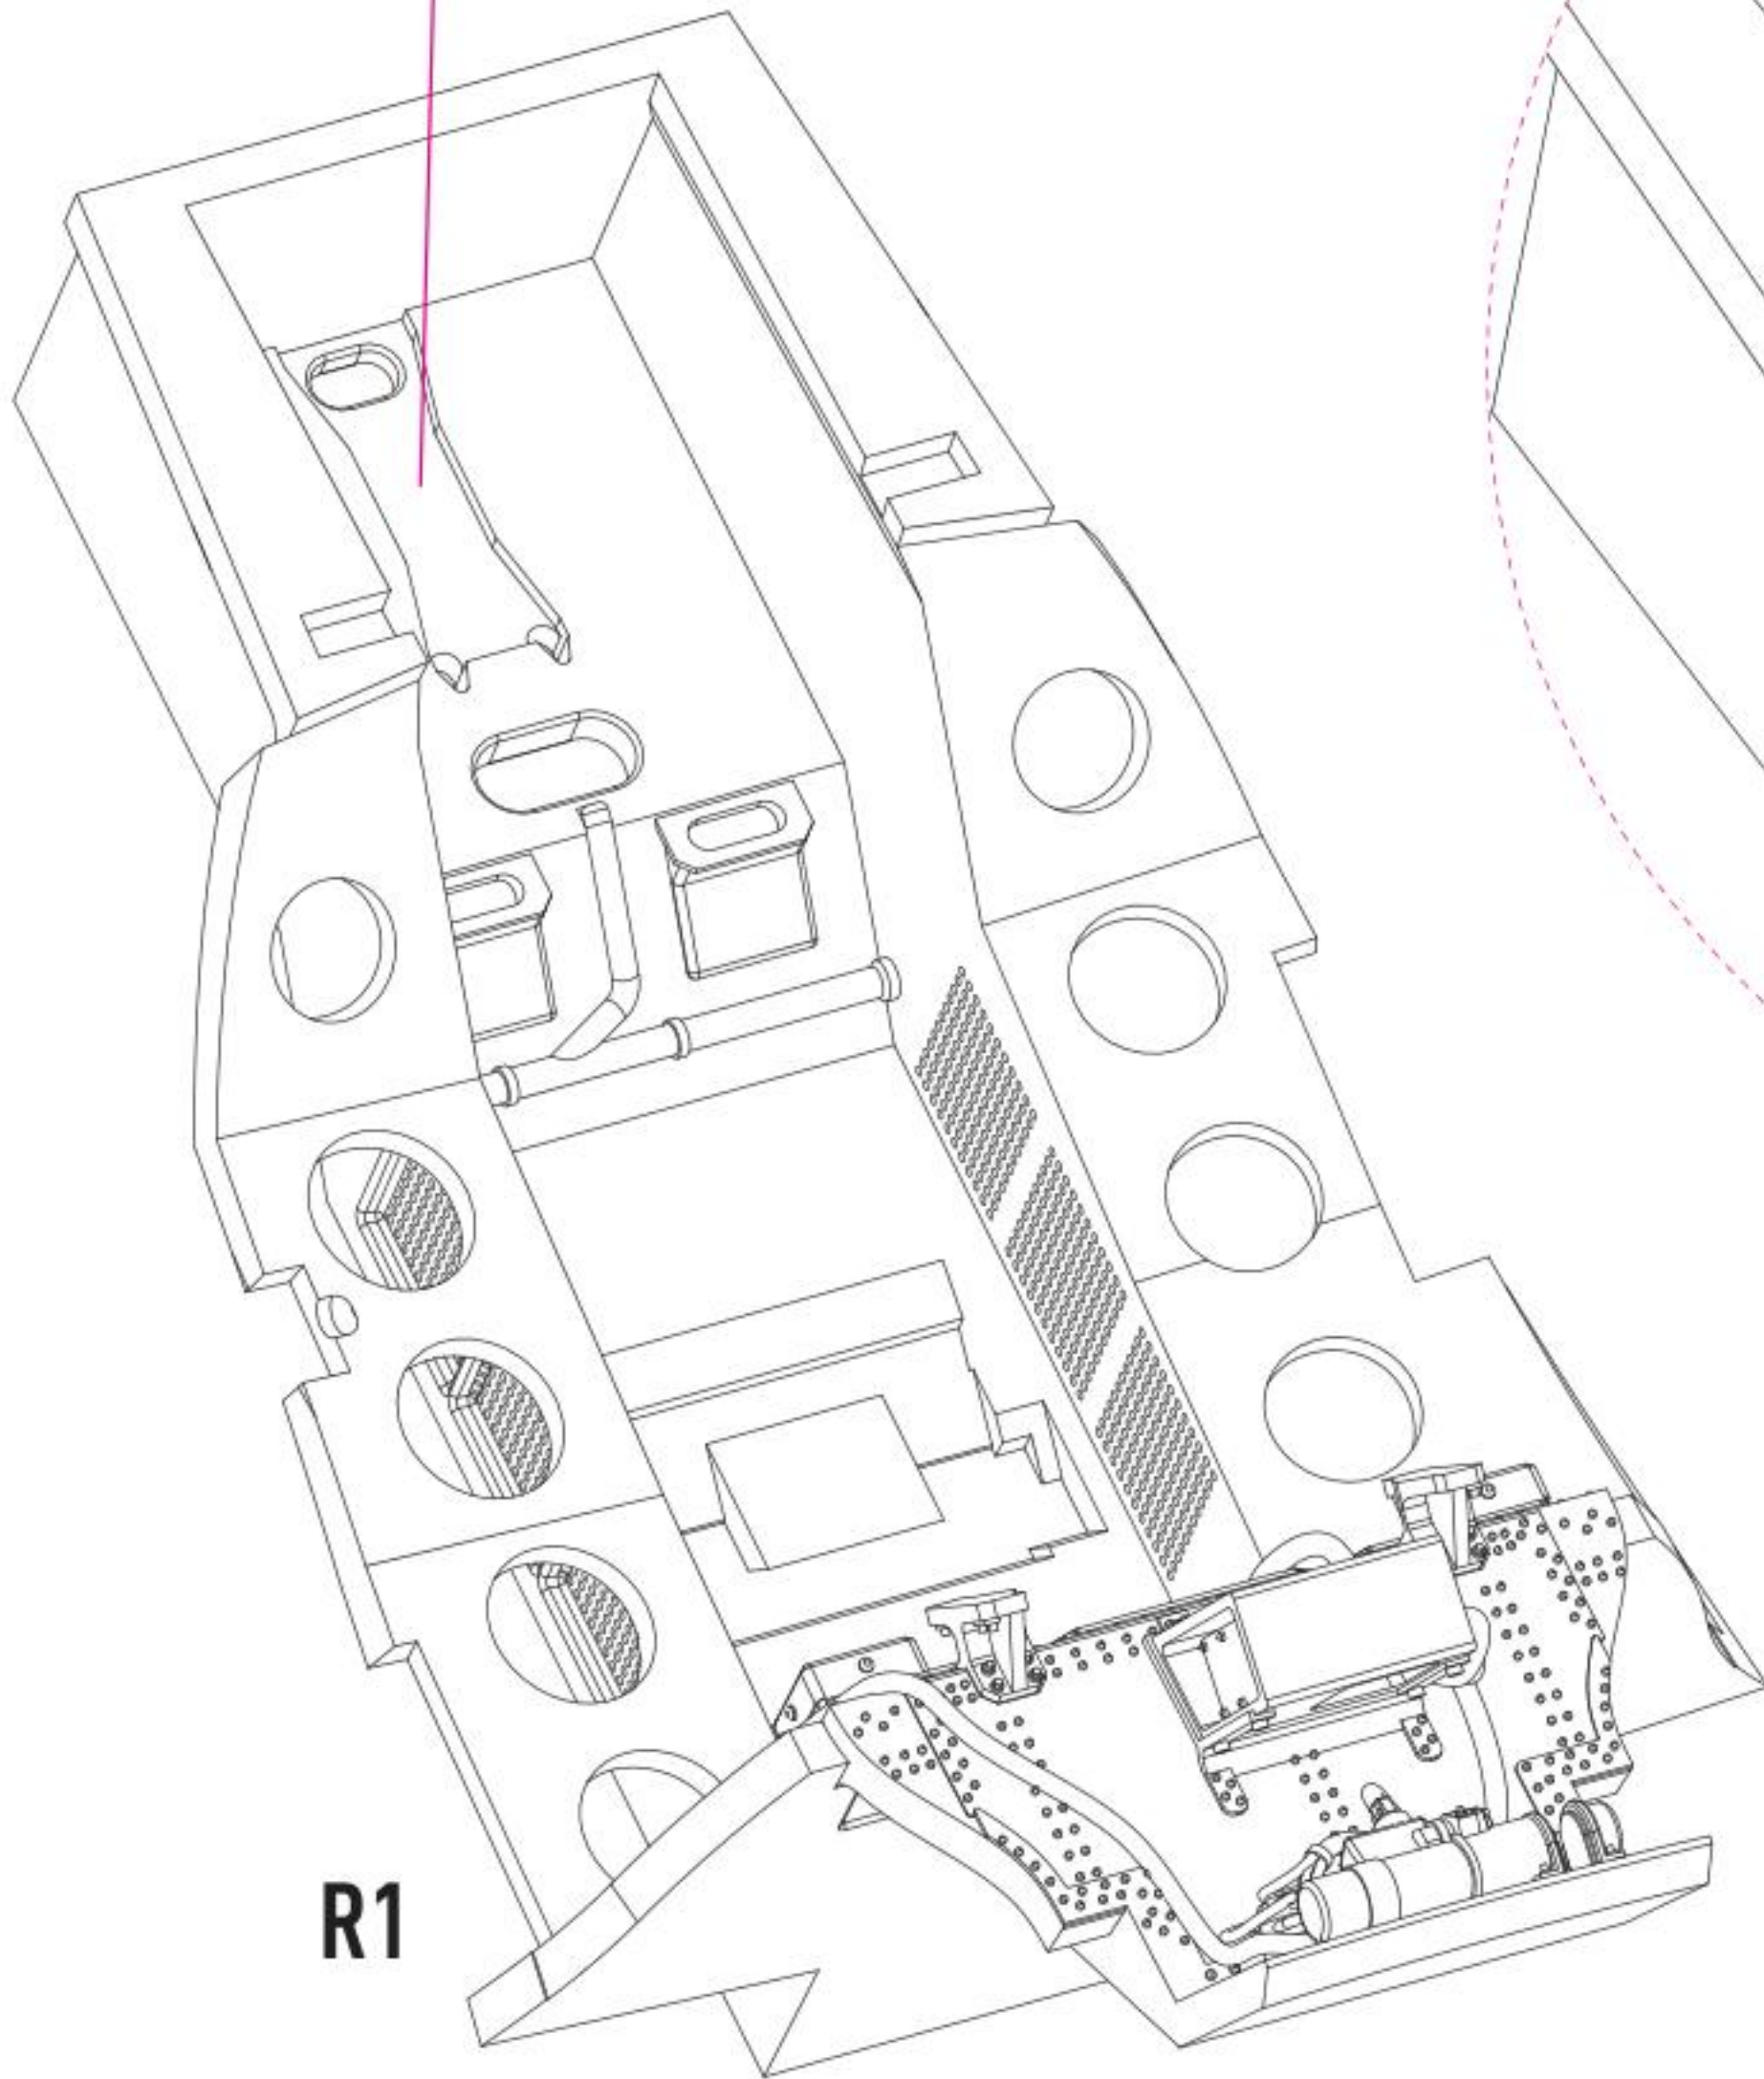


R1

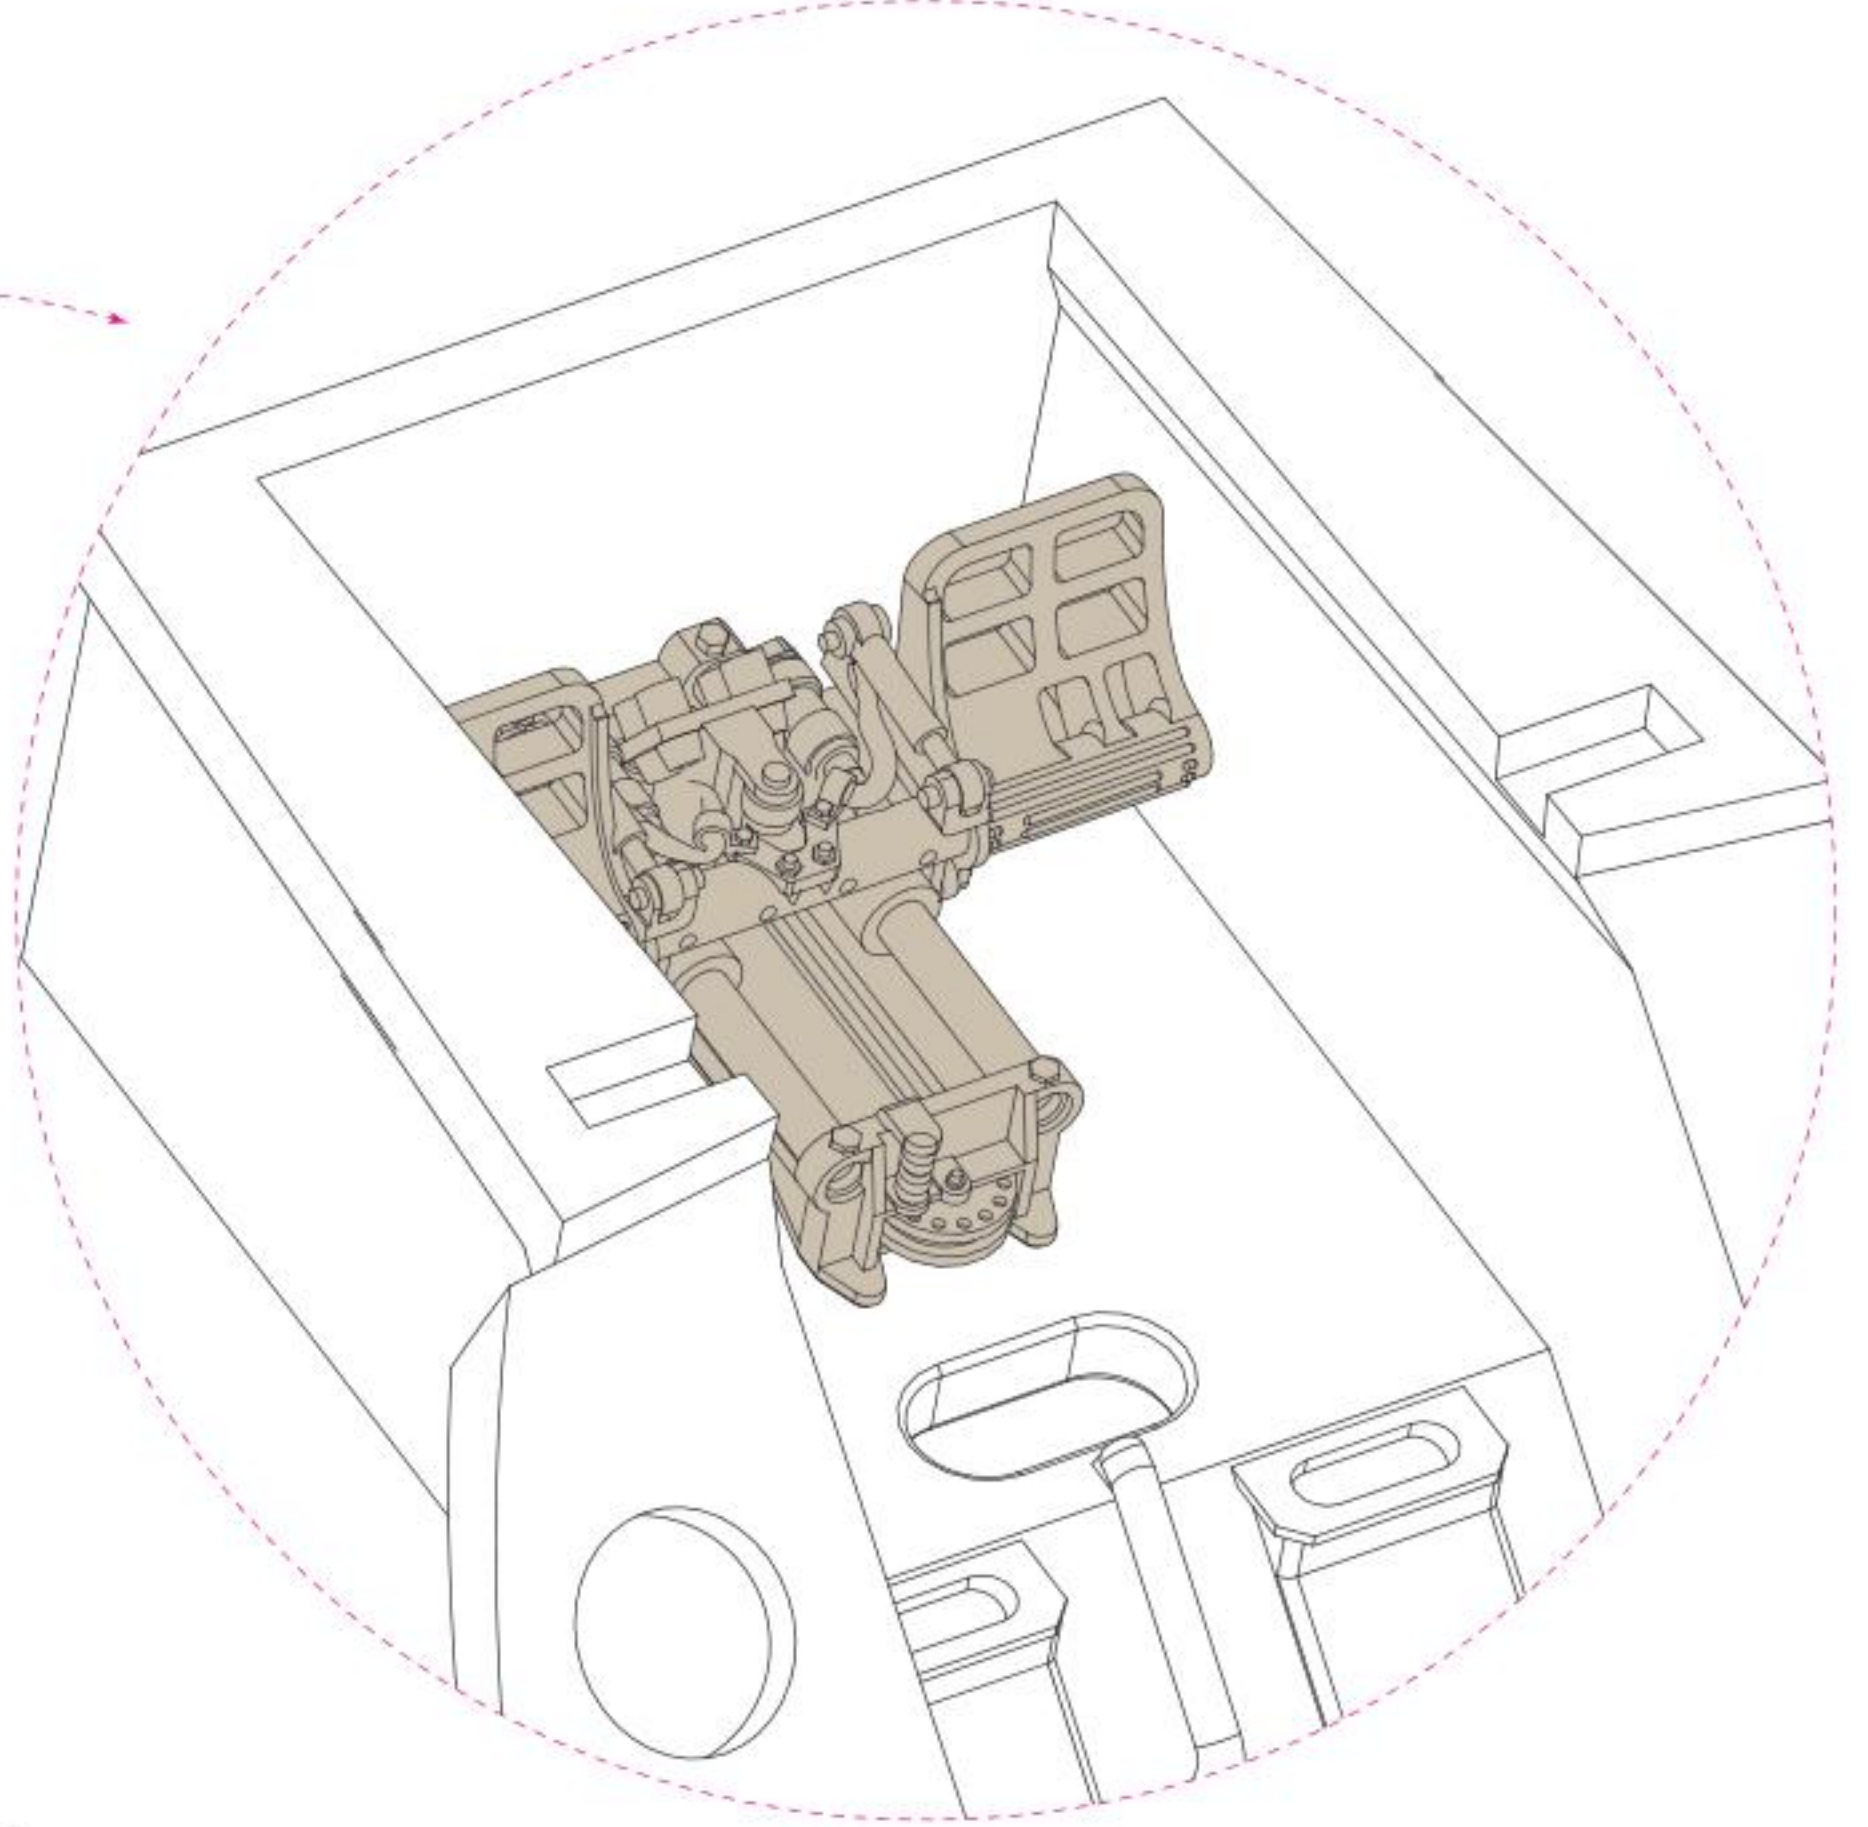


5

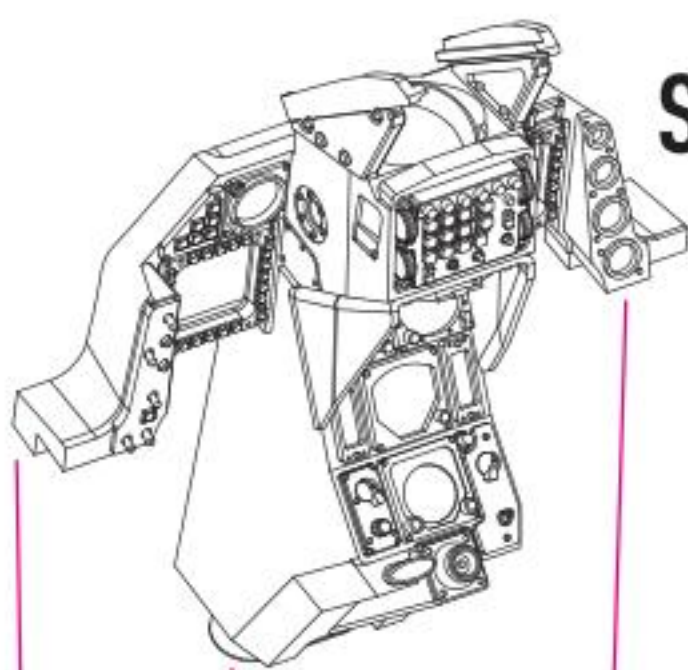


STEP 2

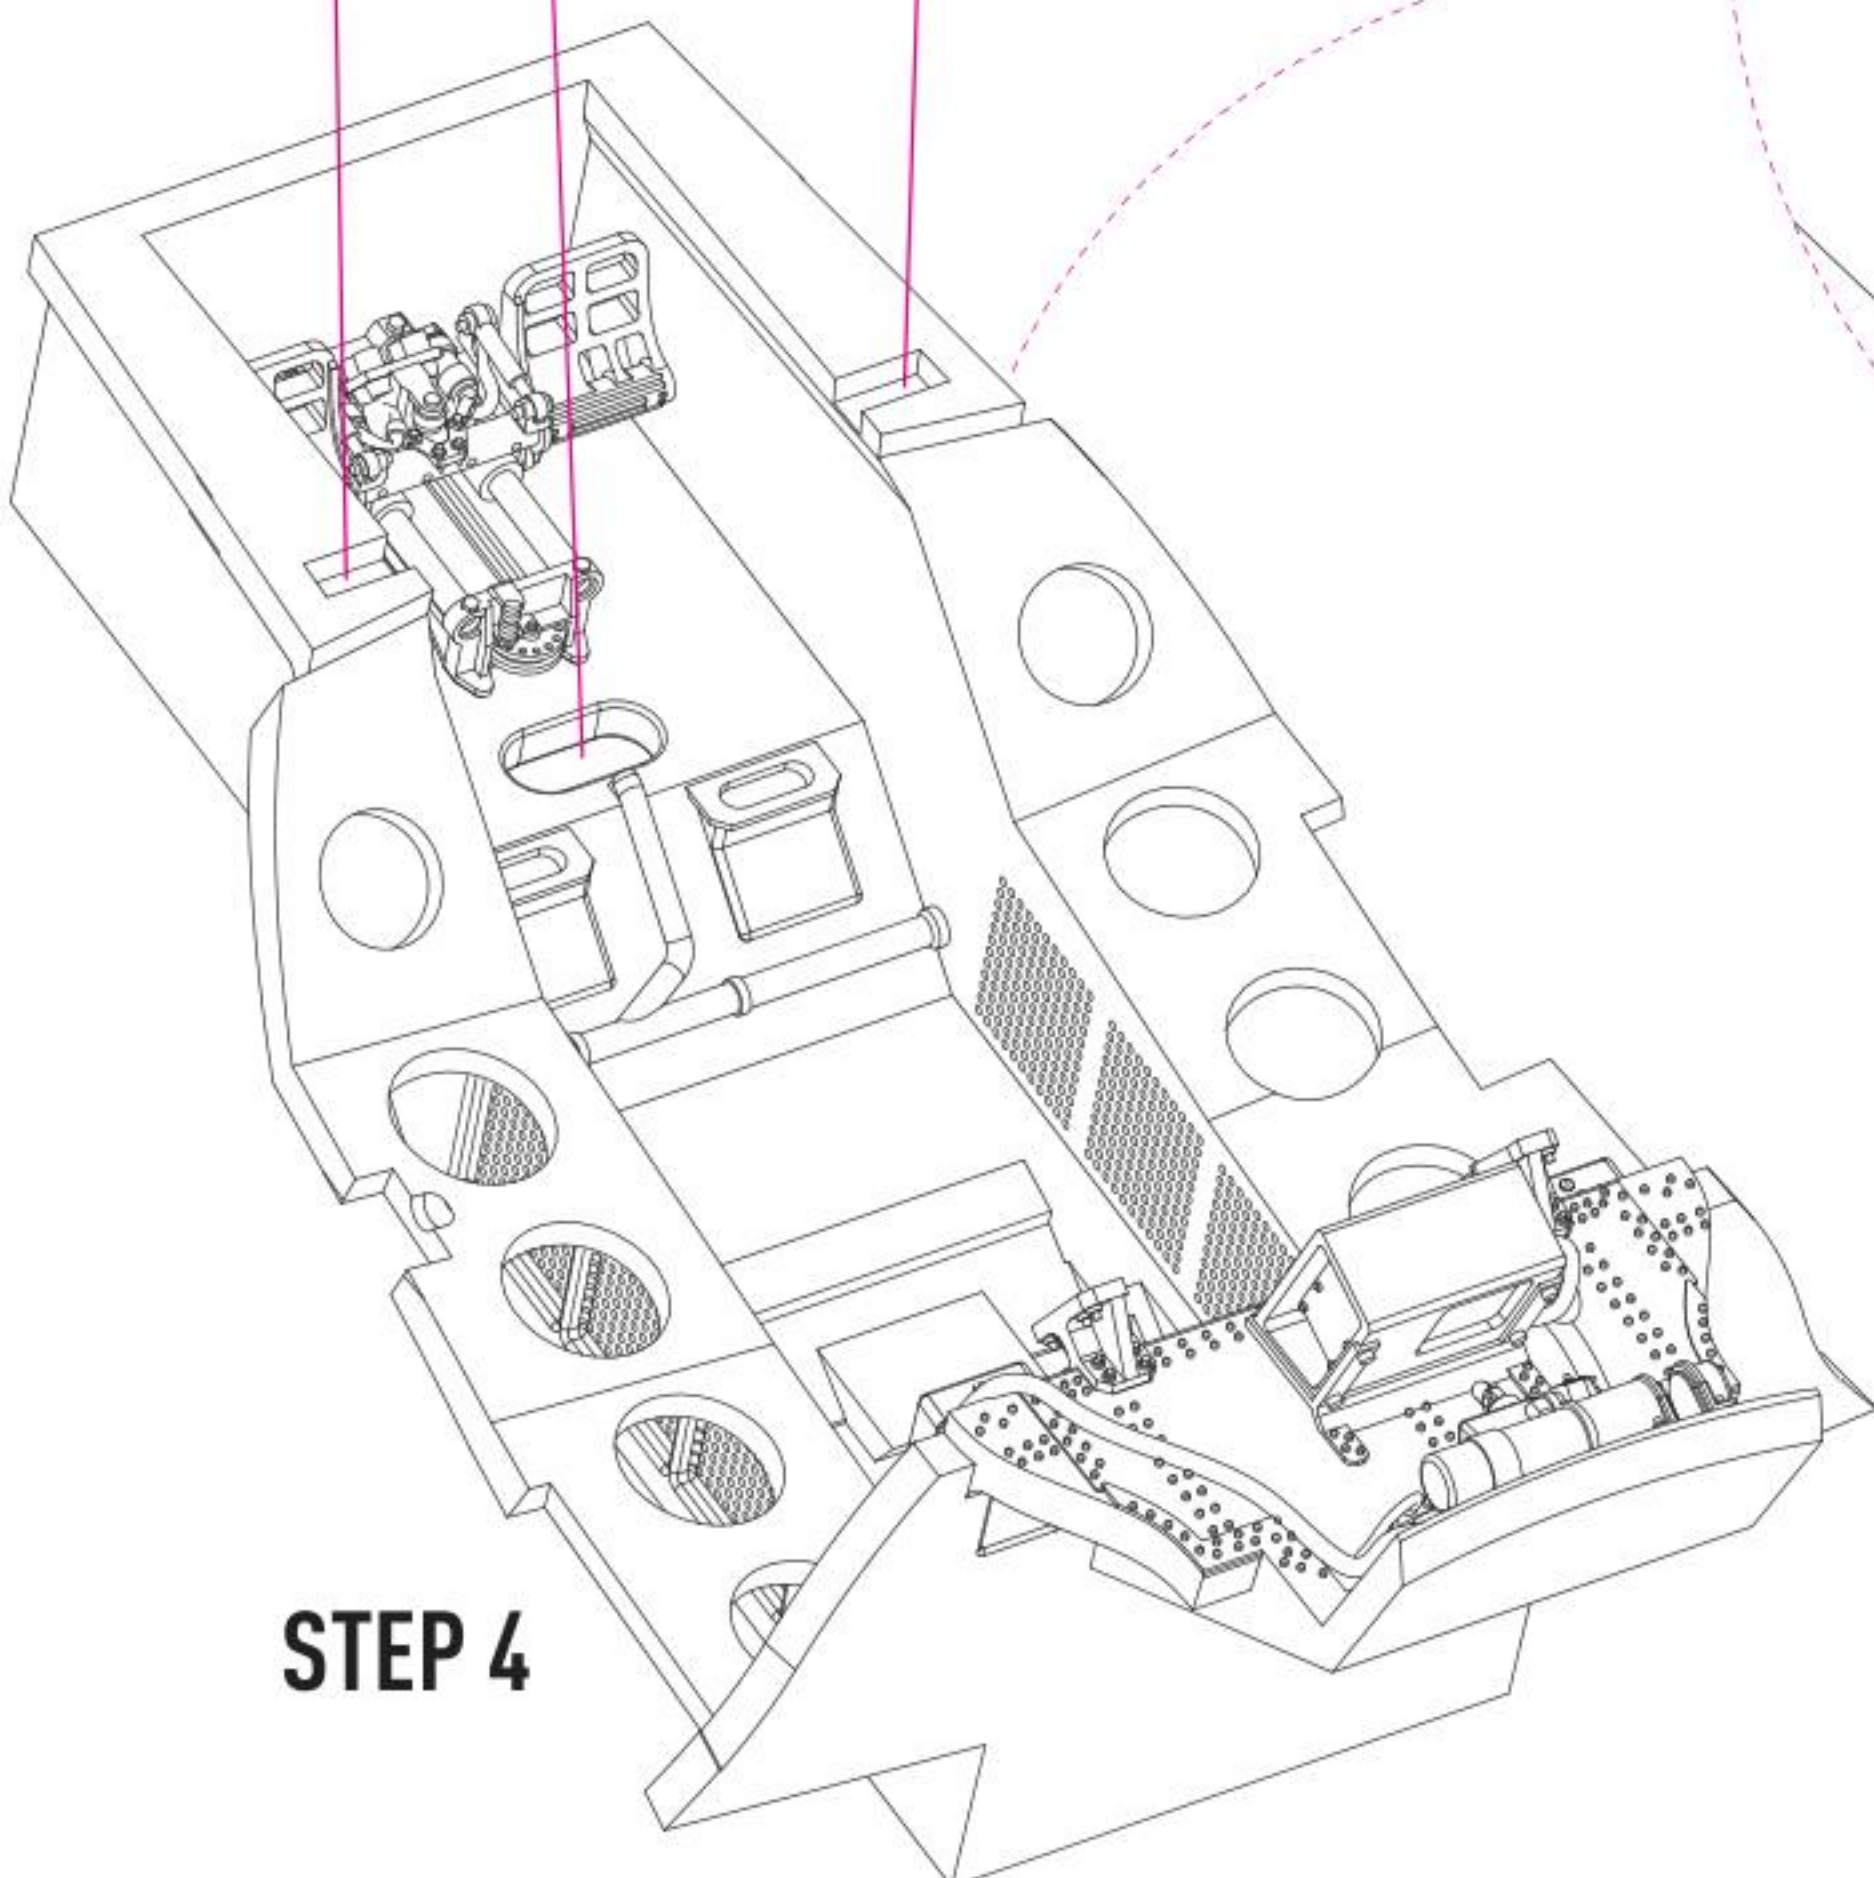


STEP 4

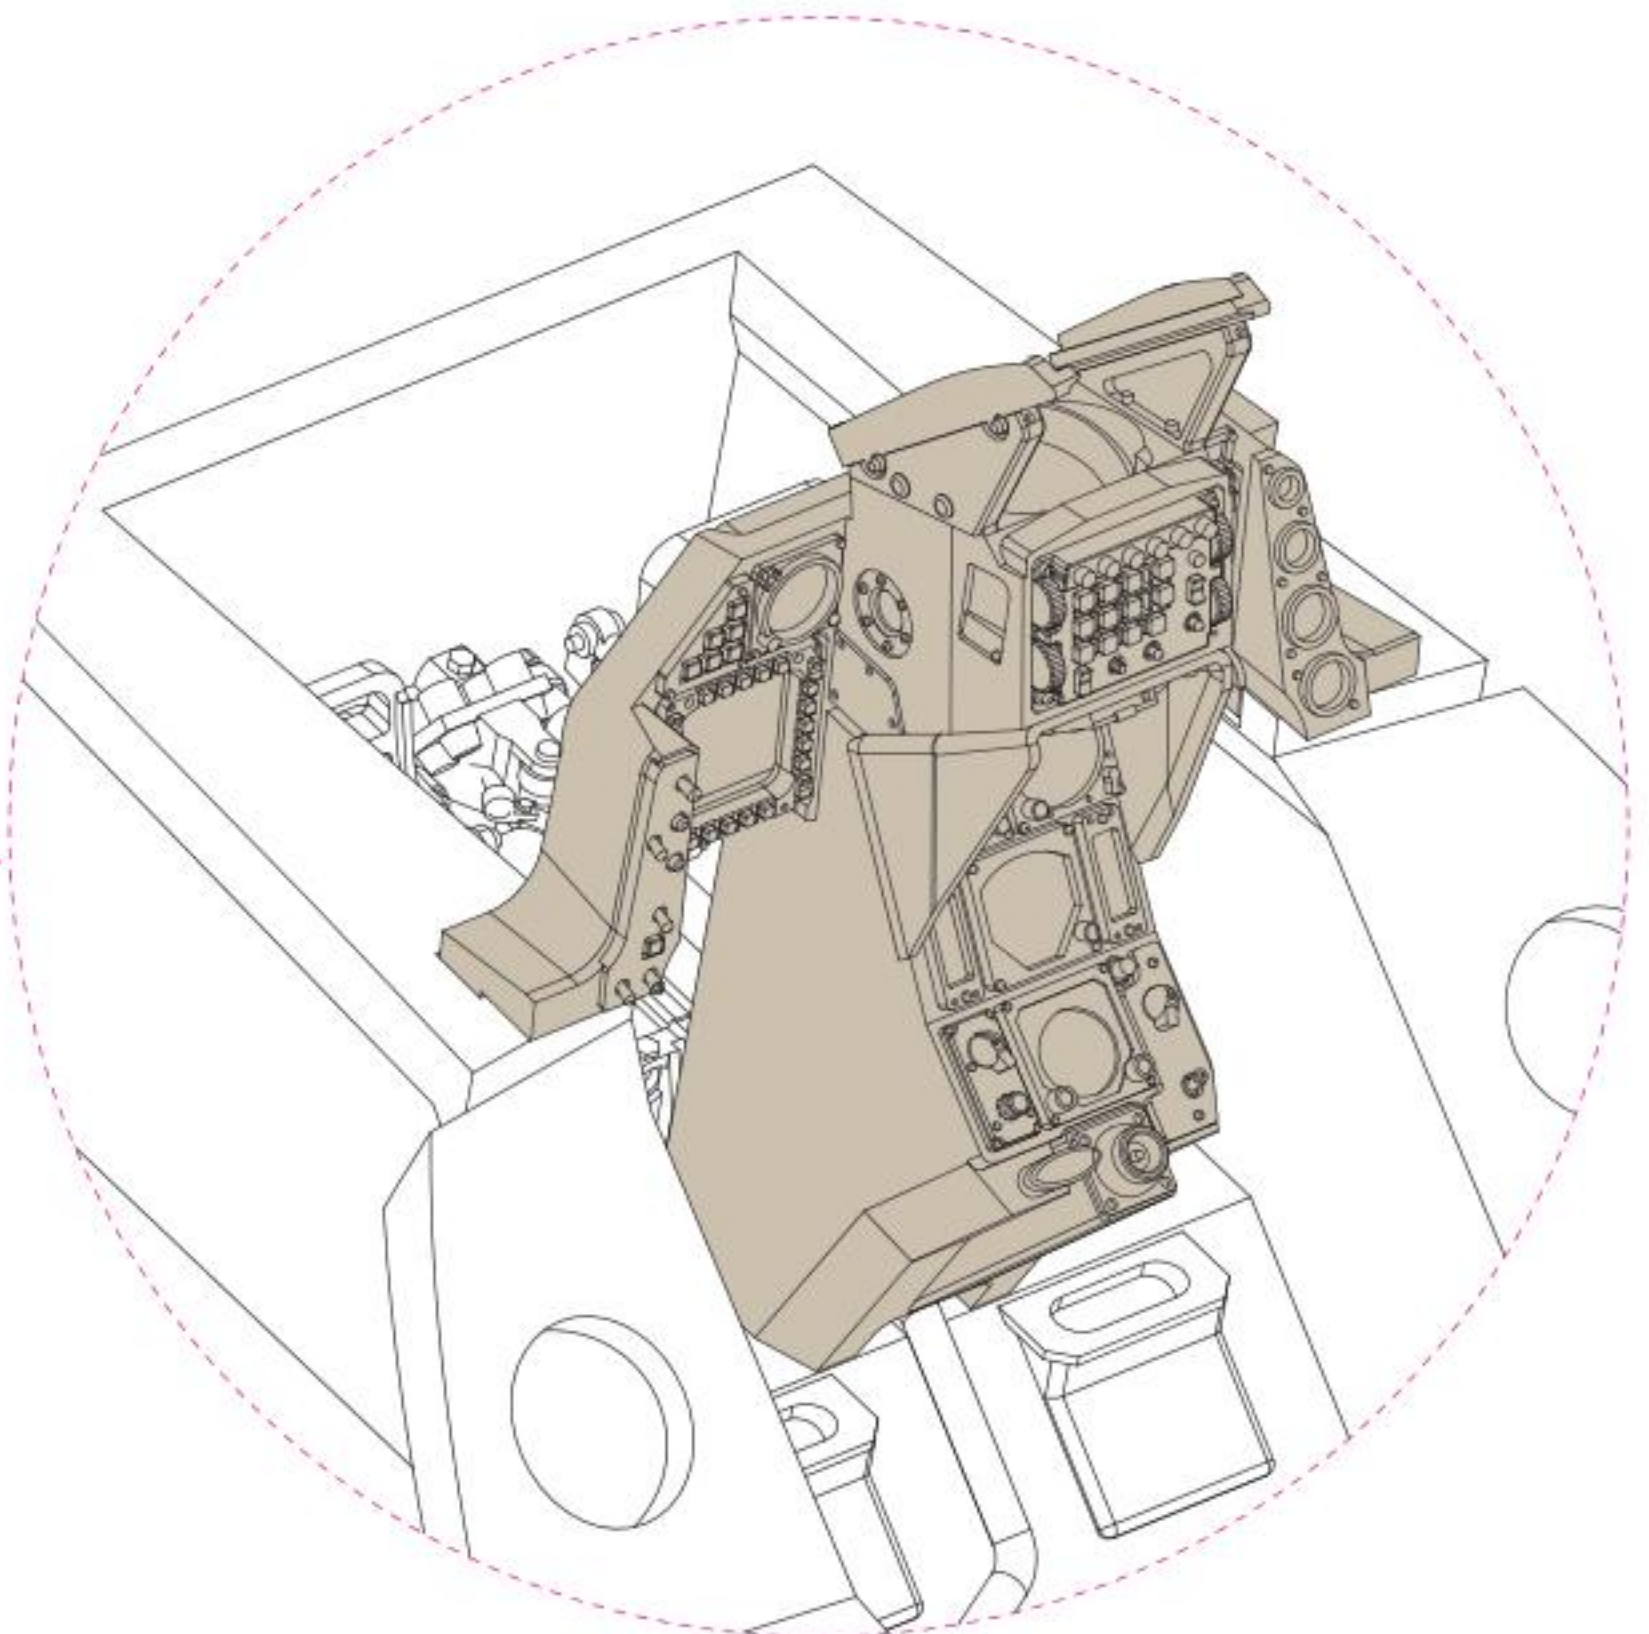


6

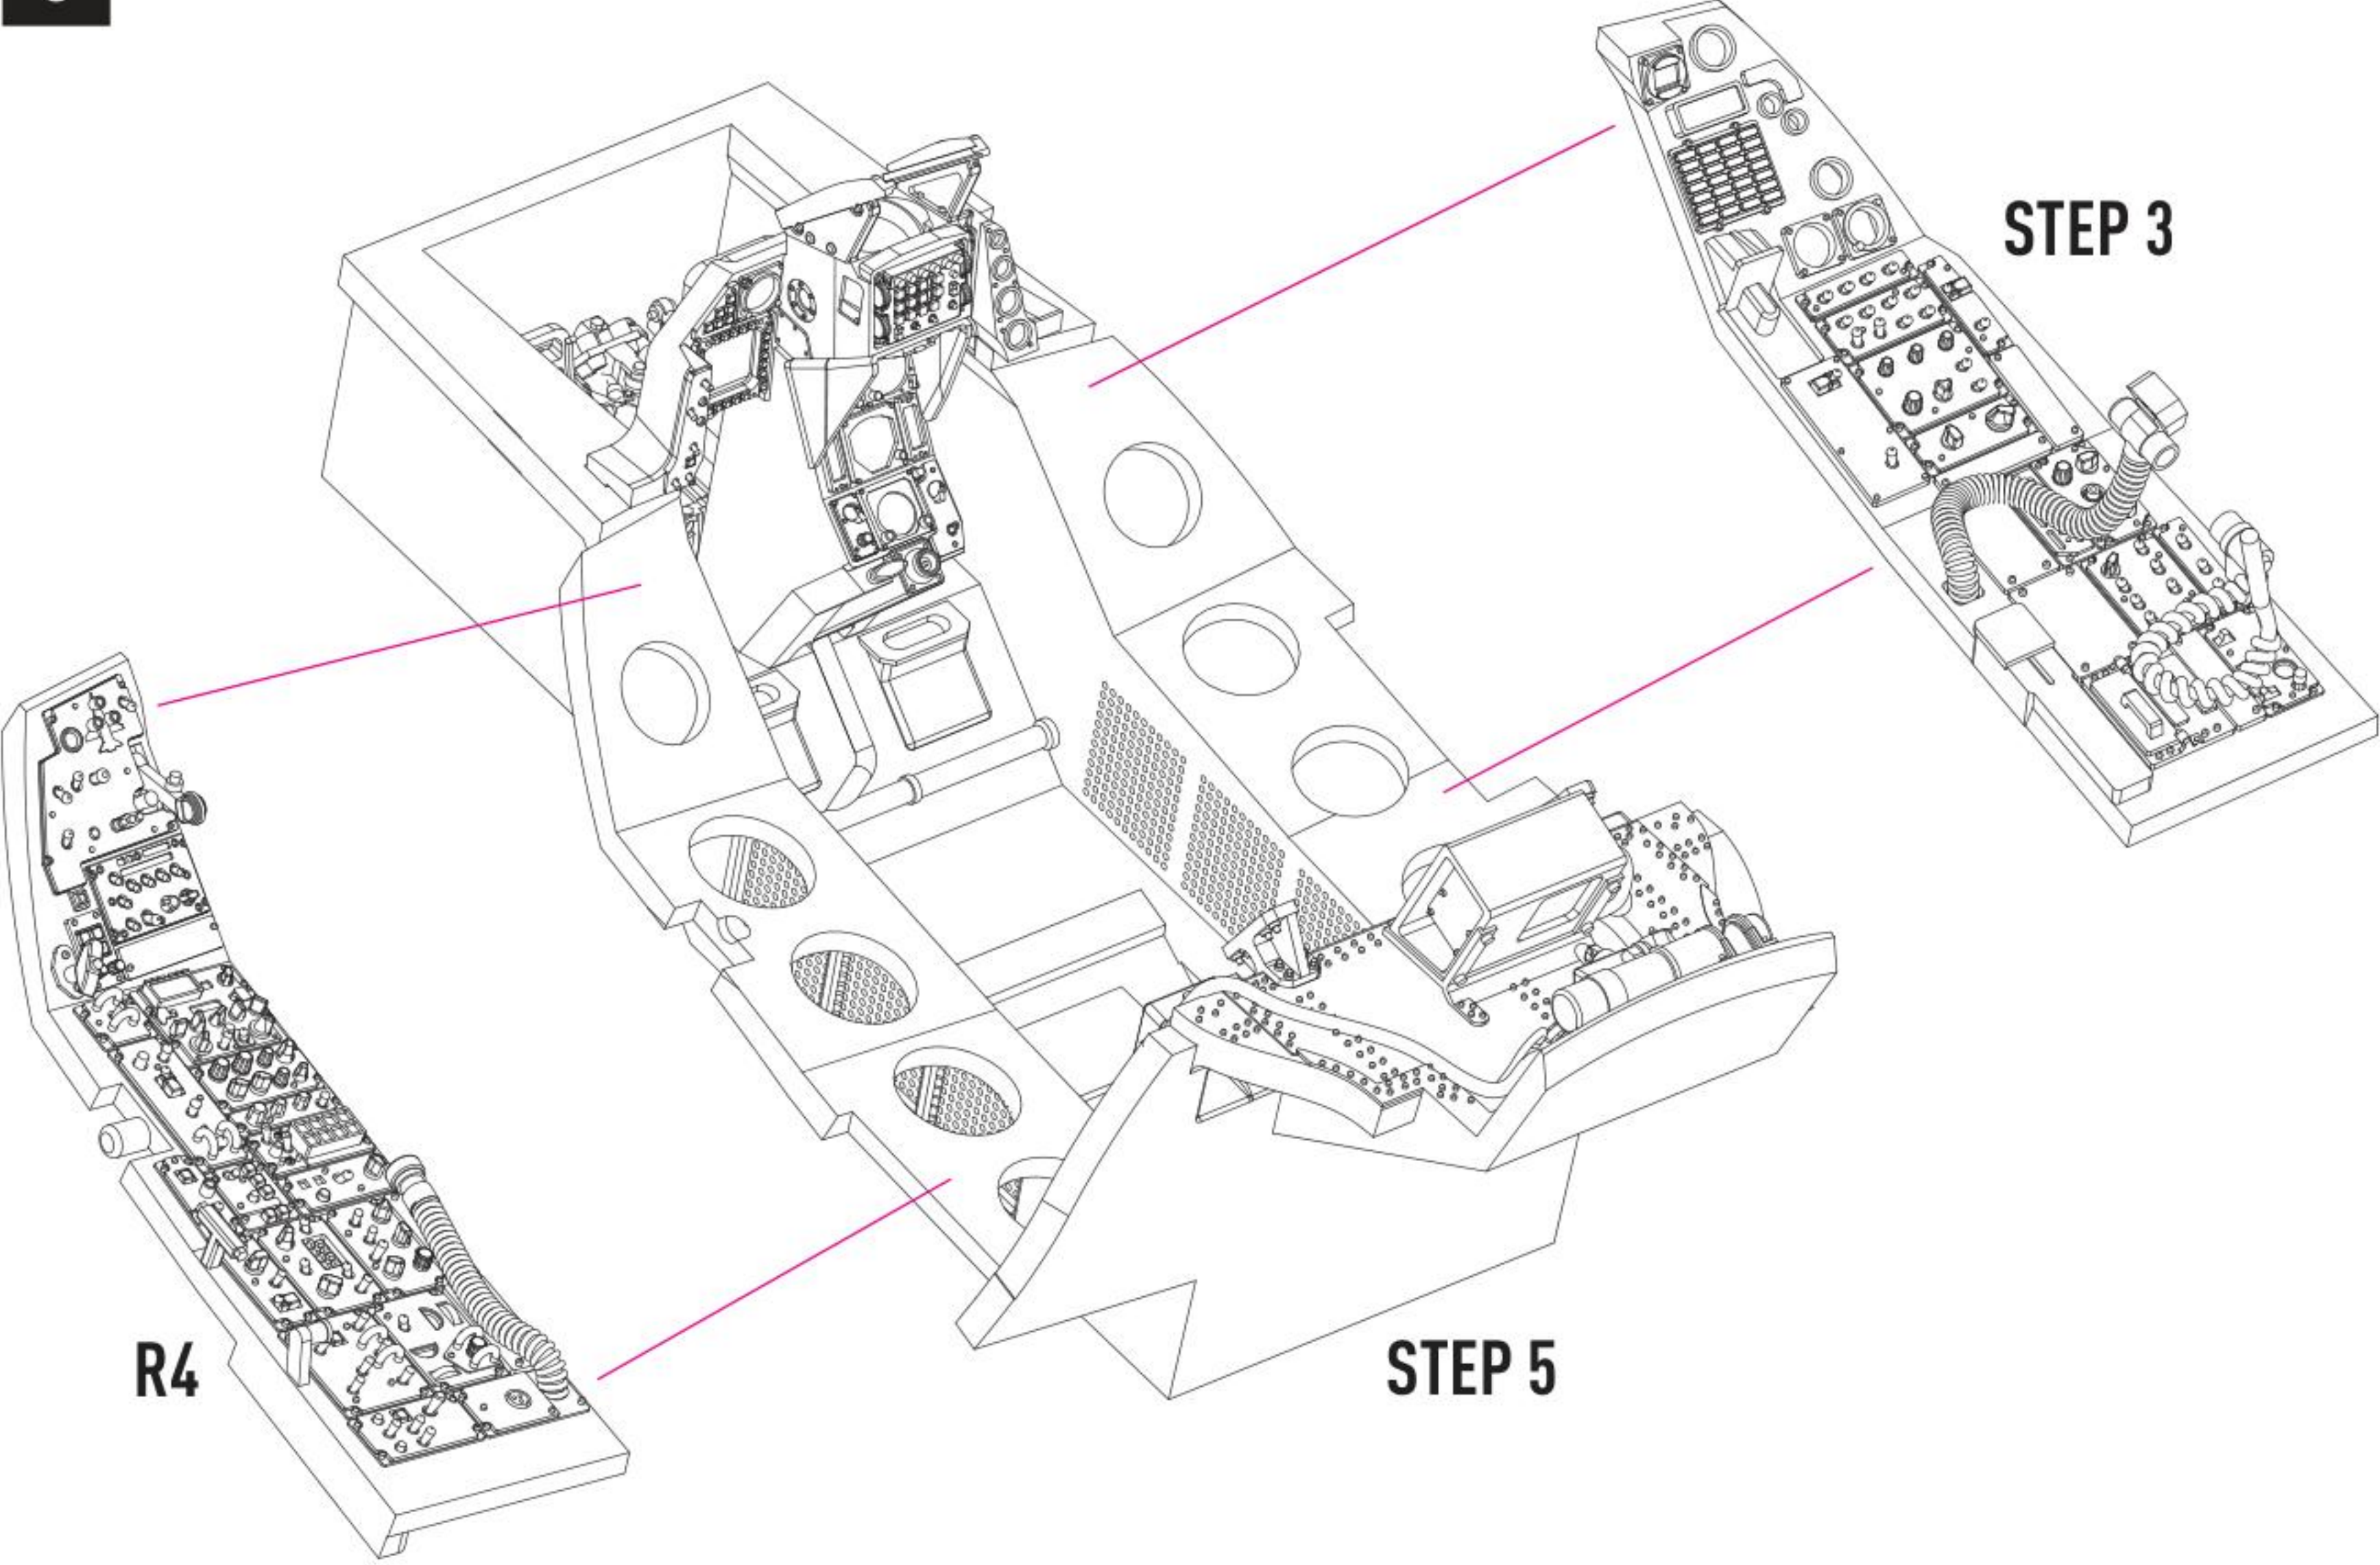

7

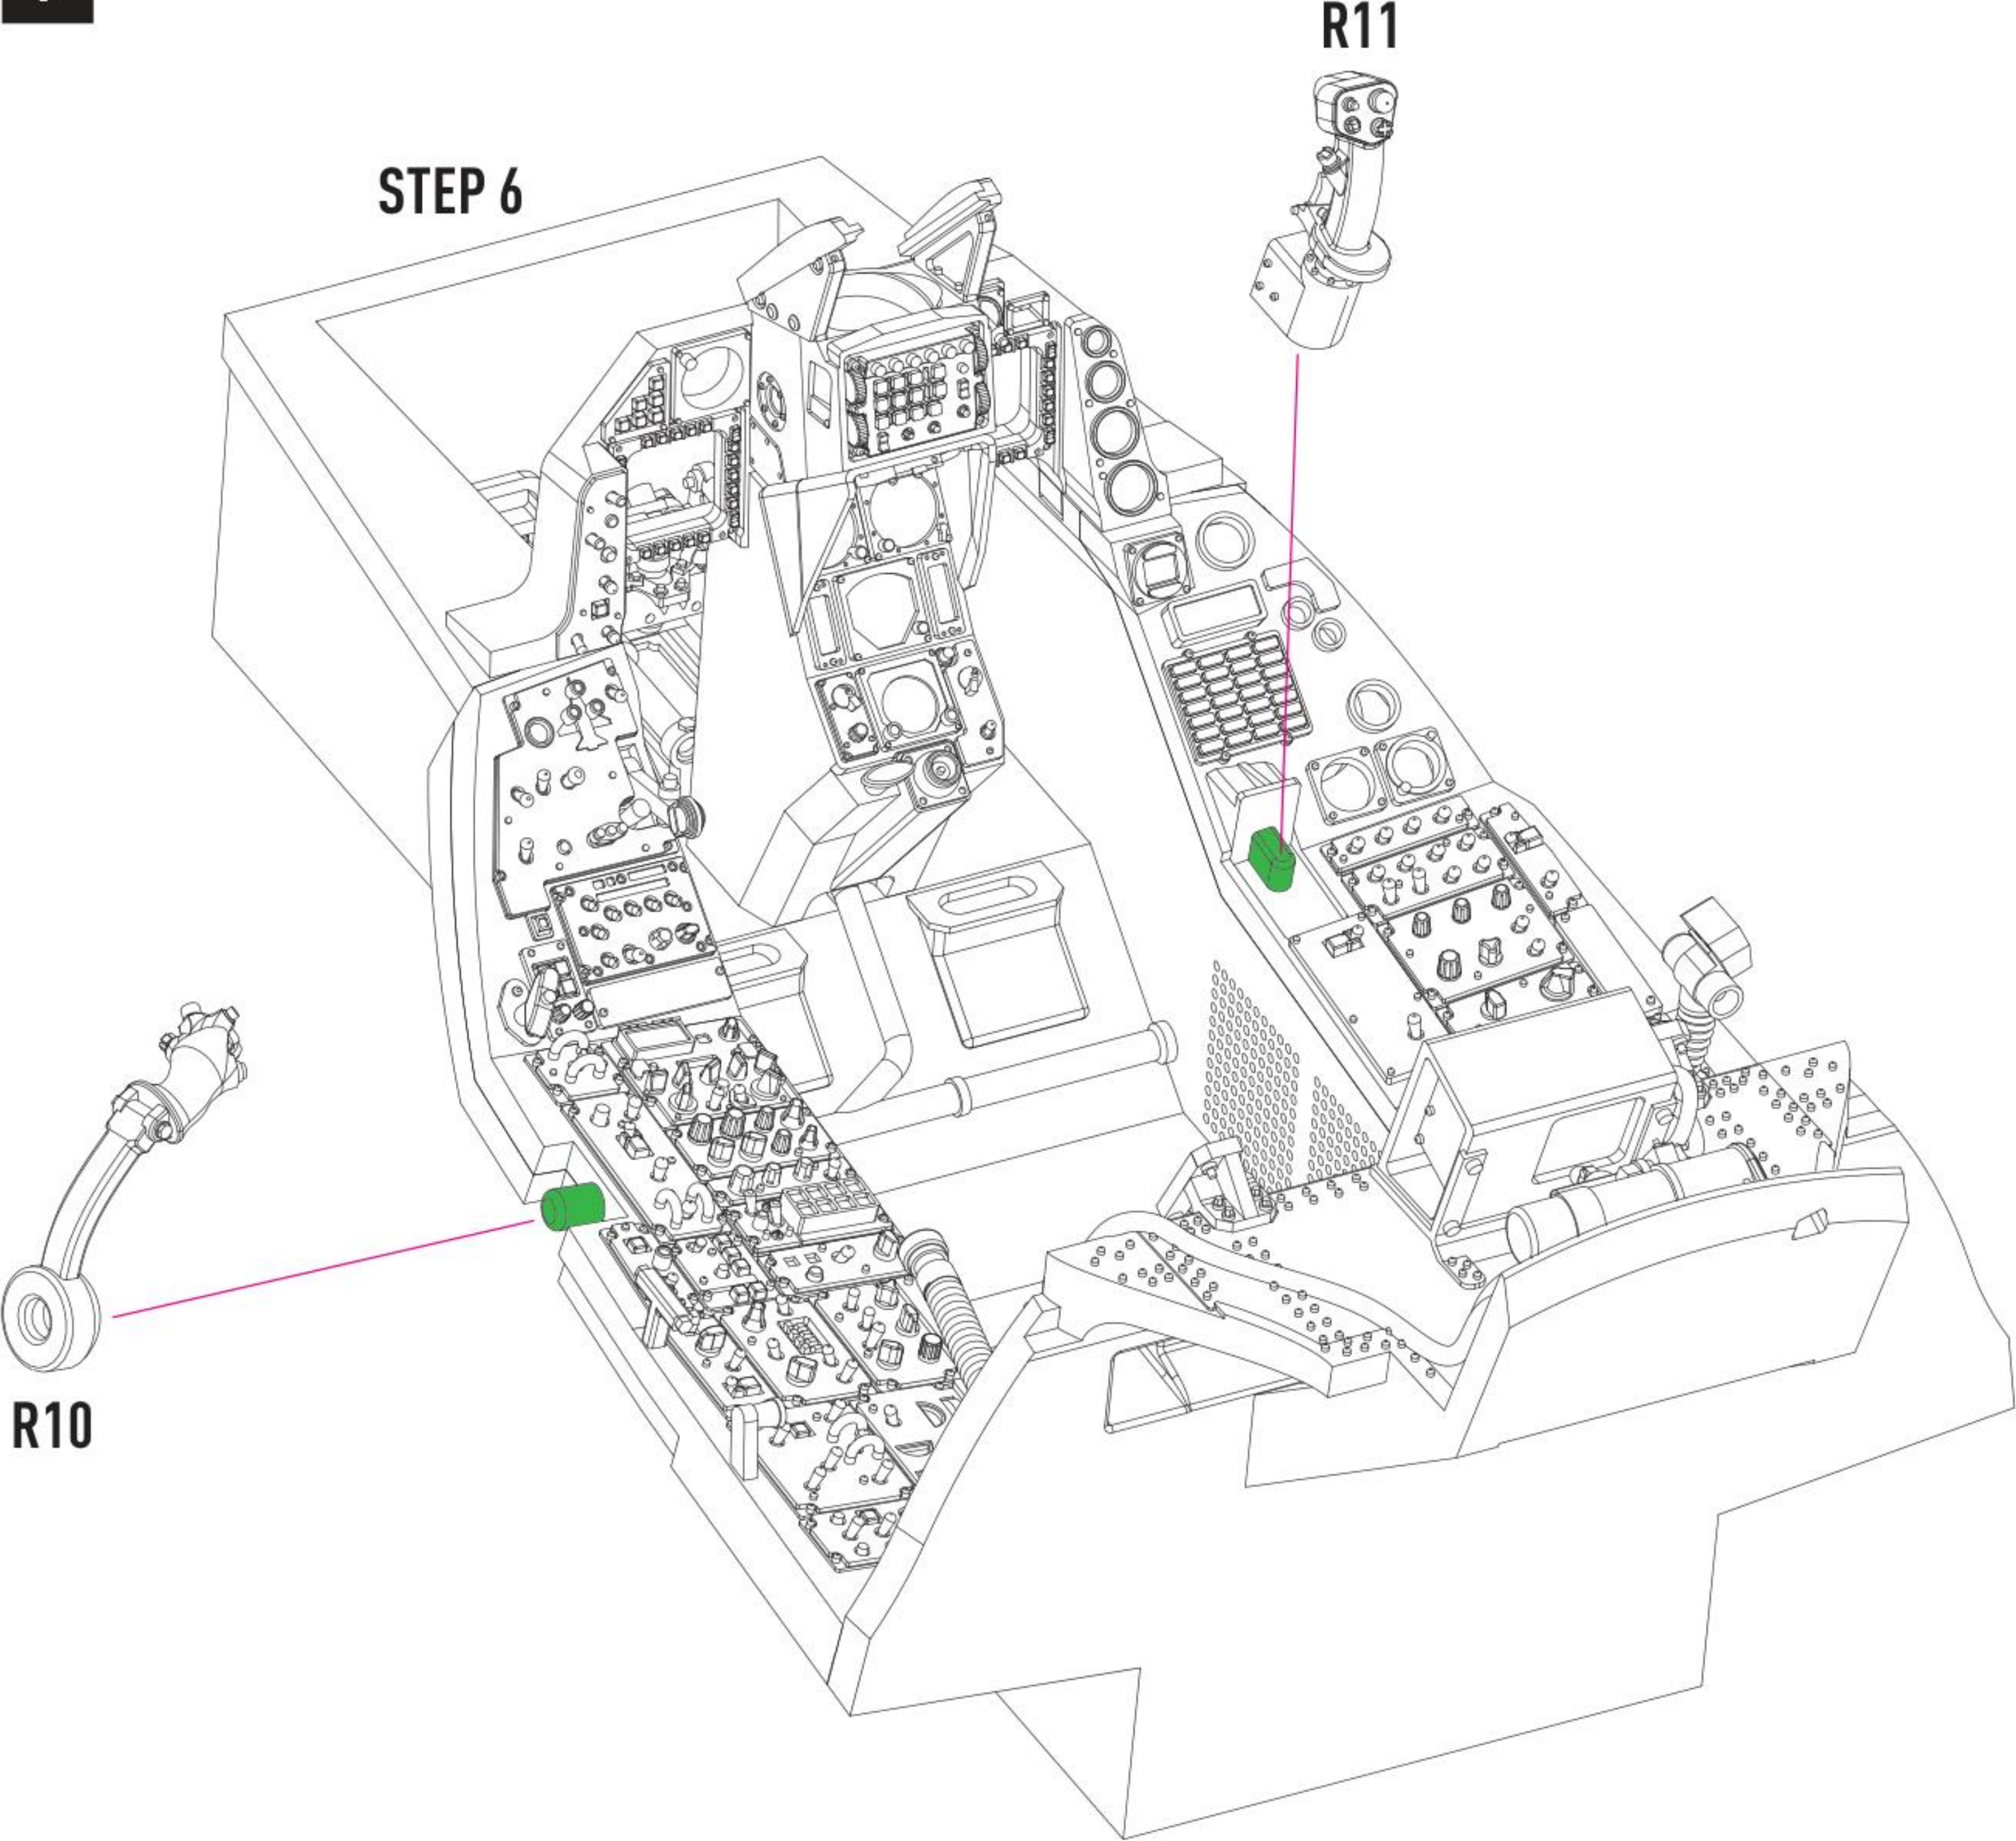


8

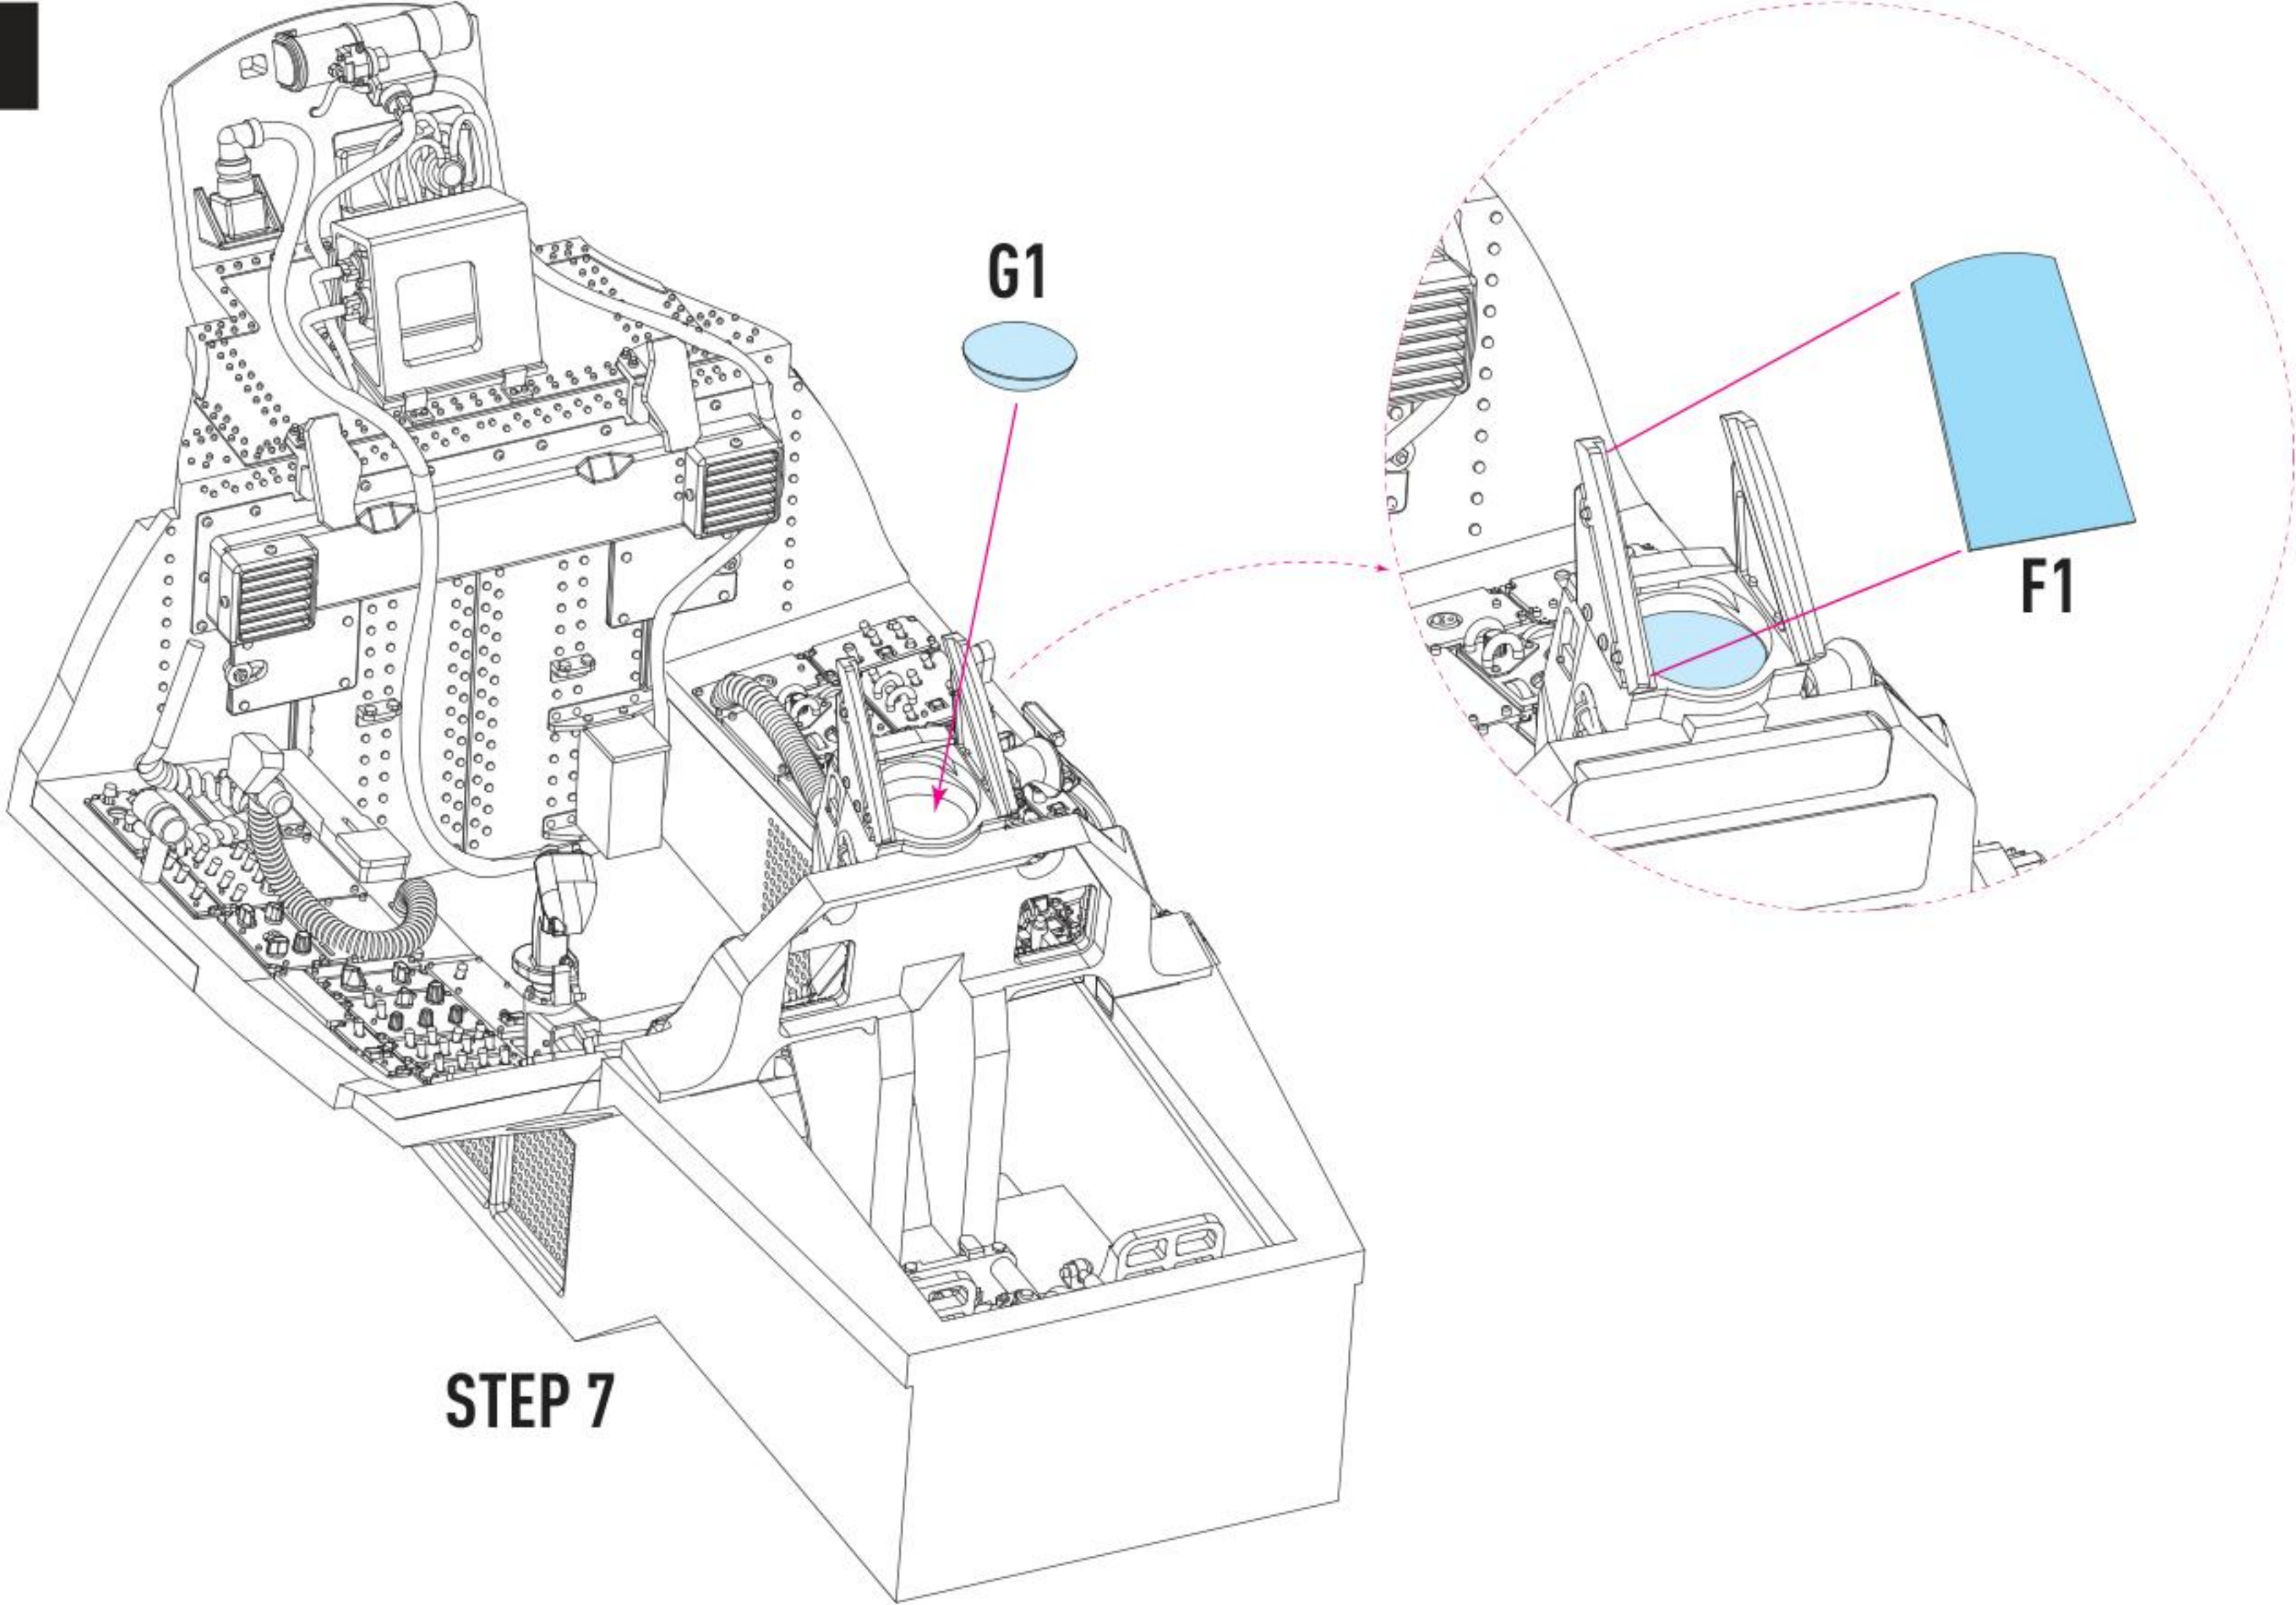


9



INSTALL PART R15 (ARMREST) ON THE INNER RIGHT SIDE OF THE CABIN OF TAMIYA PART B1 (UPPER FUSELAGE). USE PHOTO REFERENCES

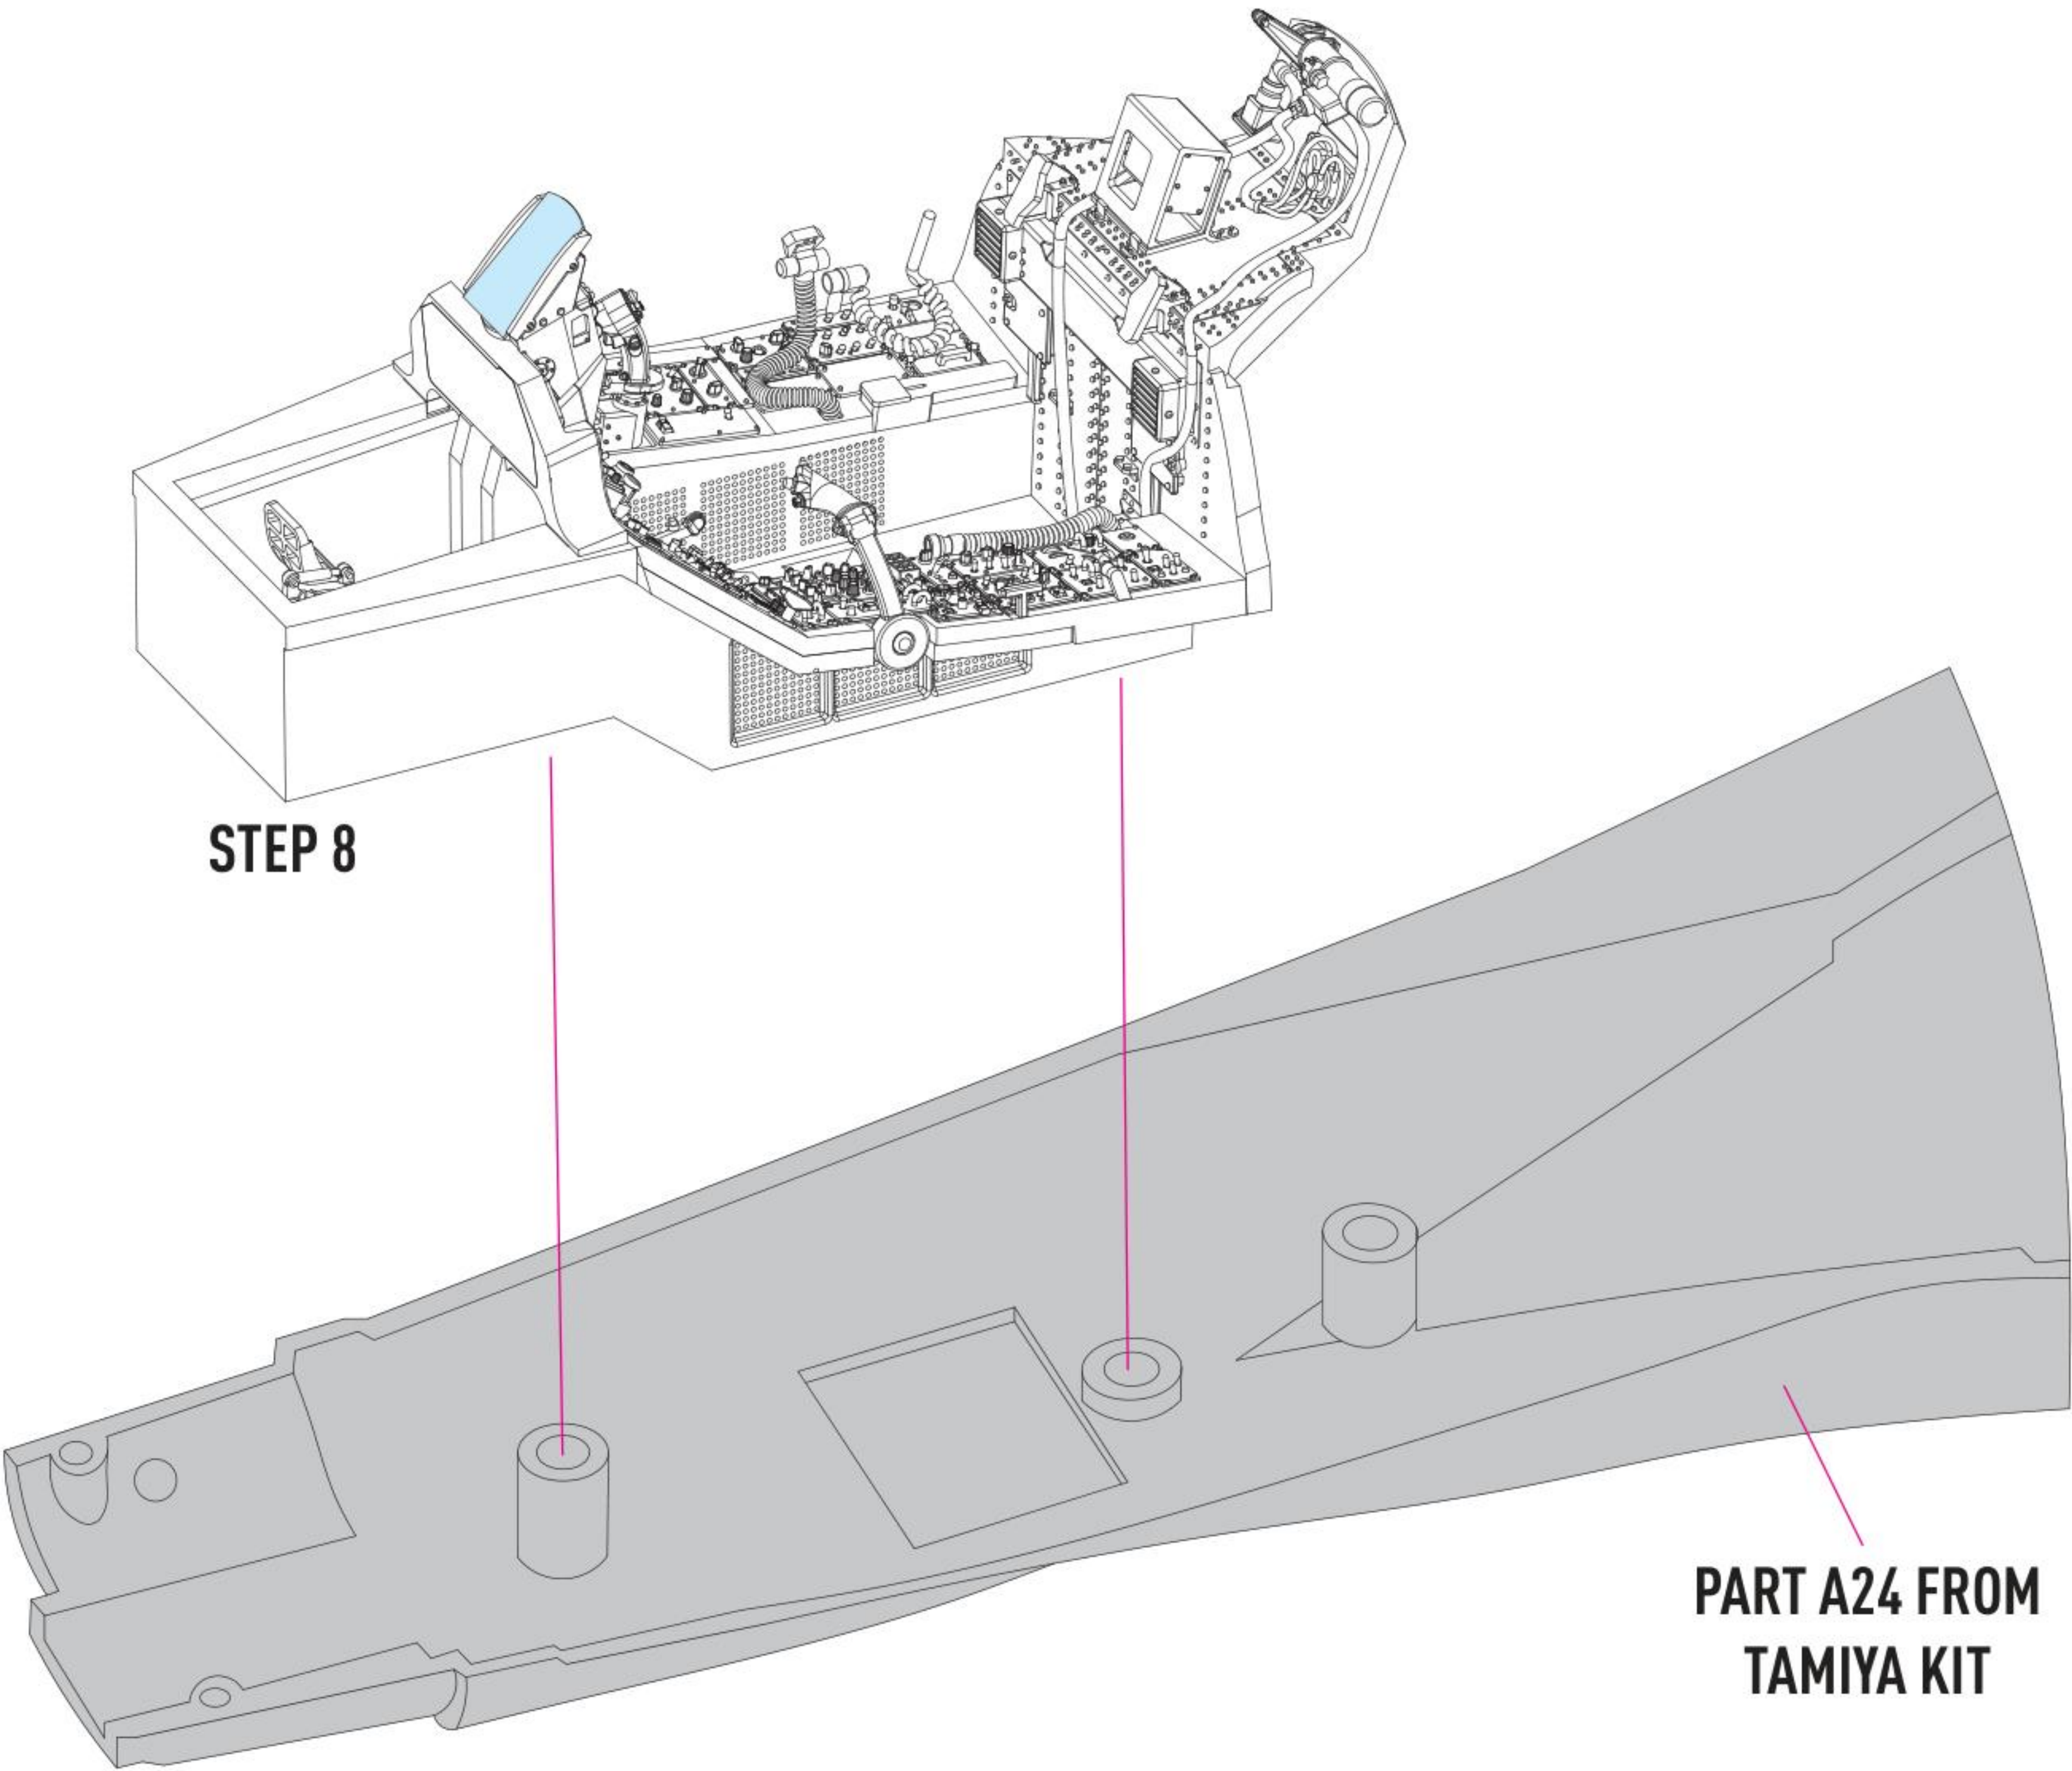


10

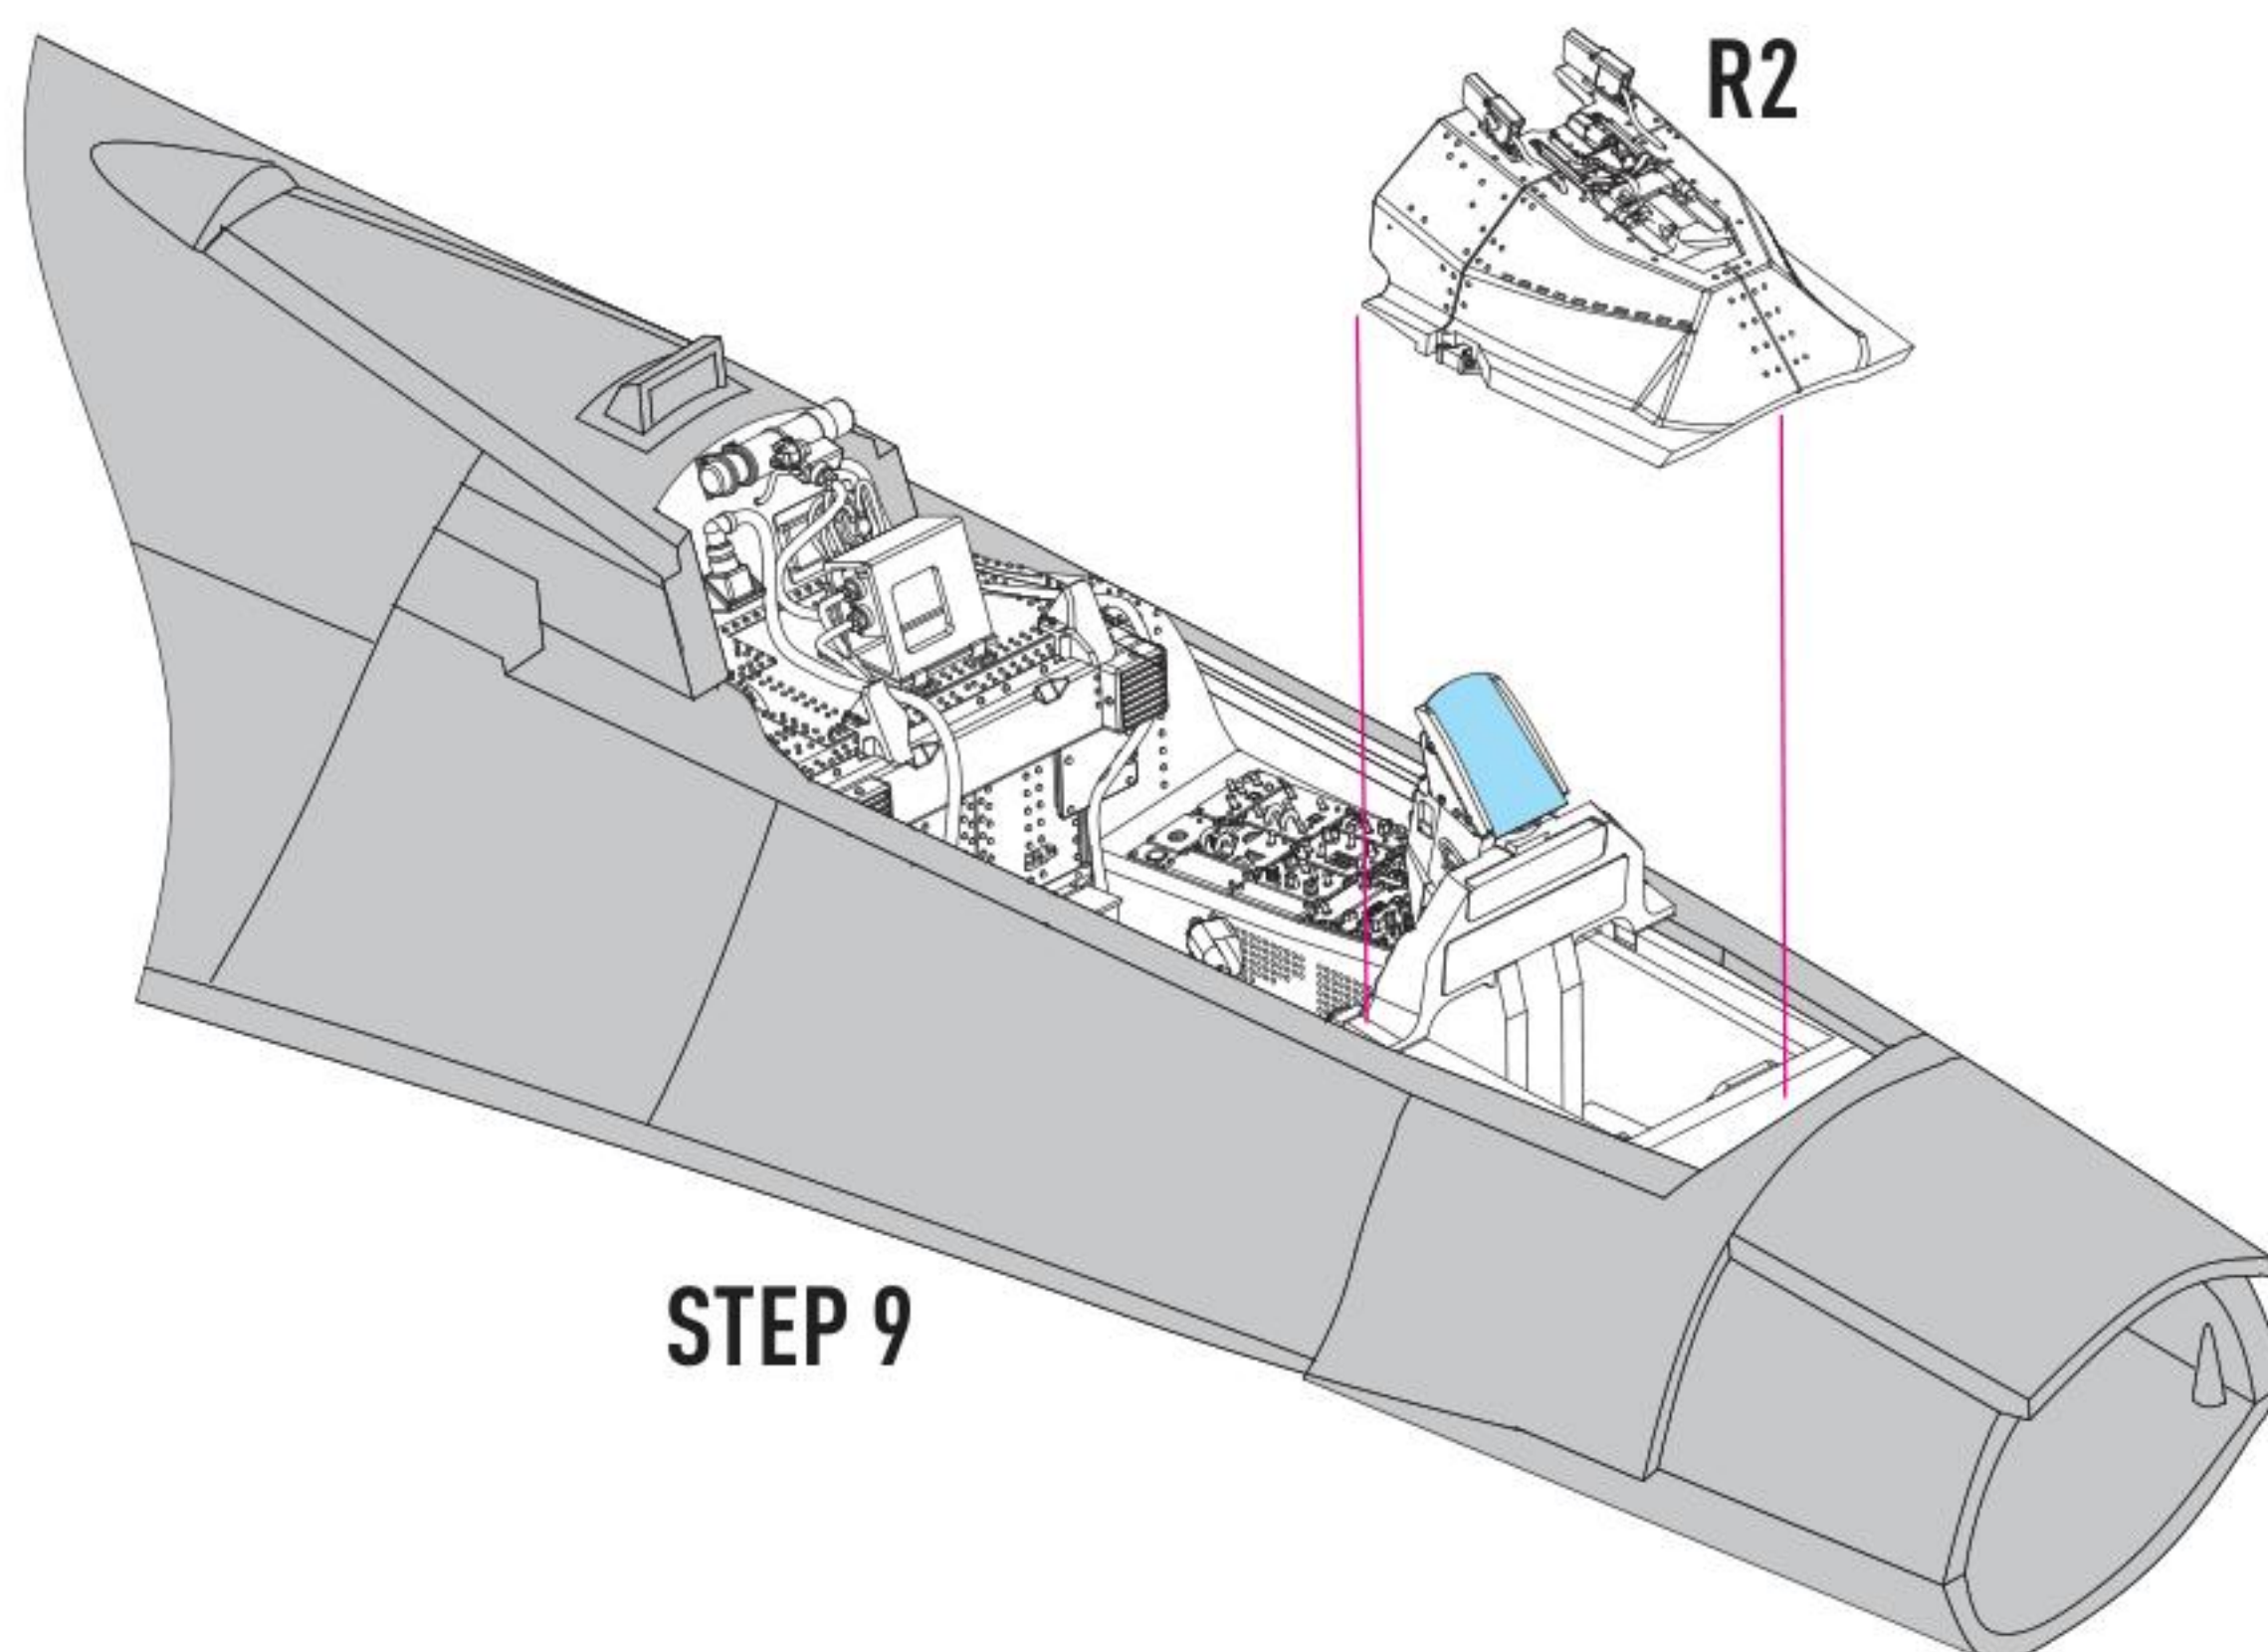


STEP 9



11

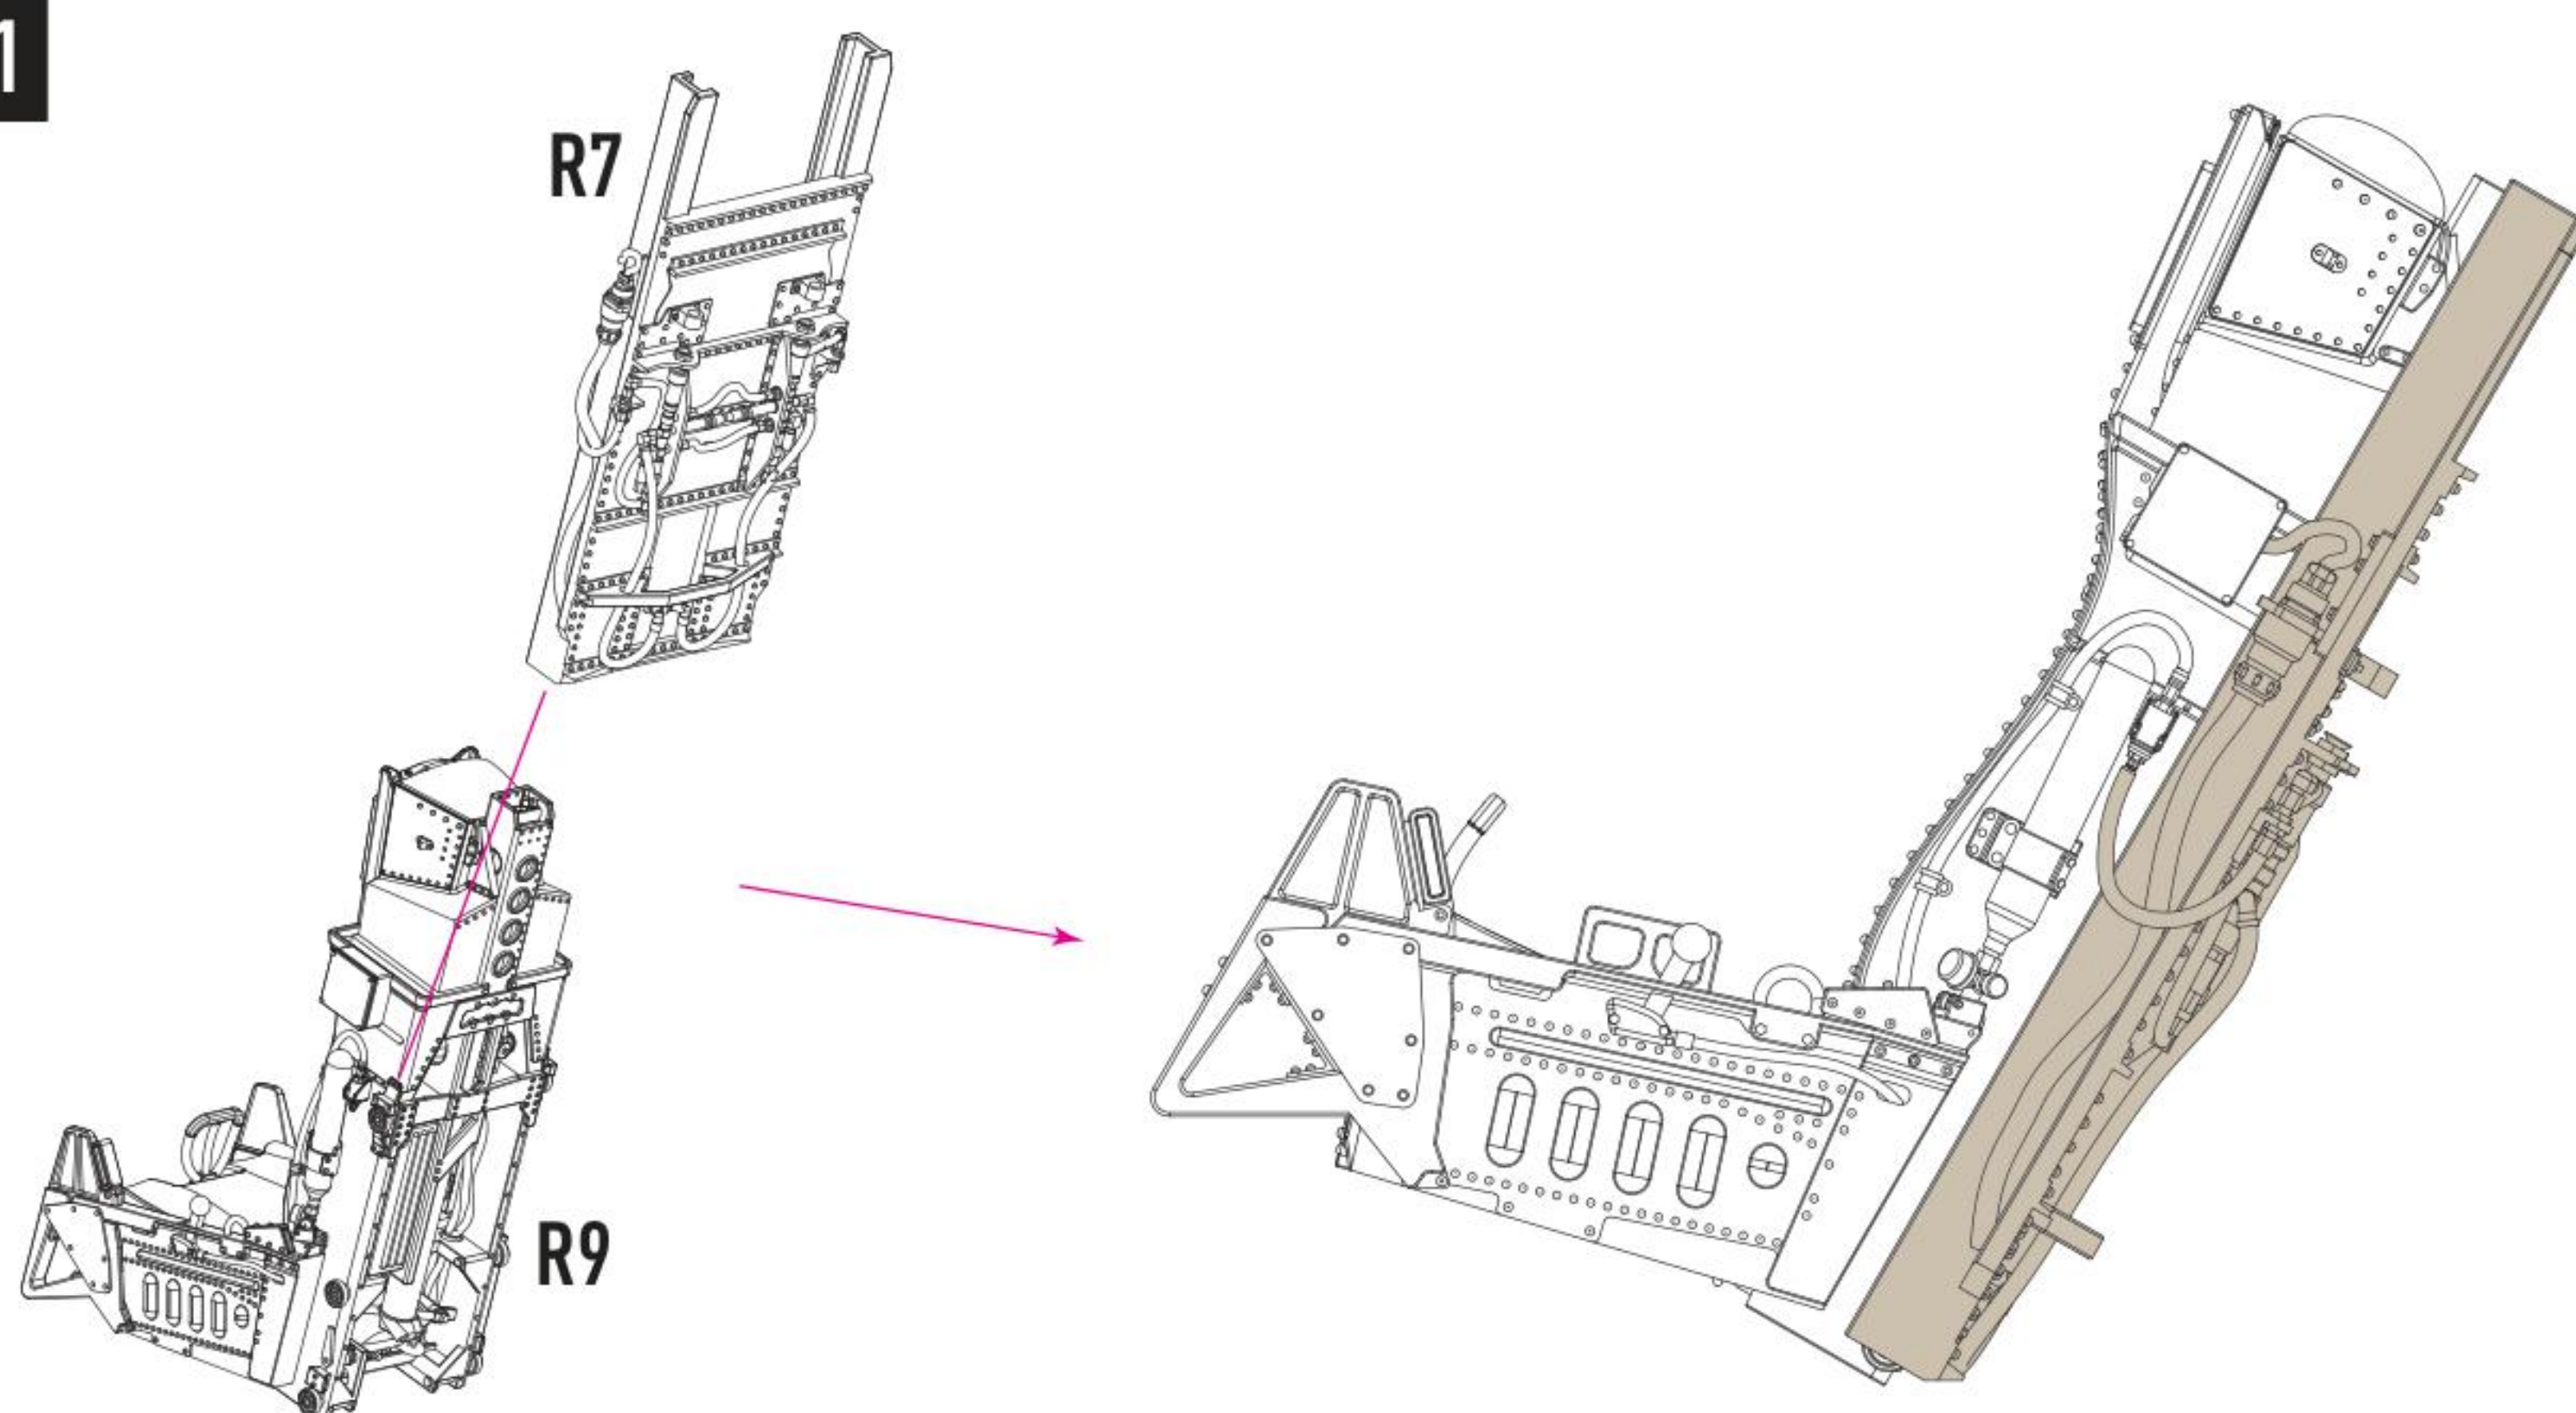


12

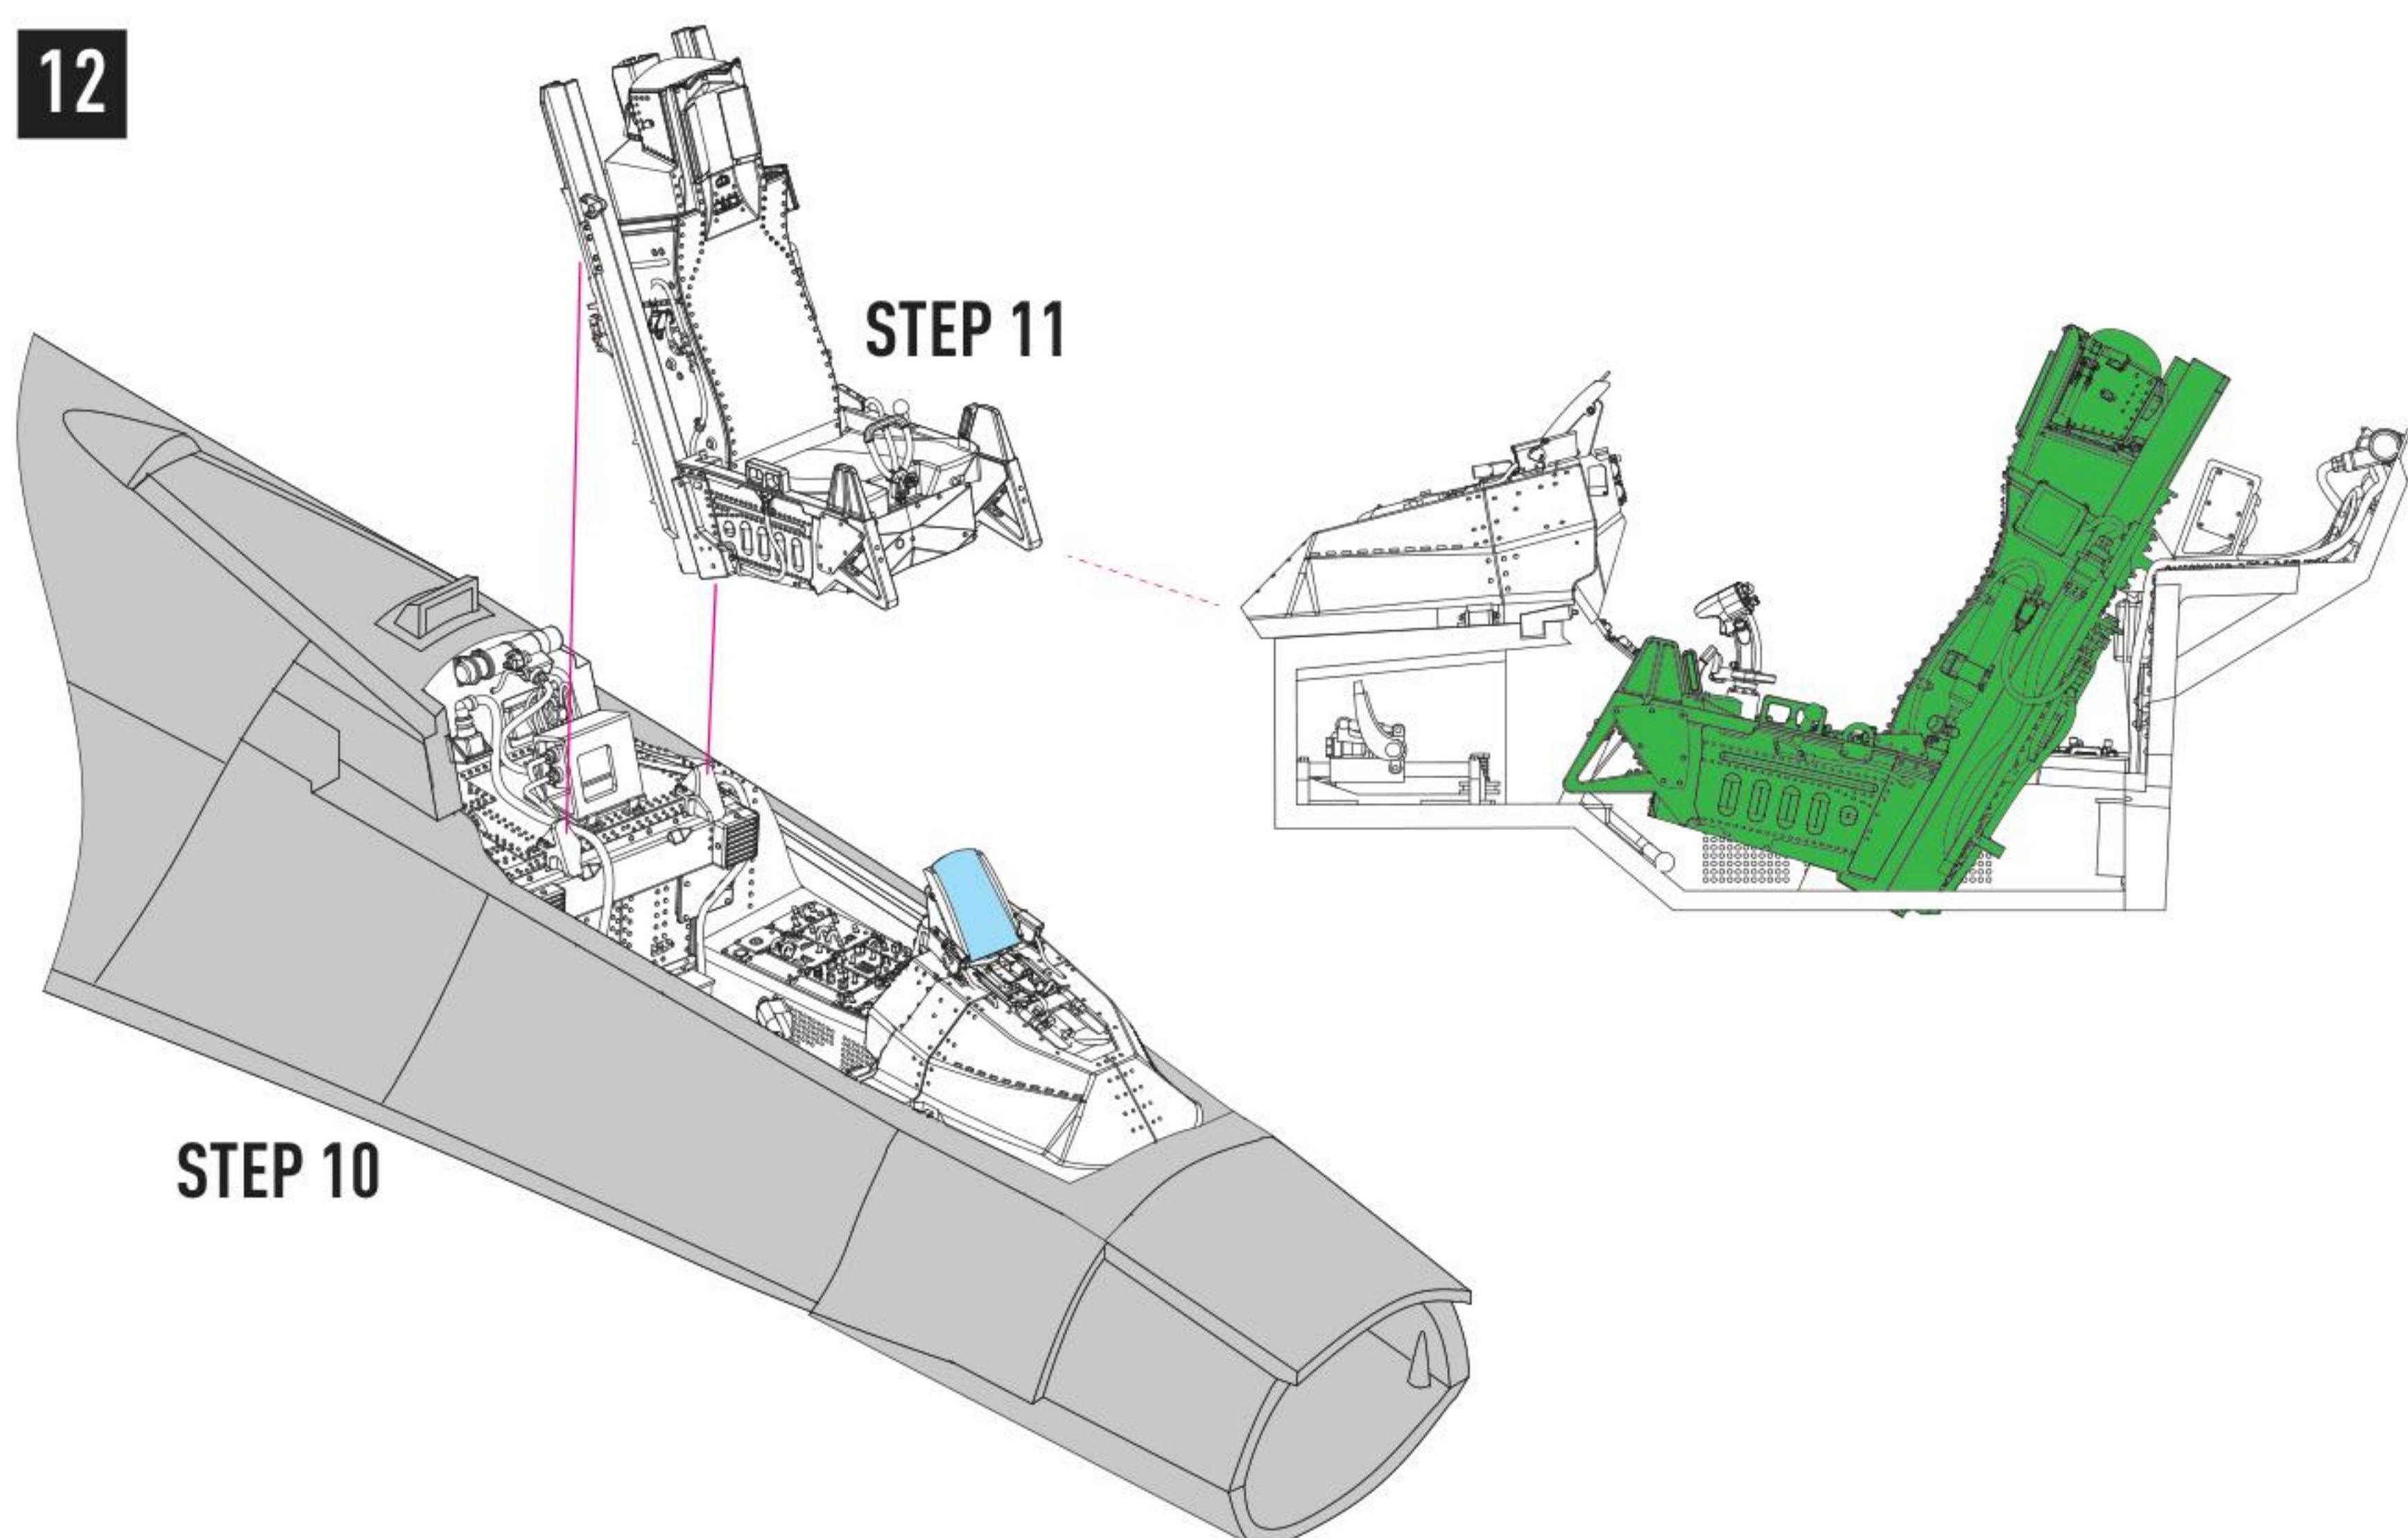


STEP 10

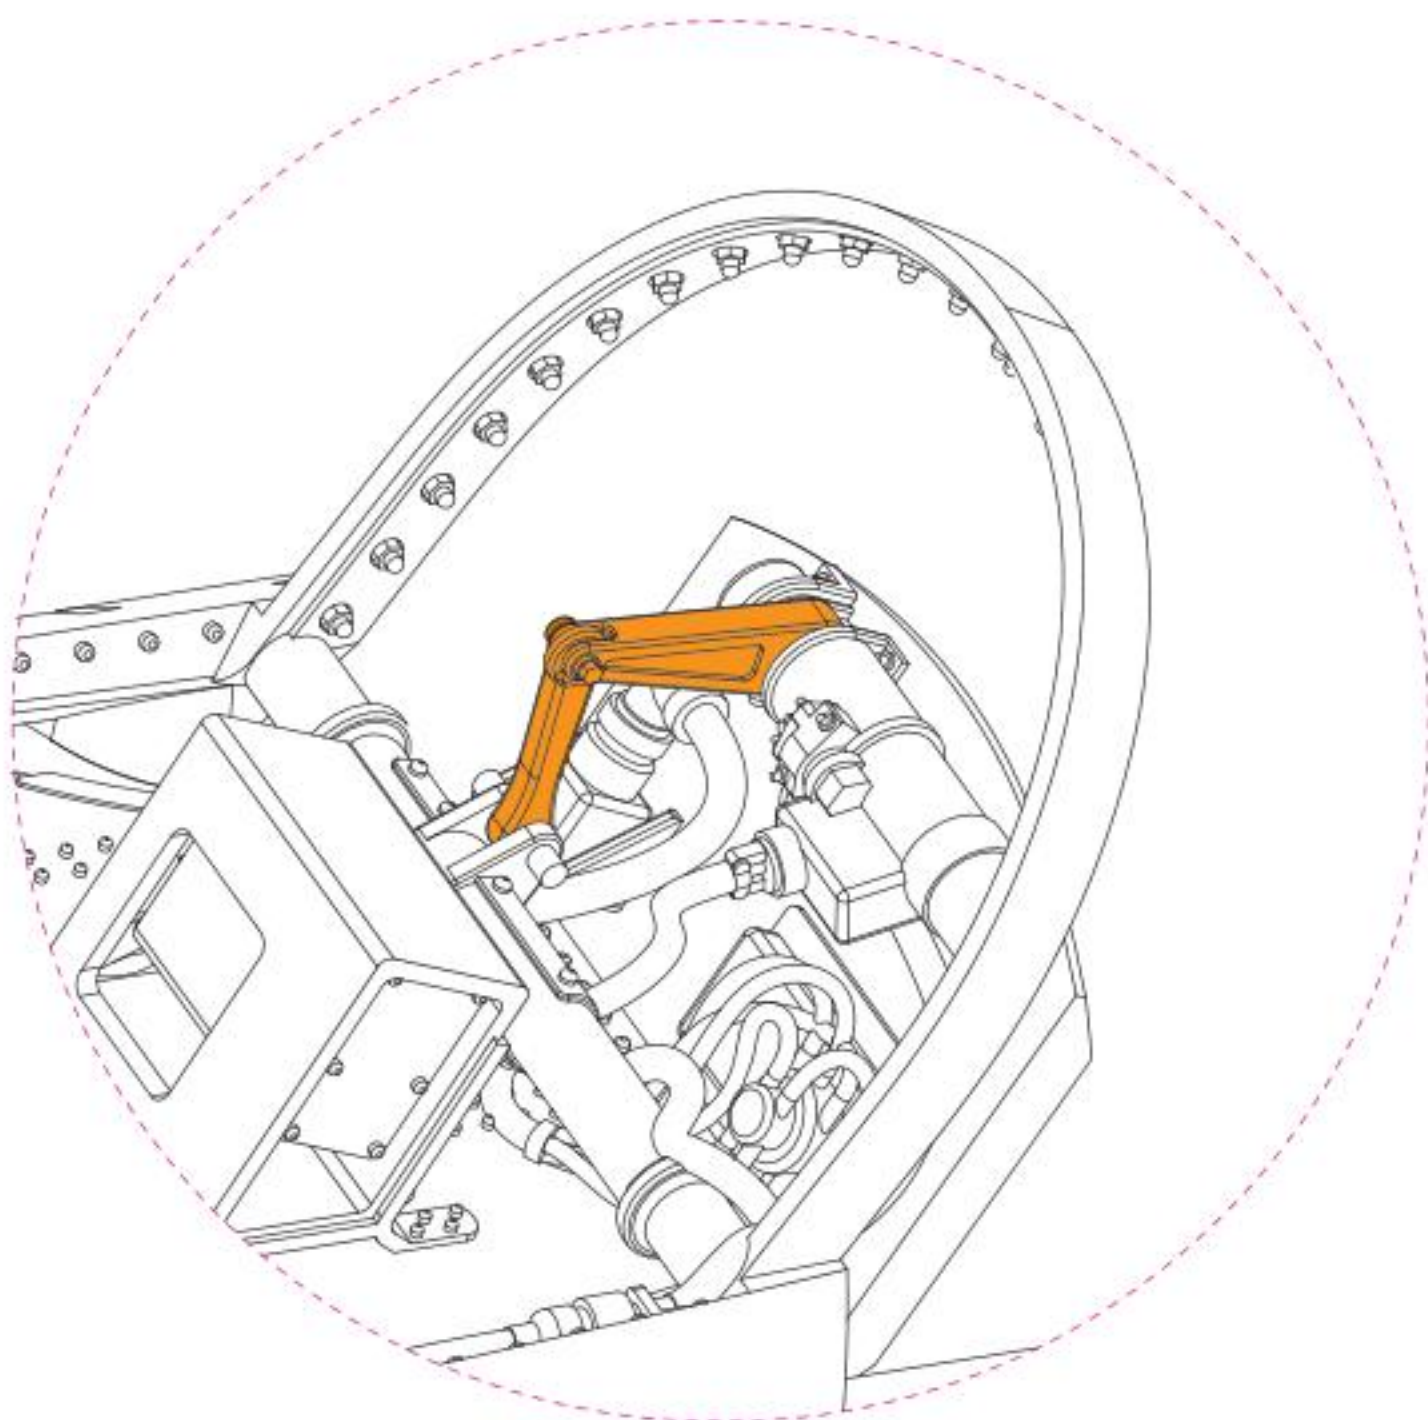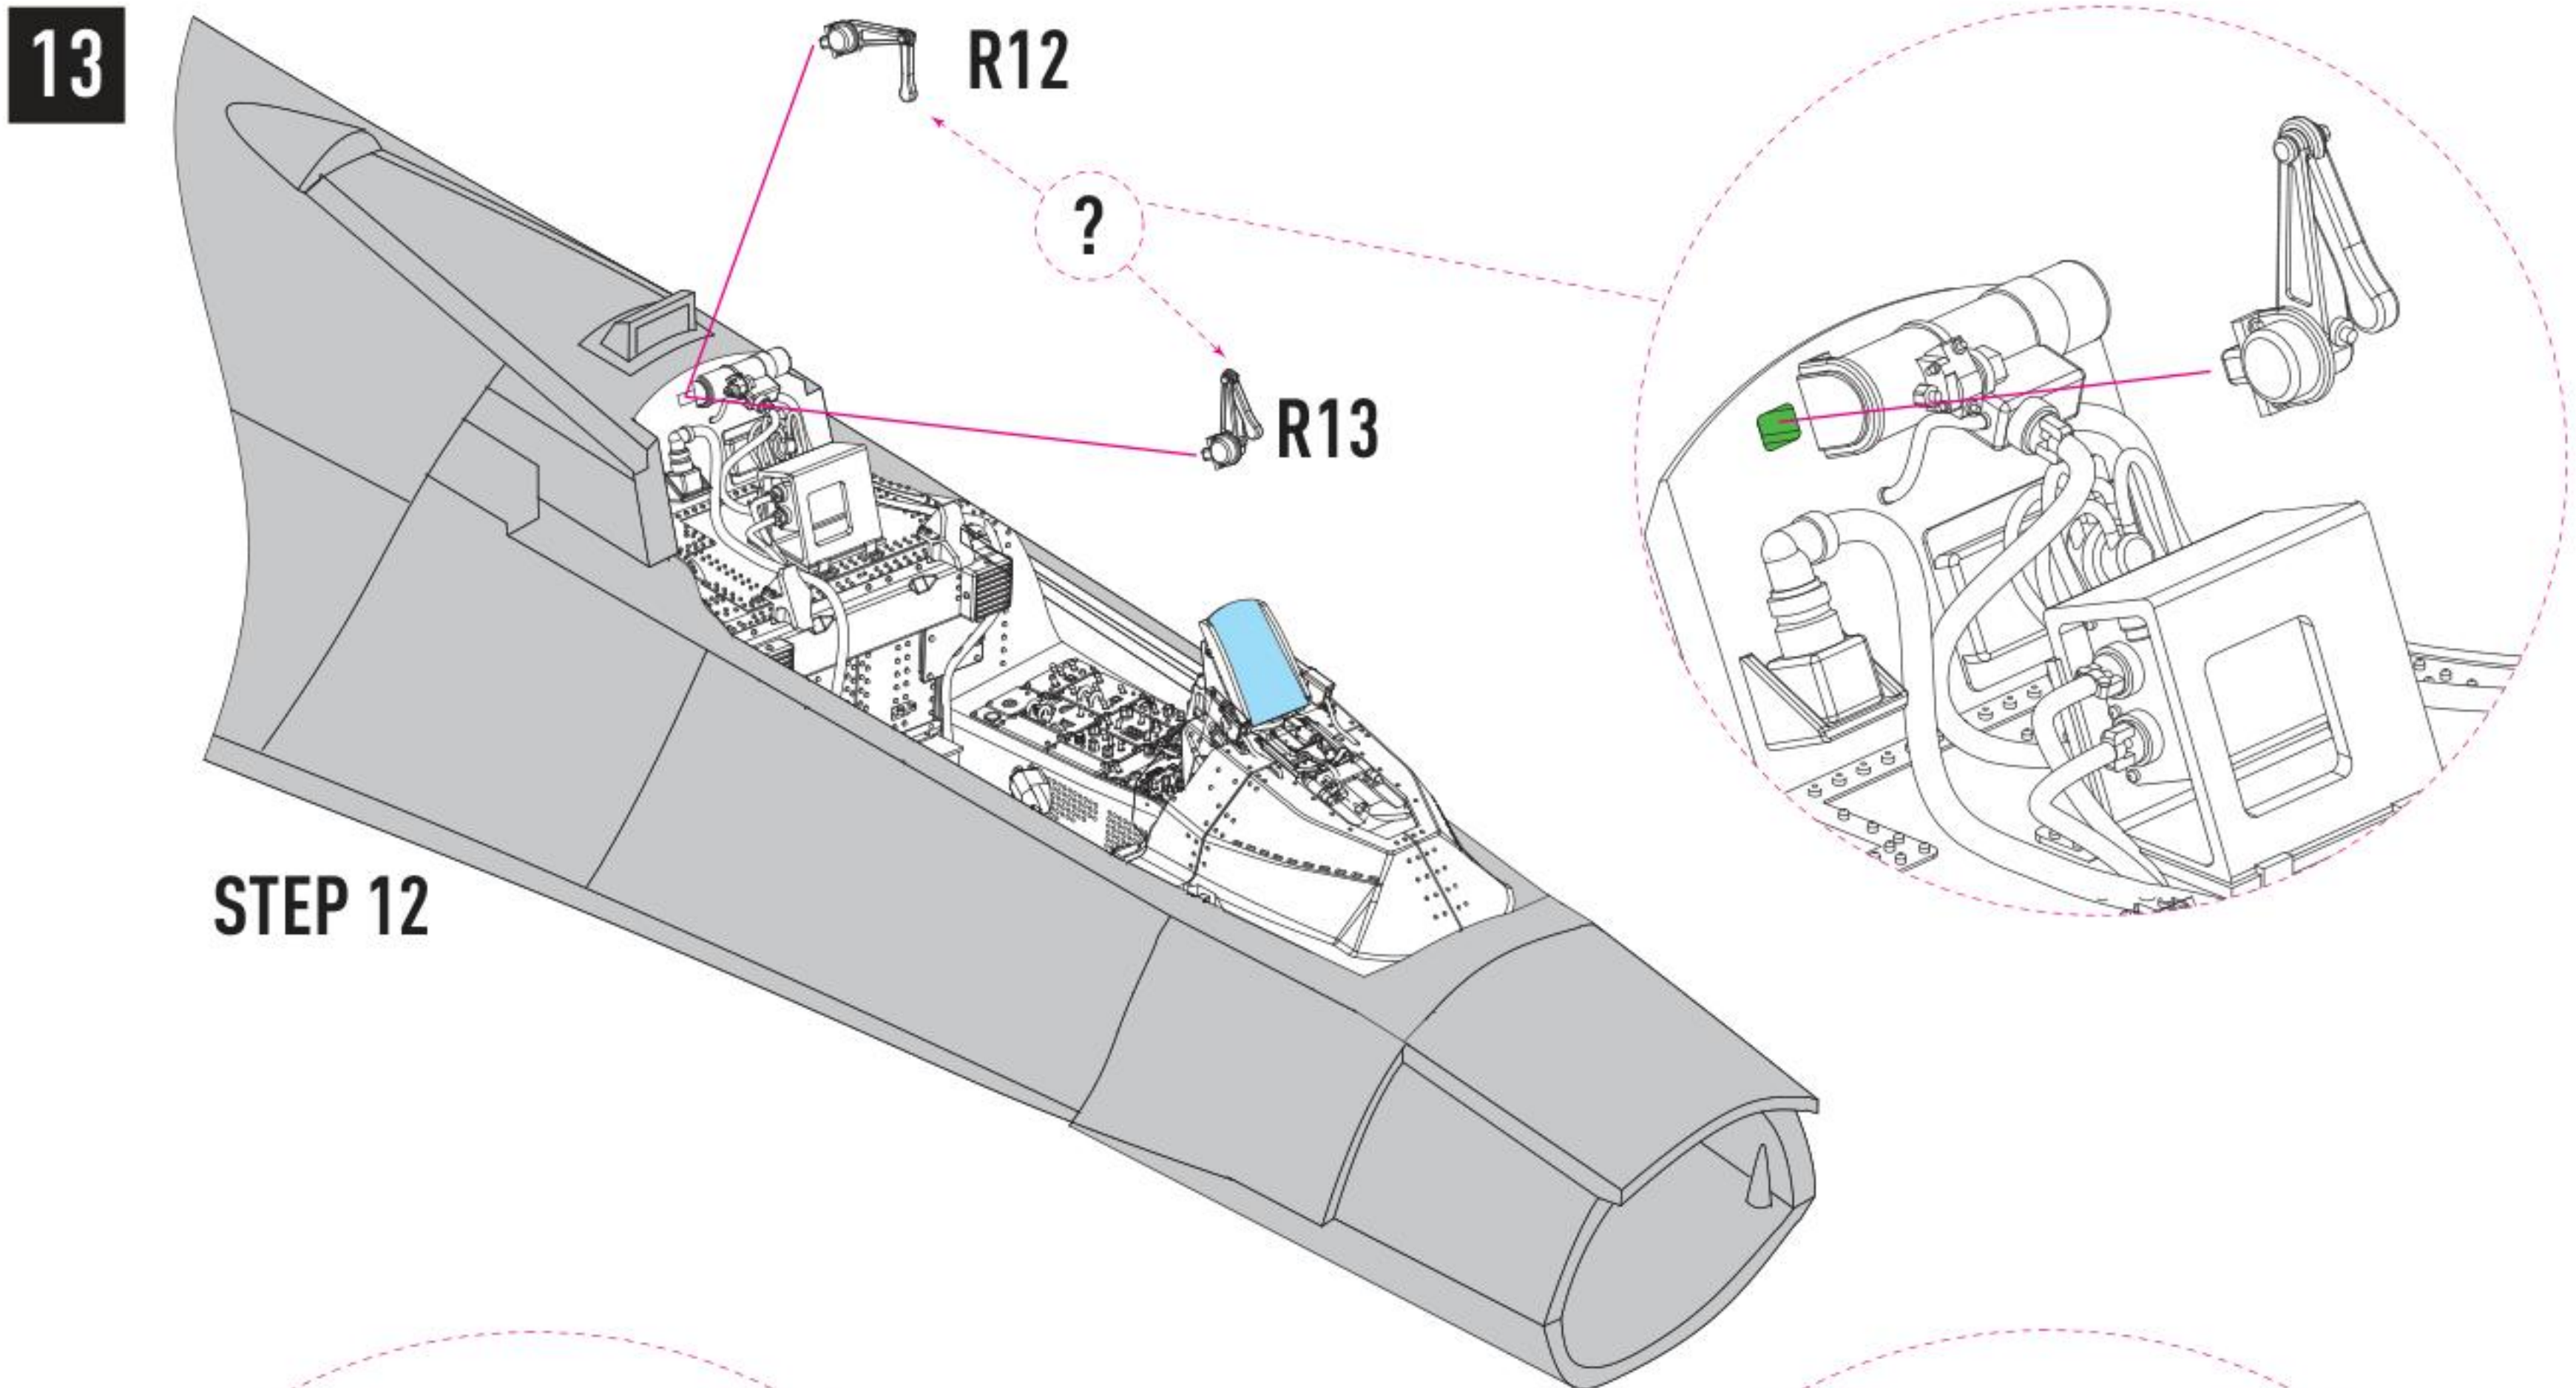


R12 FOR CLOSED CANOPY

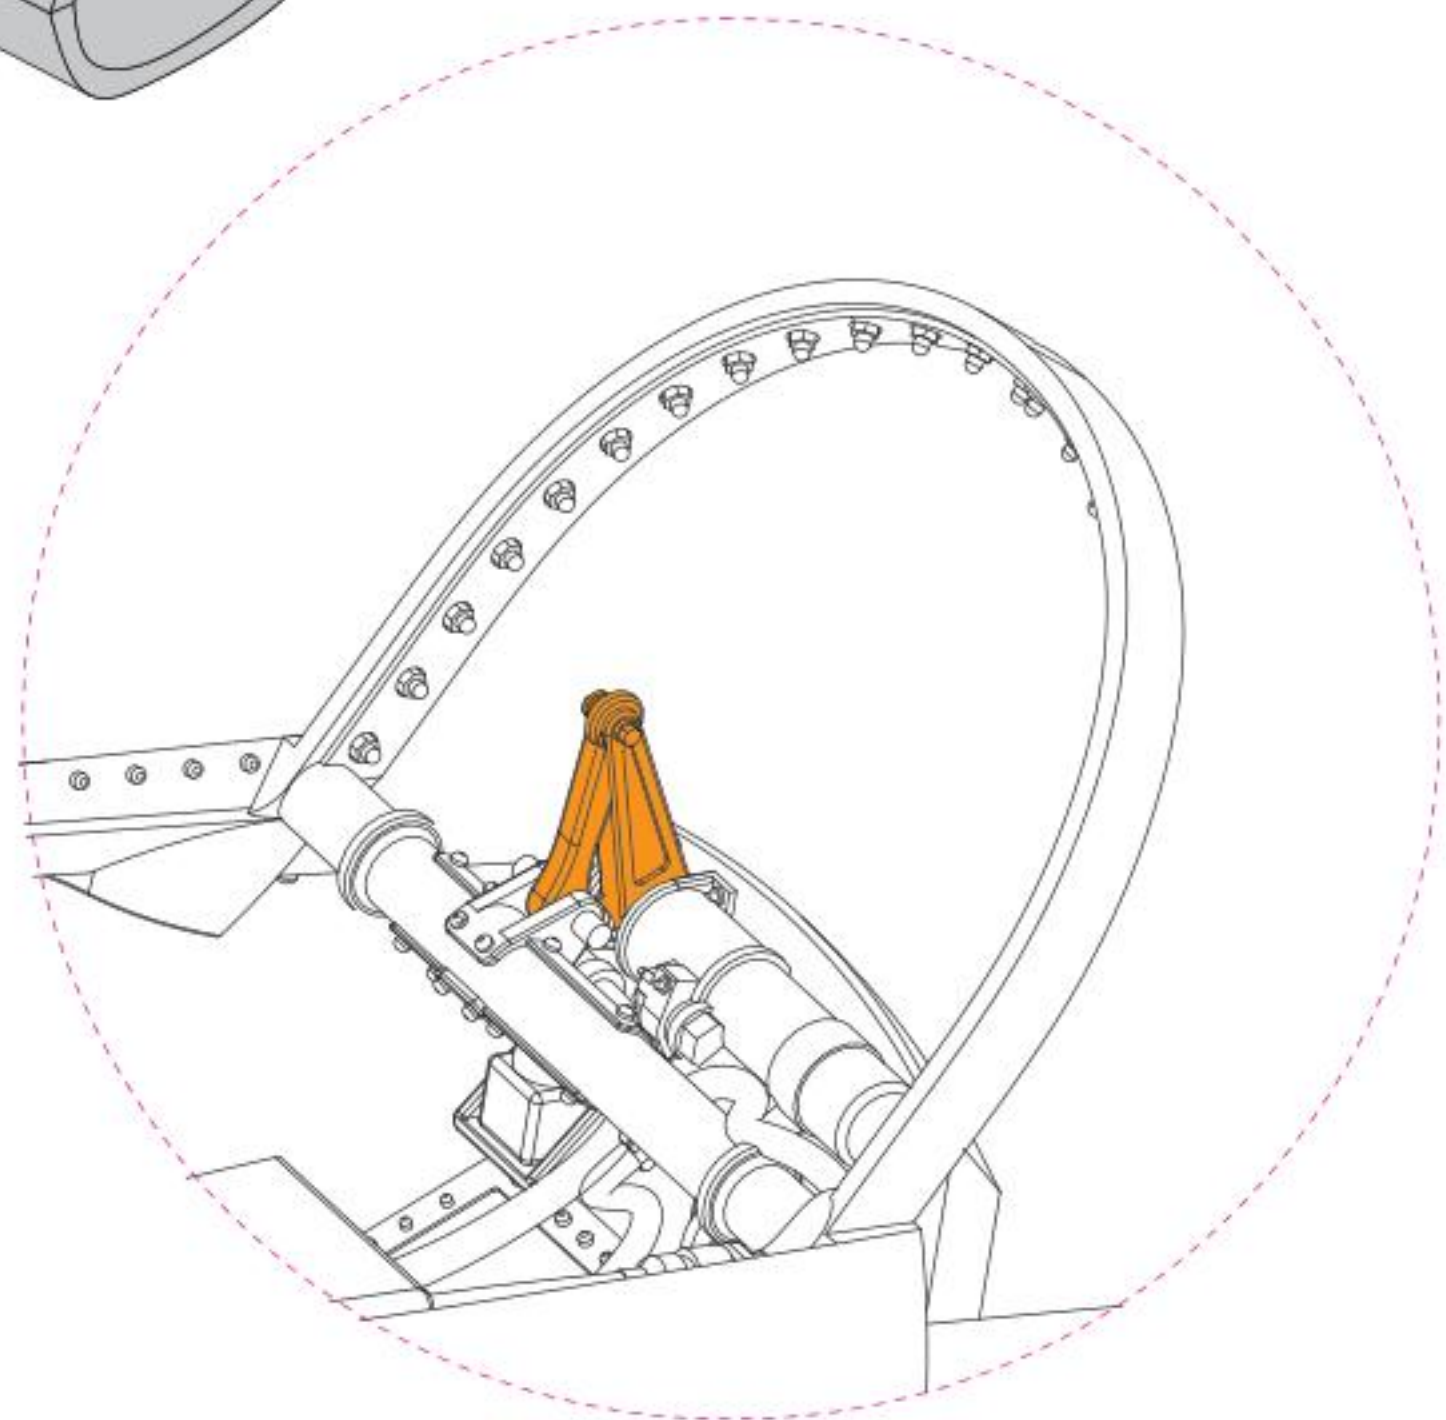

R13 FOR OPENED CANOPY

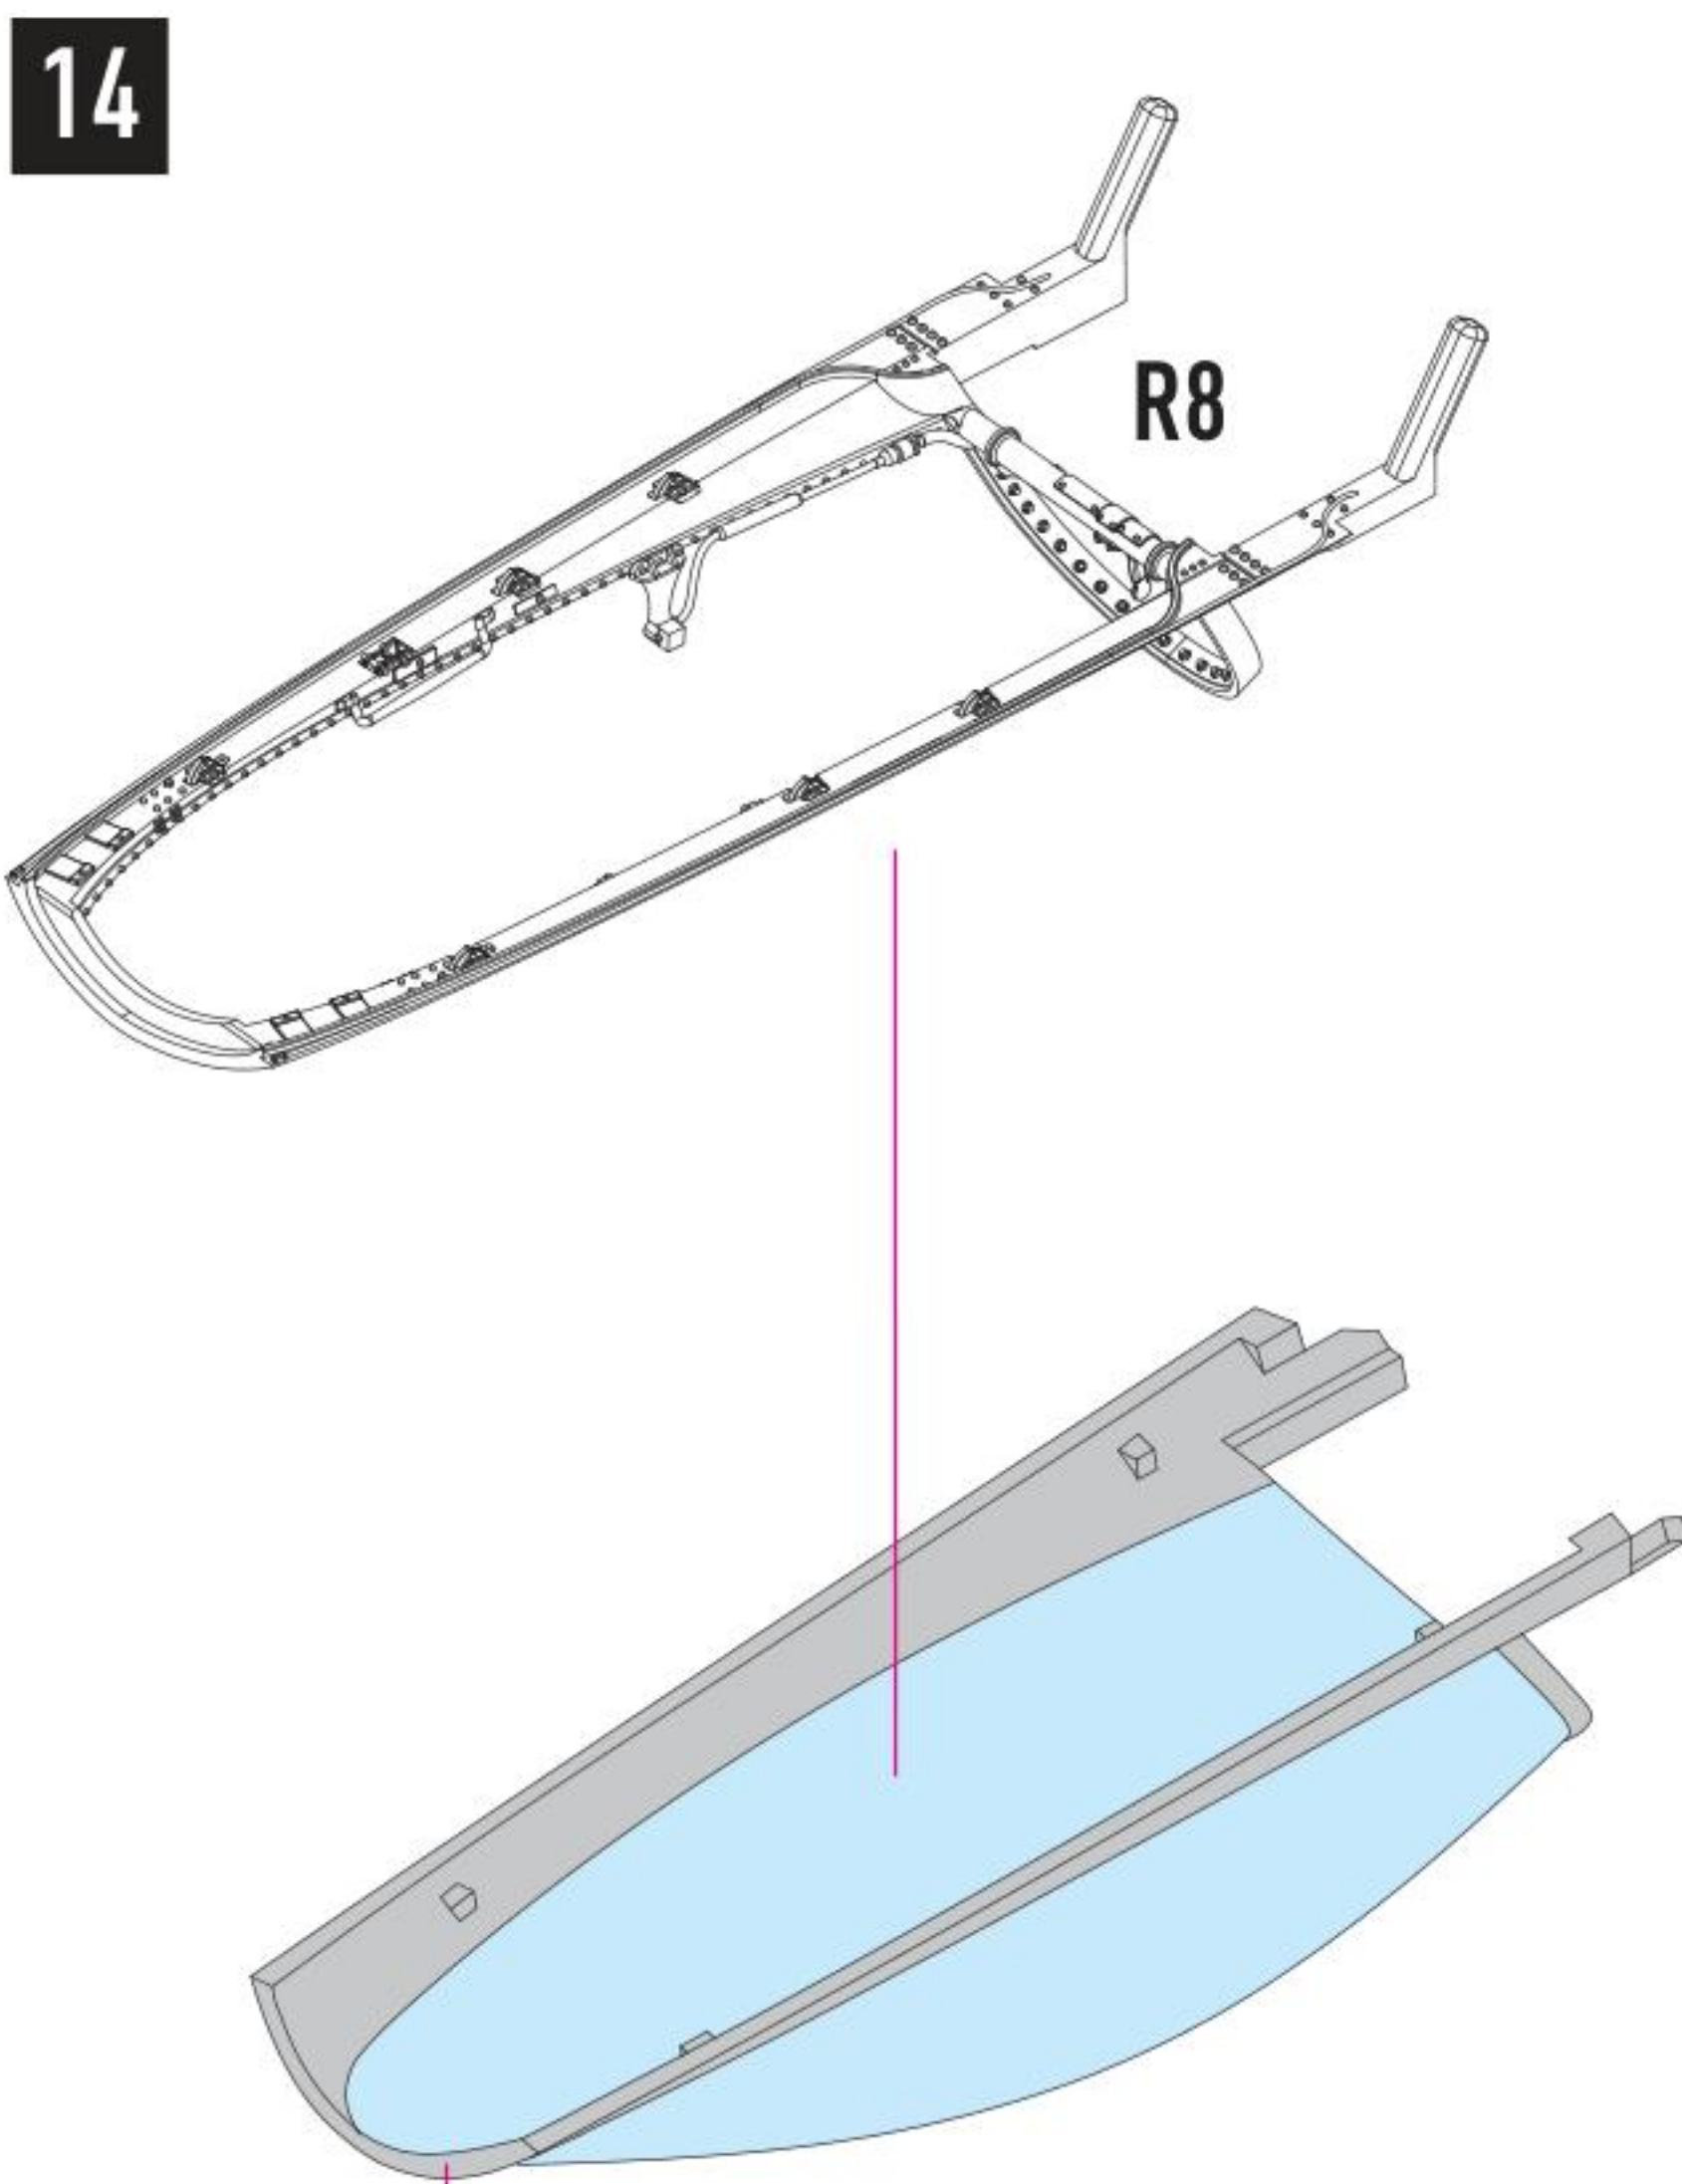

PART N1 FROM TAMIYA KIT

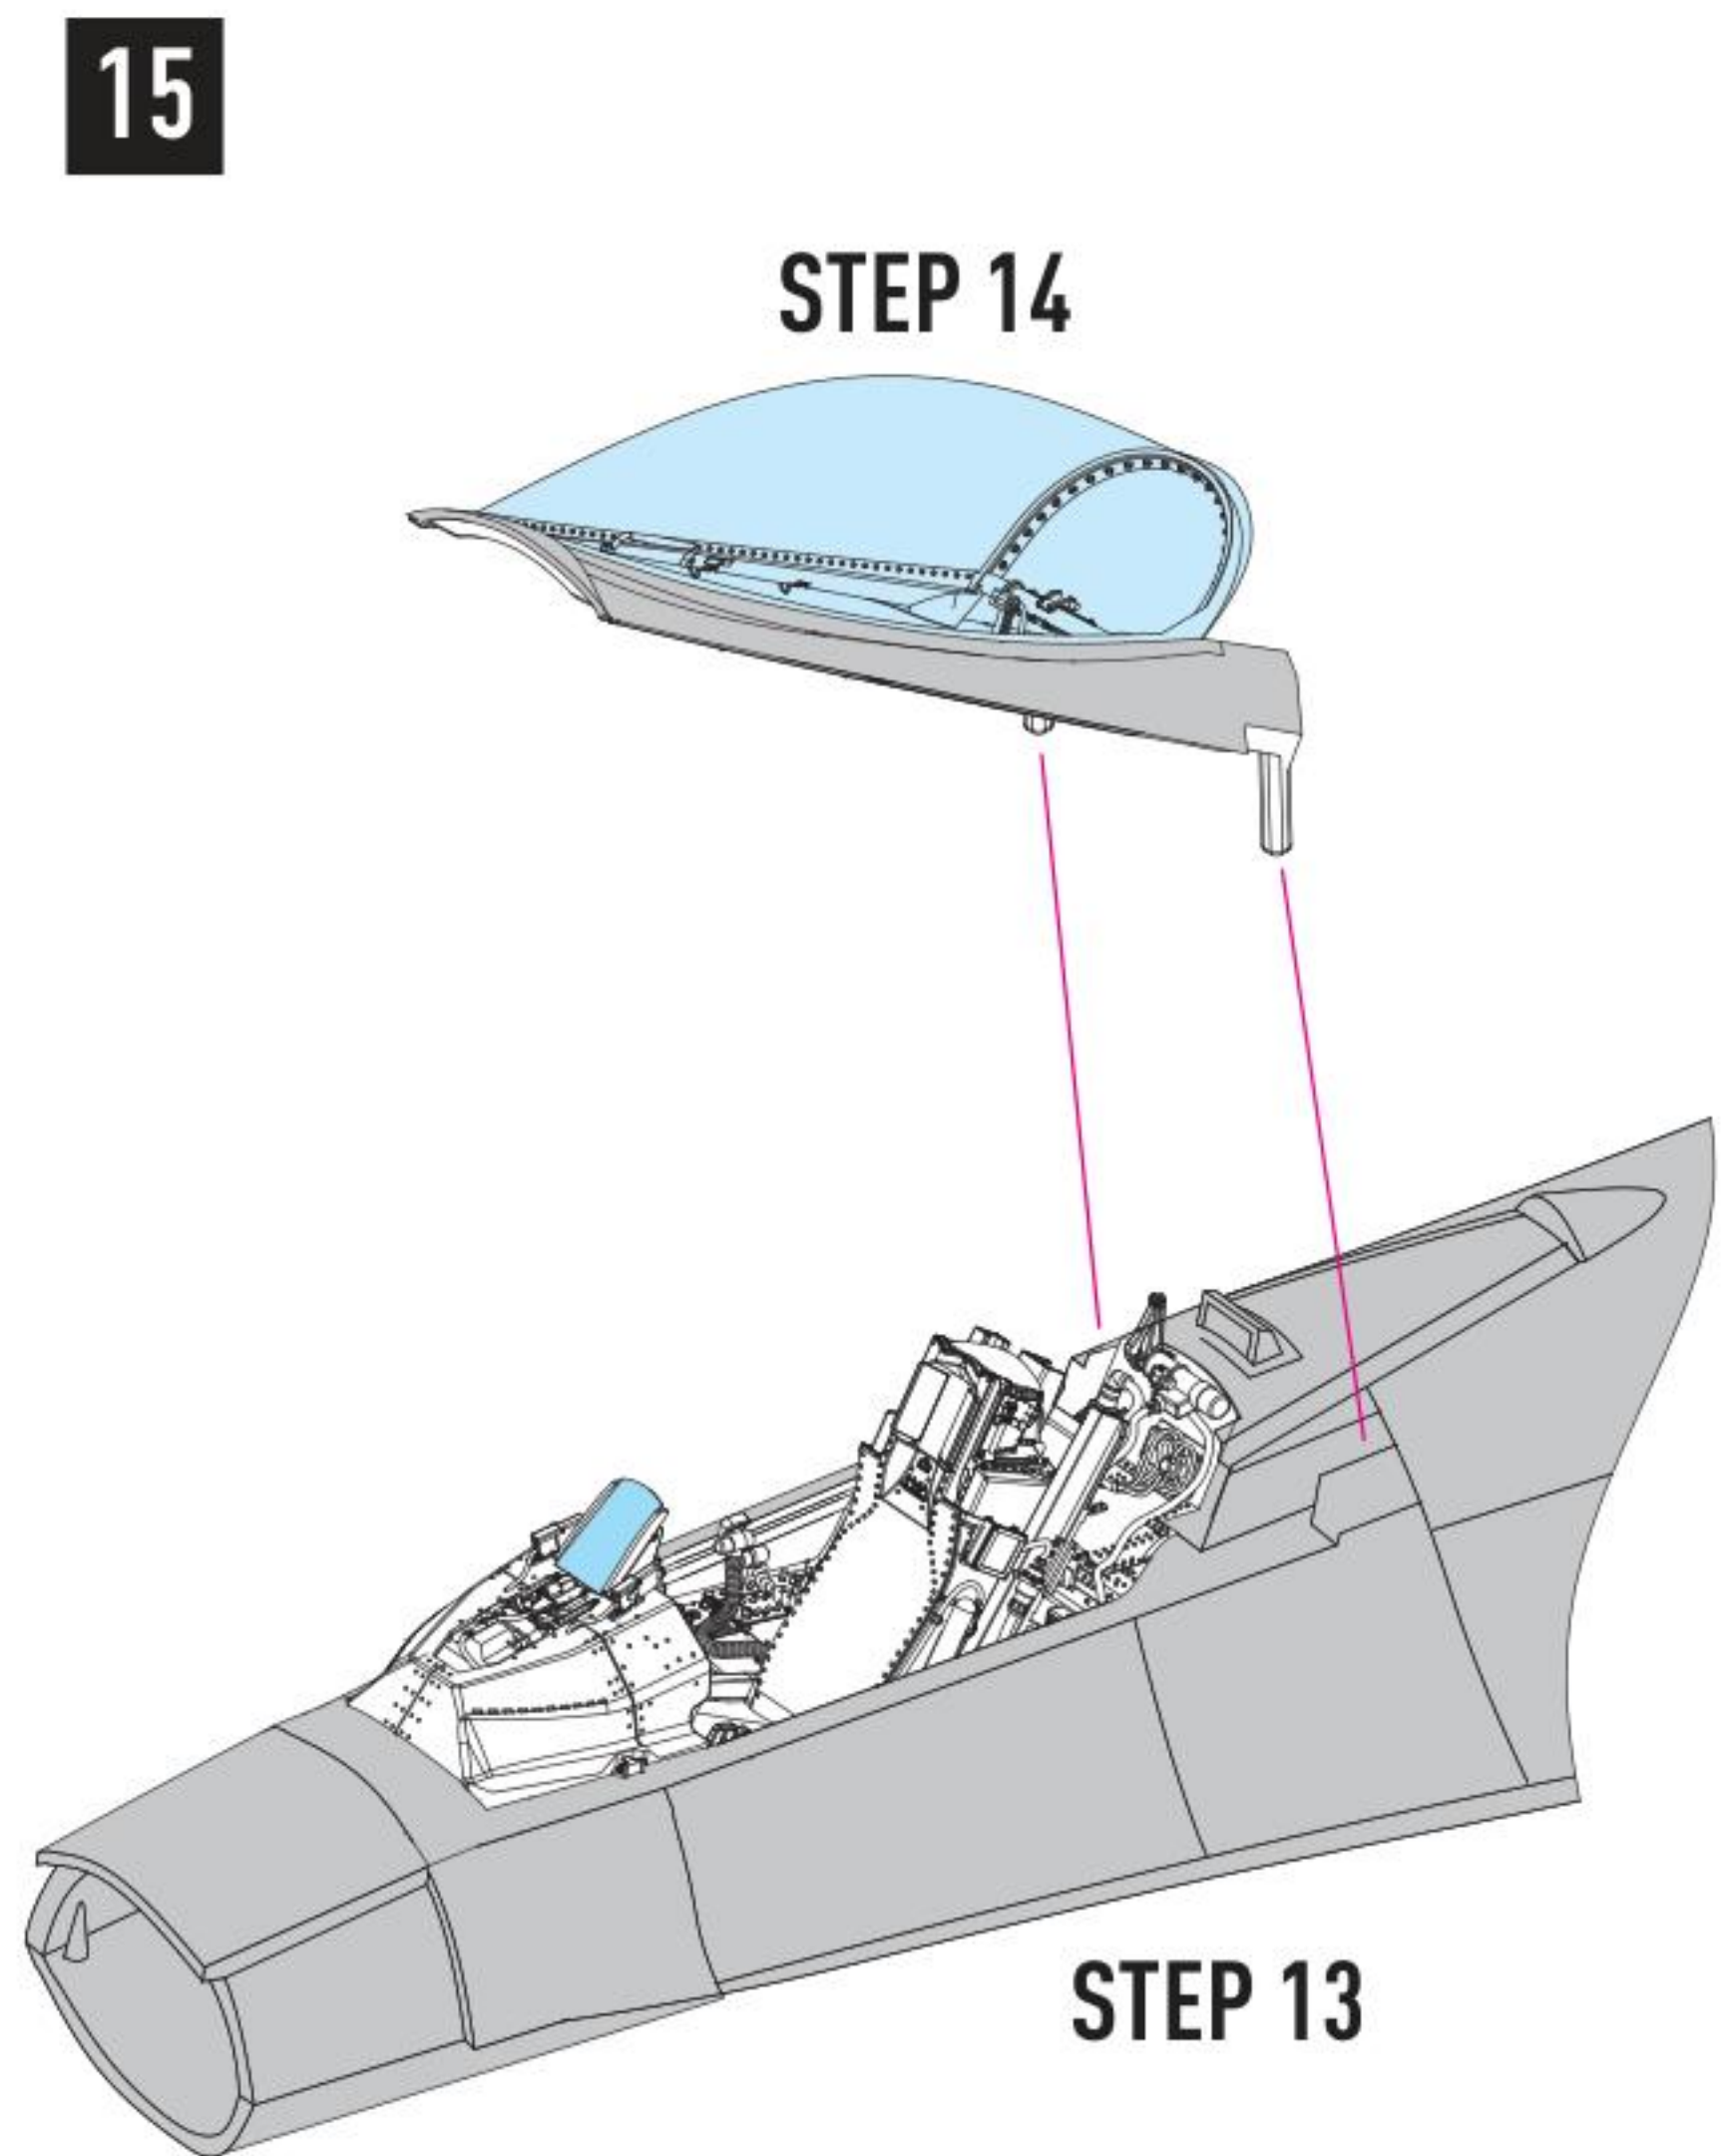

DECAL INSTRUCTION

