



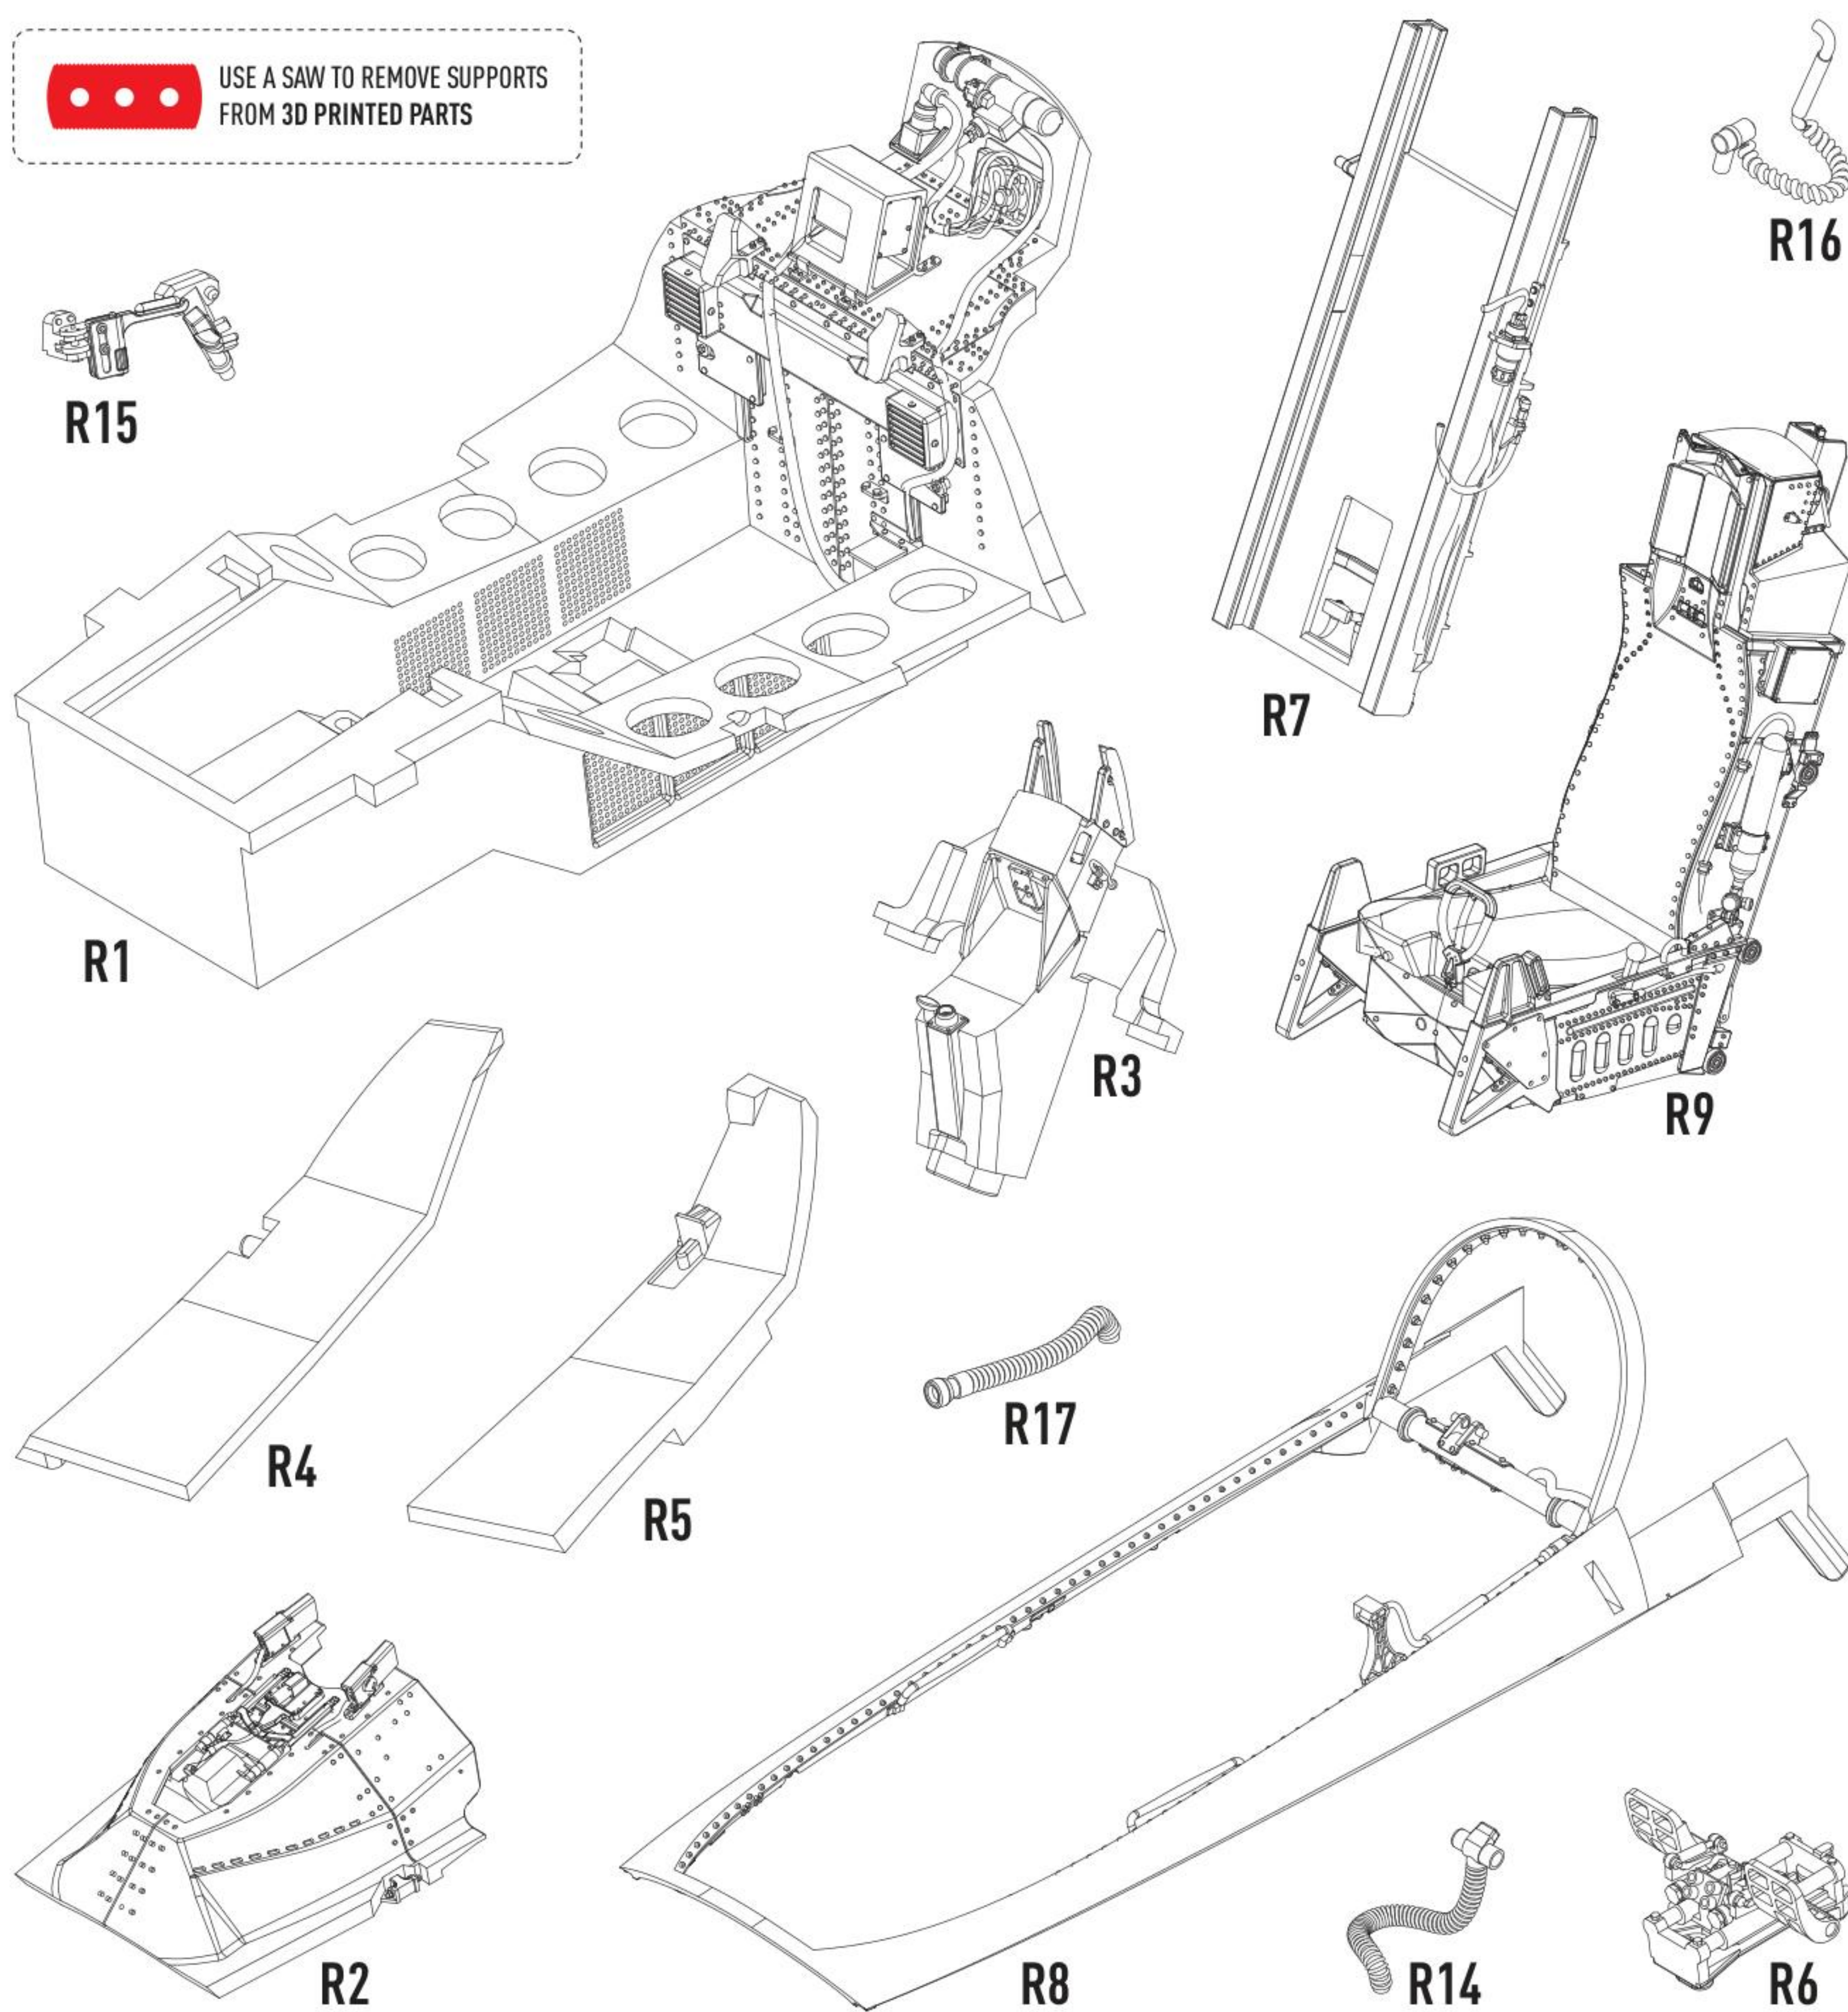


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

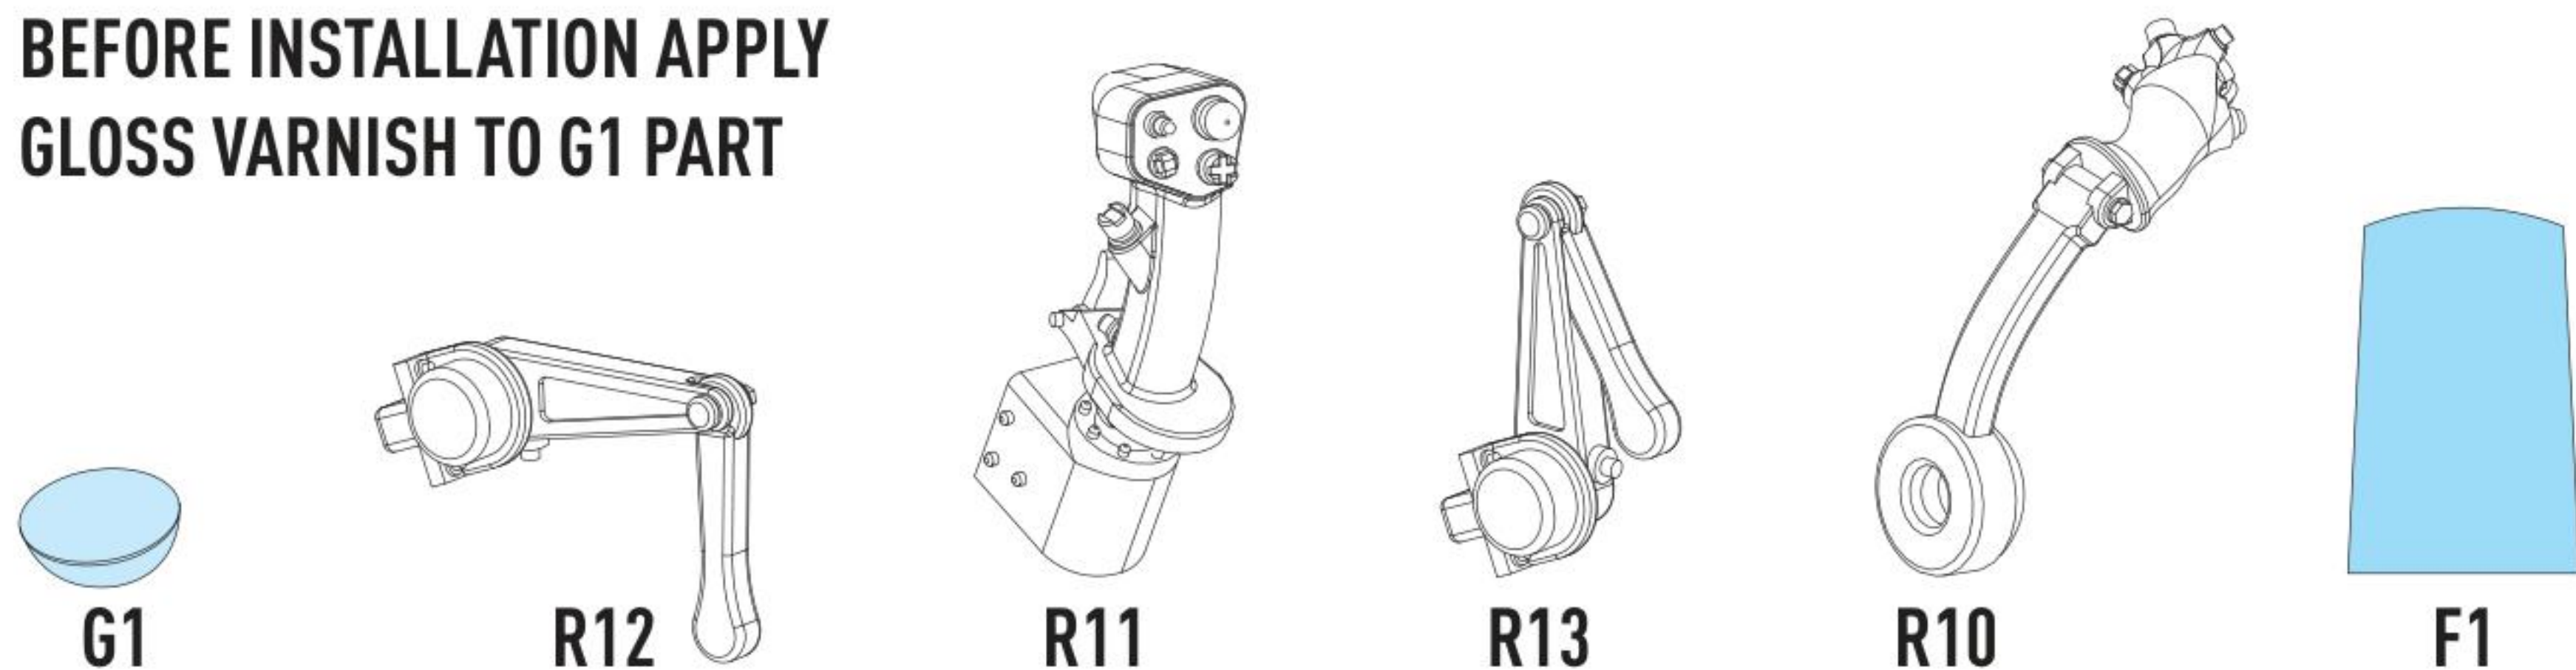


BEFORE INSTALLATION APPLY
GLOSS VARNISH TO G1 PART




3D-DECAL INSTRUCTION

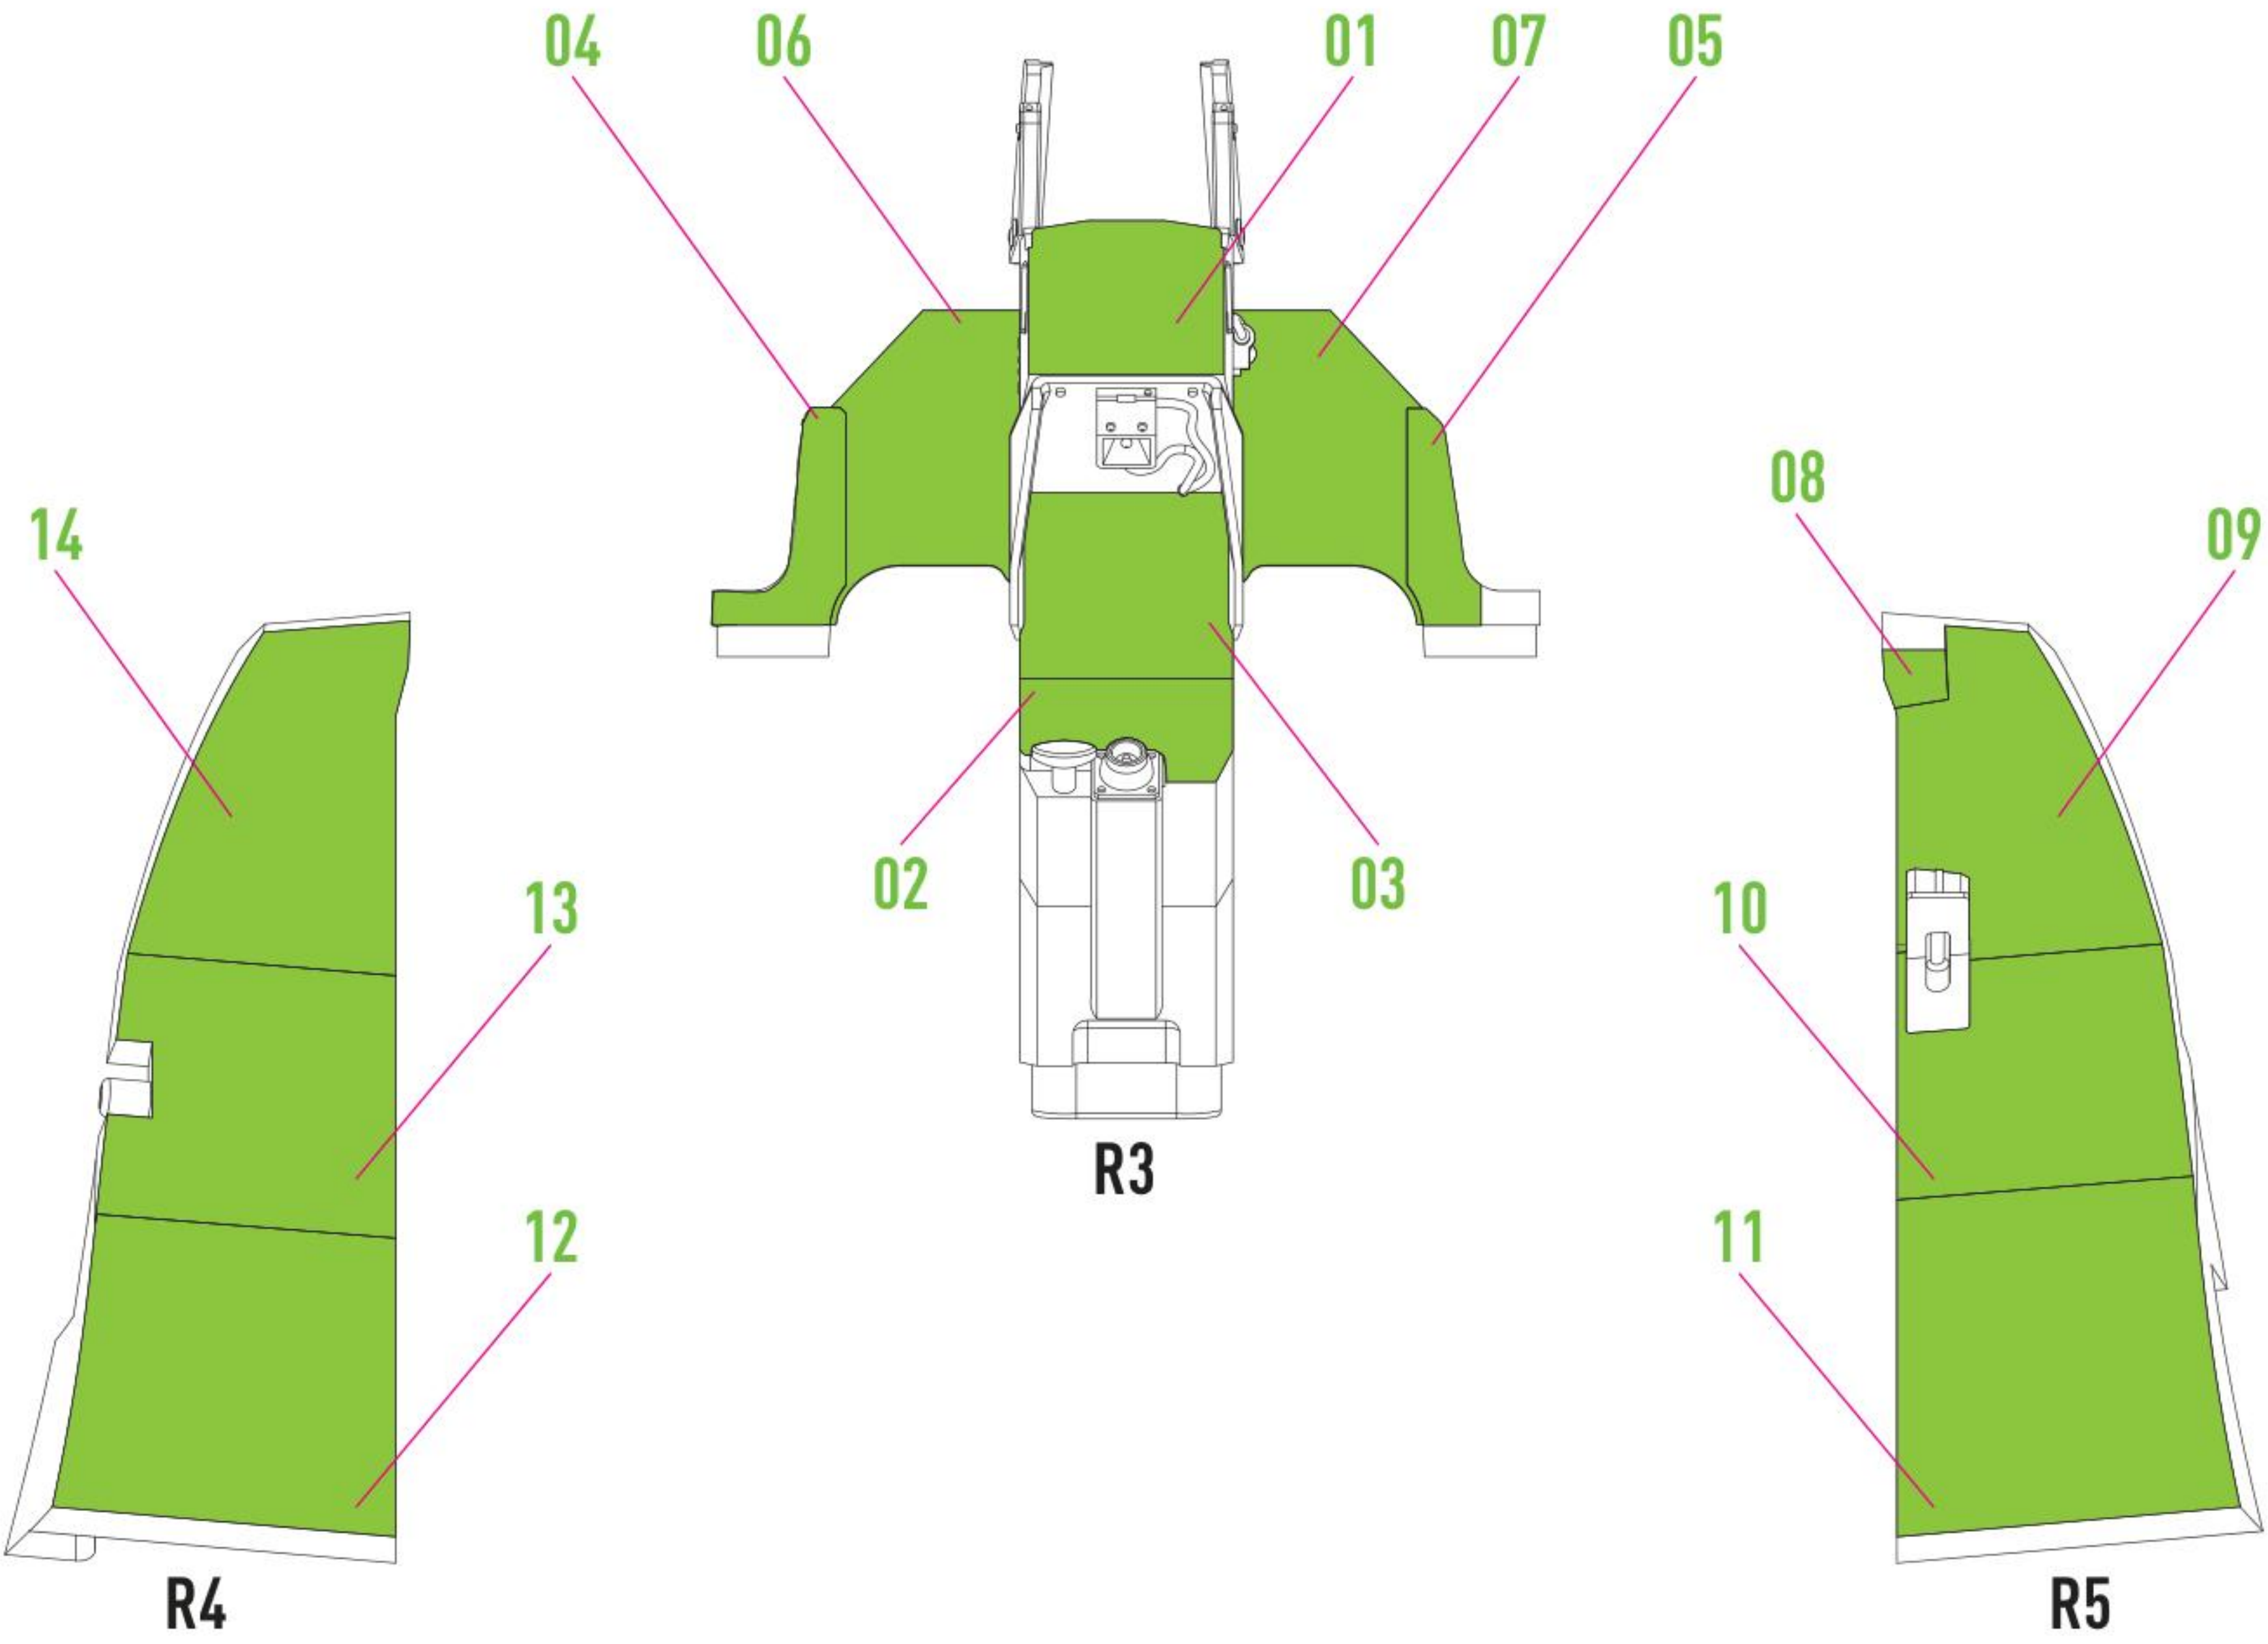


1

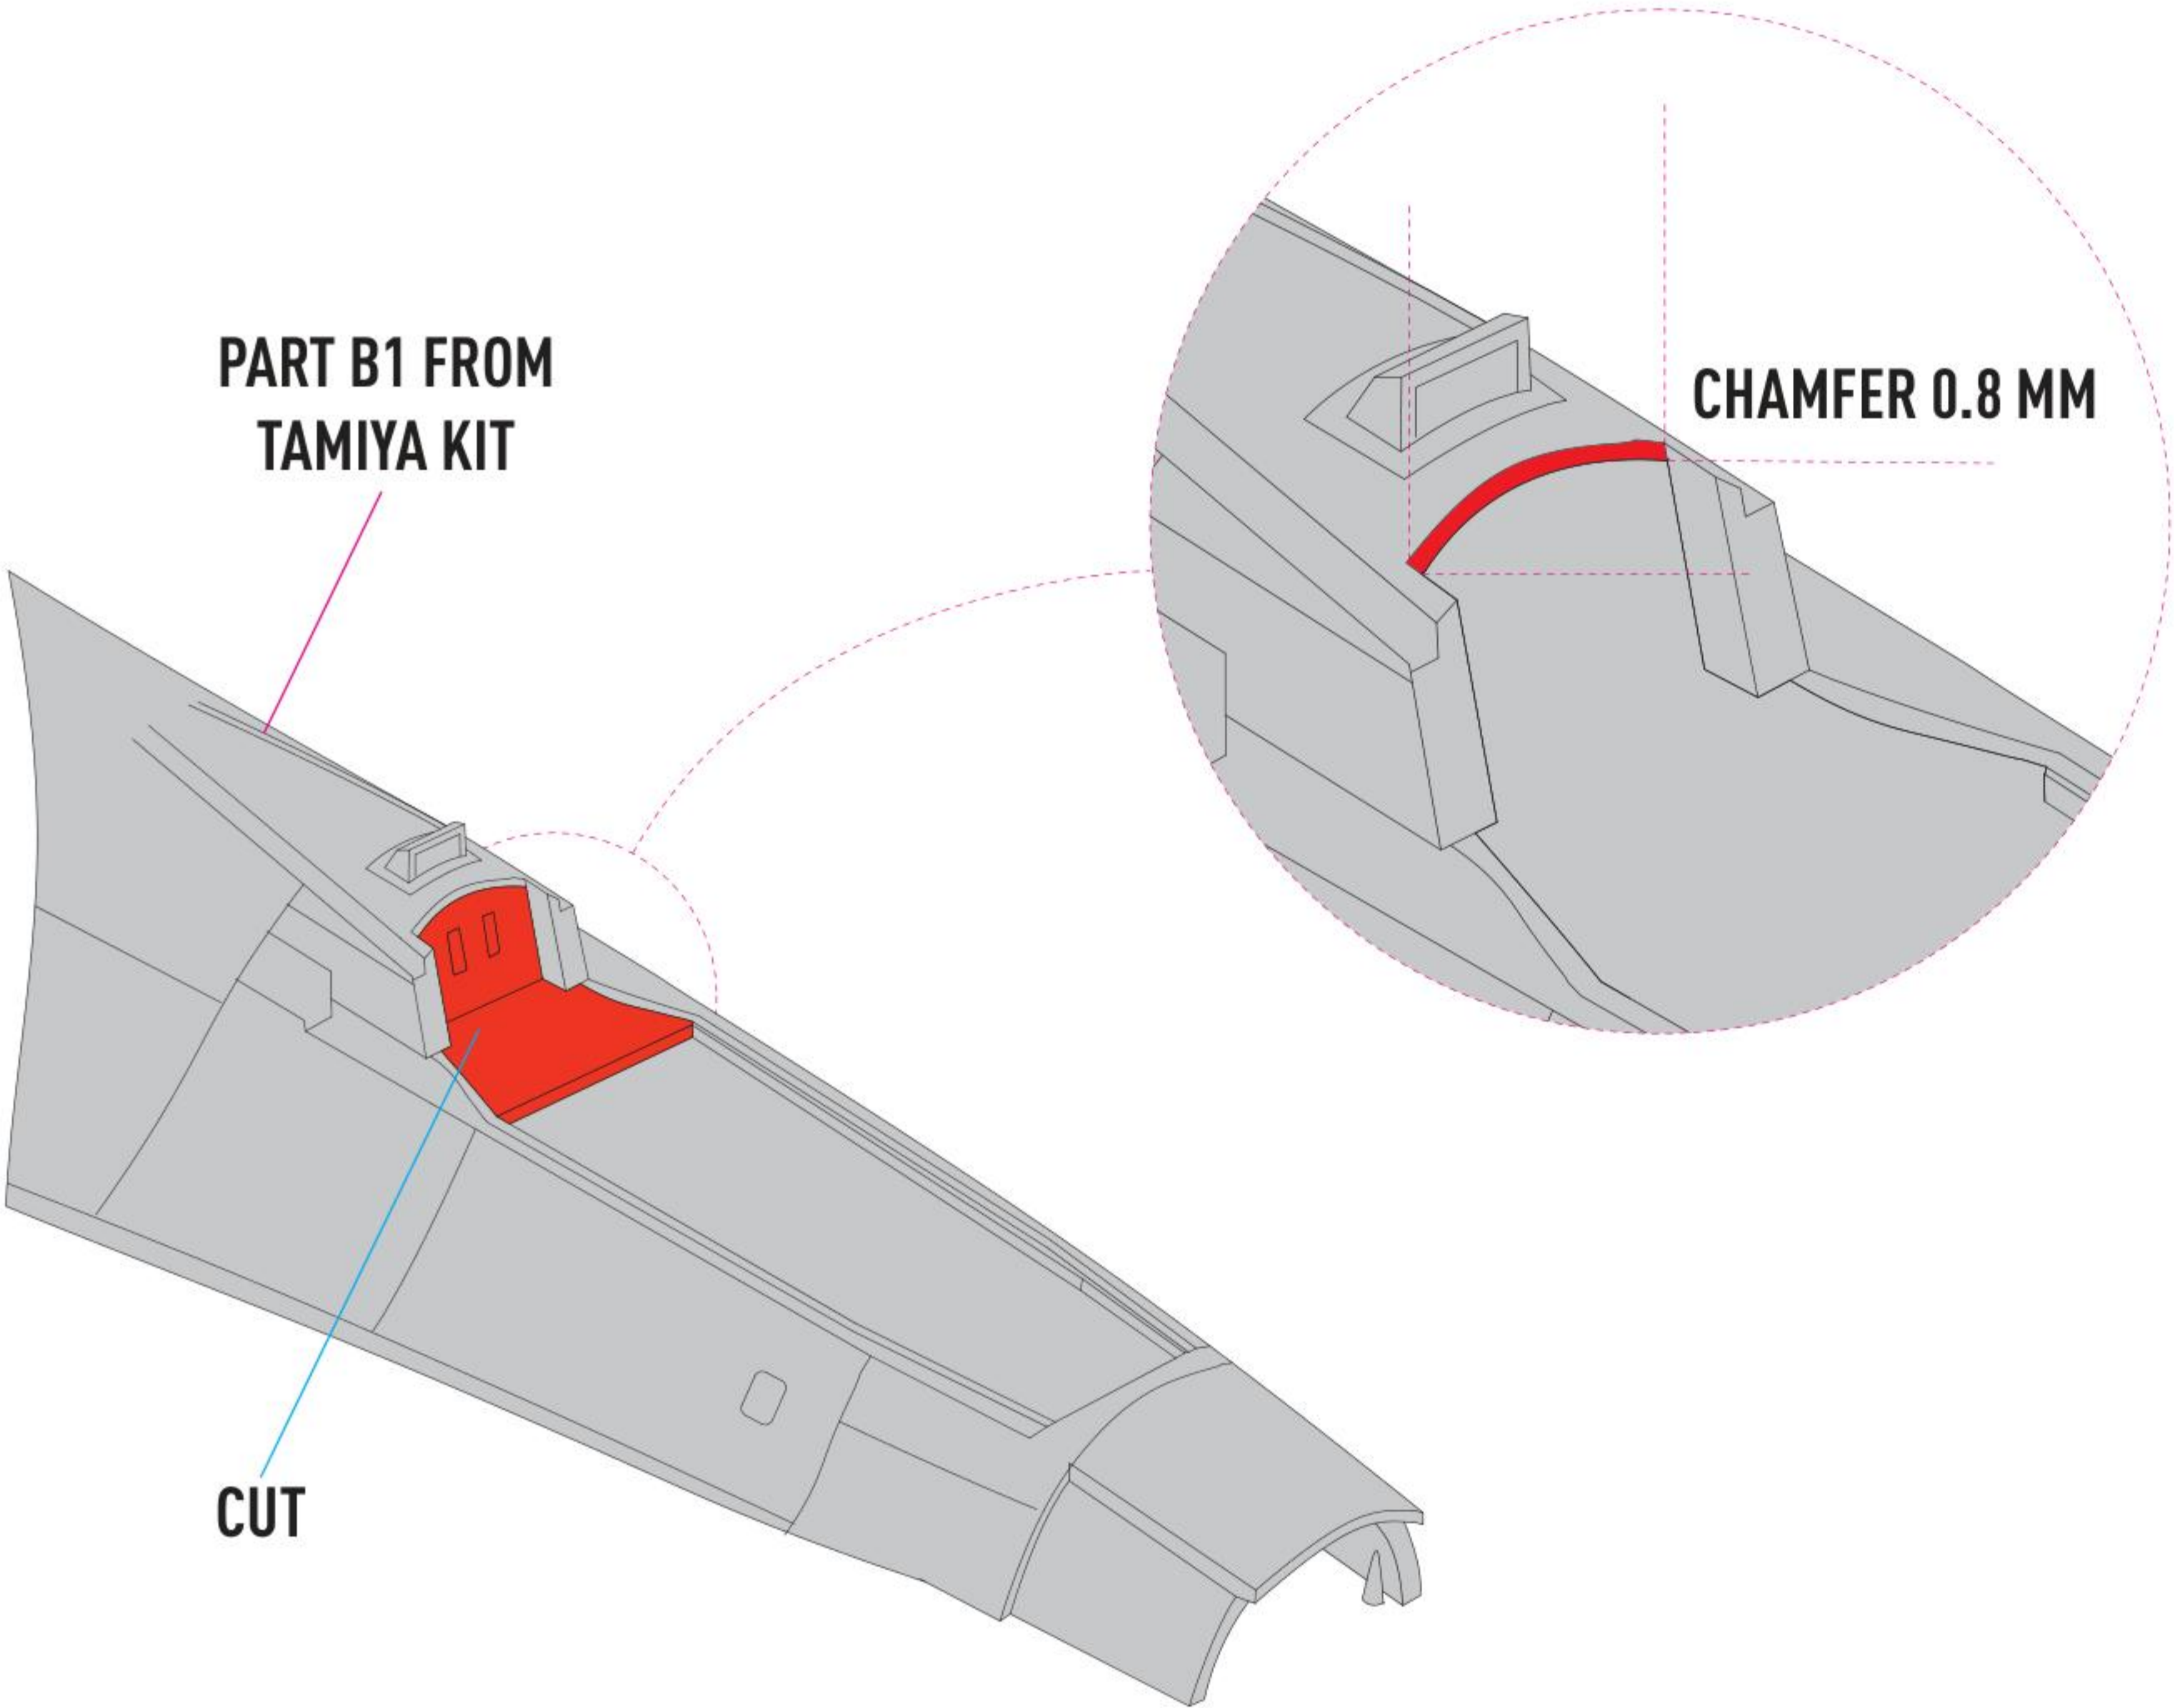

2

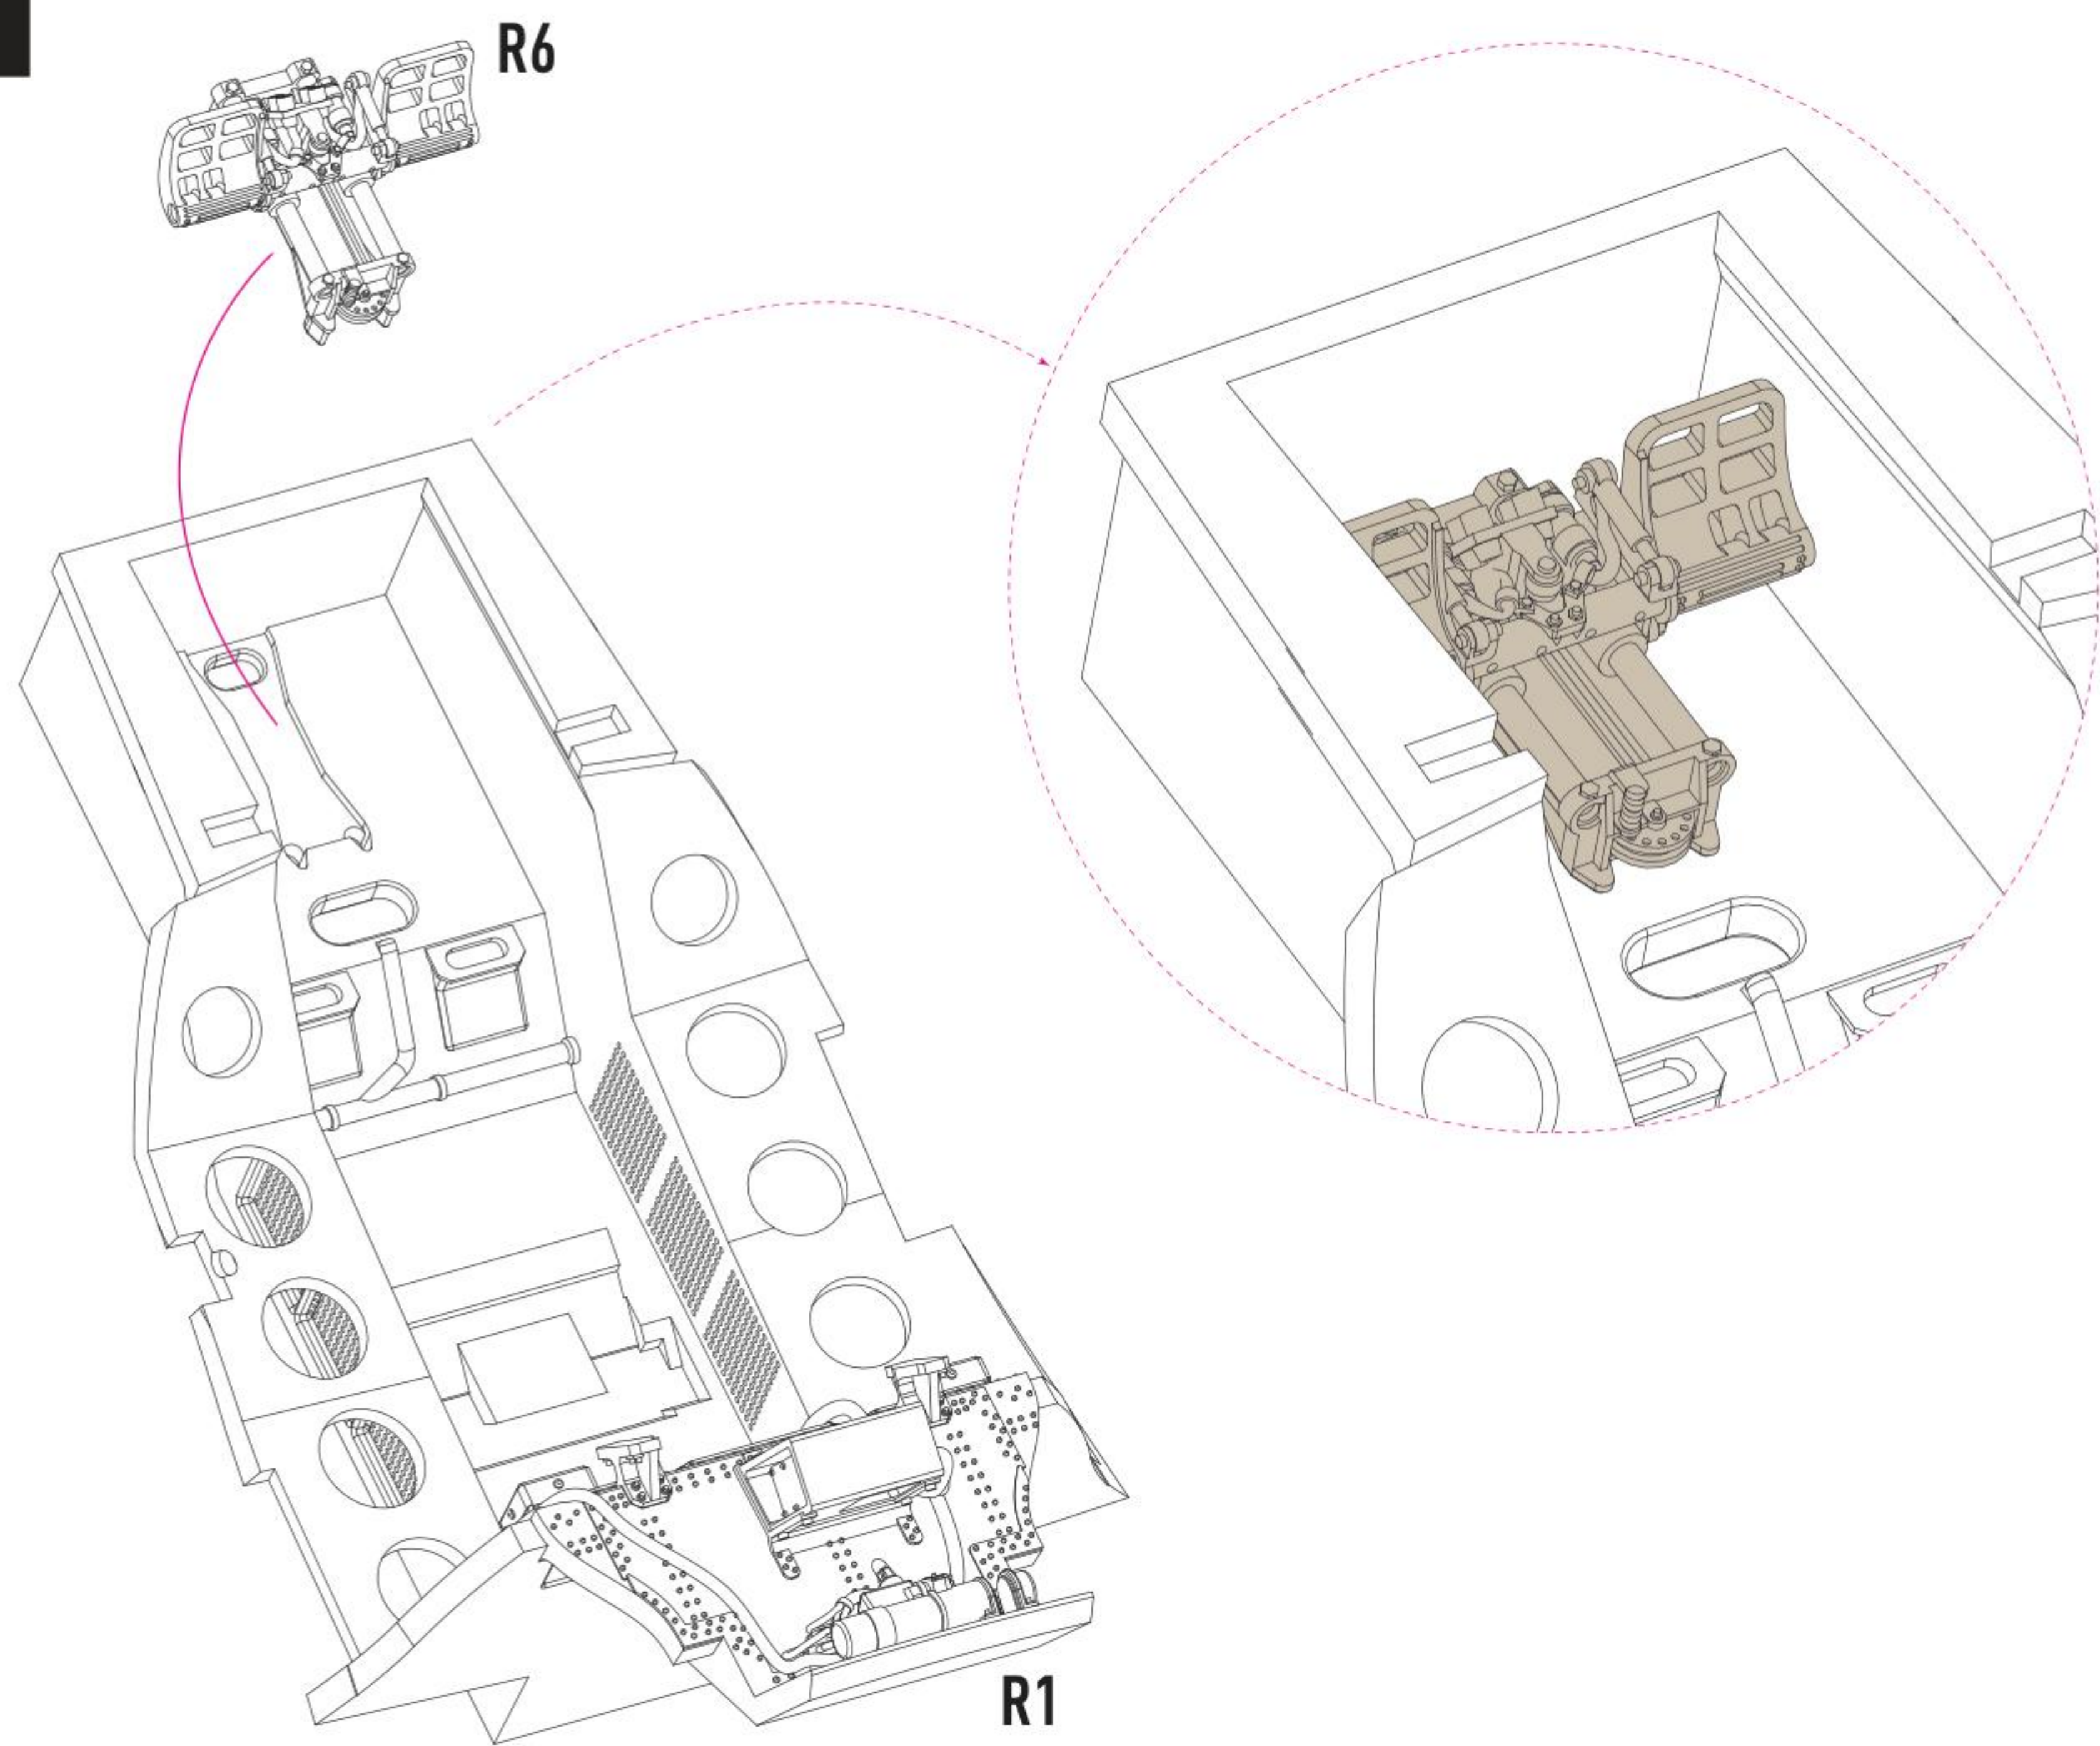

3

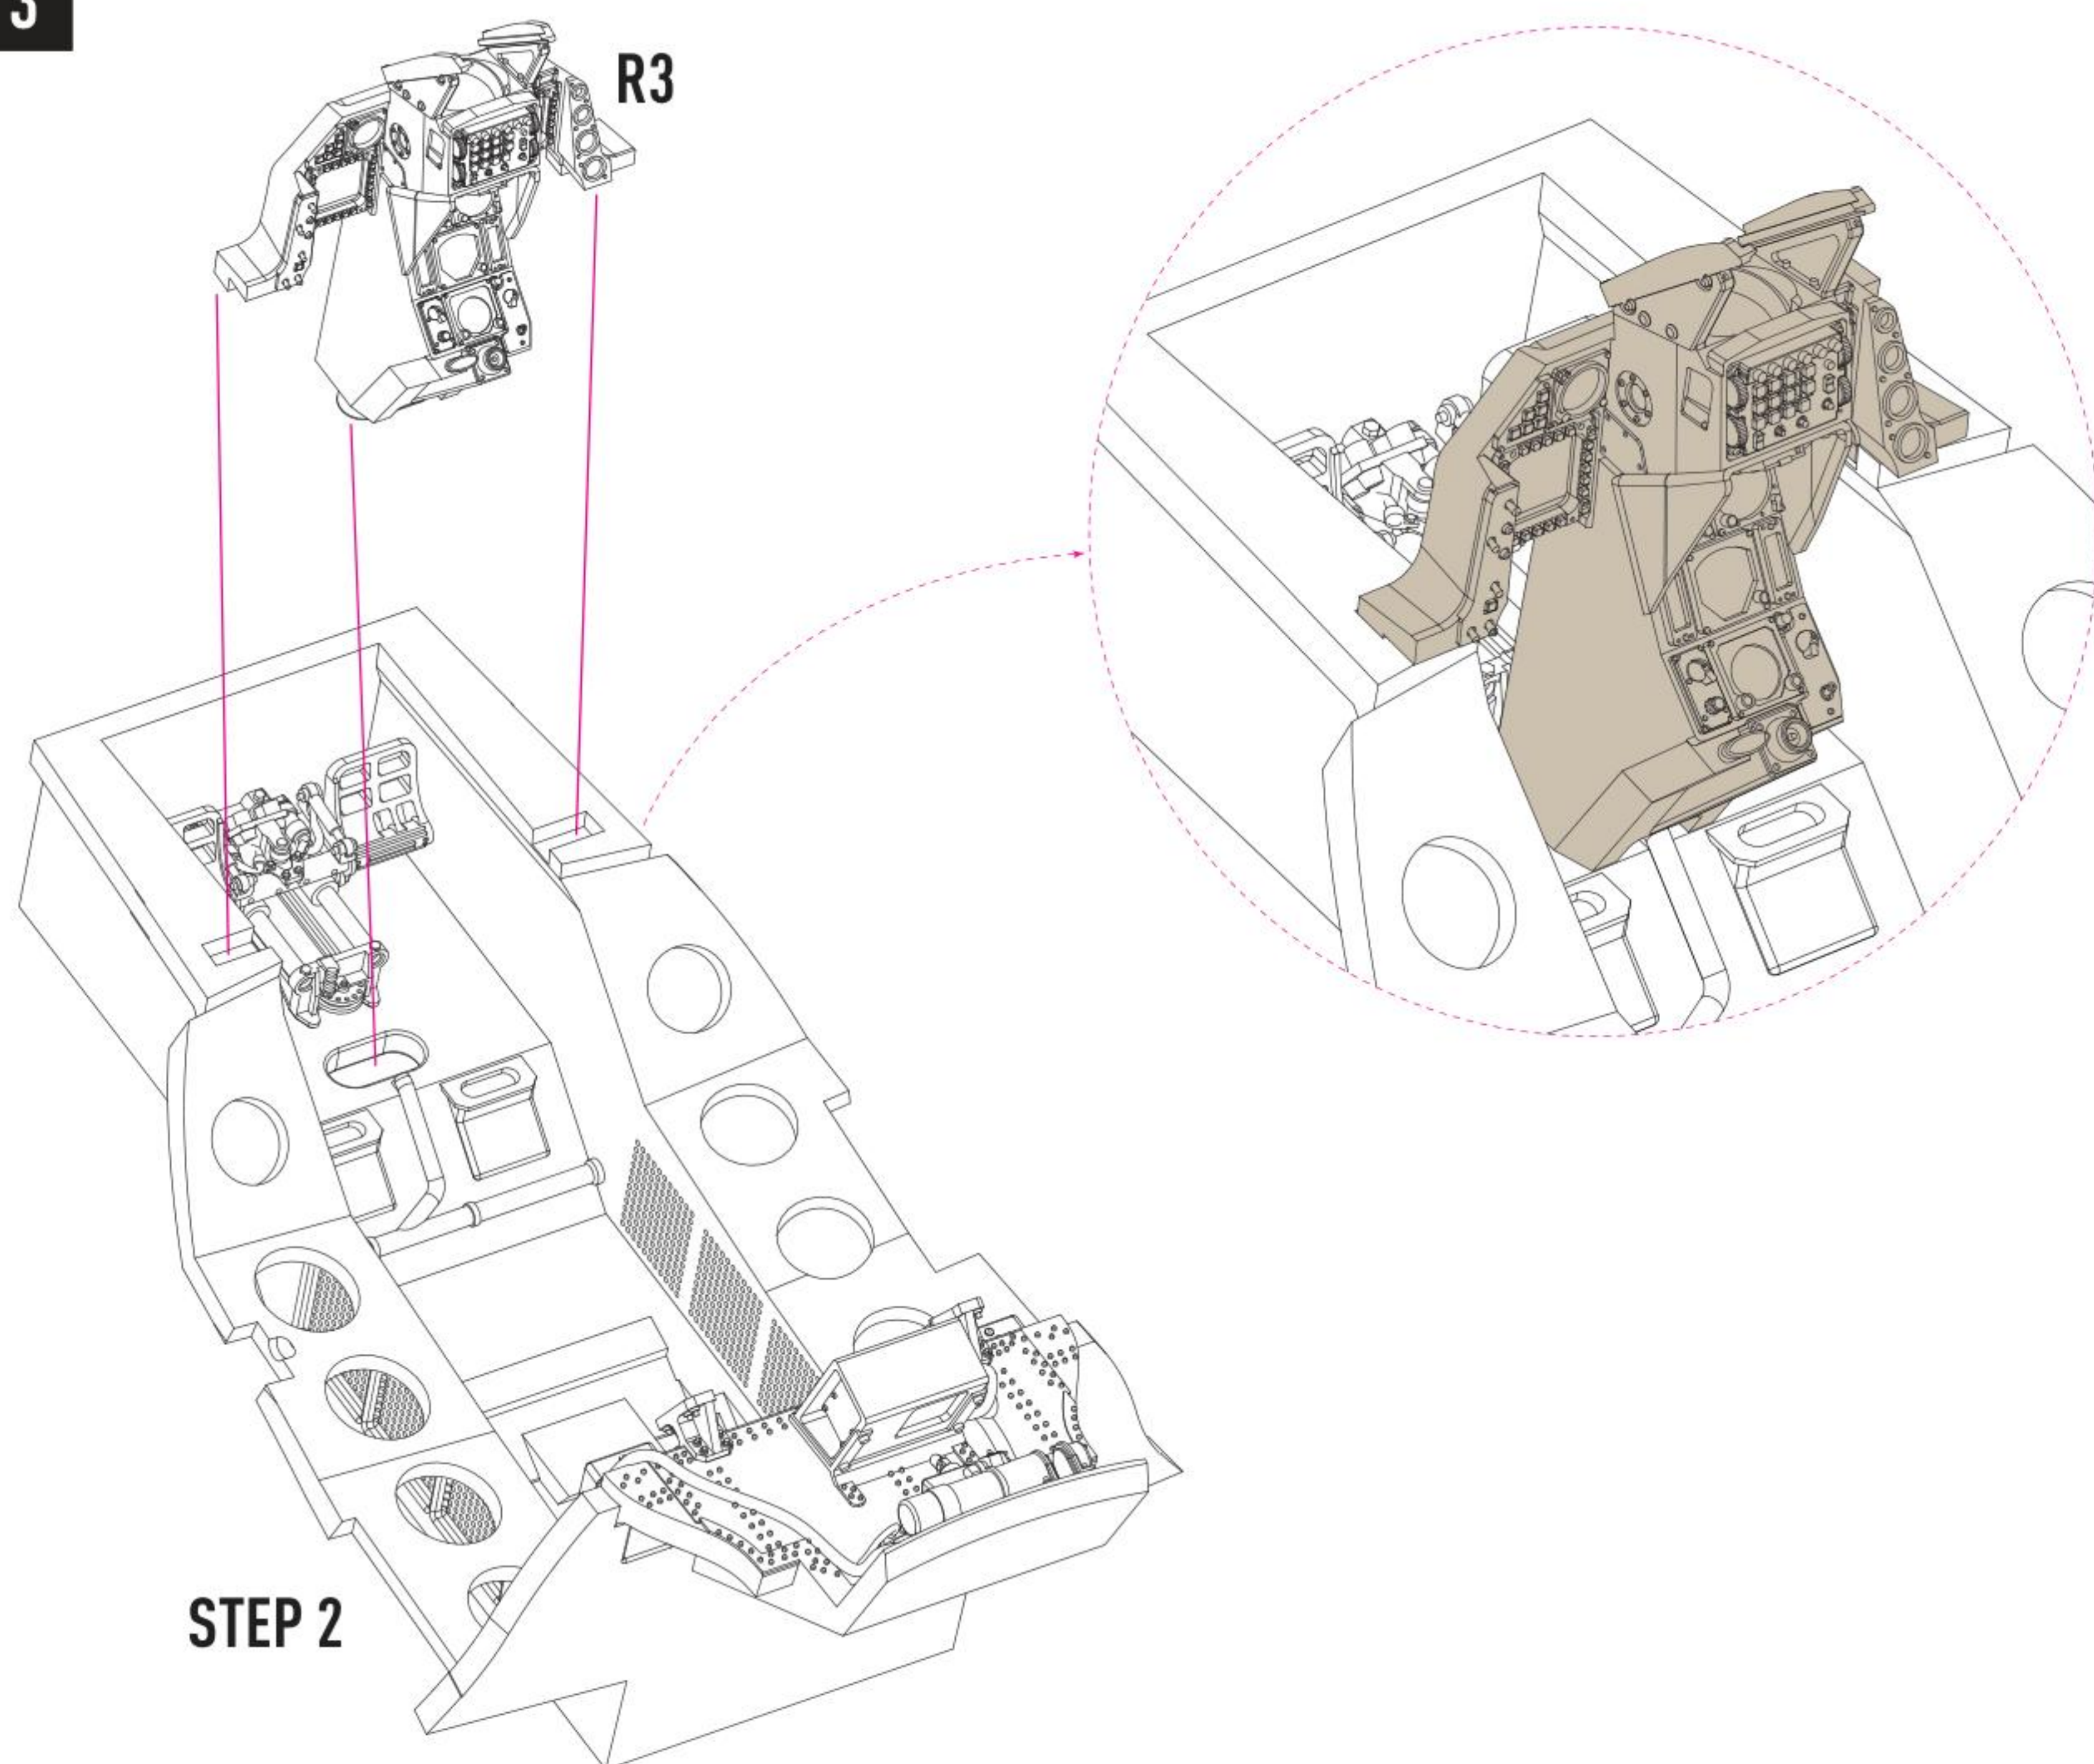

4


STEP 3

R5

R4

R17
?

USE R17 AS AN ADDITIONAL OPTION
FOR THE 3D DECAL ELEMENT

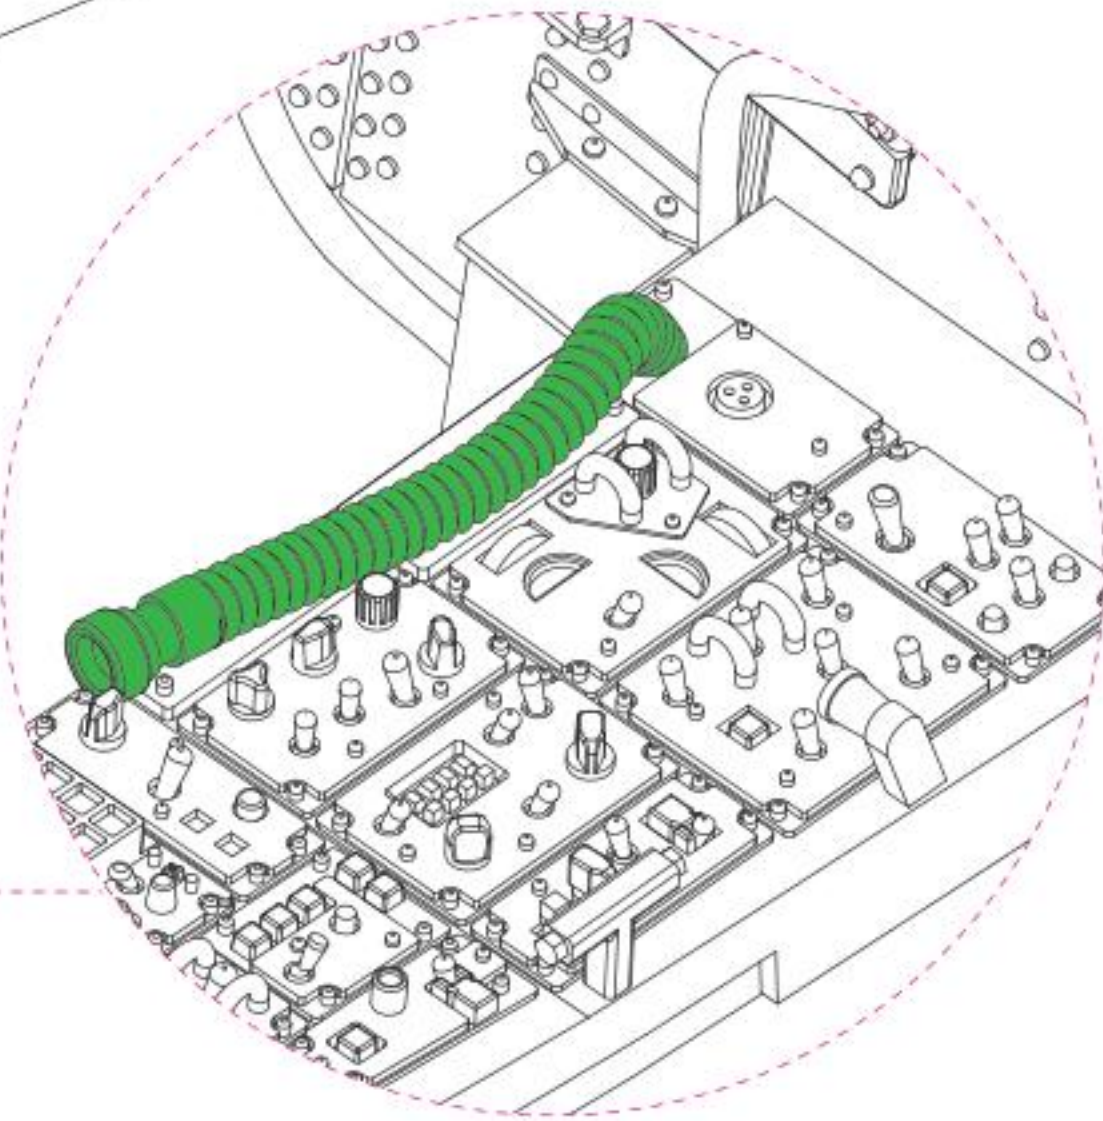




5

R11


R10

STEP 4

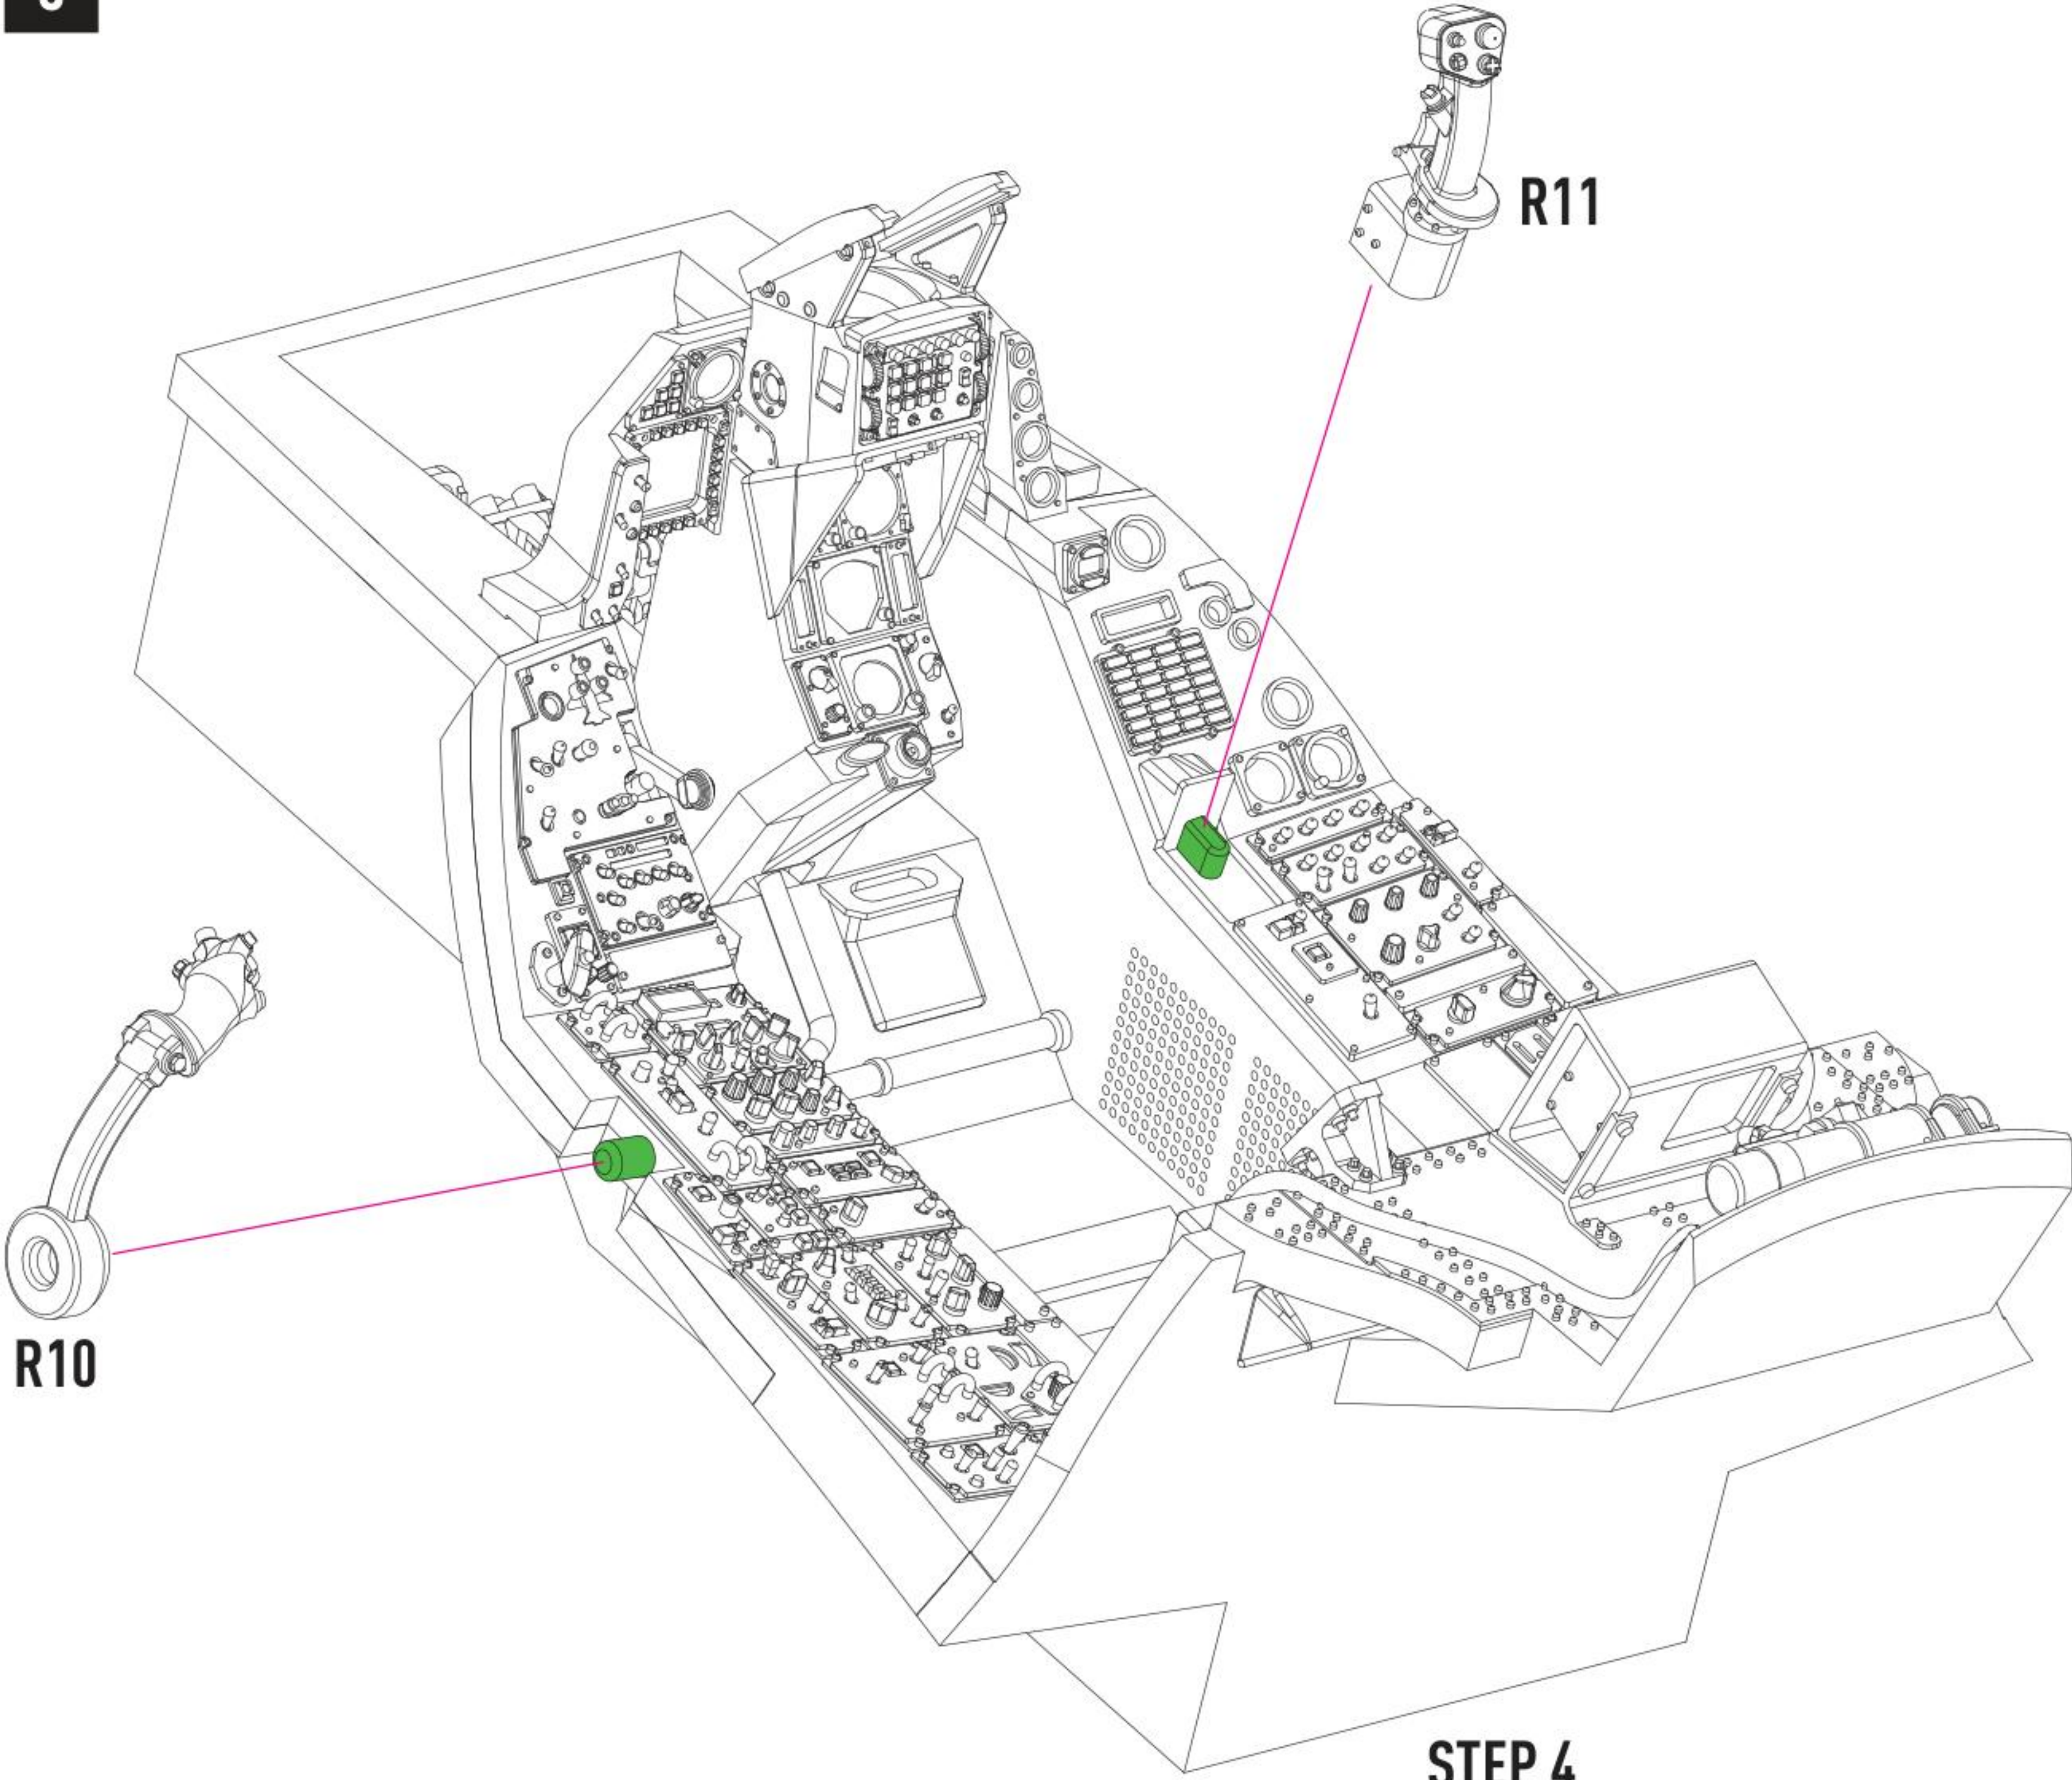


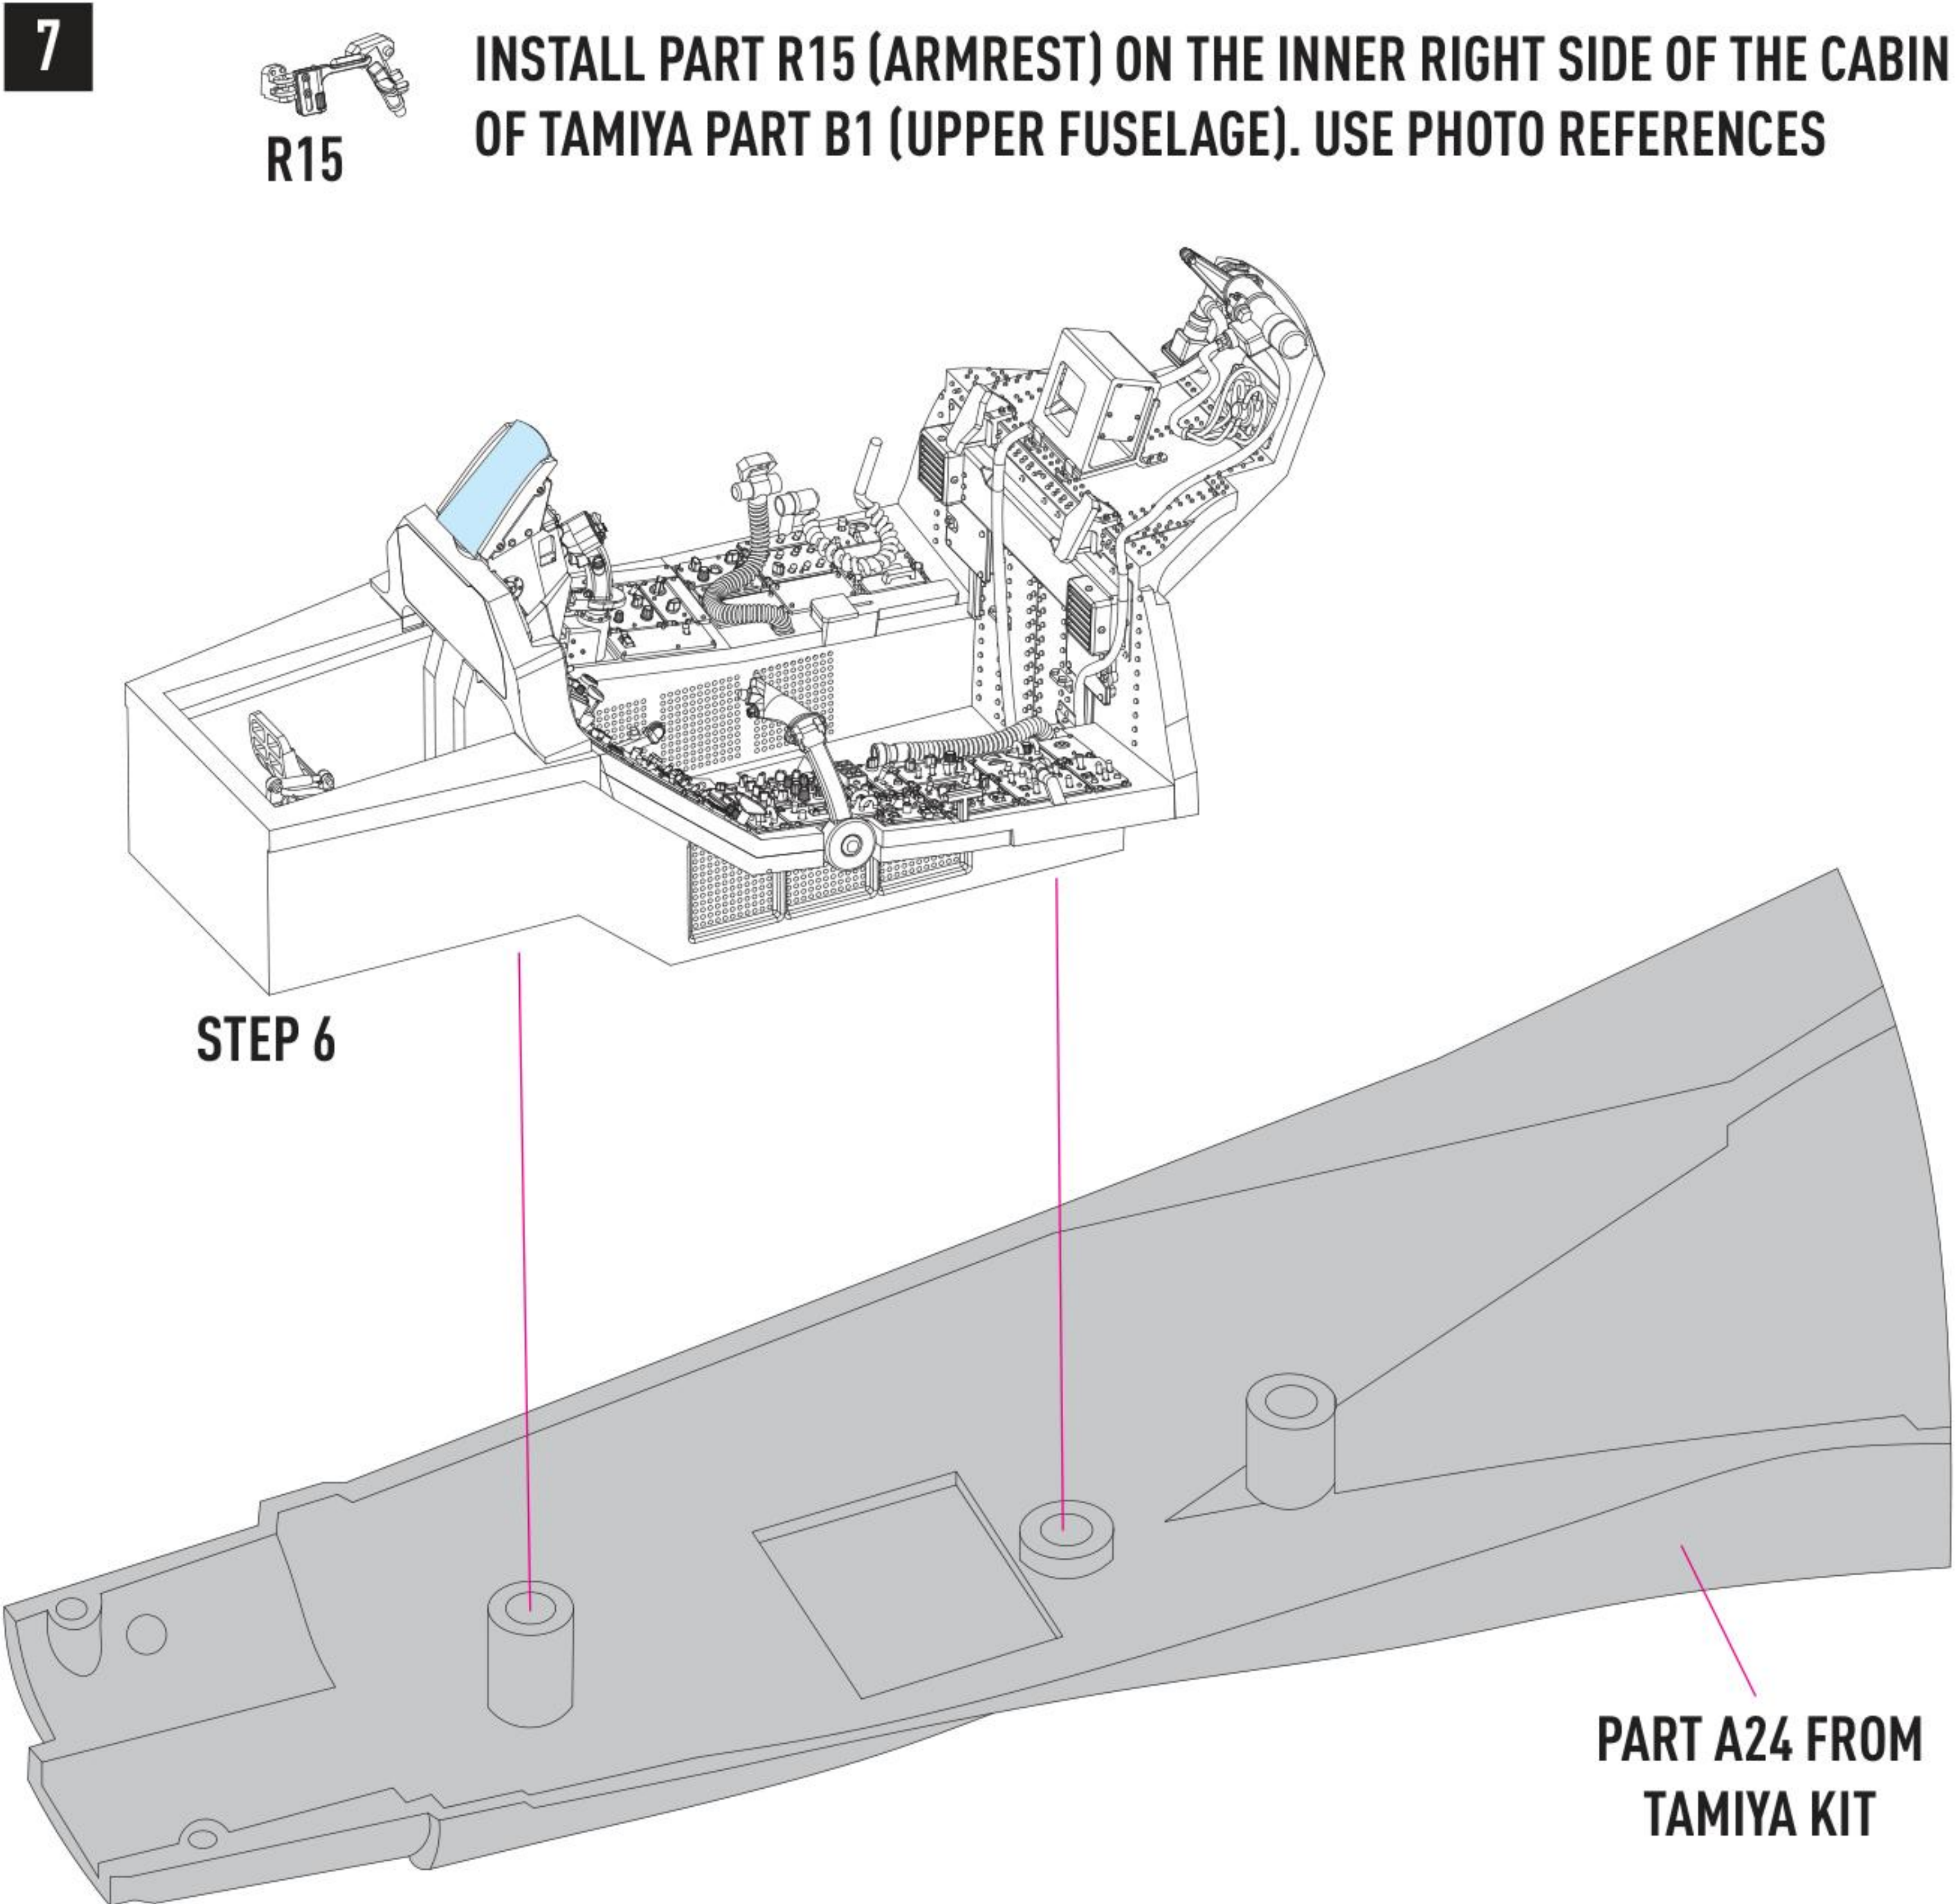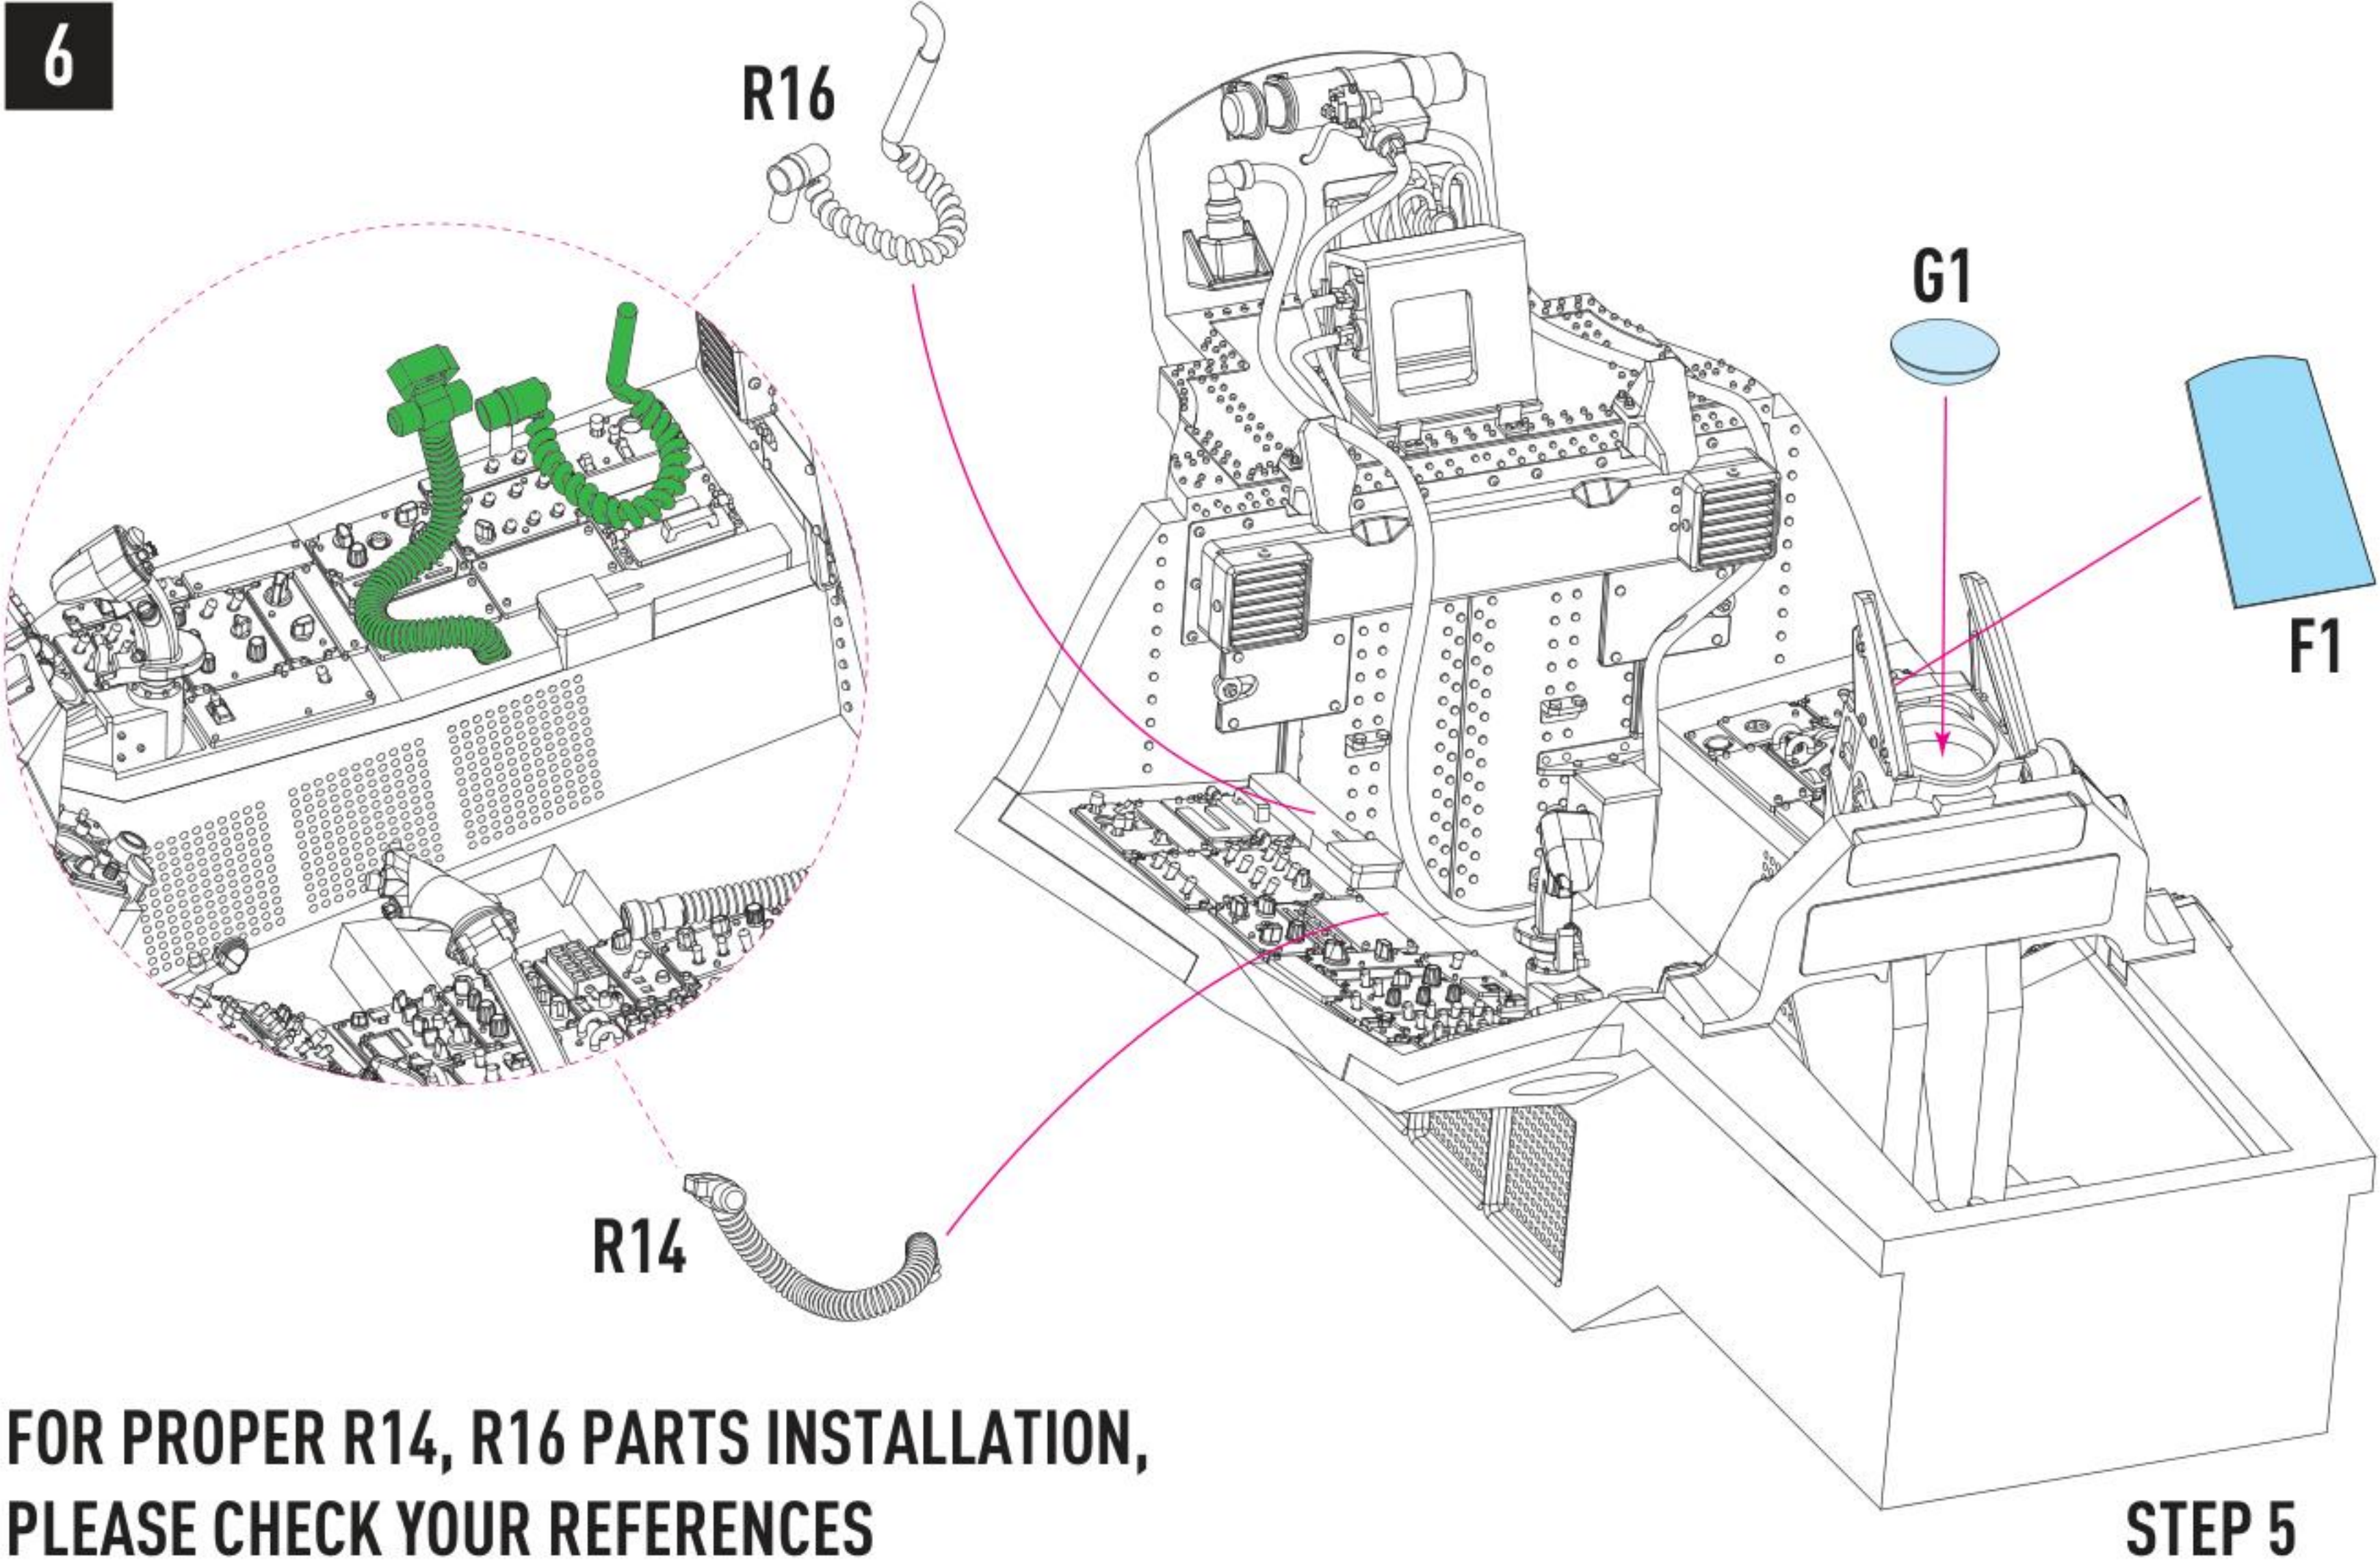


8

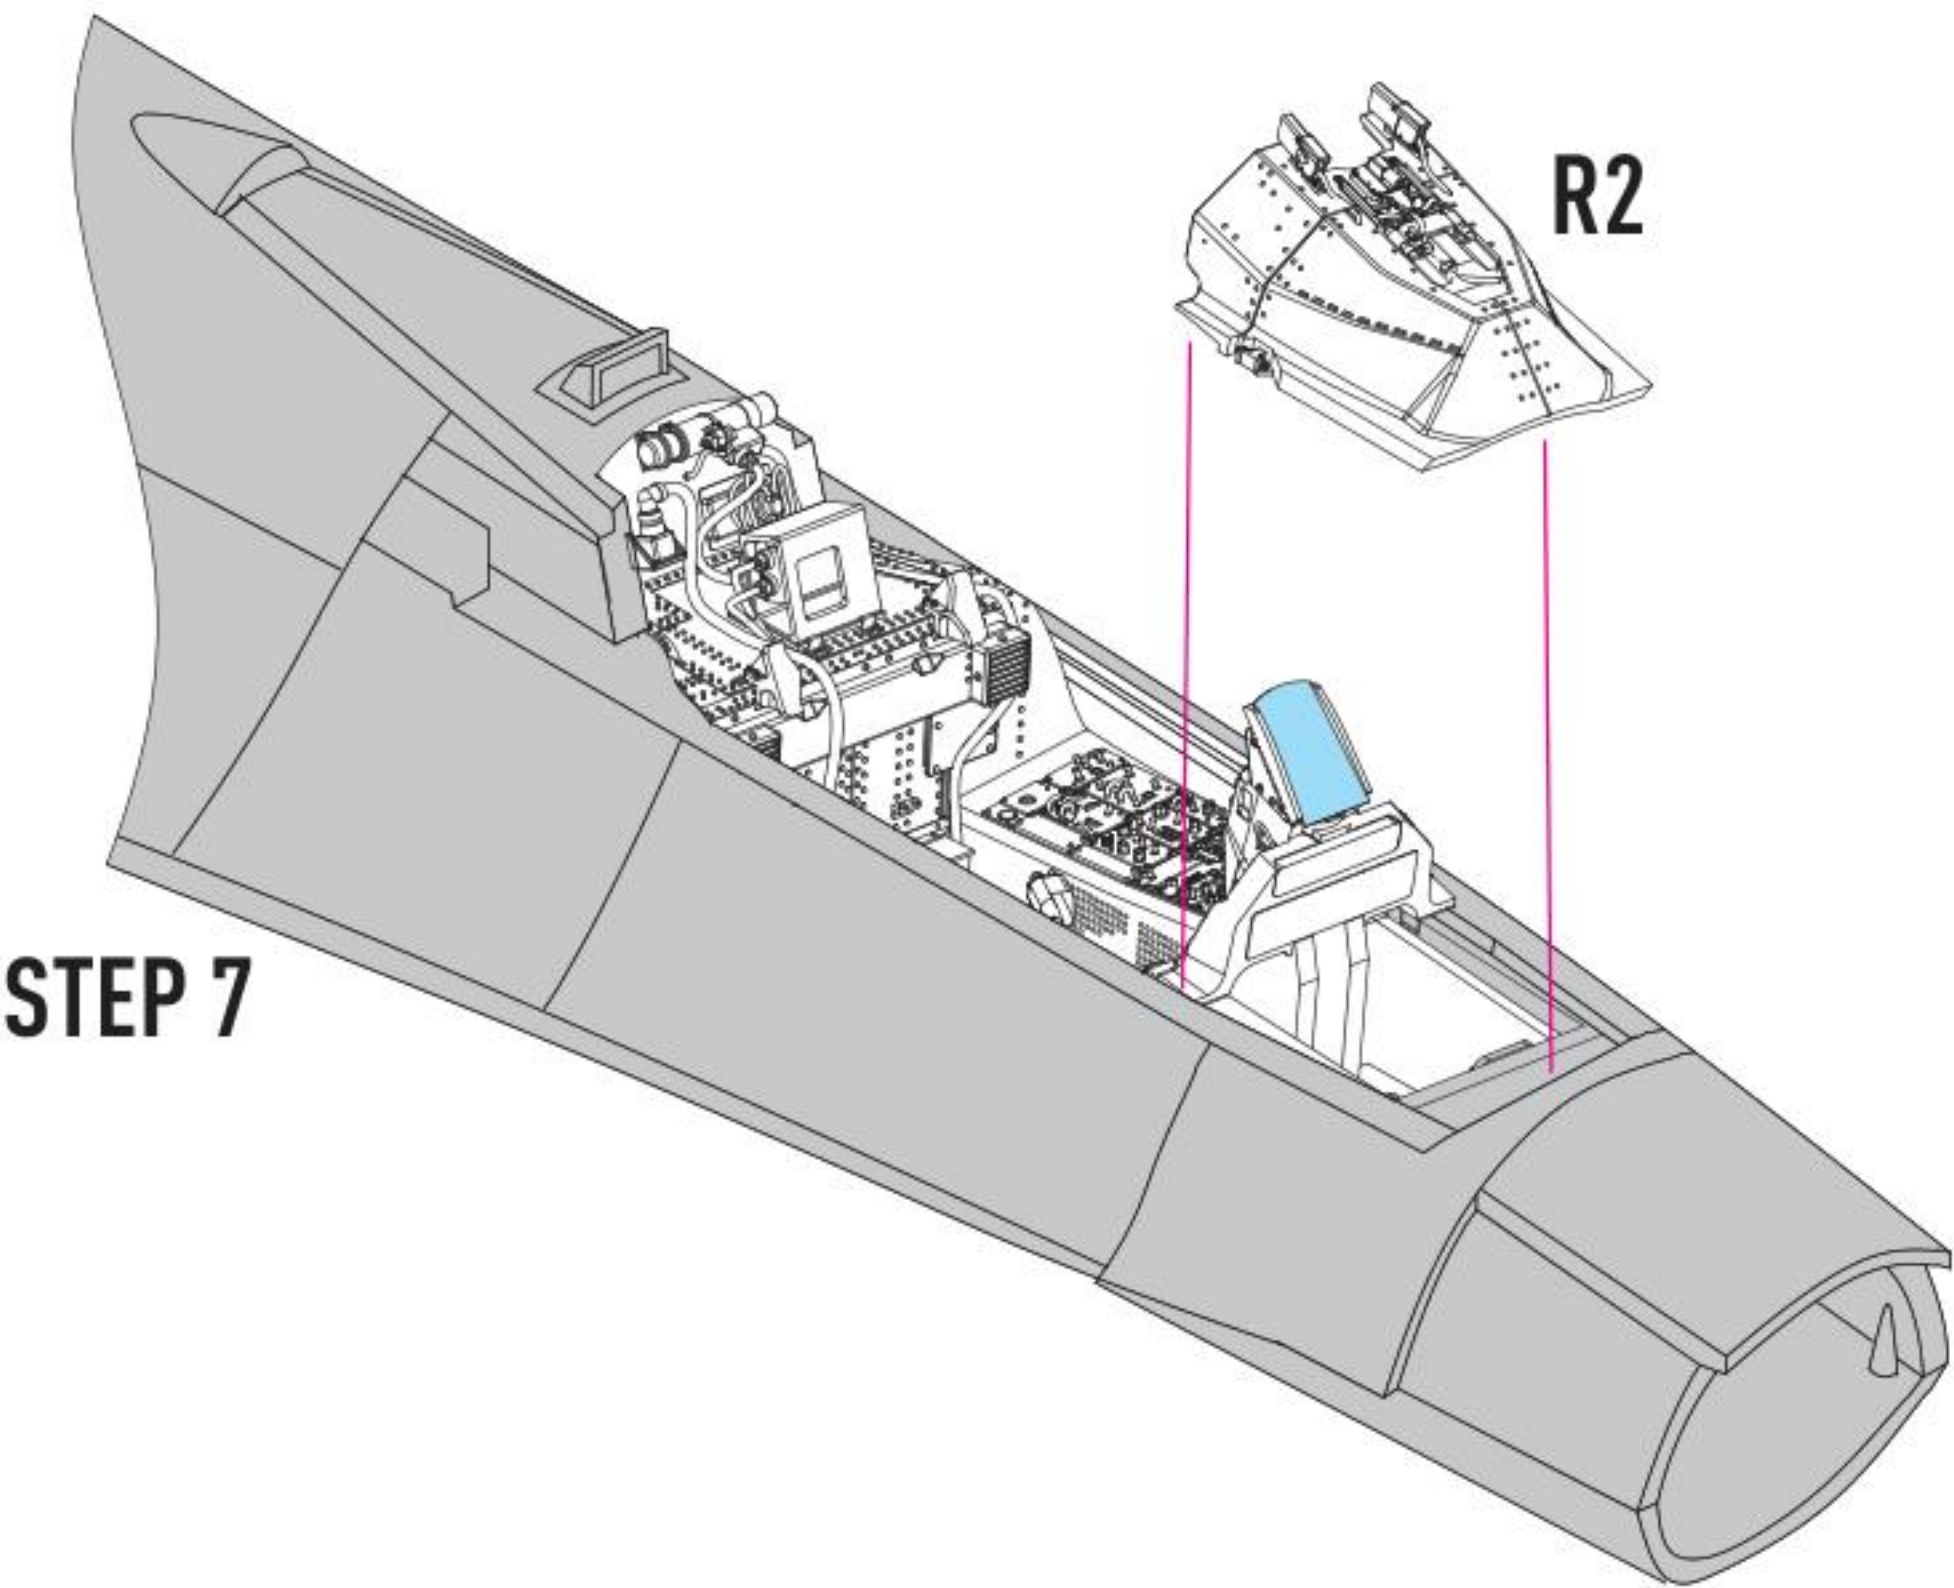




9

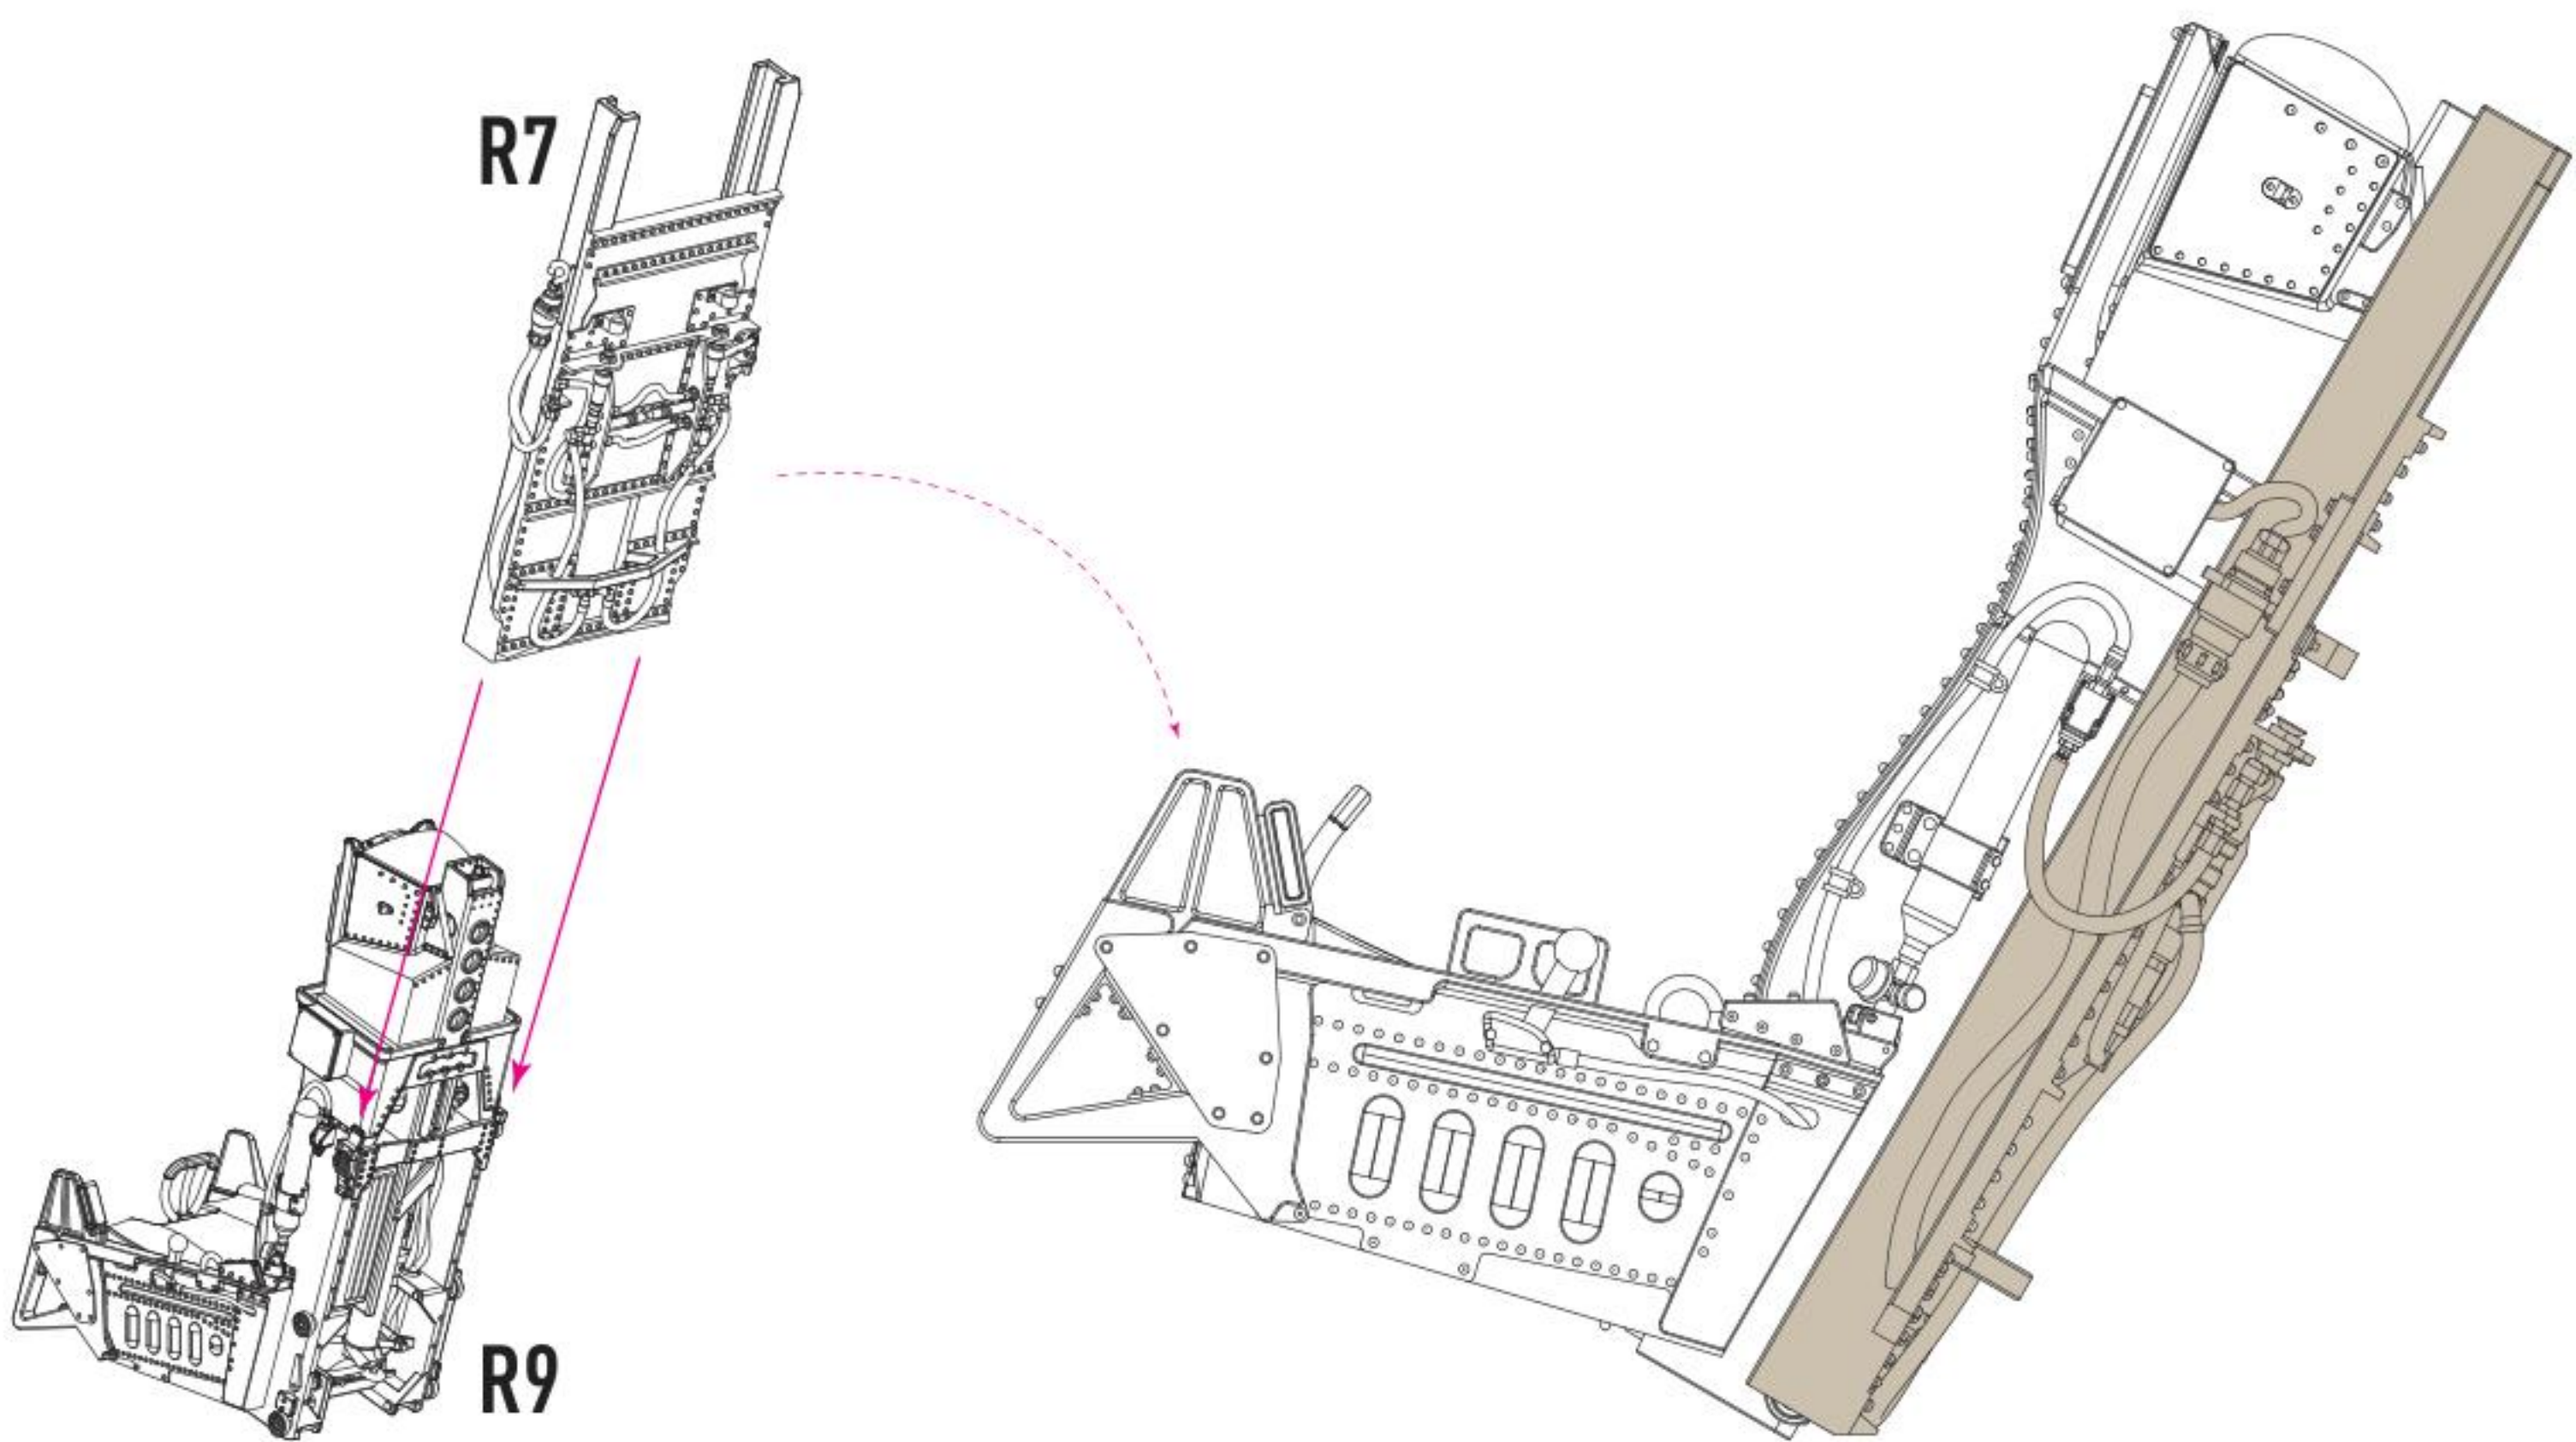


10

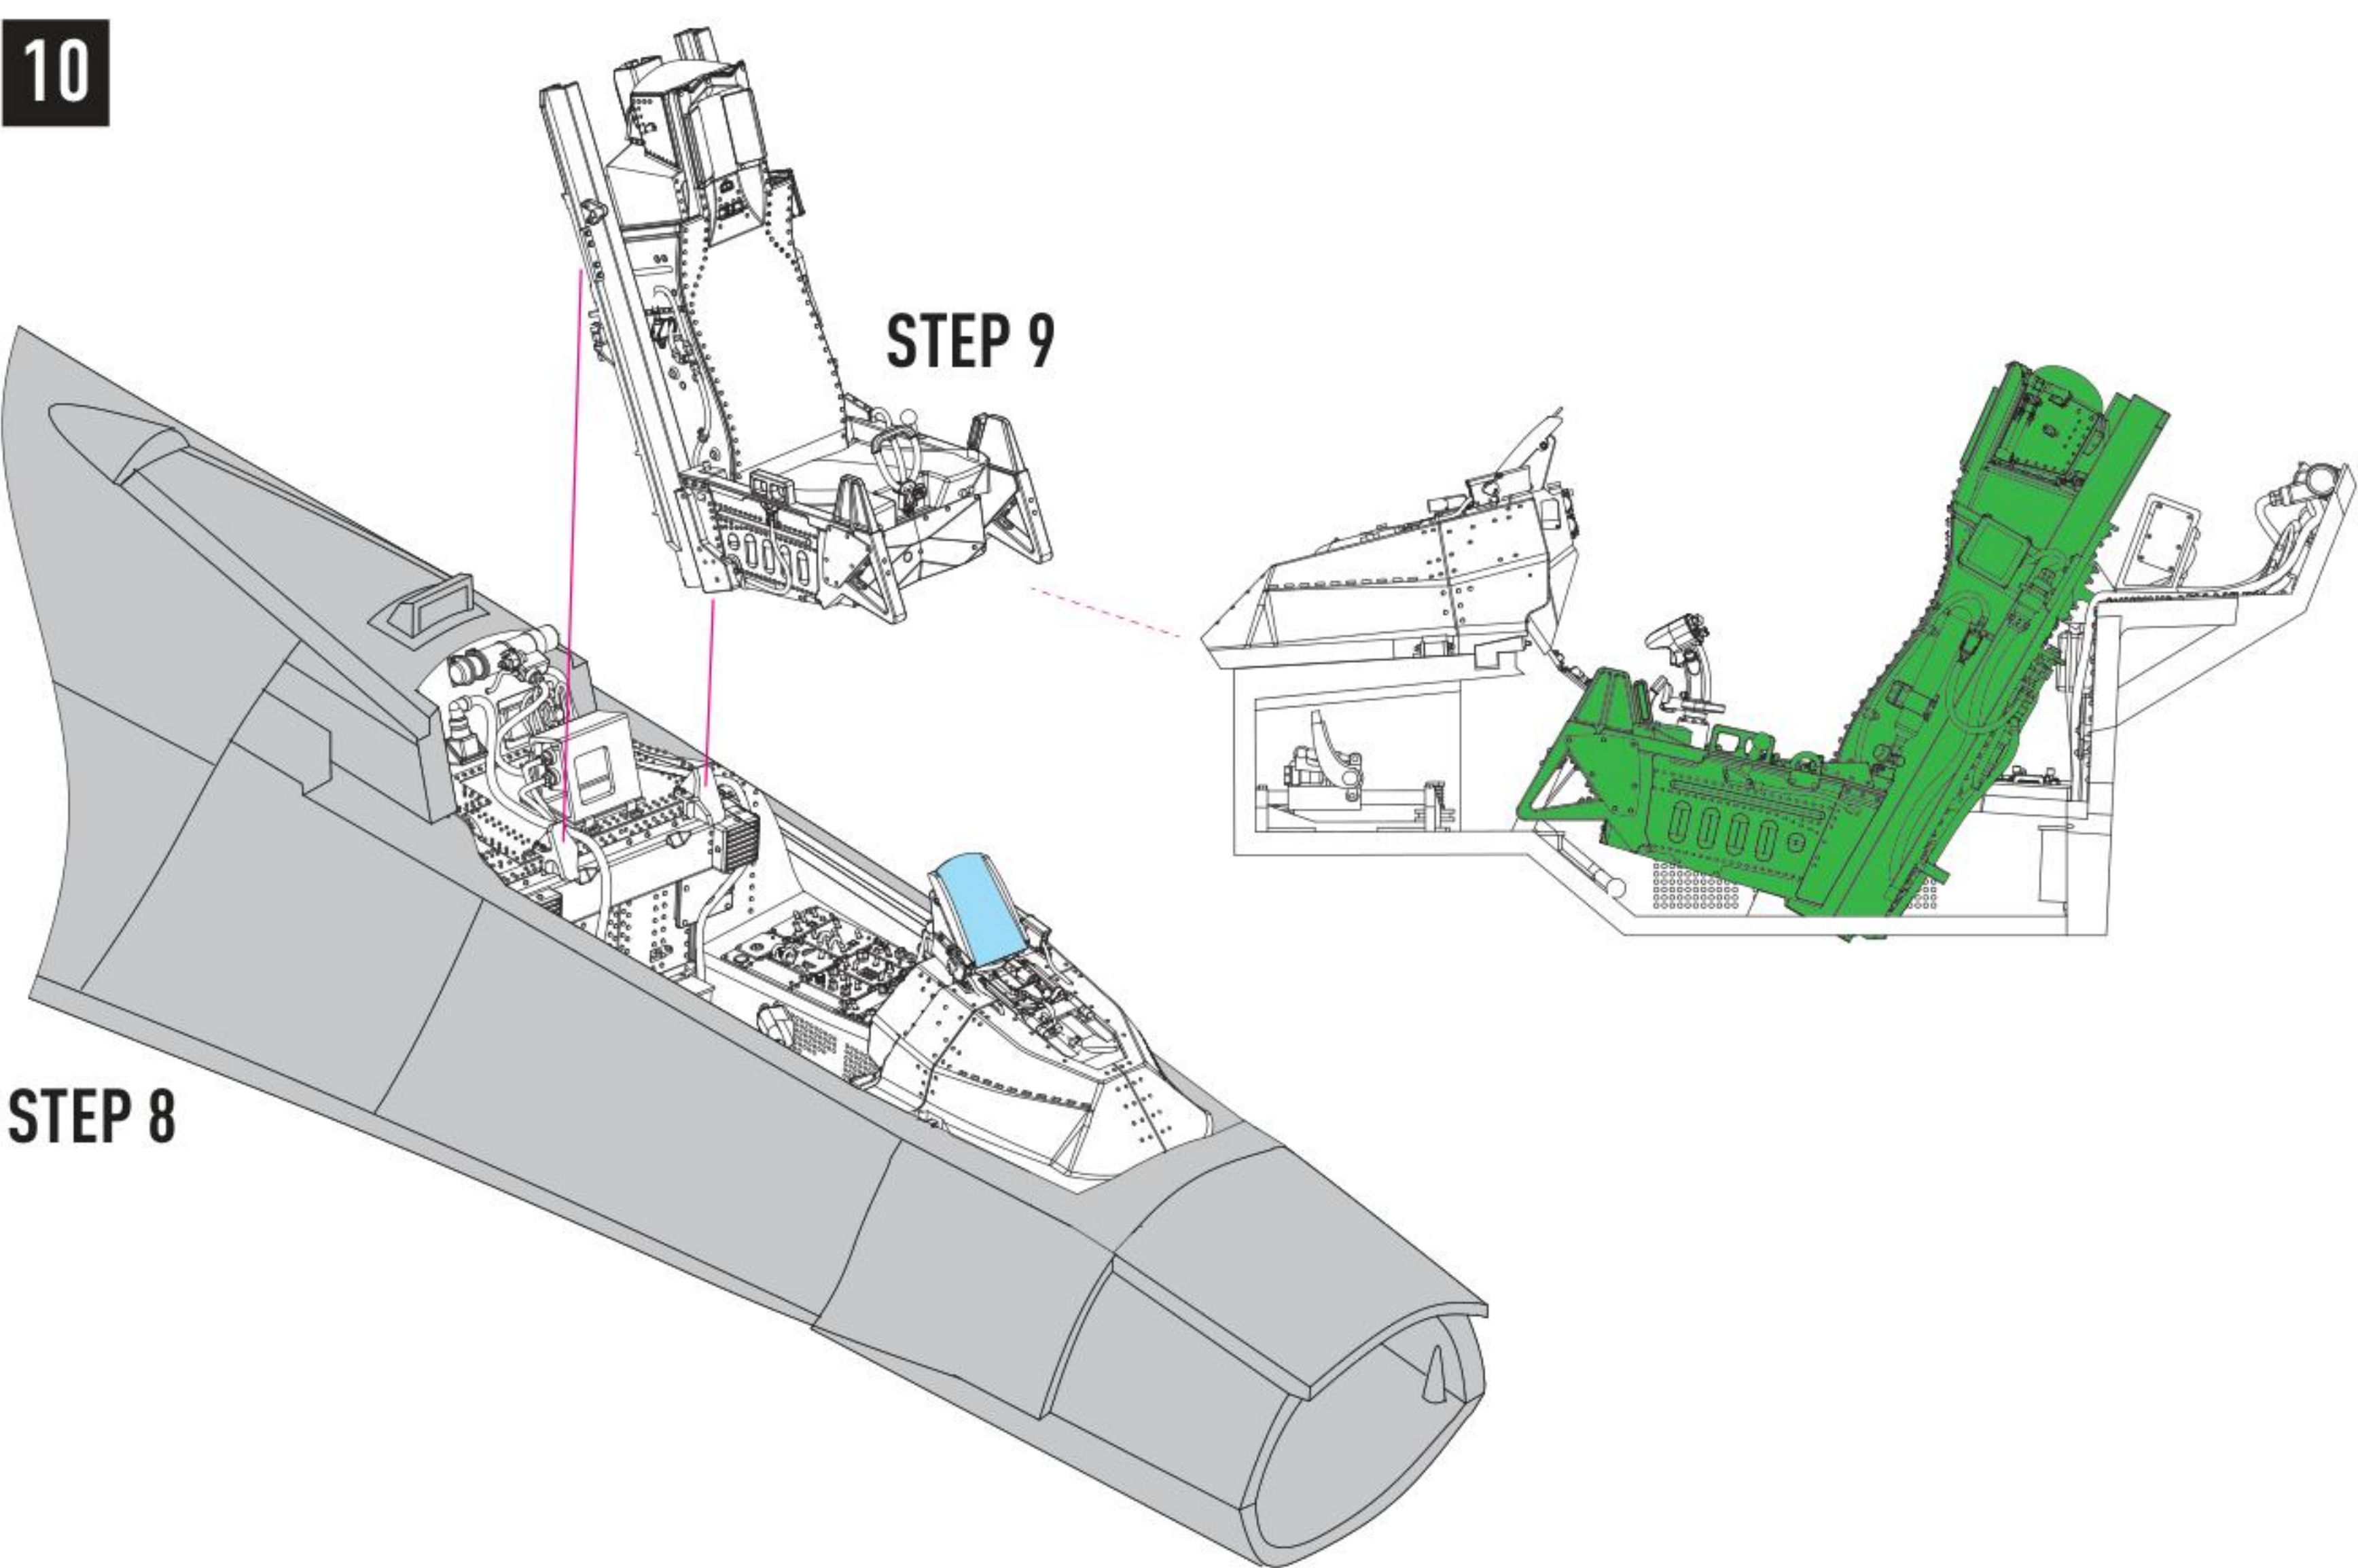


11

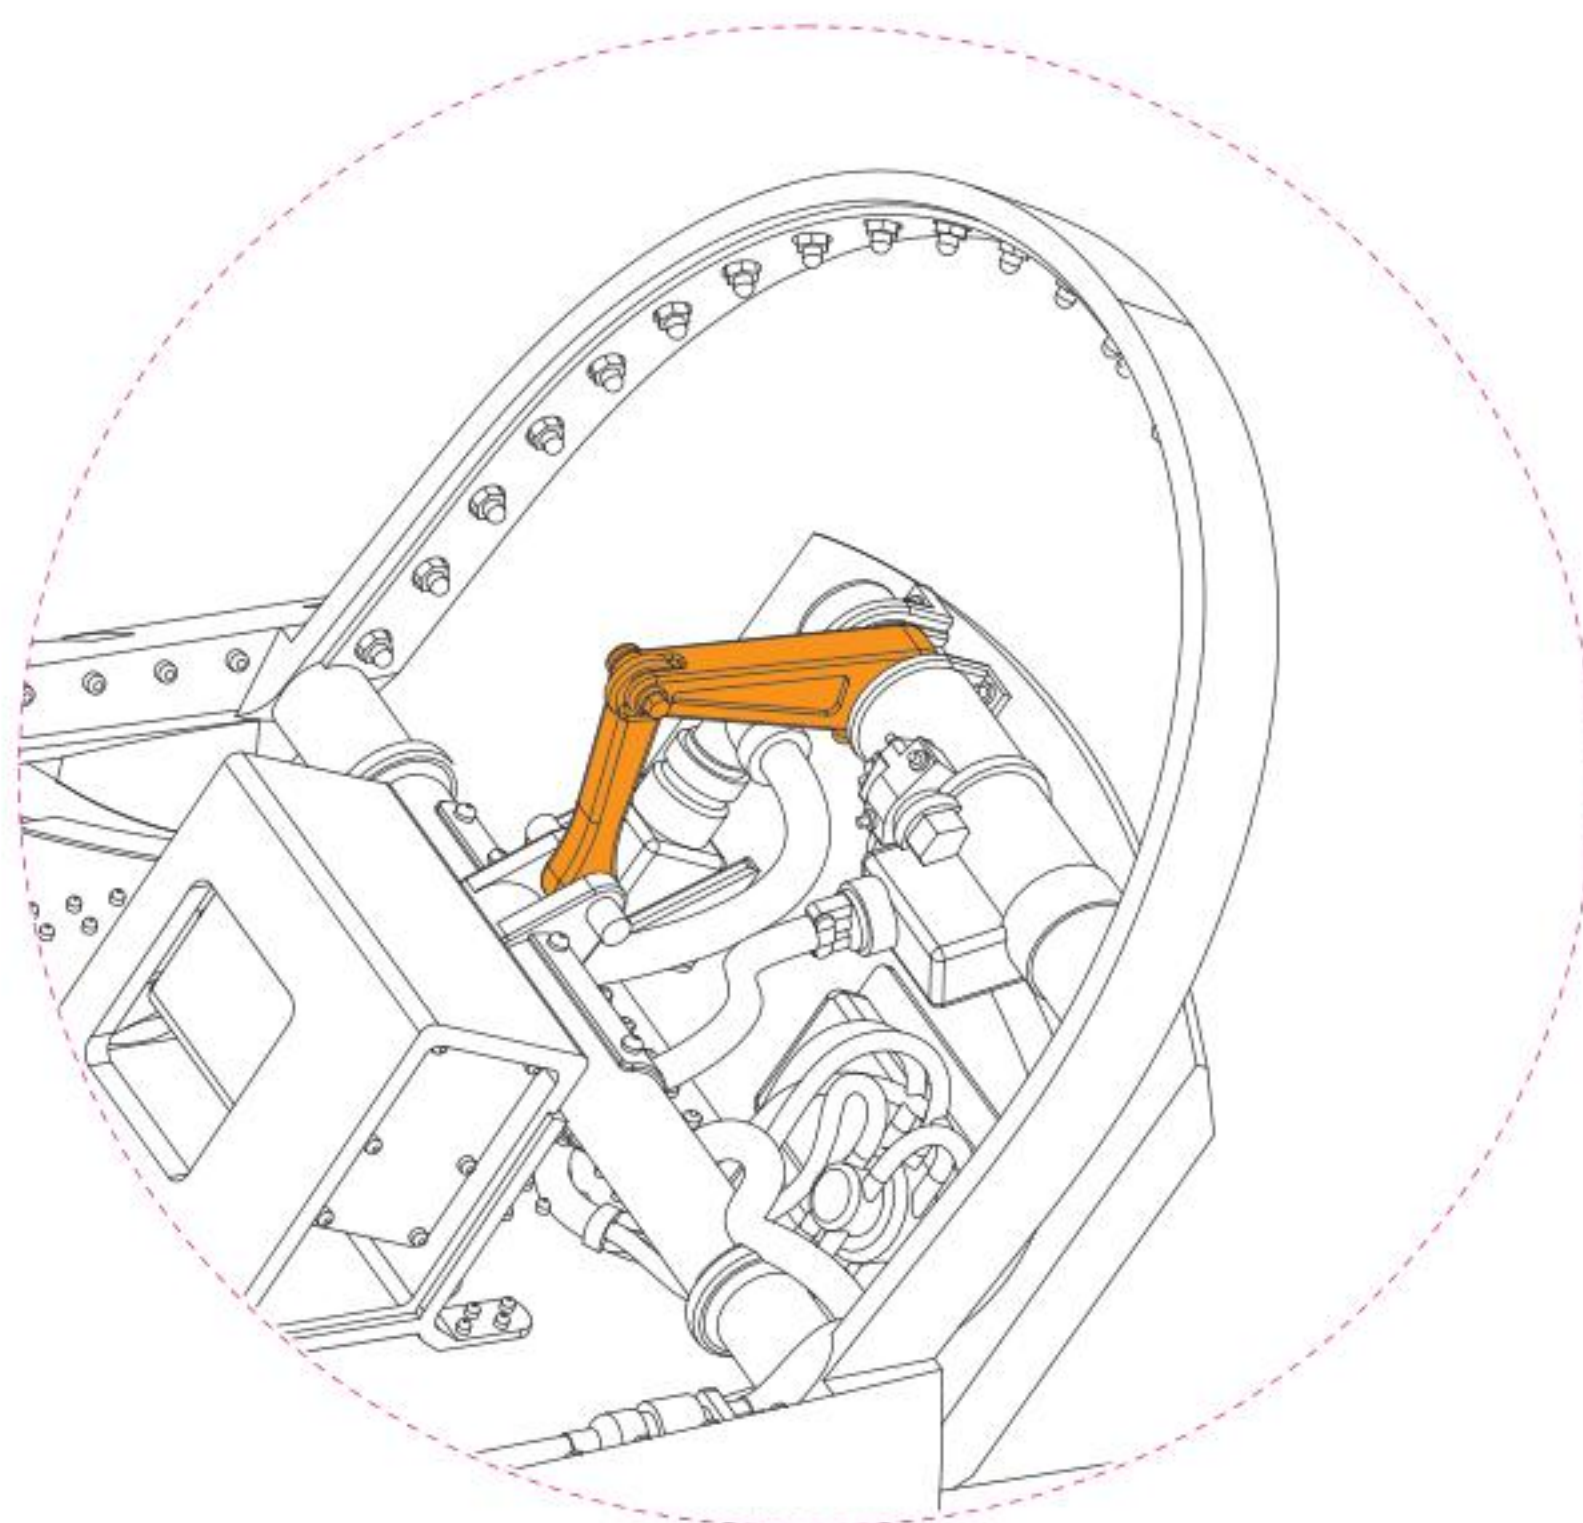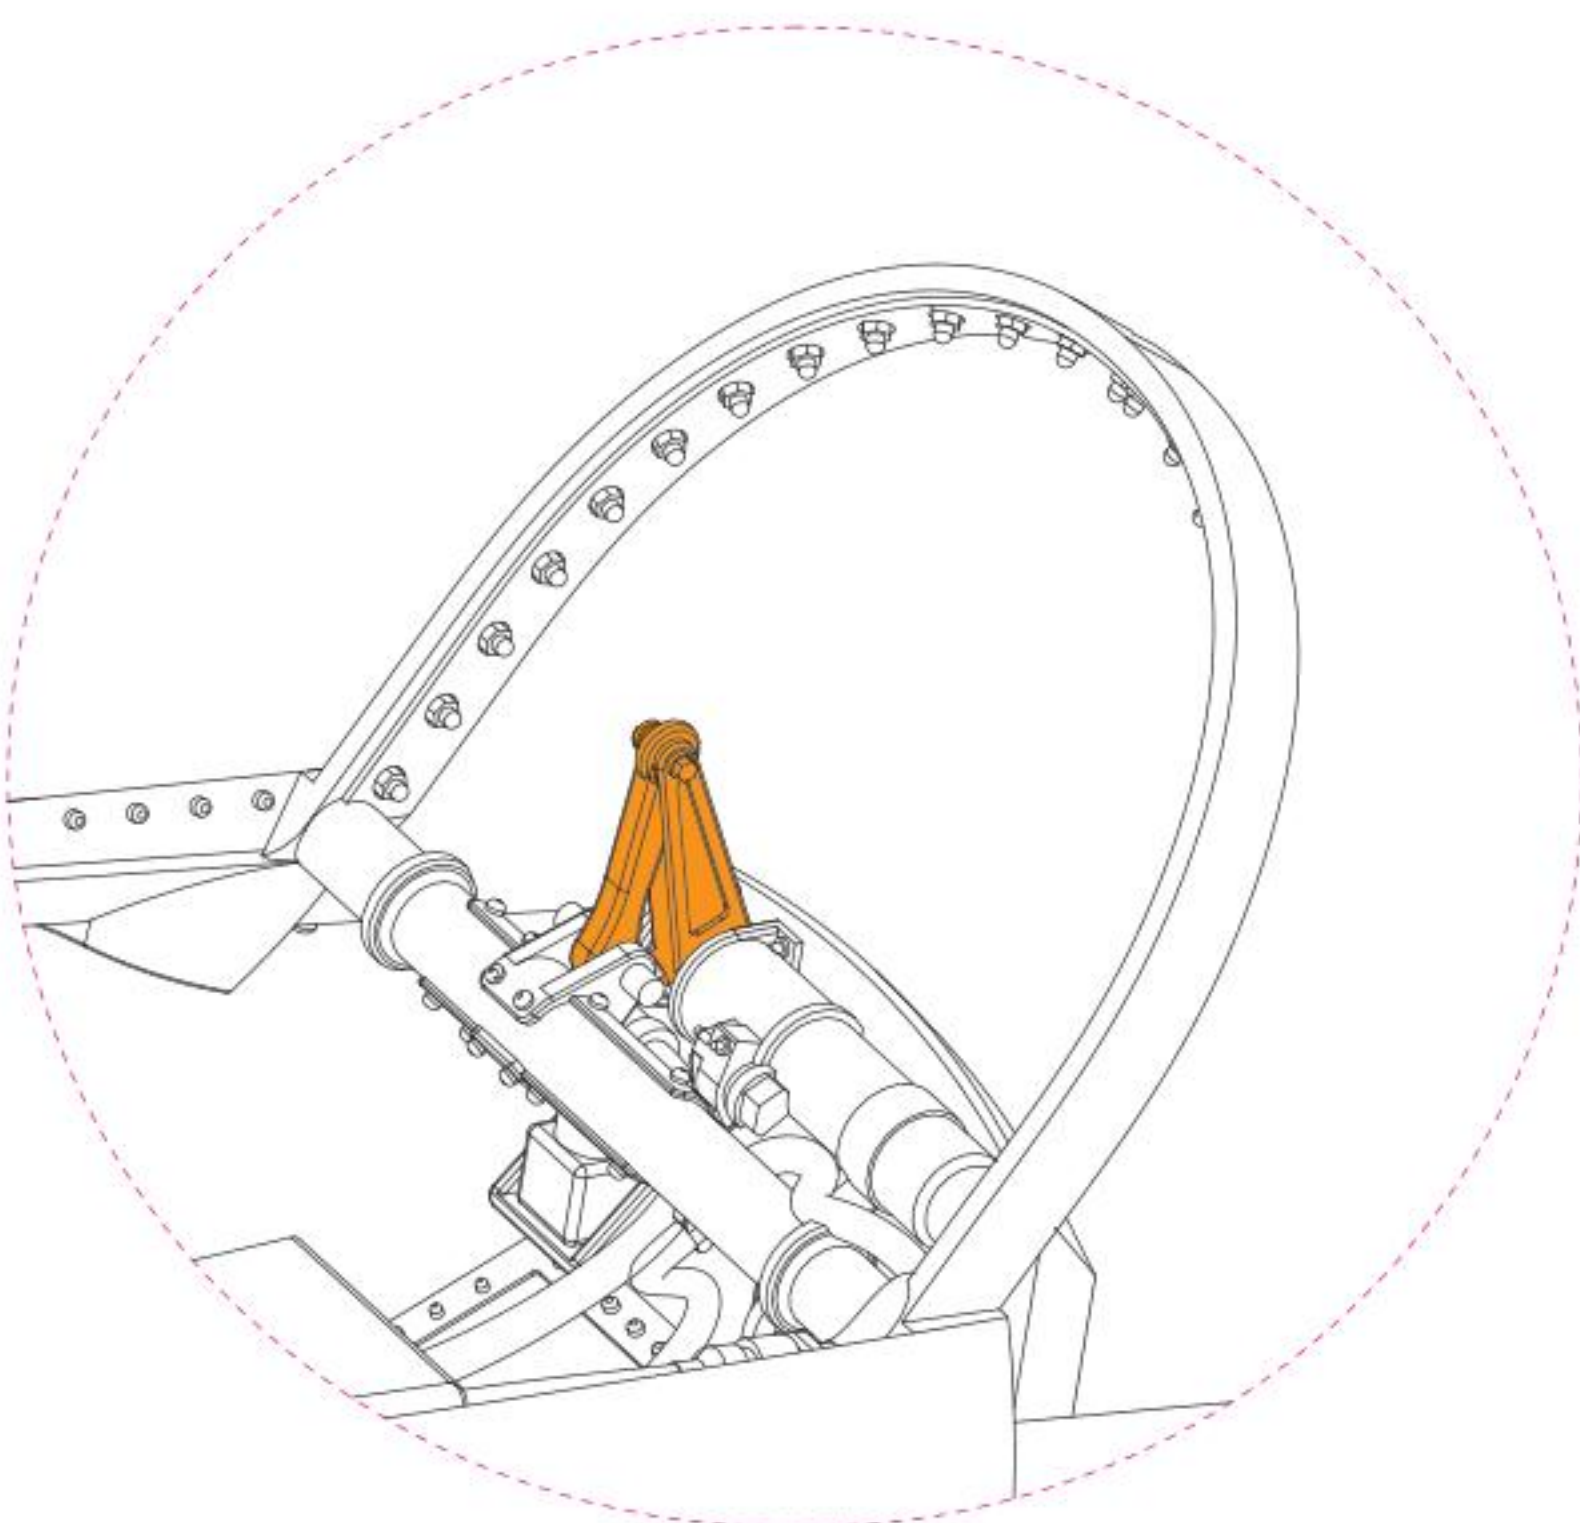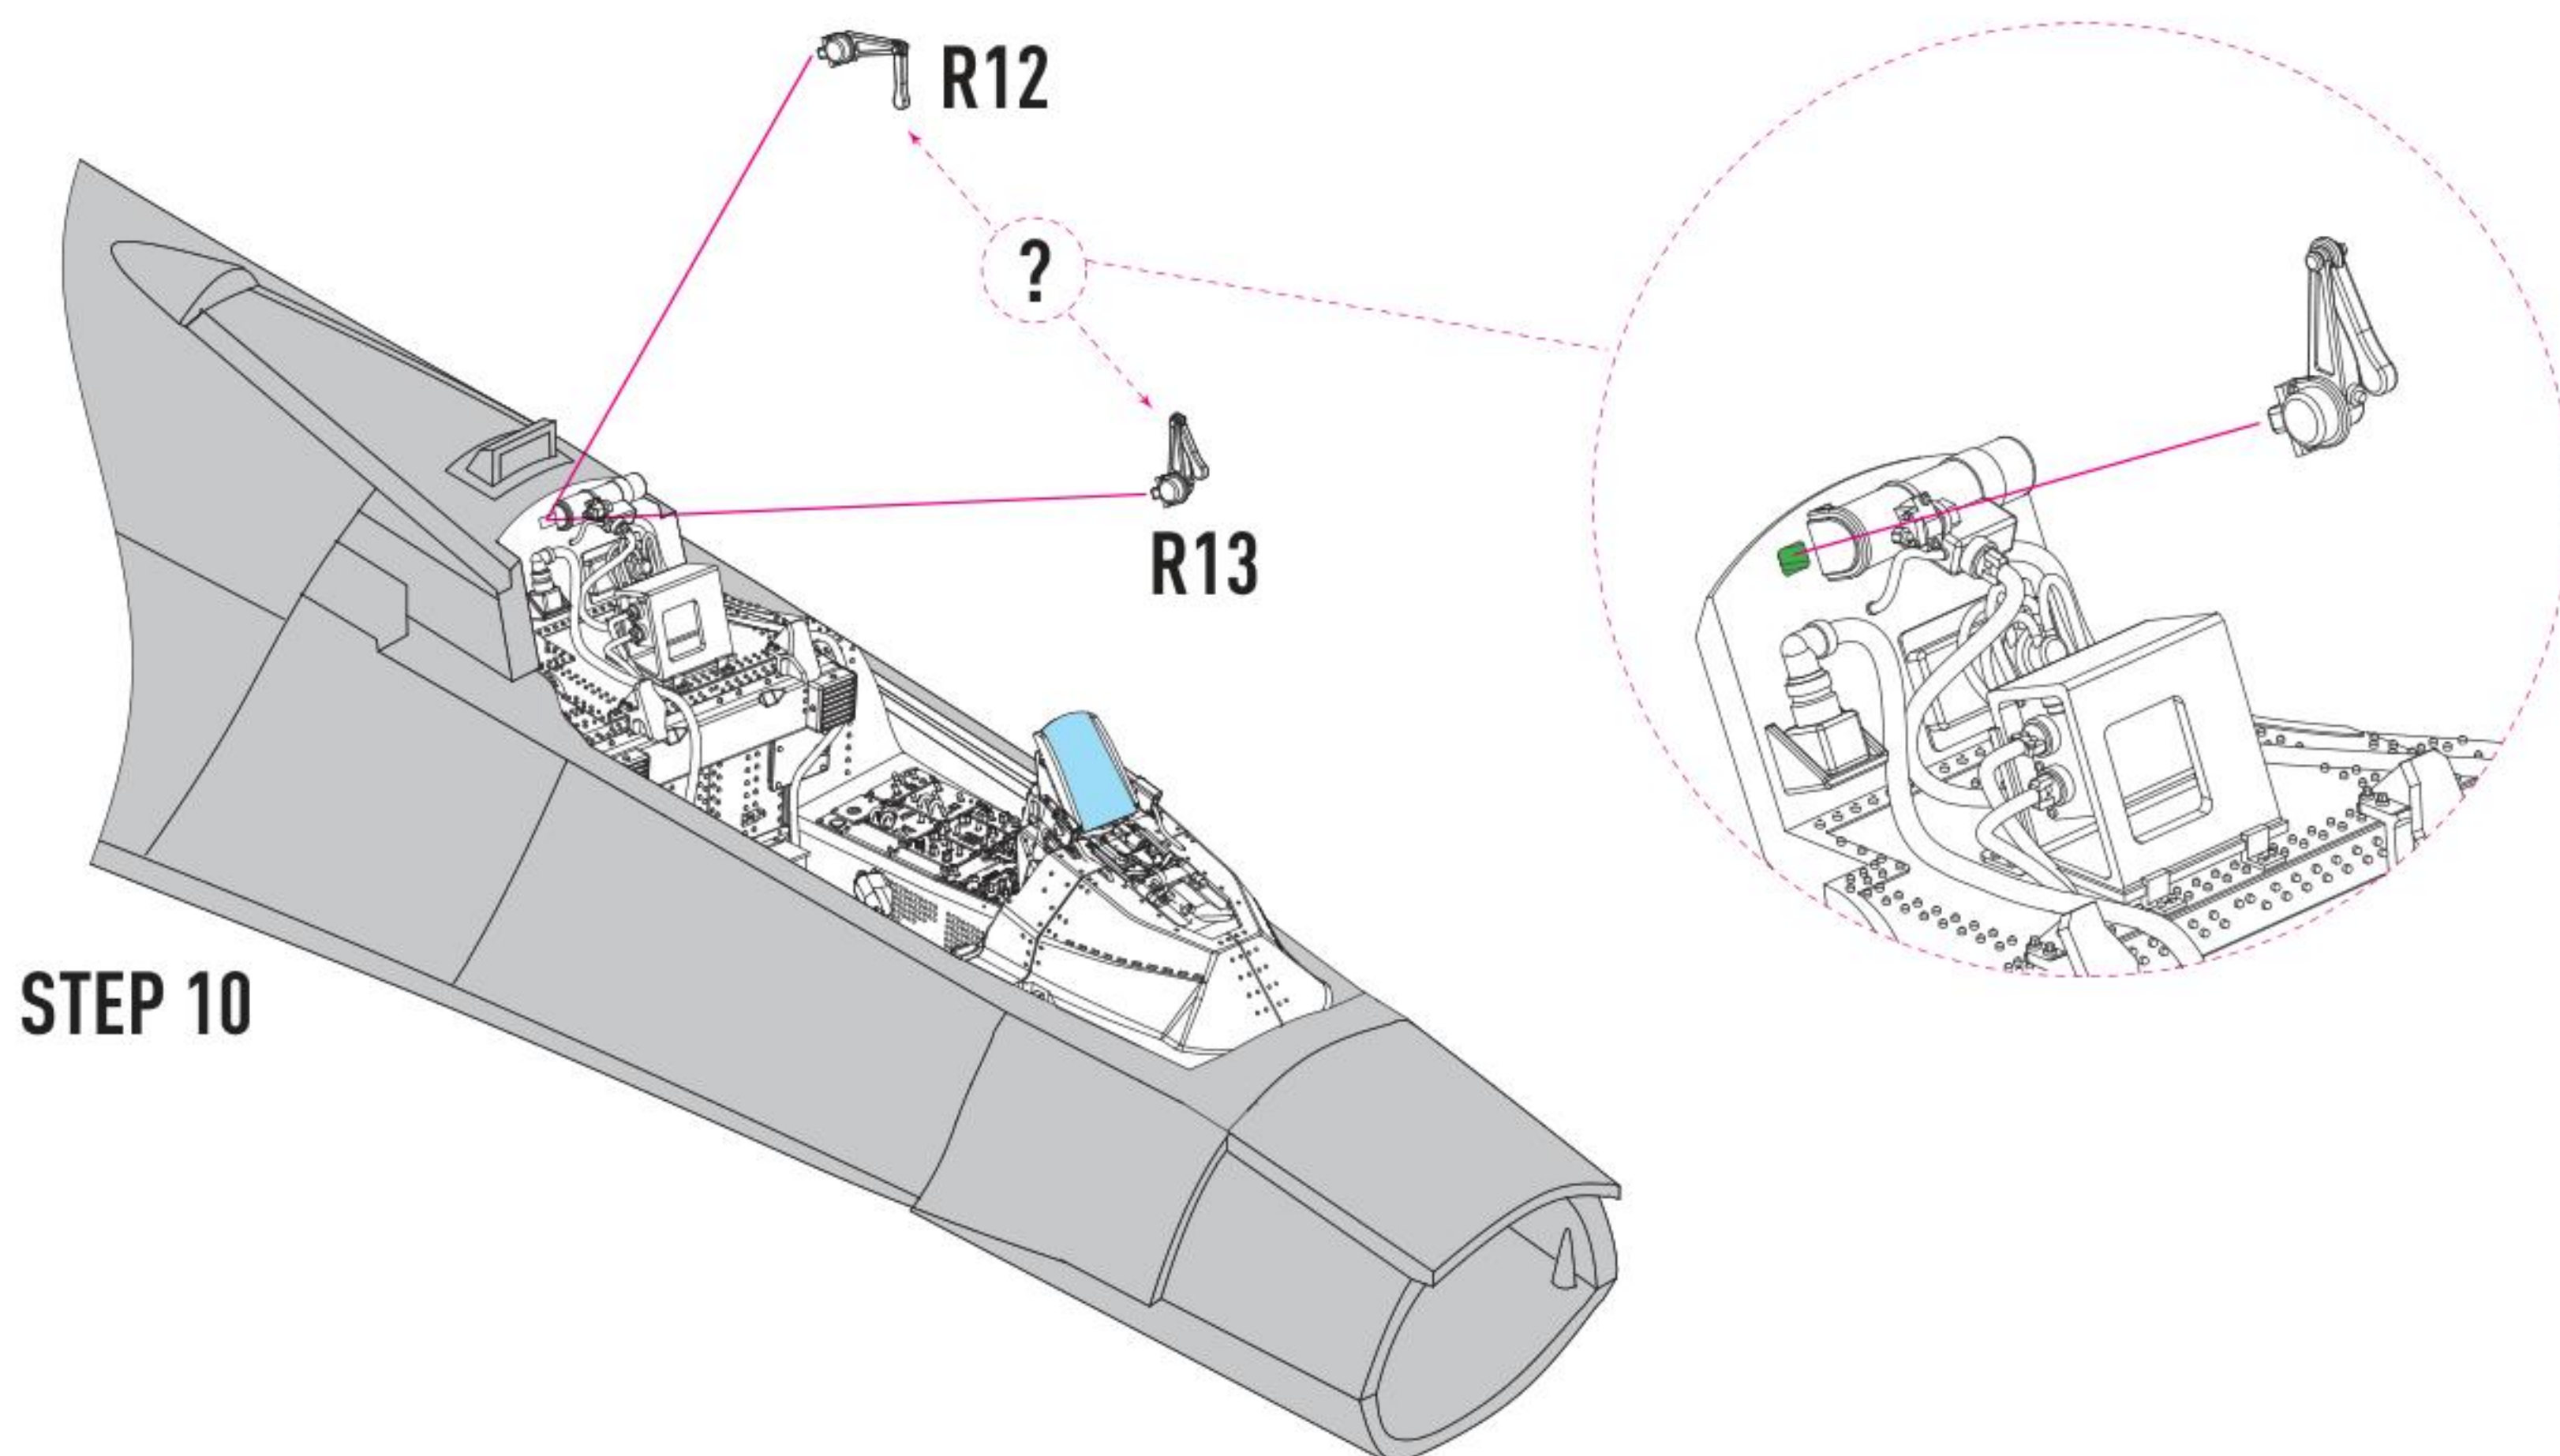

12

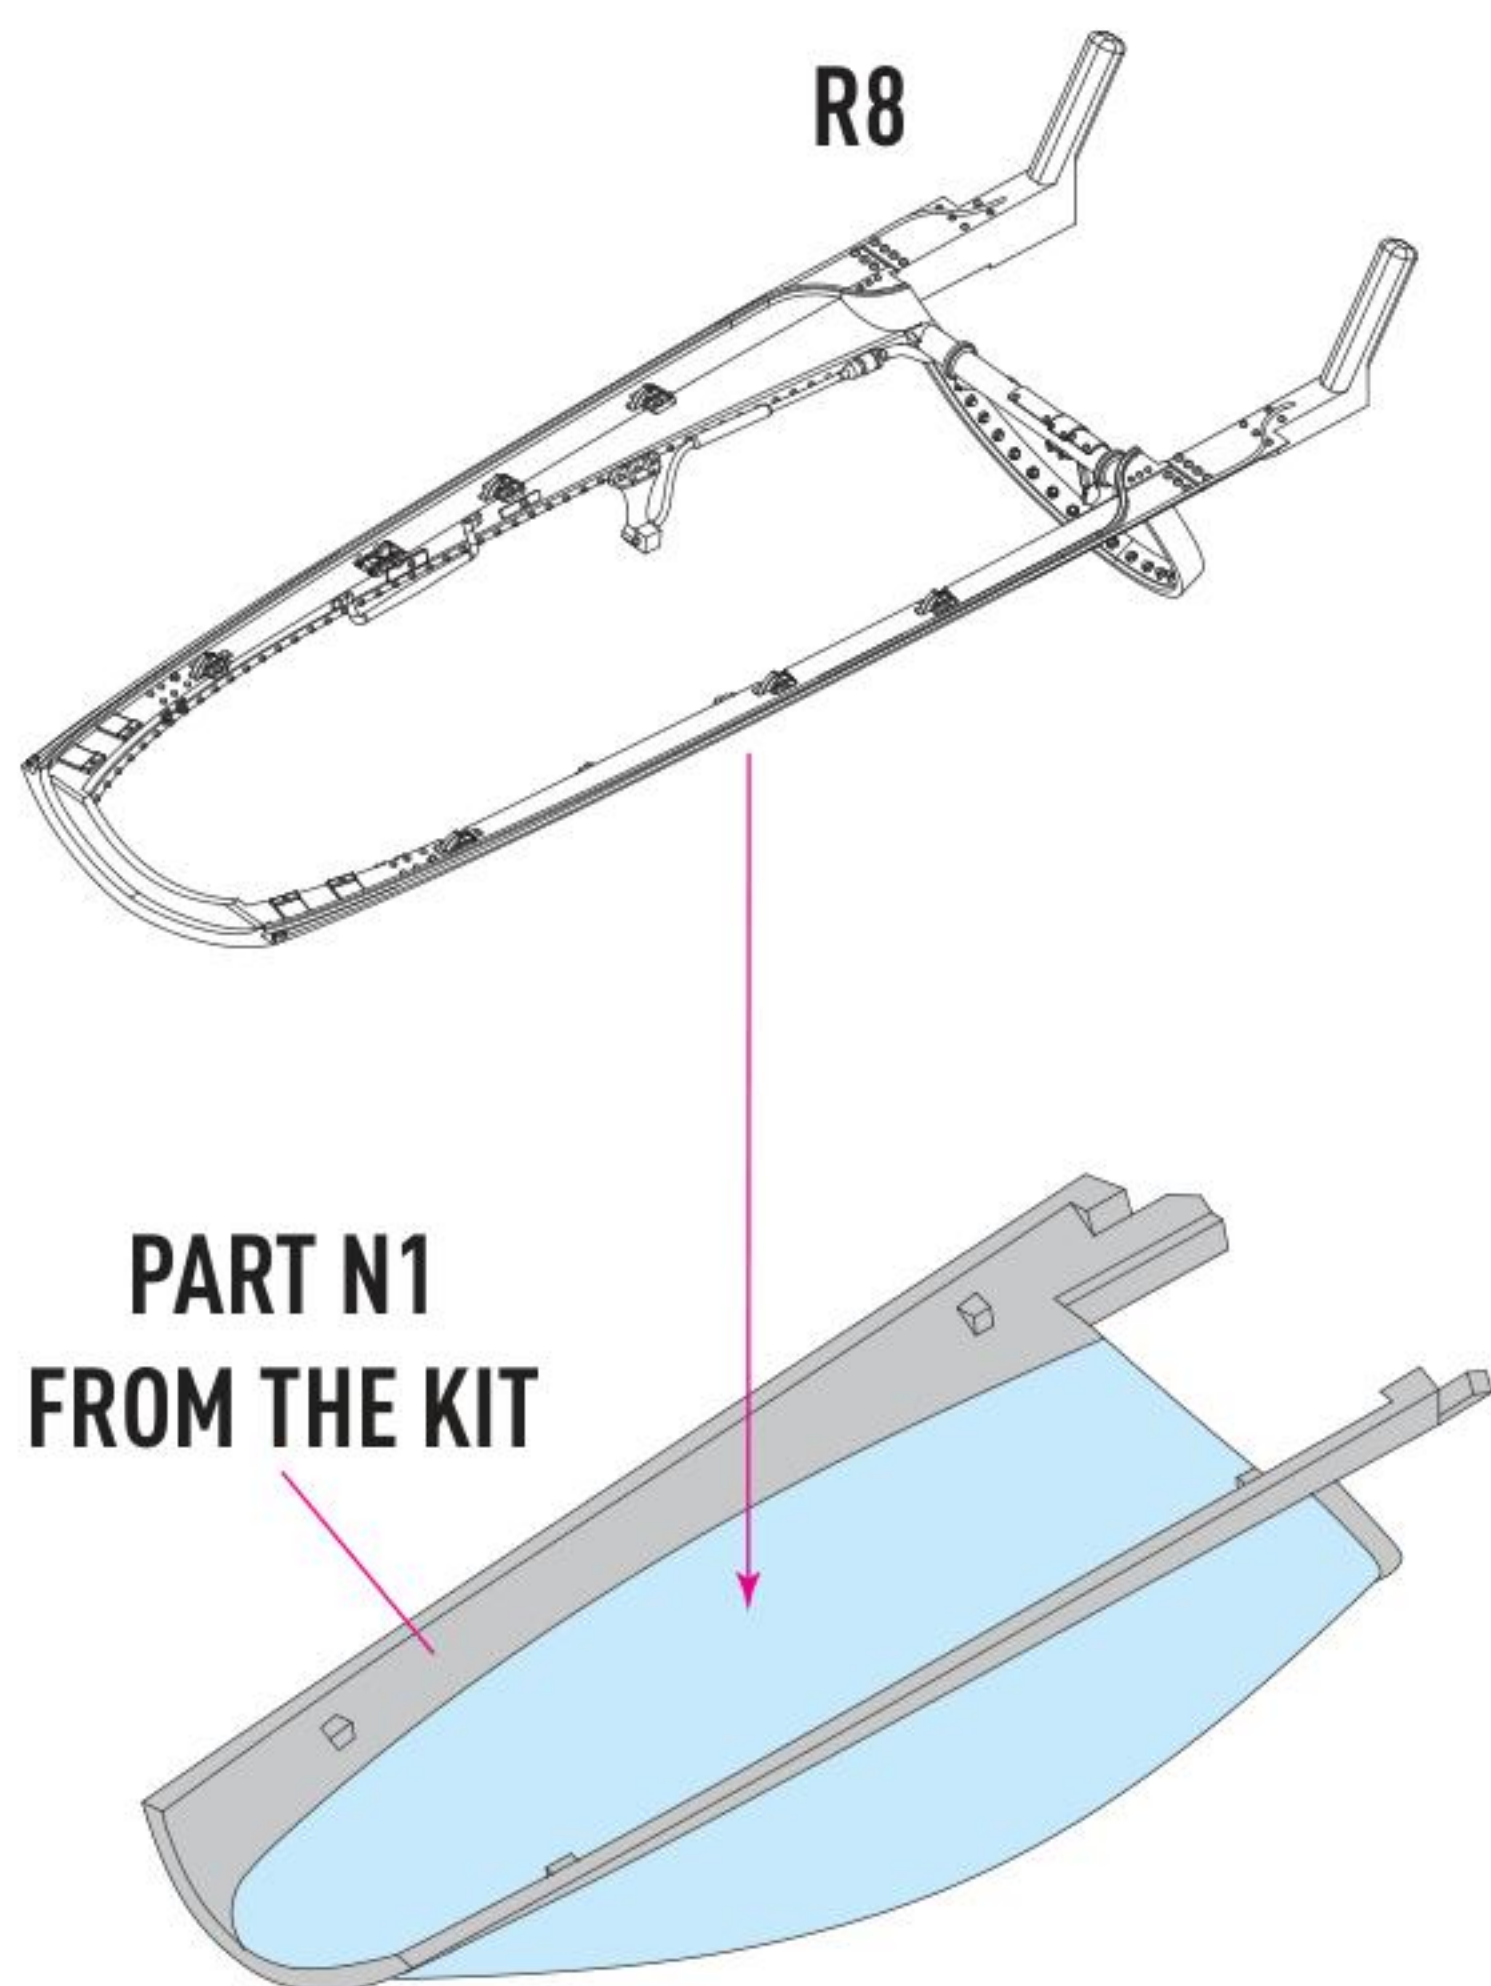

13

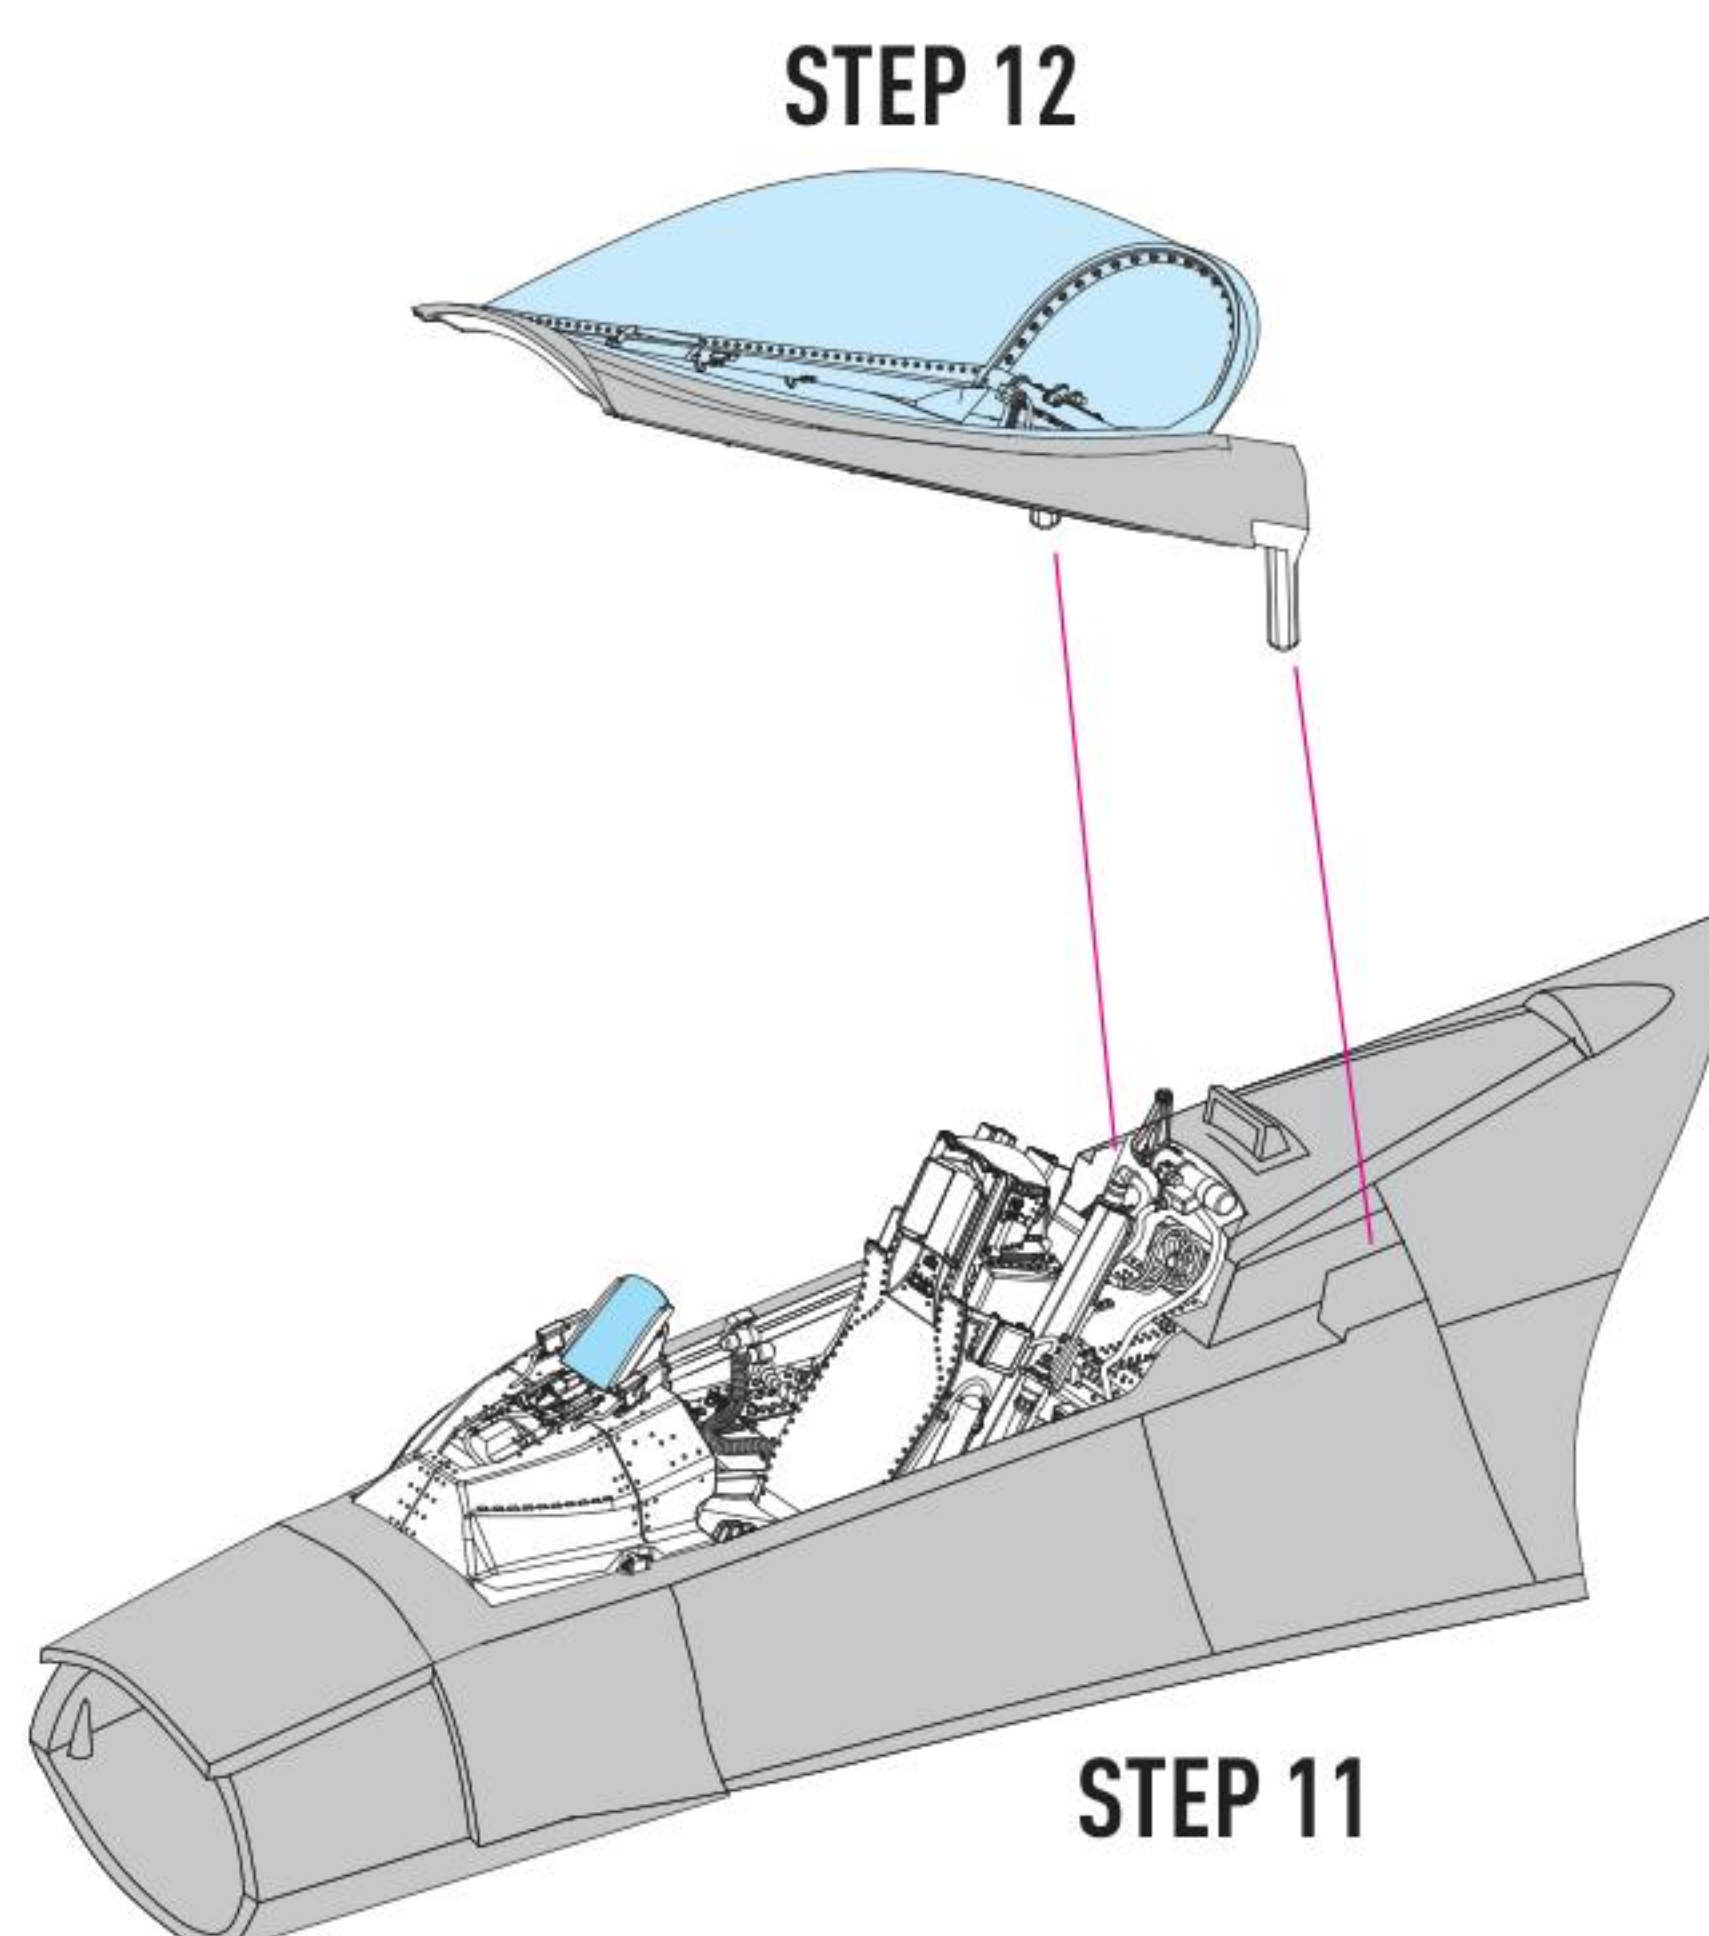

DECAL INSTRUCTION

