


**DETAILS AFTER REMOVAL
FROM SUPPORTS**




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




R2 X2

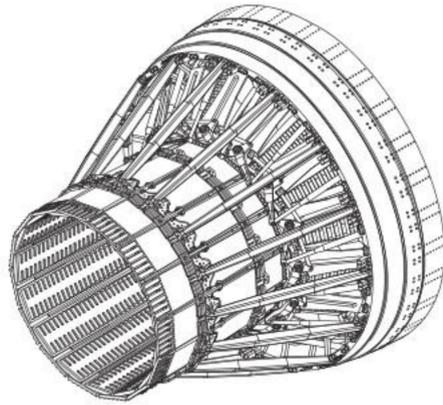

R6 X2

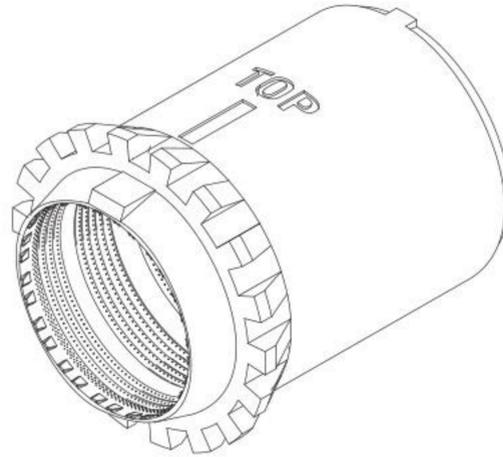

R4 X2

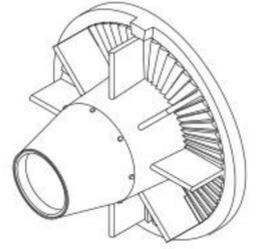


R1 X2






R3 X2


1 X2

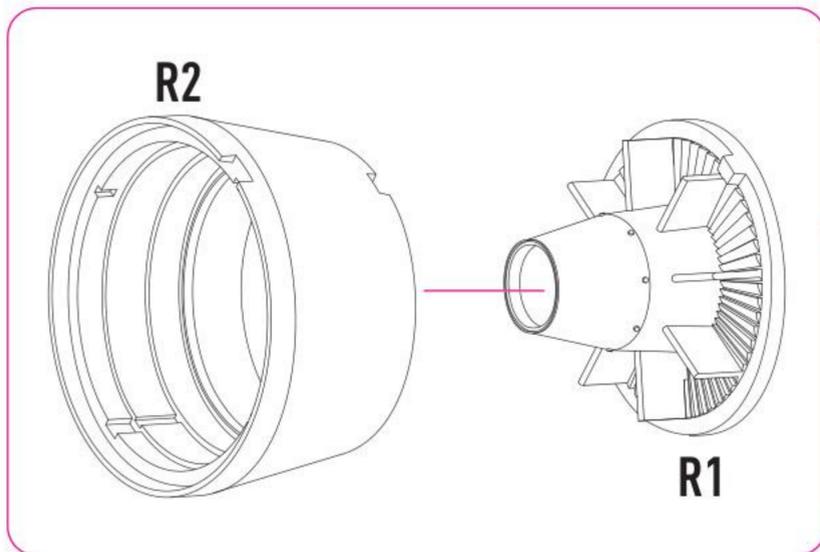

WARNING! A WIDE KEY!

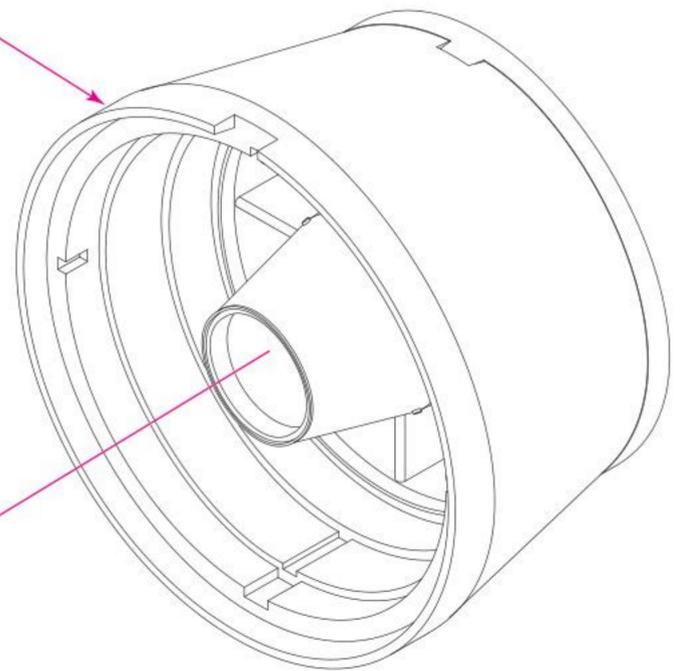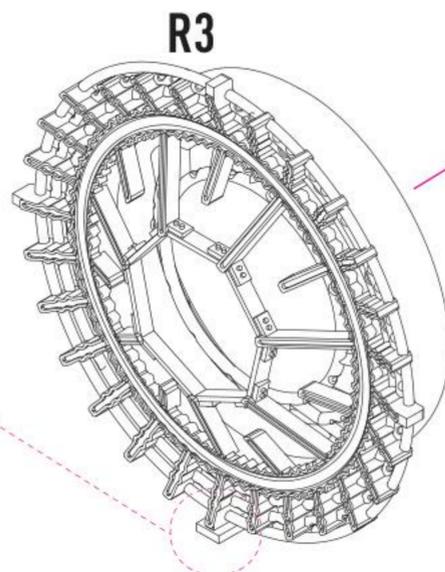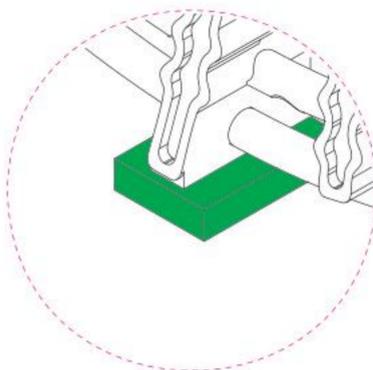

2 X2

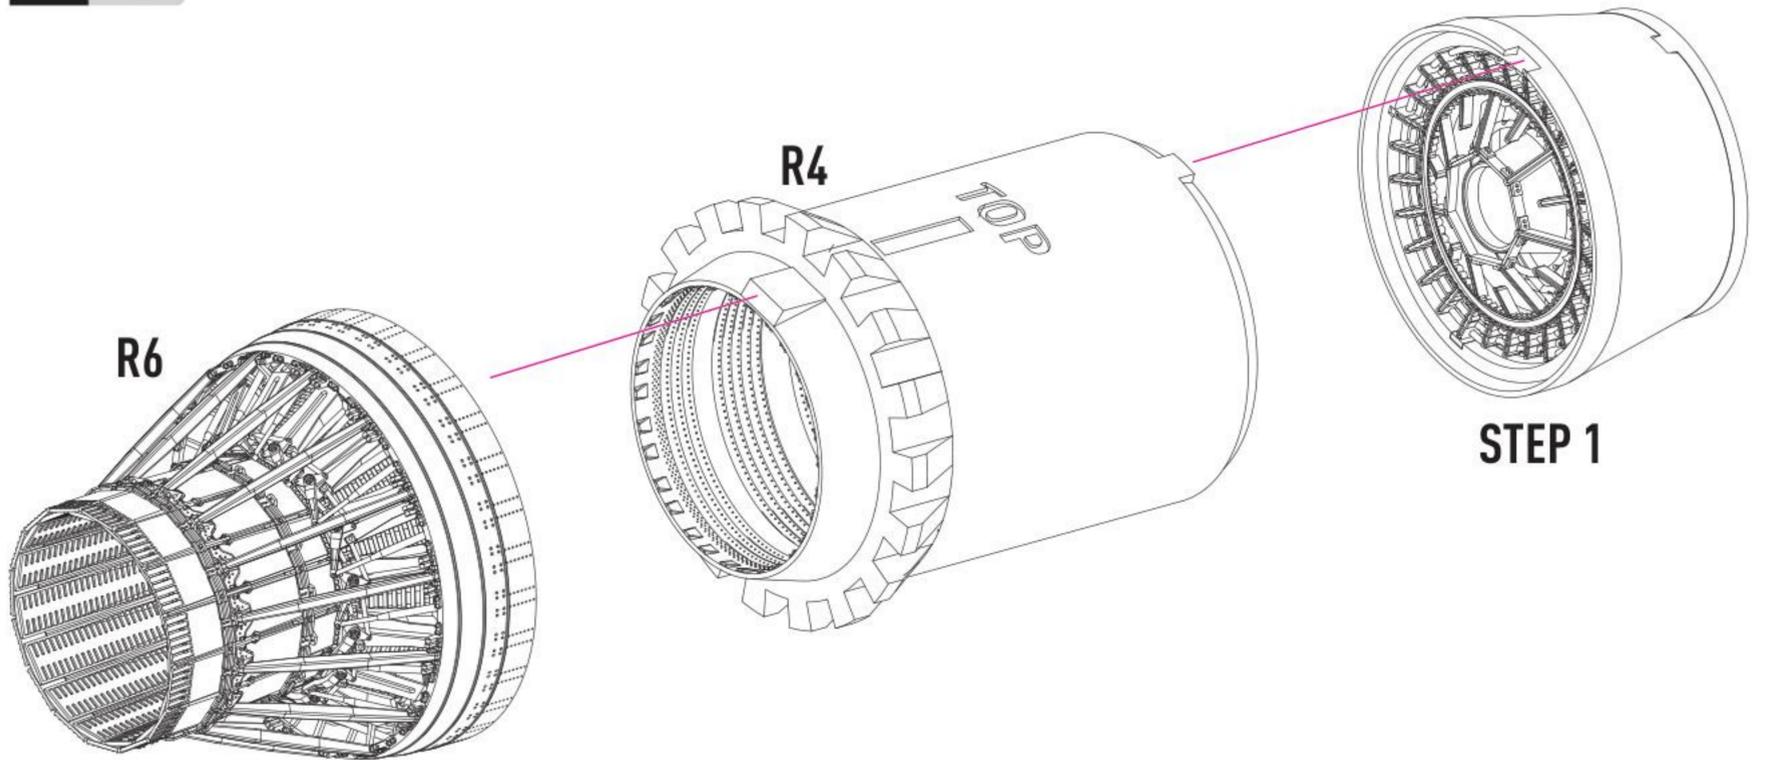

**PART D25 FROM
FINEMOLDS KIT**

