



**DETAILS AFTER REMOVAL
FROM SUPPORTS**

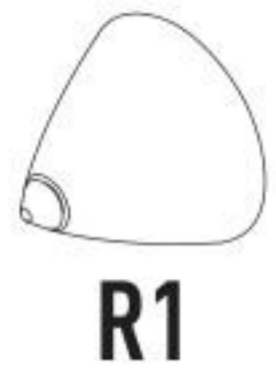


R1

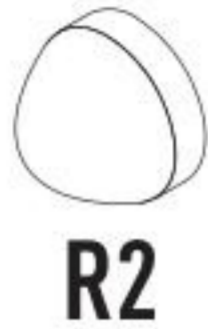

R2








R4

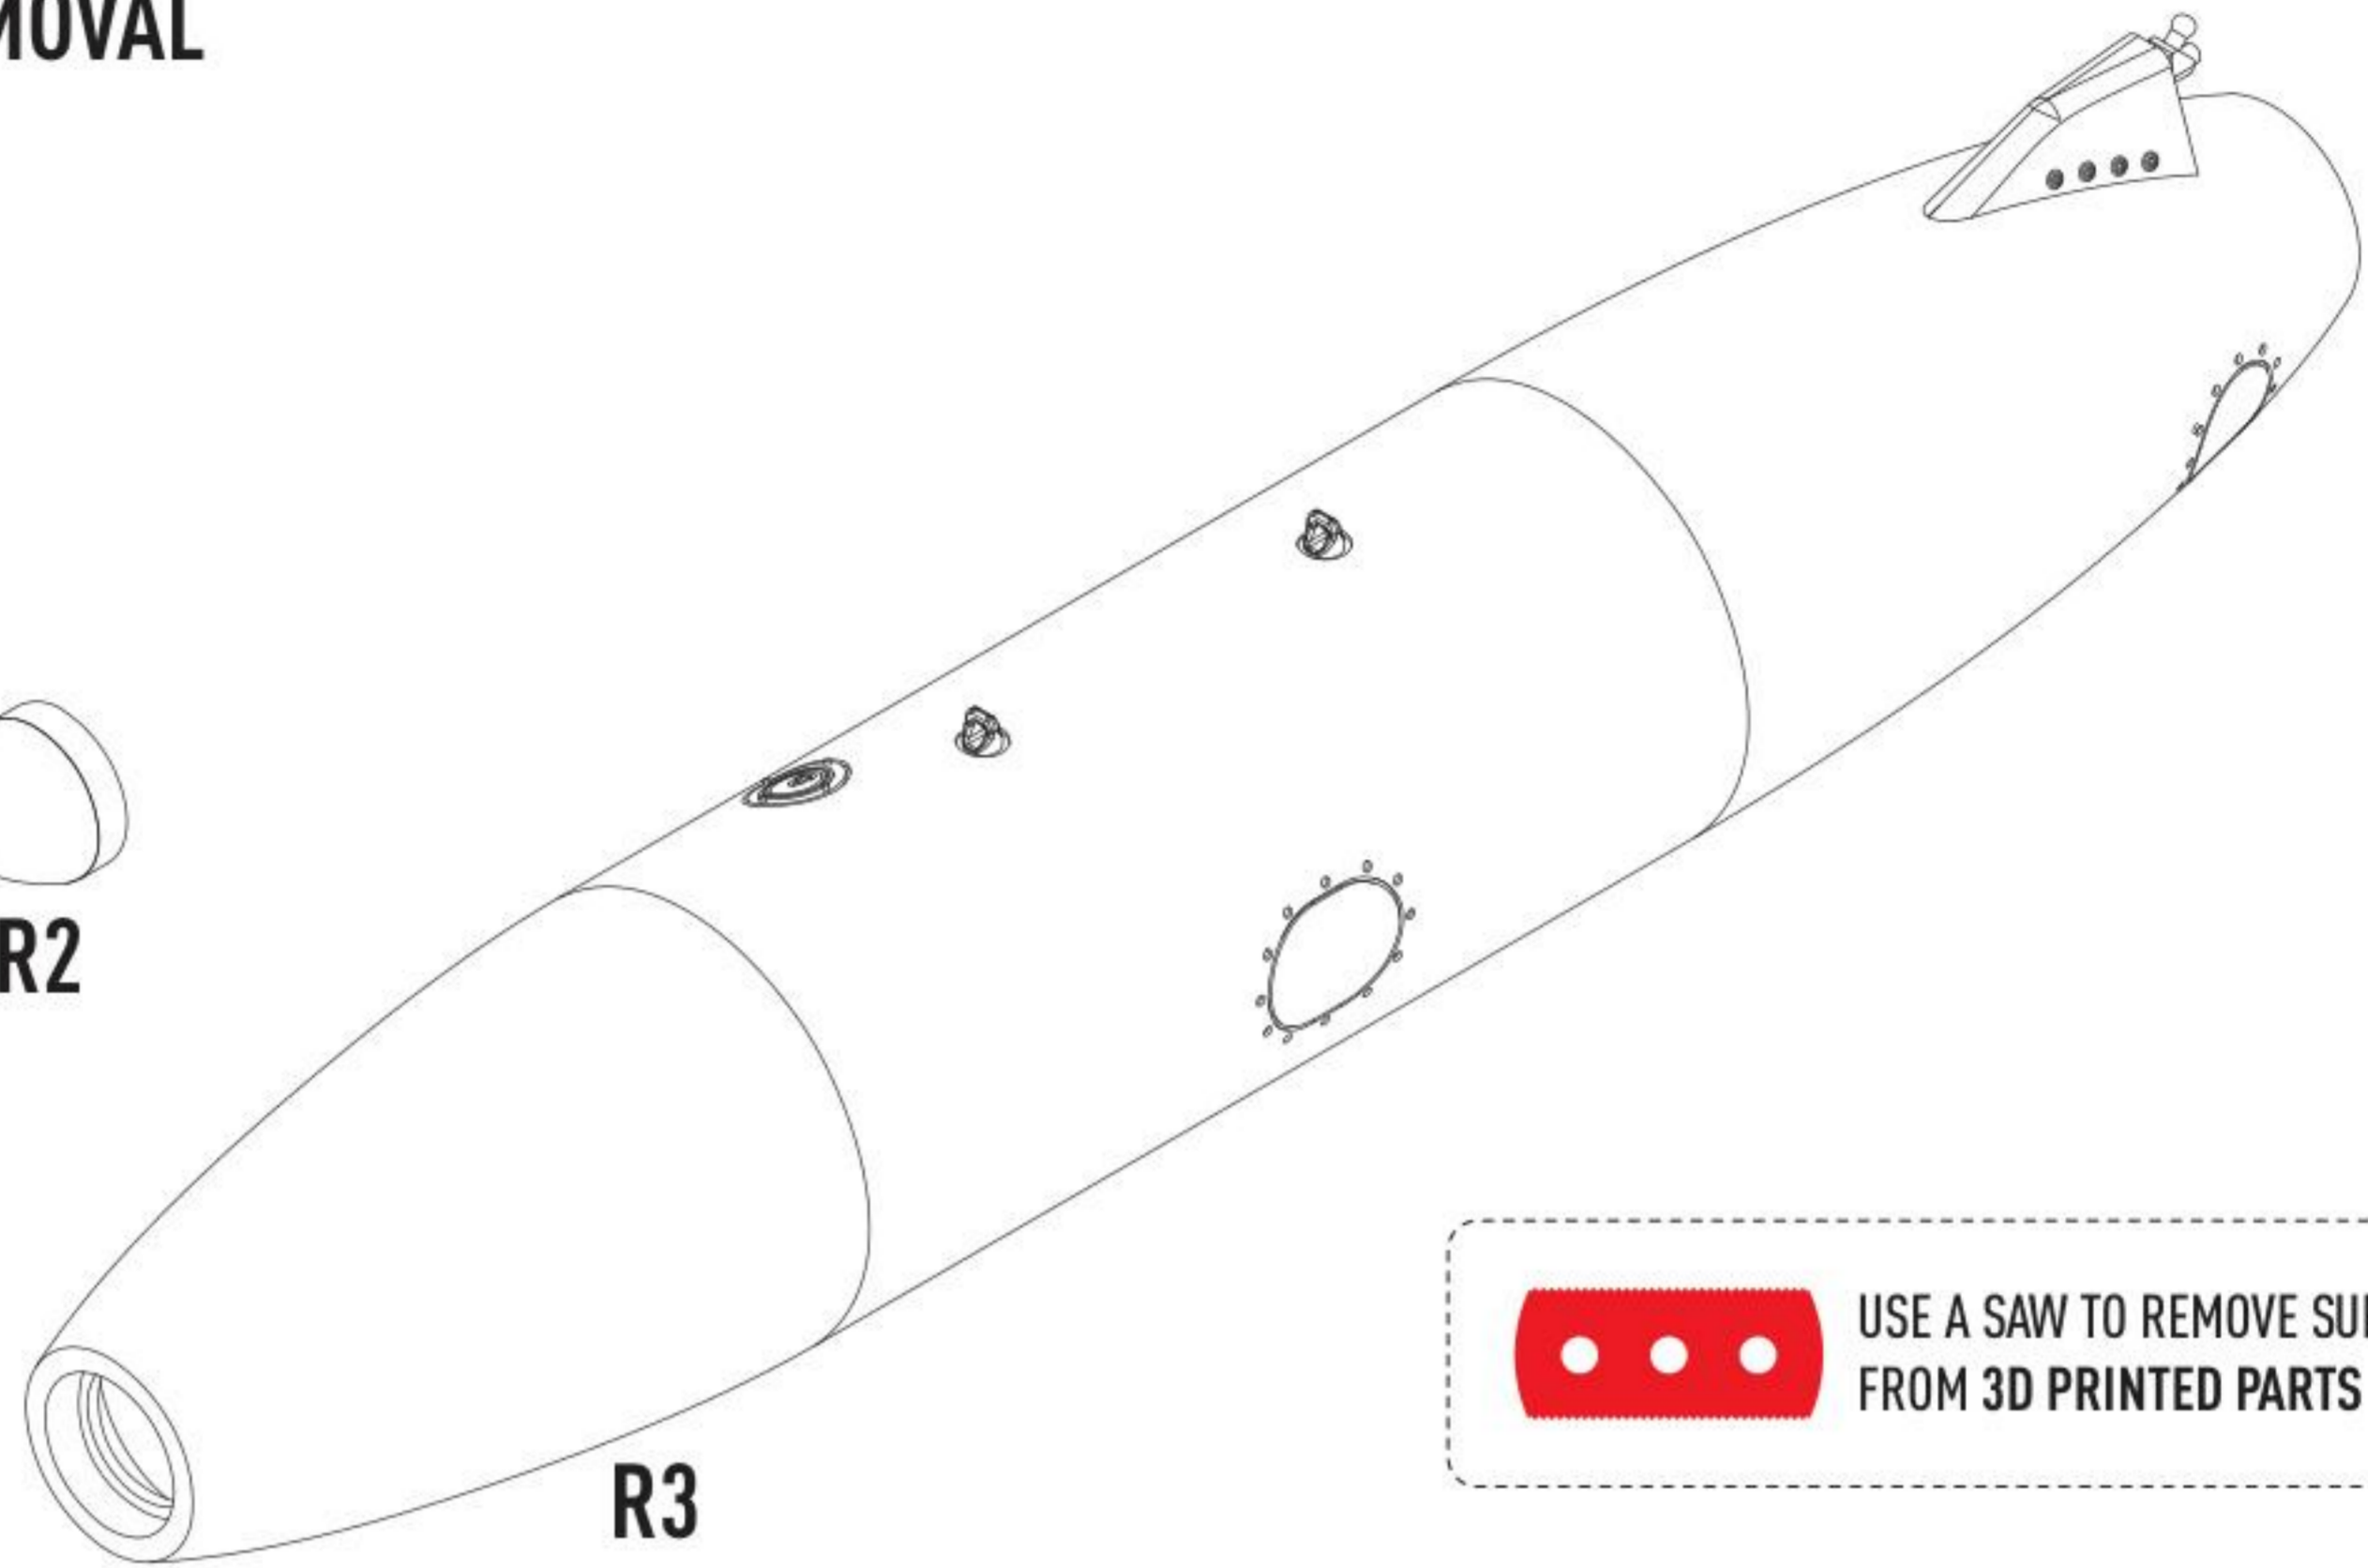

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

1

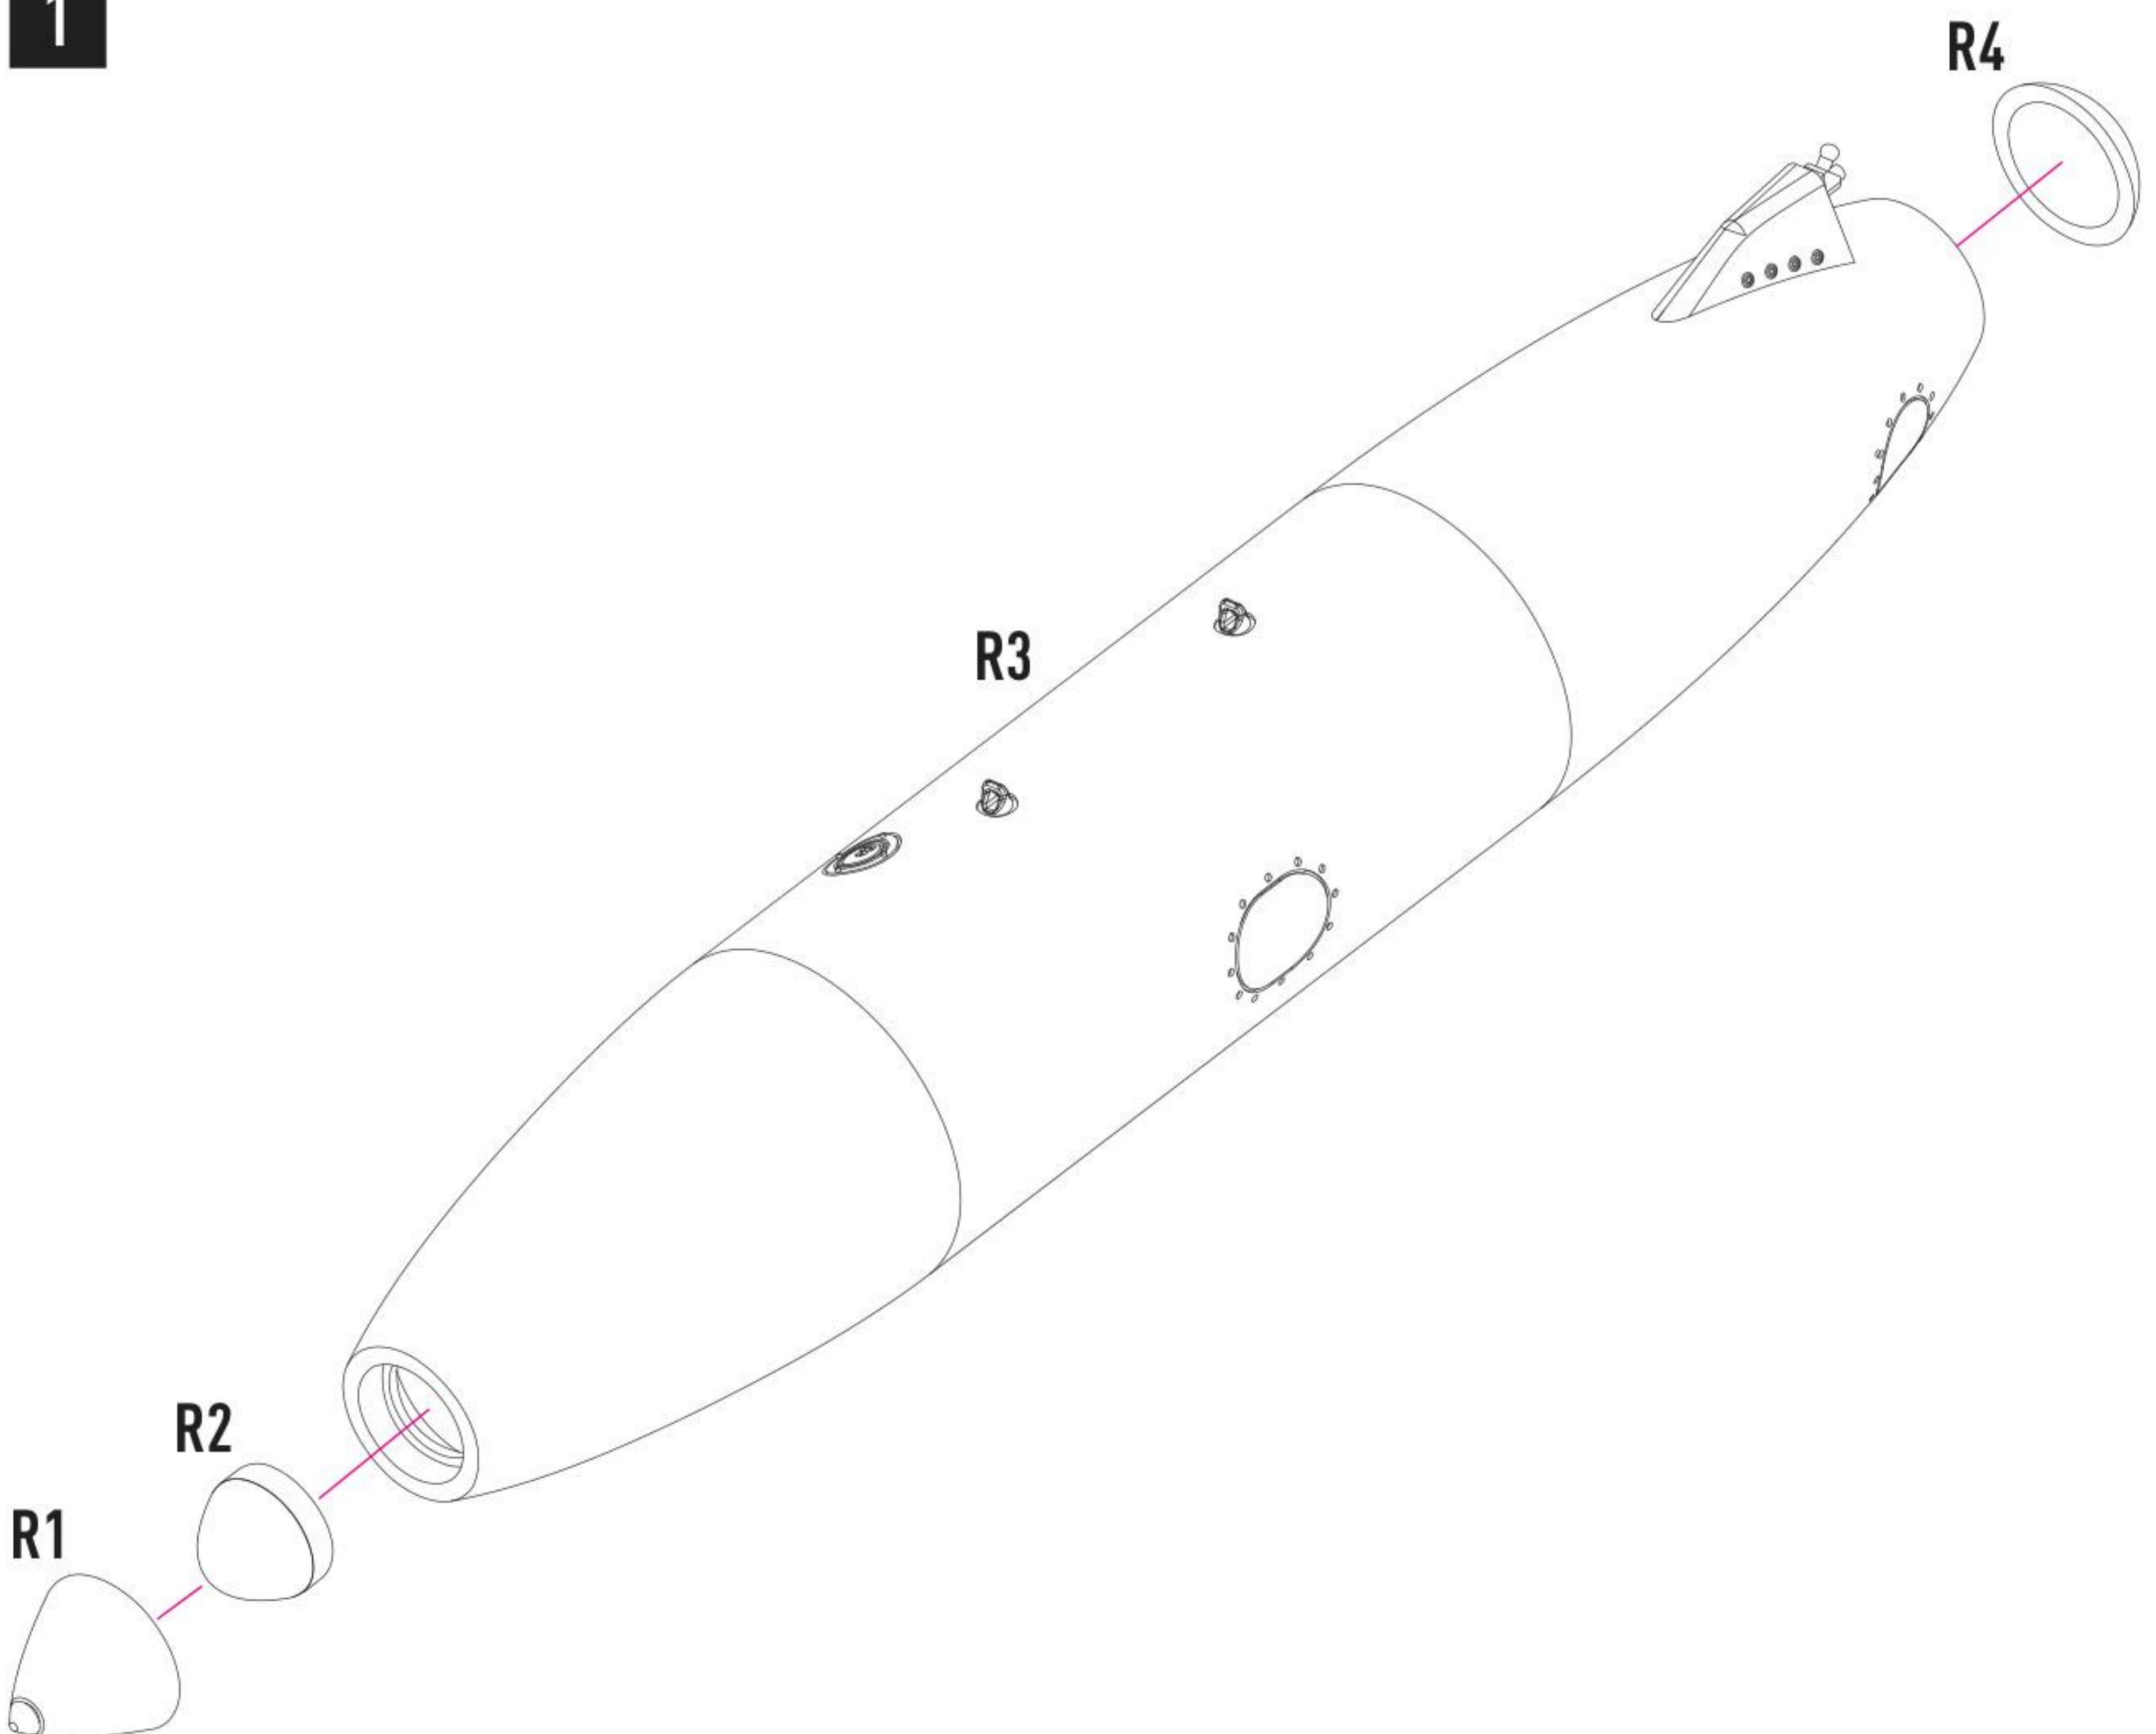

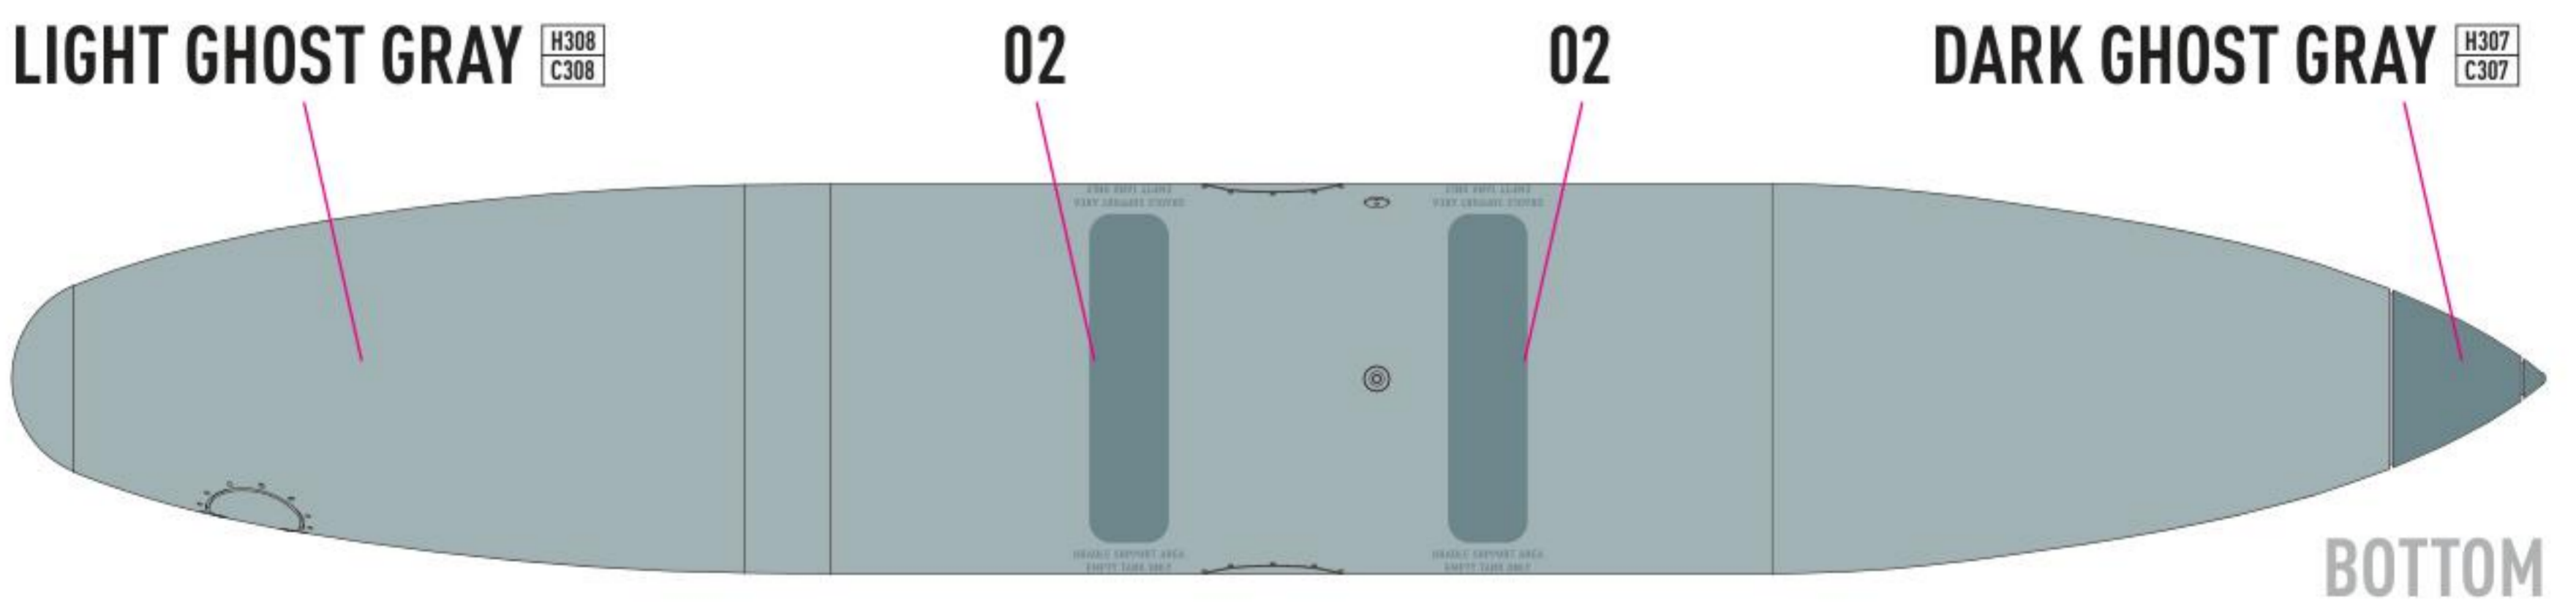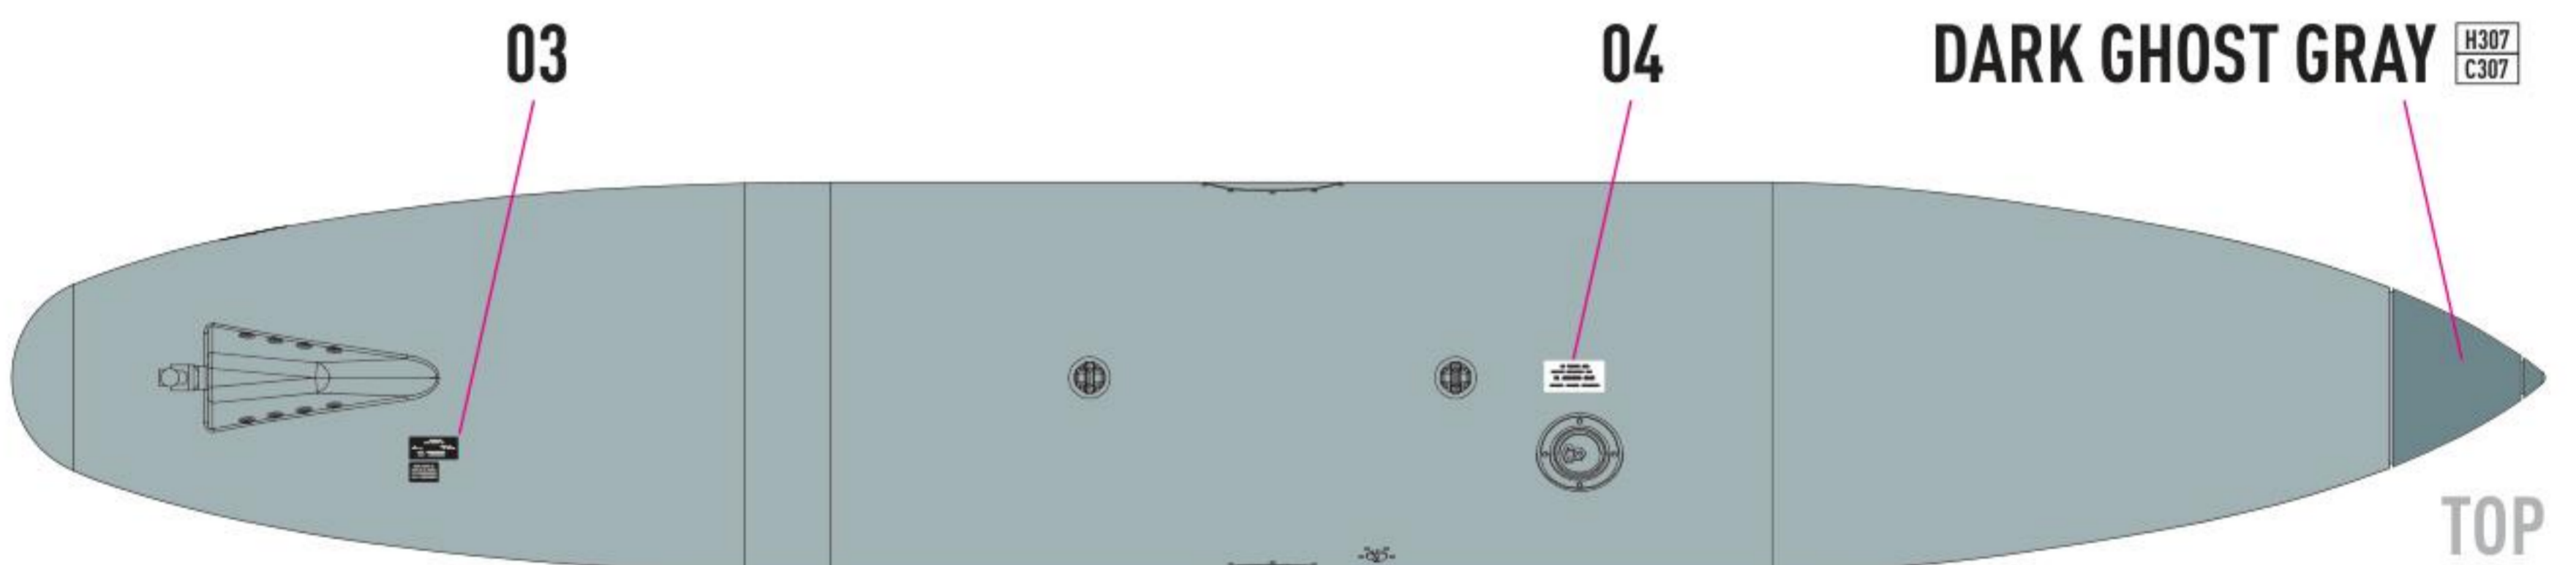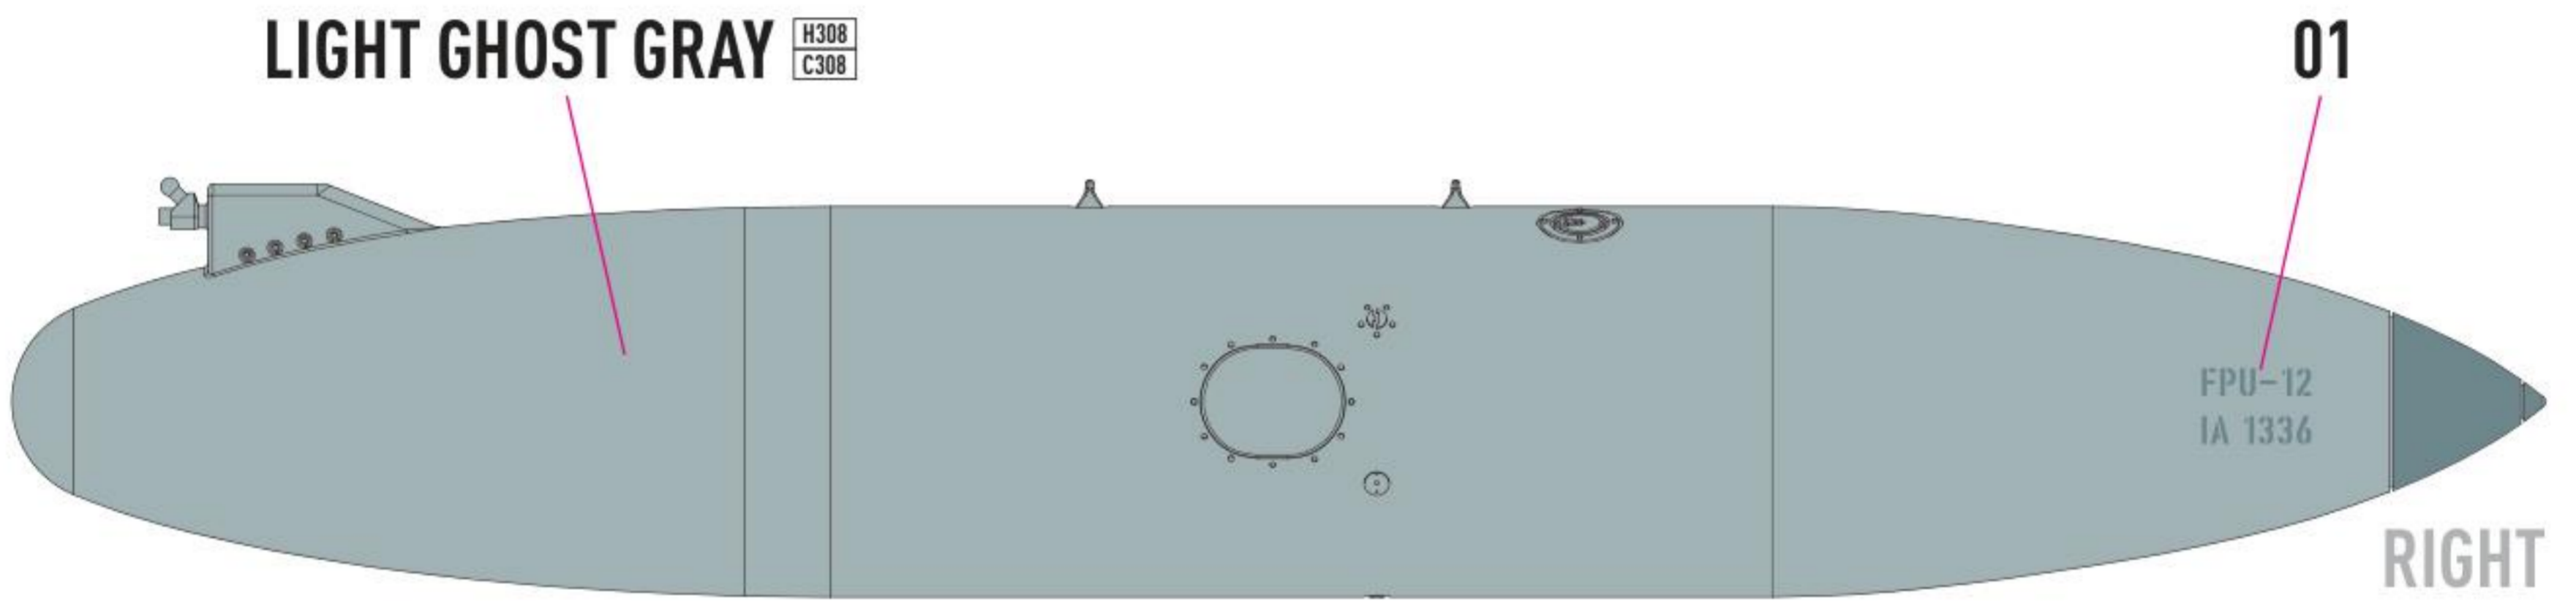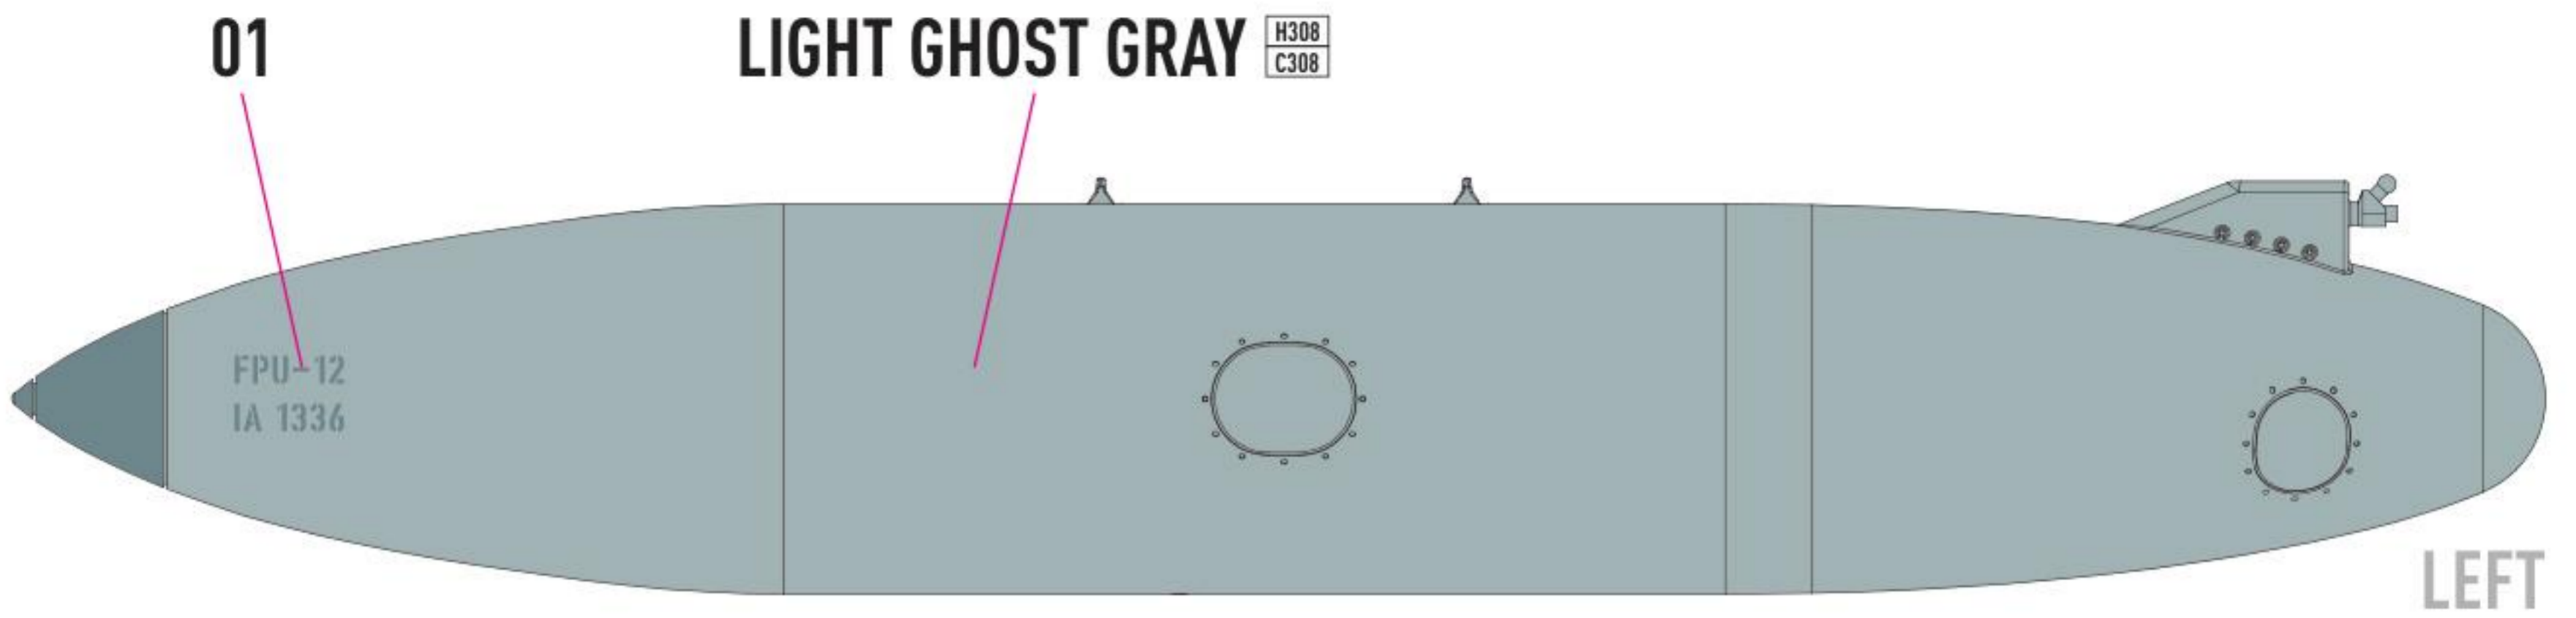

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
LIGHT GHOST GRAY	H308	C308
DARK GHOST GRAY	H307	C307