


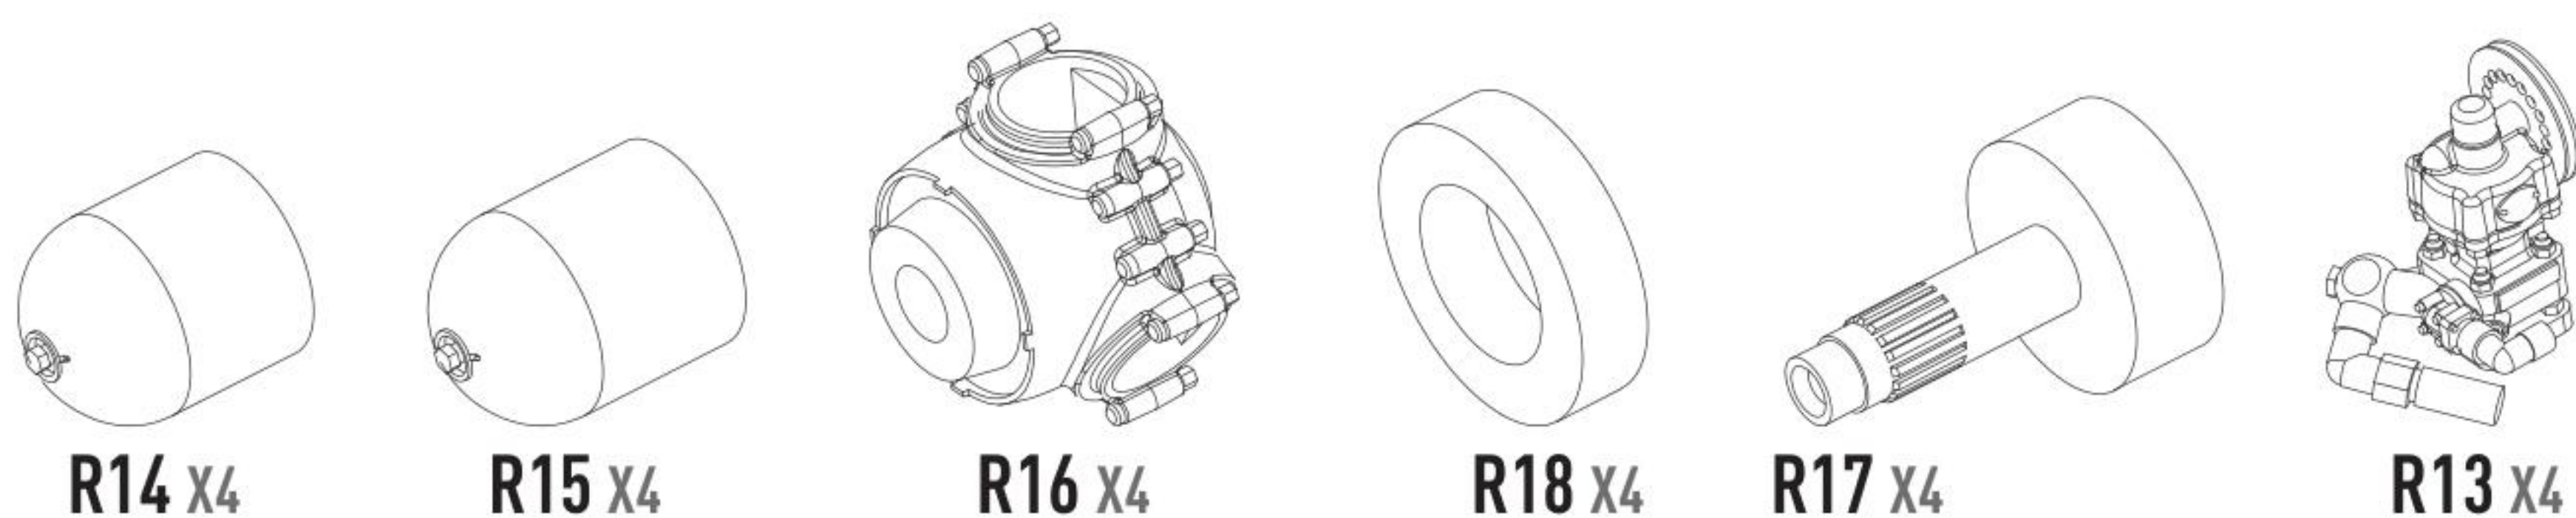


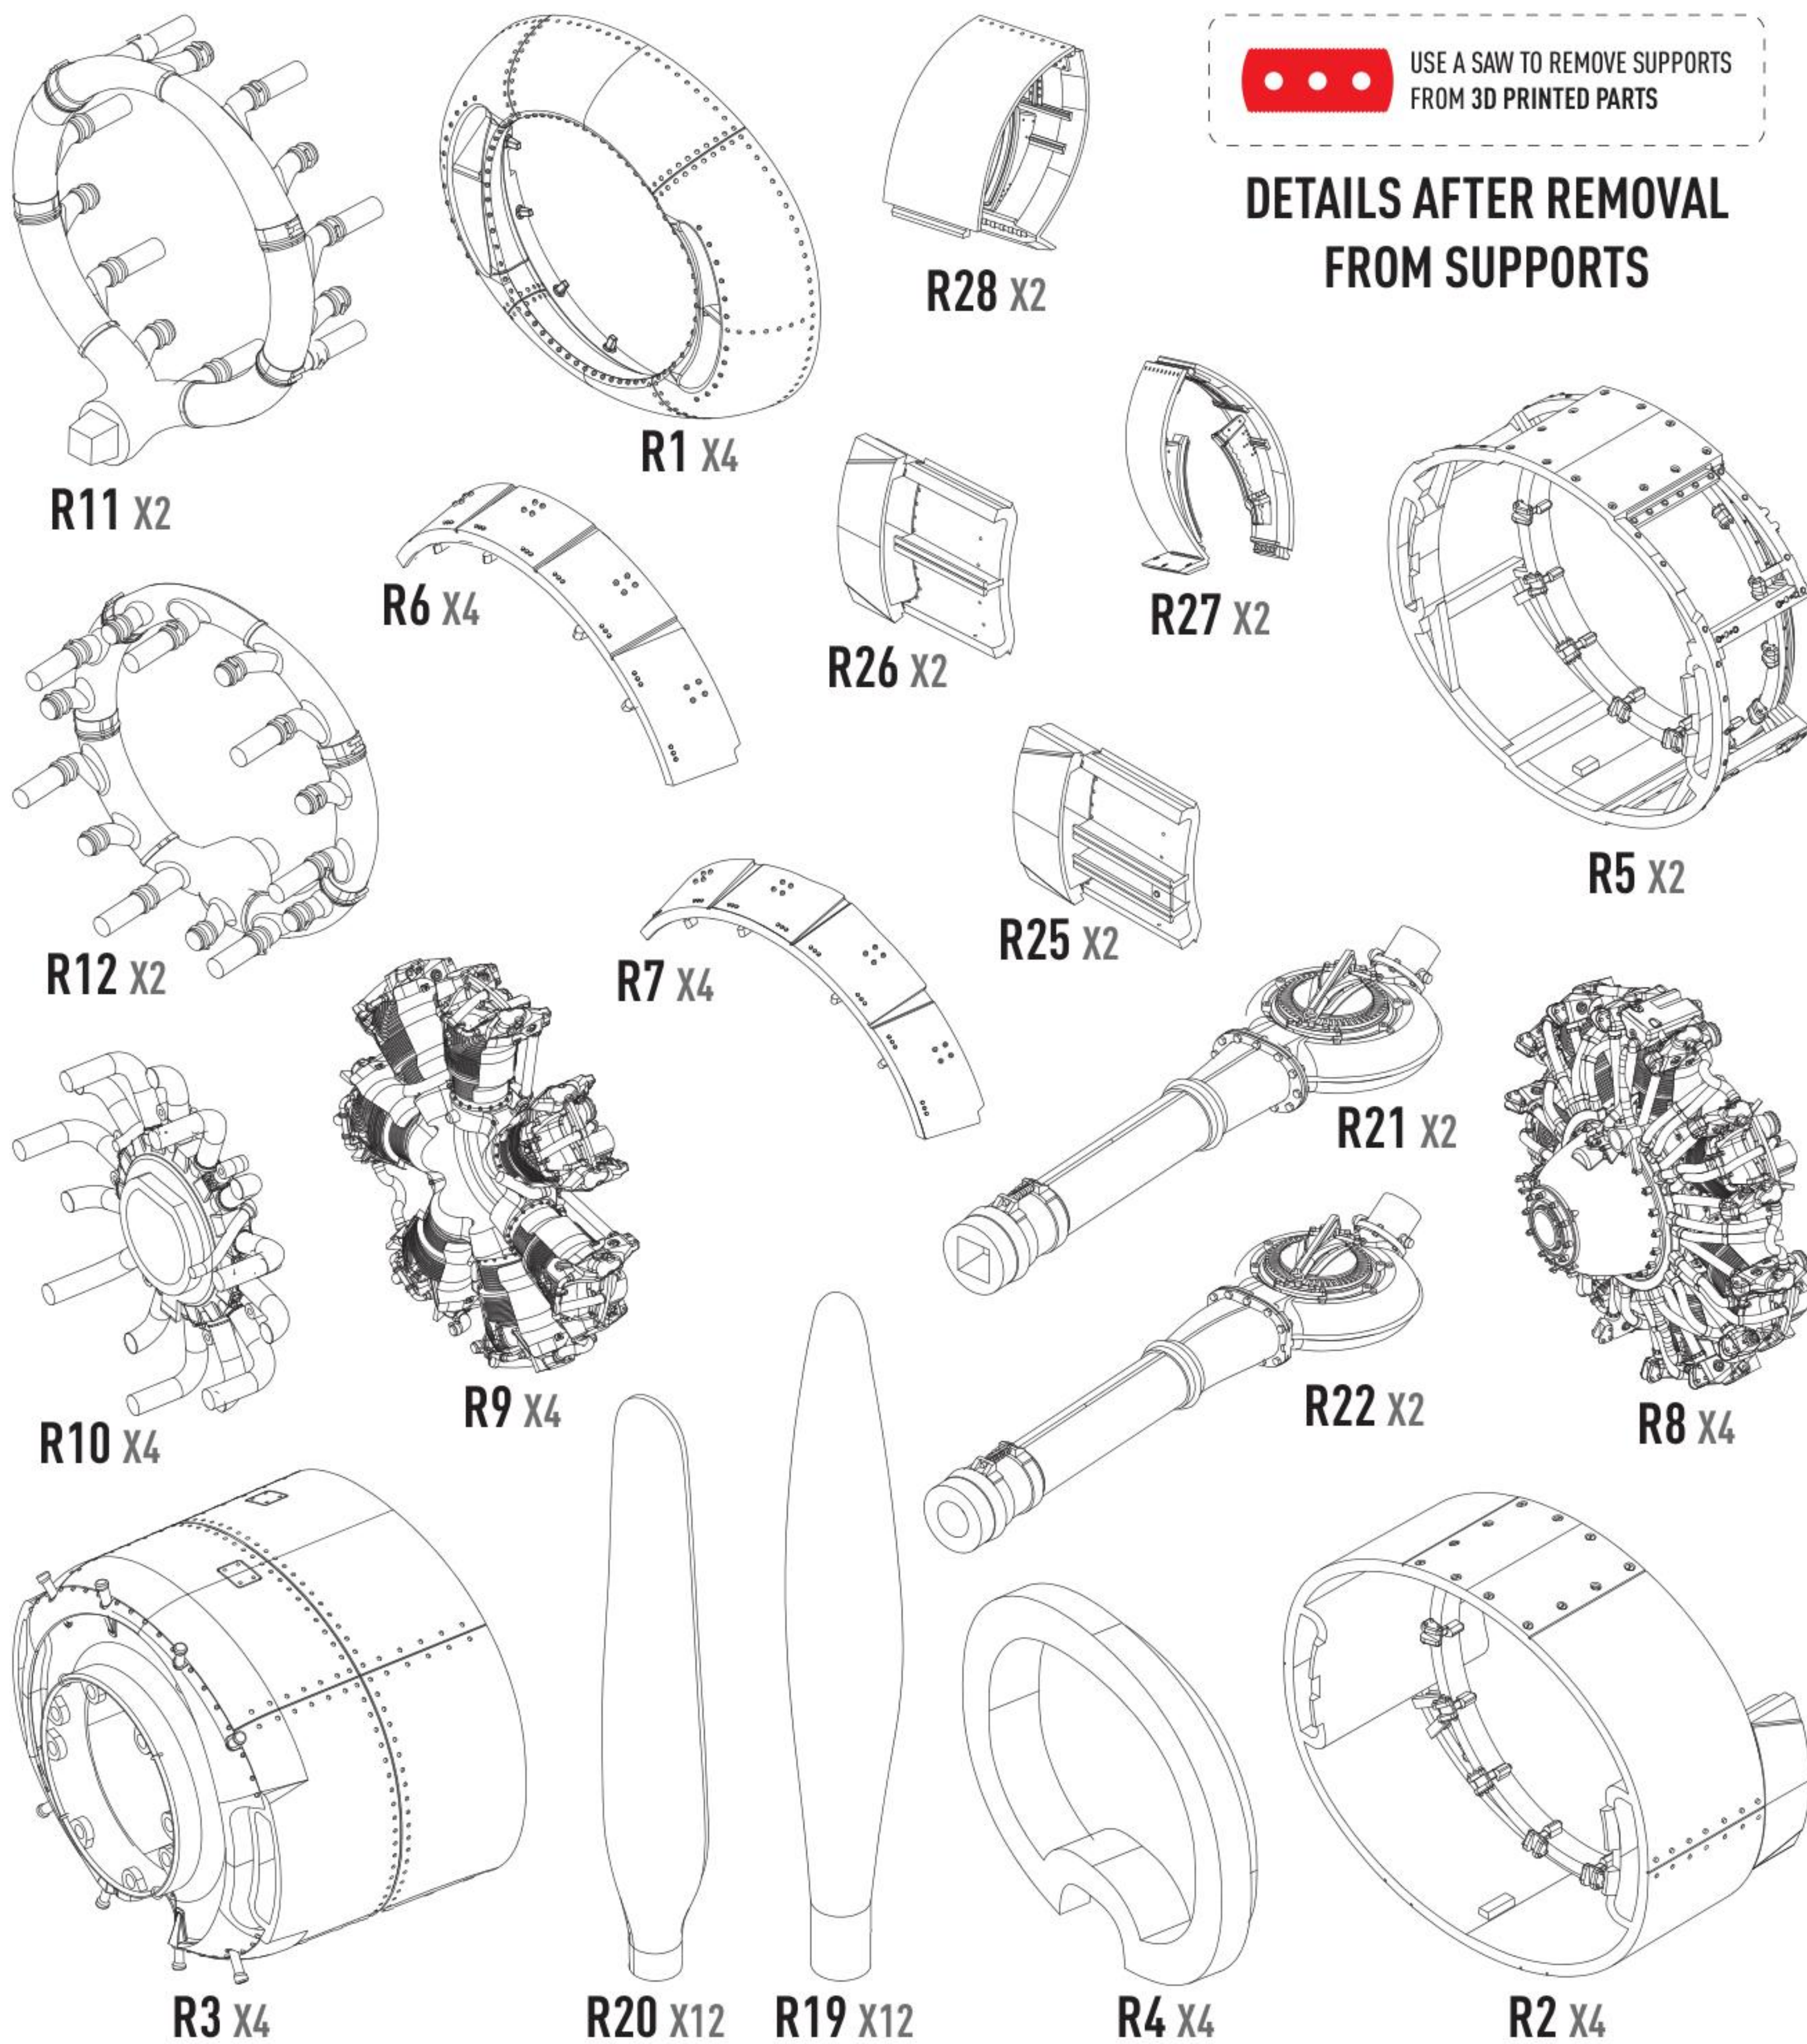


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**

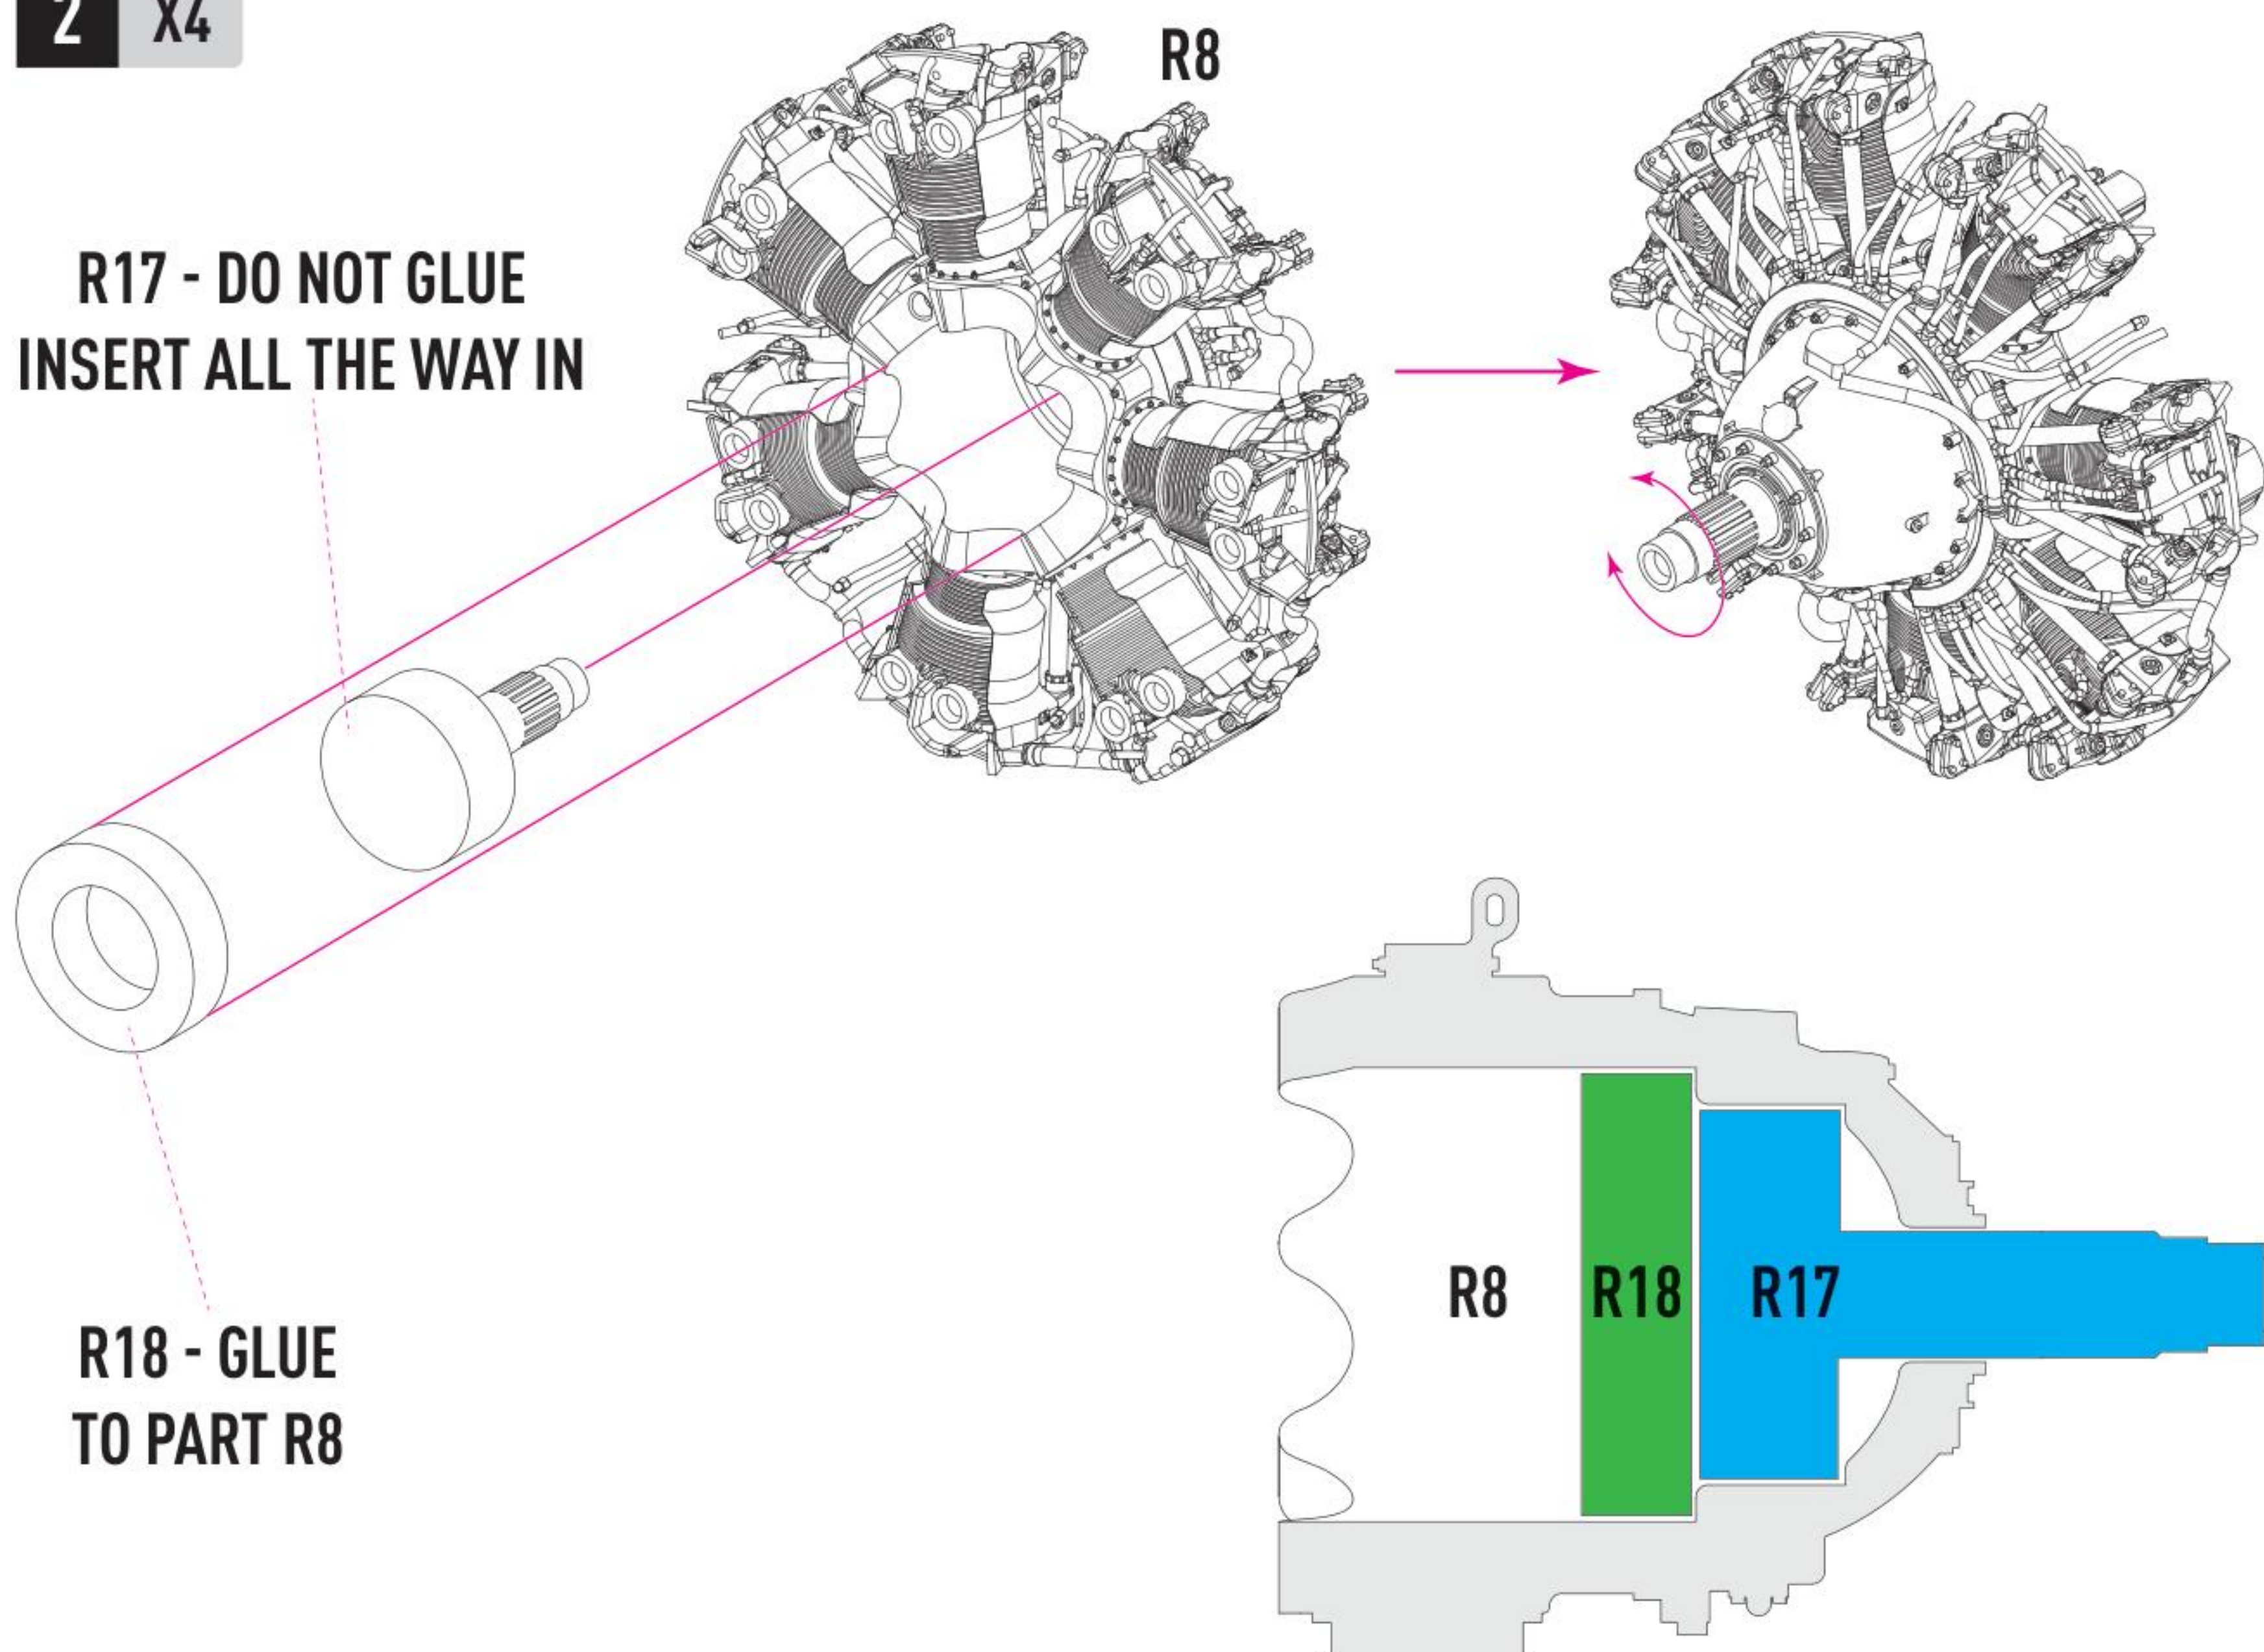

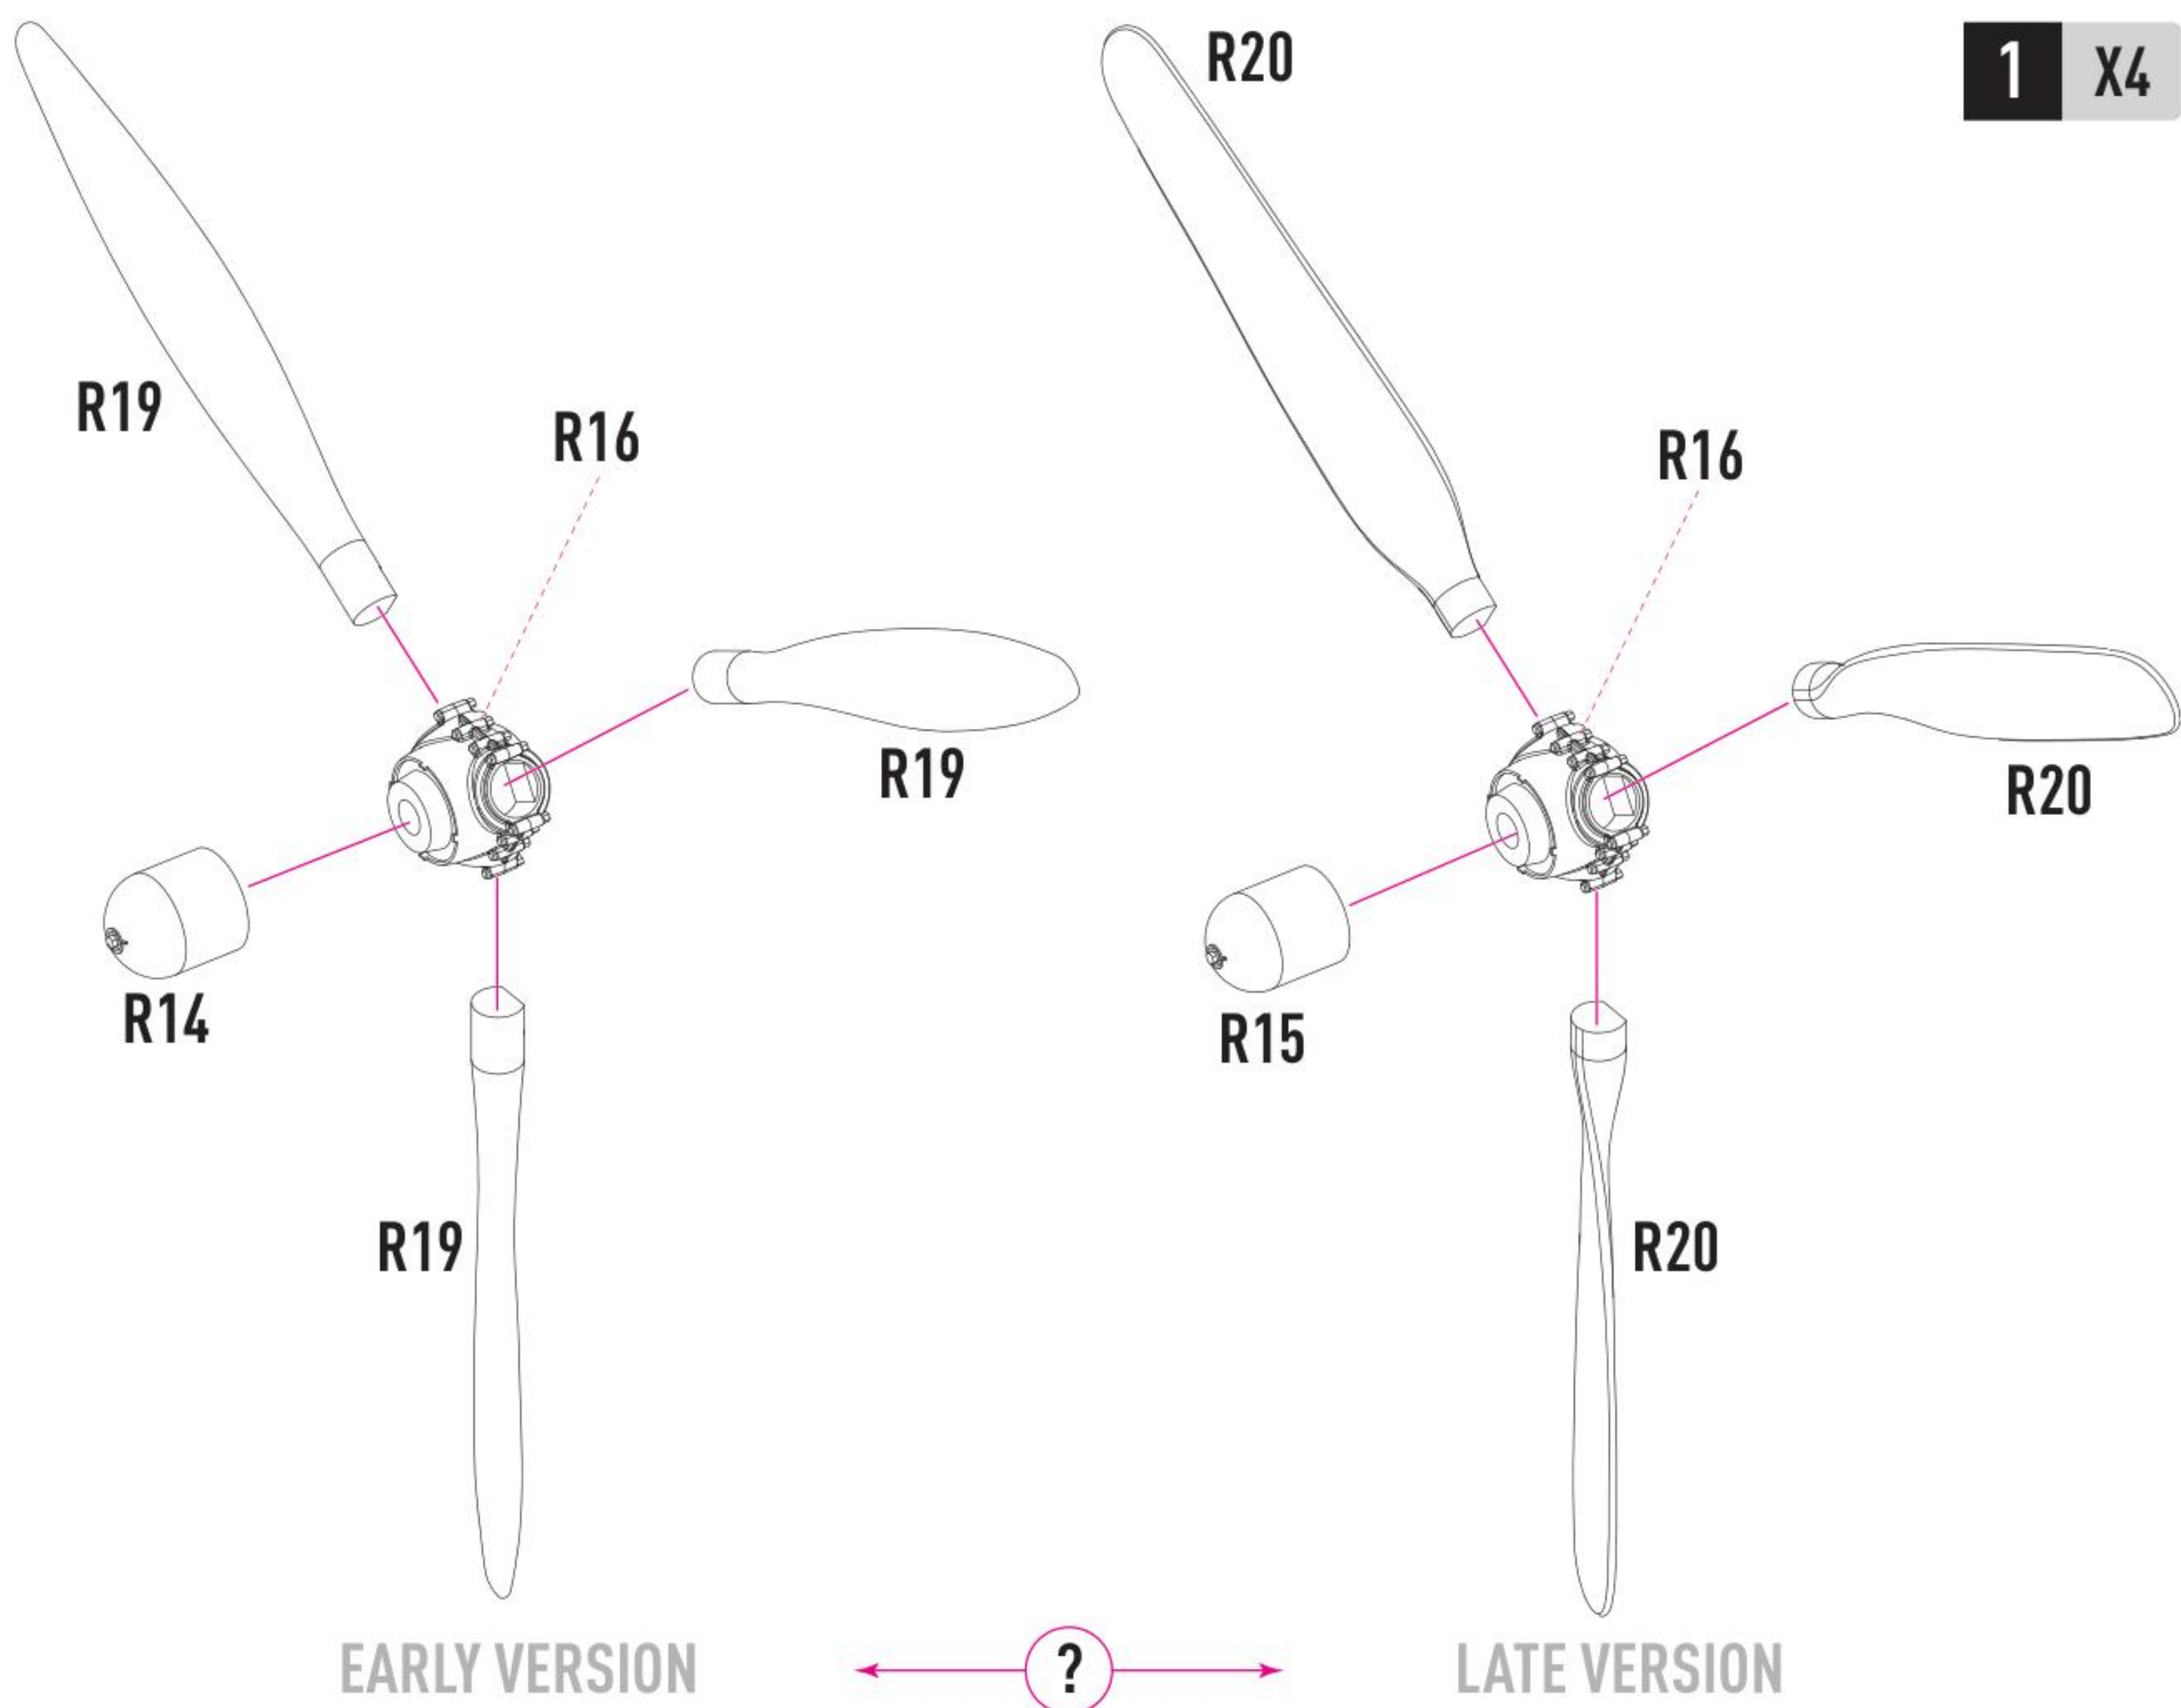


STEP 2

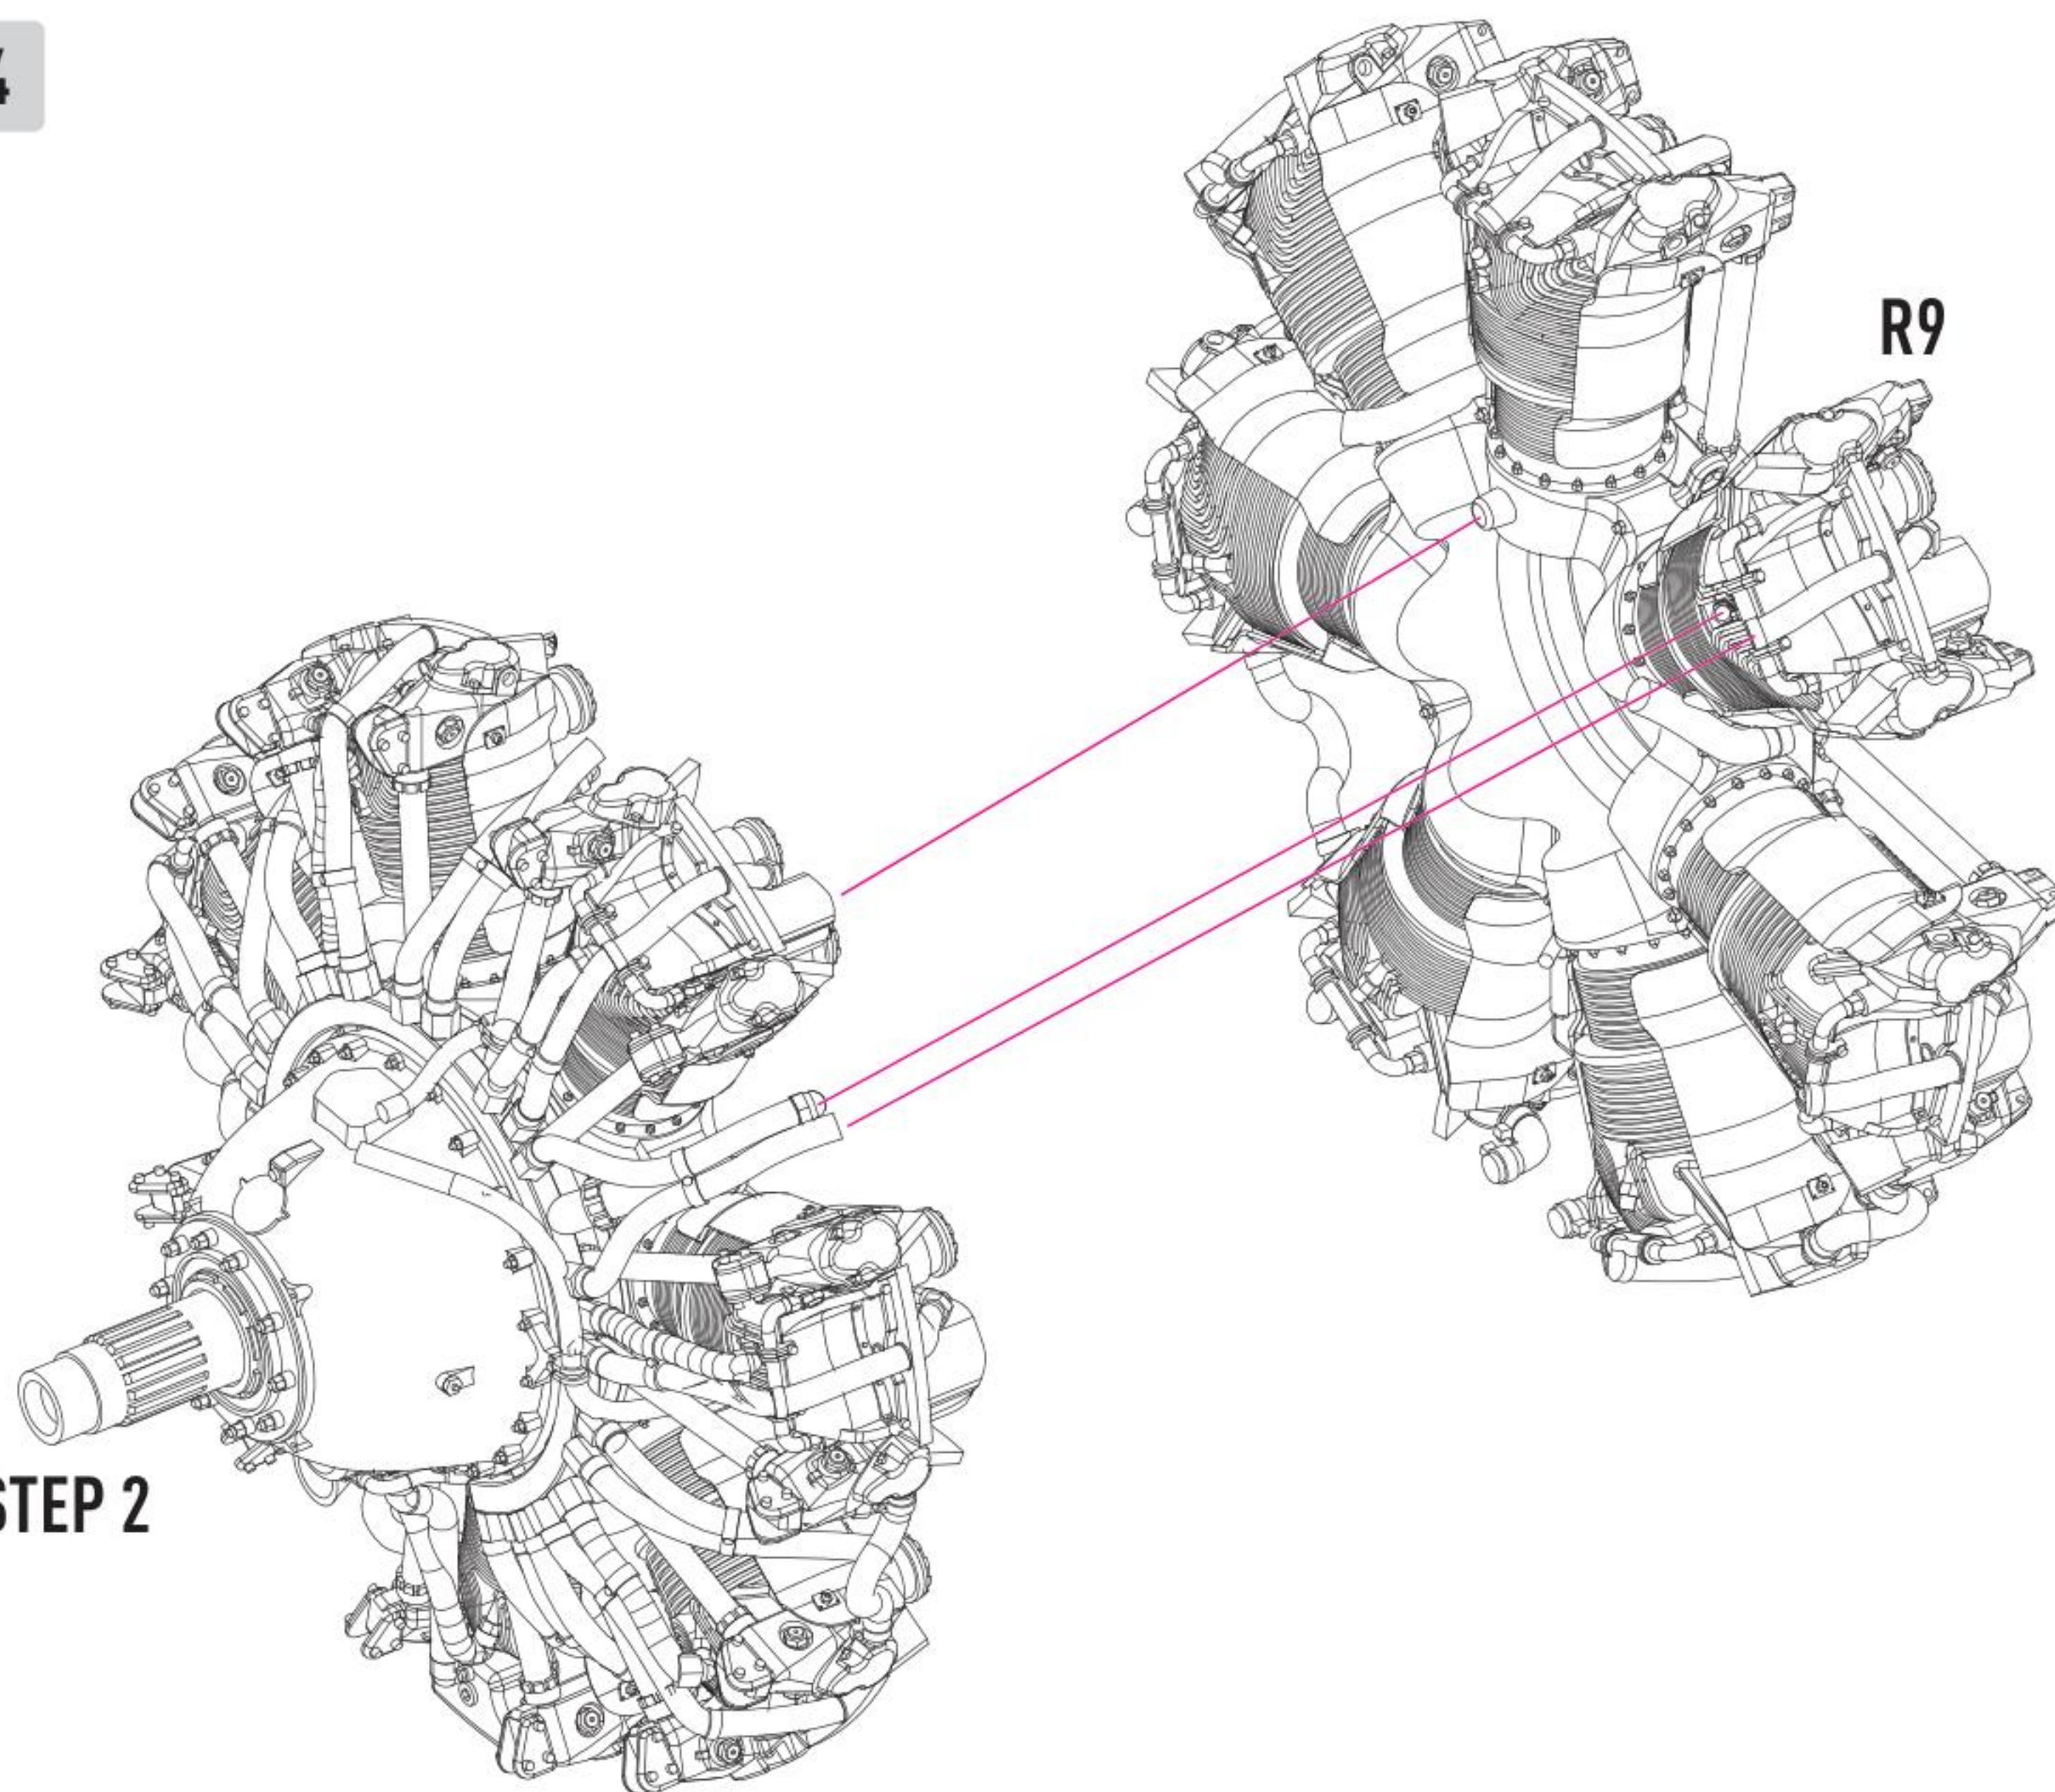


R10


STEP 3

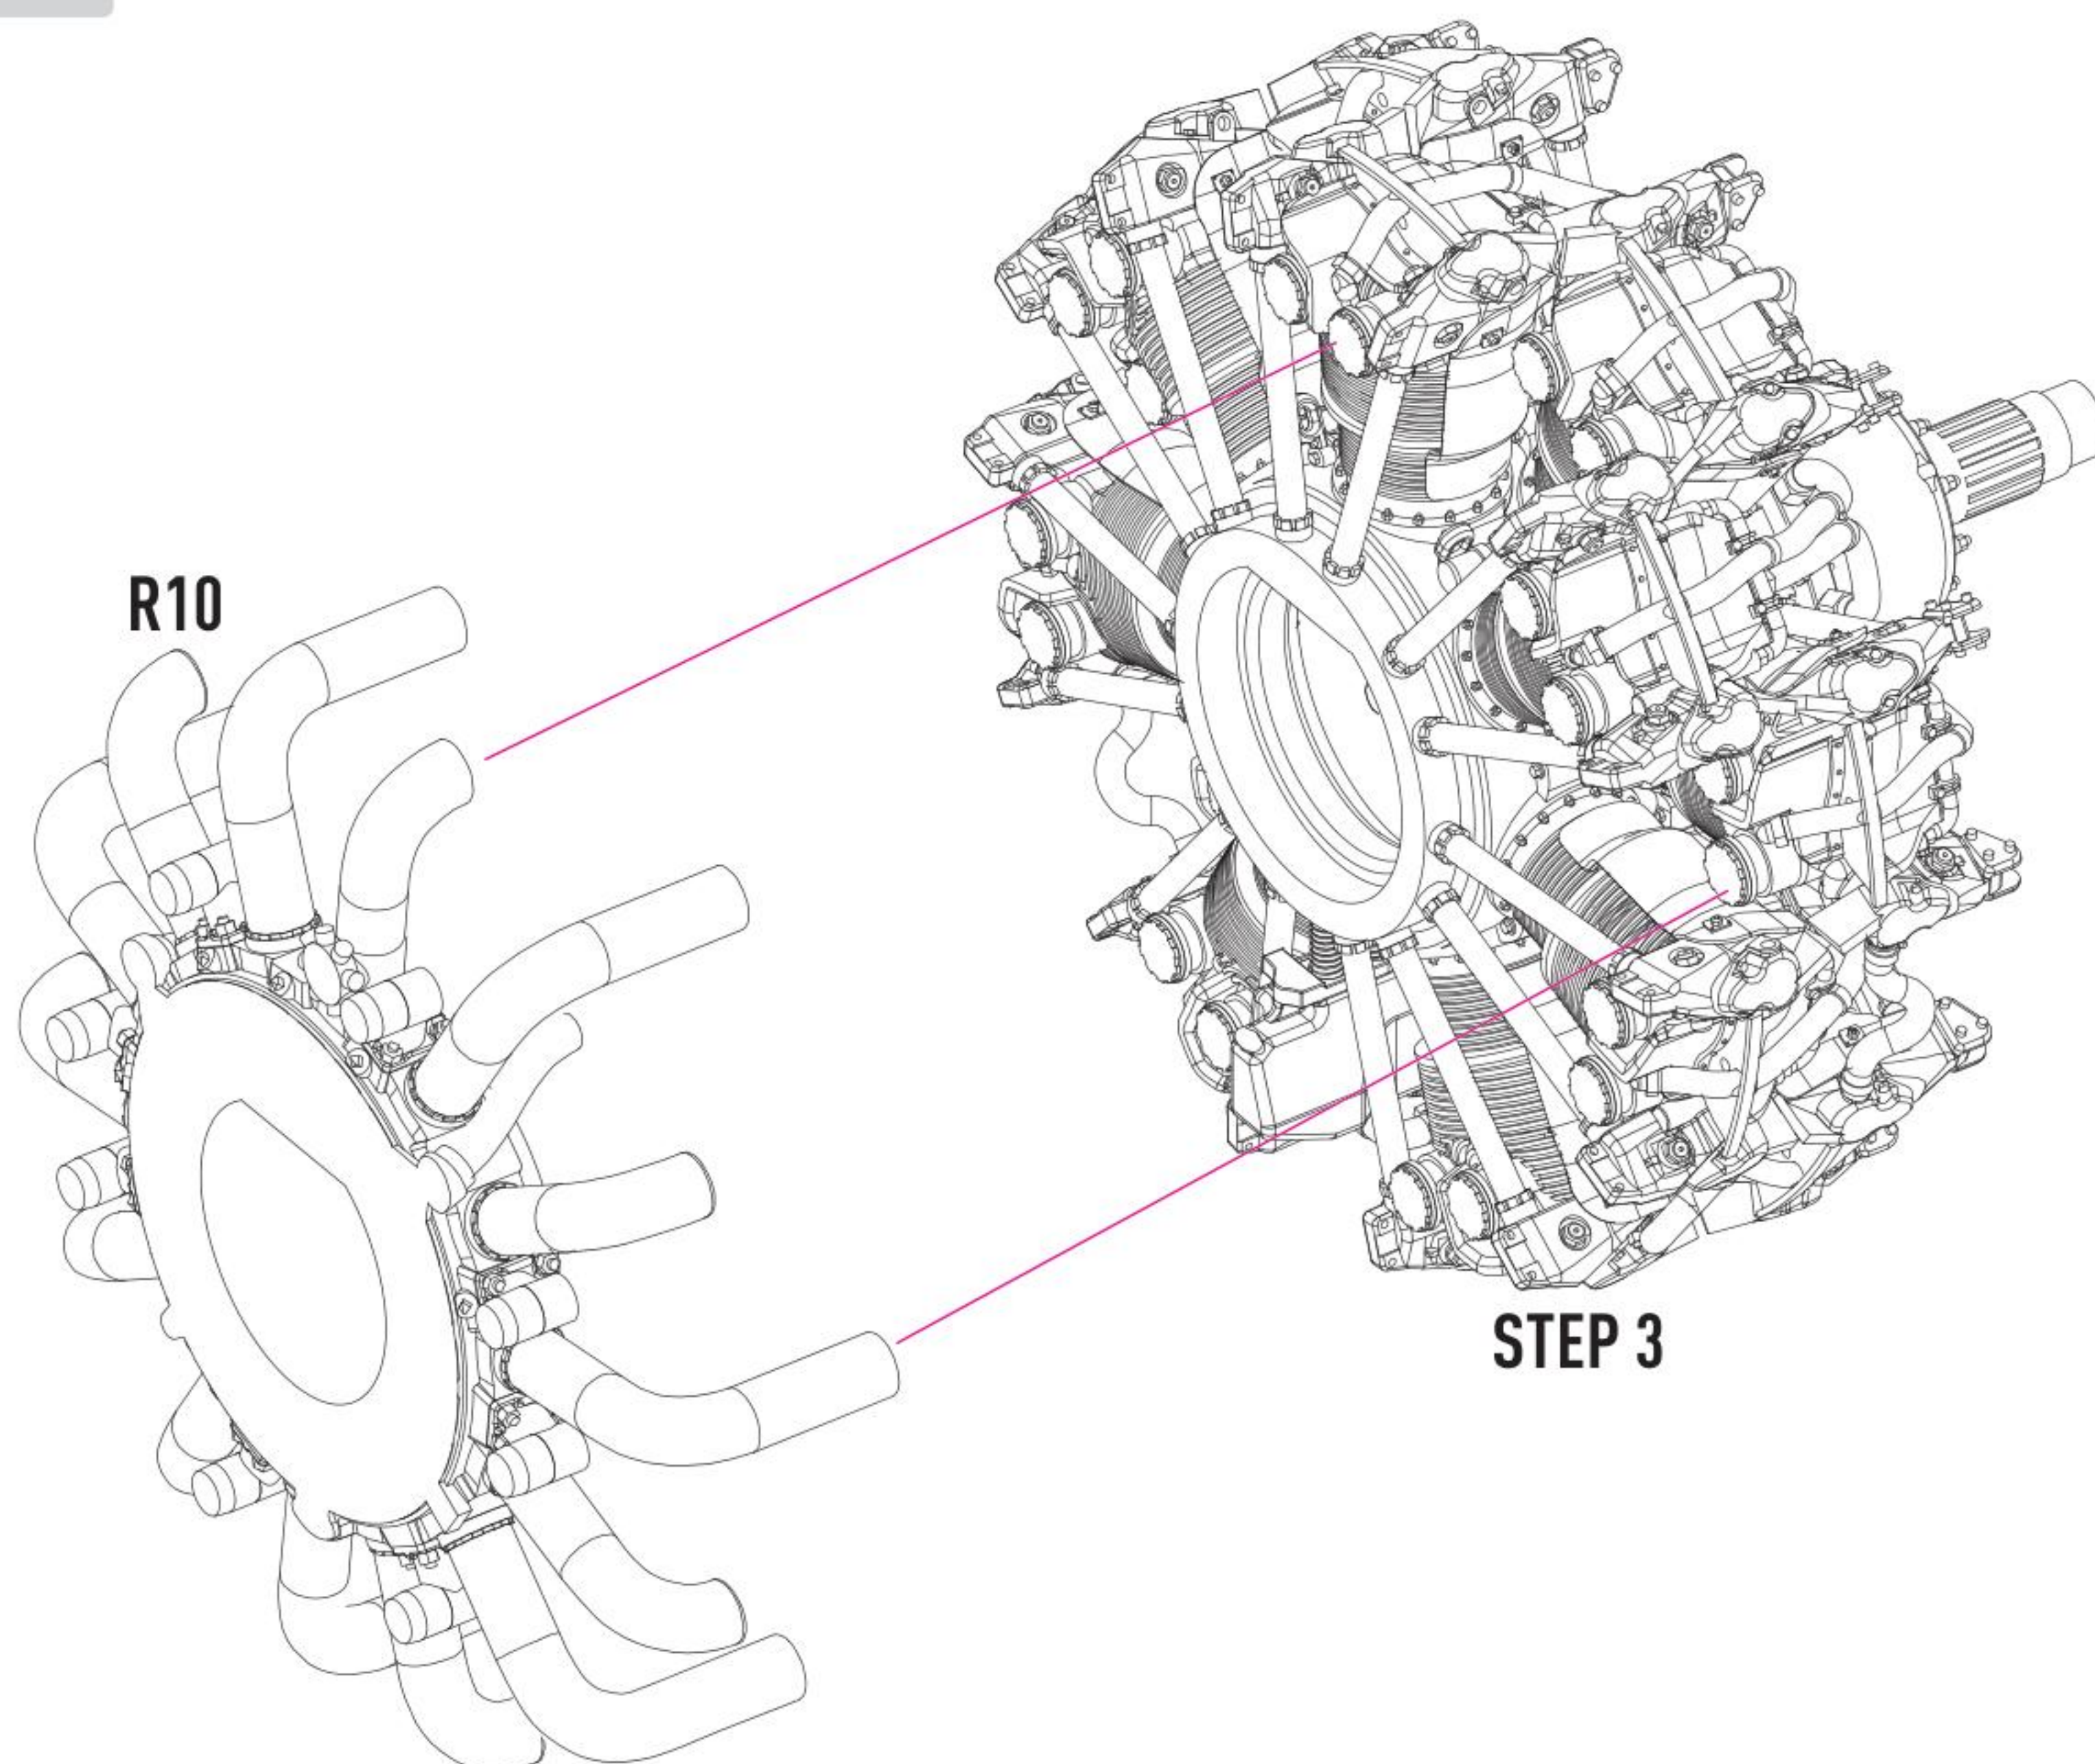



5 X4

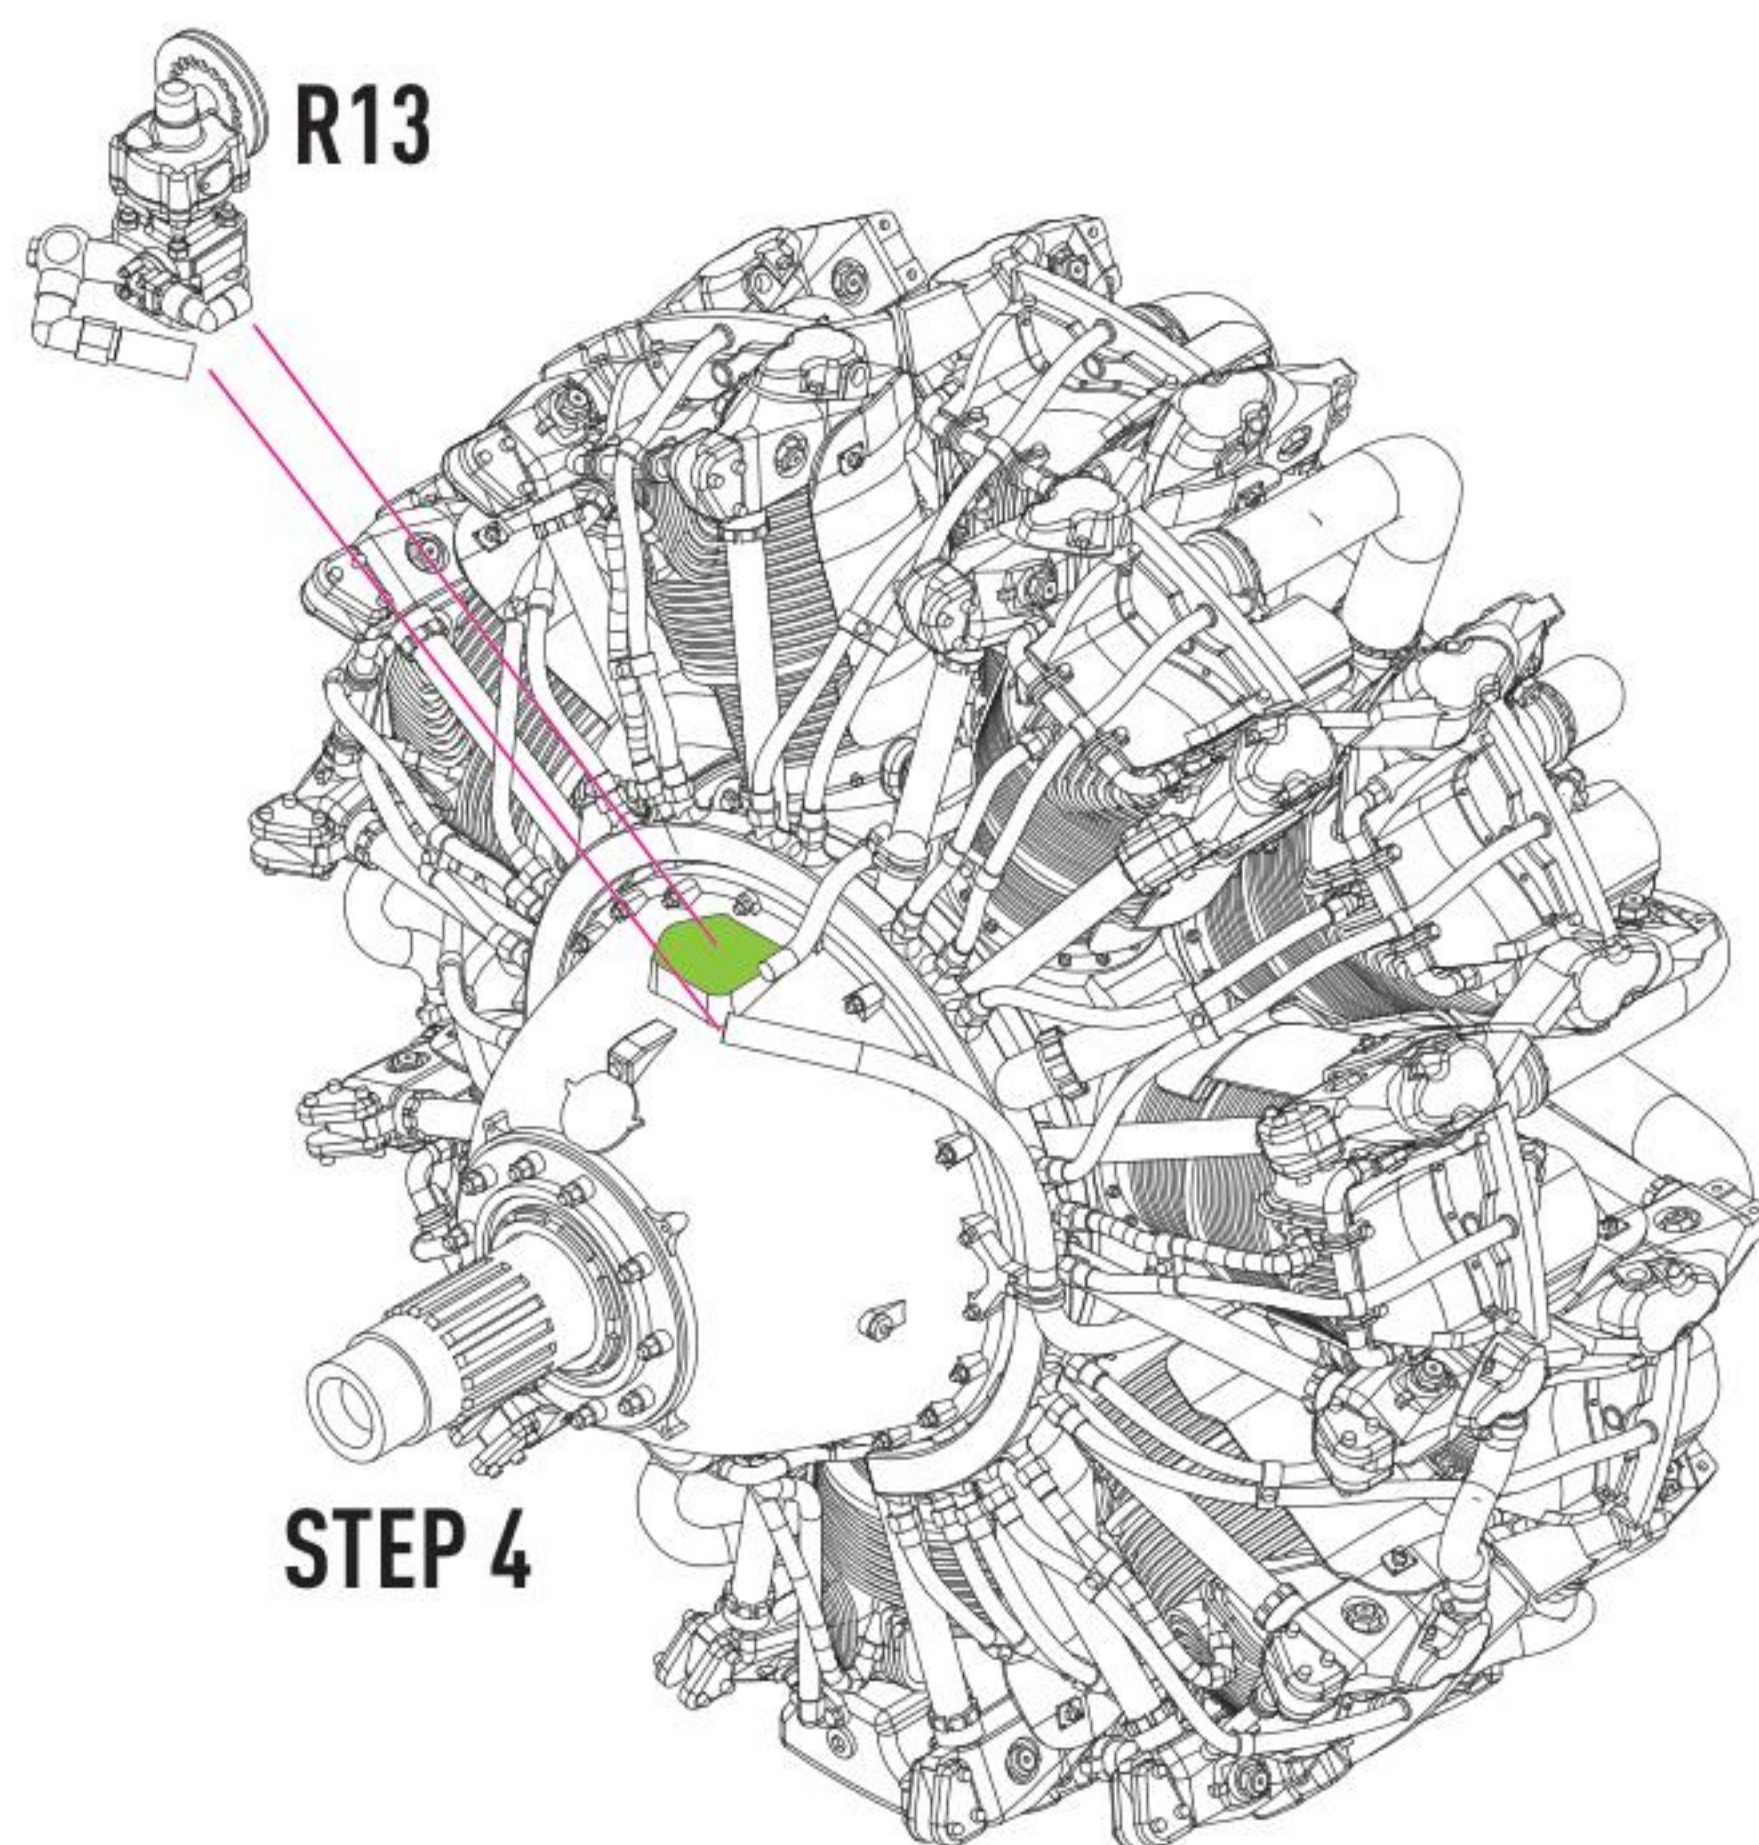


6 X4 VARIANT 1
(CLOSED)

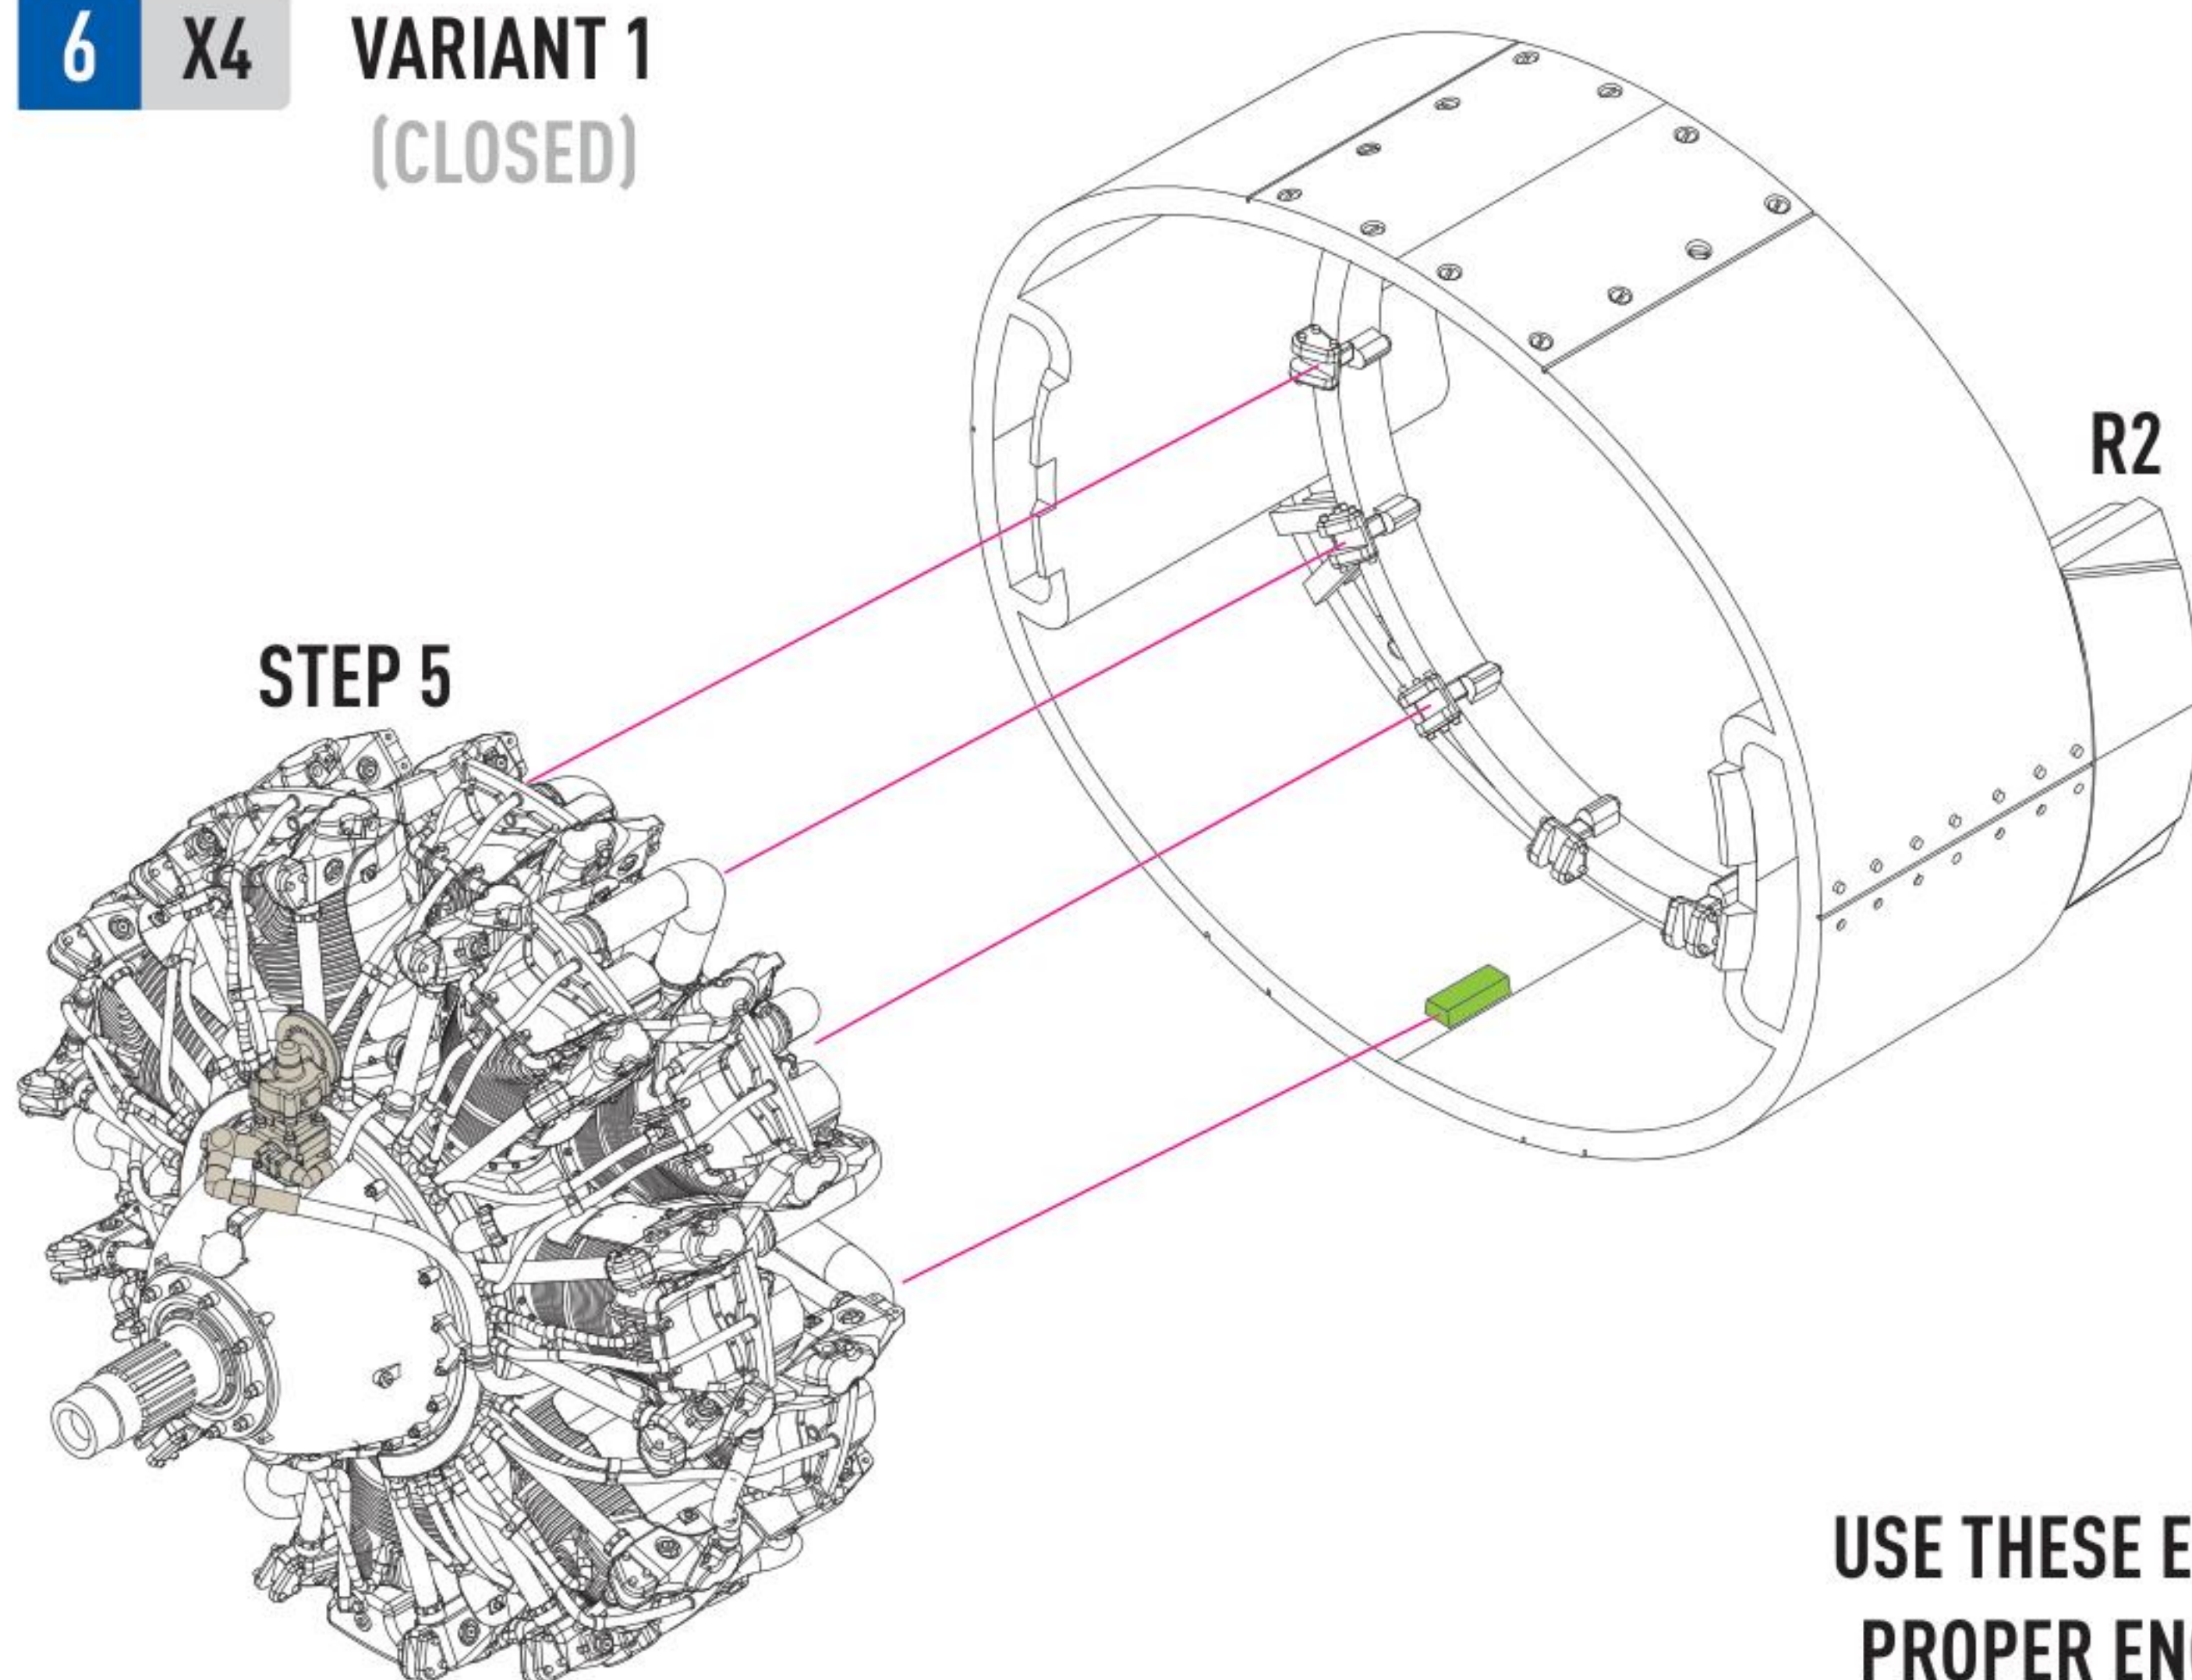


USE THESE ELEMENTS FOR
PROPER ENGINE FITTING

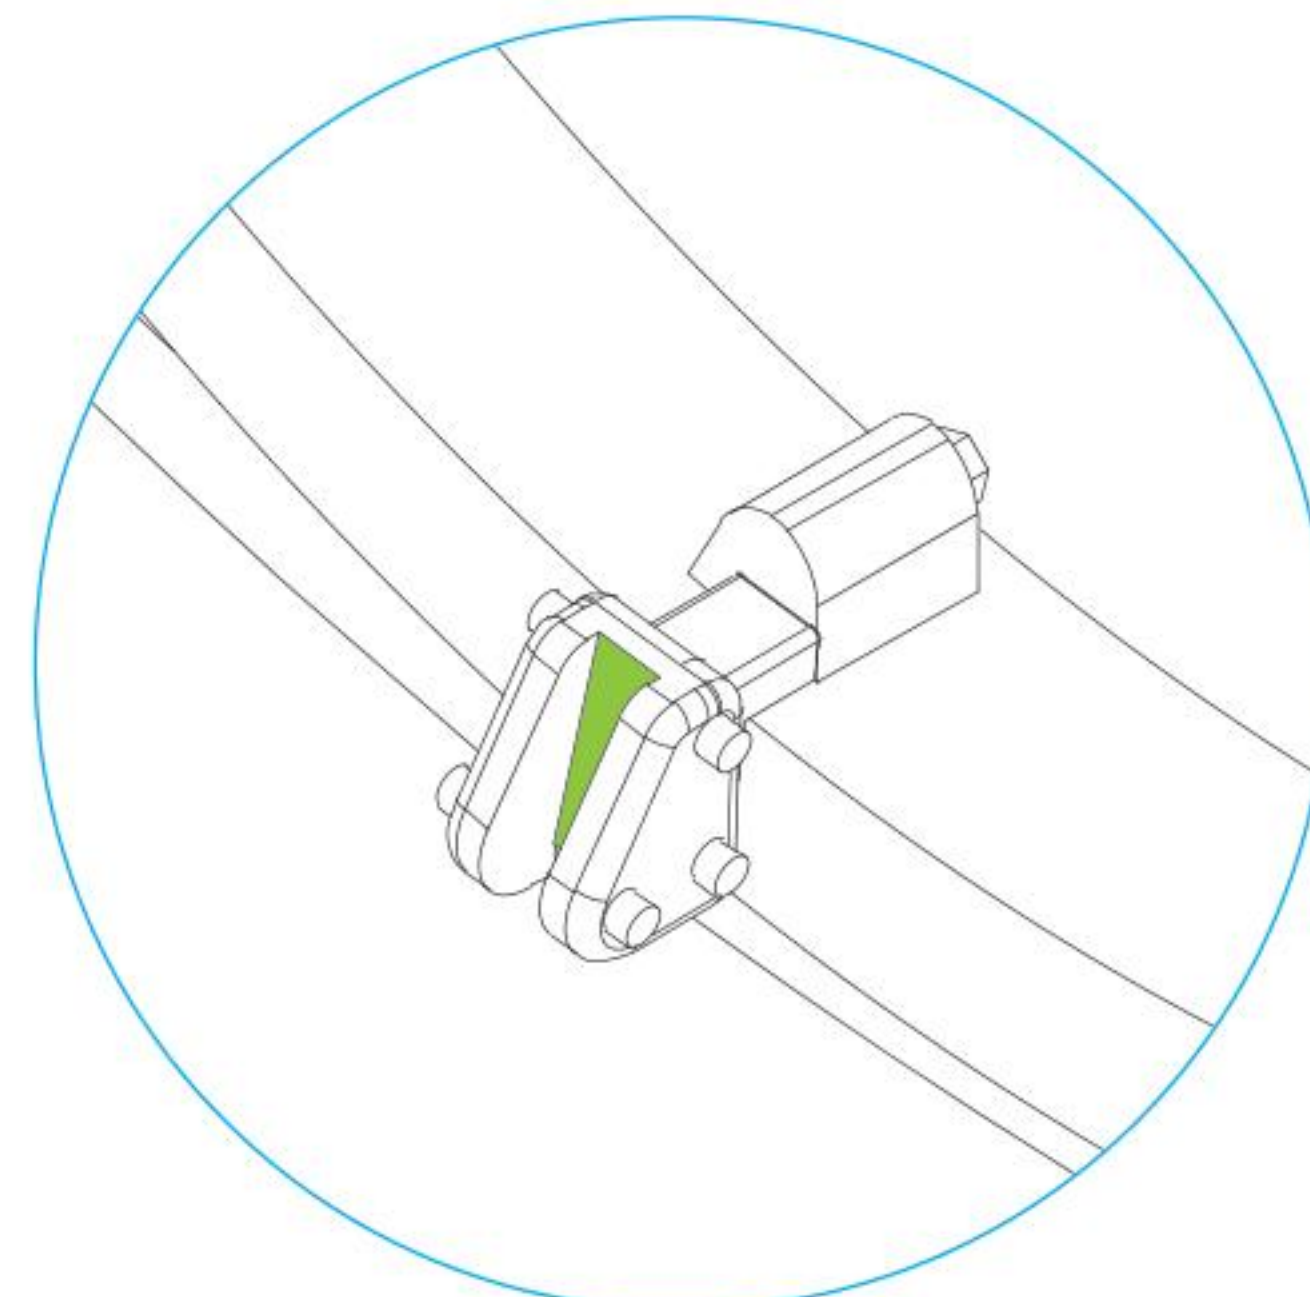
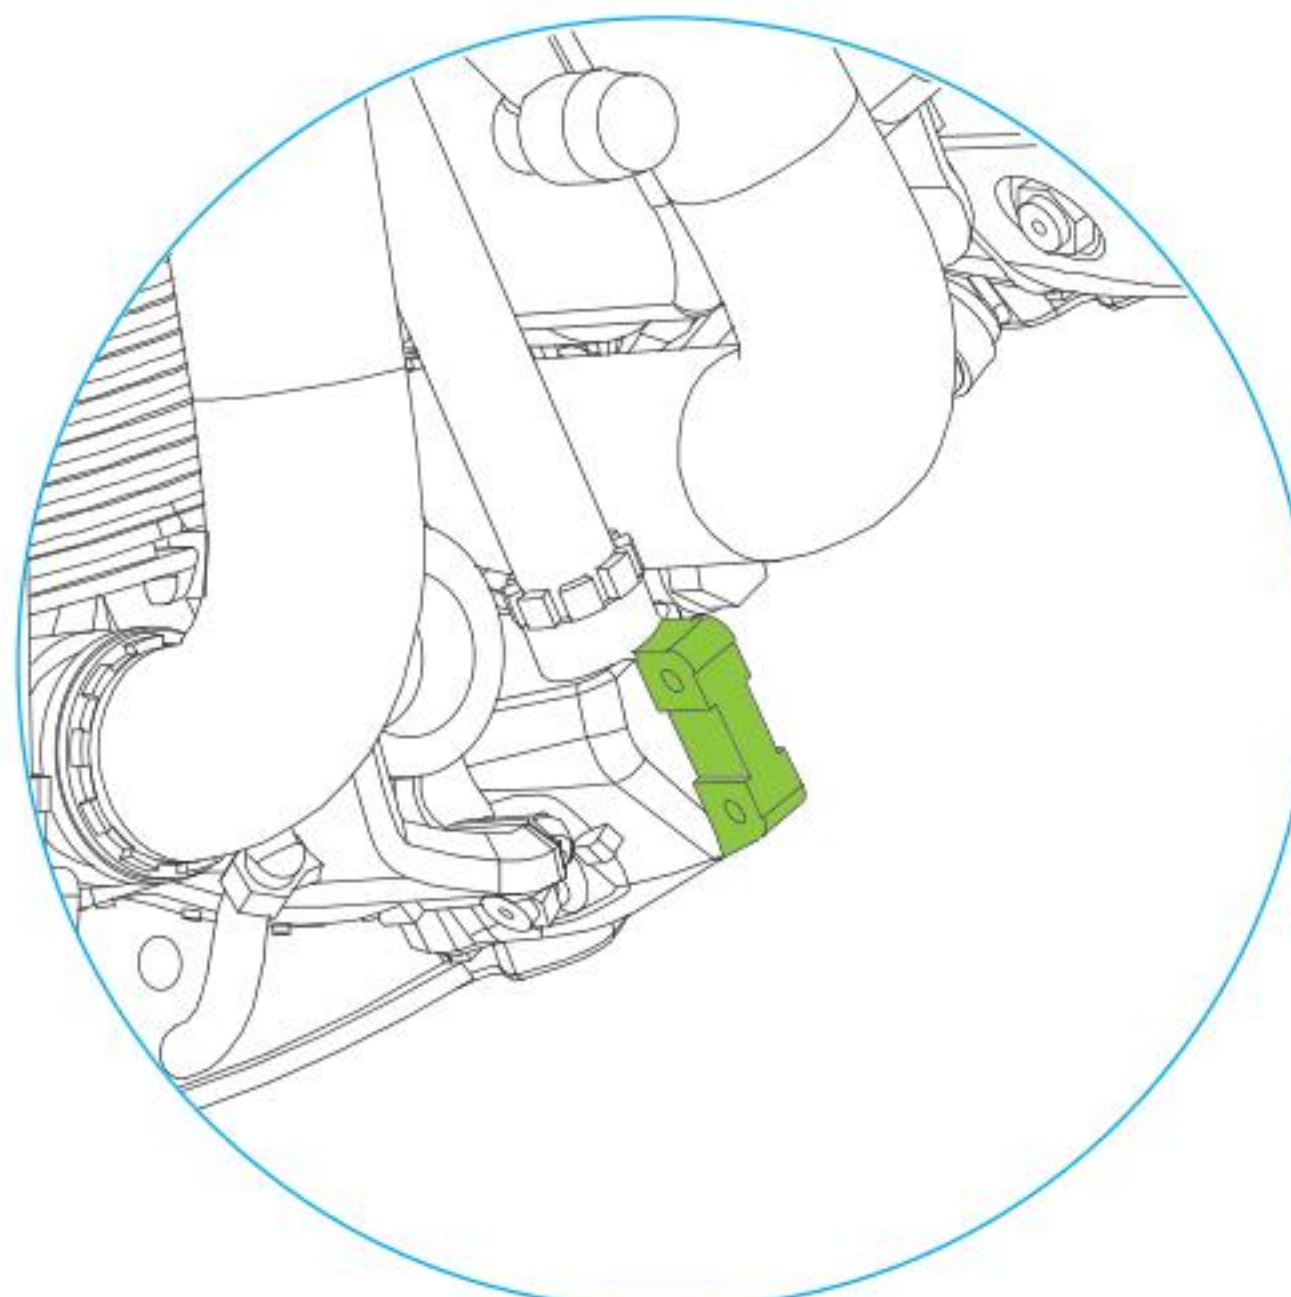




7 X2 INTERNAL


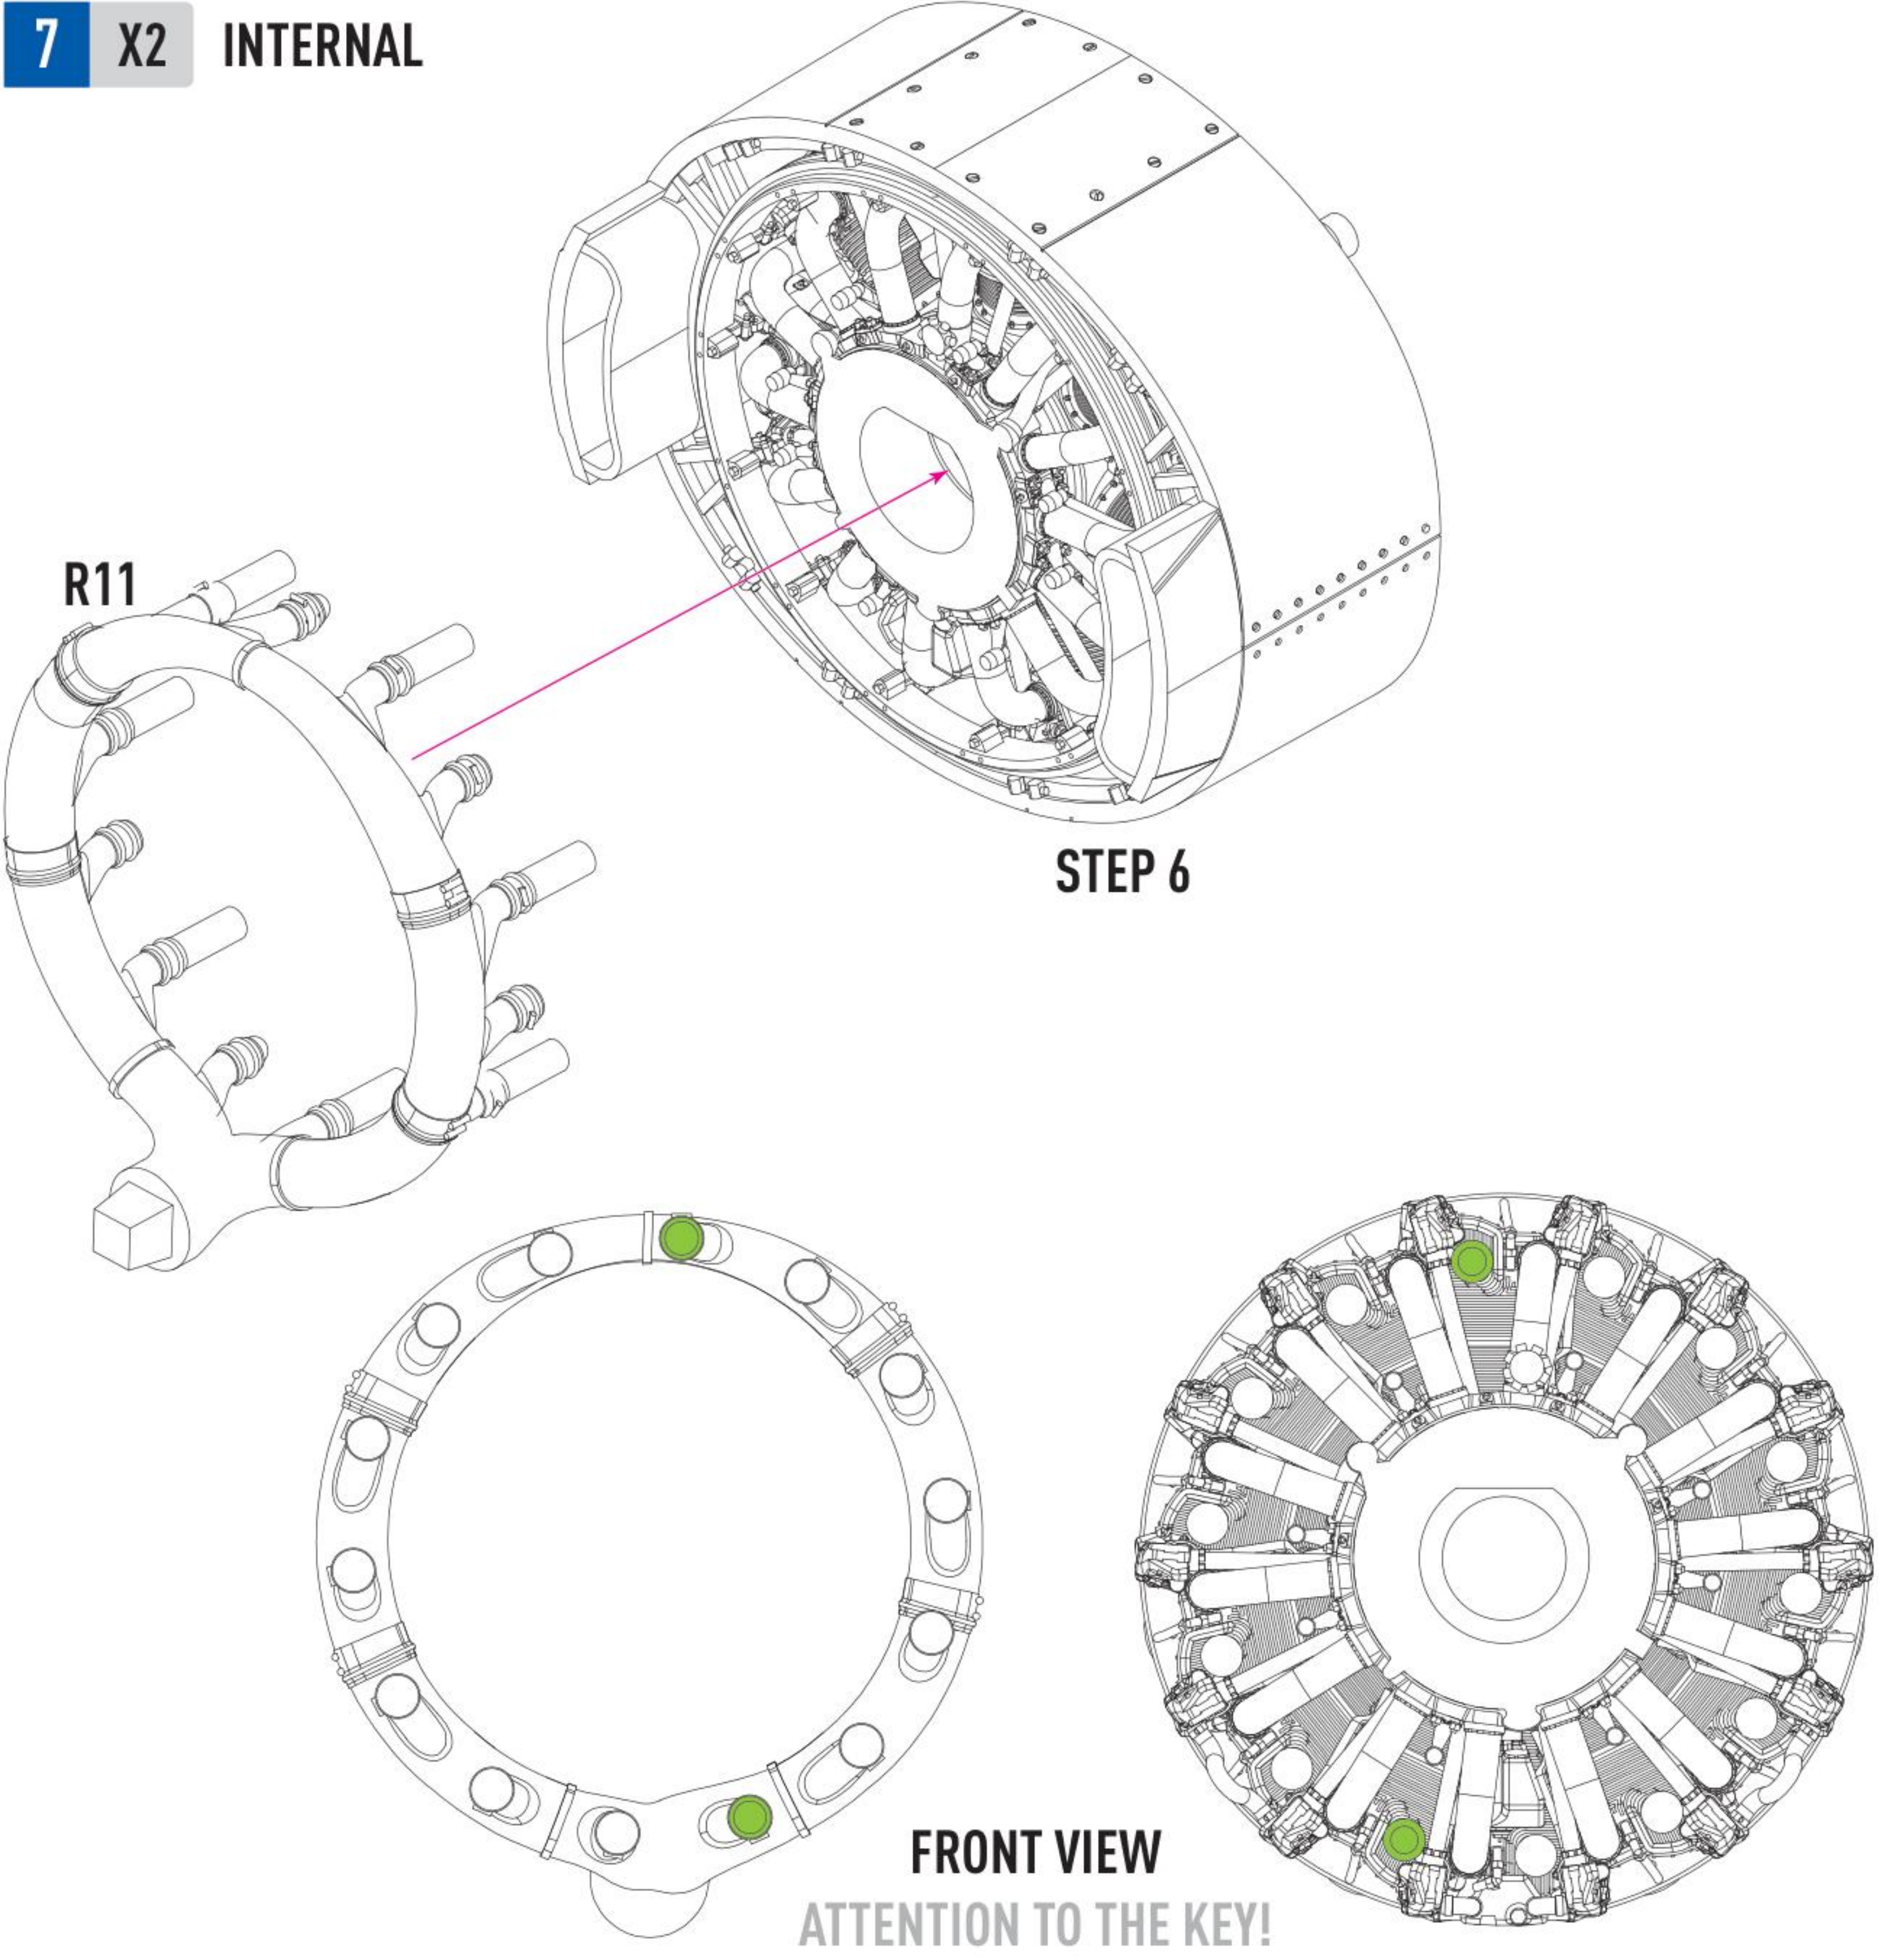


8 X2

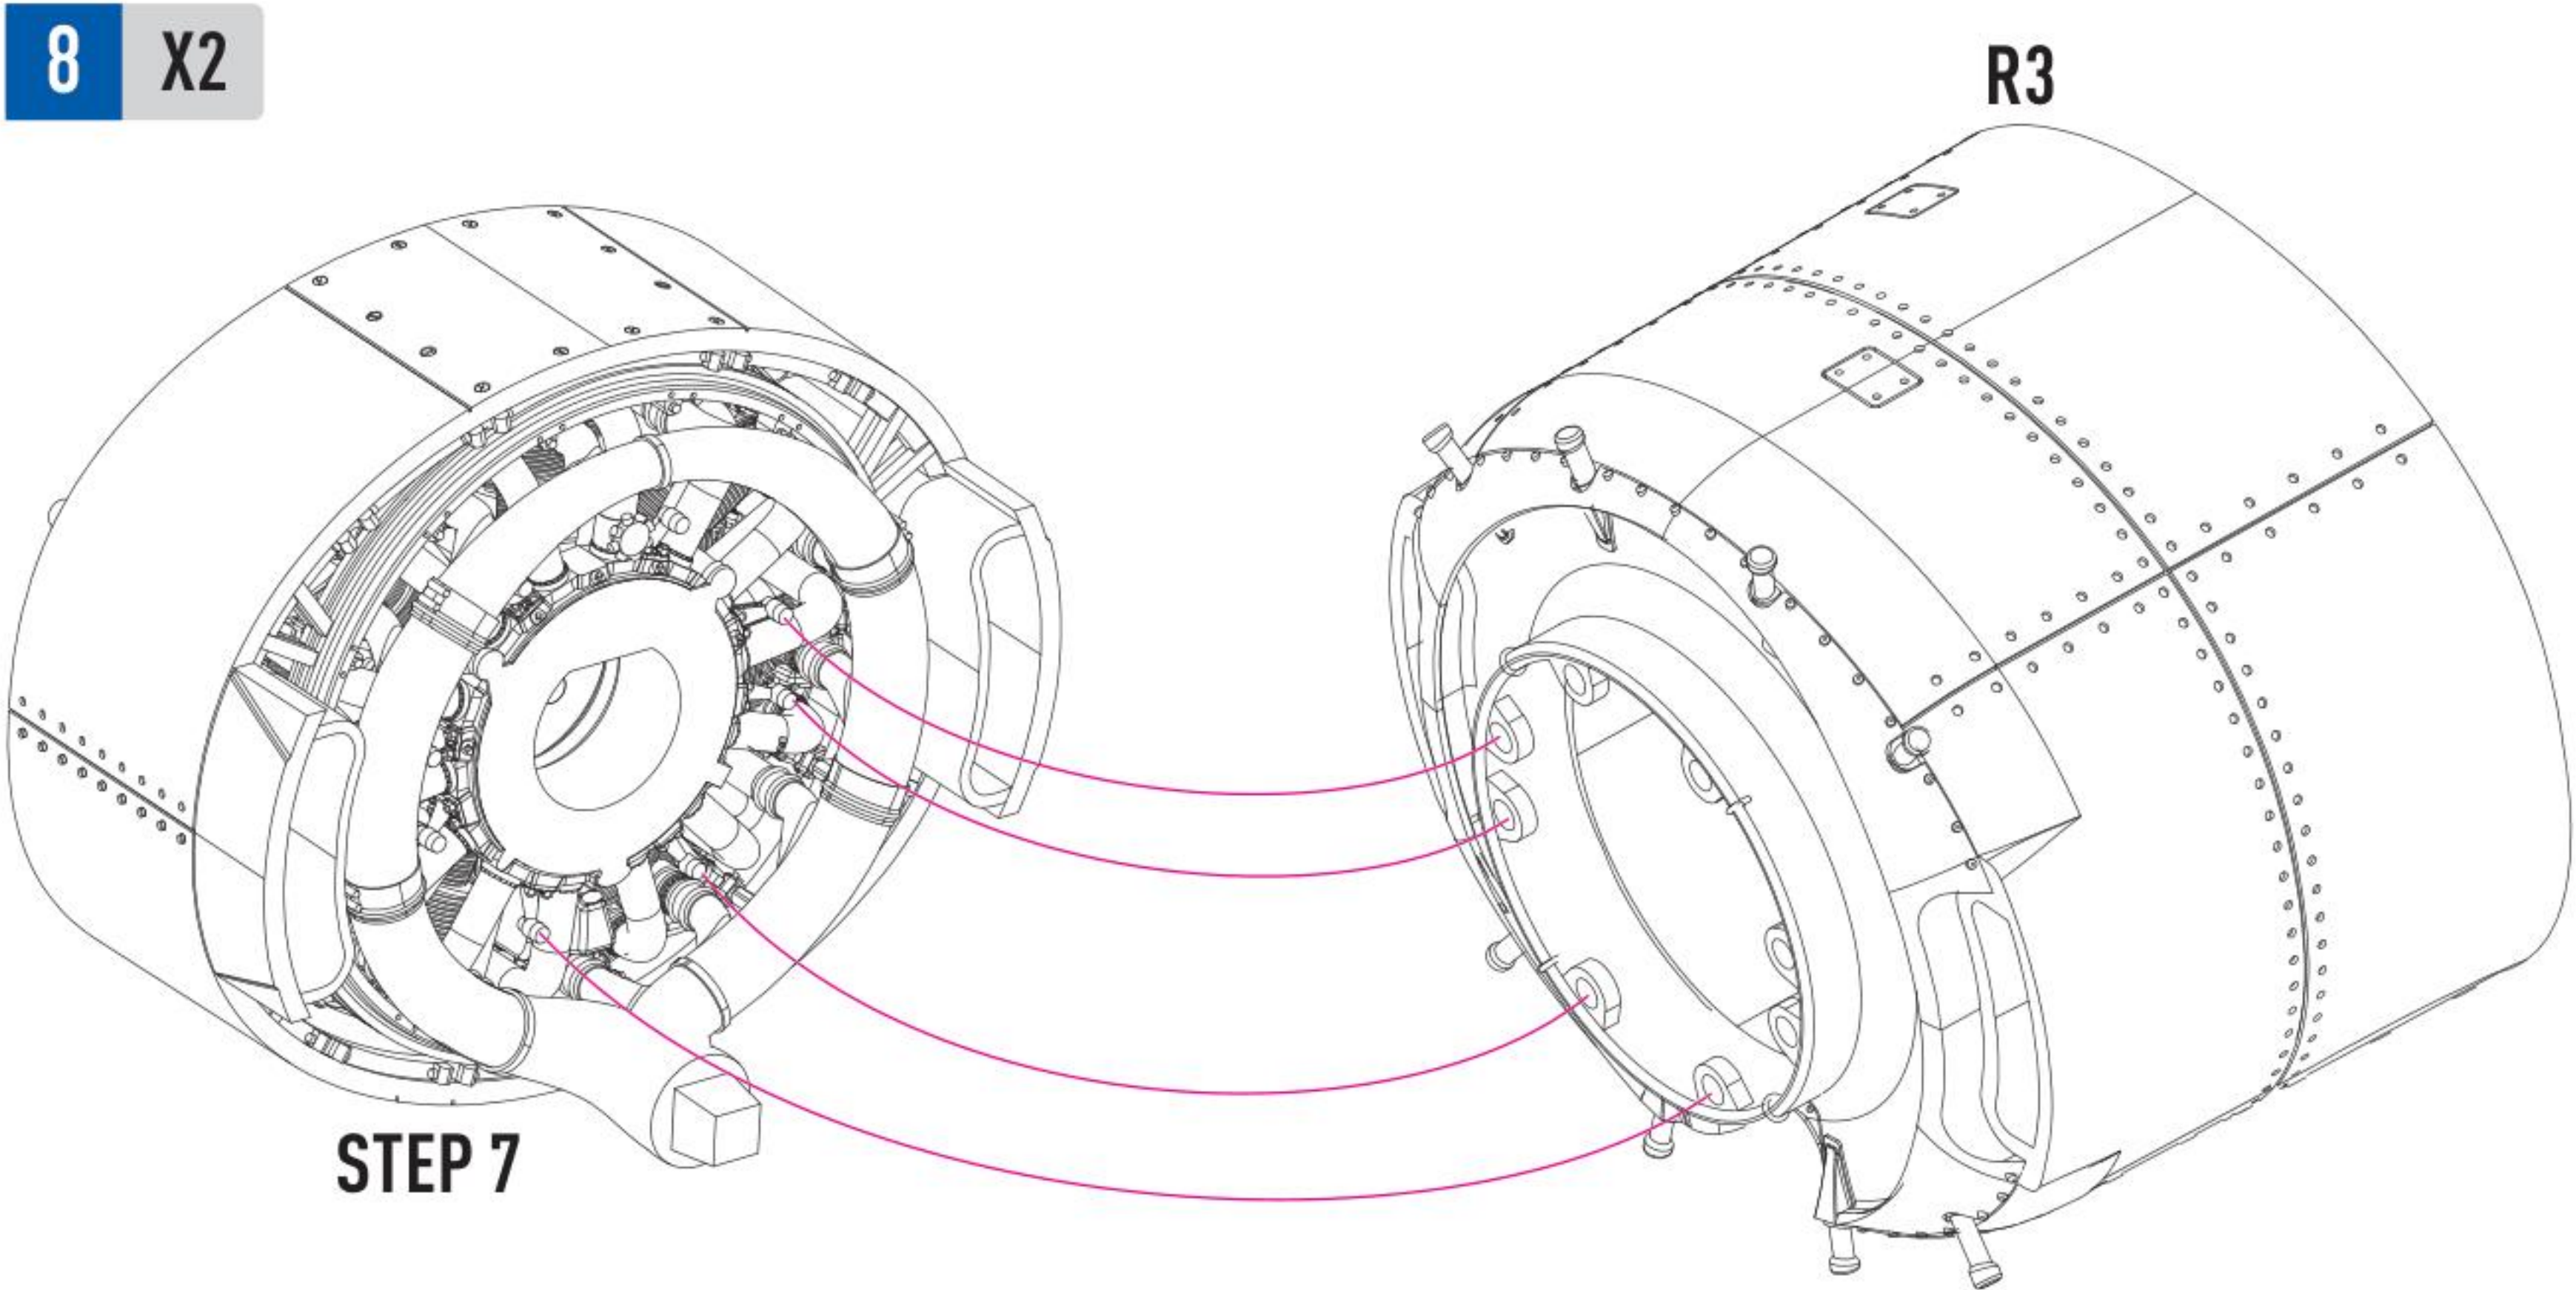


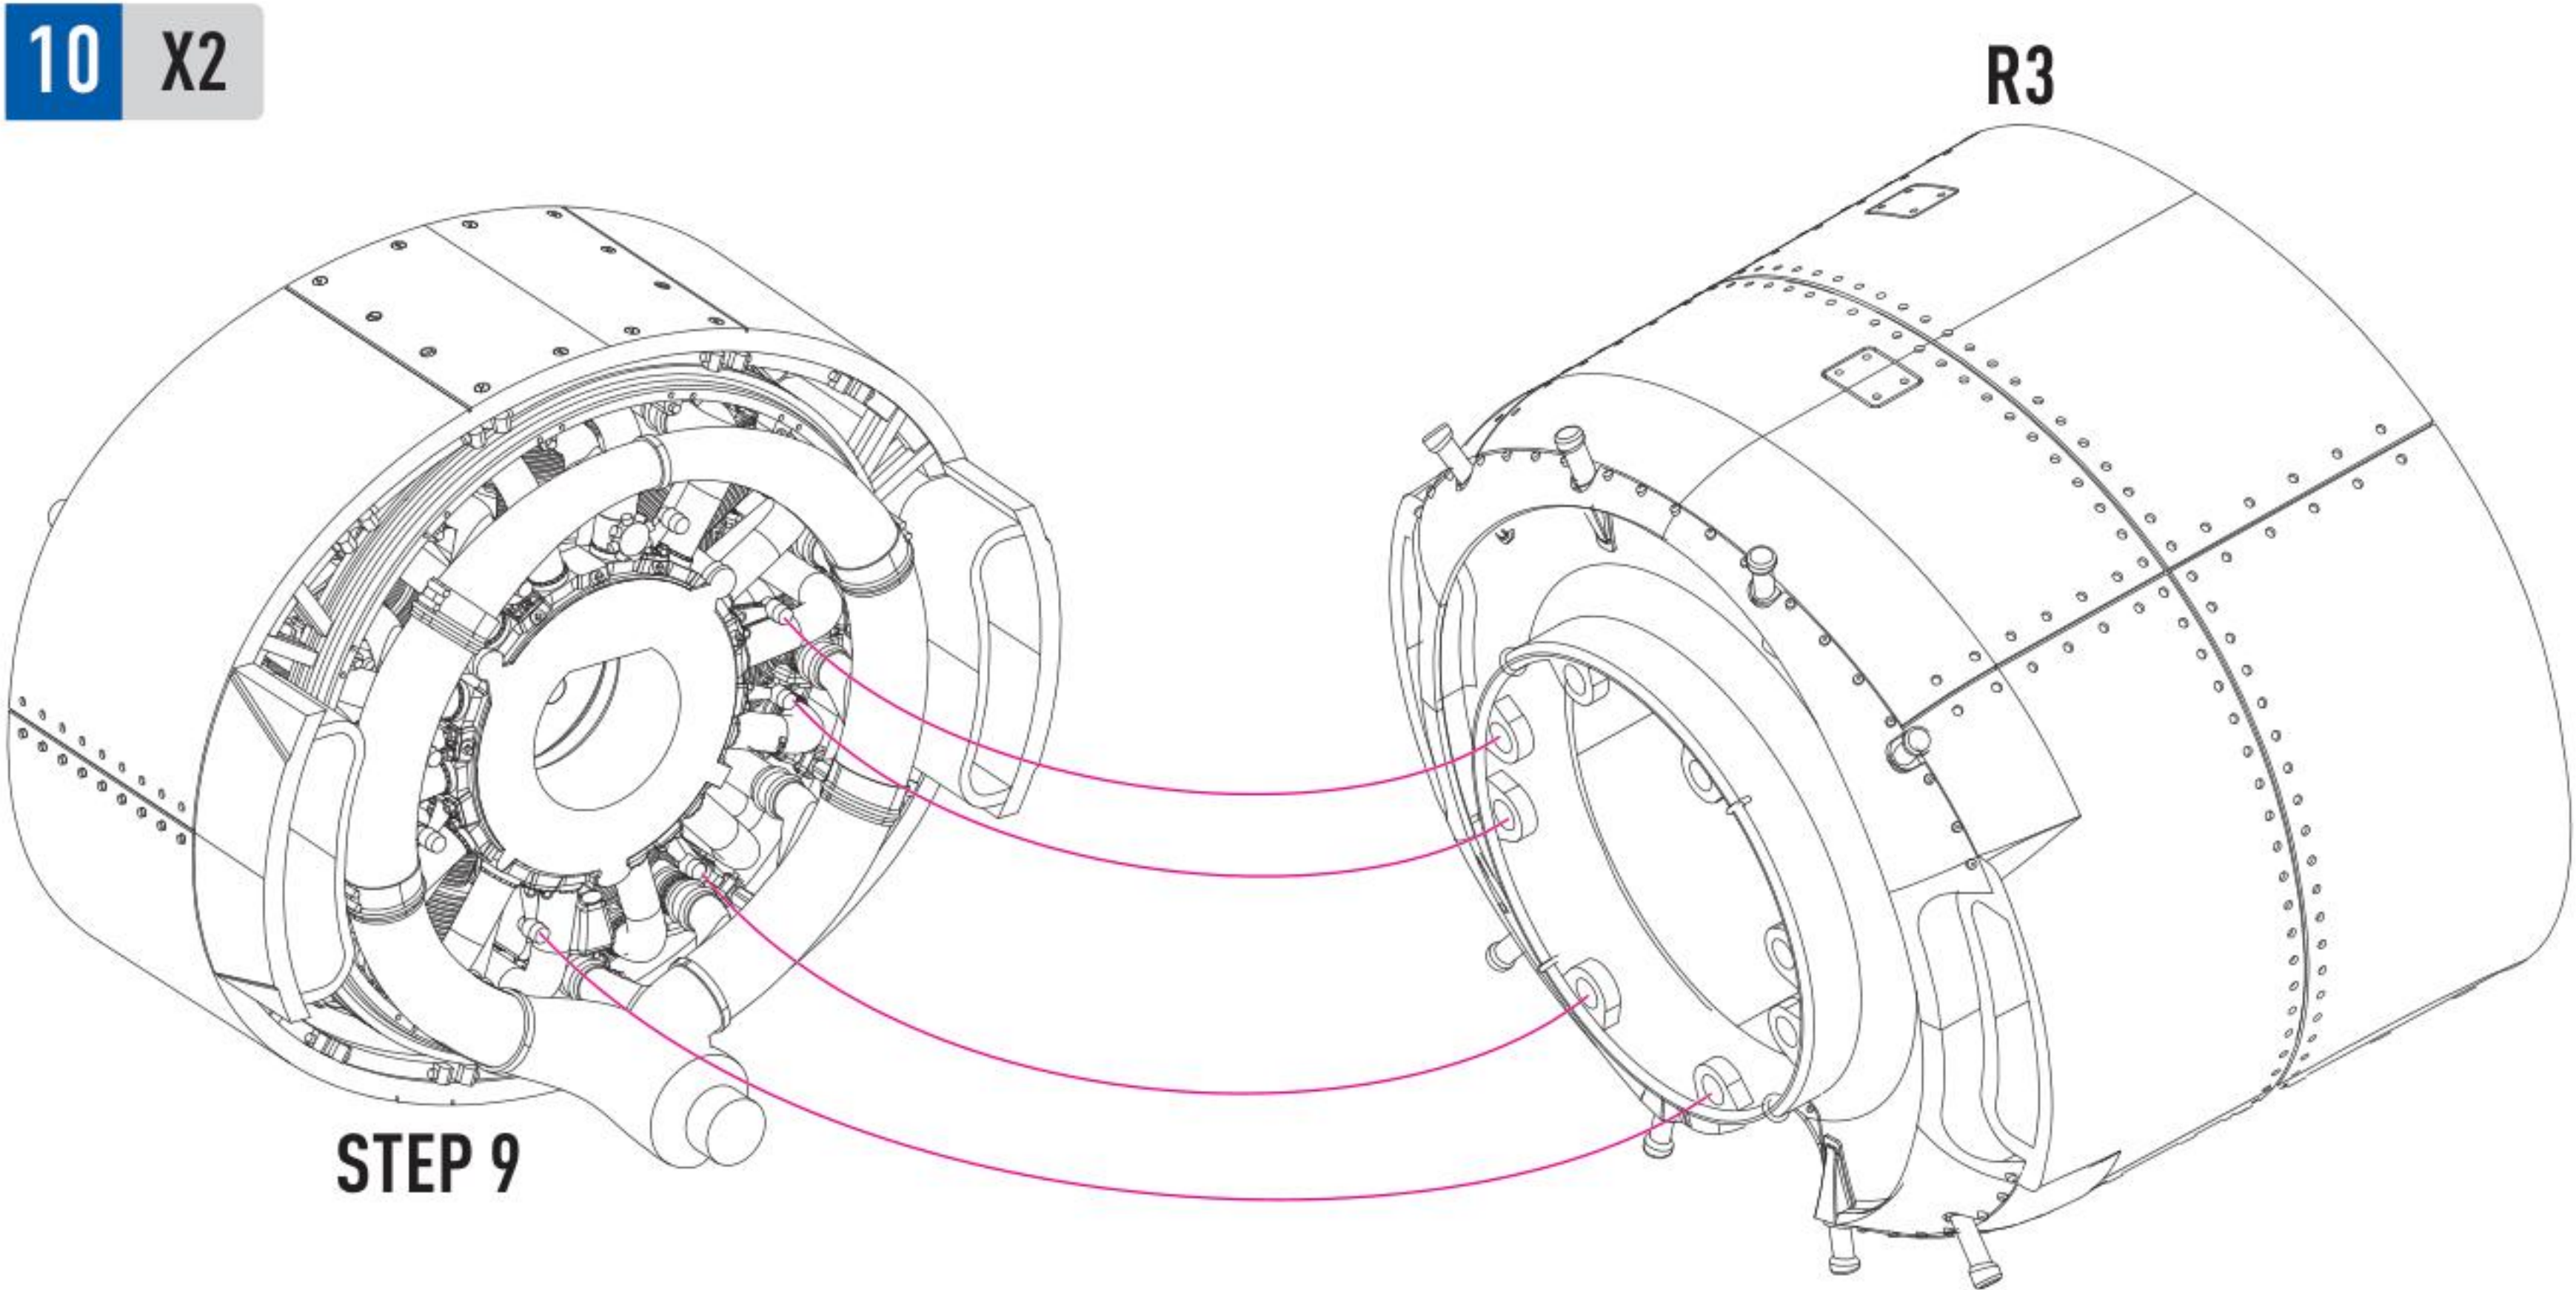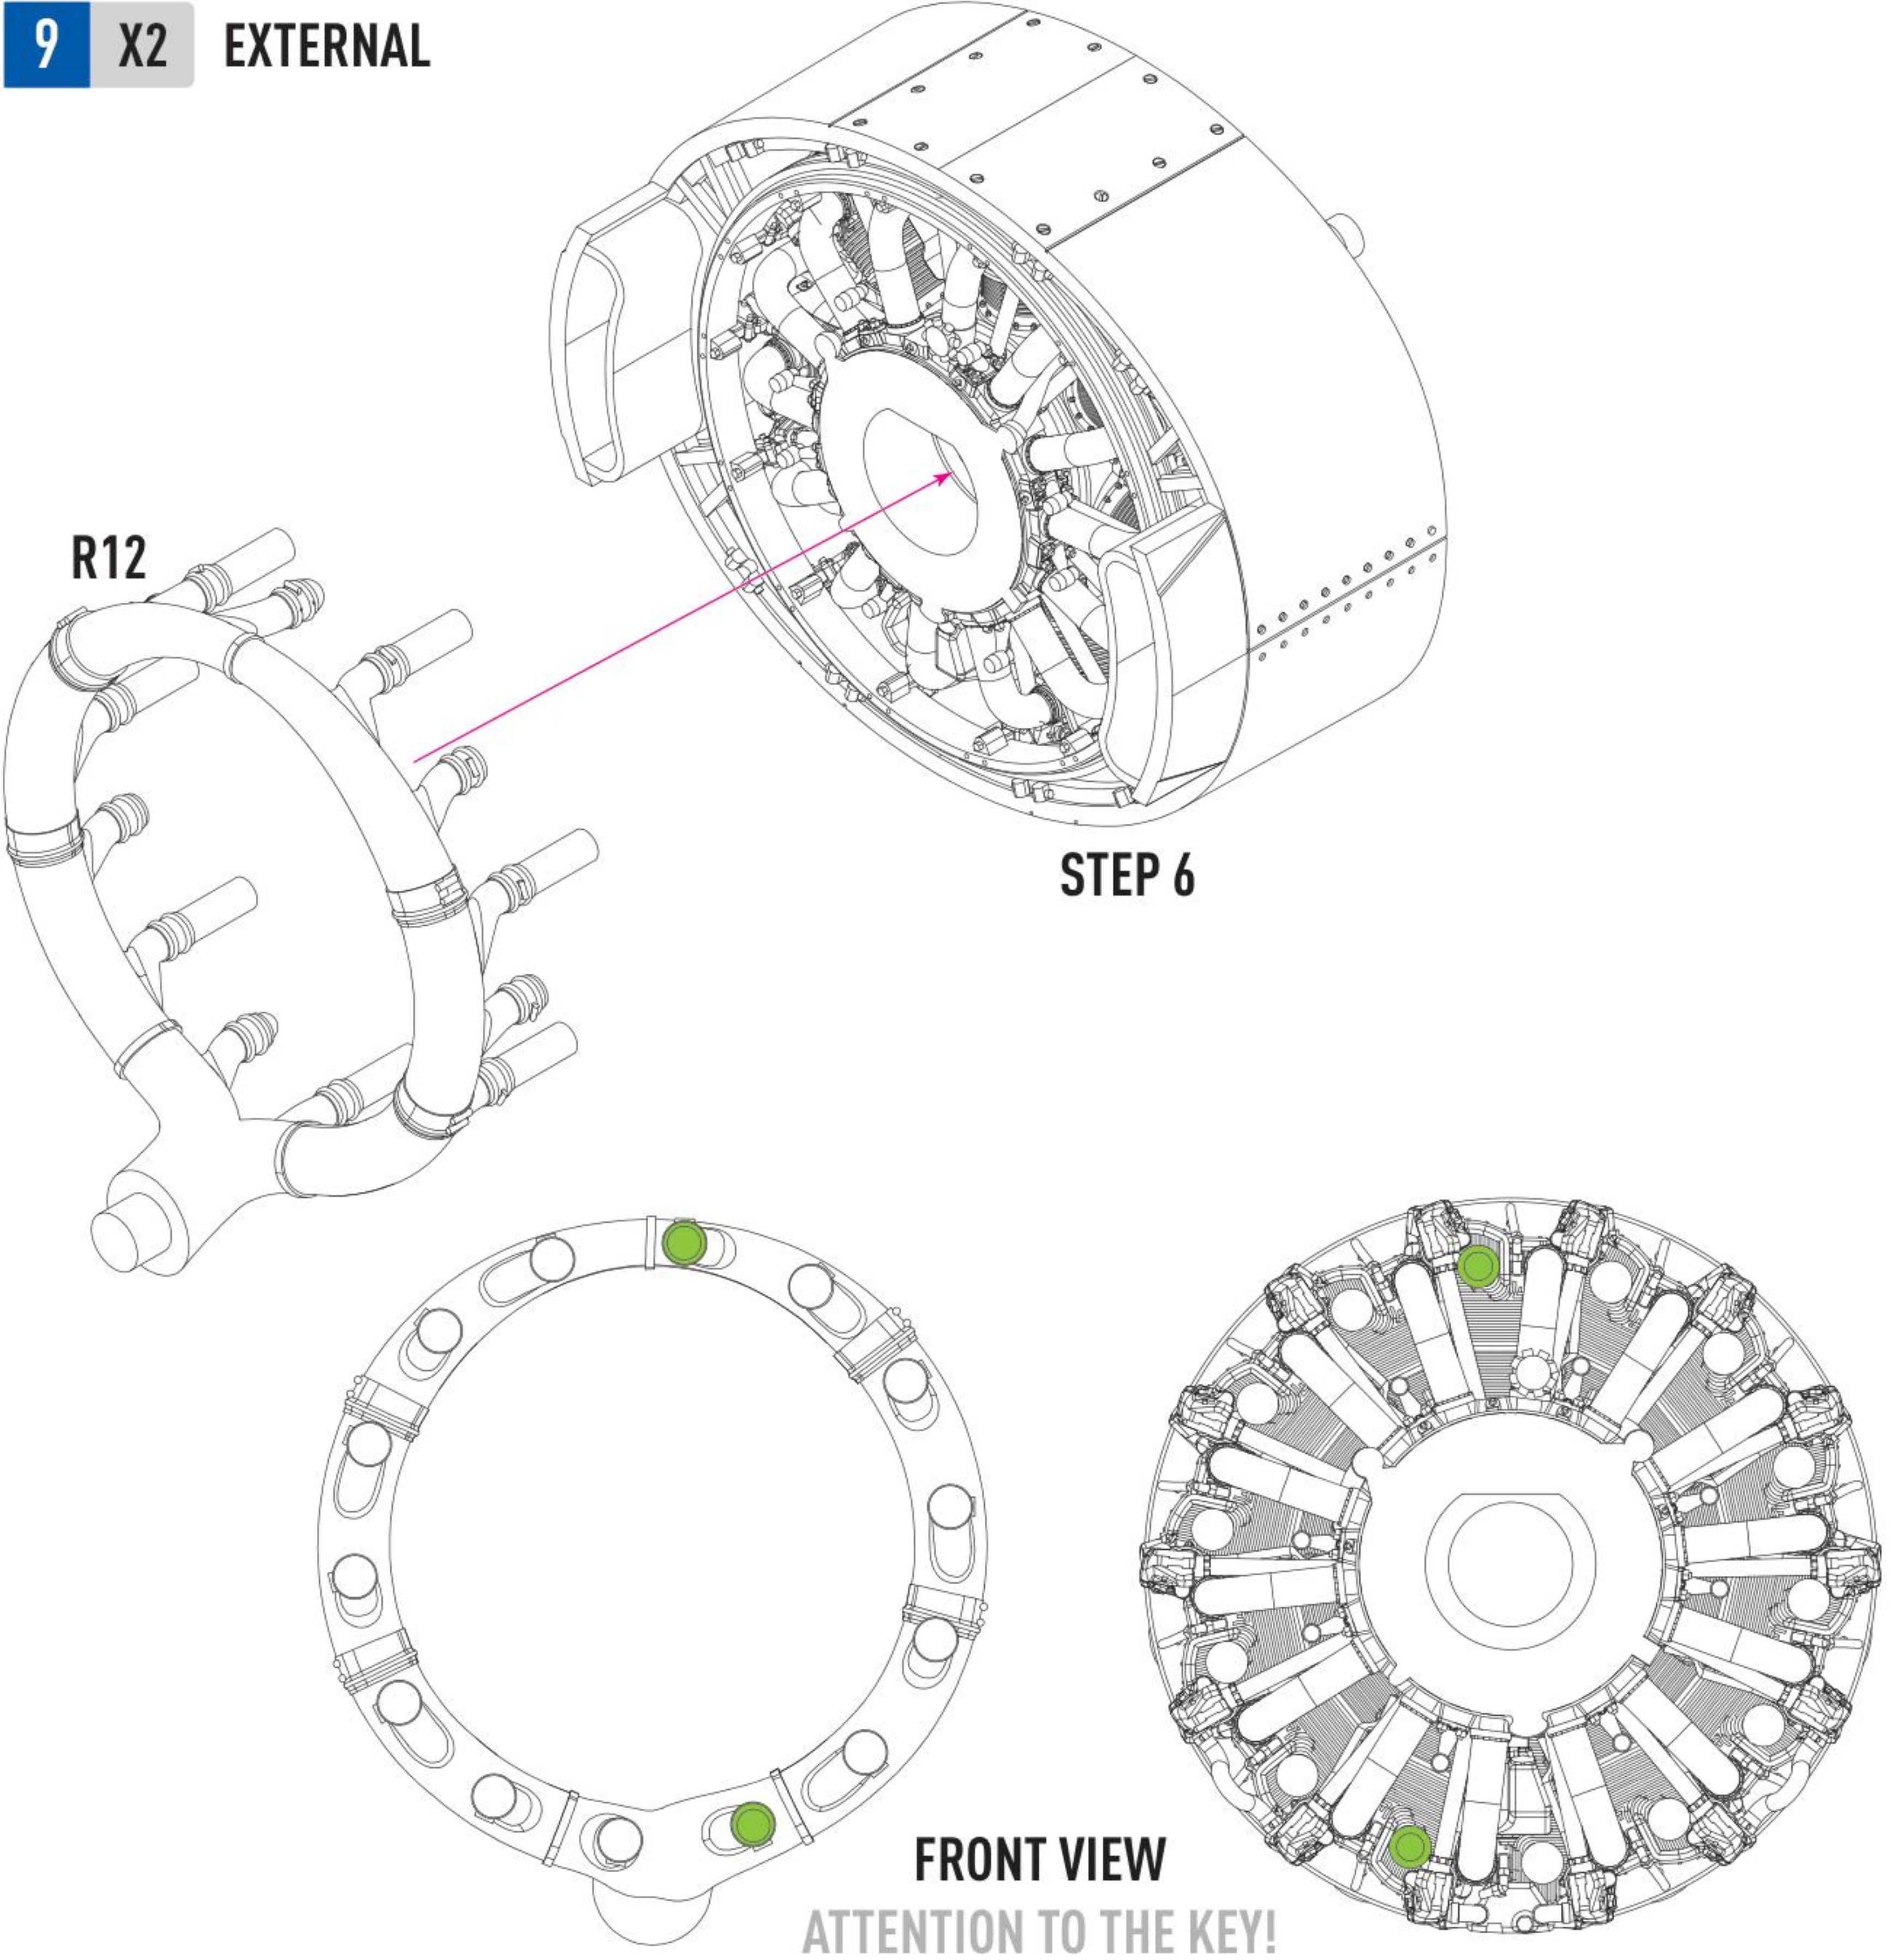

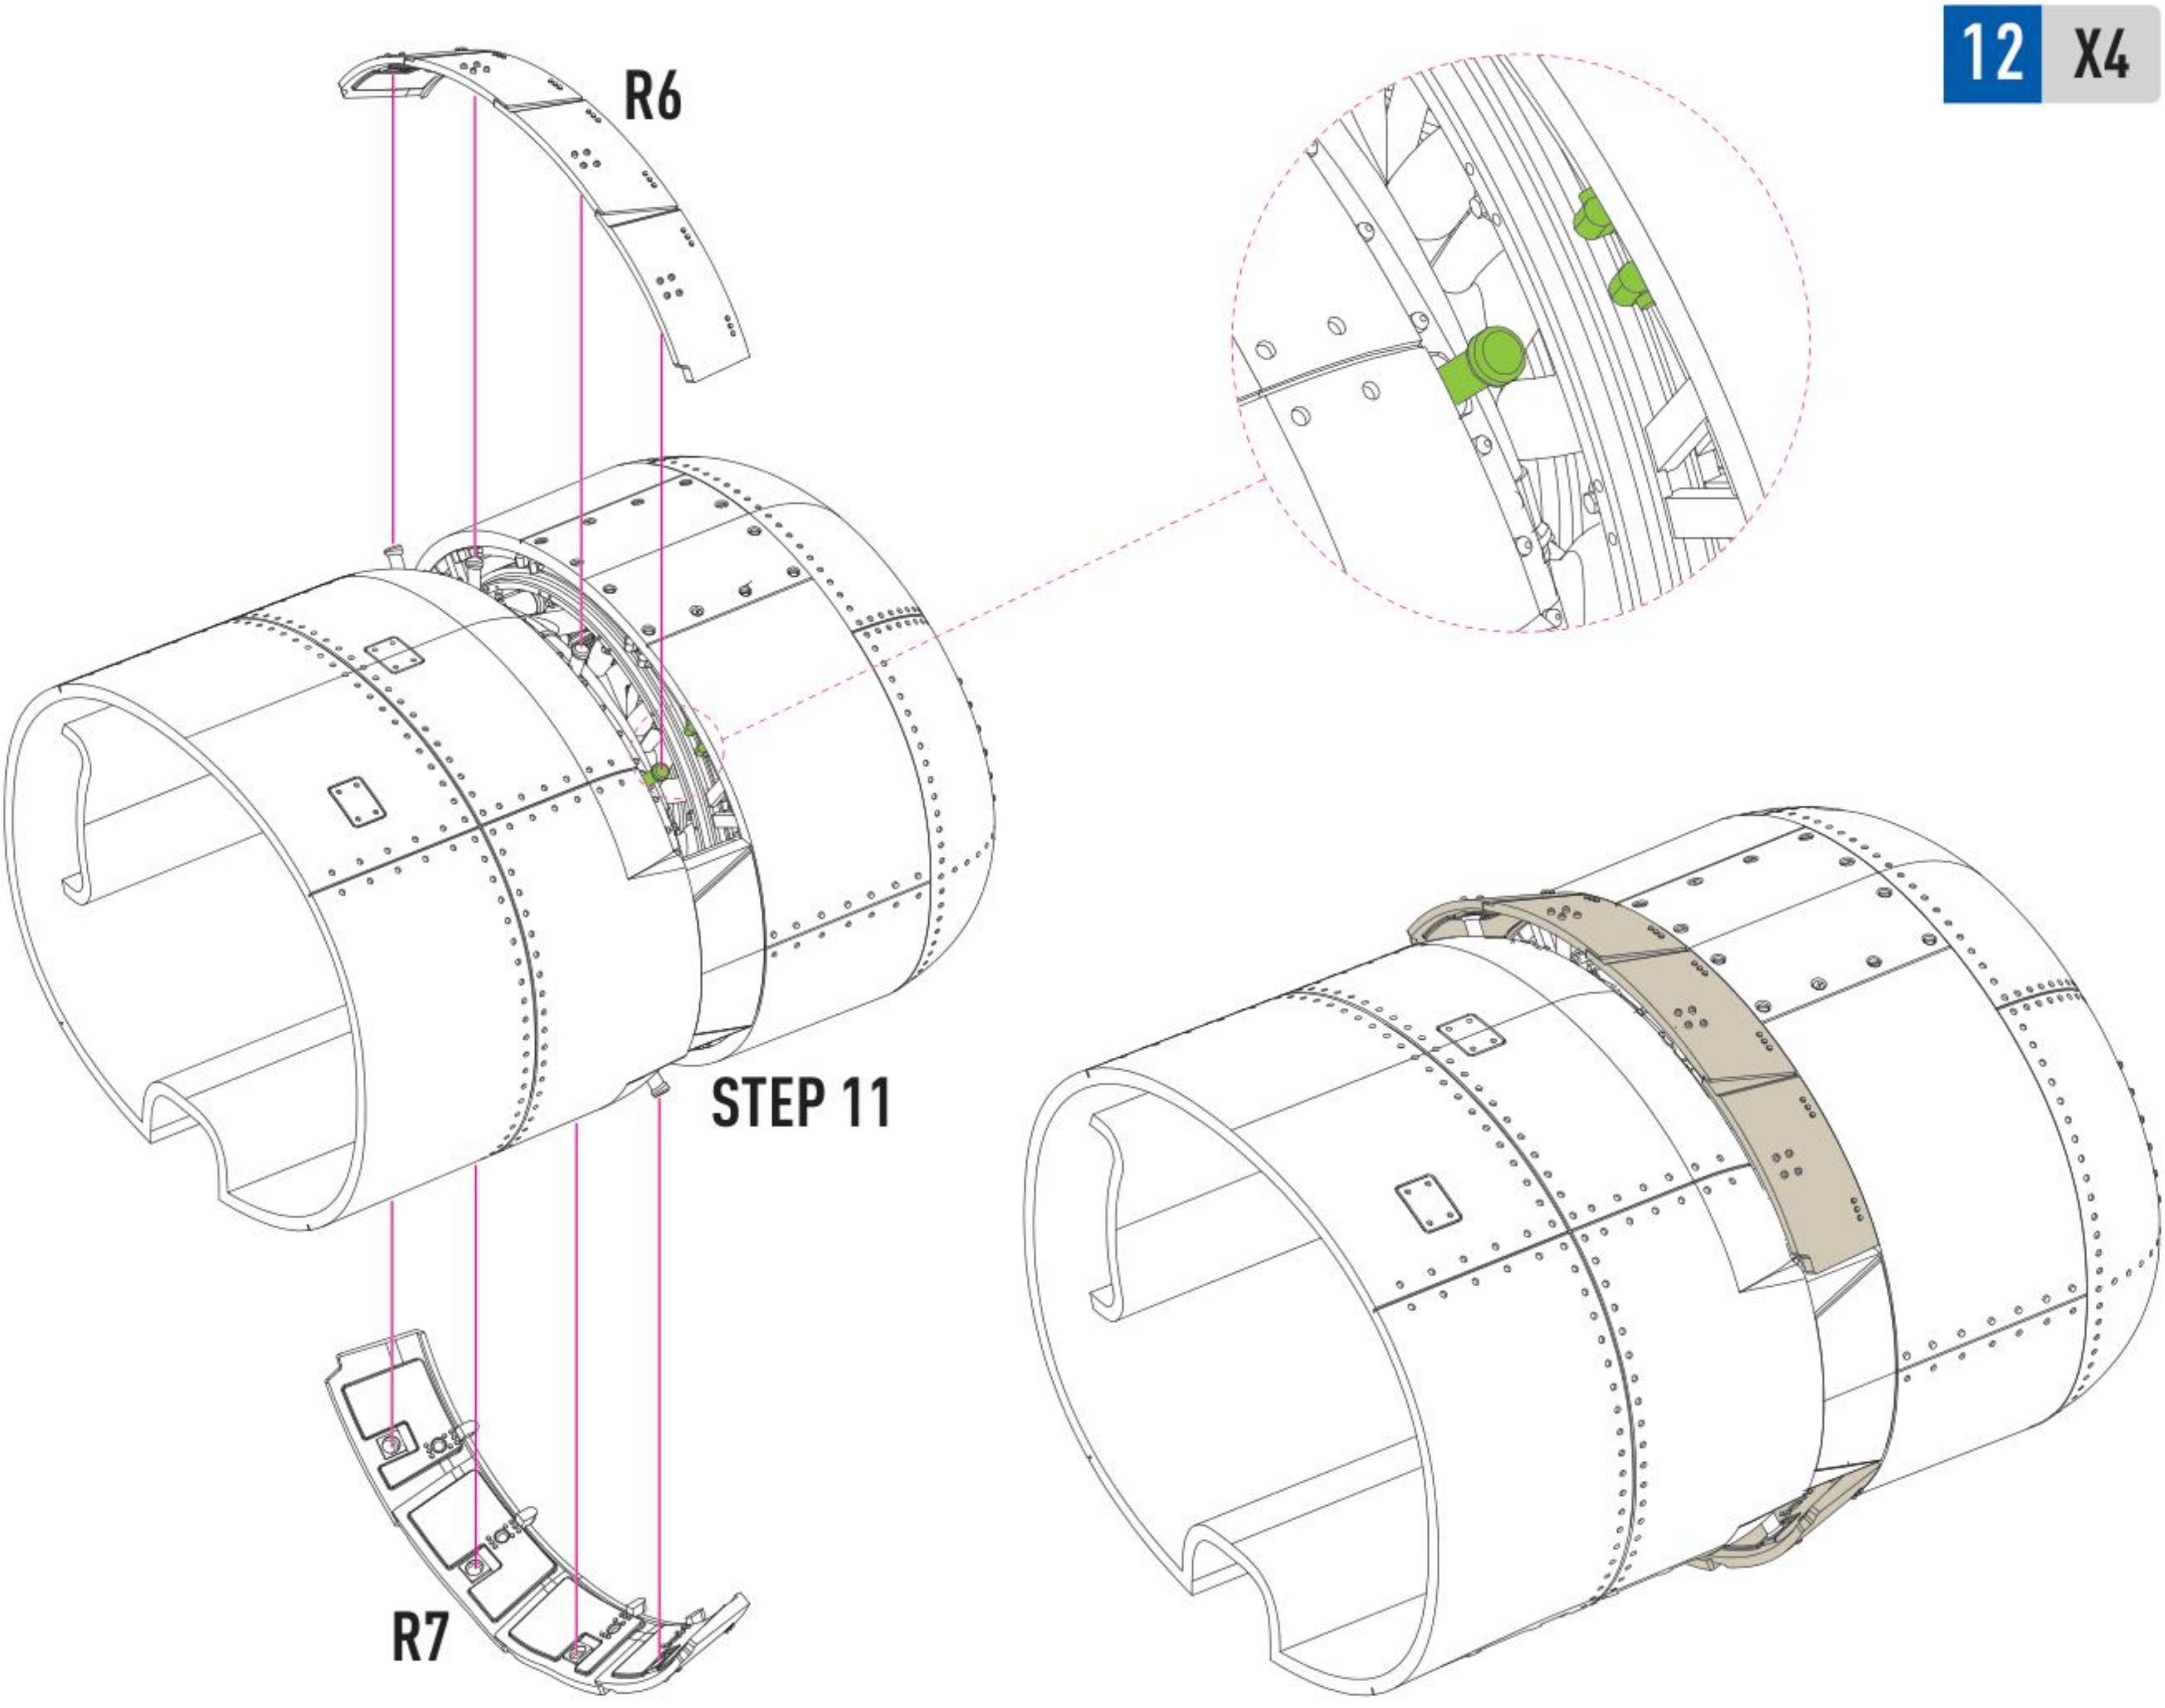
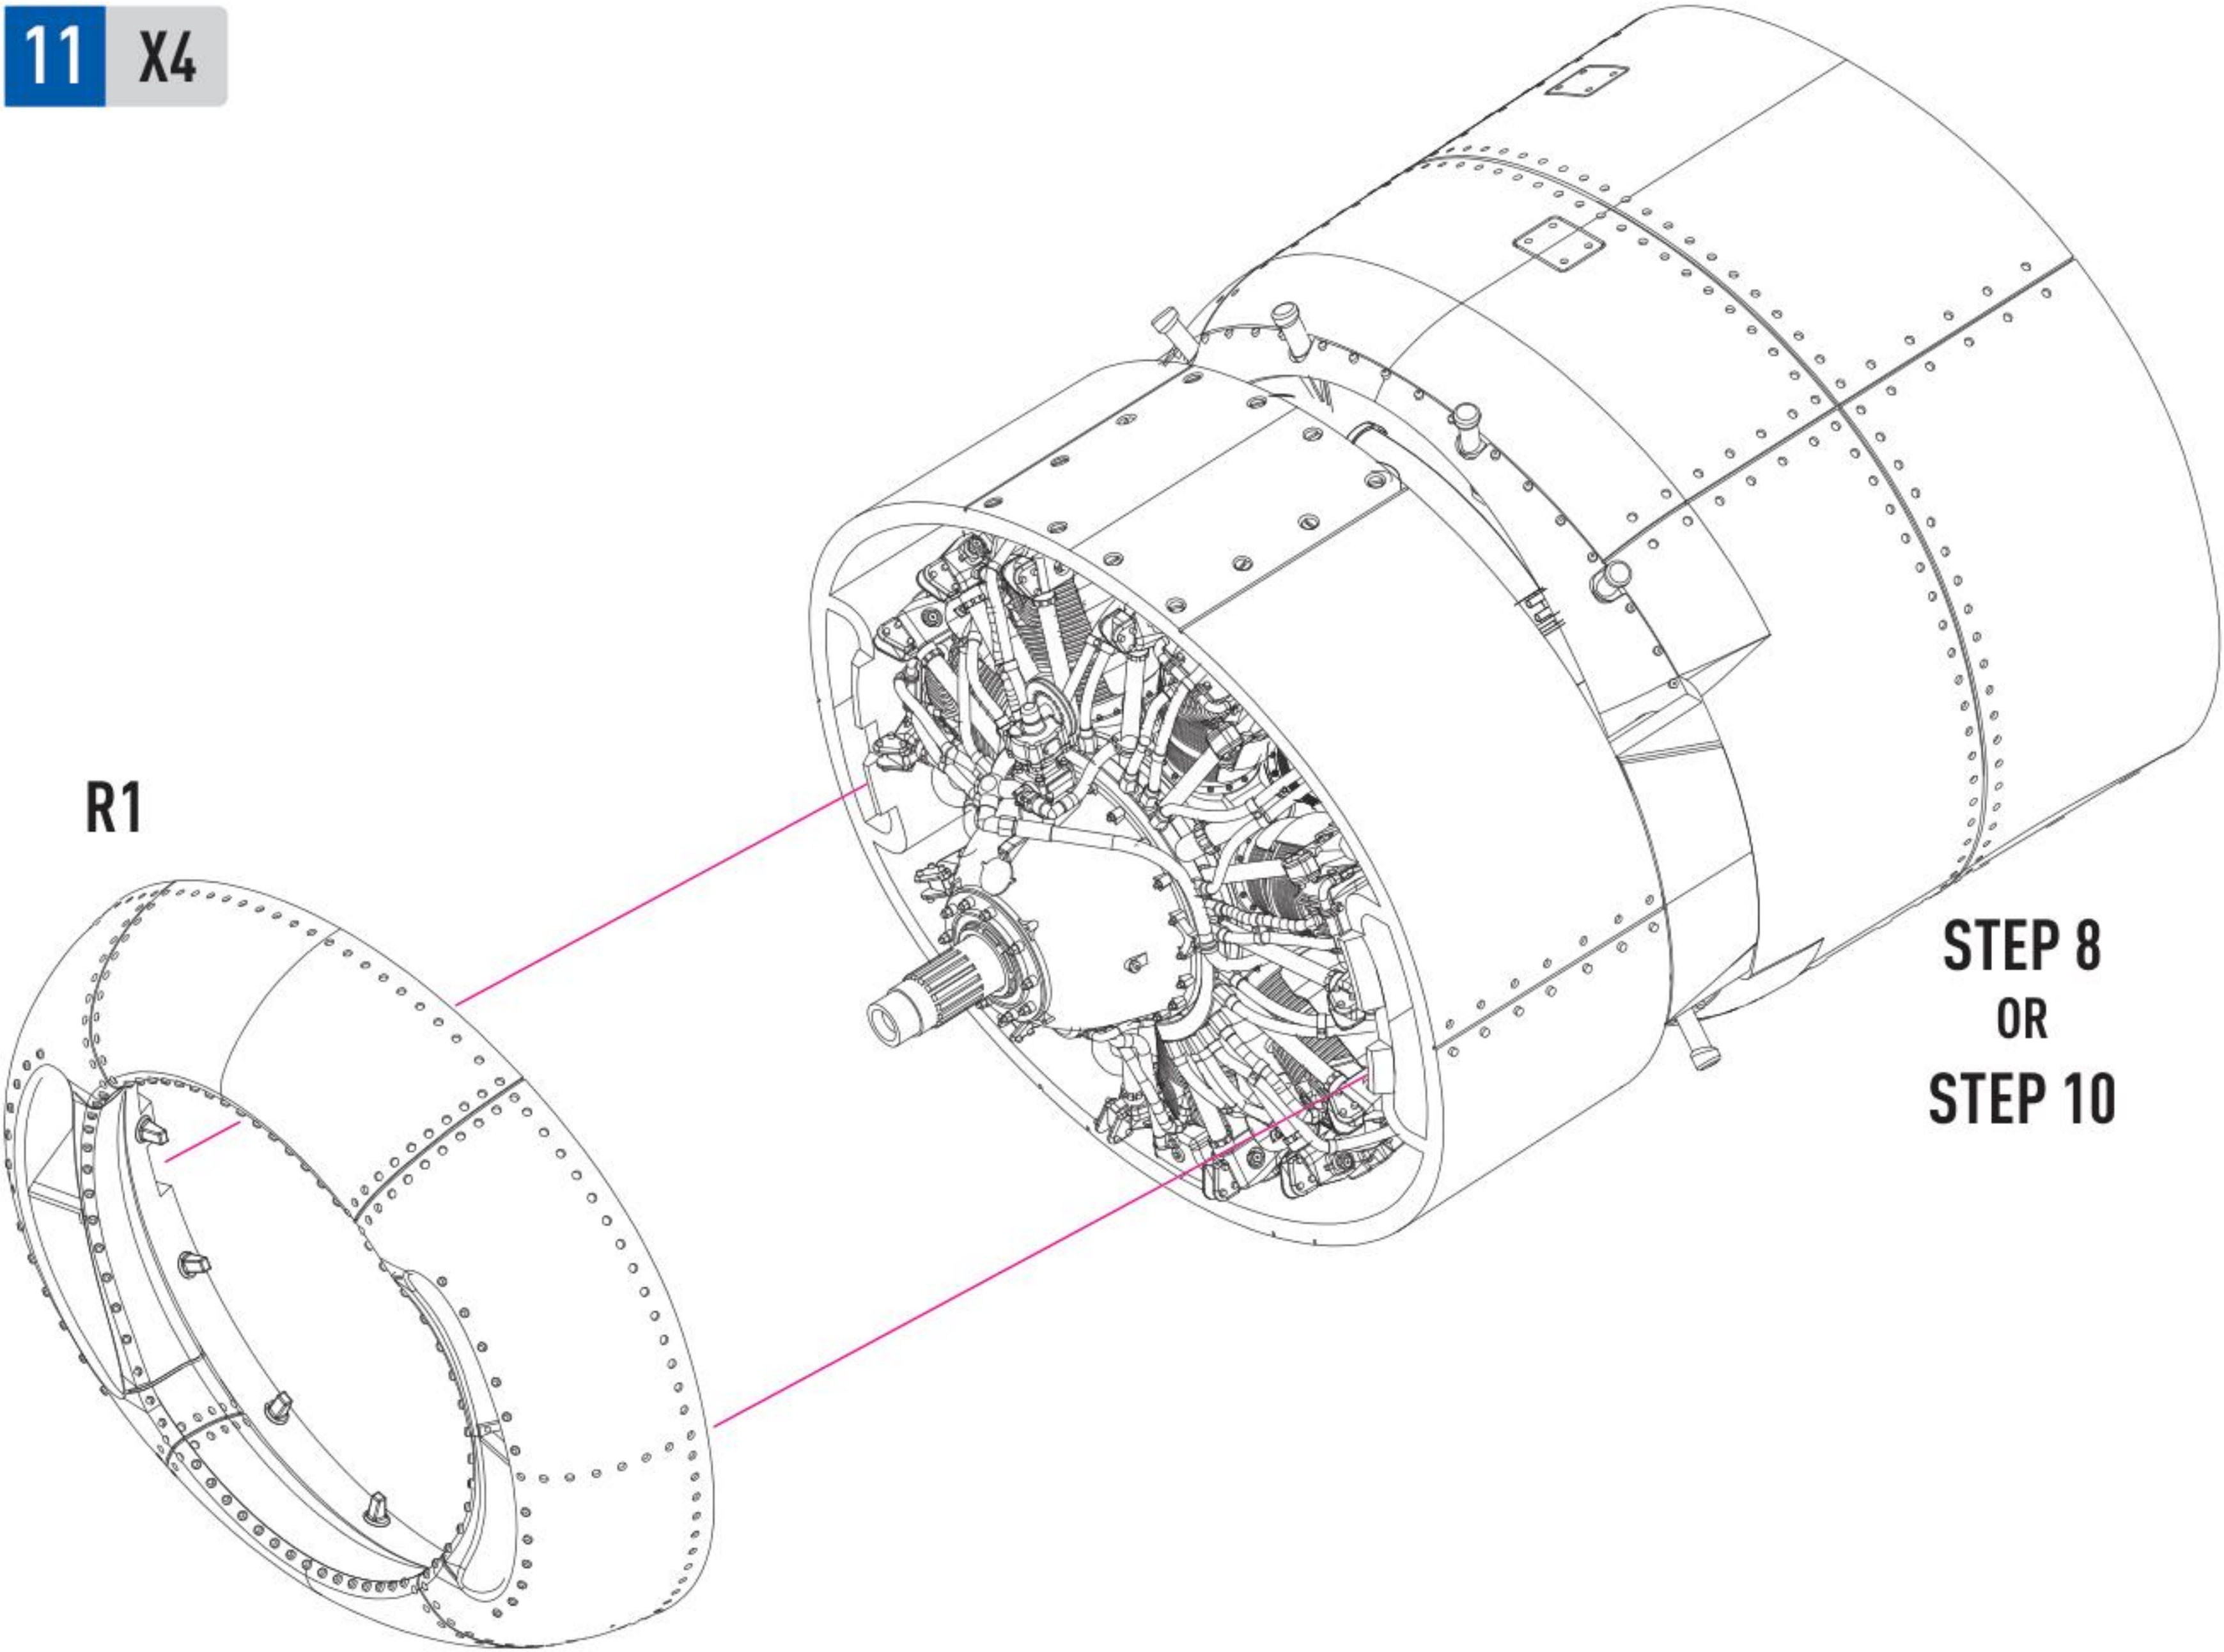


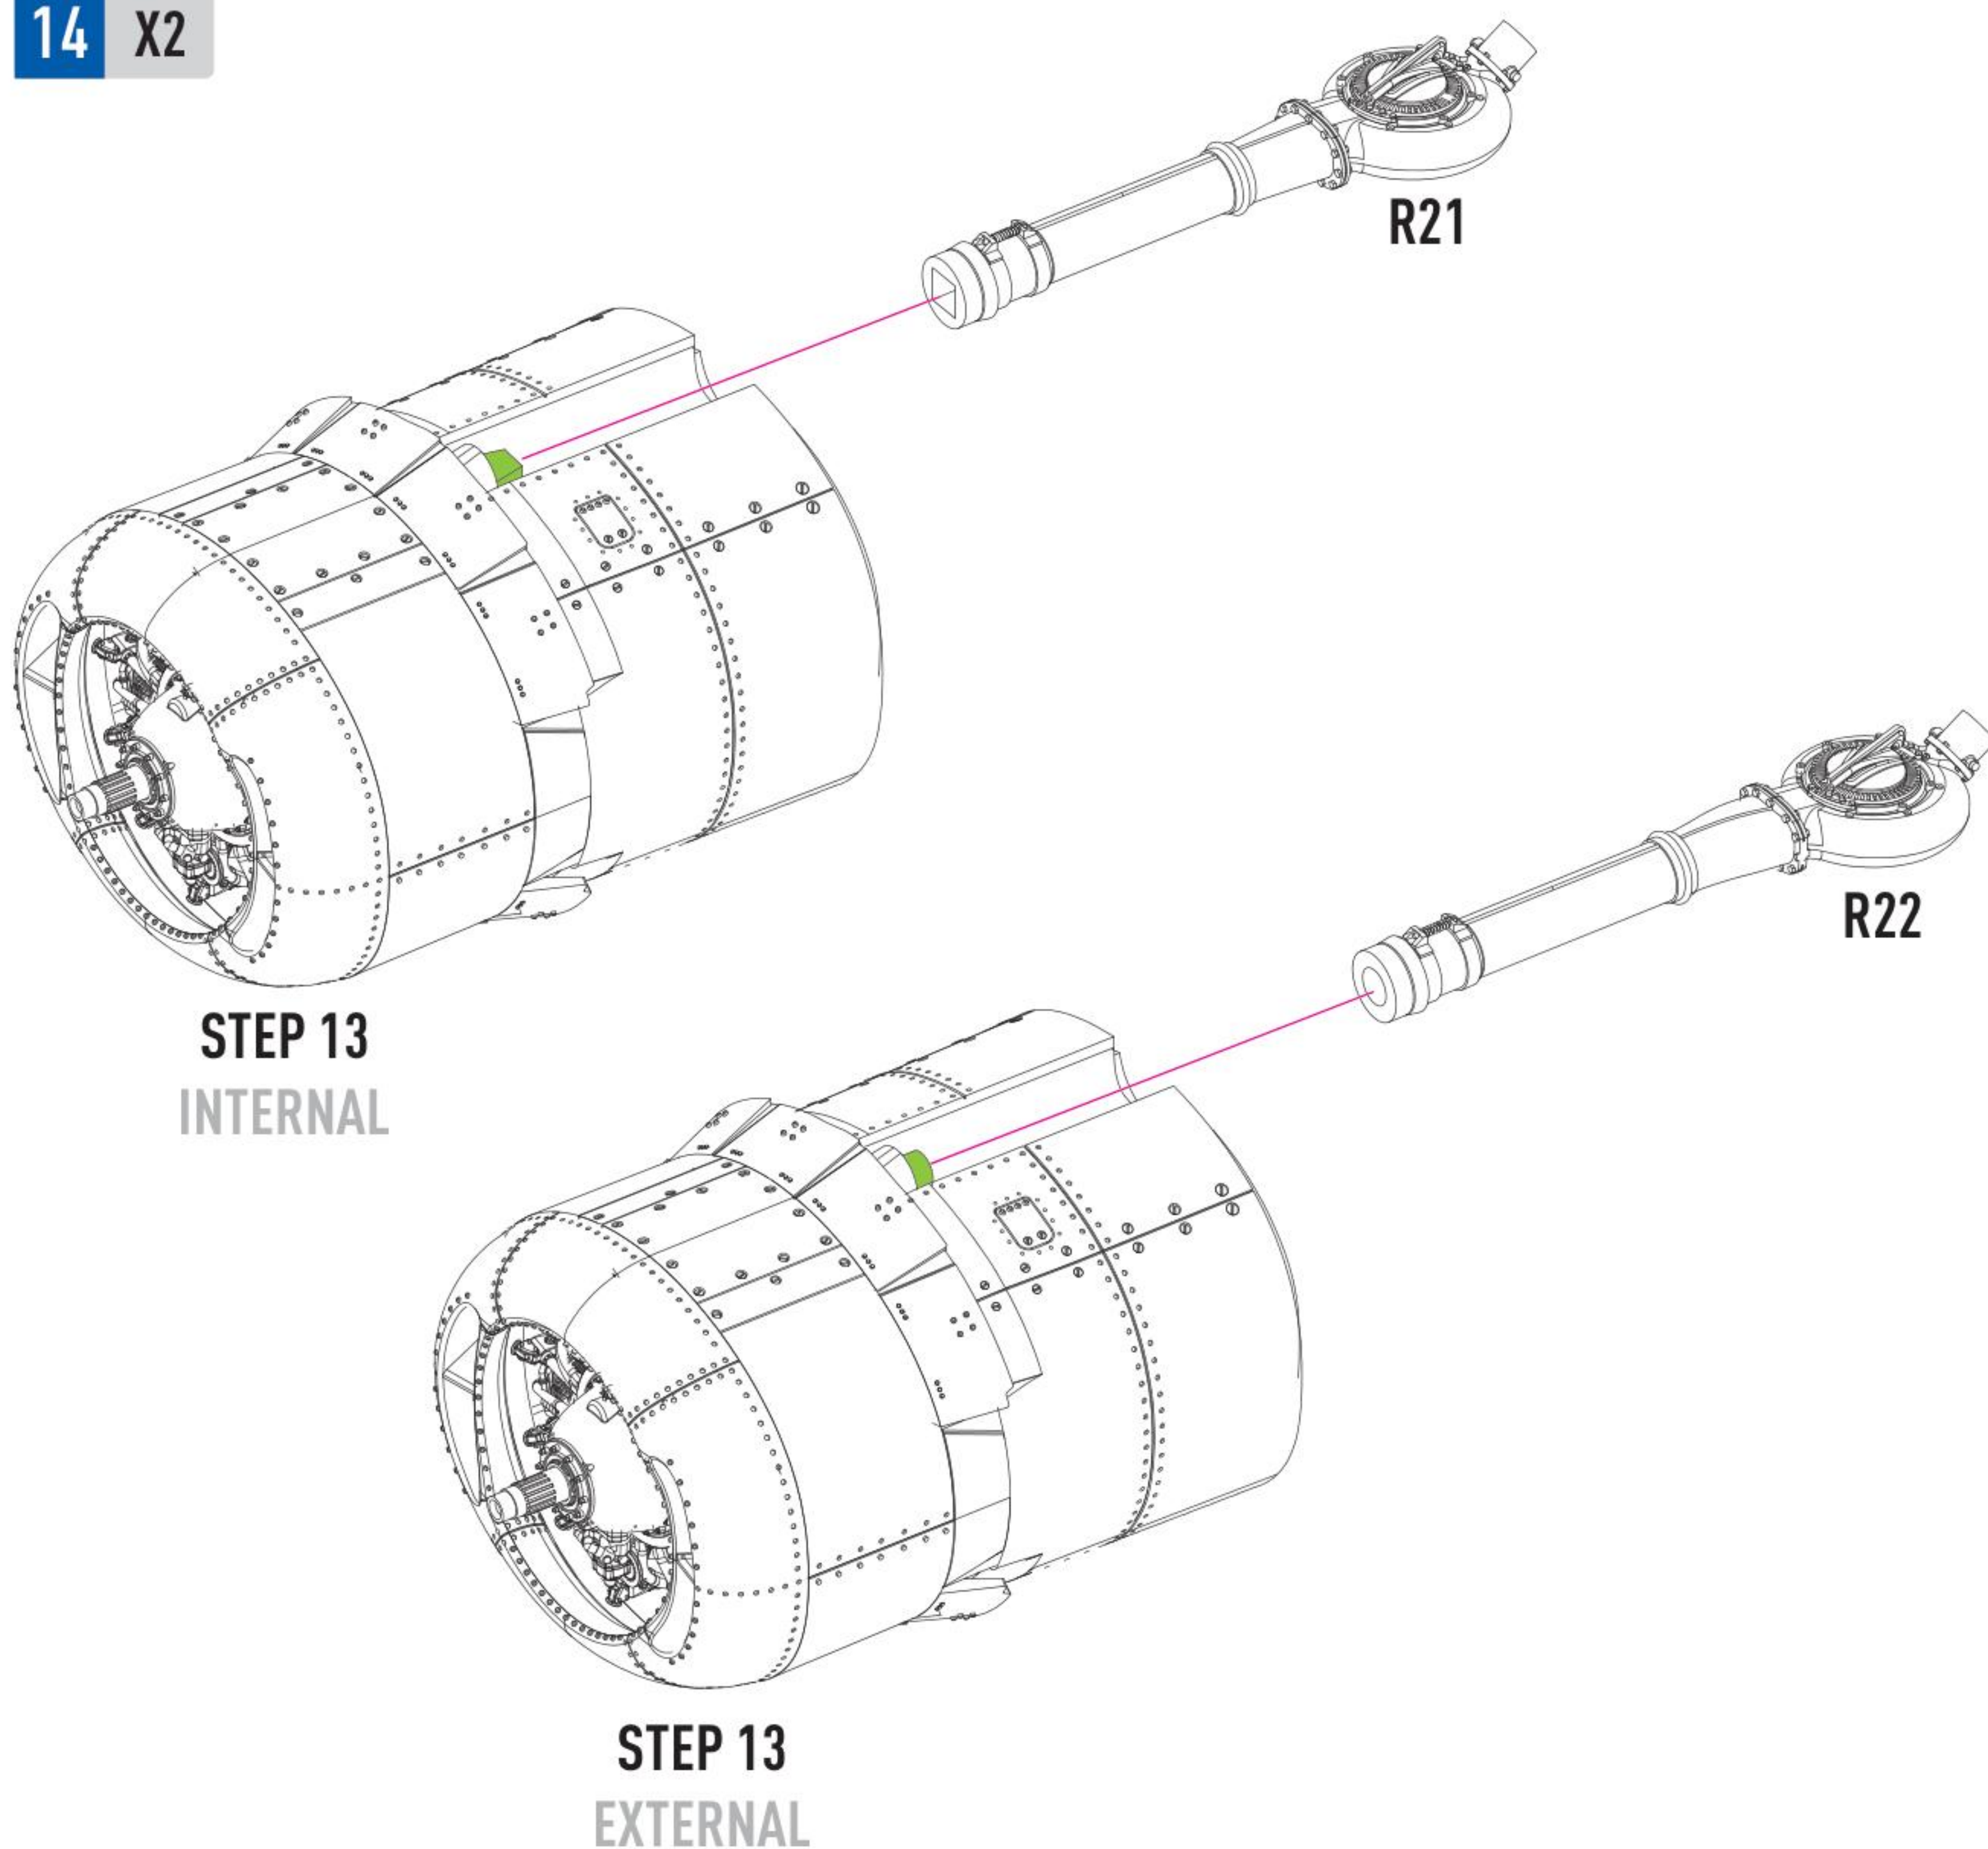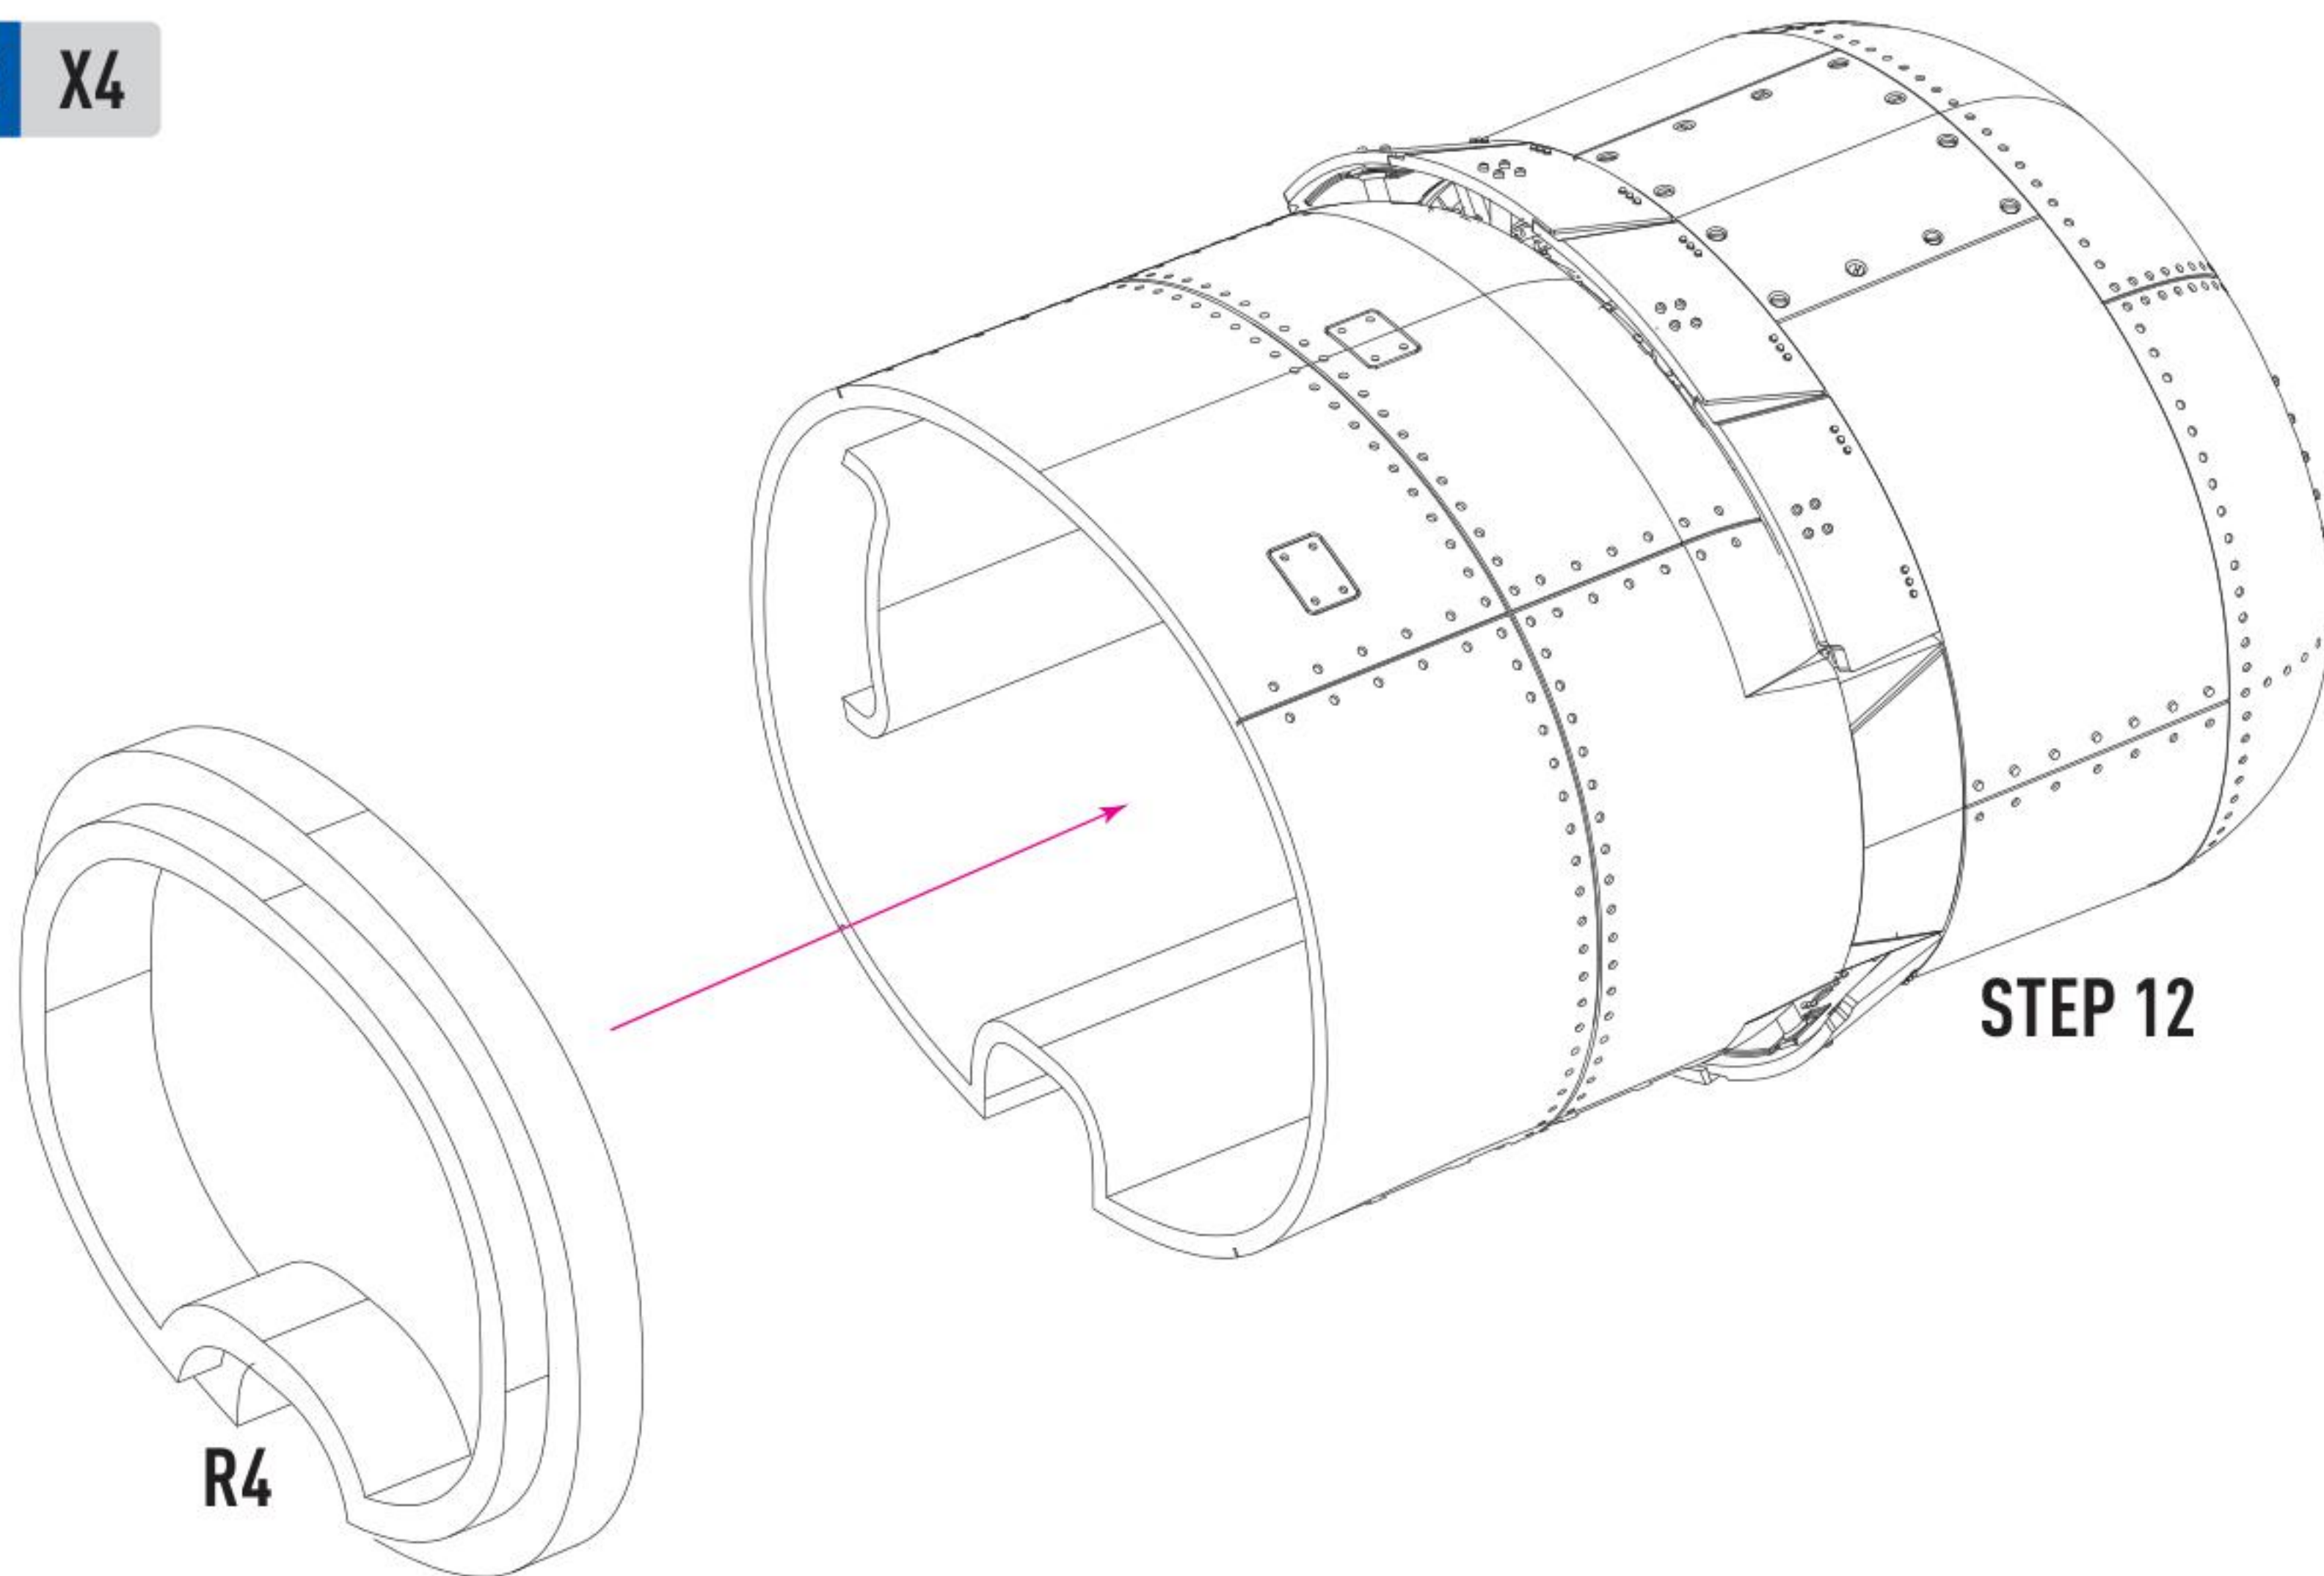


15 X2 **VARIANT 2**
(OPEN)

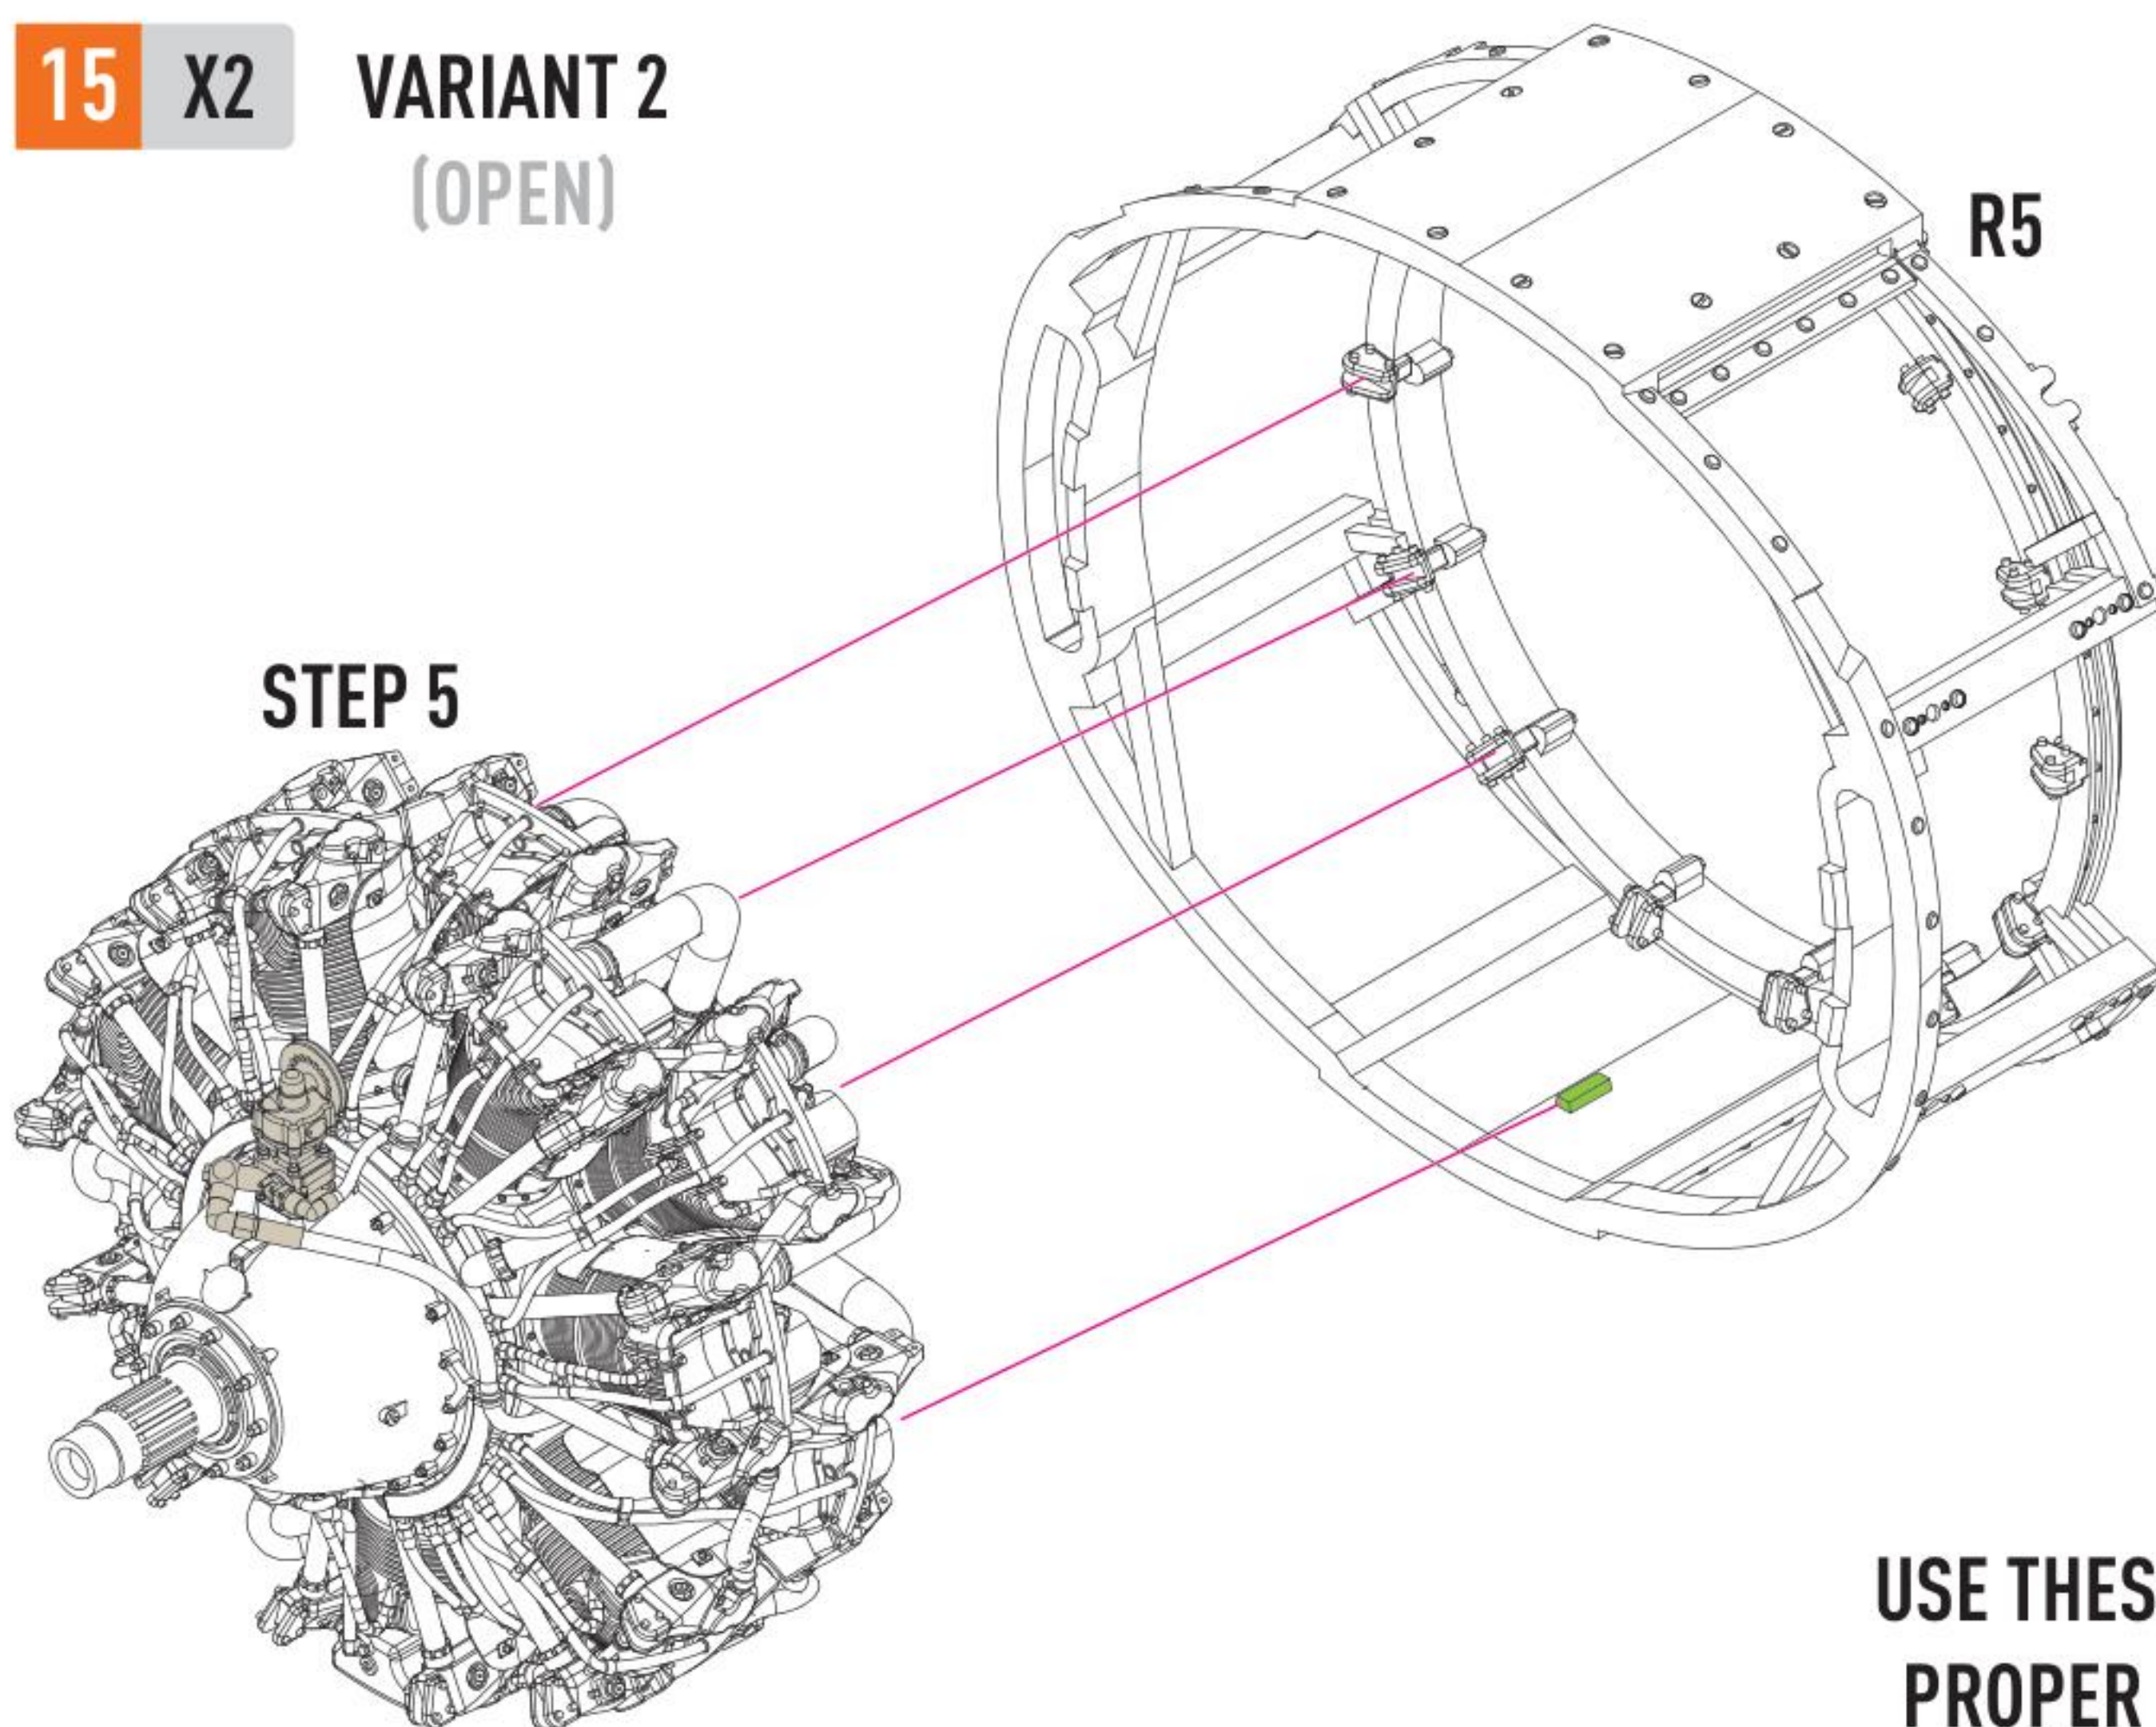


**USE THESE ELEMENTS FOR
PROPER ENGINE FITTING**

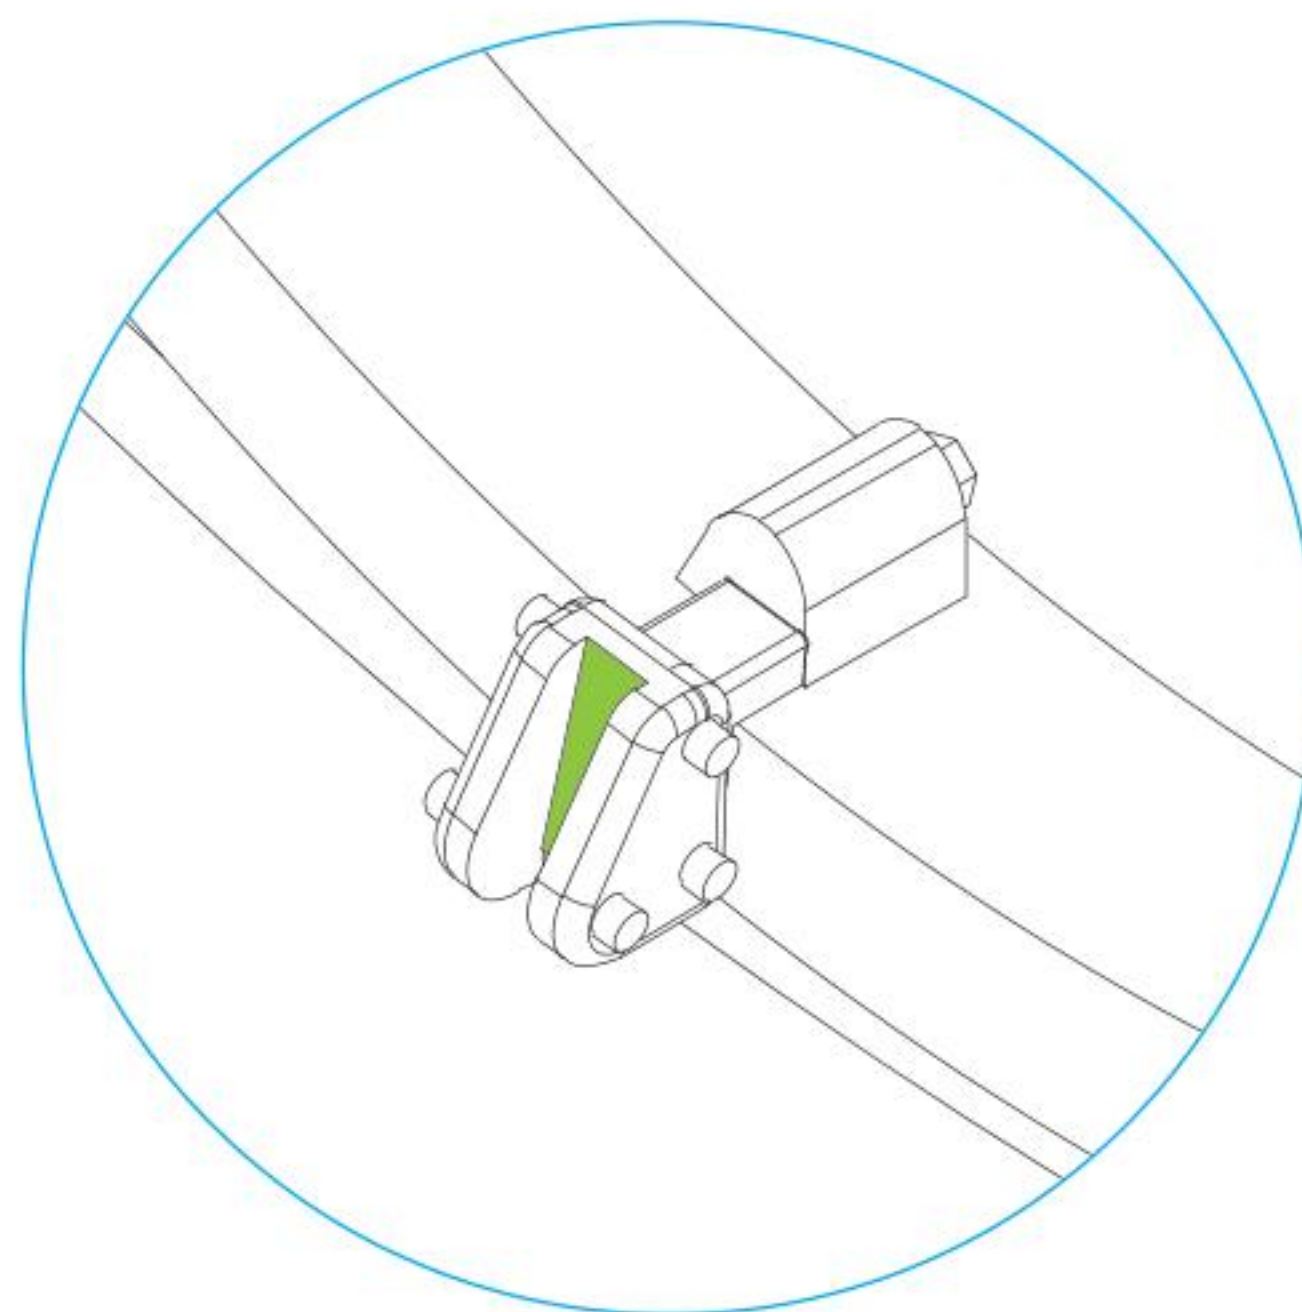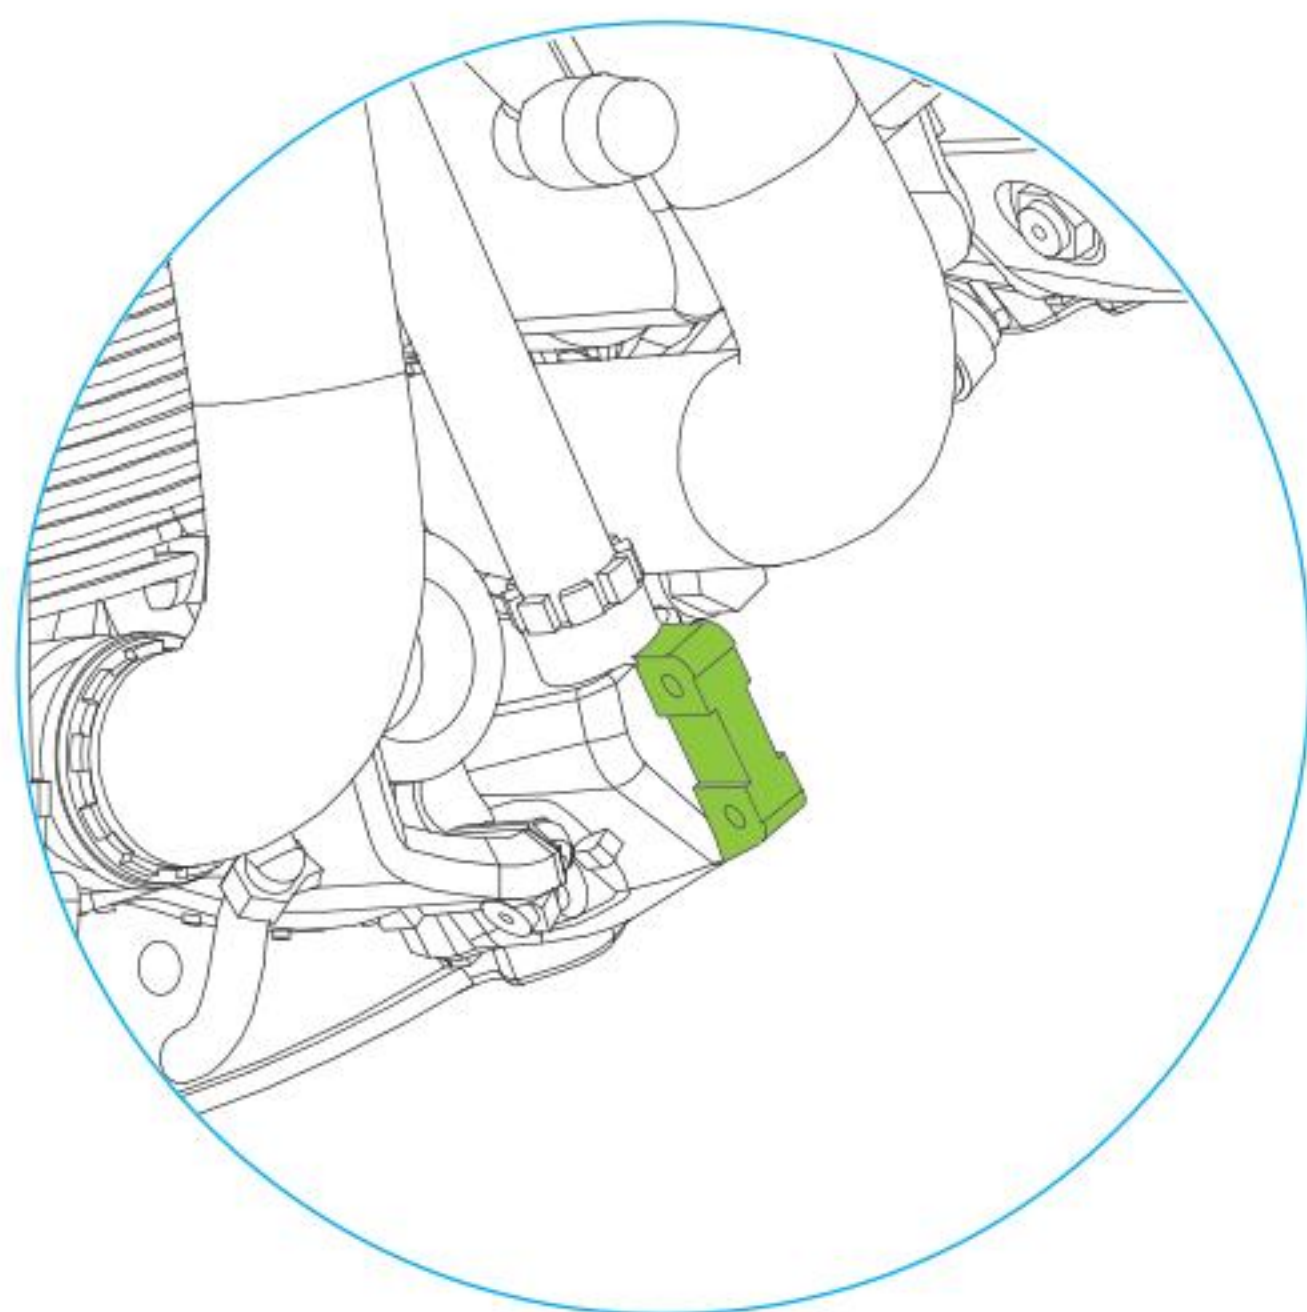


16 X2 **OPTIONAL**

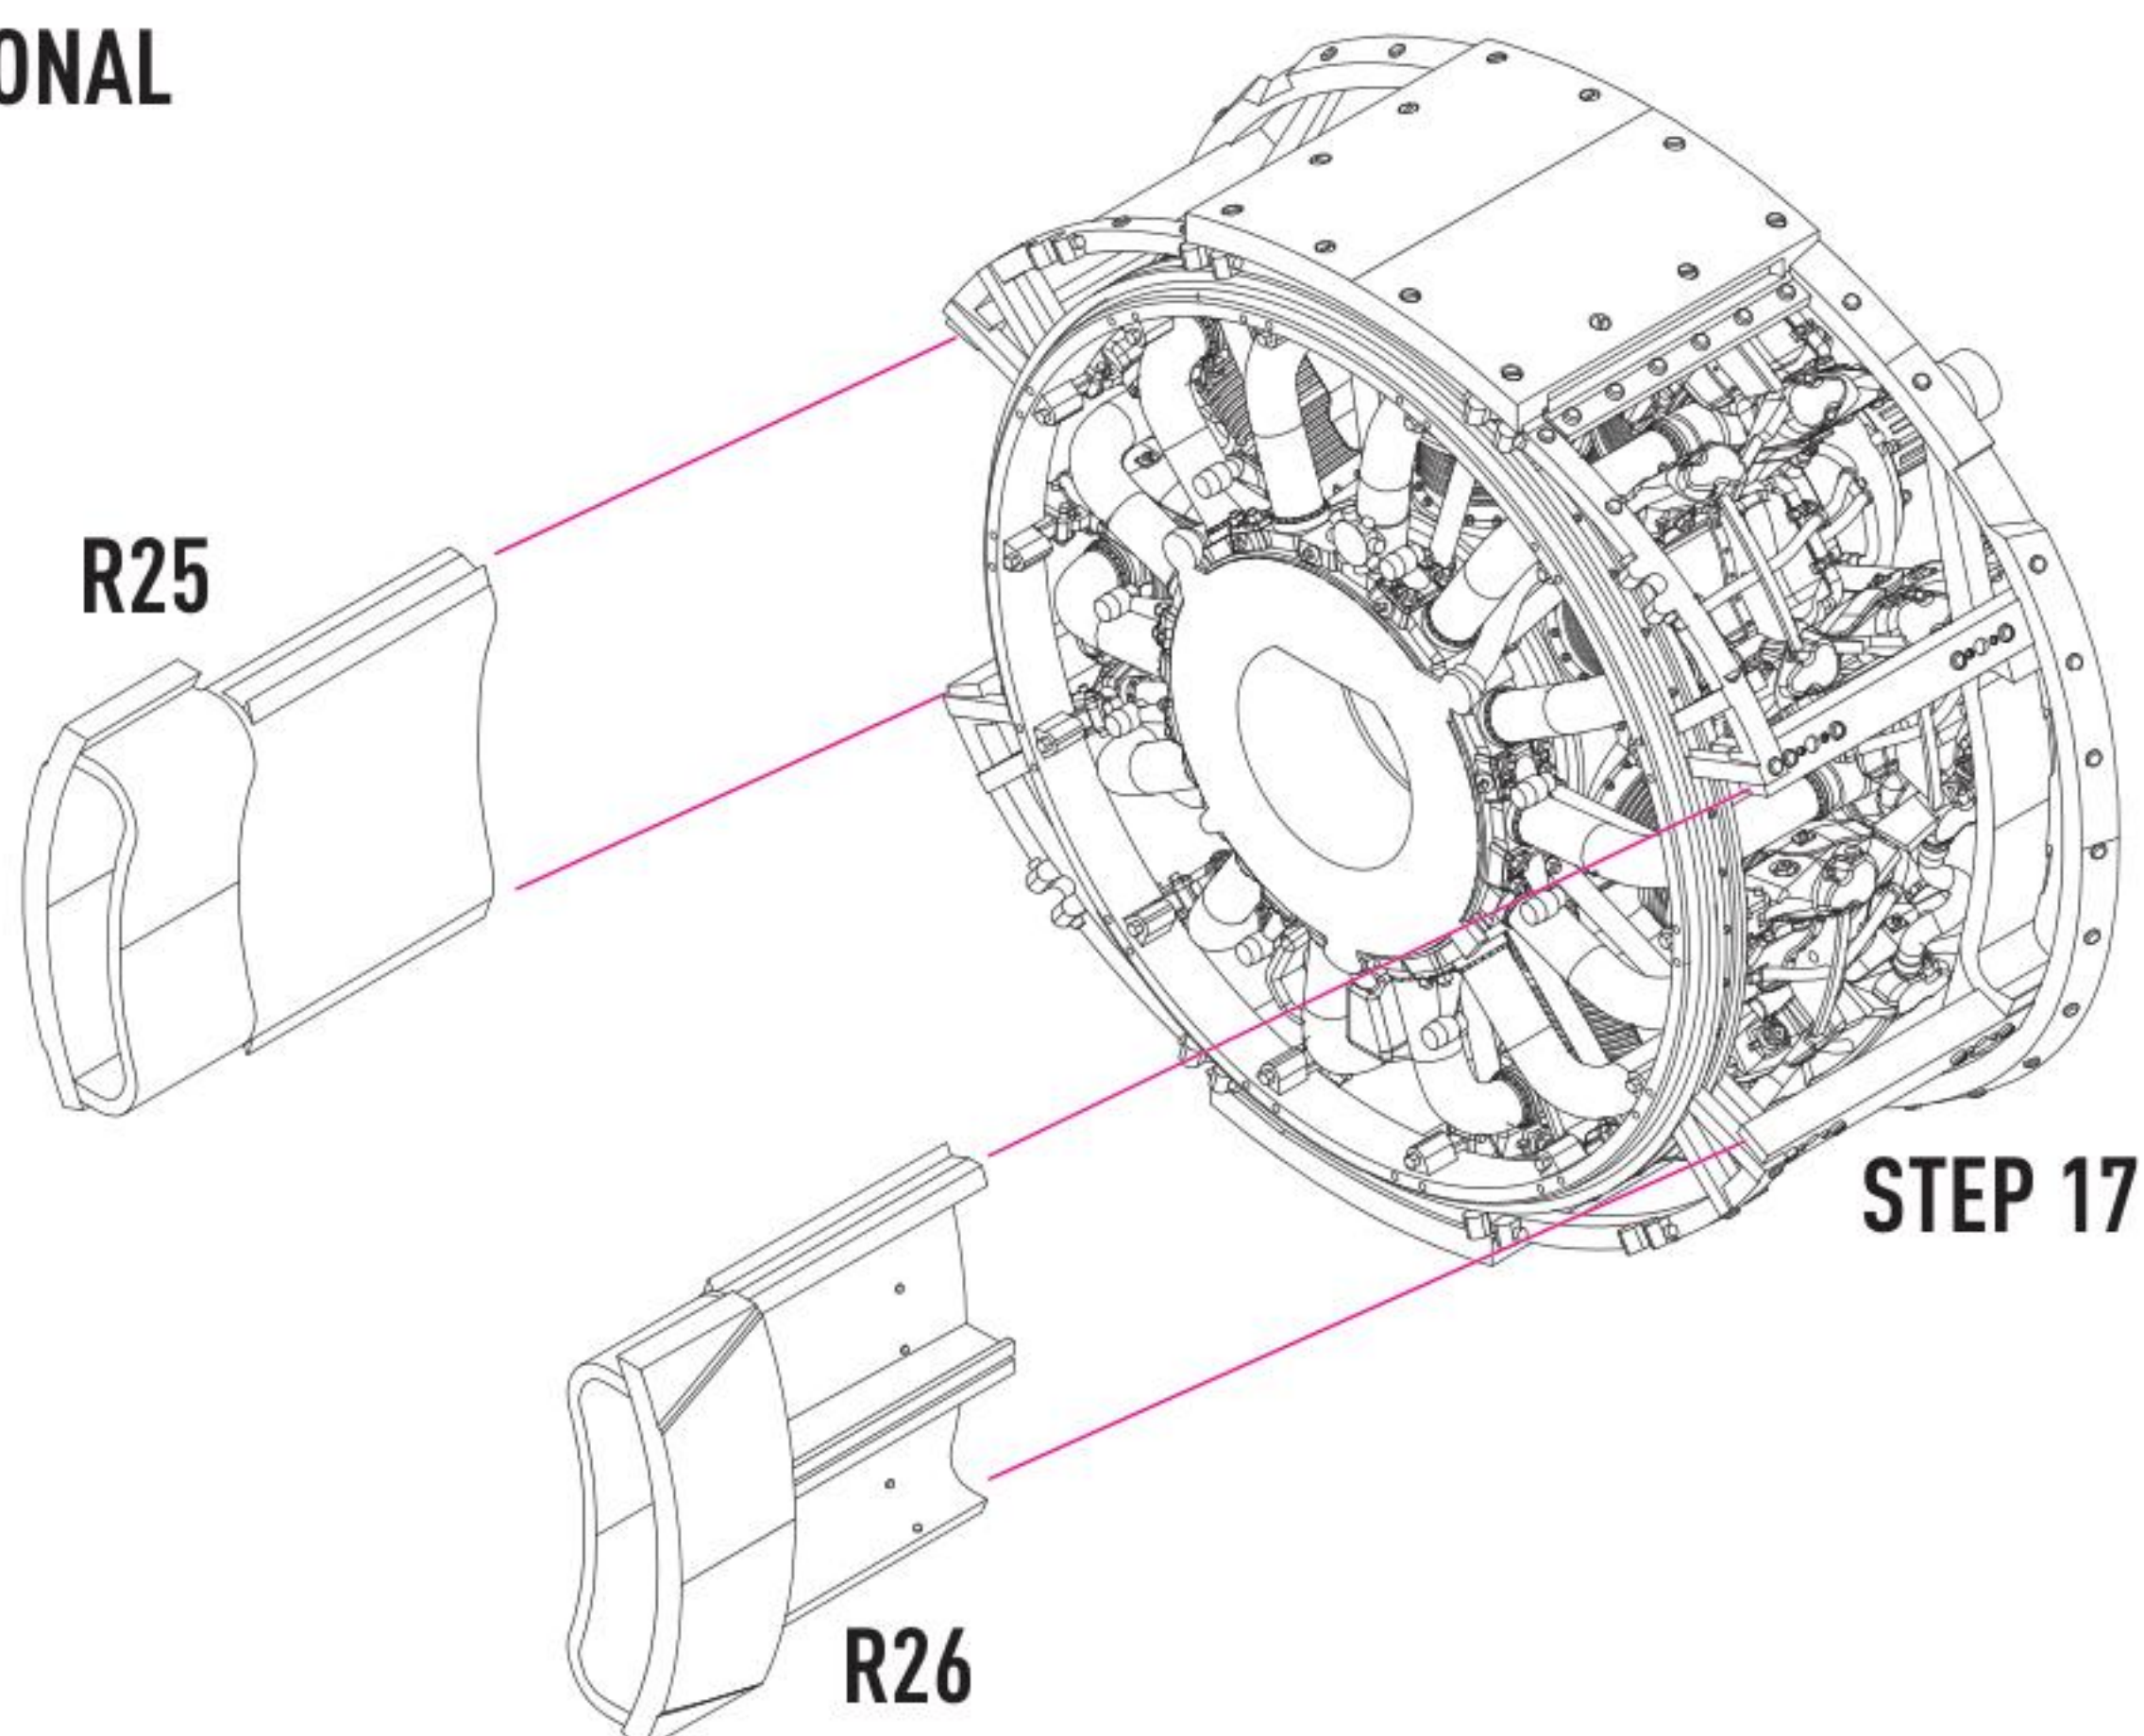


17 X2

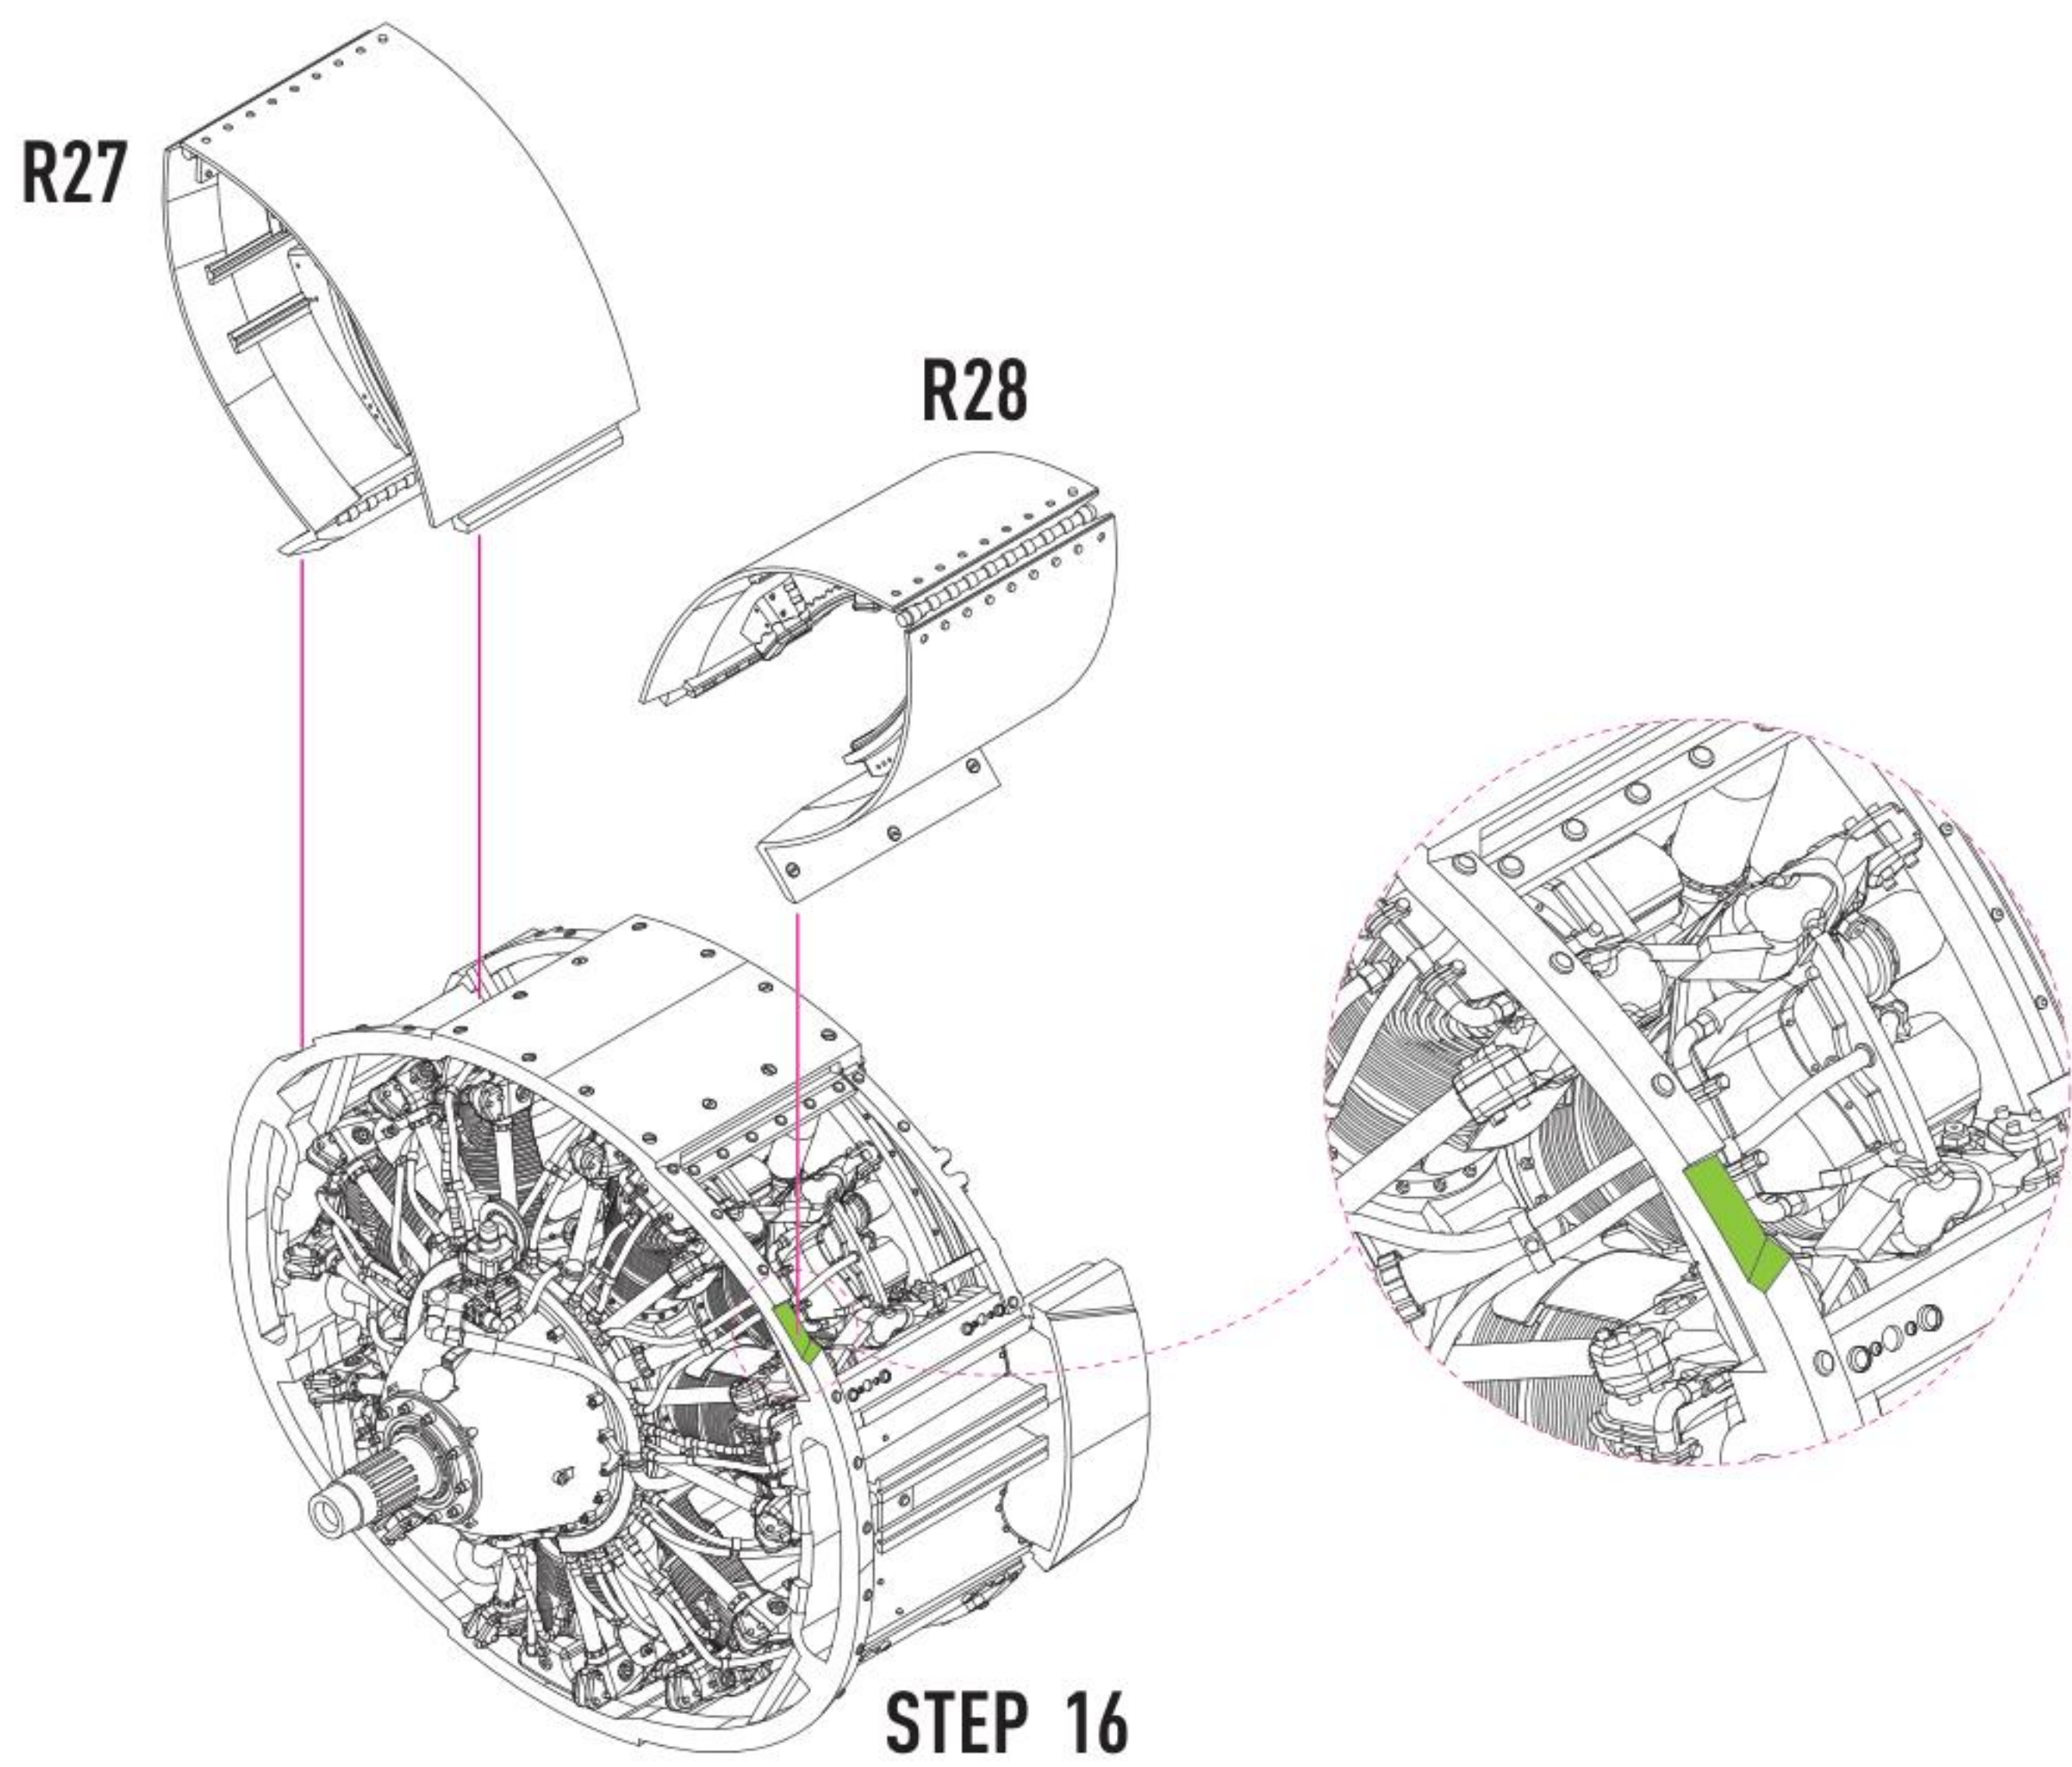




18 INTERNAL


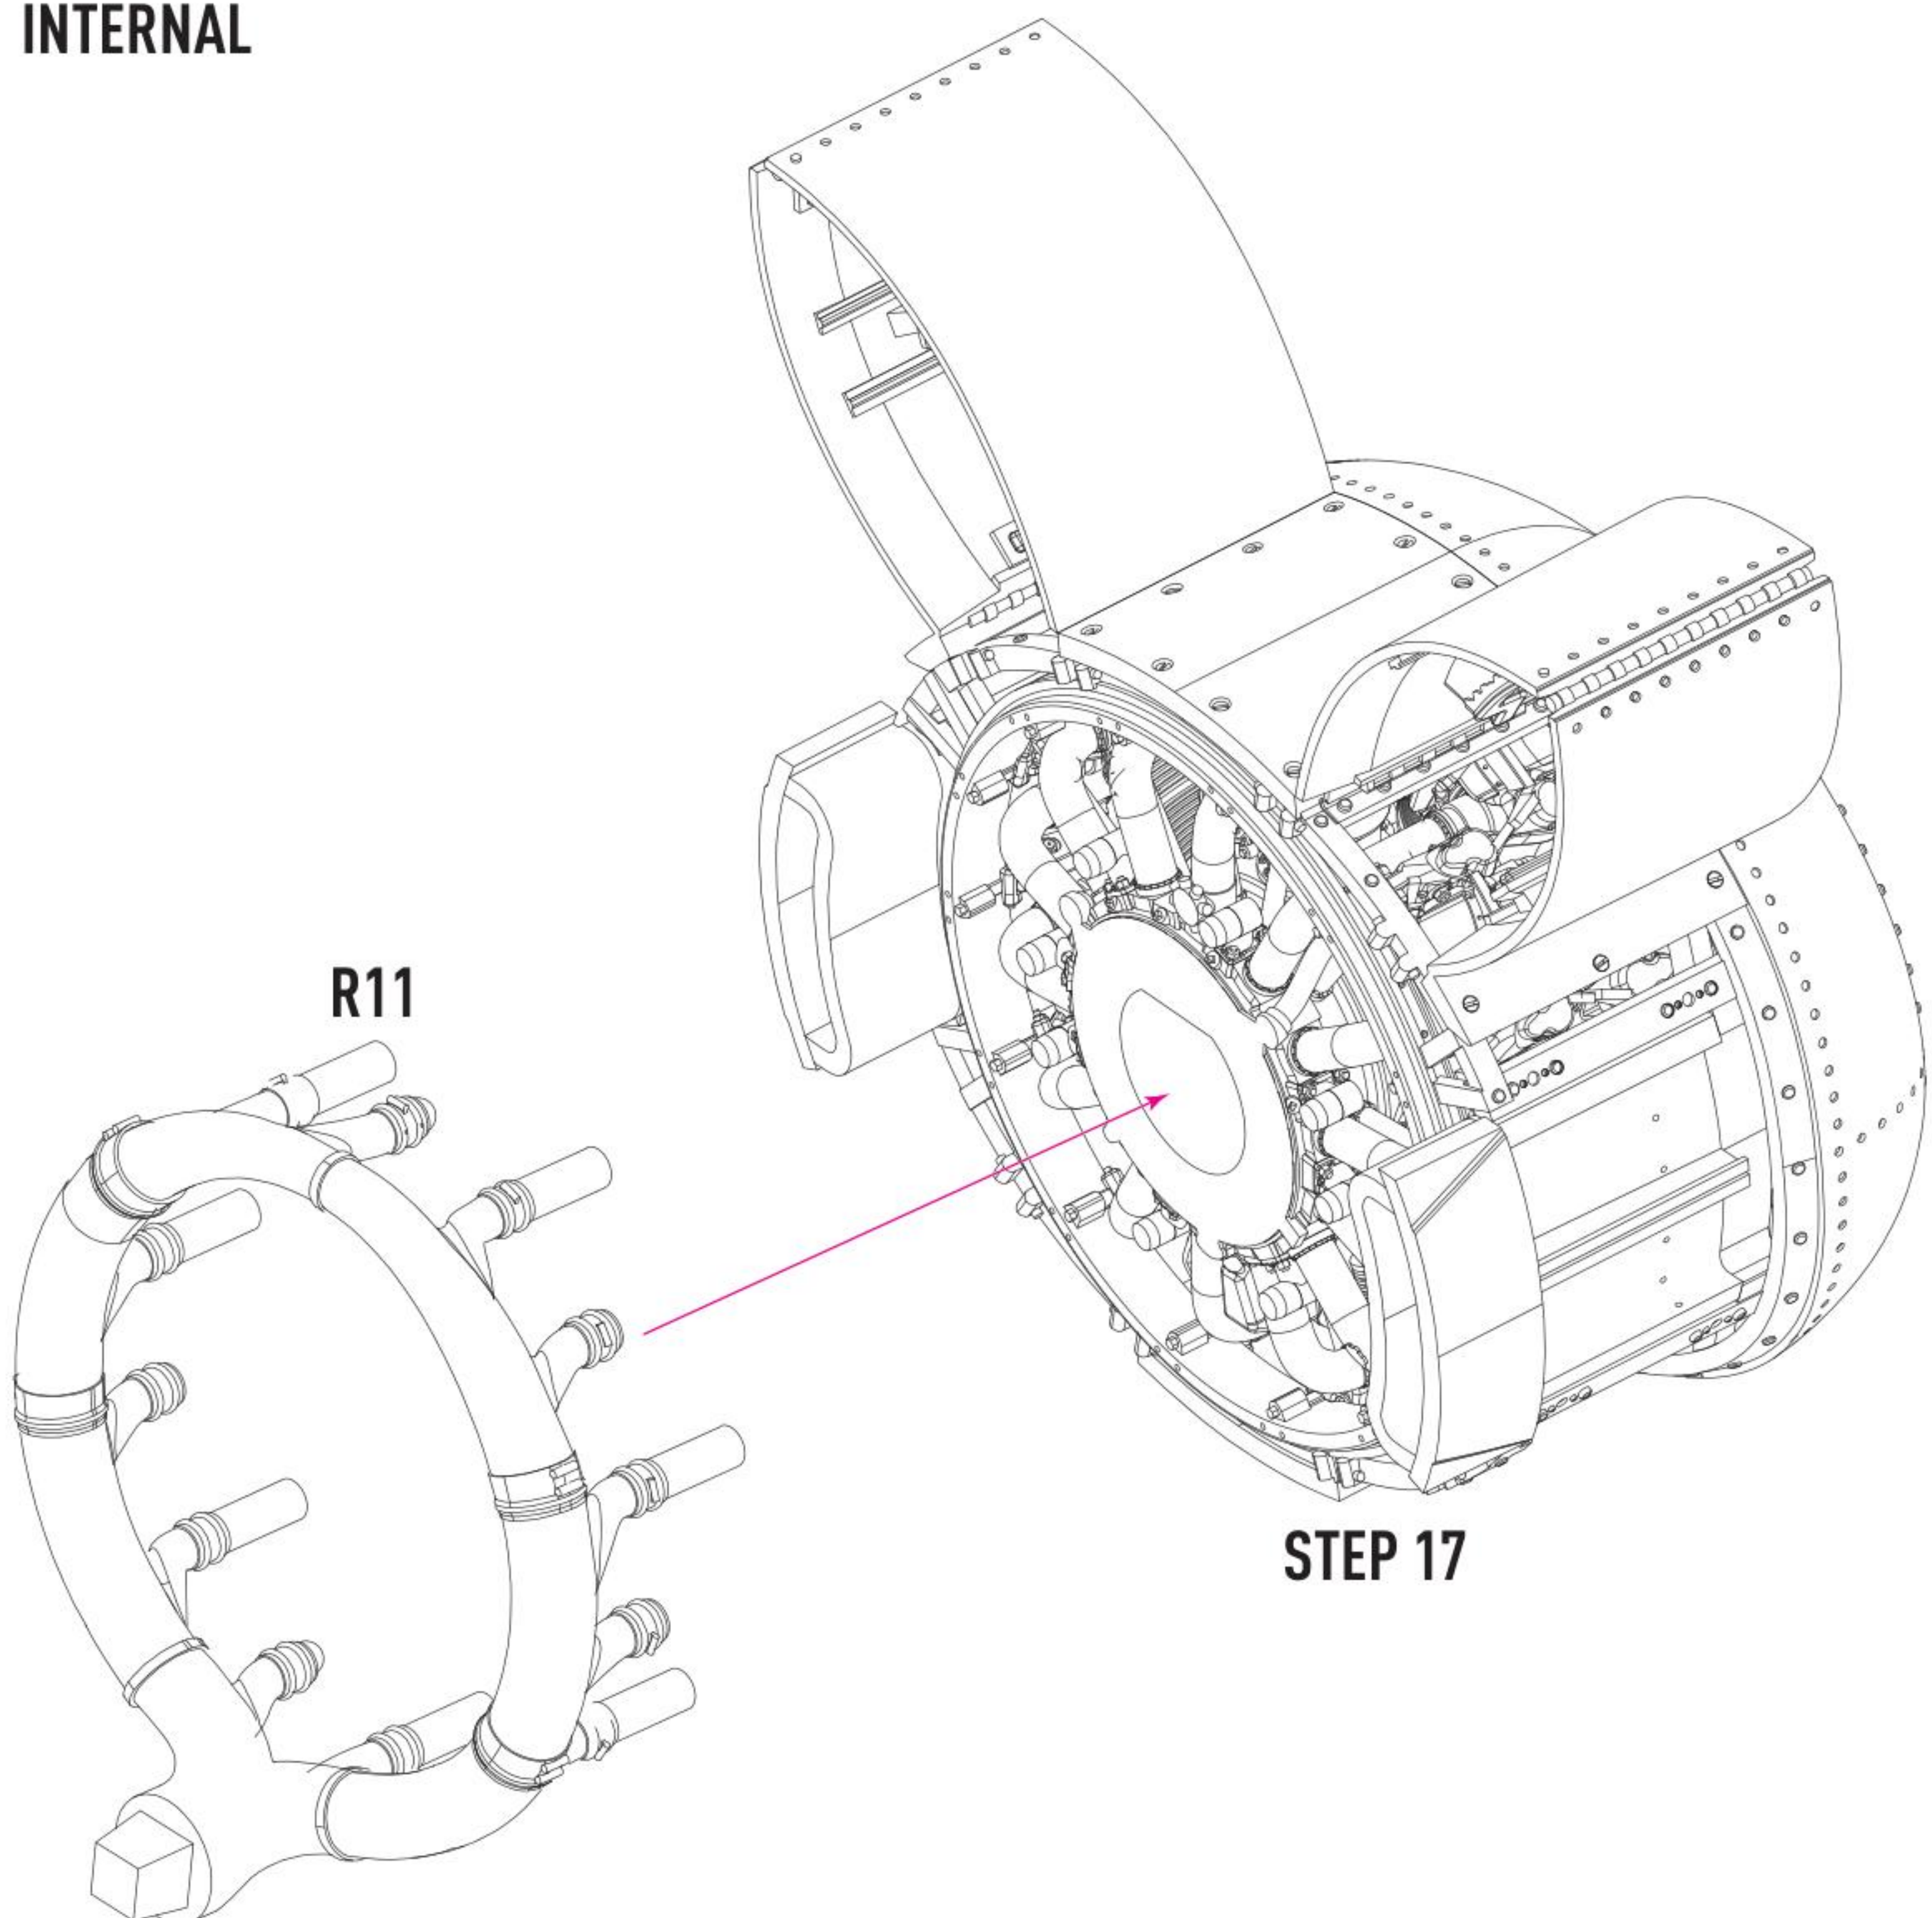


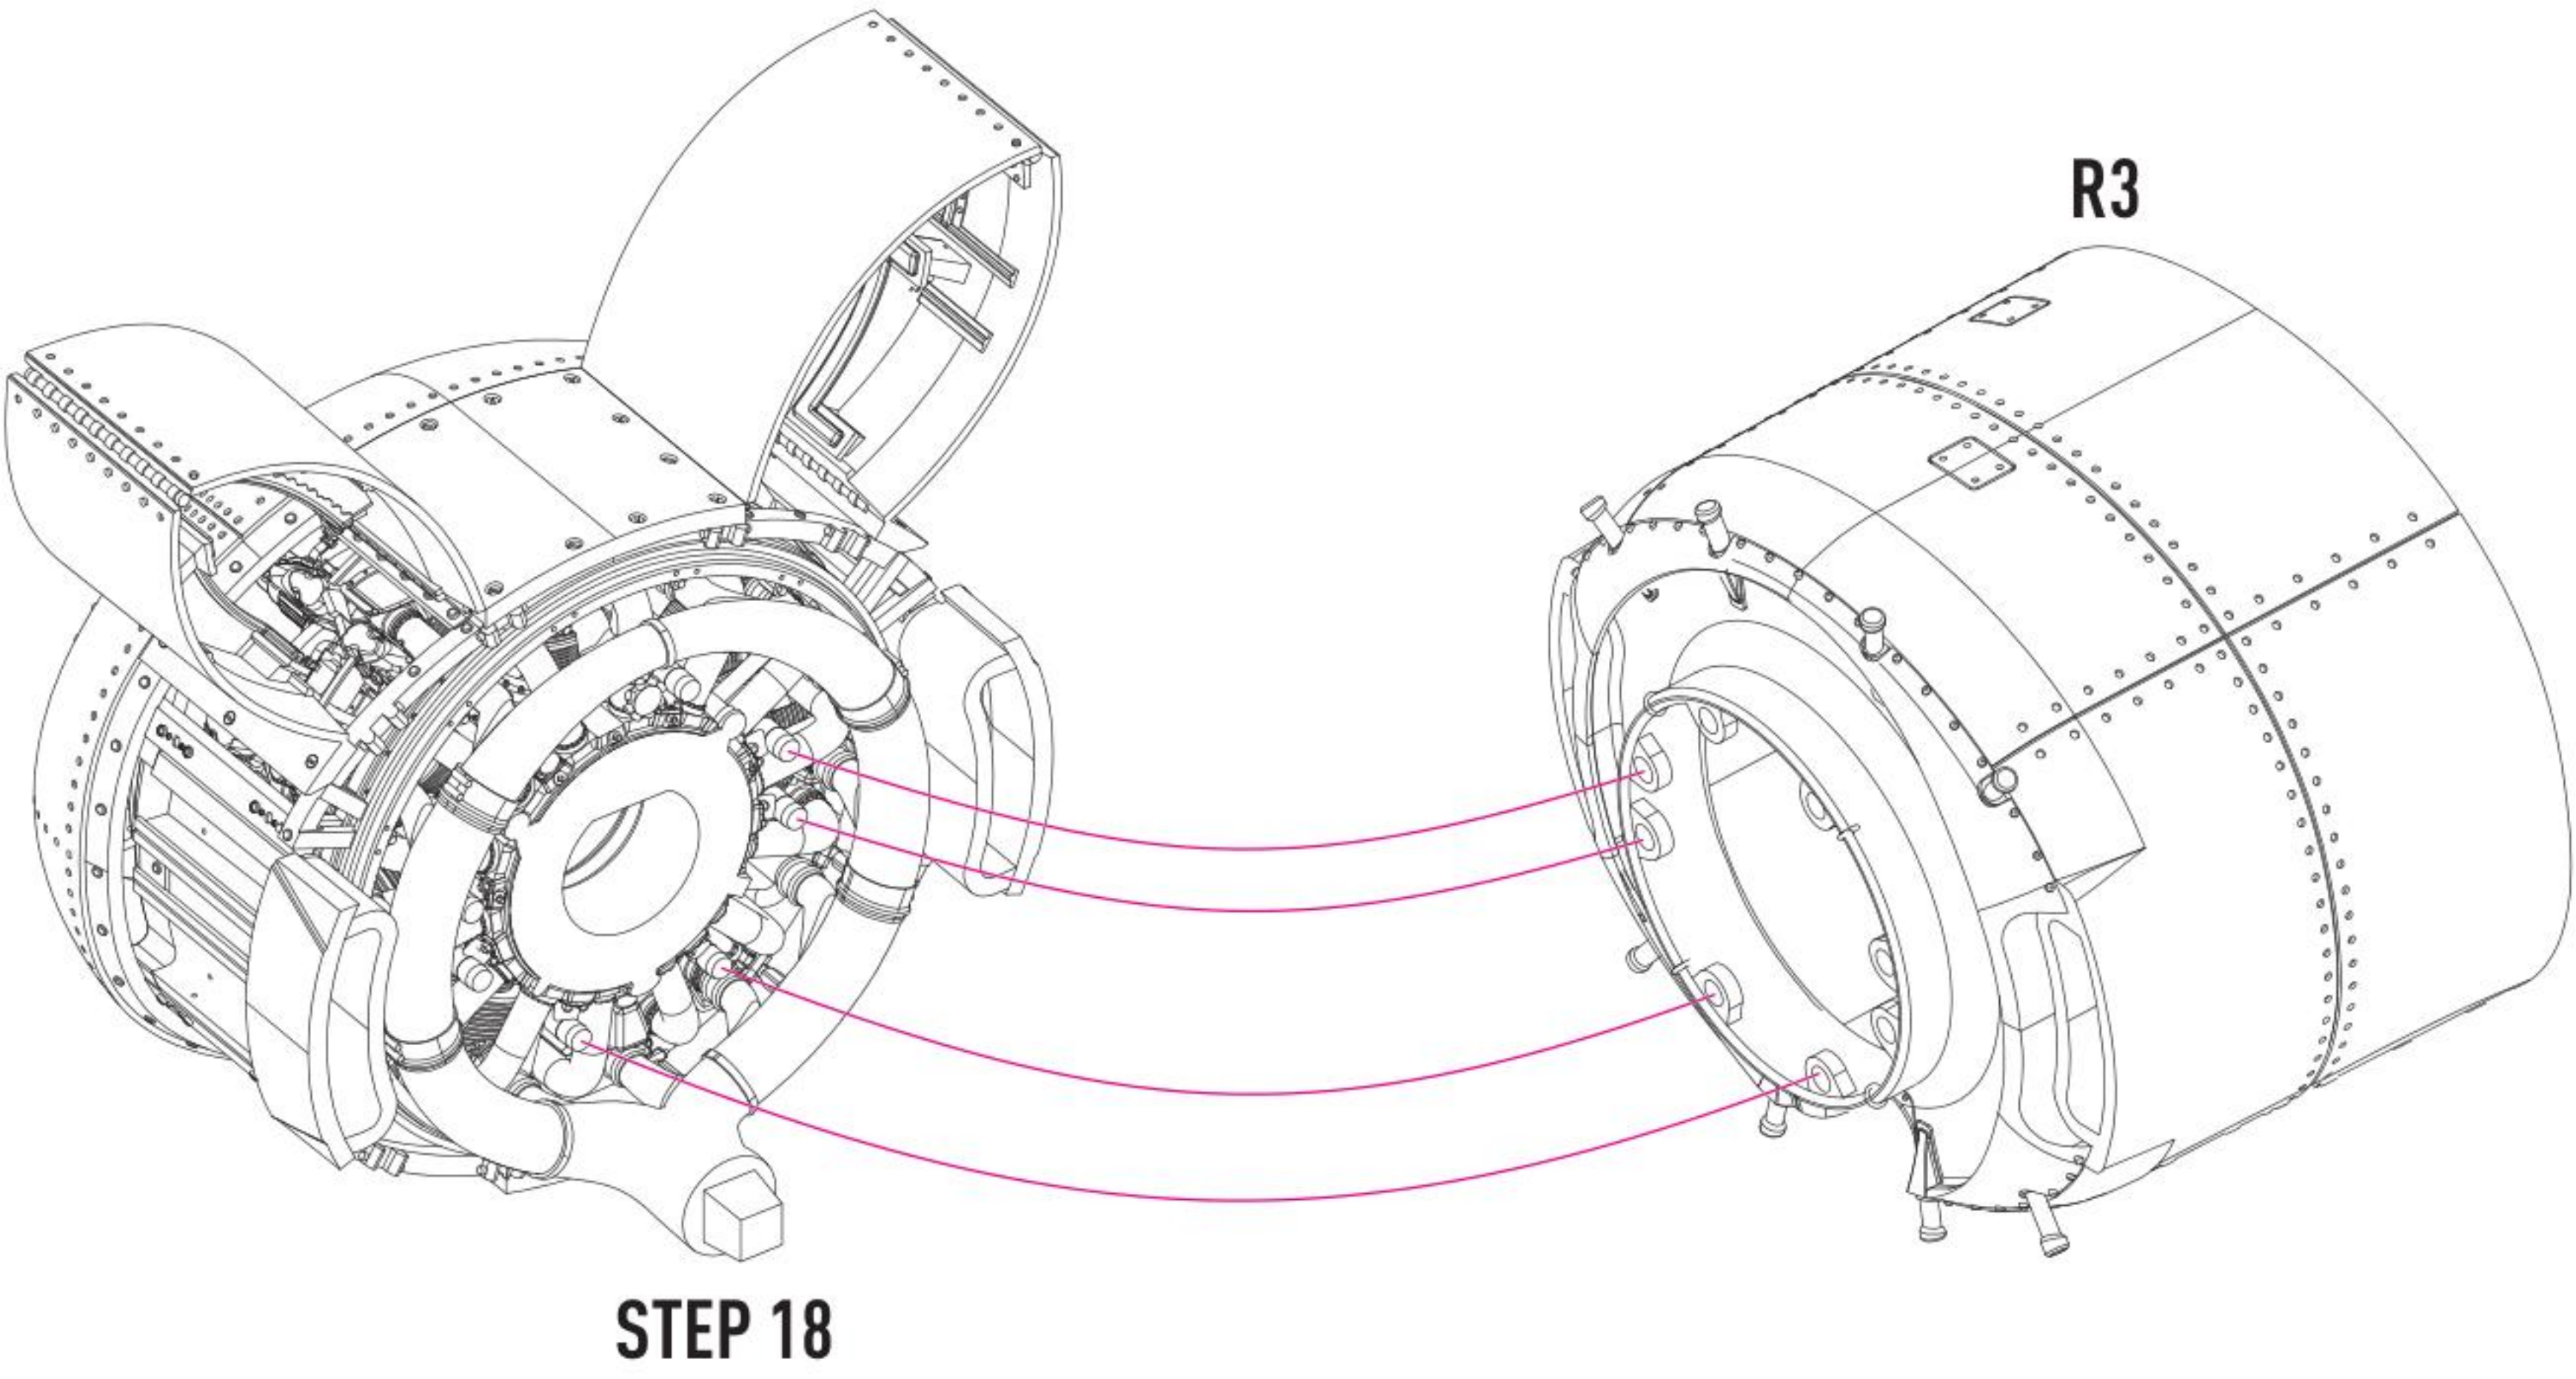


20 EXTERNAL

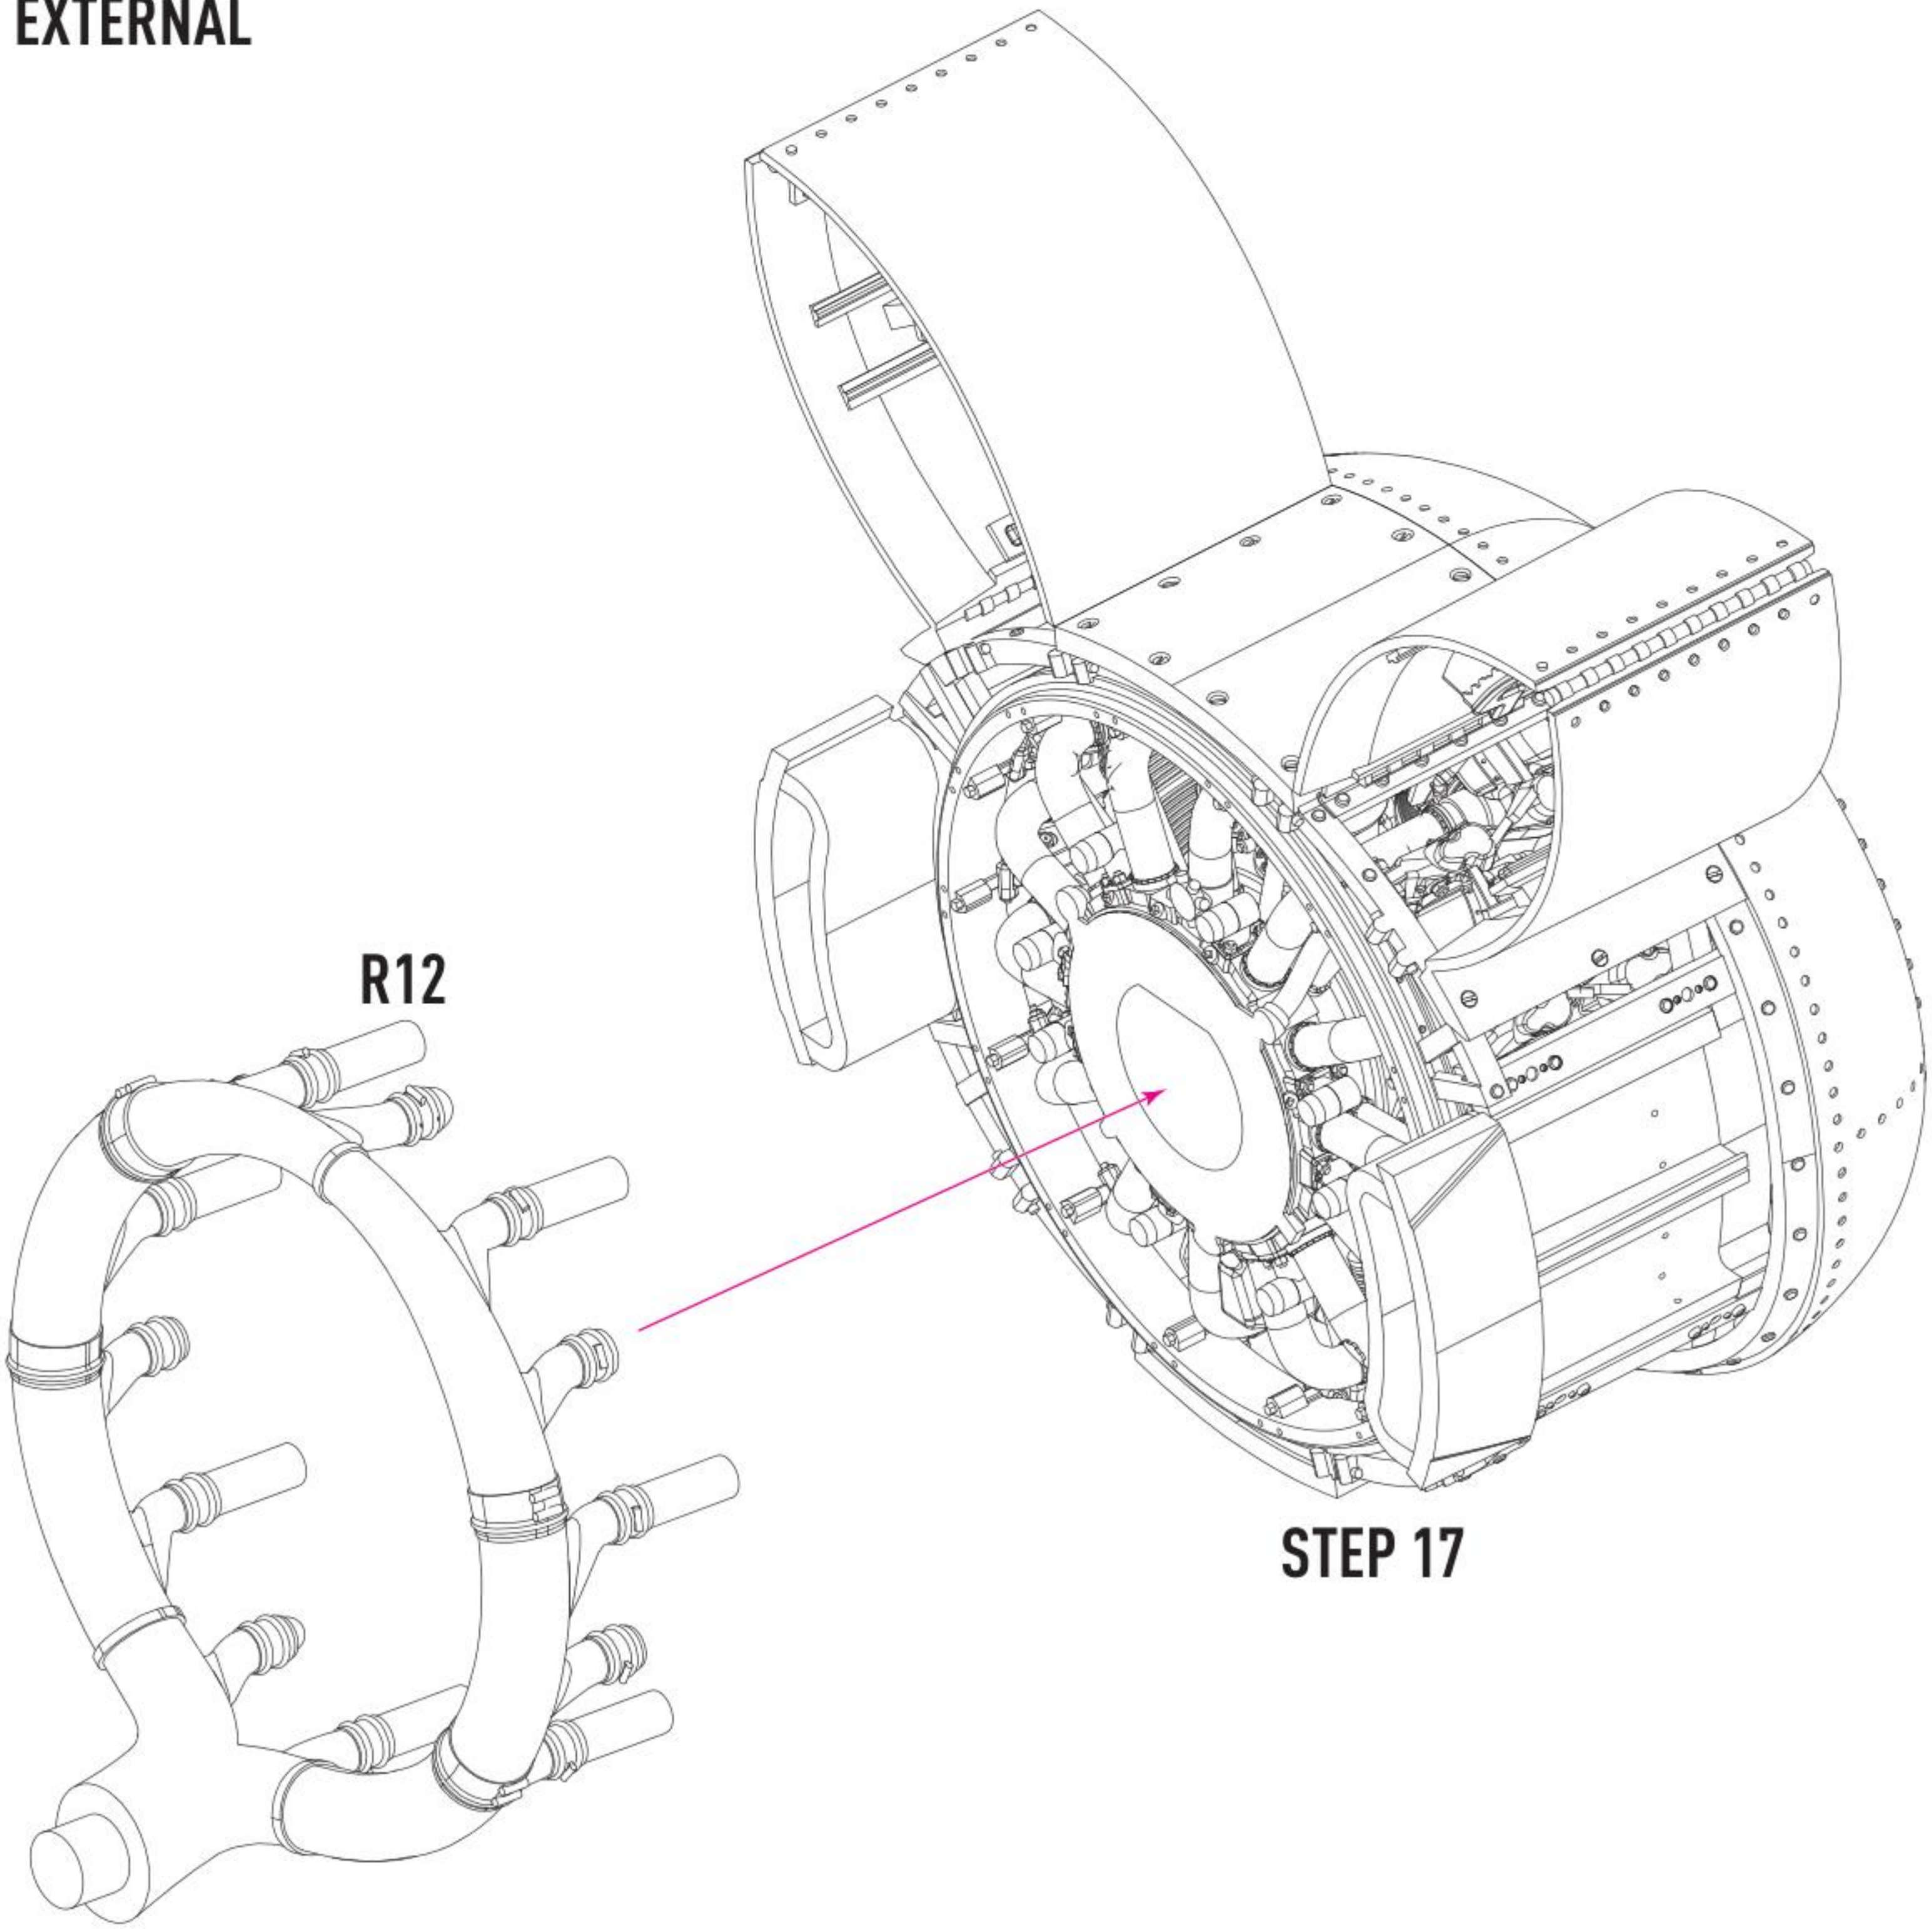


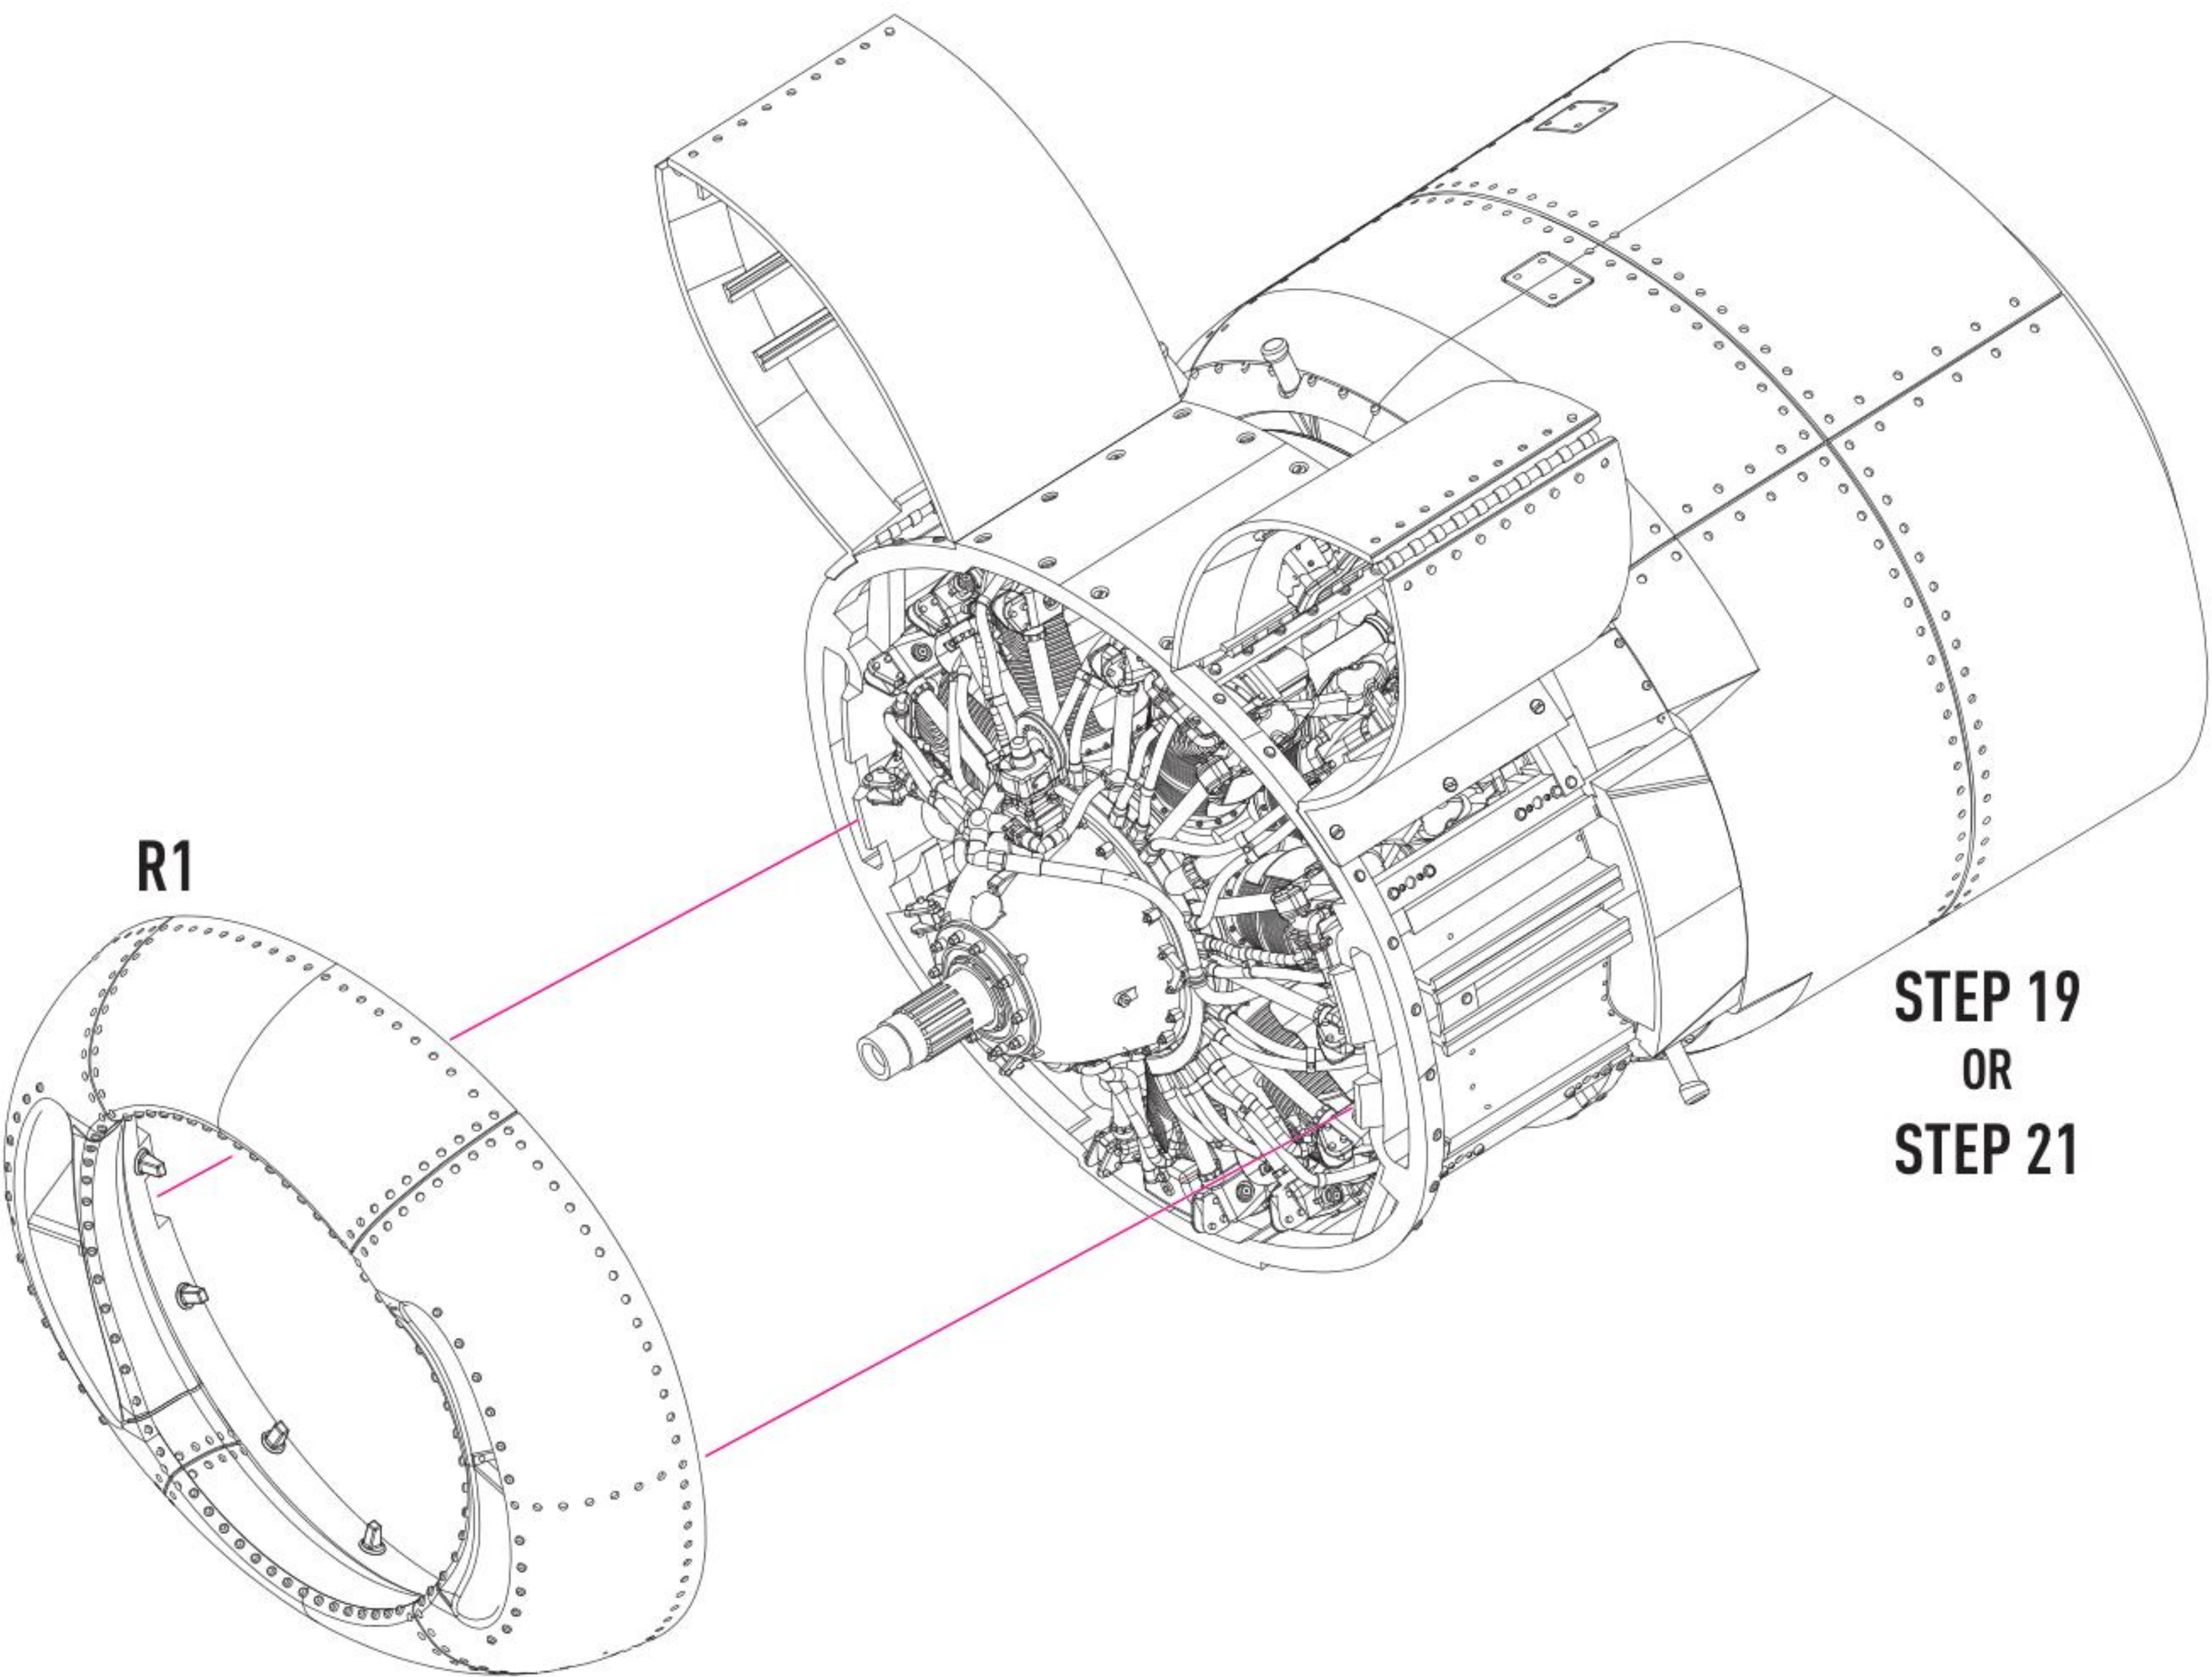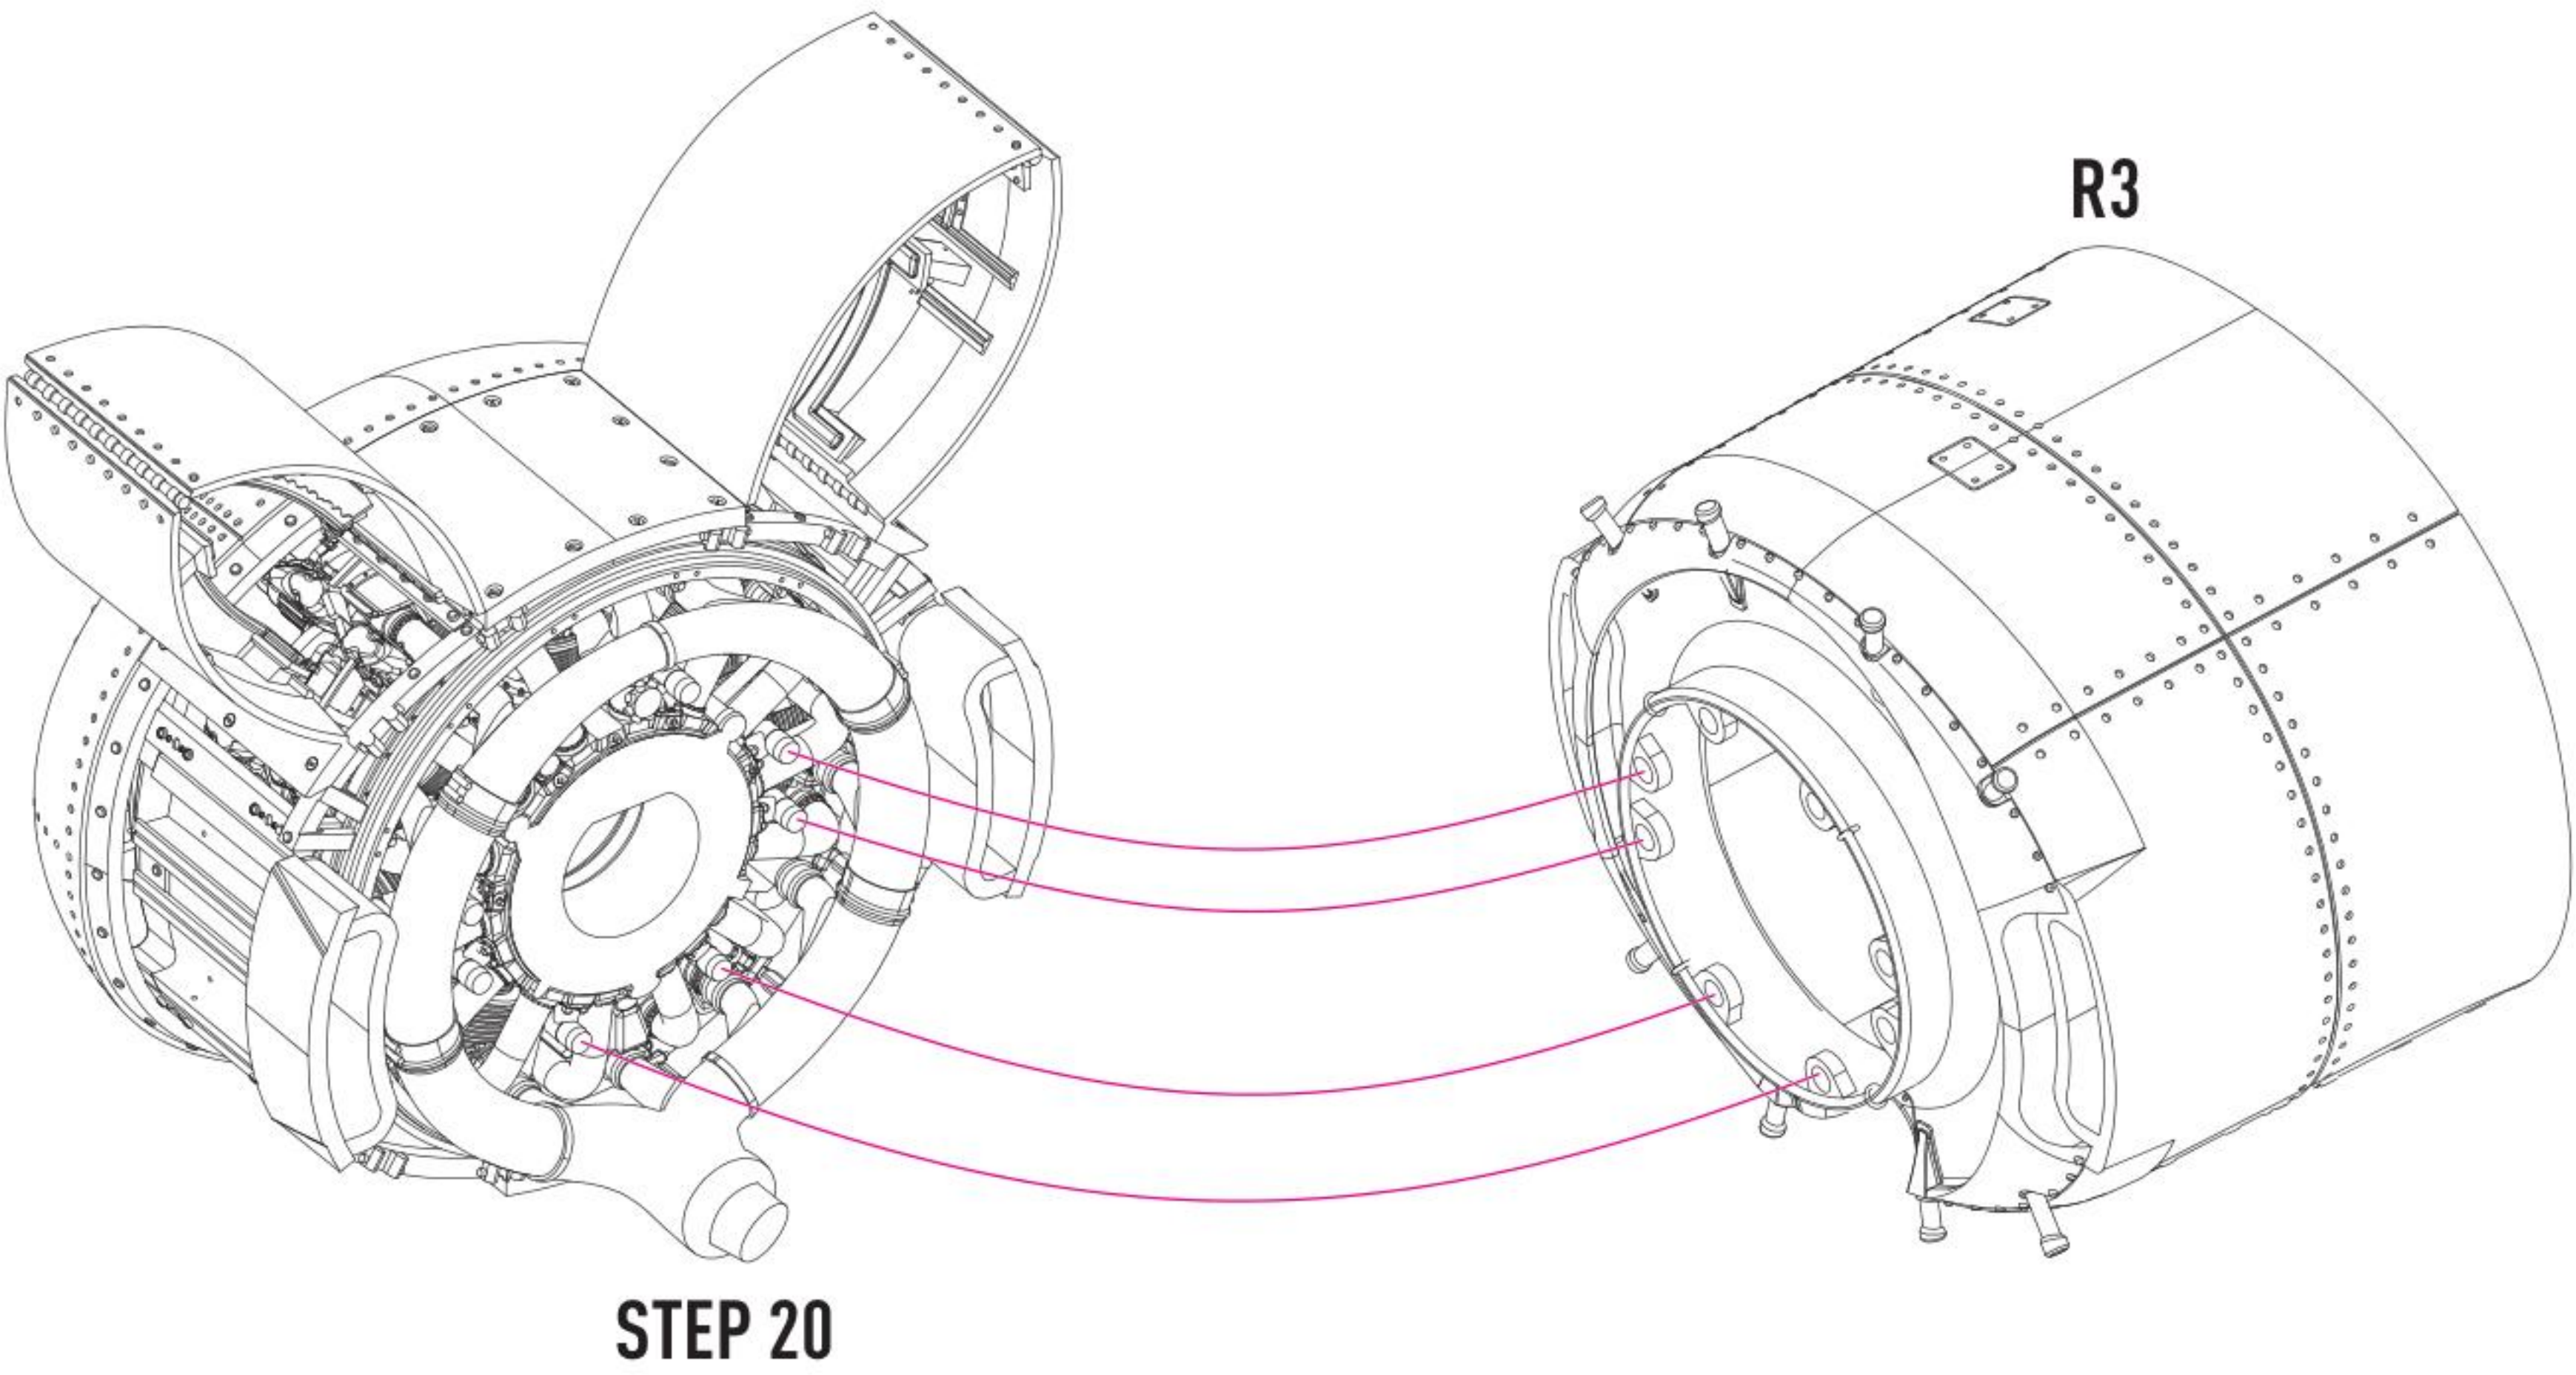

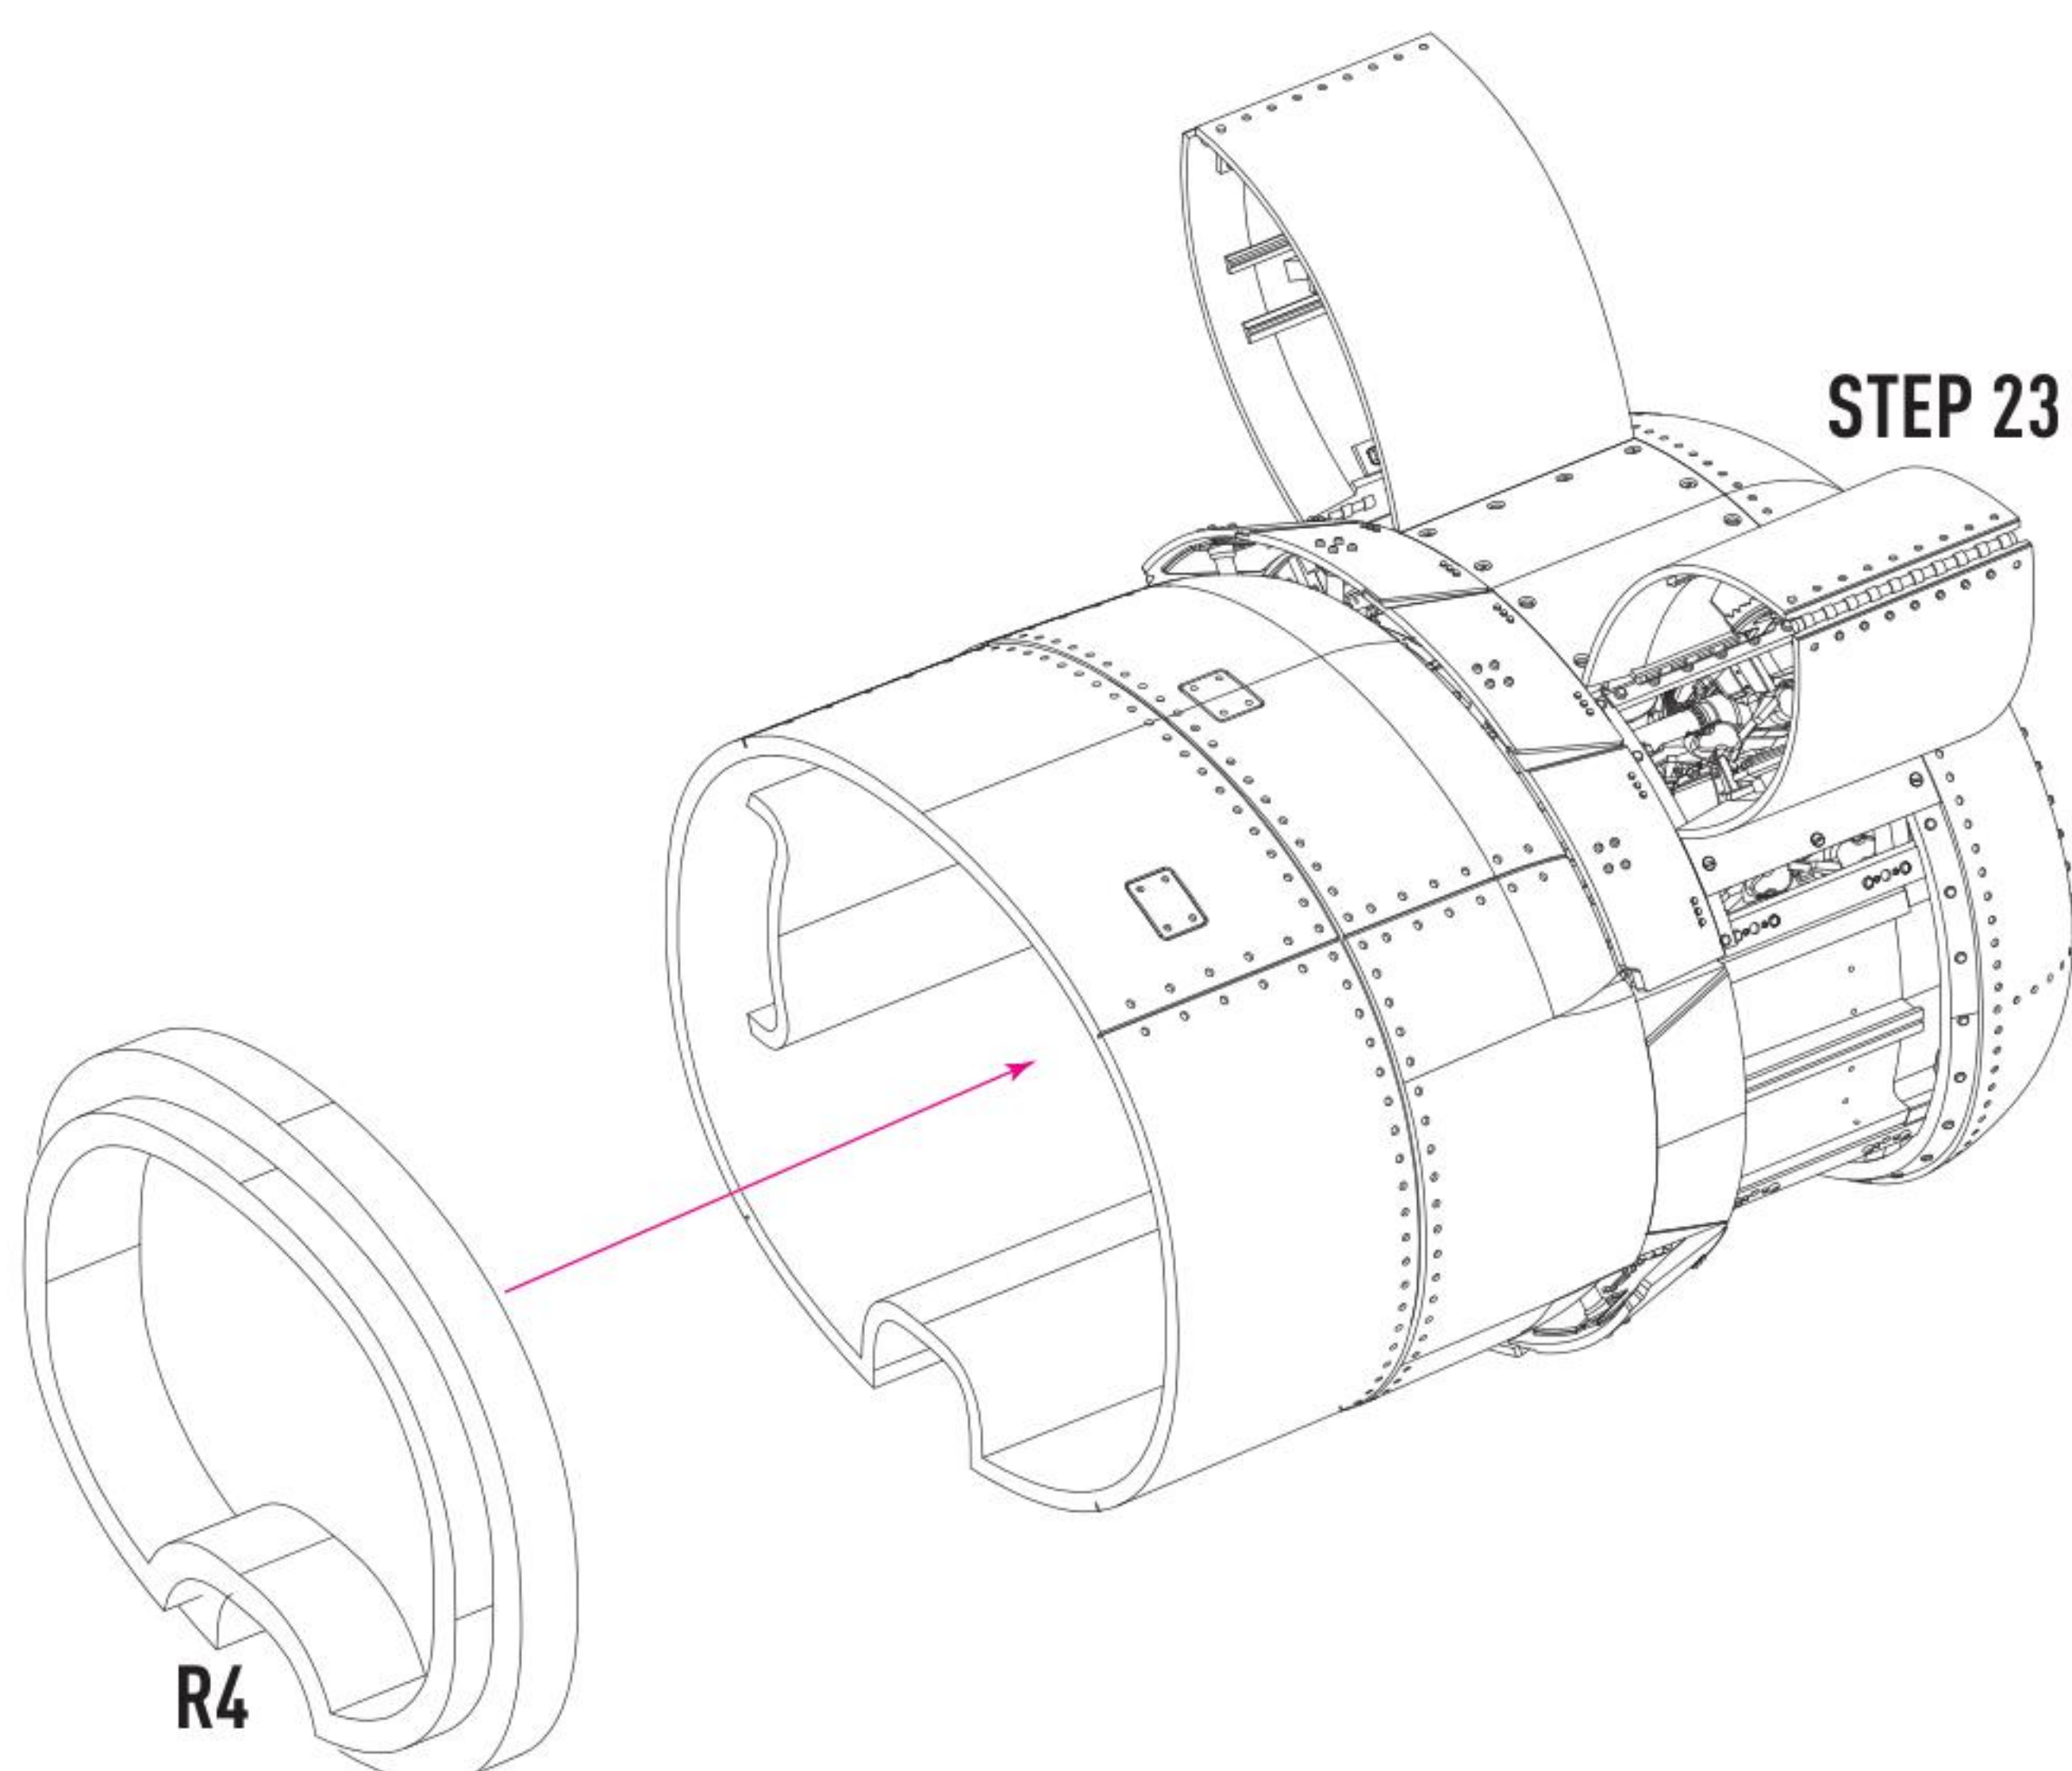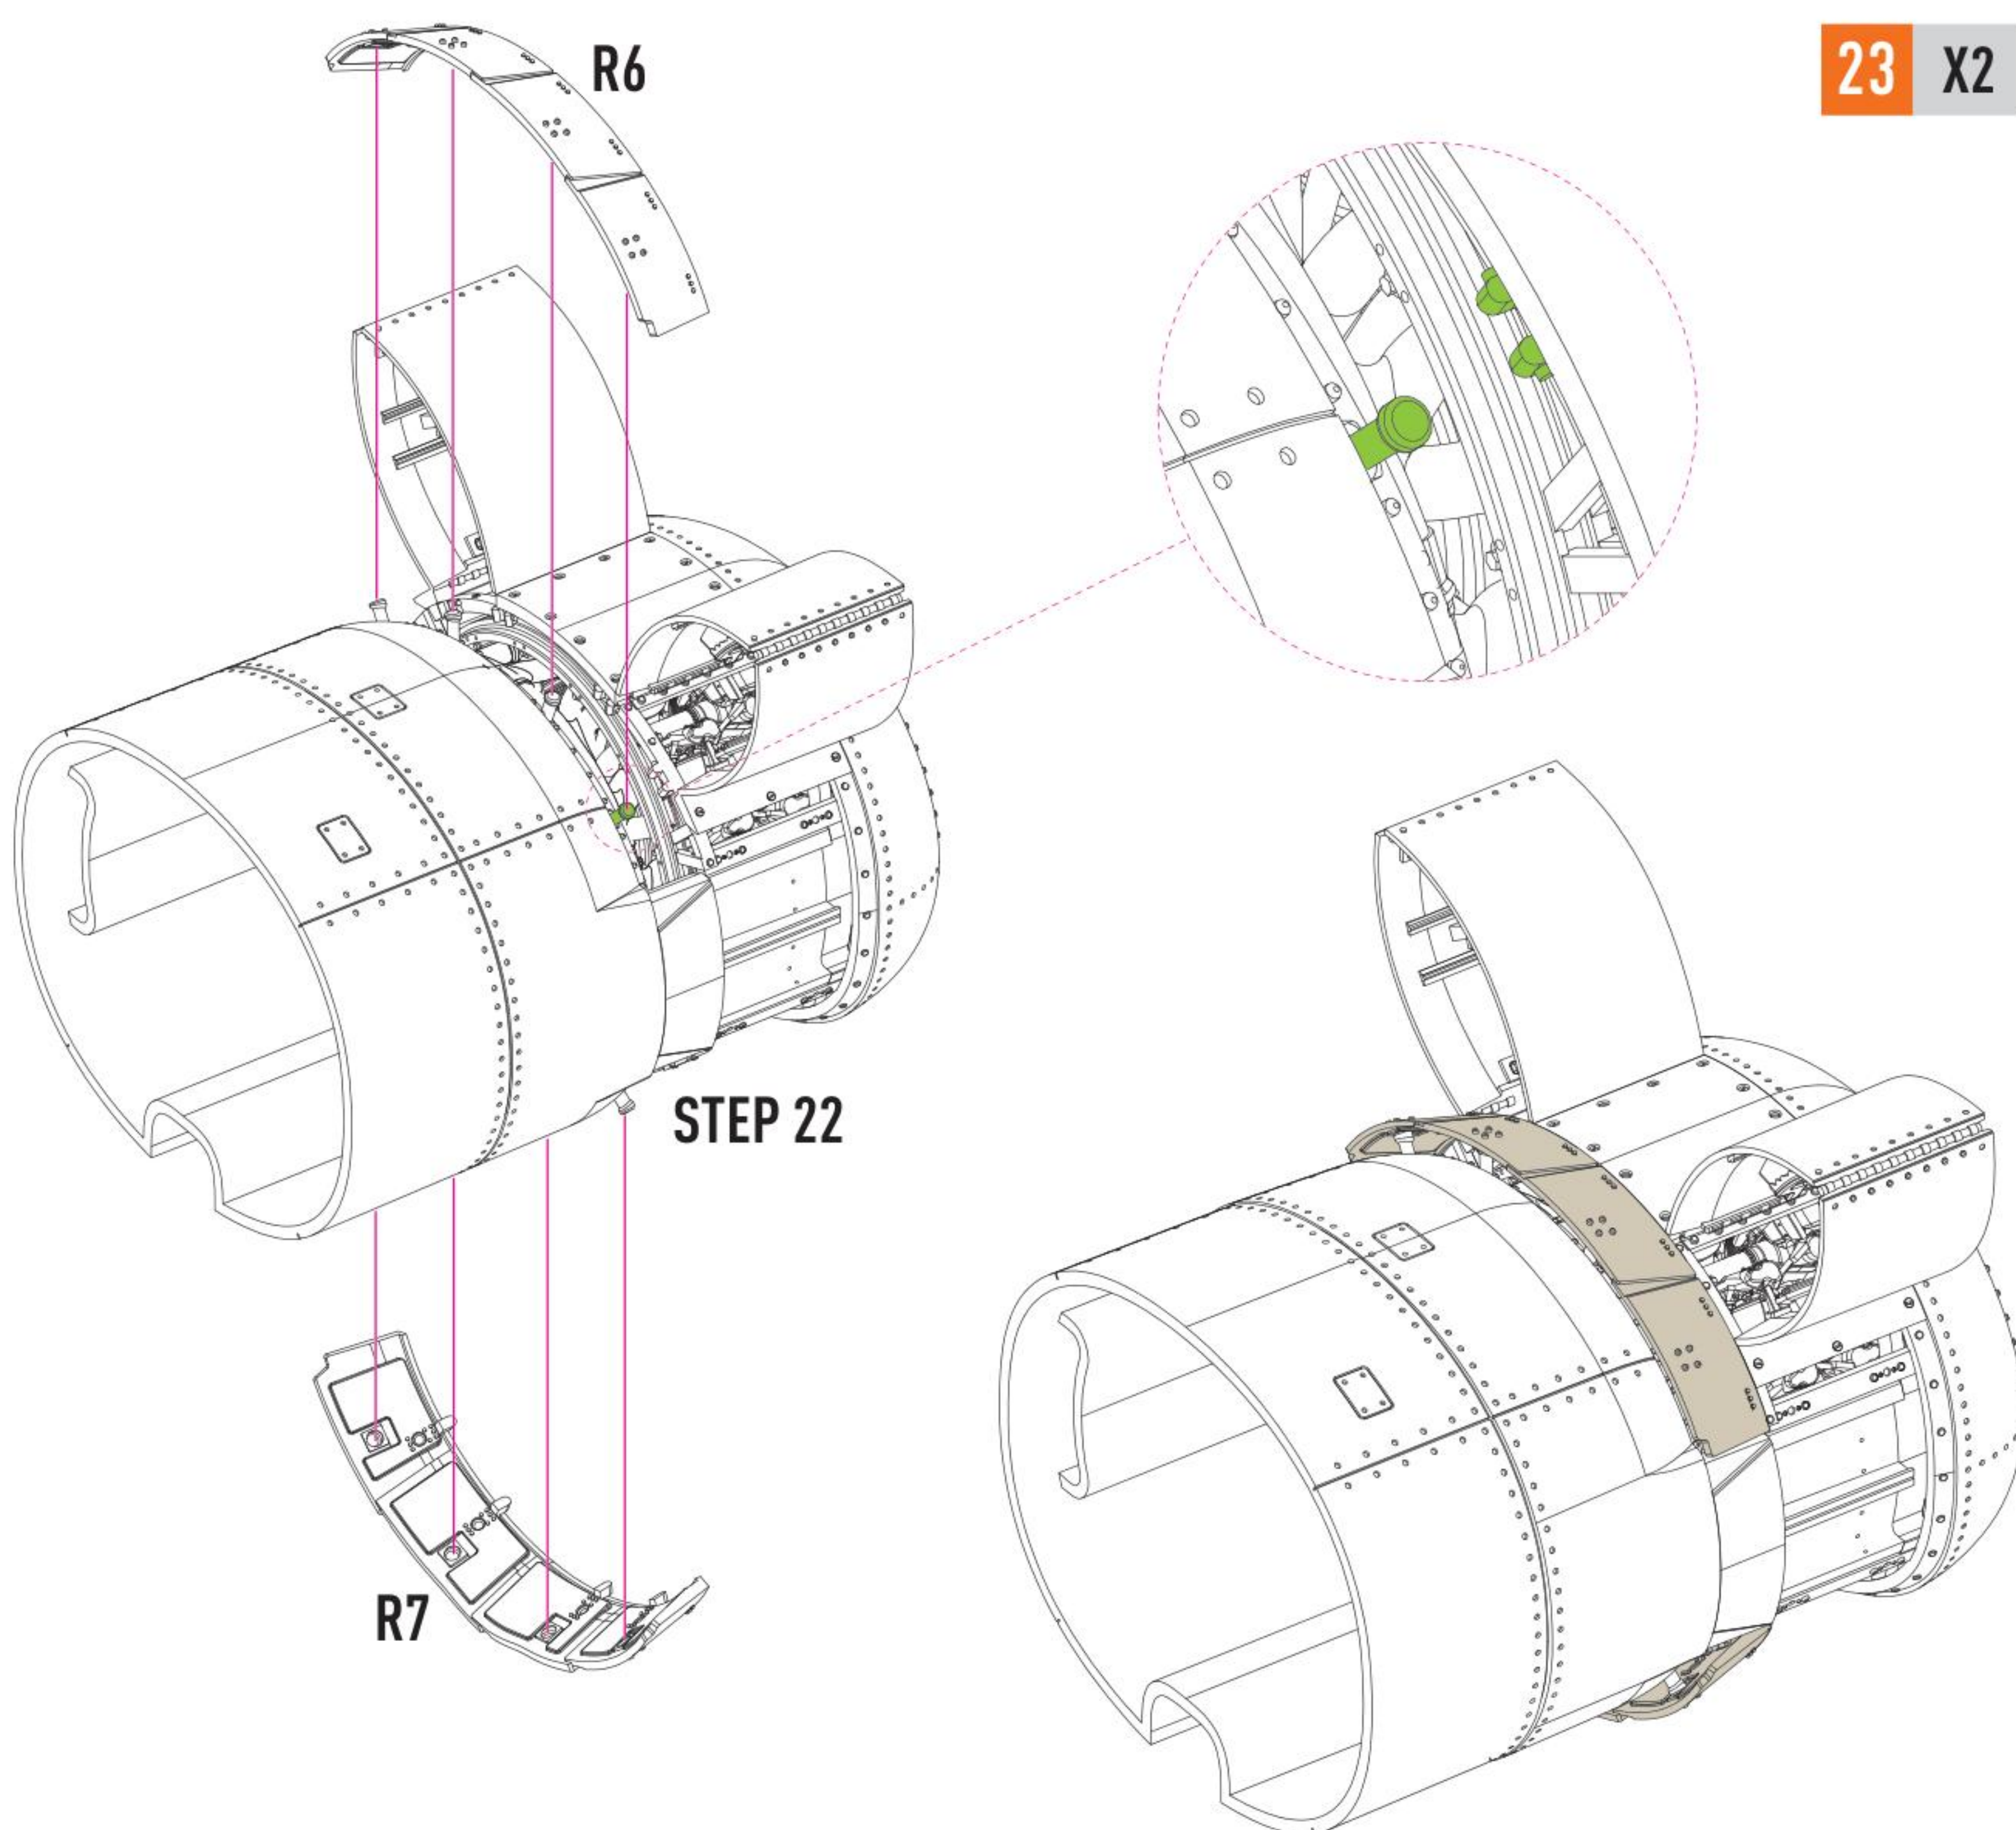


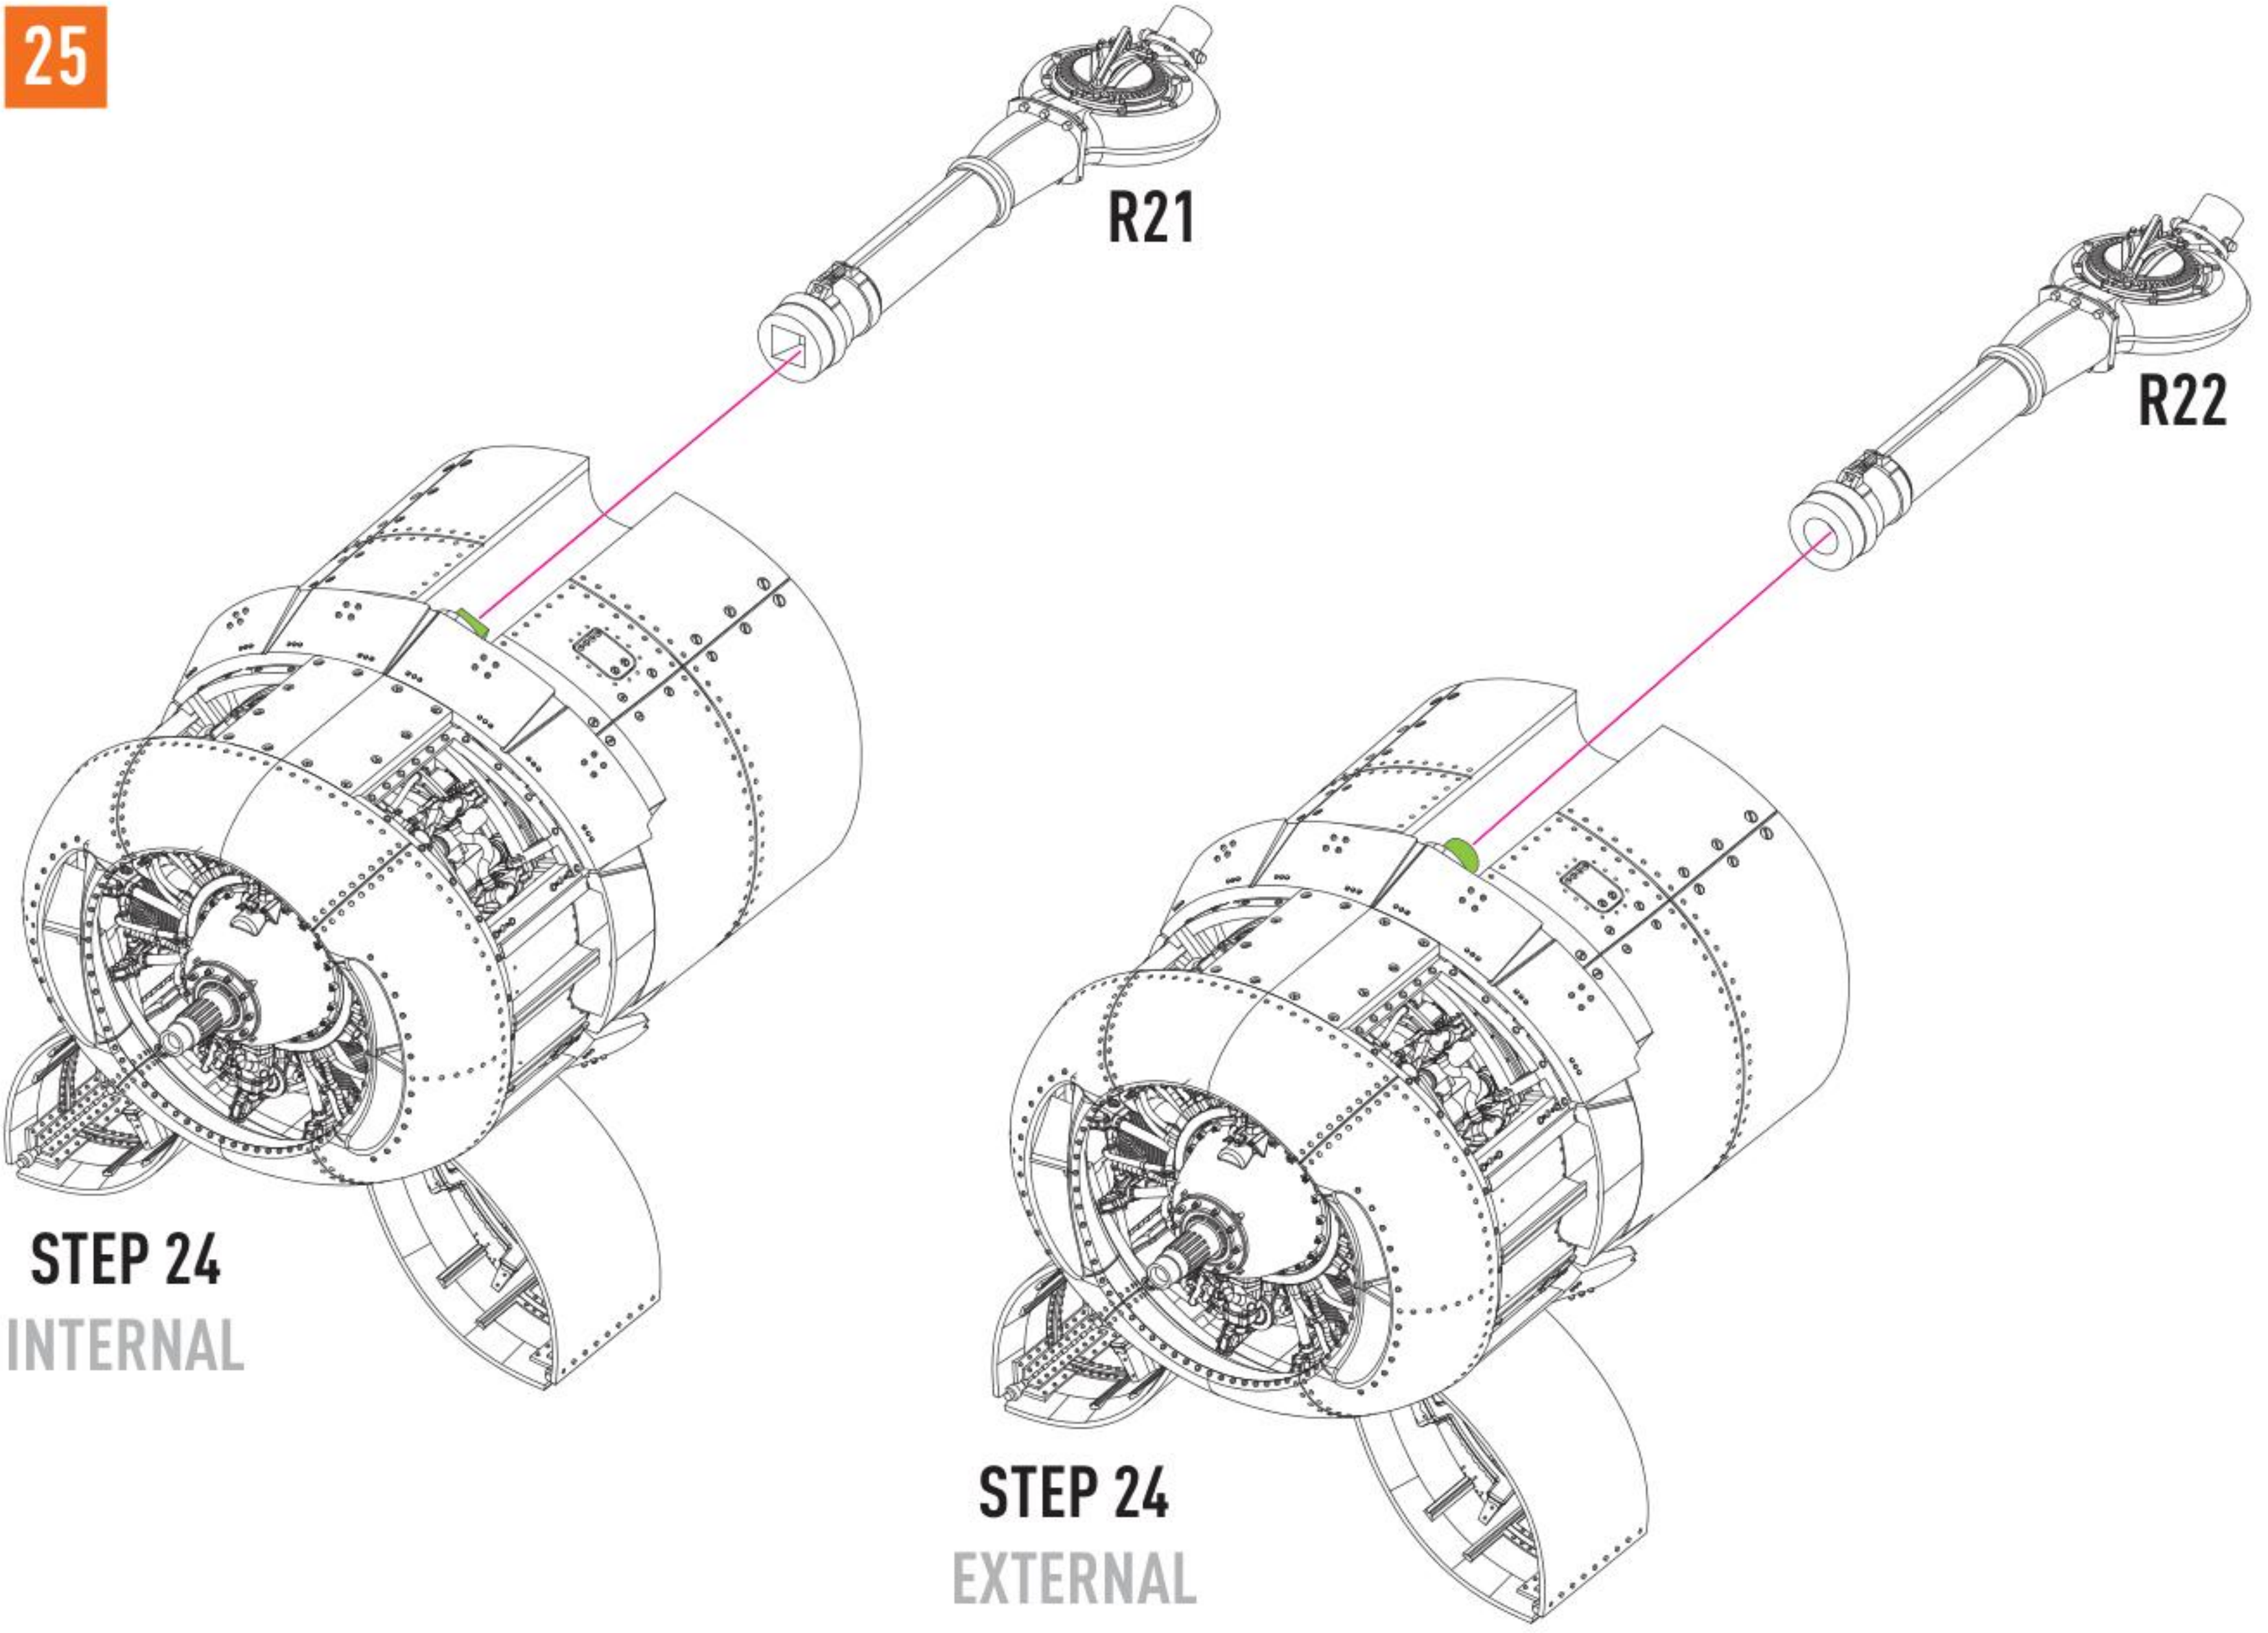


26 **LEFT SIDE** **REPEAT FOR THE RIGHT SIDE**

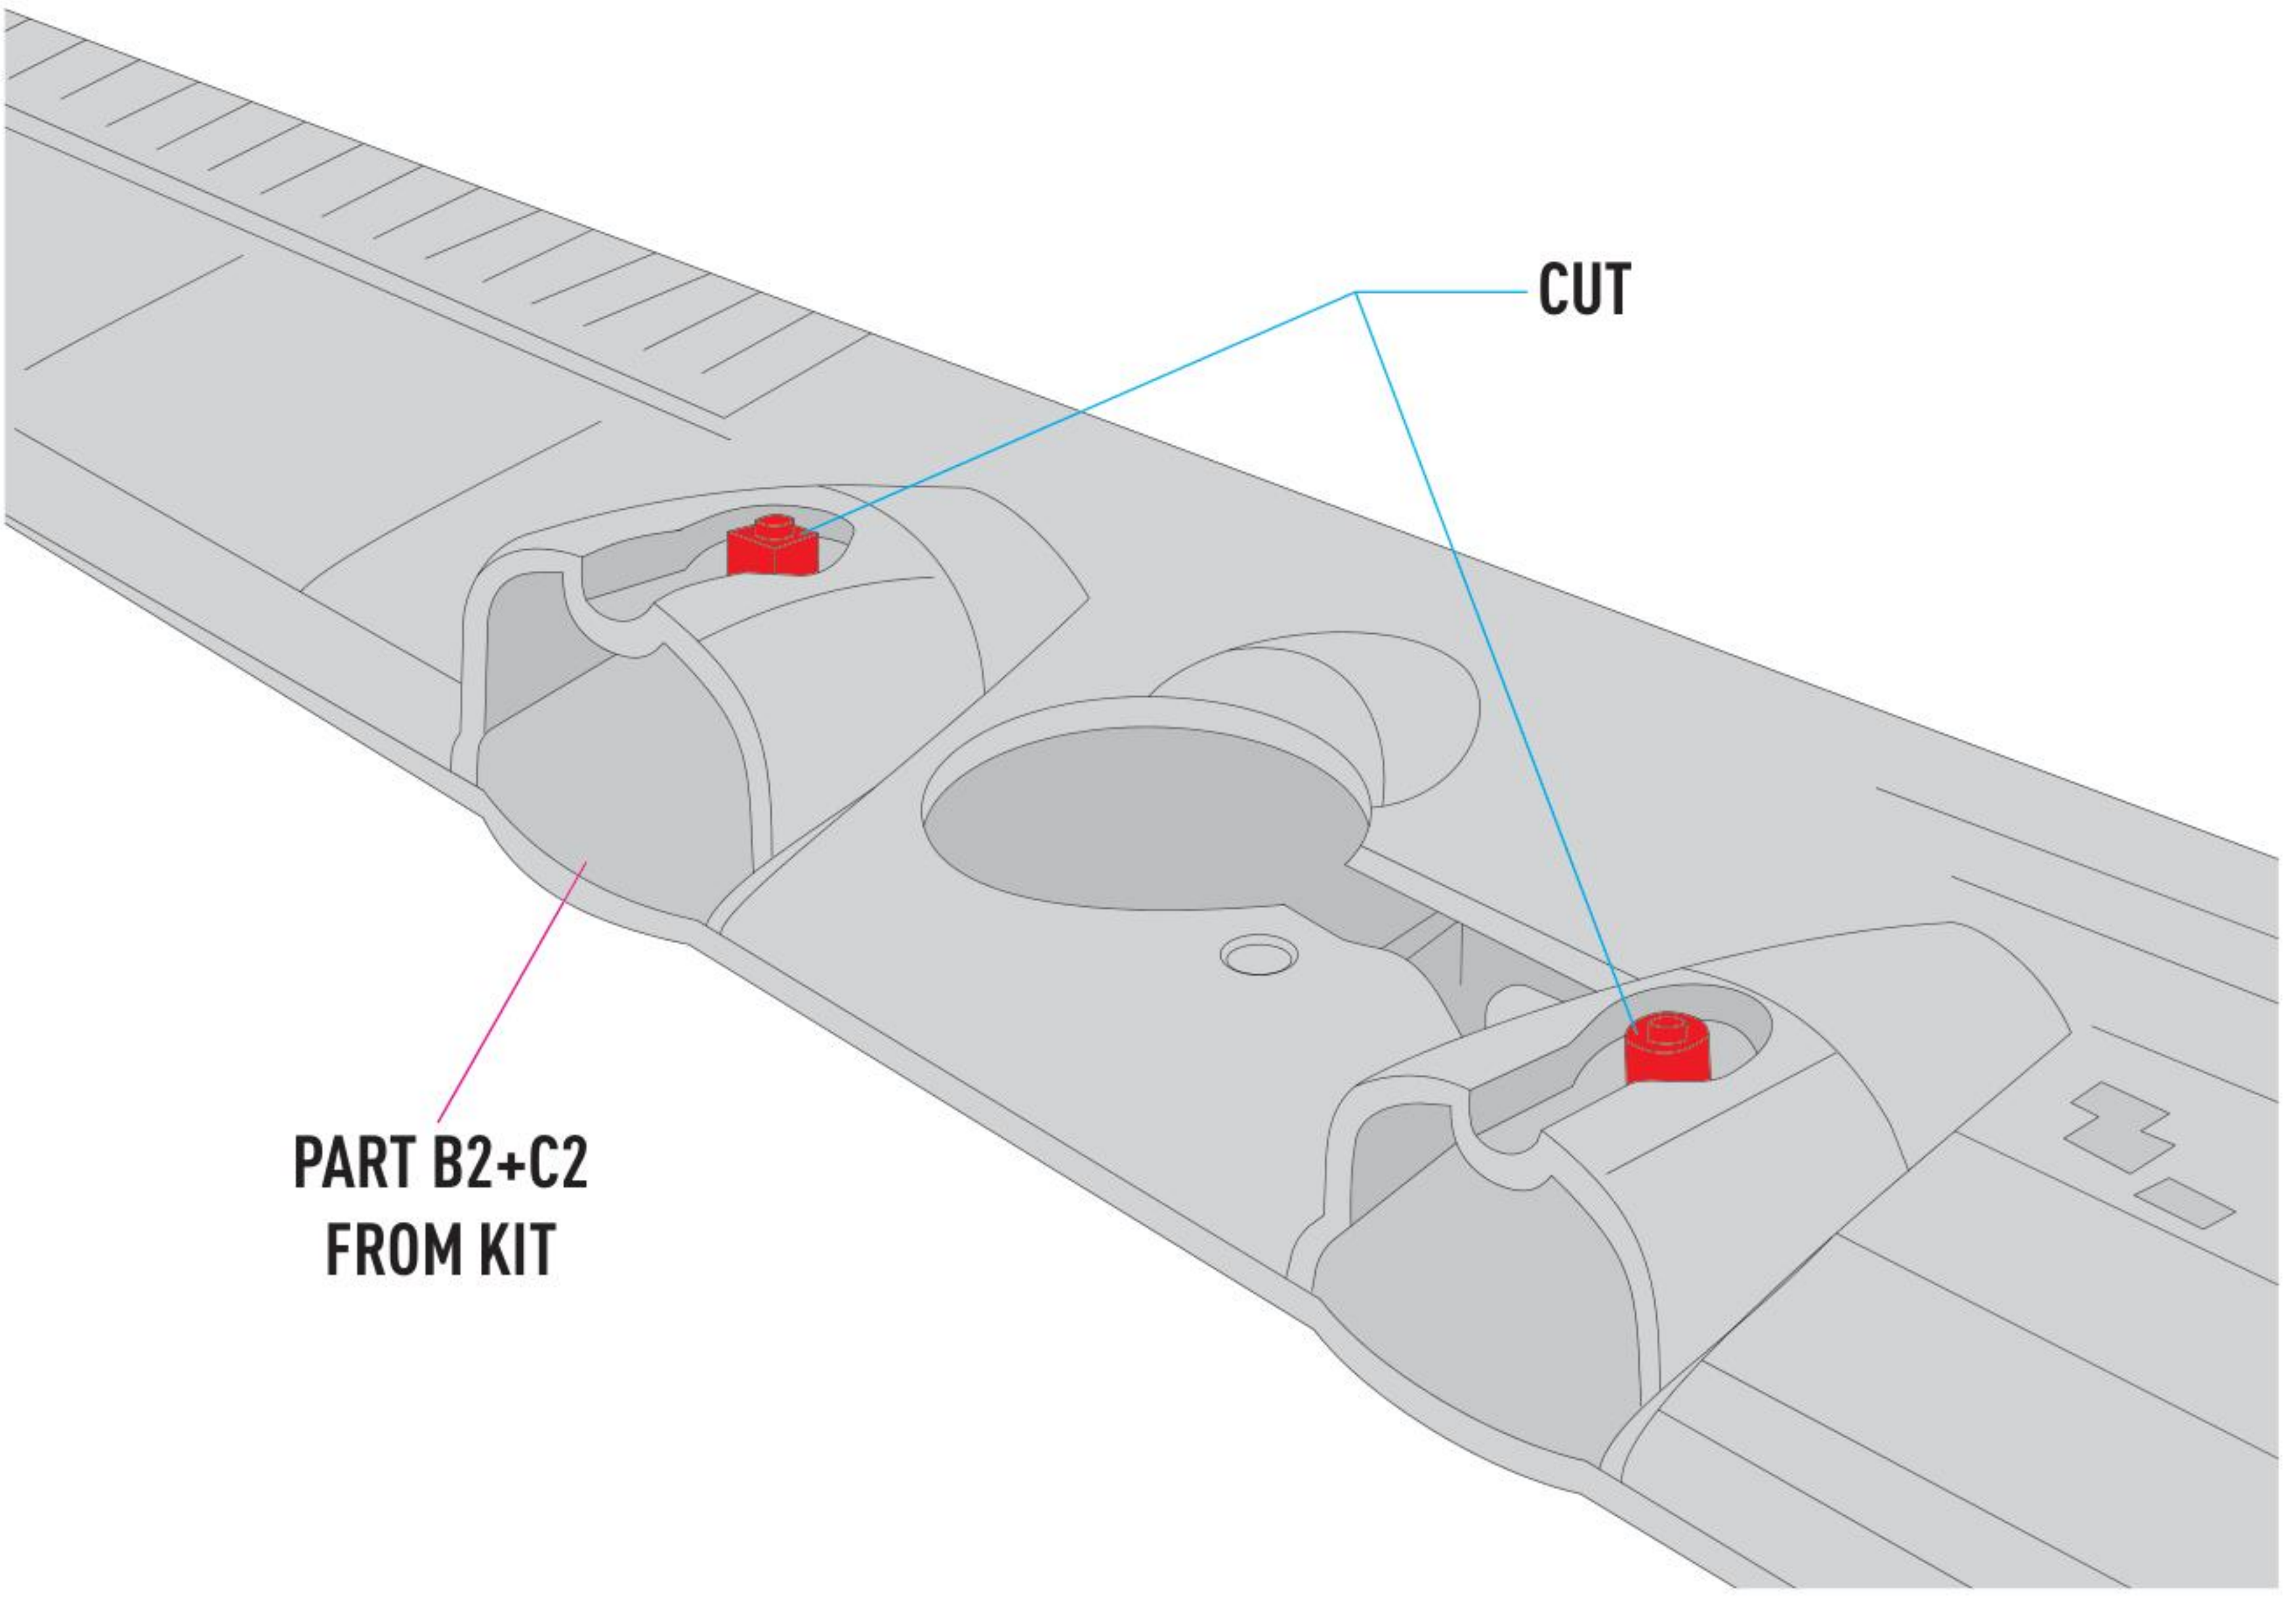

27 LEFT SIDE REPEAT FOR THE RIGHT SIDE

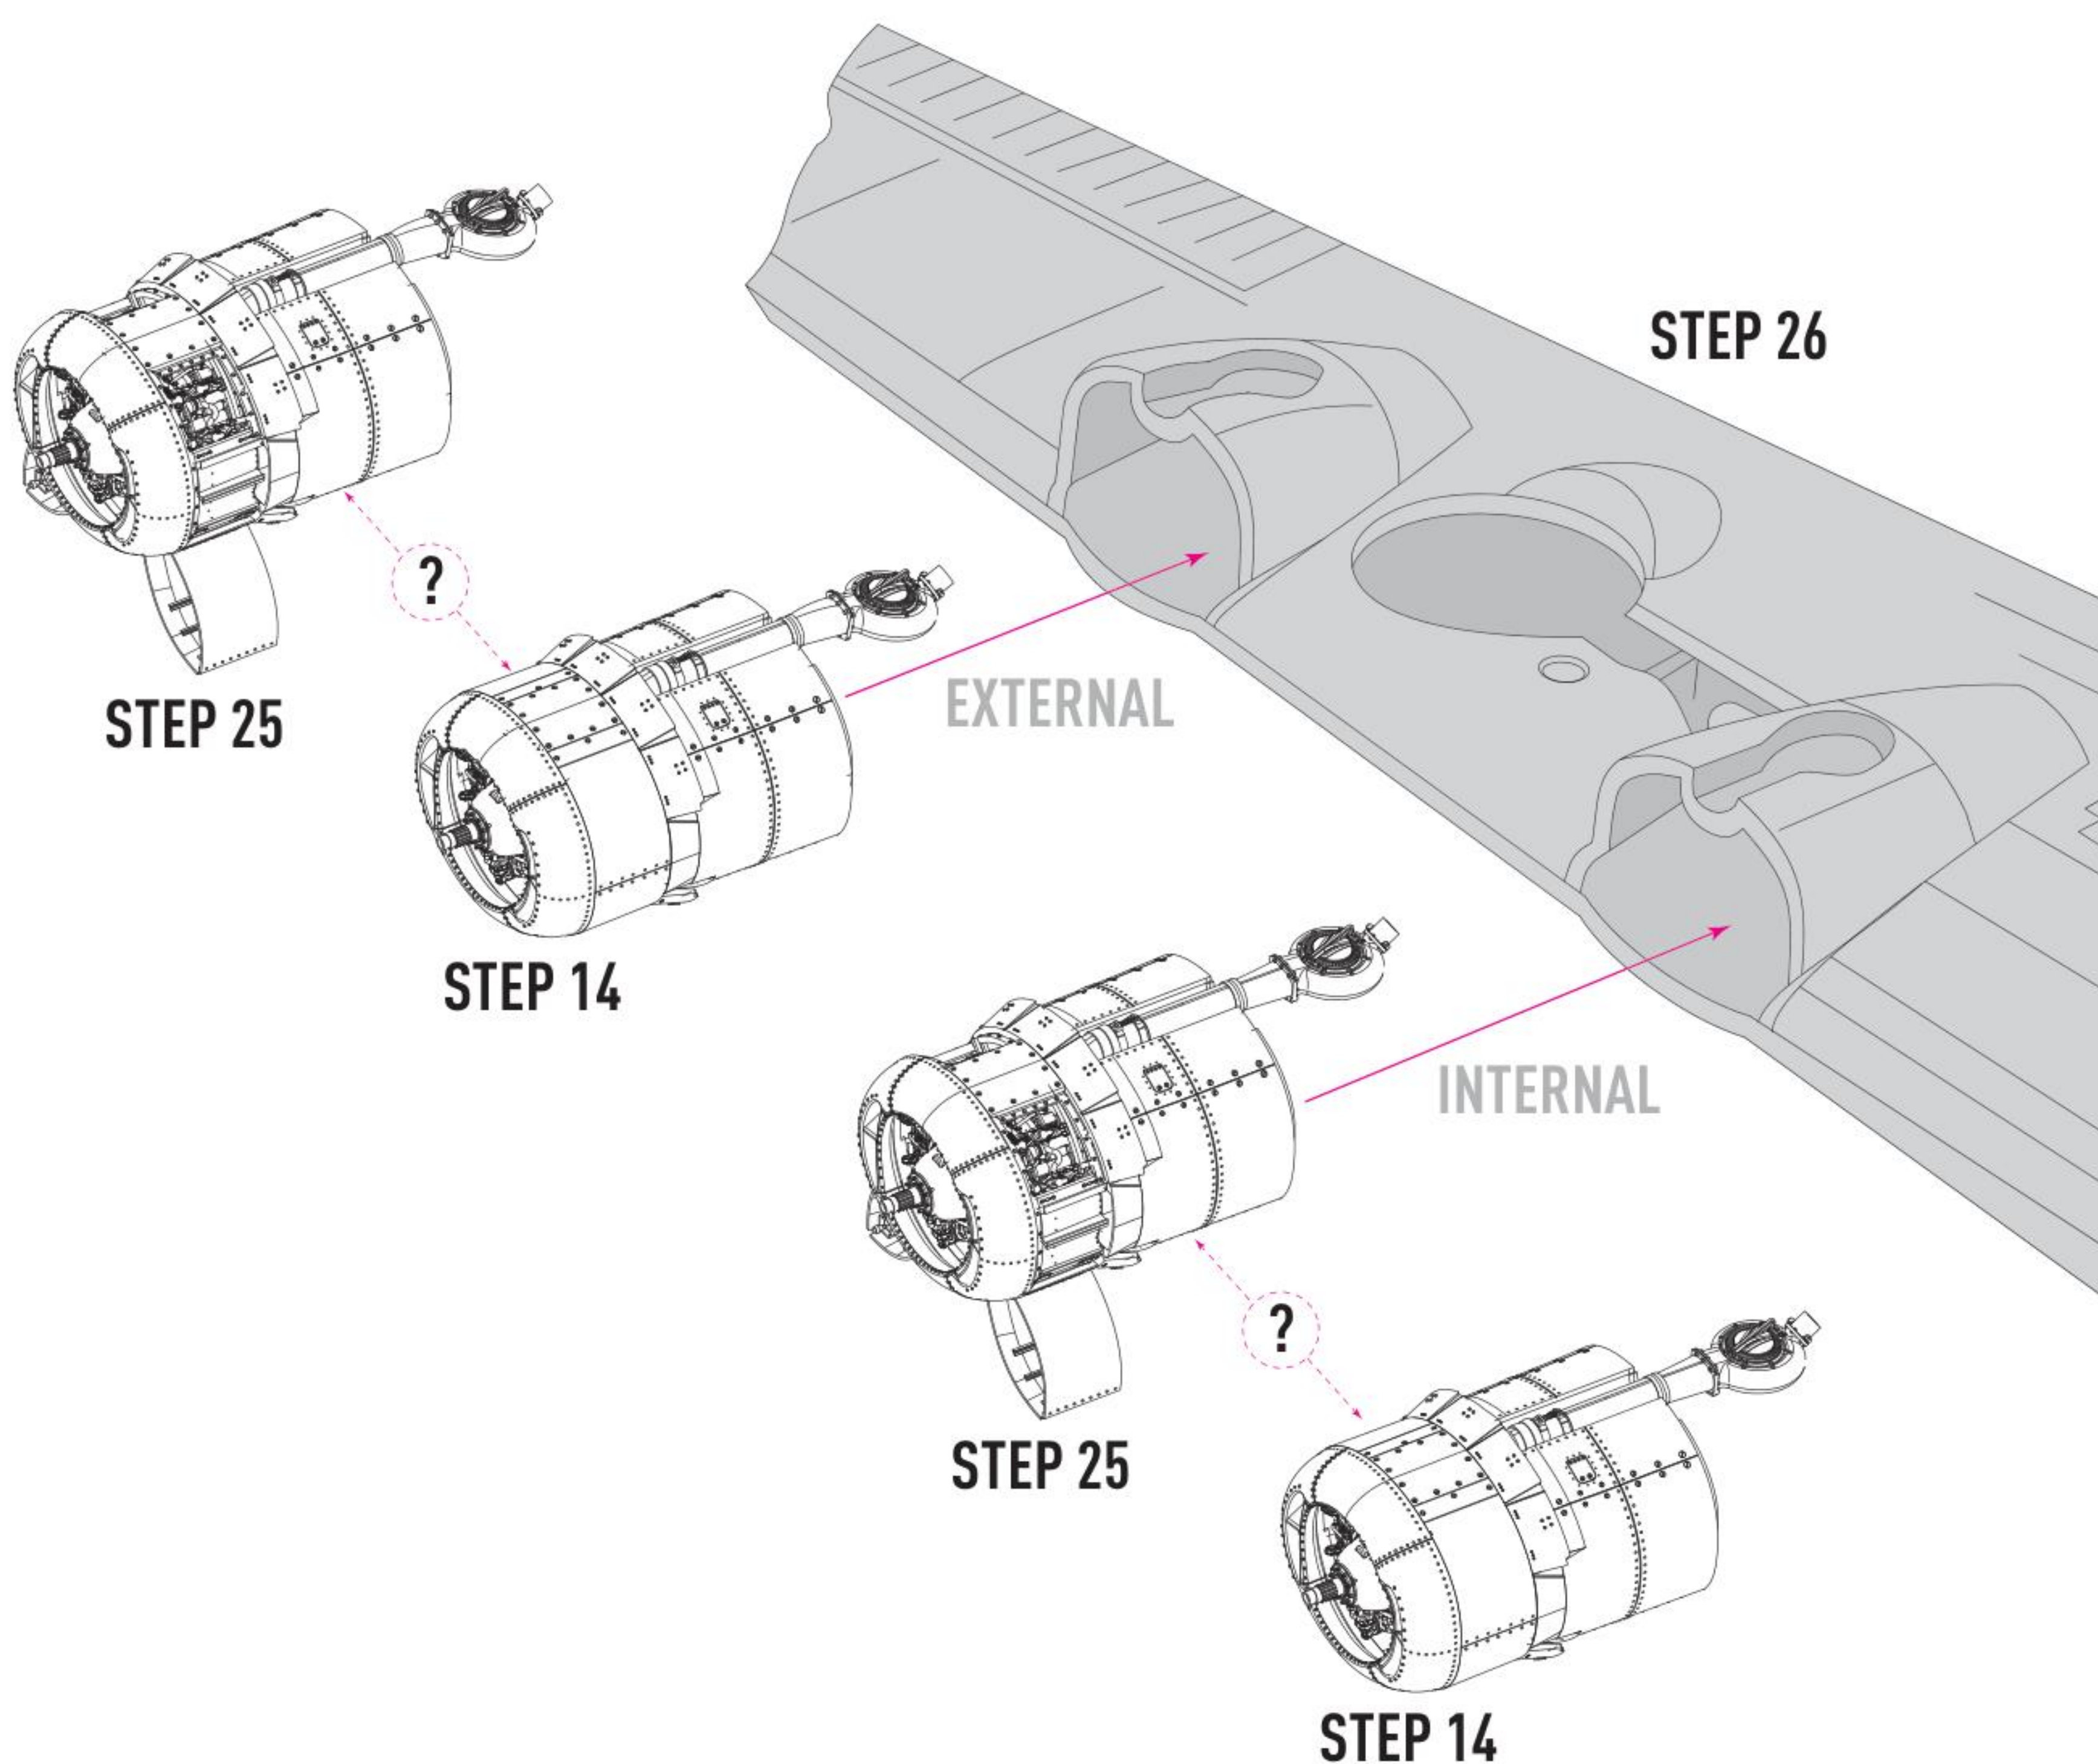

28 LEFT SIDE REPEAT FOR THE RIGHT SIDE

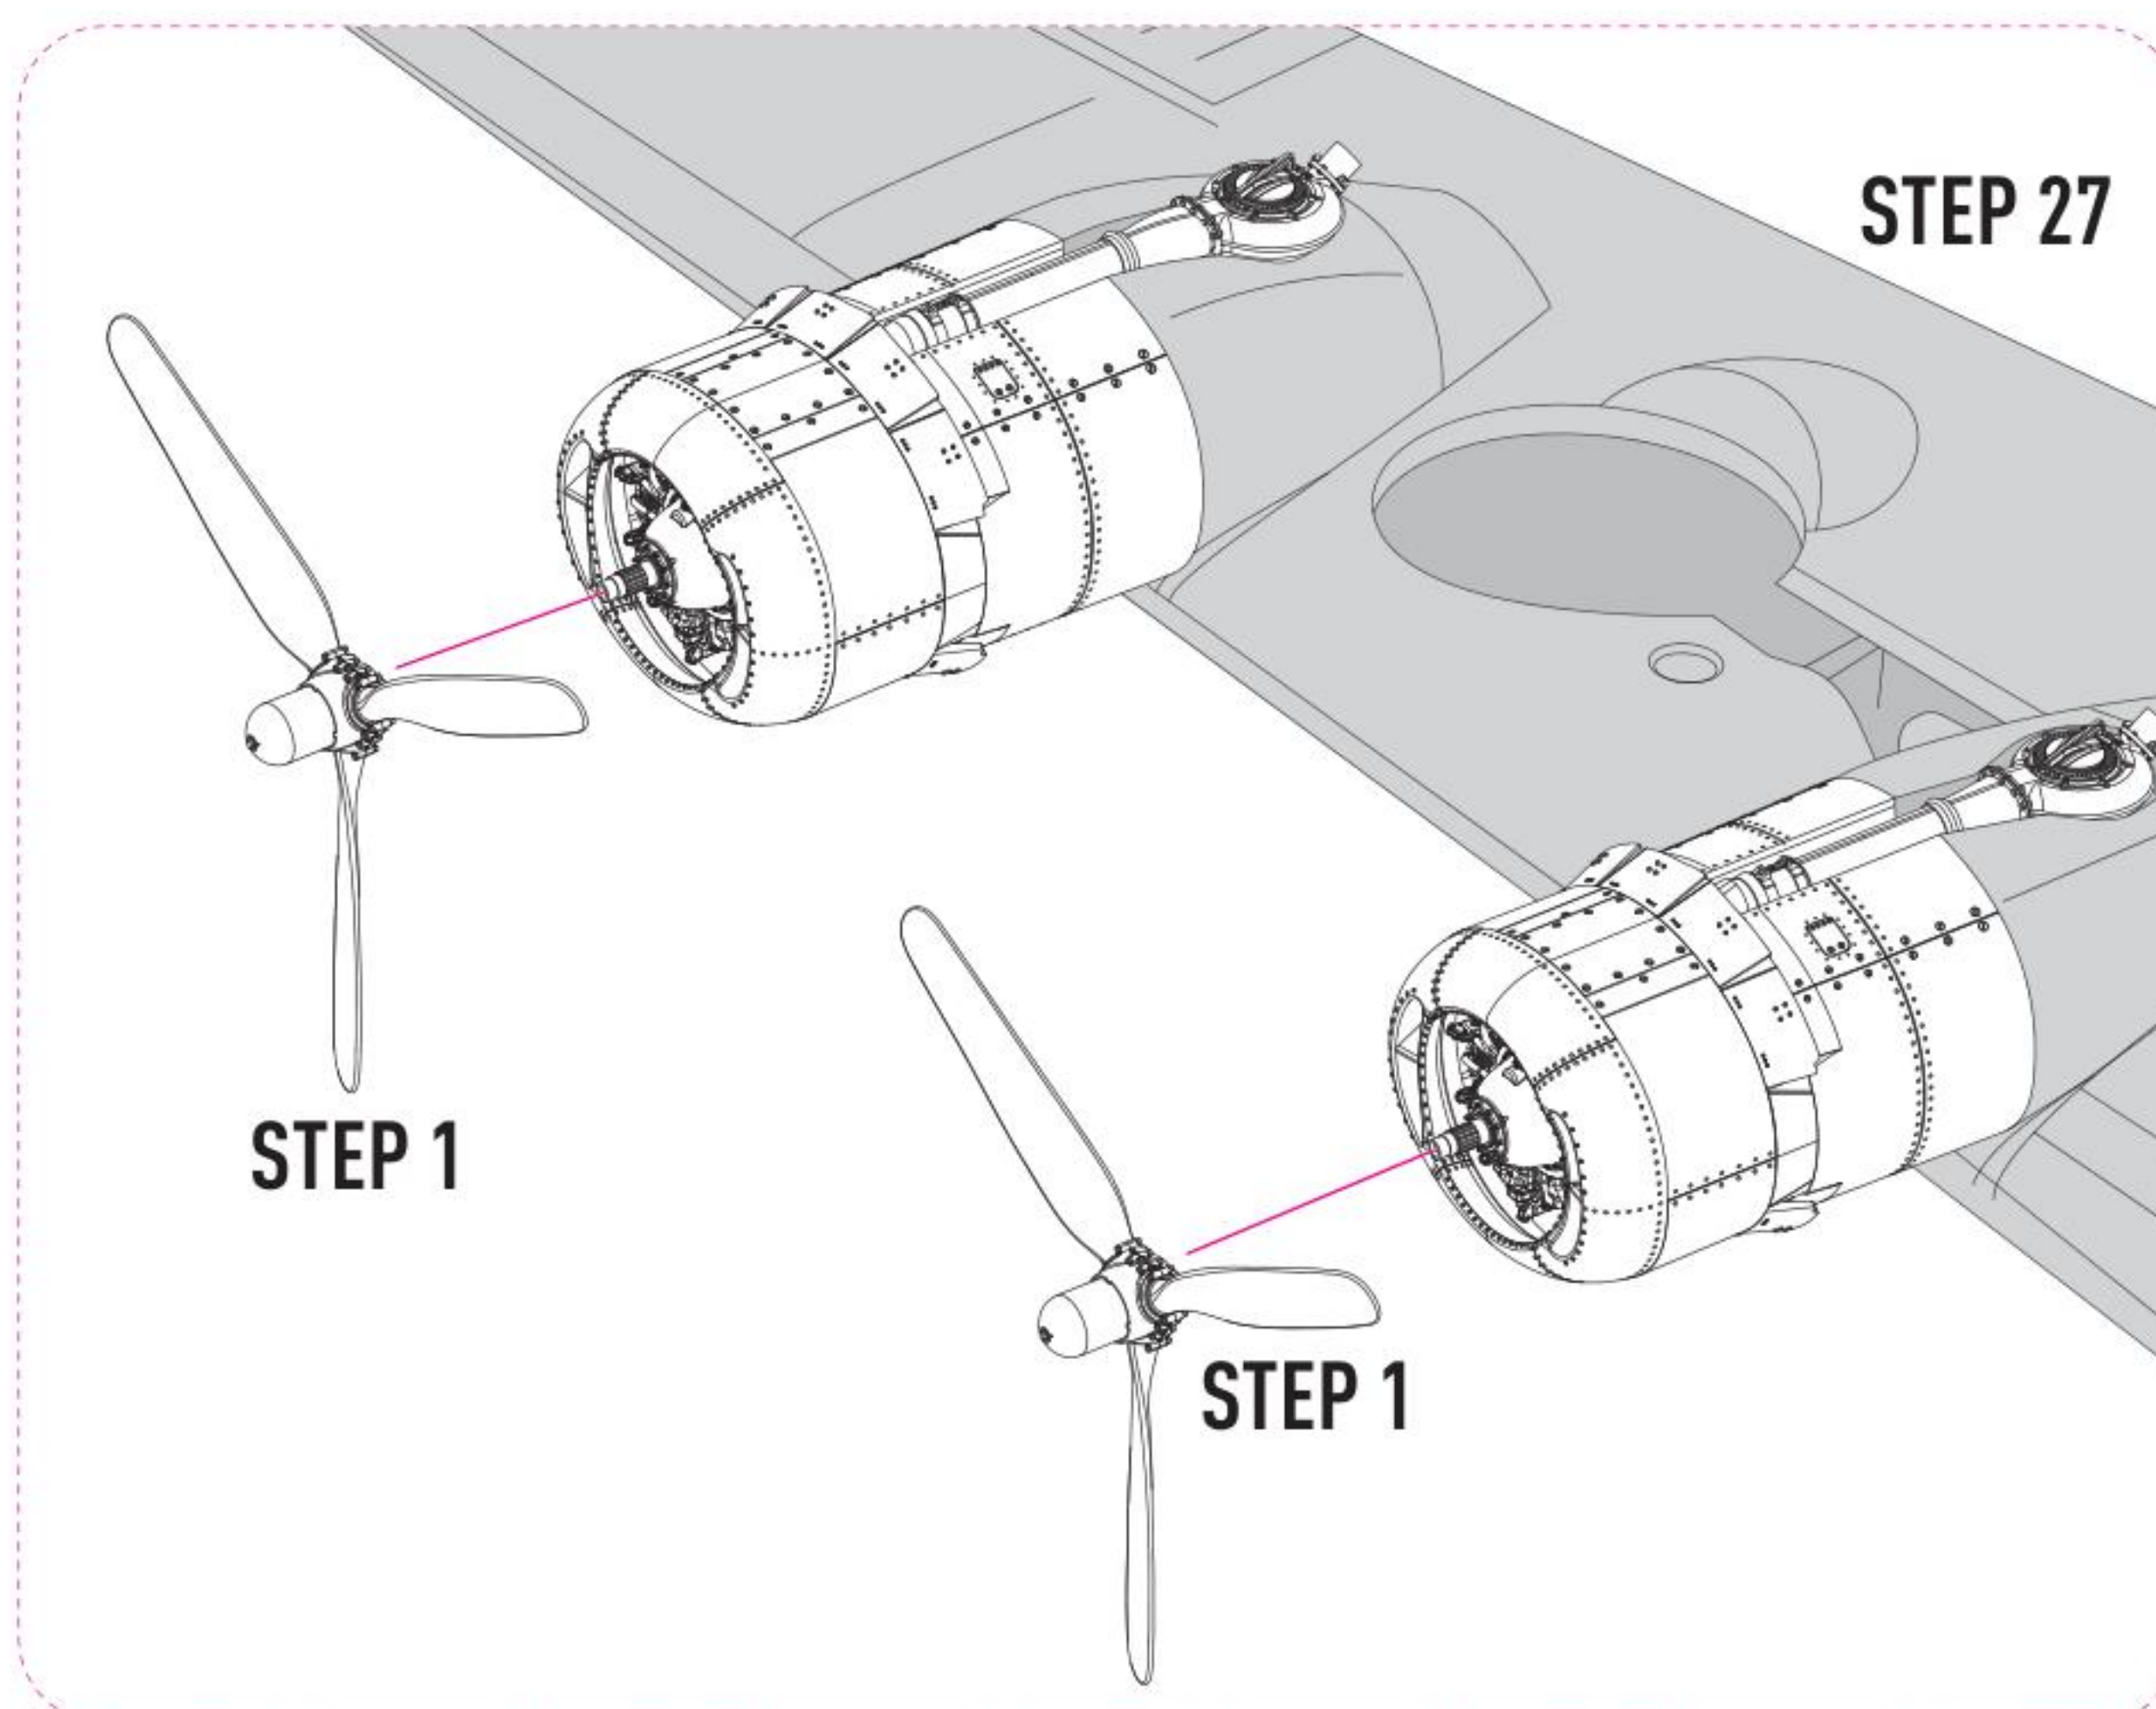

DECAL INSTRUCTION

