




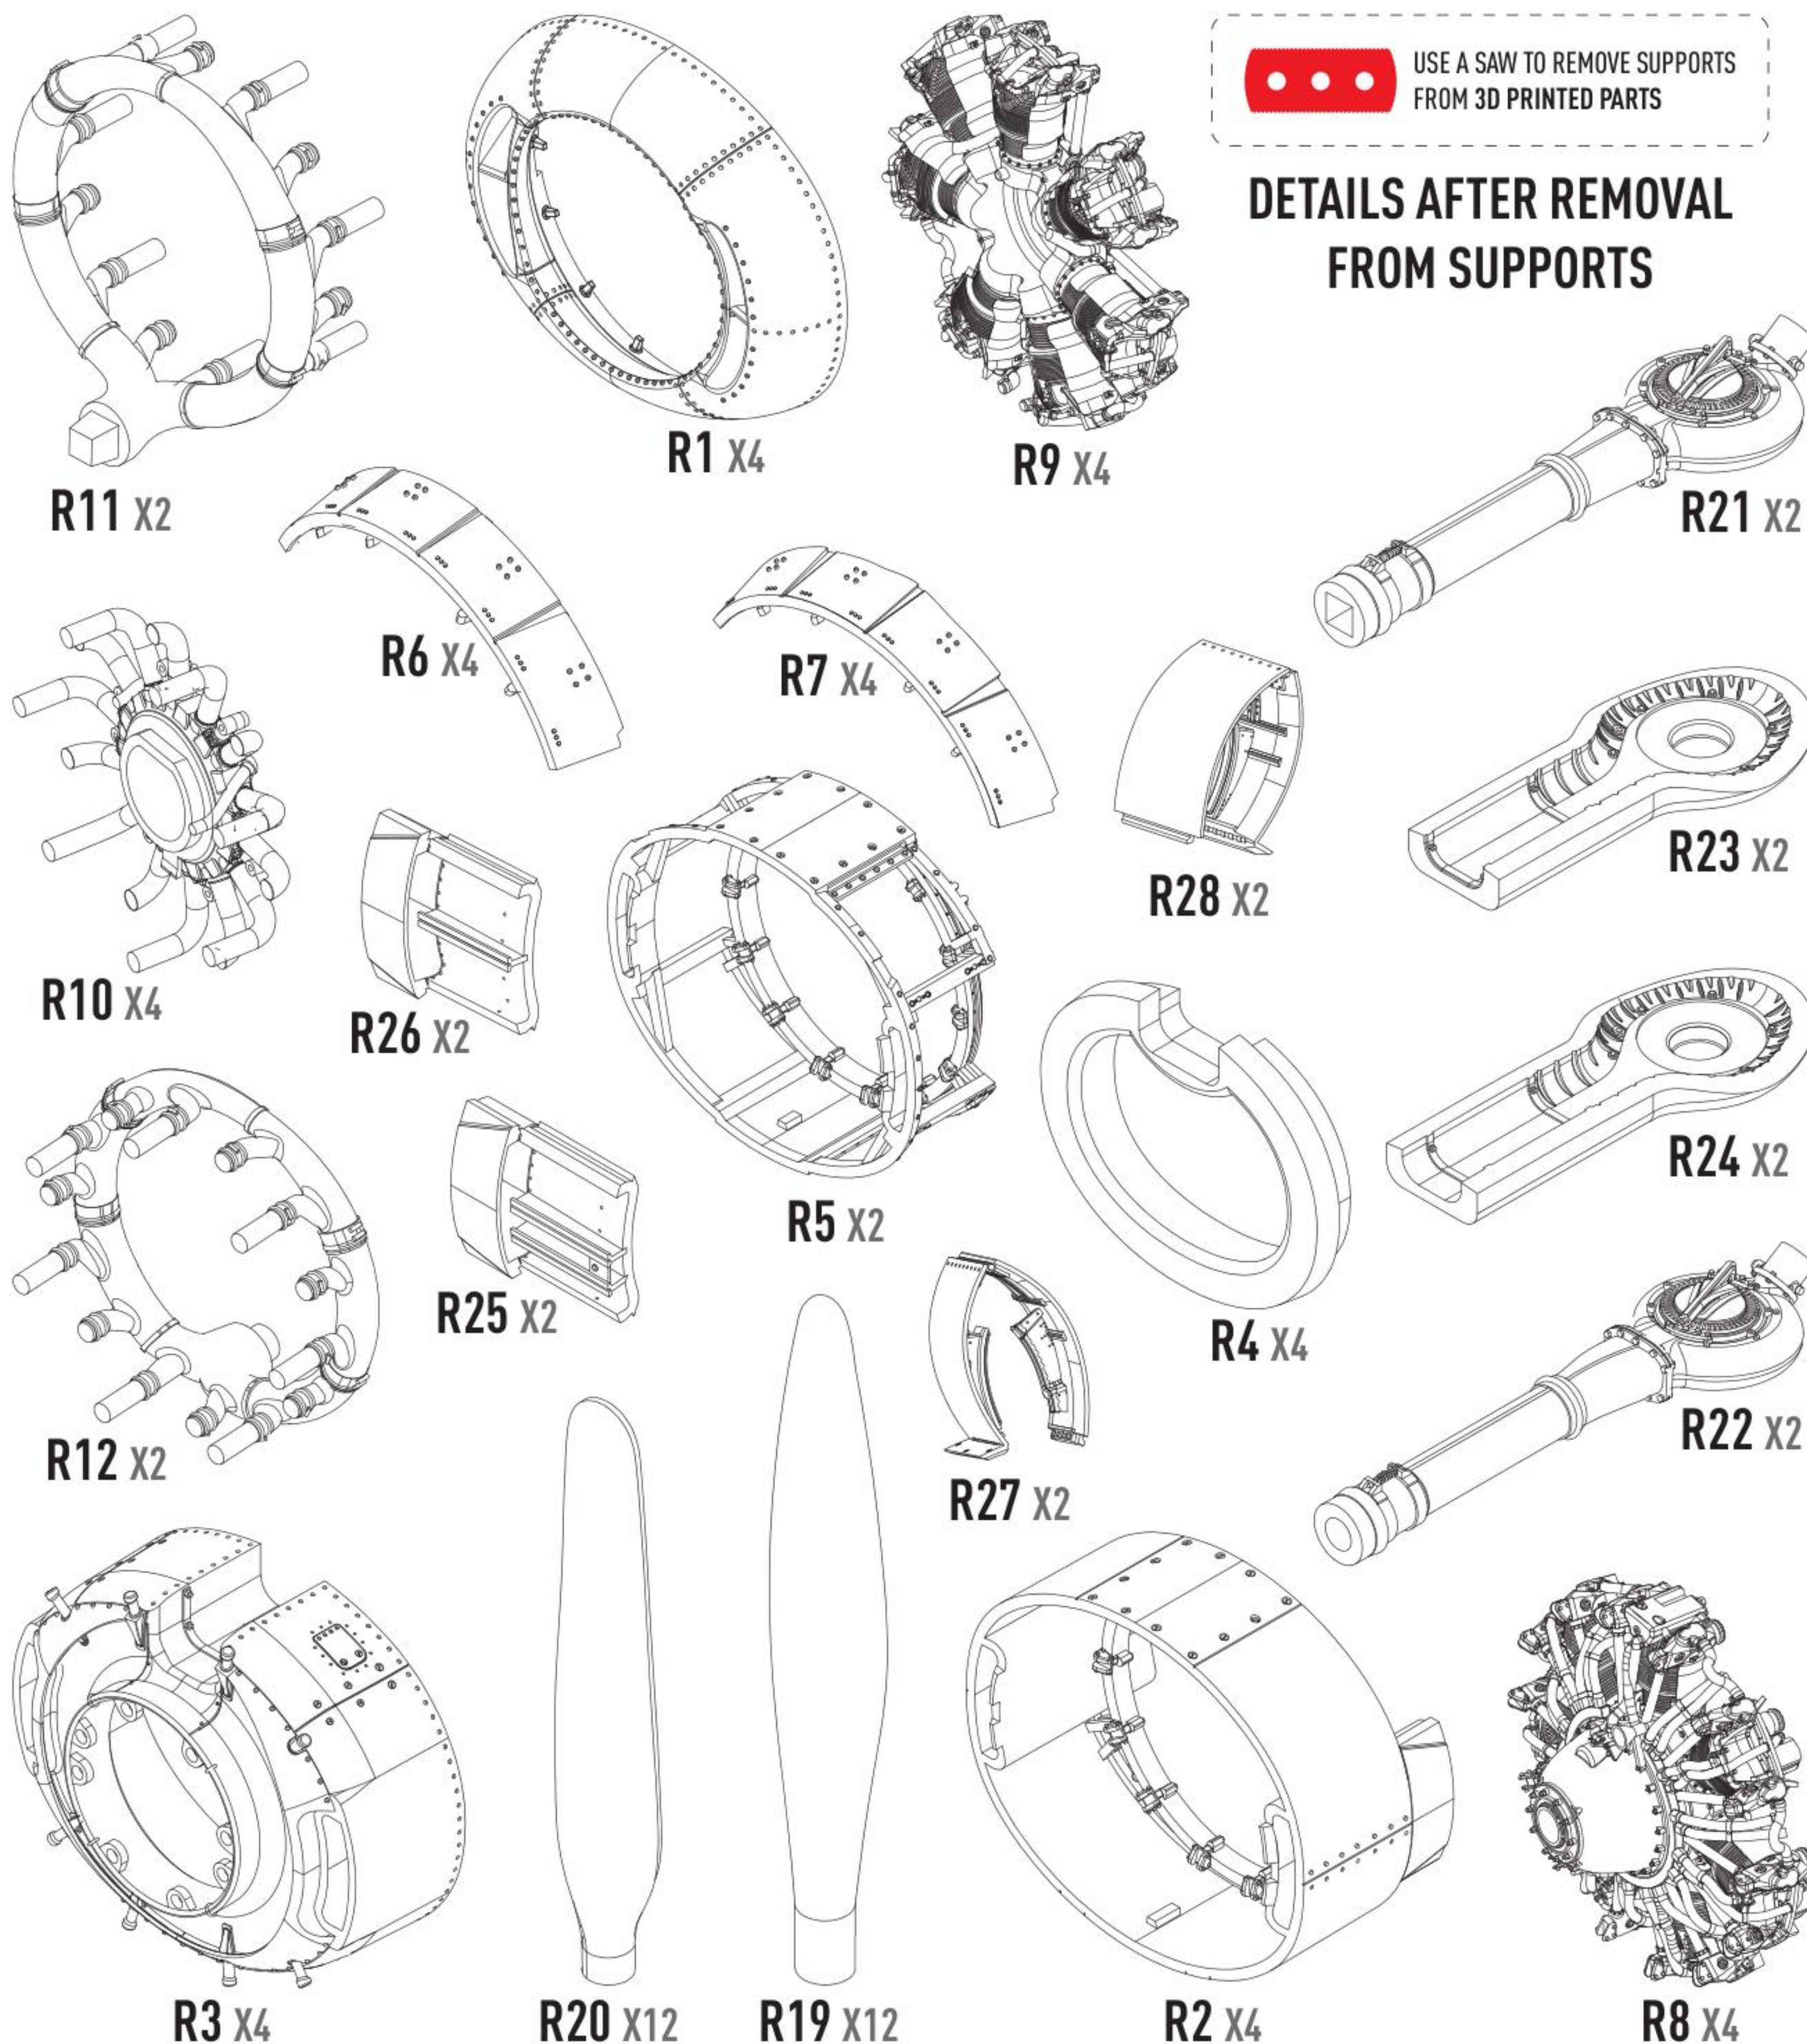


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**

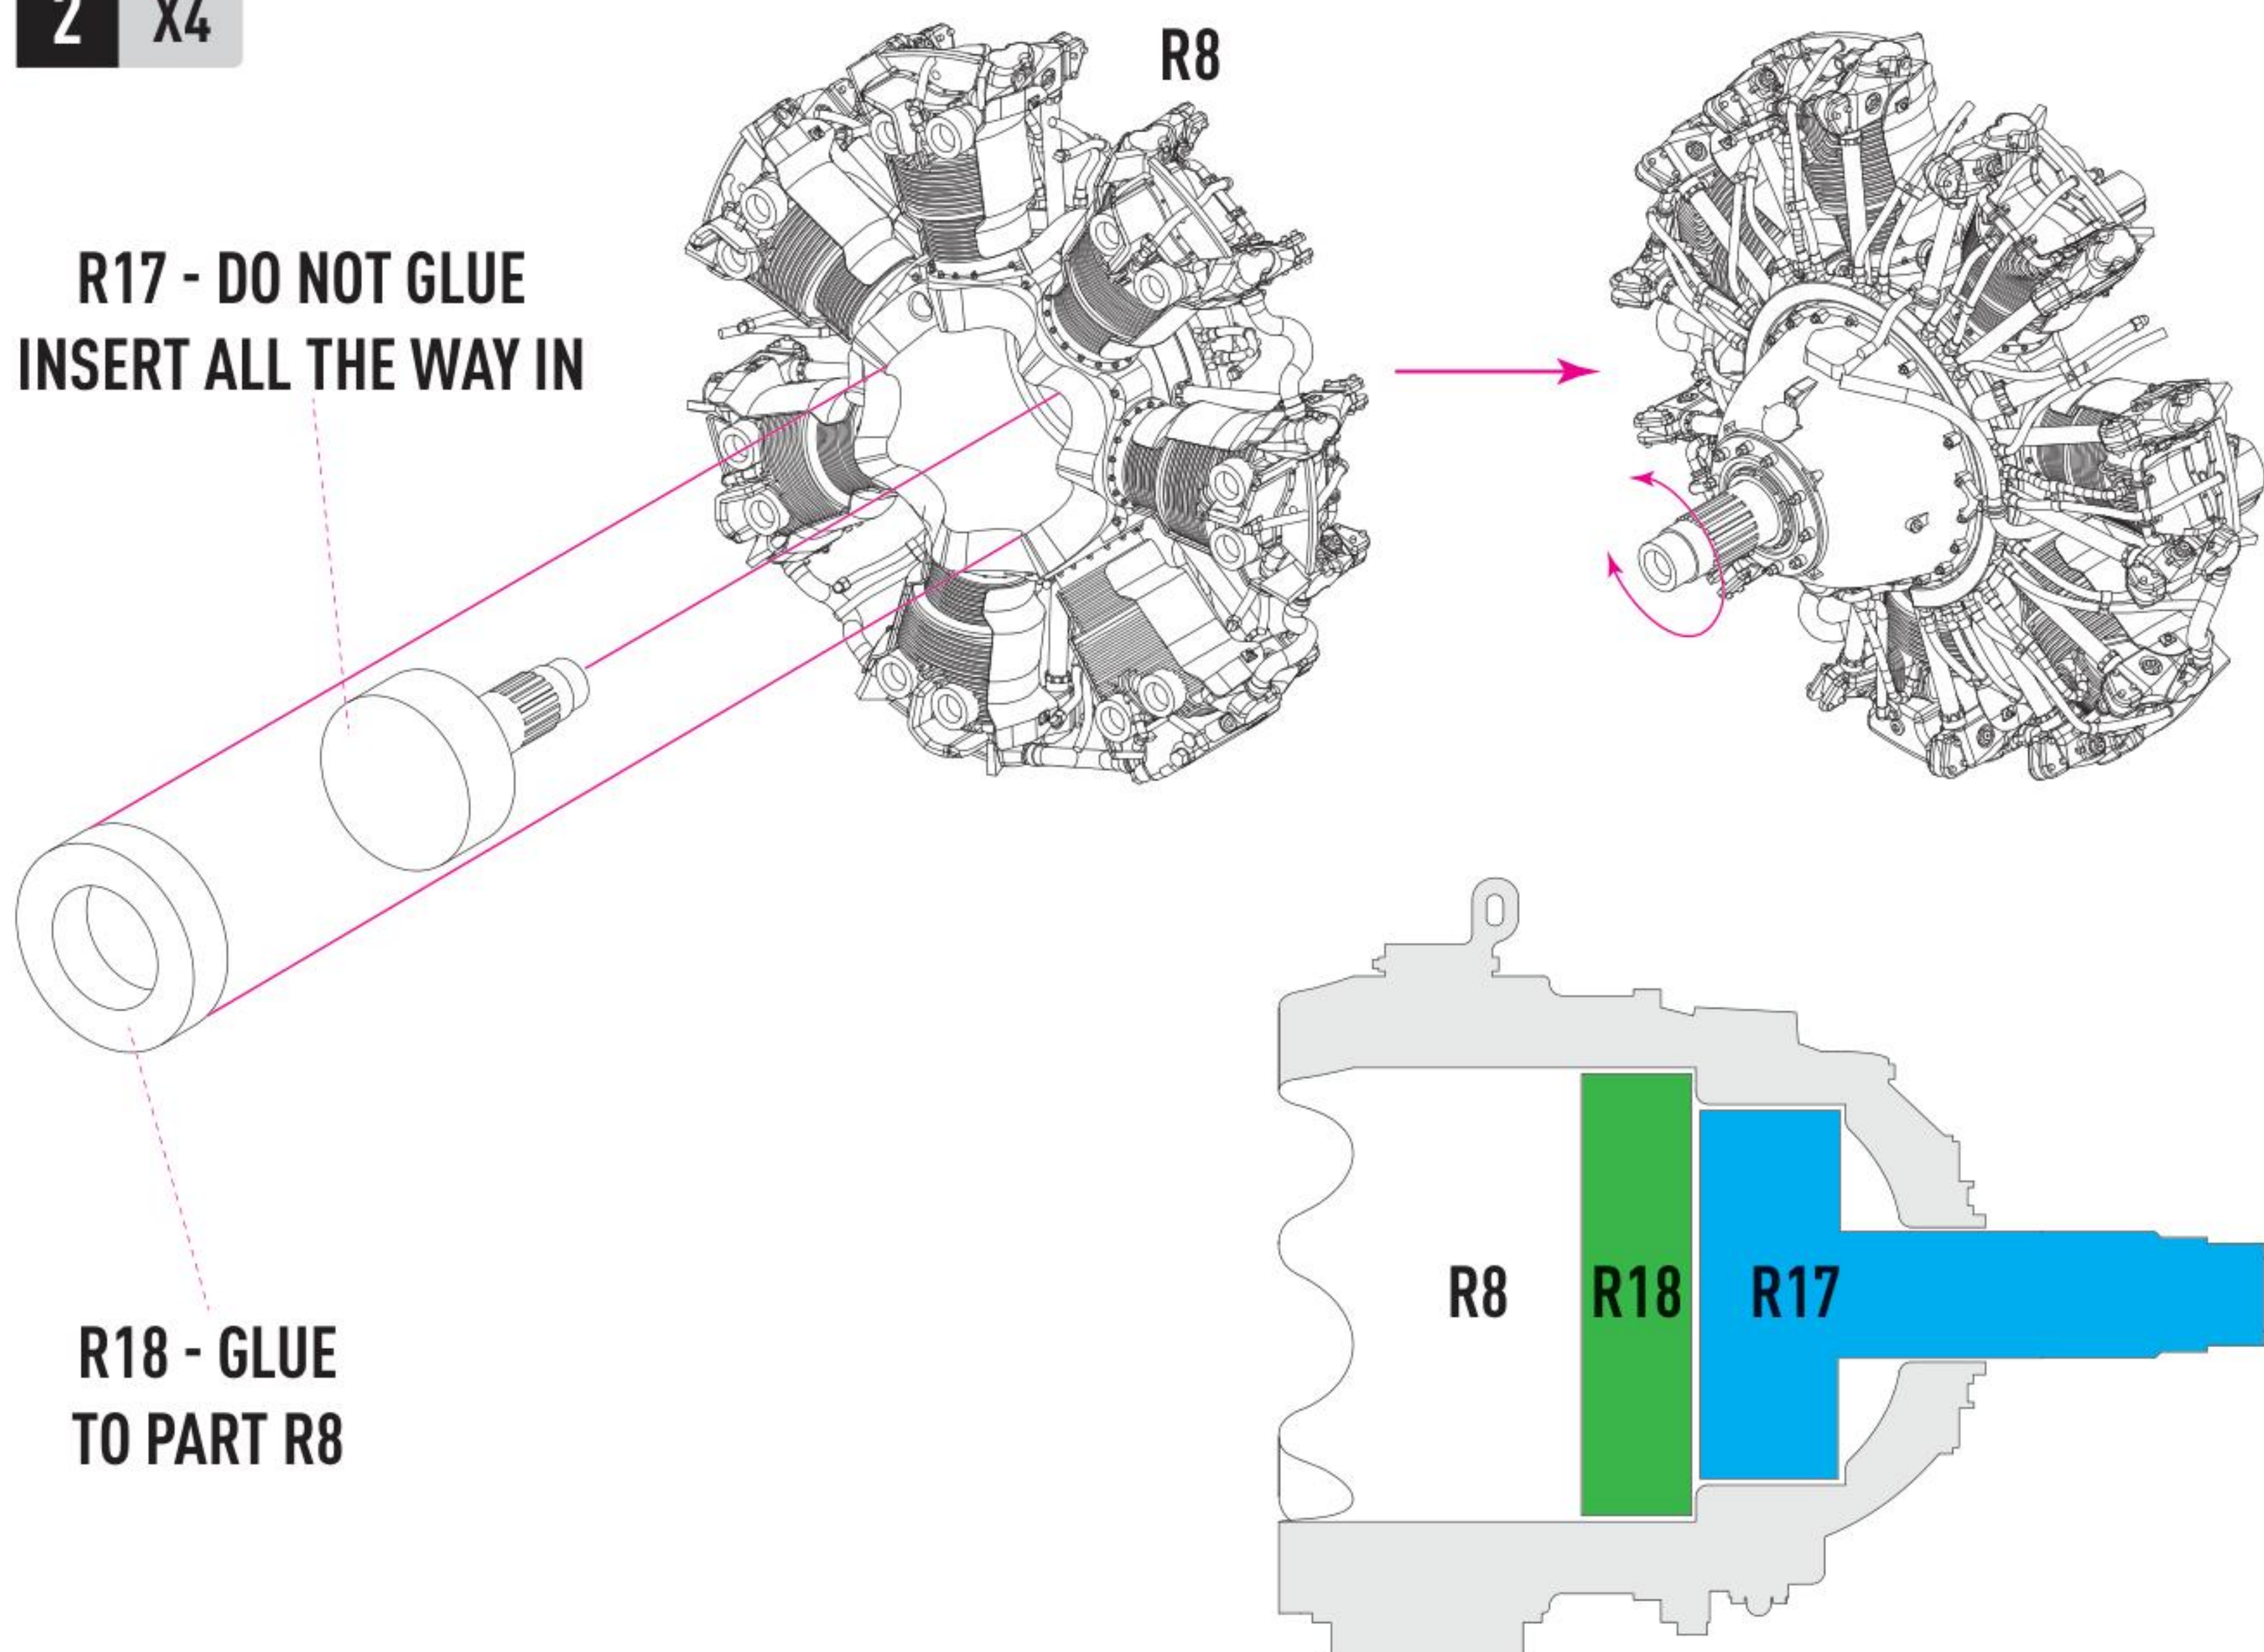

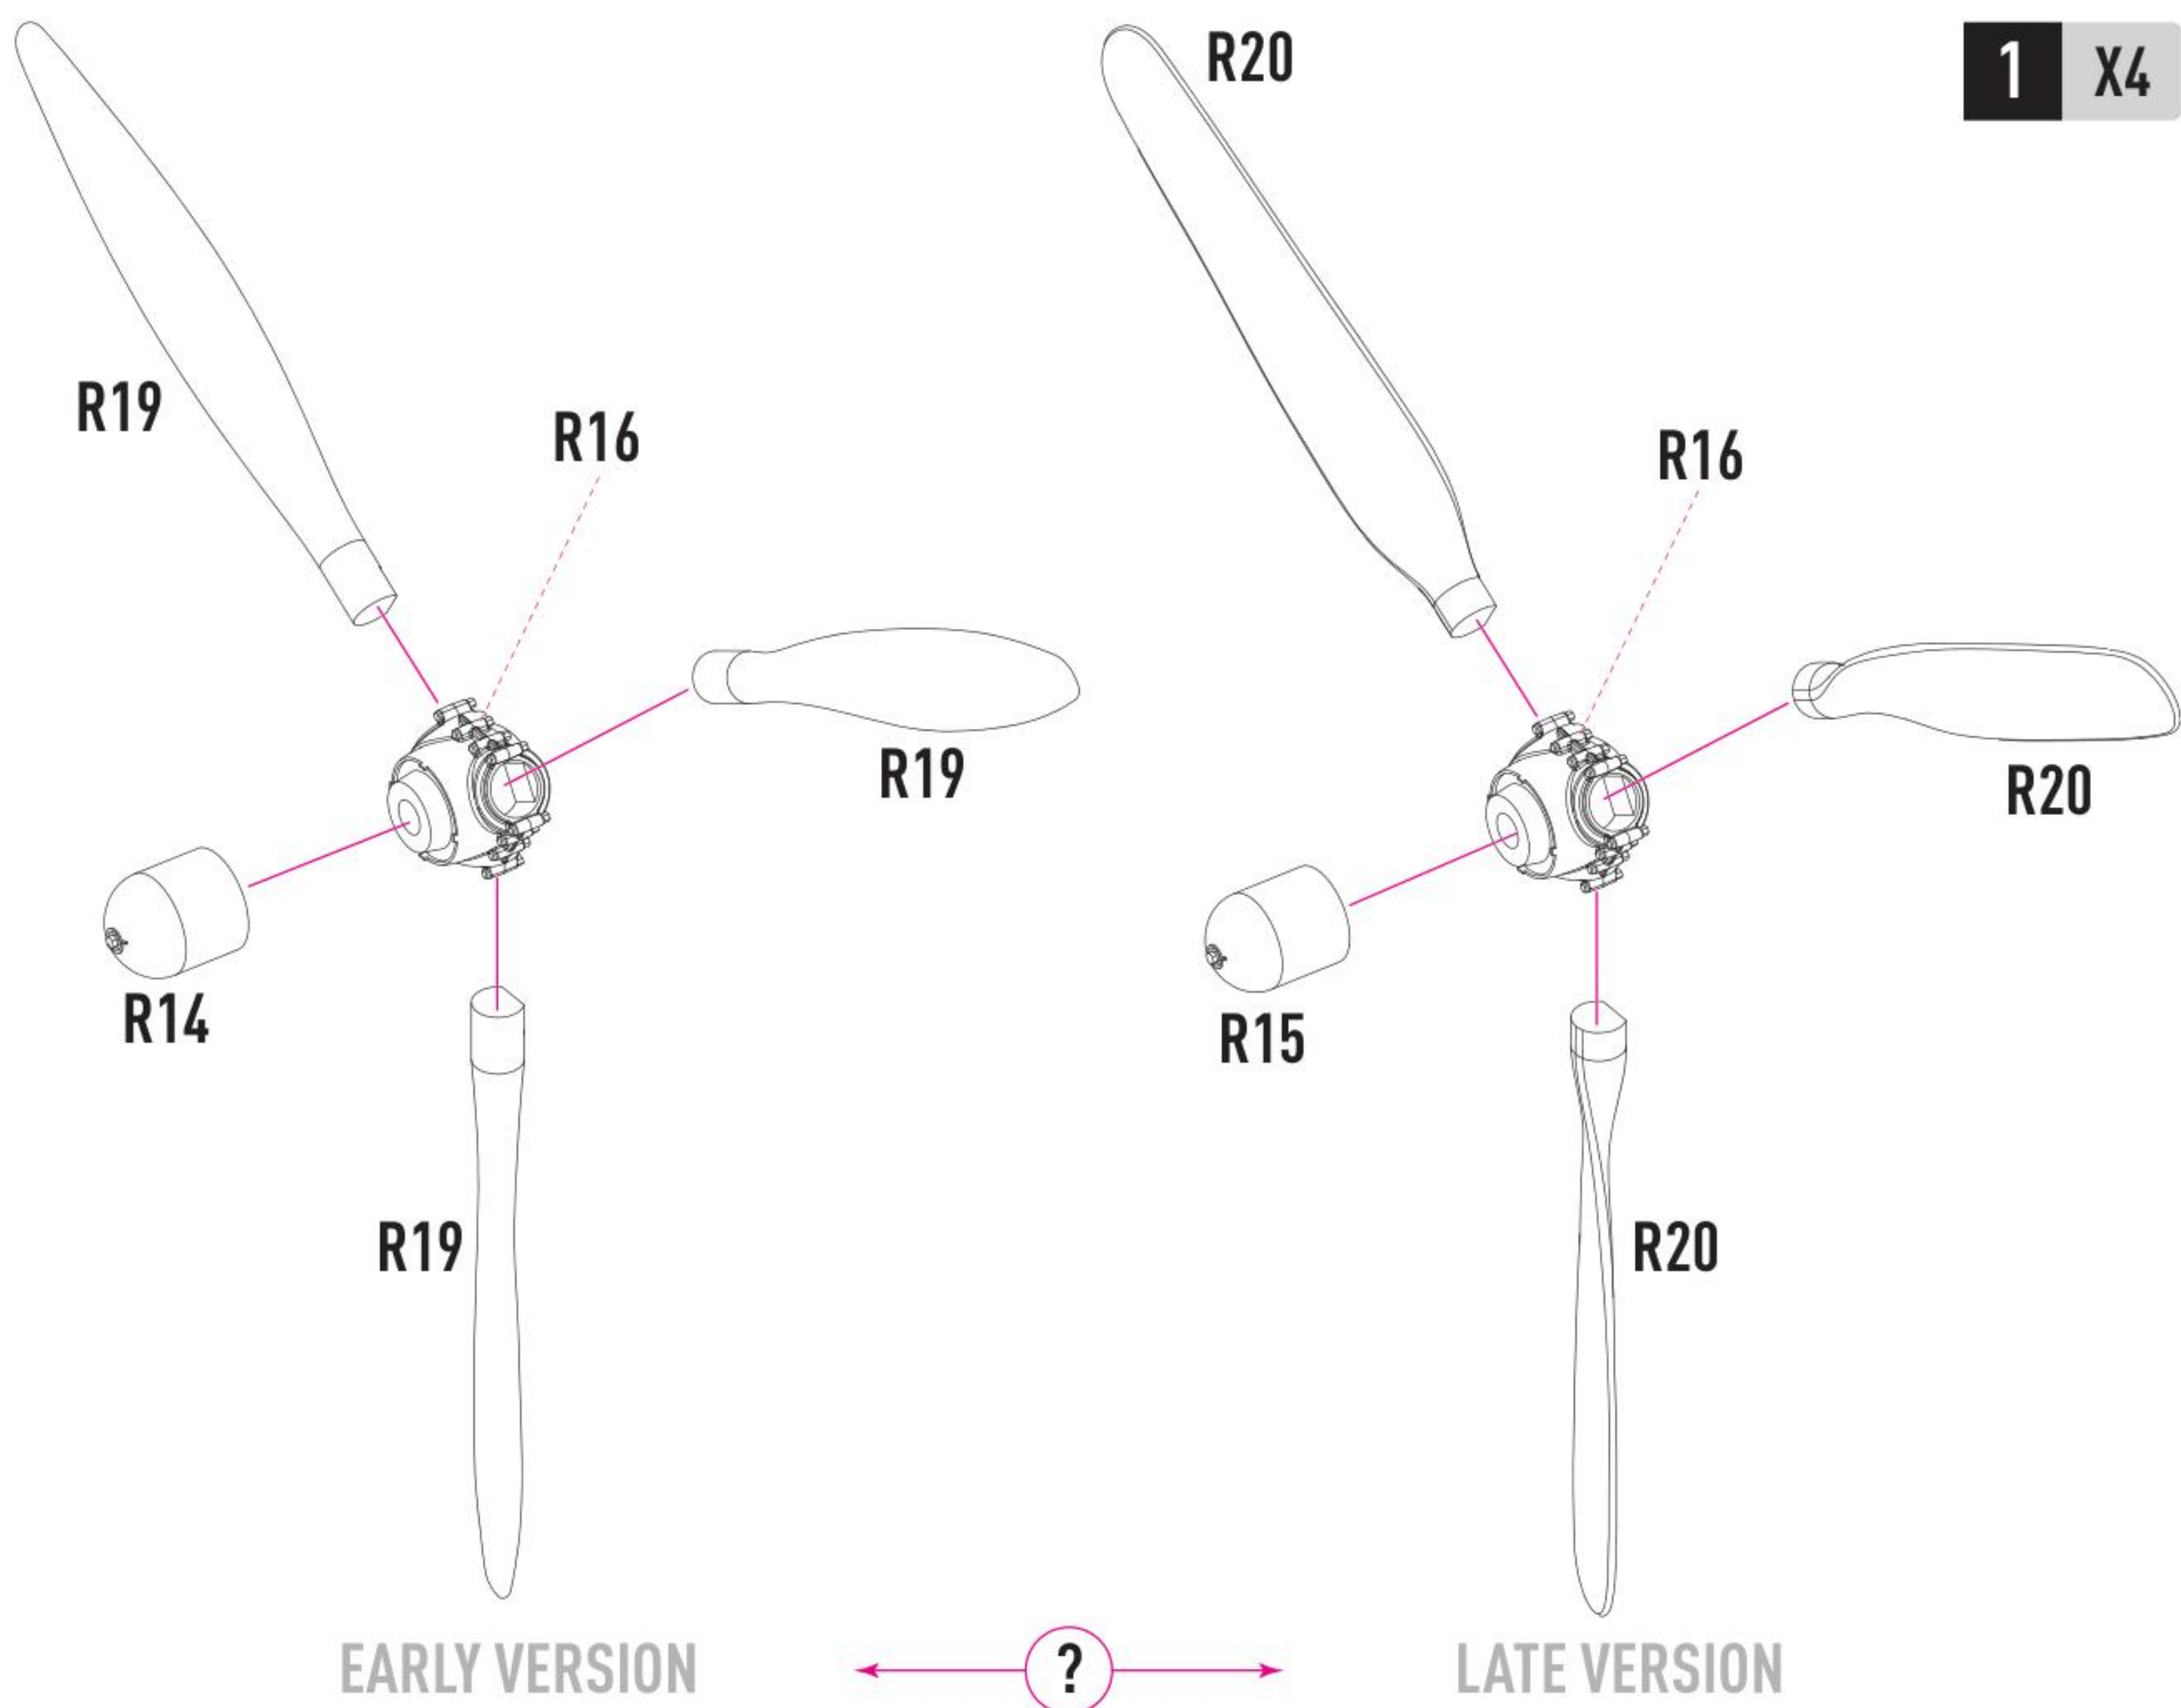


STEP 2

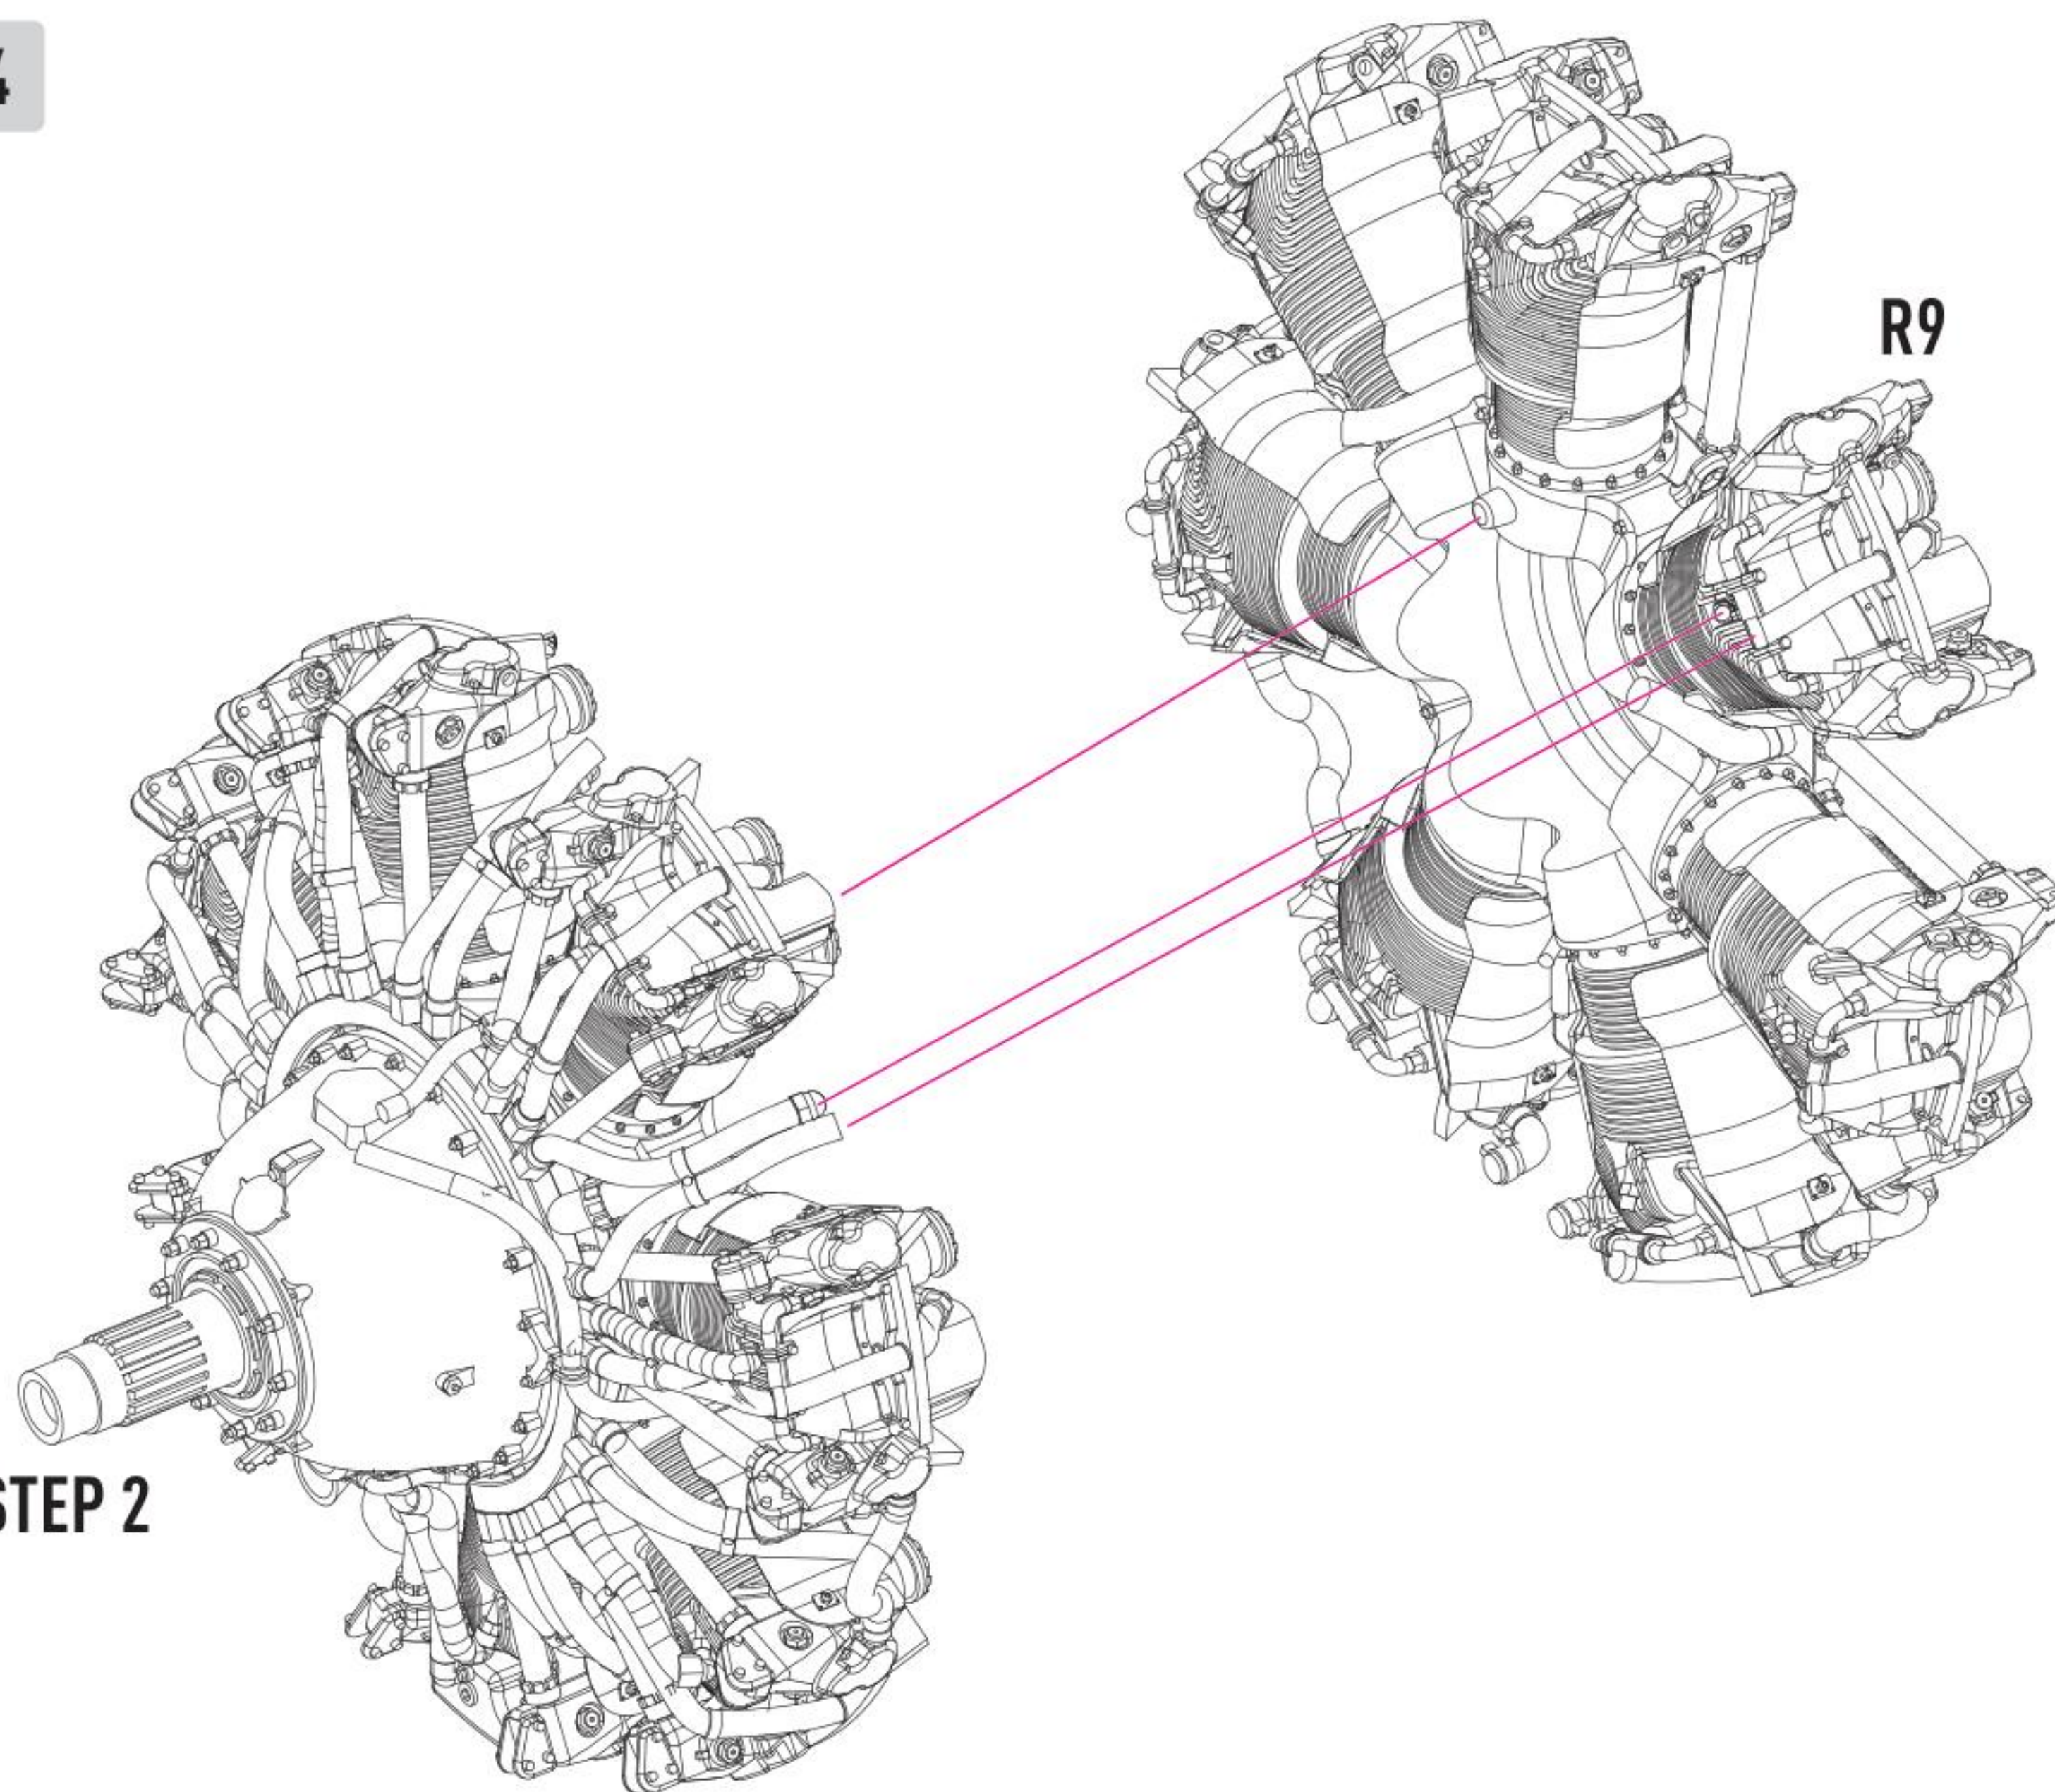


R10


STEP 3

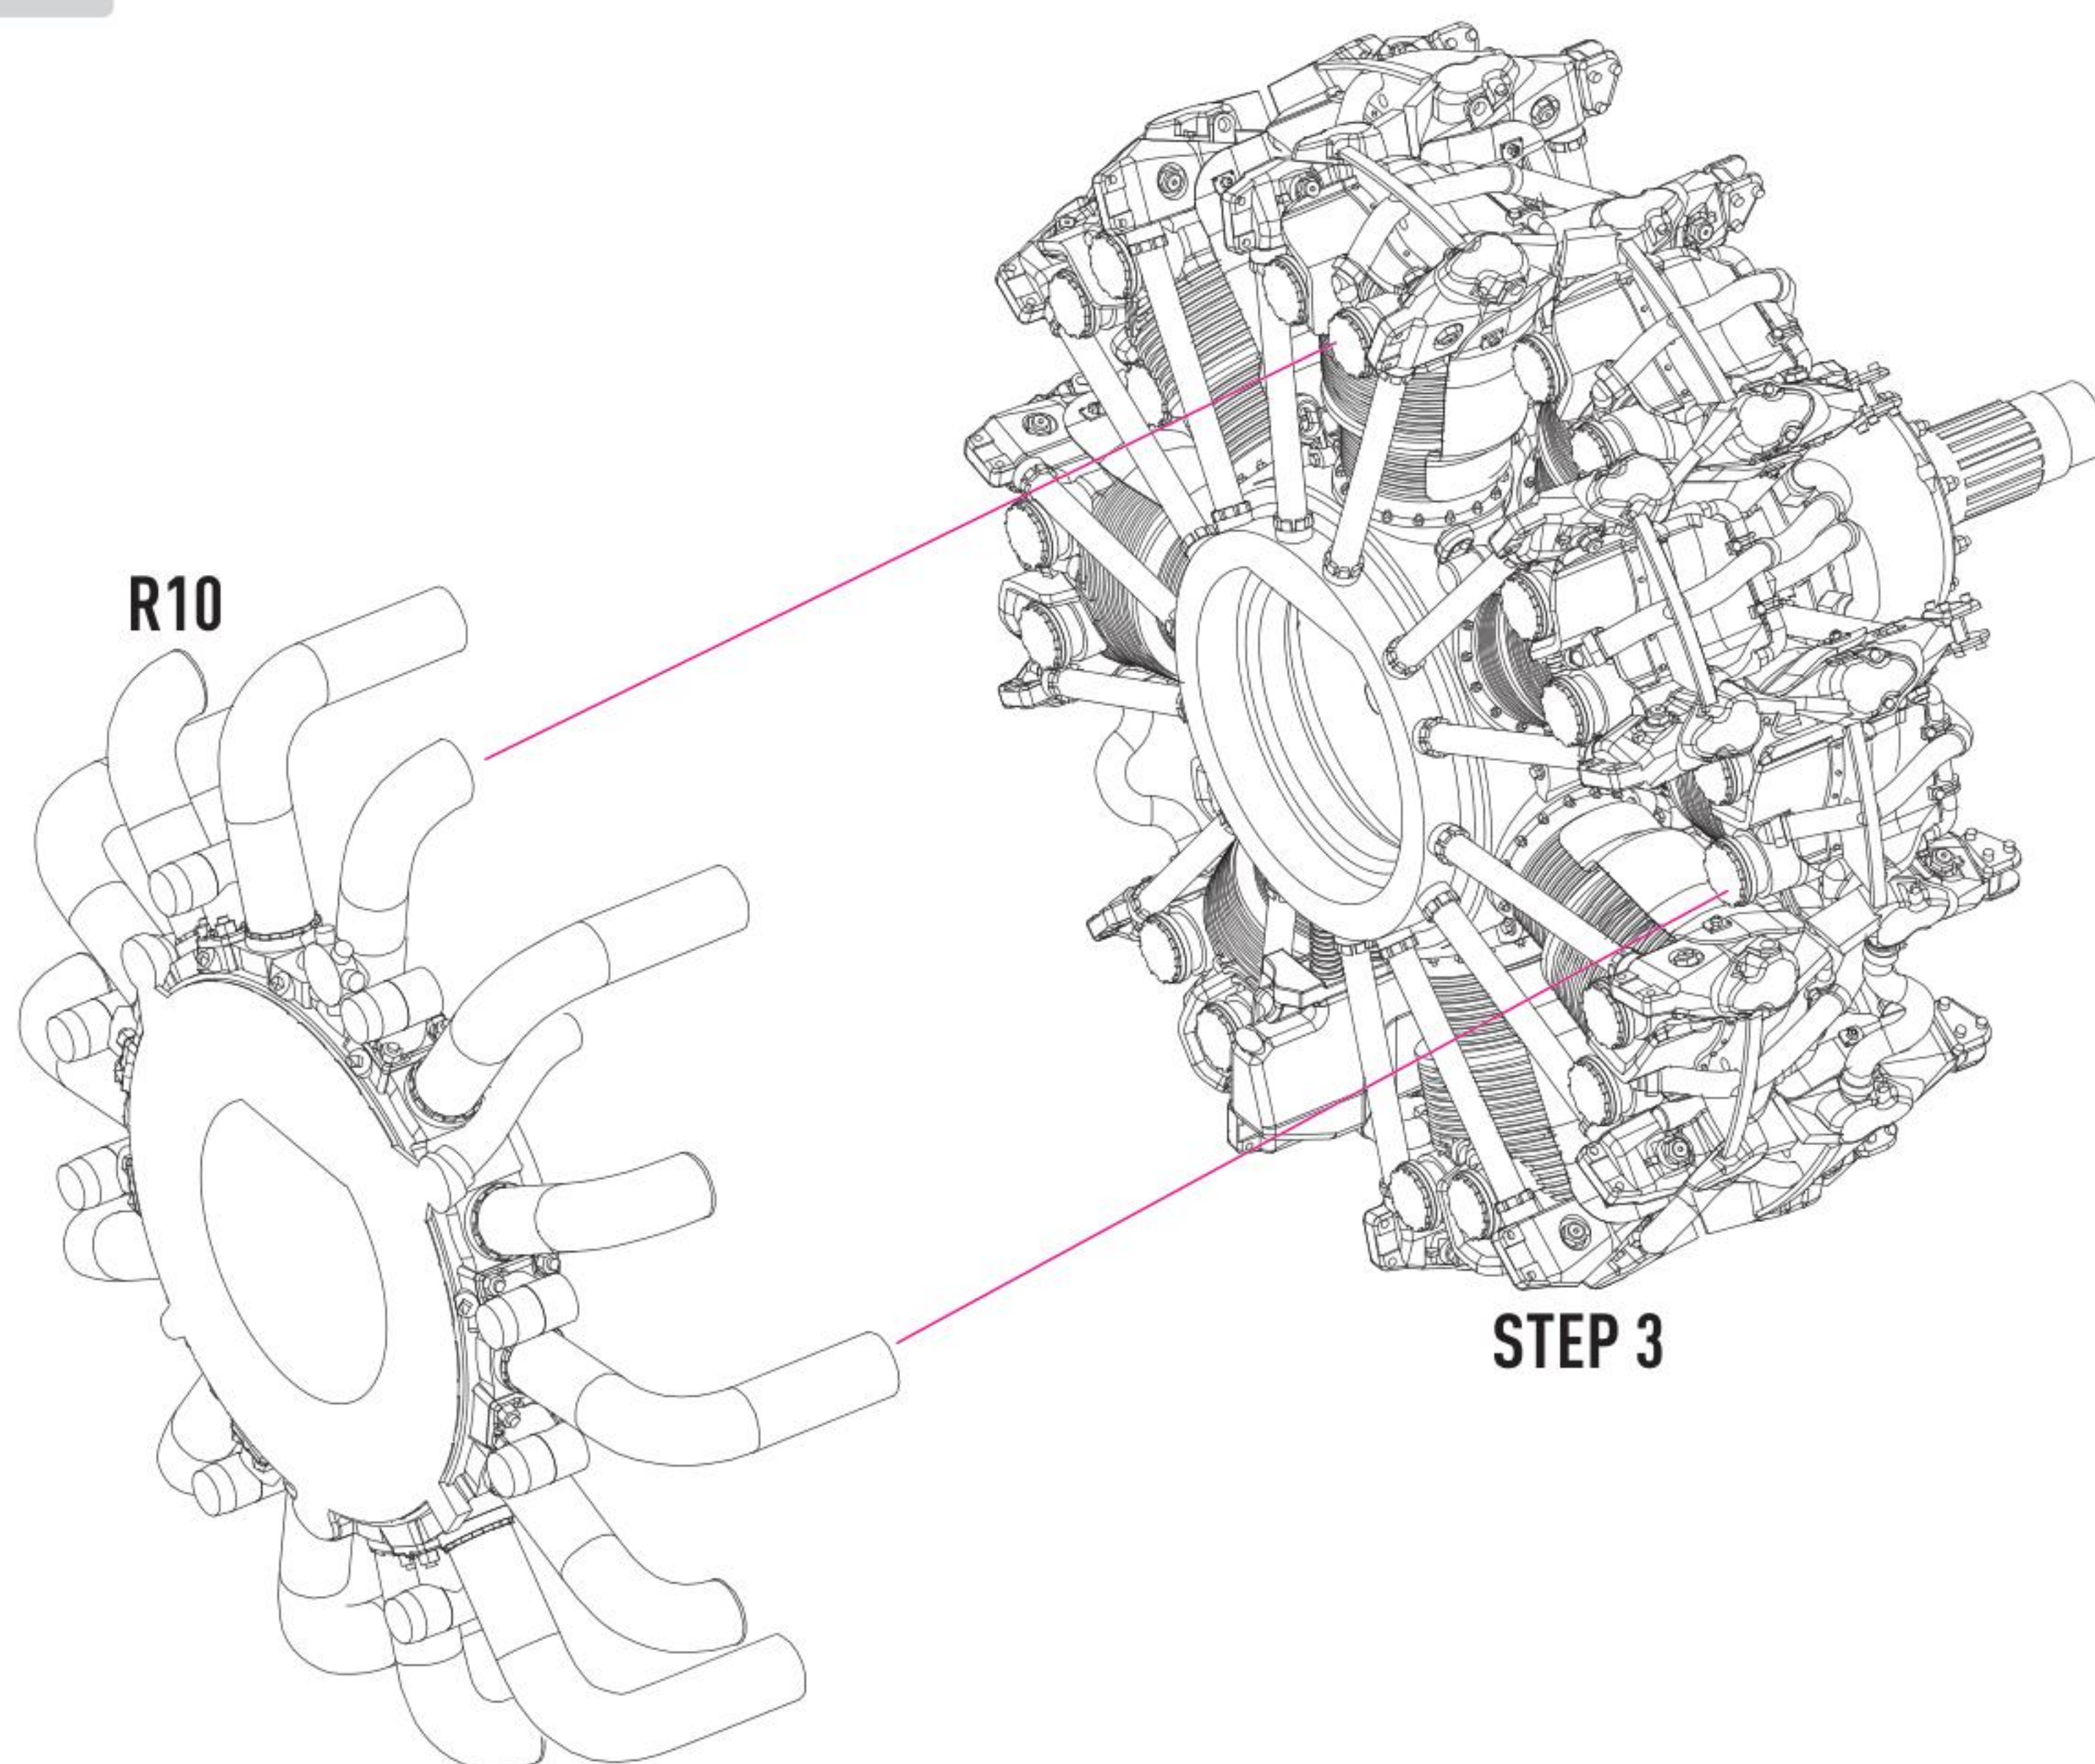



5 X4

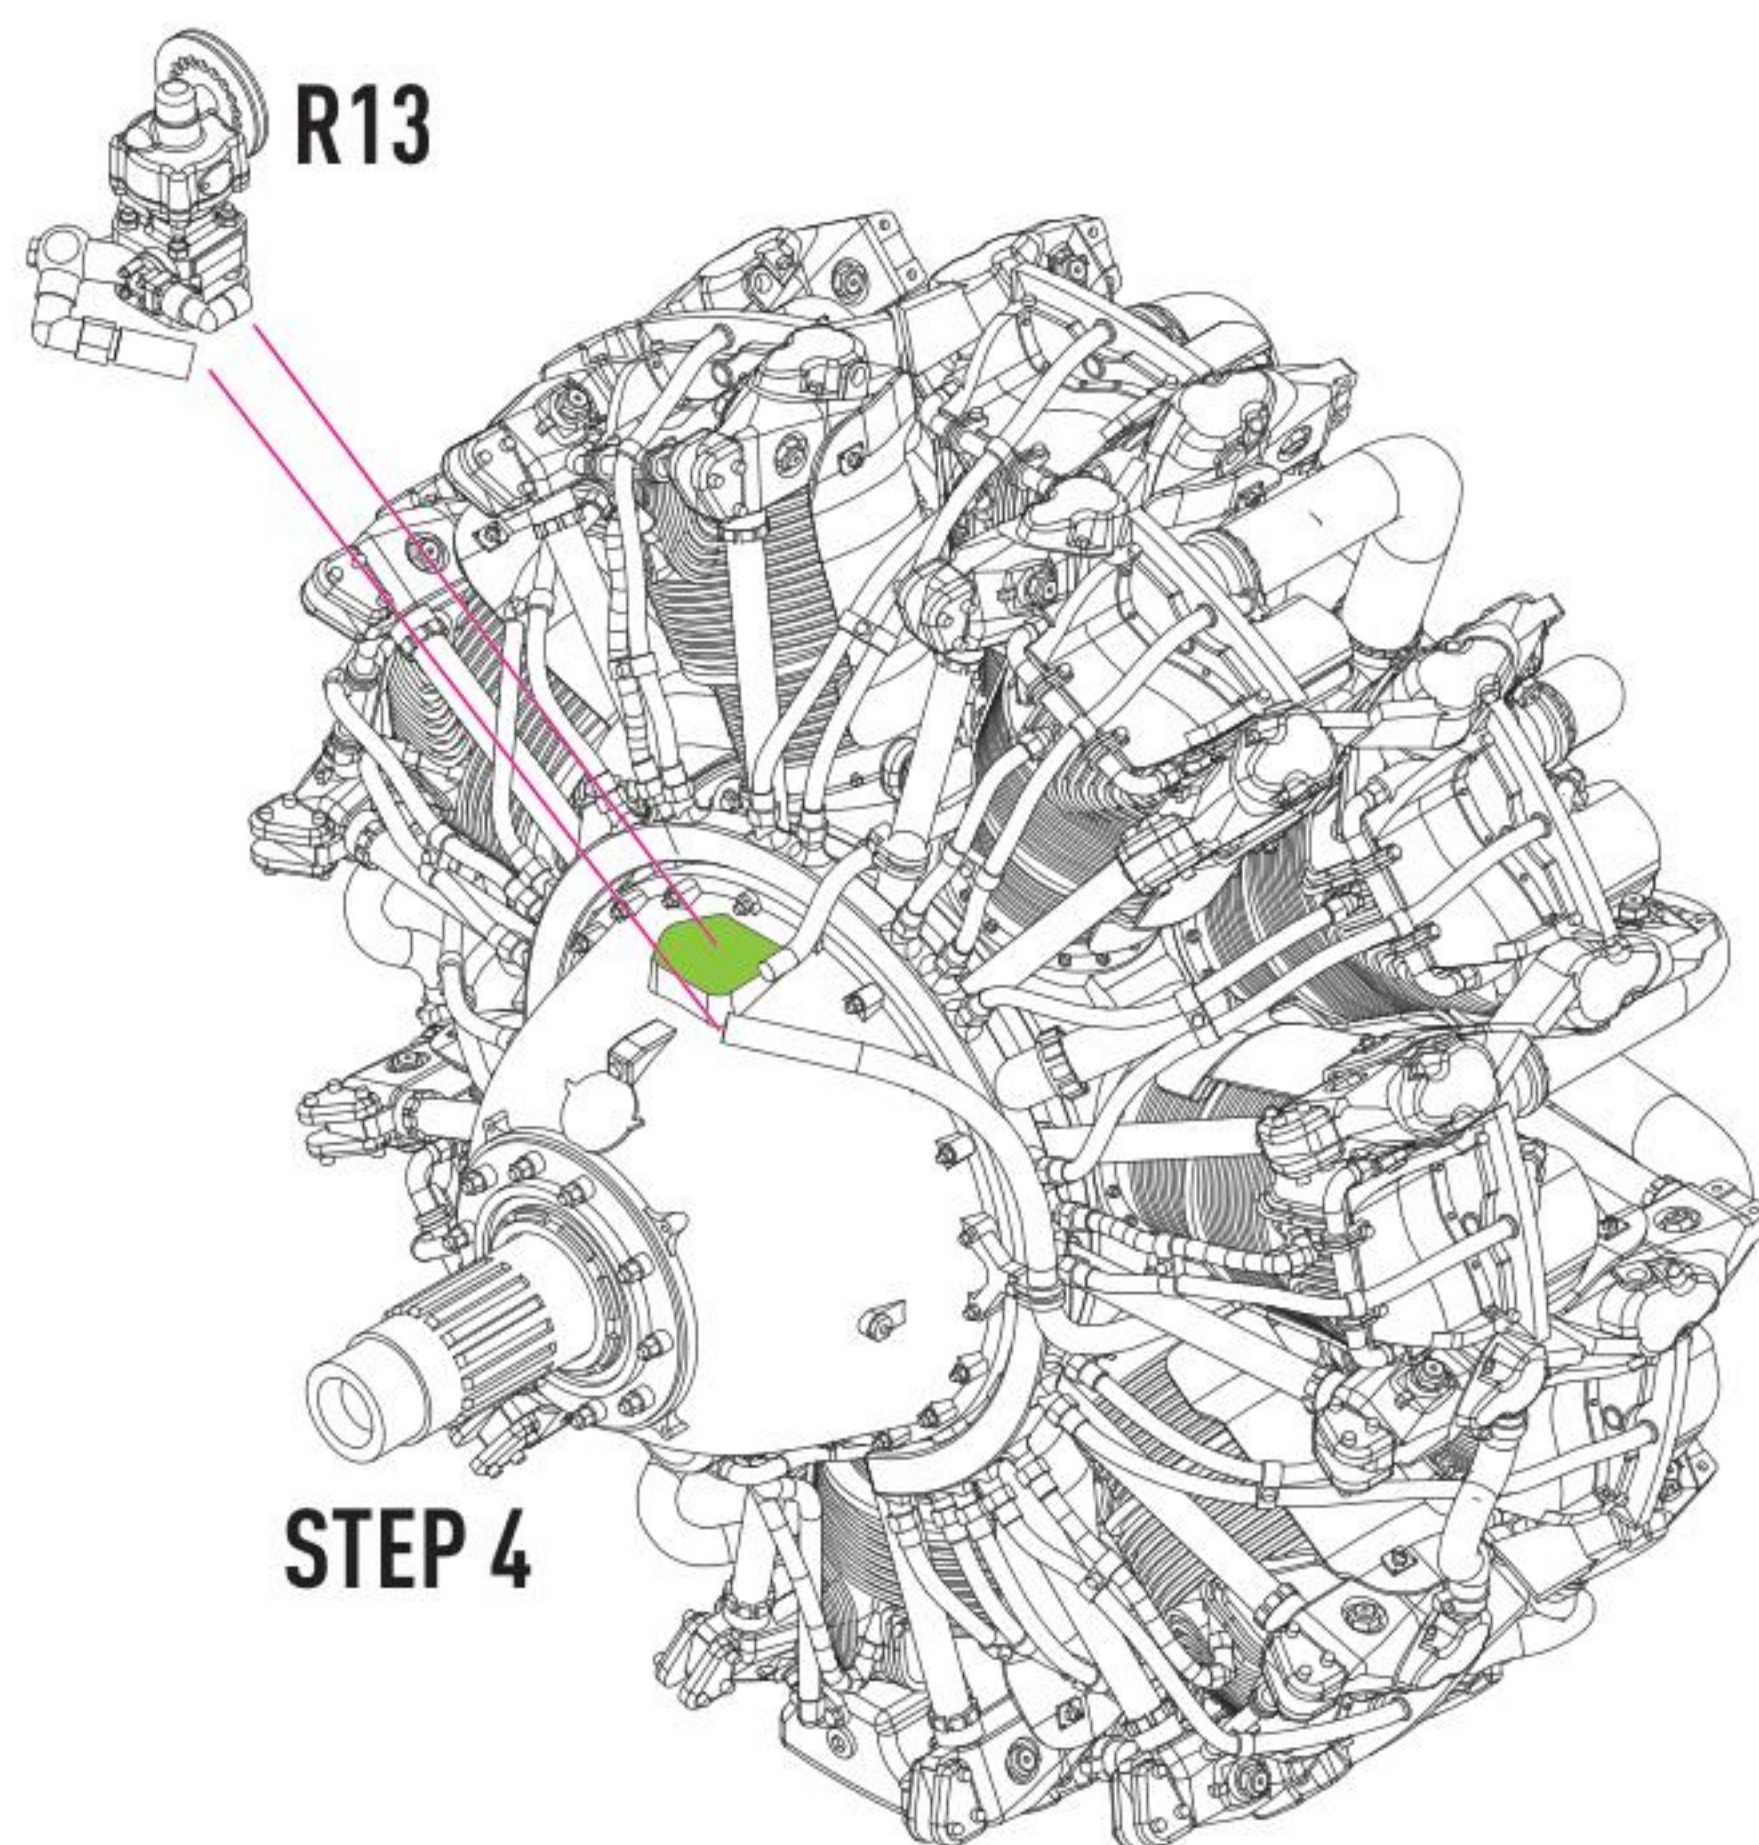


6 X4 **VARIANT 1**
(CLOSED)

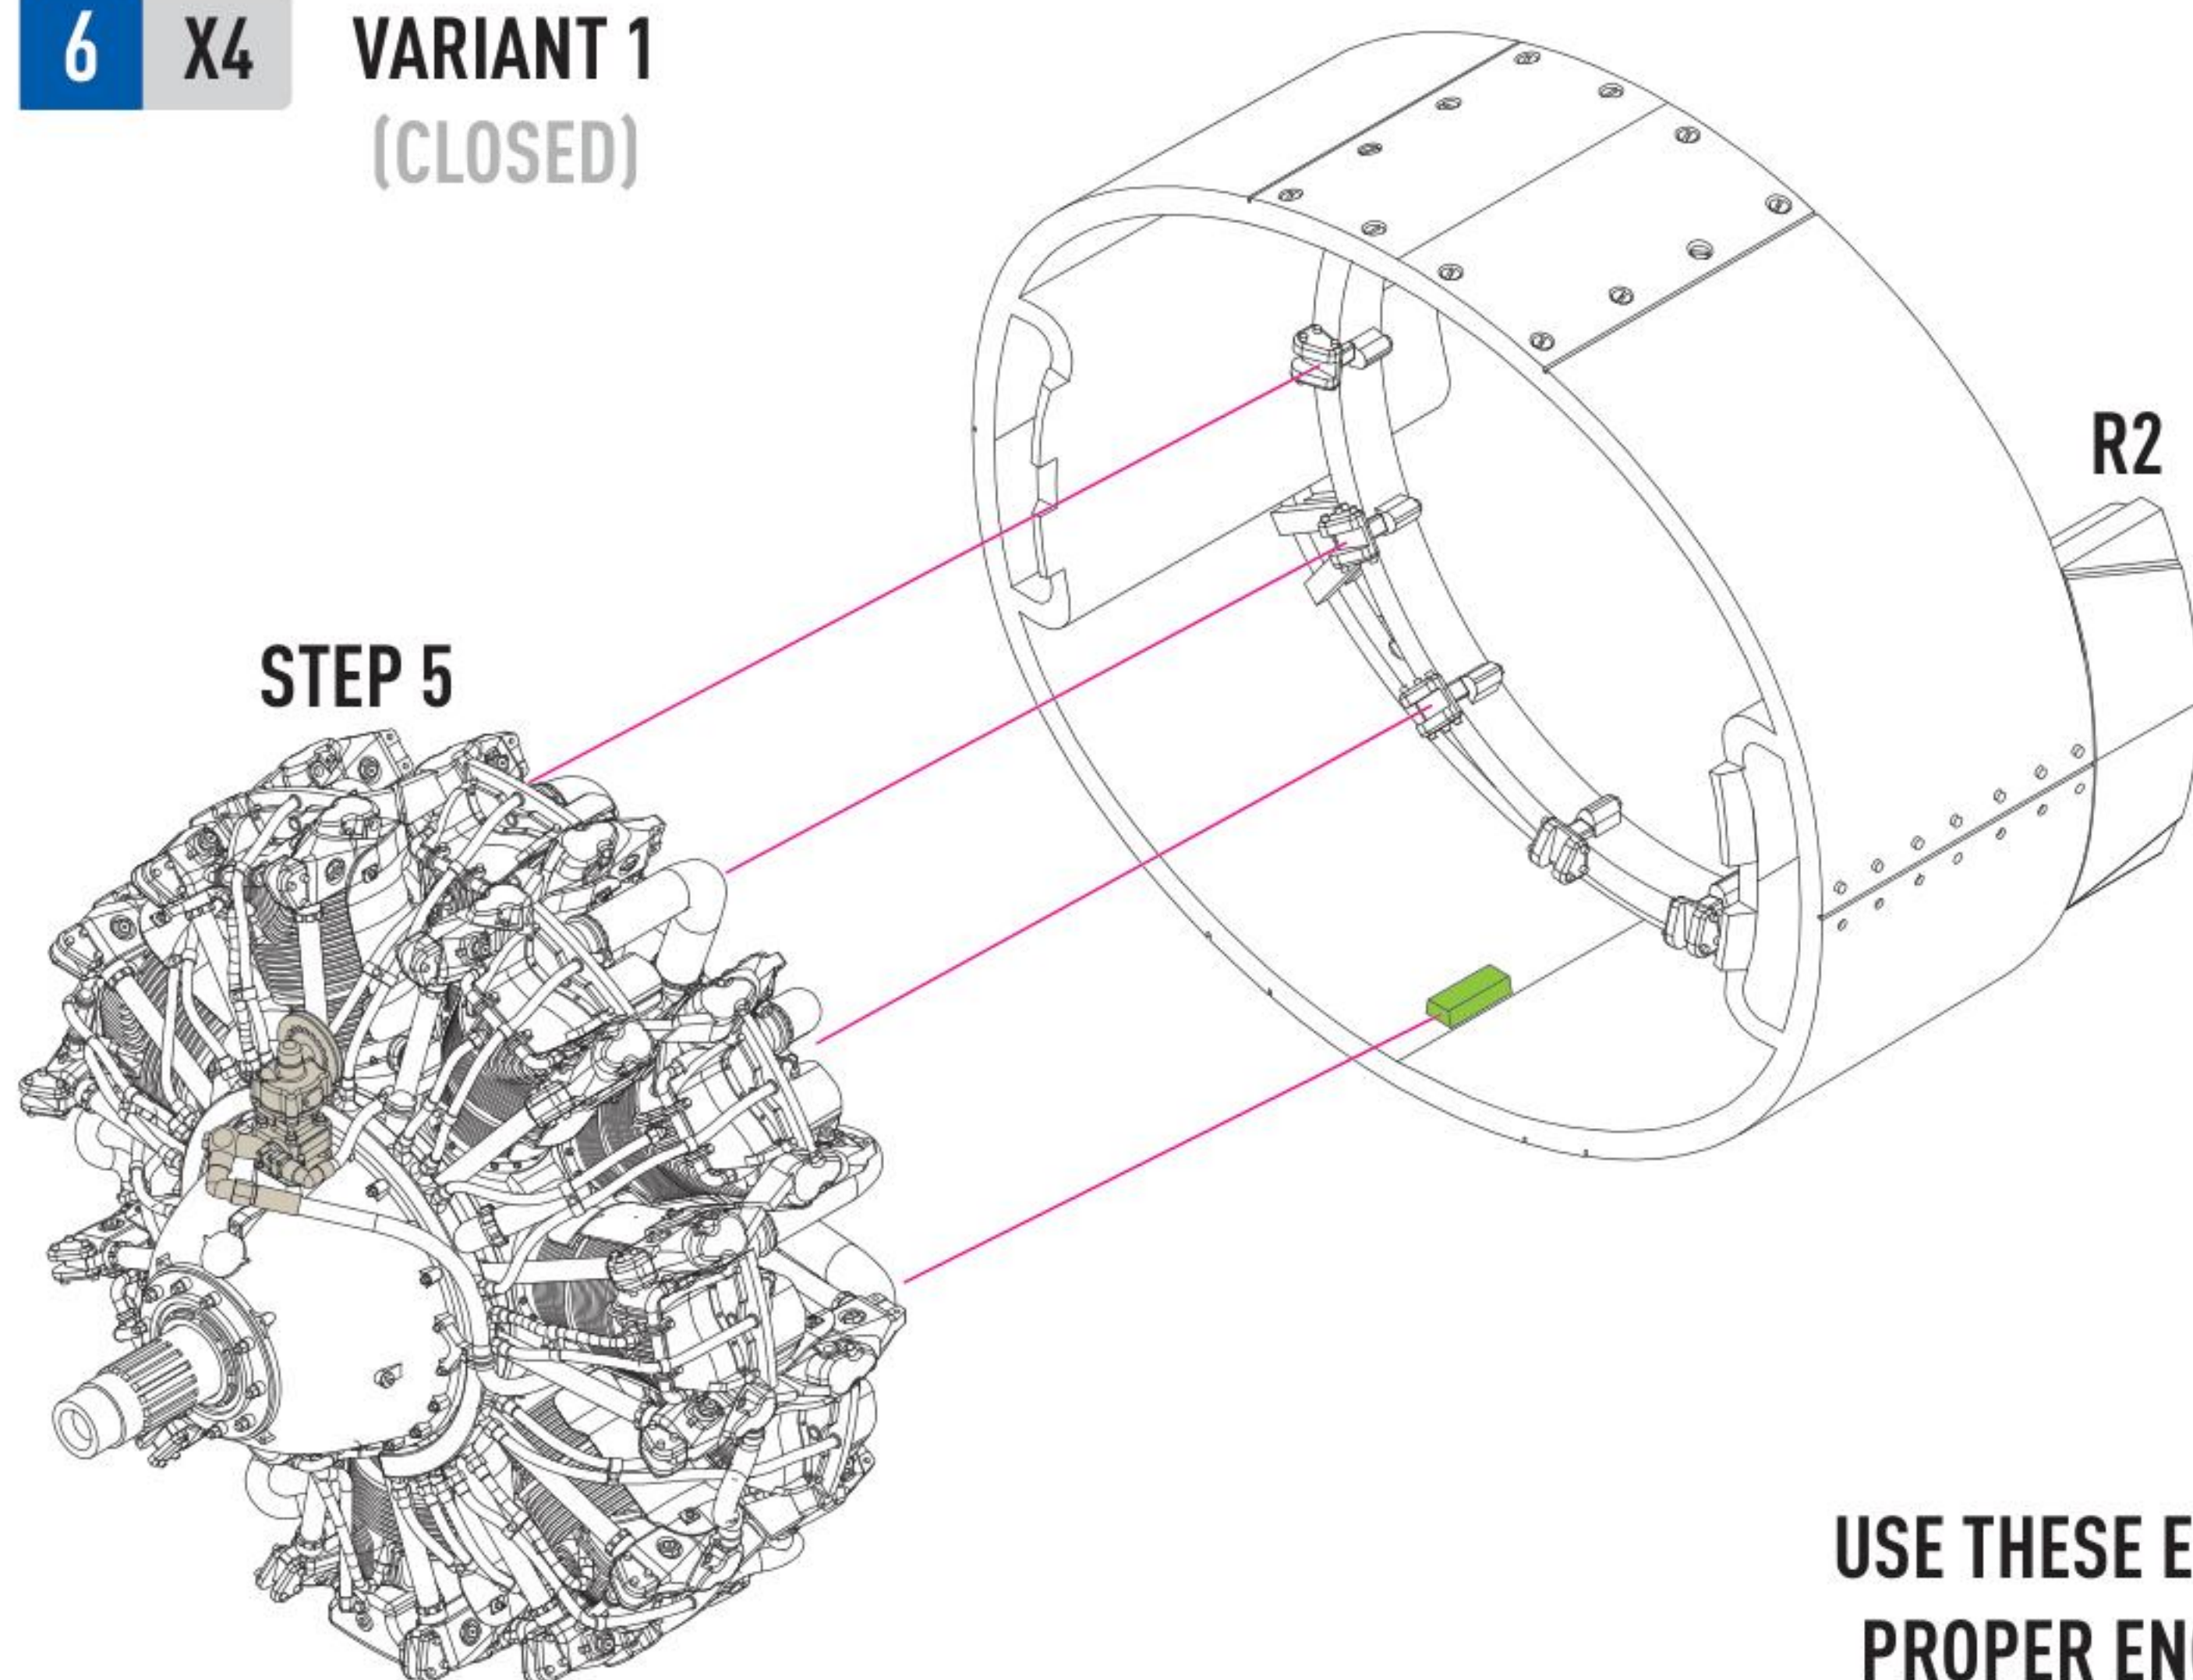


**USE THESE ELEMENTS FOR
PROPER ENGINE FITTING**

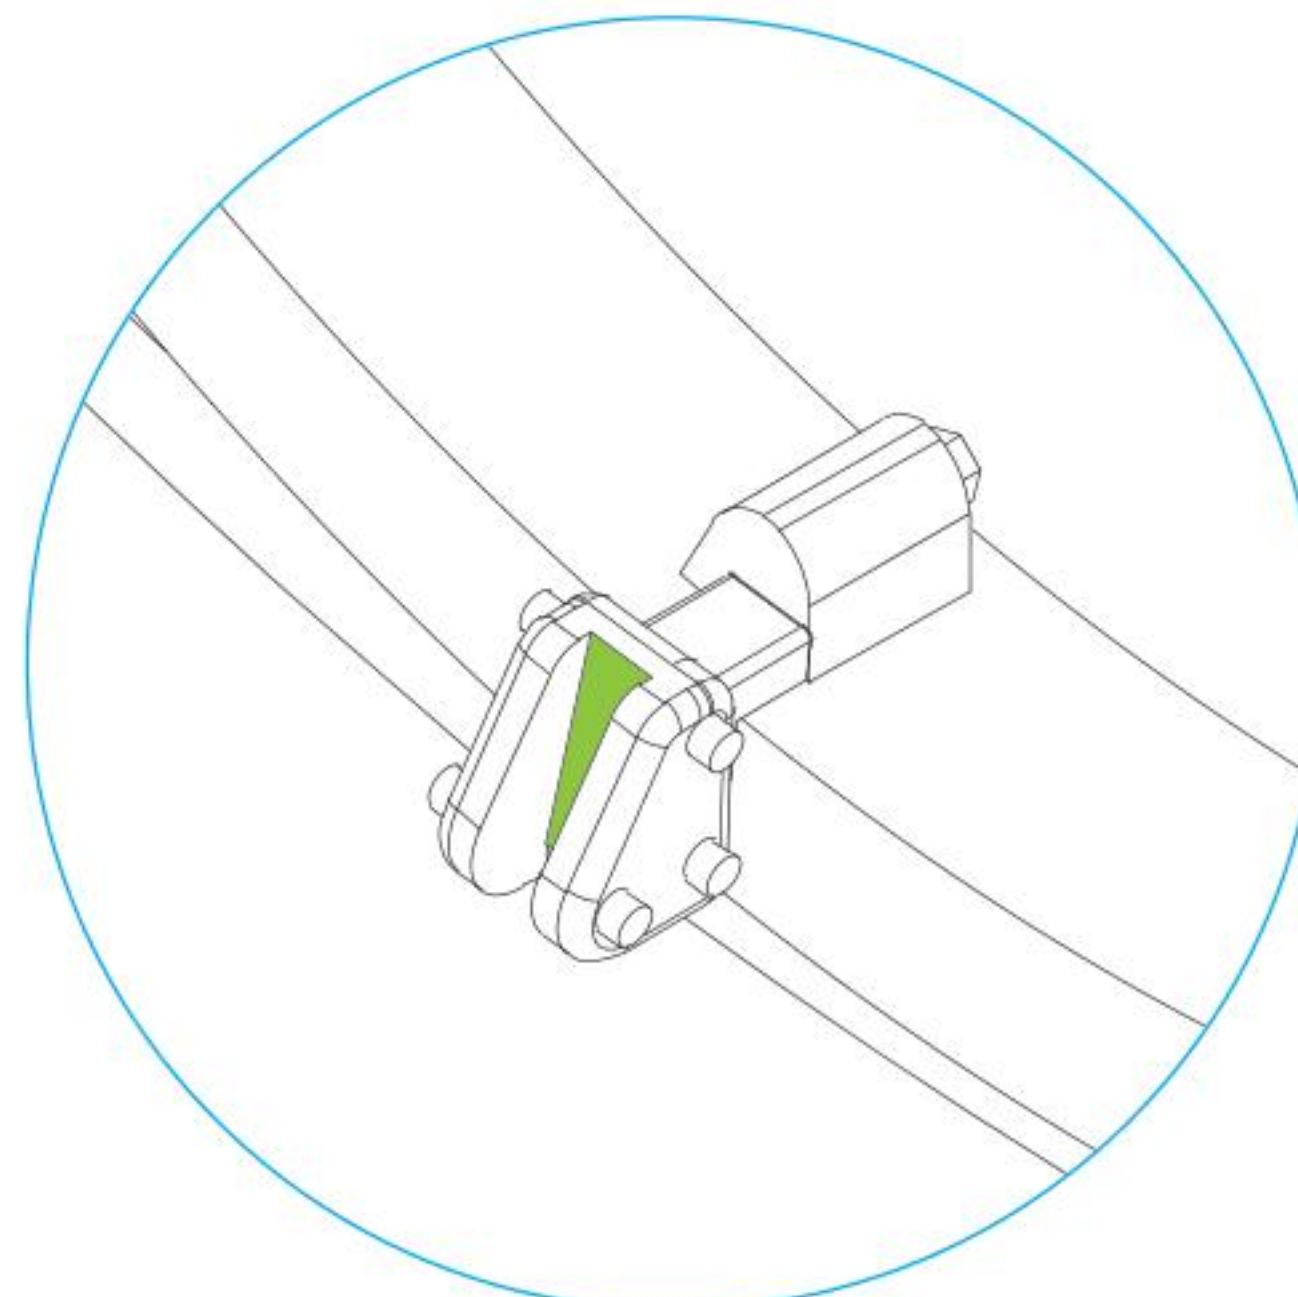
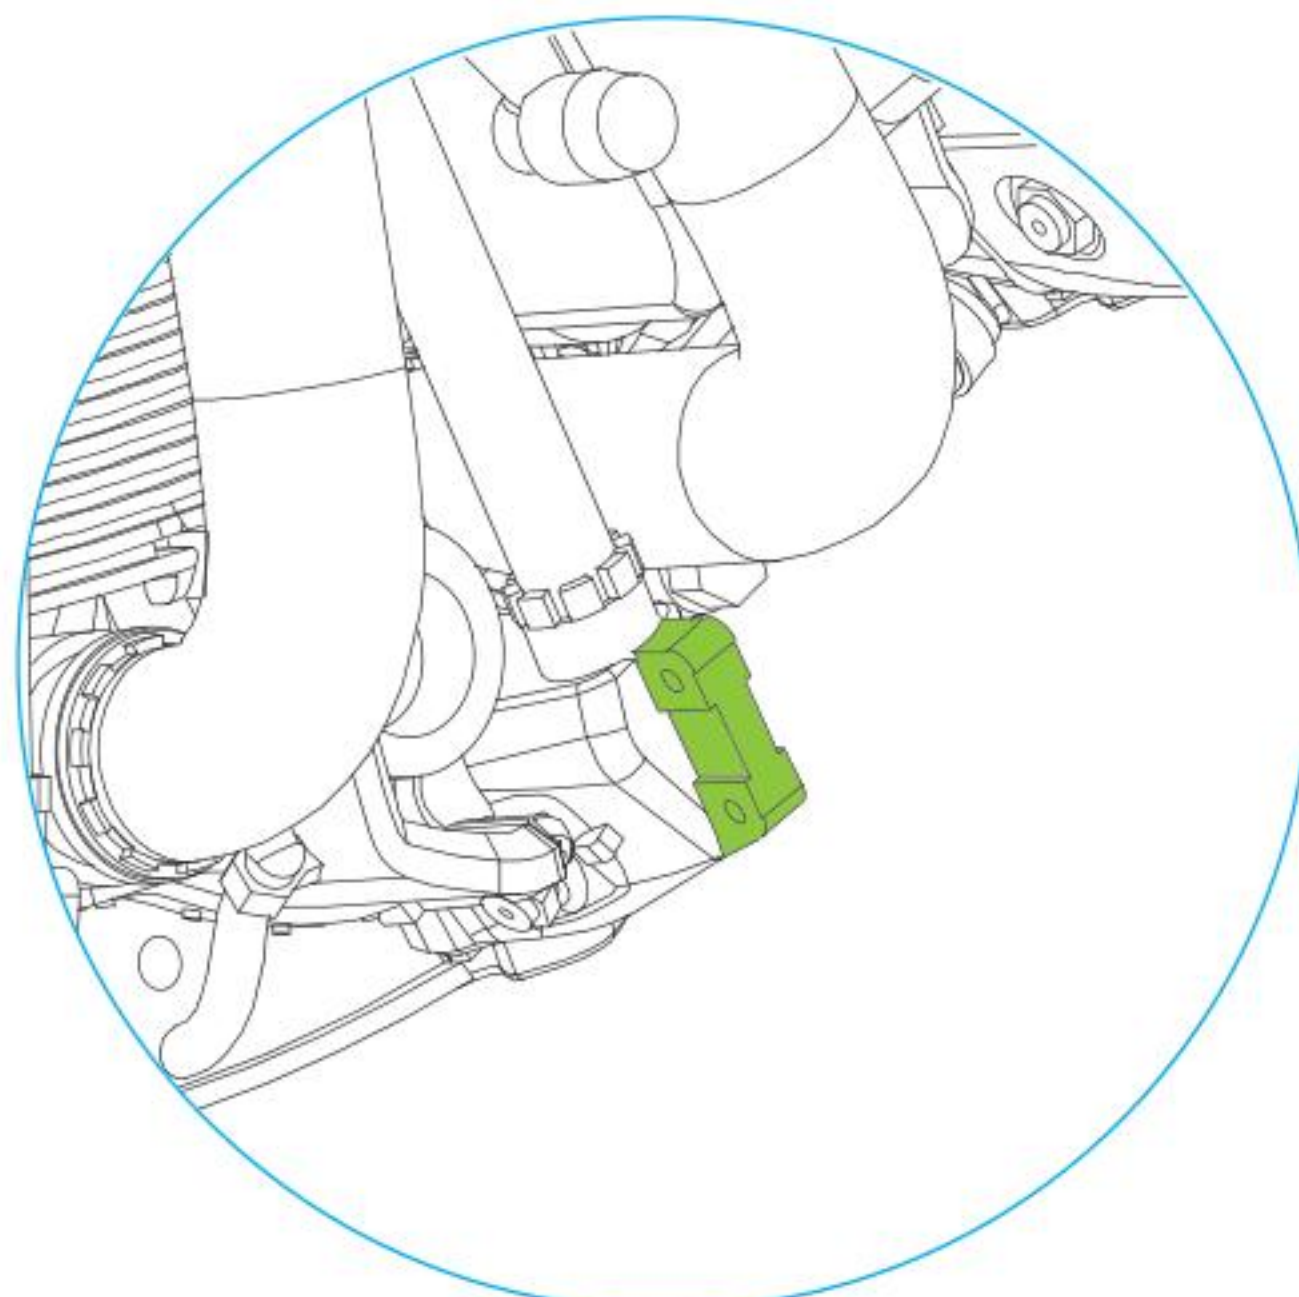




7 X2 INTERNAL

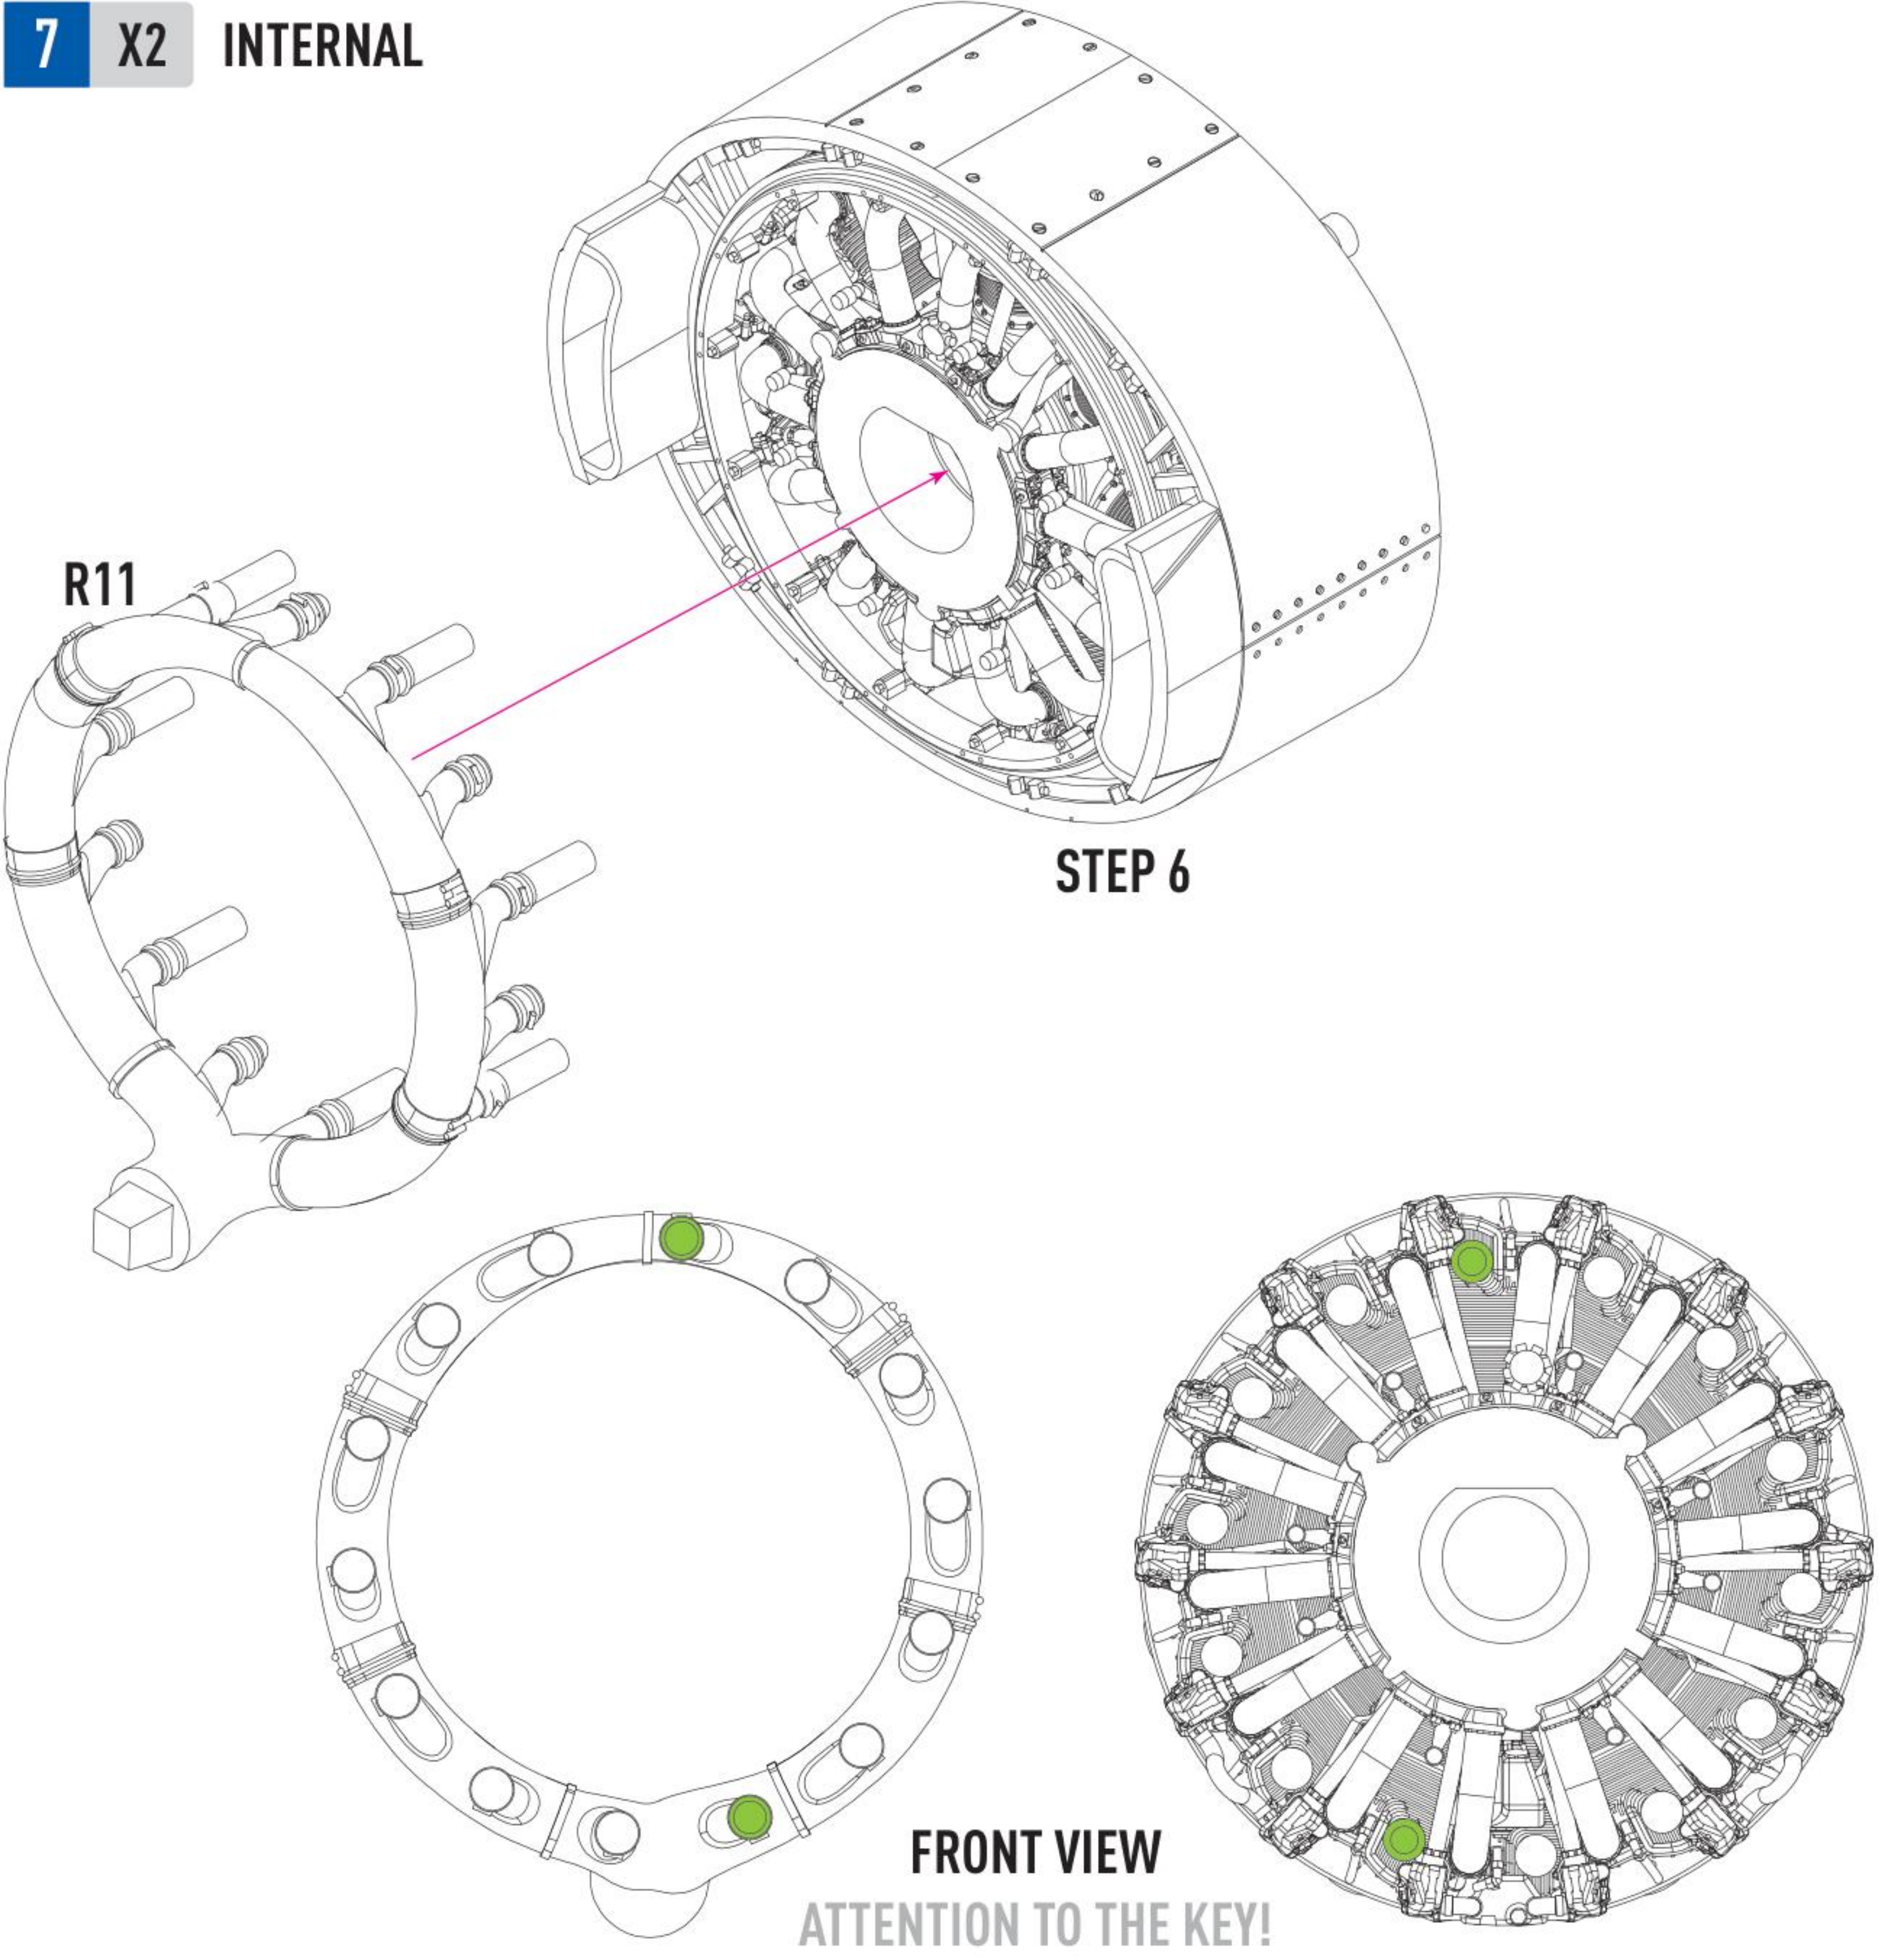


8 X2

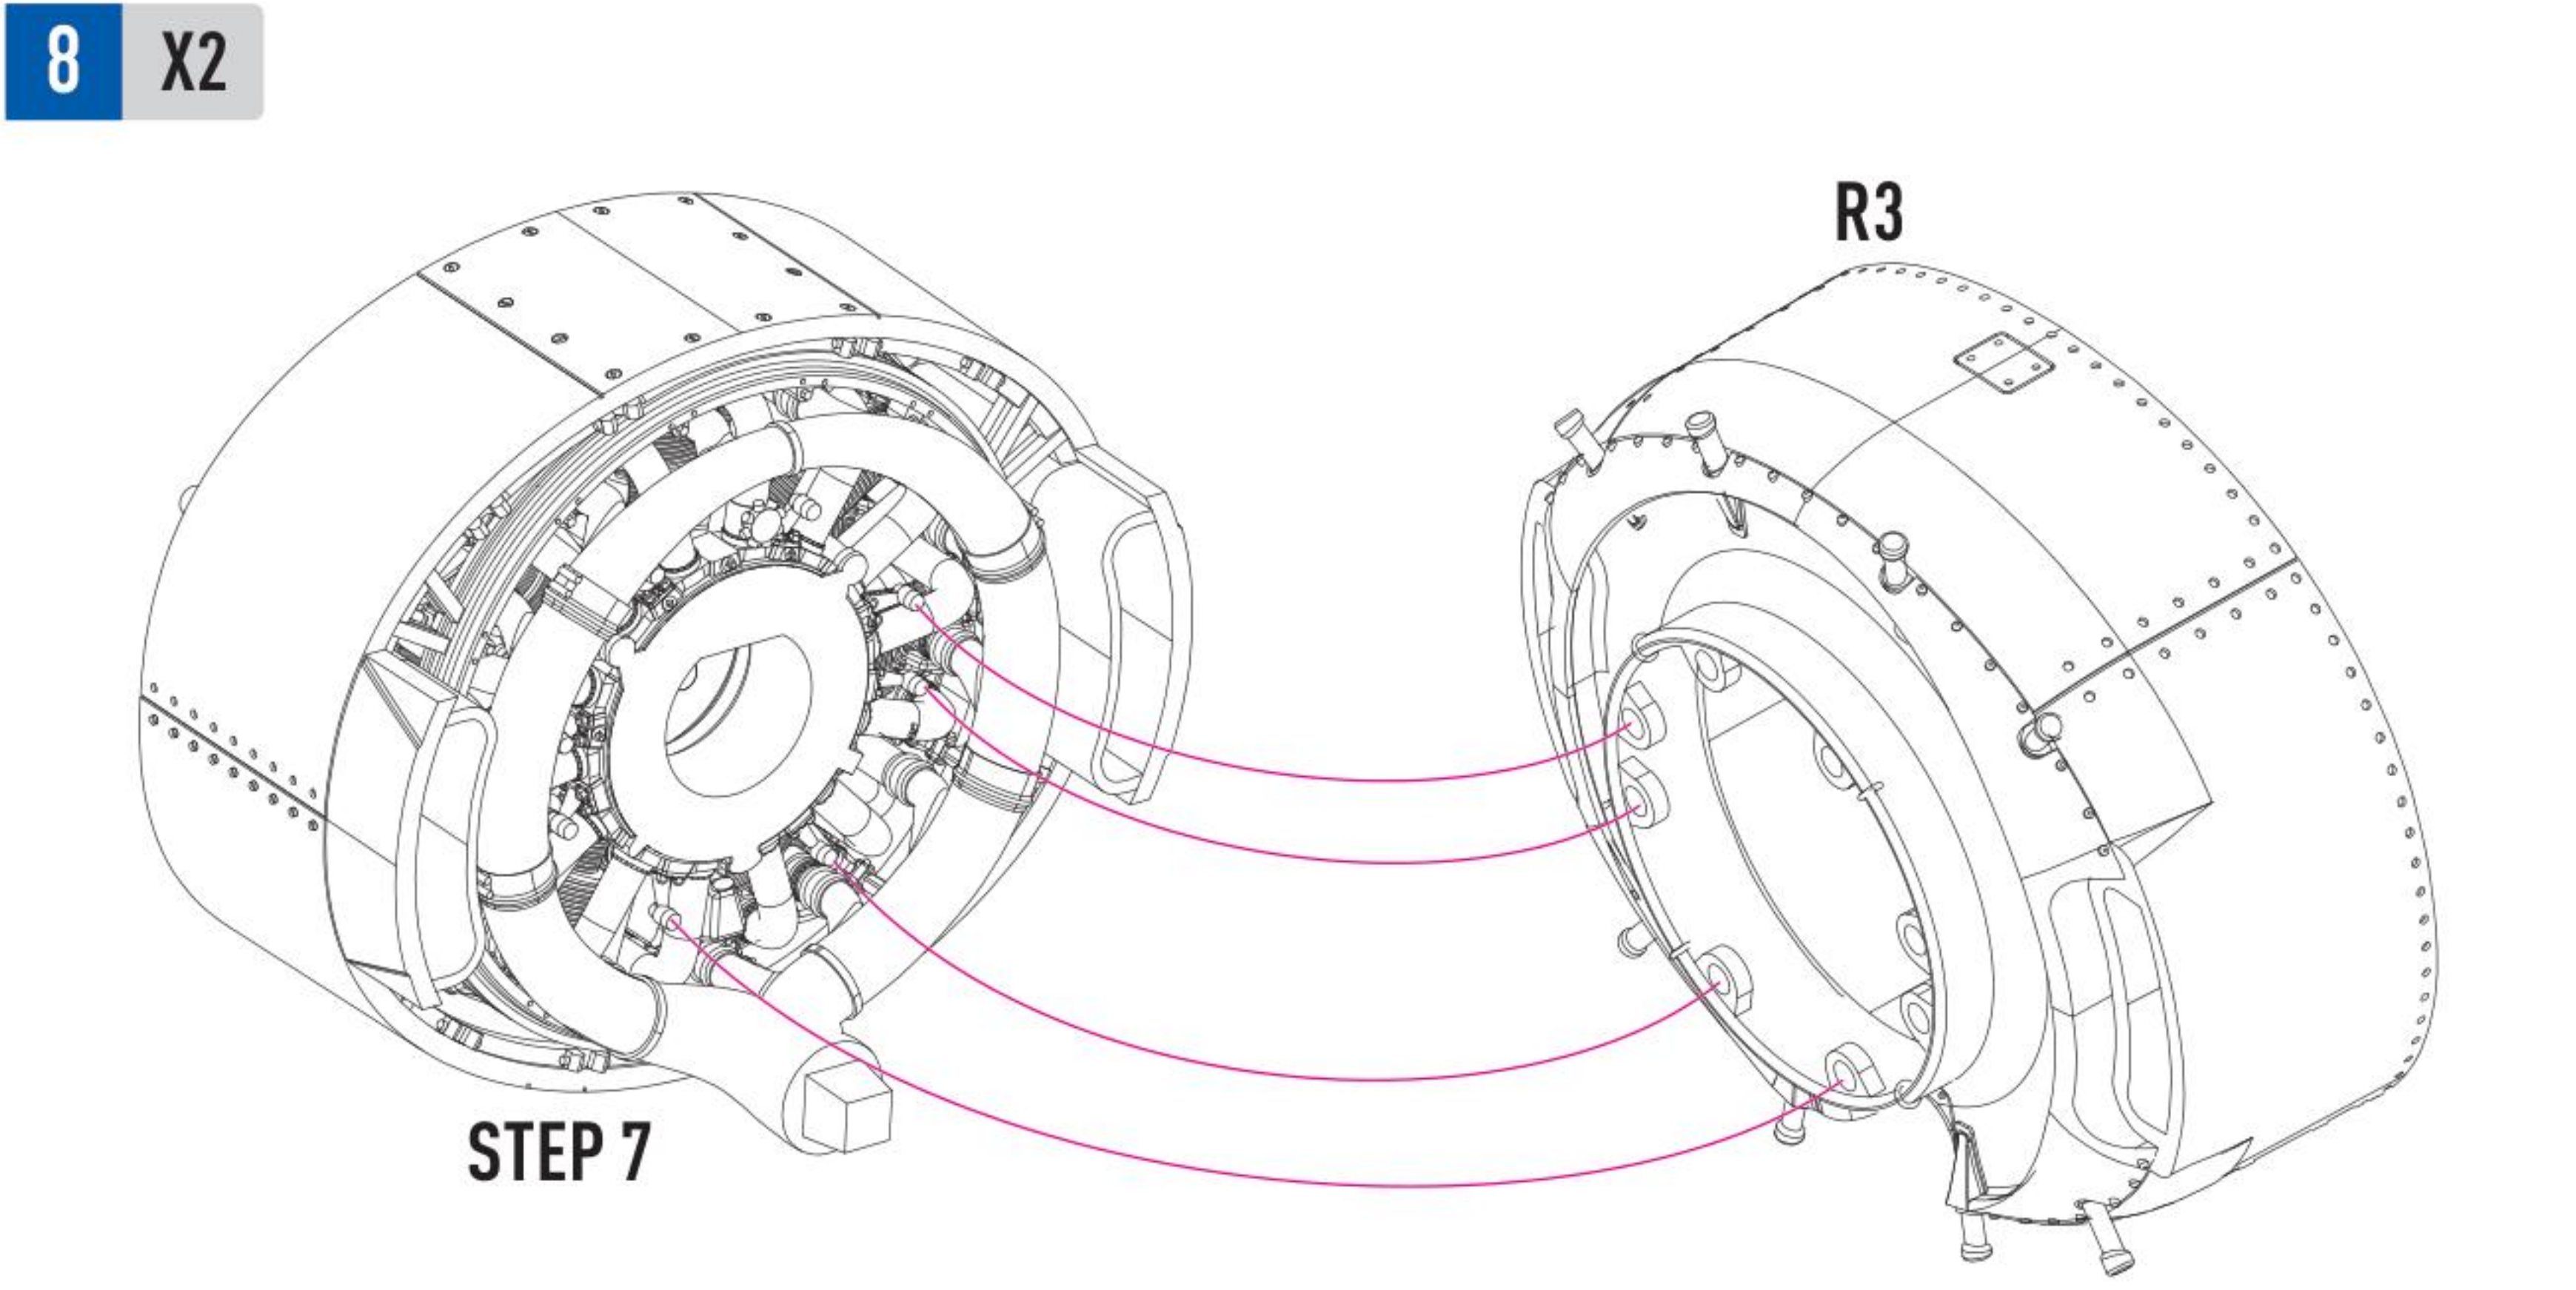


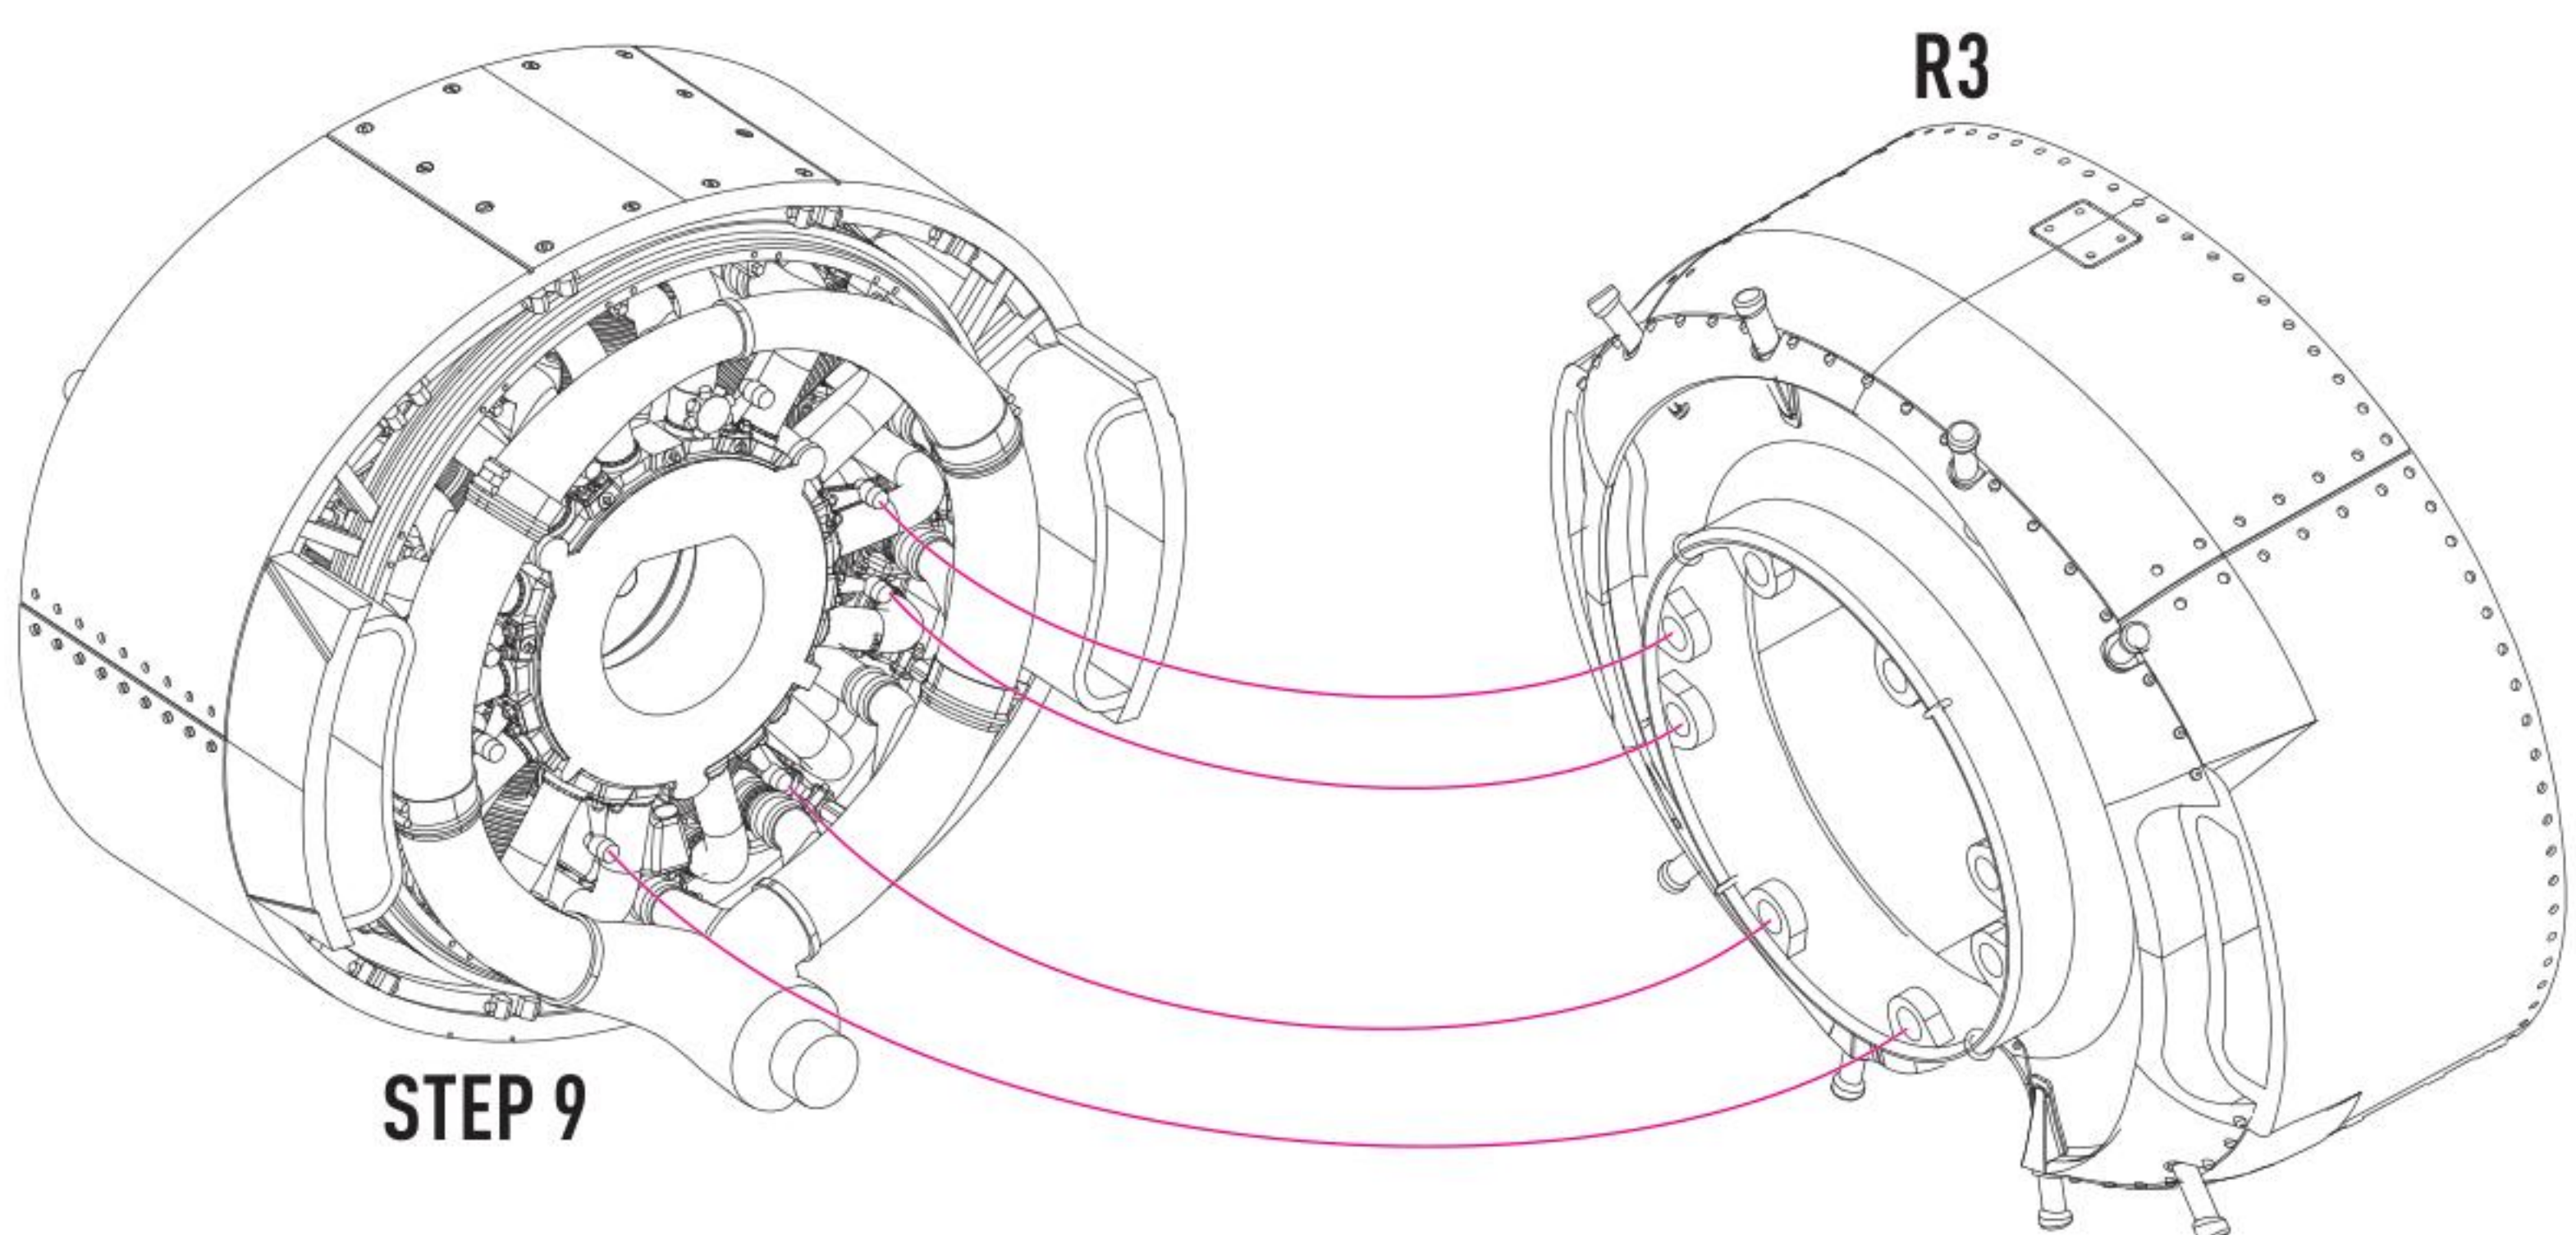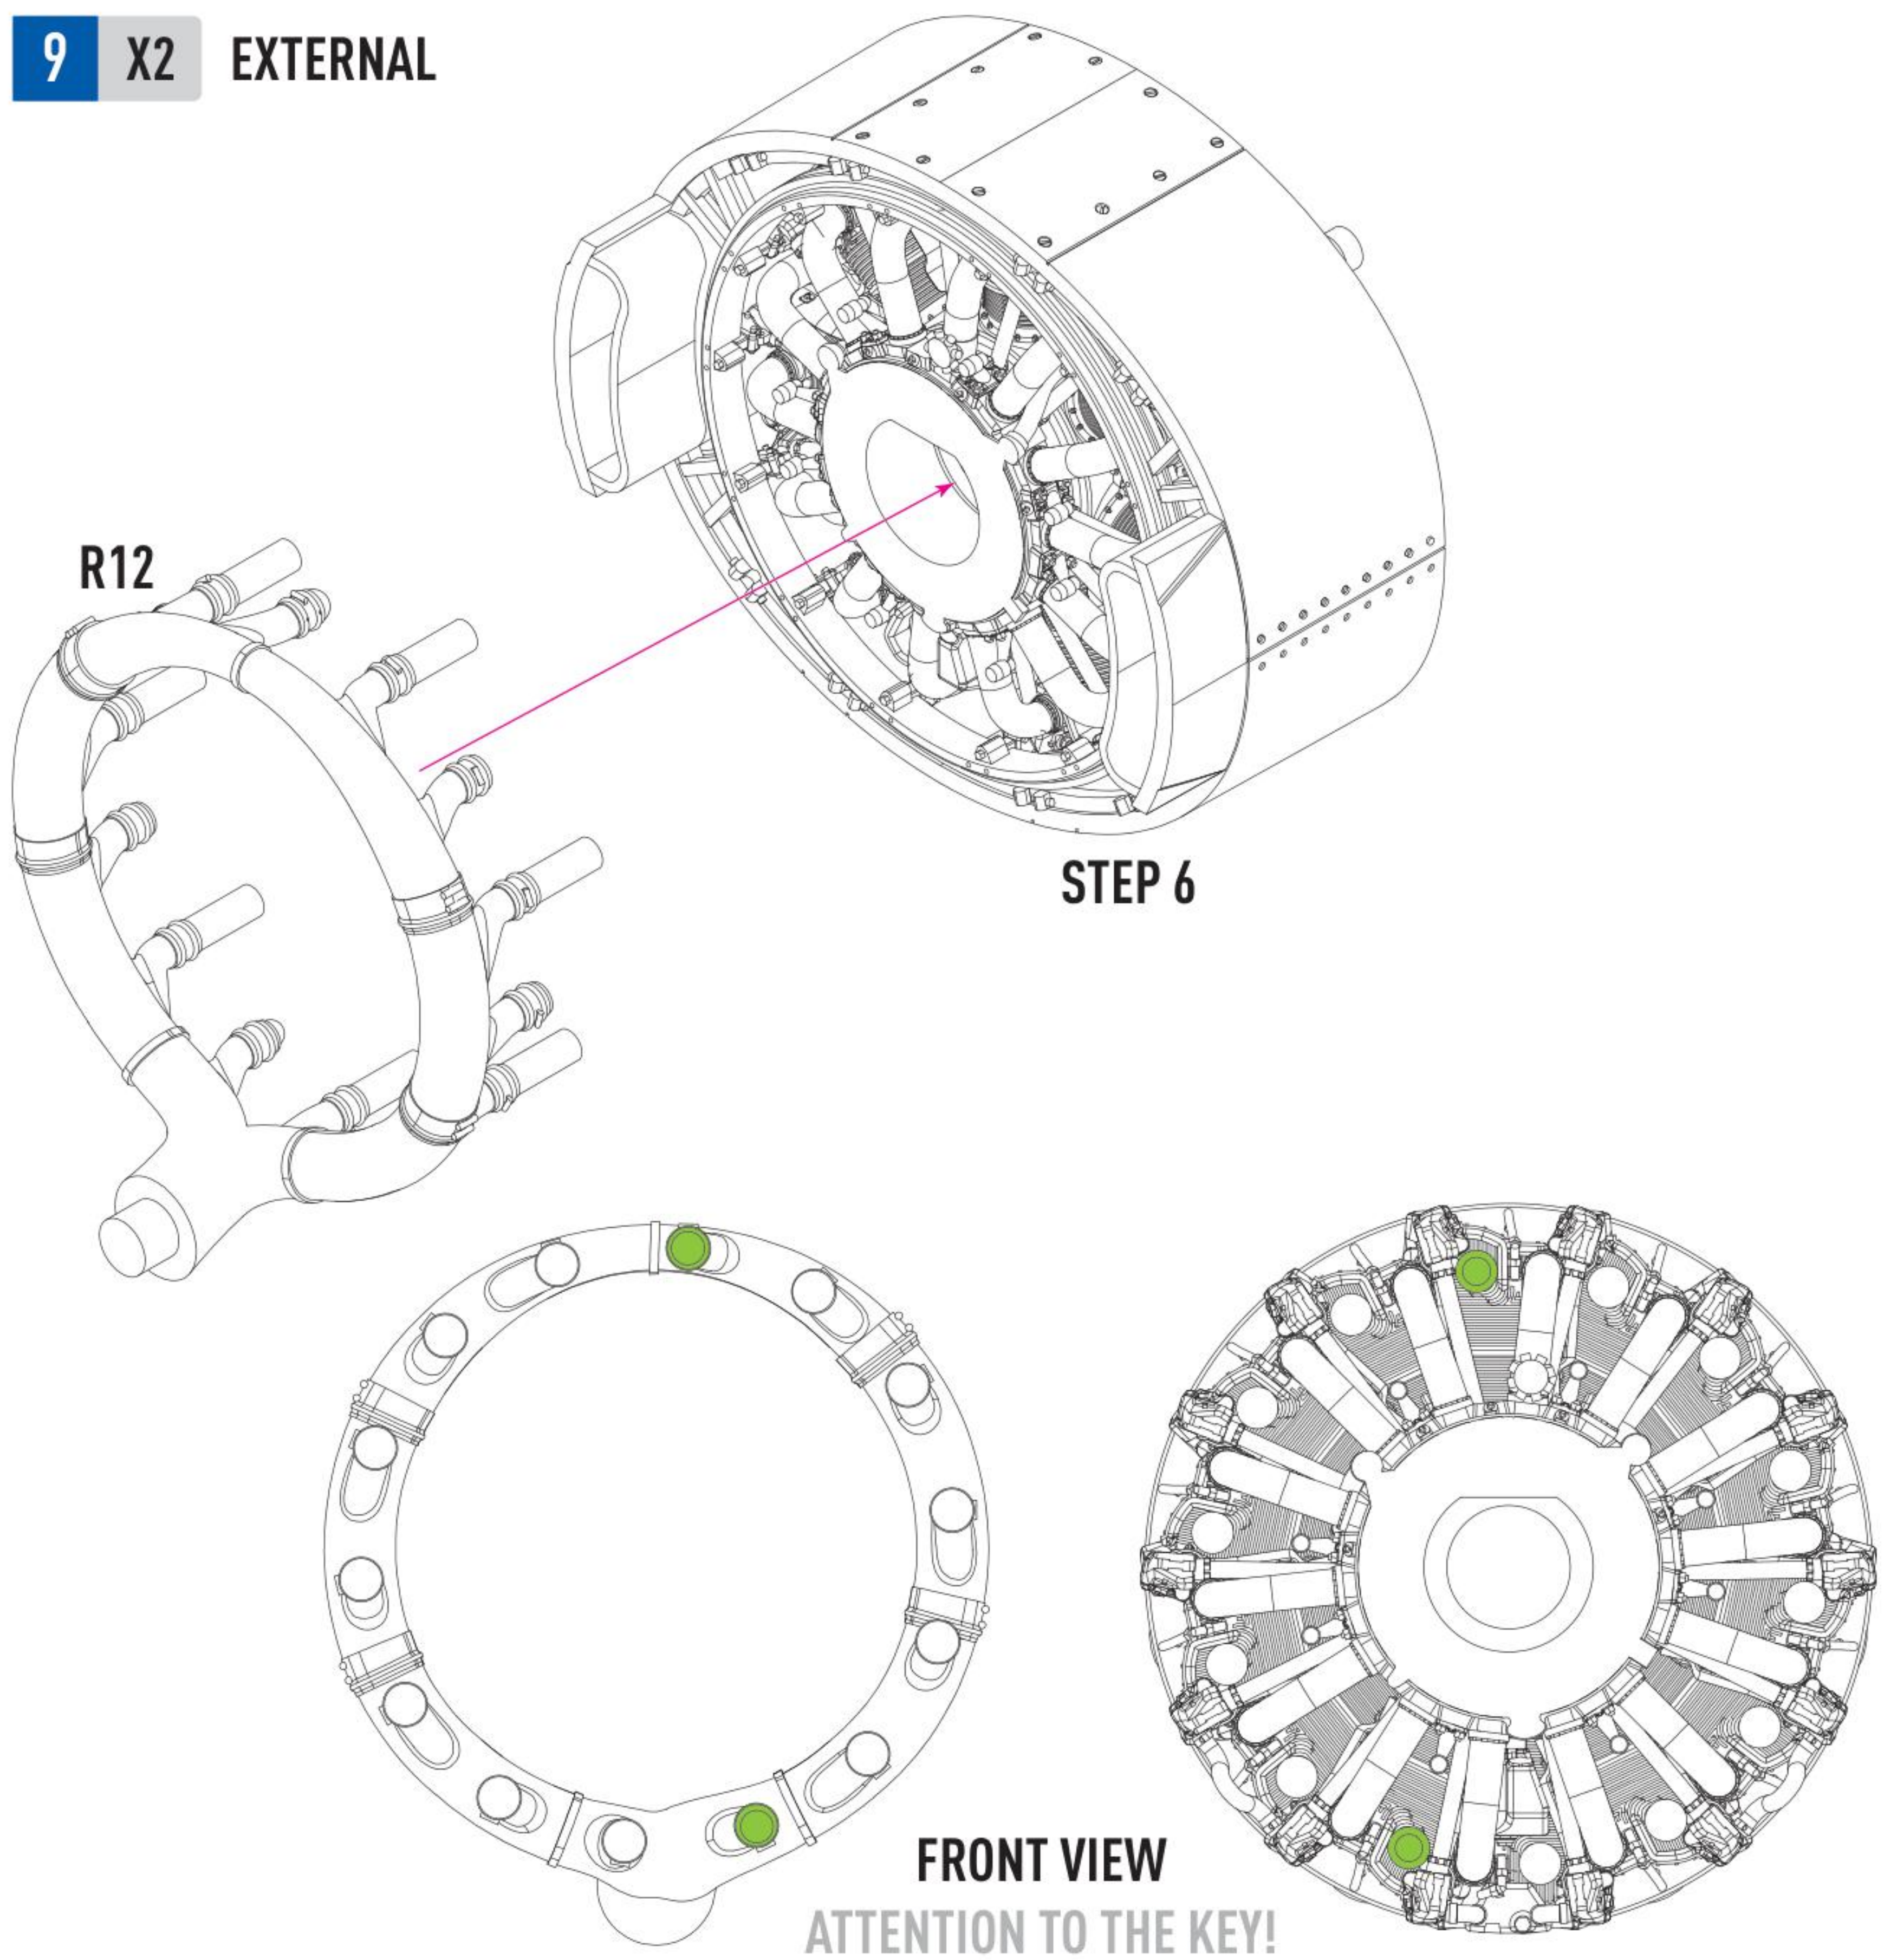

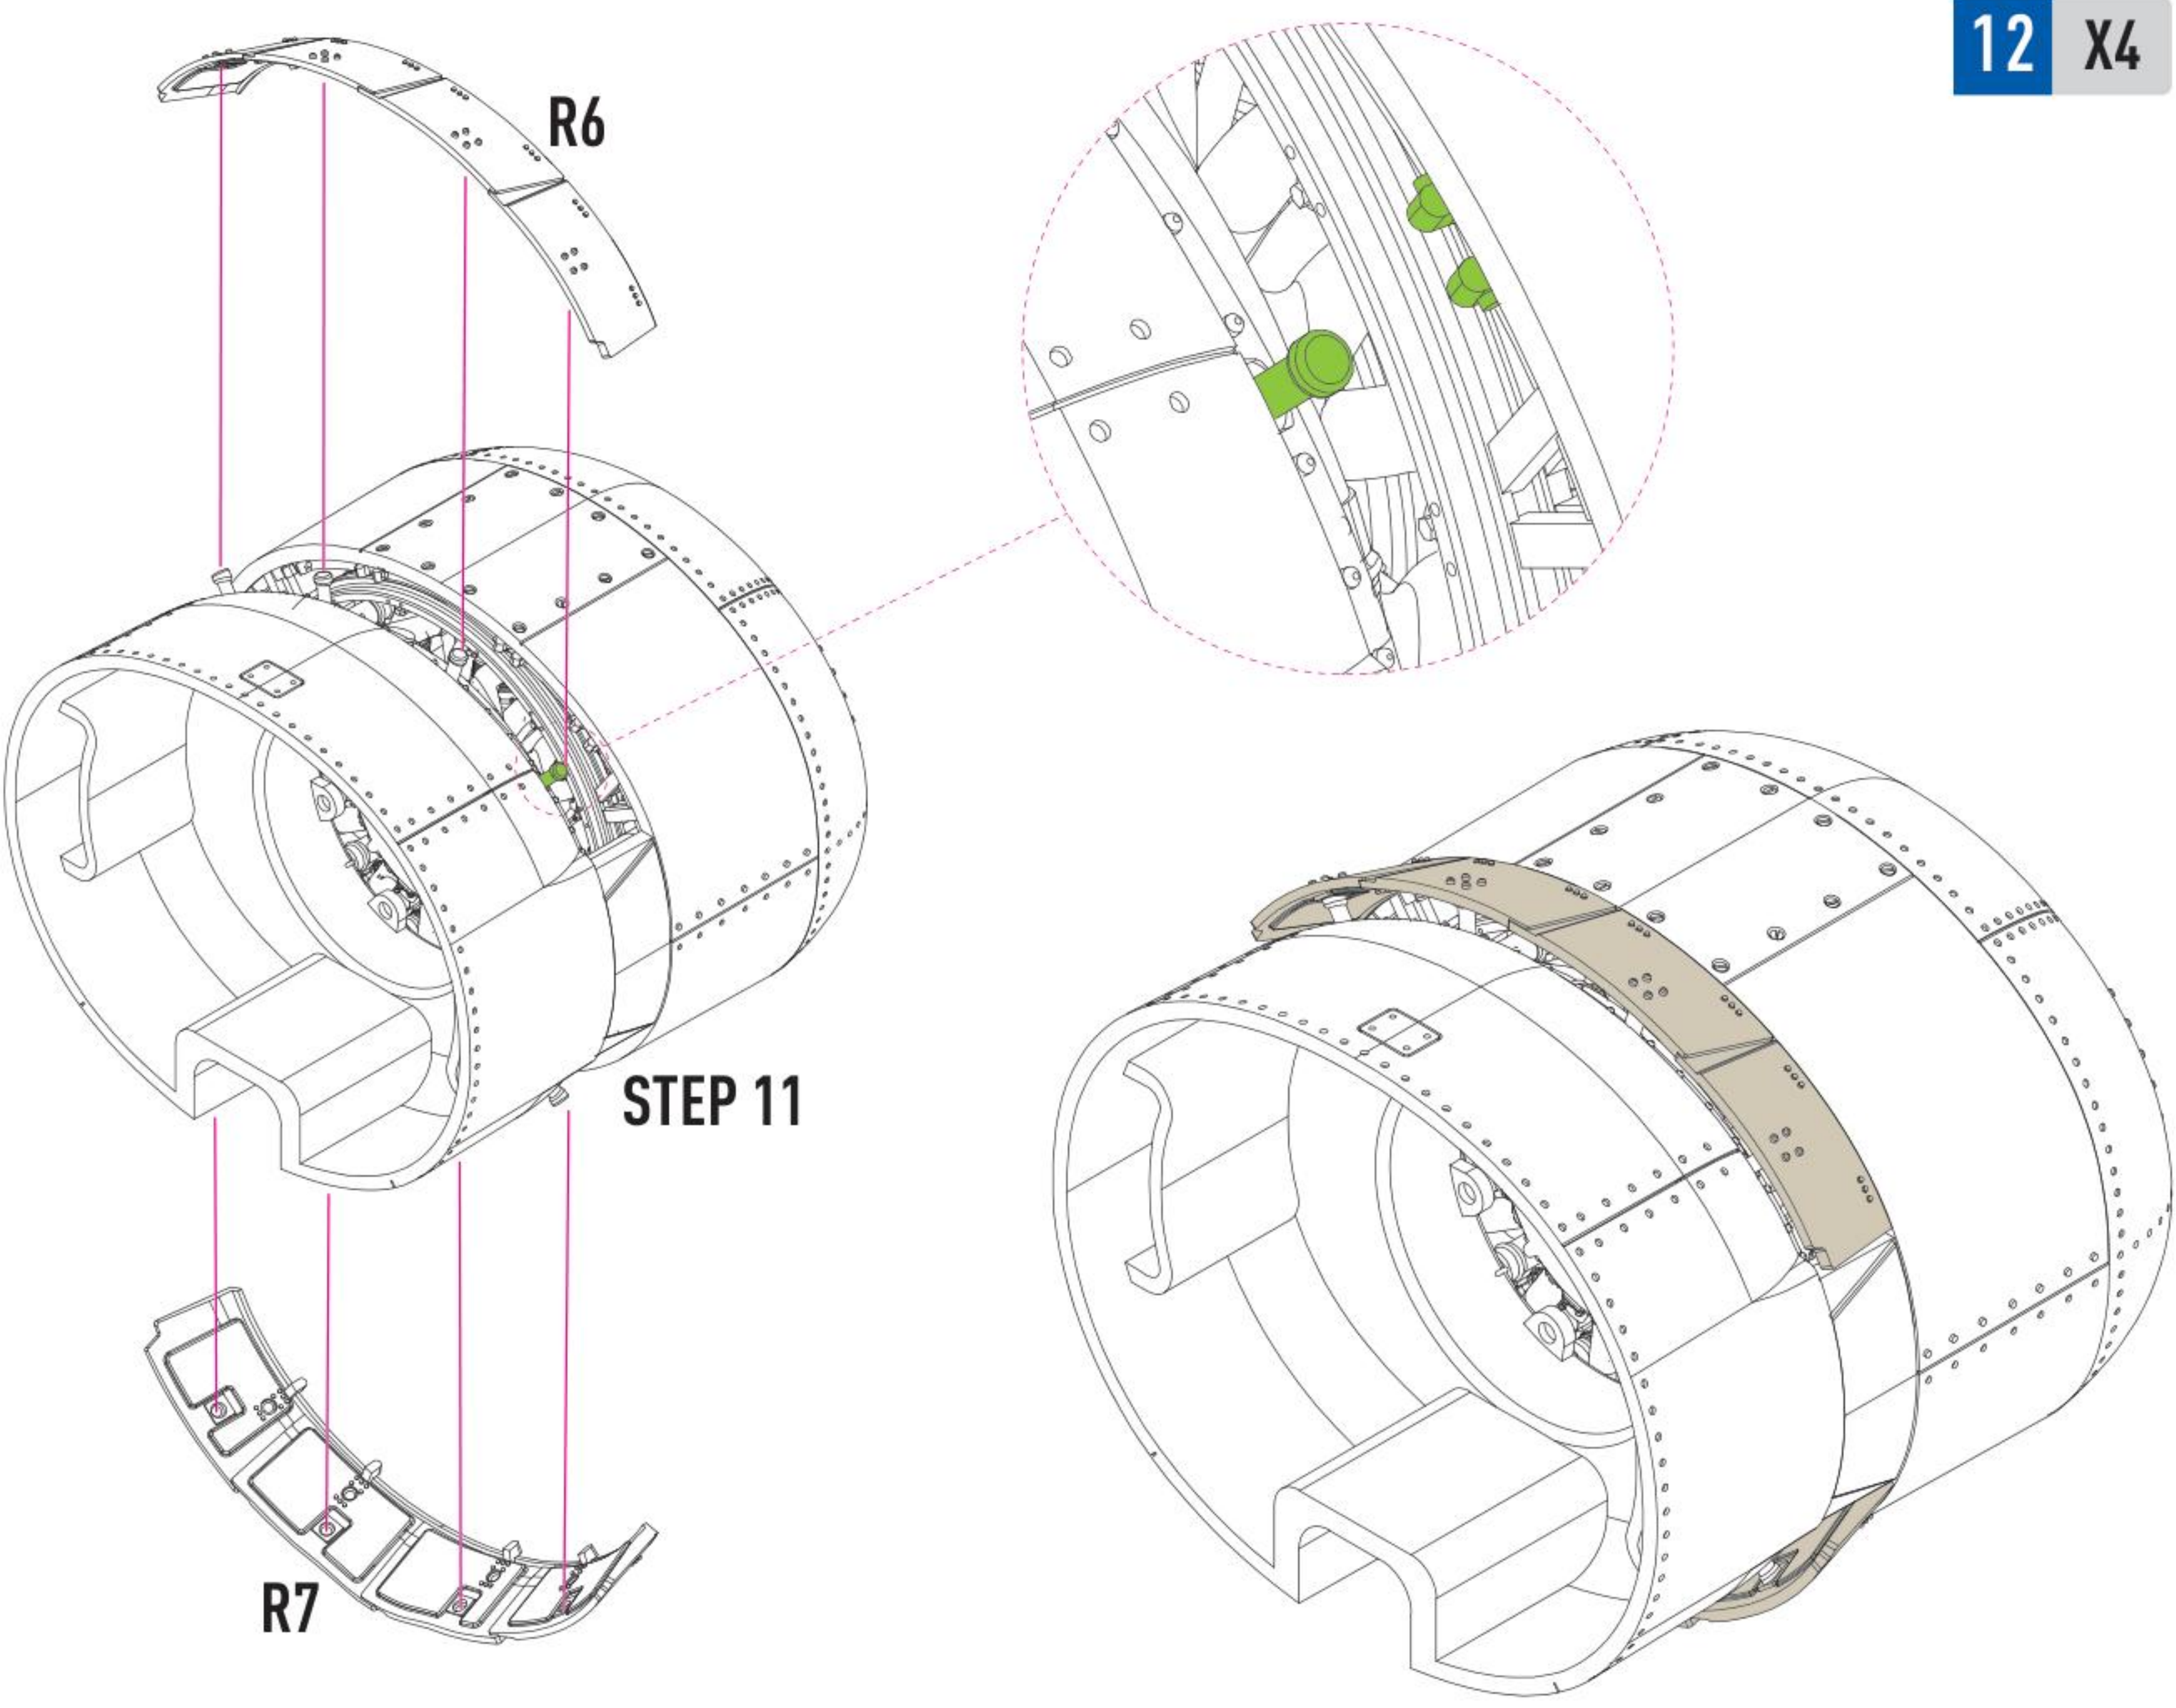
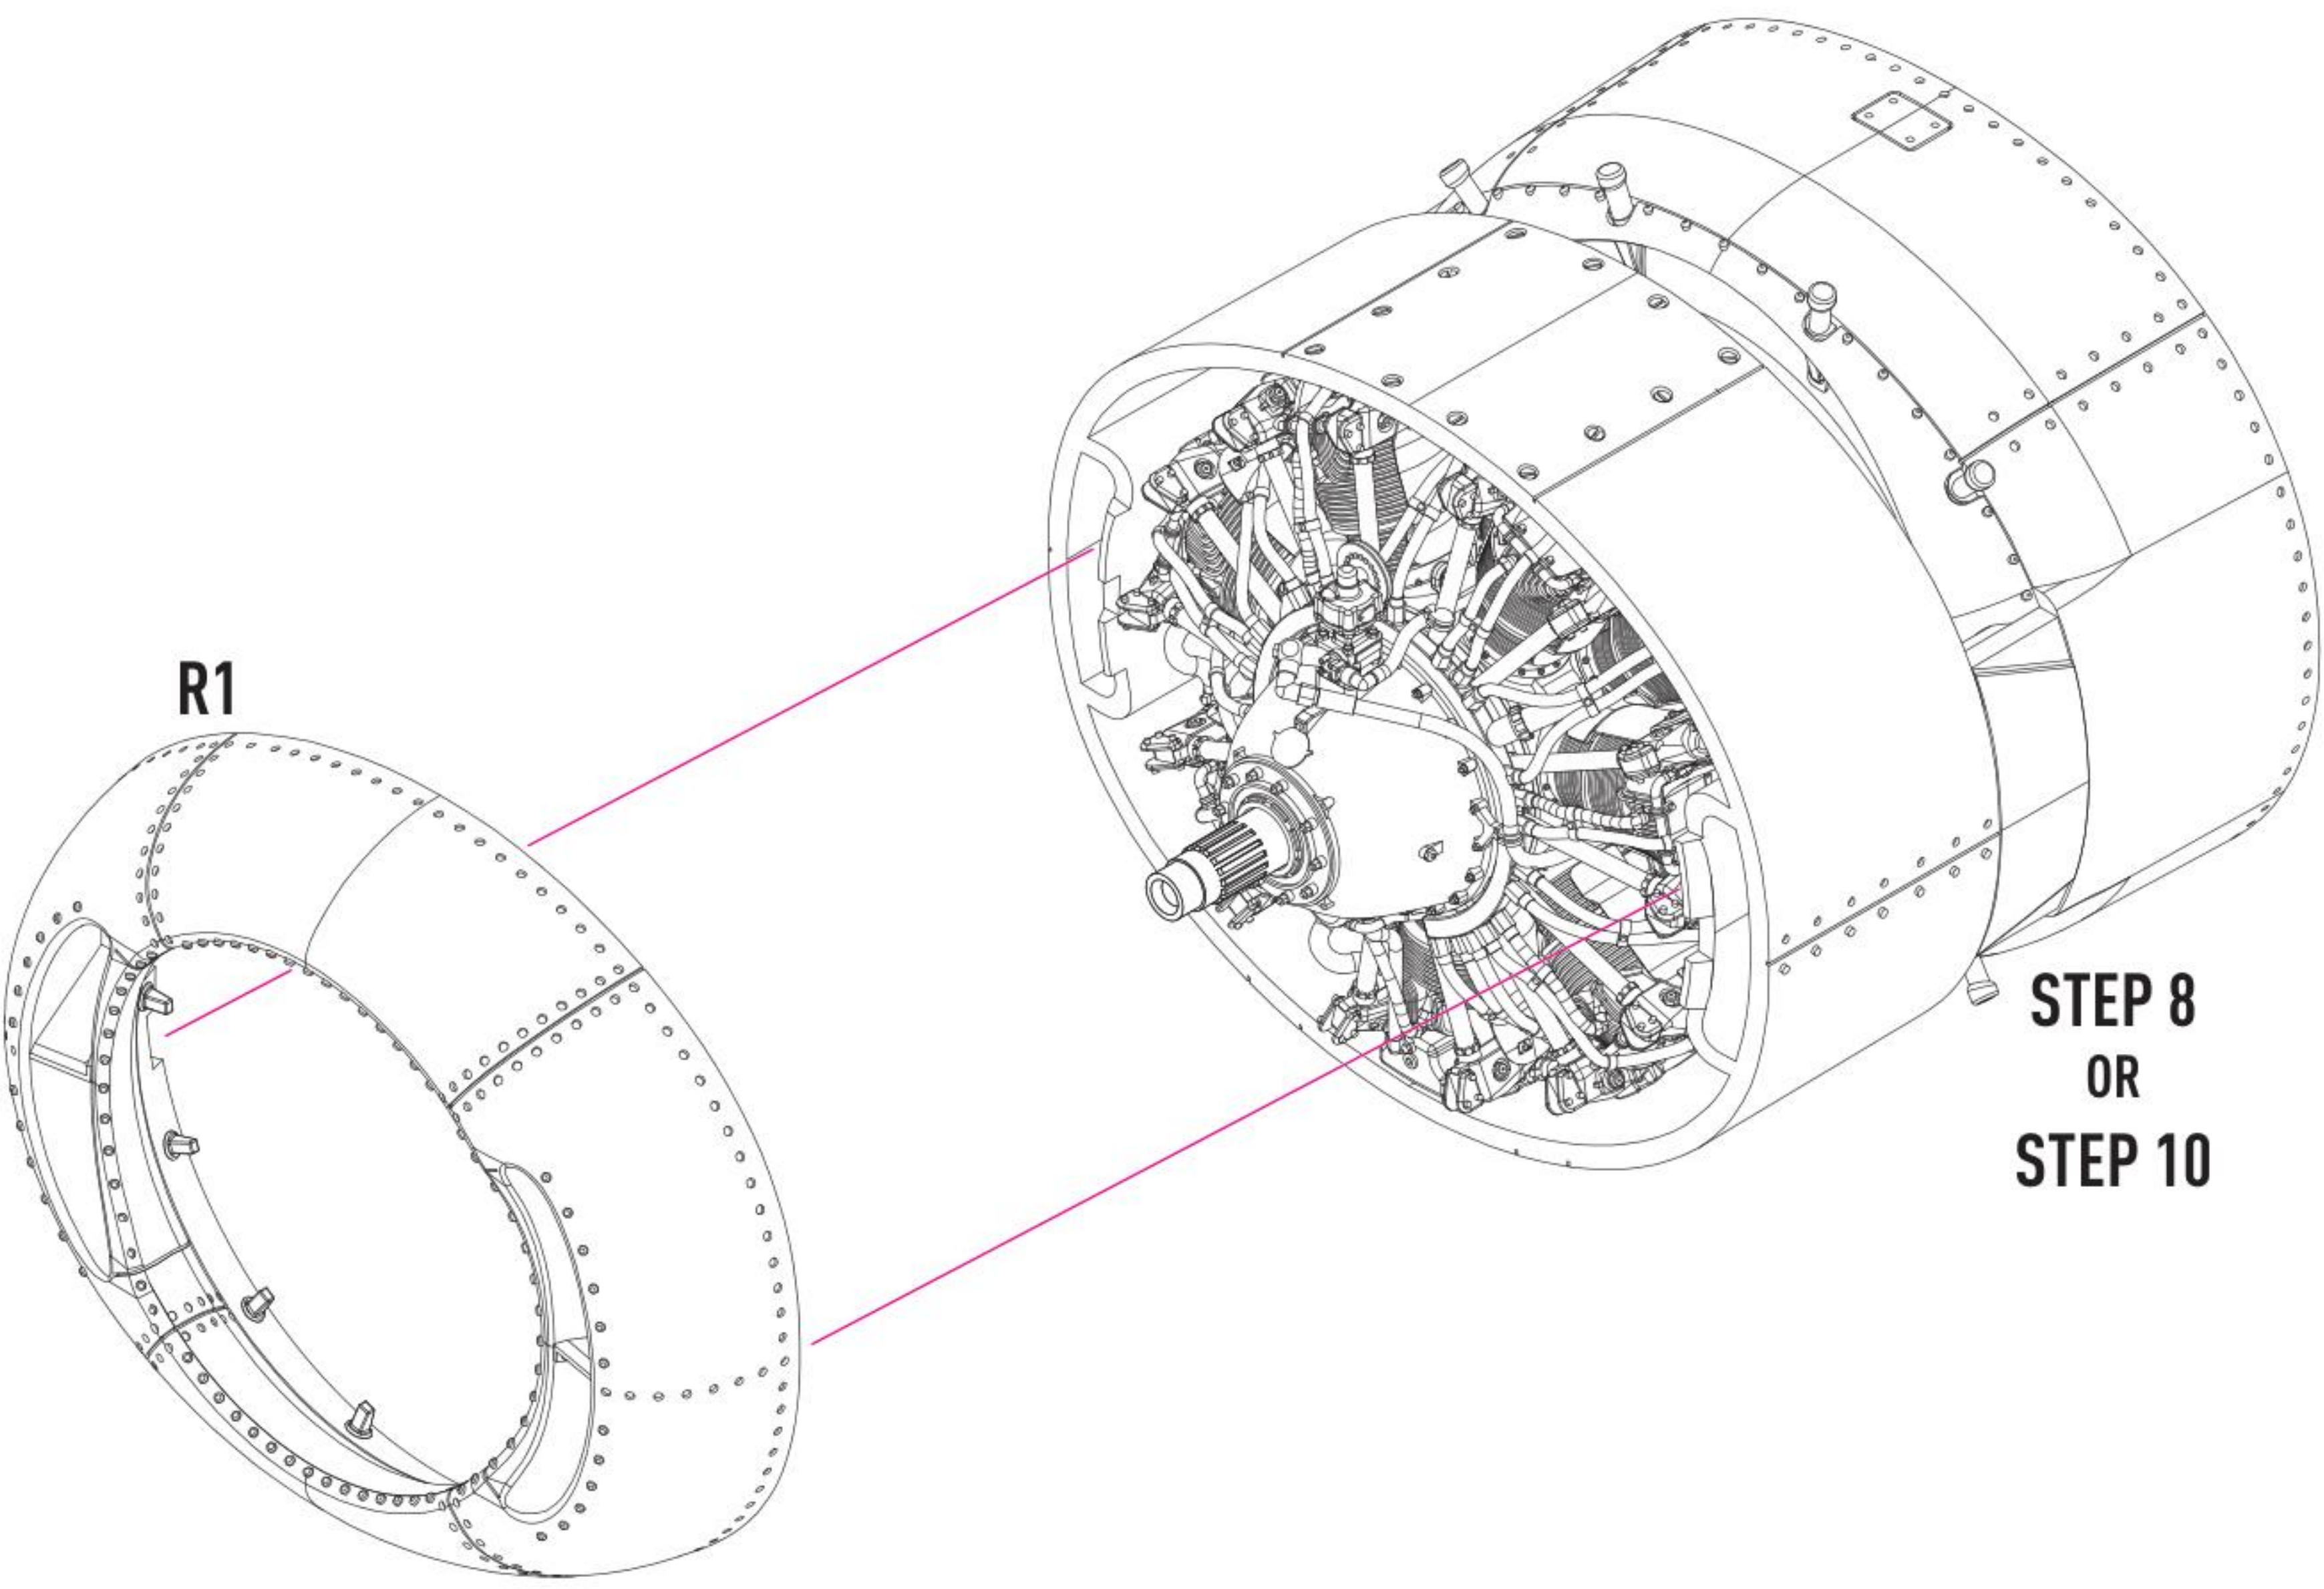


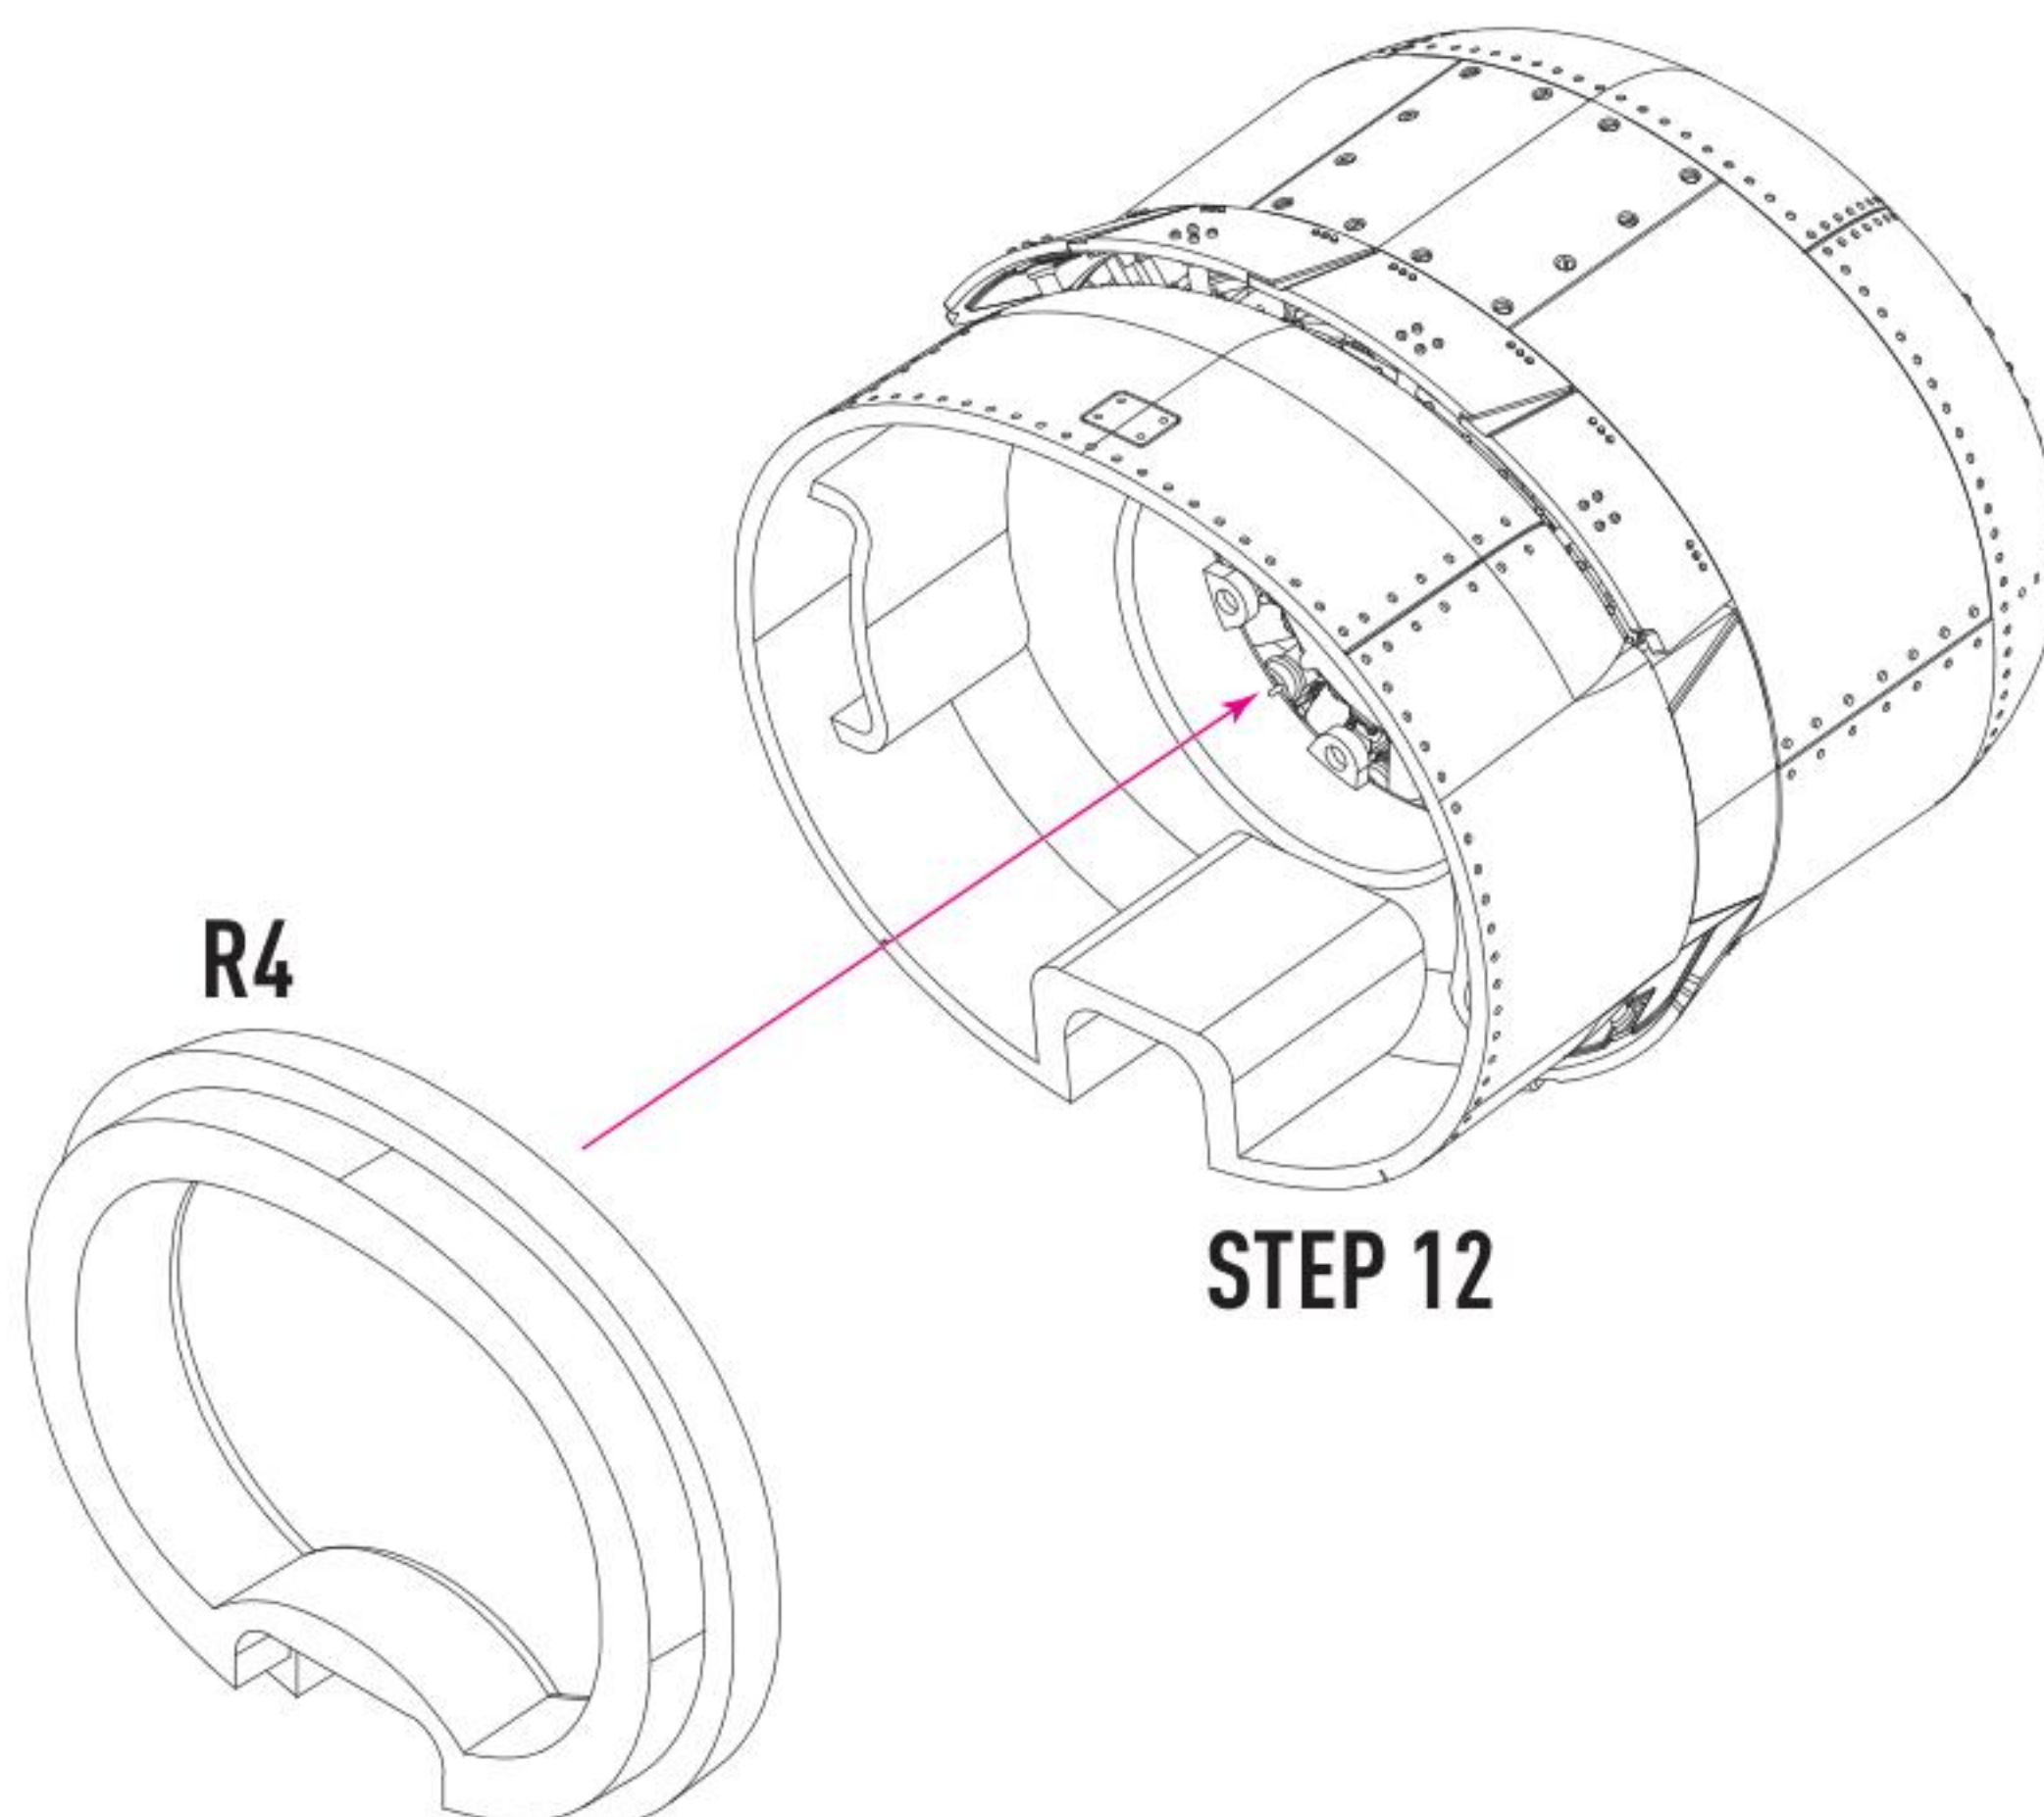


14 X2 VARIANT 2
(OPEN)

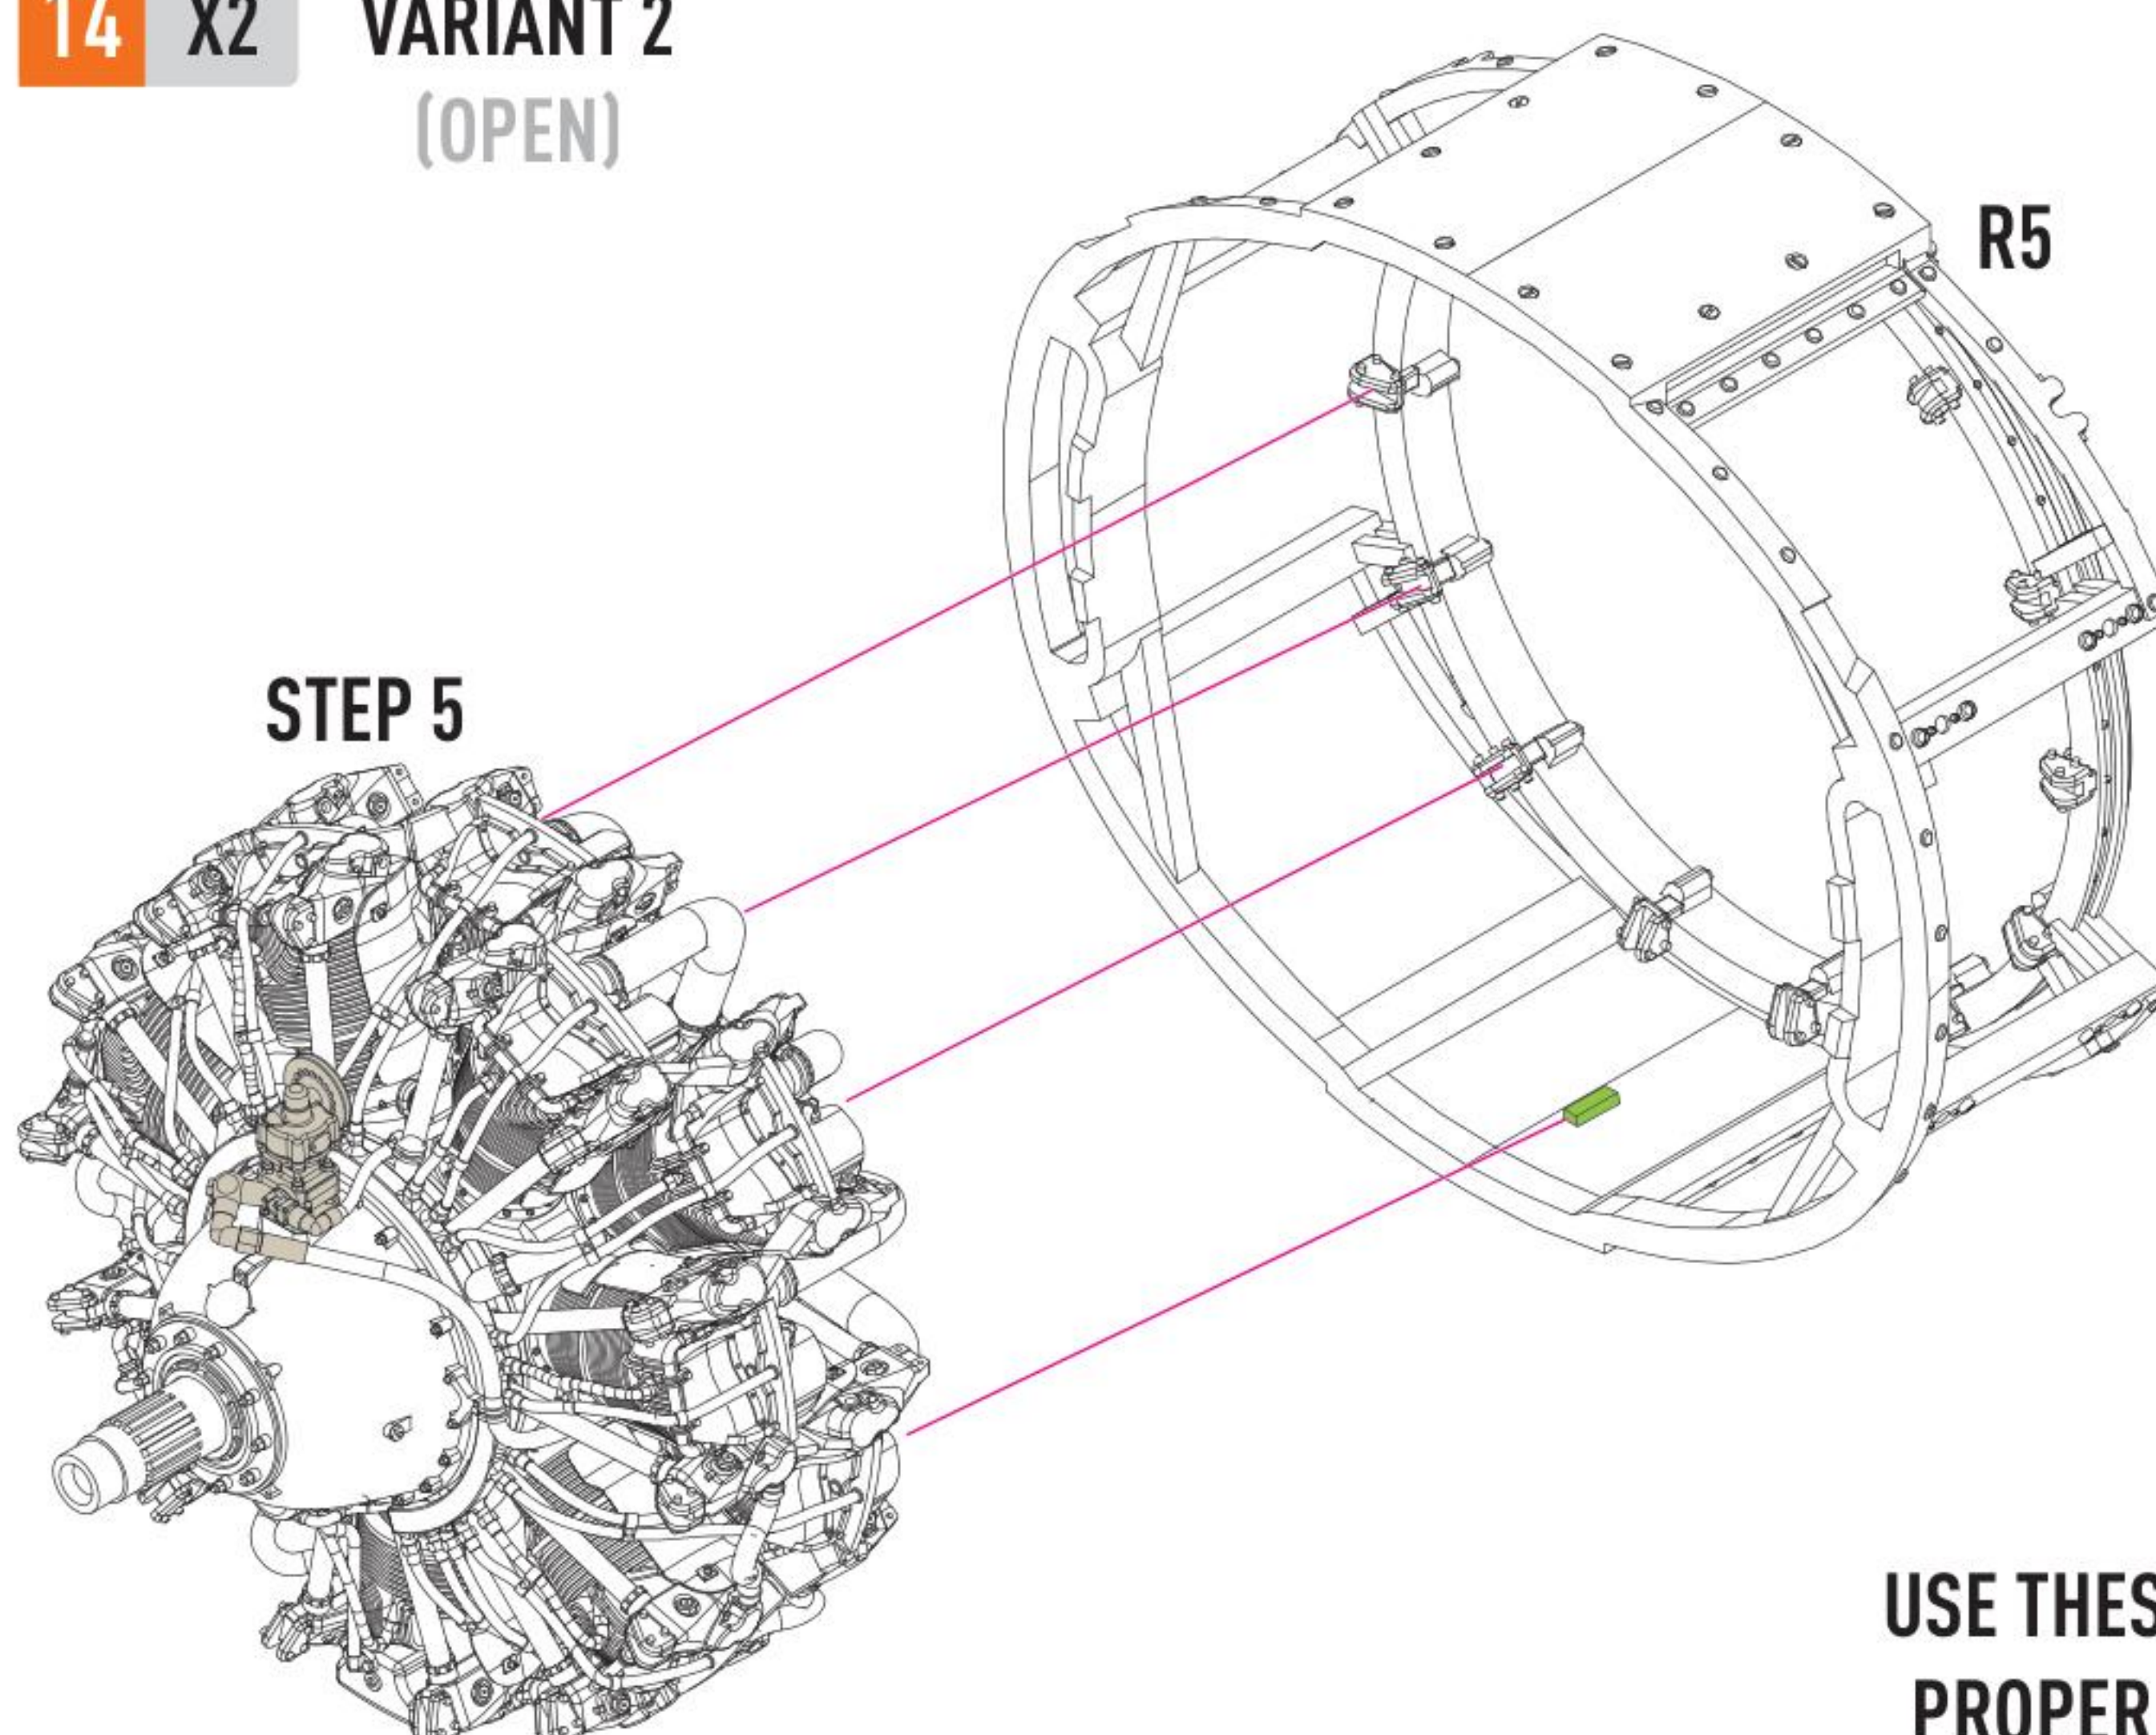


USE THESE ELEMENTS FOR
PROPER ENGINE FITTING

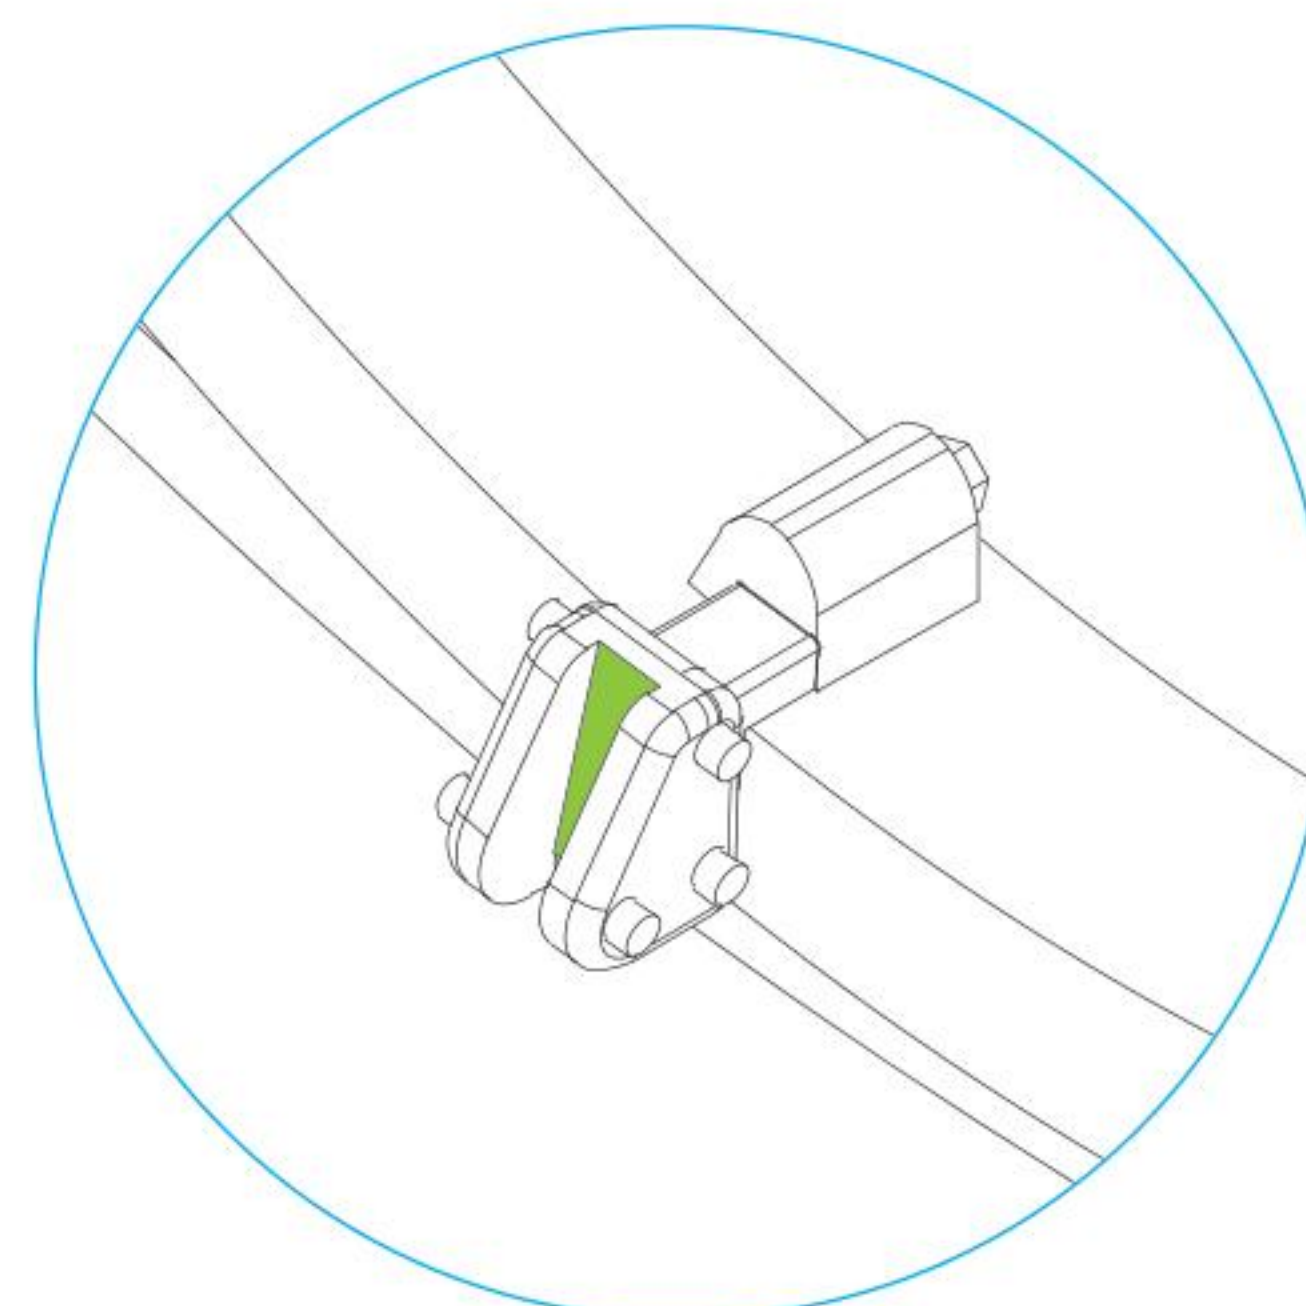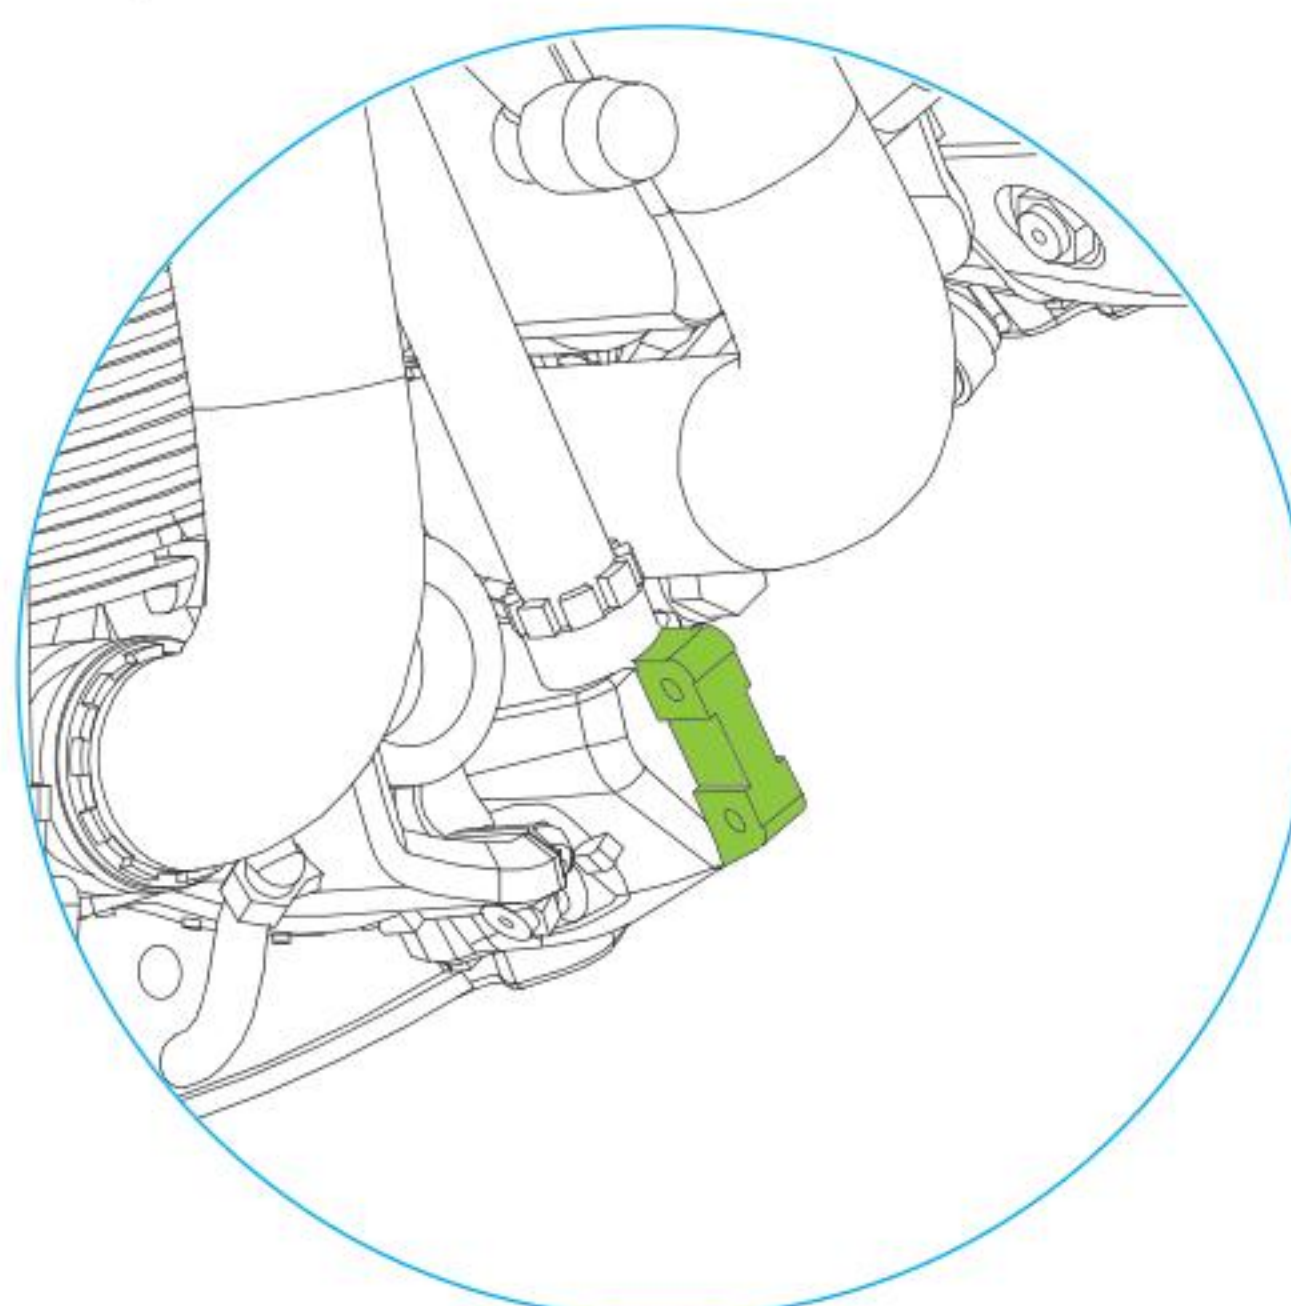


15 X2 OPTIONAL

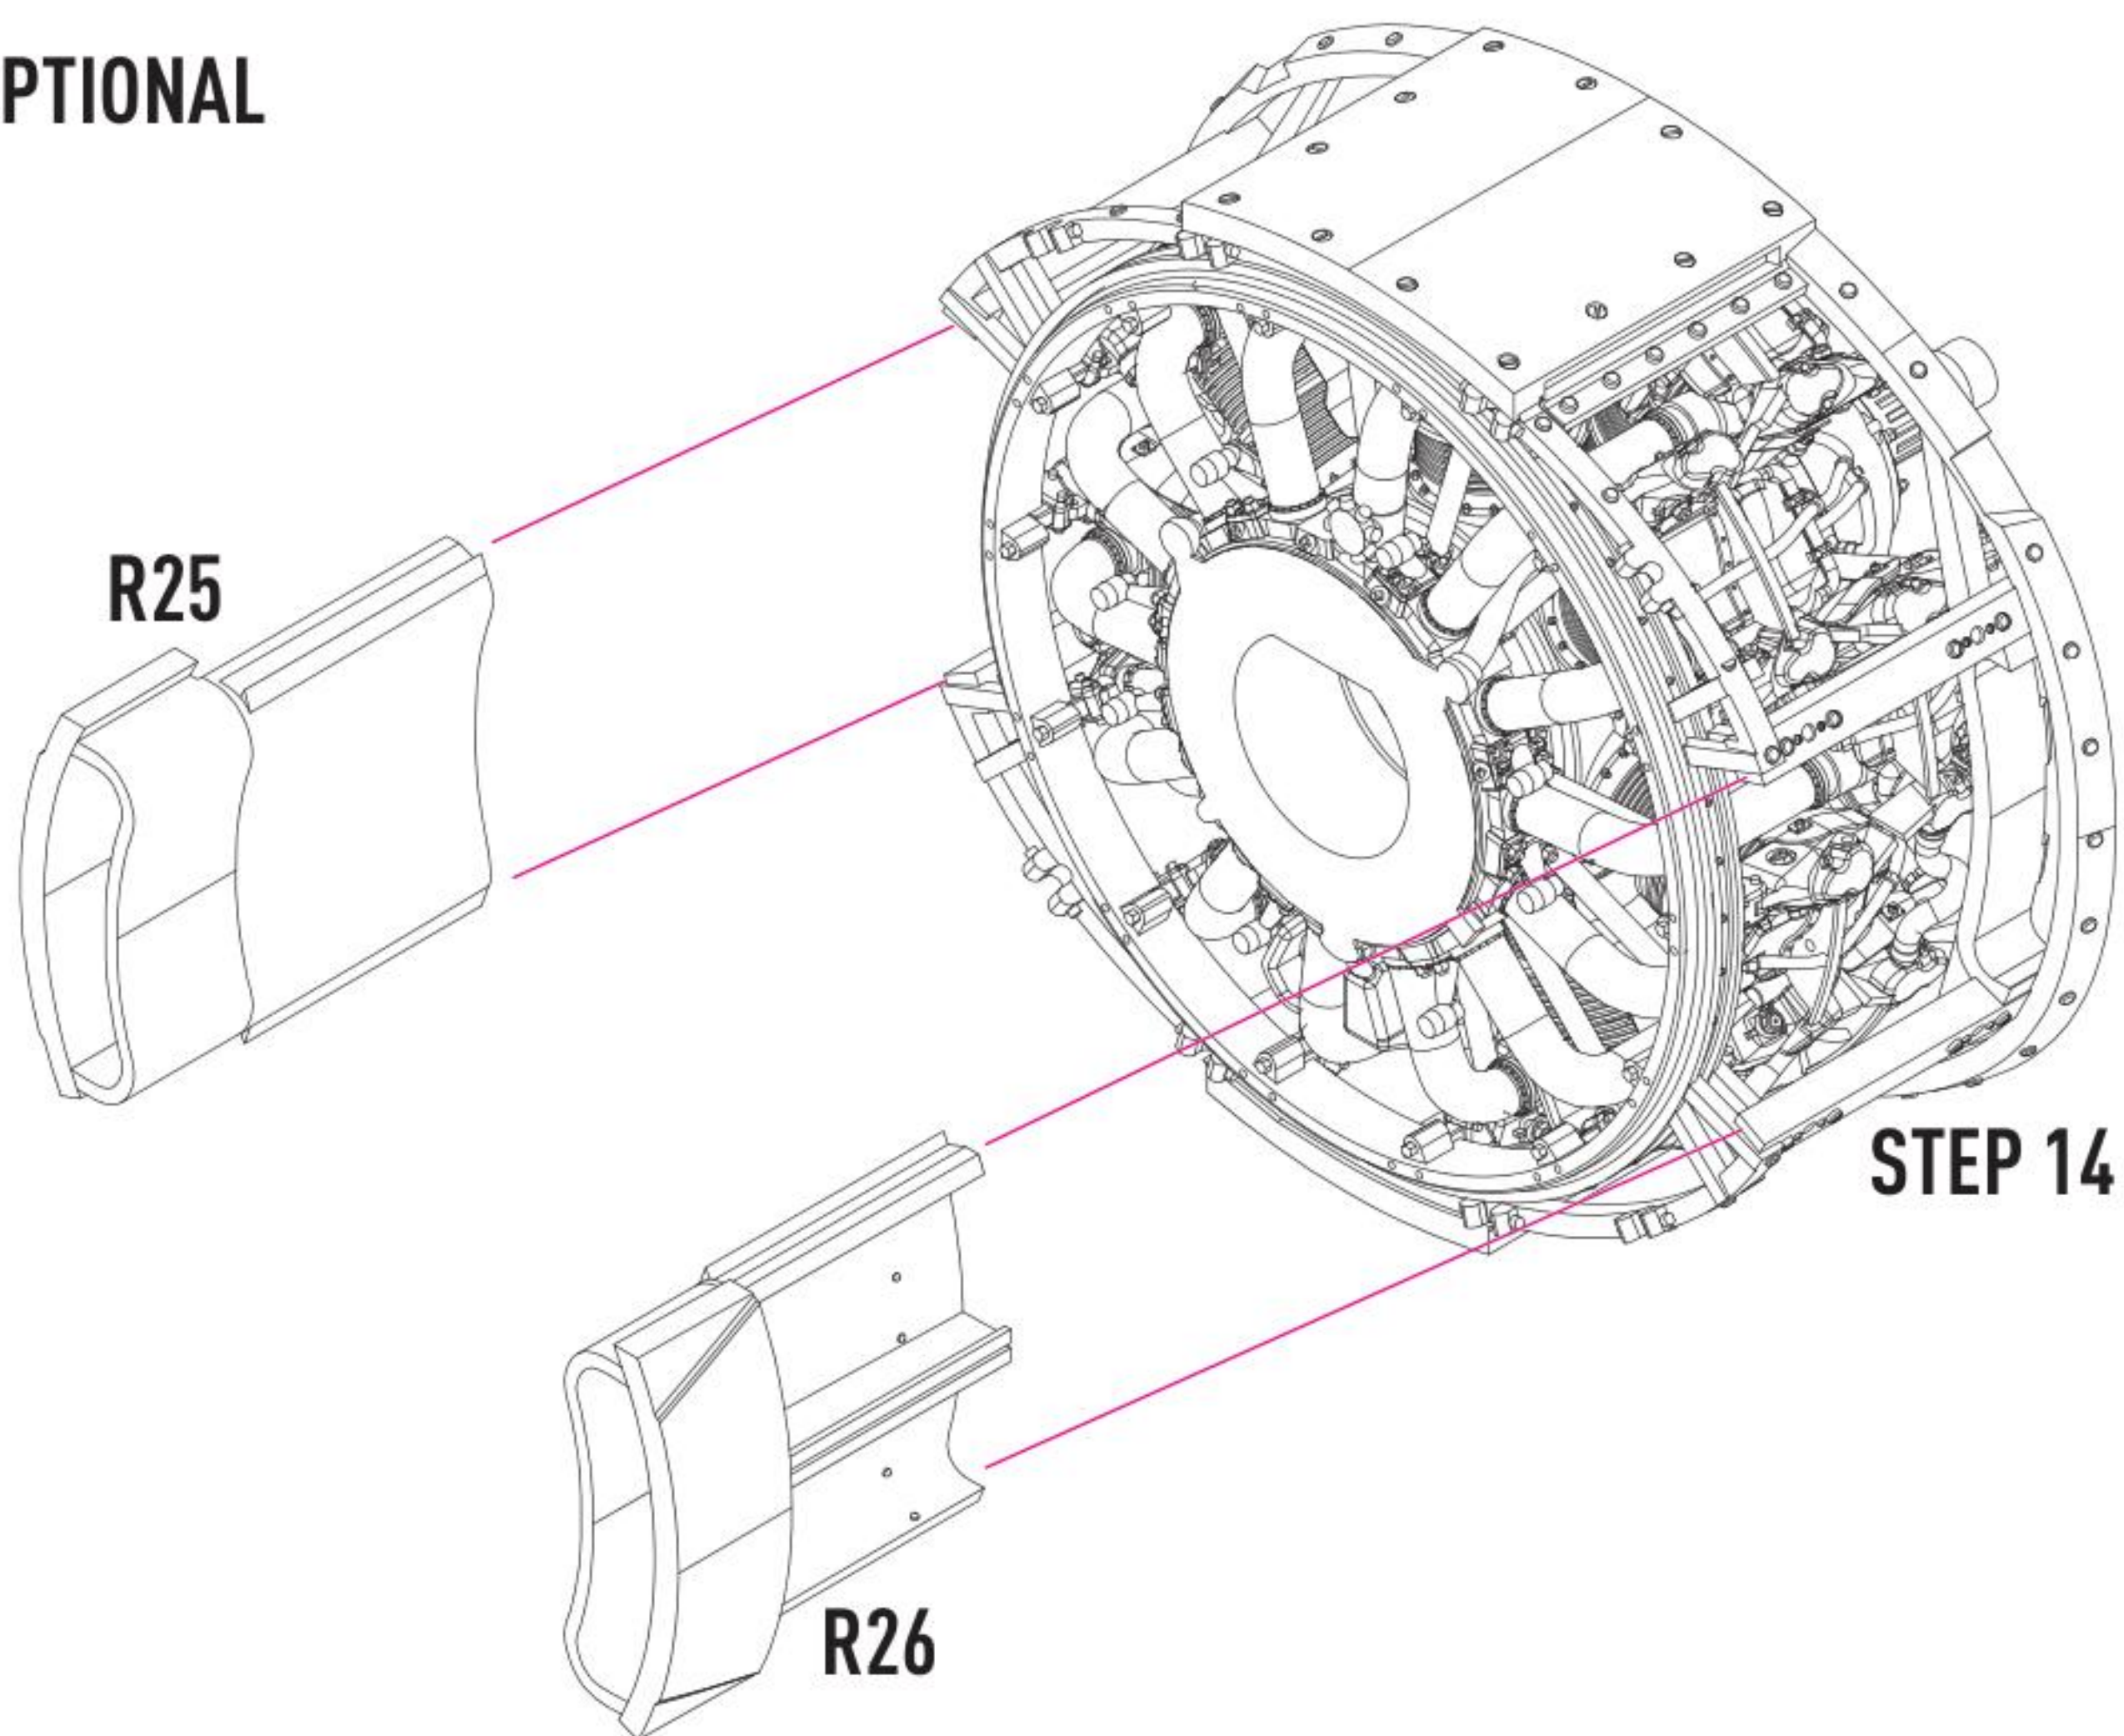


16 X2 OPTIONAL


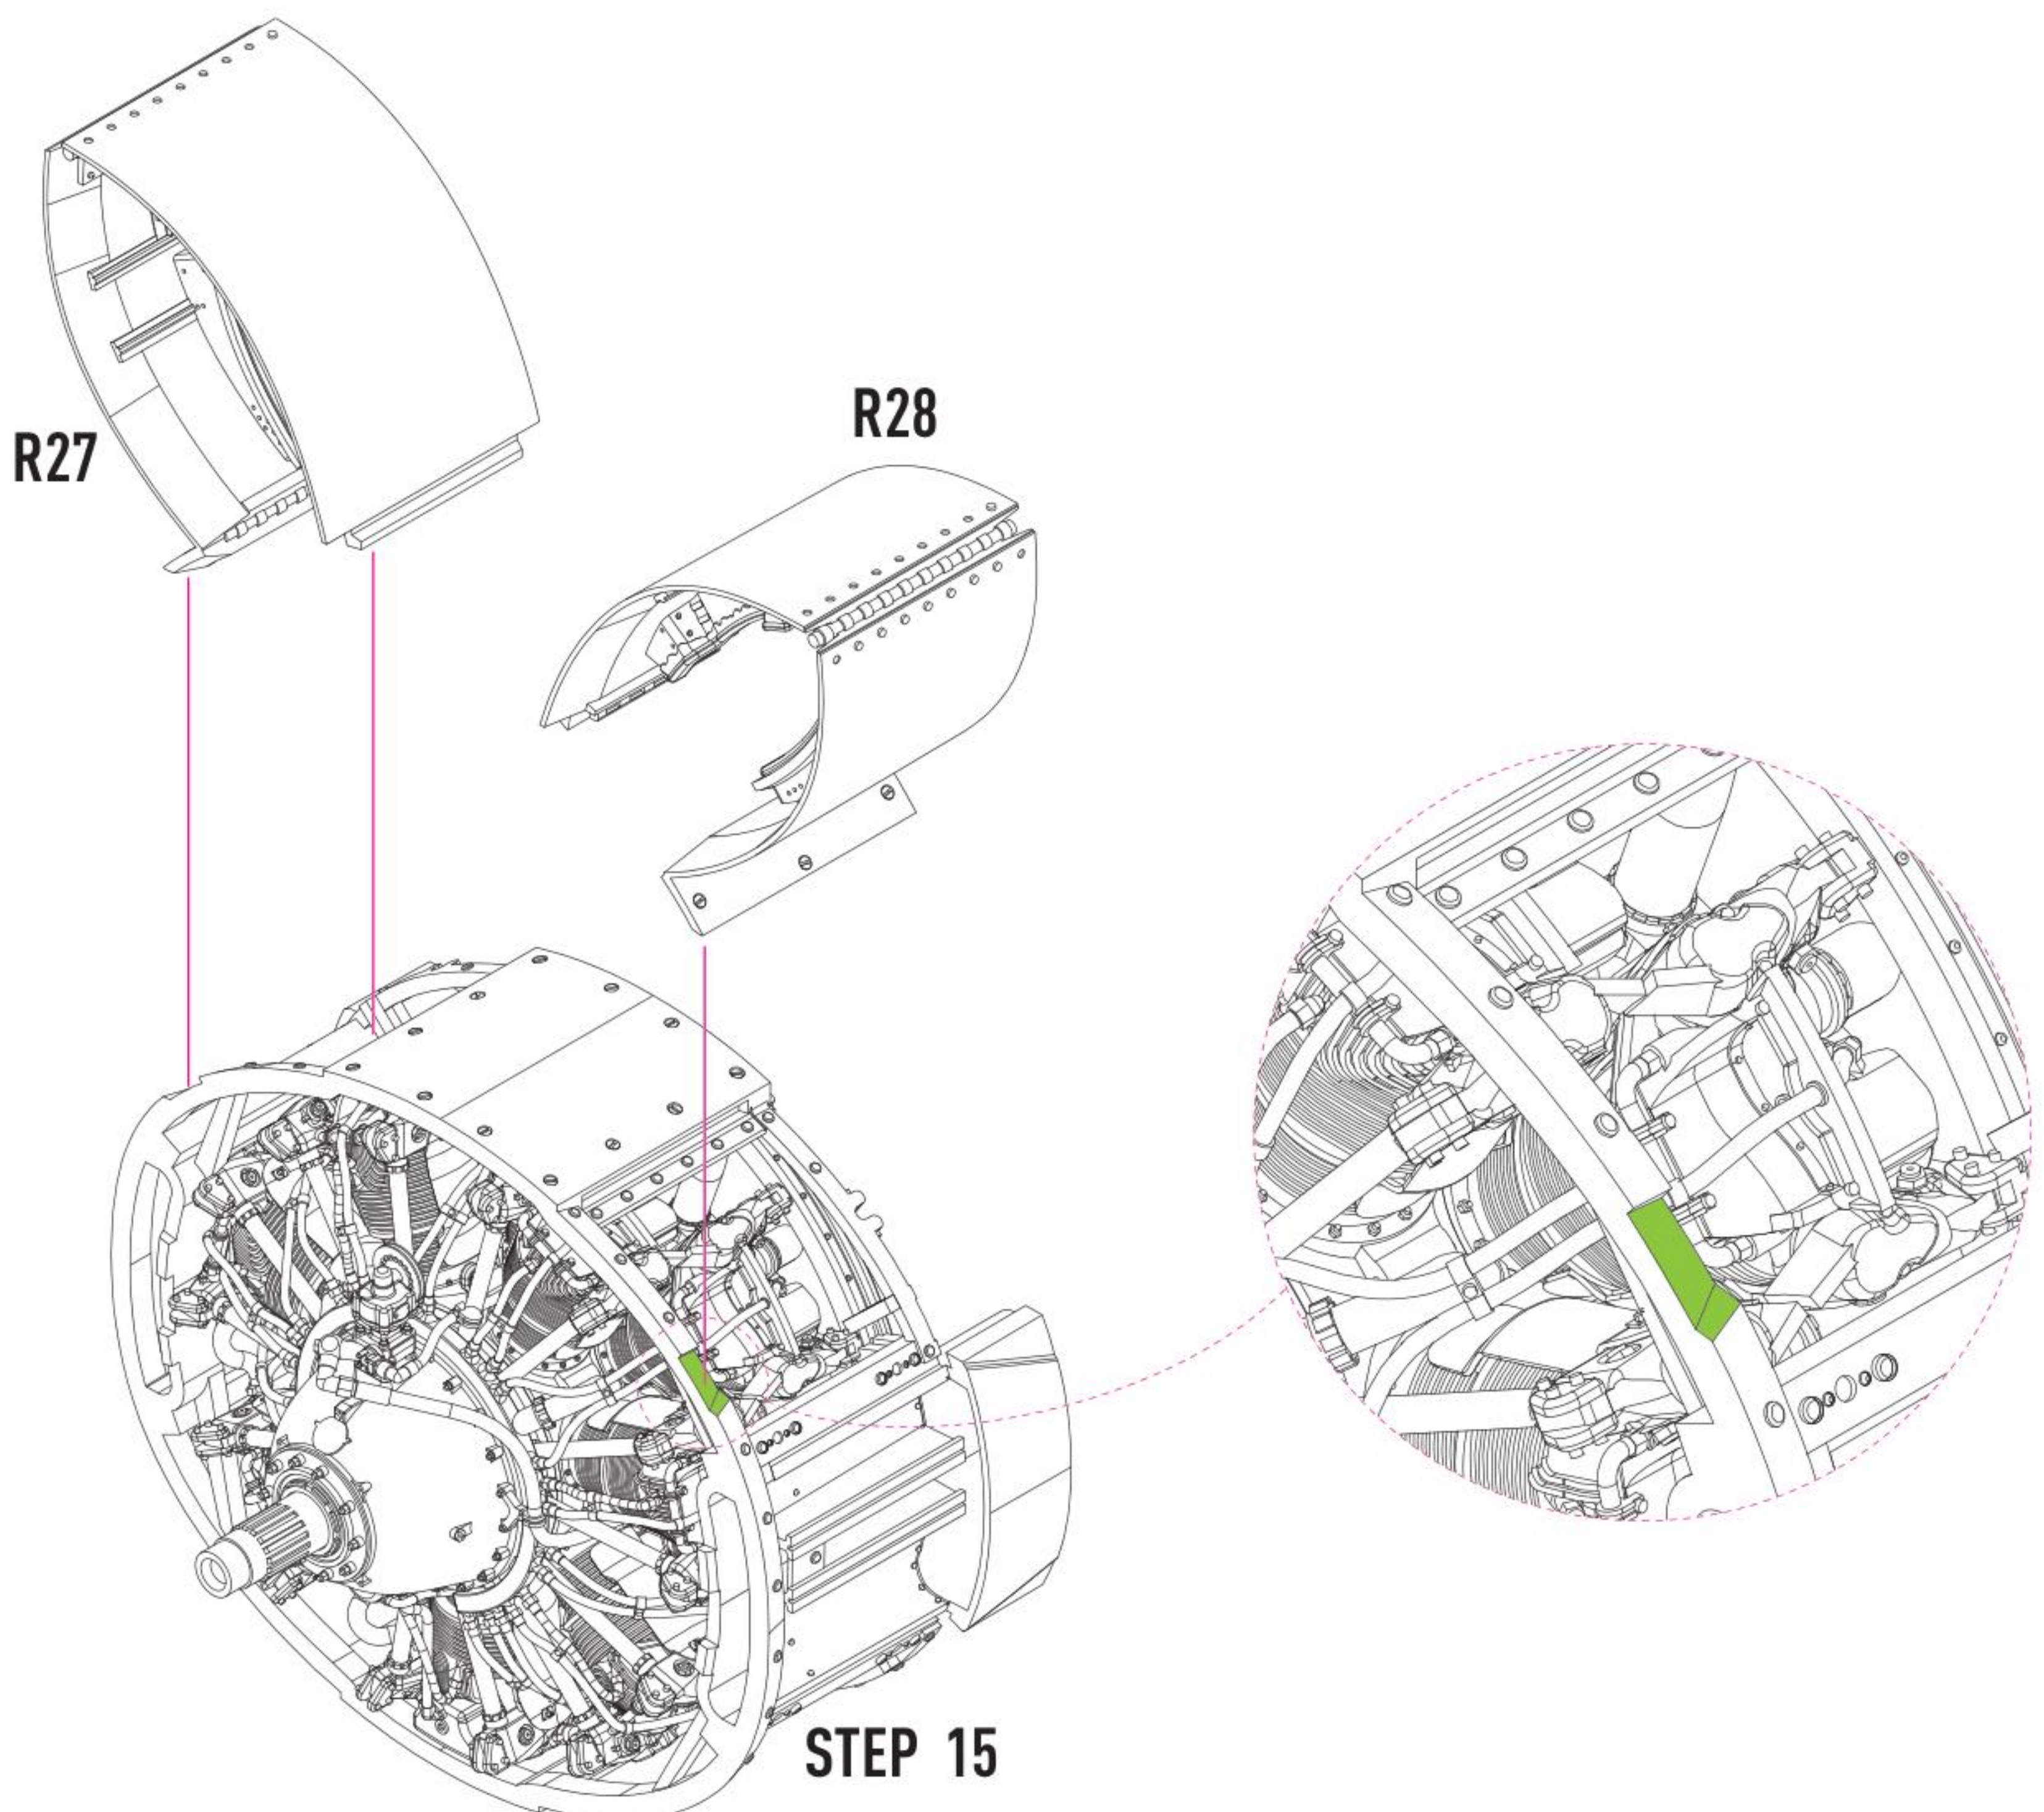




17 INTERNAL

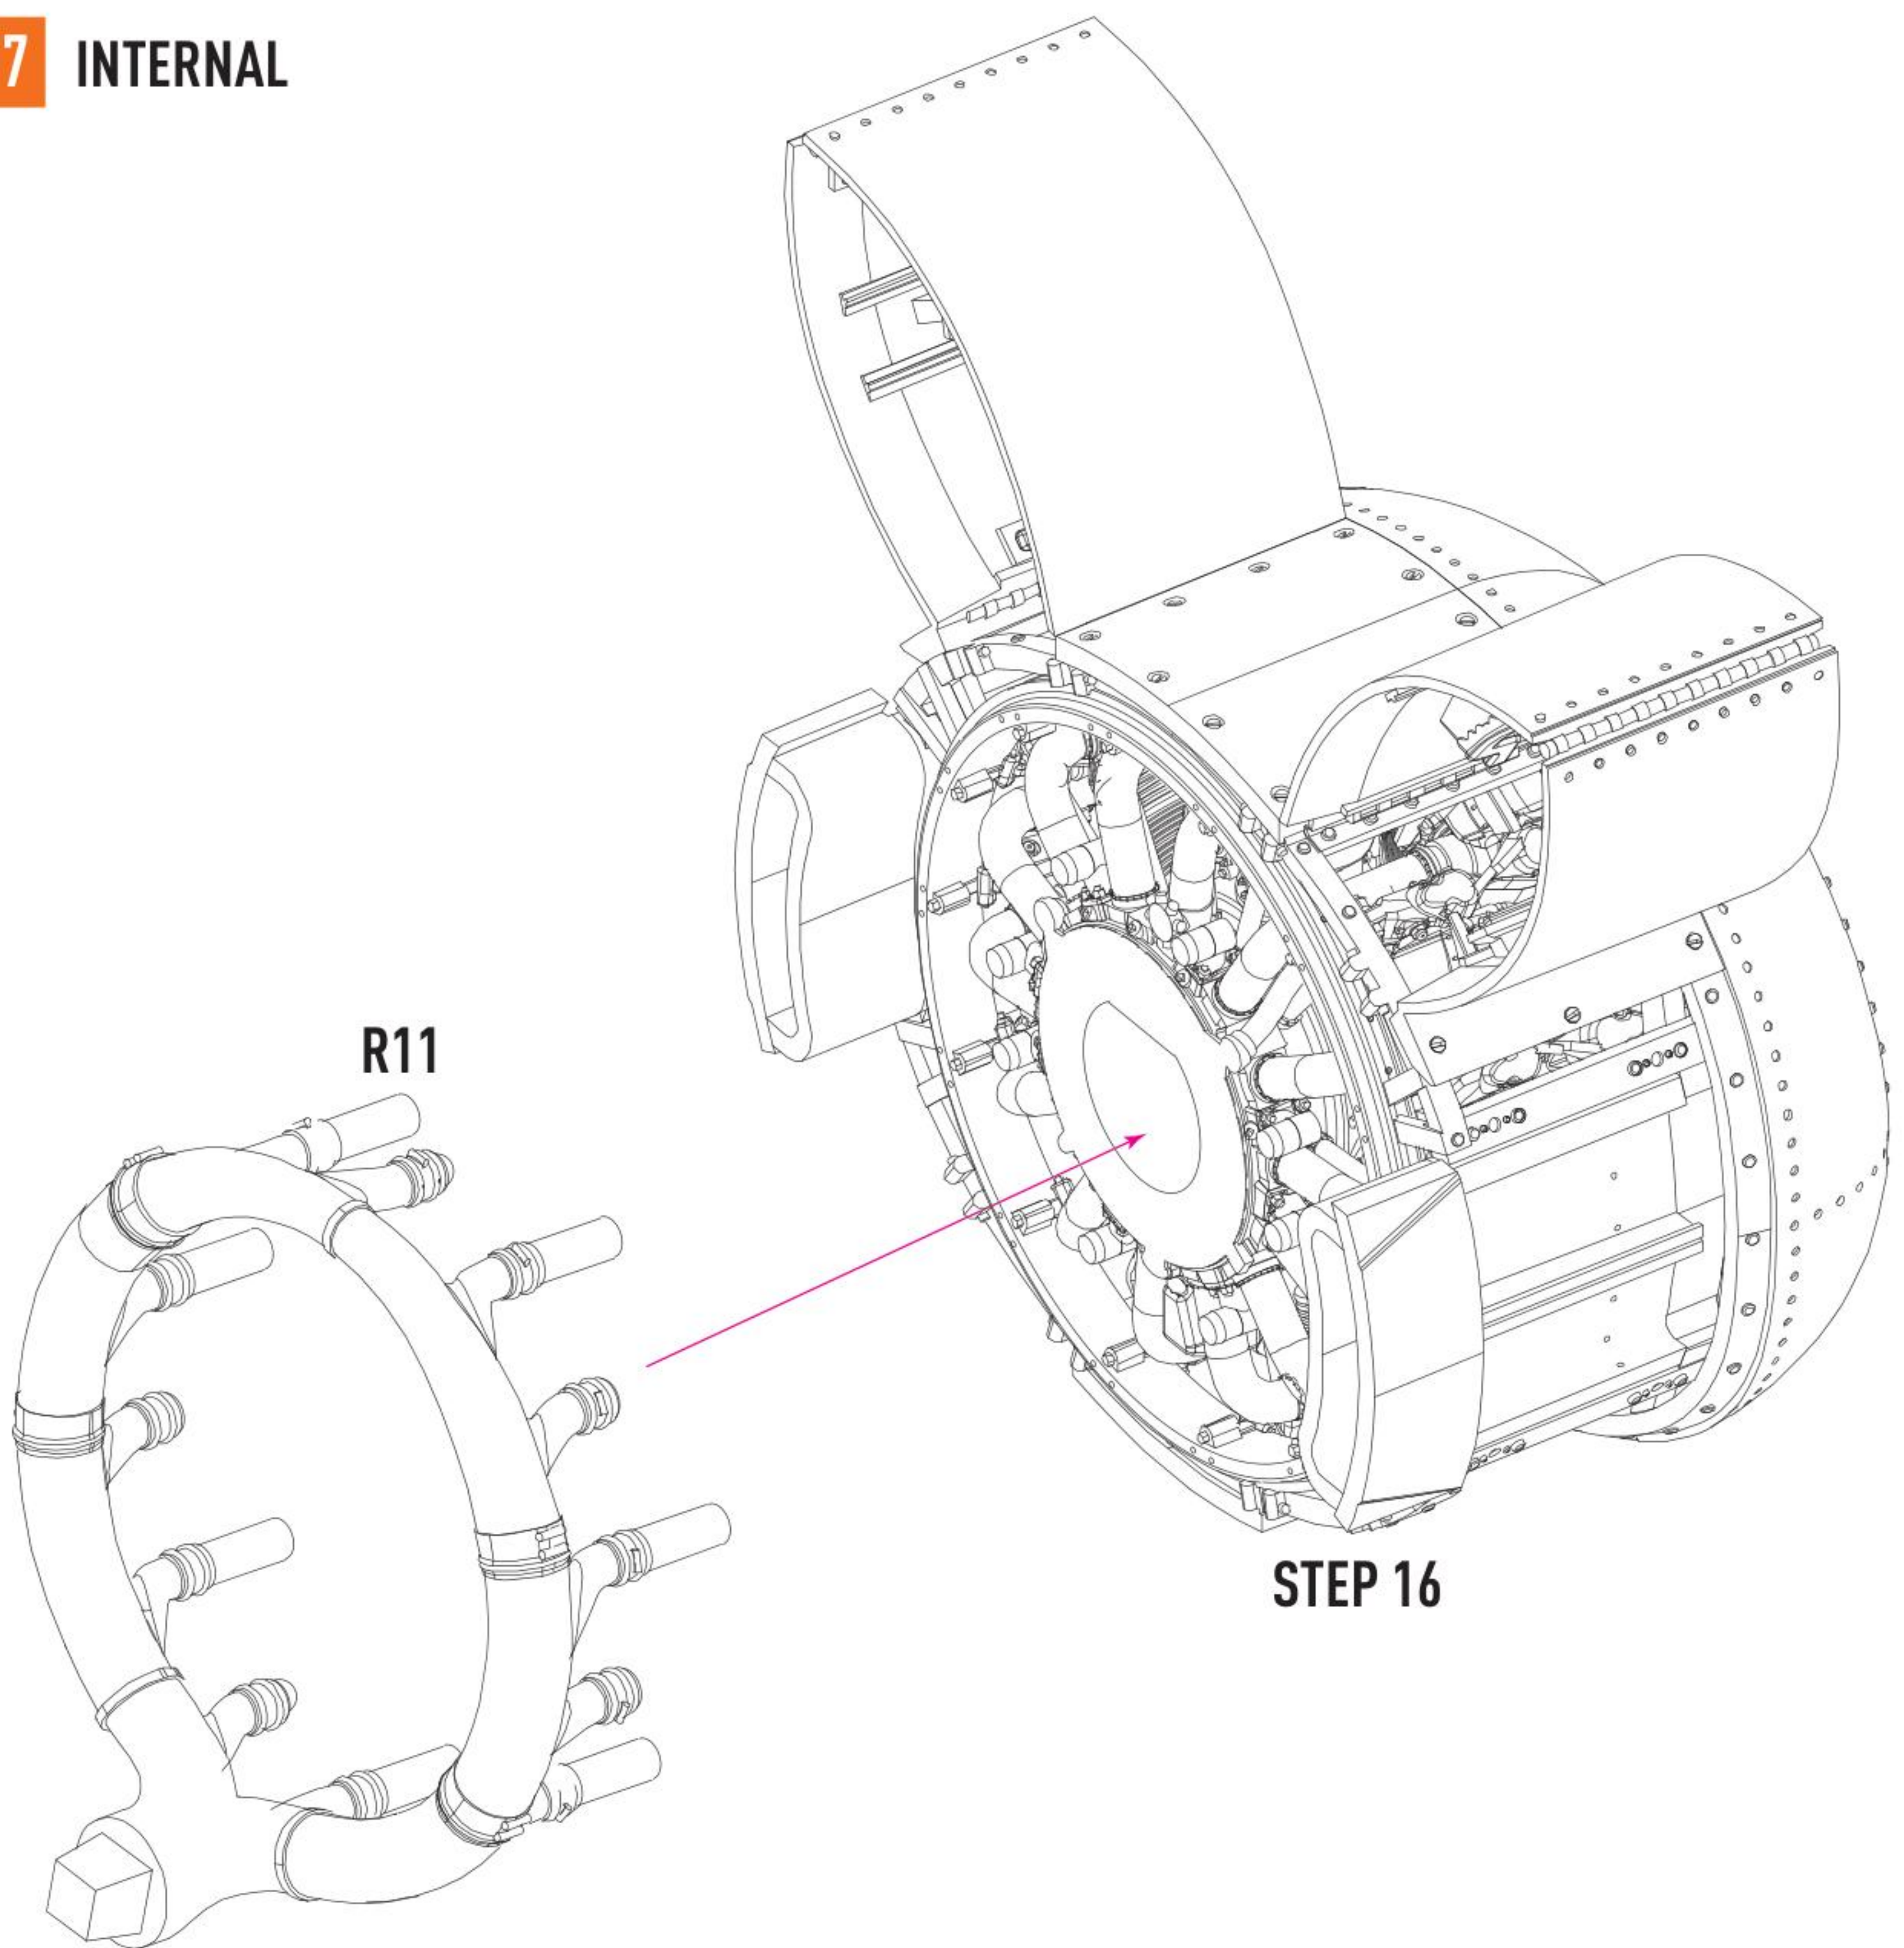


18

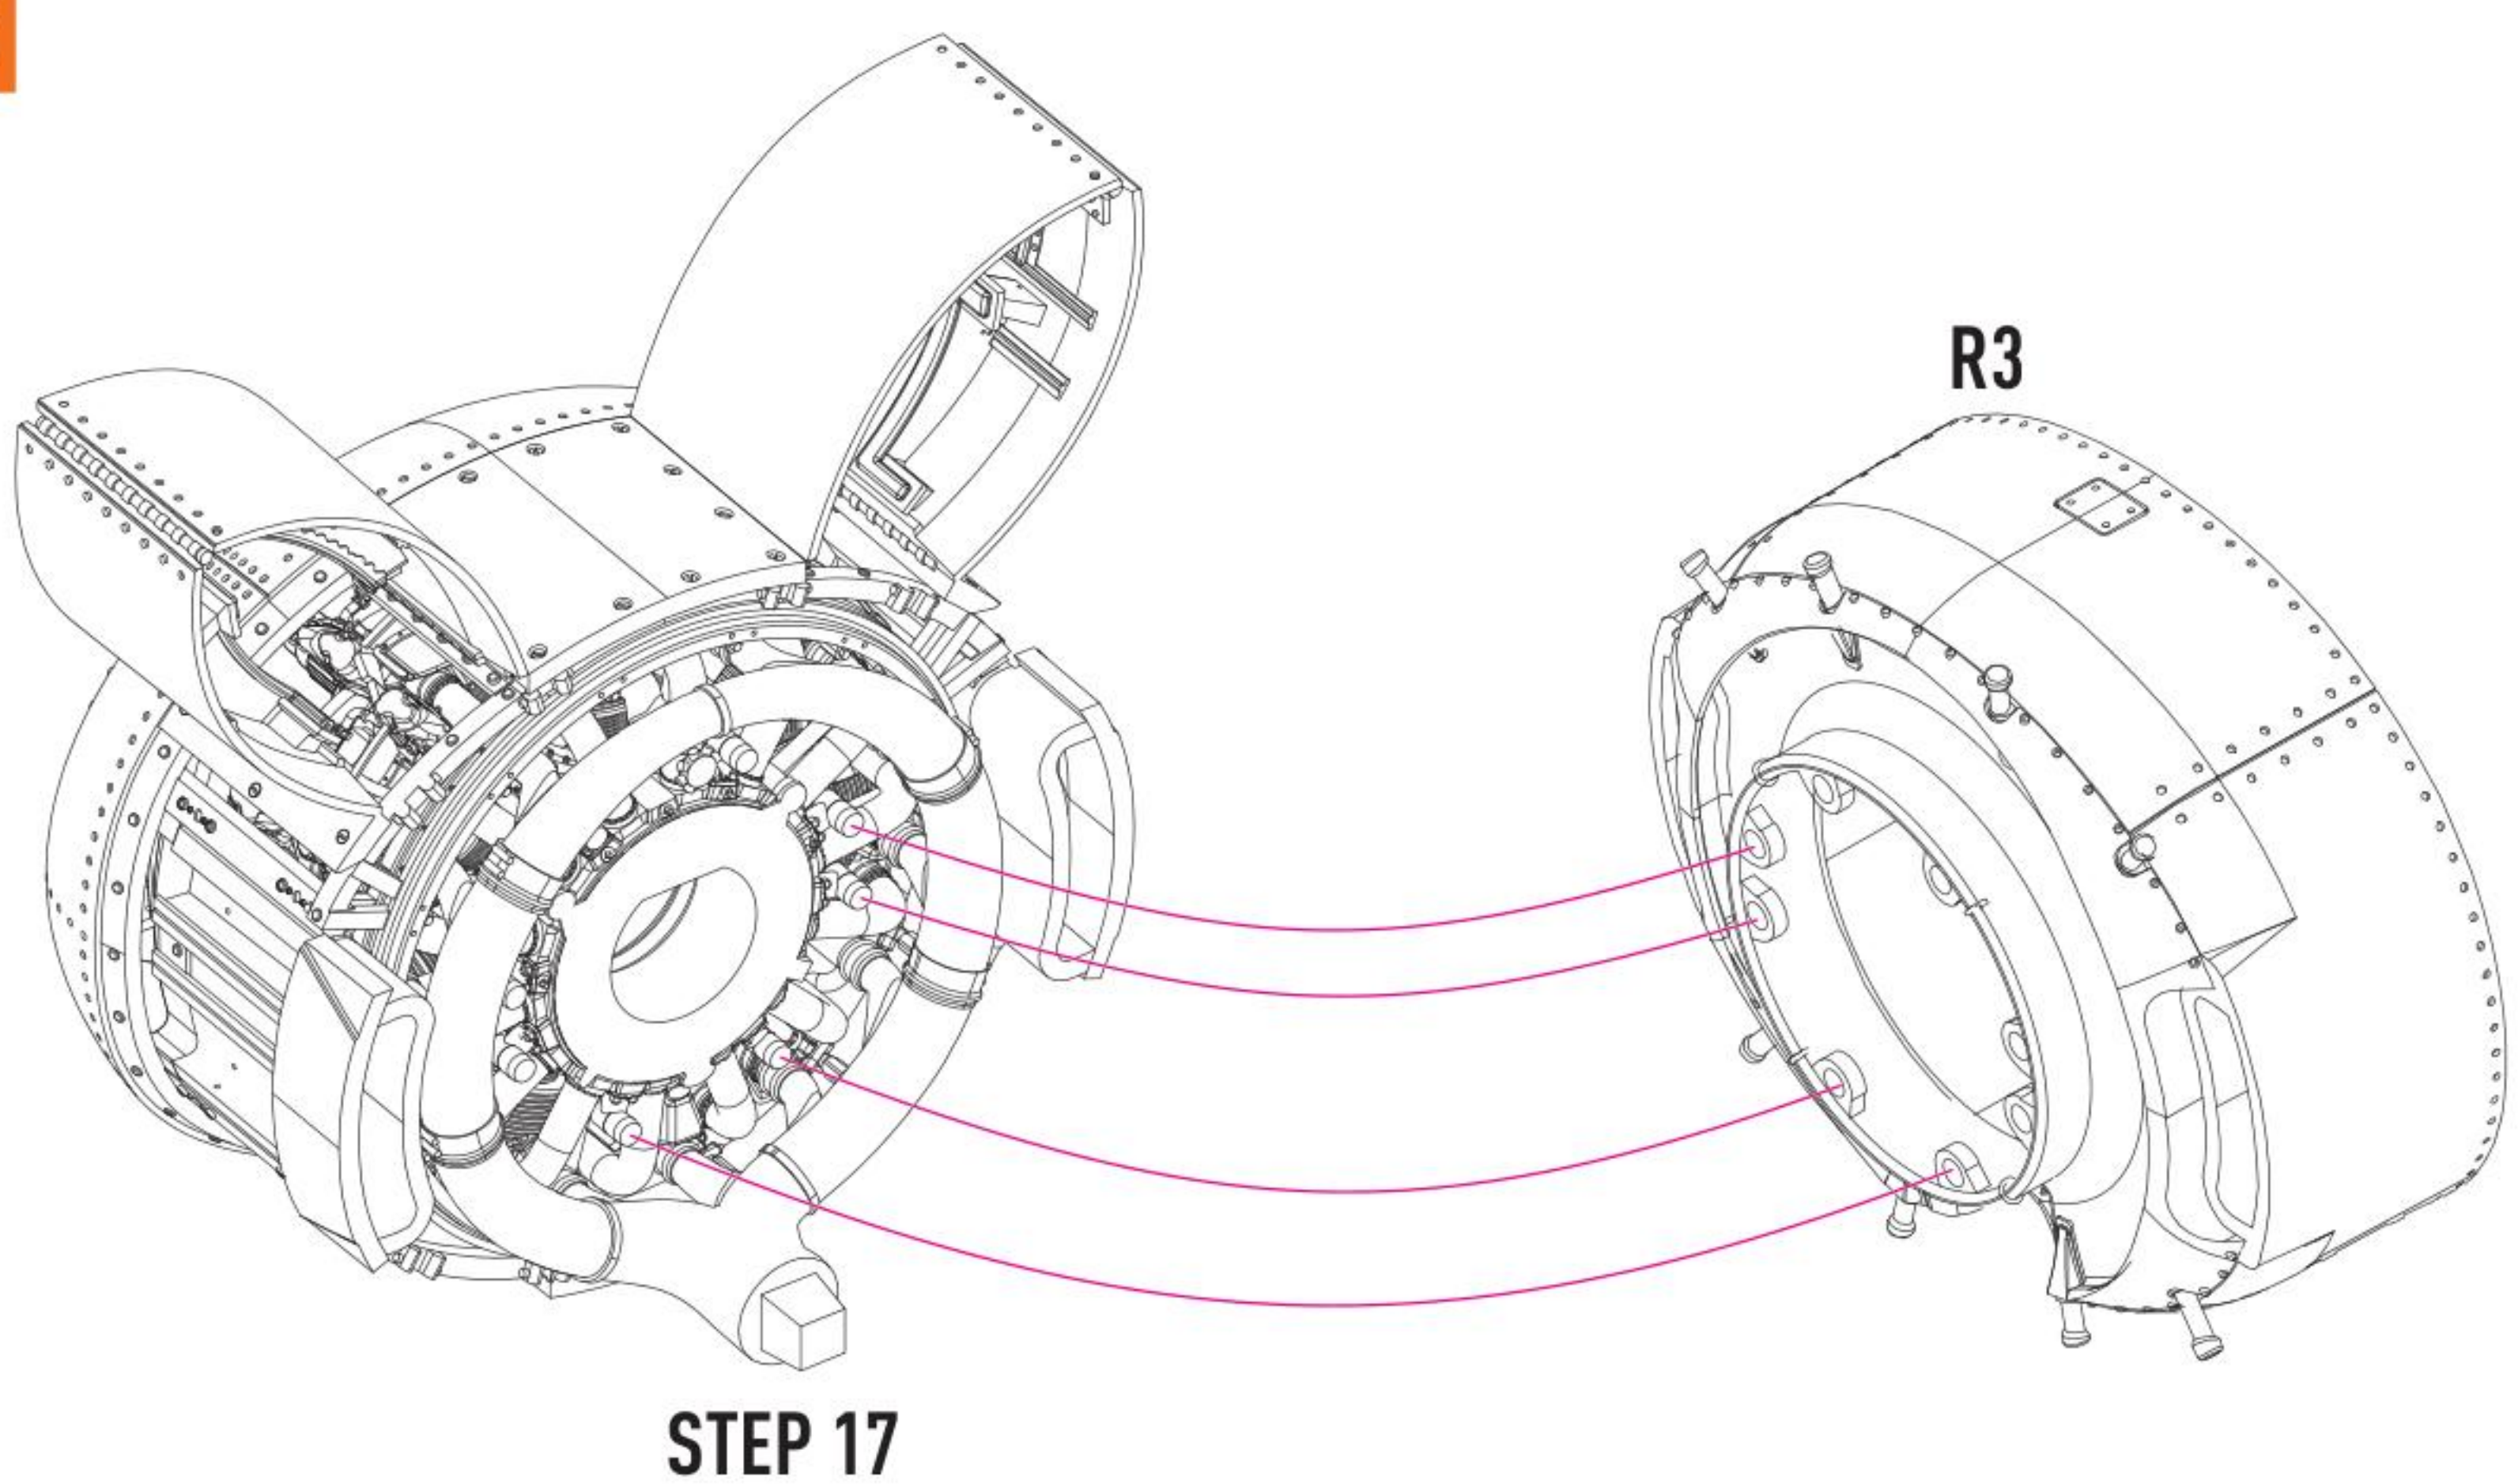


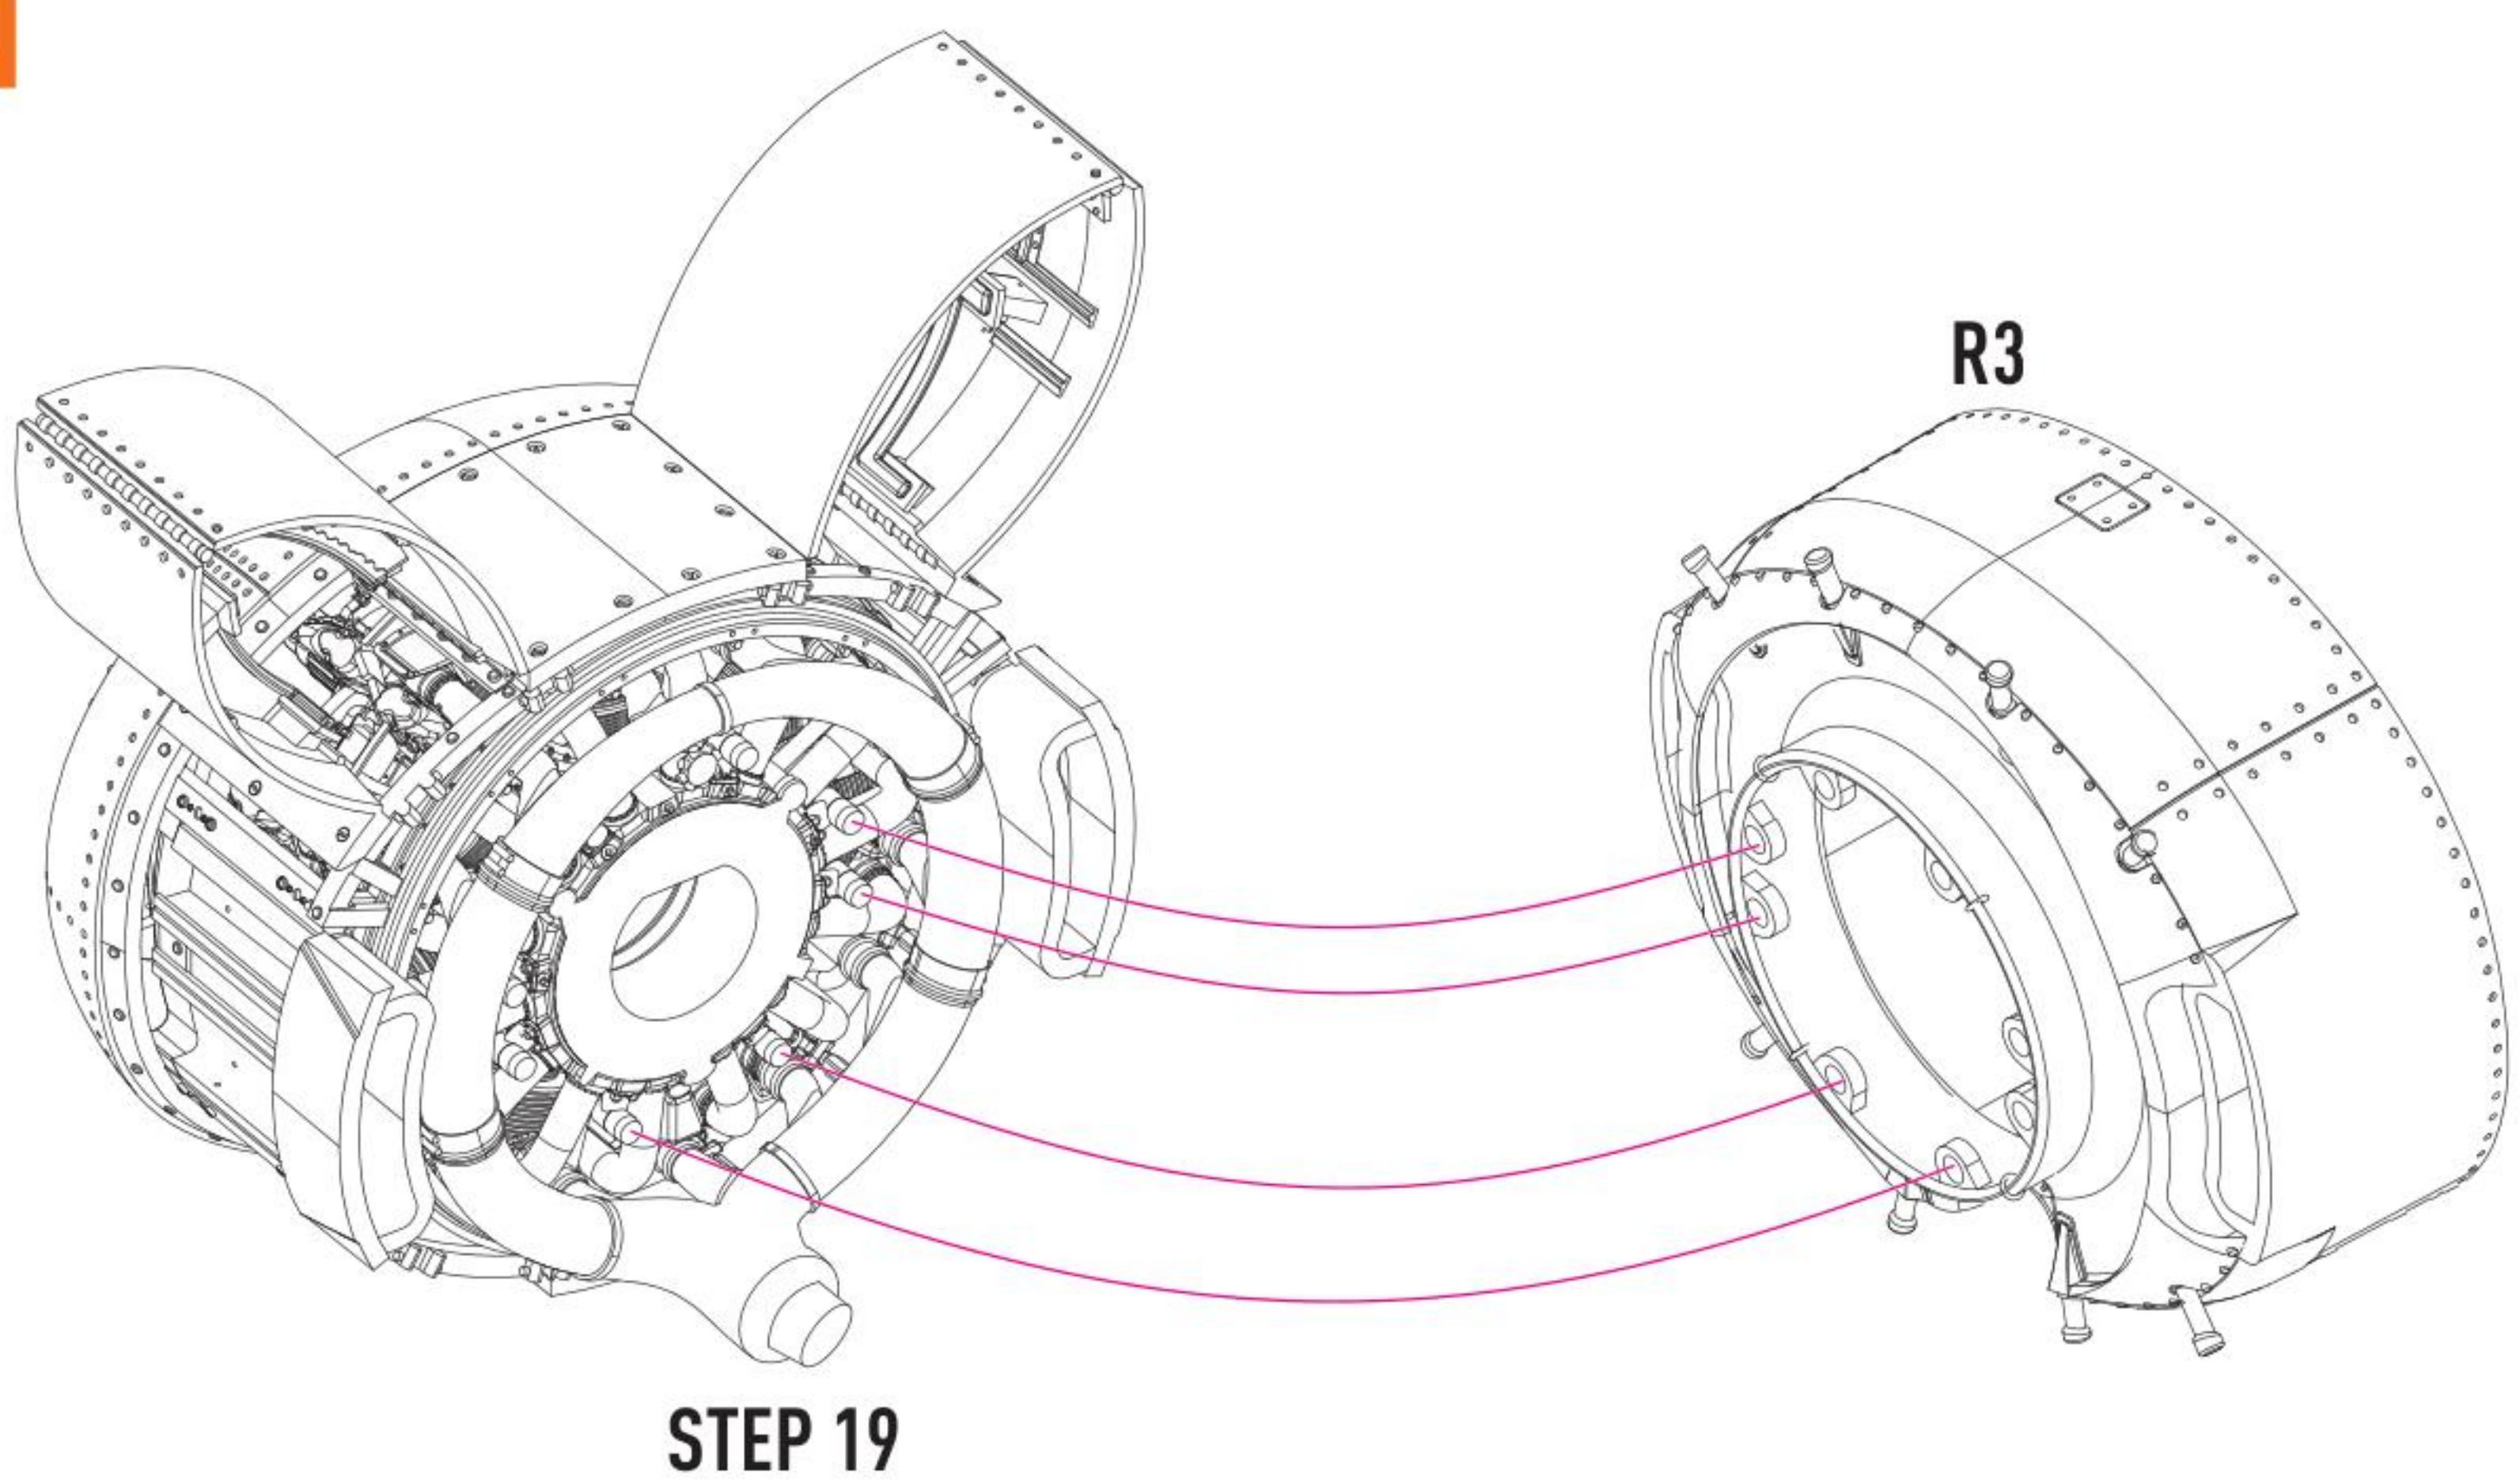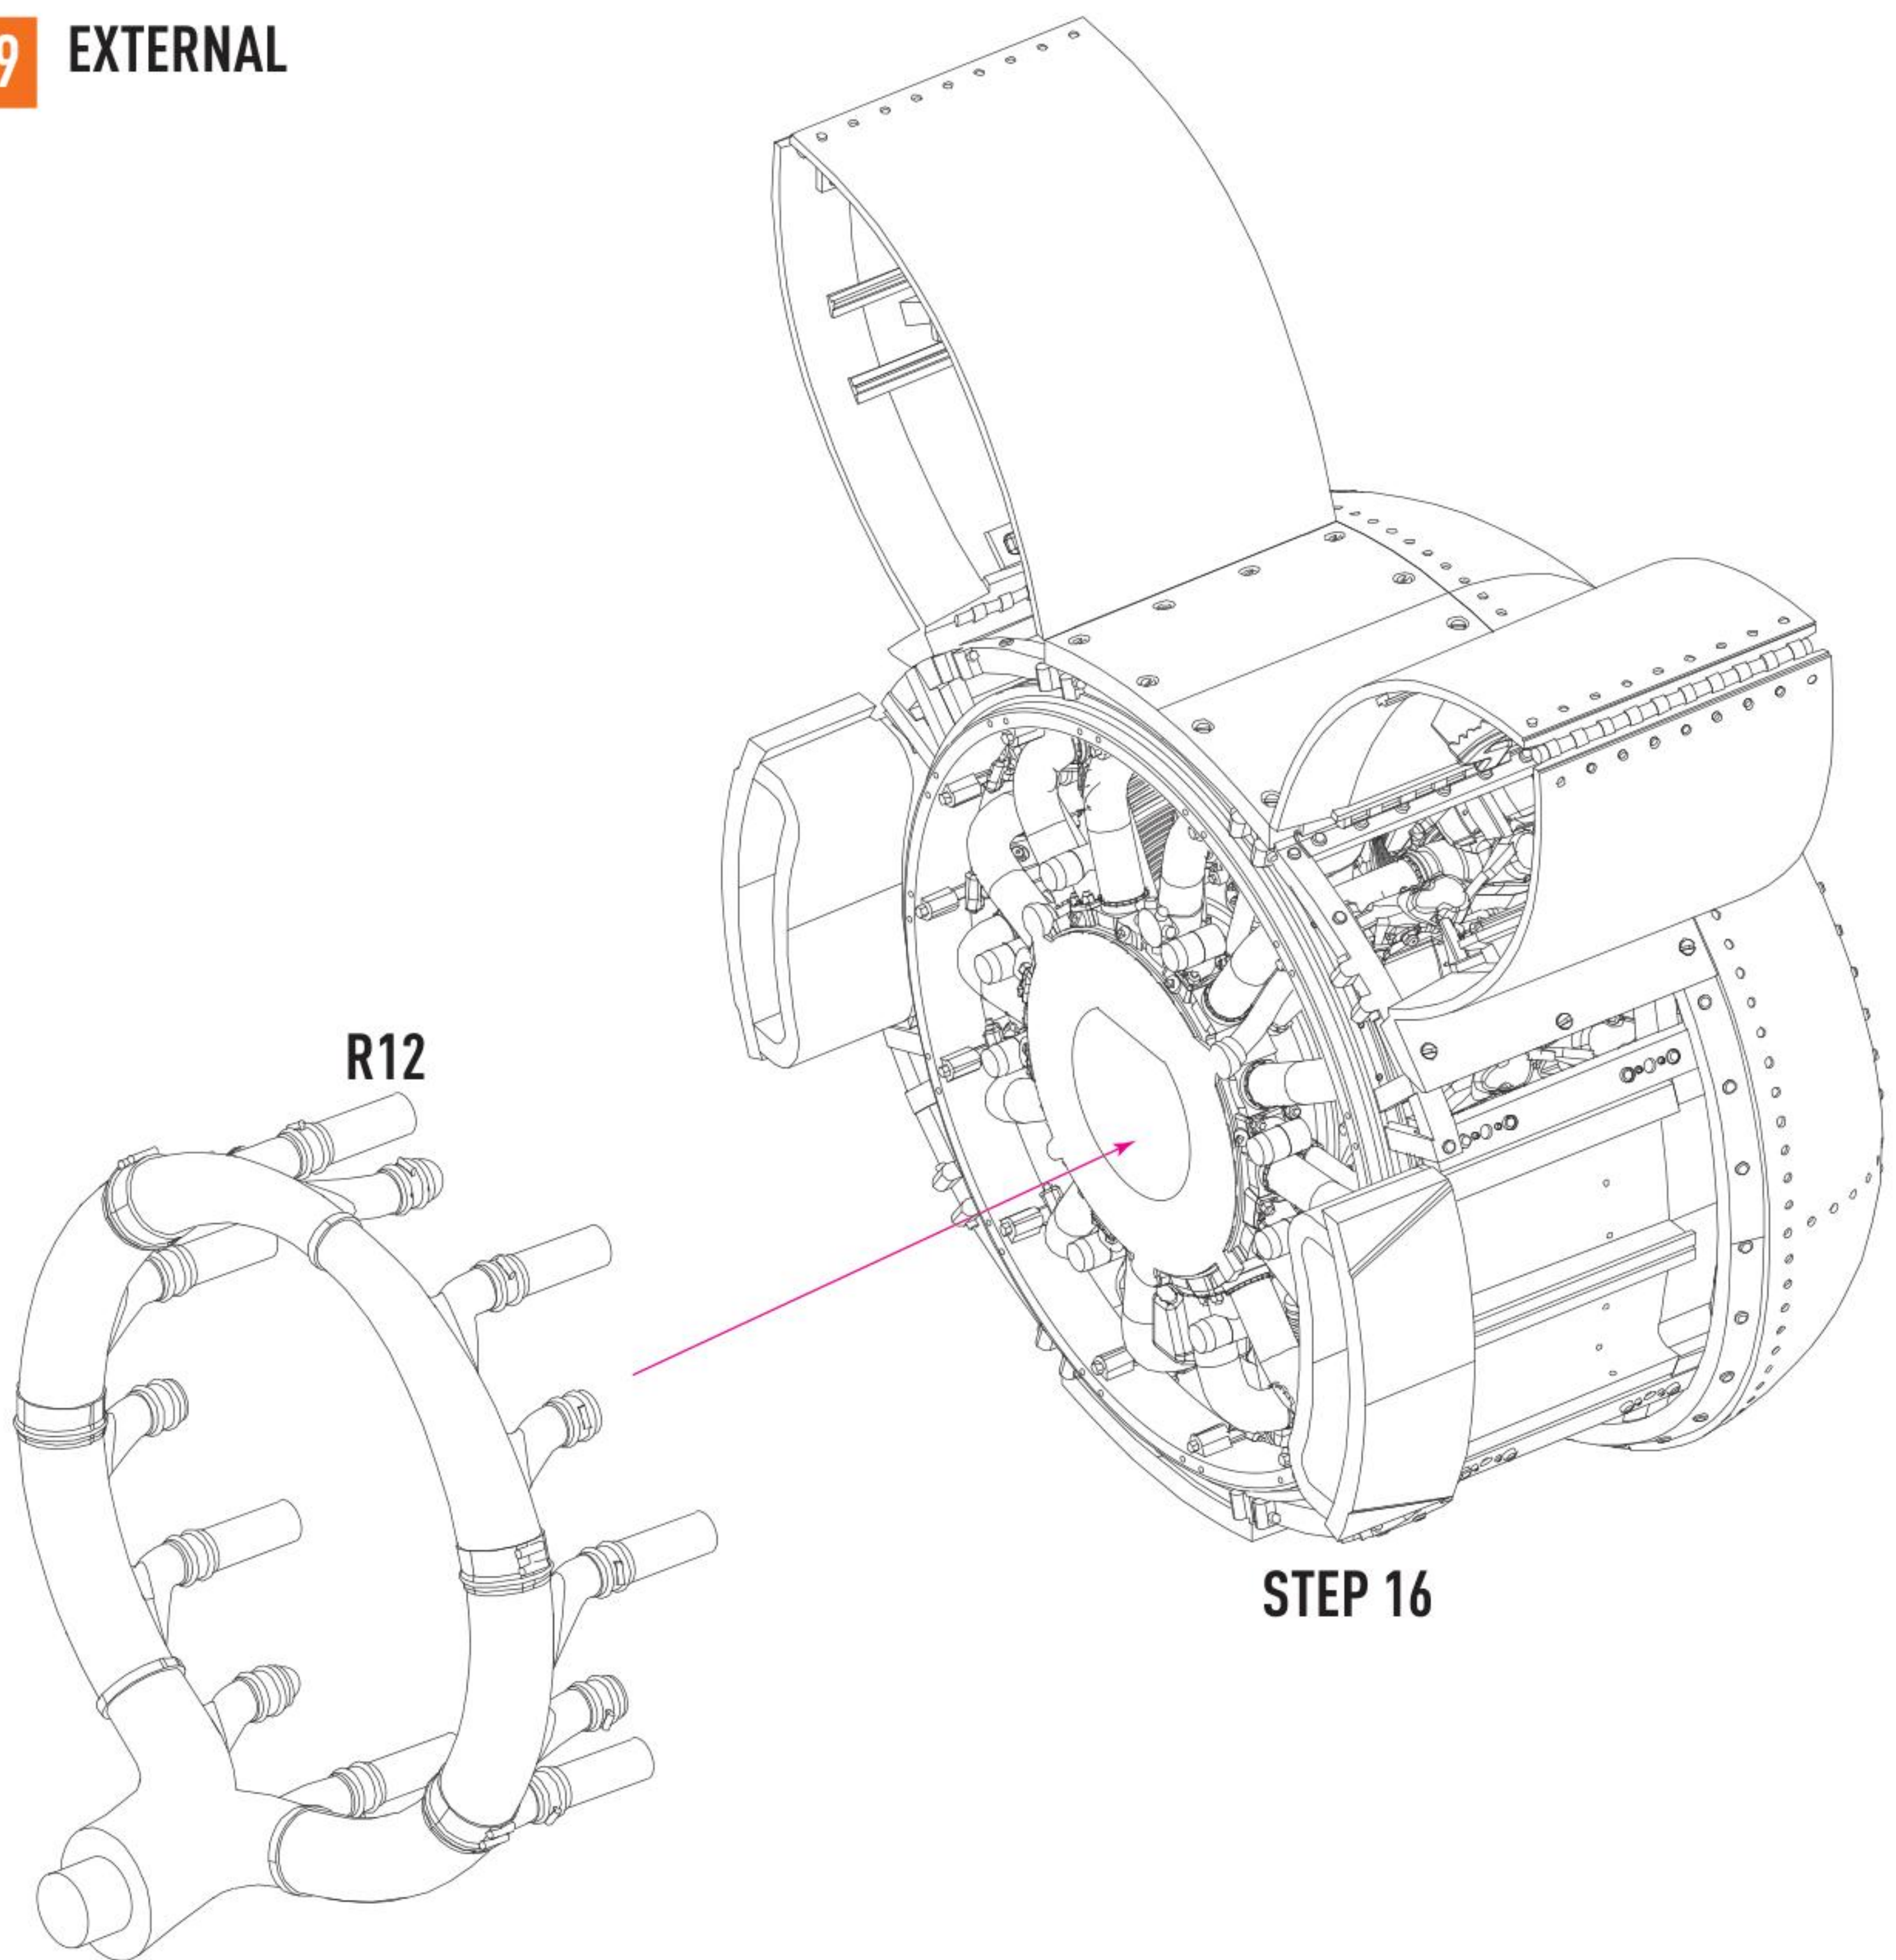

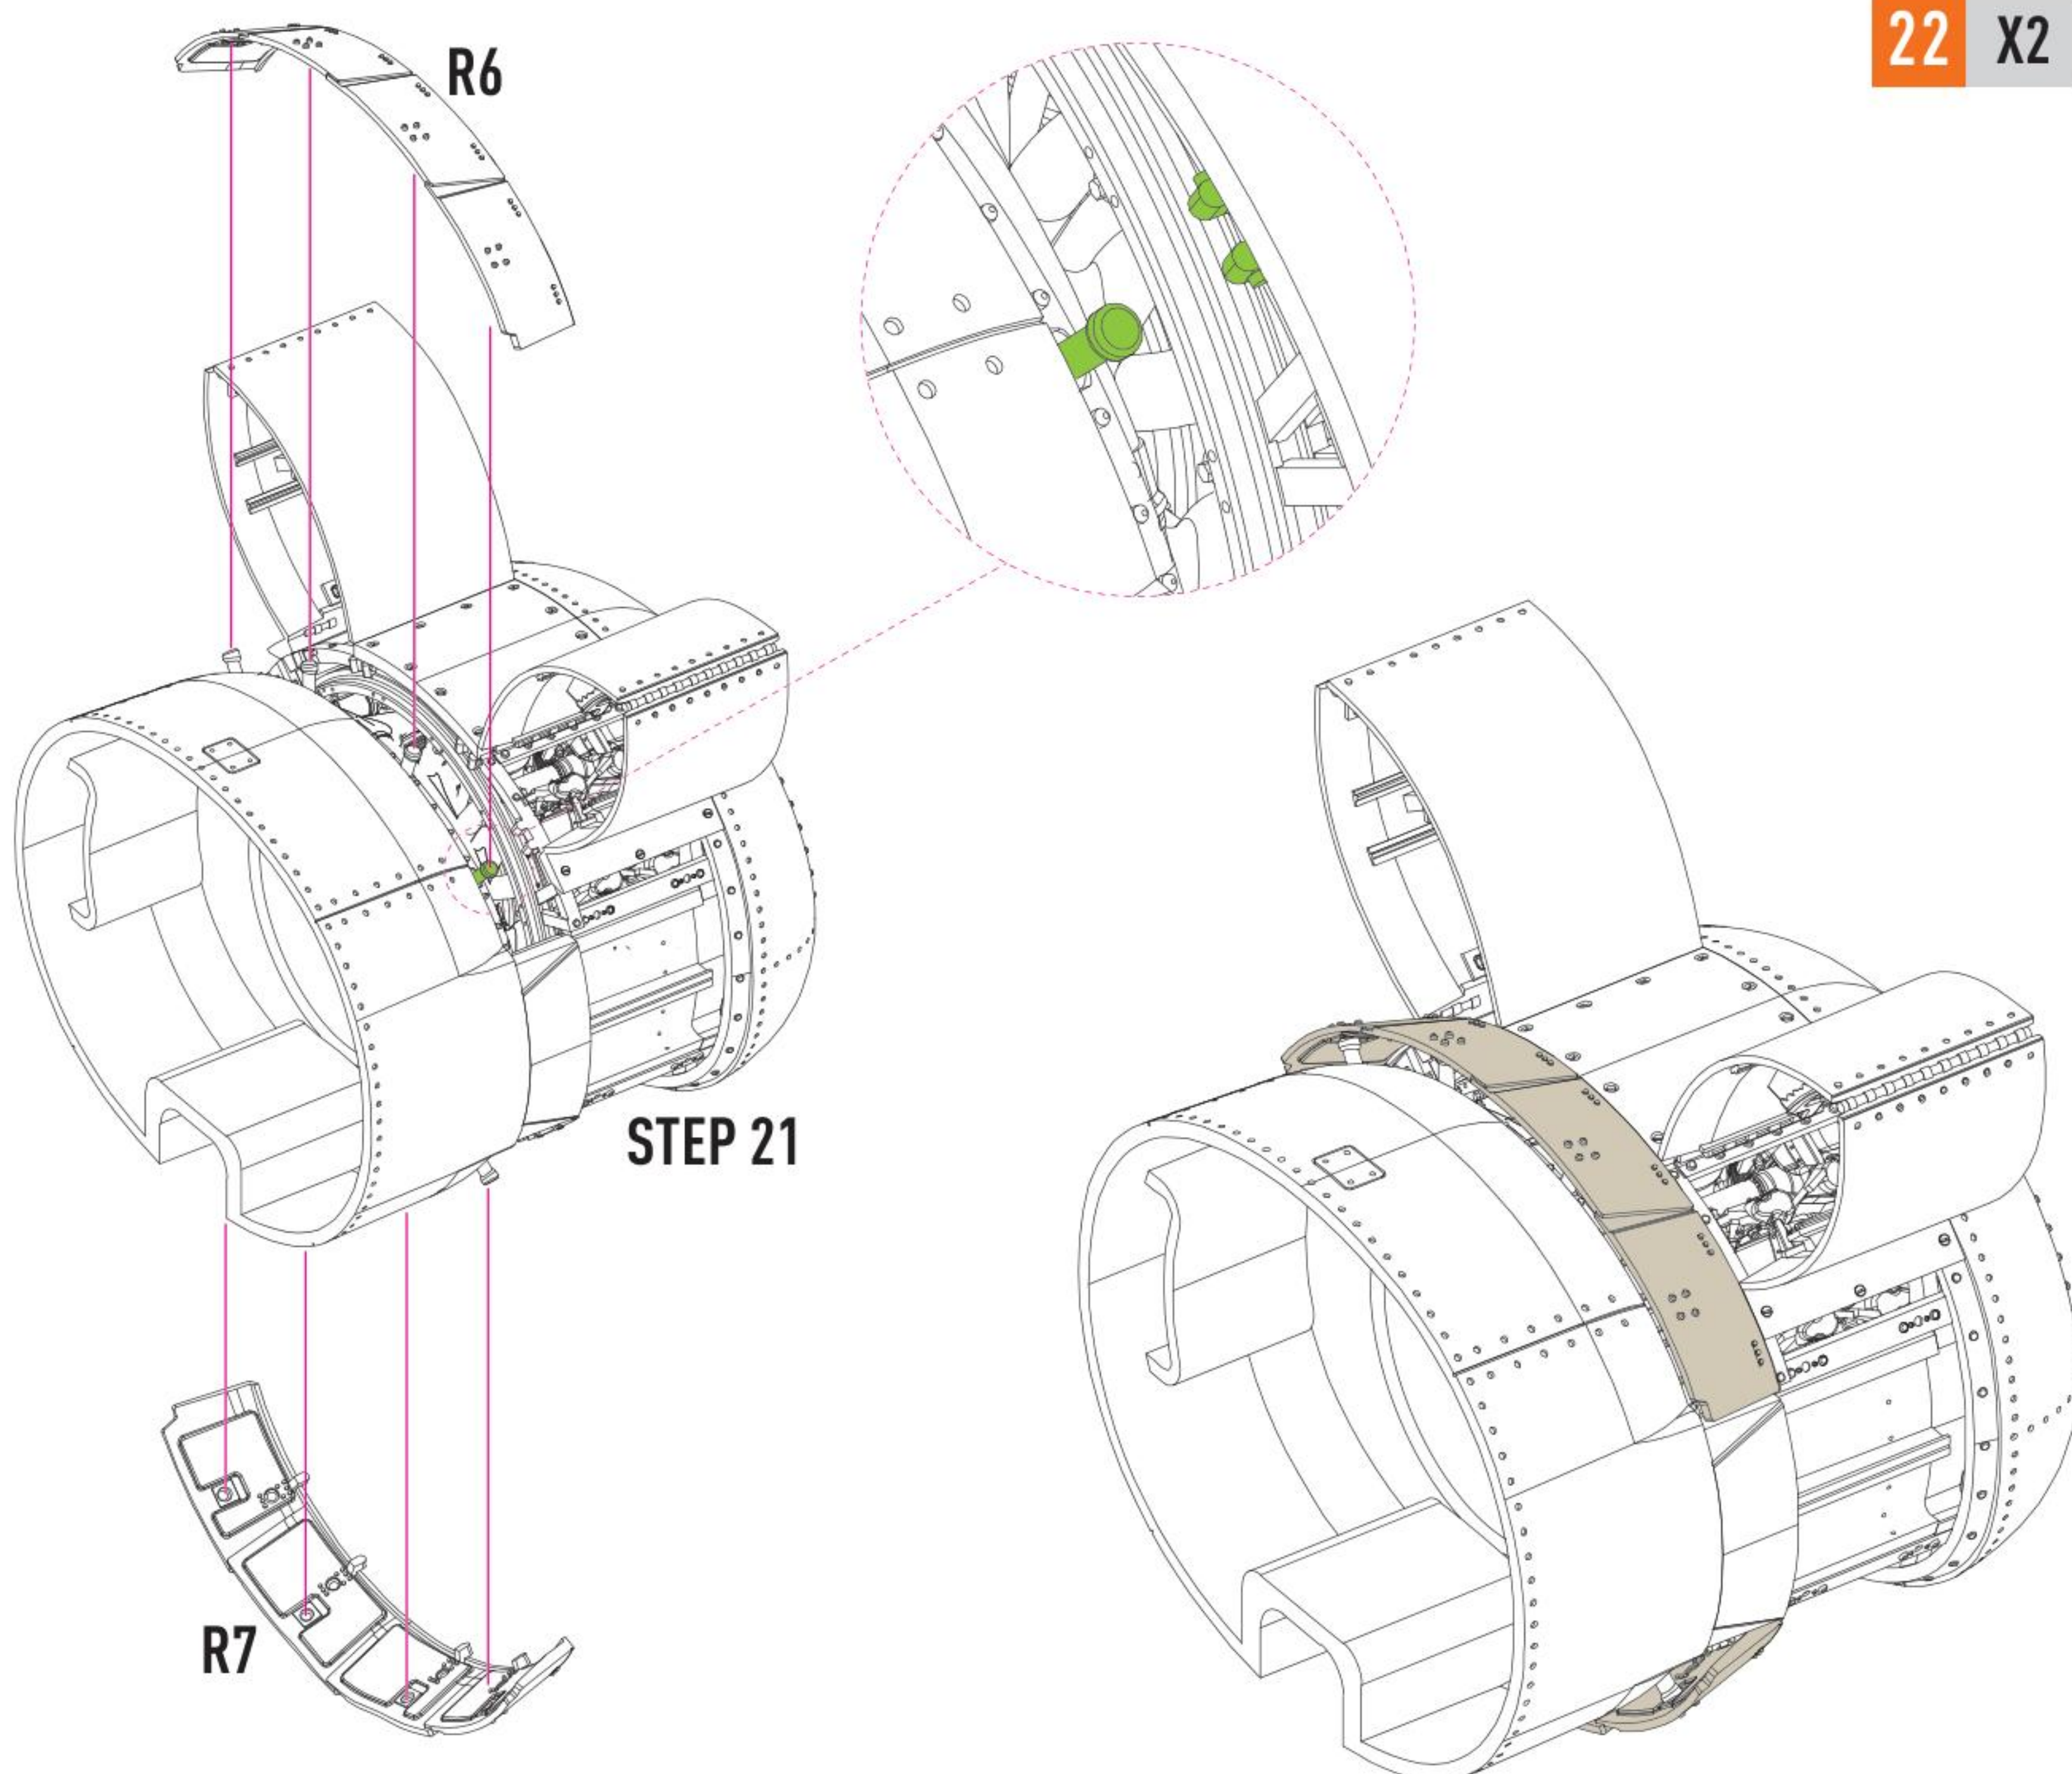
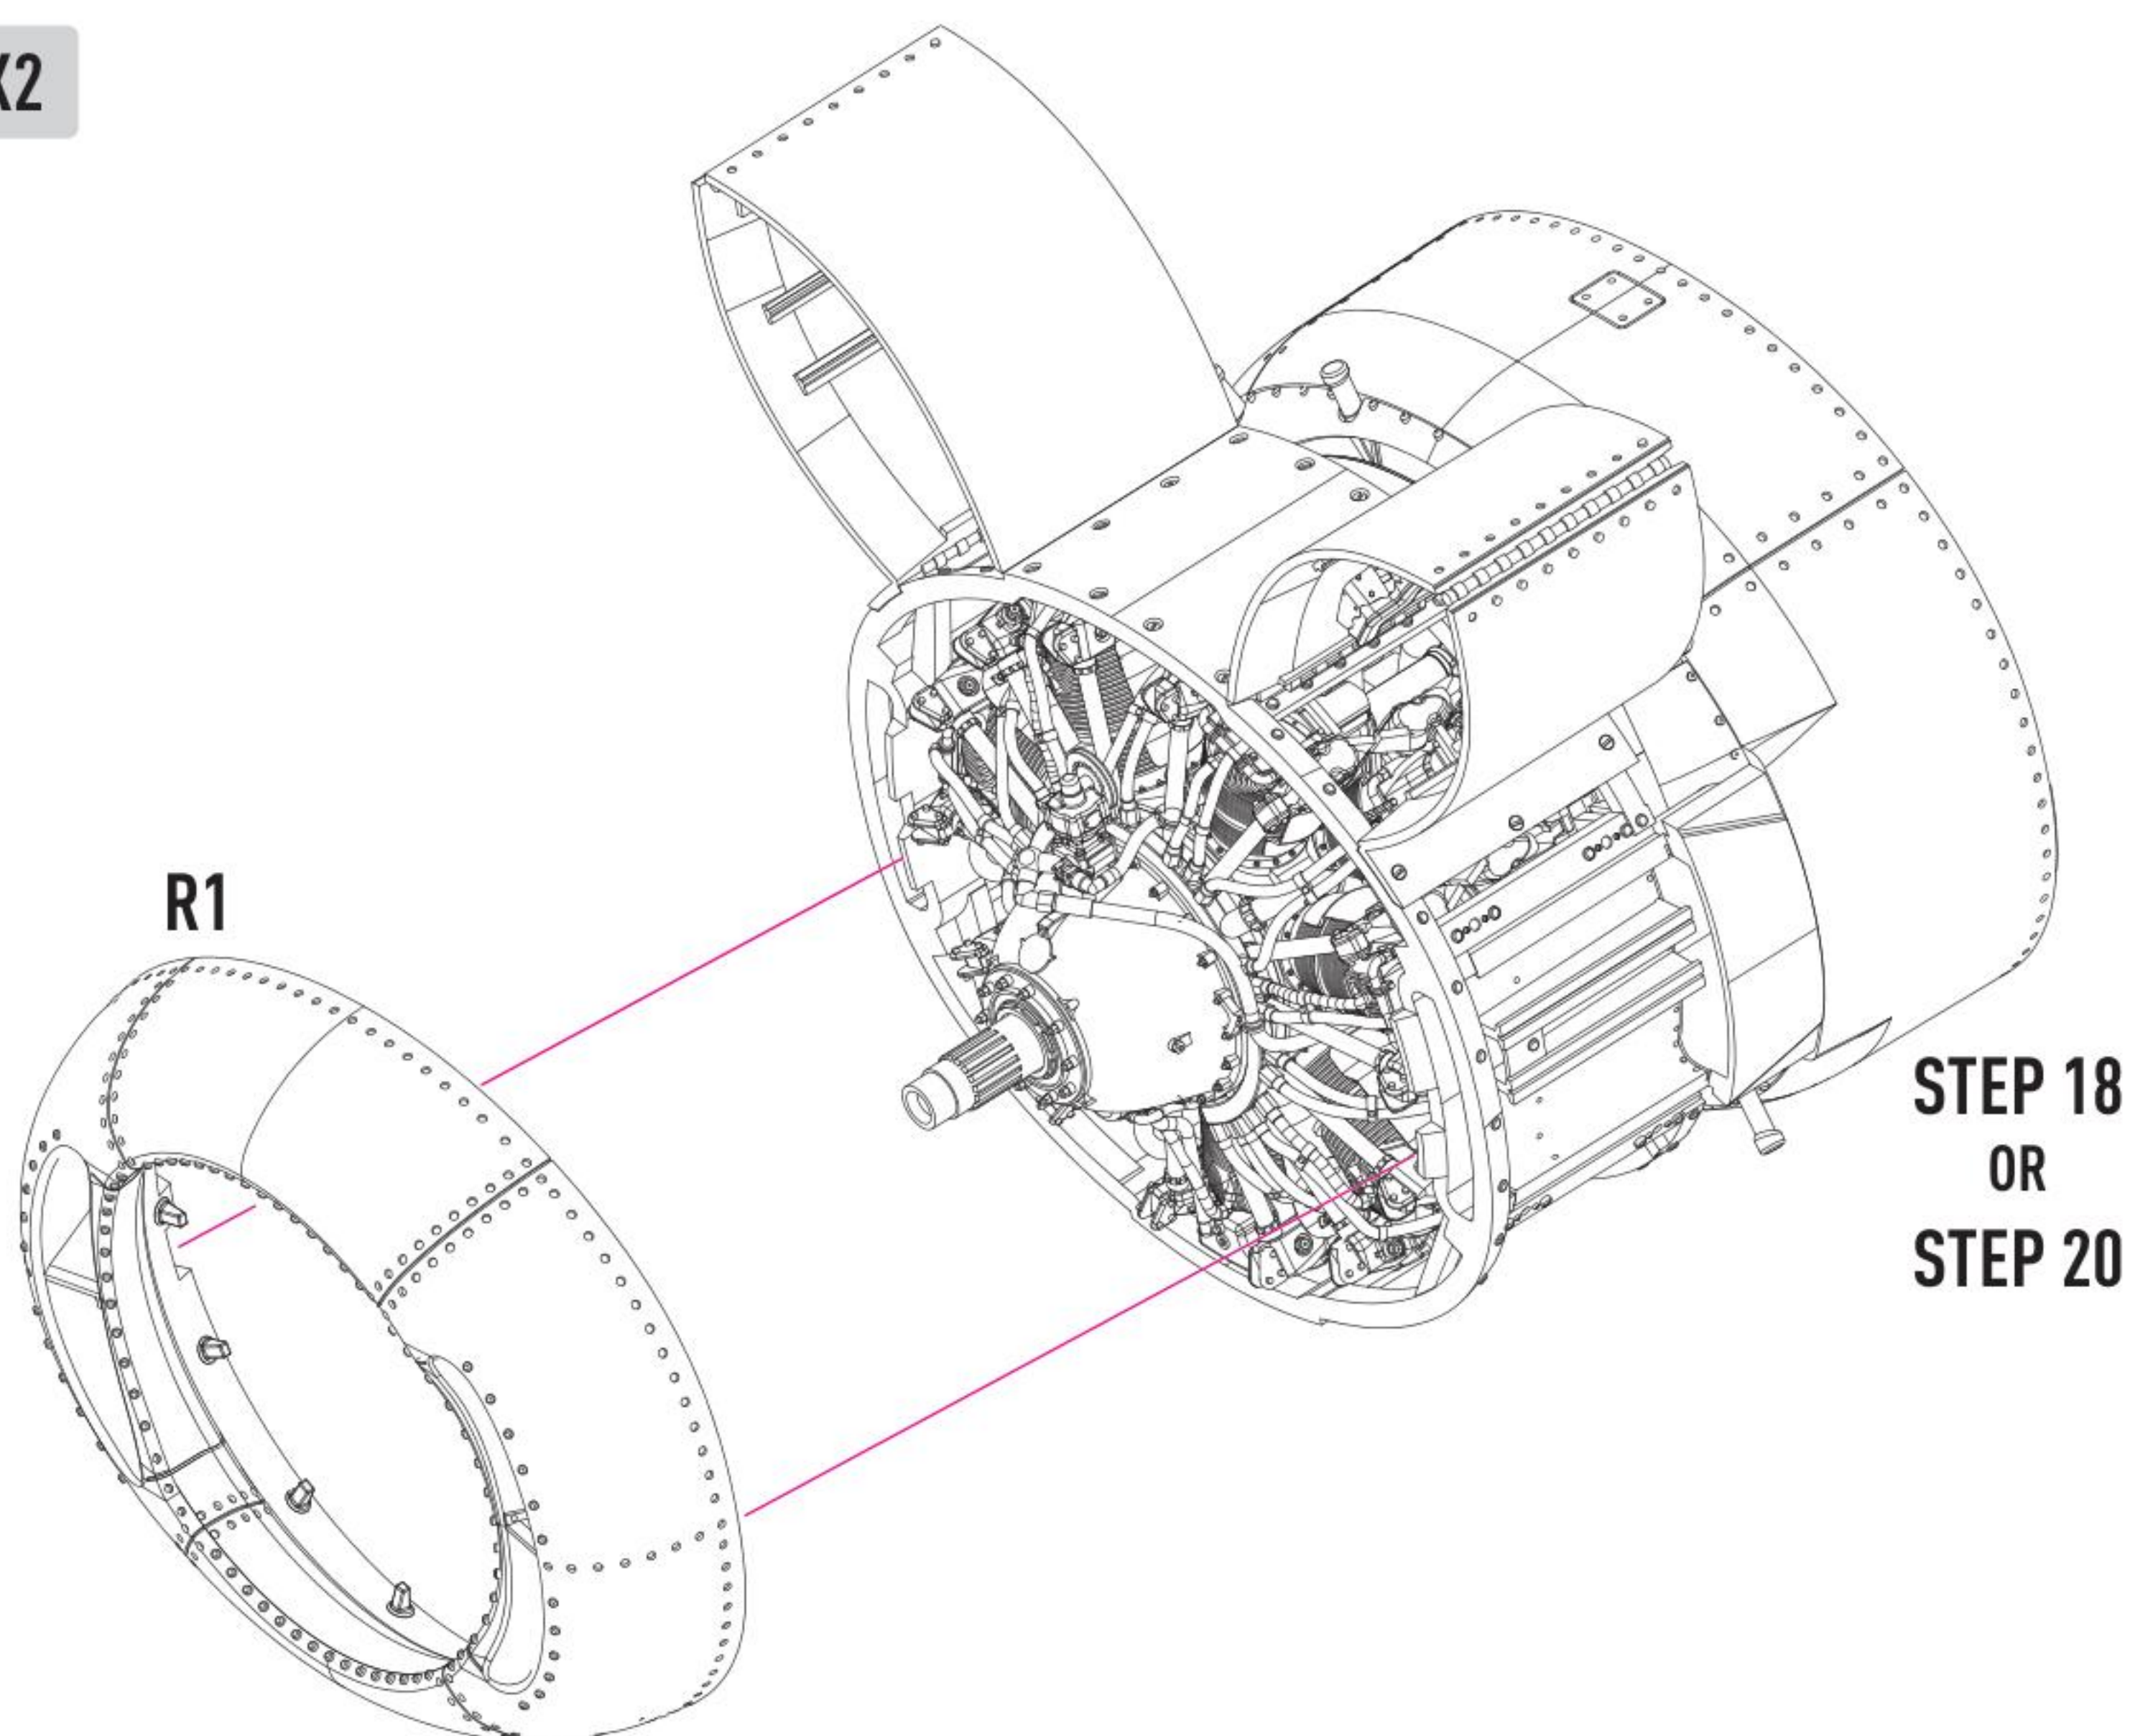


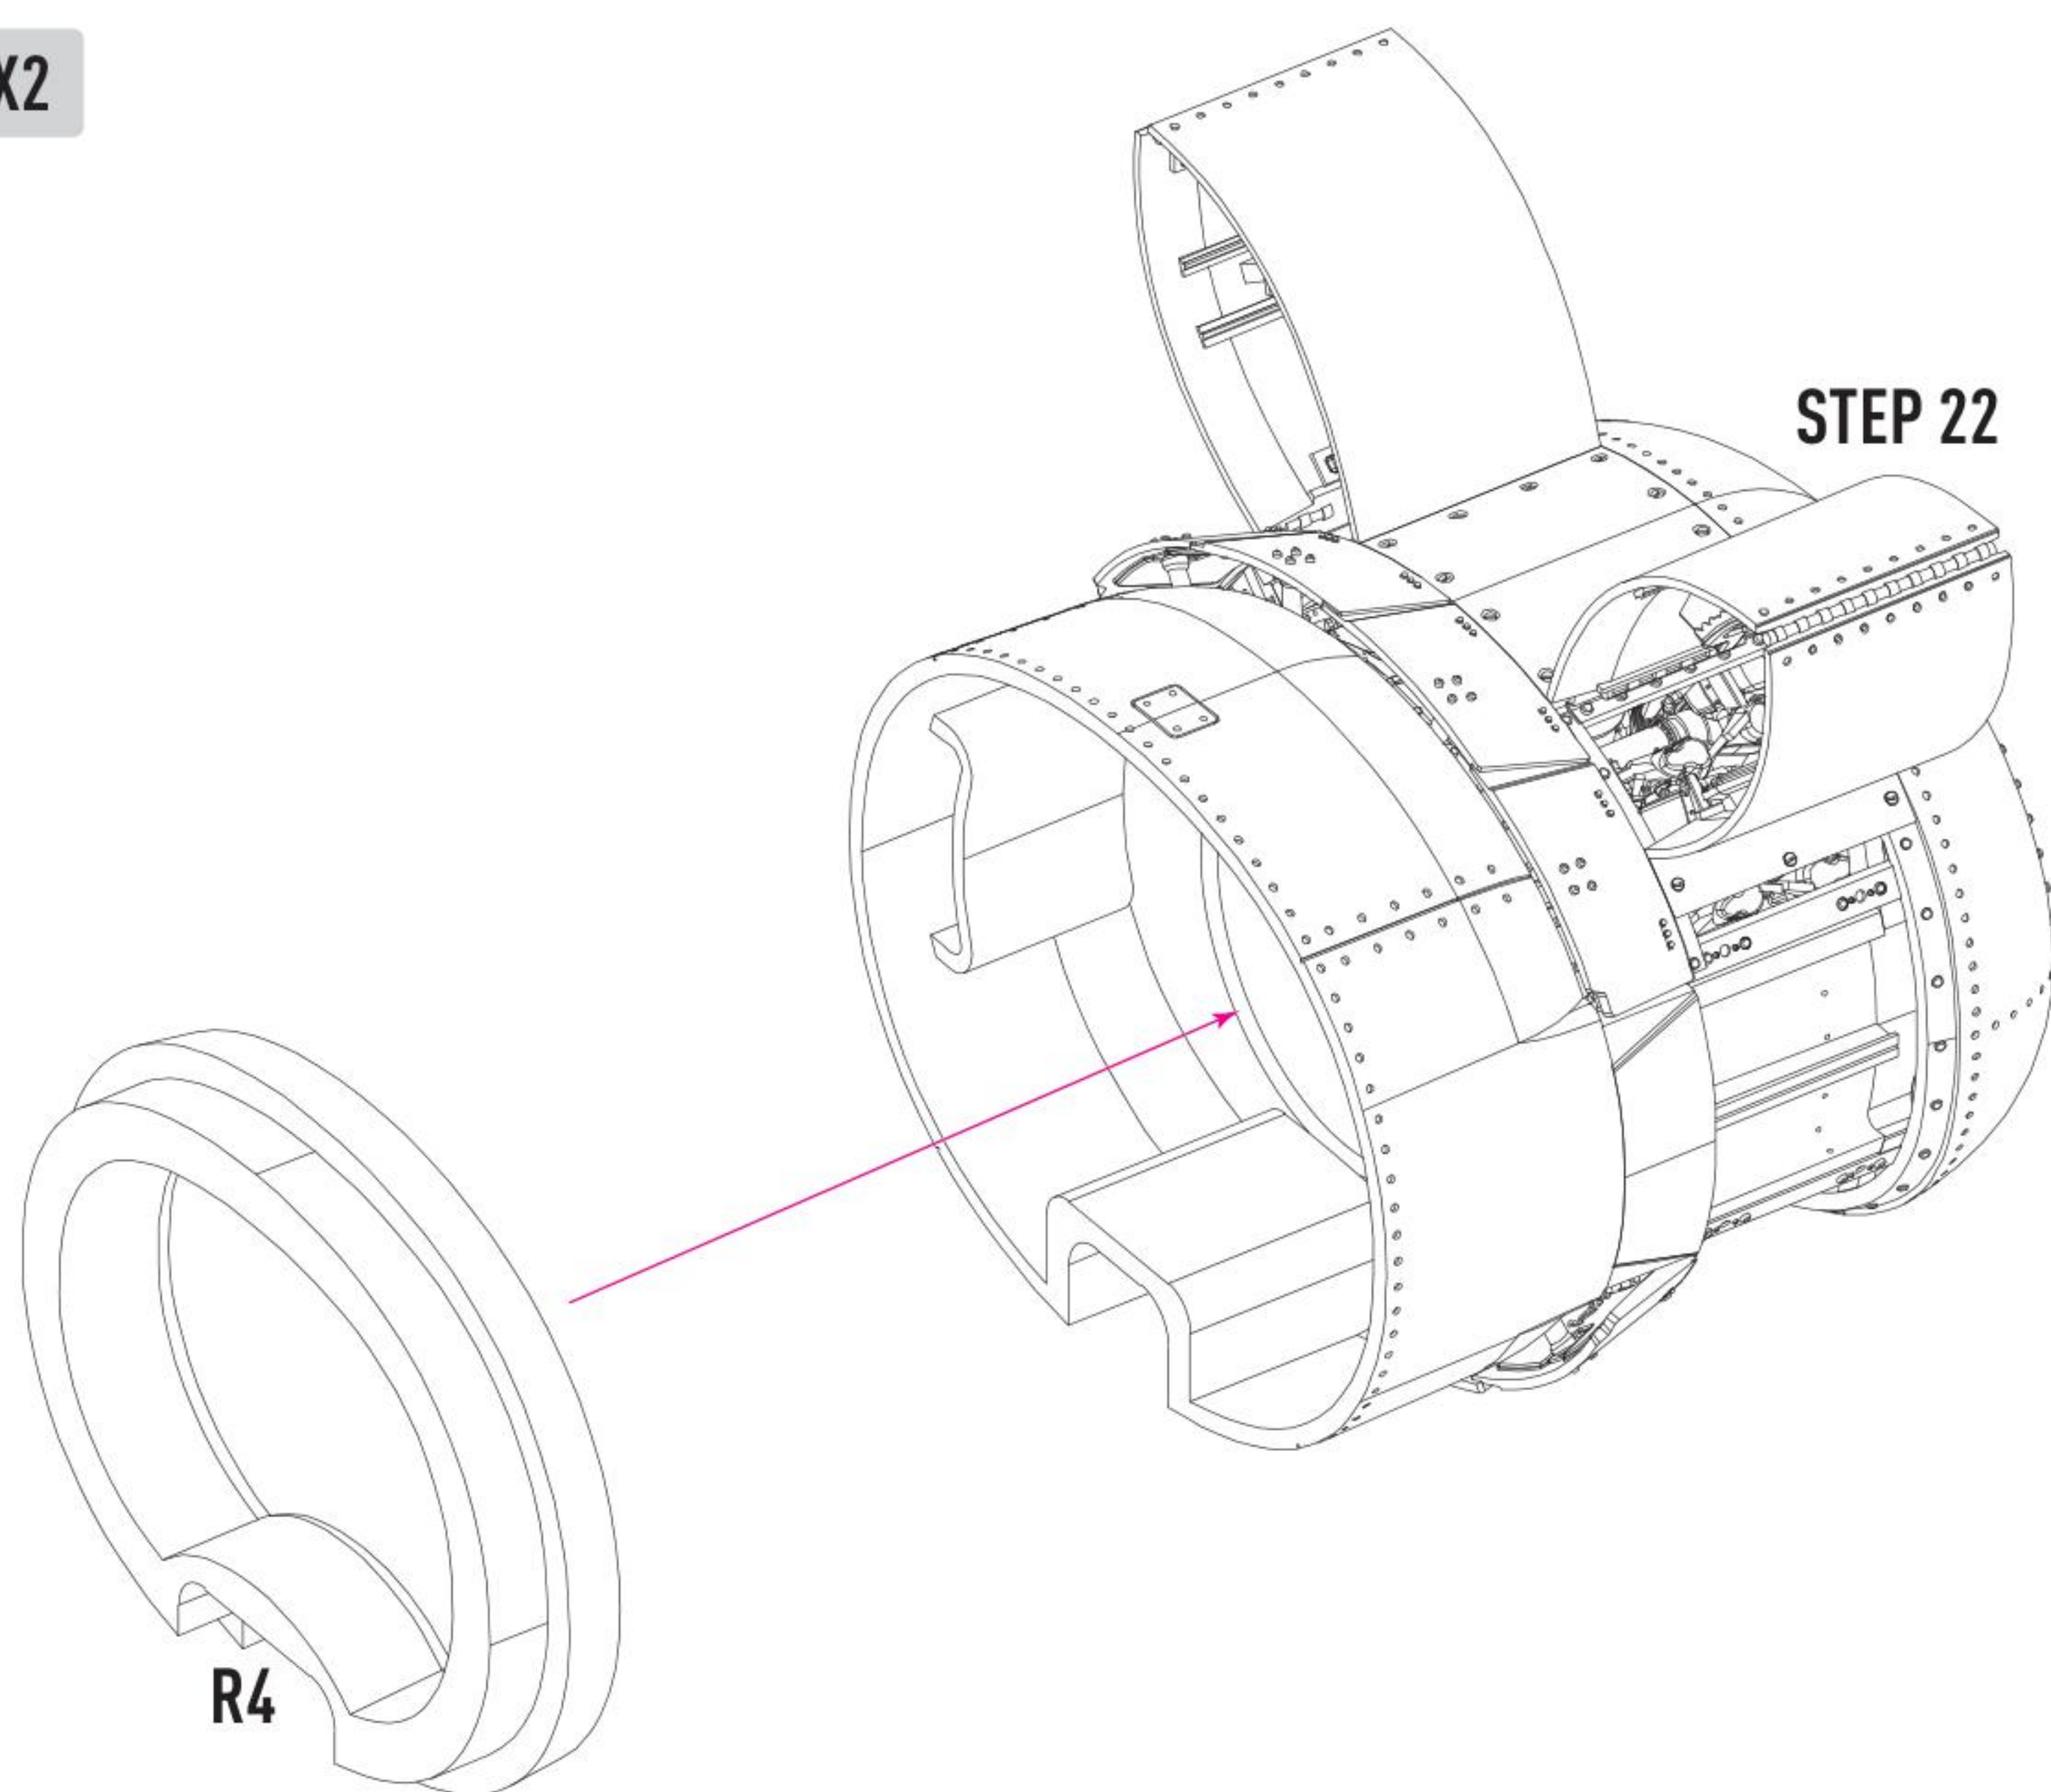


24 LEFT SIDE REPEAT FOR THE RIGHT SIDE

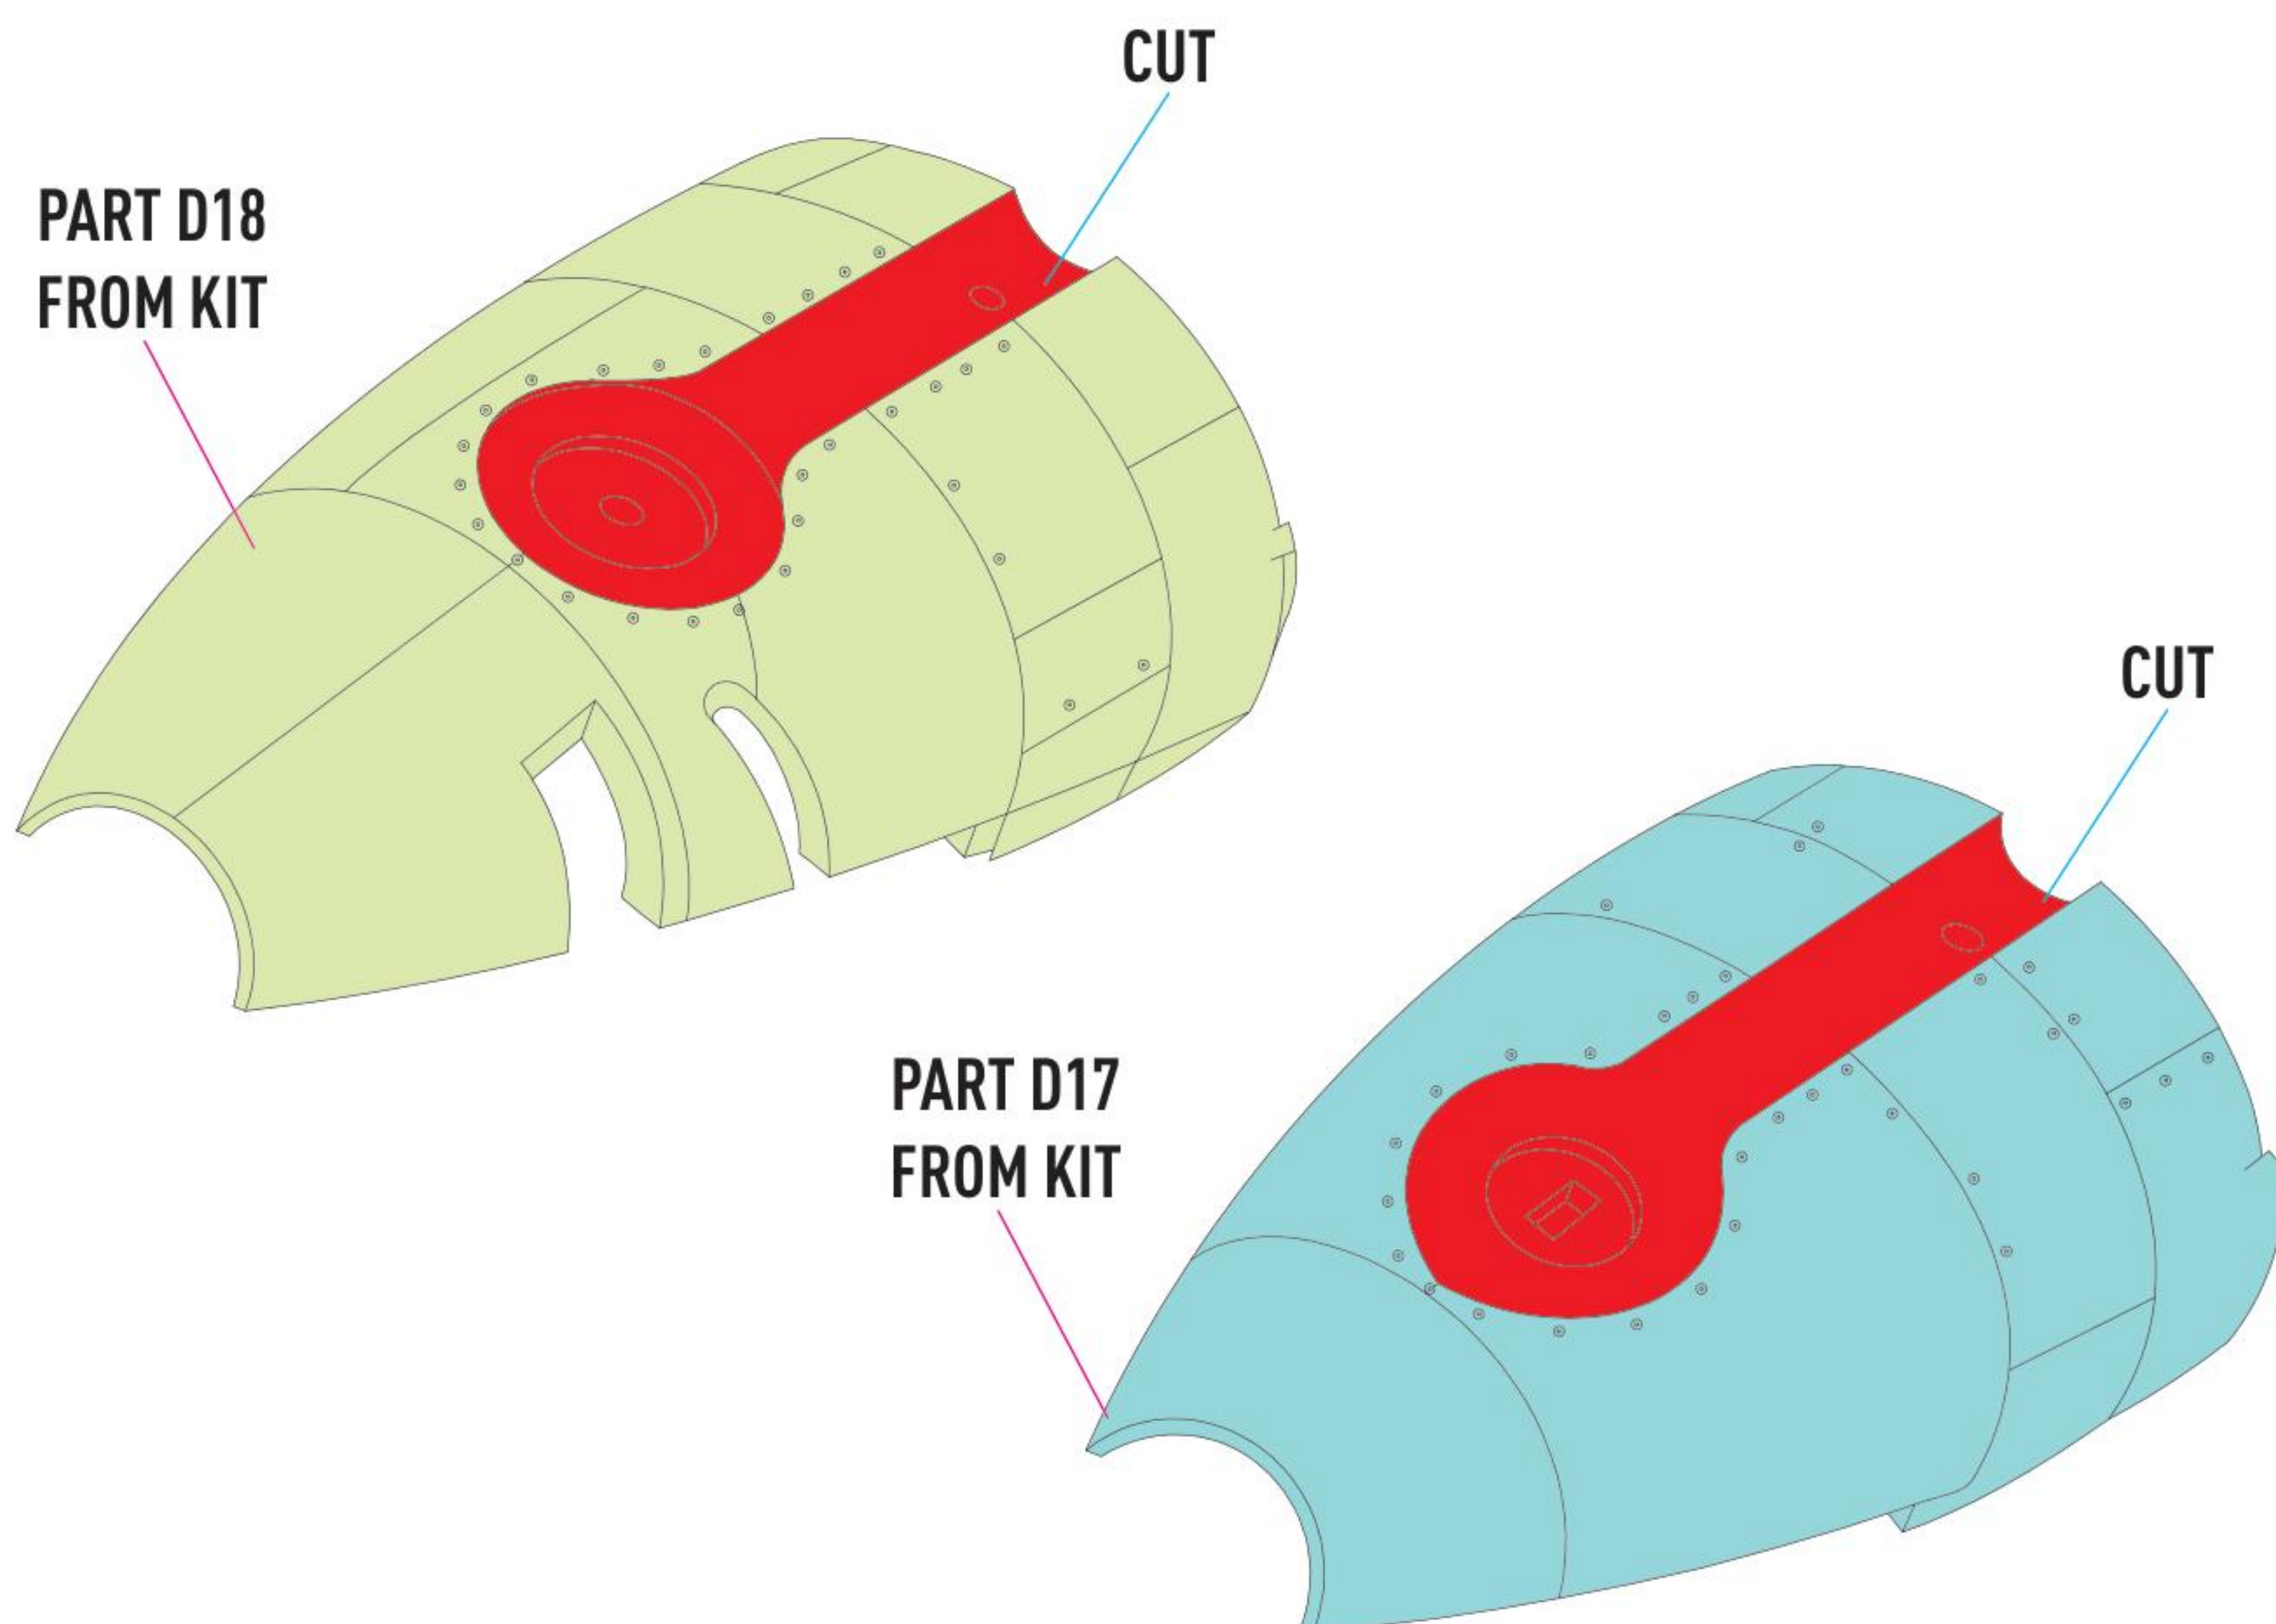


25 LEFT SIDE REPEAT FOR THE RIGHT SIDE

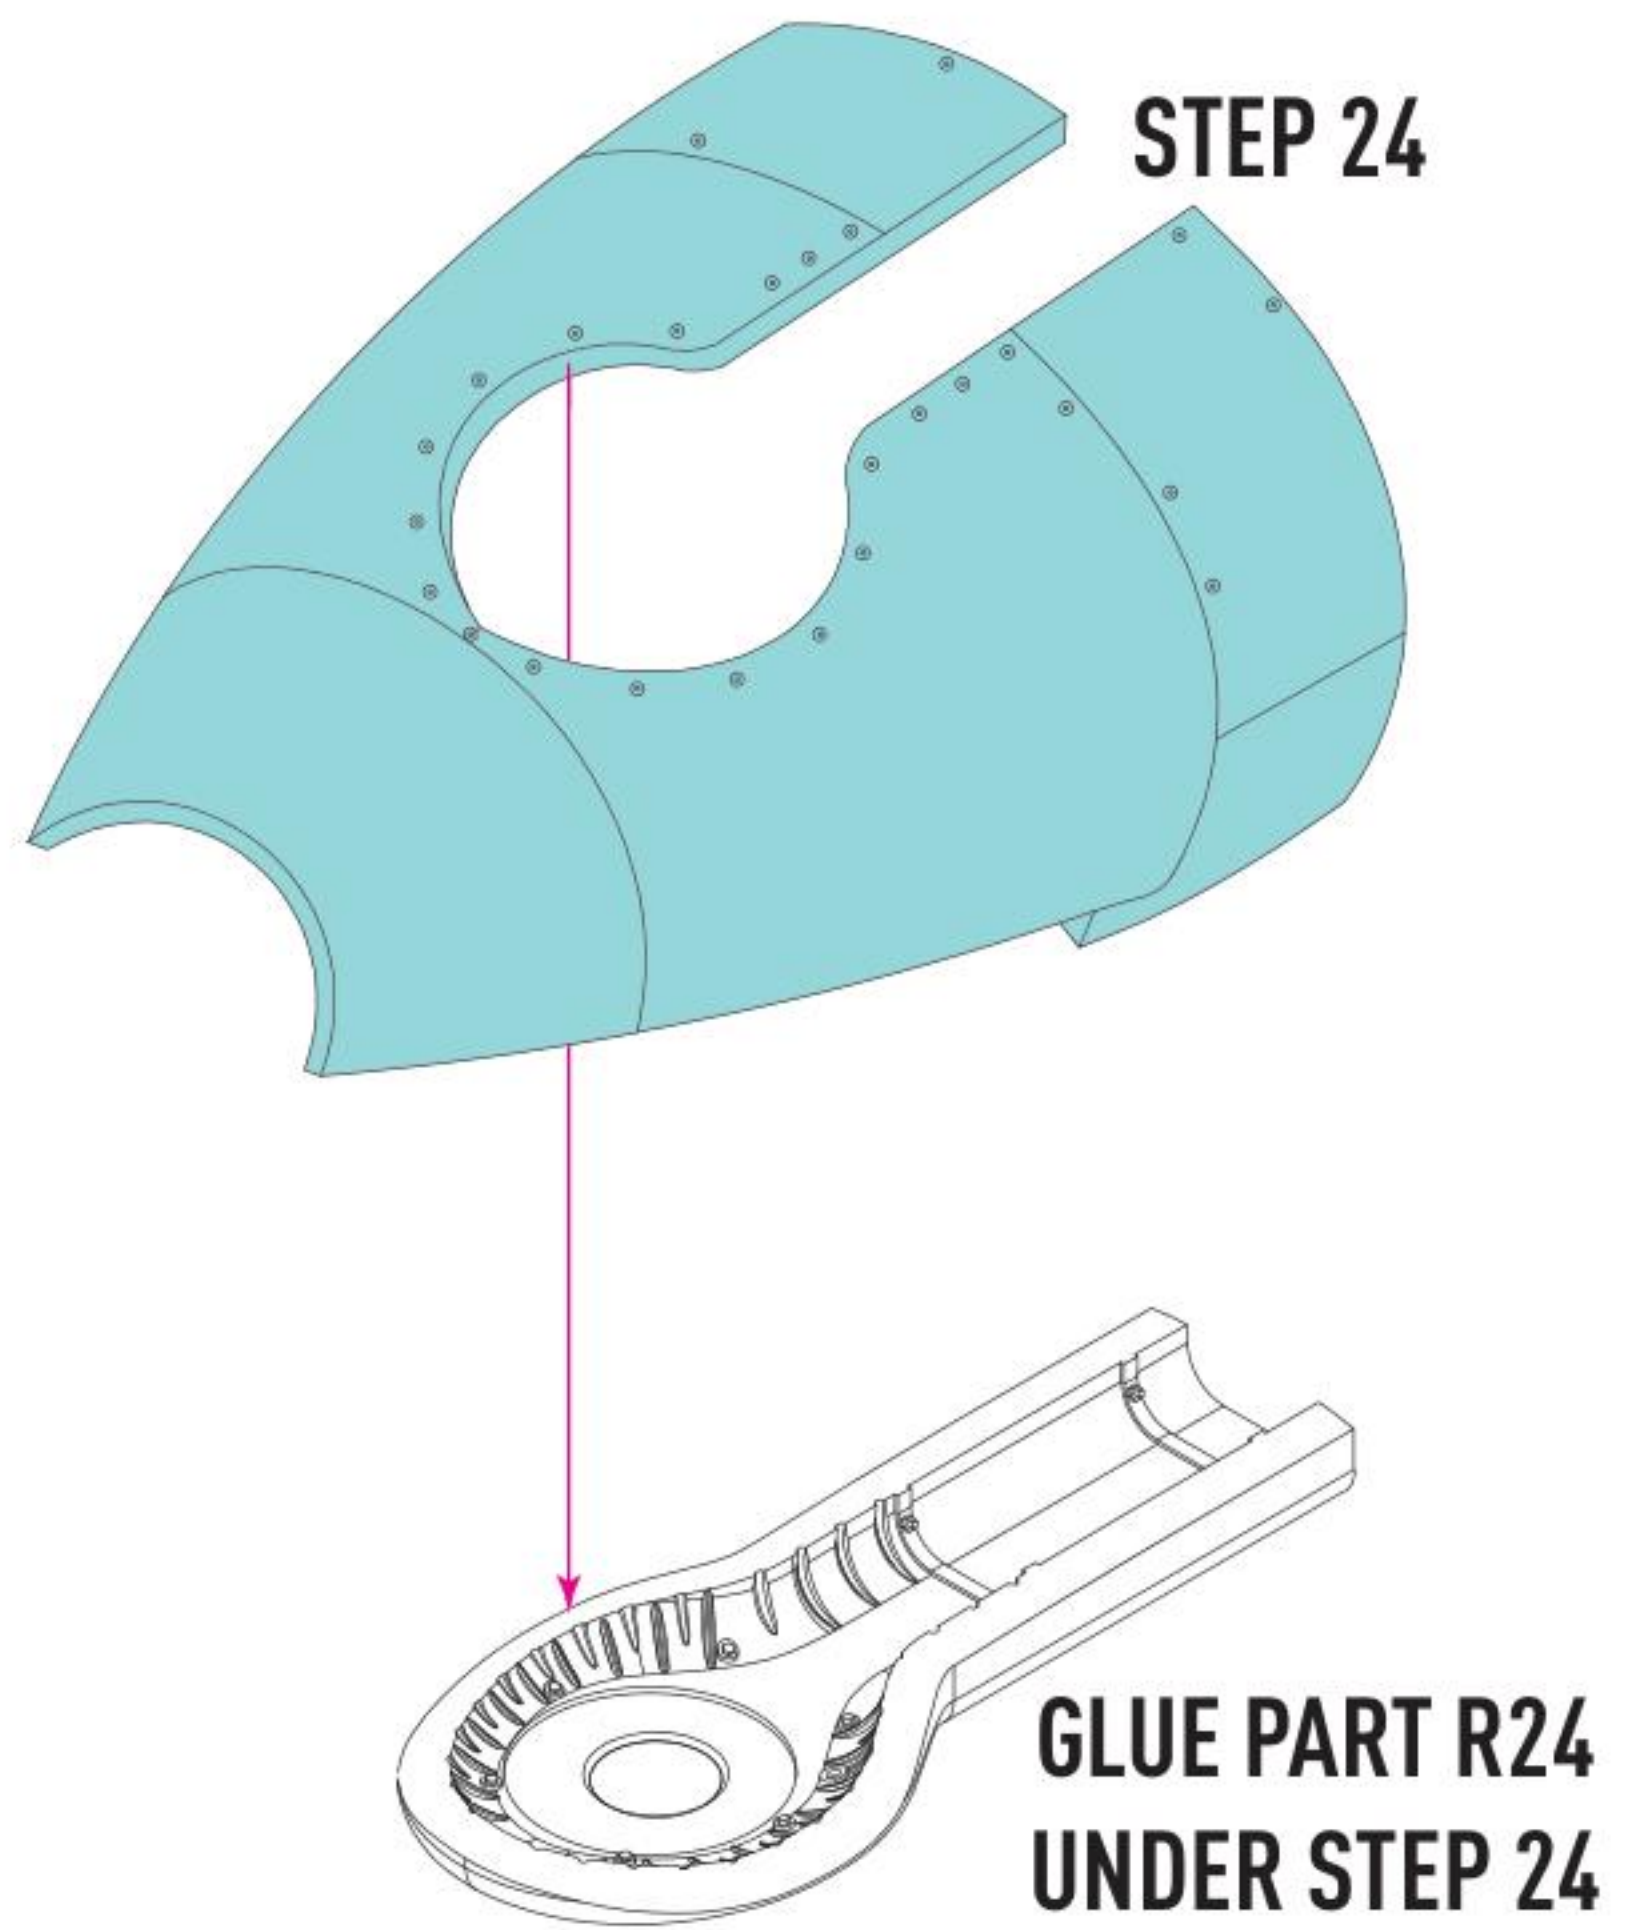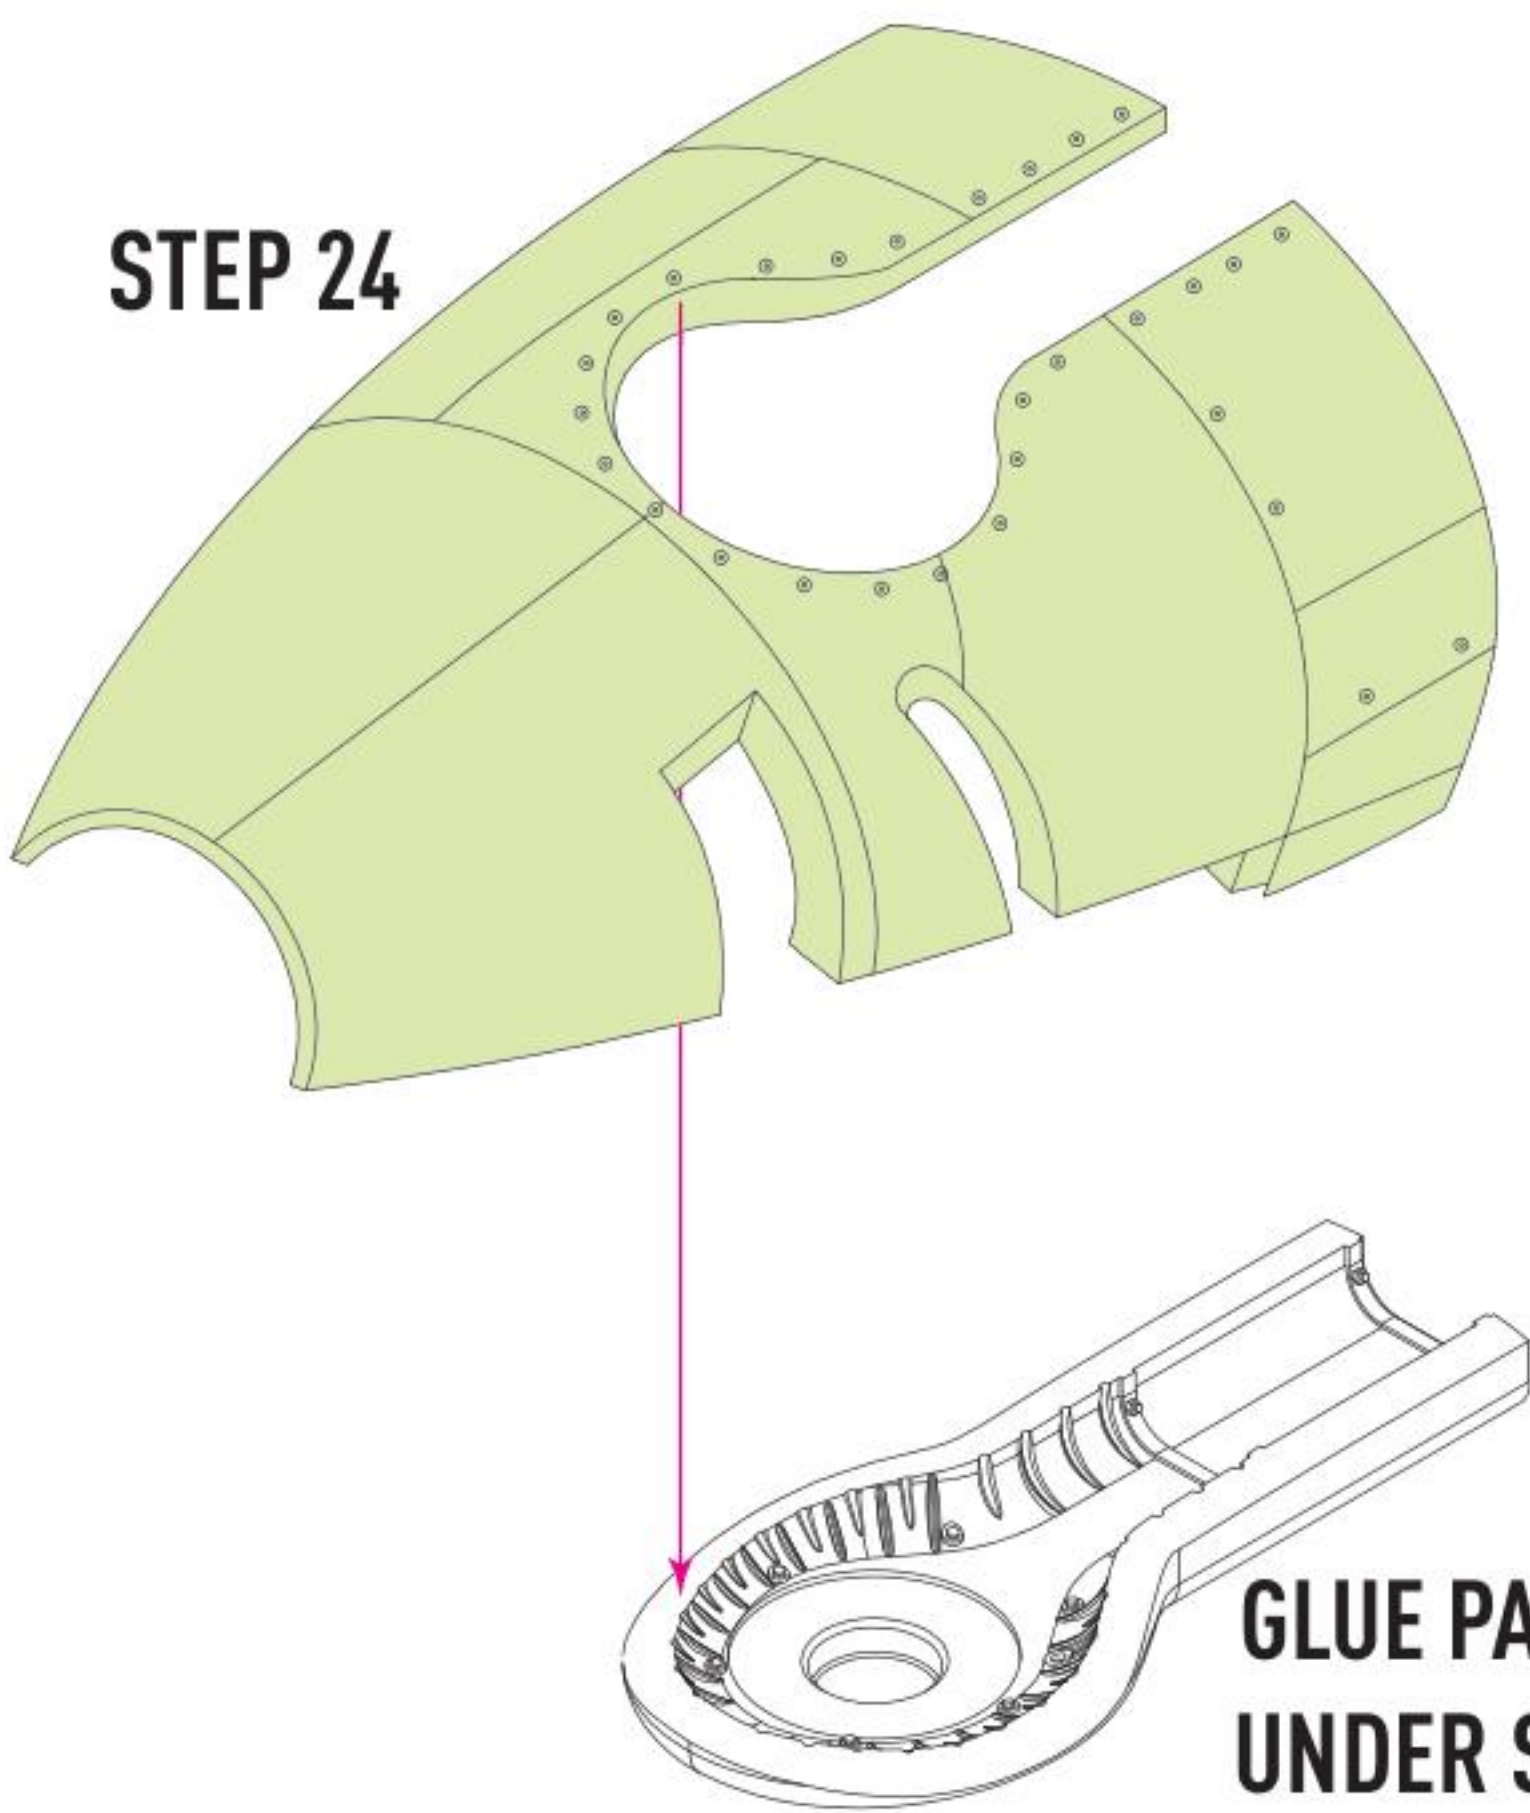


26 LEFT SIDE REPEAT FOR THE RIGHT SIDE

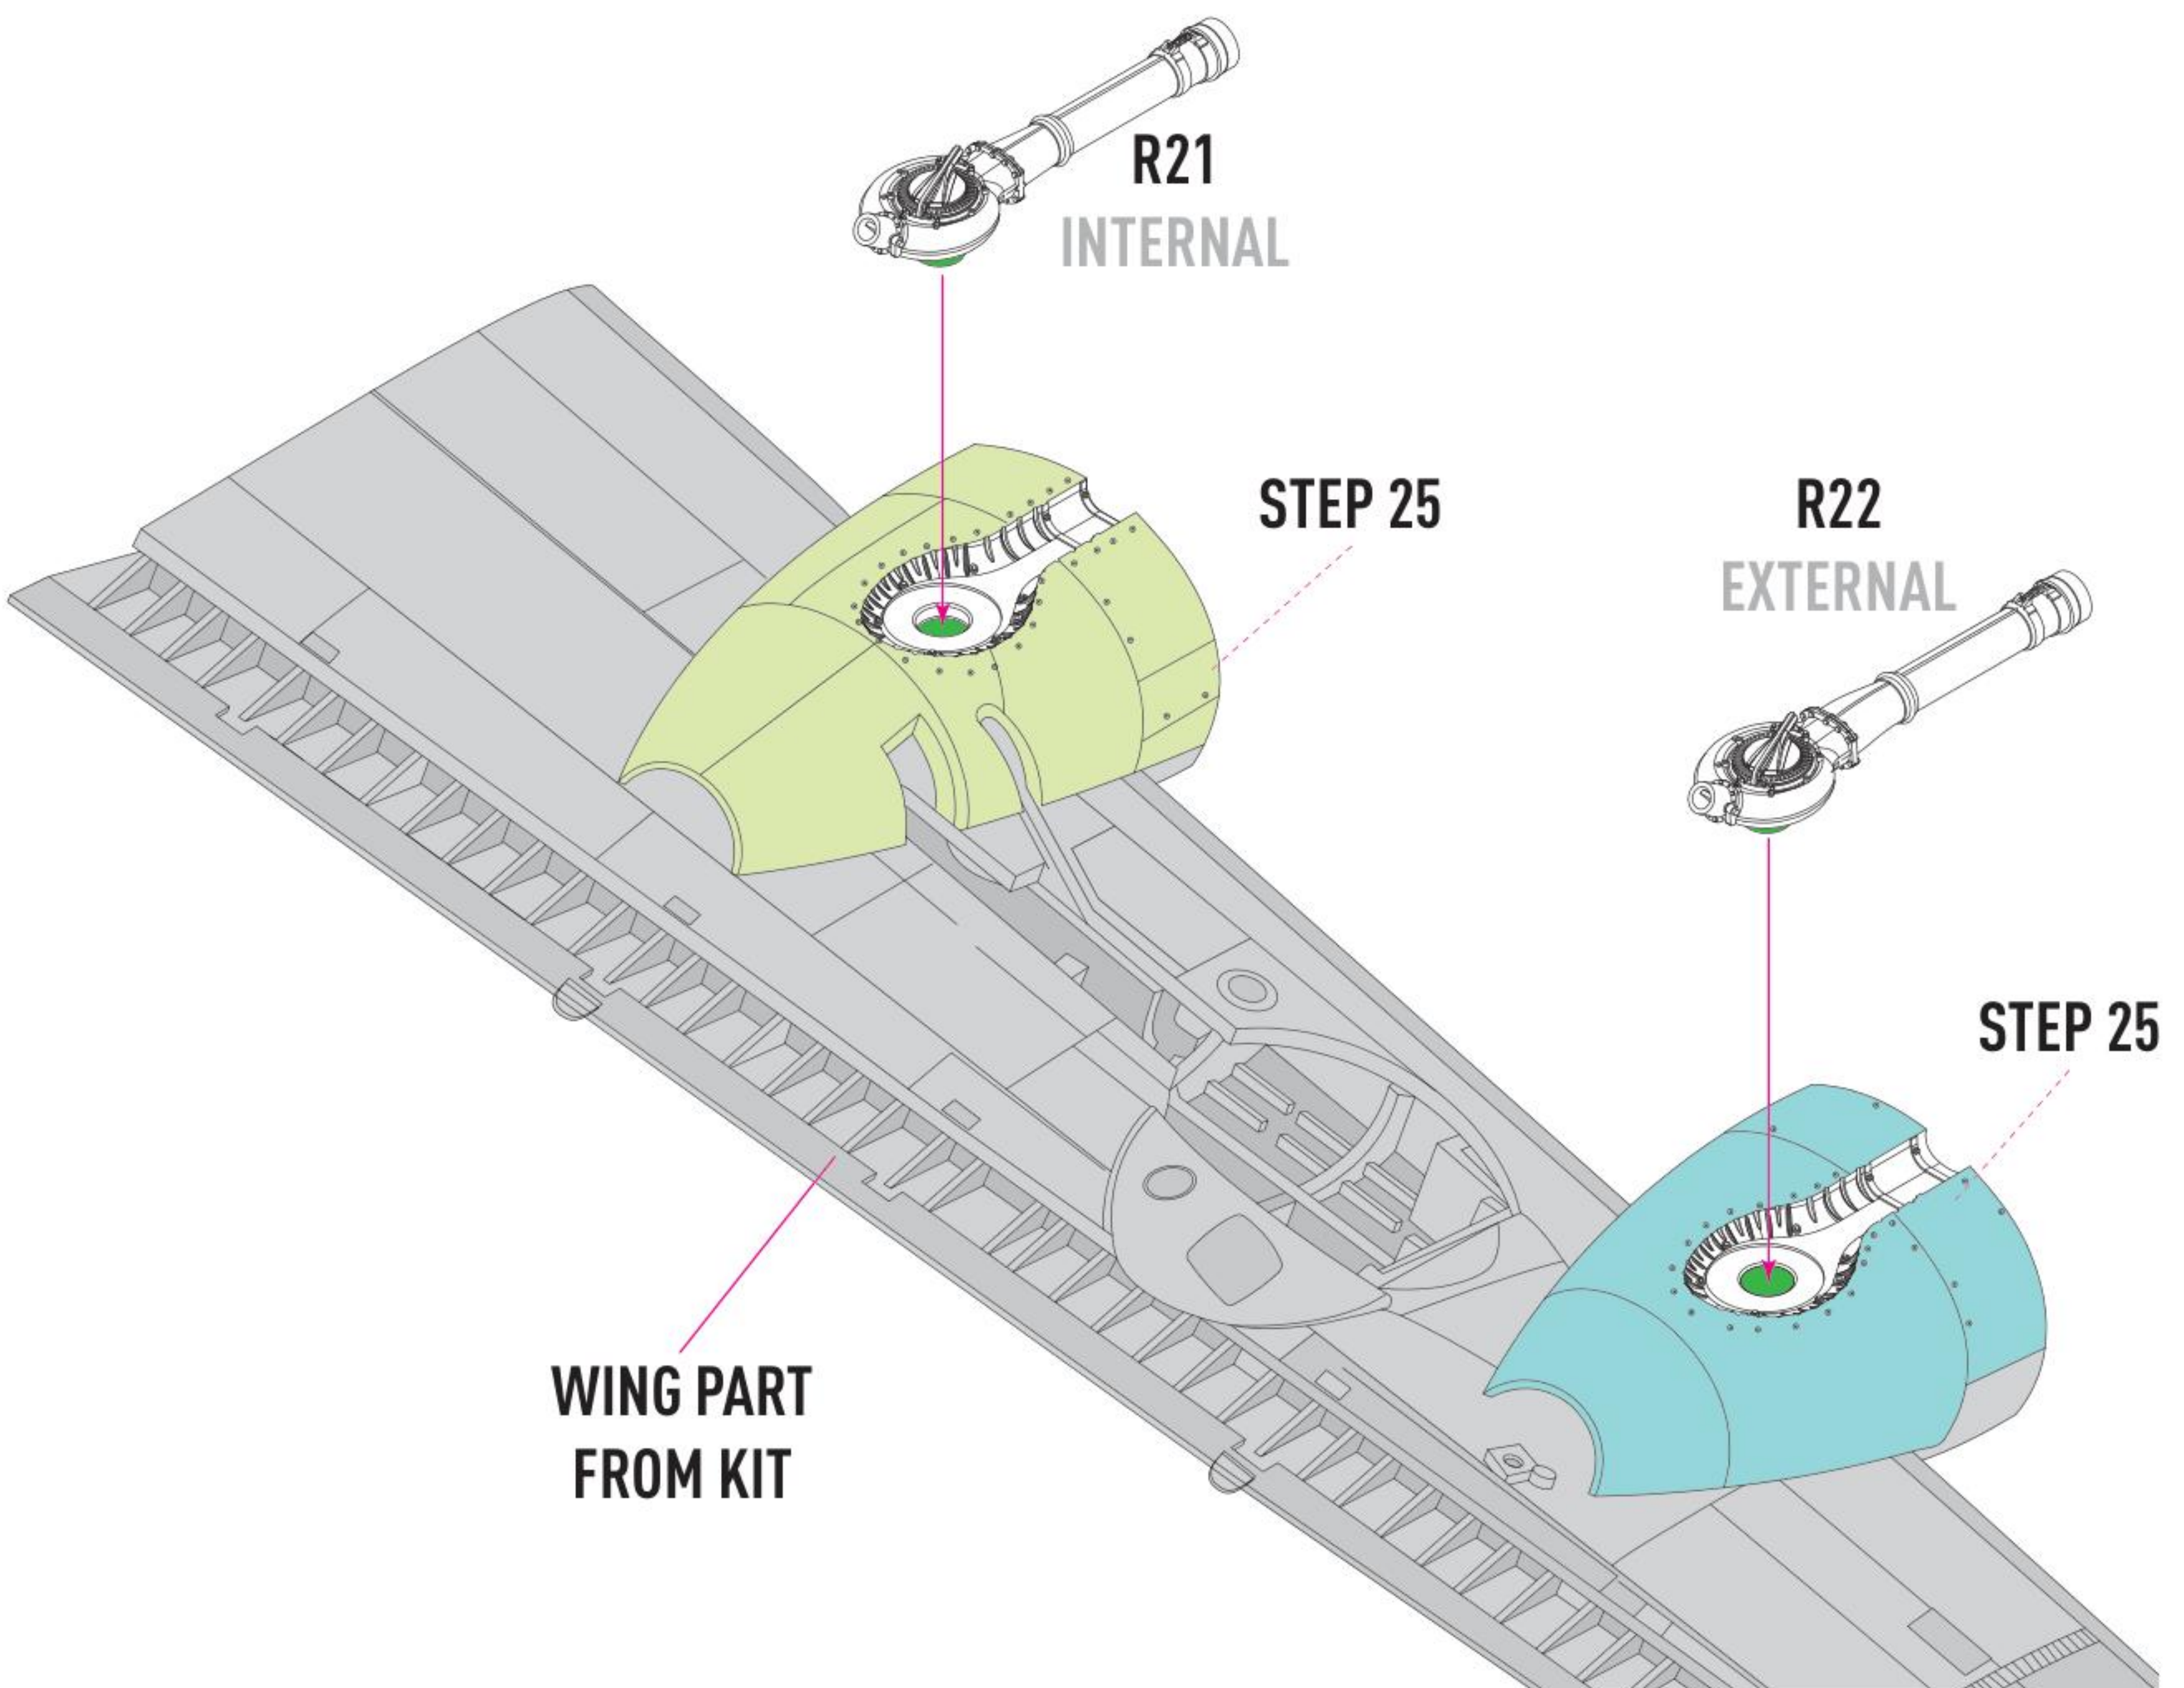

27 LEFT SIDE REPEAT FOR THE RIGHT SIDE

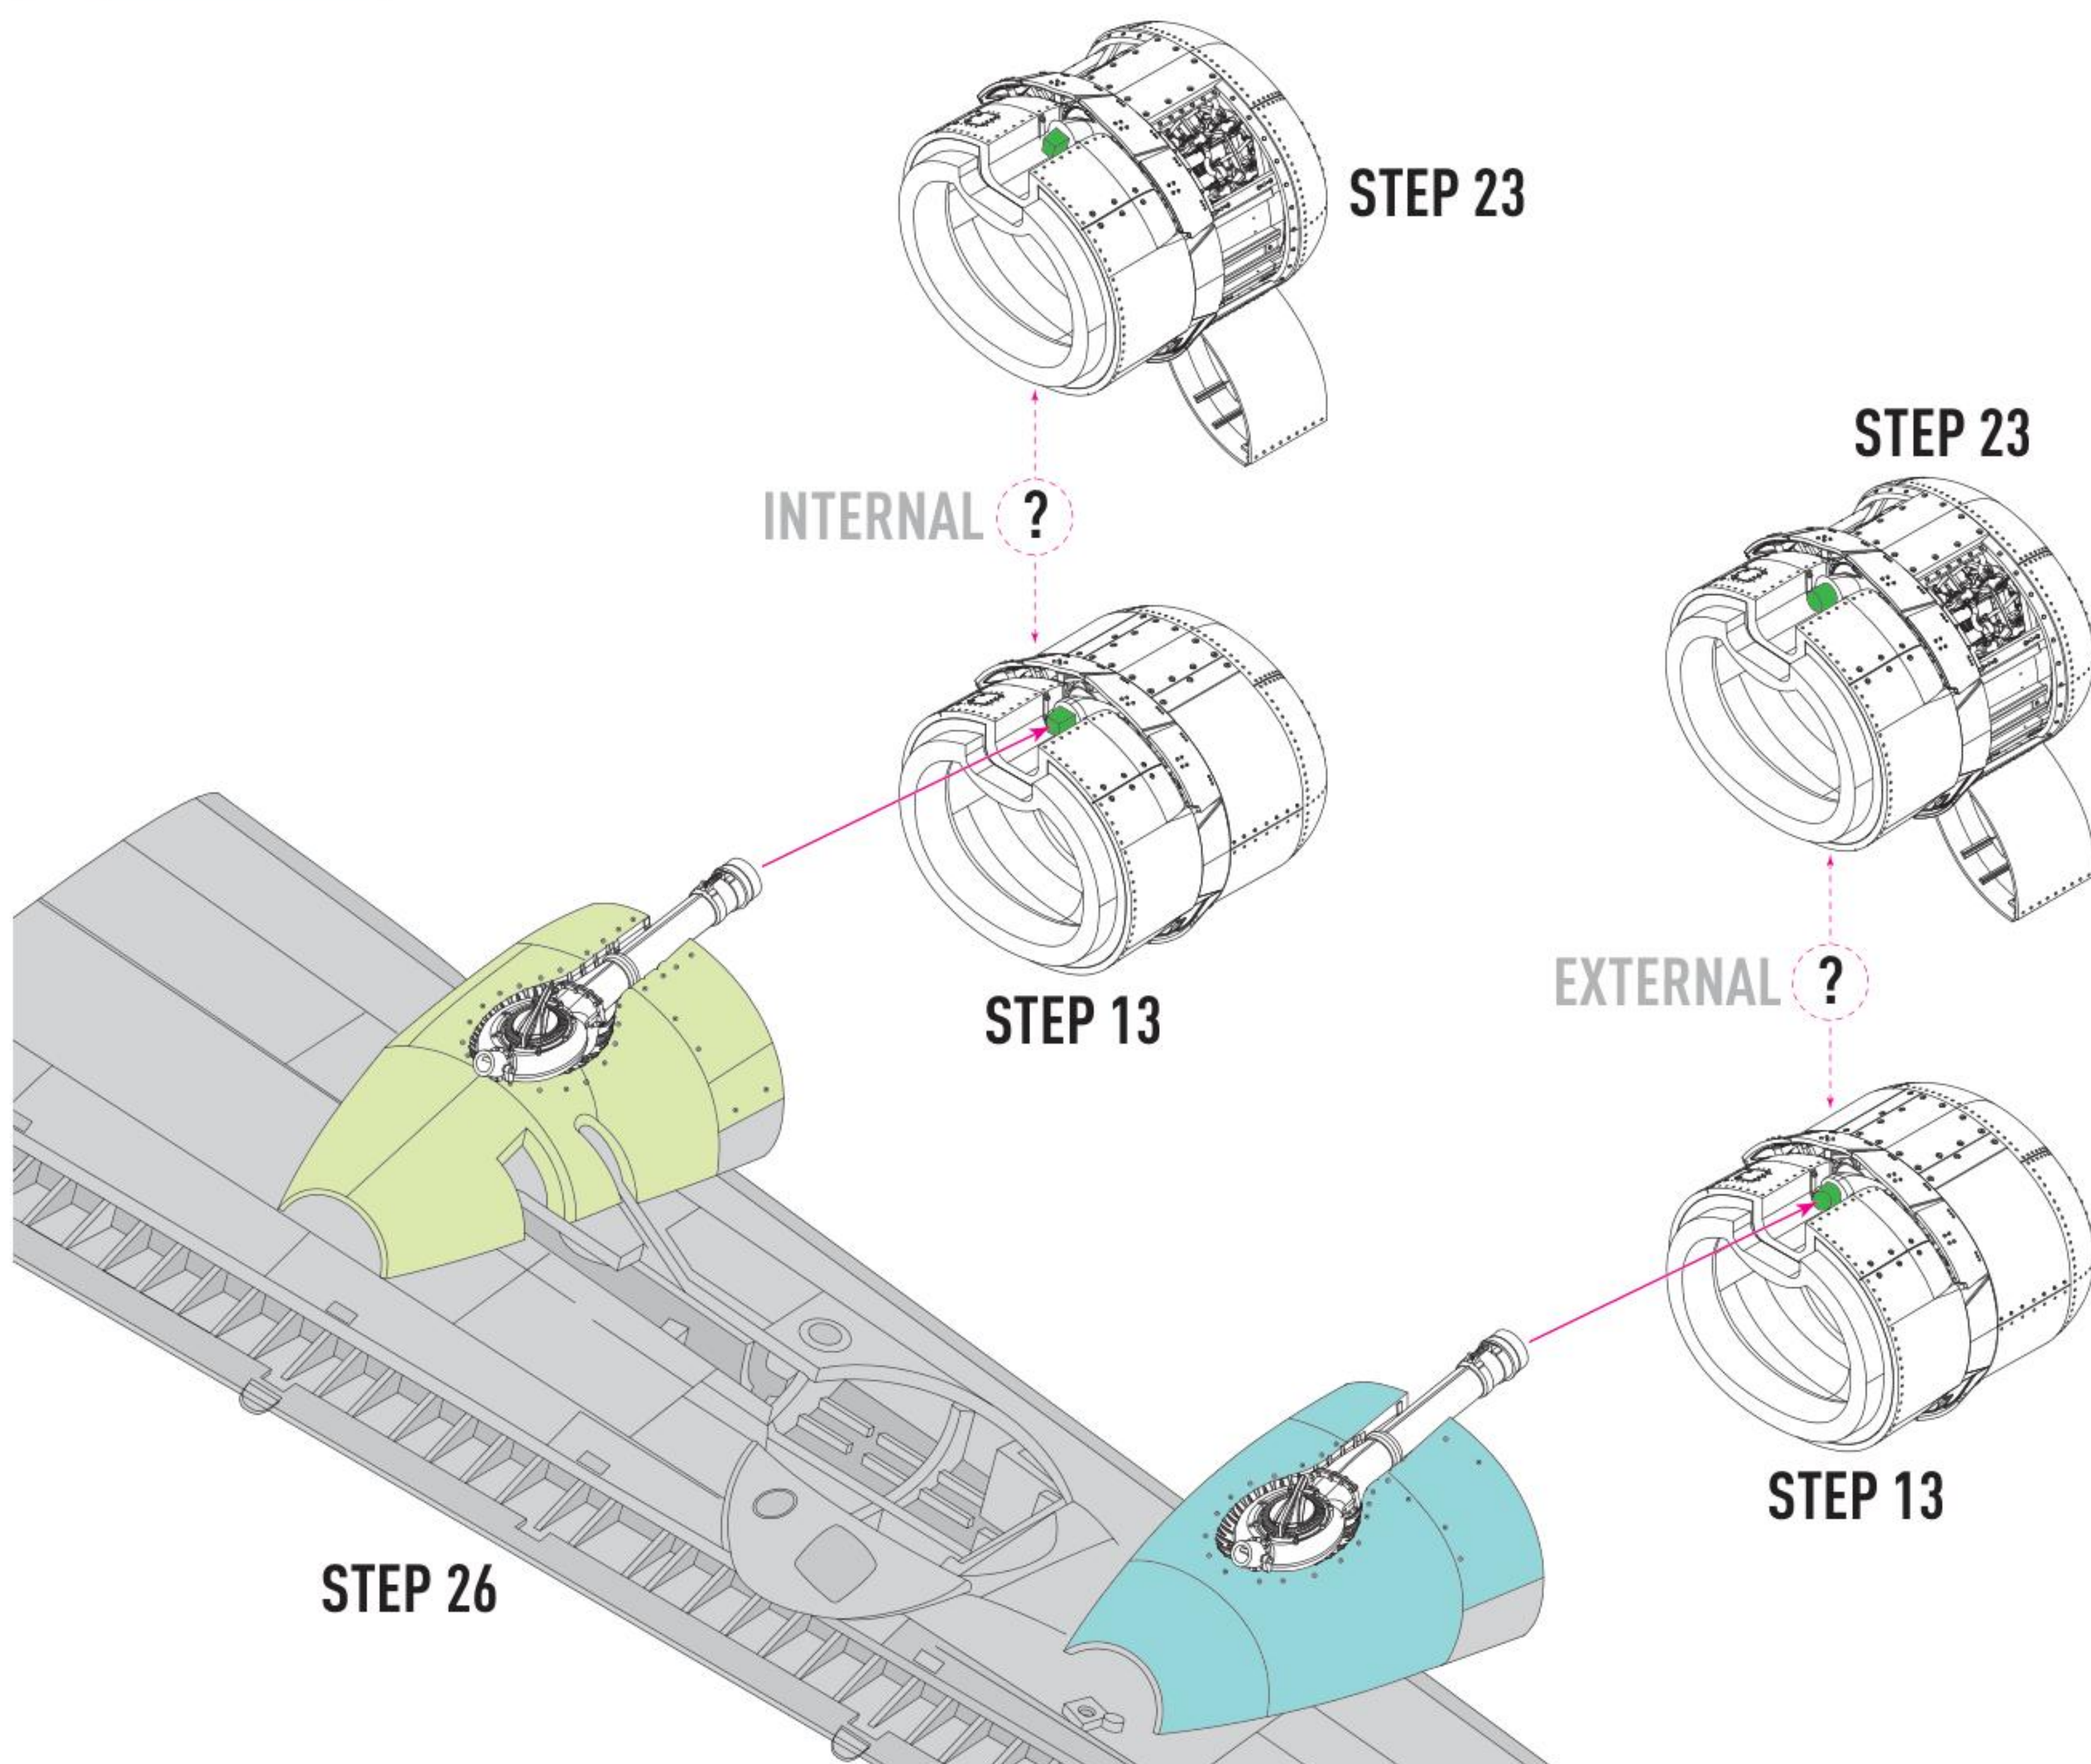

28 LEFT SIDE REPEAT FOR THE RIGHT SIDE

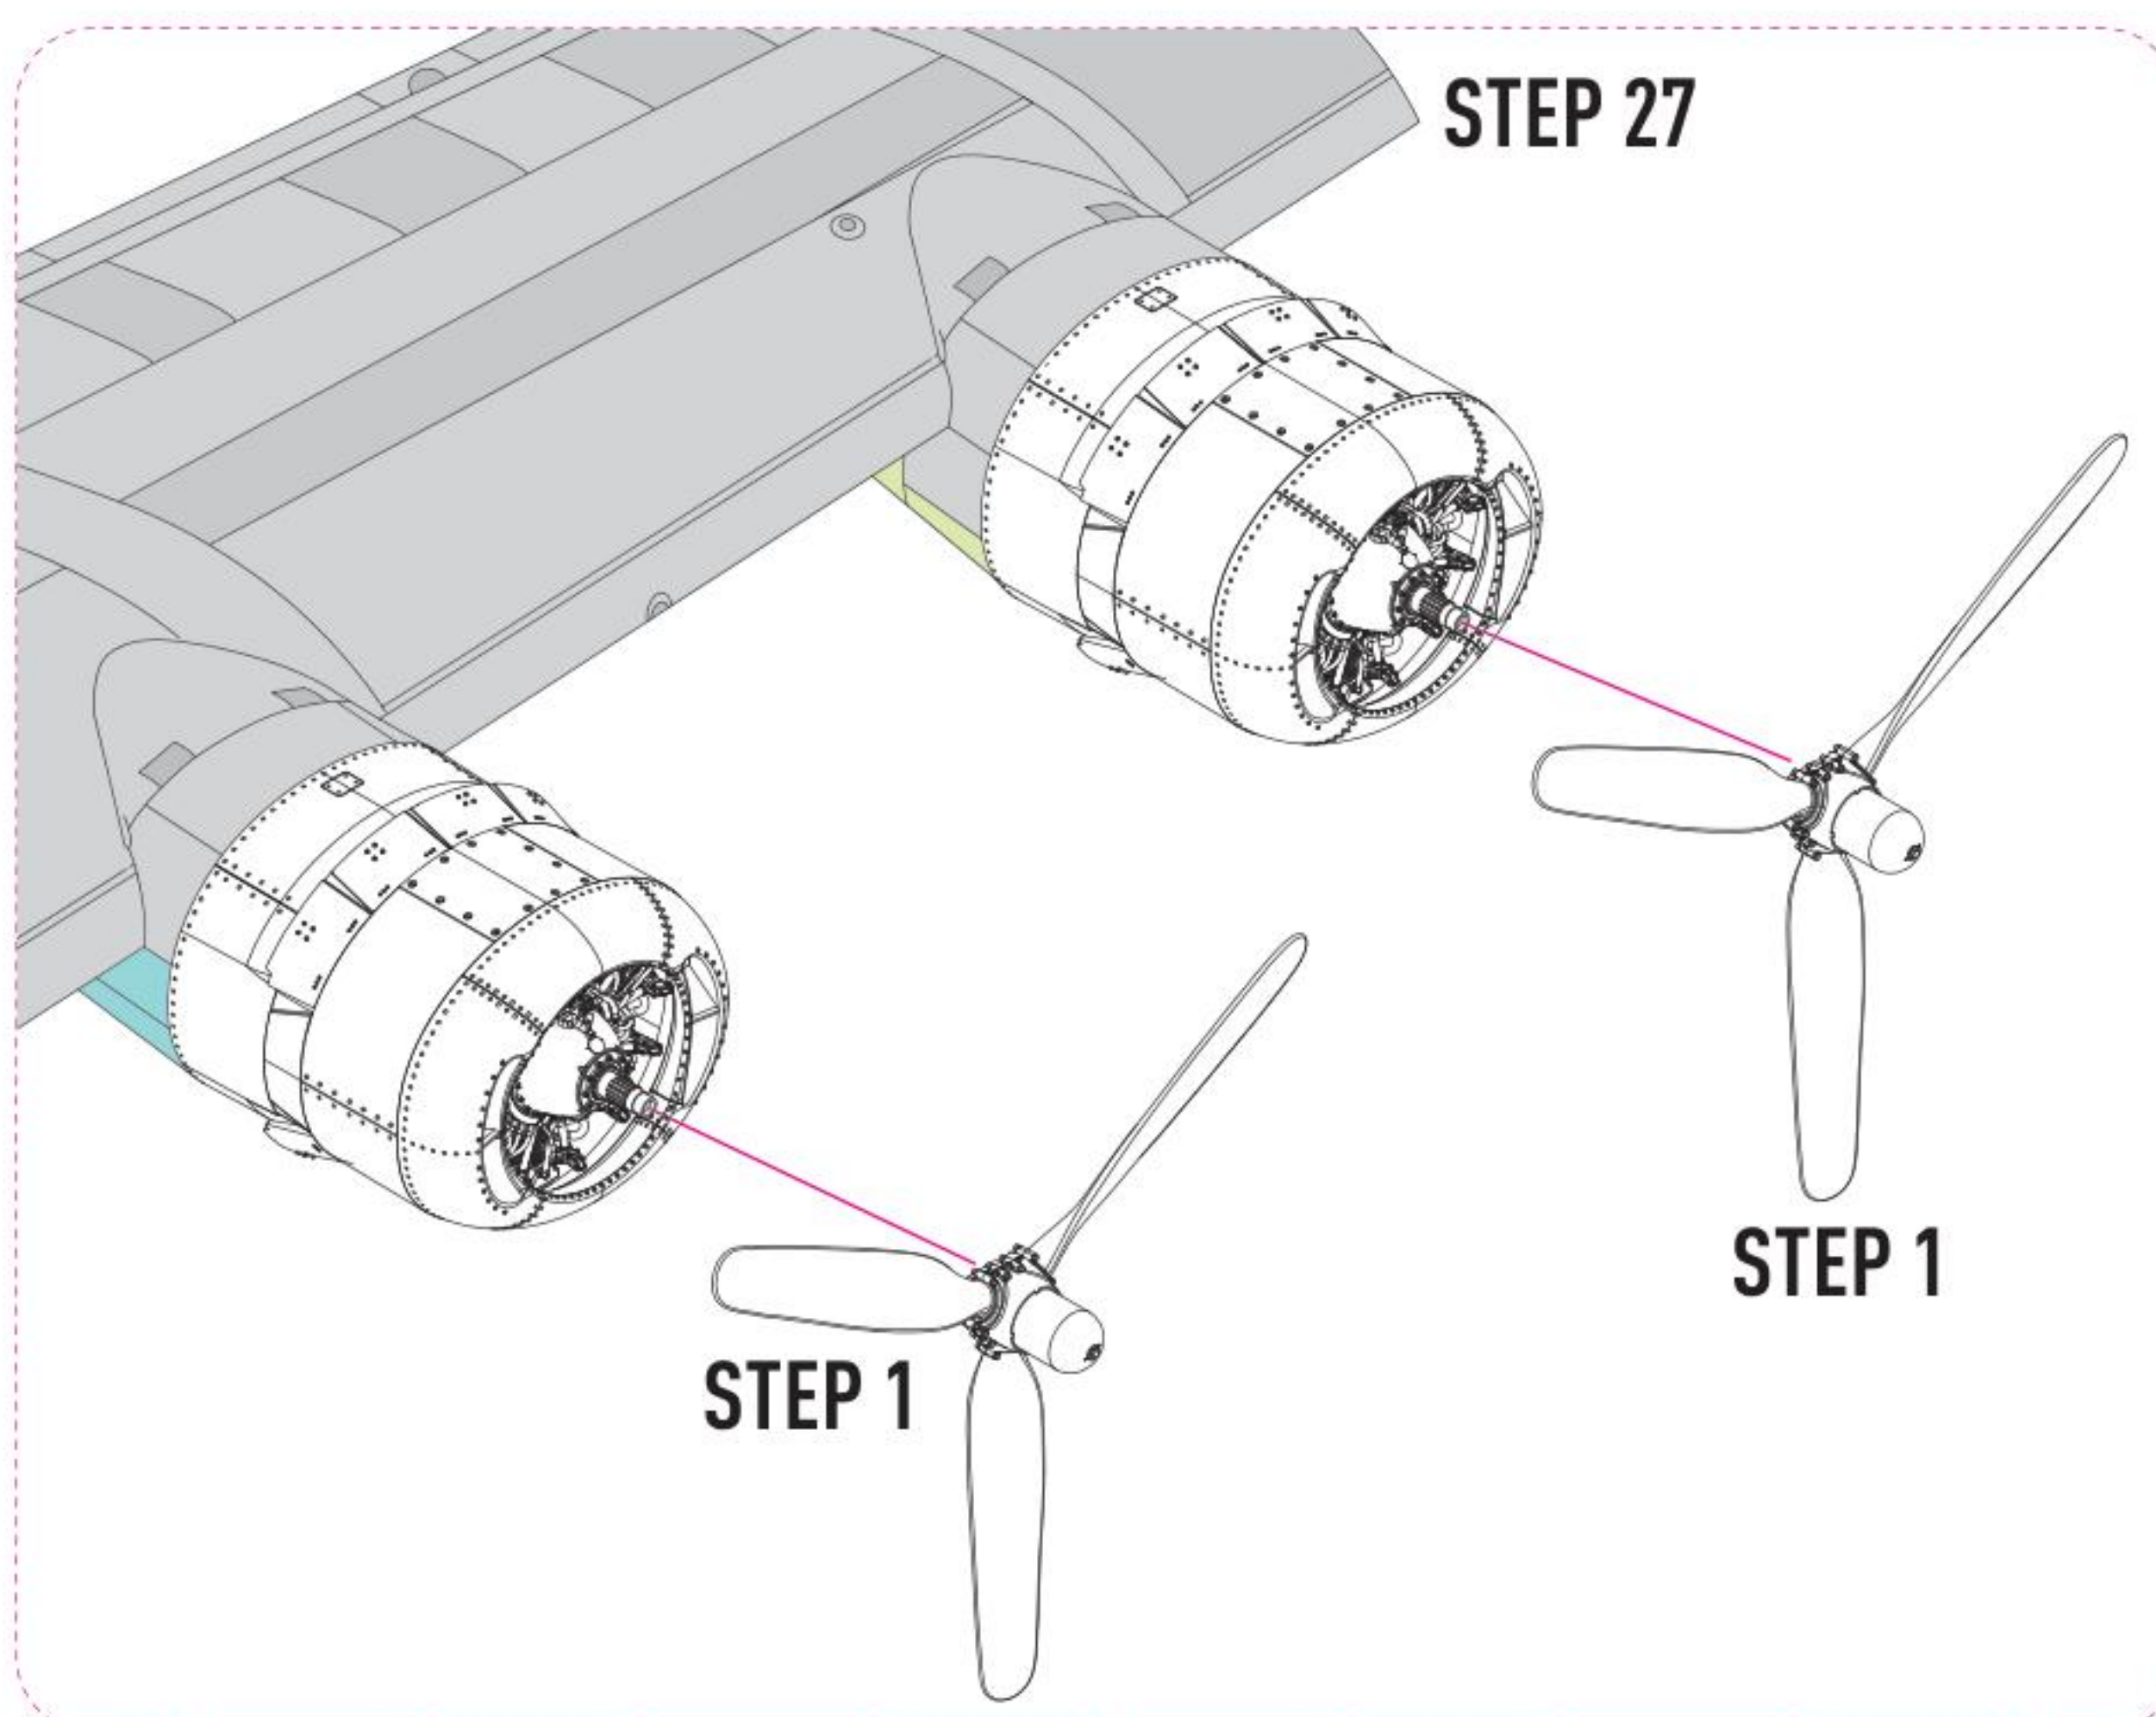

DECAL INSTRUCTION

