




DETAILS AFTER REMOVAL FROM SUPPORTS

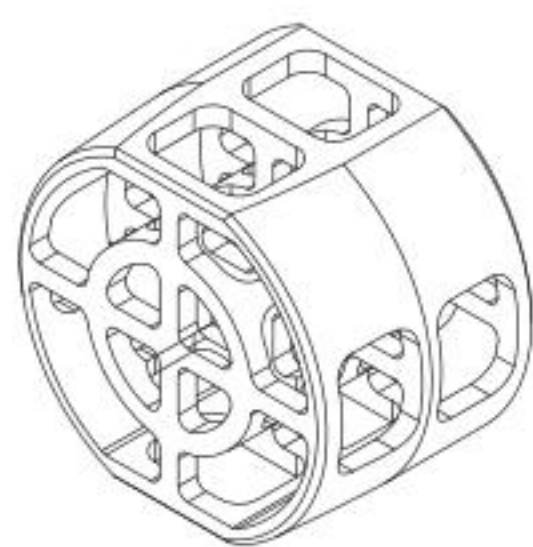


R2

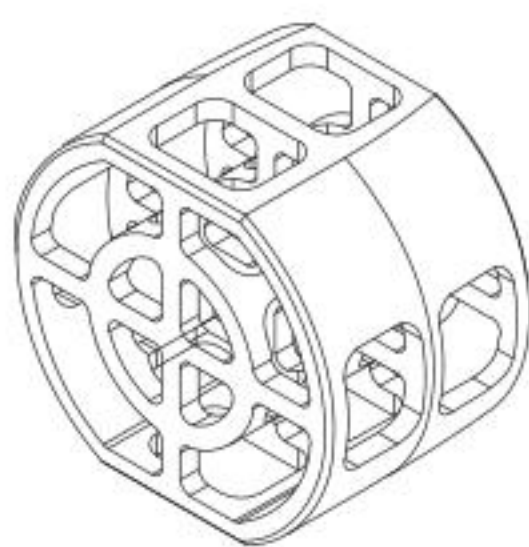


R4

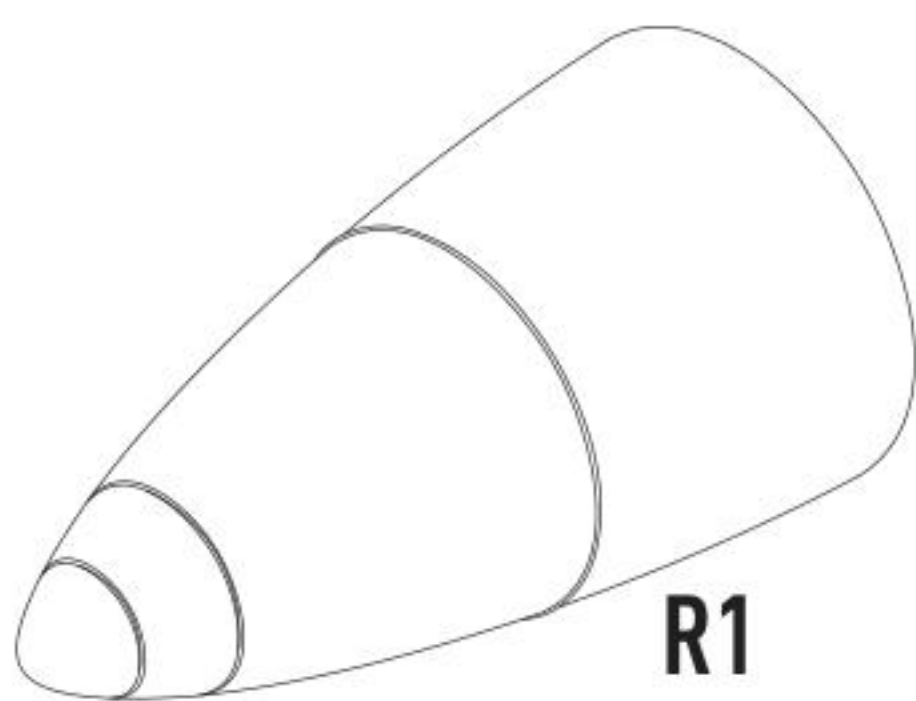

R1

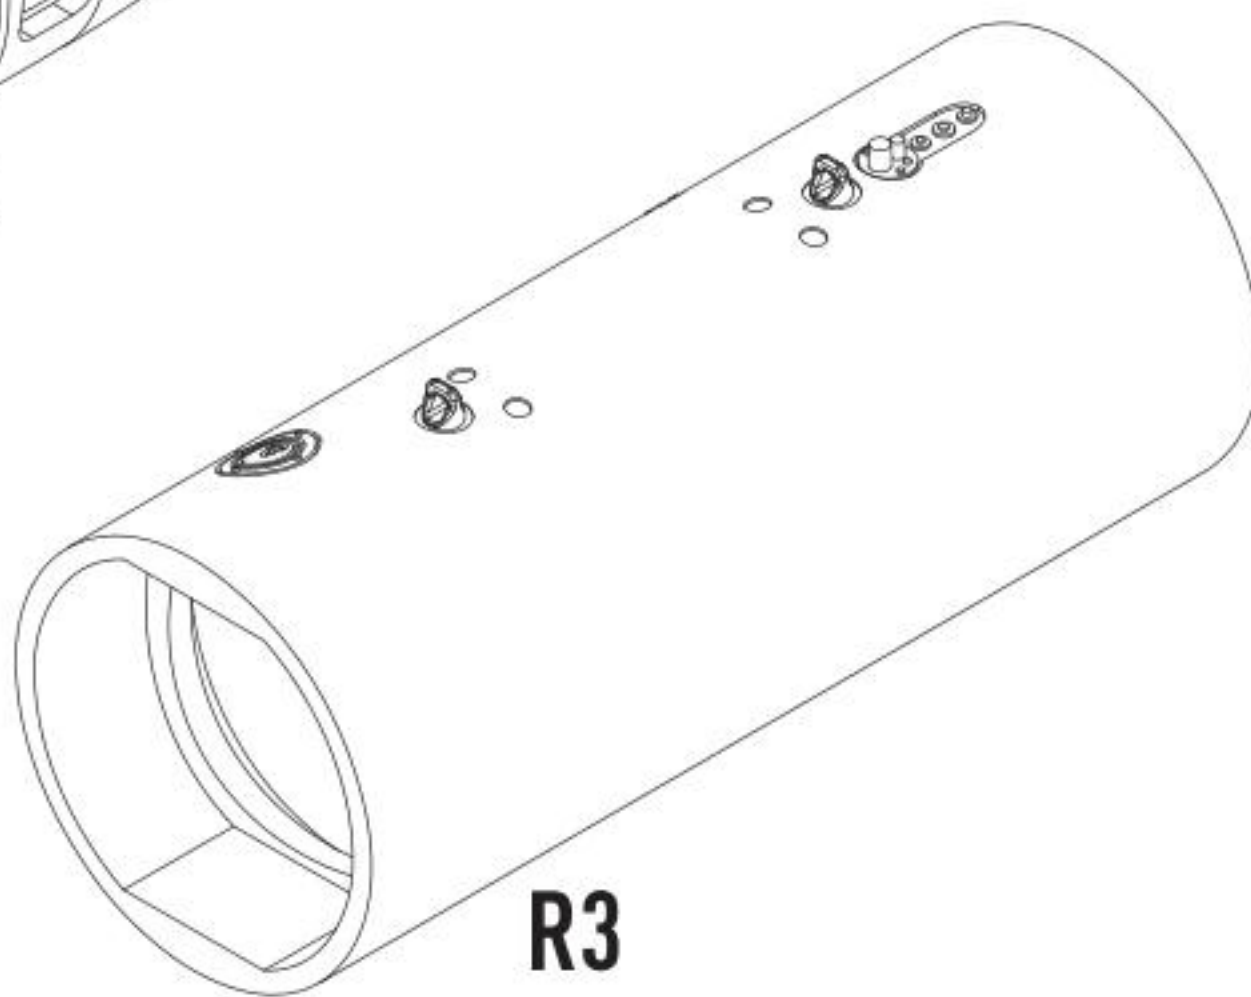

R3

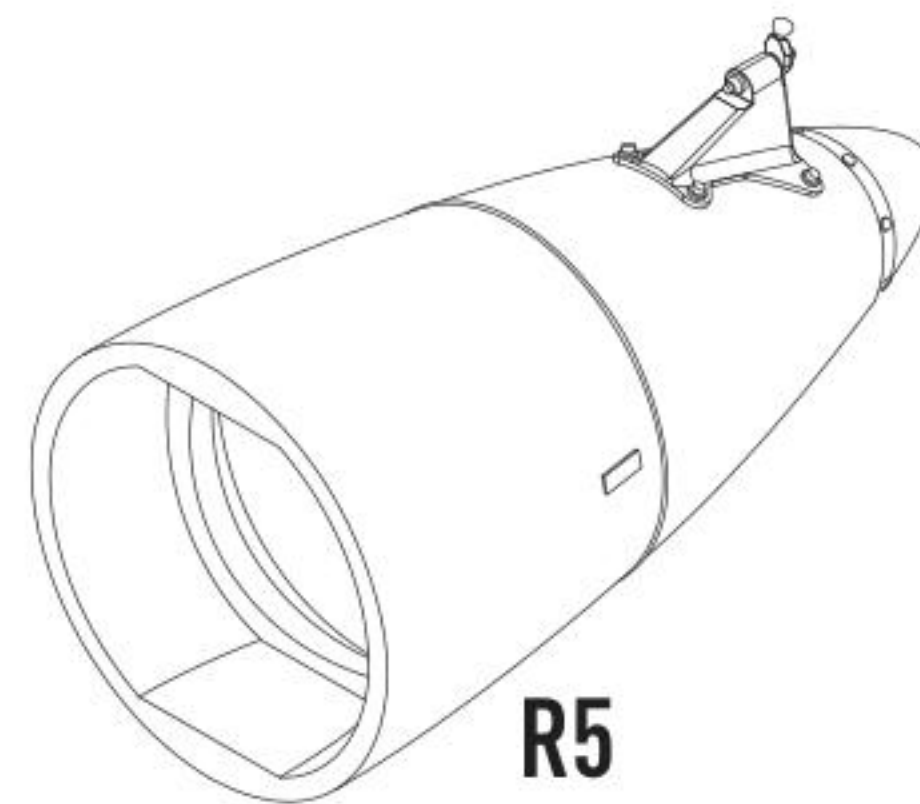






R5



USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

1

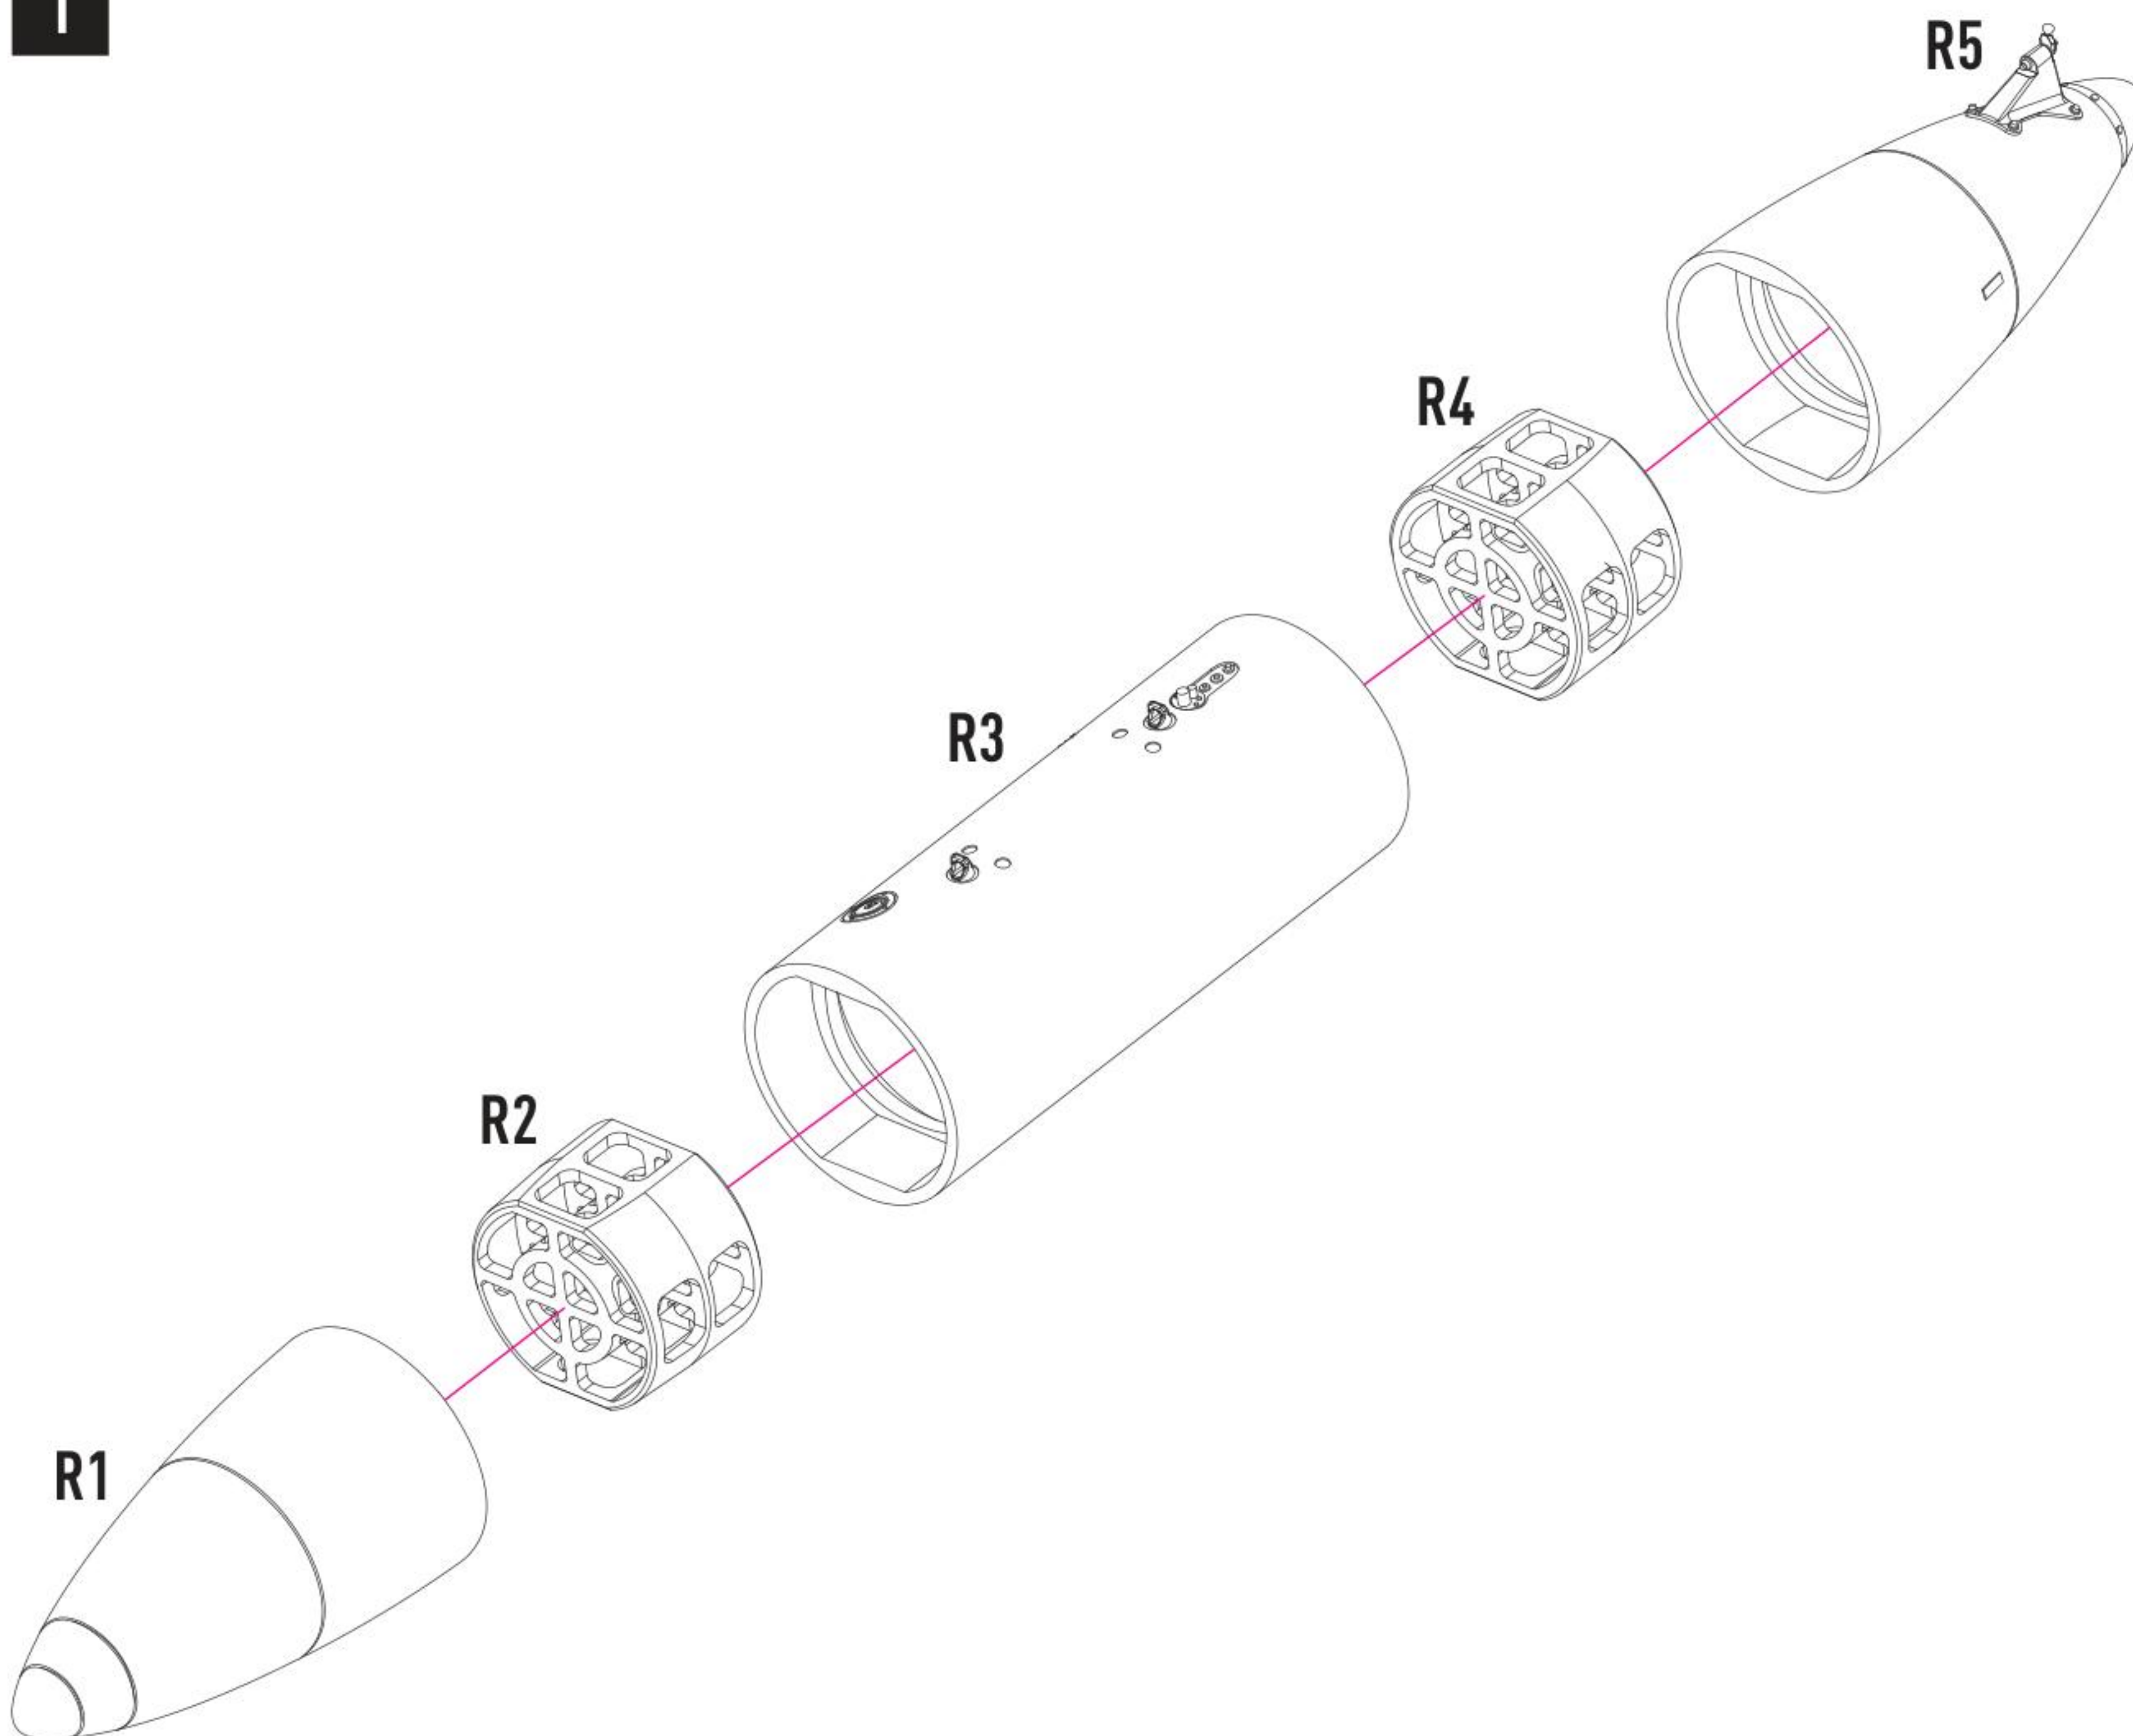

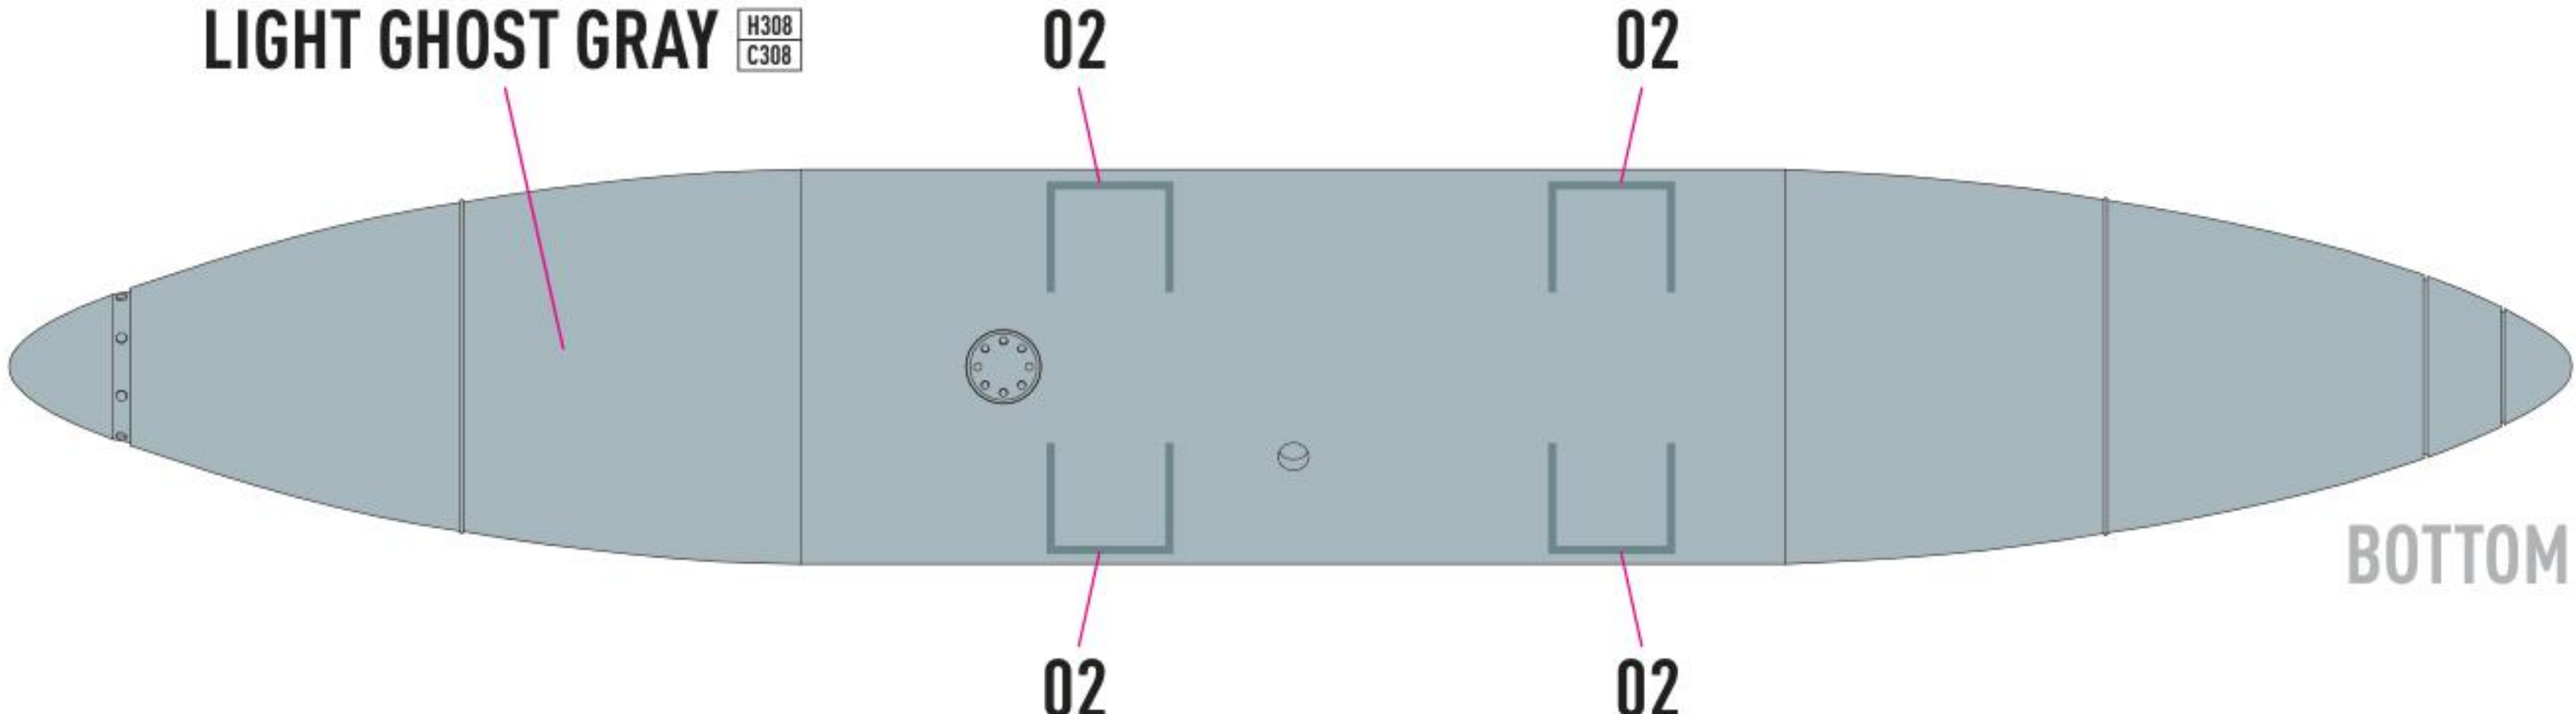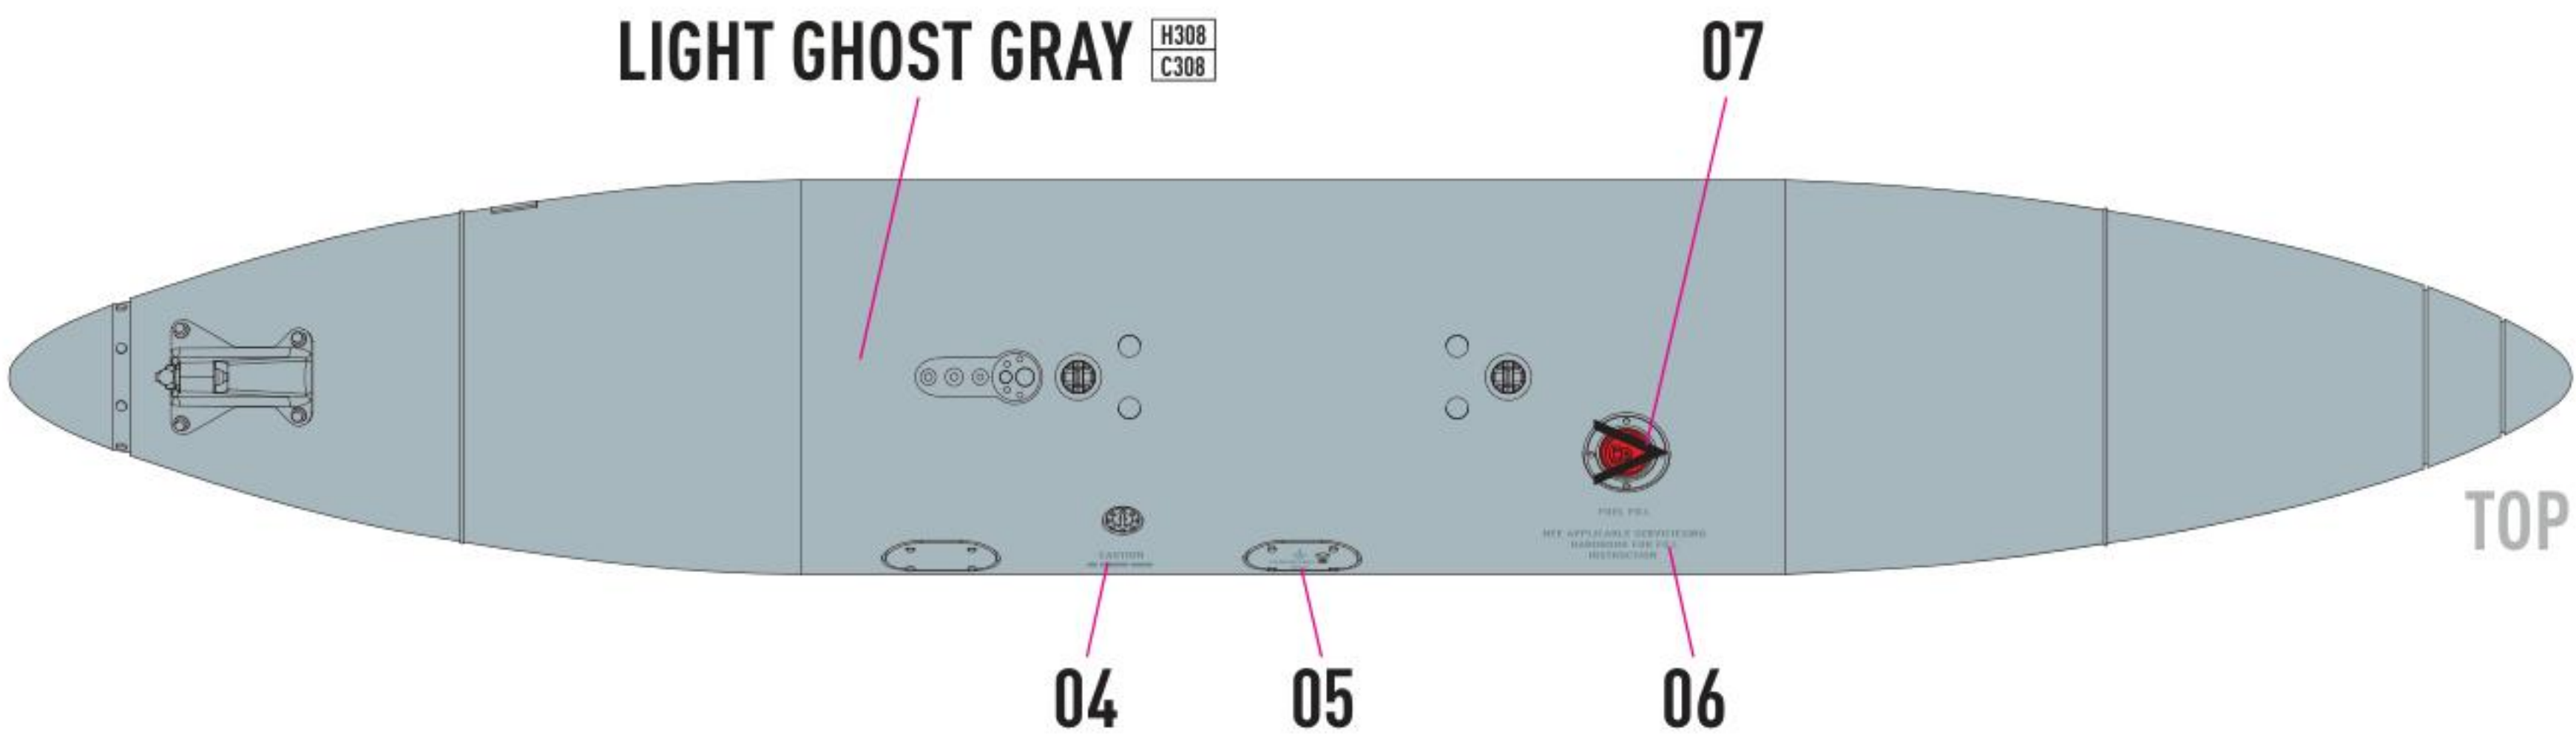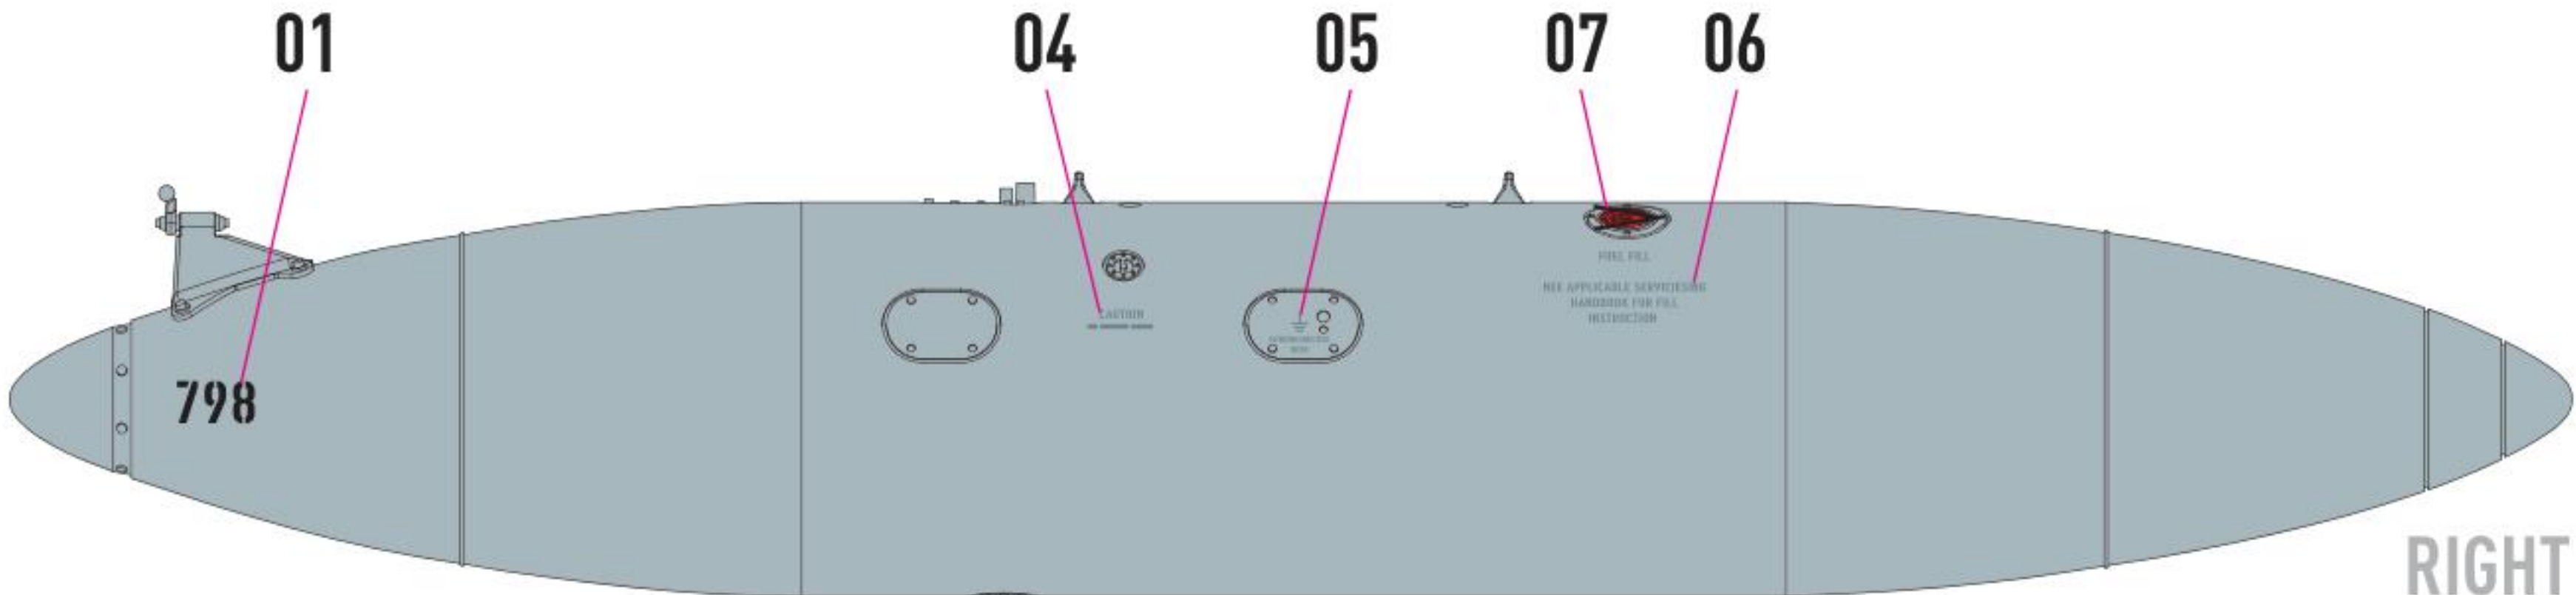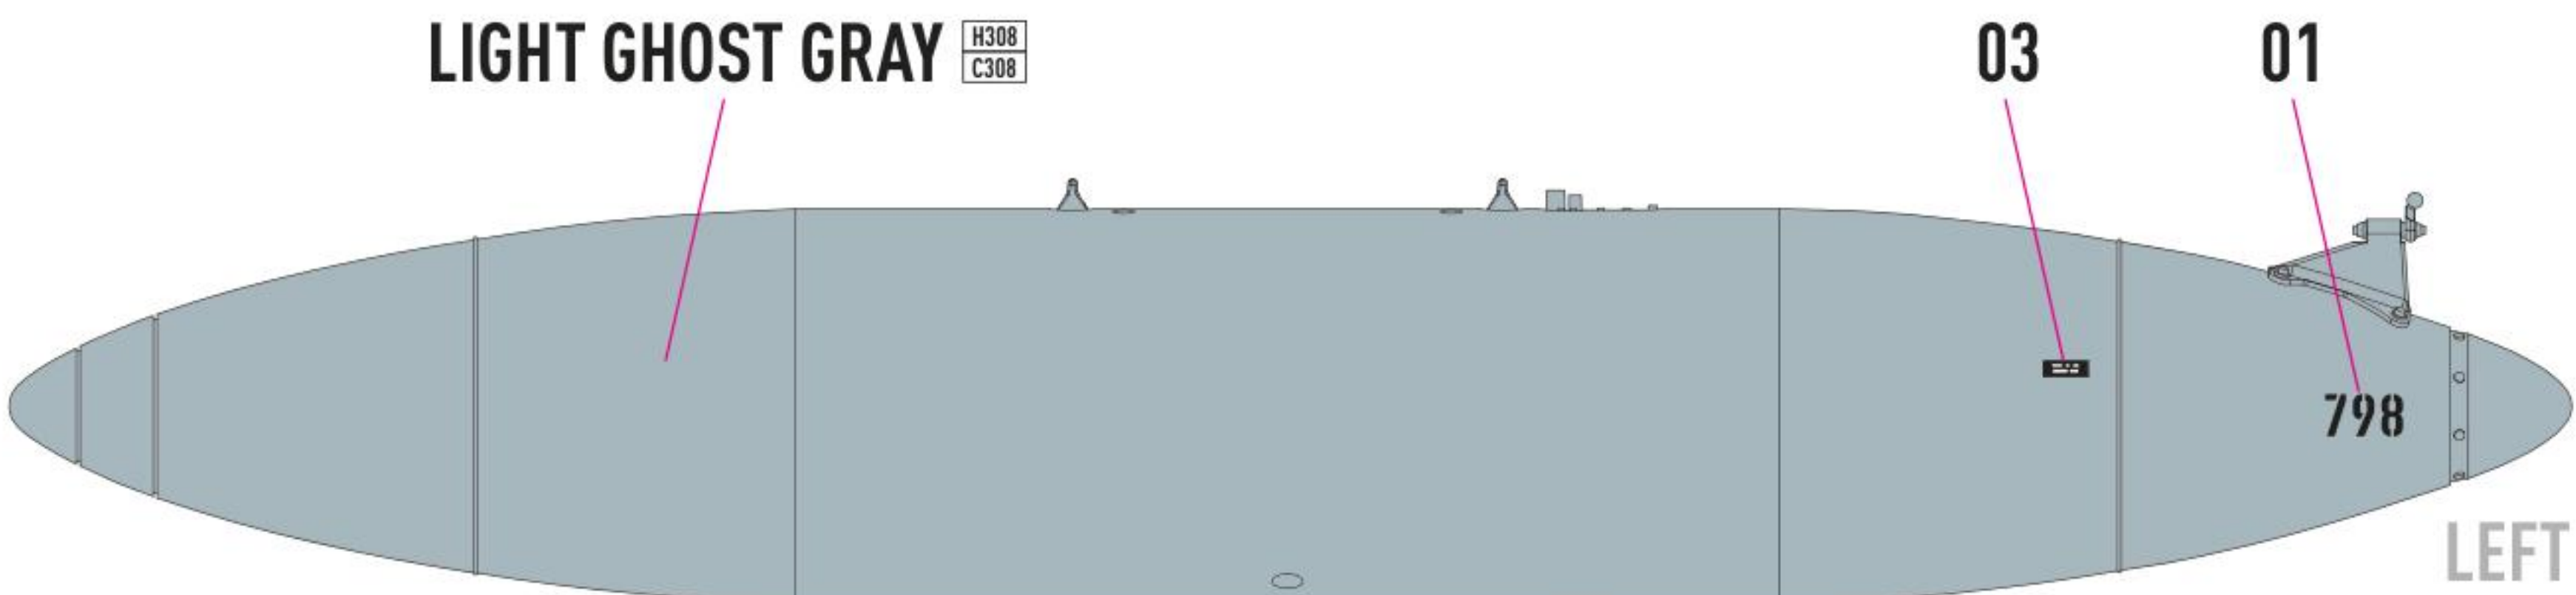

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
LIGHT GHOST GRAY	H308	C308