

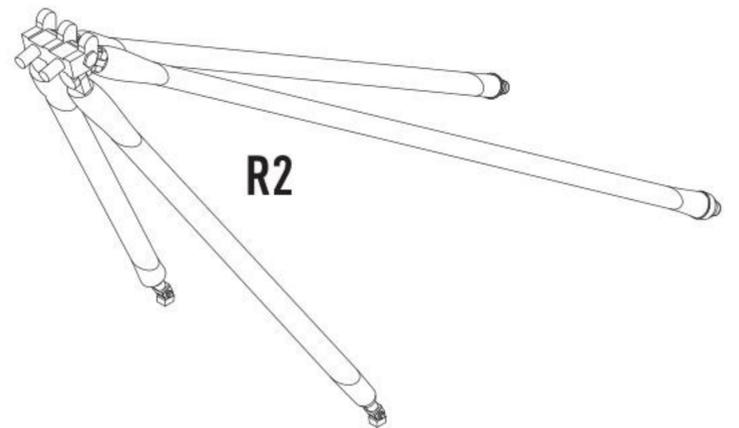
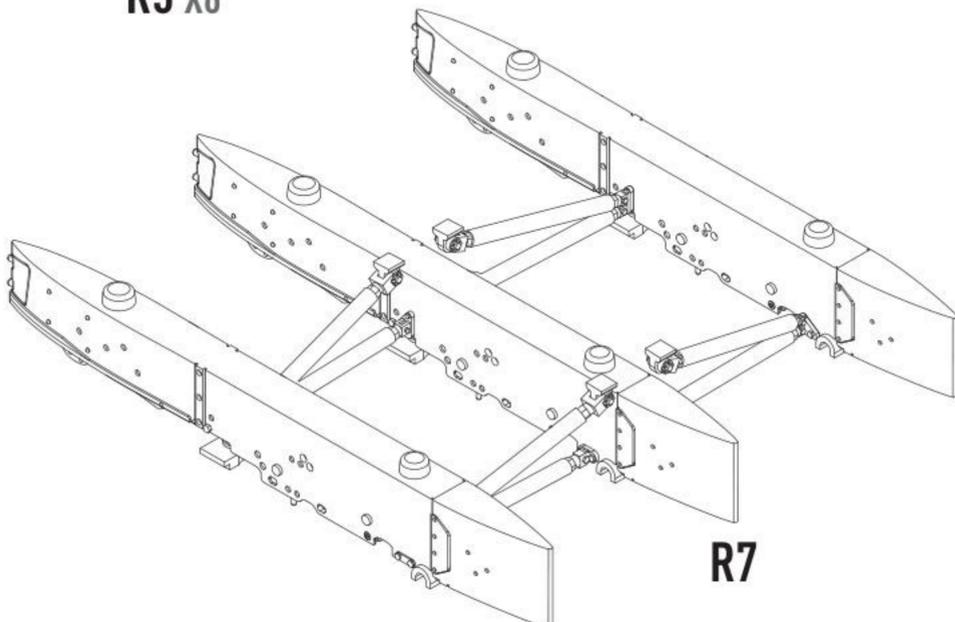
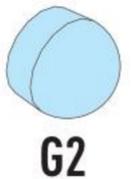
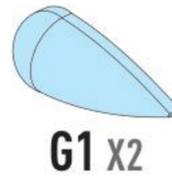
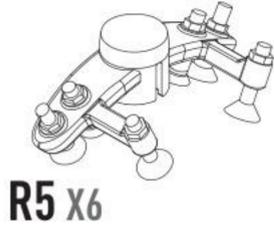
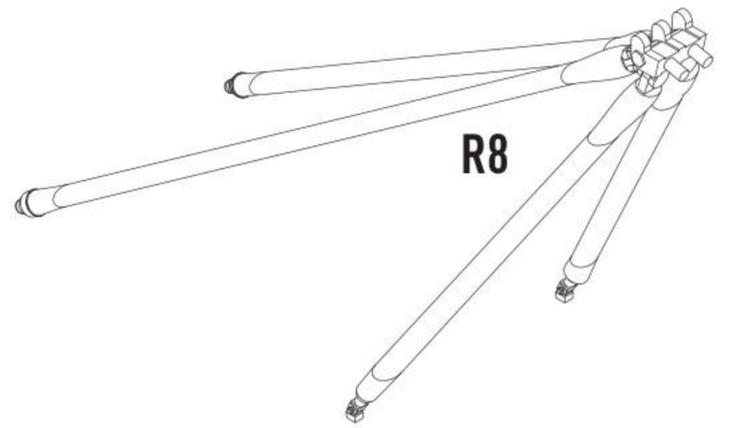
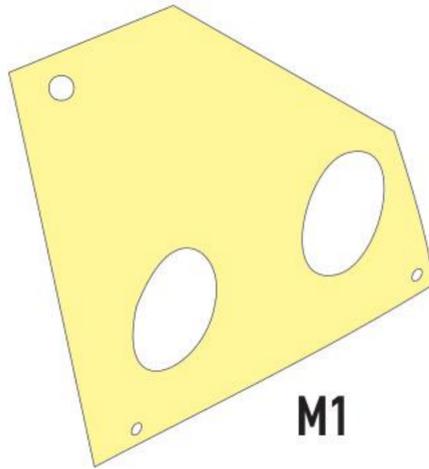
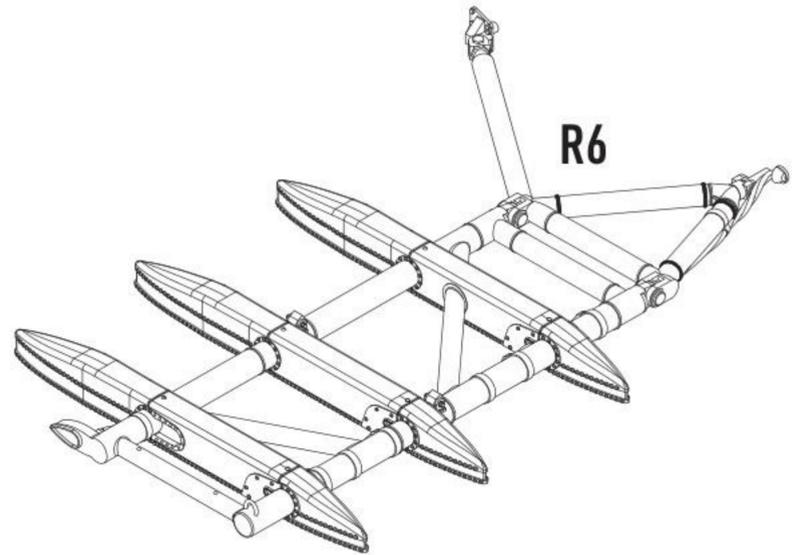
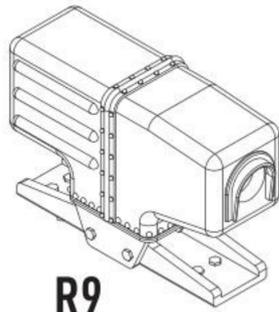
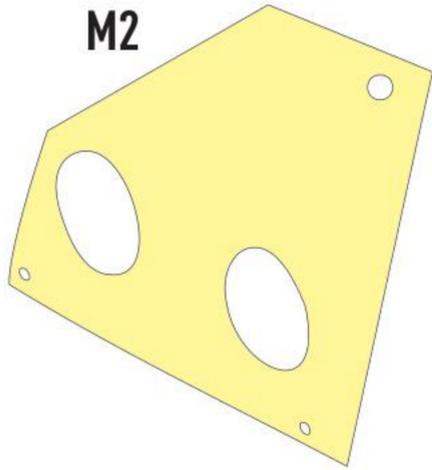



**DETAILS AFTER REMOVAL
 FROM SUPPORTS**

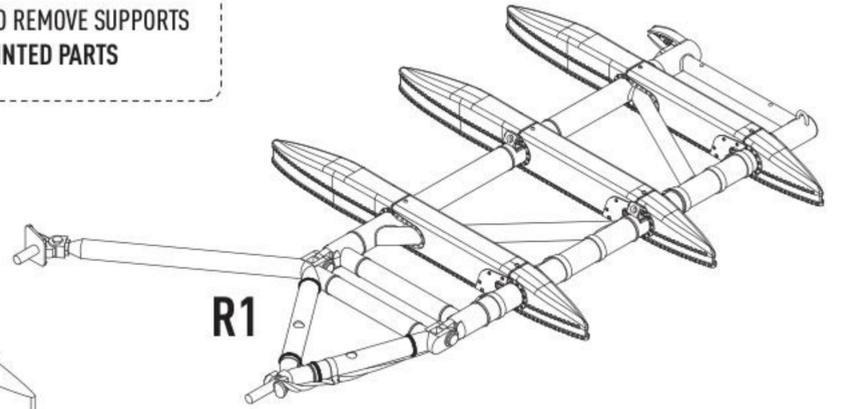


USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS

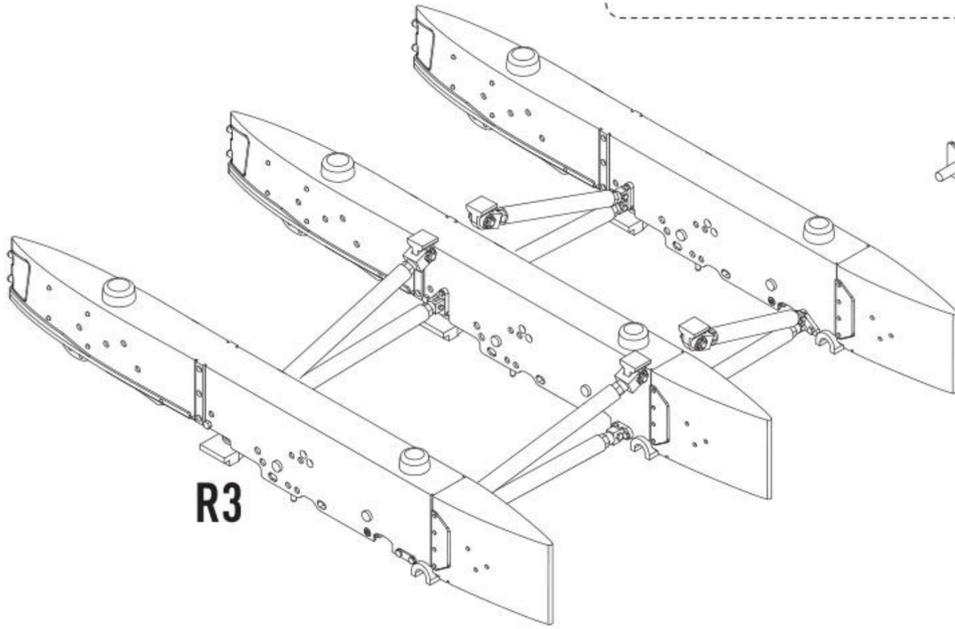



1 LEFT SIDE

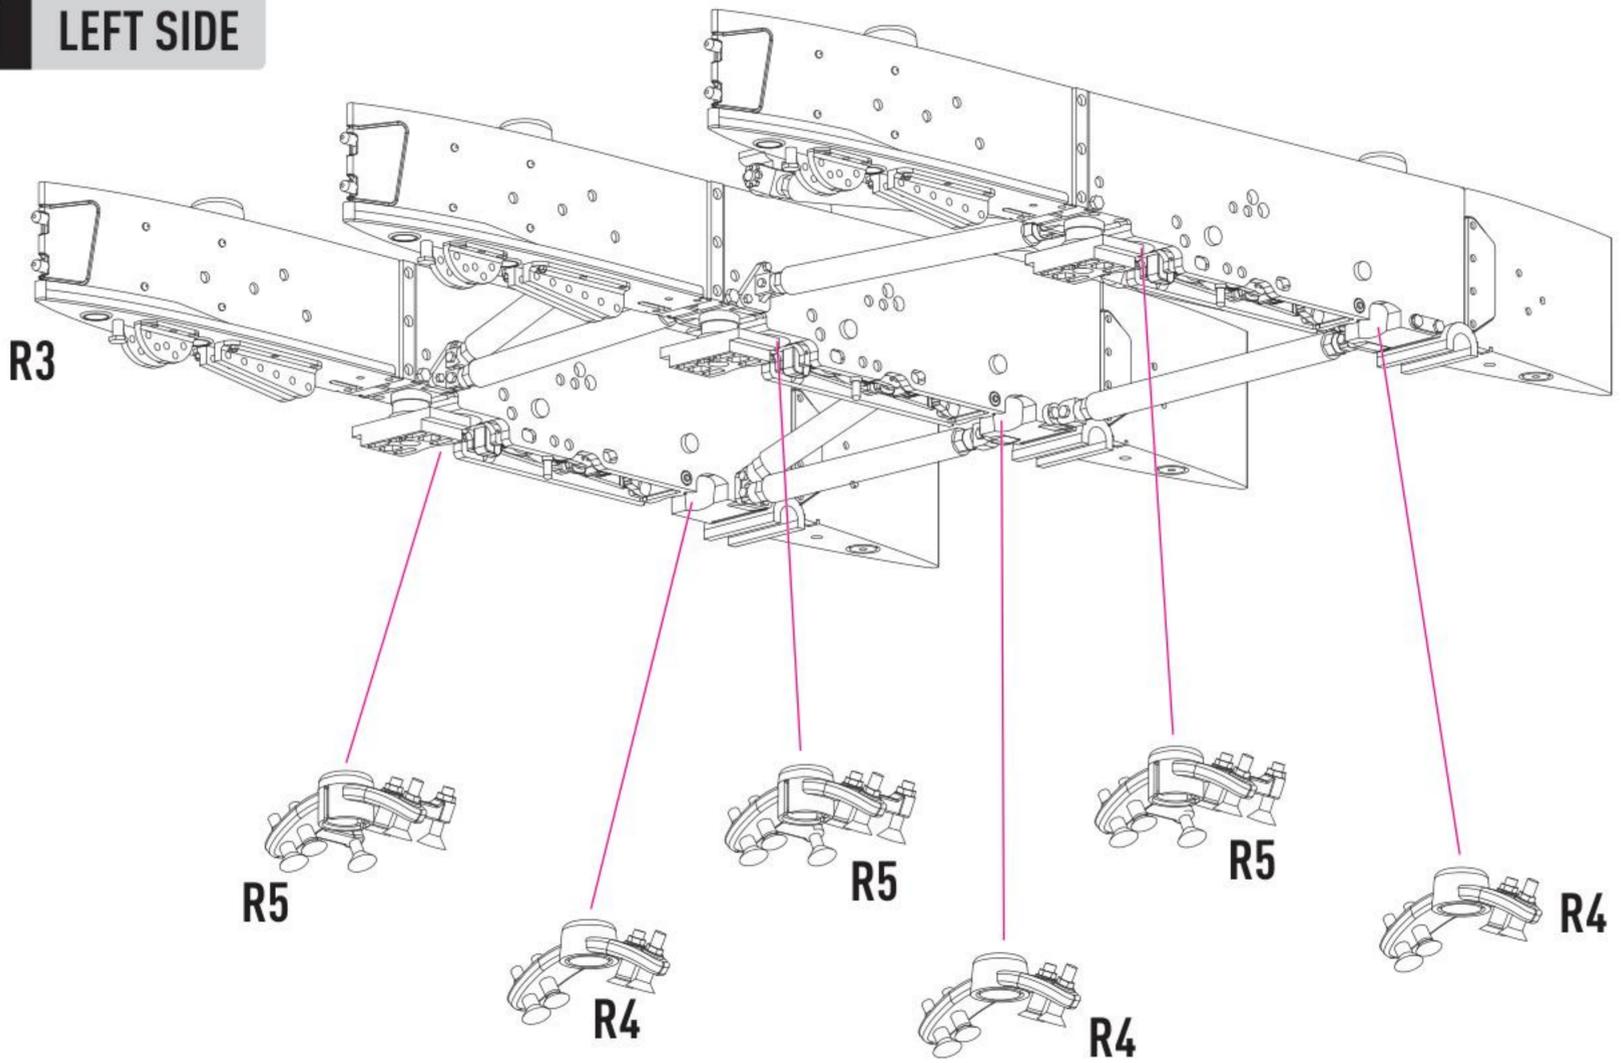

2

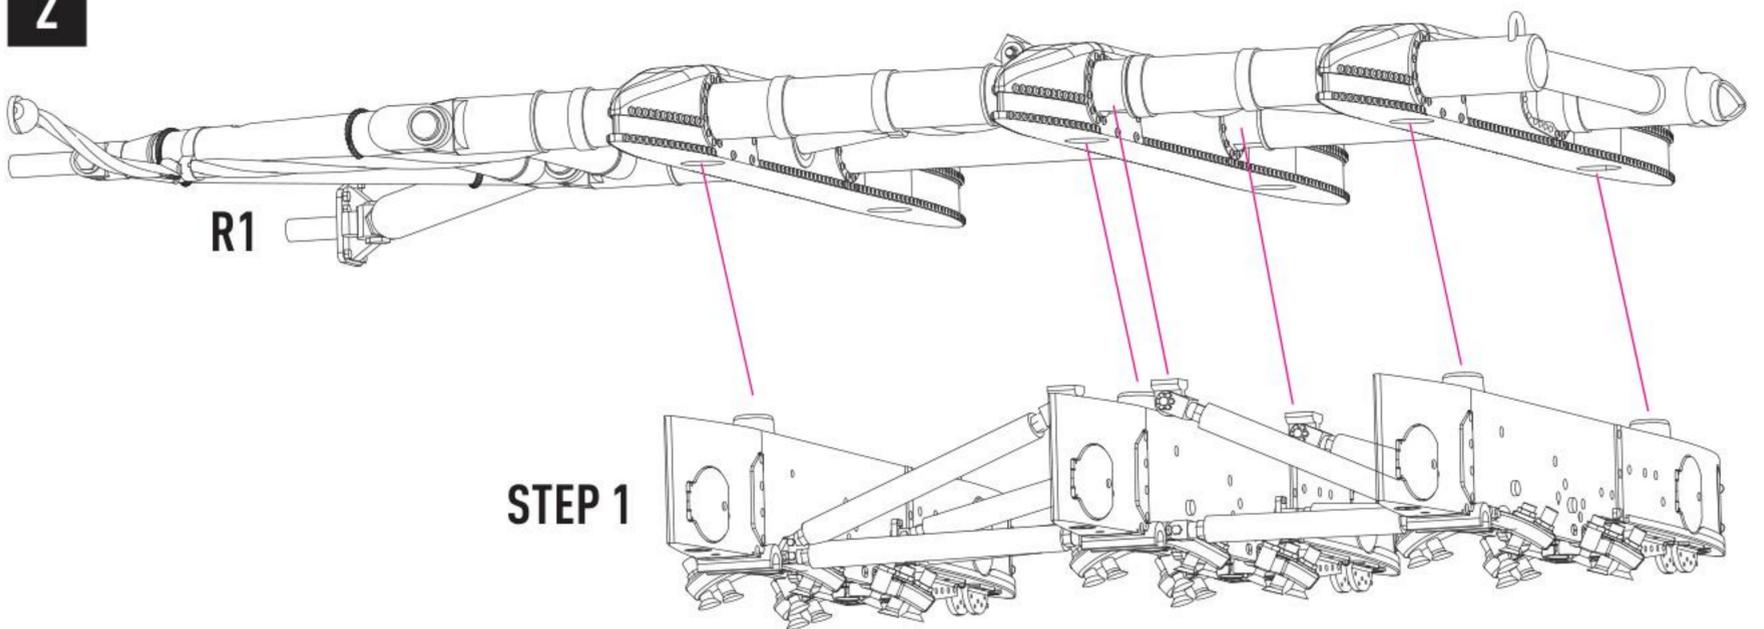


3 BEFORE INSTALLATION, APPLY GLOSS VARNISH ON TRANSPARENT PART

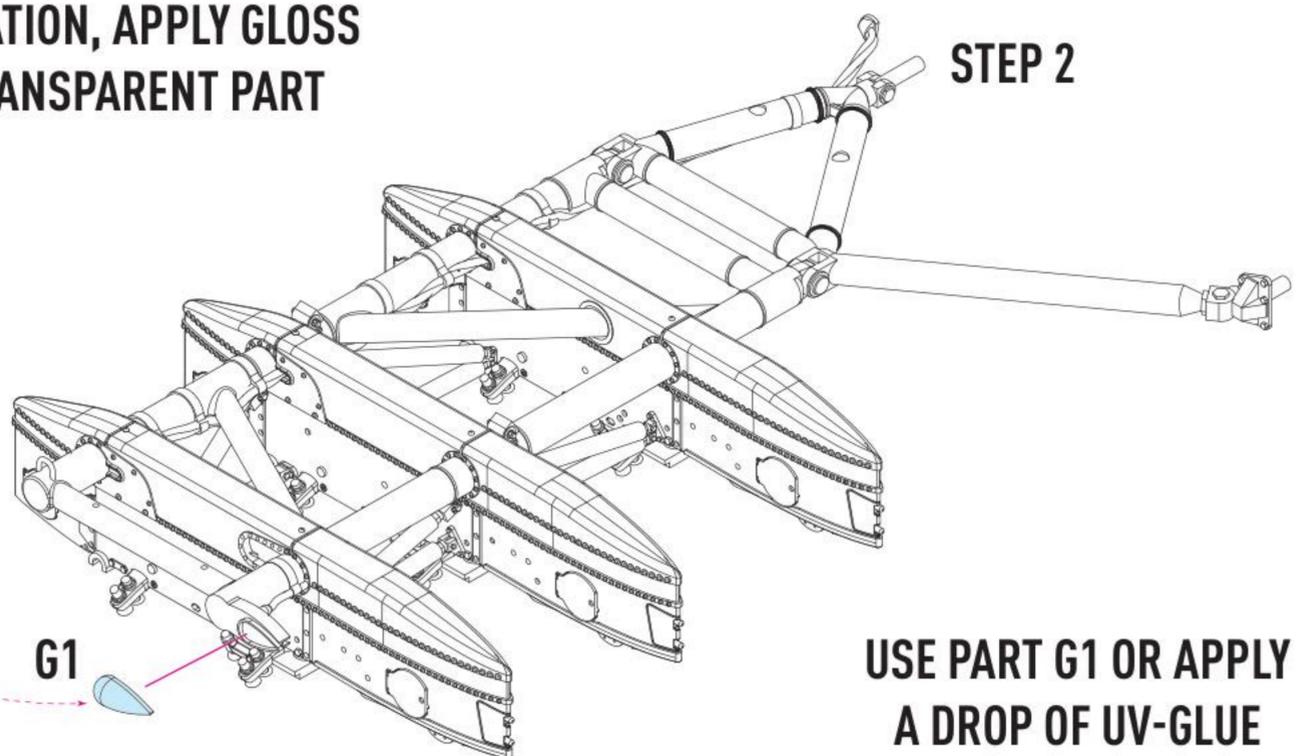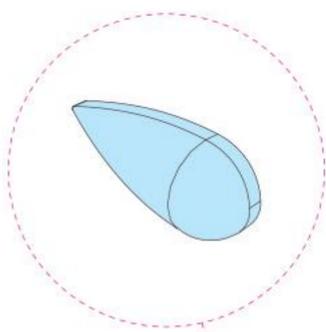


USE PART G1 OR APPLY A DROP OF UV-GLUE


4

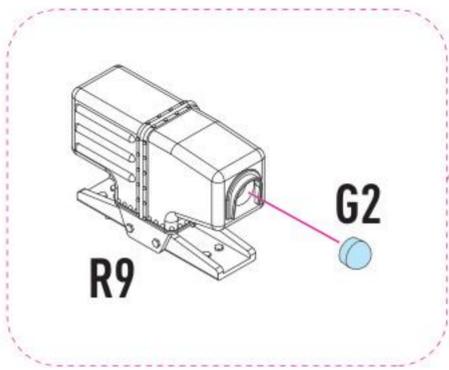


USE PART G2 OR APPLY
A DROP OF UV-GLUE

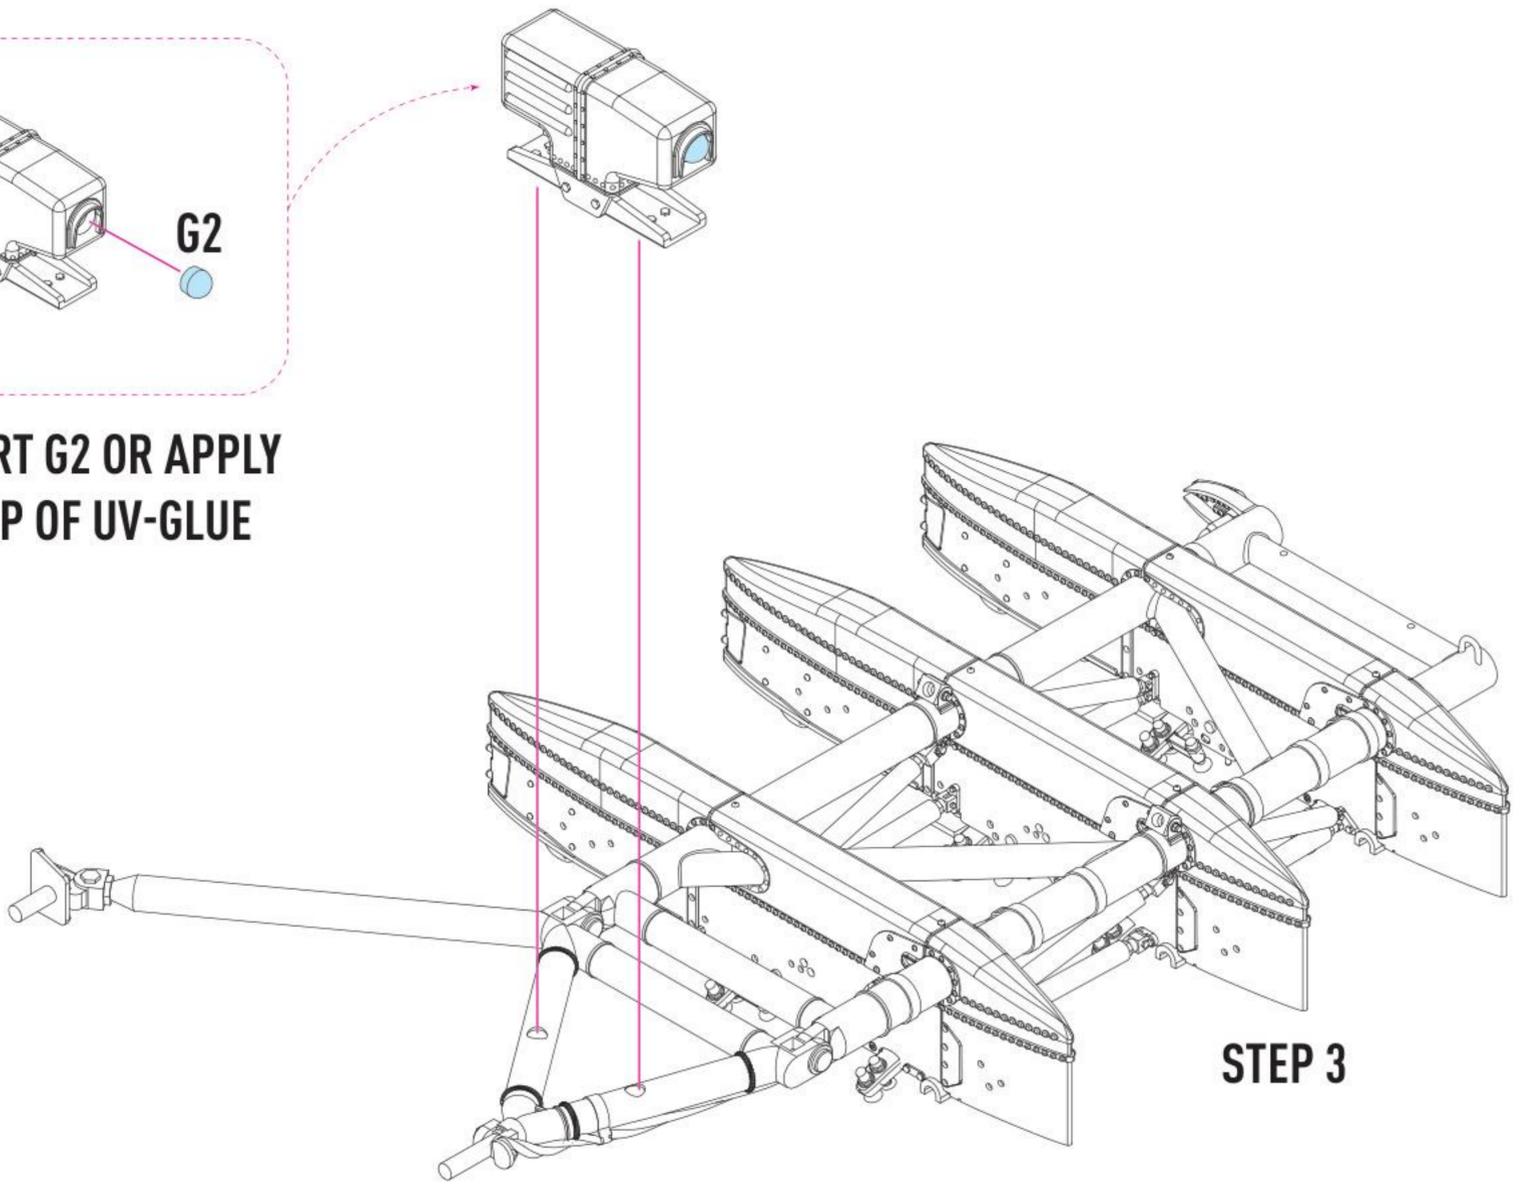


5

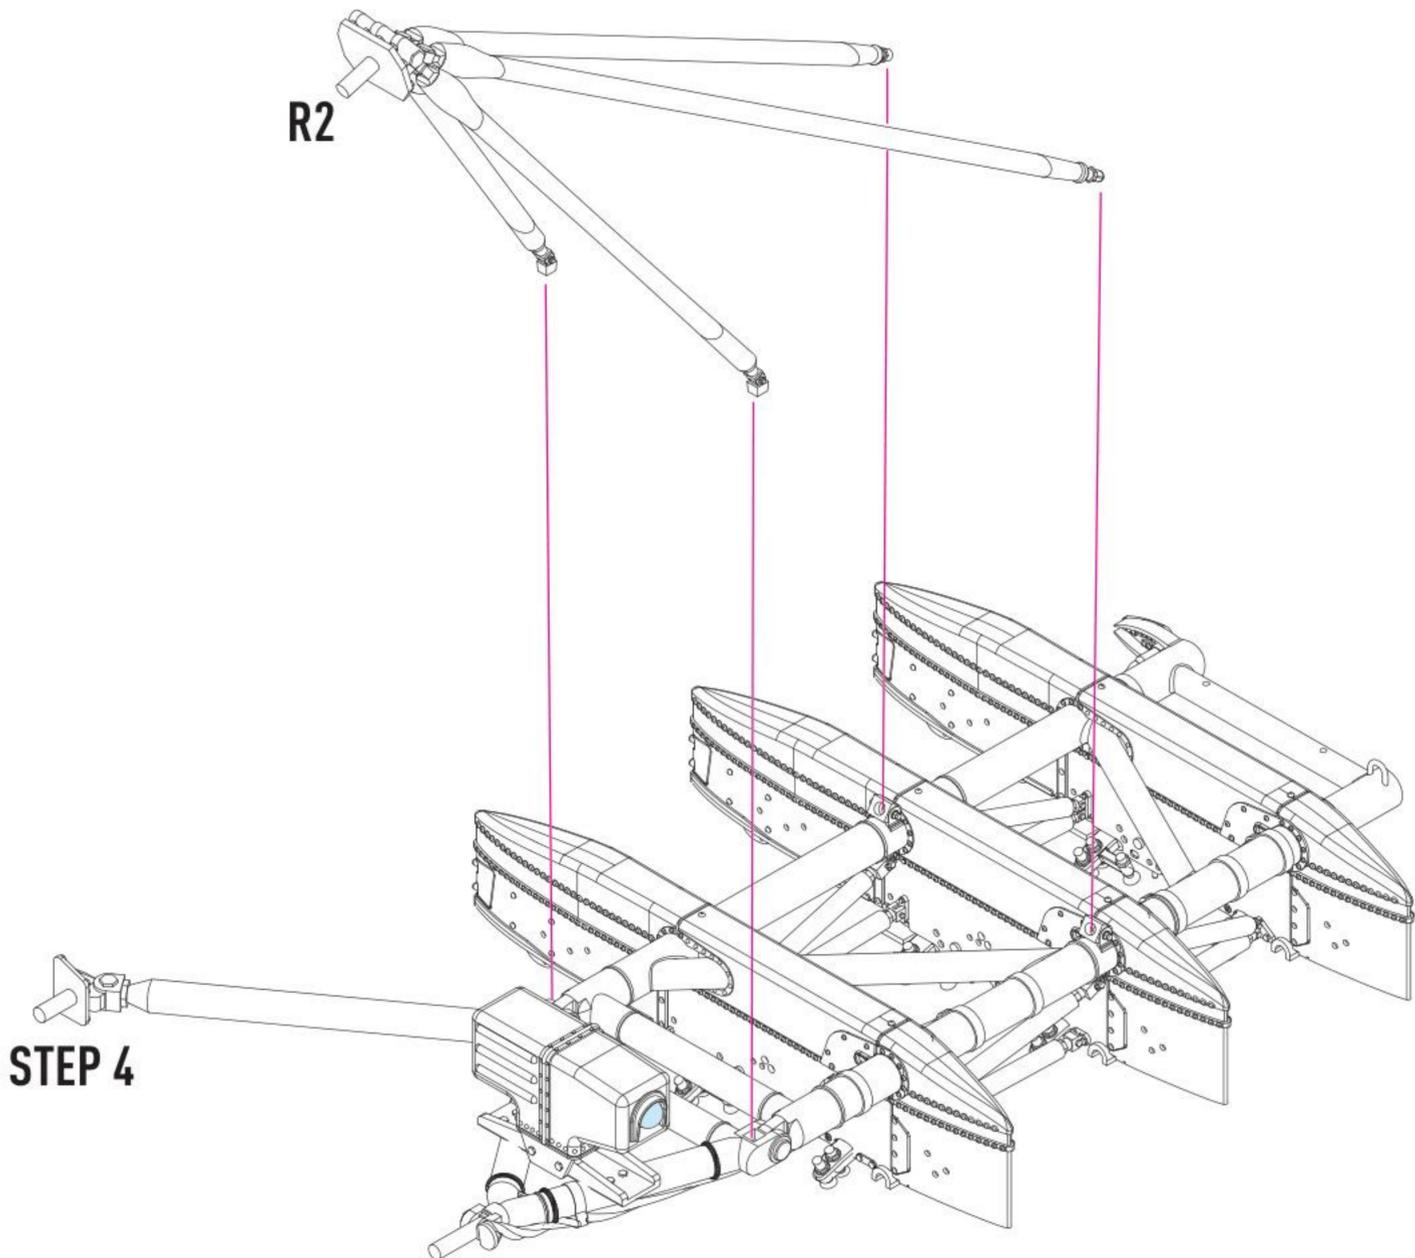



6

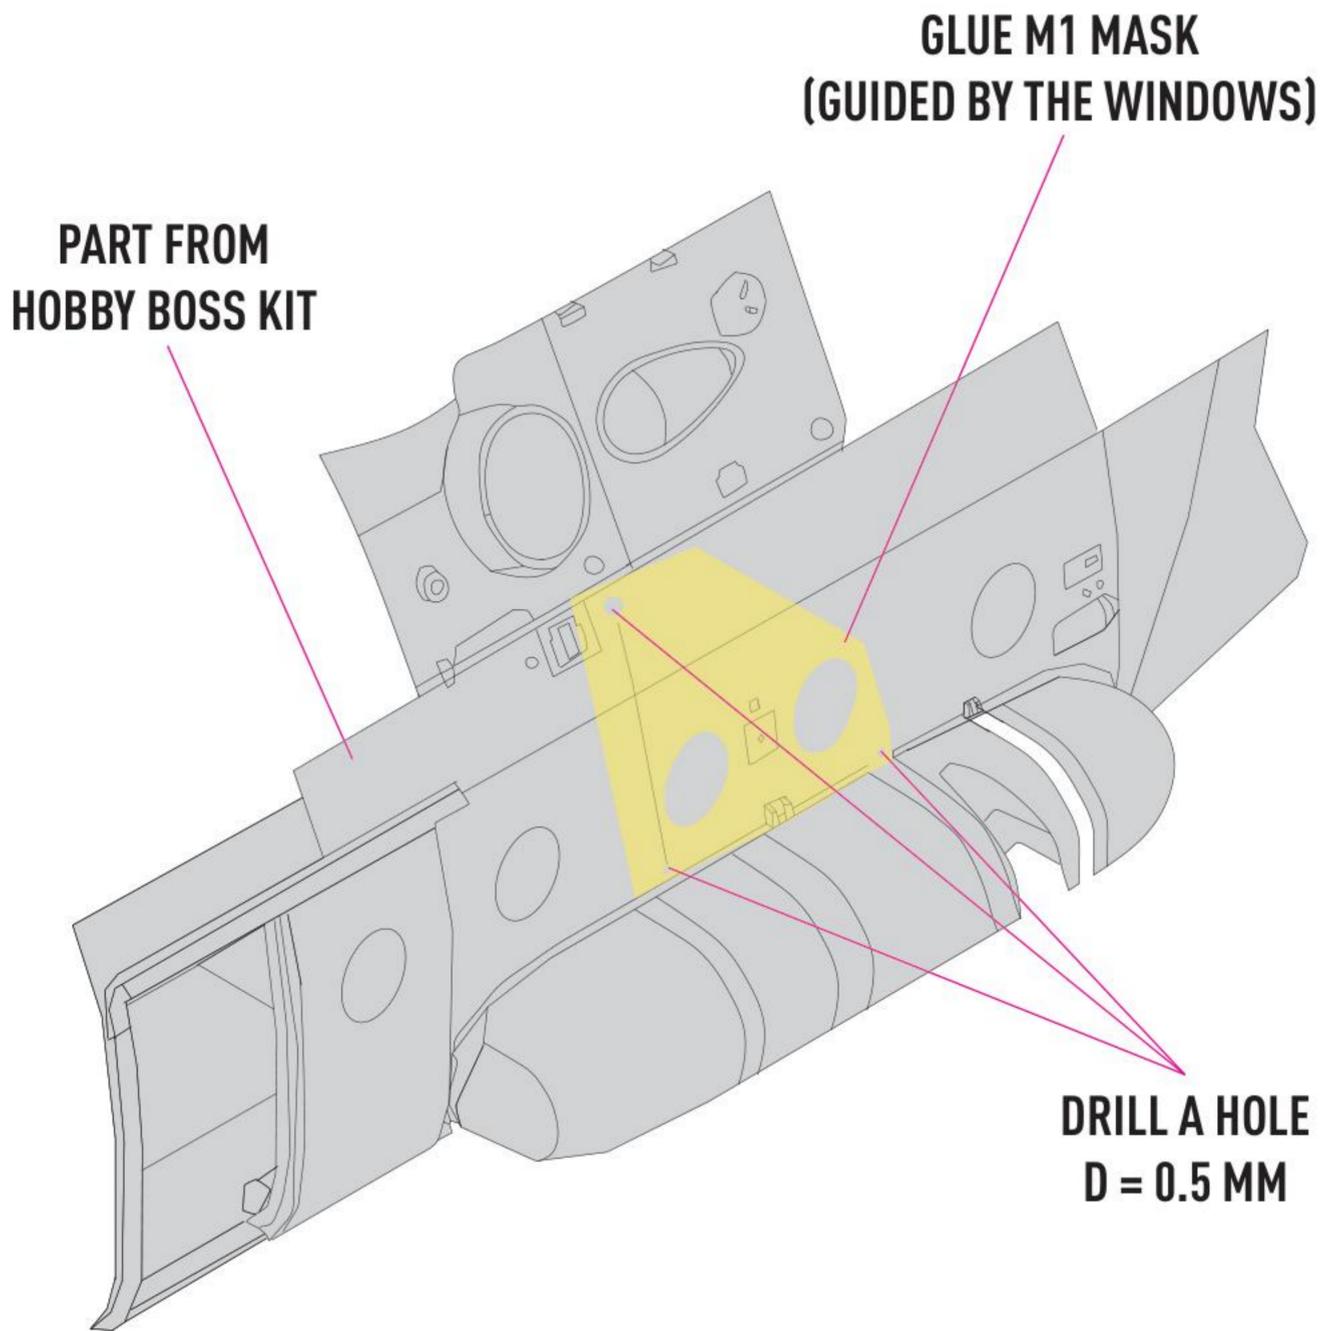



7 REMOVE MASK

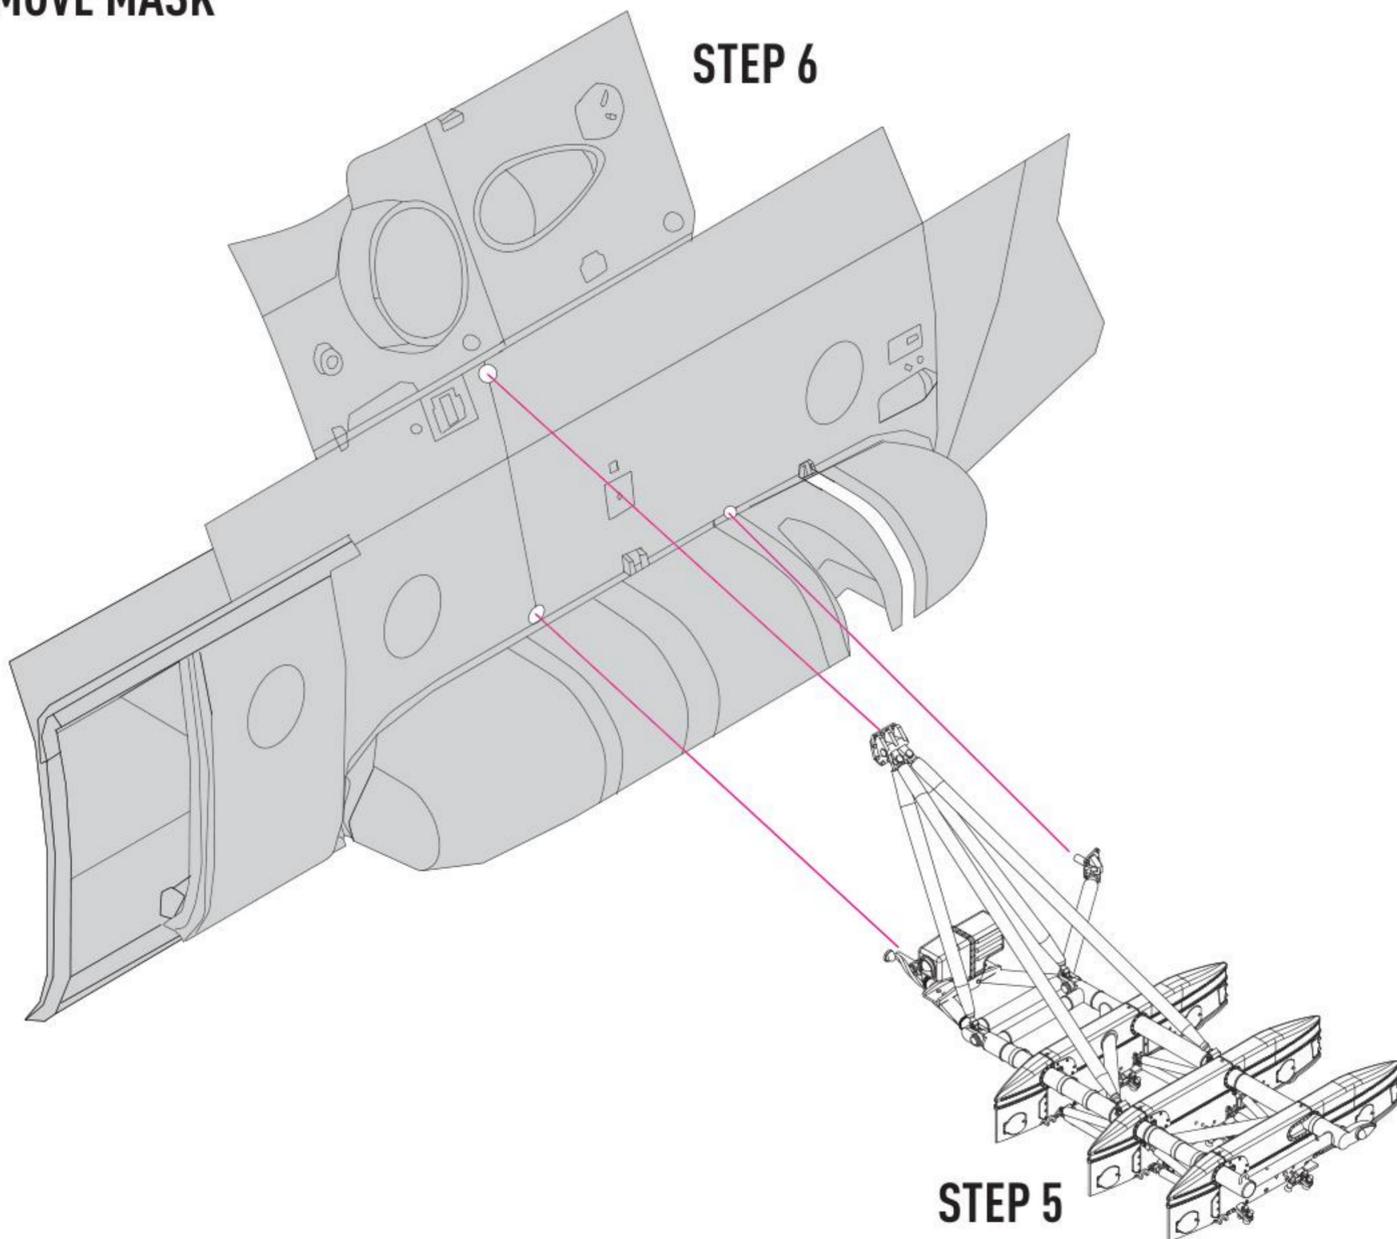

8 RIGHT SIDE

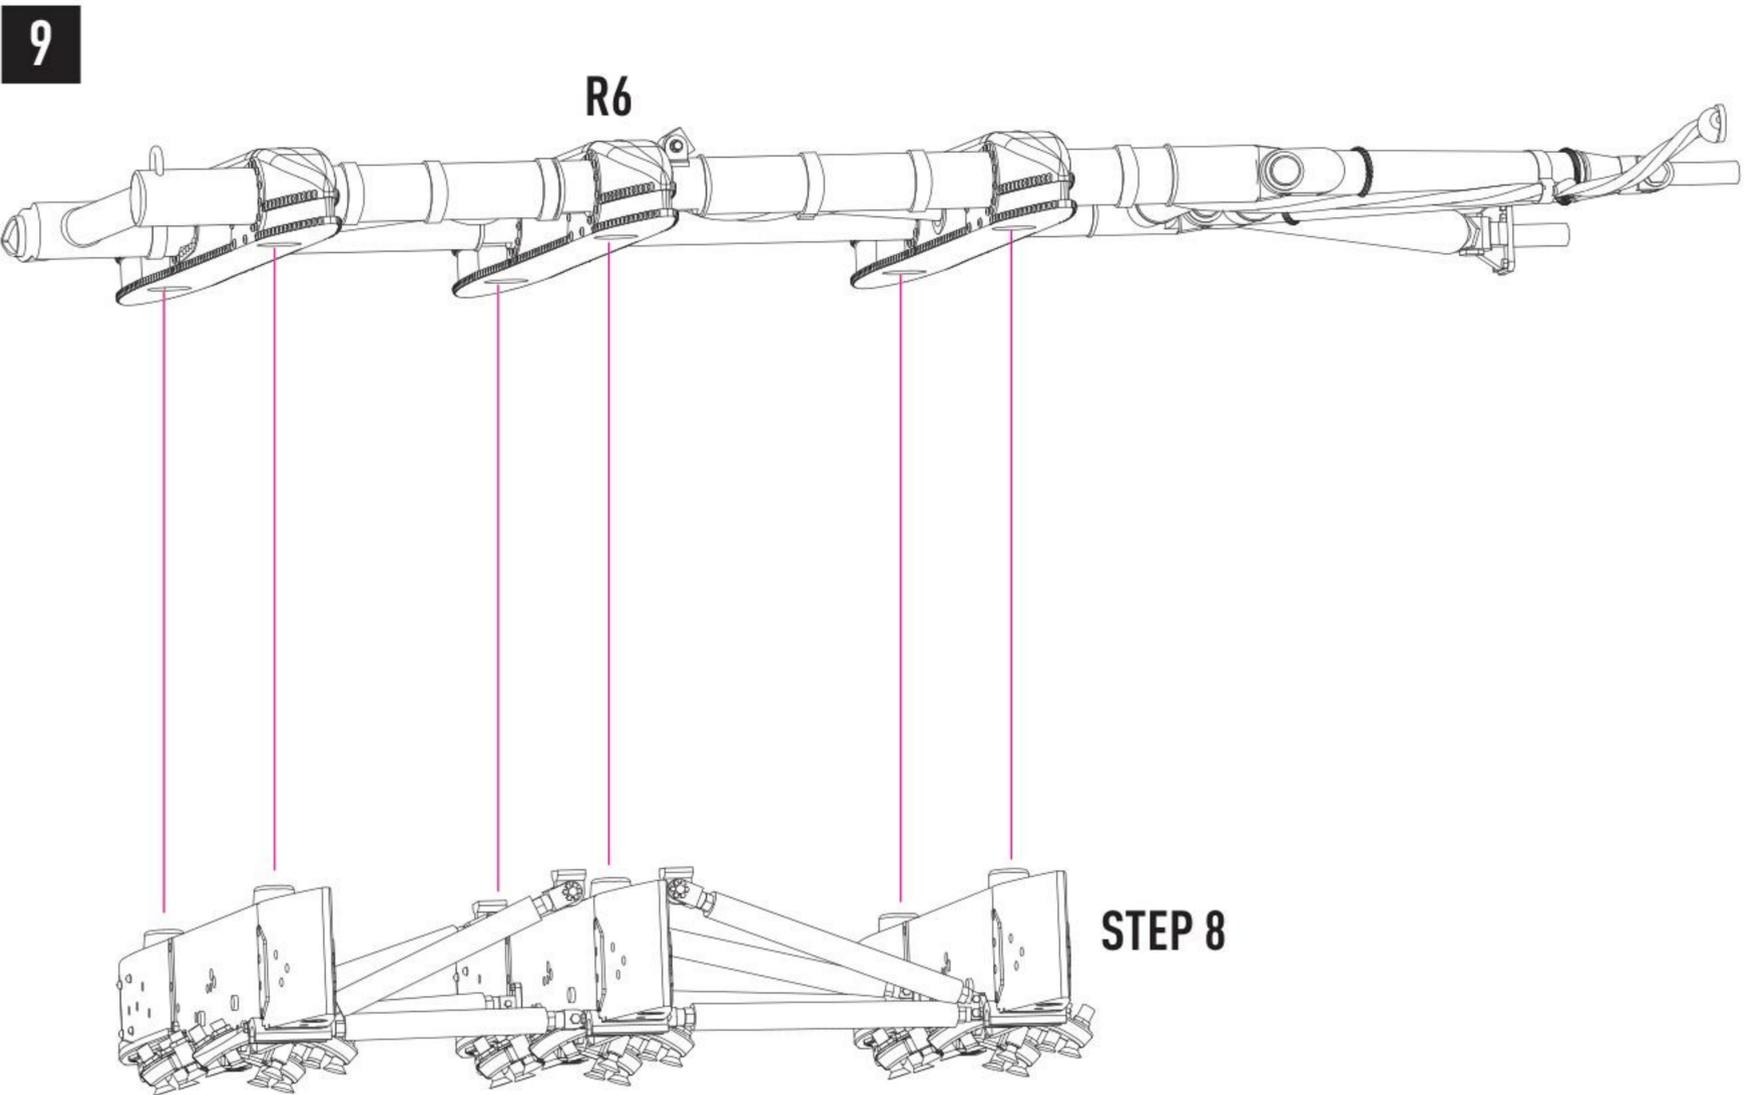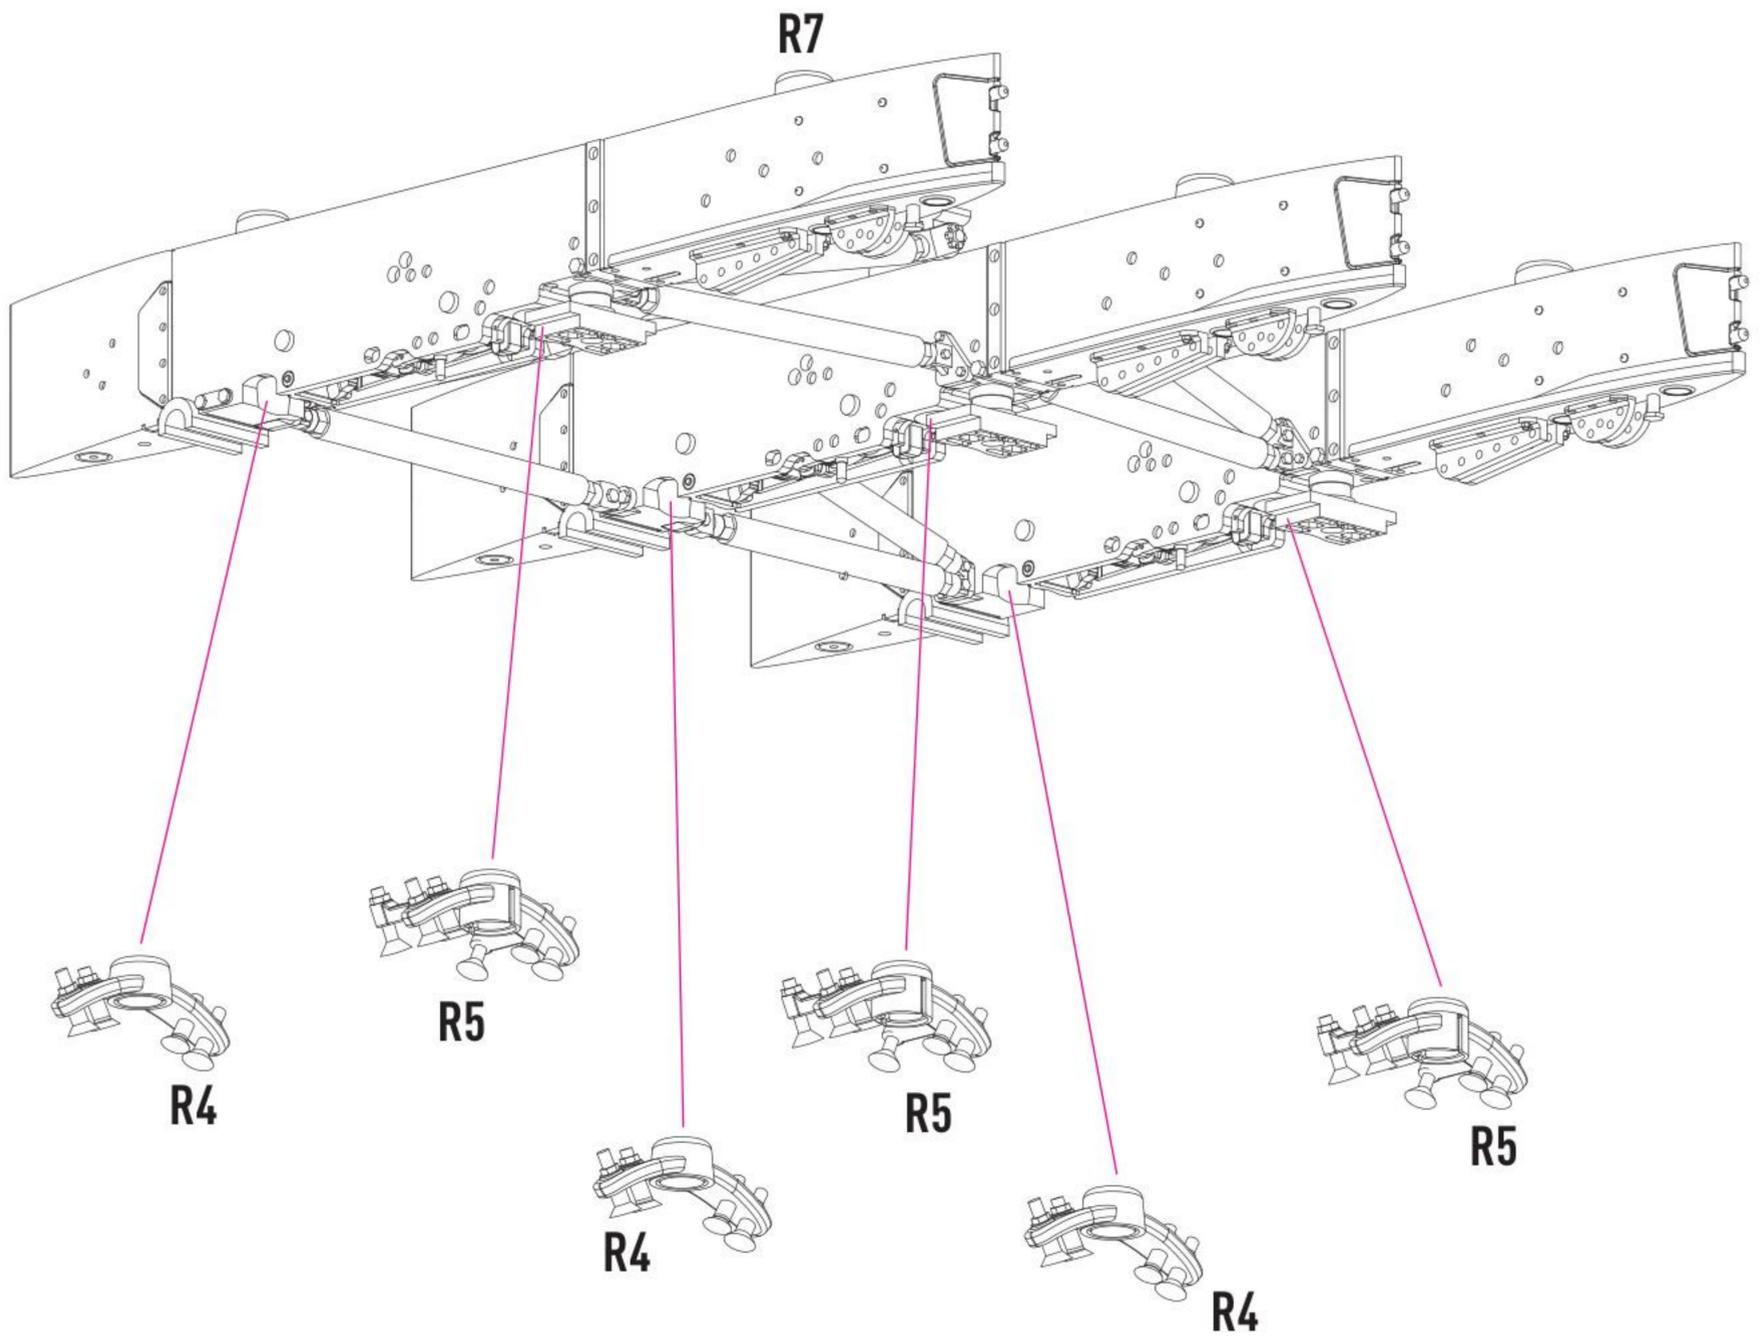


10 BEFORE INSTALLATION, APPLY GLOSS VARNISH ON TRANSPARENT PART

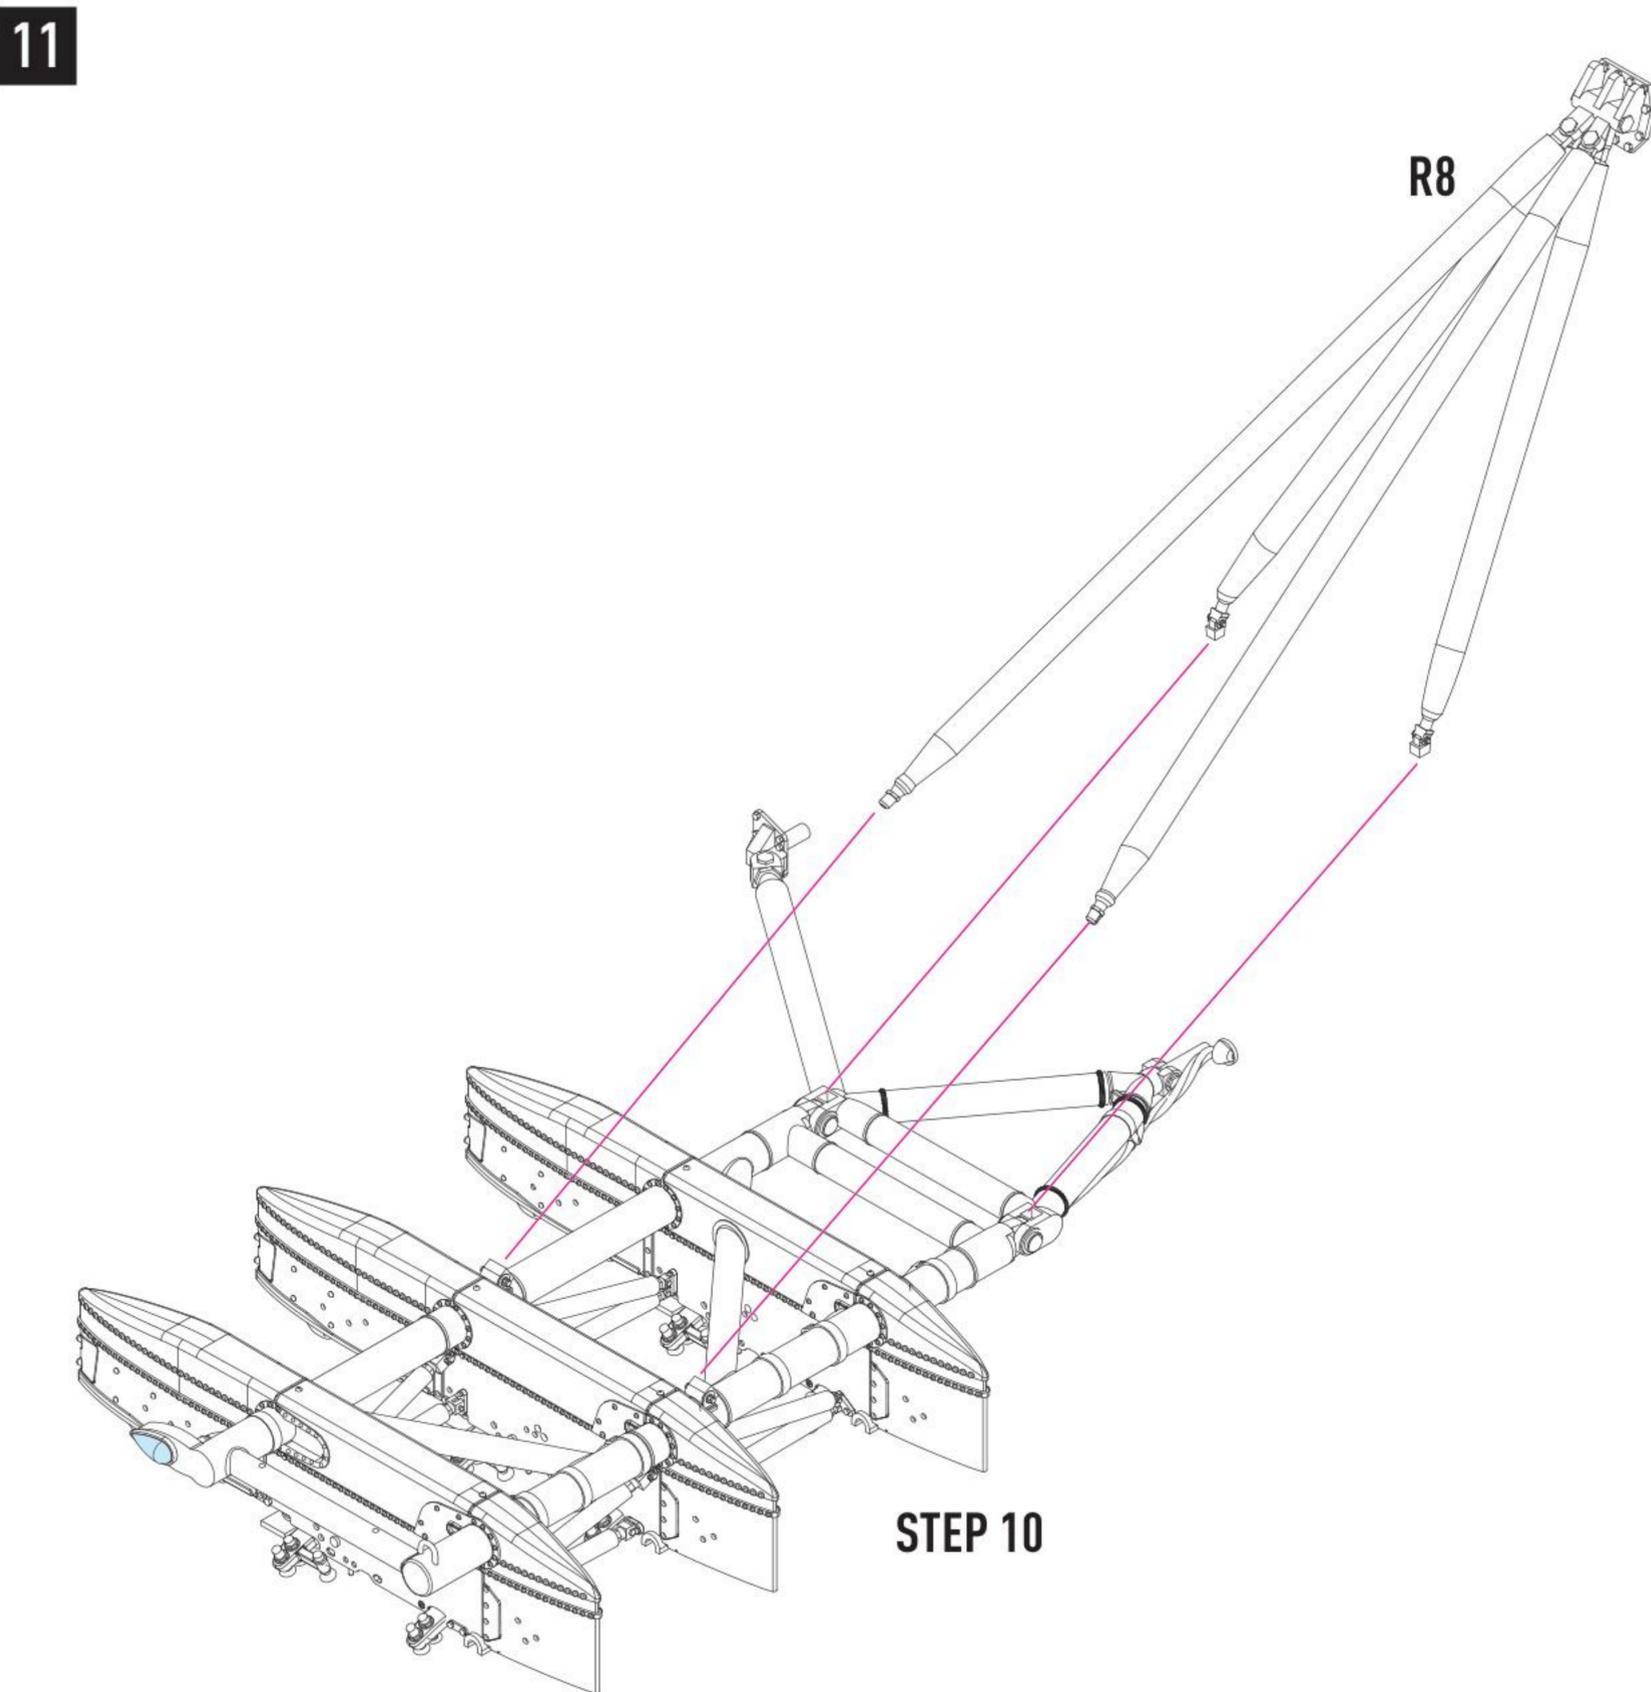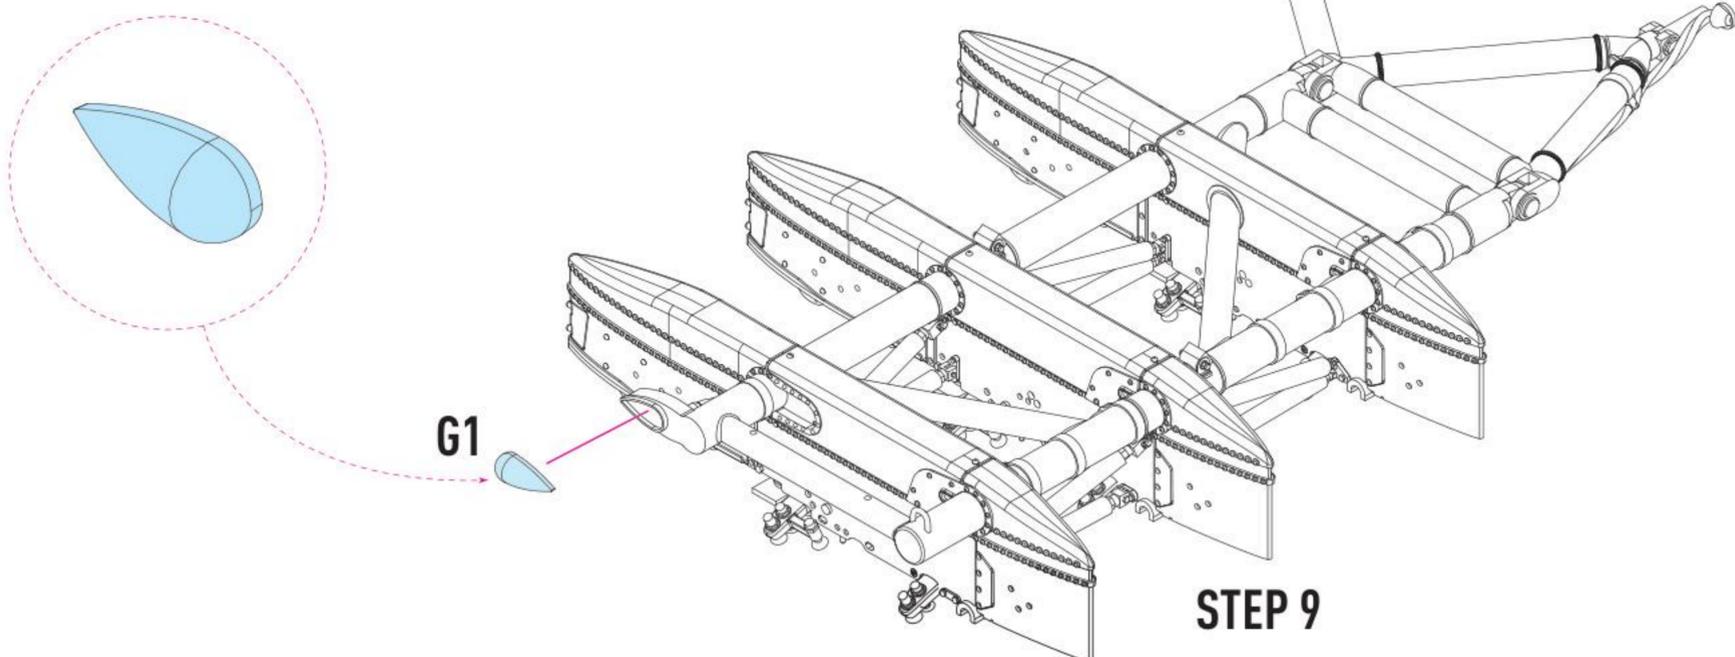


12

GLUE M2 MASK
(GUIDED BY THE WINDOWS)



PART FROM
HOBBY BOSS KIT

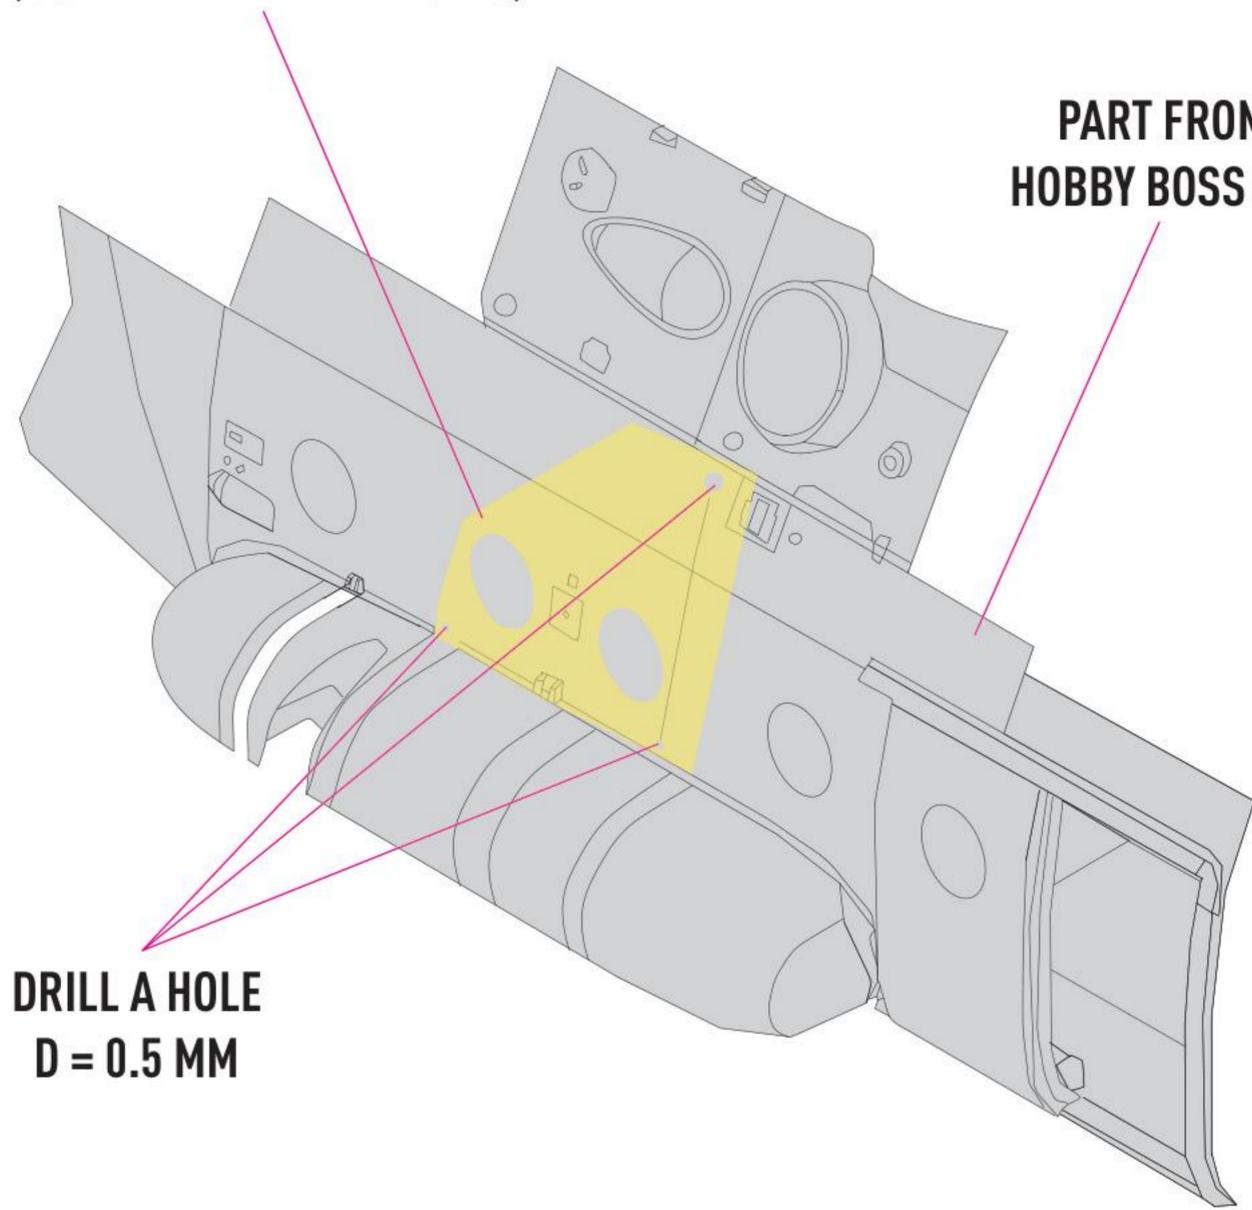

13 REMOVE MASK

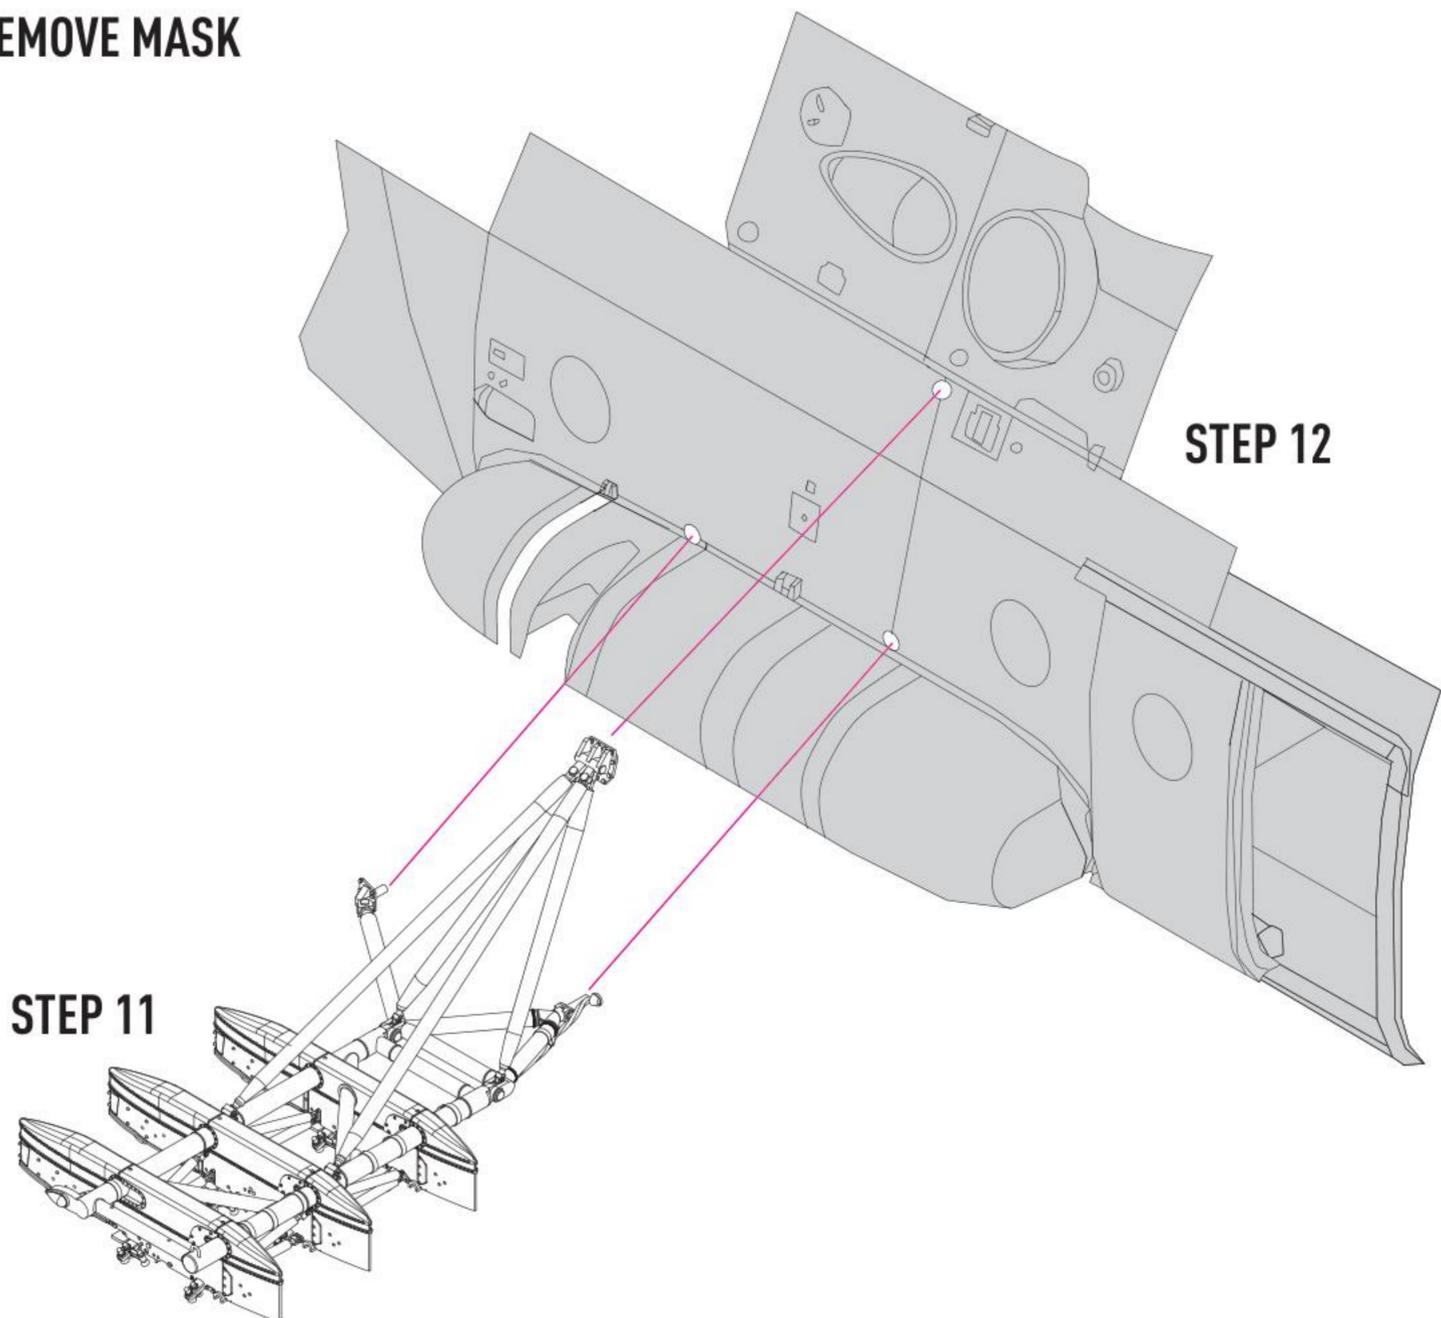

DECAL INSTRUCTION

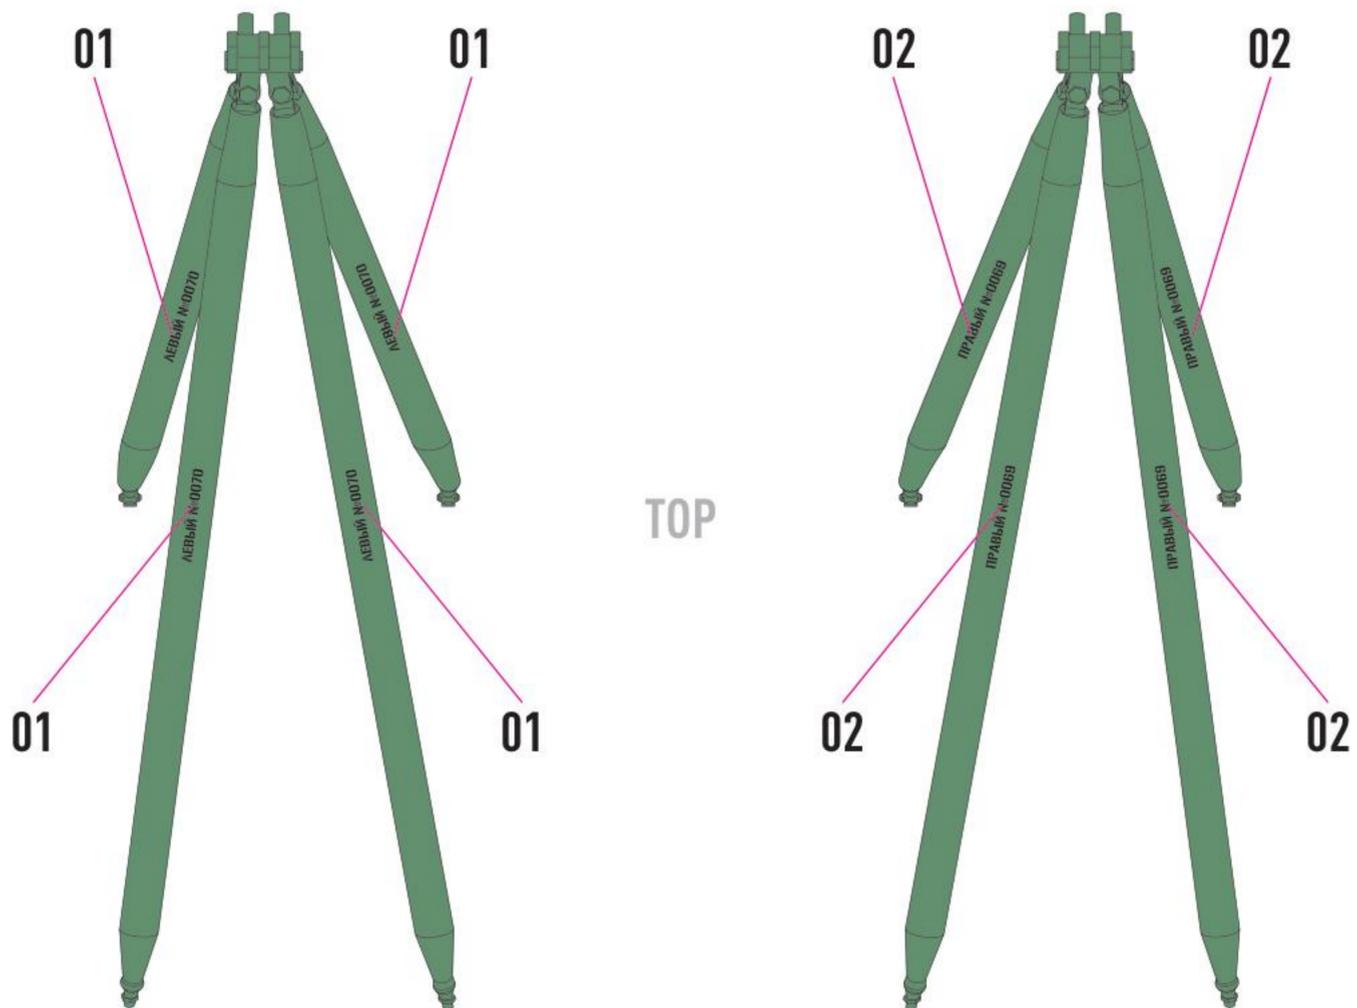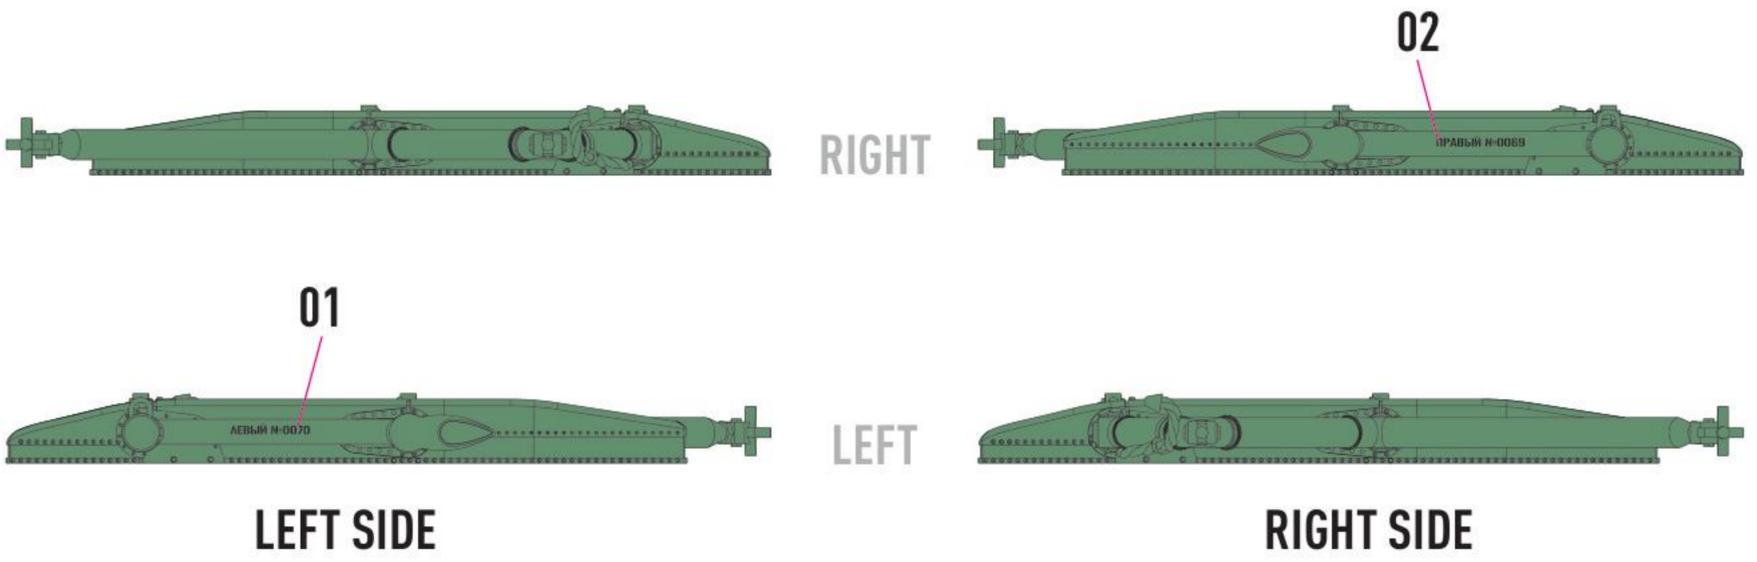

BD3-57KRV

