

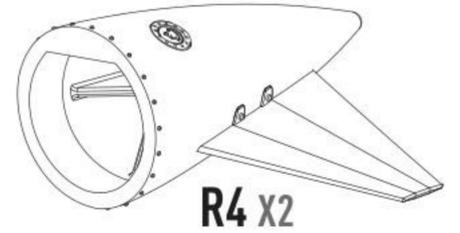
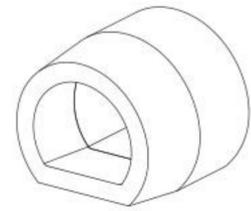
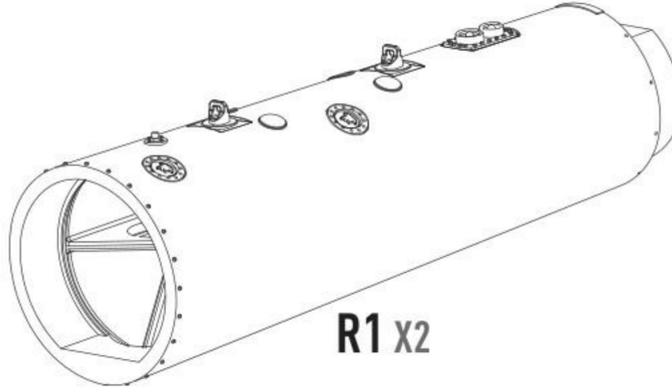
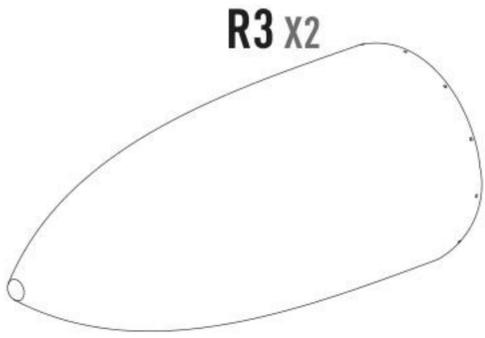







 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS

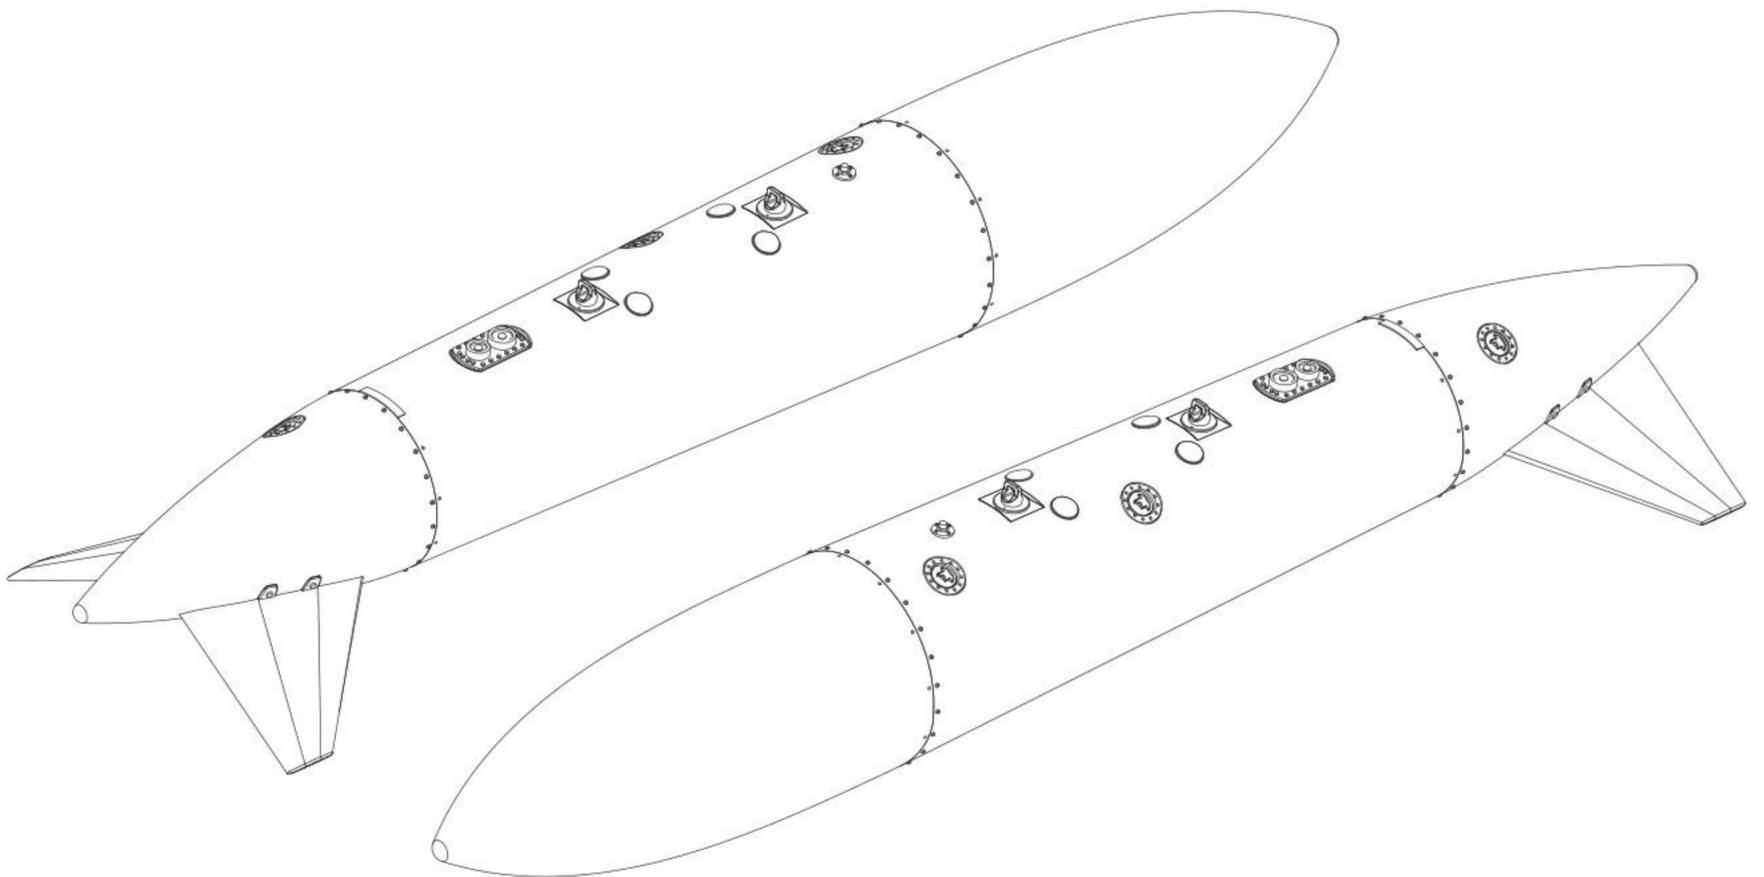

1 X2

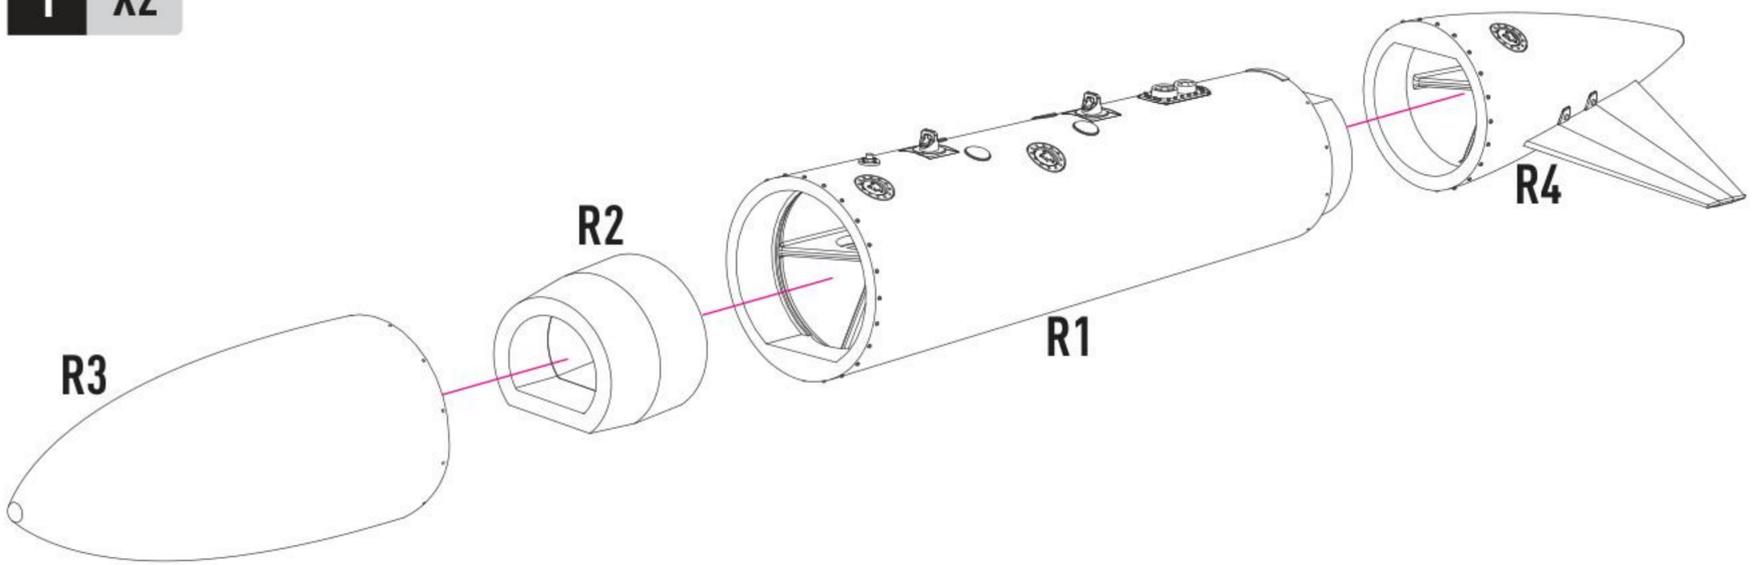

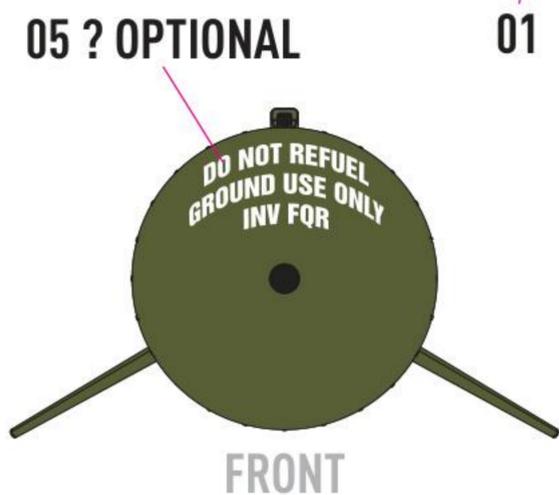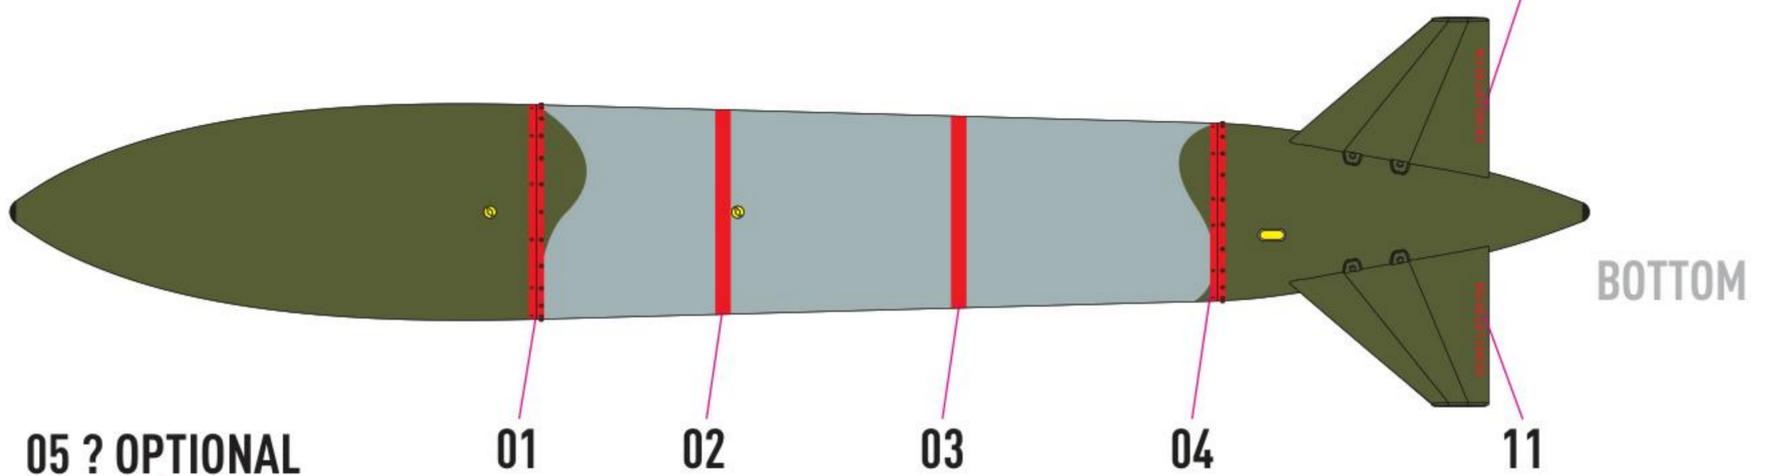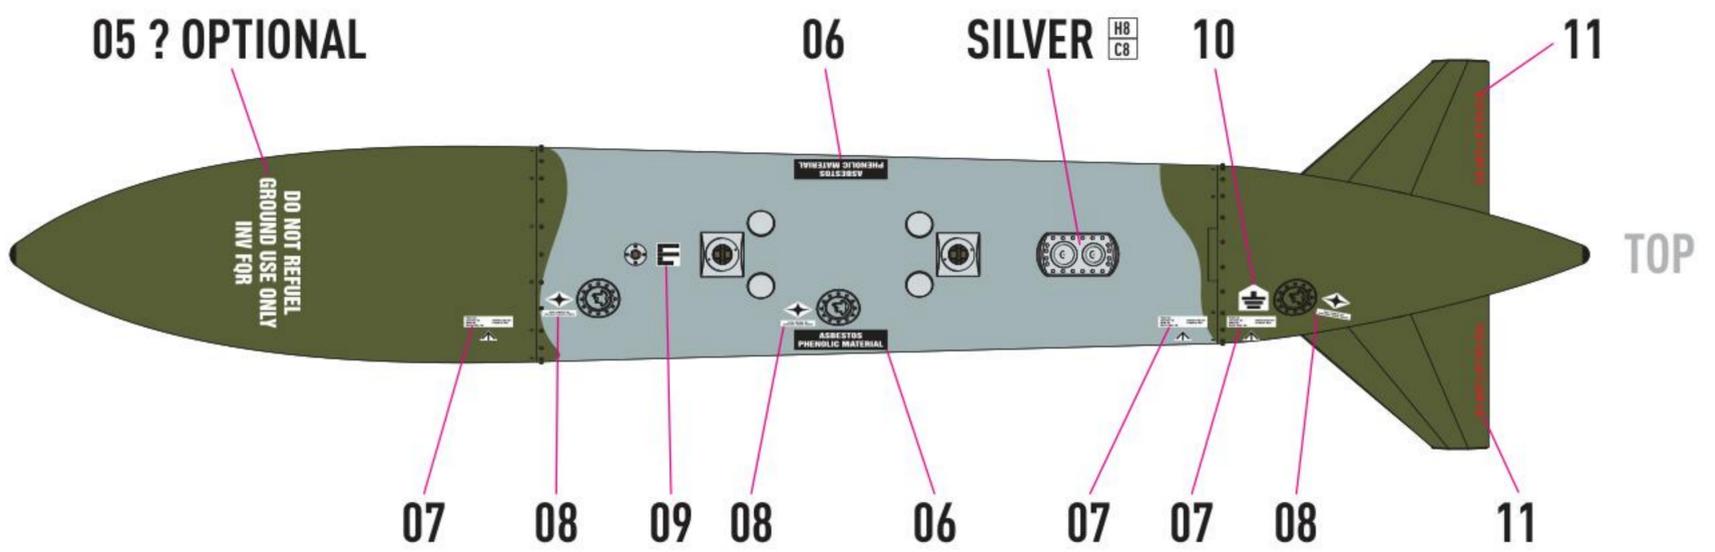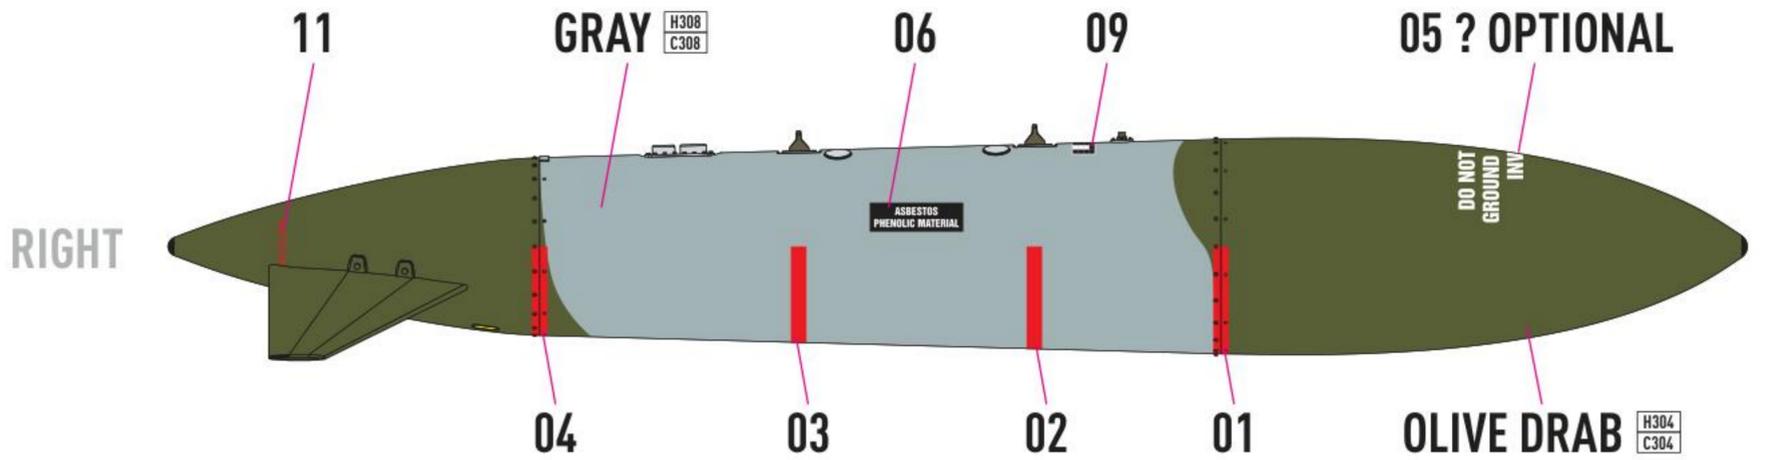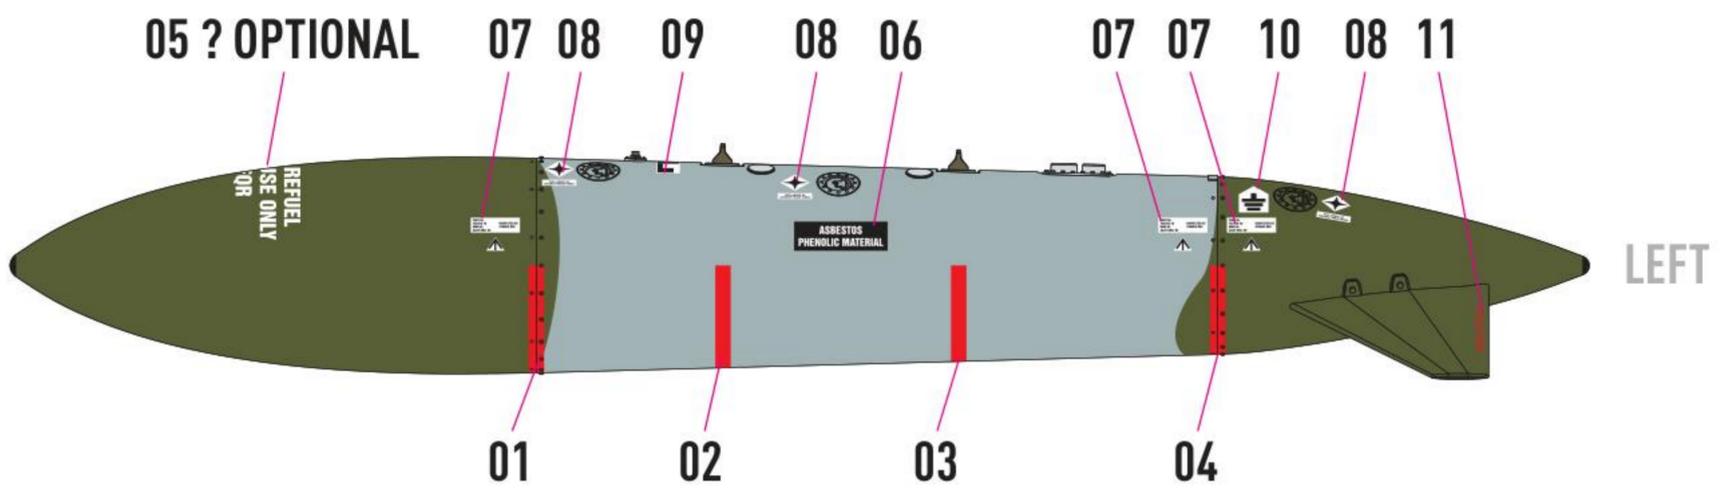

| COLORS | GUNZE / AQUEOUS | GUNZE / MR.COLOR |
|------------|-----------------|------------------|
| GRAY | H308 | C308 |
| OLIVE DRAB | H304 | C304 |
| SILVER | H8 | C8 |