RES/KIT™

RESIN PARTS
FOR SCALE PLASTIC KITS

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION RSU48-0166

F-111A/E COCKPIT
WITH 3D DECALS

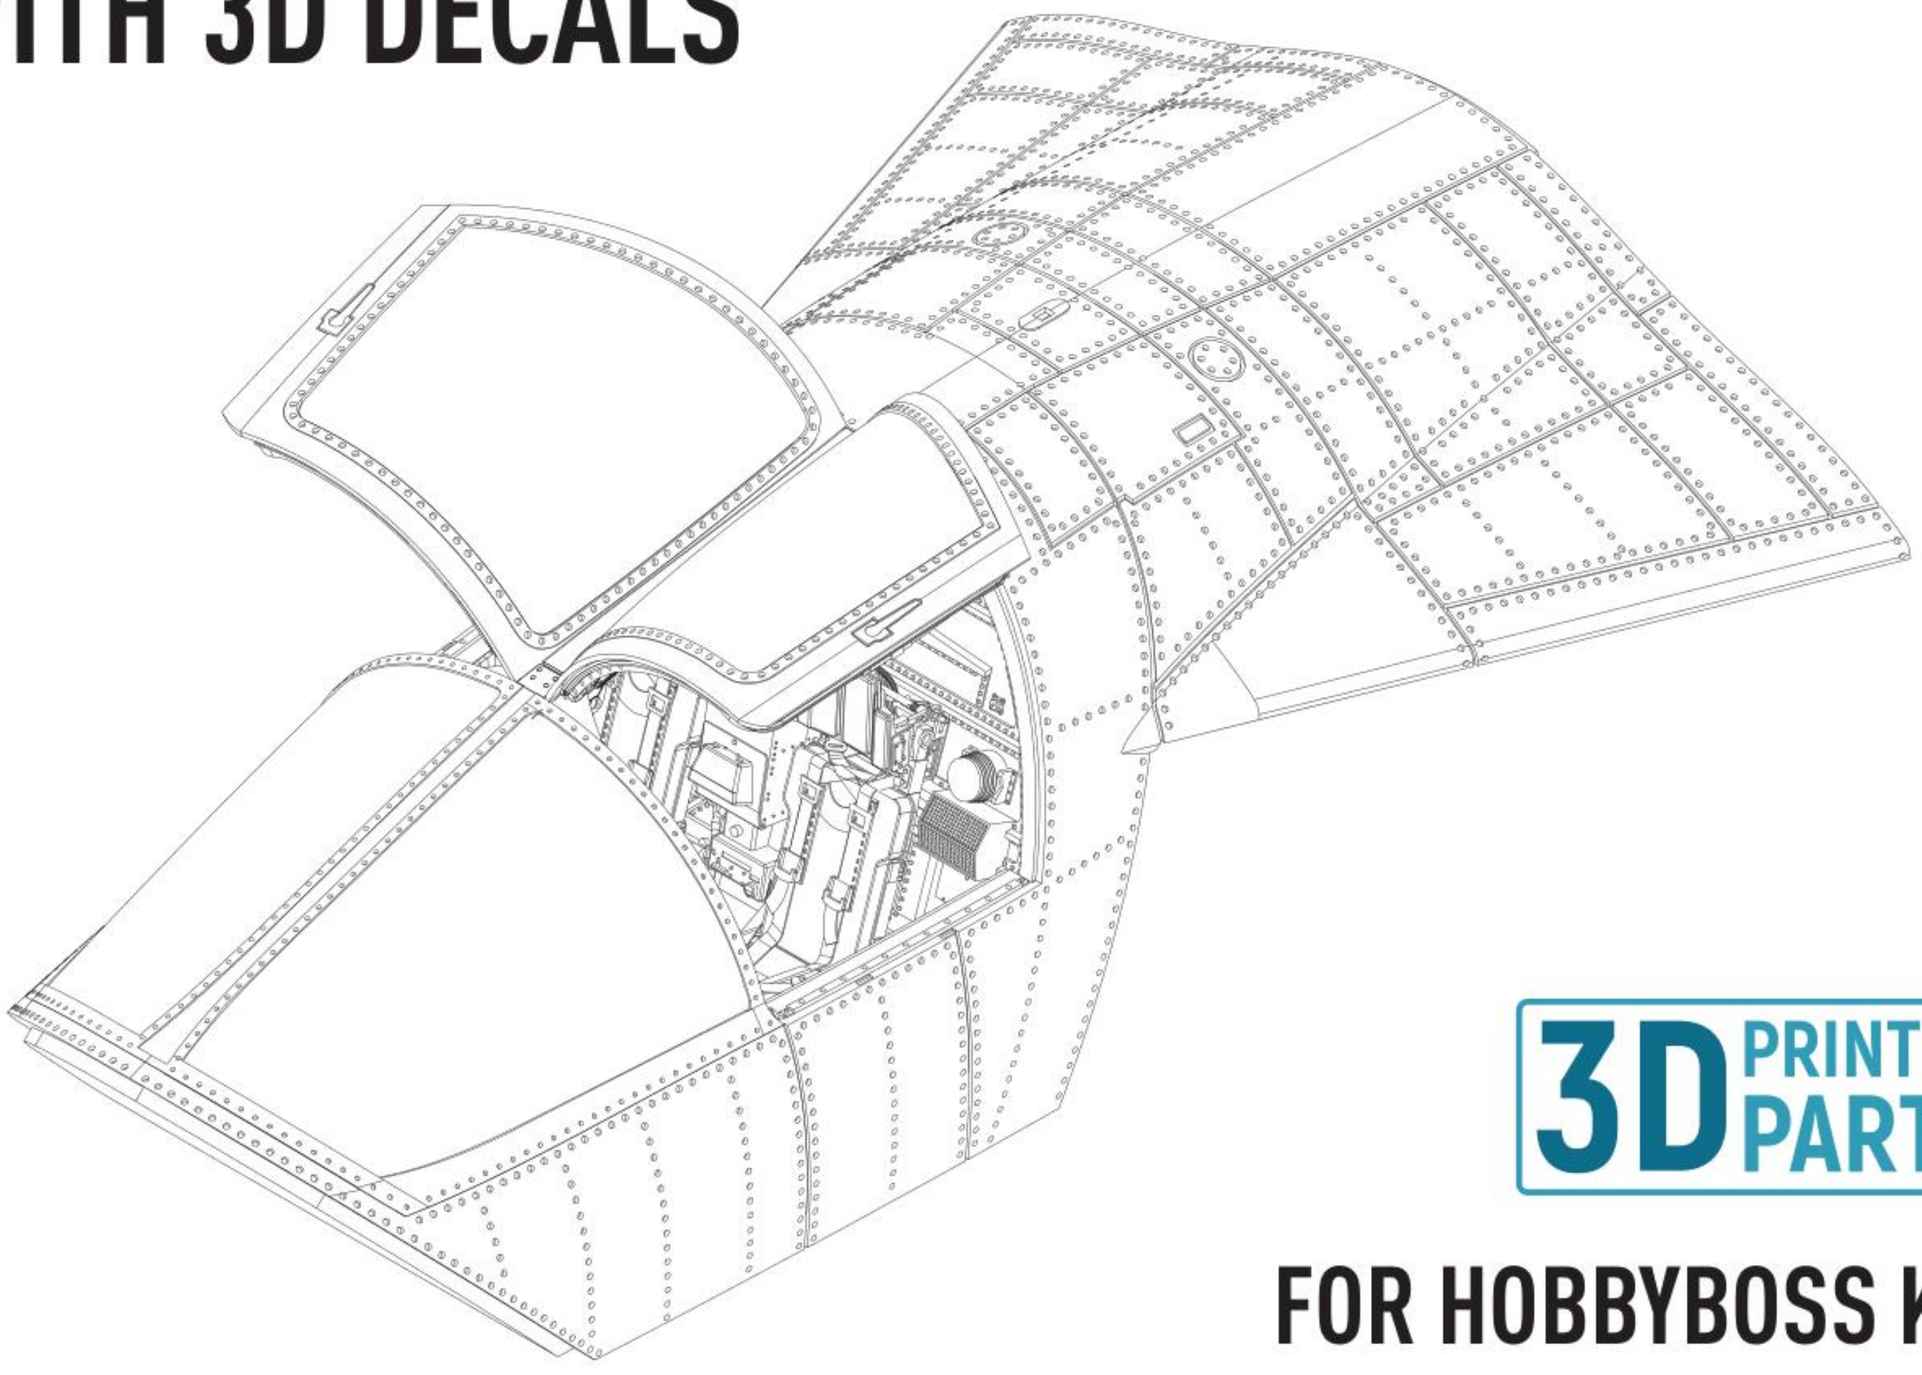

3D PRINTED PARTS

FOR HOBBYBOSS KIT

USE A SAW TO REMOVE SUPPORTS
FROM **3D PRINTED PARTS**

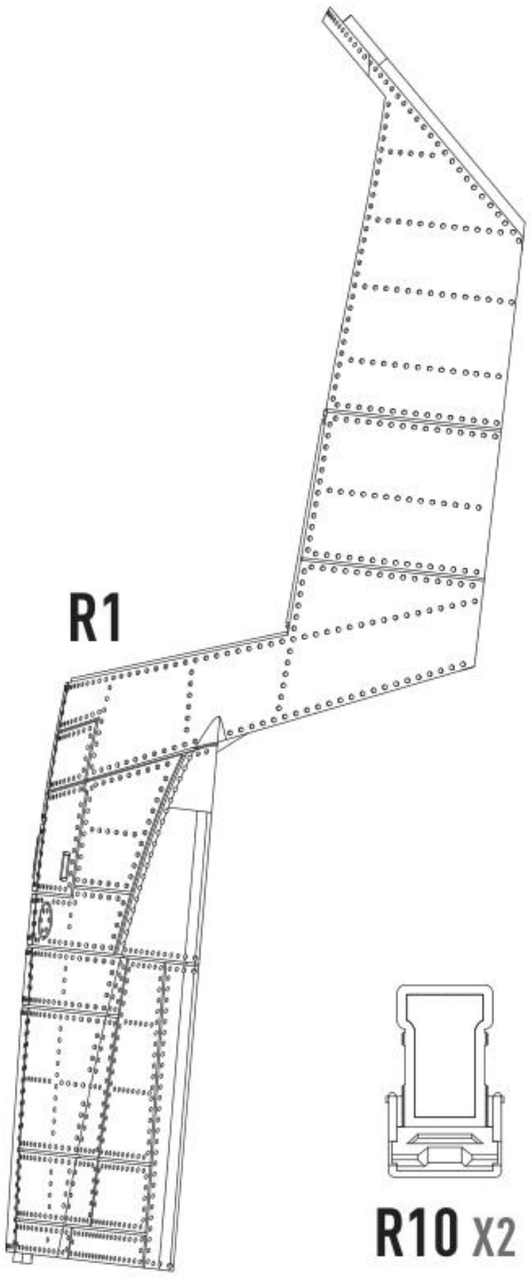
R1

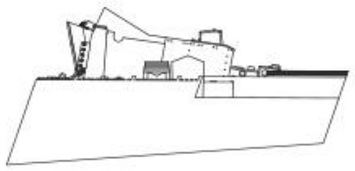
R2

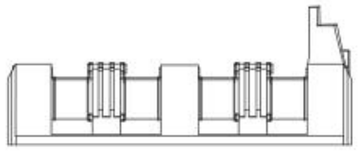
R3*

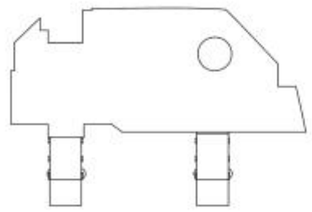
R4

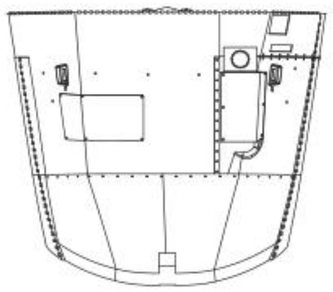
R5


R6

R7

R8 X2


R9 X2

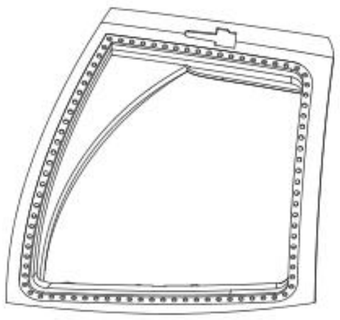
R30

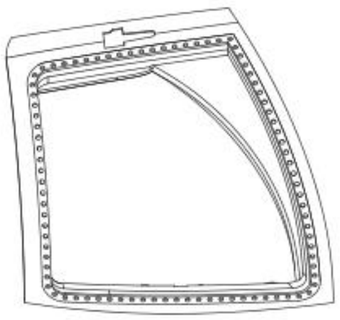
R31

R10 X2

R11

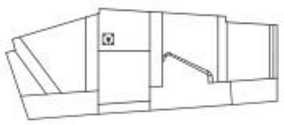
R12

R28

R29

R21 X2

R22 X2

R23 X3

R25

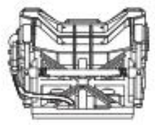
R26 X2

R27


R13


R14

R15

R16

R17

R18

R19

R20

R24

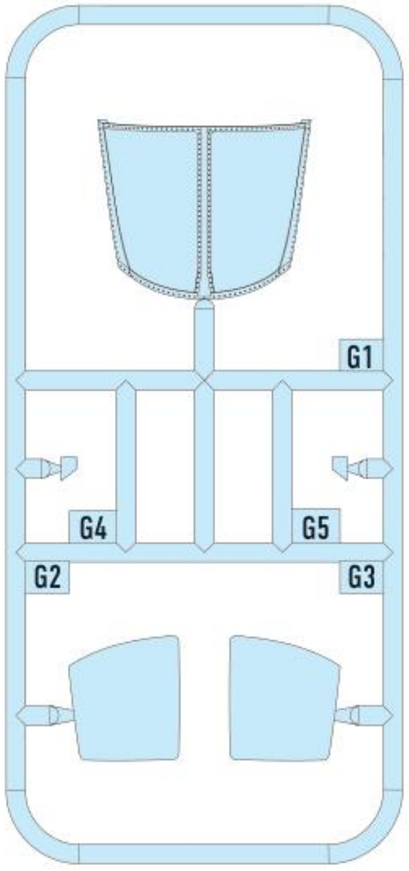

* AFTER REMOVING THE STAND FROM THE PART R3, SHARPEN THE PART AT THE ANCHOR POINT TO A THICKNESS OF 0.5 MM.
YOU ALSO NEED TO SHARPEN THE PART A17 FROM THE HOBBYBOSS SET

3D DECALS INSTRUCTION

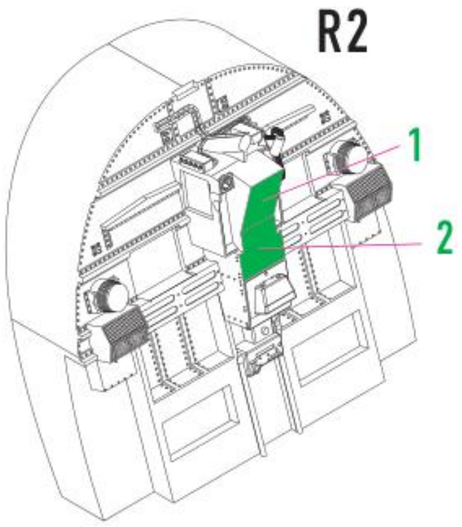

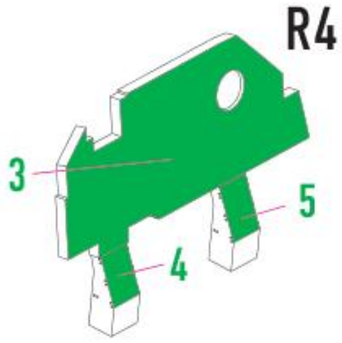

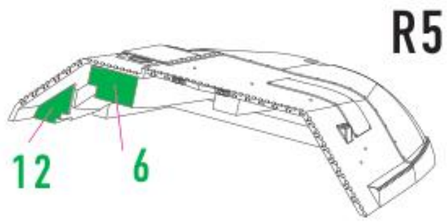

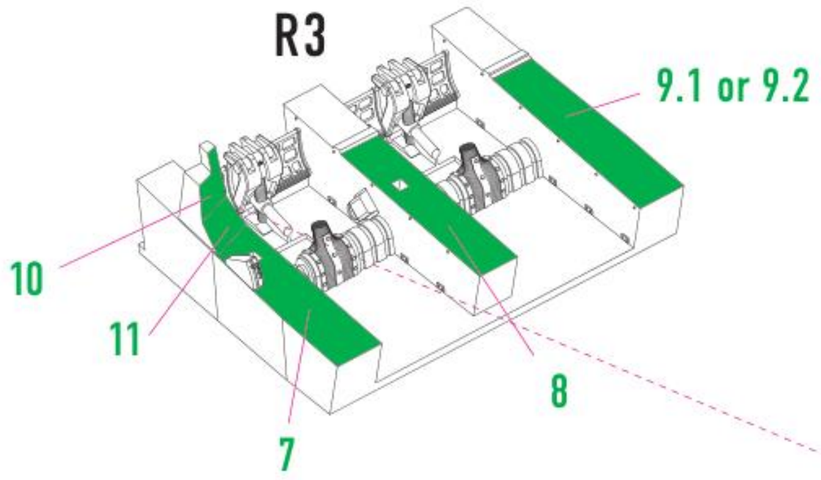

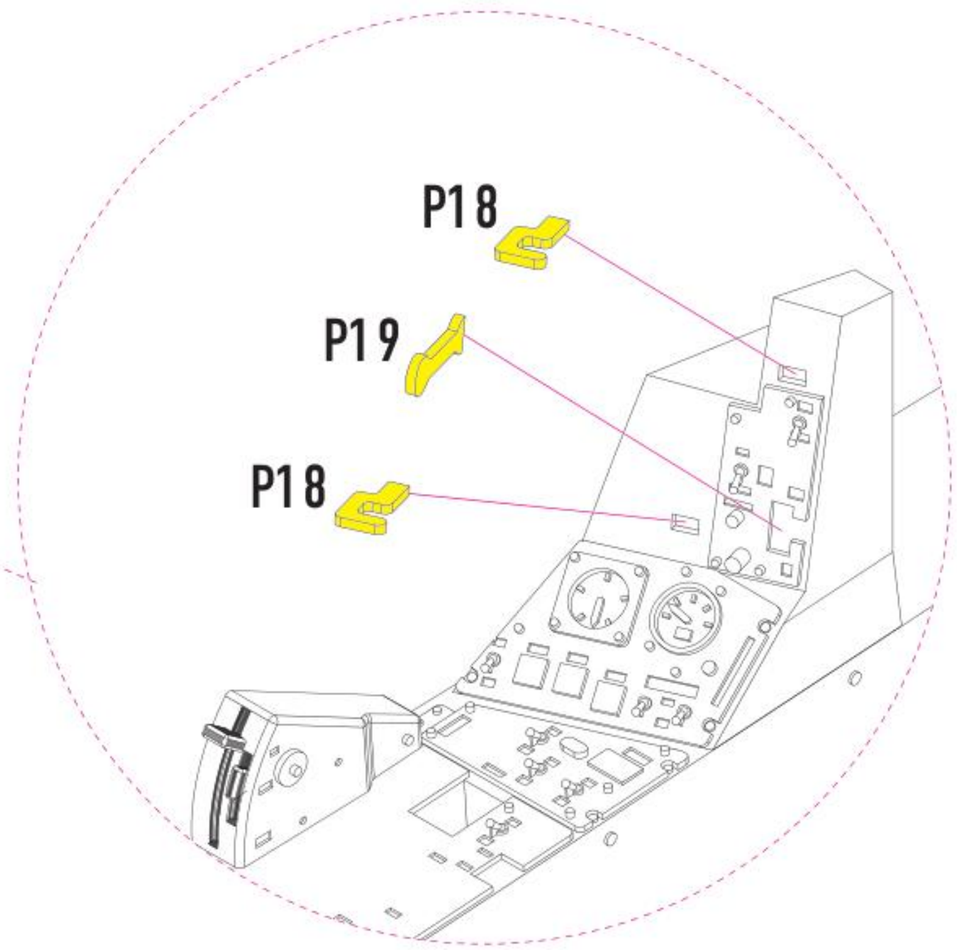

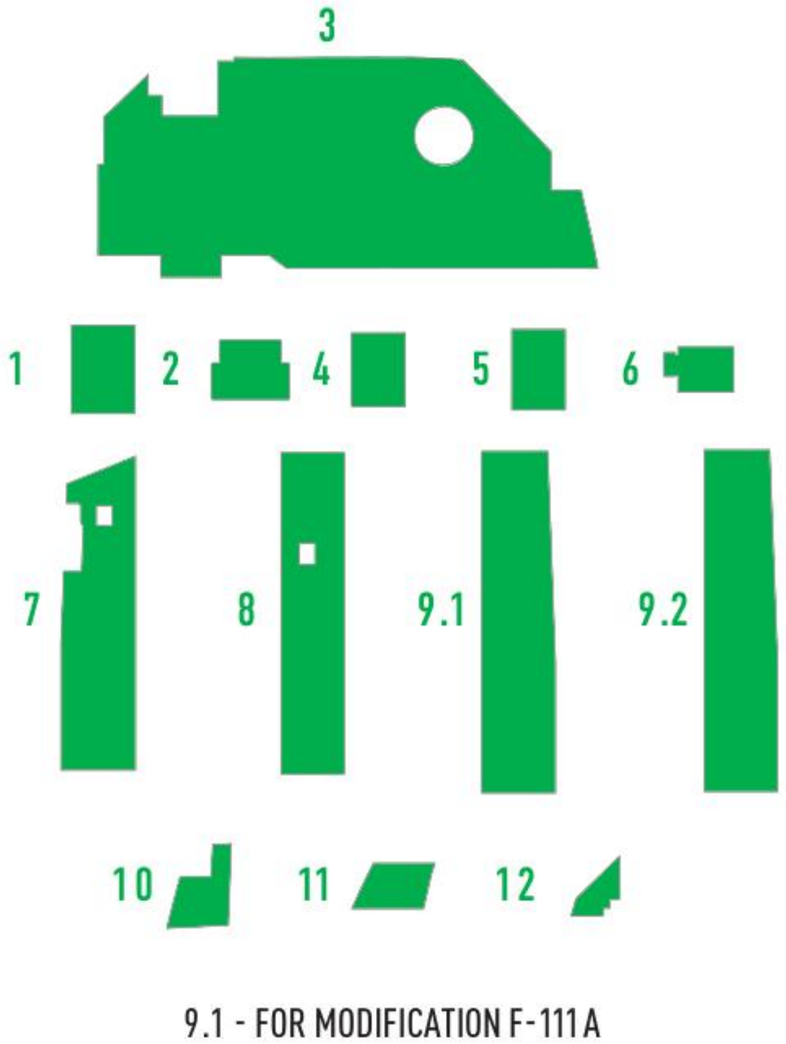

9.1 - FOR MODIFICATION F-111A
9.2 - FOR MODIFICATION F-111E

APPLYING MASKS G1

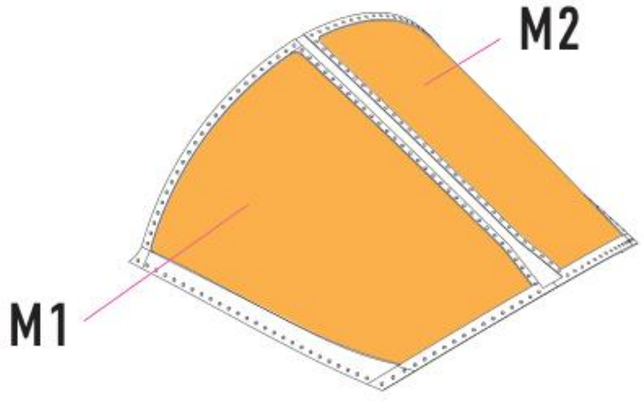

CAMOUFLAGE COLOR

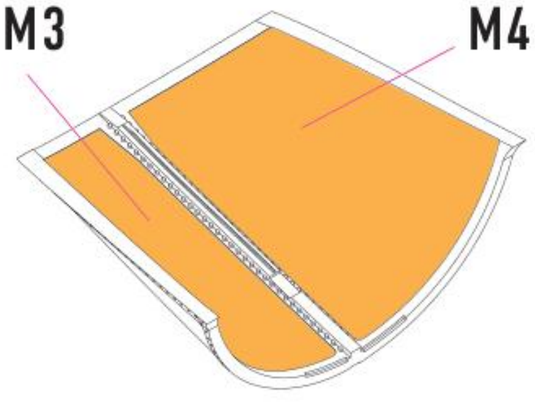

INTERIOR COLOR

1 X2

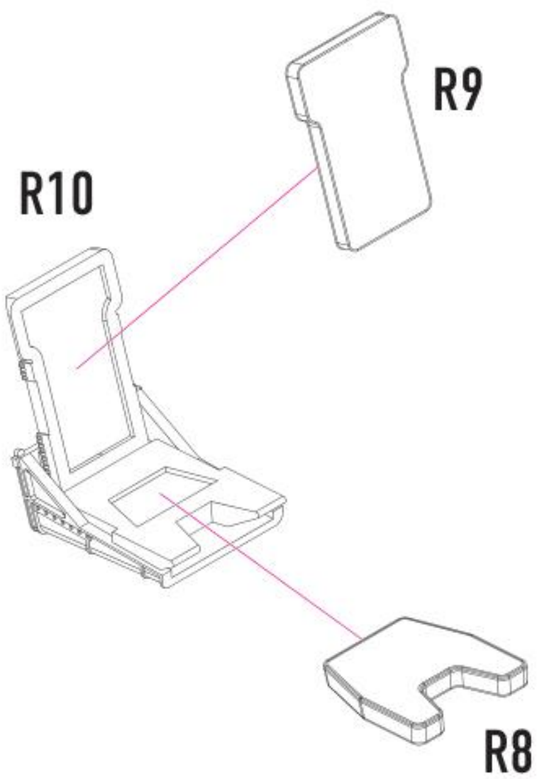

2 X2

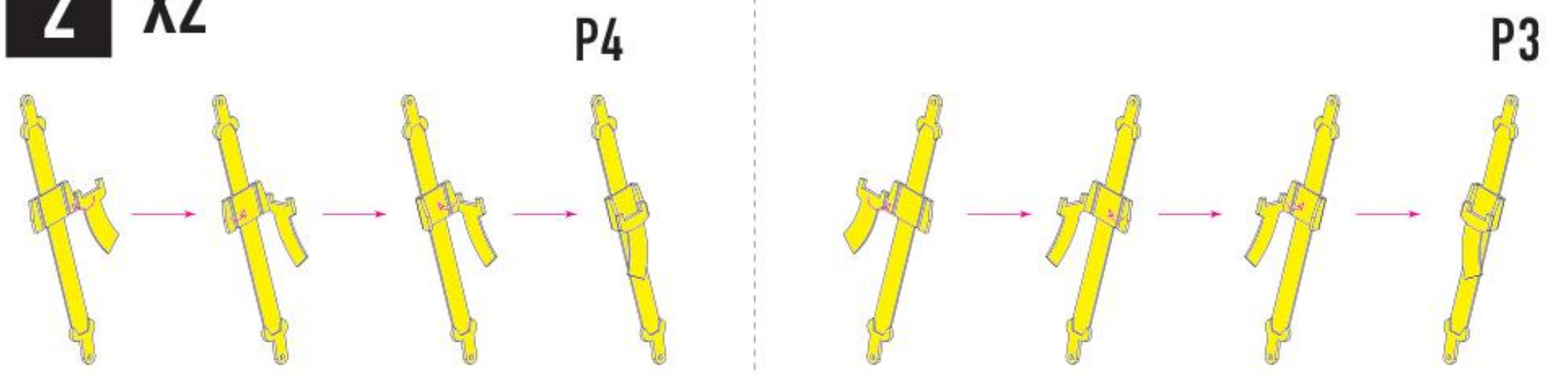

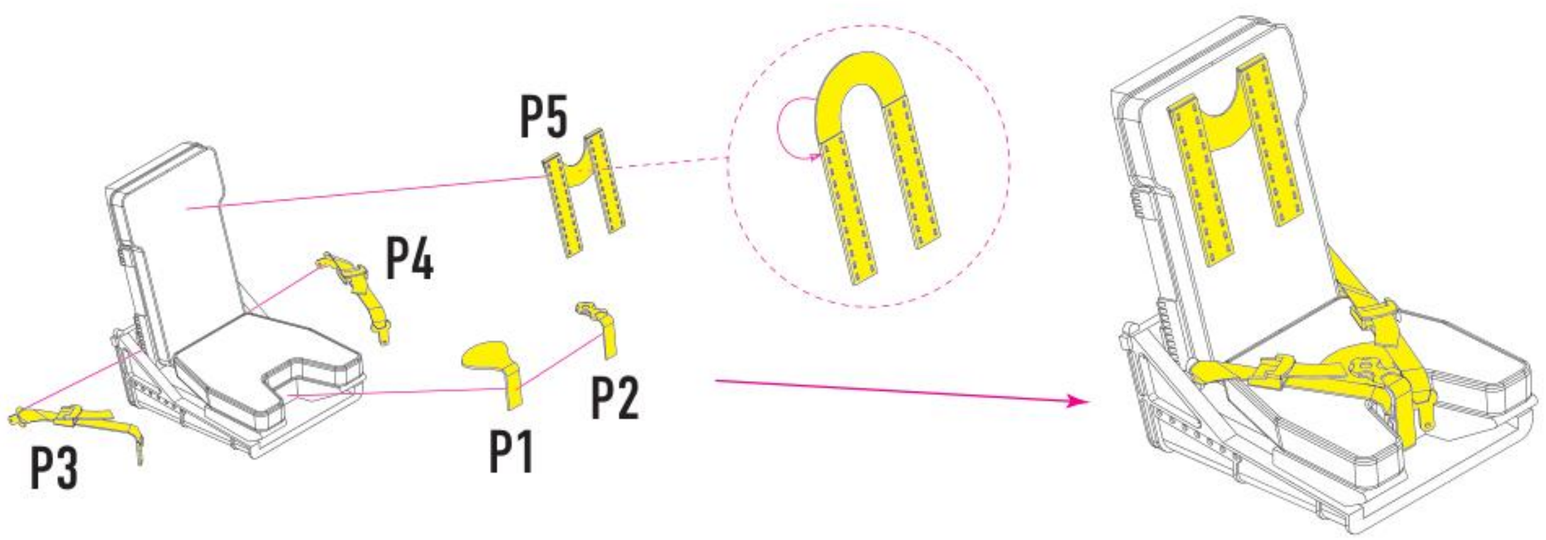

3

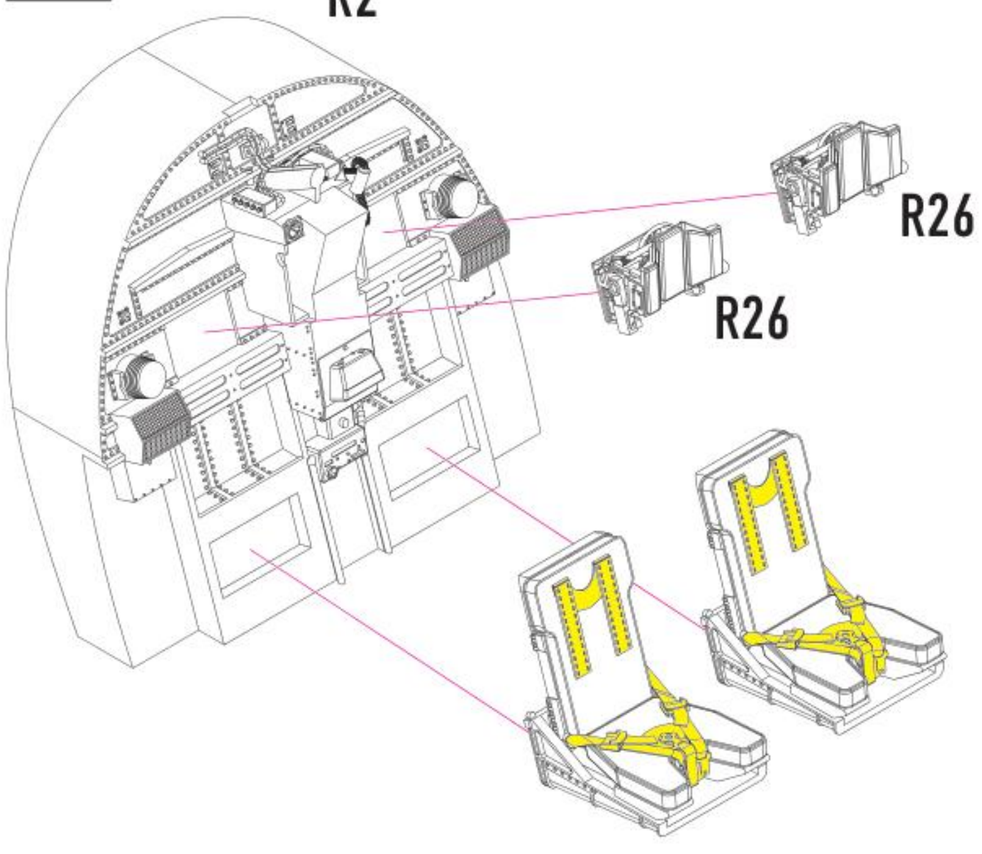

4

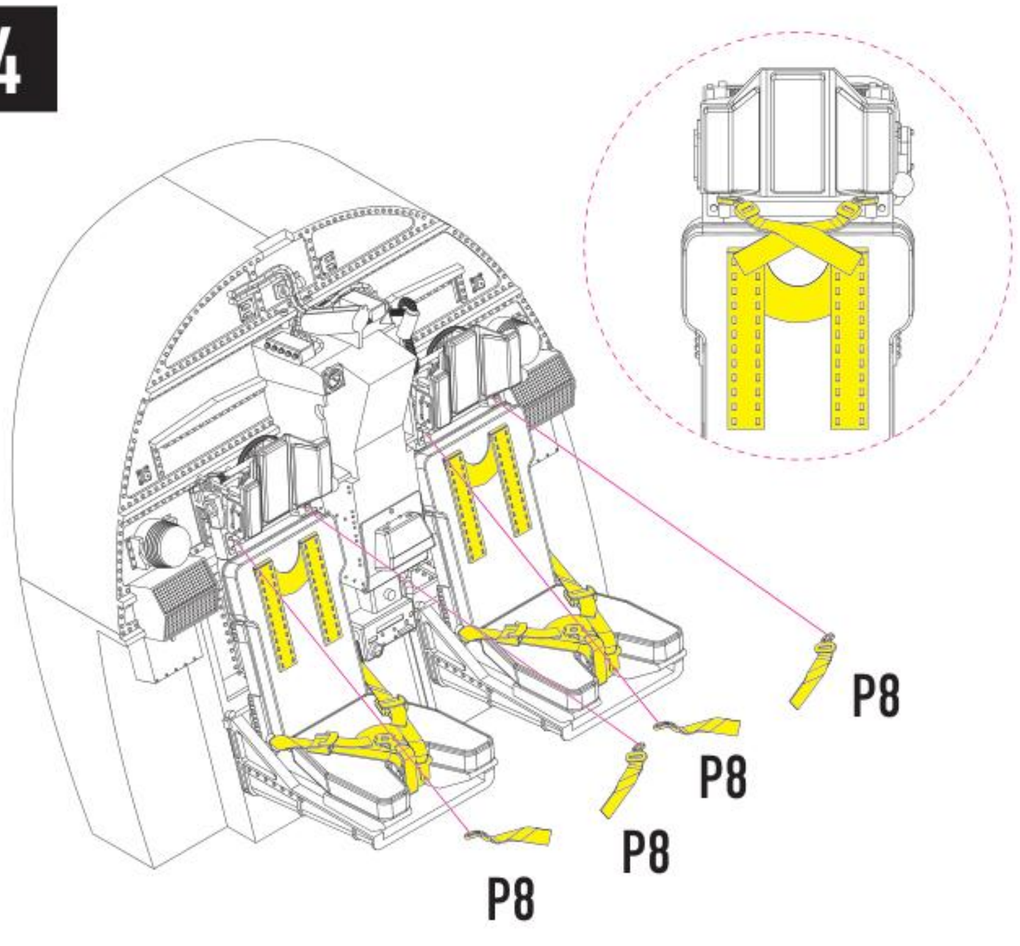

5

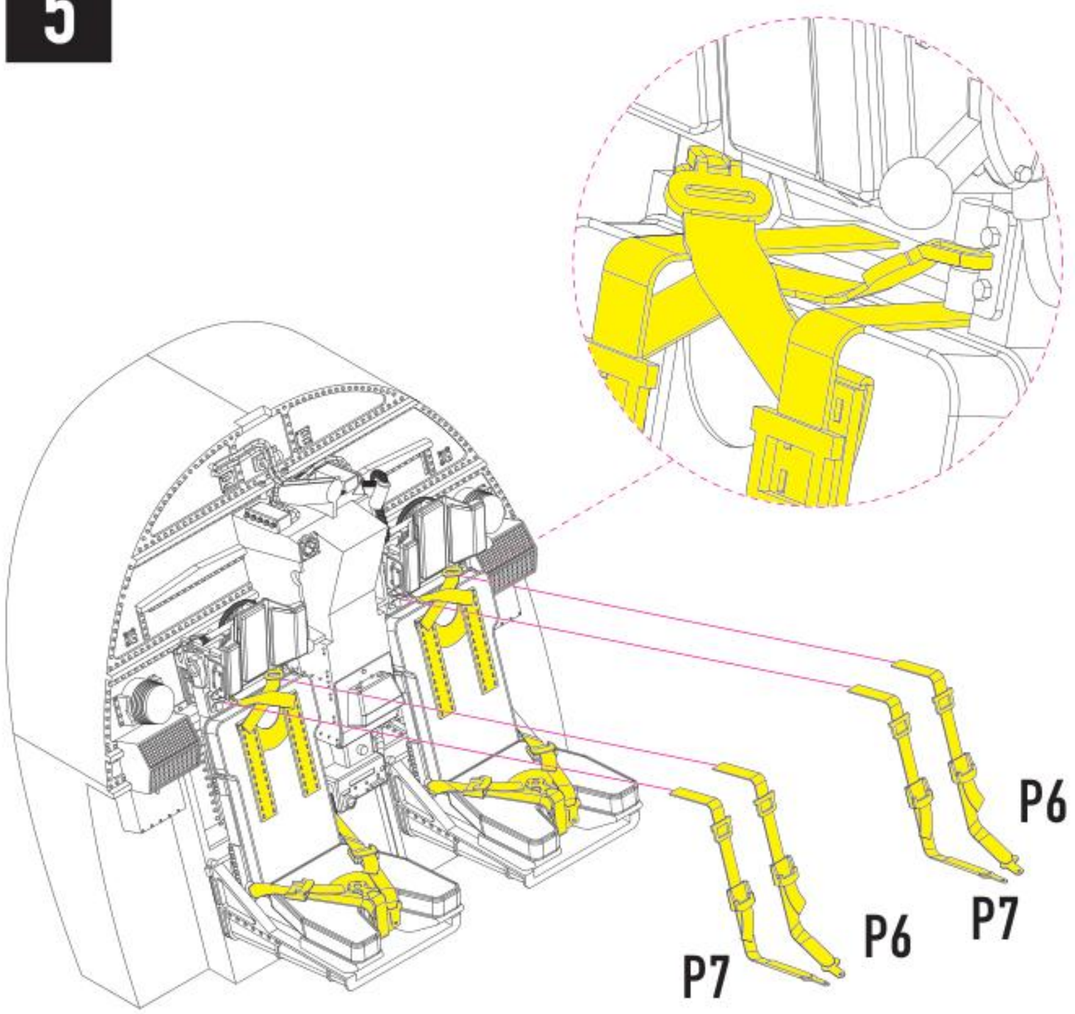

6

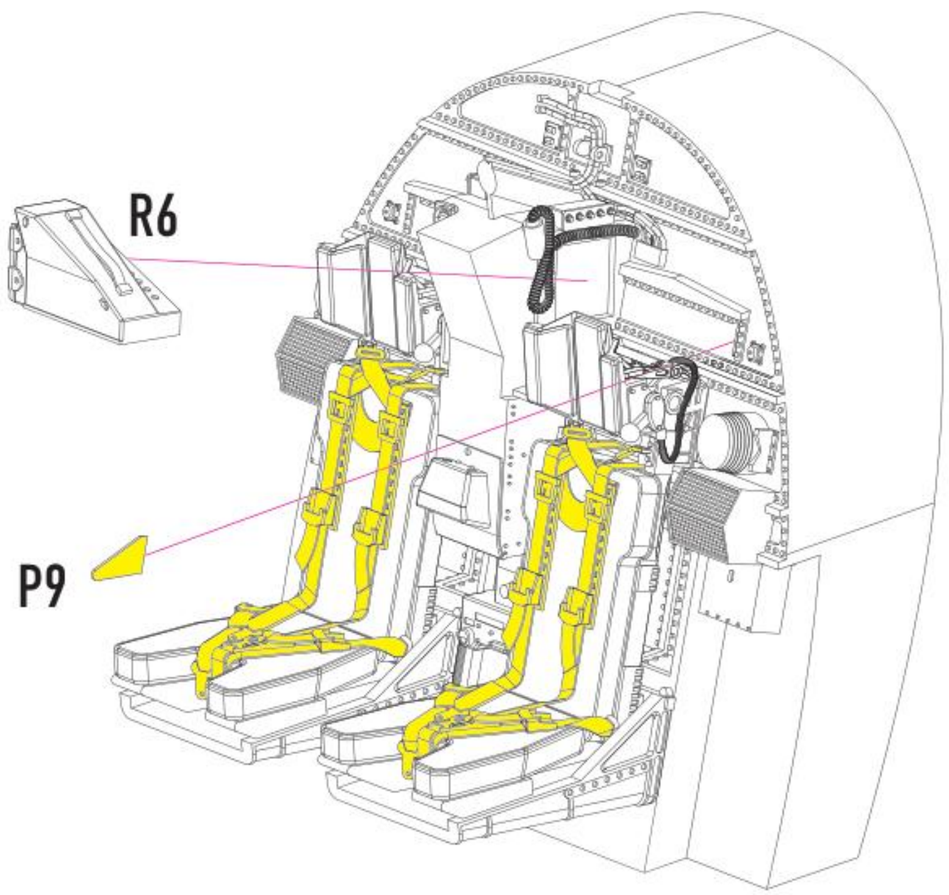

7

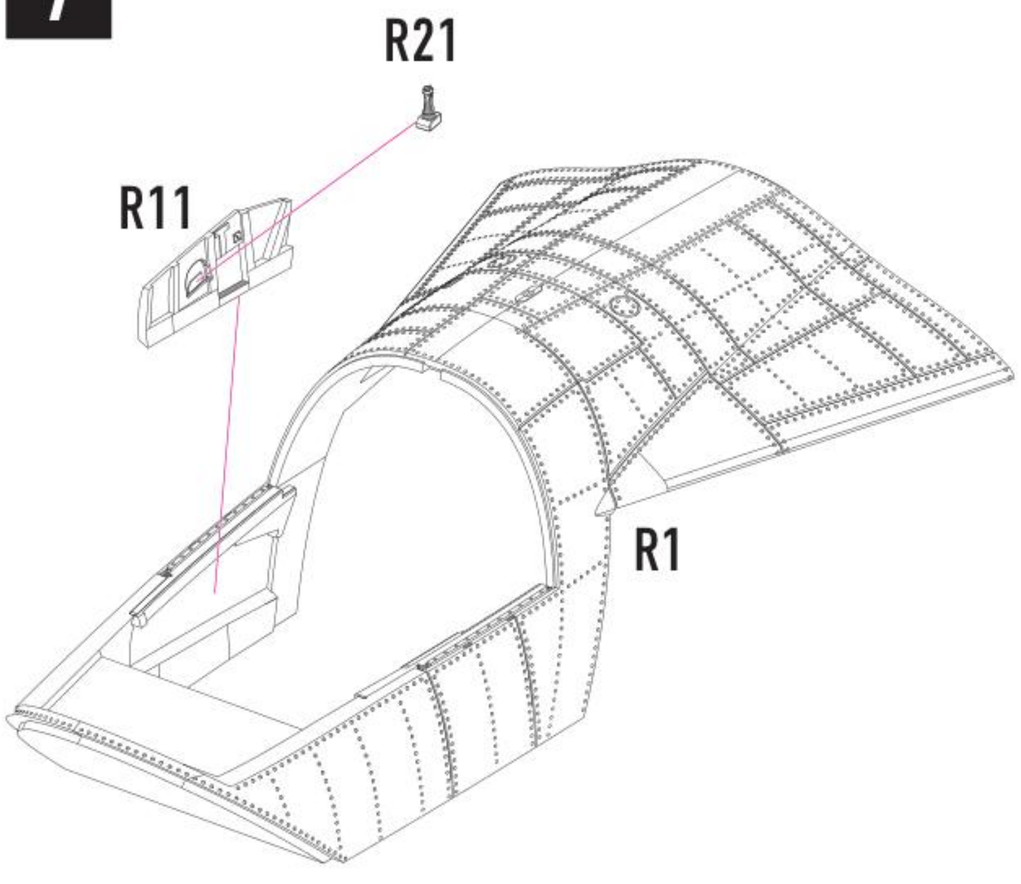

8

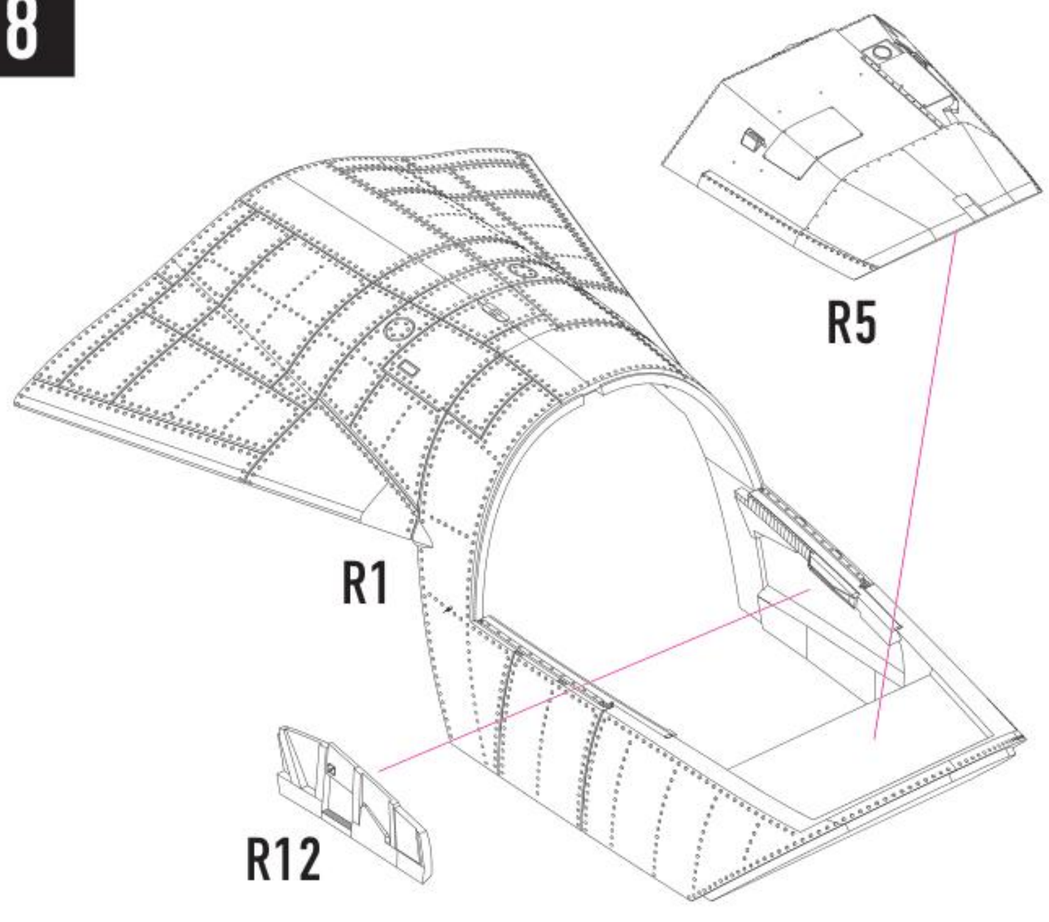

9

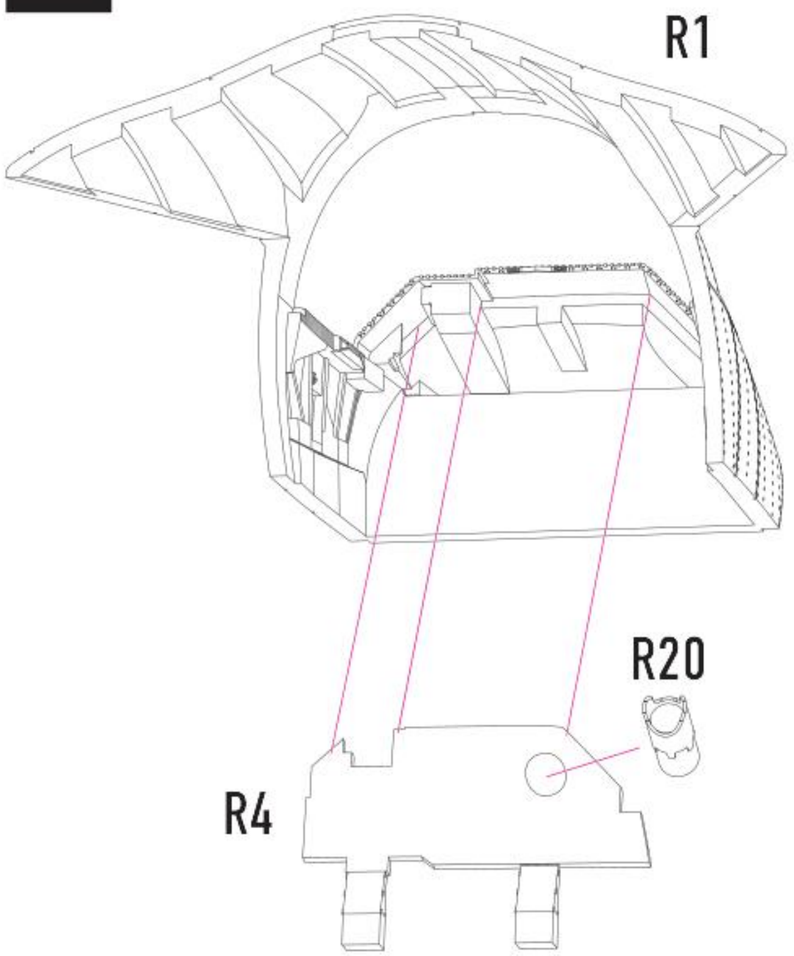
R1
R20
R4

10

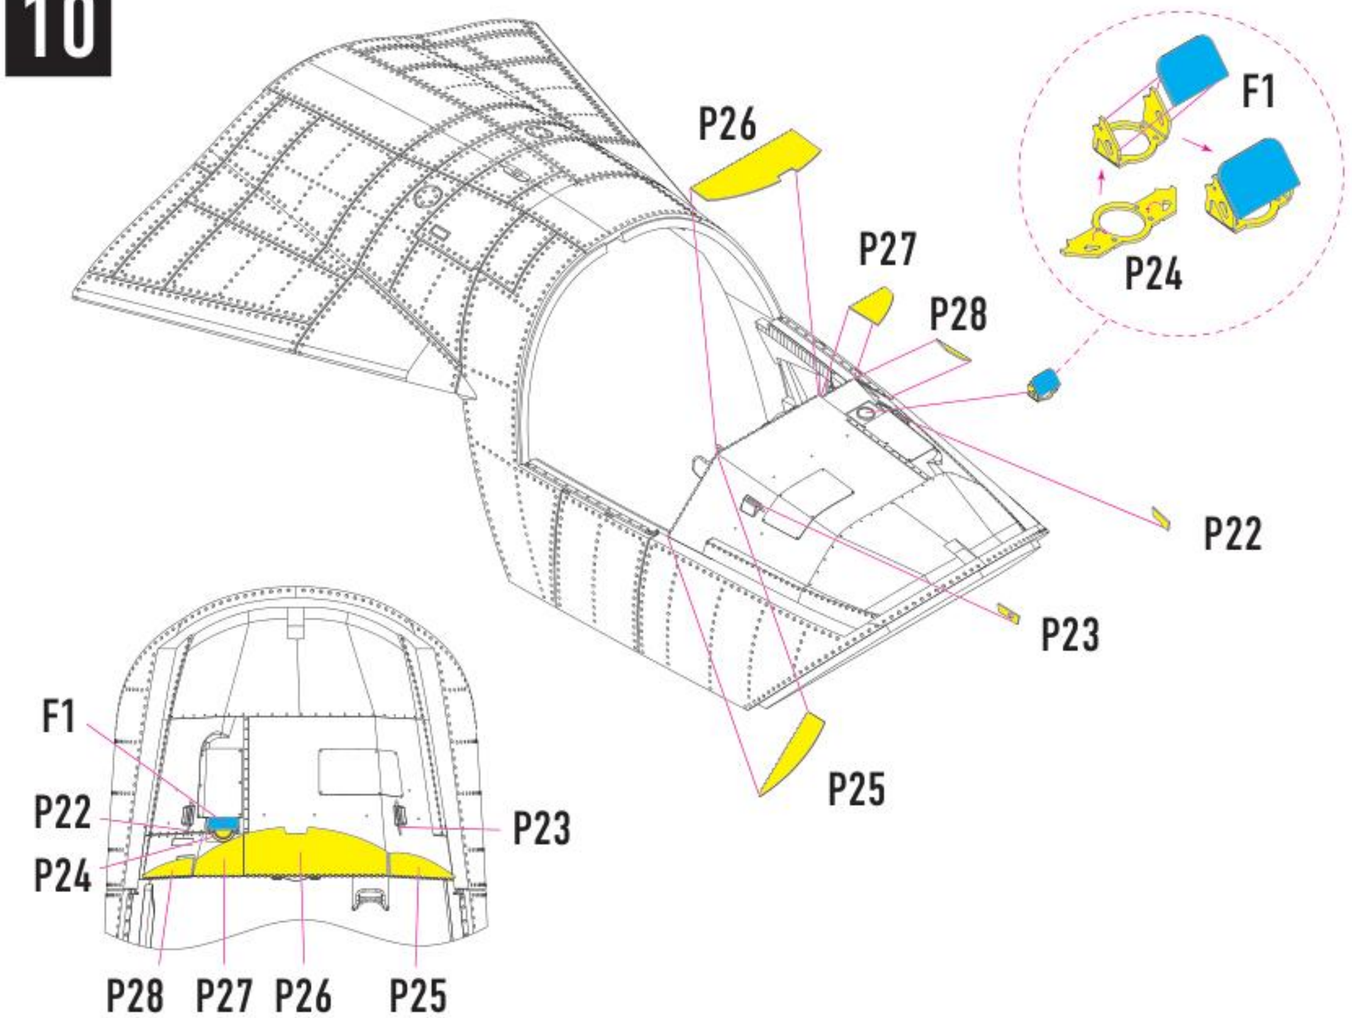
F1
P24
P26
P27
P28
P22
P23
P25
F1
P22
P24
P23
P28
P27
P26
P25

11

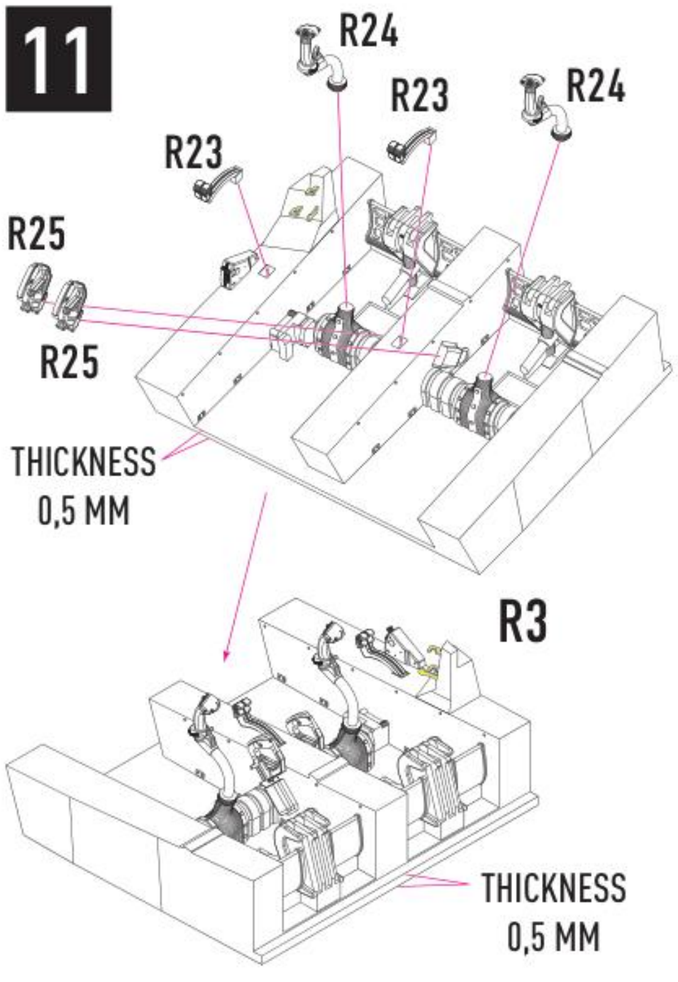
R24
R23
R24
R23
R25
R25
THICKNESS
0,5 MM
R3
THICKNESS
0,5 MM

12

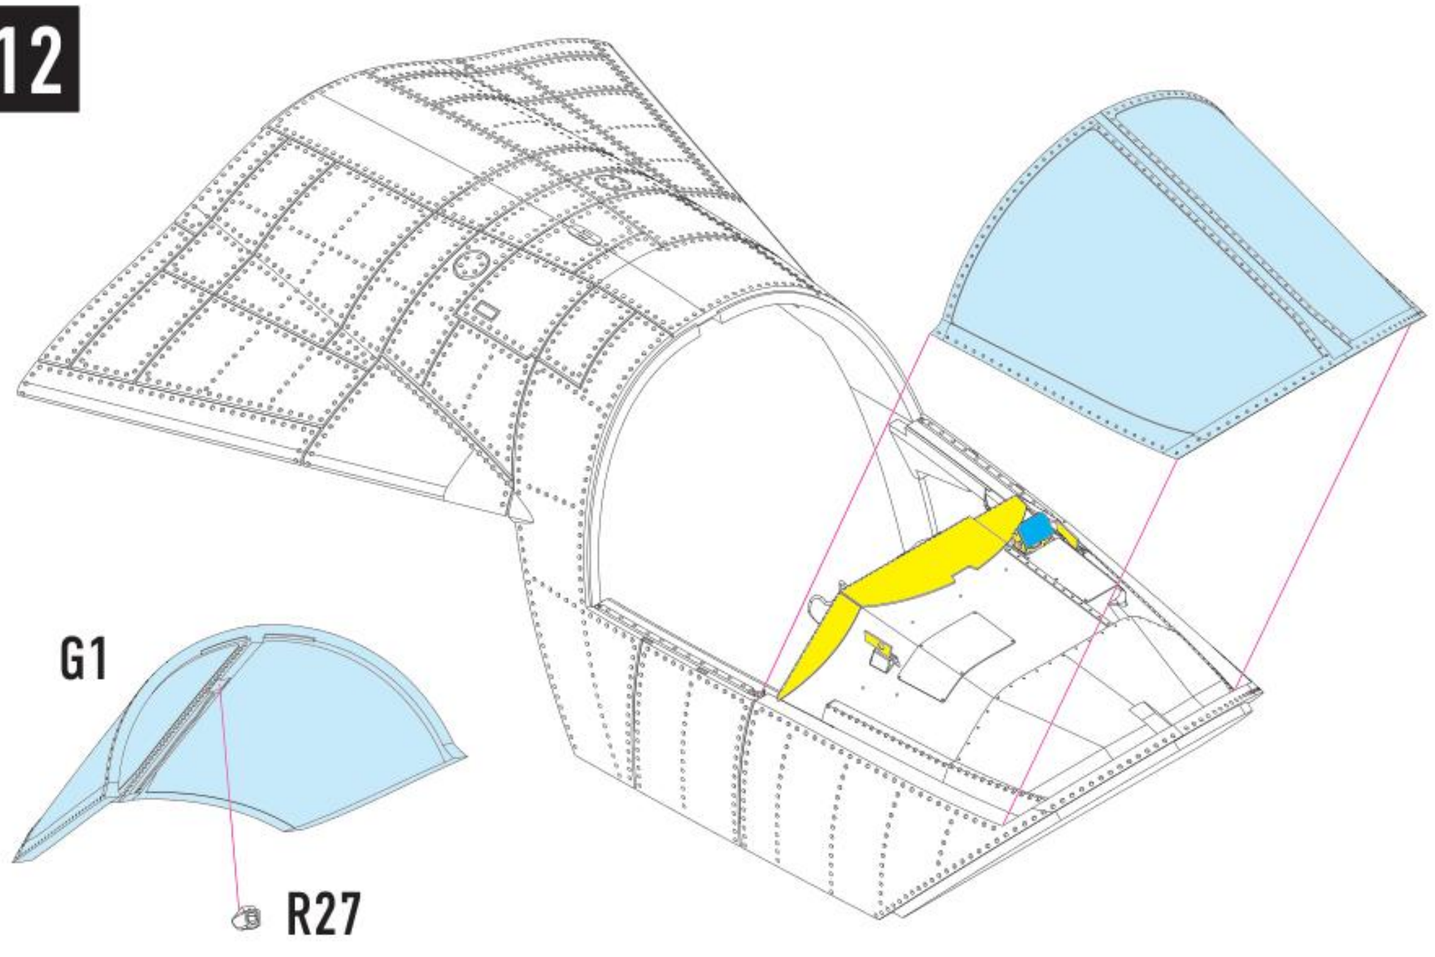
G1
R27

13

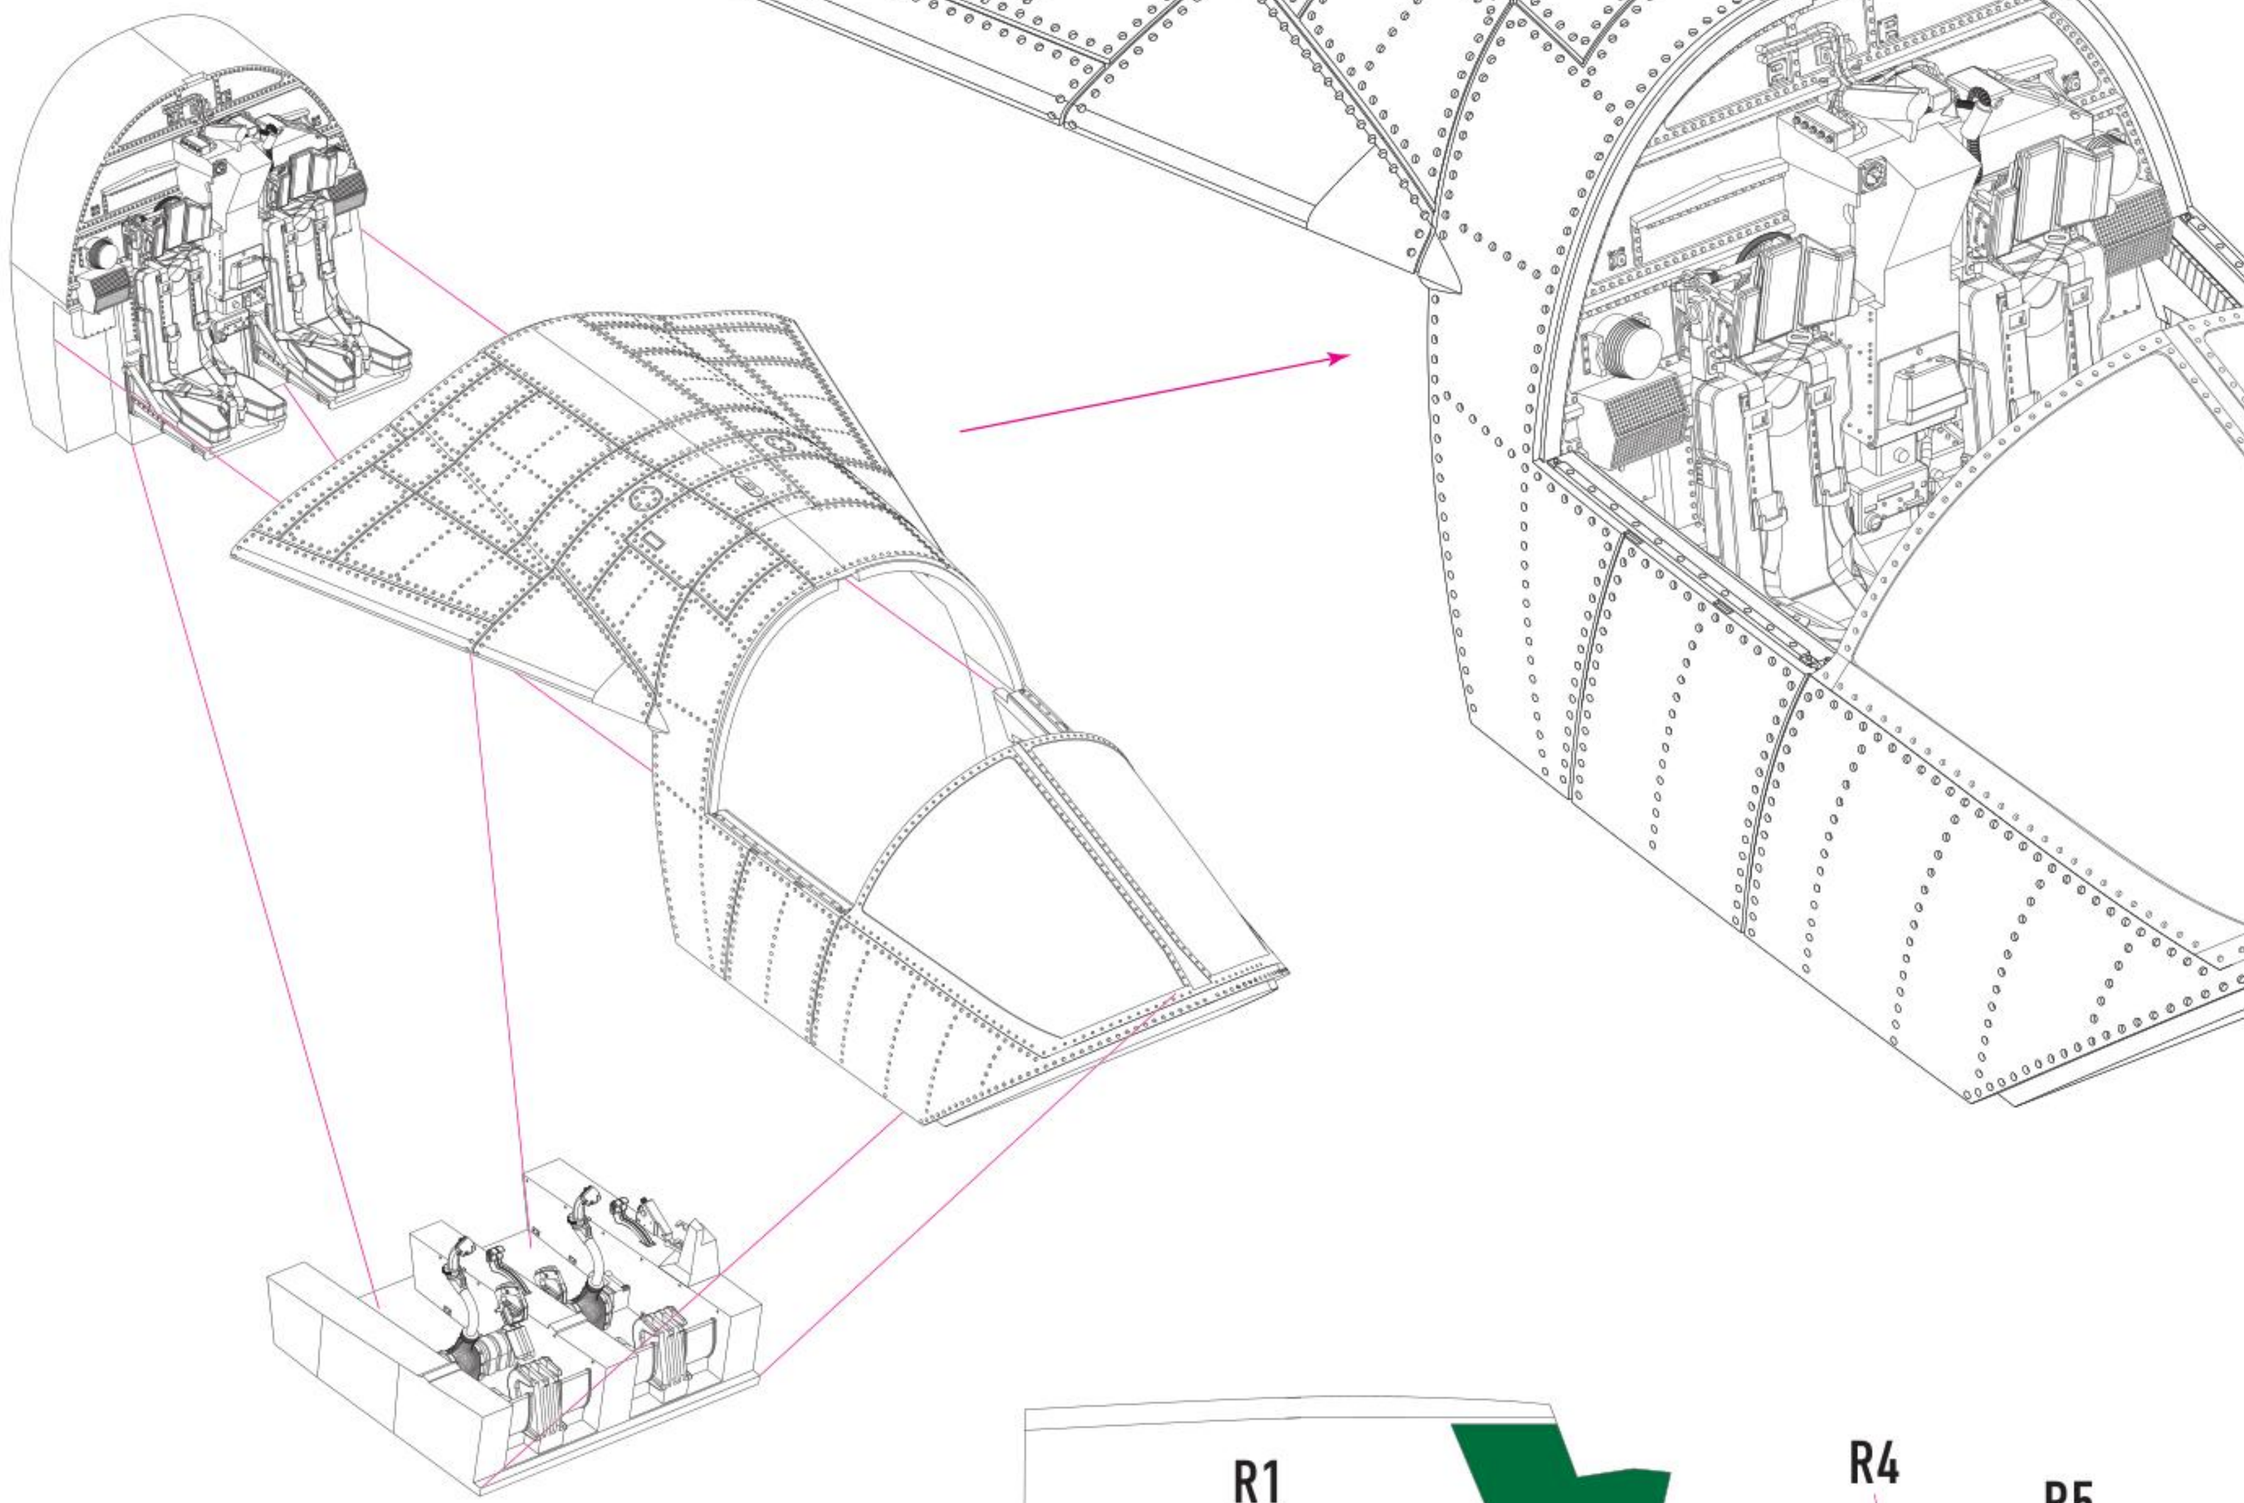

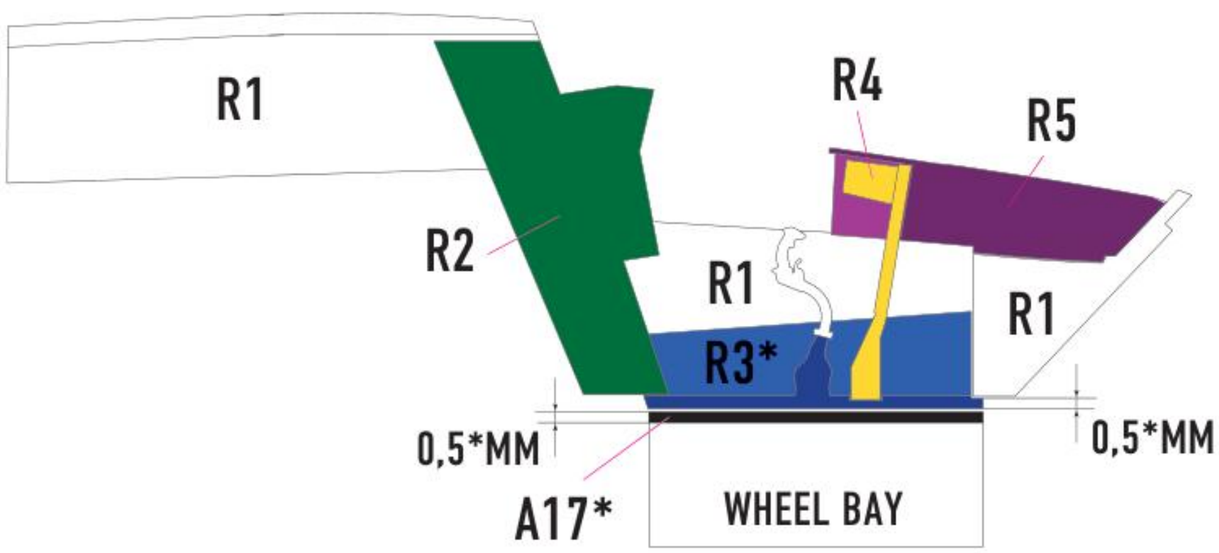

* AFTER REMOVING THE STAND FROM THE PART R3, SHARPEN THE PART AT THE ANCHOR POINT TO A THICKNESS OF 0.5 MM. YOU ALSO NEED TO SHARPEN THE PART A17 FROM THE HOBBYBOSS SET

14 FOR CLOSED LANTERN

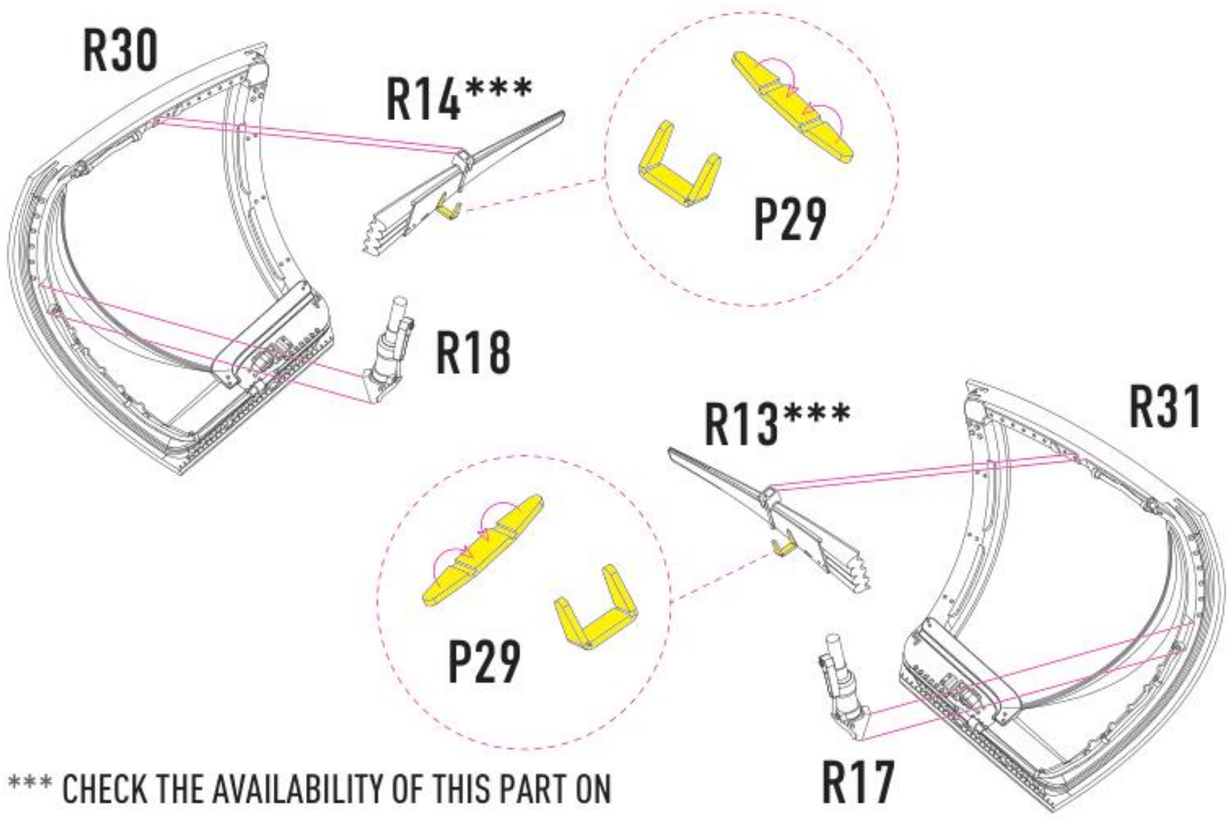

*** CHECK THE AVAILABILITY OF THIS PART ON THE PHOTOS OF THE AIRCRAFT YOU ARE BUILDING

15

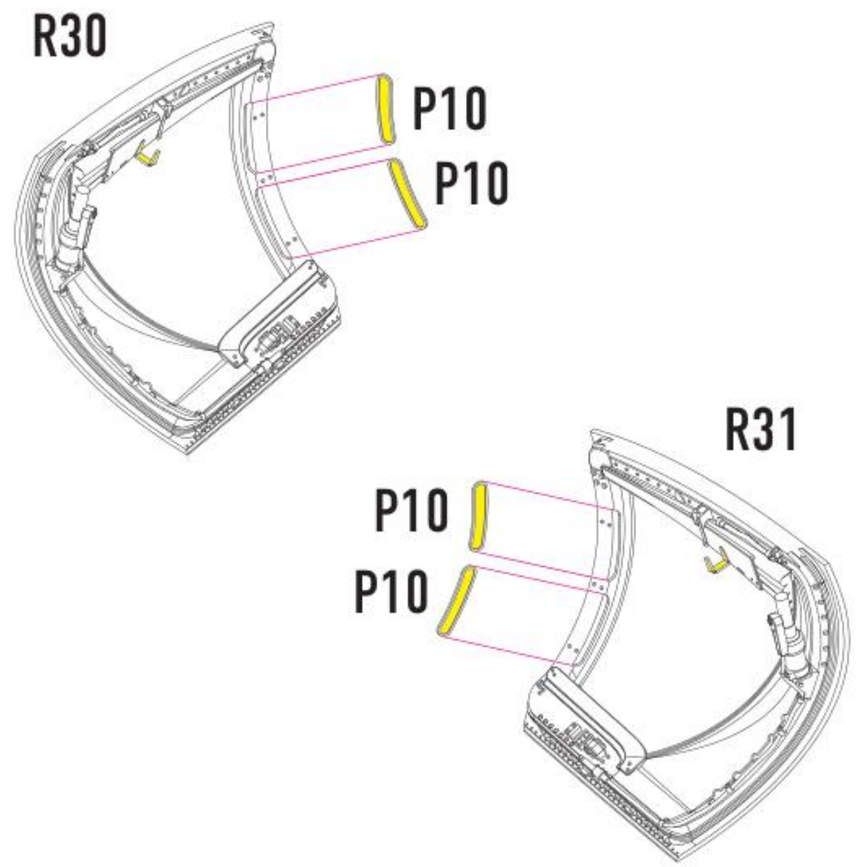

16

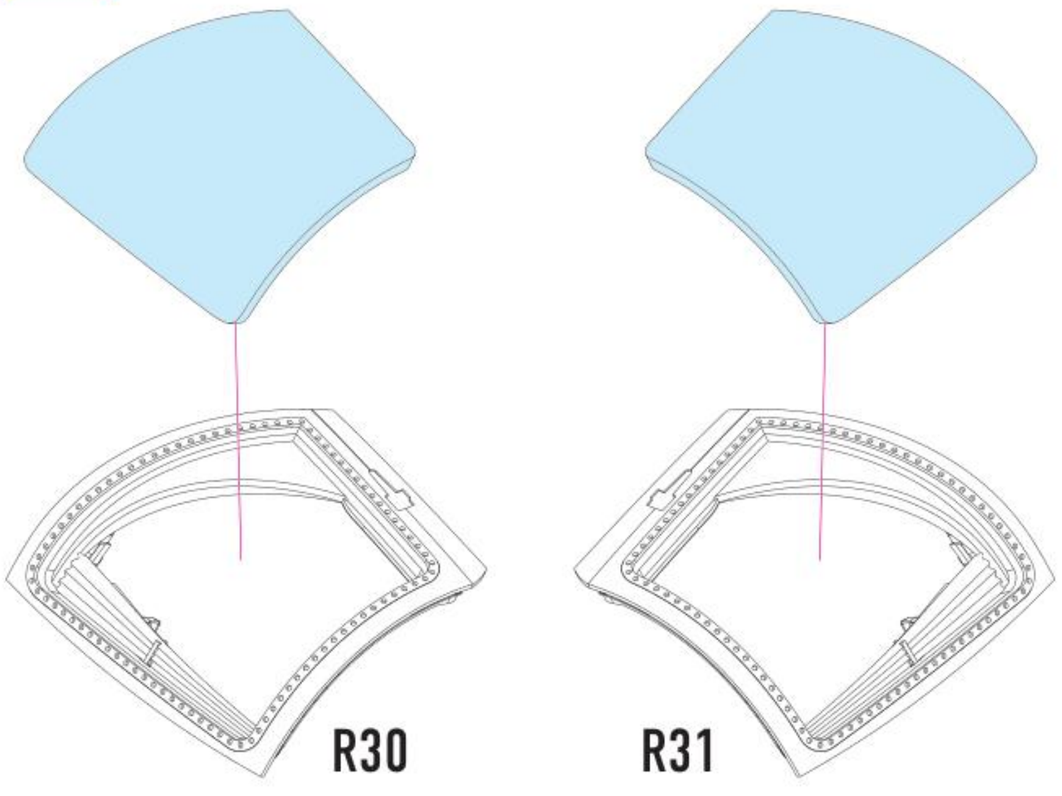

17

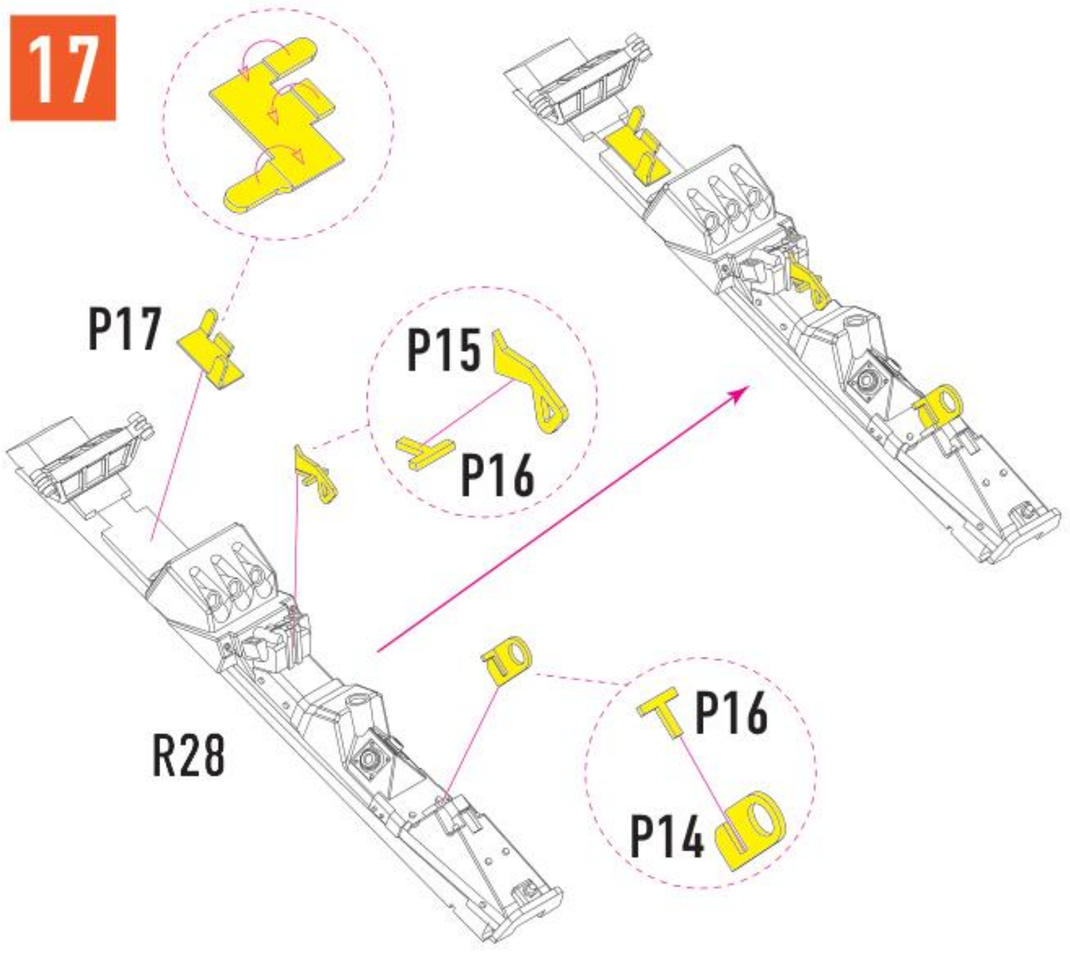

18

R30

P12

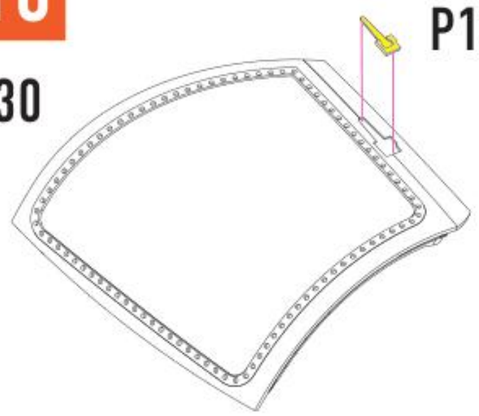

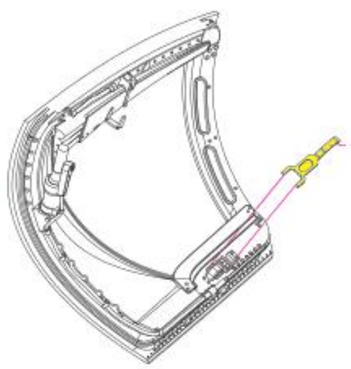

P13

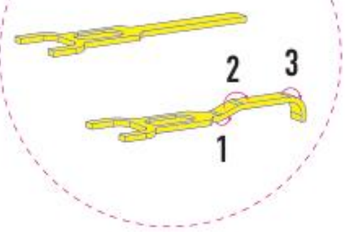

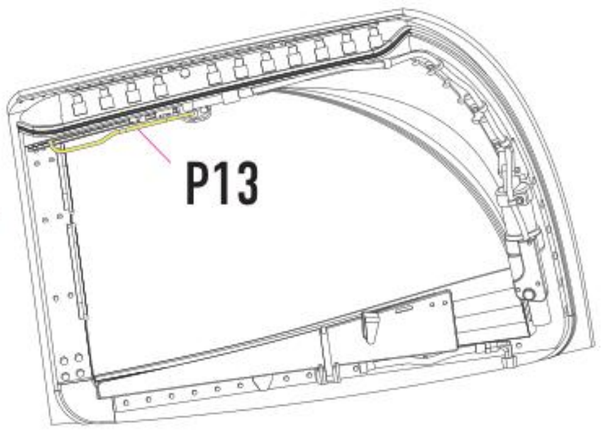

P11

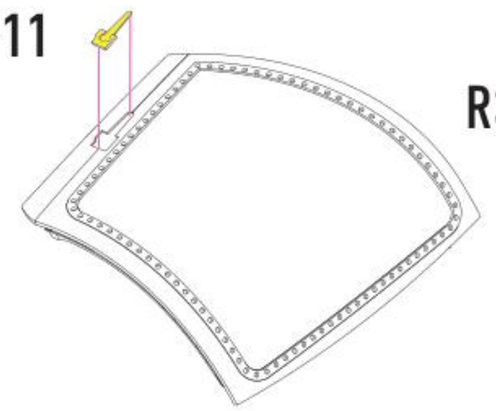

R31

P13

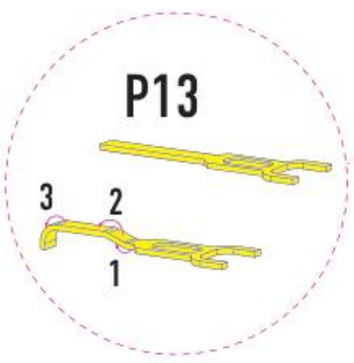

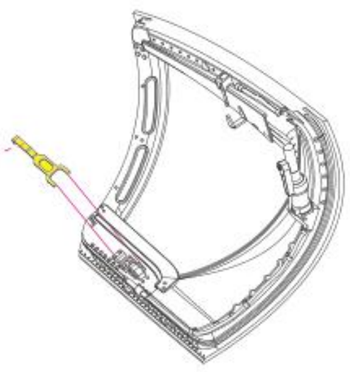

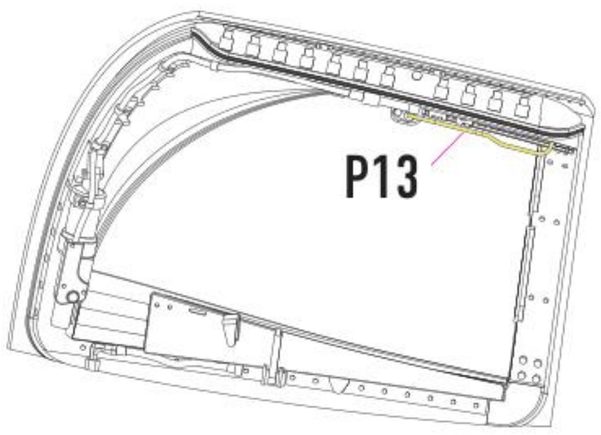

19

STEP 17

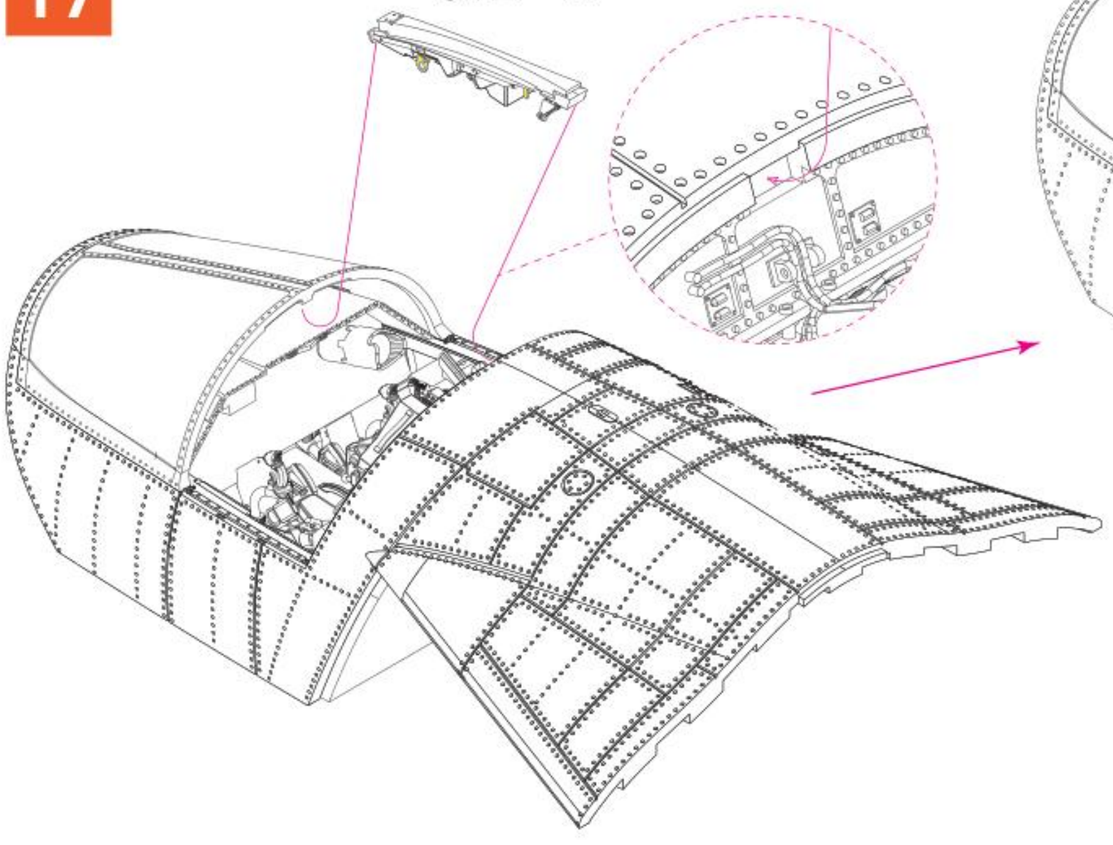

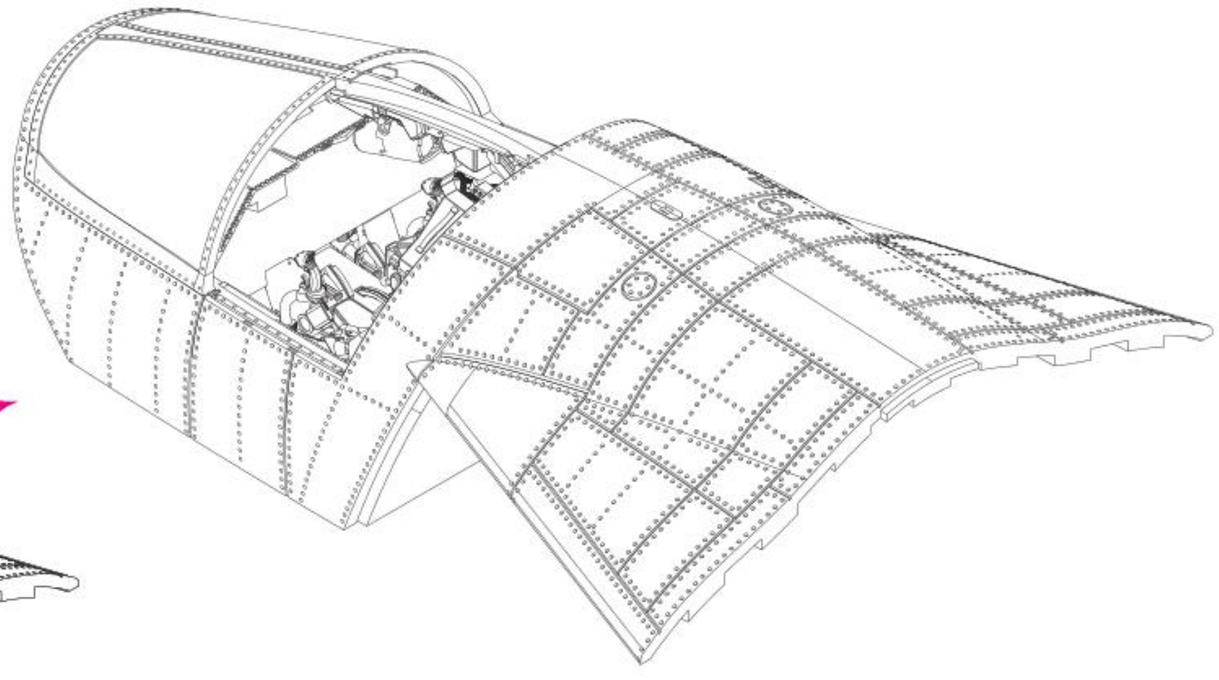

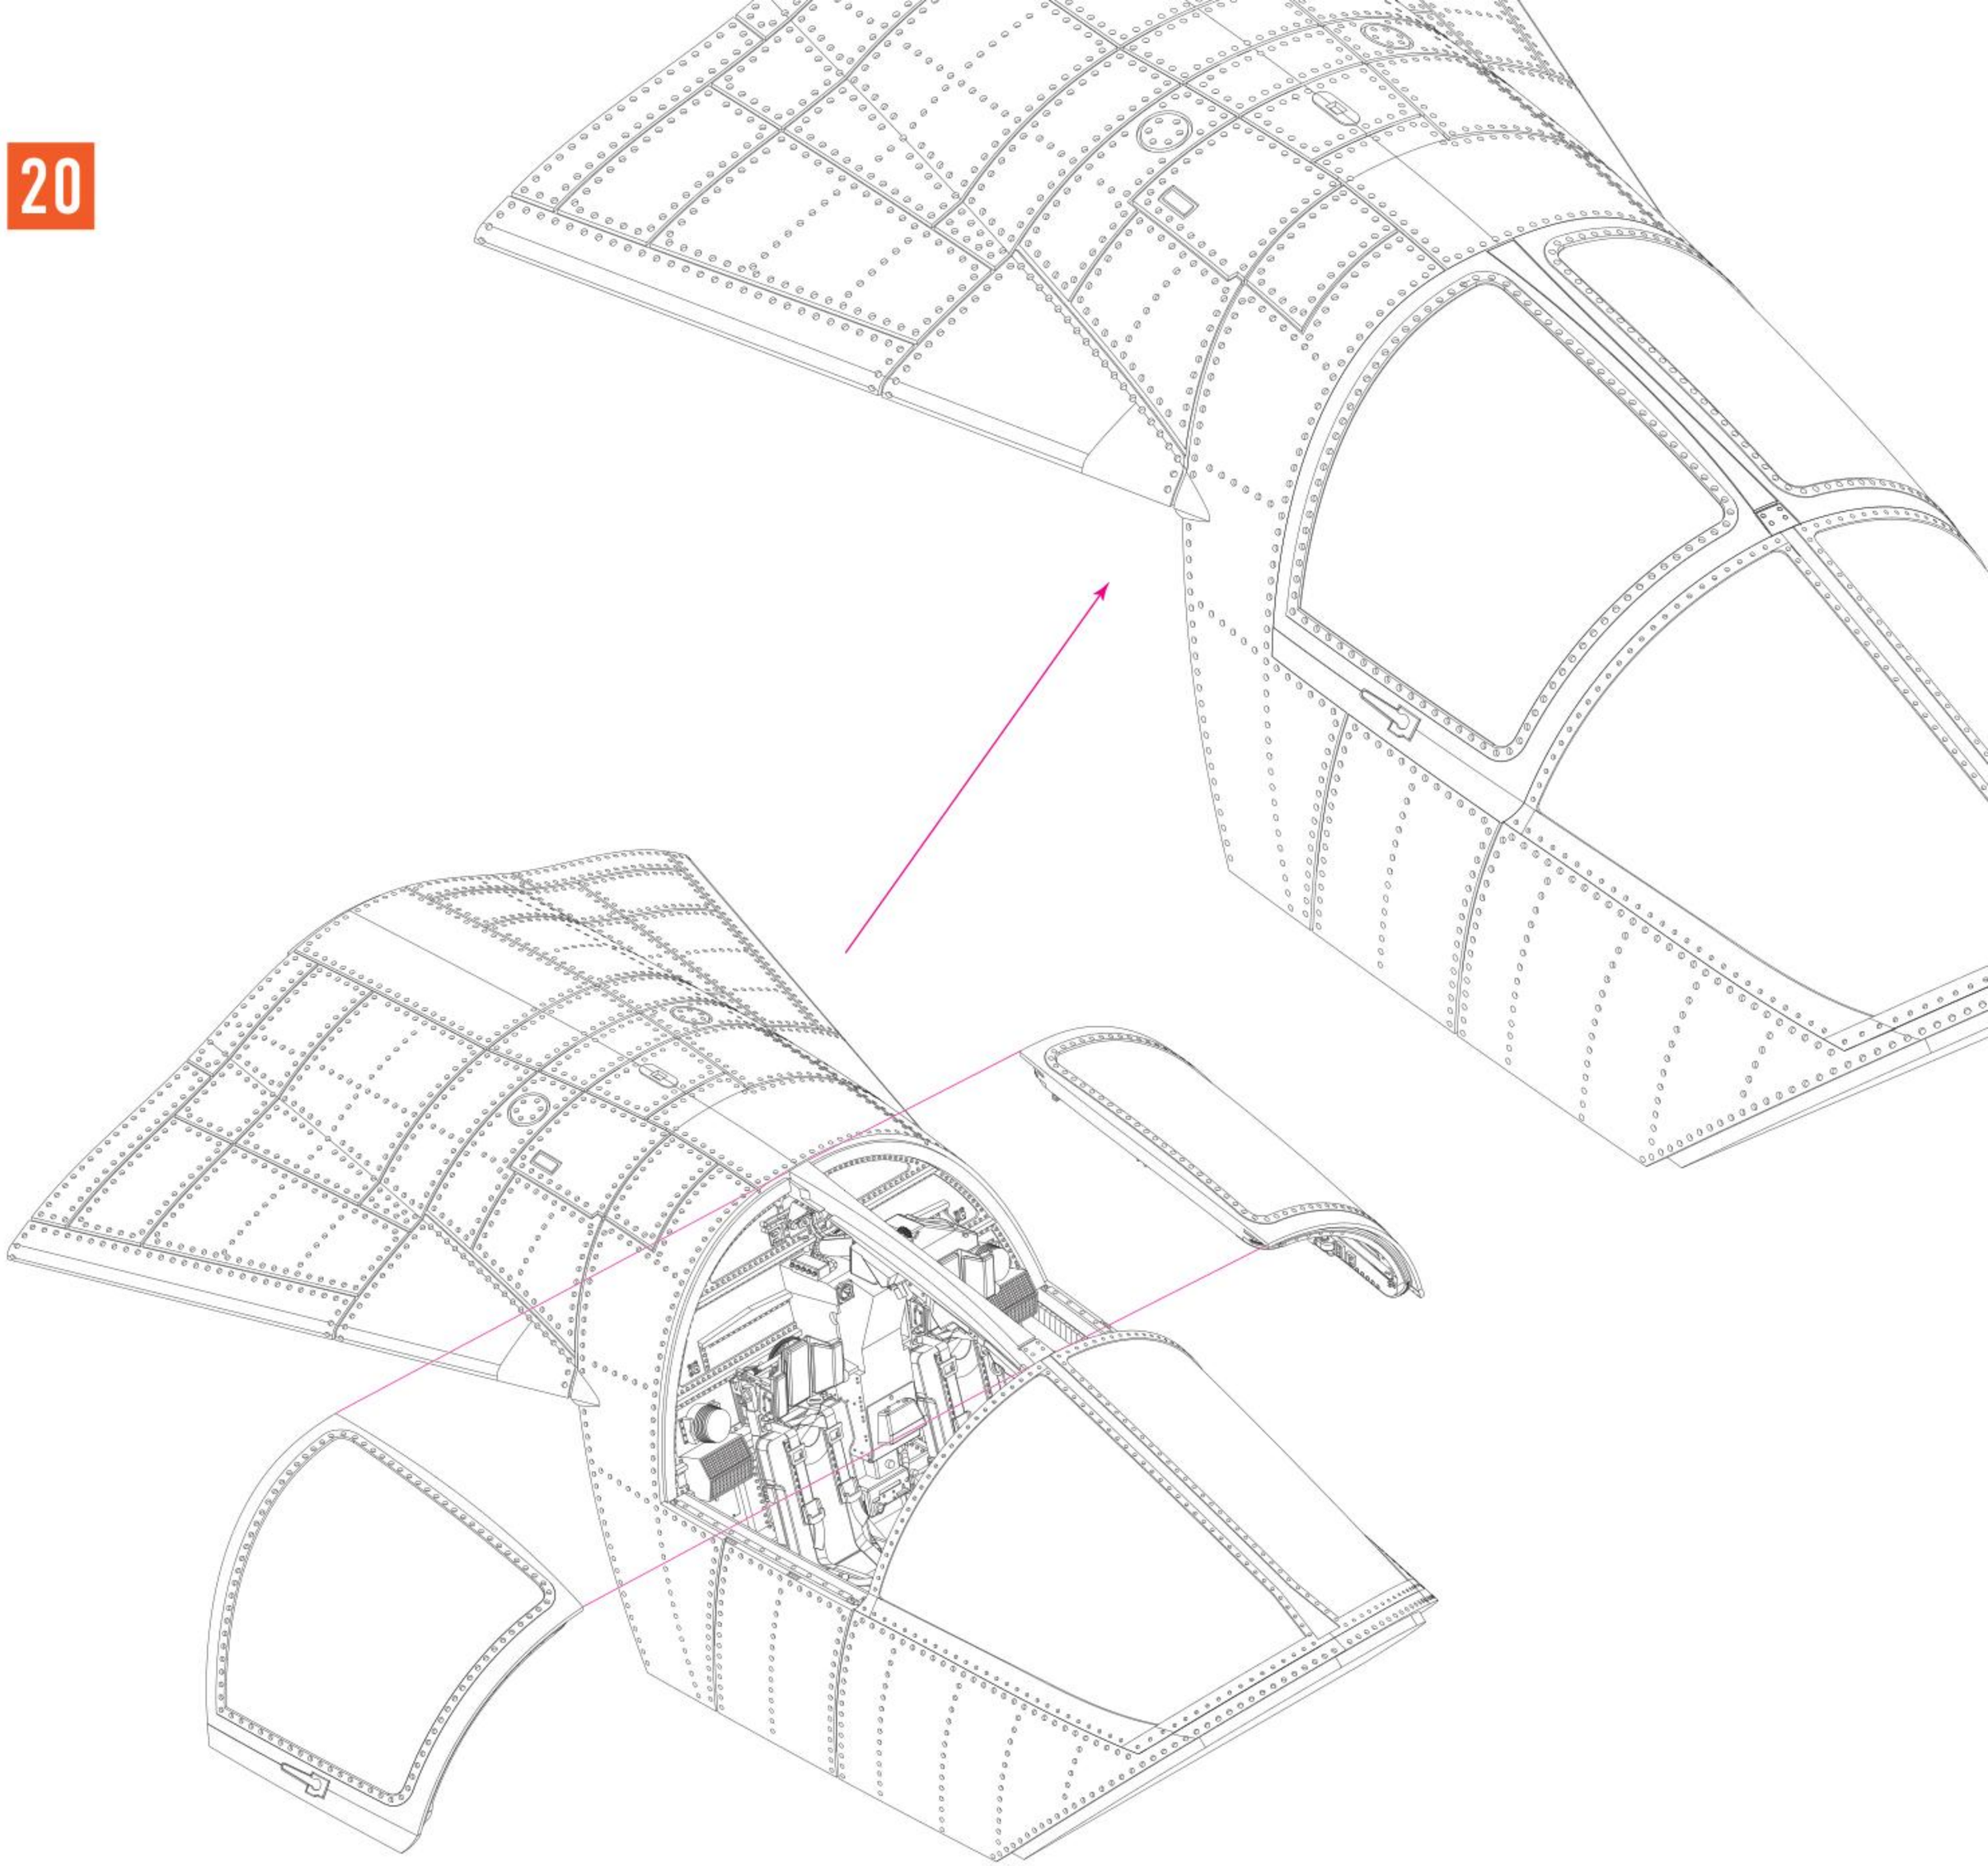

14 FOR OPEN LANTERN

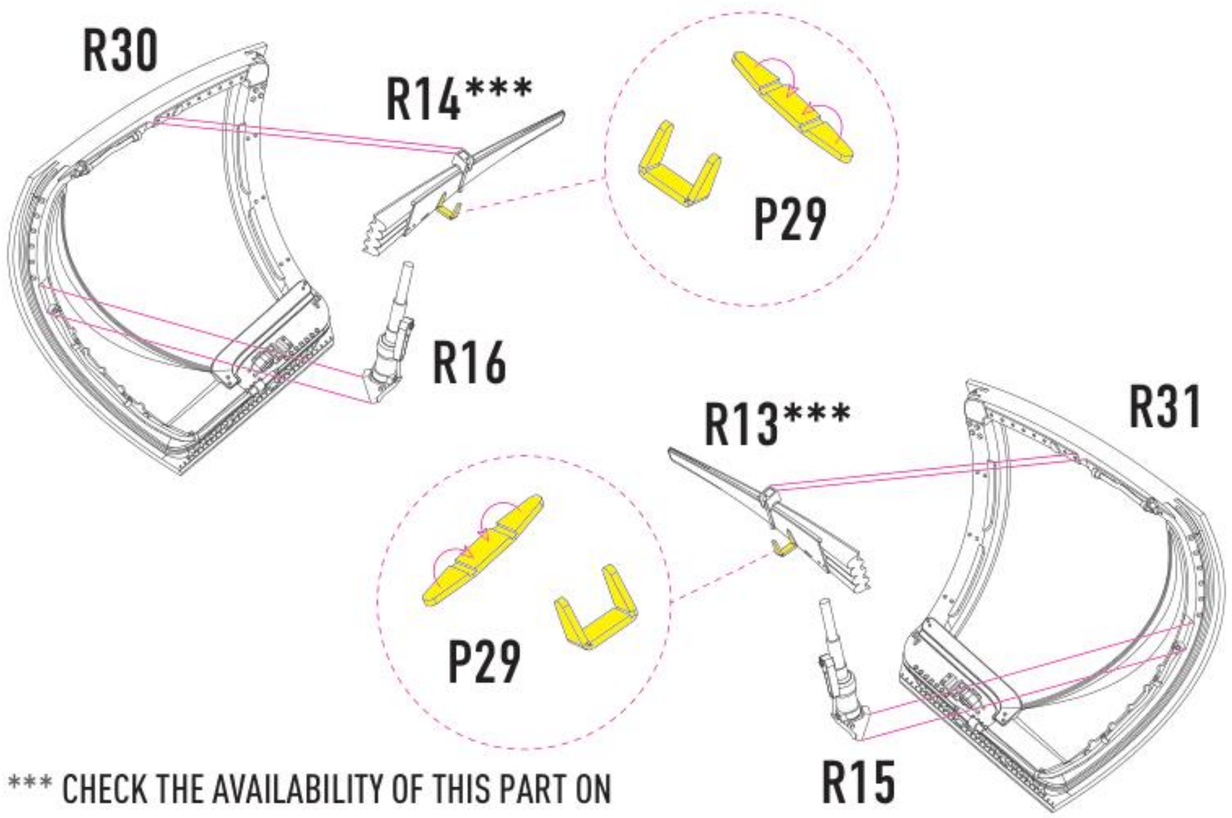

*** CHECK THE AVAILABILITY OF THIS PART ON THE PHOTOS OF THE AIRCRAFT YOU ARE BUILDING

15

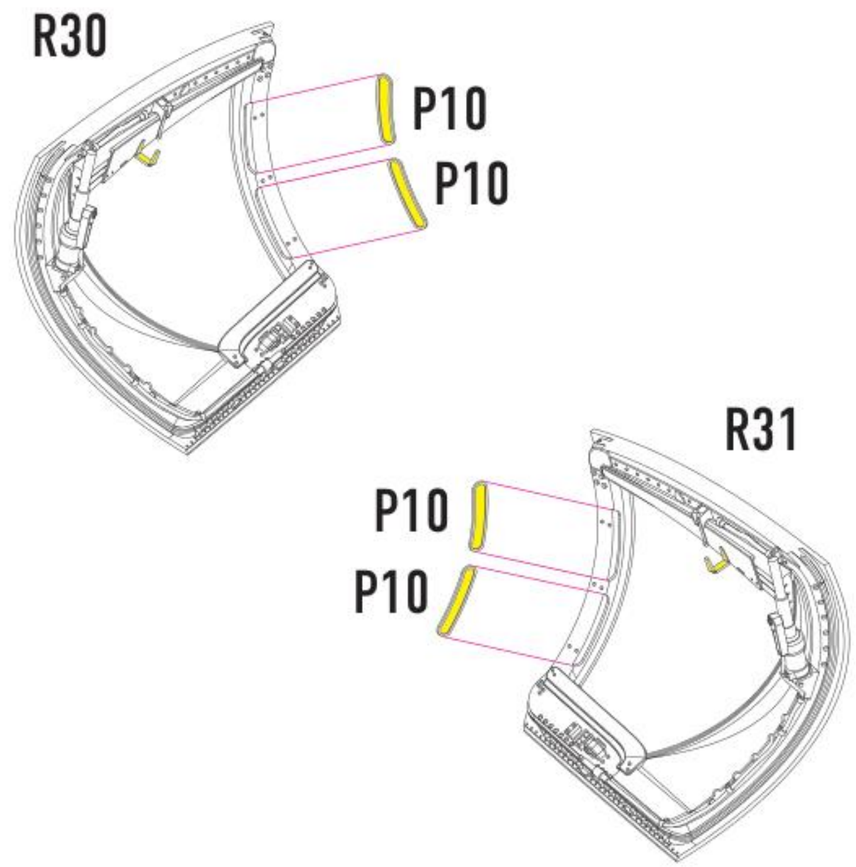

16

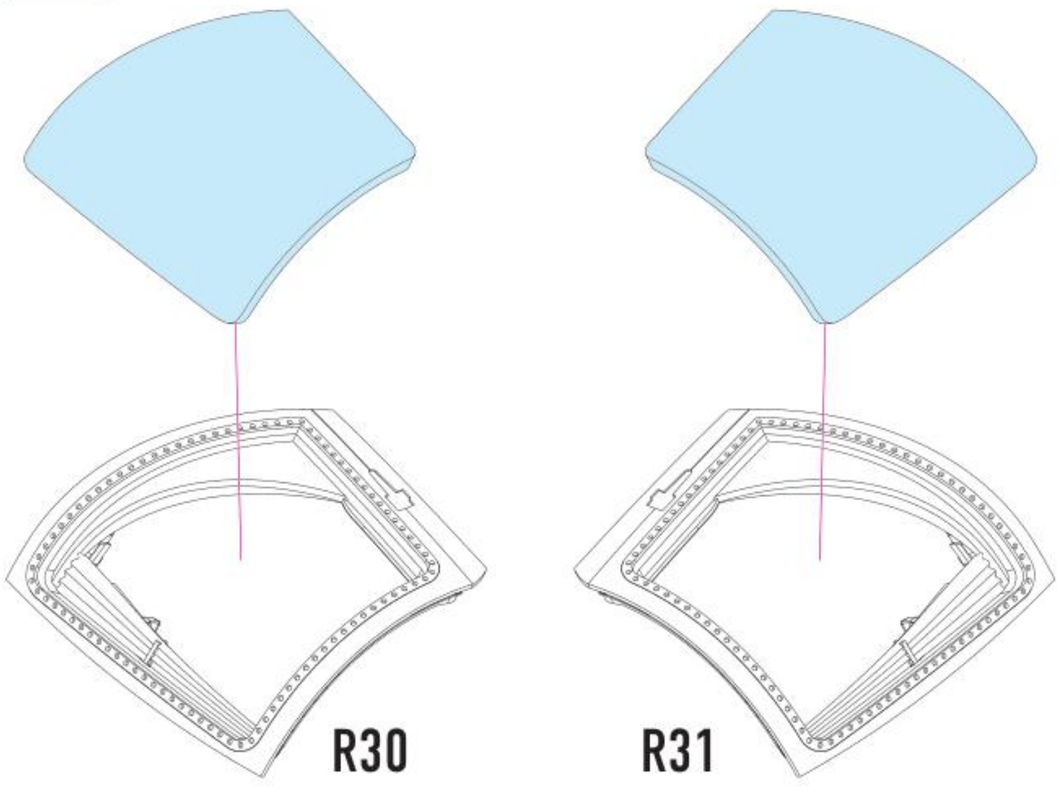

17

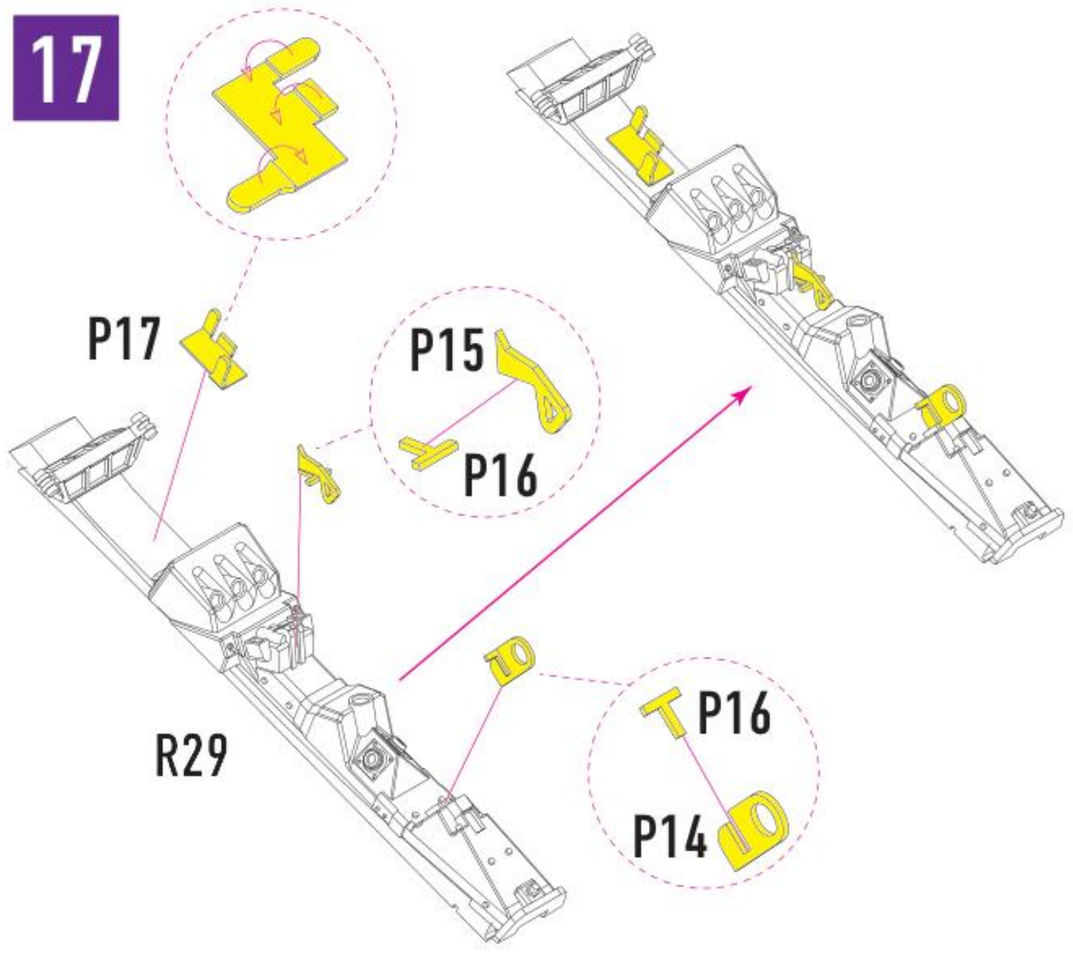

18

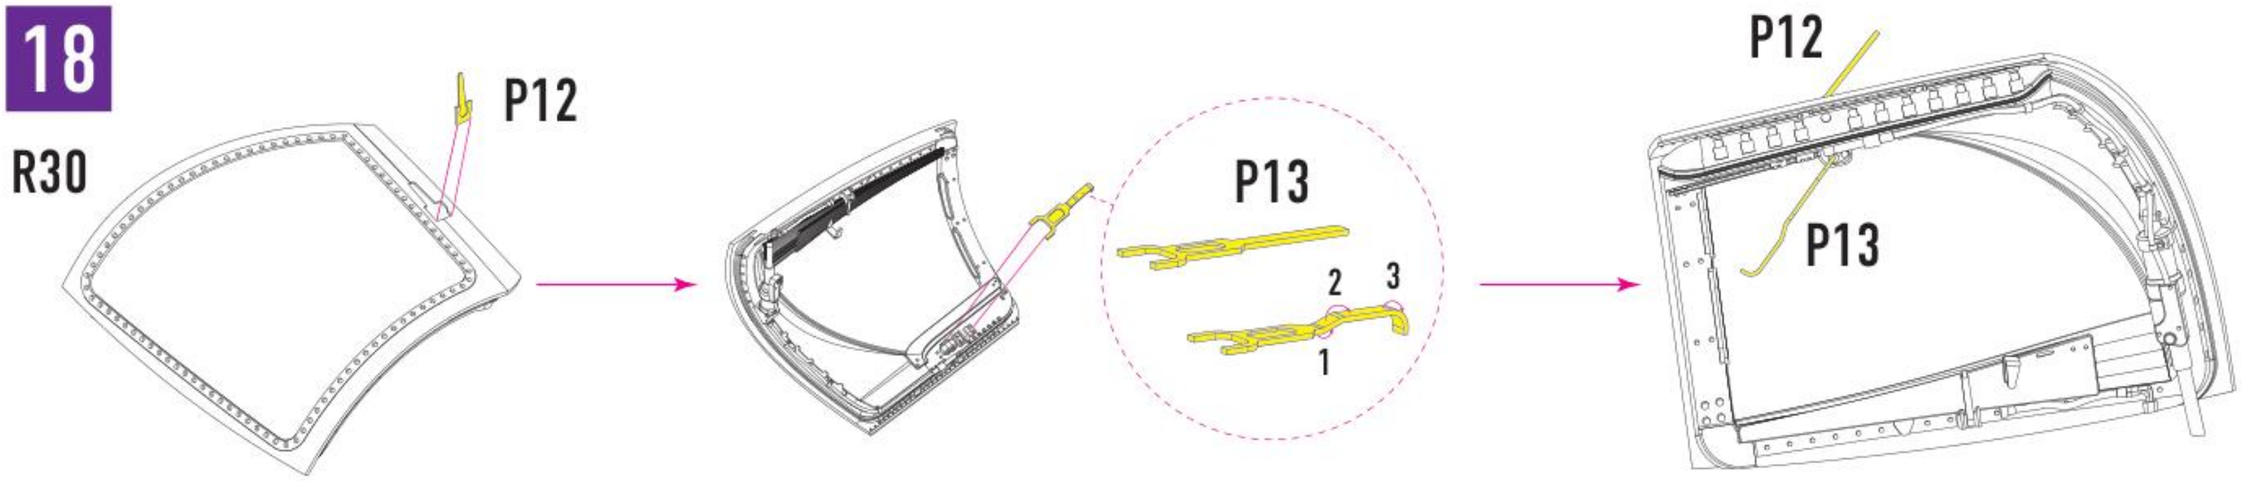

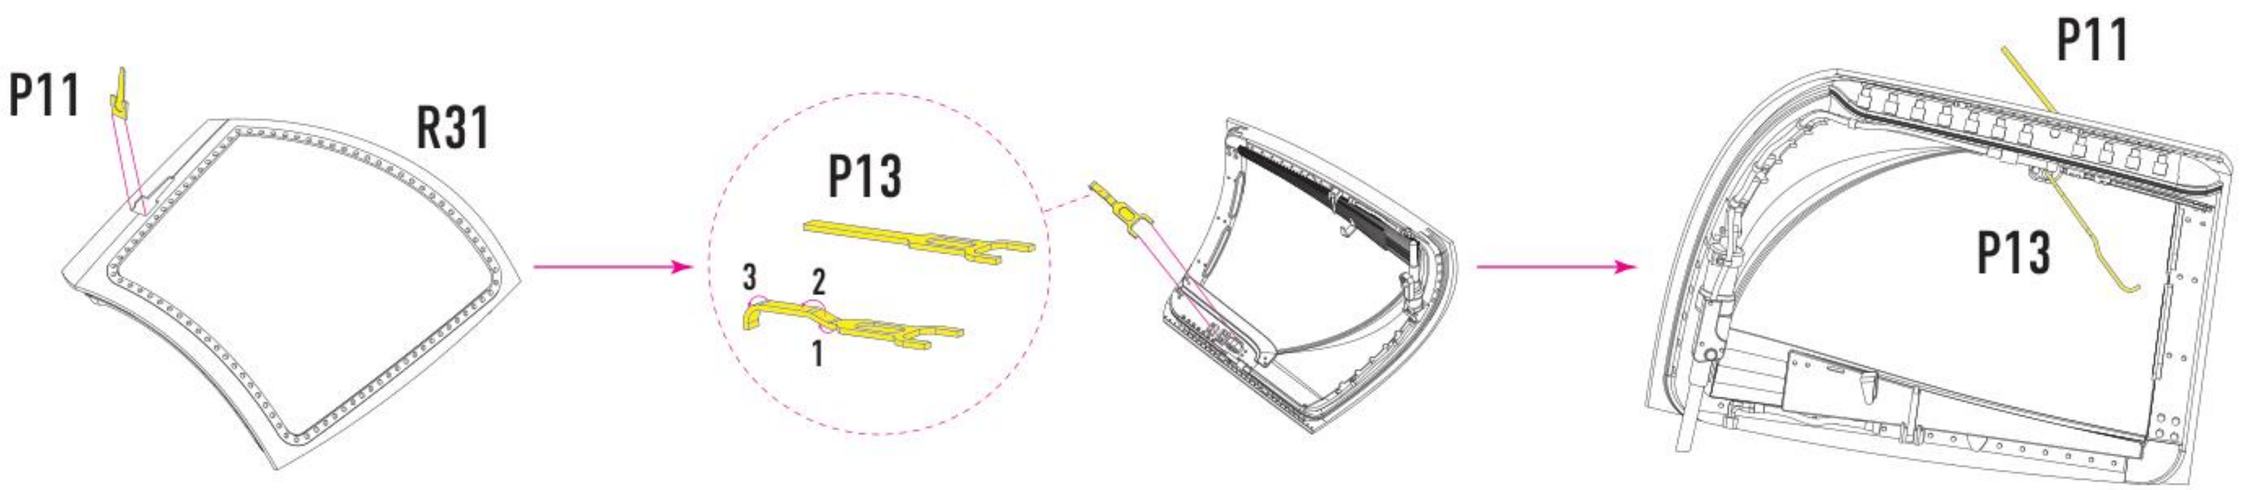

19

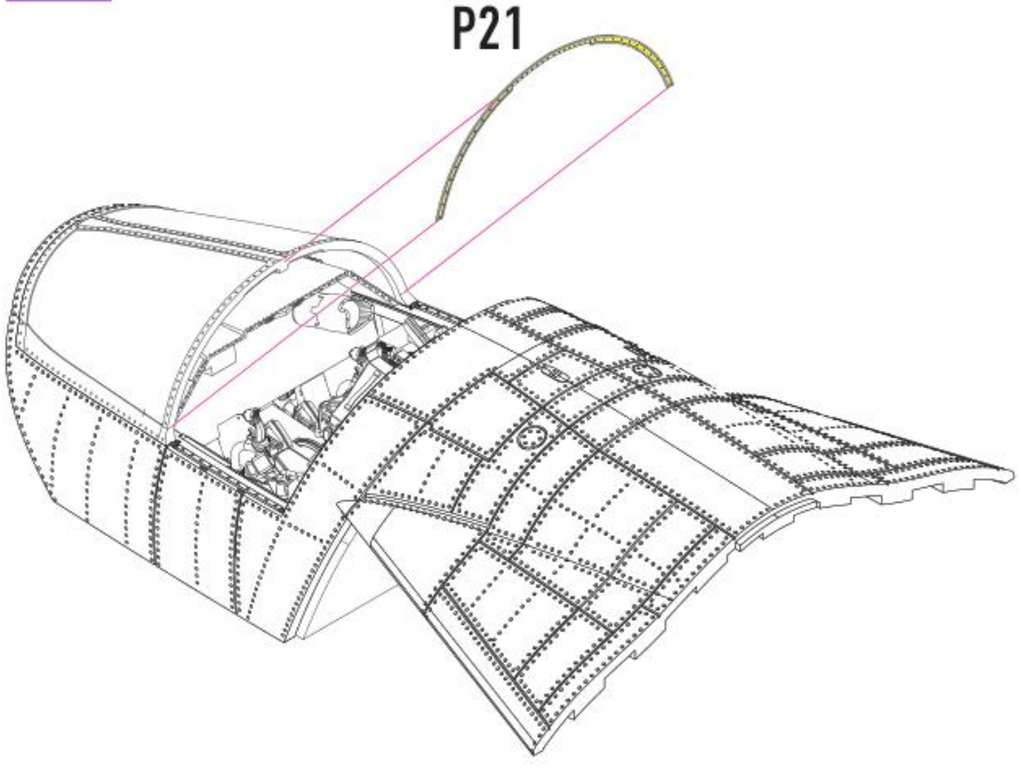

20

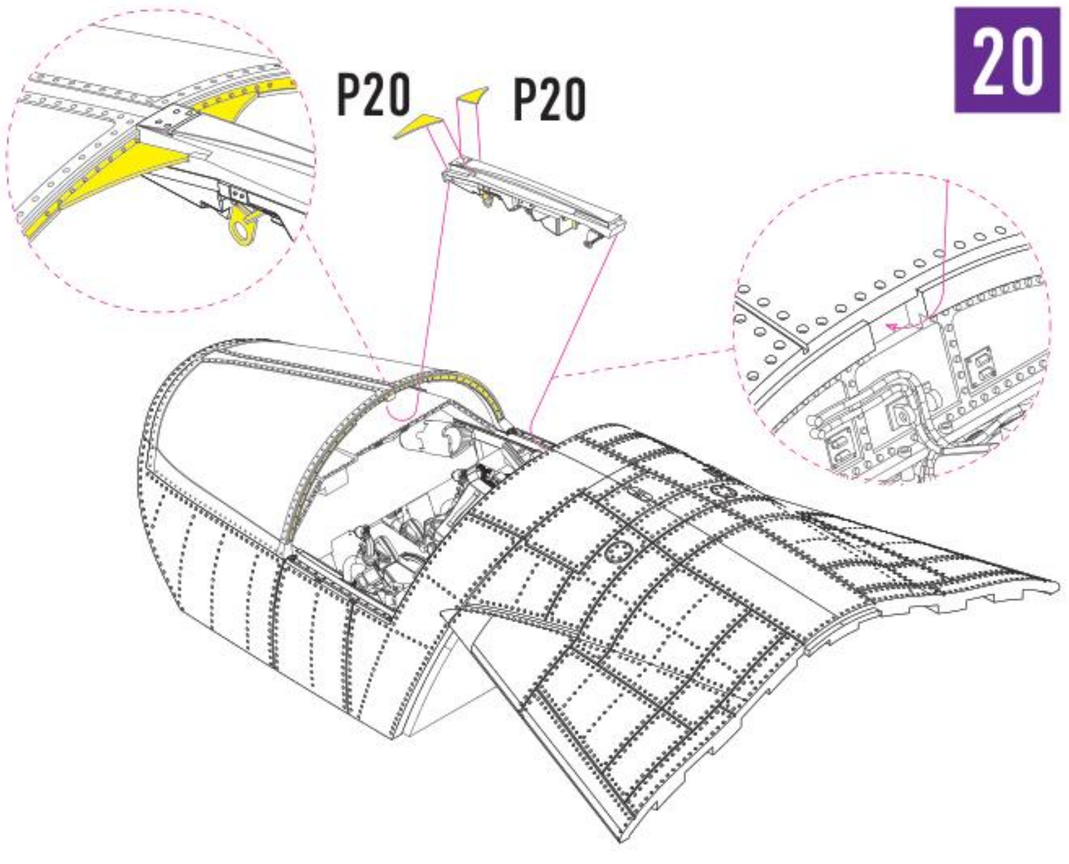

BEFORE GLUING MAKE THE FLEXION OF THE P20 PARTS
EQUAL TO THE FLEXION OF THE G1 PART EDGE.

21

R31

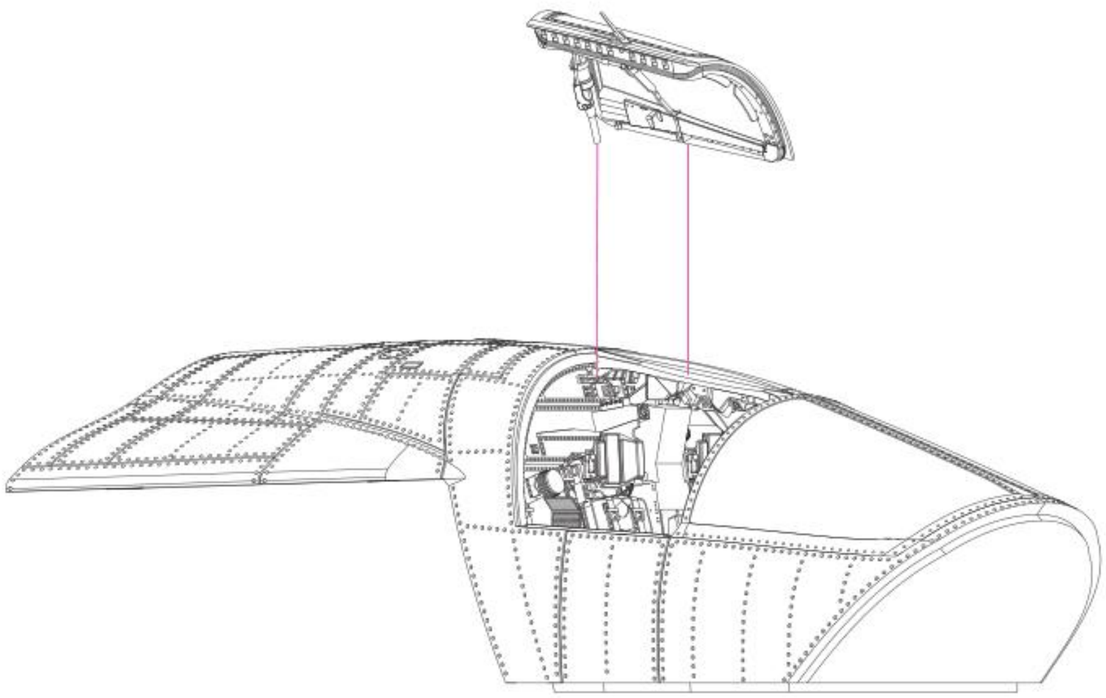

R30

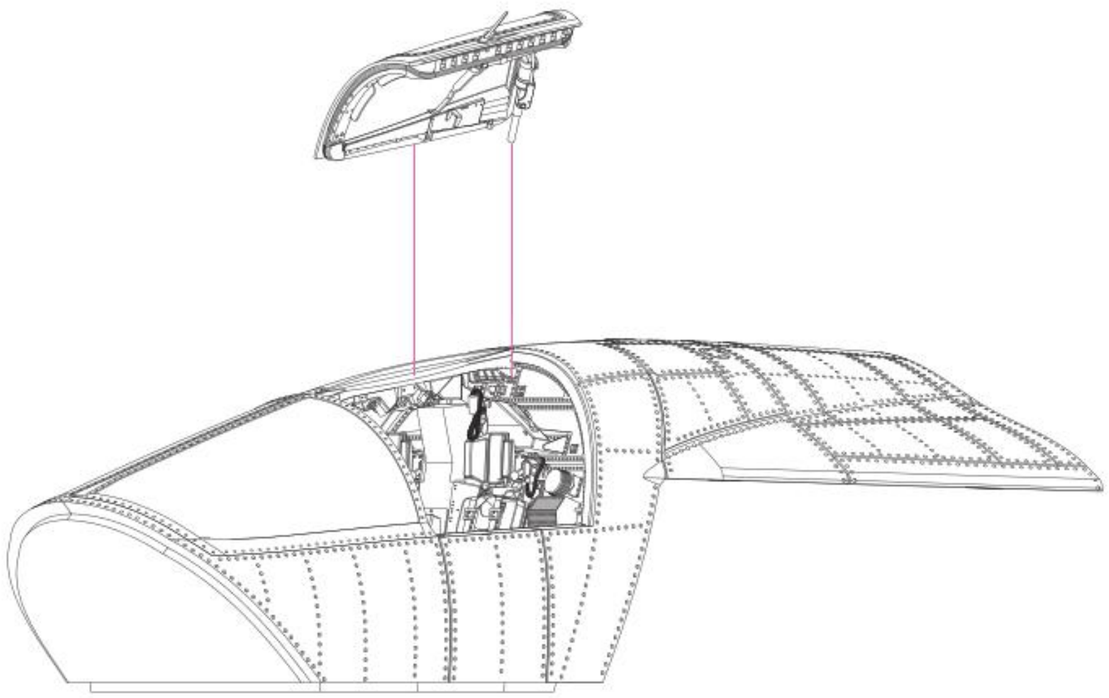

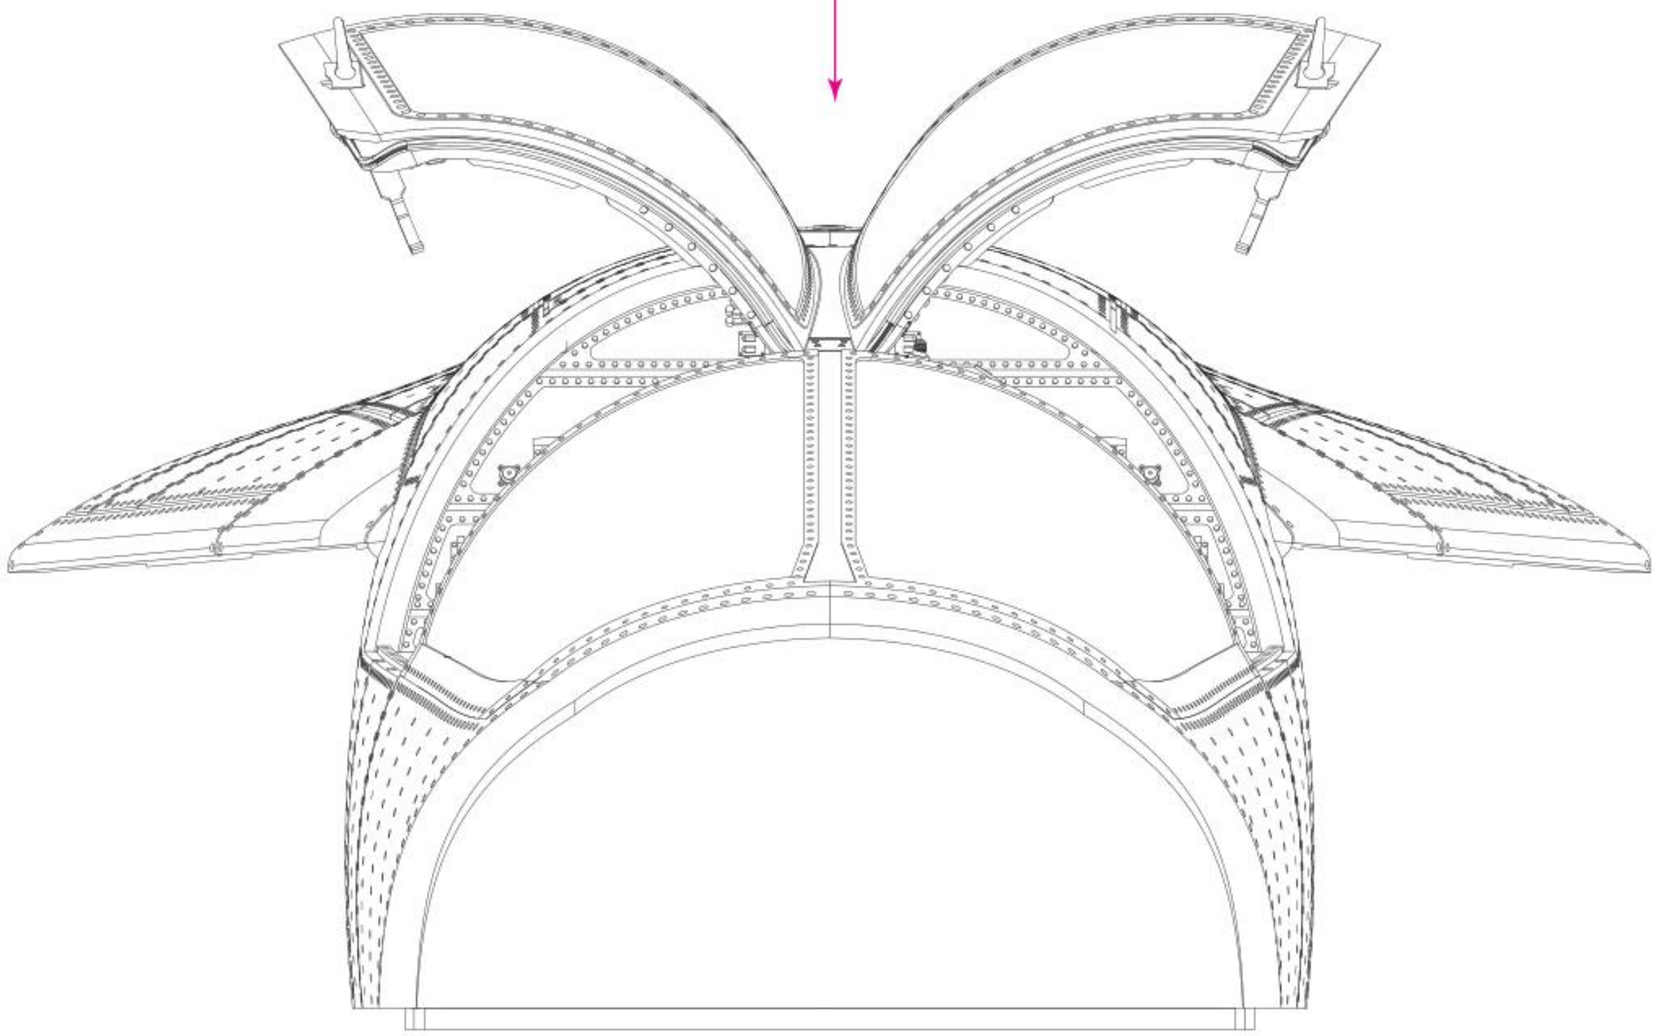

22

USE WIRE D: 0.3MM, L: 5MM

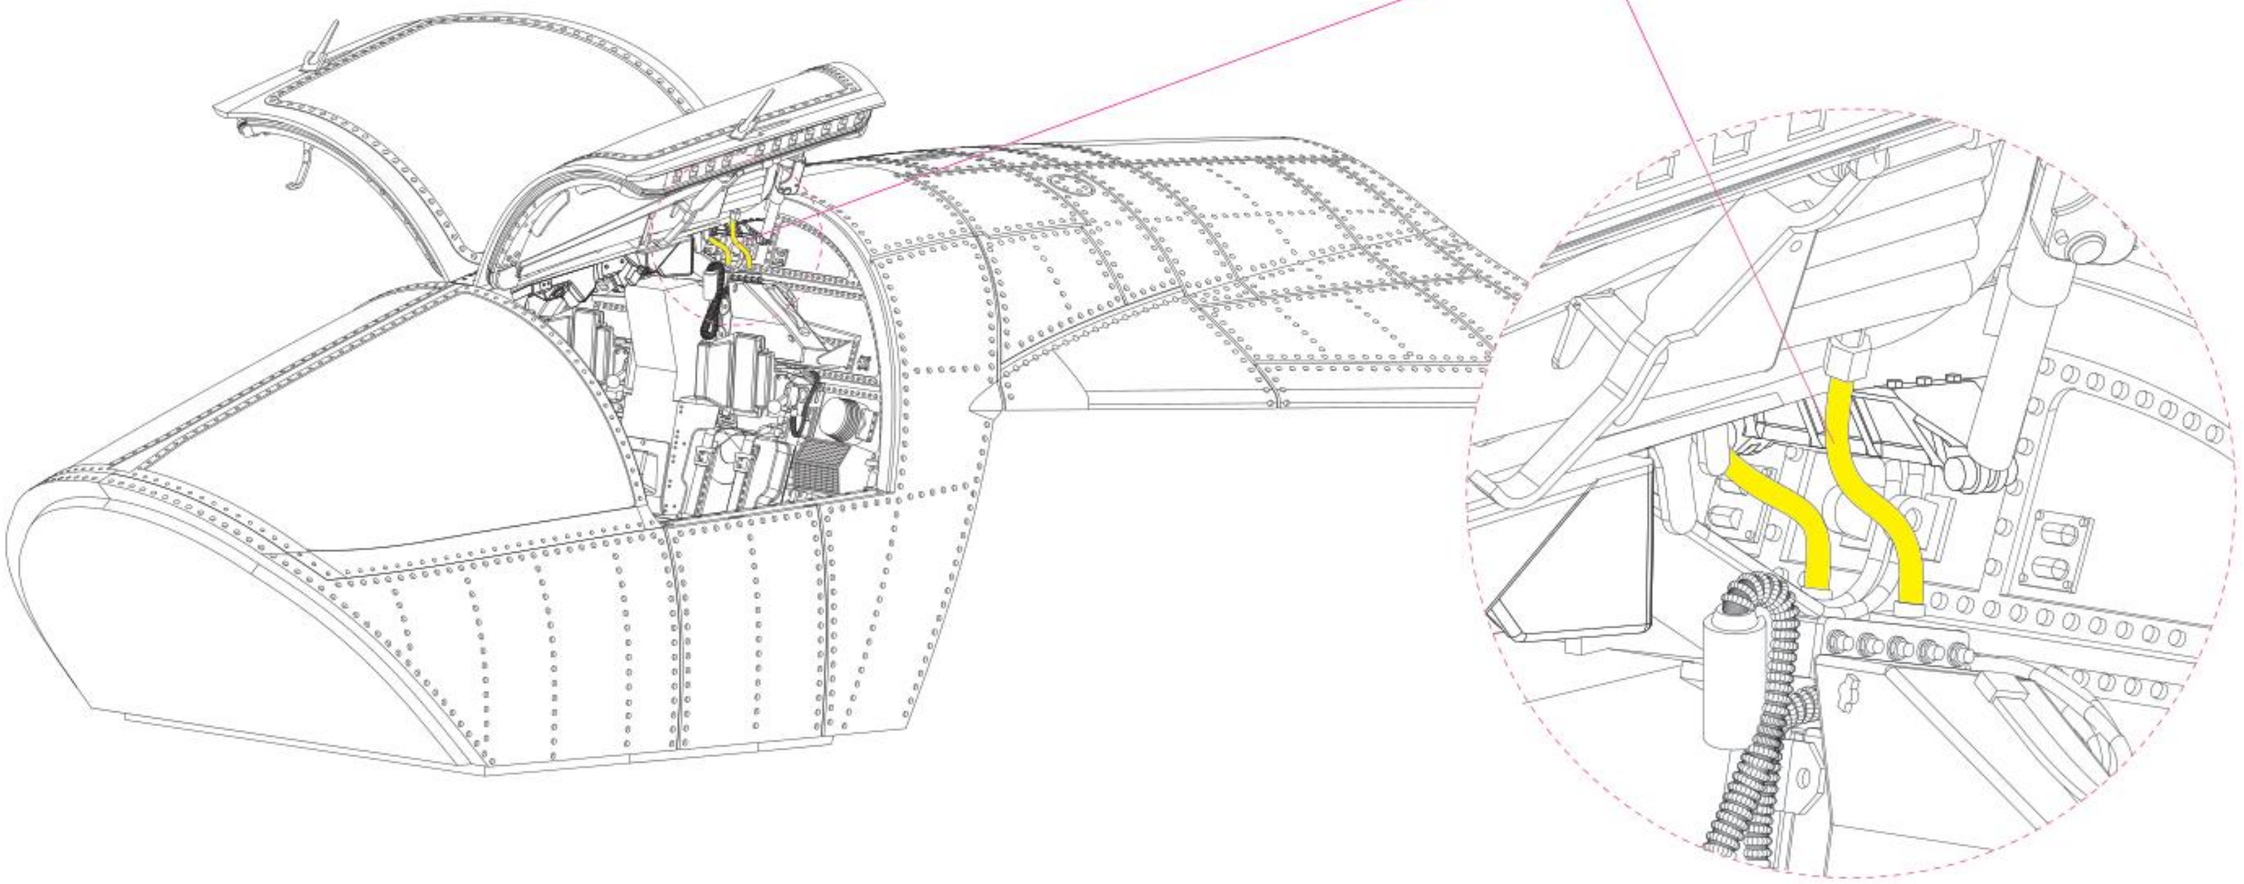

USE WIRE D: 0.3MM, L: 5MM

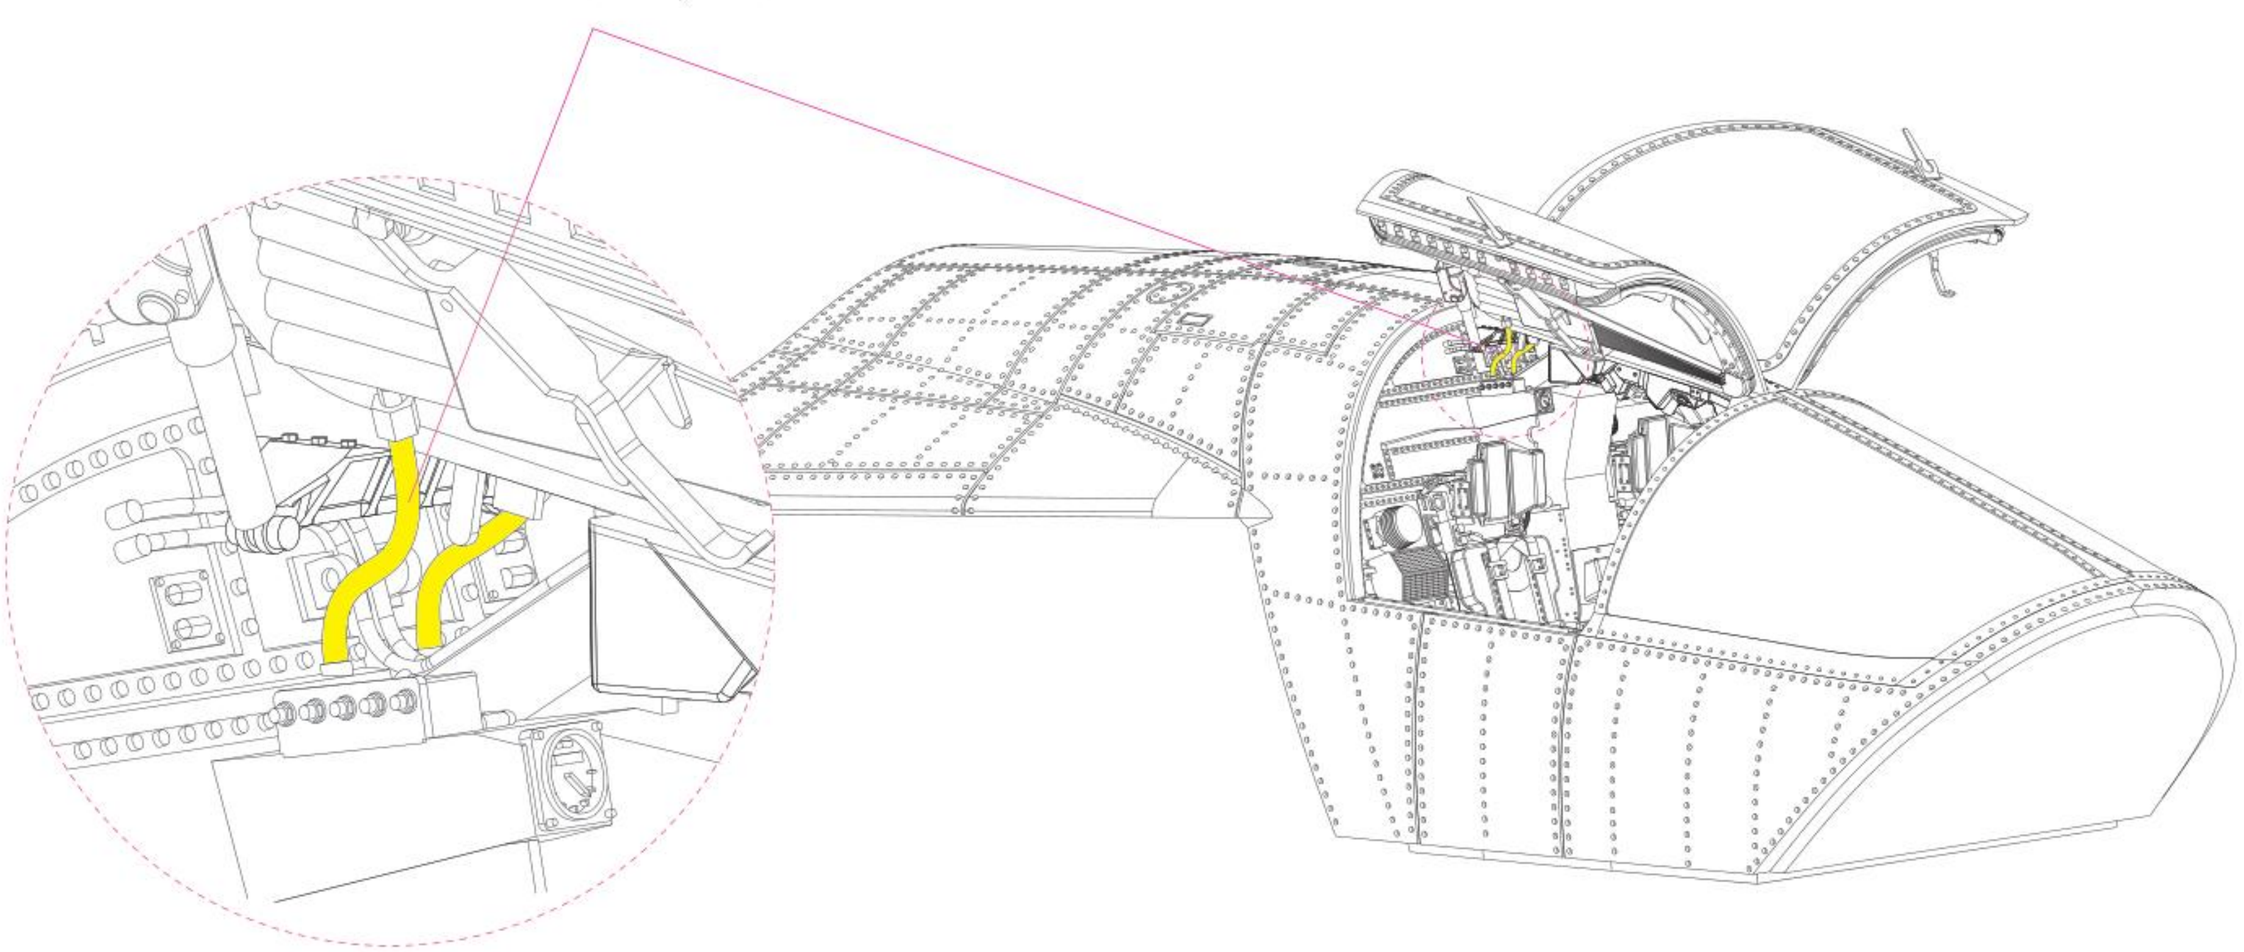

23

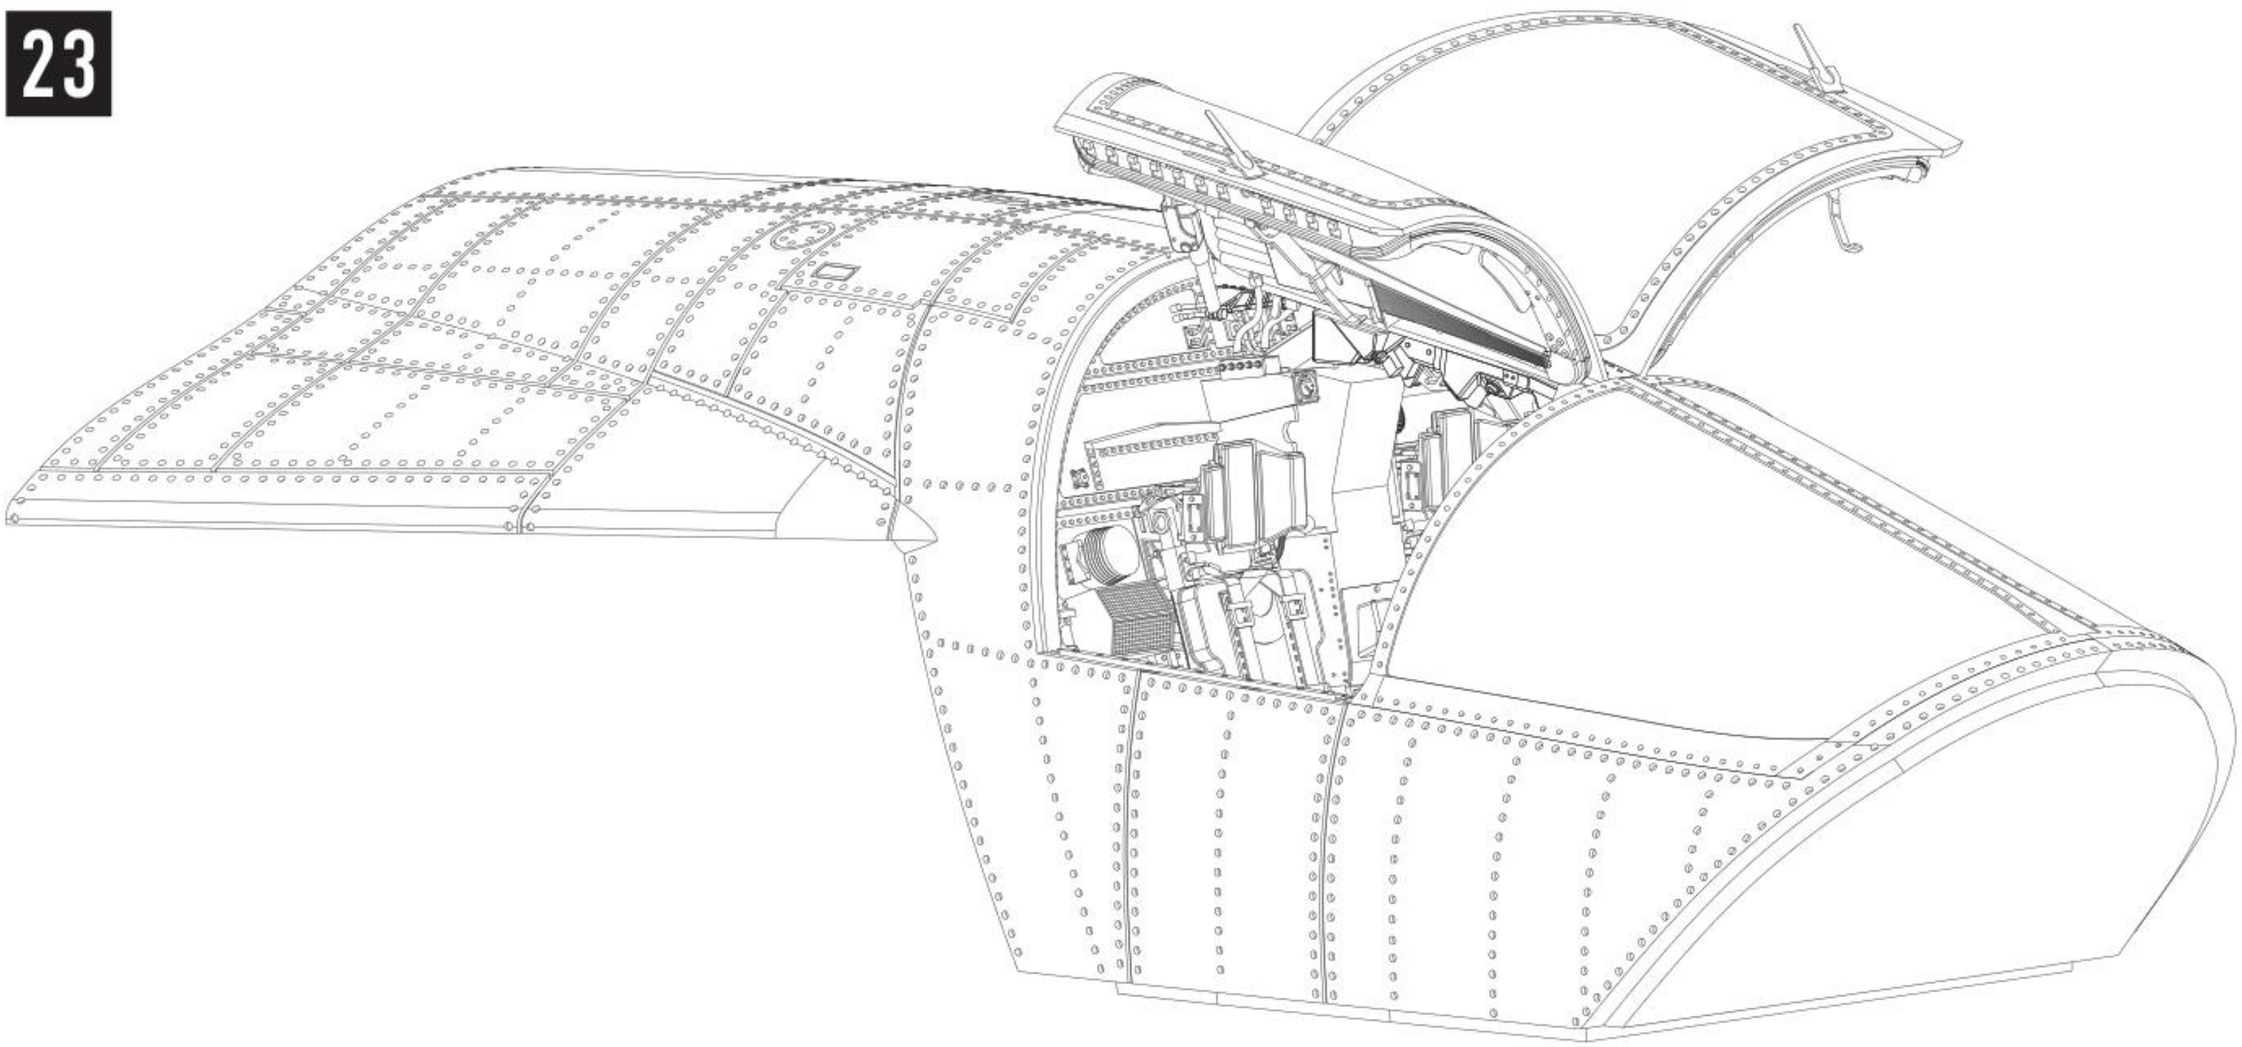

PE INSTRUCTION

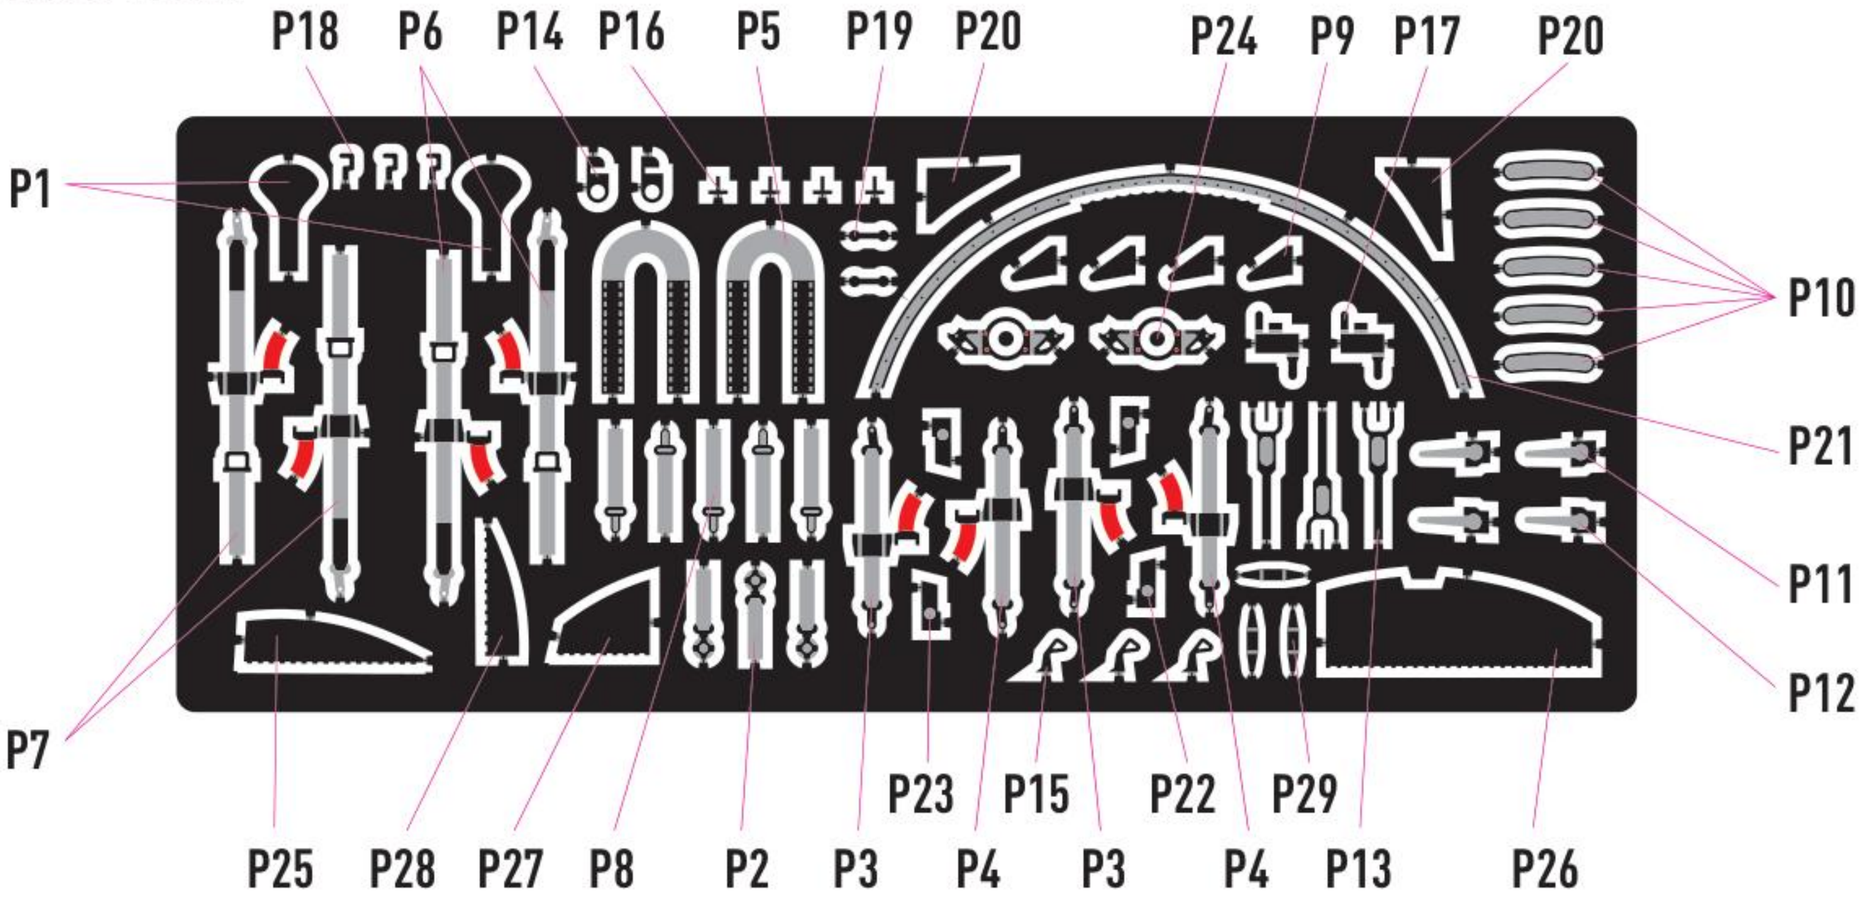

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua