RESIN PARTS
FOR SCALE PLASTIC KITS

MIRAGE-2000-5 COCKPIT
(BASIC EDITION WITH 3D DECALS)
FOR KINETIC KIT

INSTRUCTION **RSU48-0464**

USE A SAW TO REMOVE SUPPORTS
FROM **3D PRINTED PARTS**

DETAILS AFTER REMOVAL FROM SUPPORTS

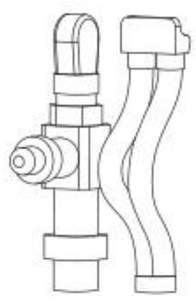
R8

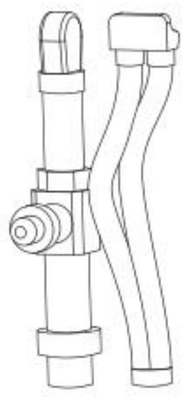
R9

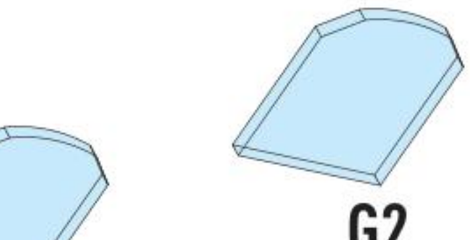
G2

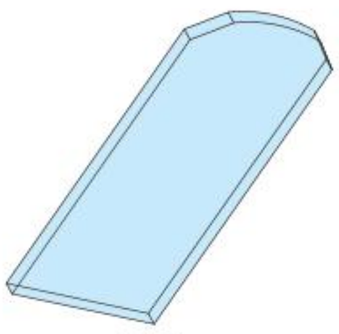
G1

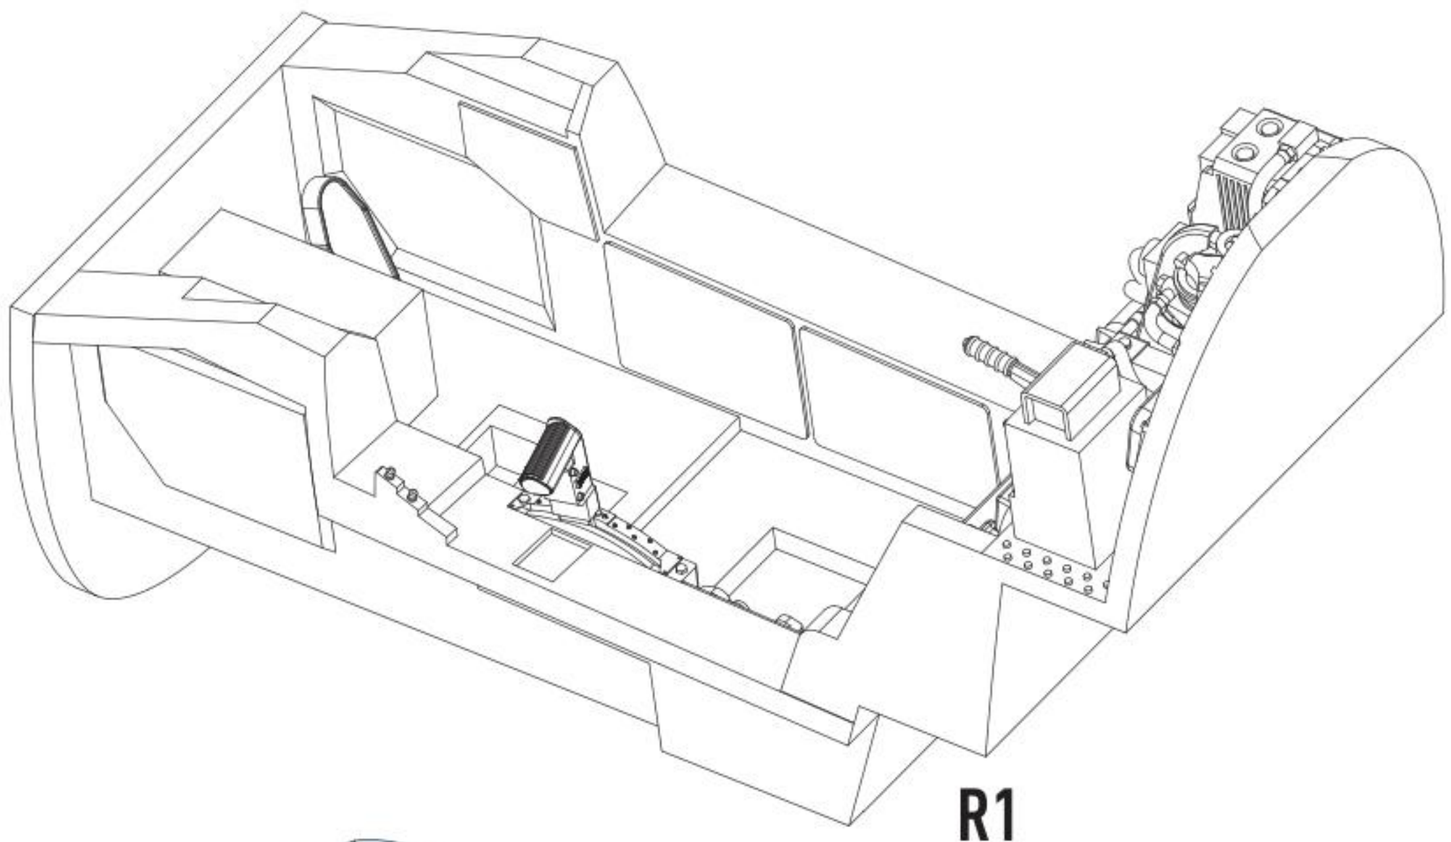
R1

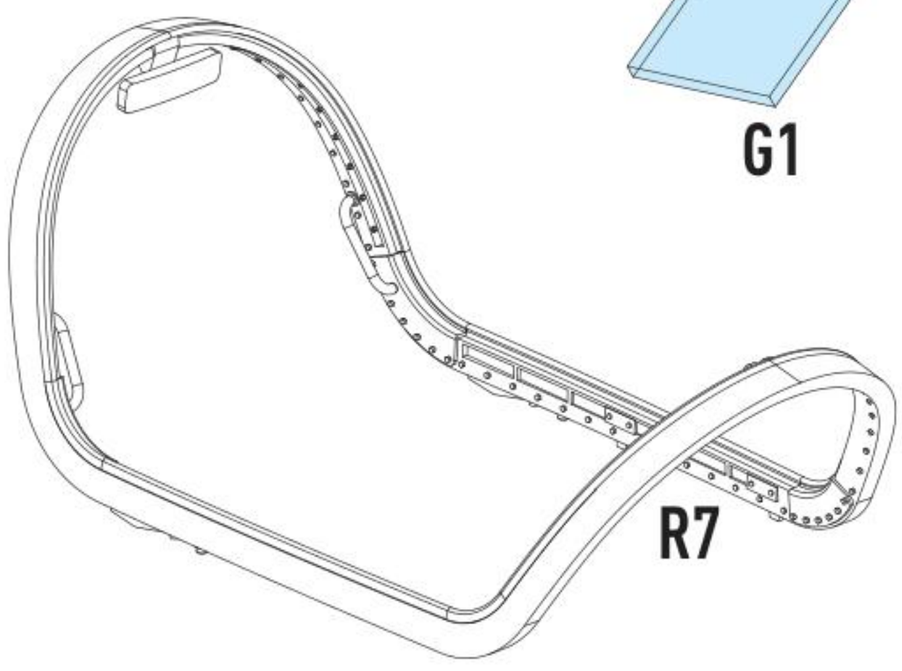
R7

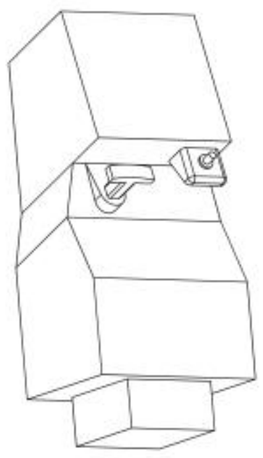
R11

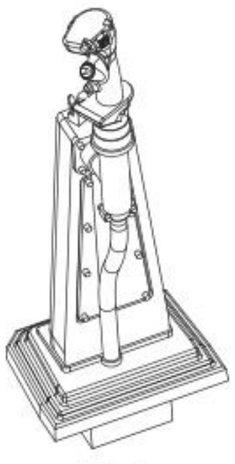
R6

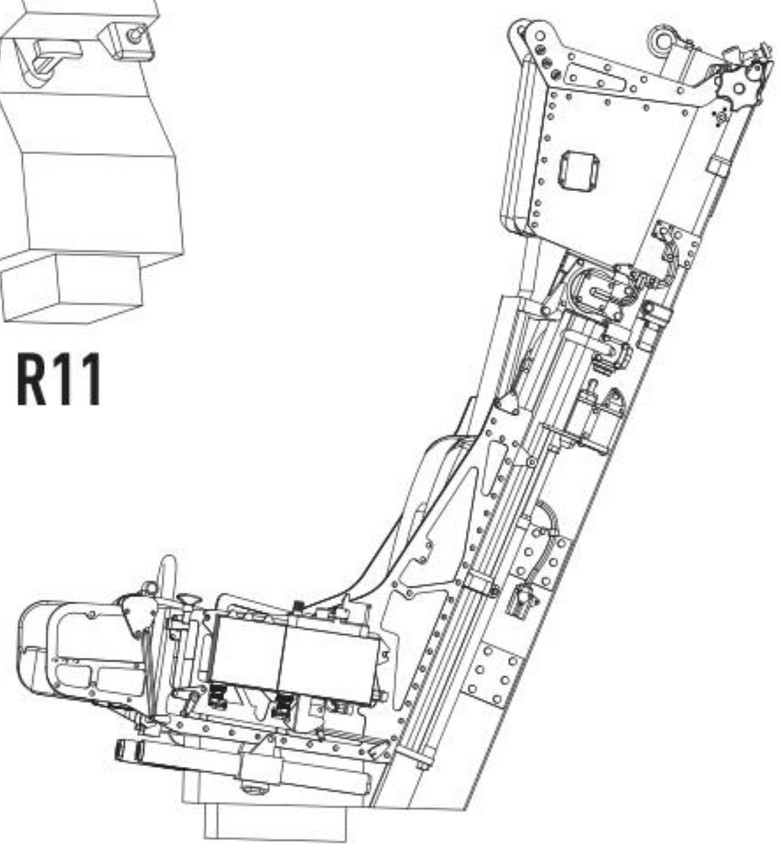
R10

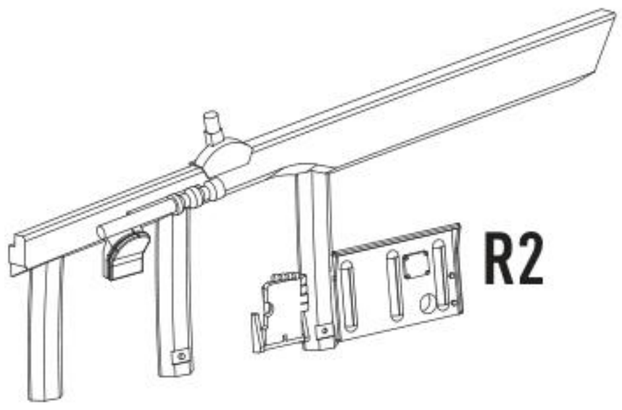
R2

R5

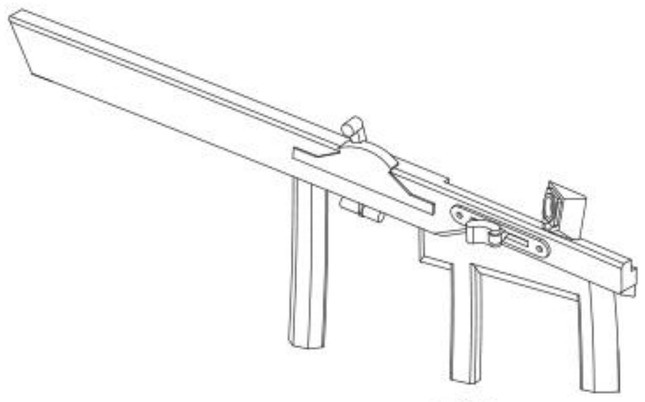
R3

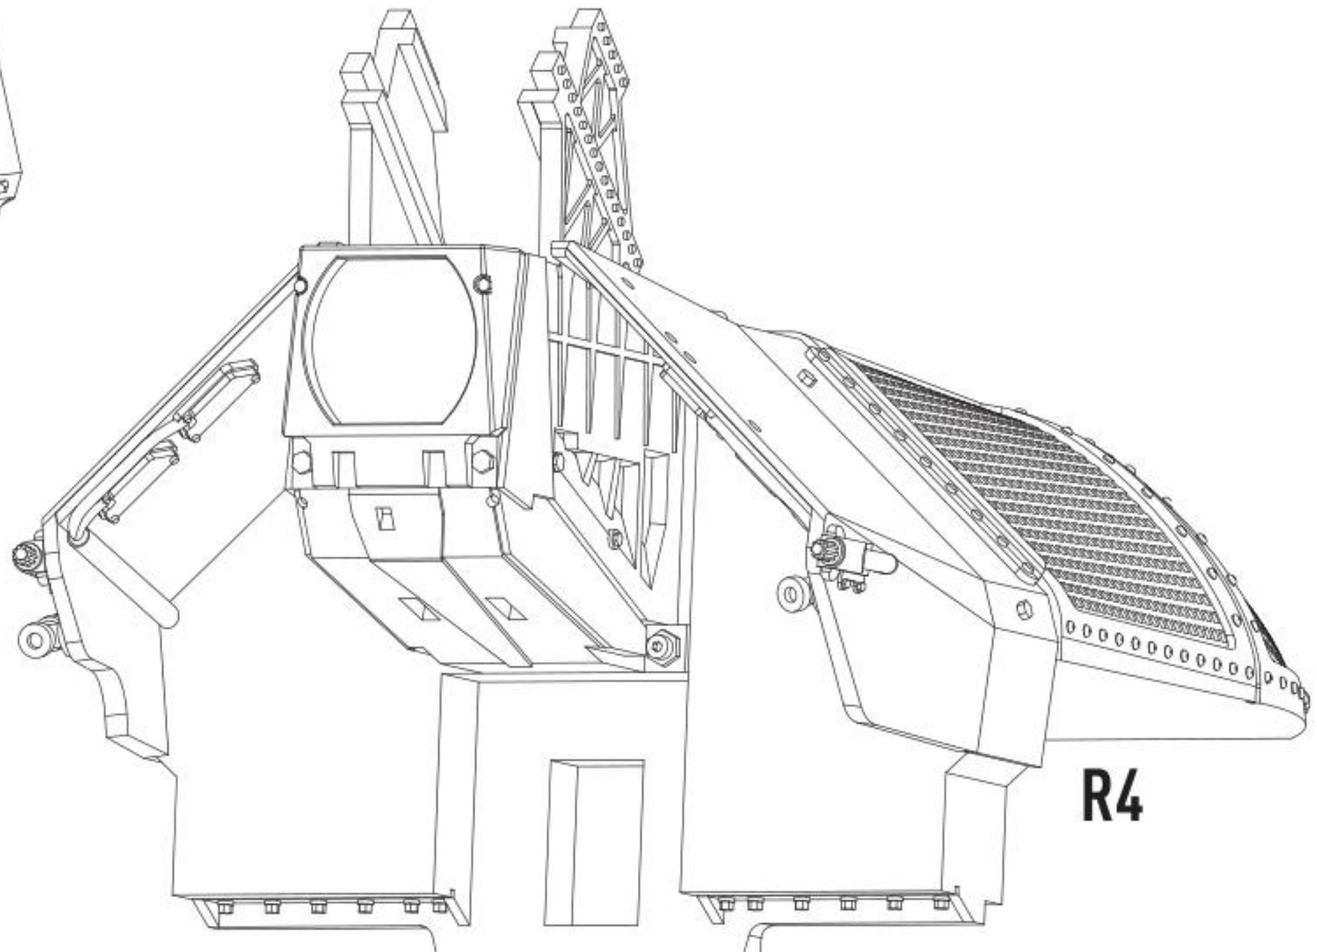
R4

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

fb.com/reskit.official instagram.com/reskit_official youtube.com/@reskit-usmd

3D DECAL INSTRUCTION

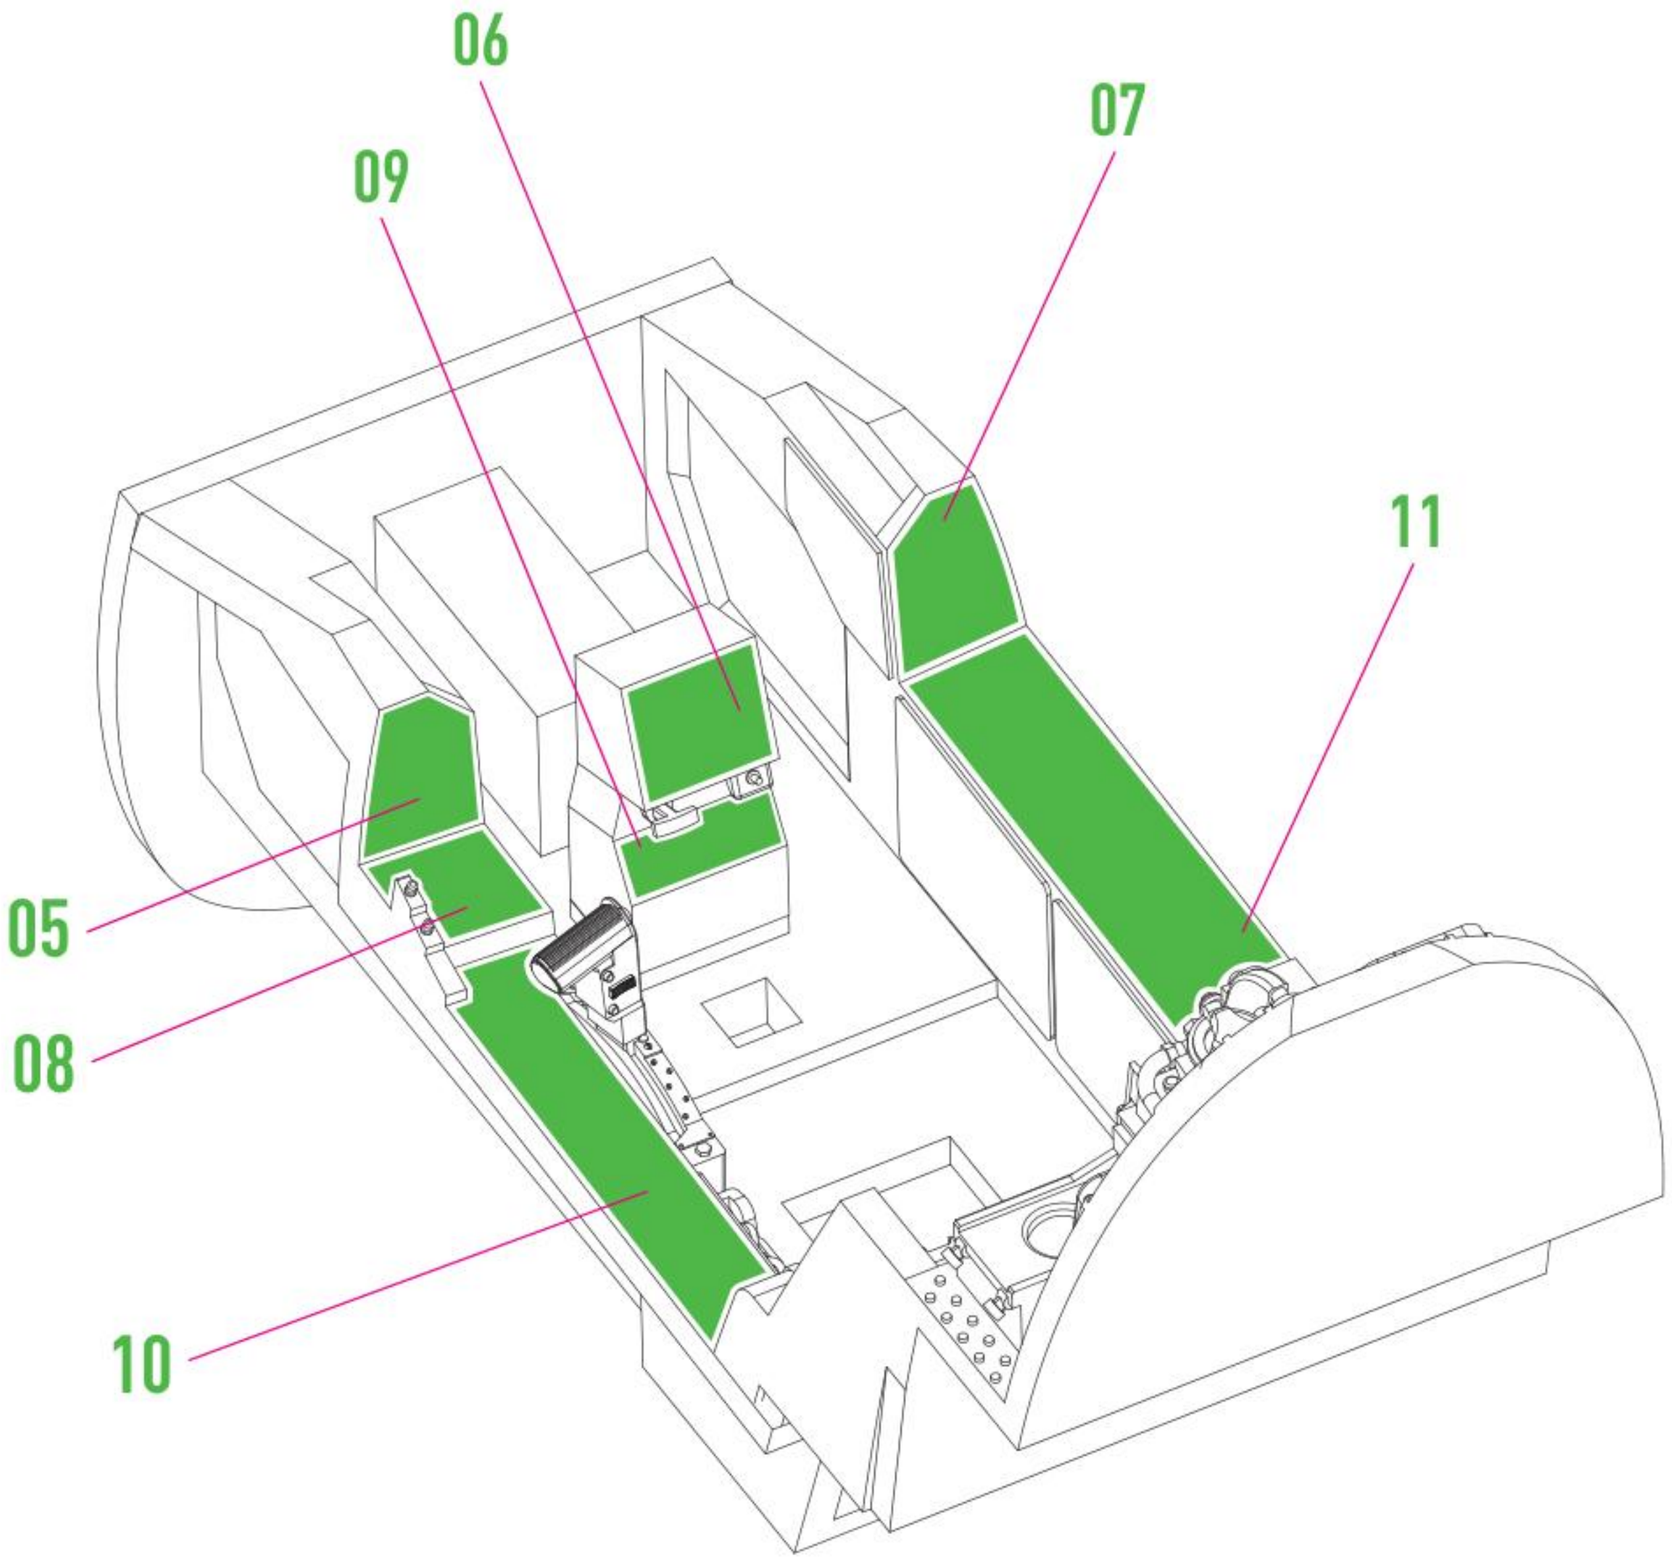

R1

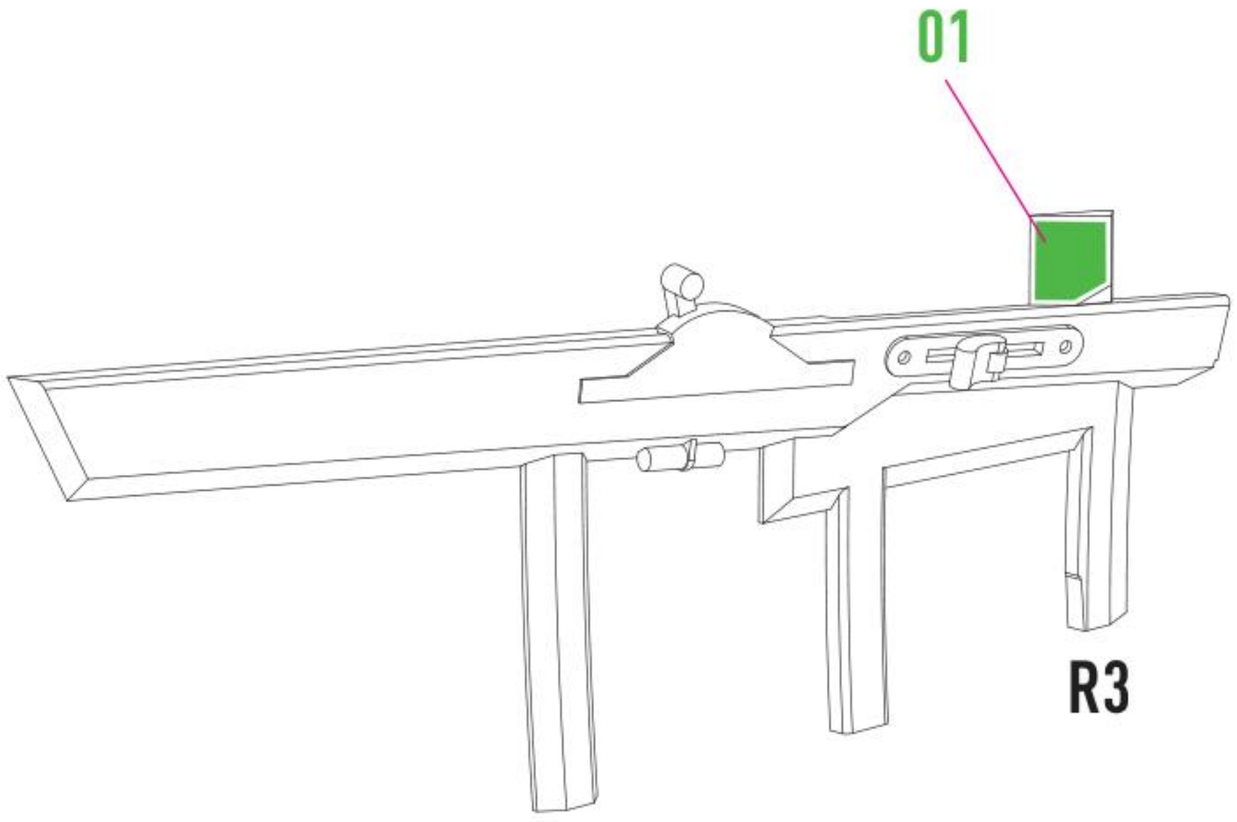

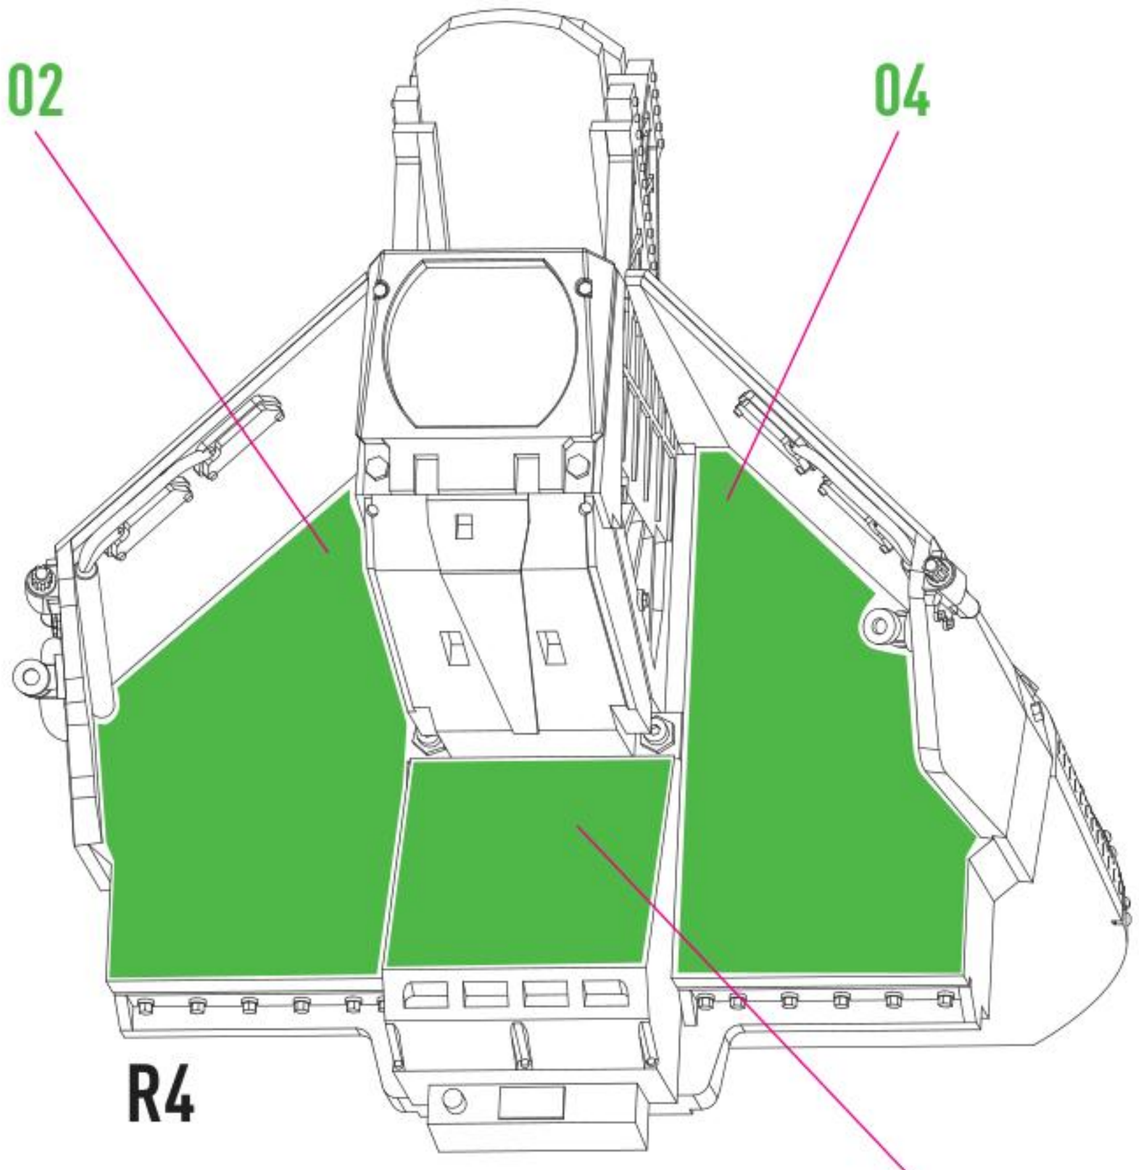

R4

R3

1

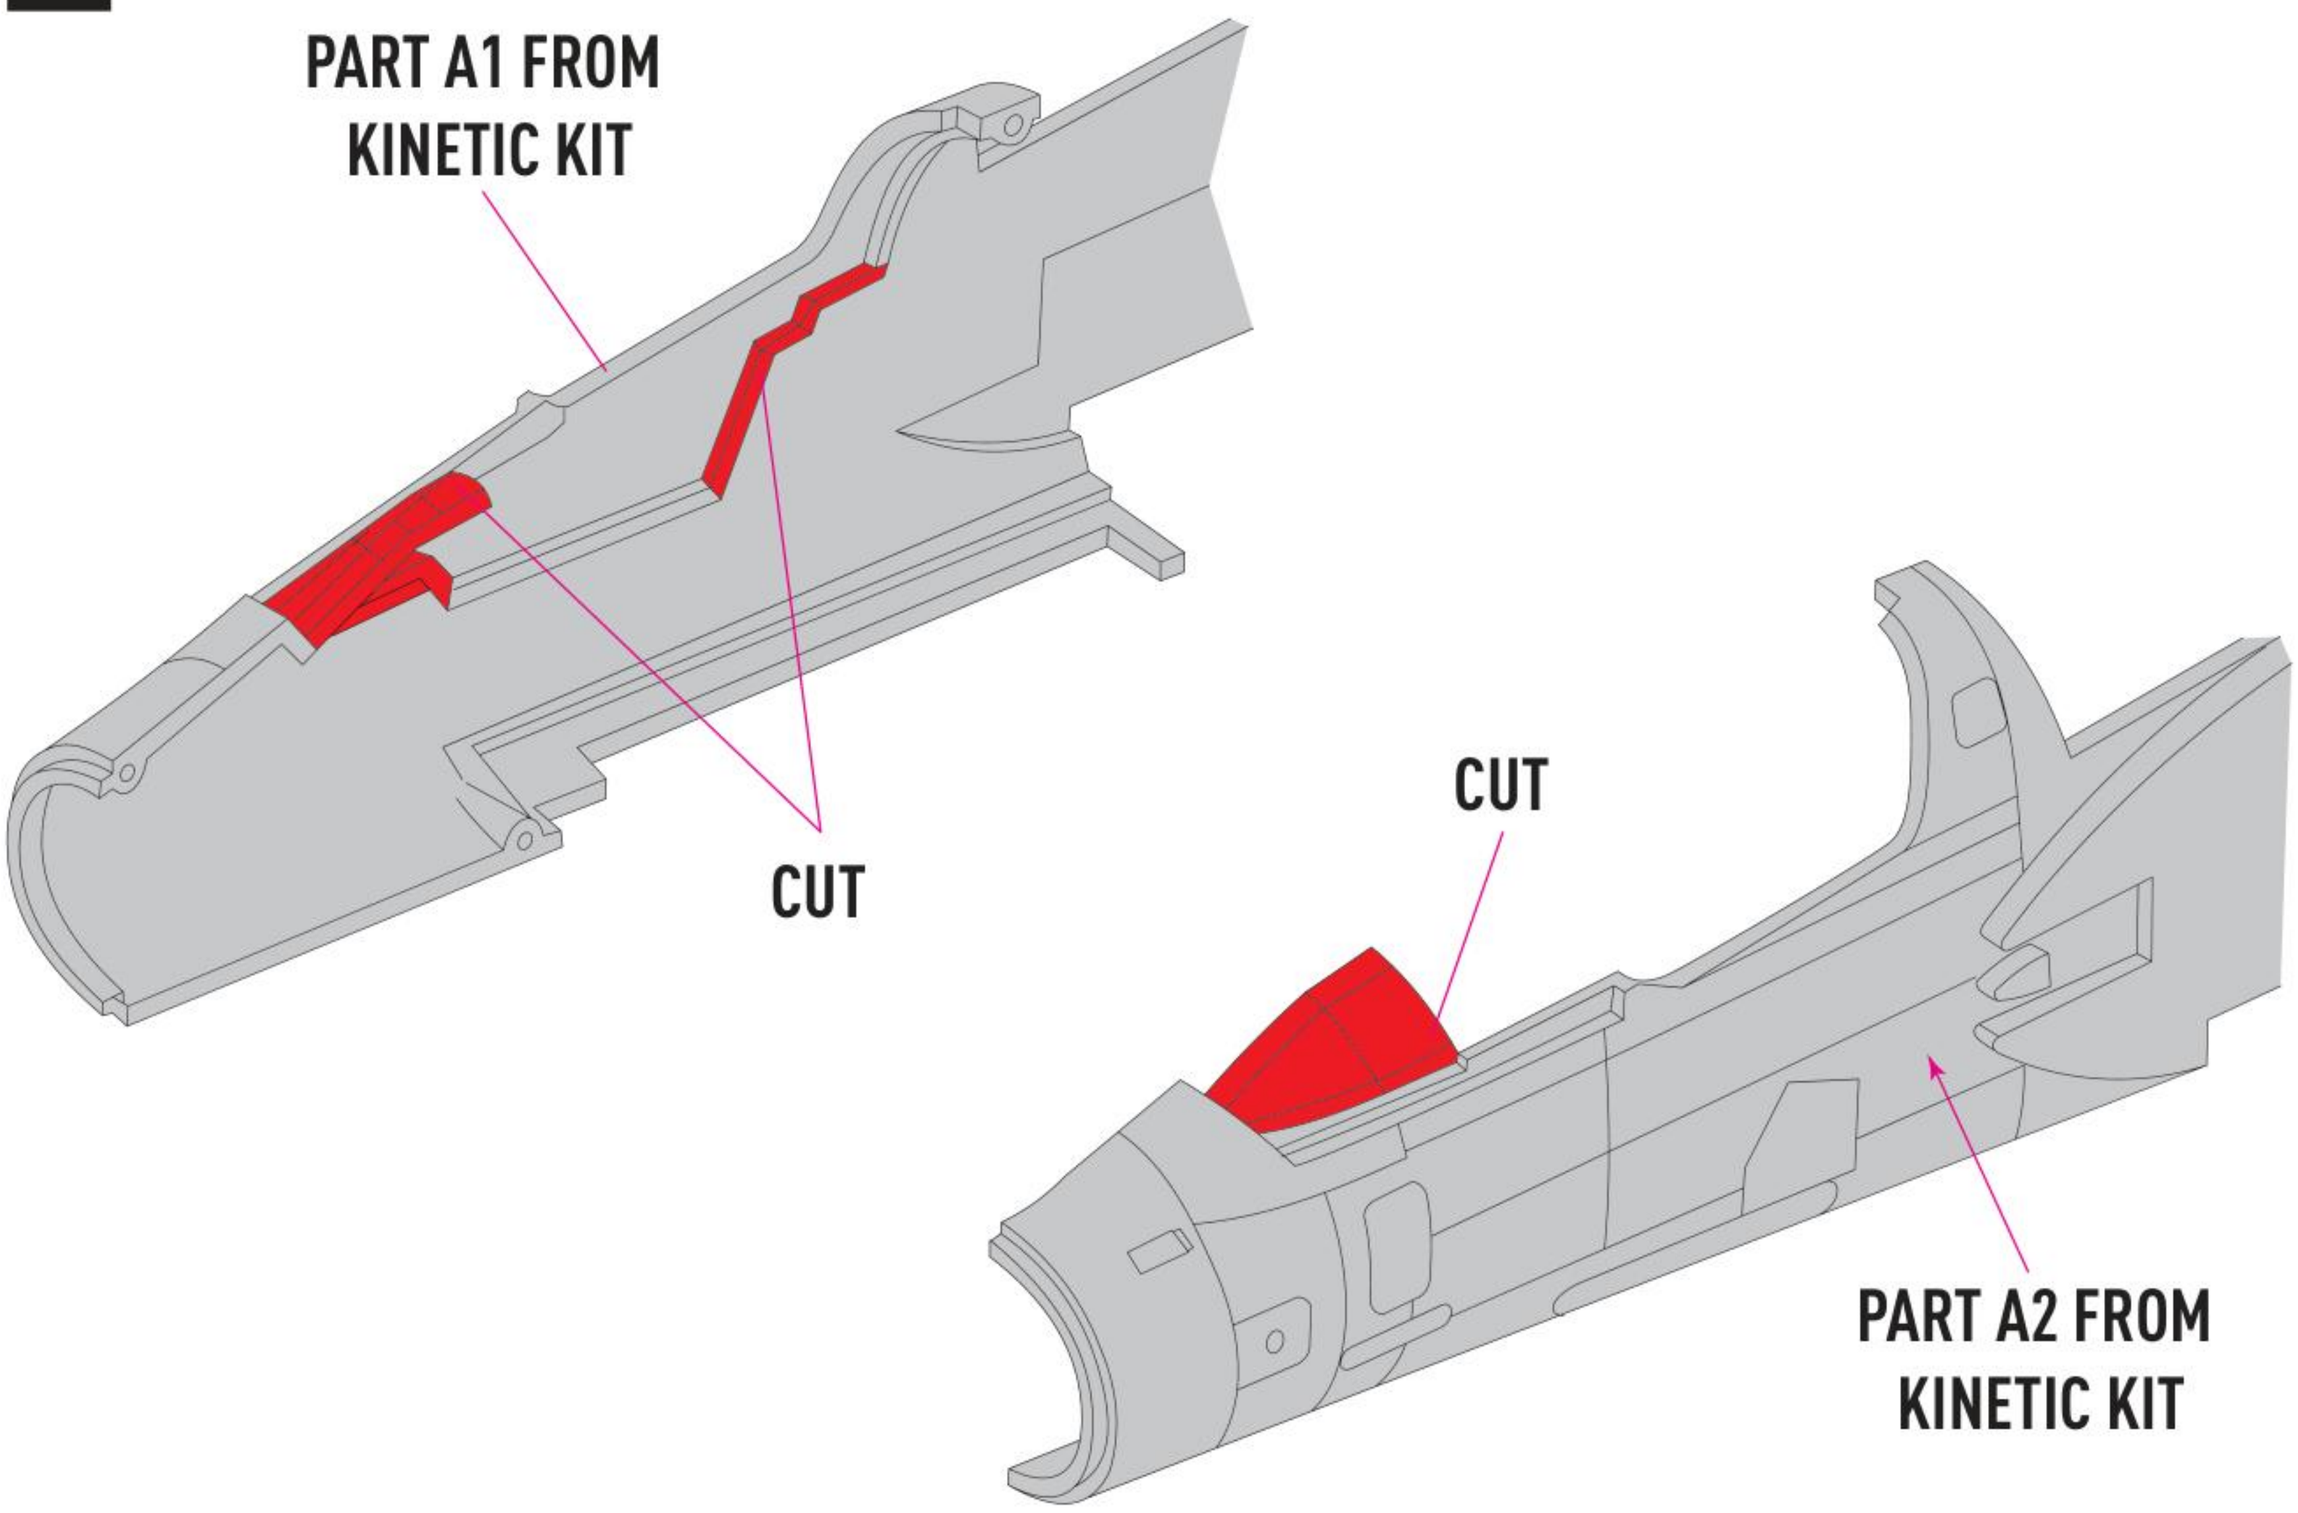
PART A1 FROM
KINETIC KIT
CUT
CUT
PART A2 FROM
KINETIC KIT

2

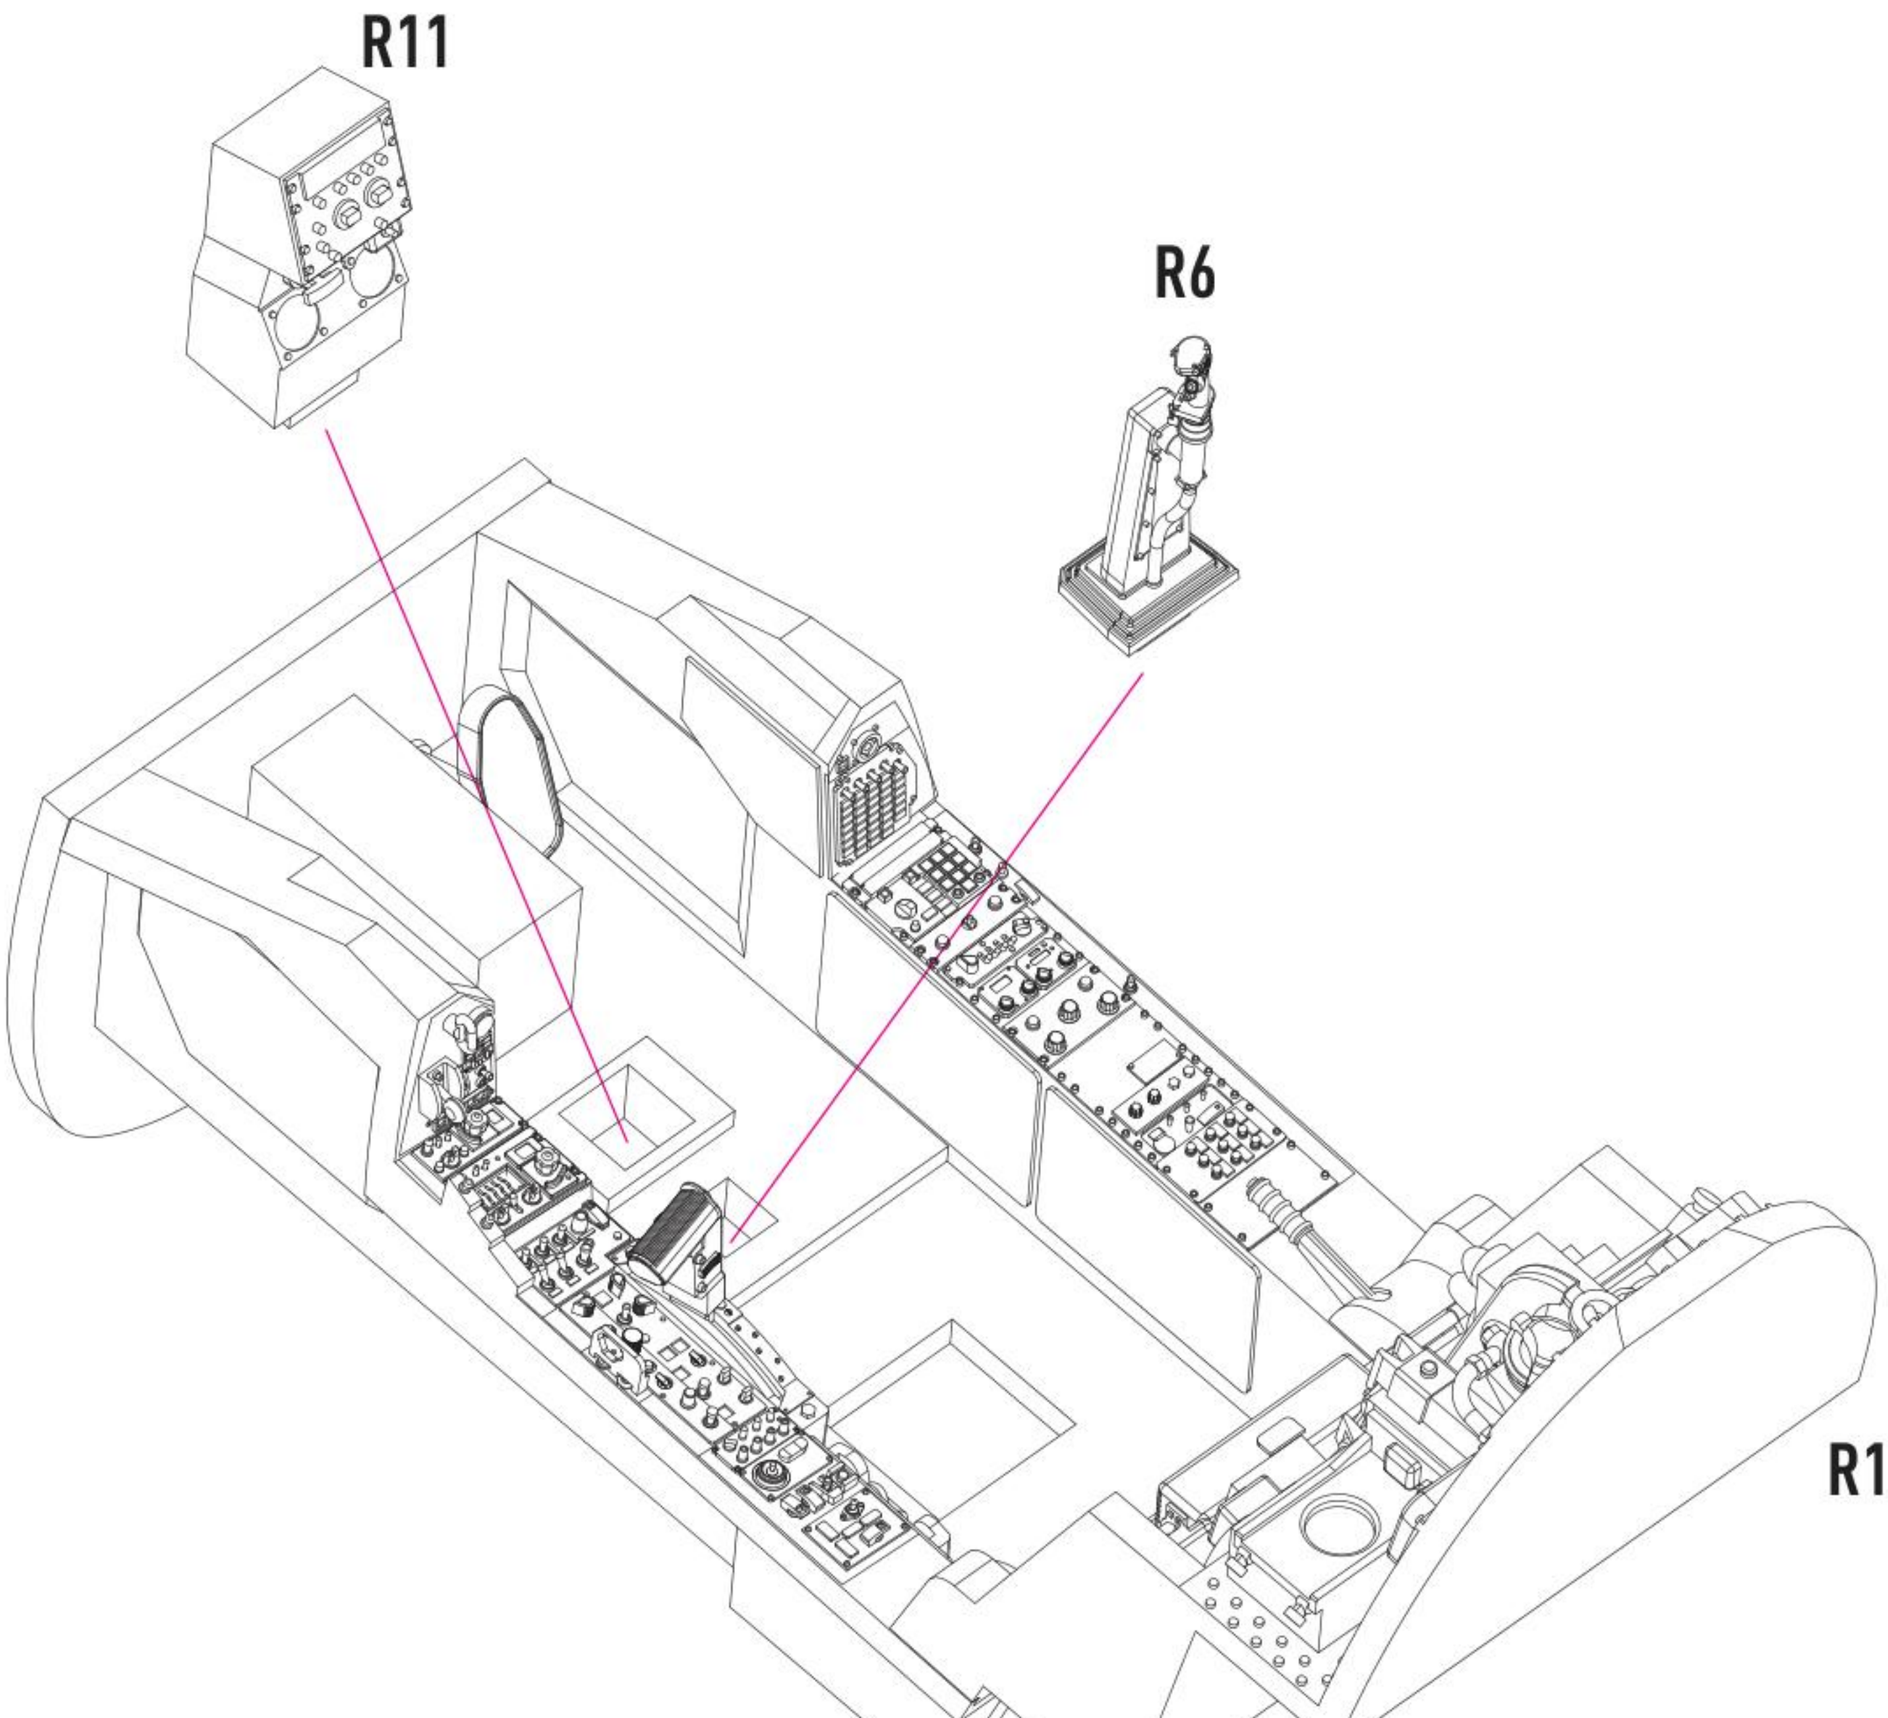
R11
R6
R1

3

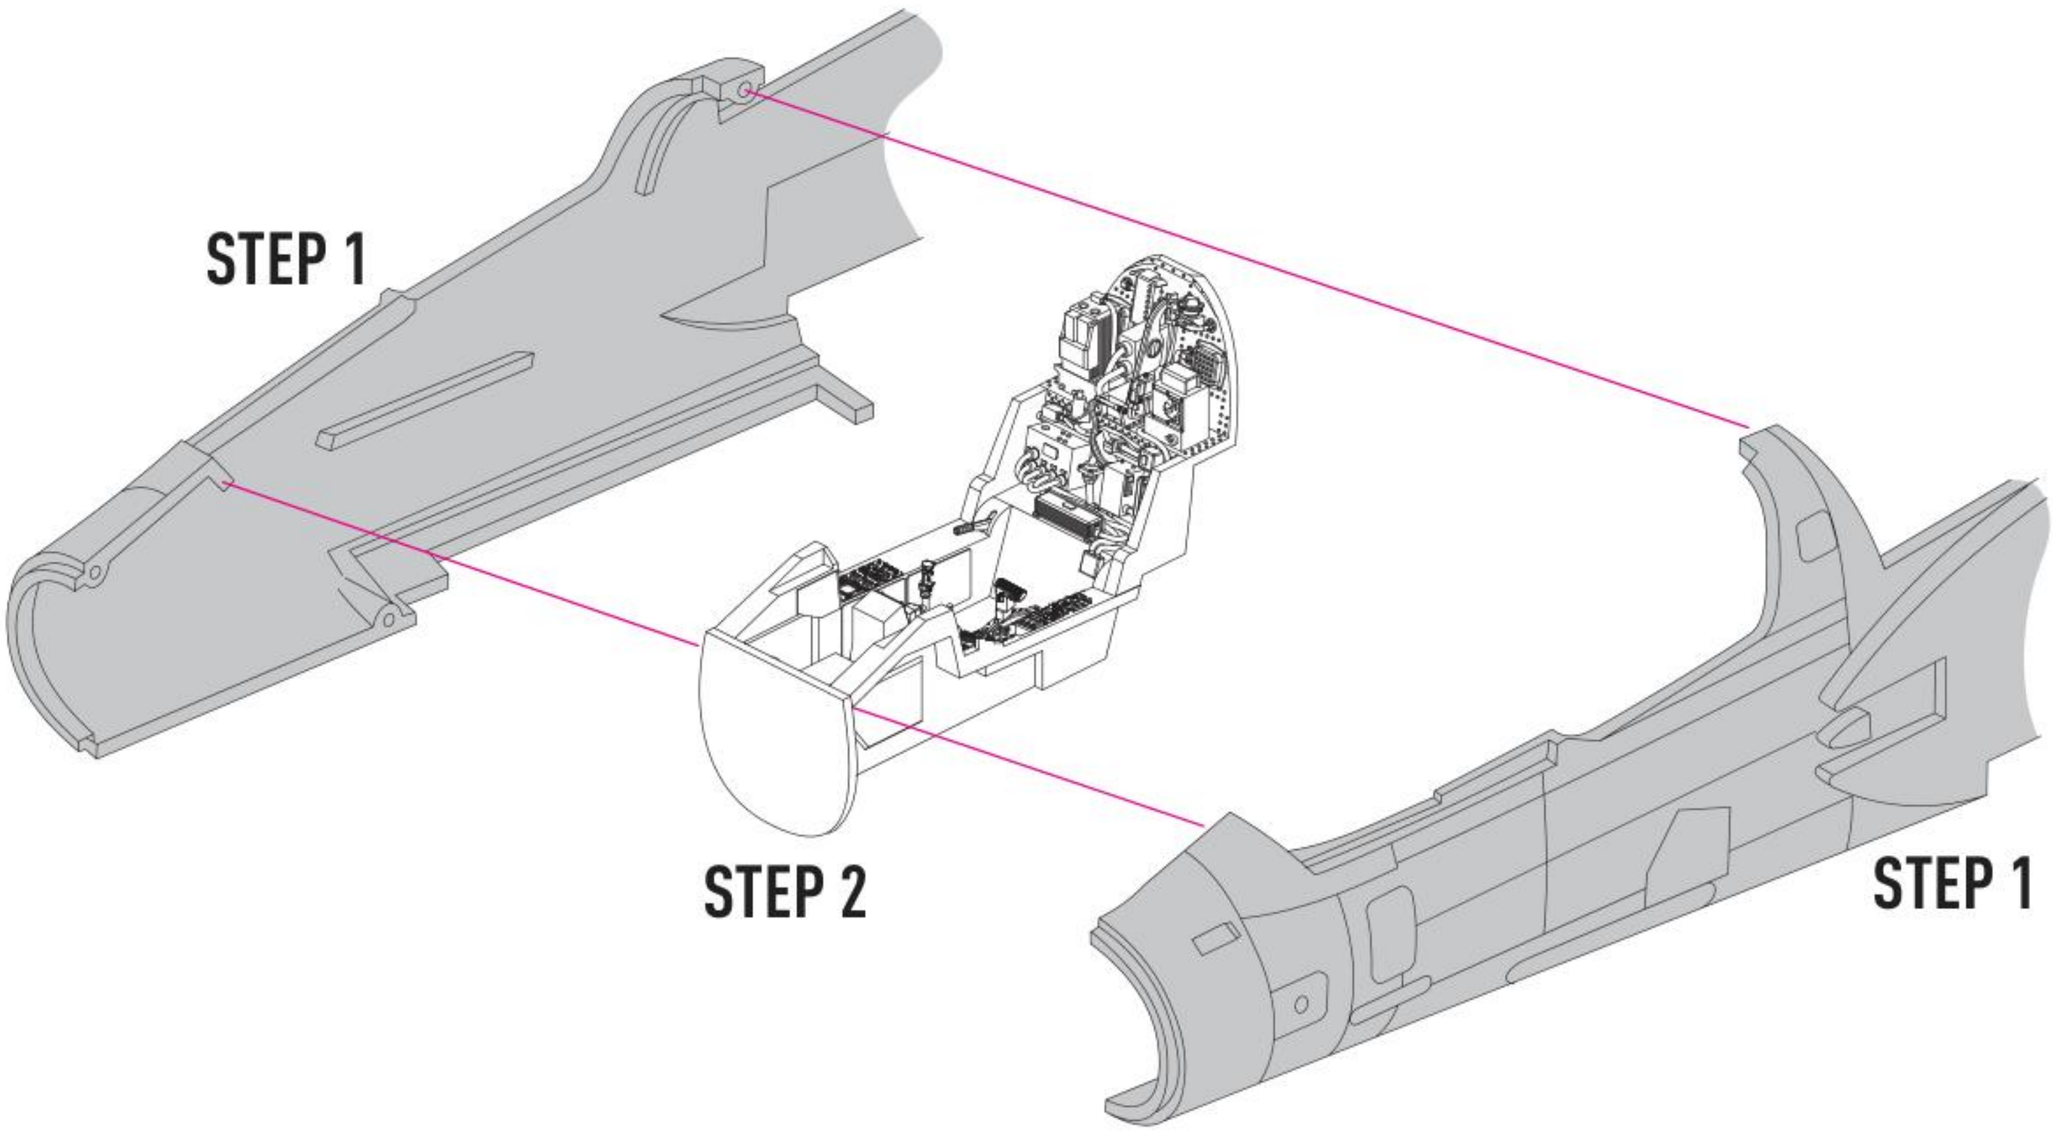

4 RIGHT SIDE

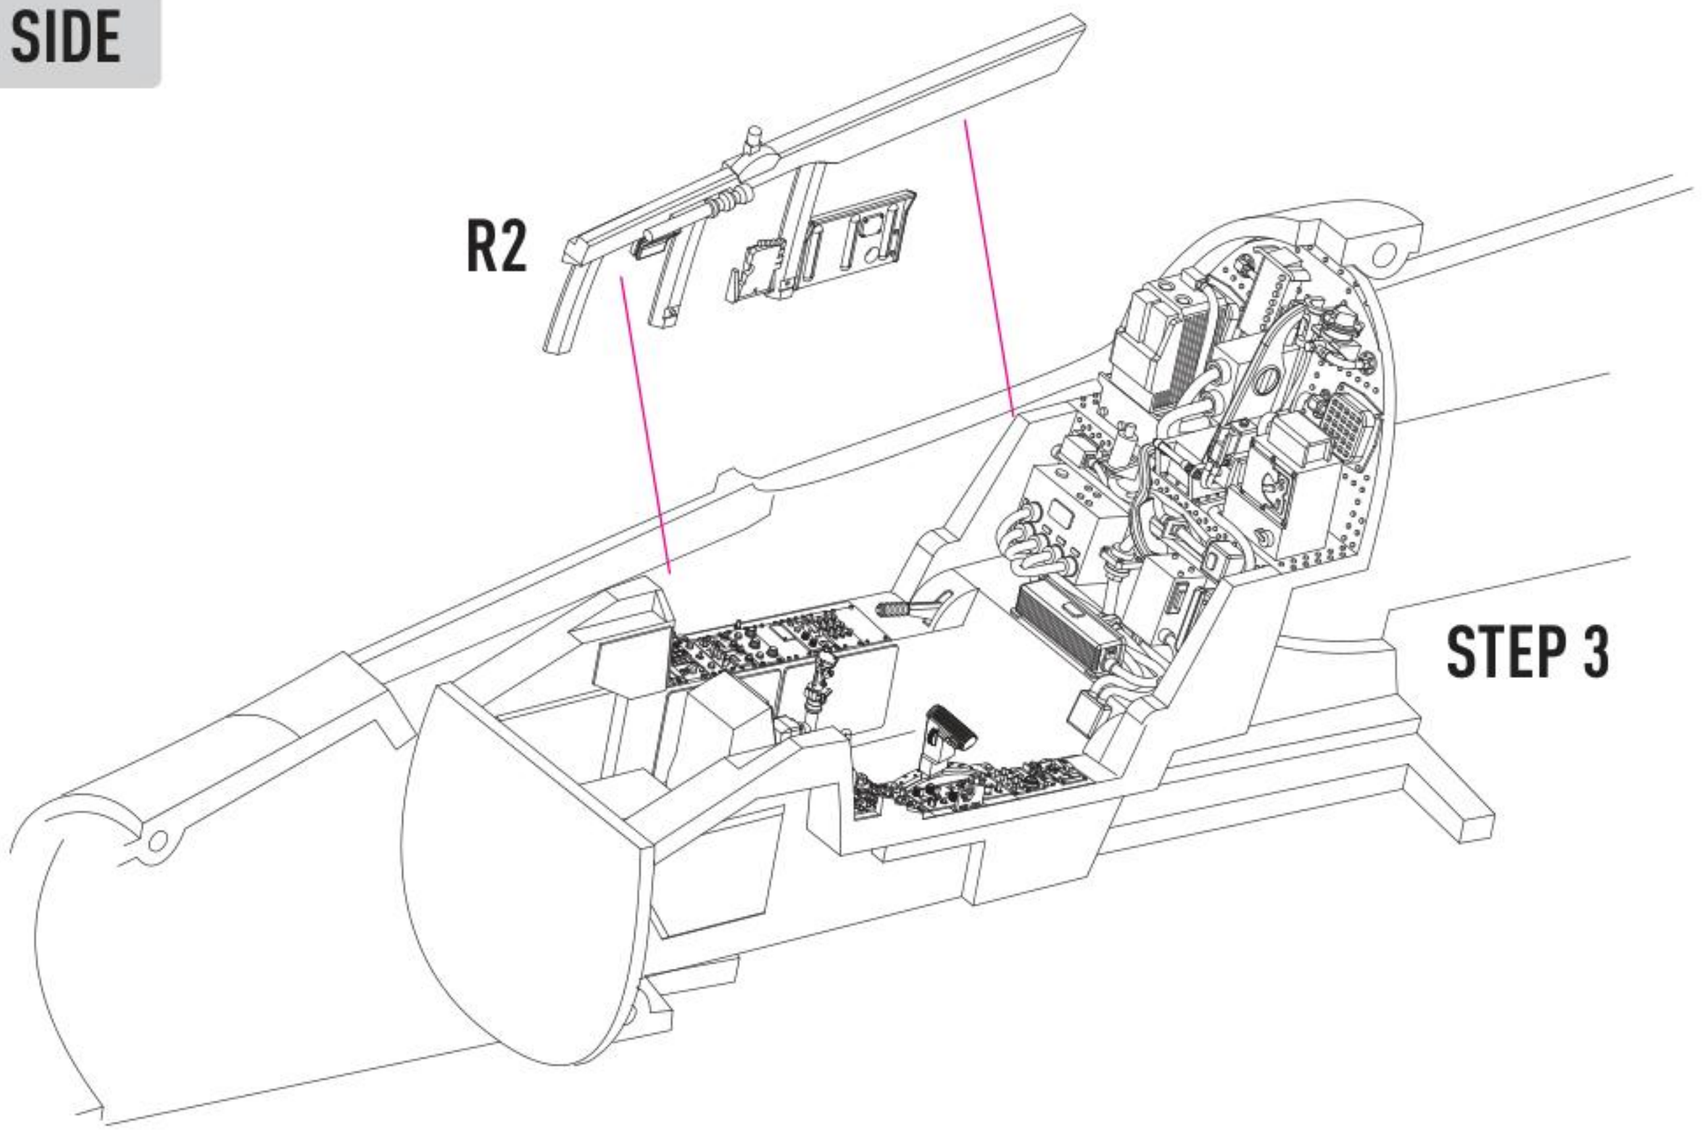

5 LEFT SIDE

6

APPLY GLOSS VARNISH TO ALL TRANSPARENT PARTS BEFORE INSTALLATION

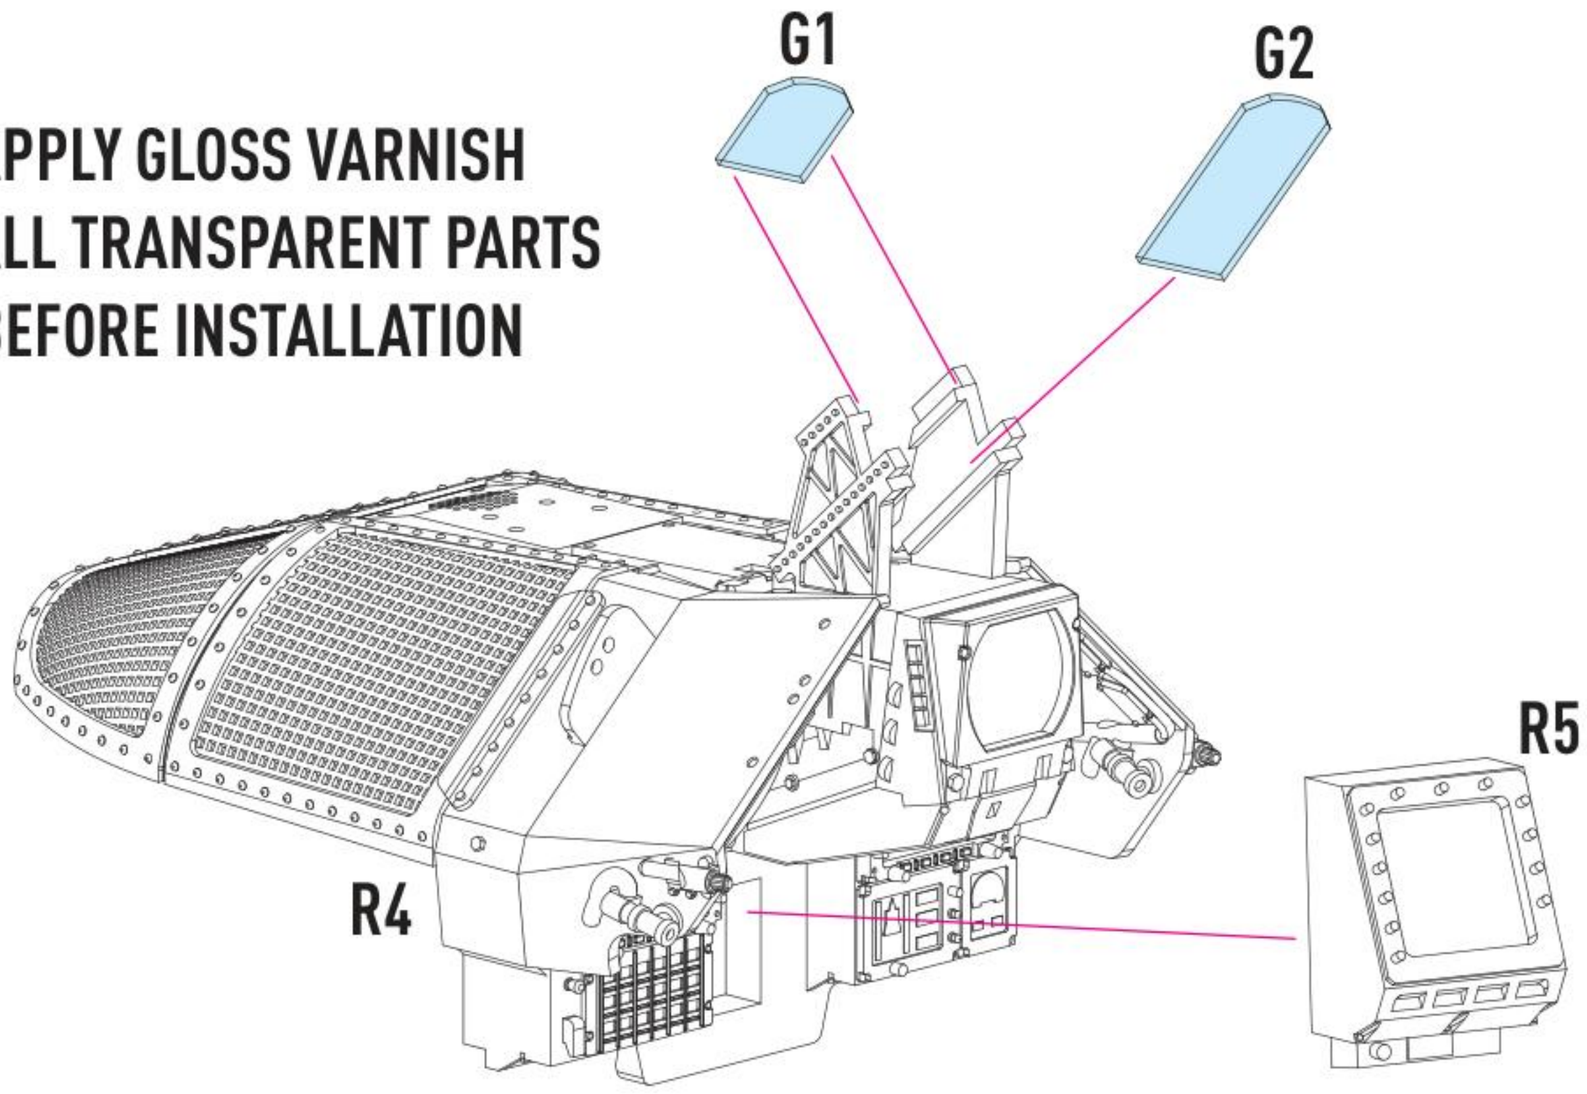

7

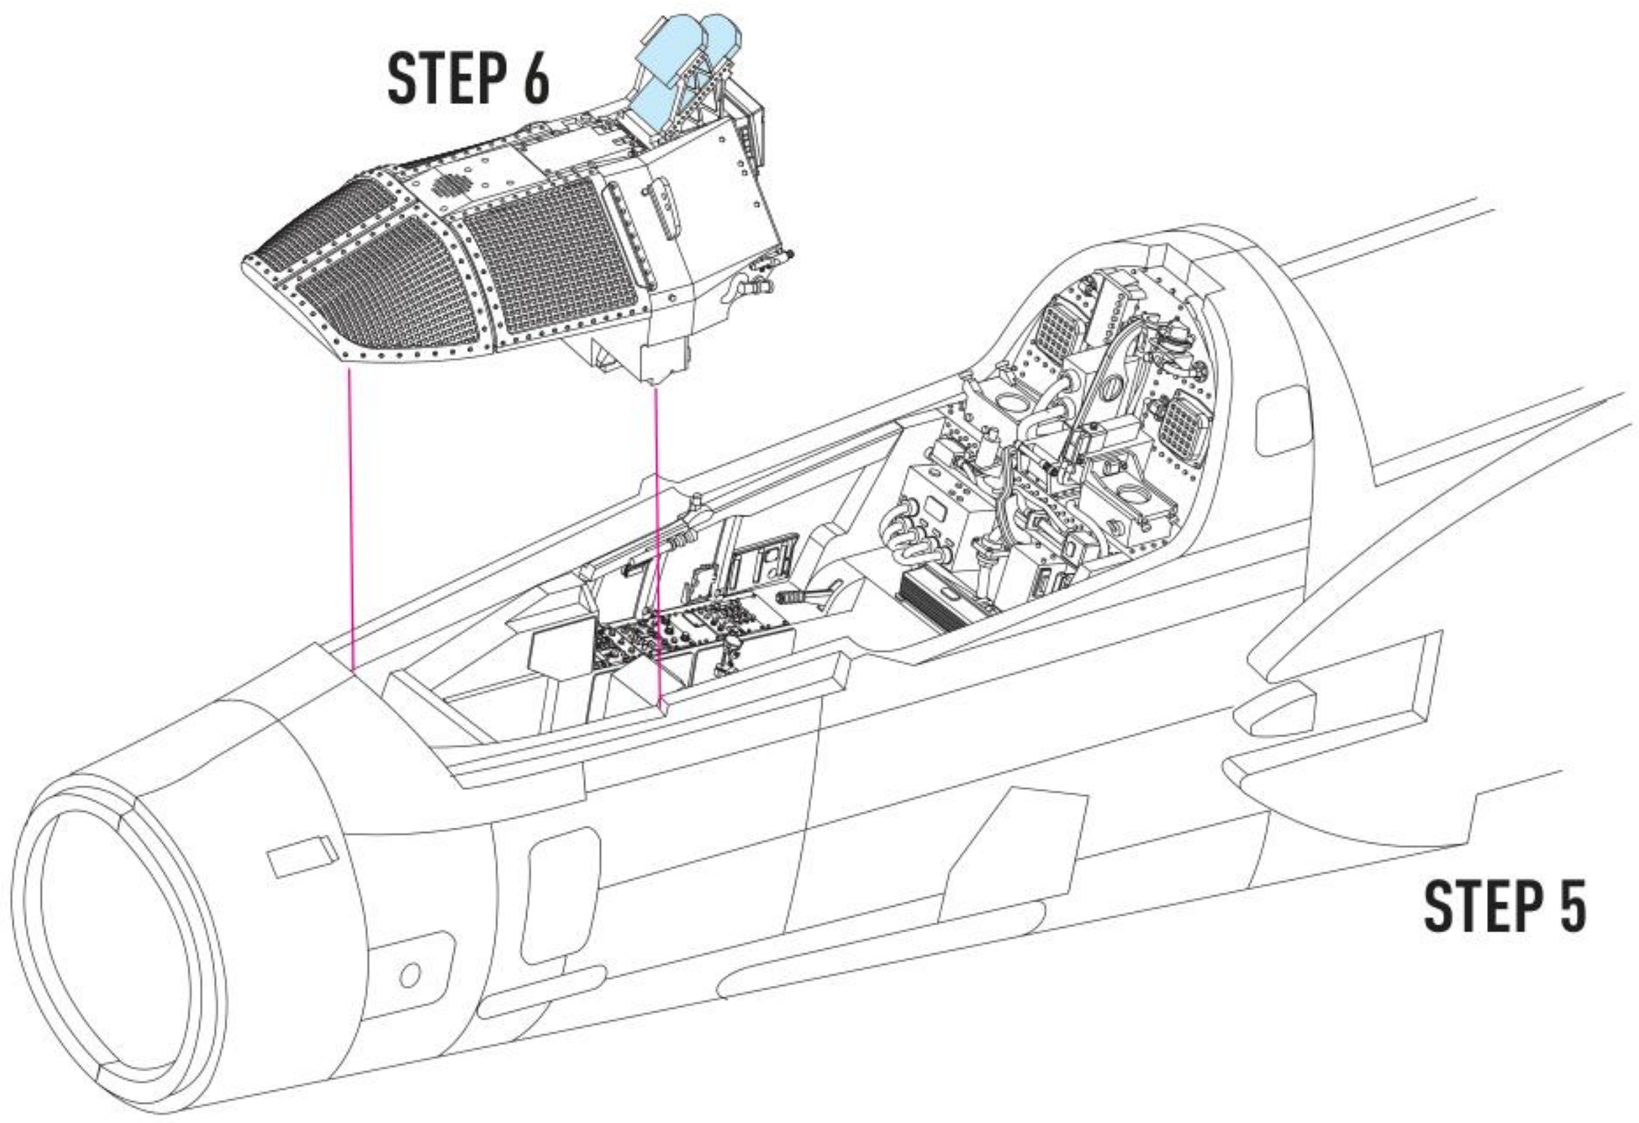

8

9

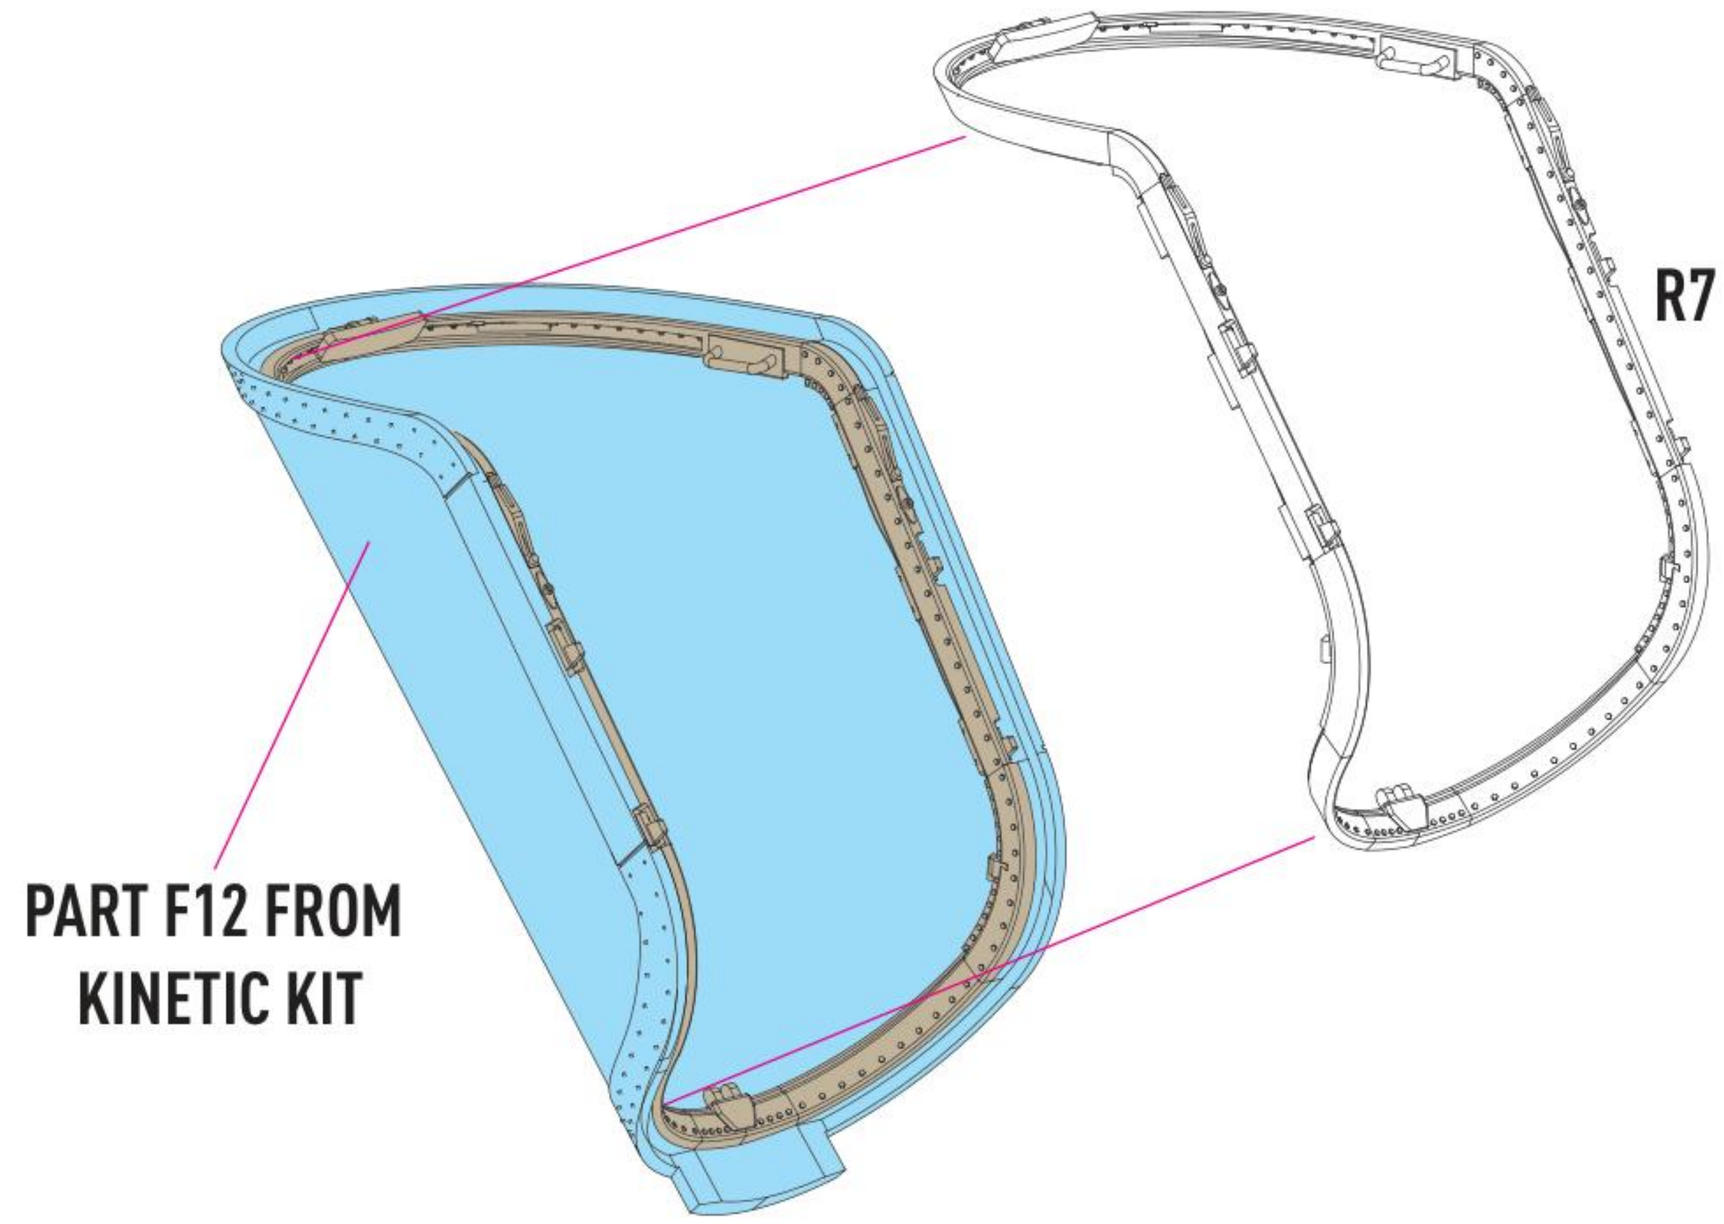

10 FOR OPEN CANOPY

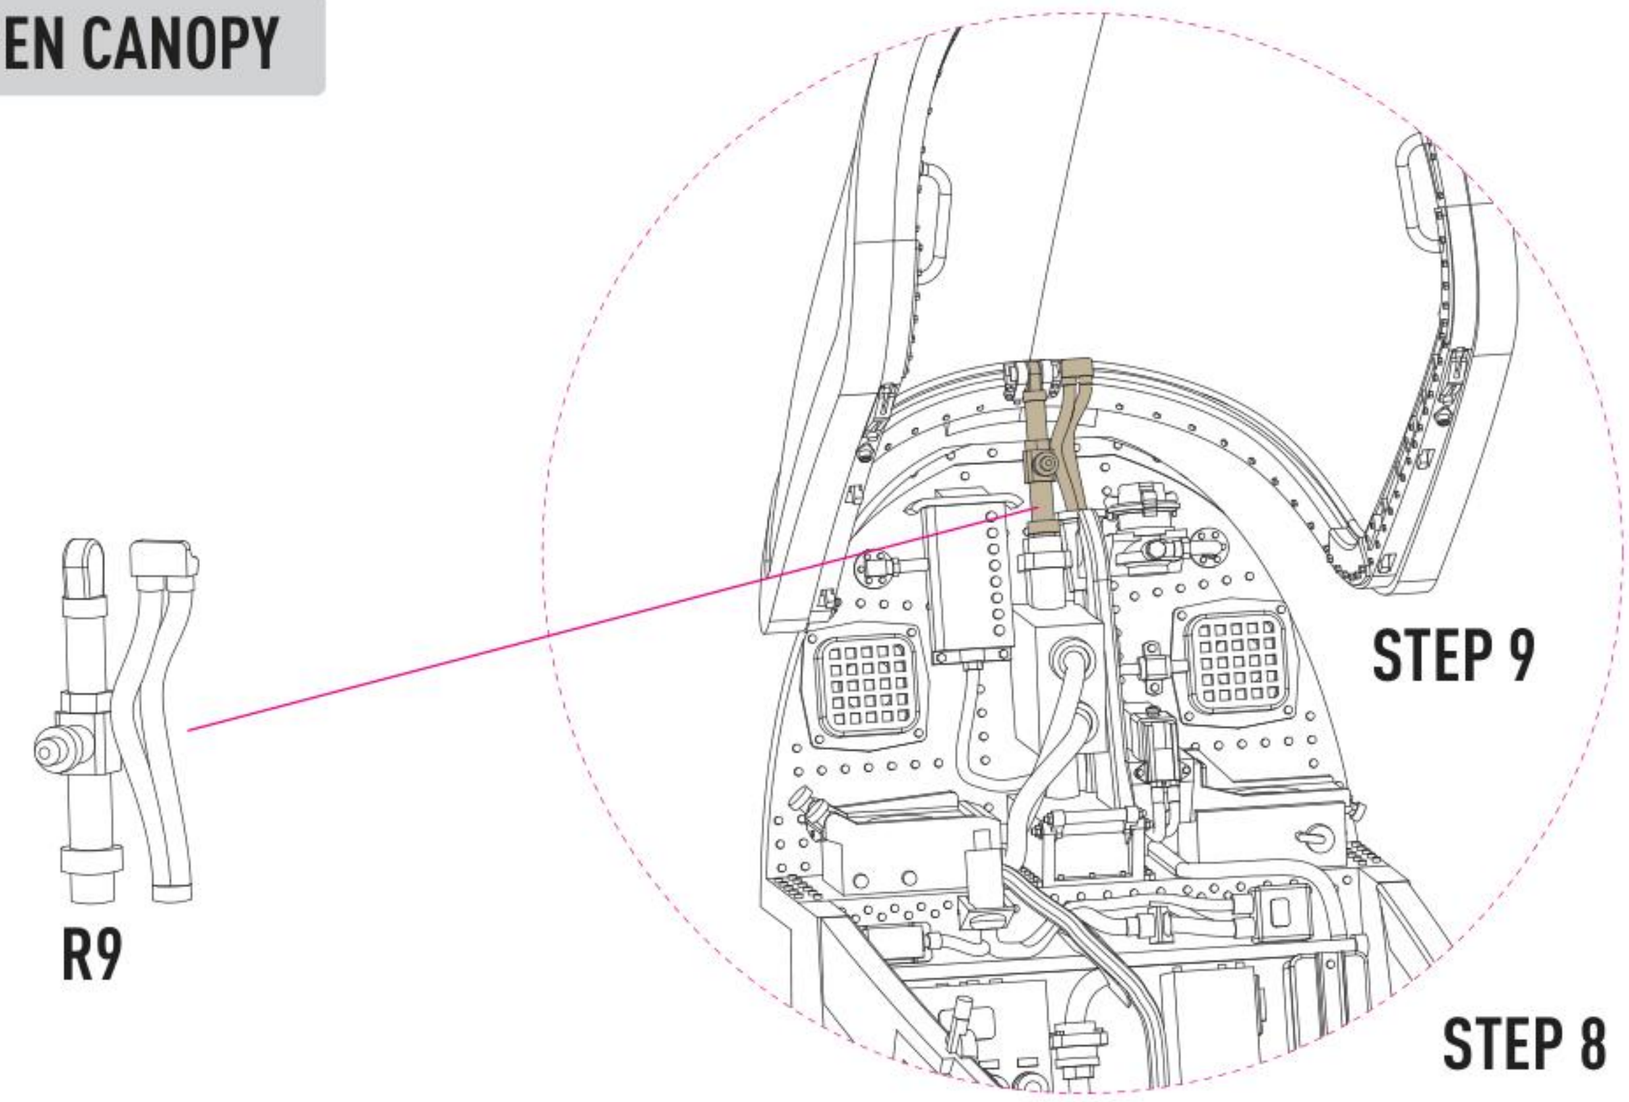

11 FOR CLOSED CANOPY

OPEN CANOPY

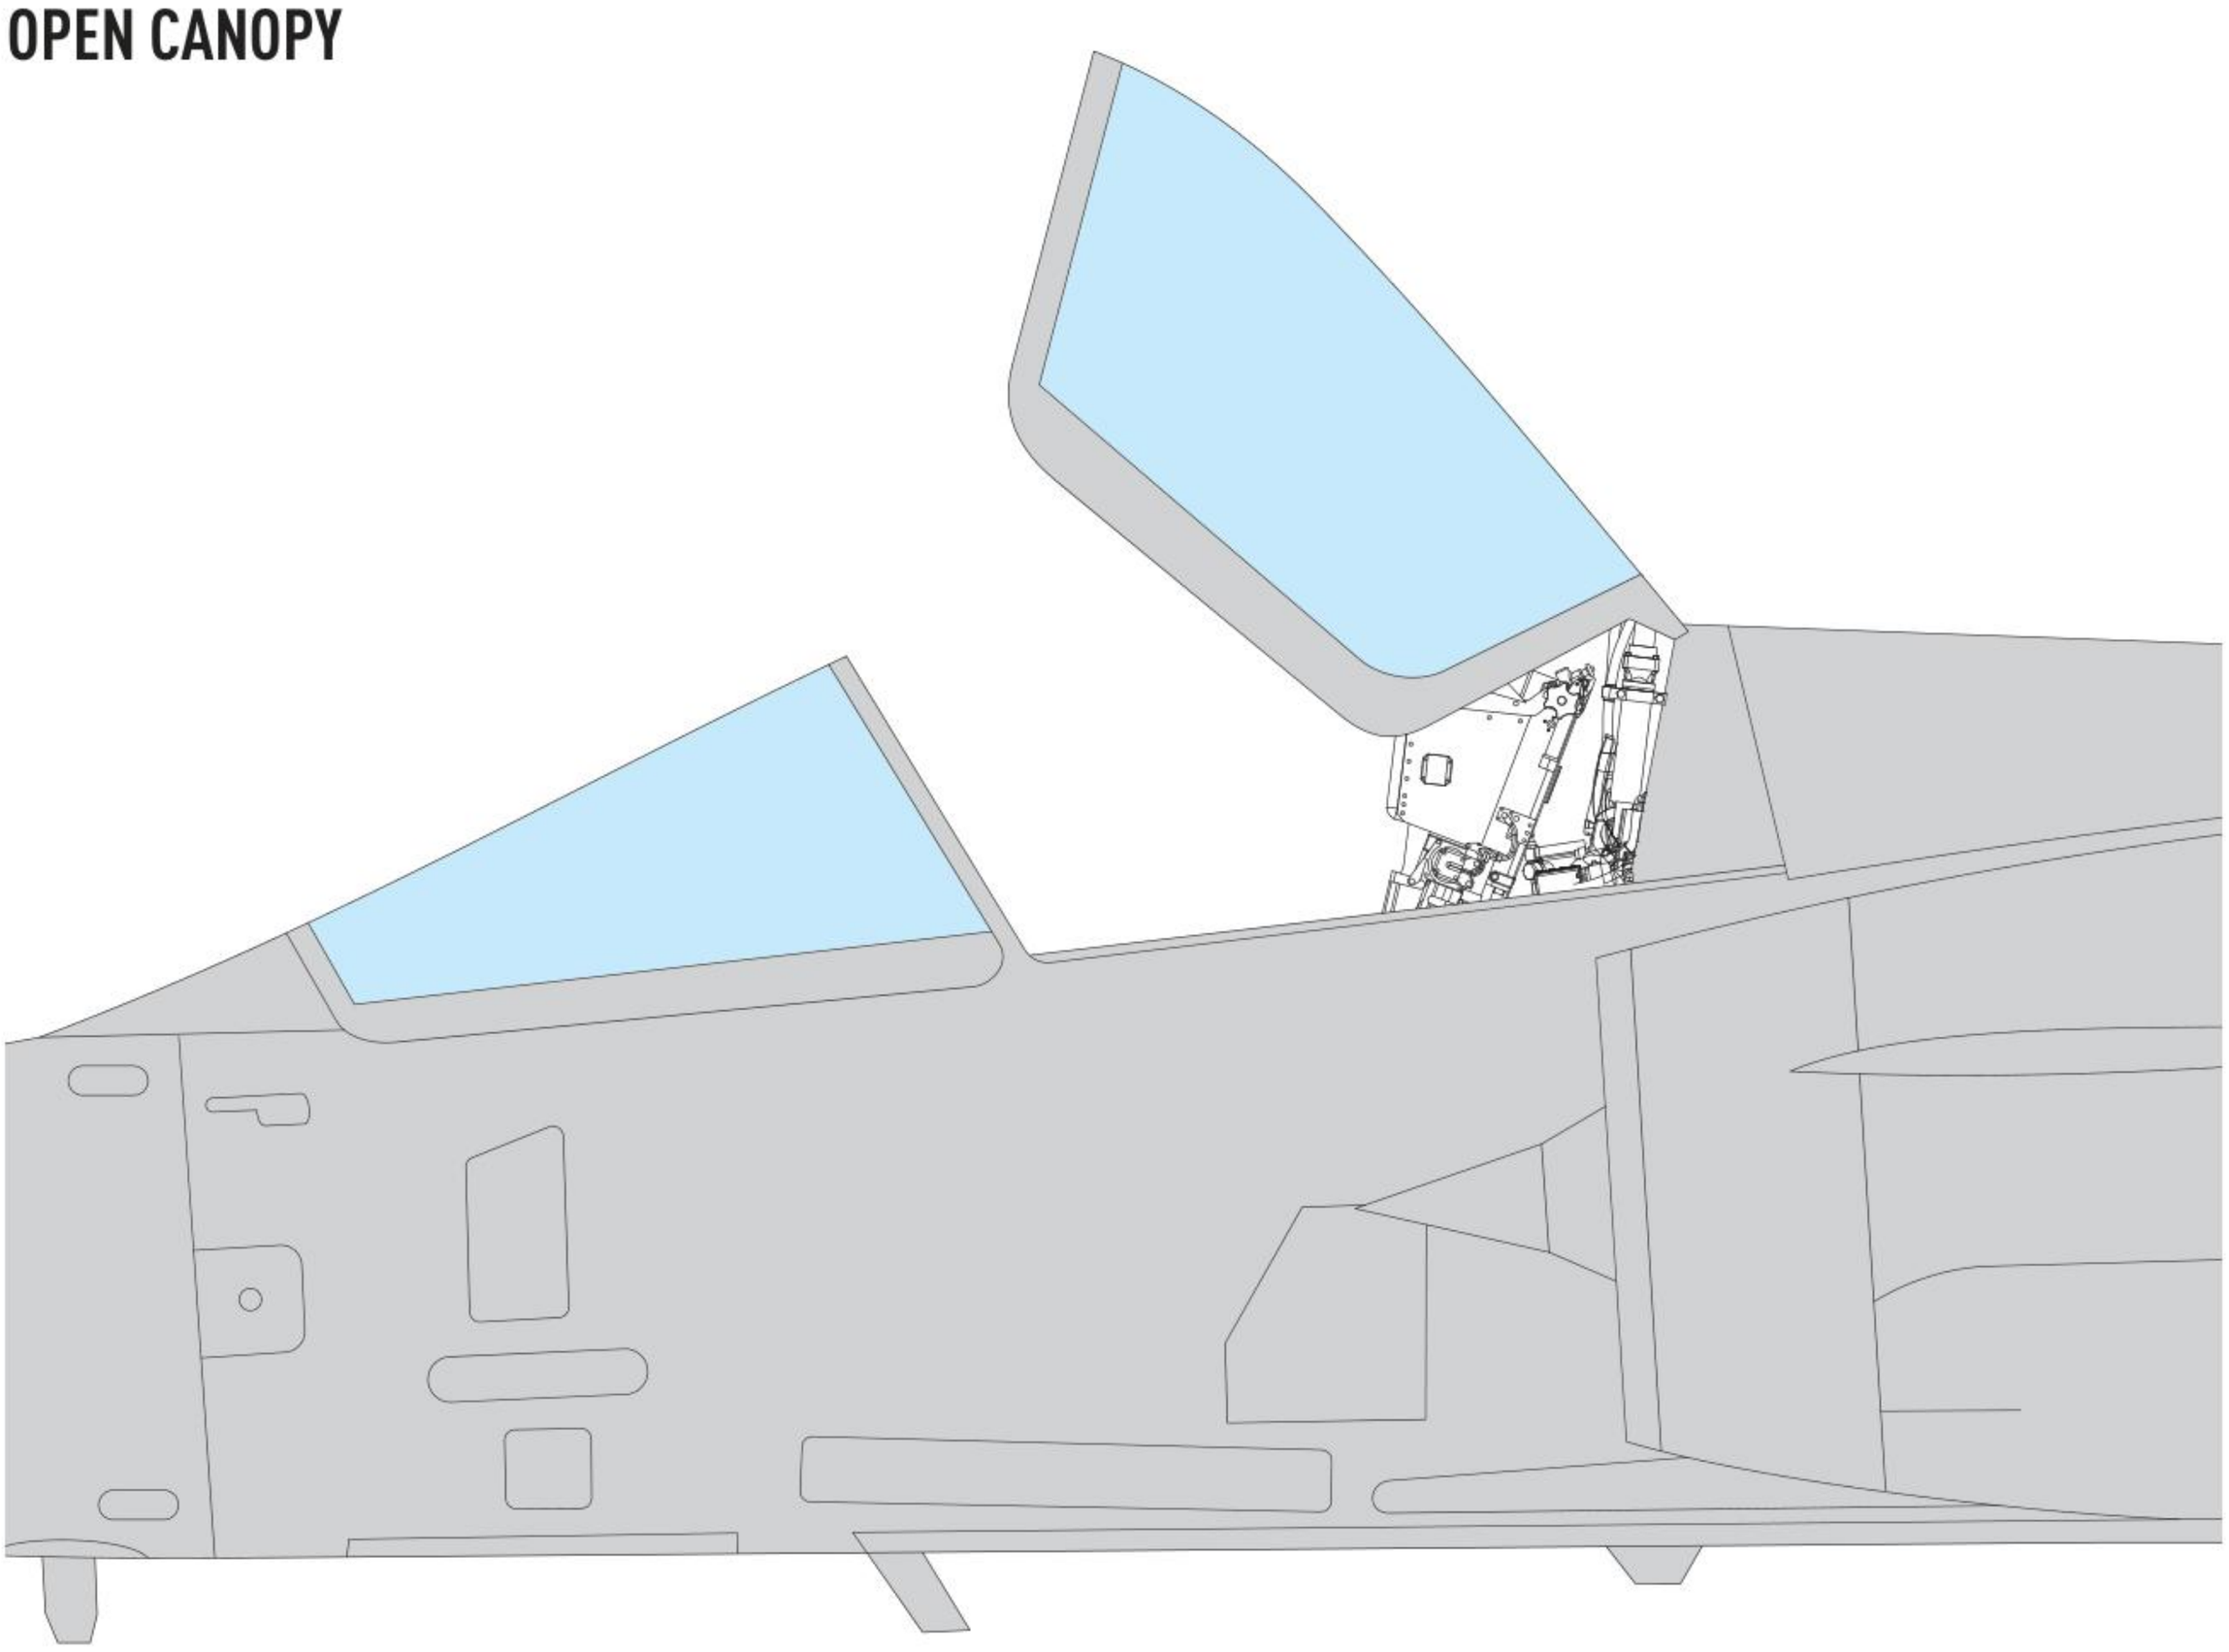

CLOSED CANOPY

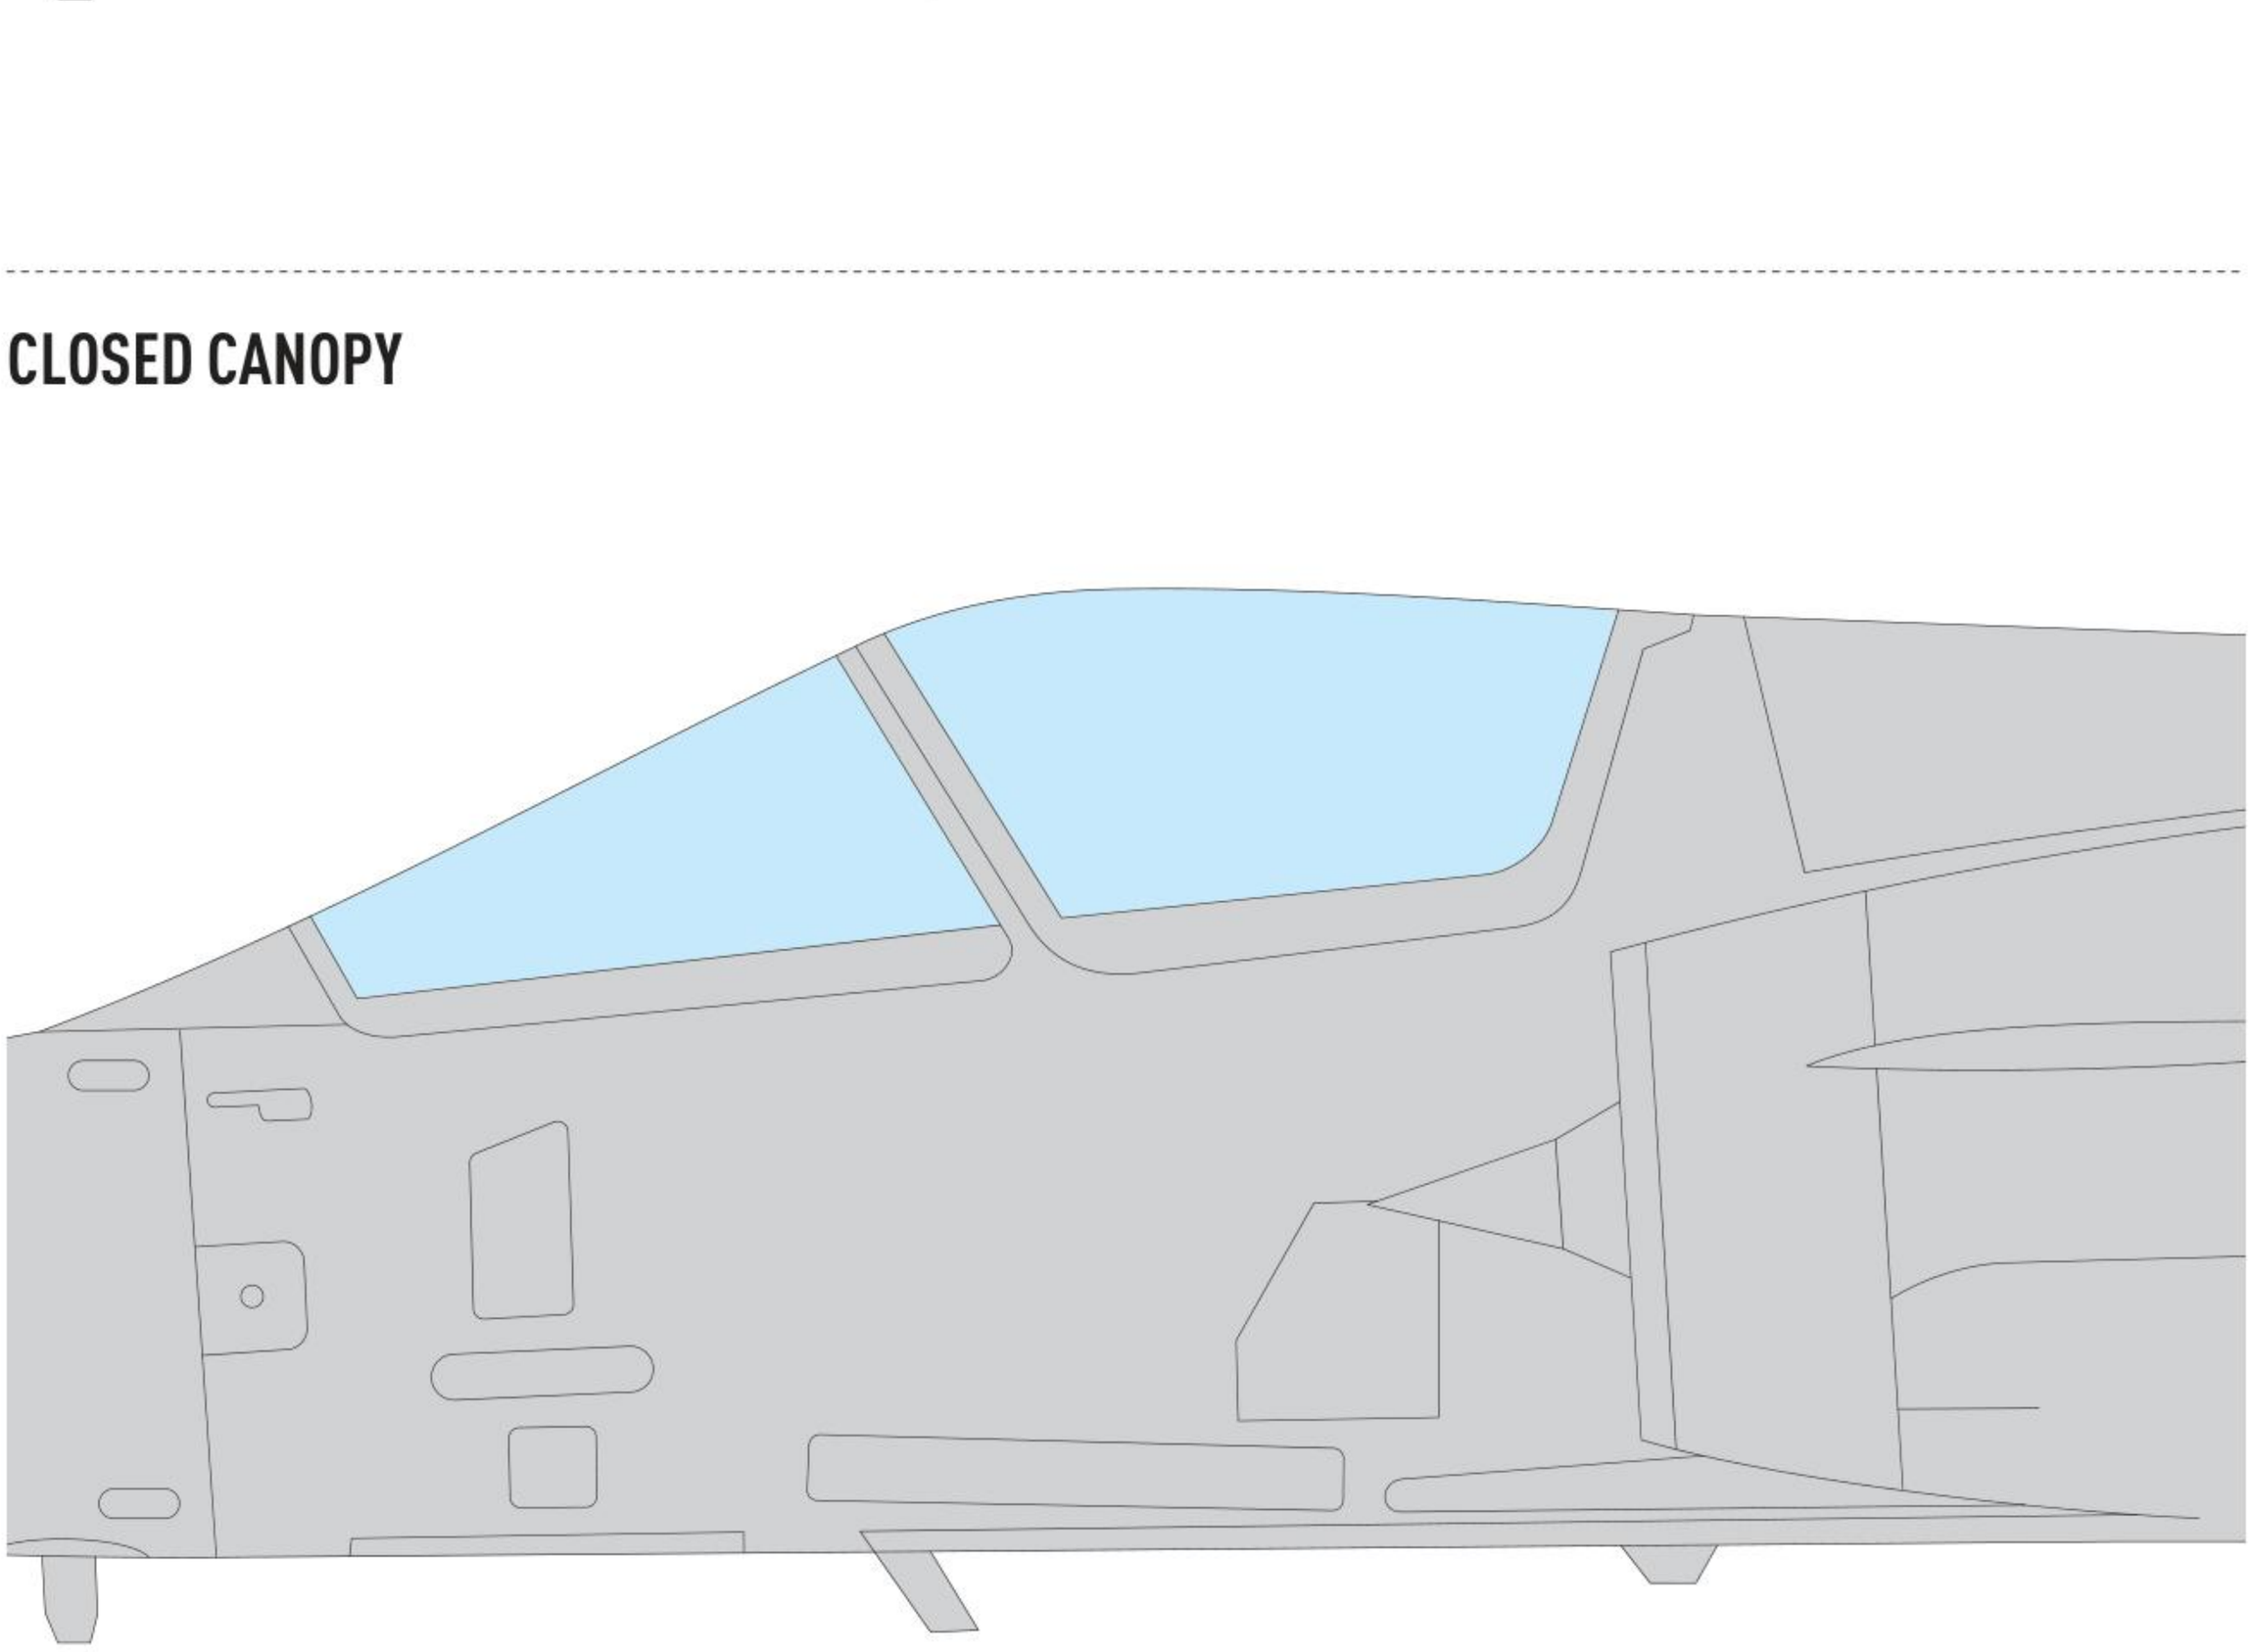

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

fb.com/reskit.official instagram.com/reskit_official youtube.com/@reskit-usmd

DECAL INSTRUCTION

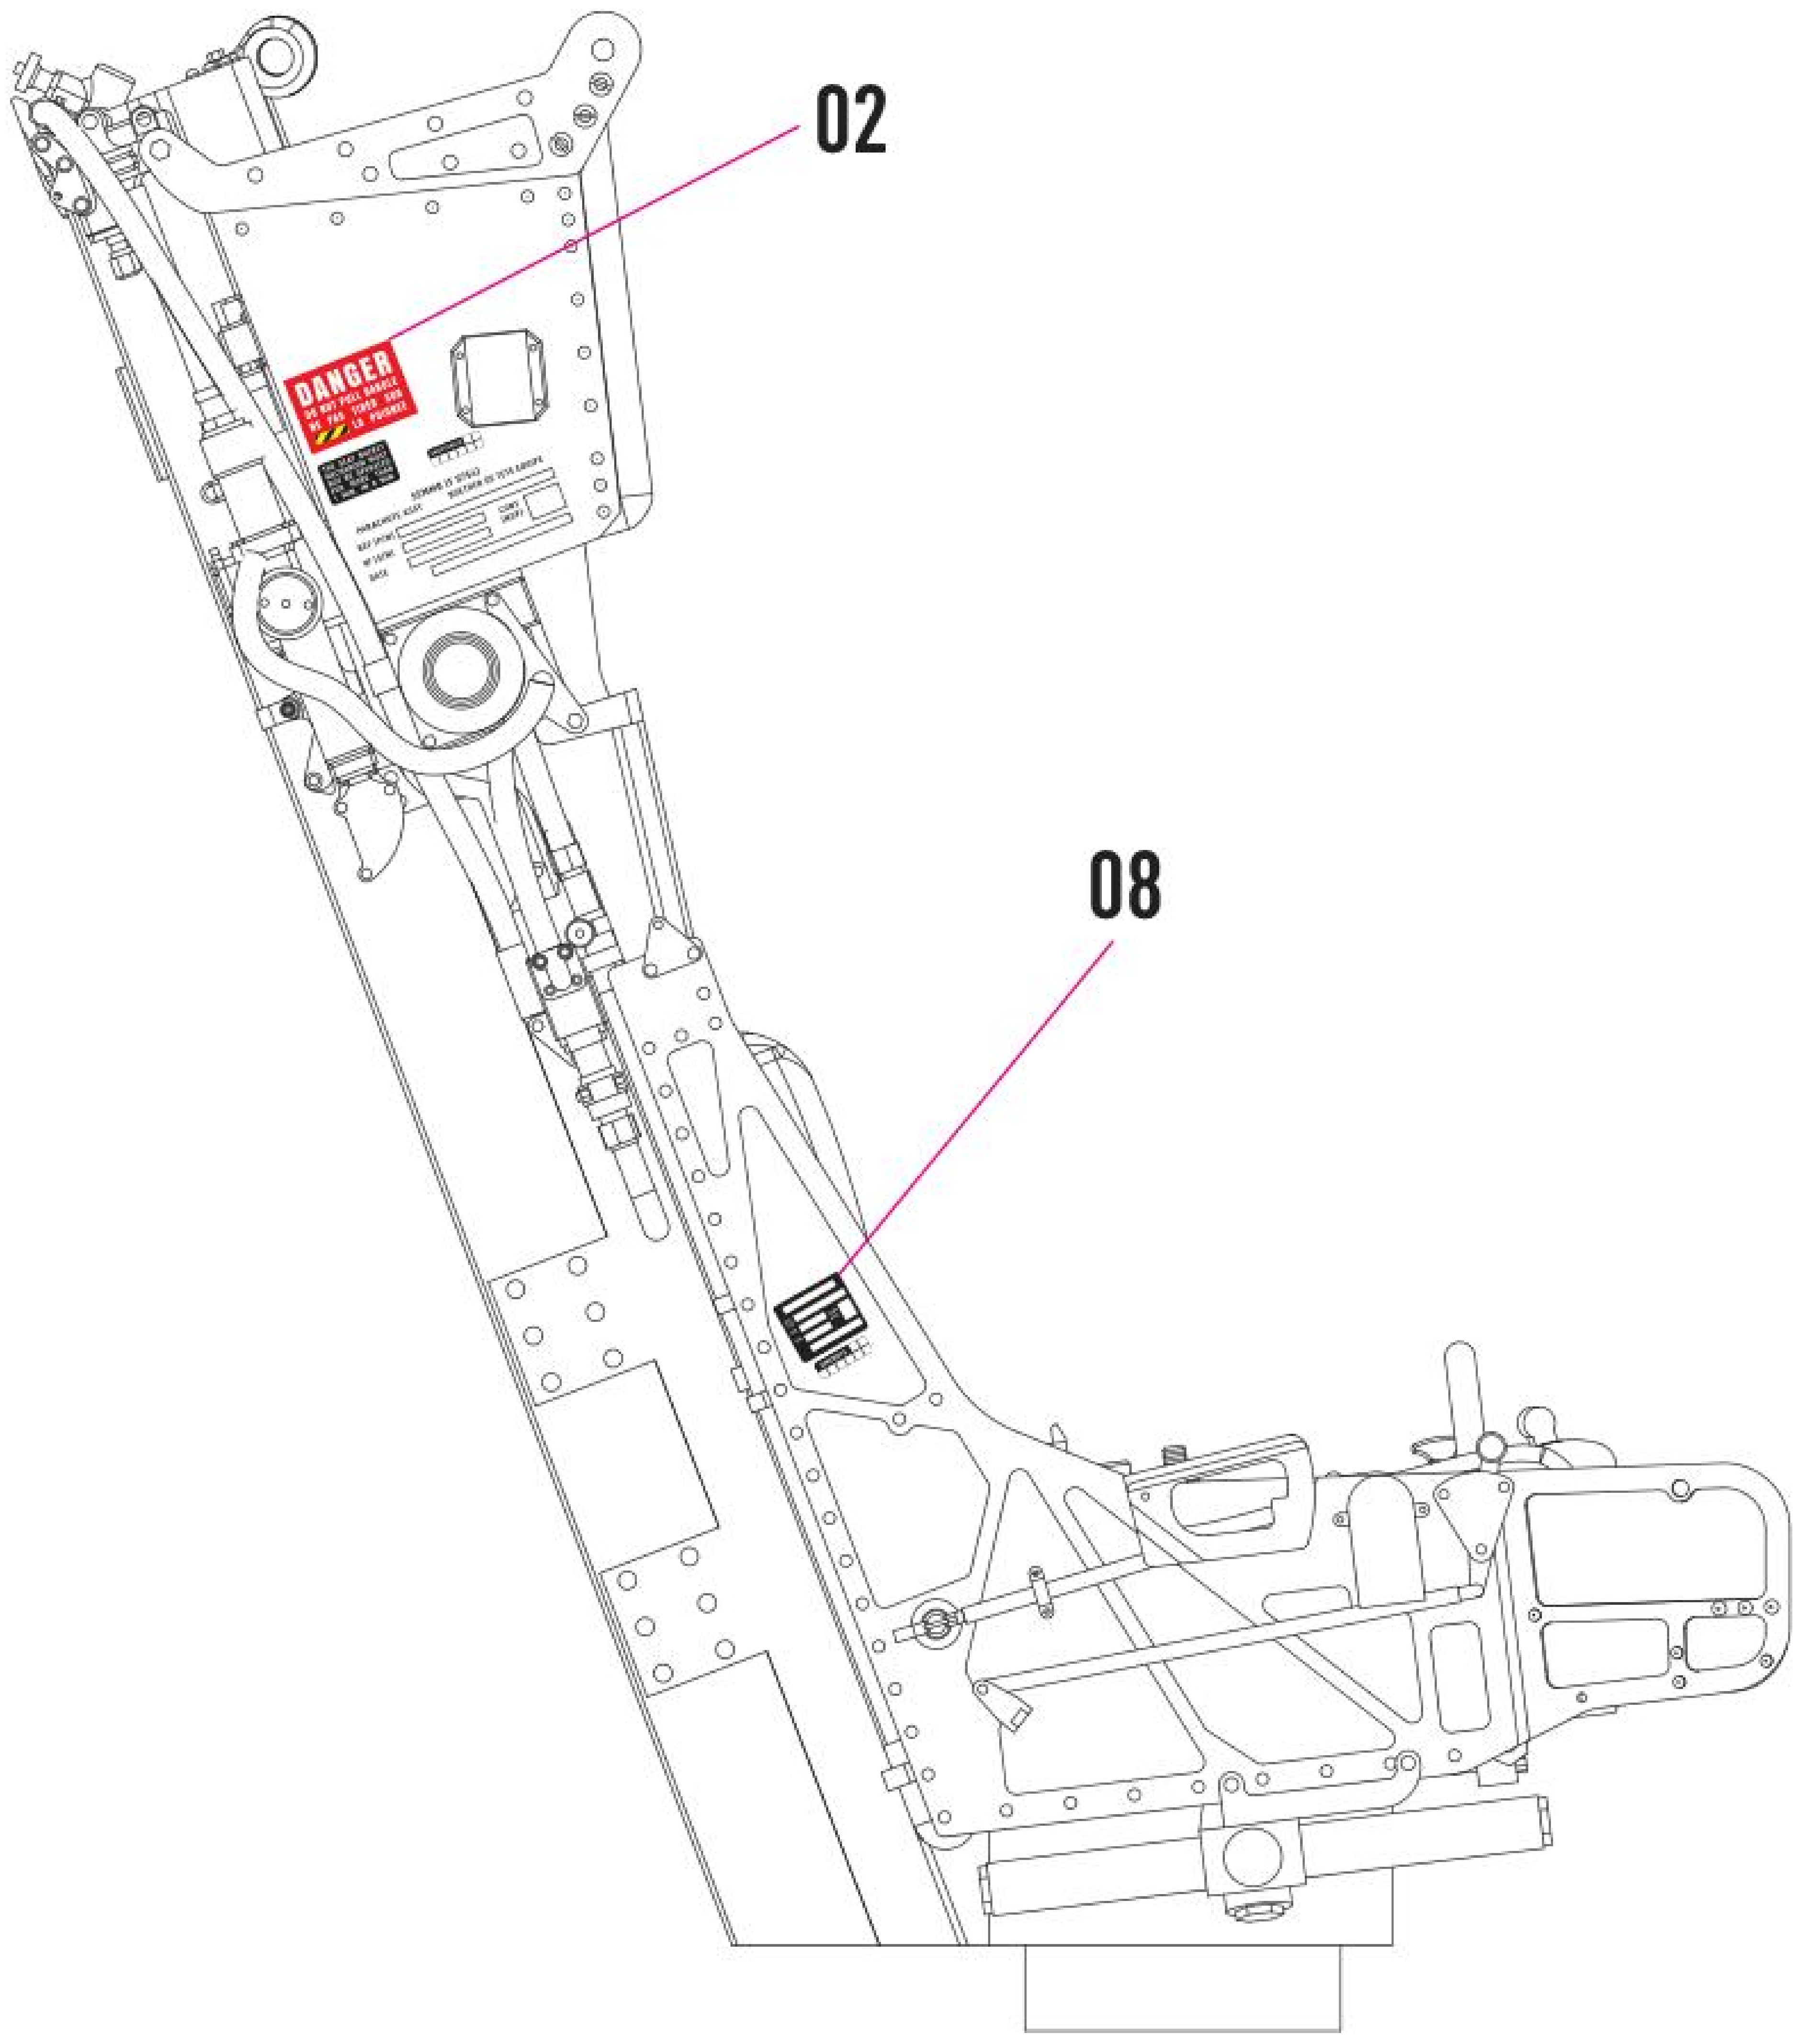

RIGHT

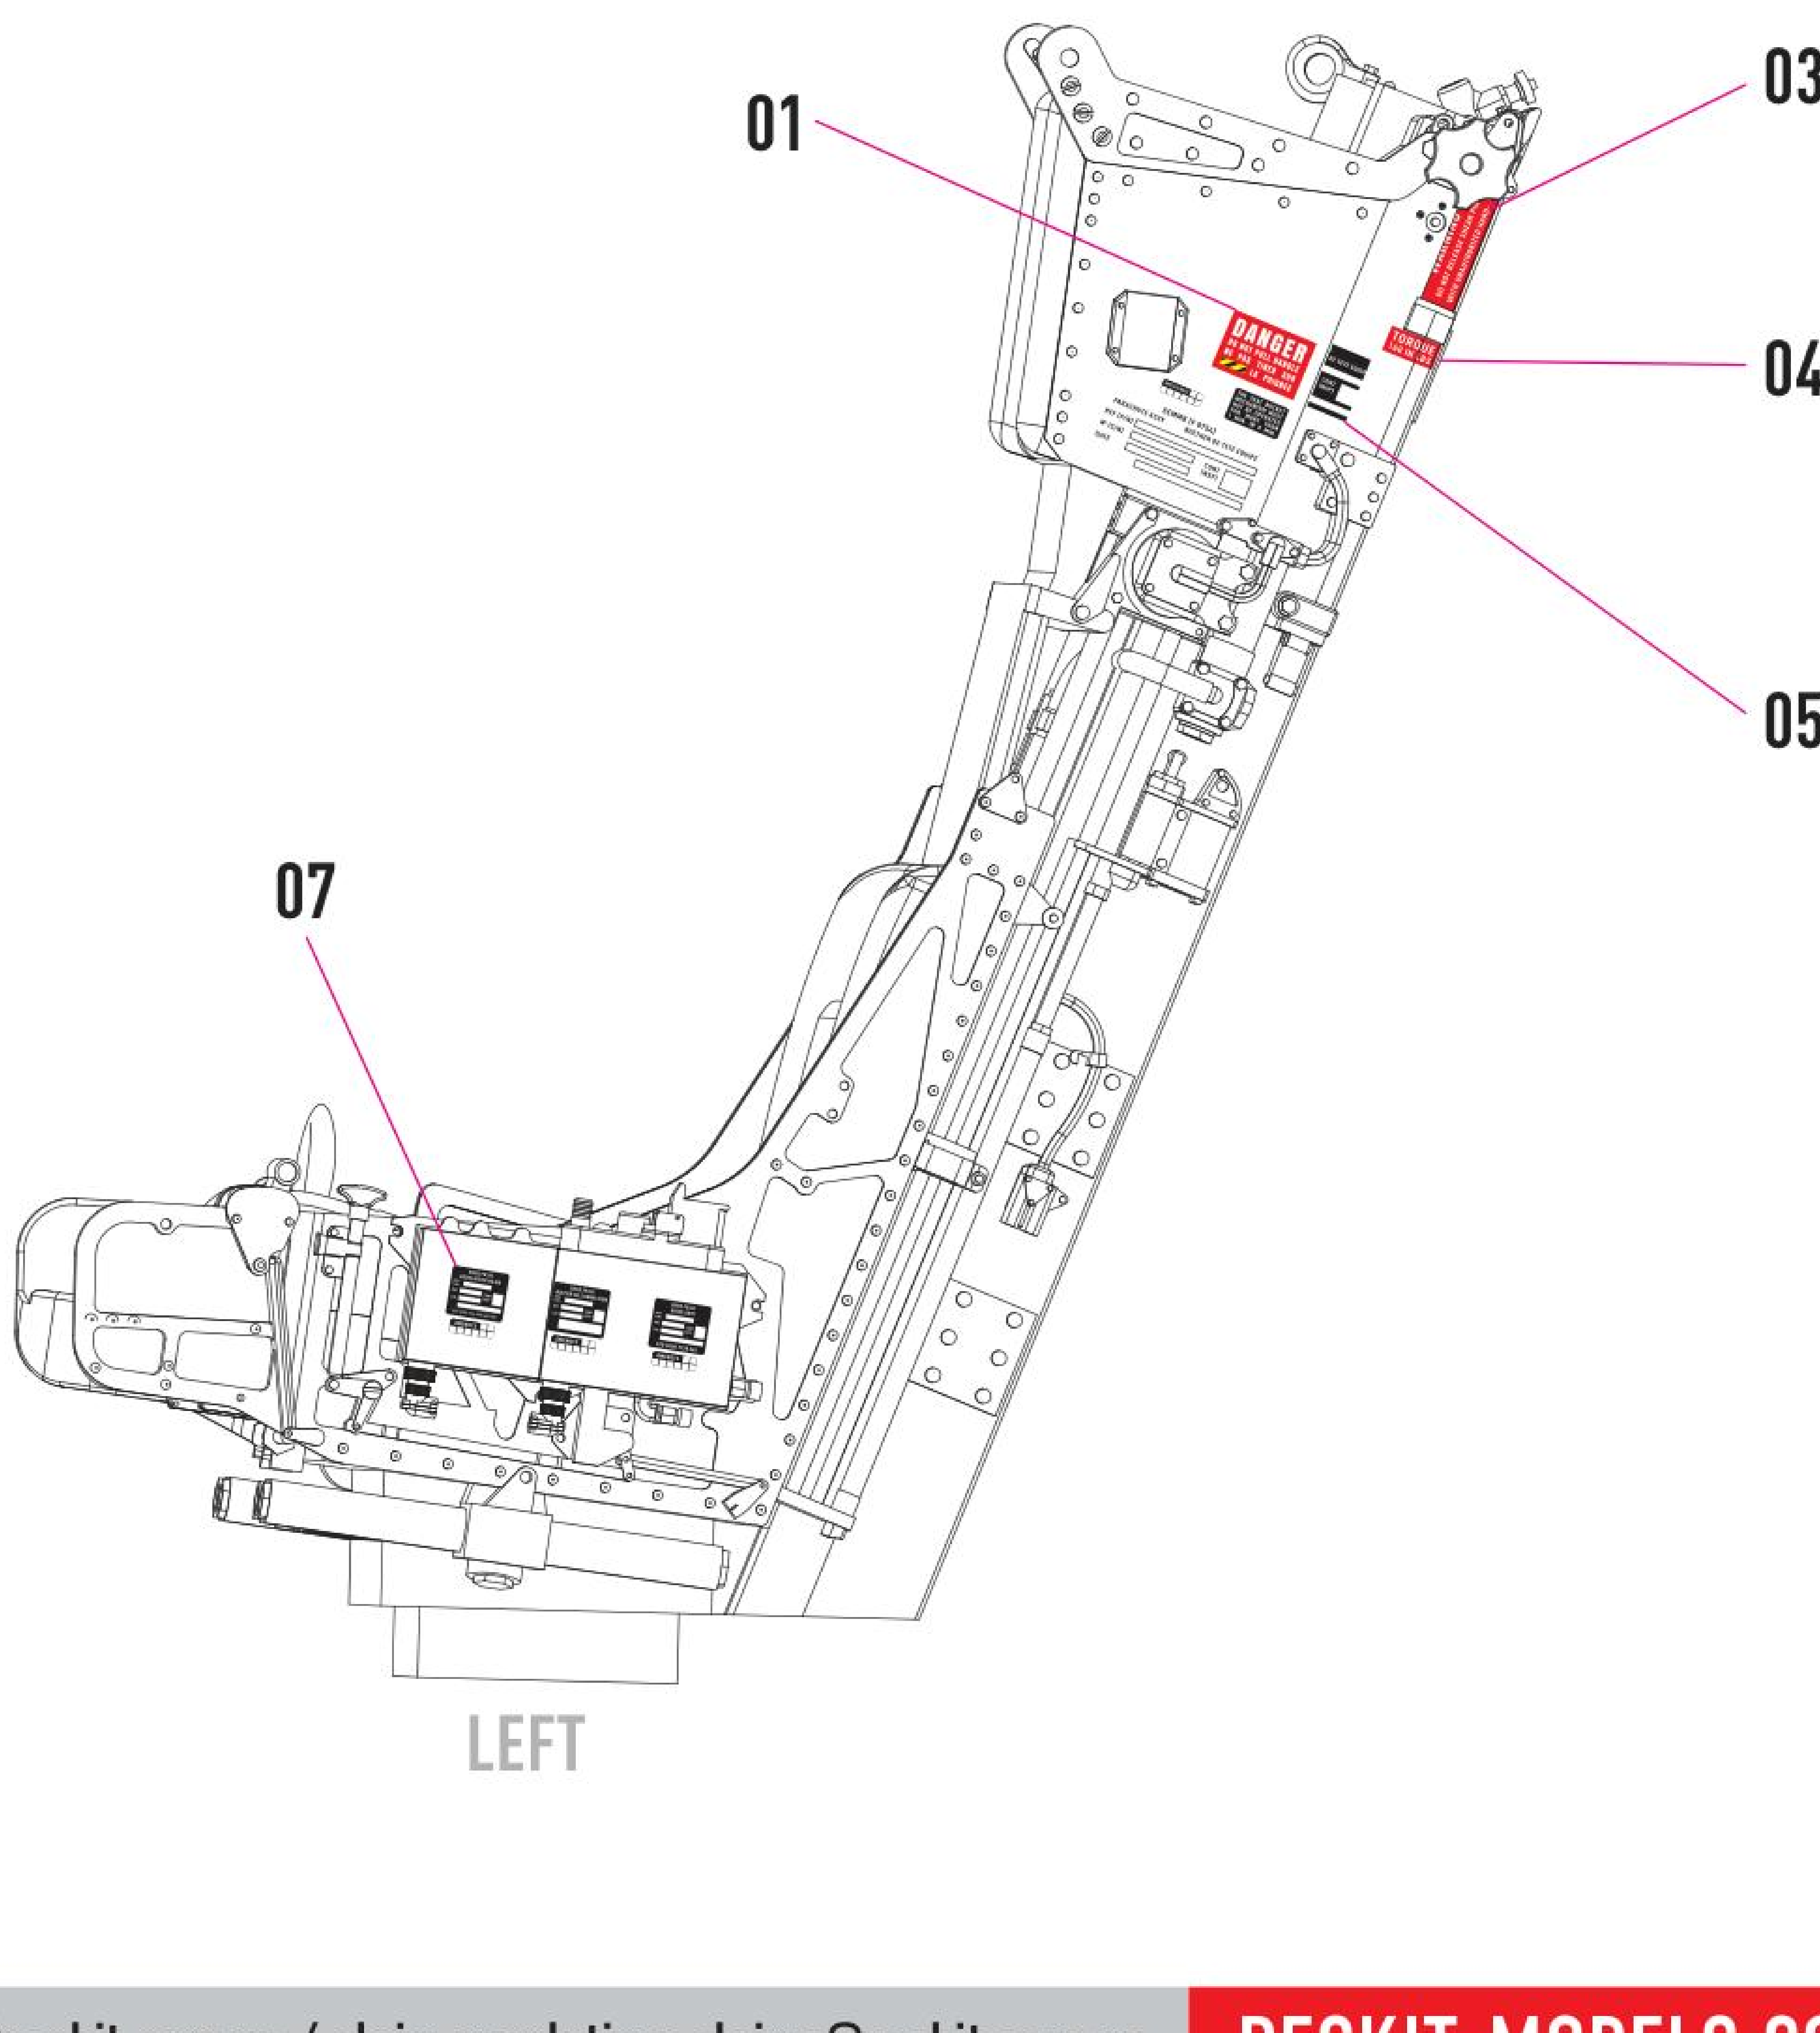

LEFT