RESIN PARTS
FOR SCALE PLASTIC KITS

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION RSU48-0593

P-47N THUNDERBOLT COCKPIT

DETAILED EDITION

3D PRINTED PARTS

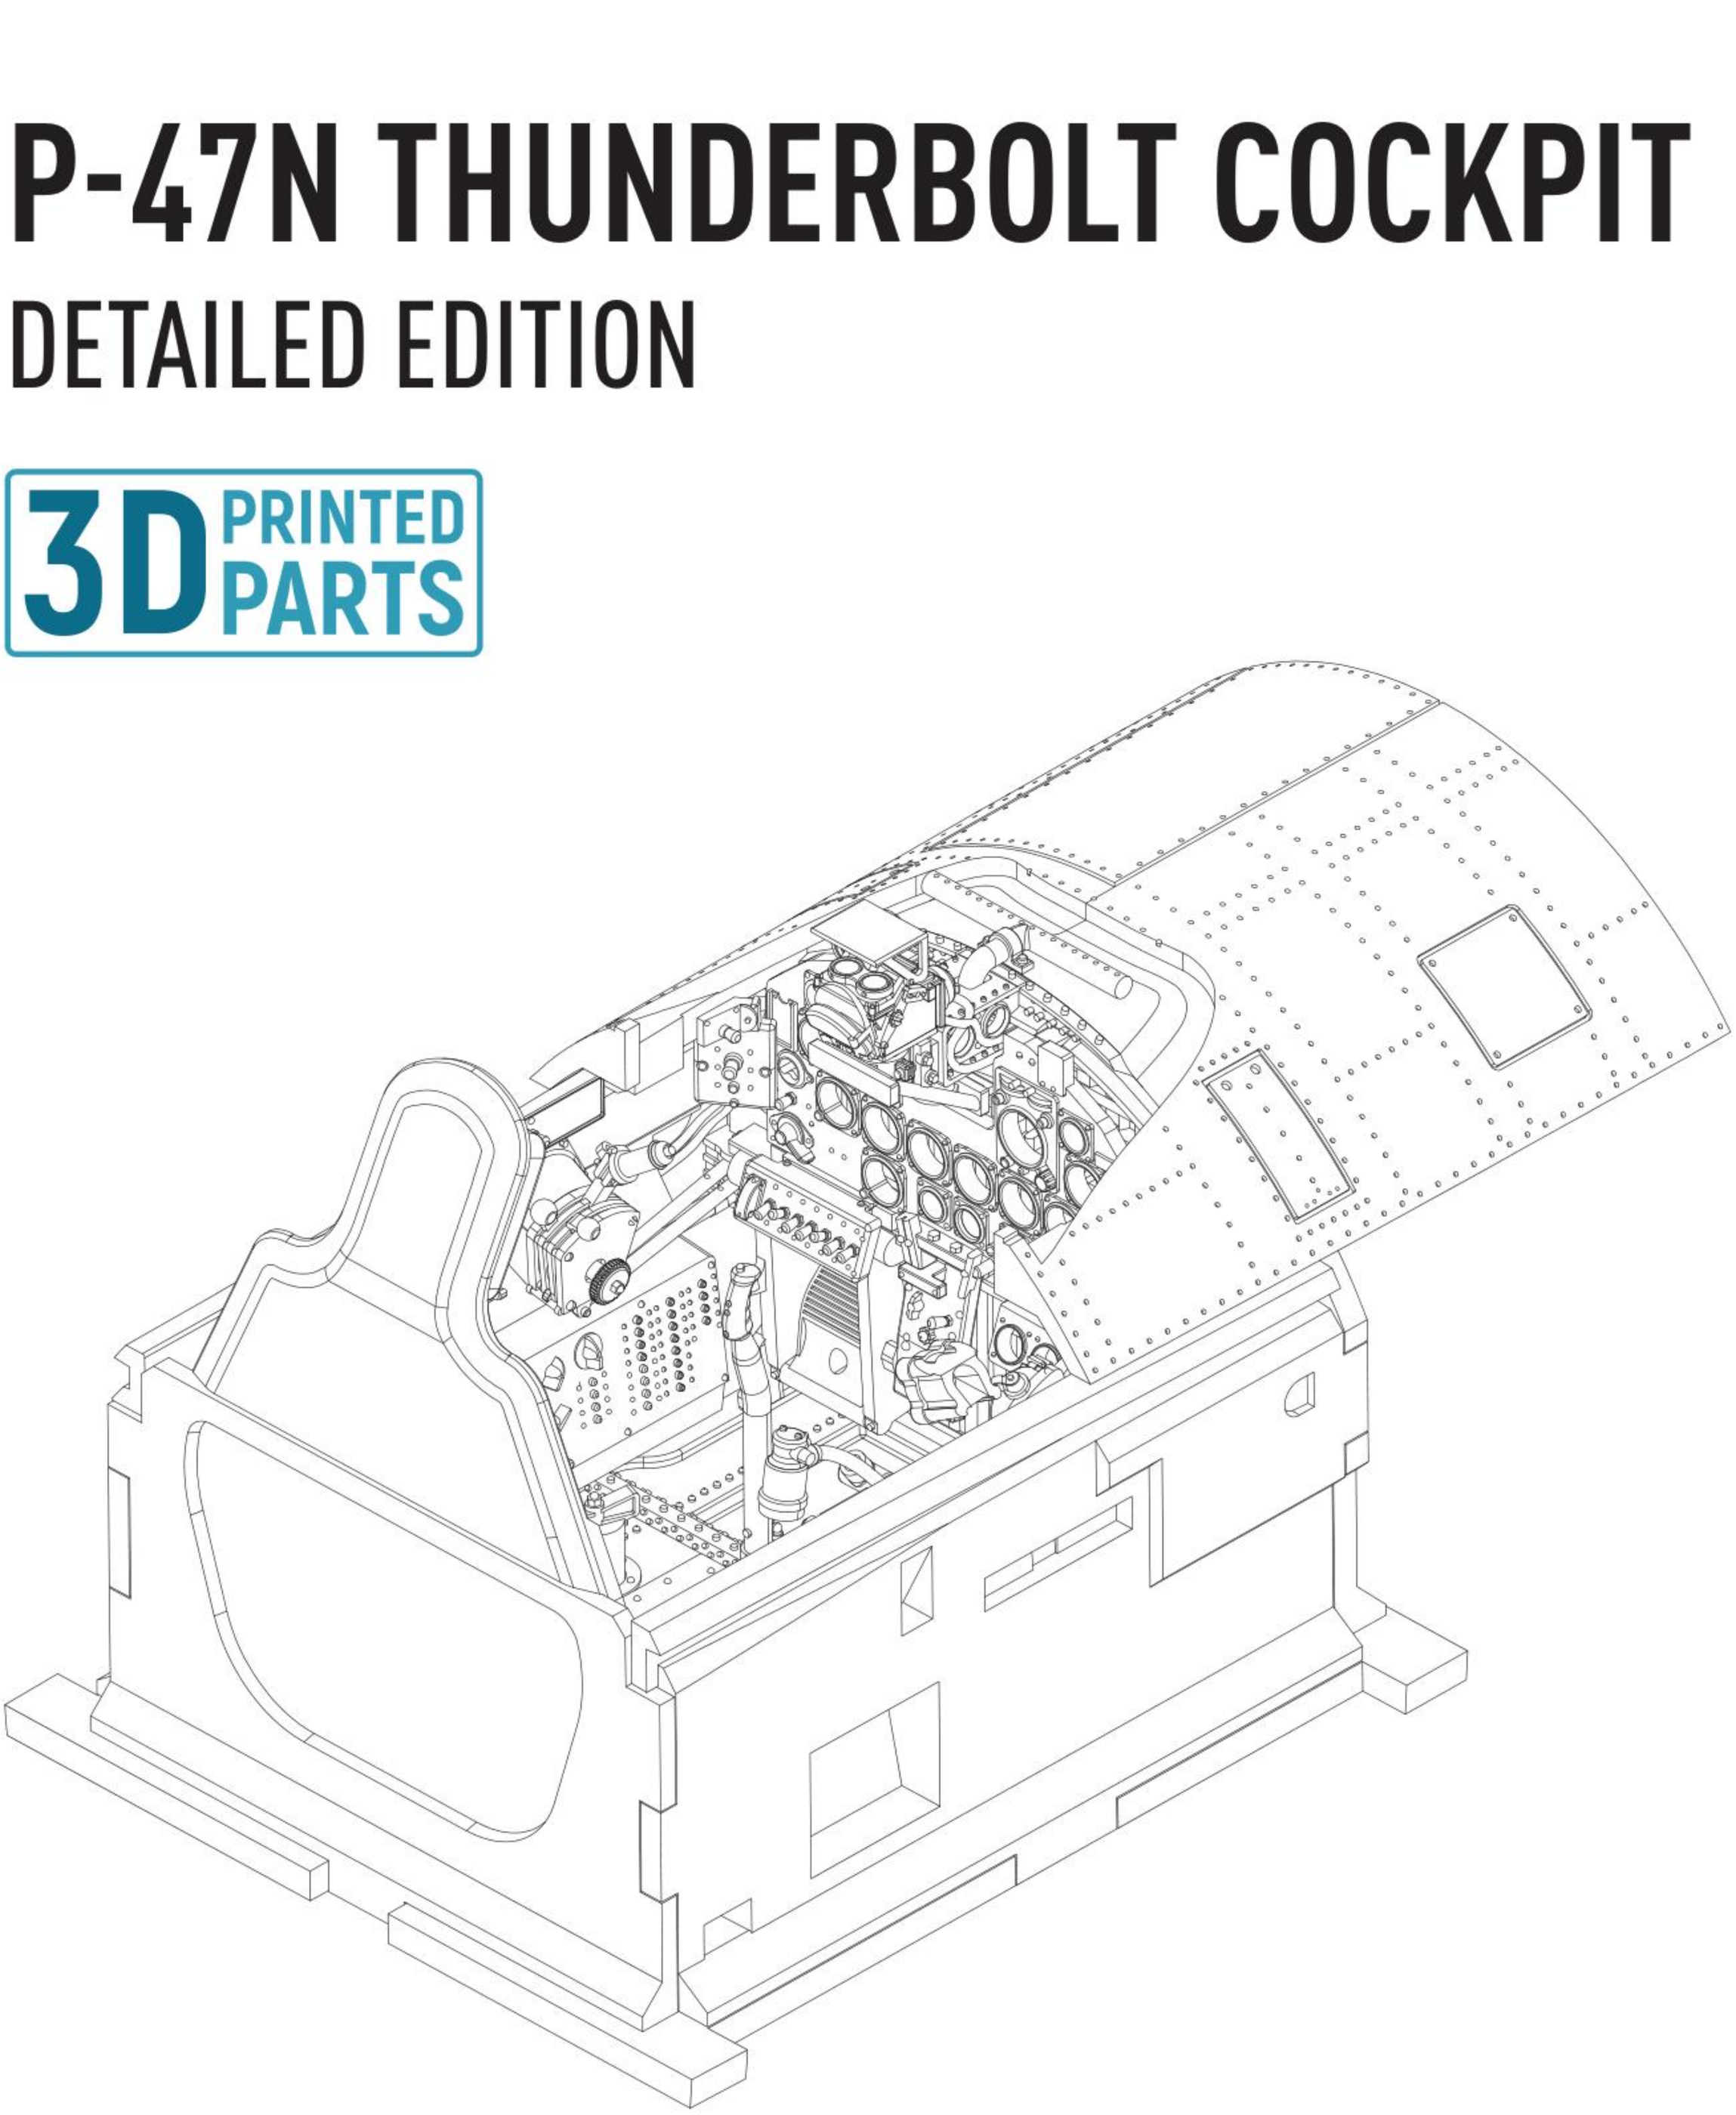

FOR MINIART KIT

USE A SAW TO REMOVE SUPPORTS
FROM **3D PRINTED PARTS**

DETAILS AFTER REMOVAL FROM SUPPORTS

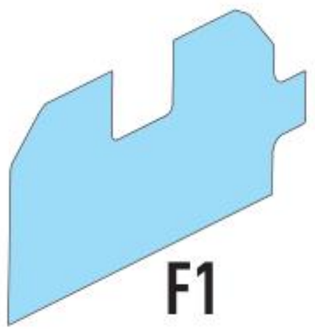
F1

F2

F3

P1

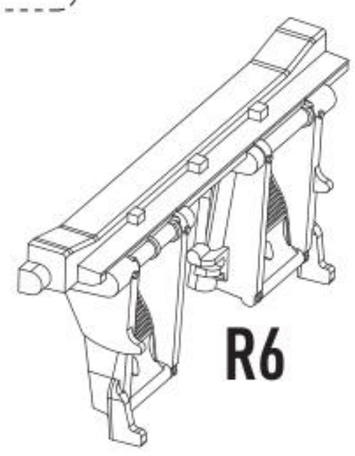
R6

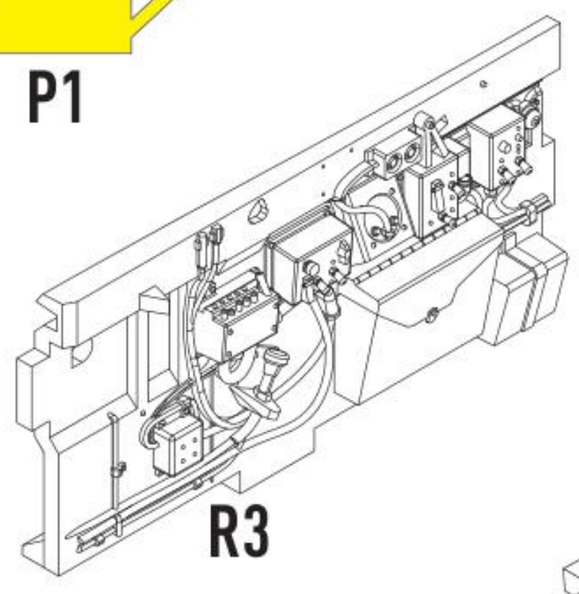
R3

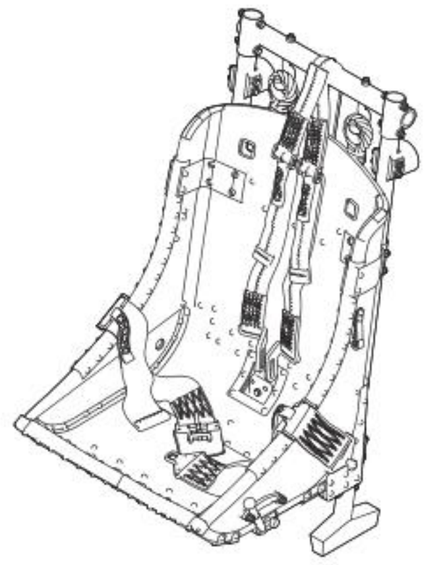
R8

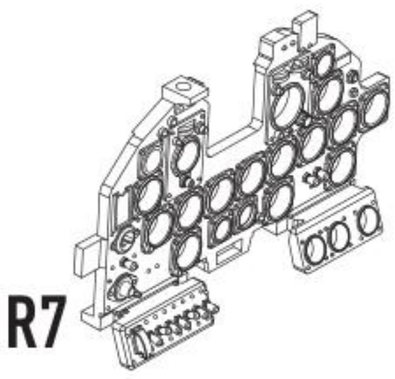
R7

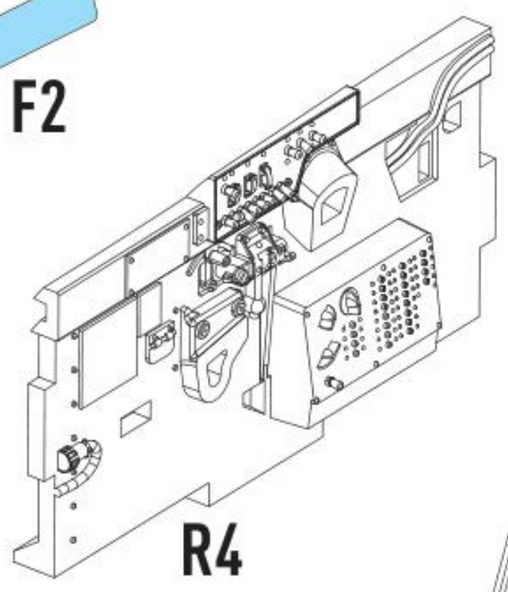
R4

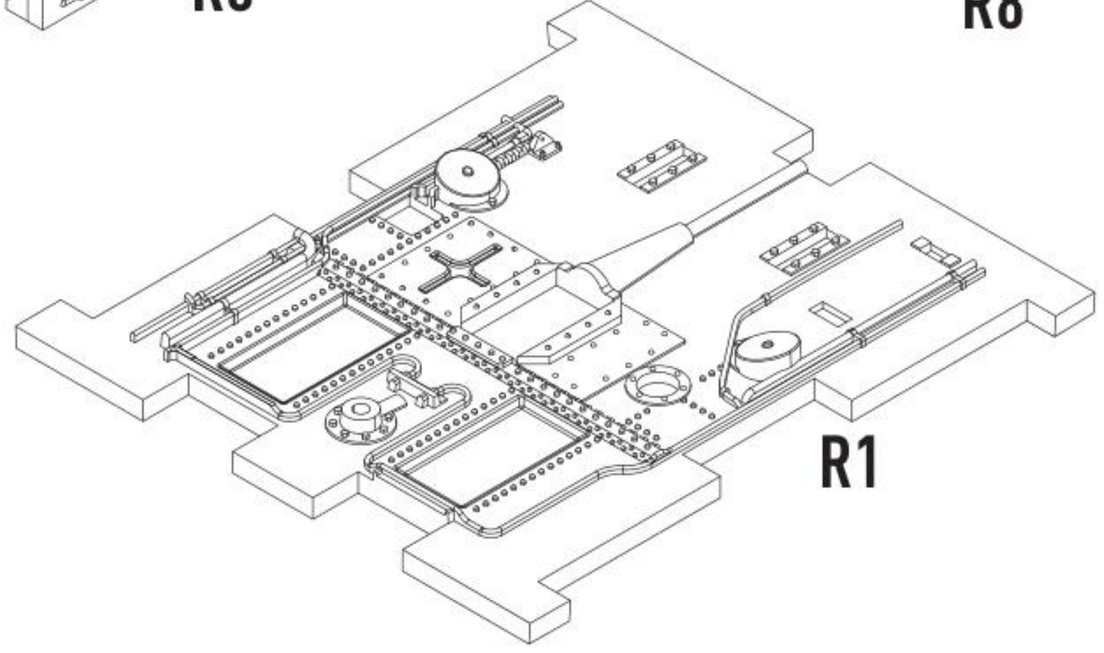
R1

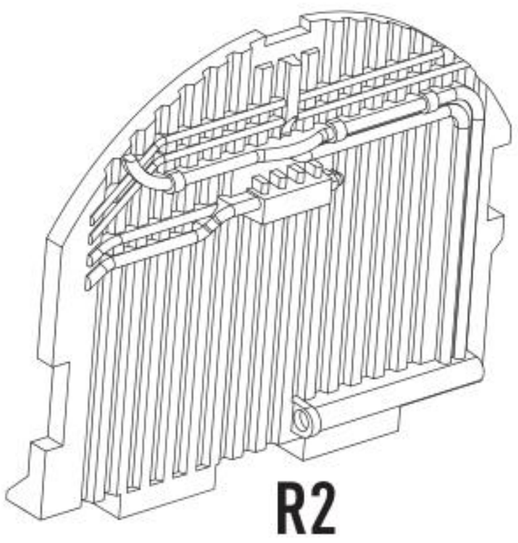
R2

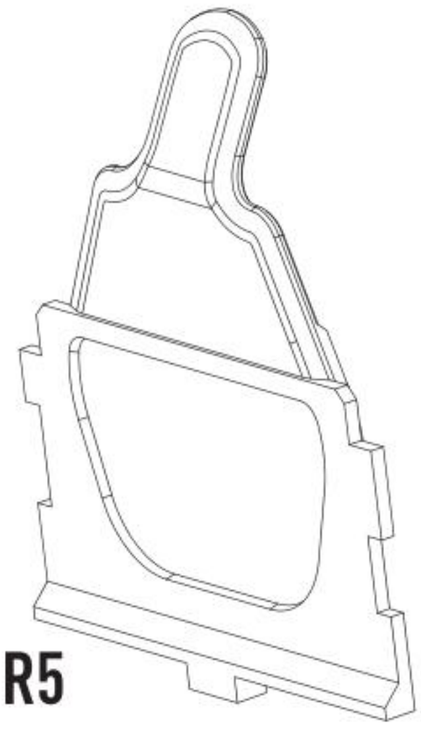
R5

R9

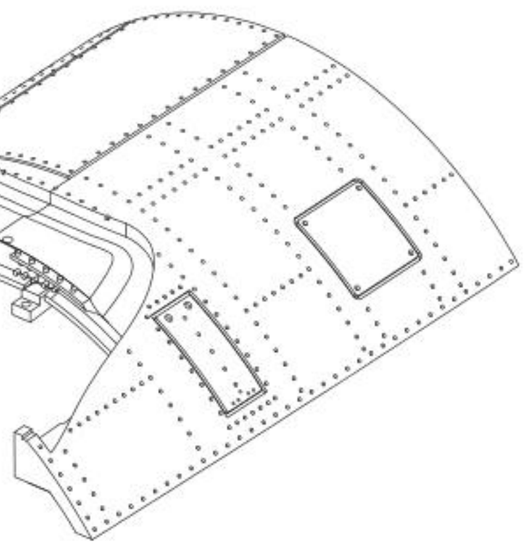

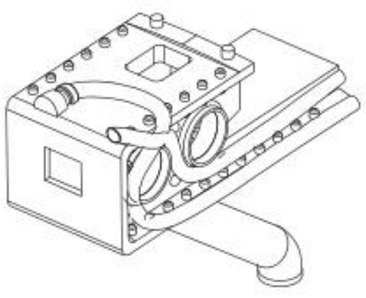
R30

R27

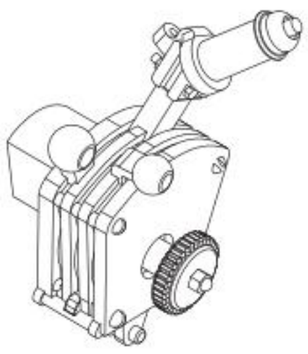
R21

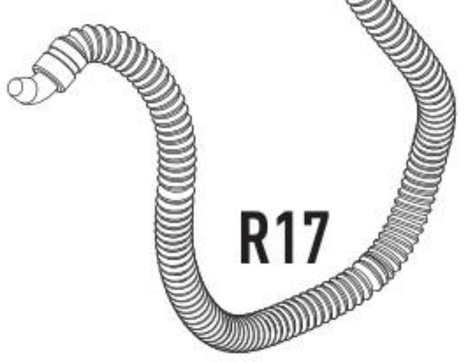
R17

R20

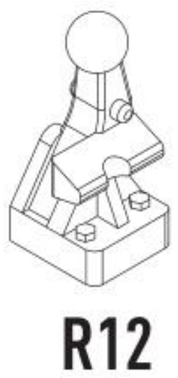
R12

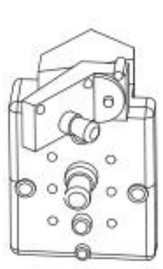
R28

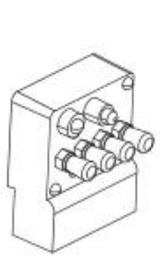
R15

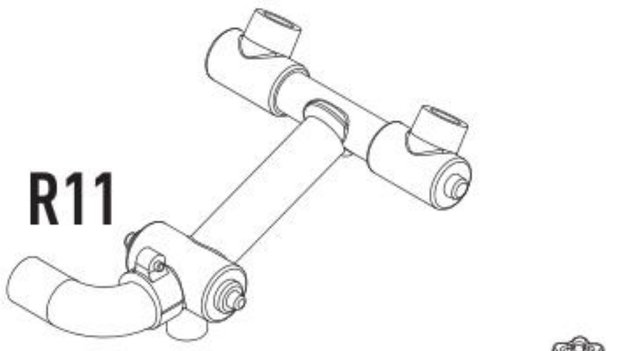
R11

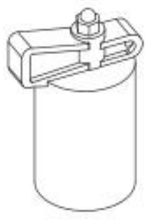
R13

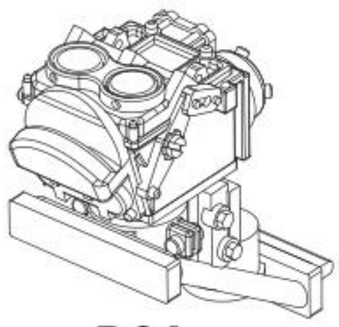
R31

R25

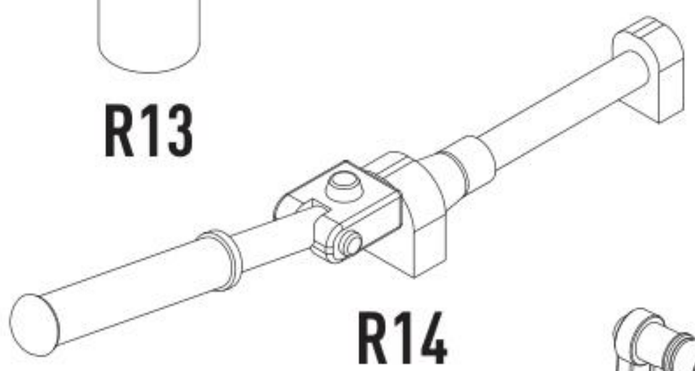
R14

R19

R26

R23

R24

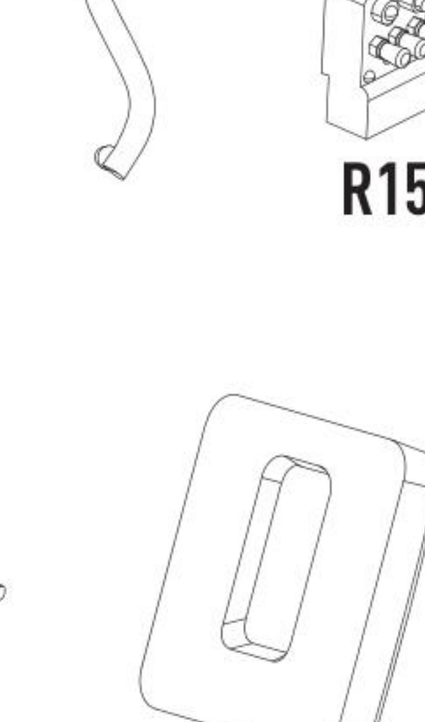
R29

R18

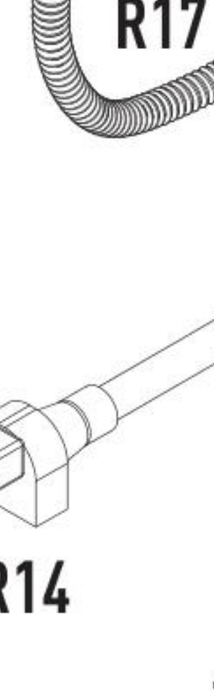
R22

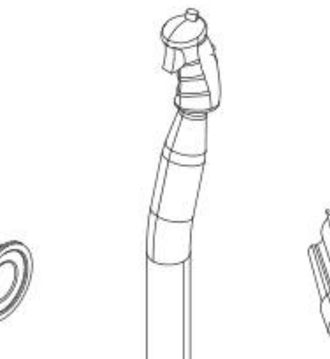
R10

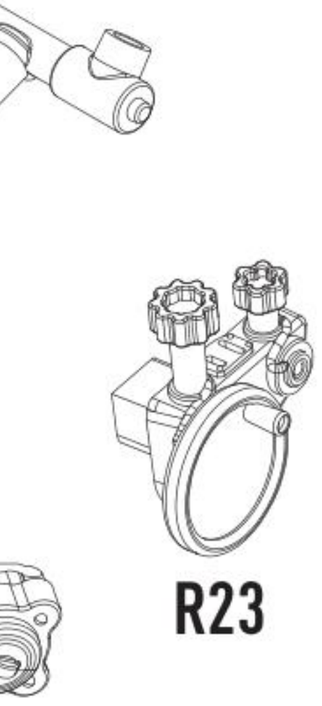
R16

1

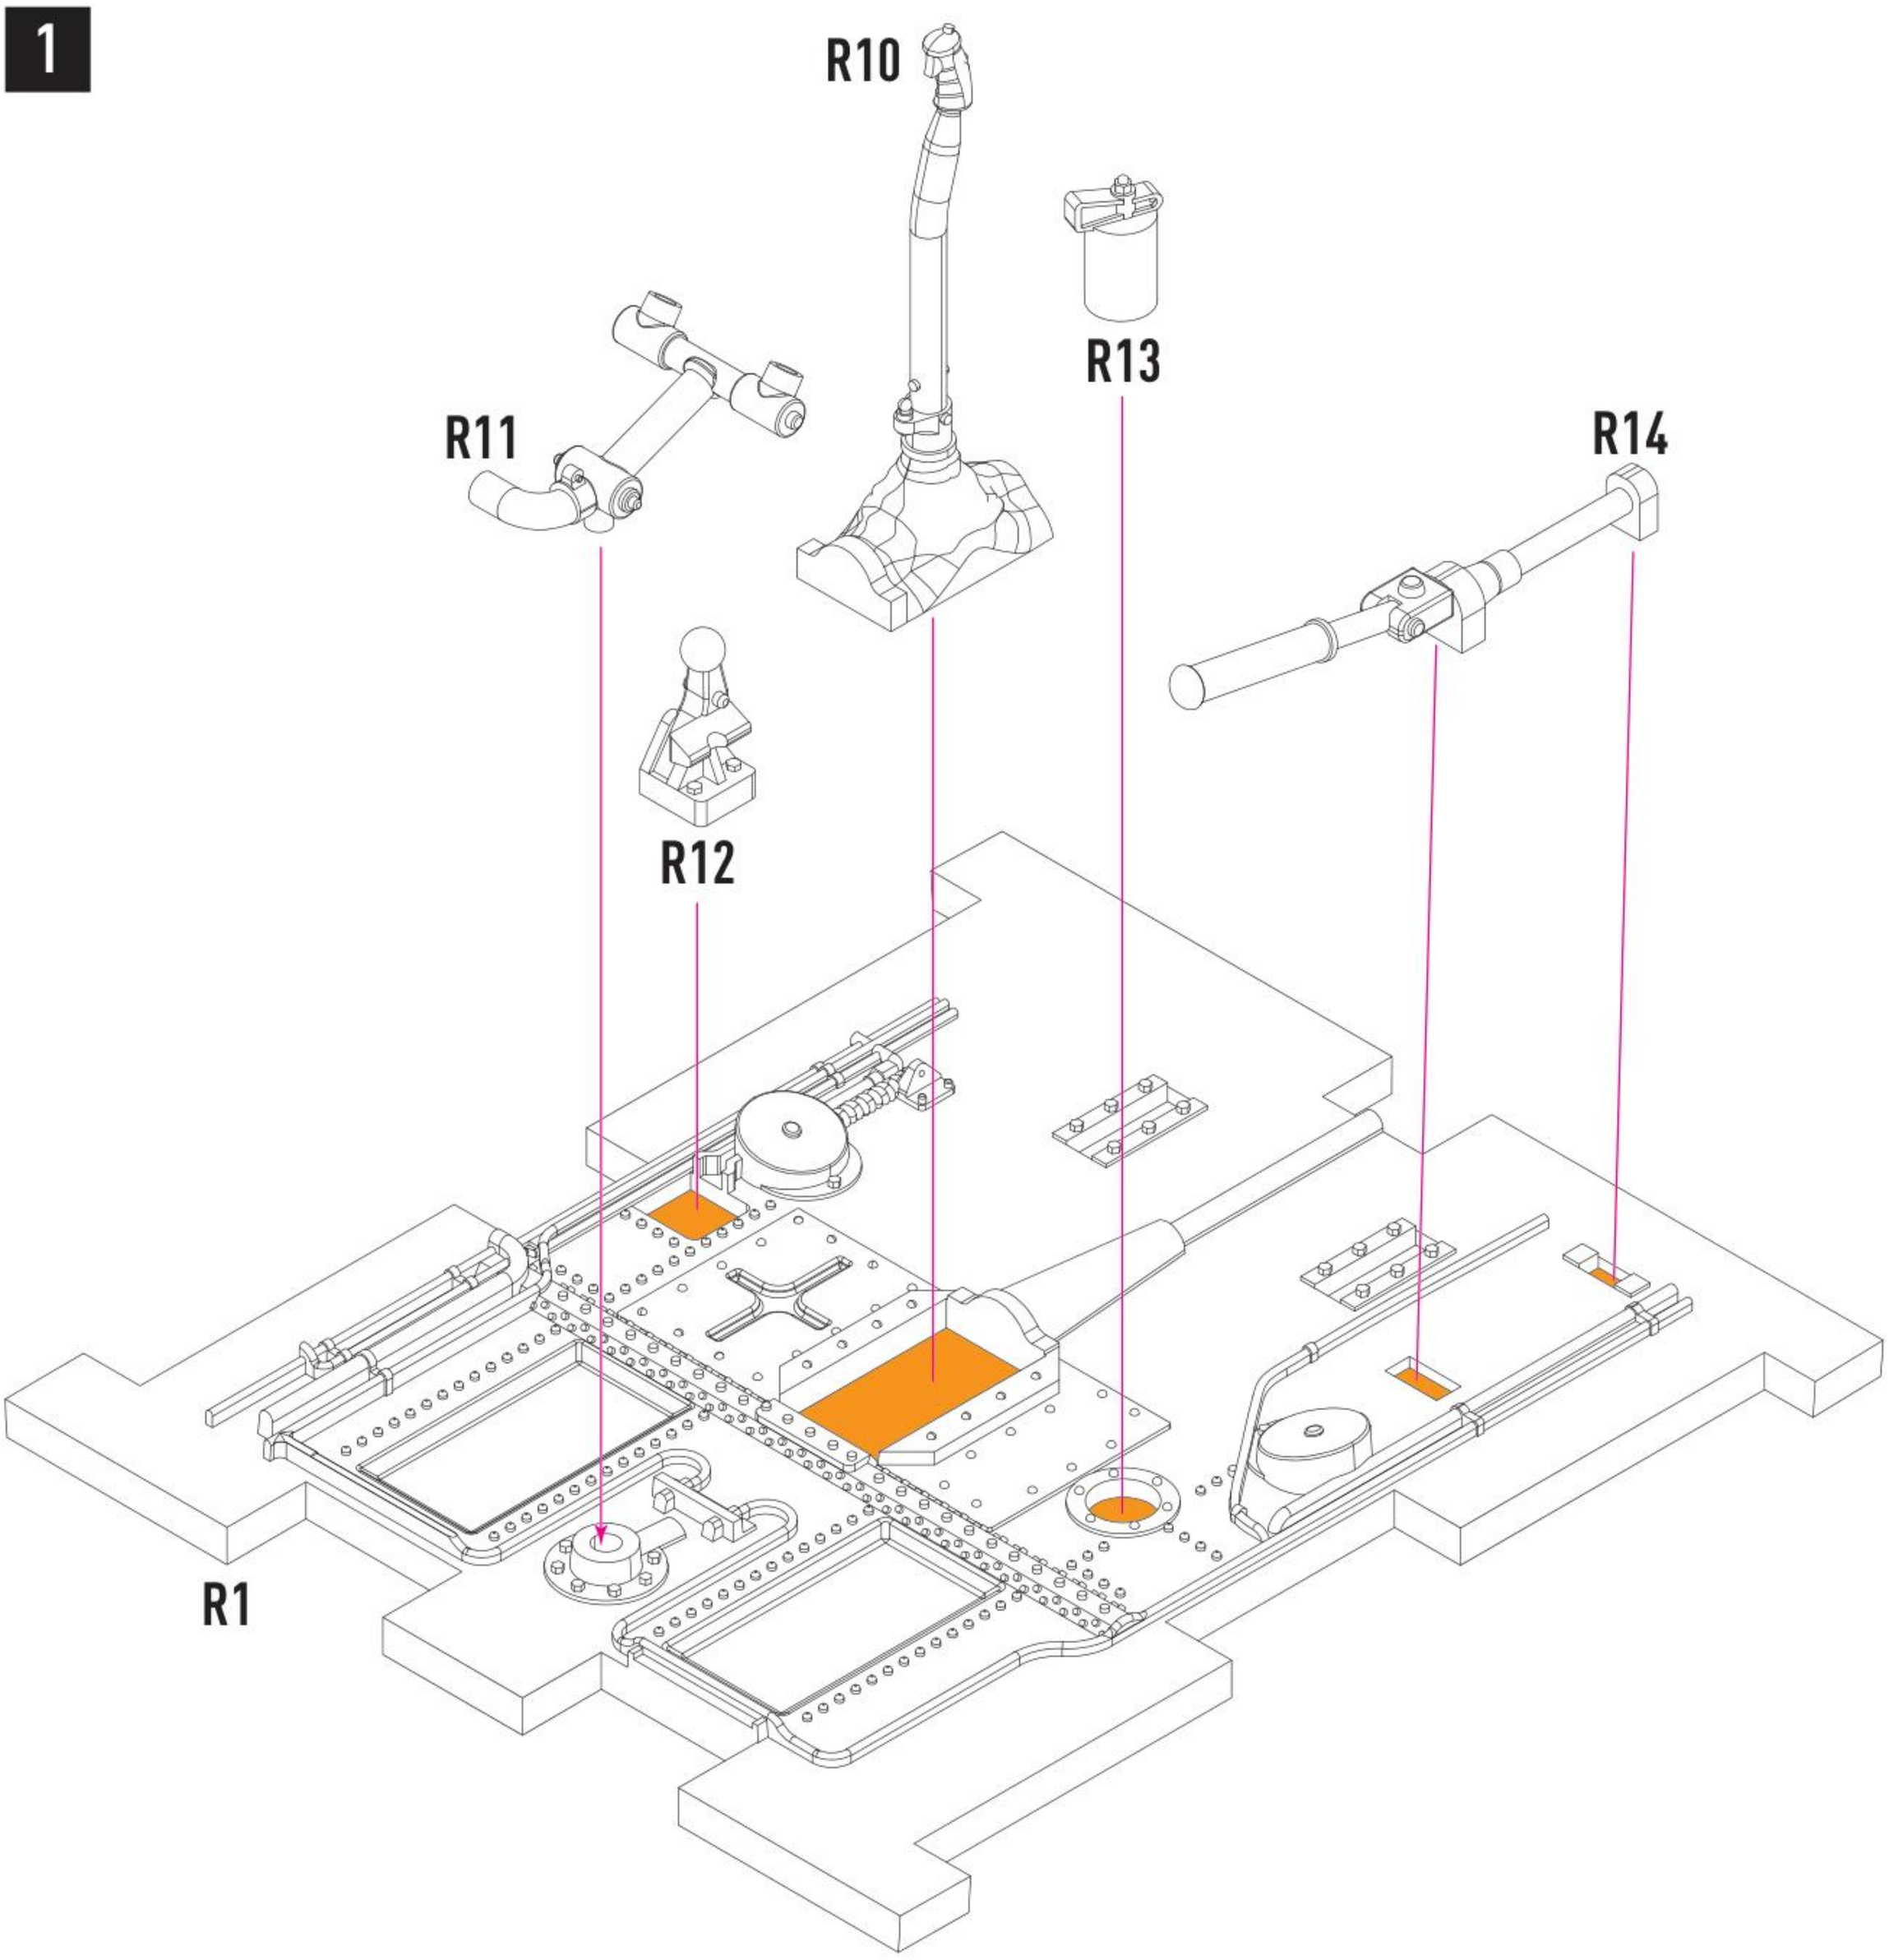

2

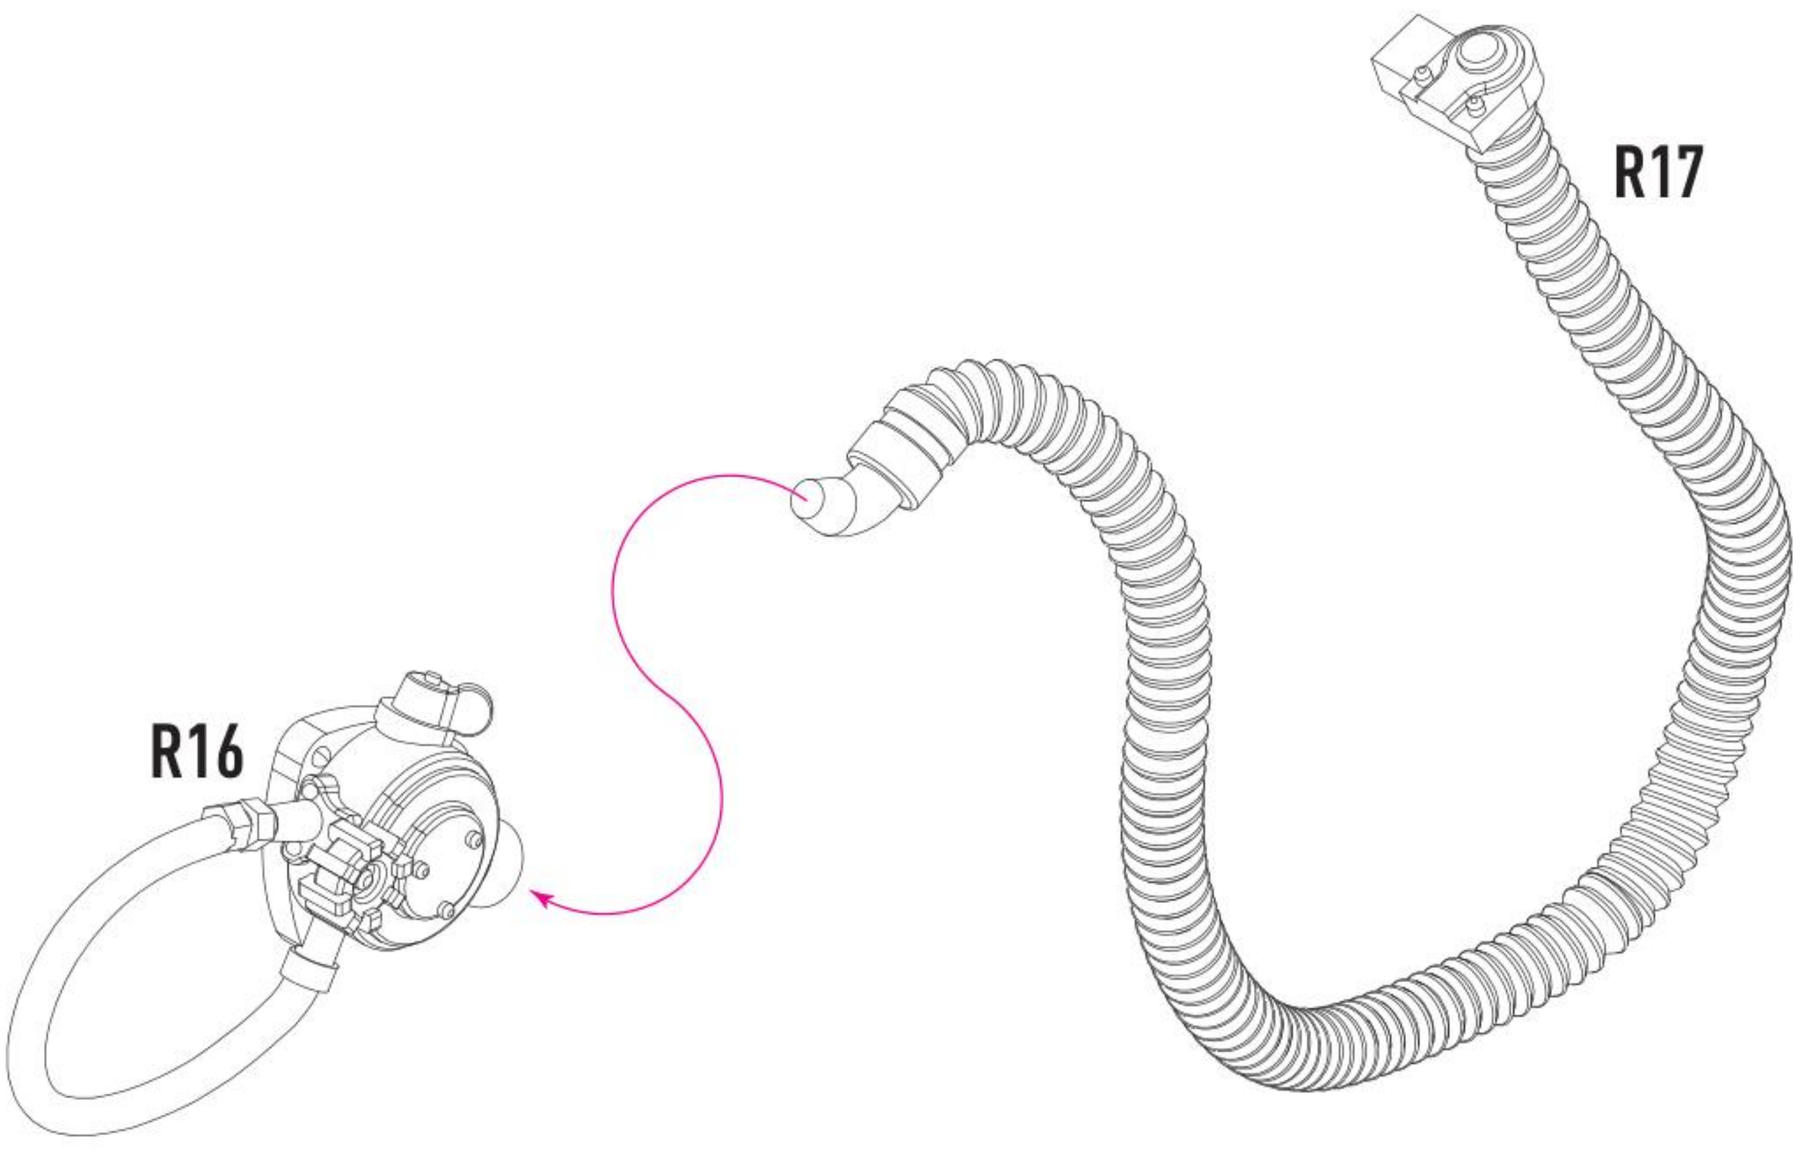

3

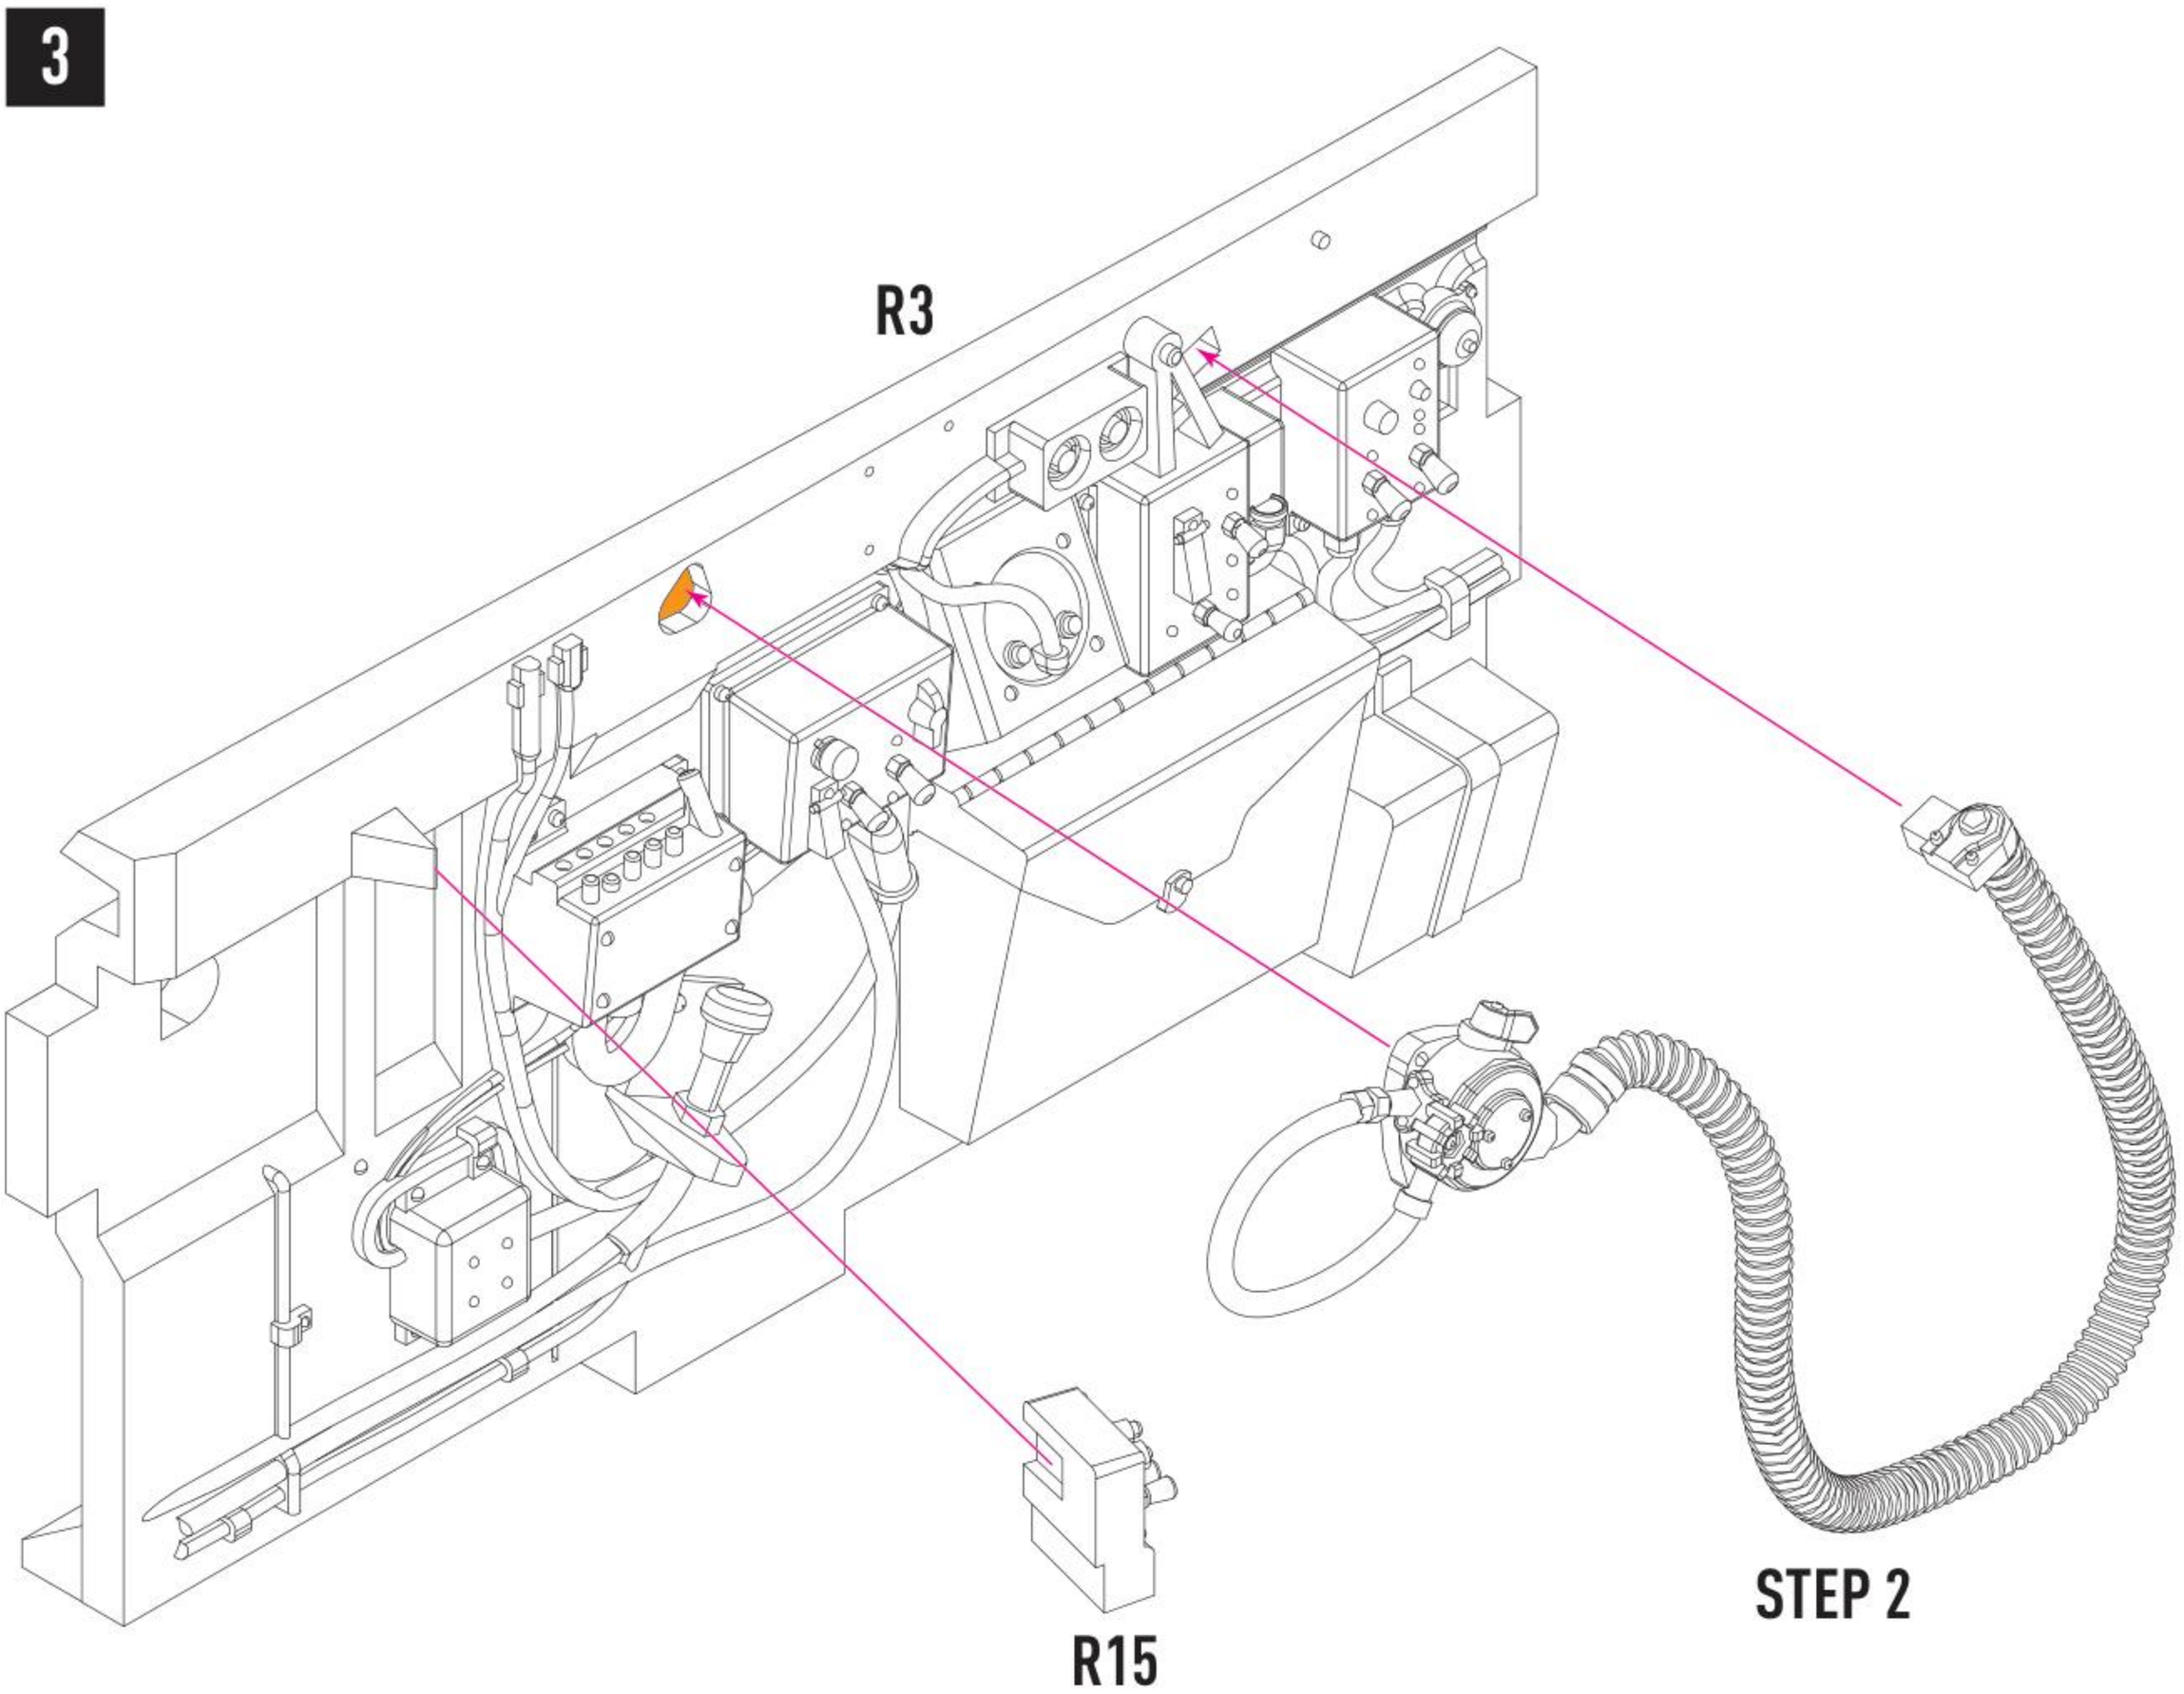

4

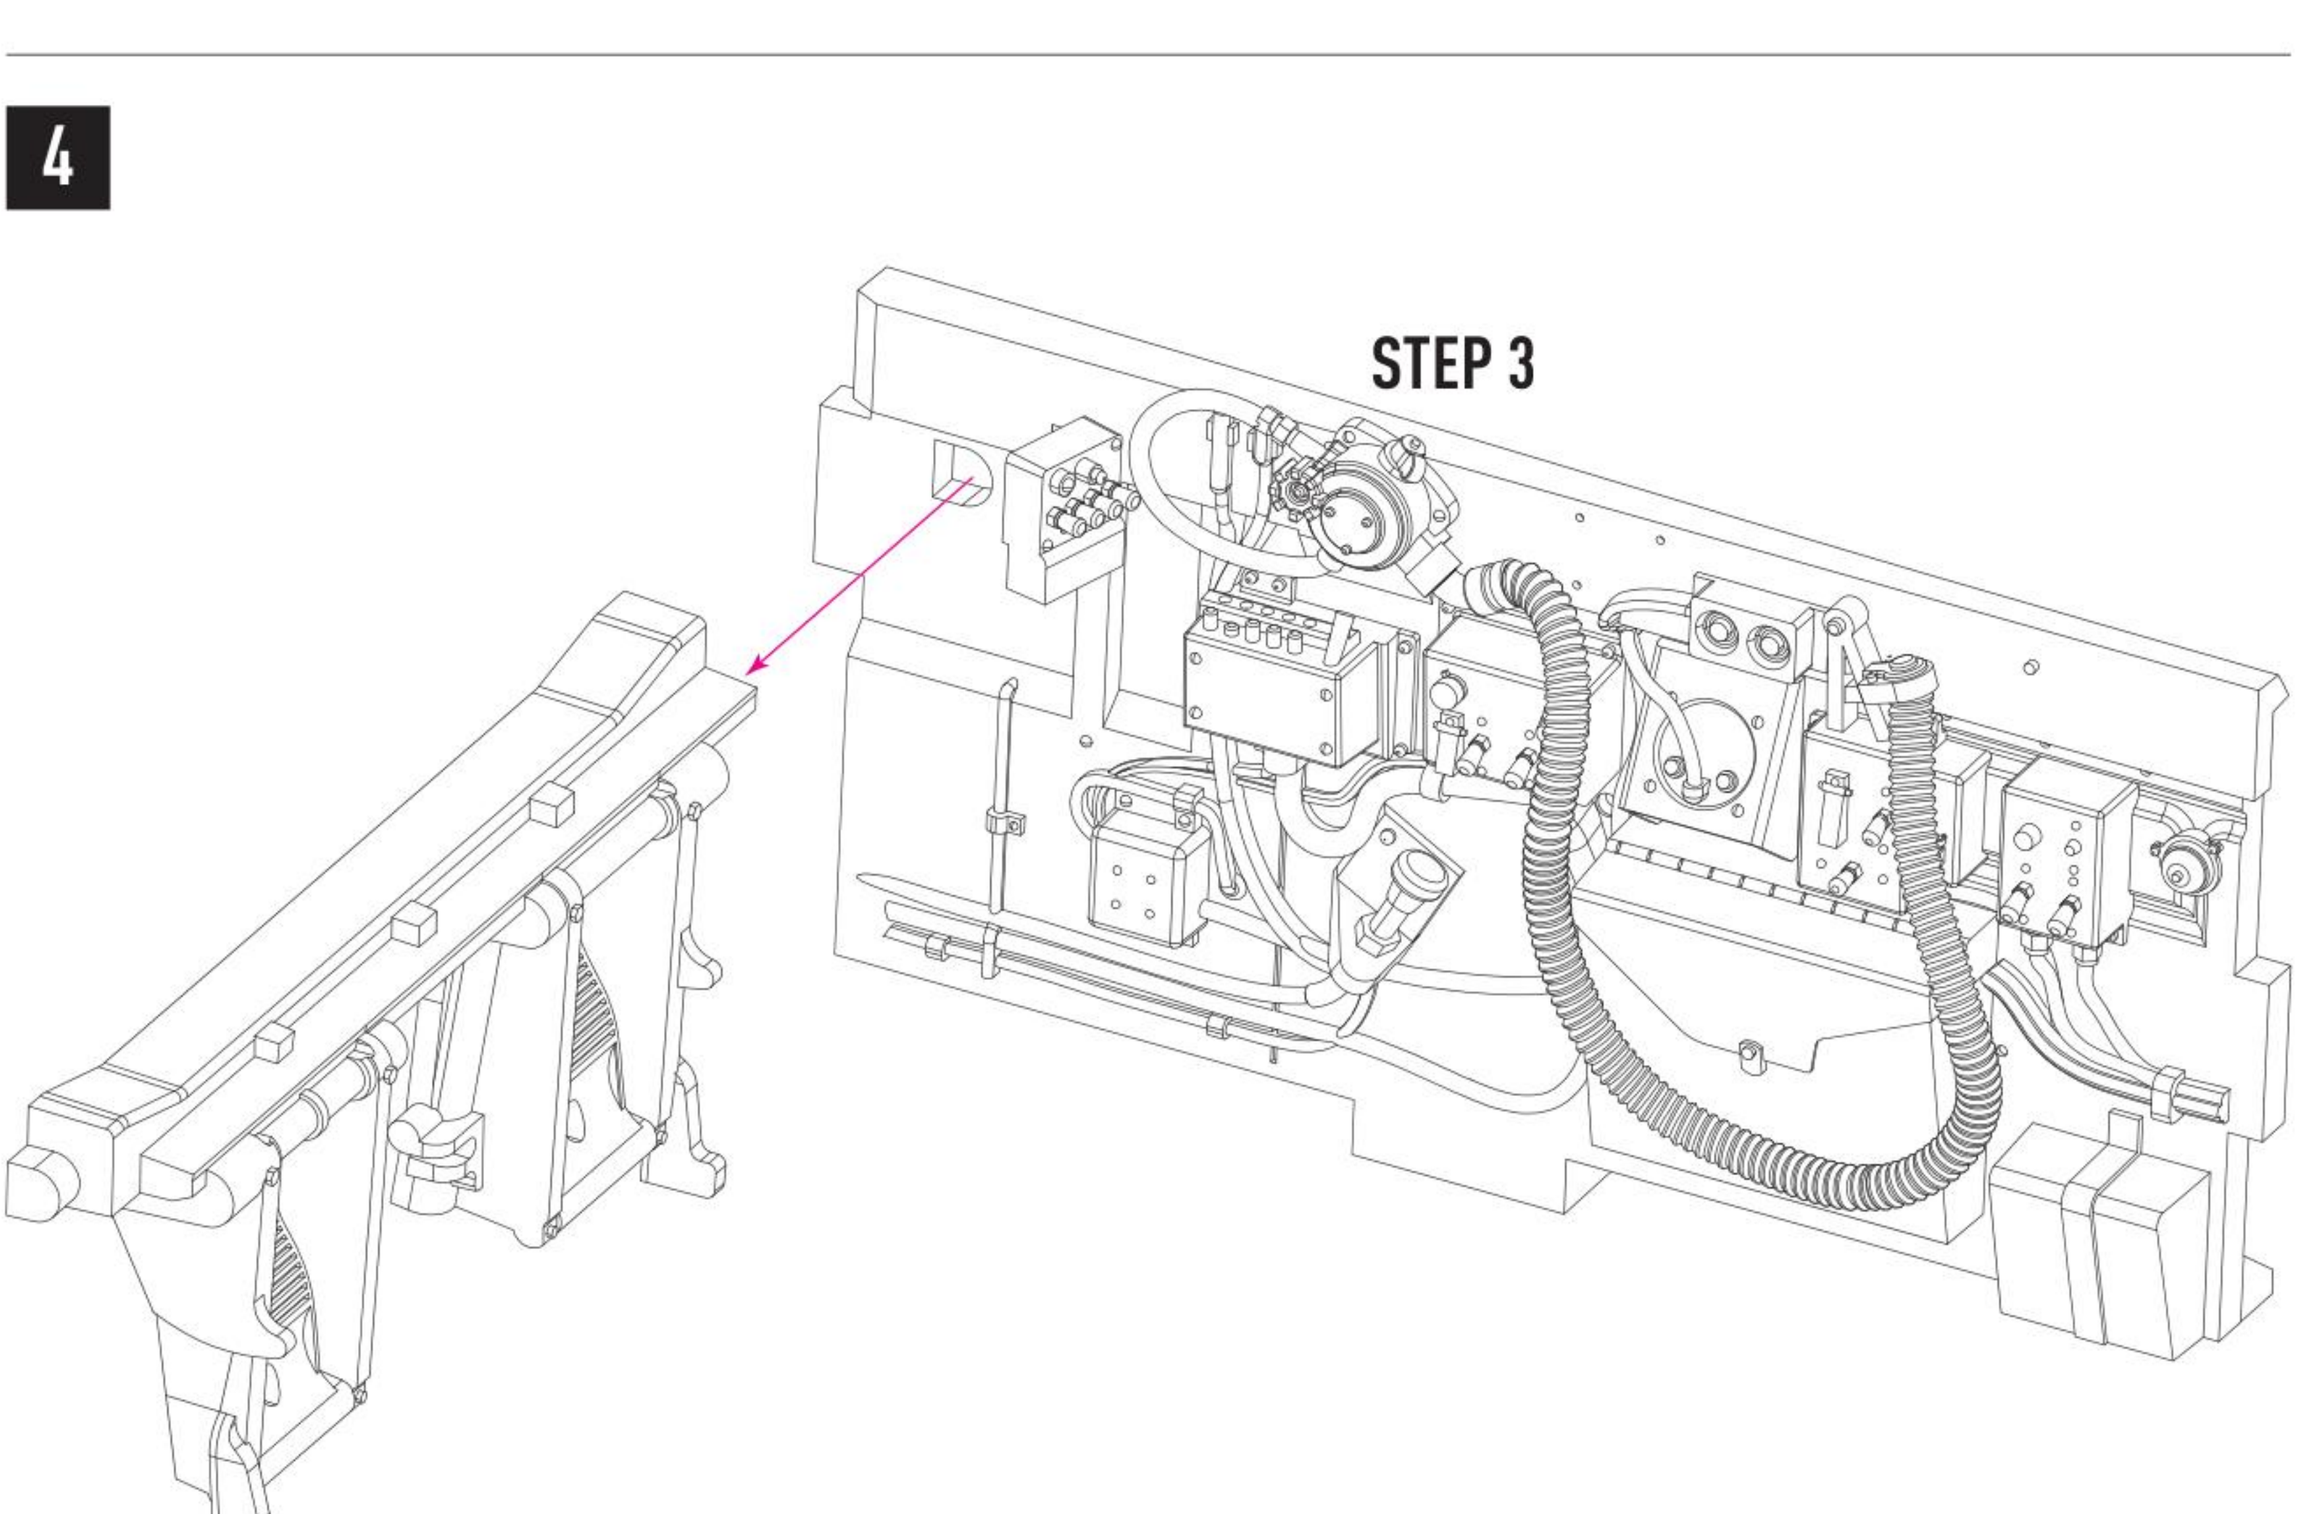

5

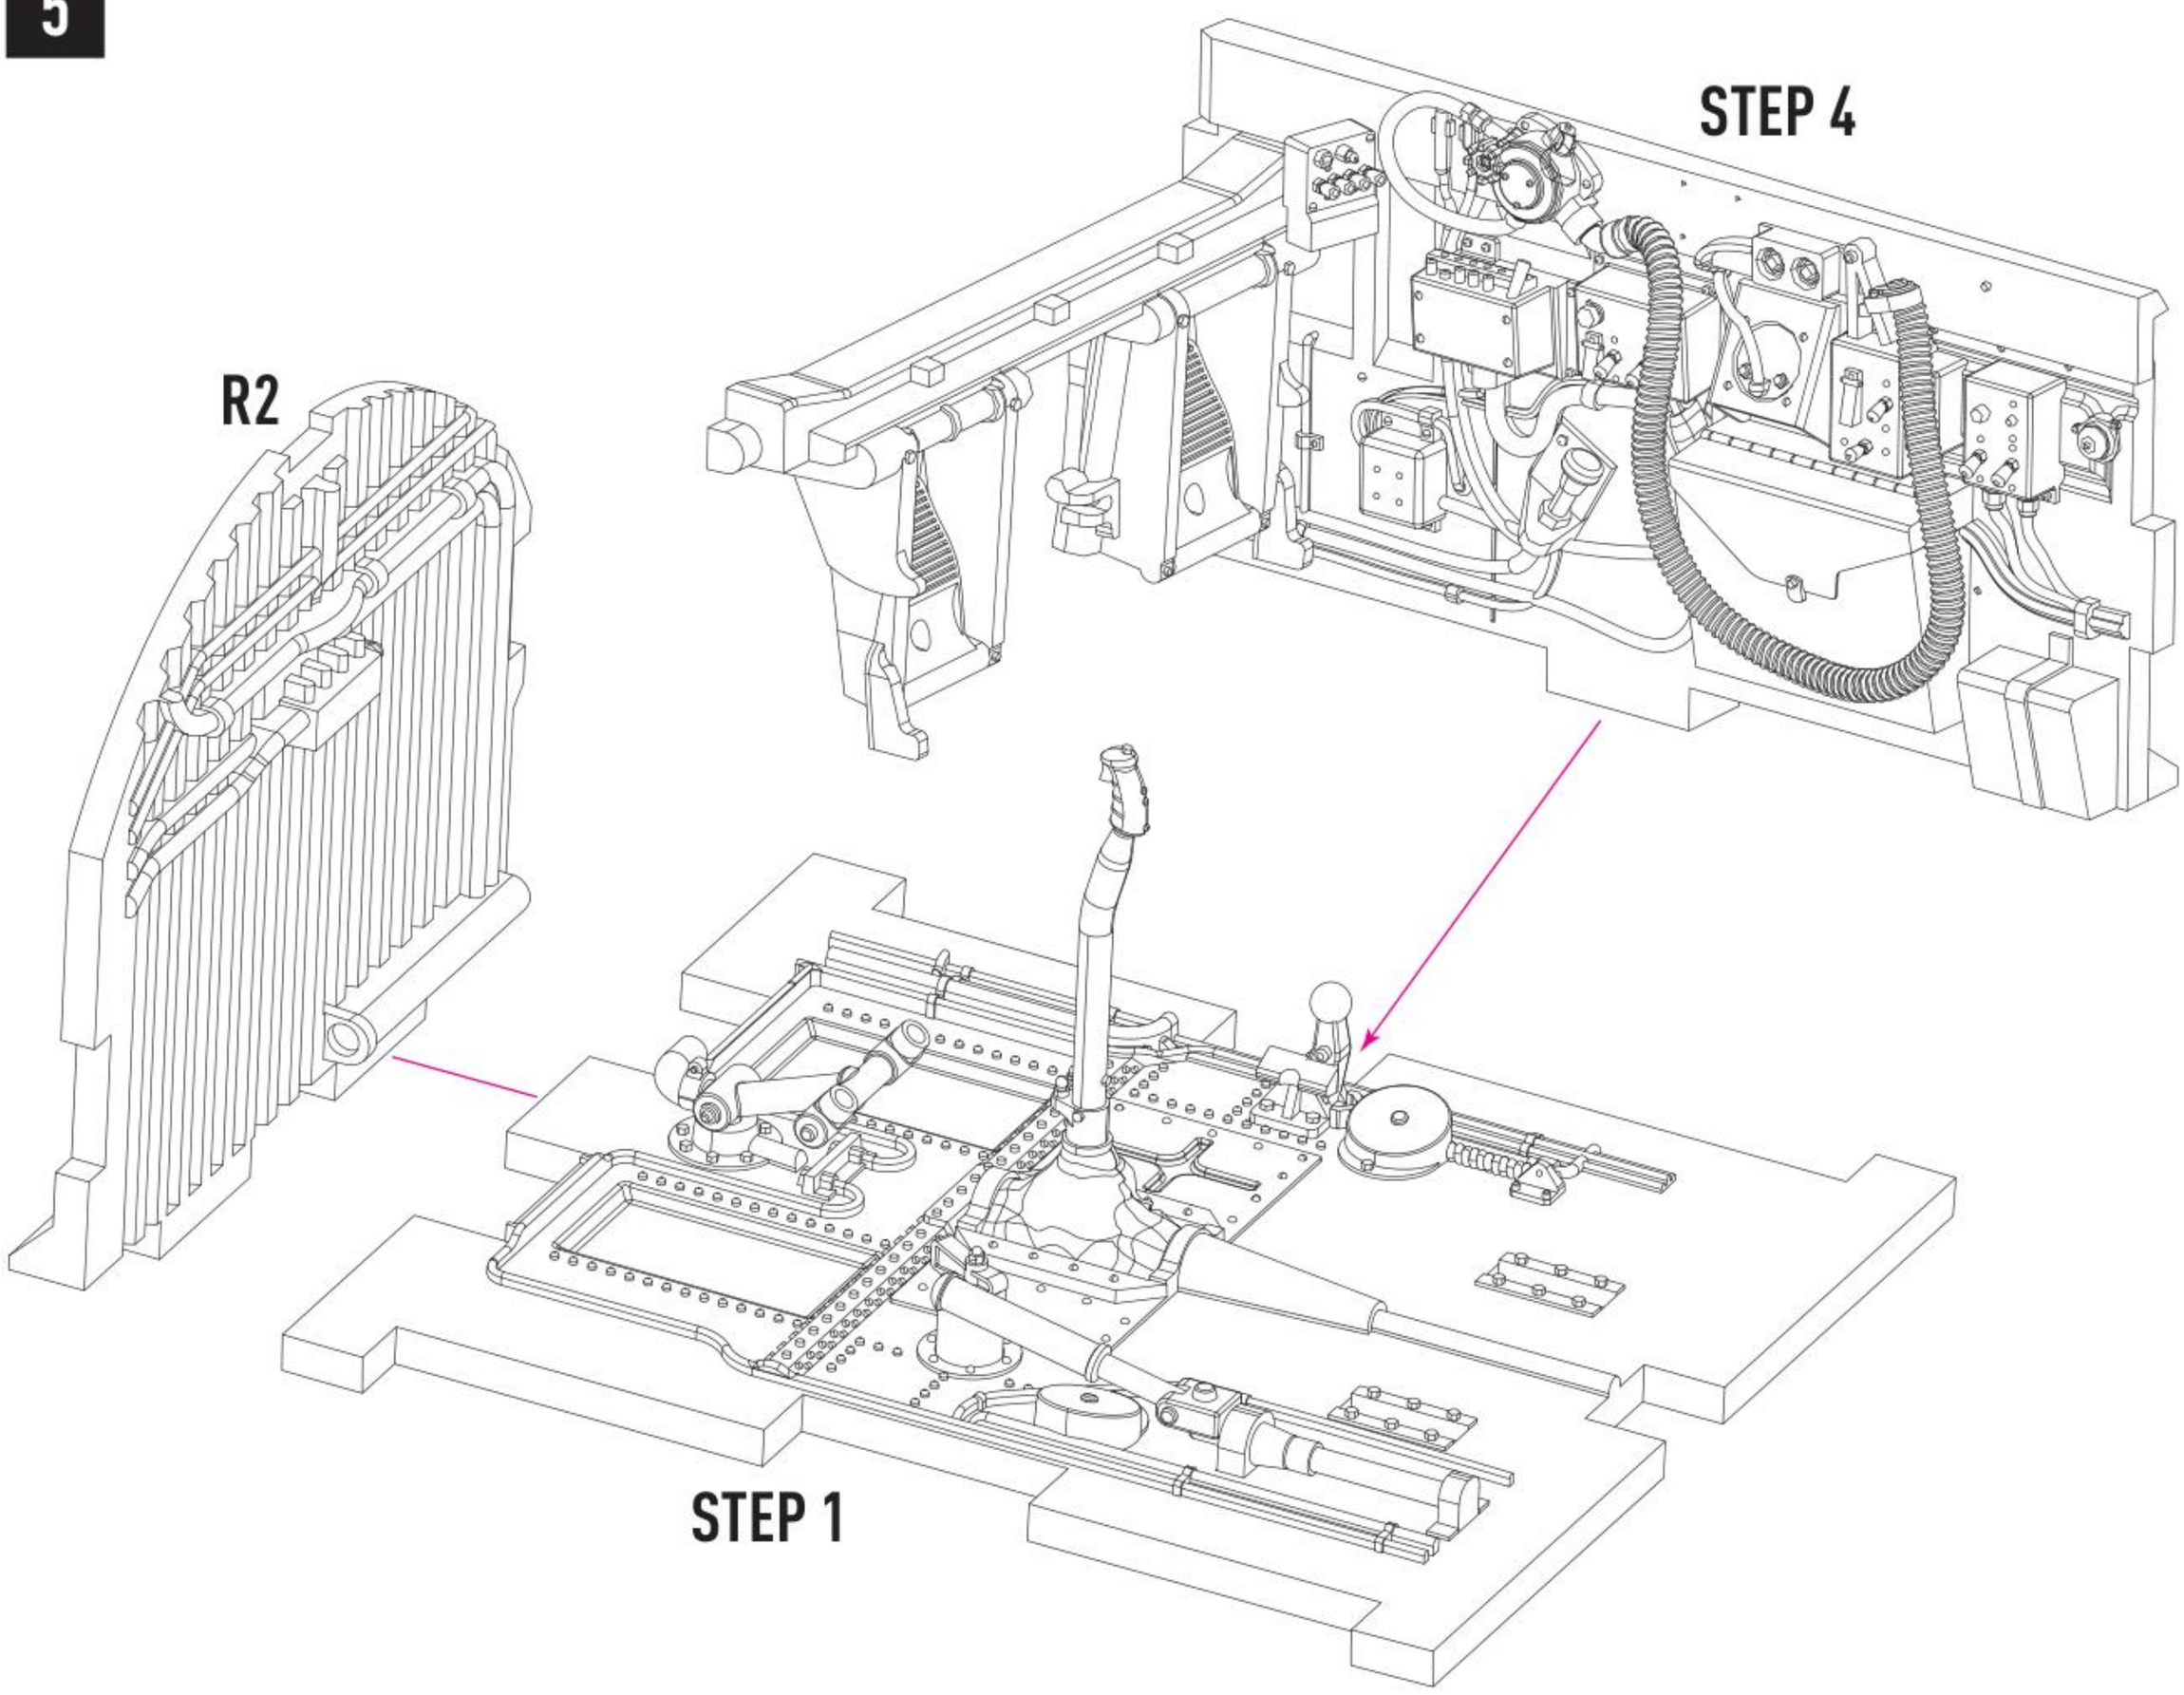

6 BEFORE STICKING THE FILM F1 AND F2, PAINT THE REVERSE SIDE WITH WHITE PAINT

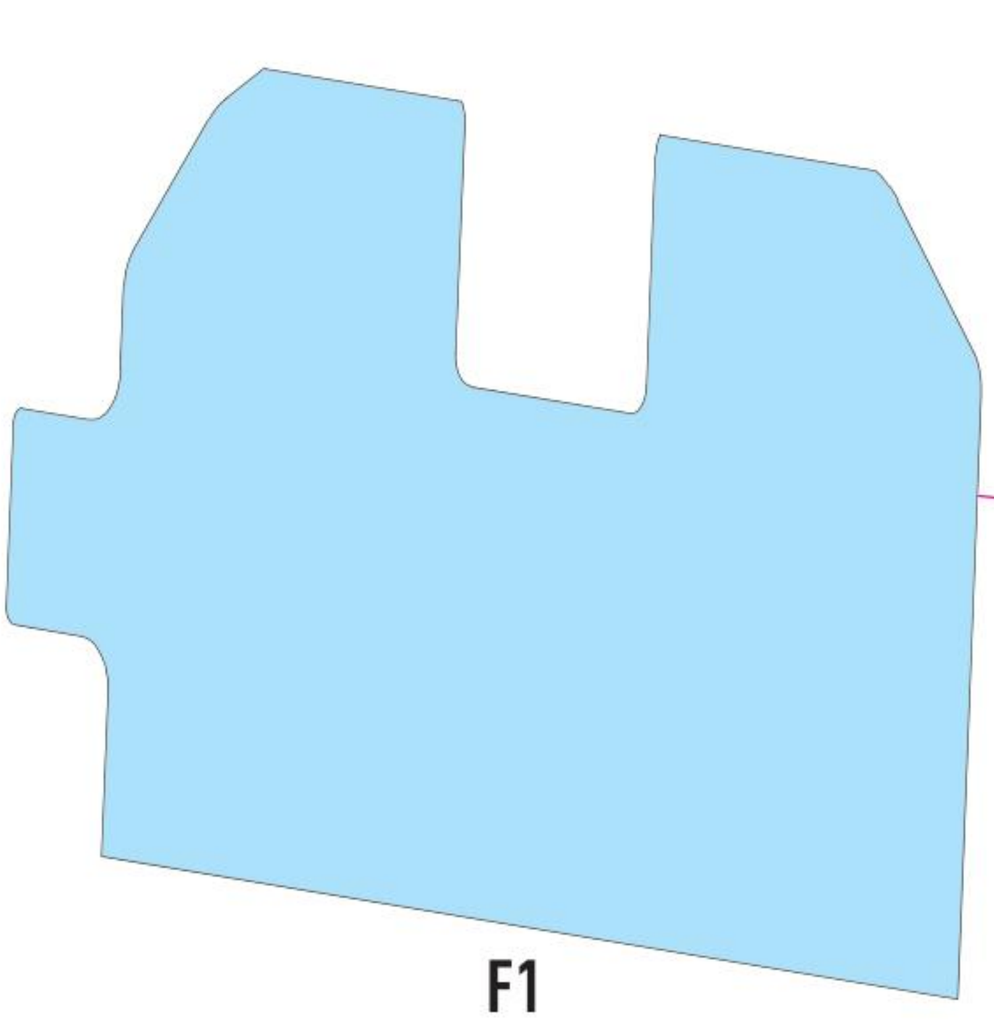

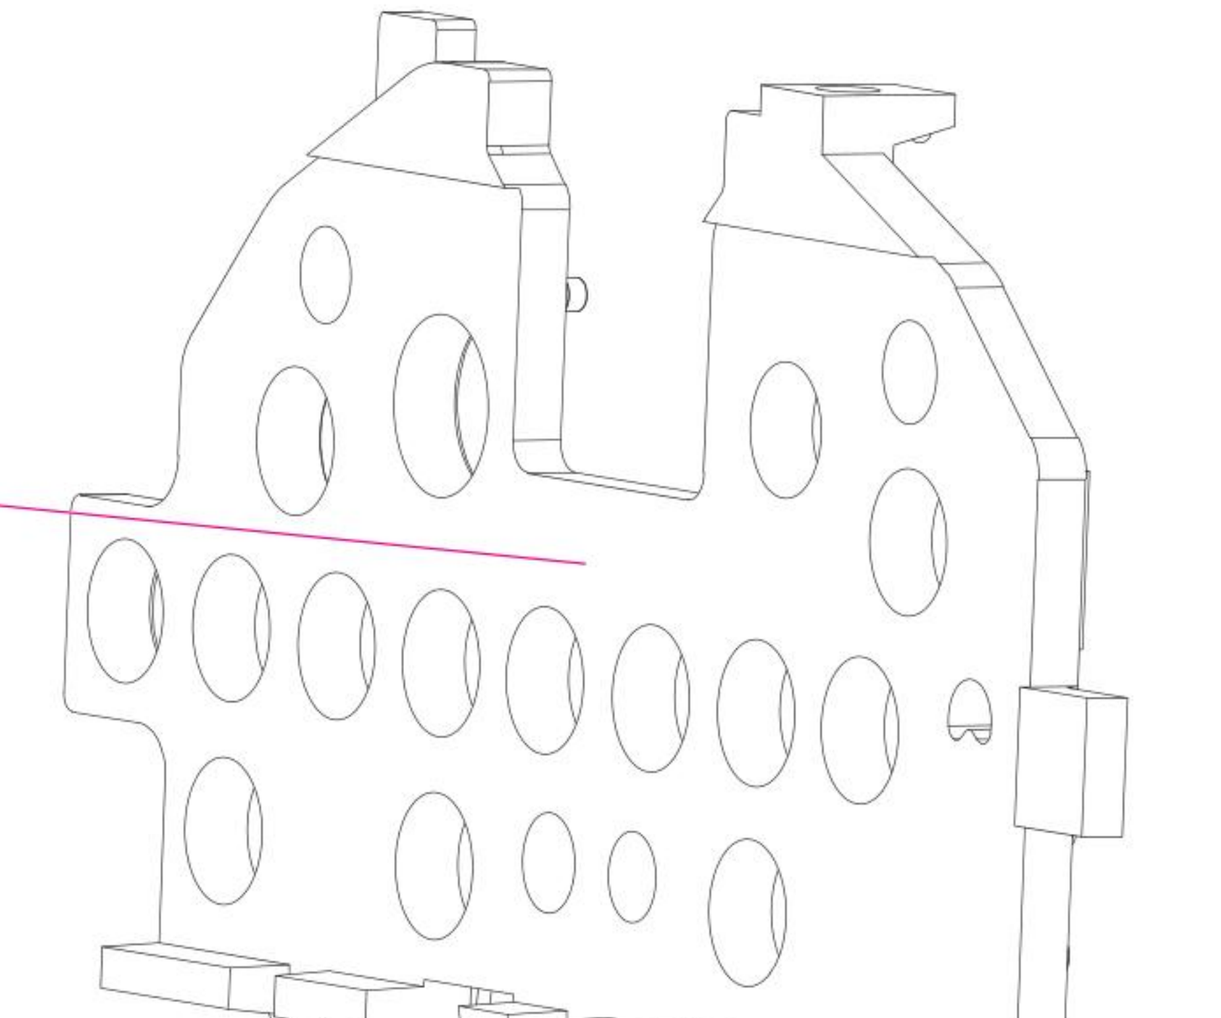

7

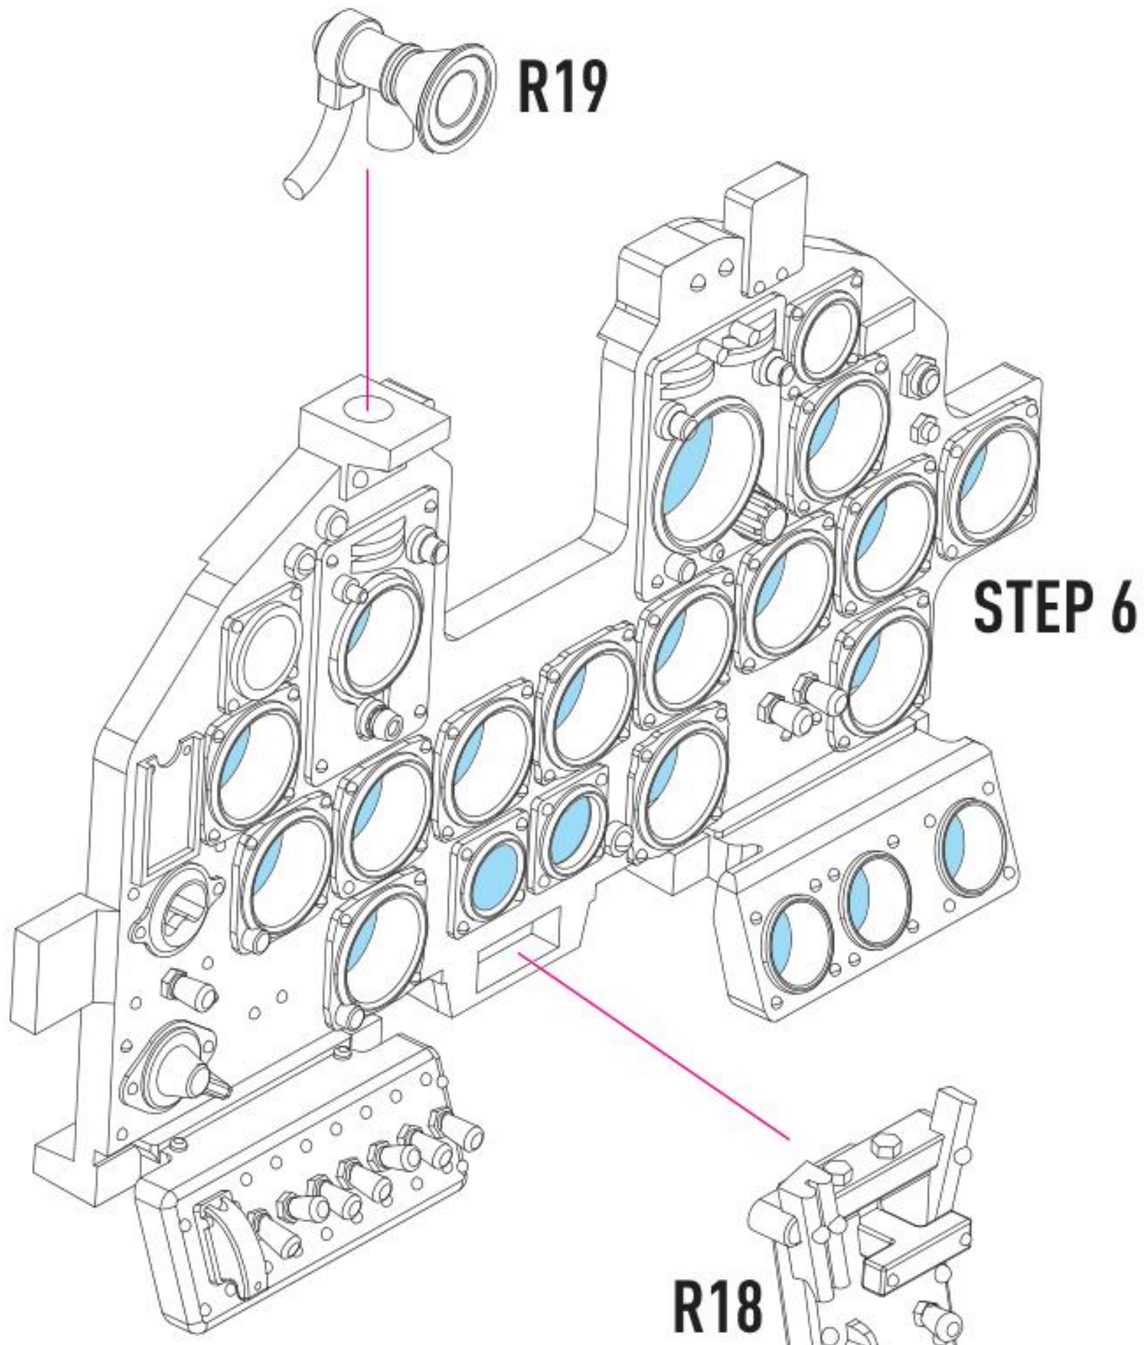

8

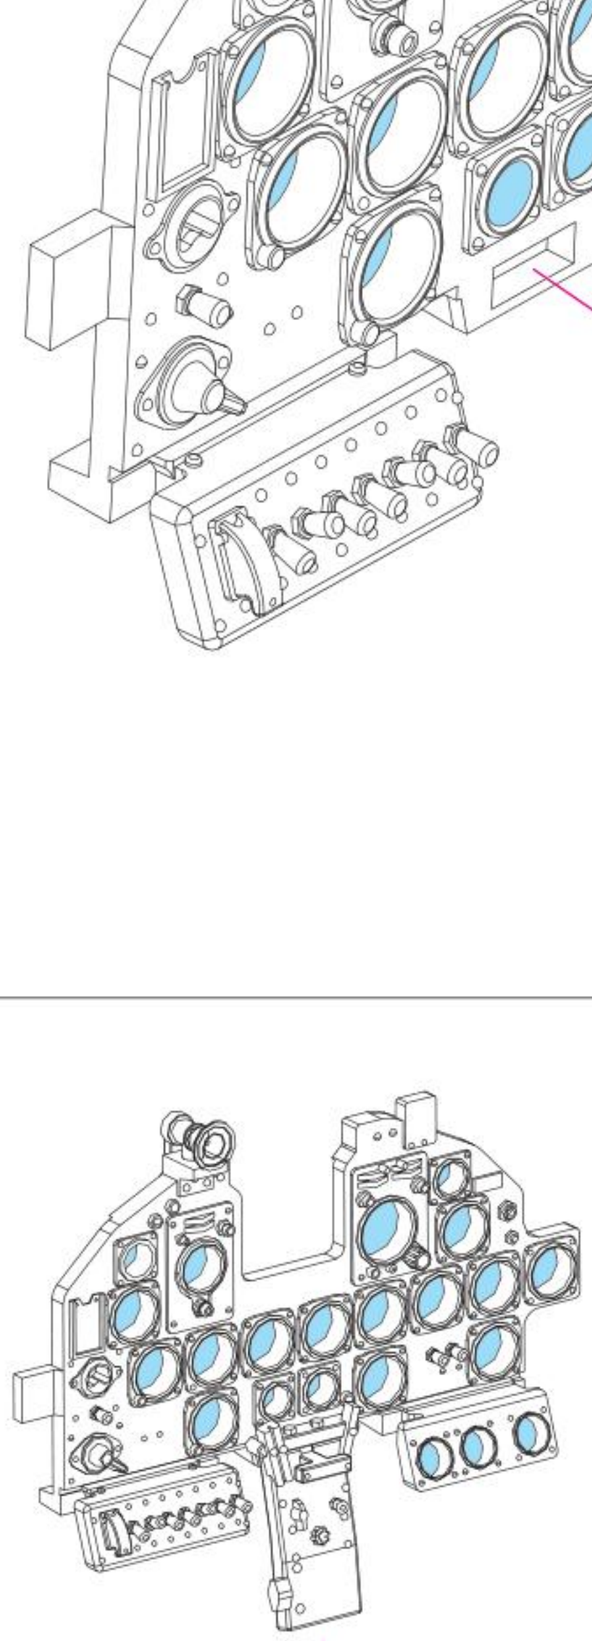

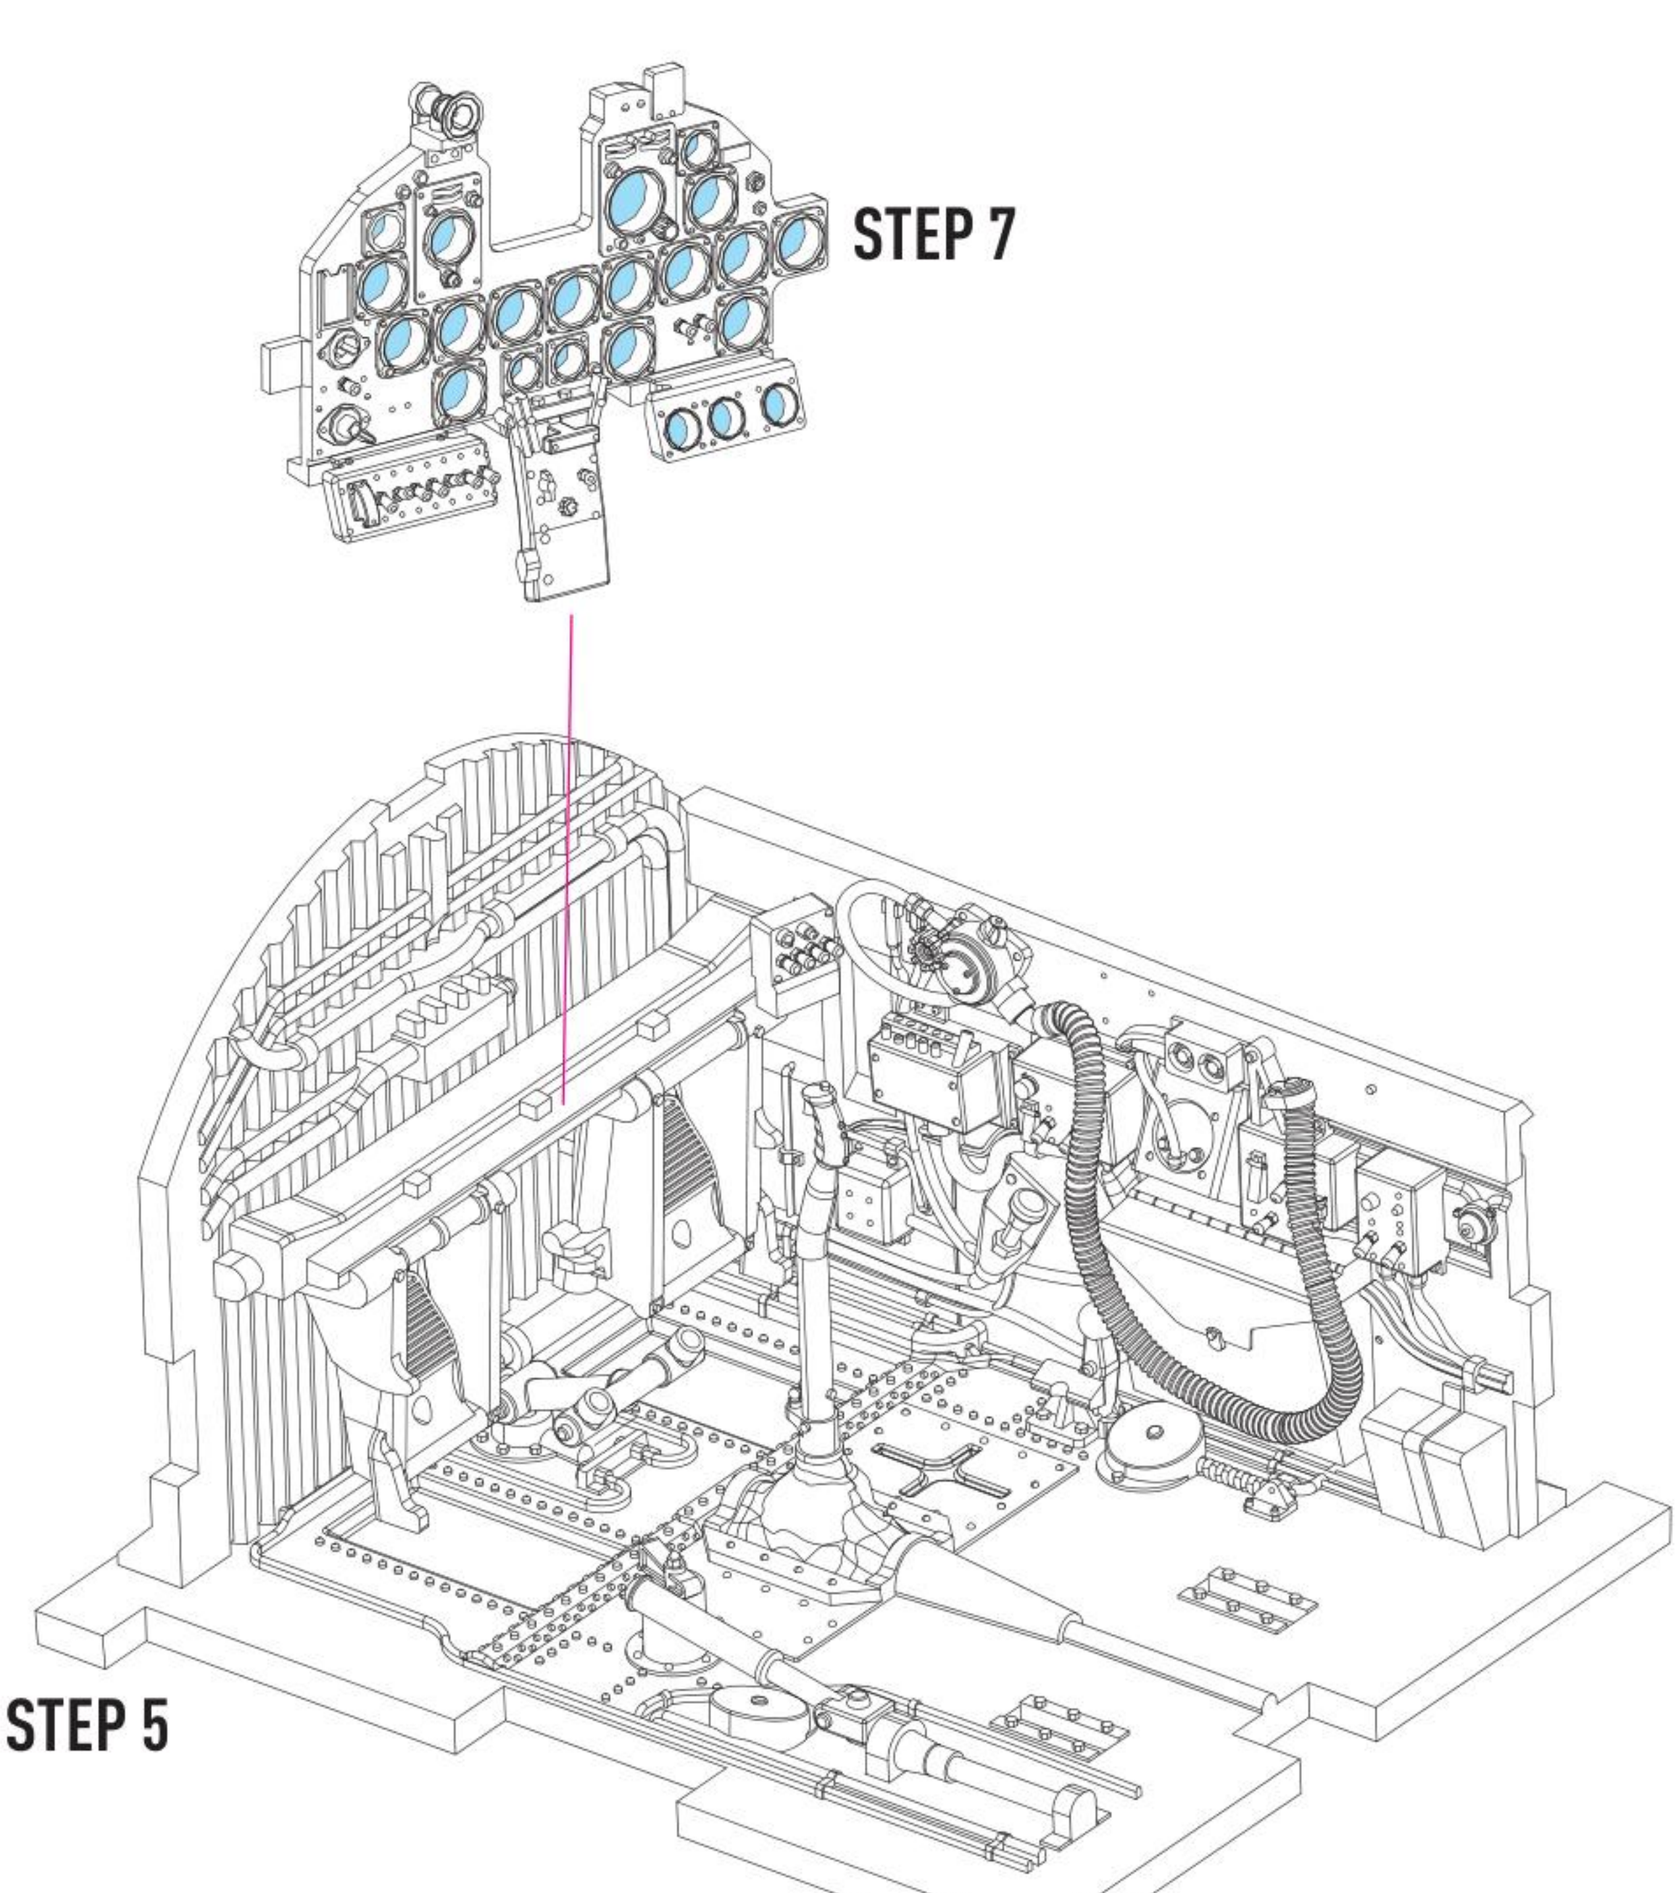

9

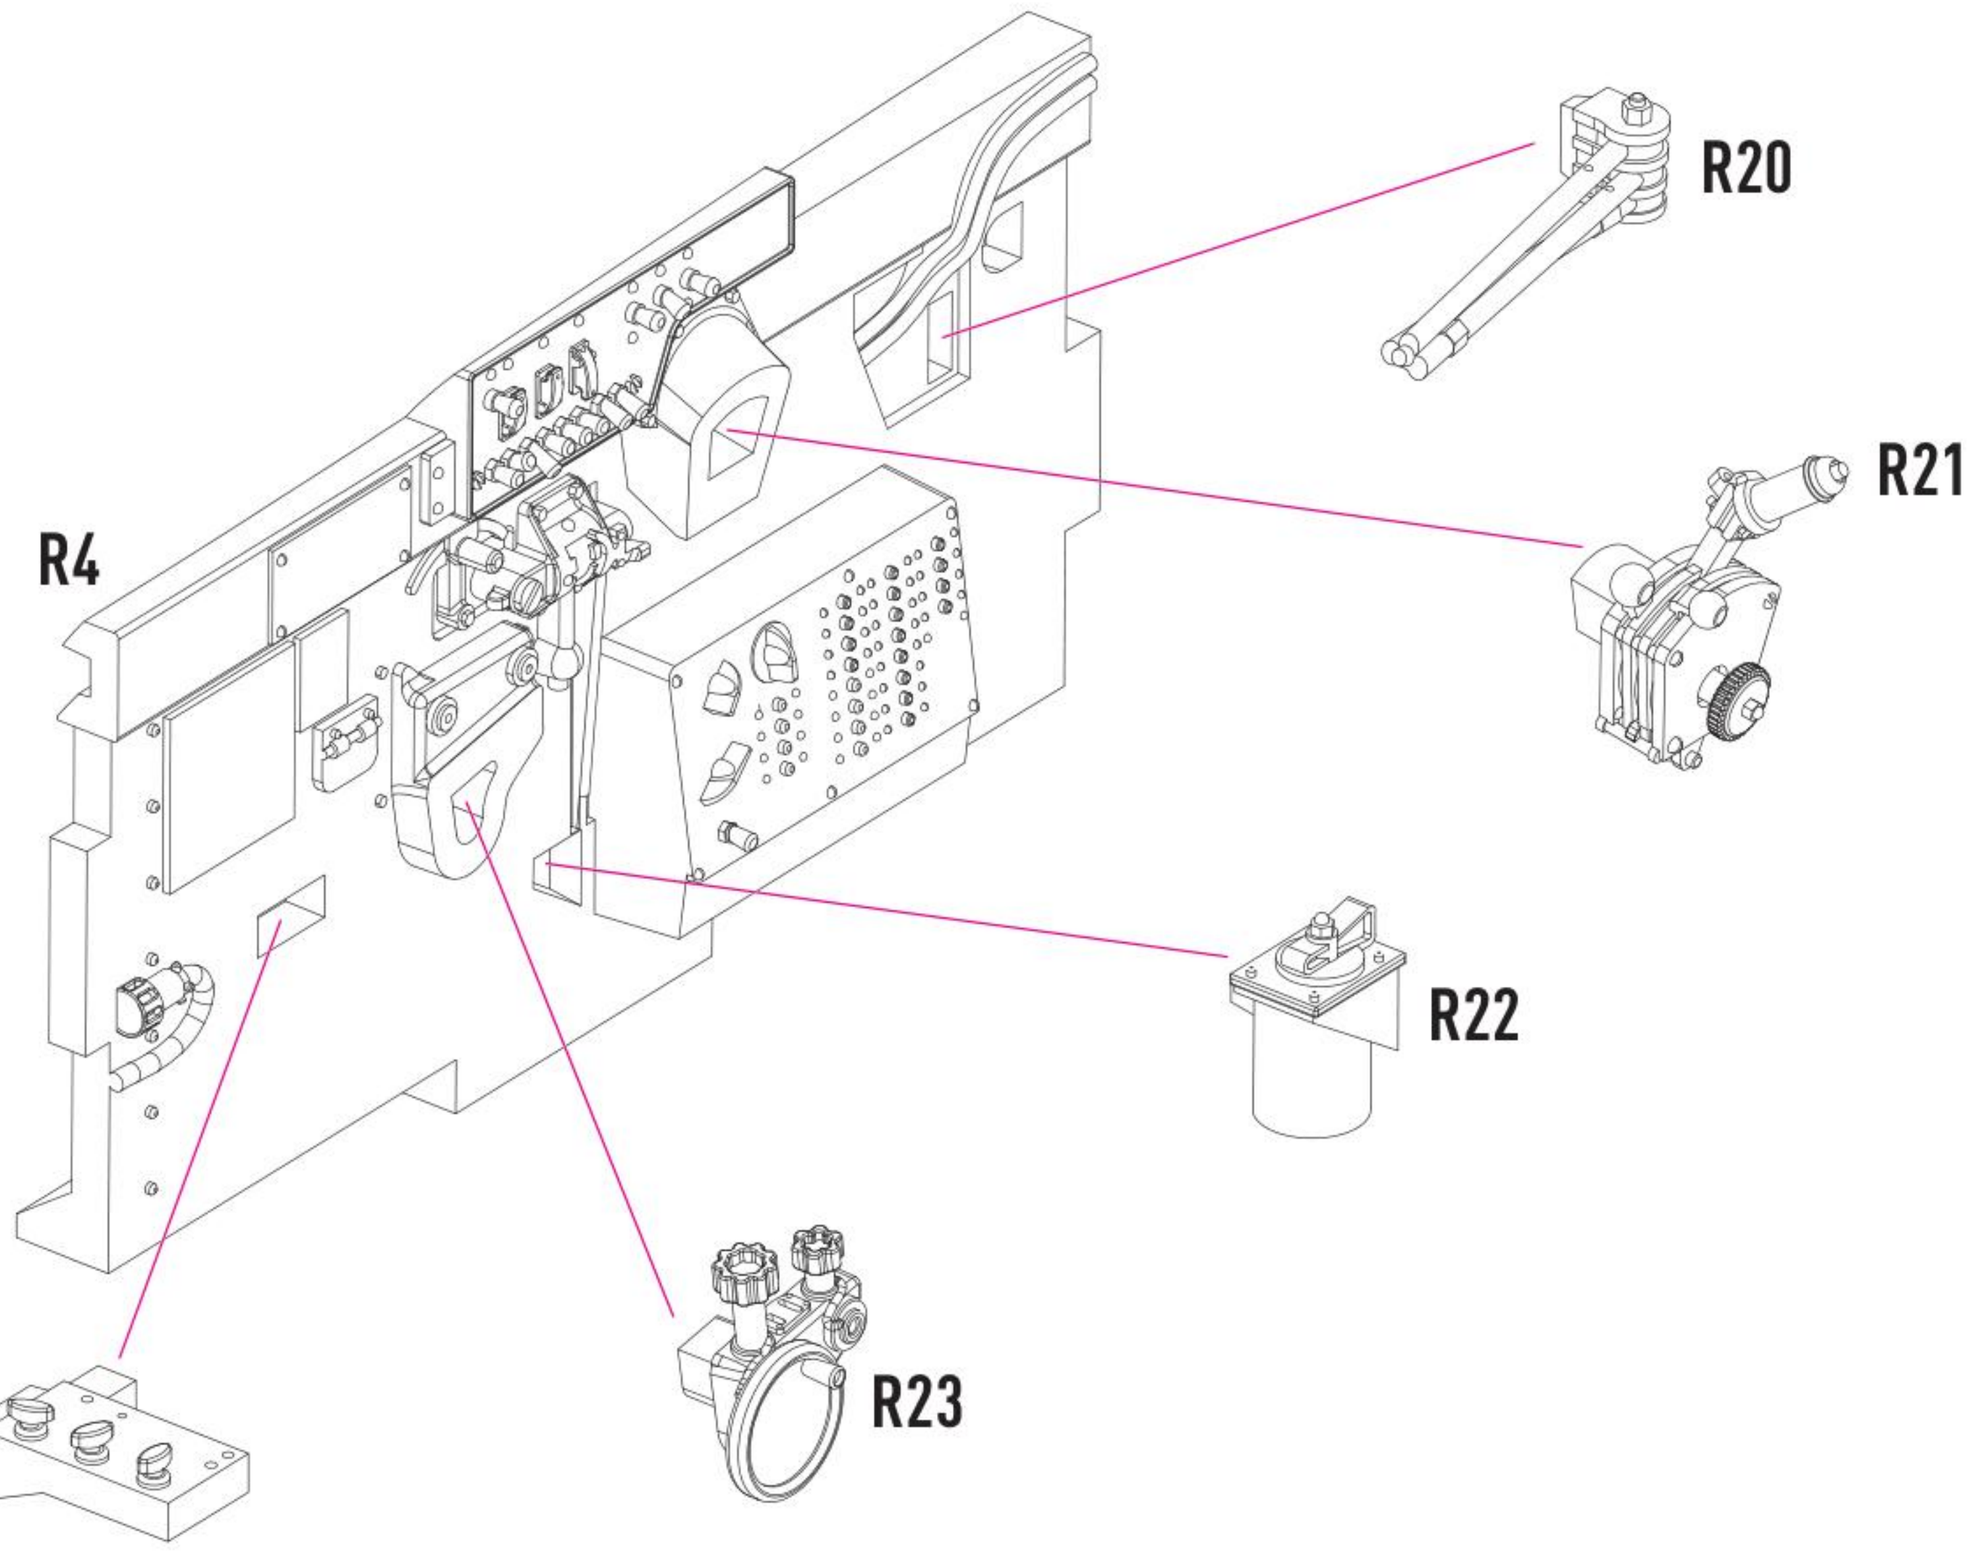

10

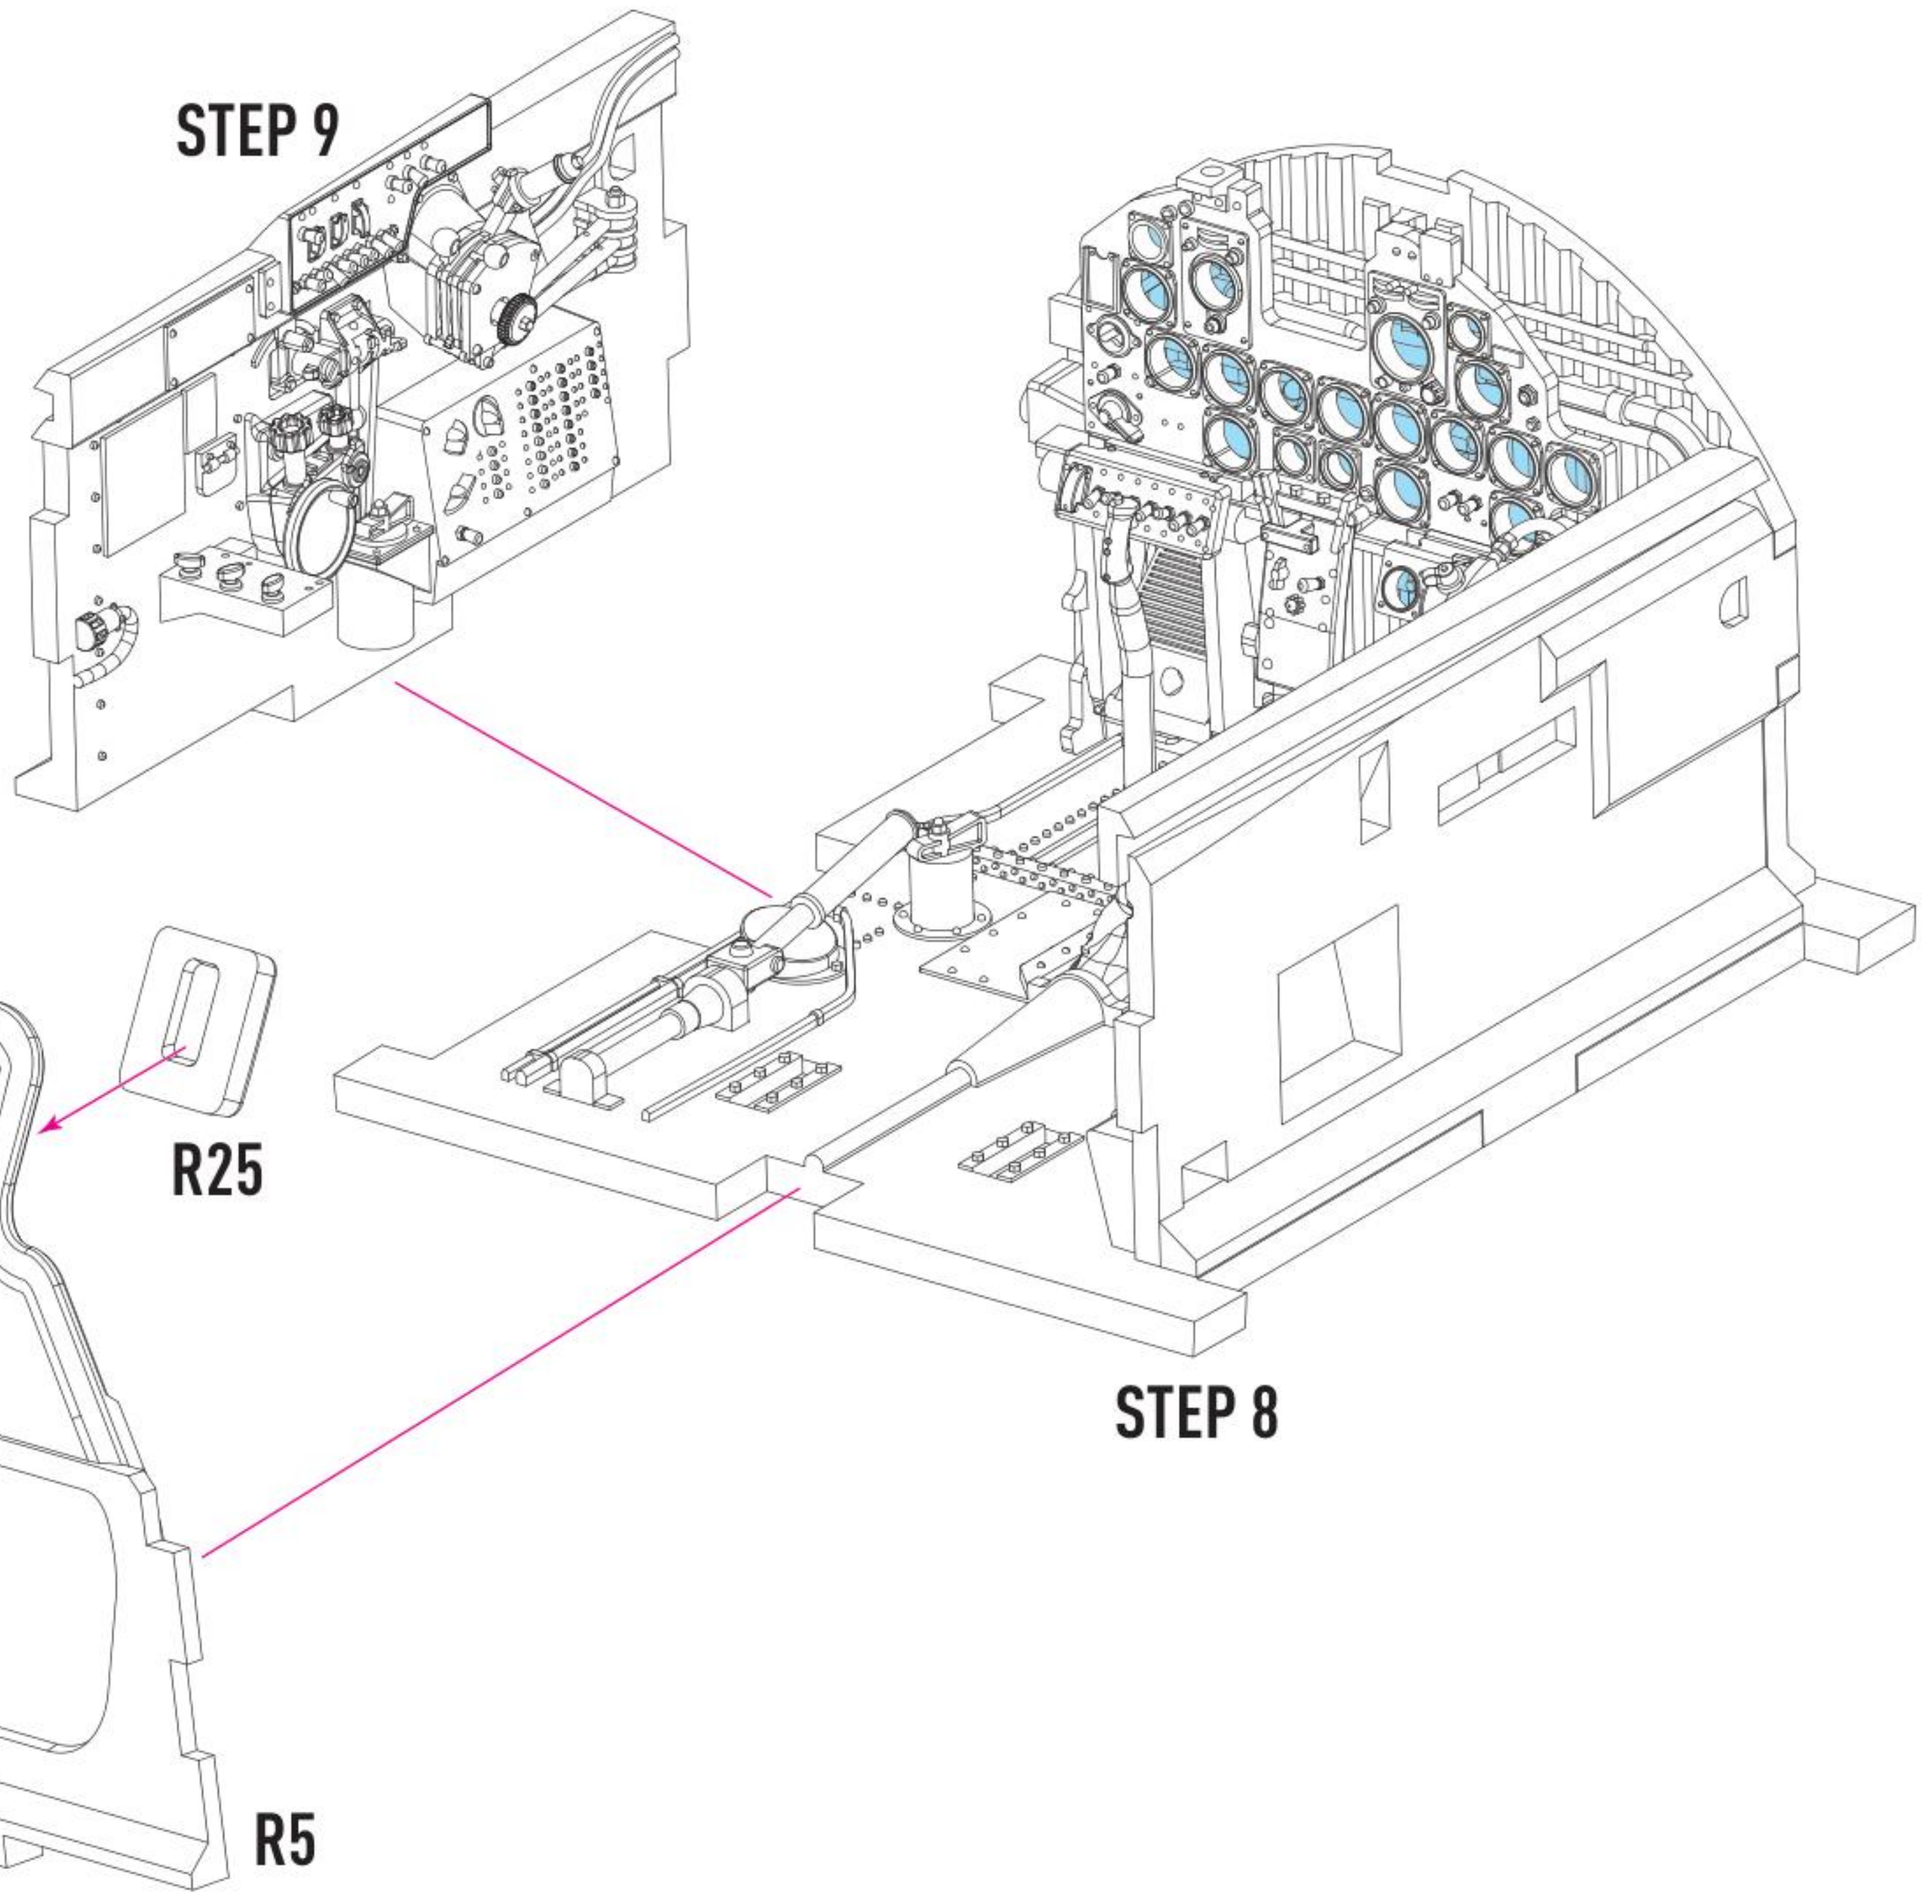

11

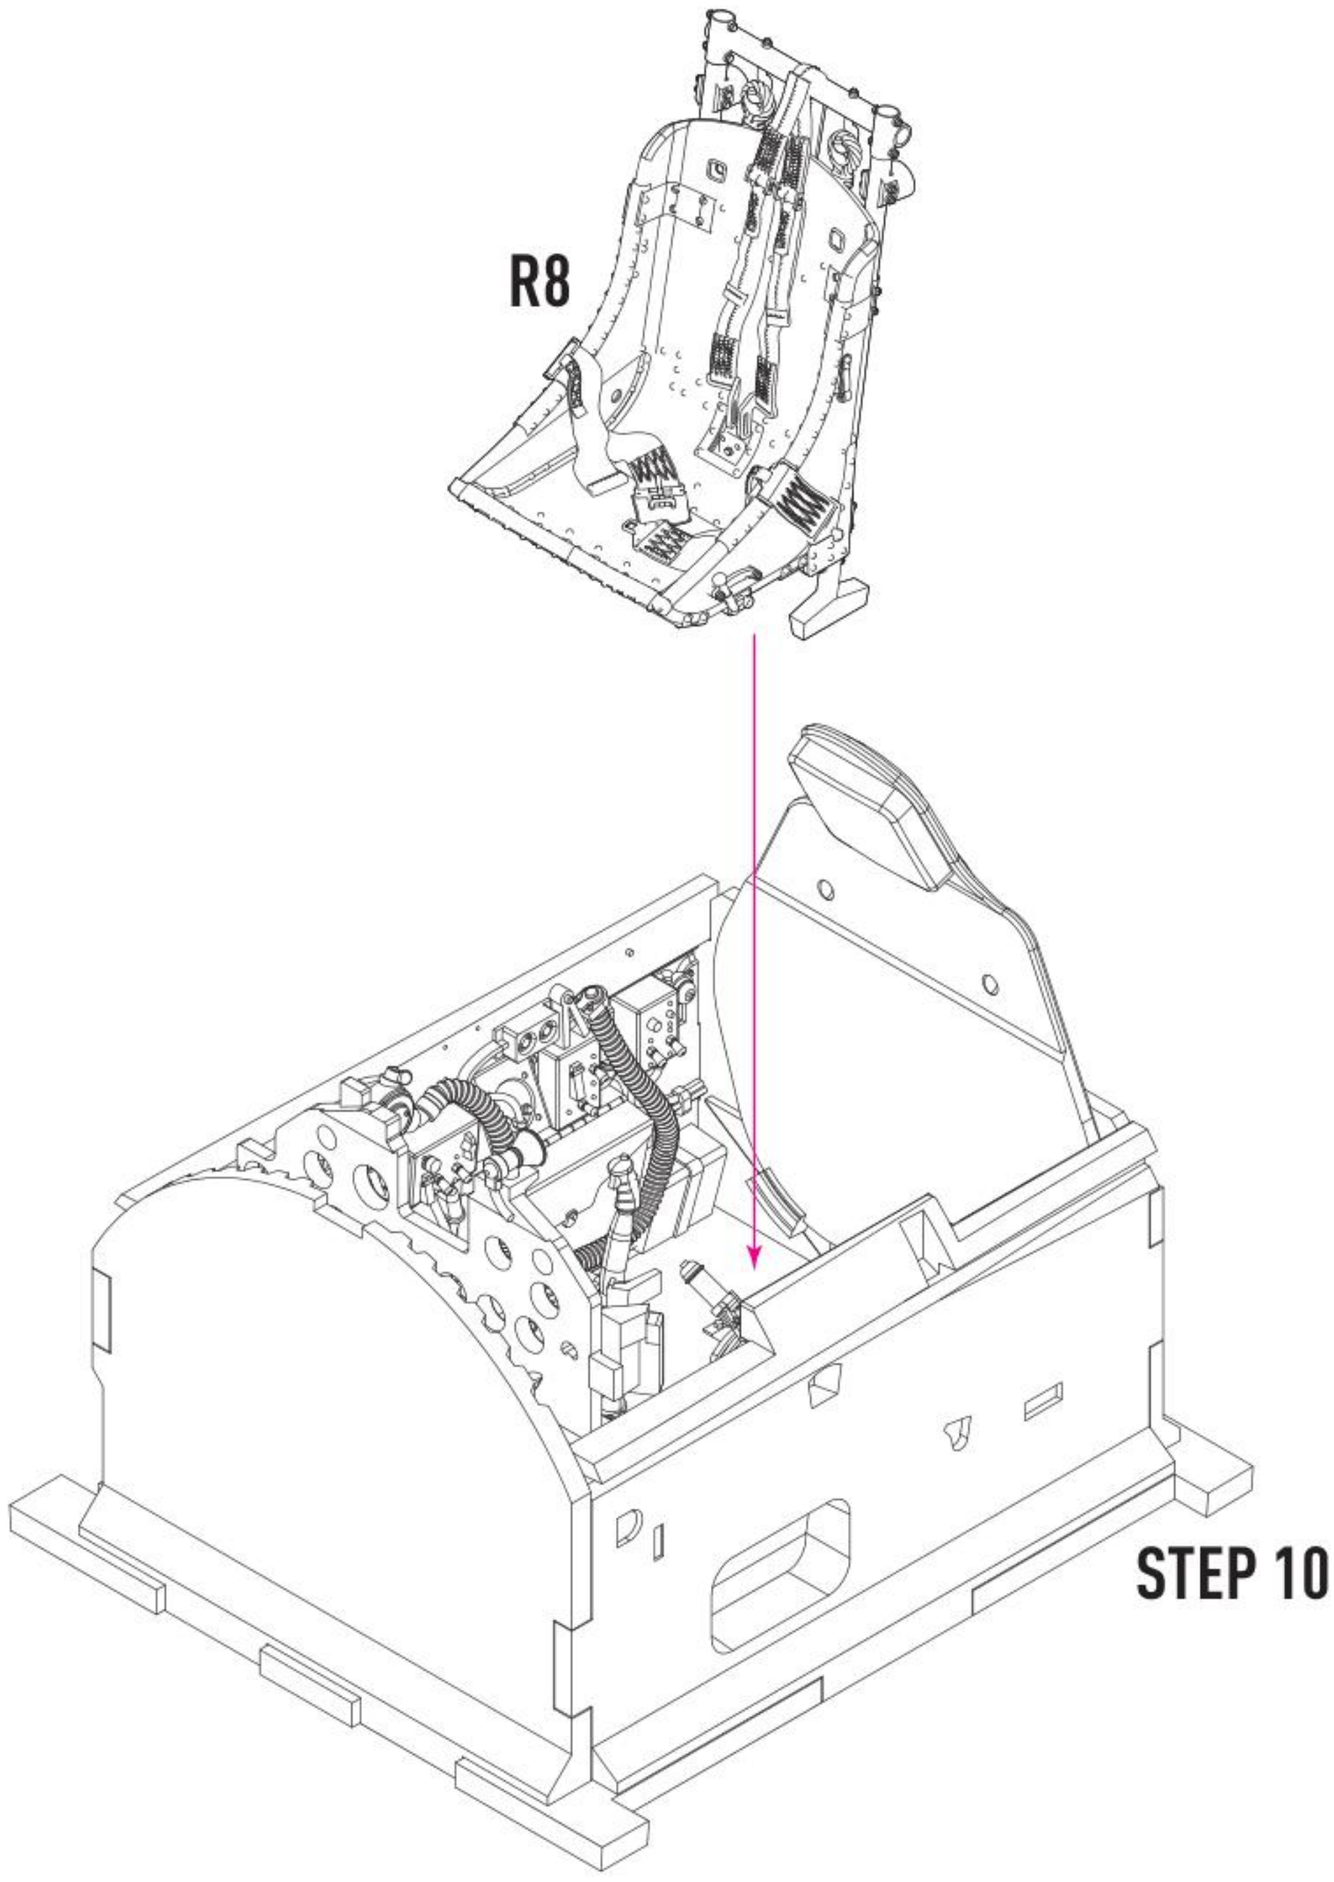

12

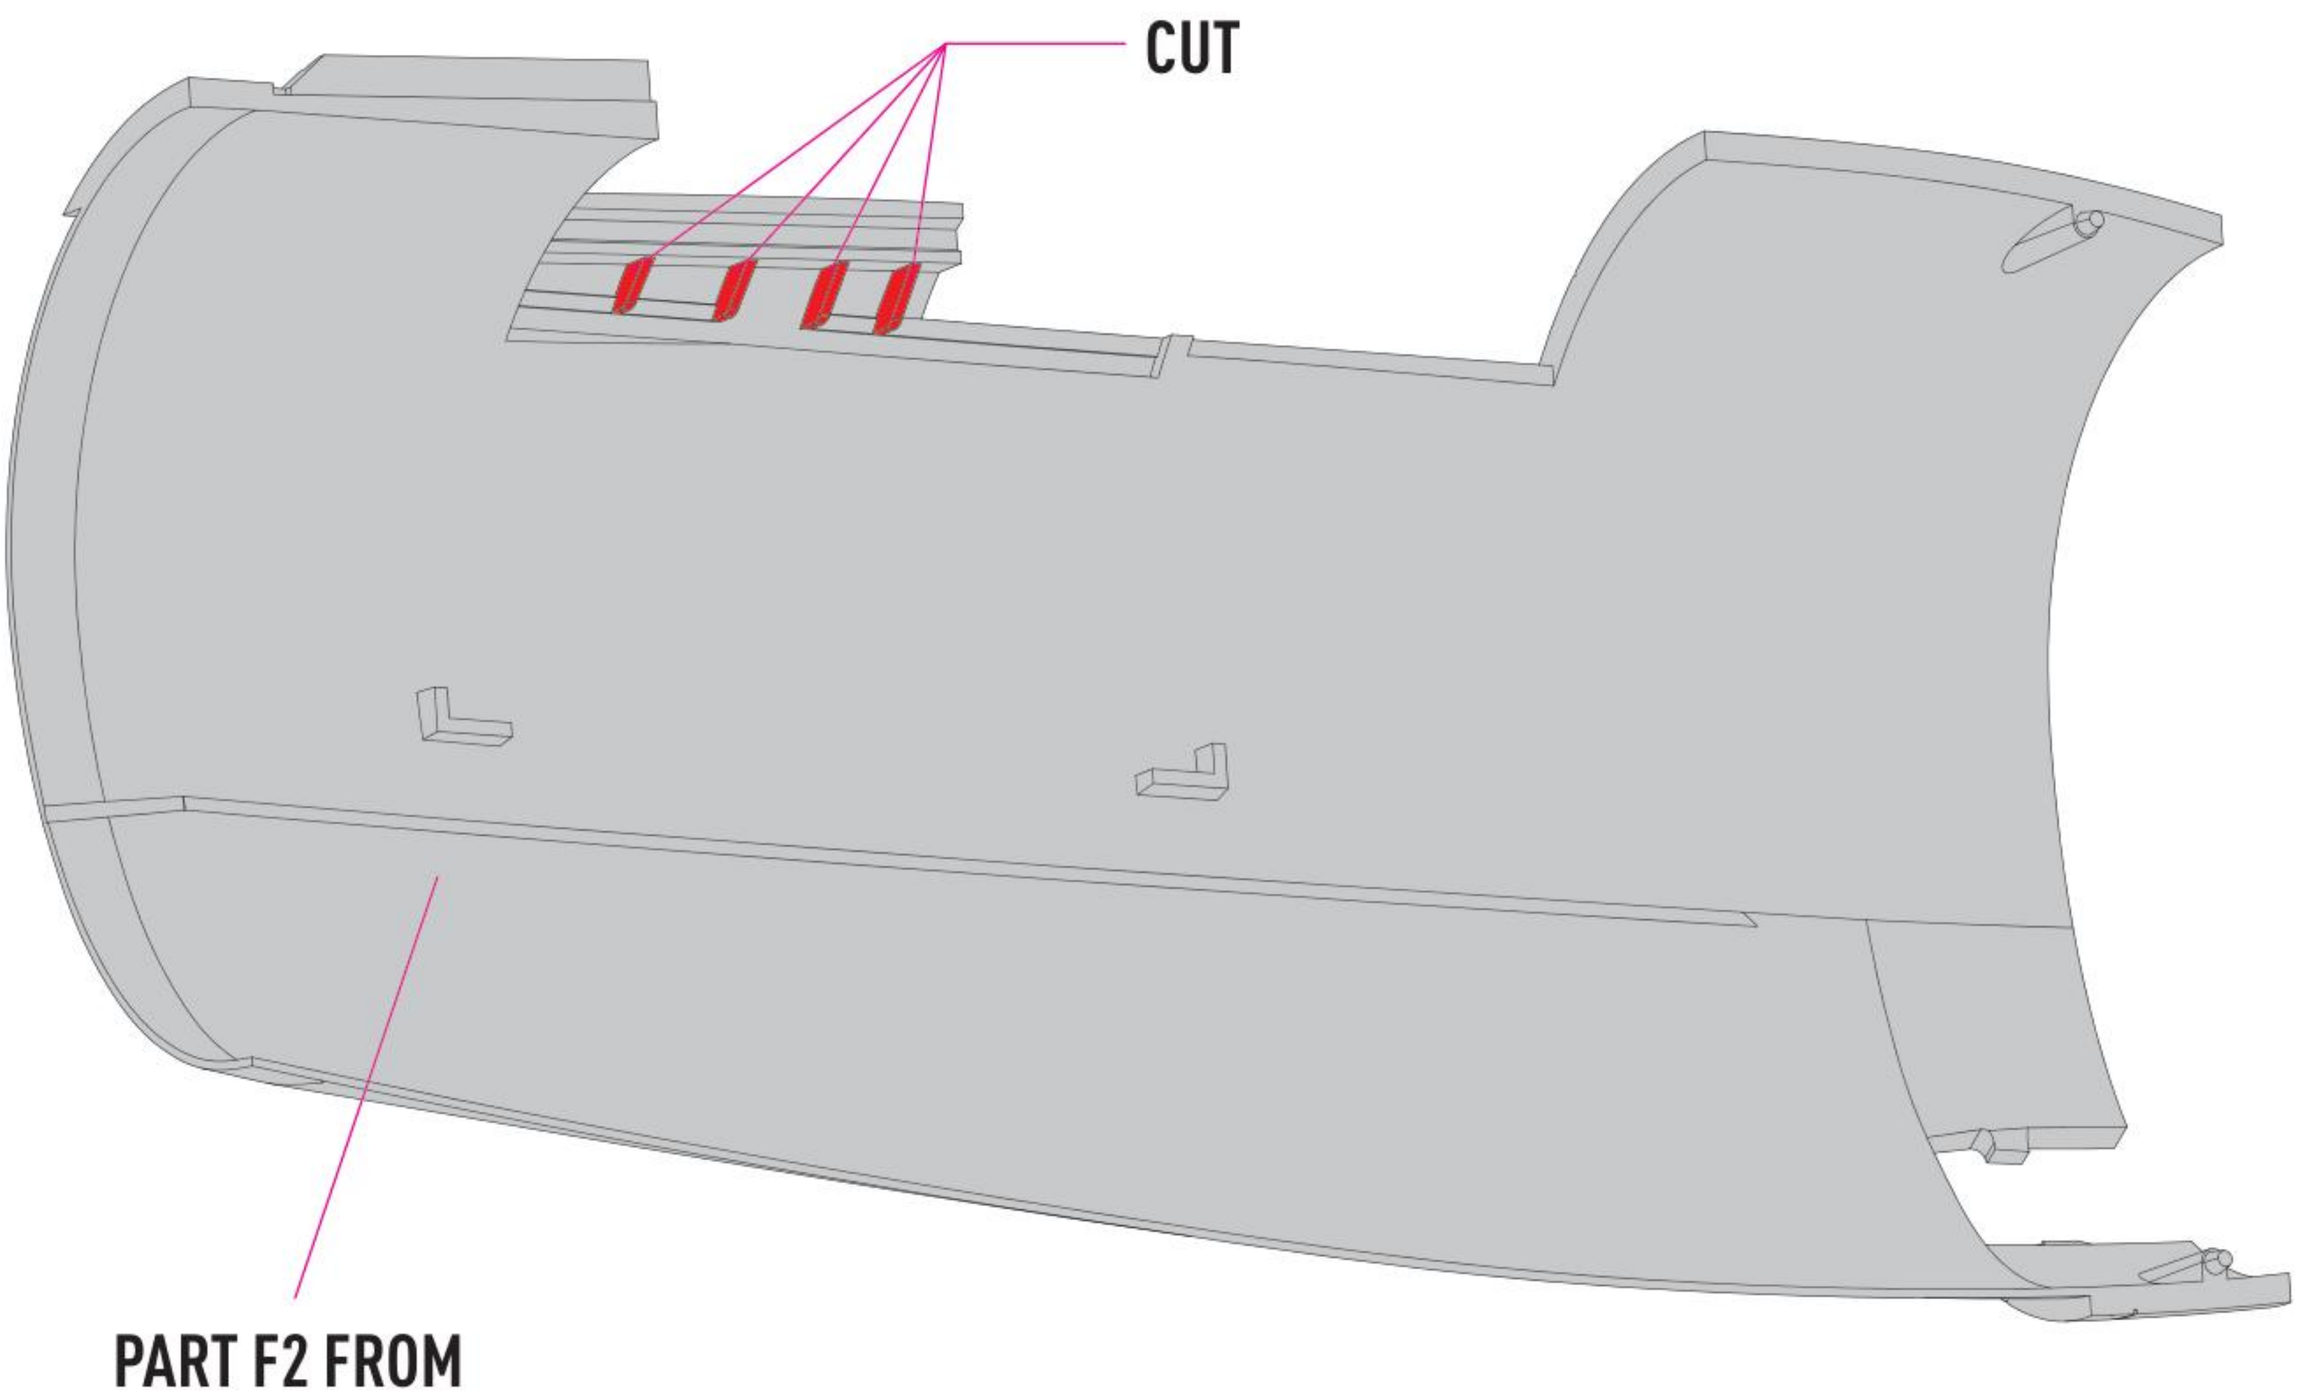

13 AFTER ASSEMBLY THE PARTS ADD PARTS R26 AND R27 ON THE INNER SIDE OF THE FINISHED STEP

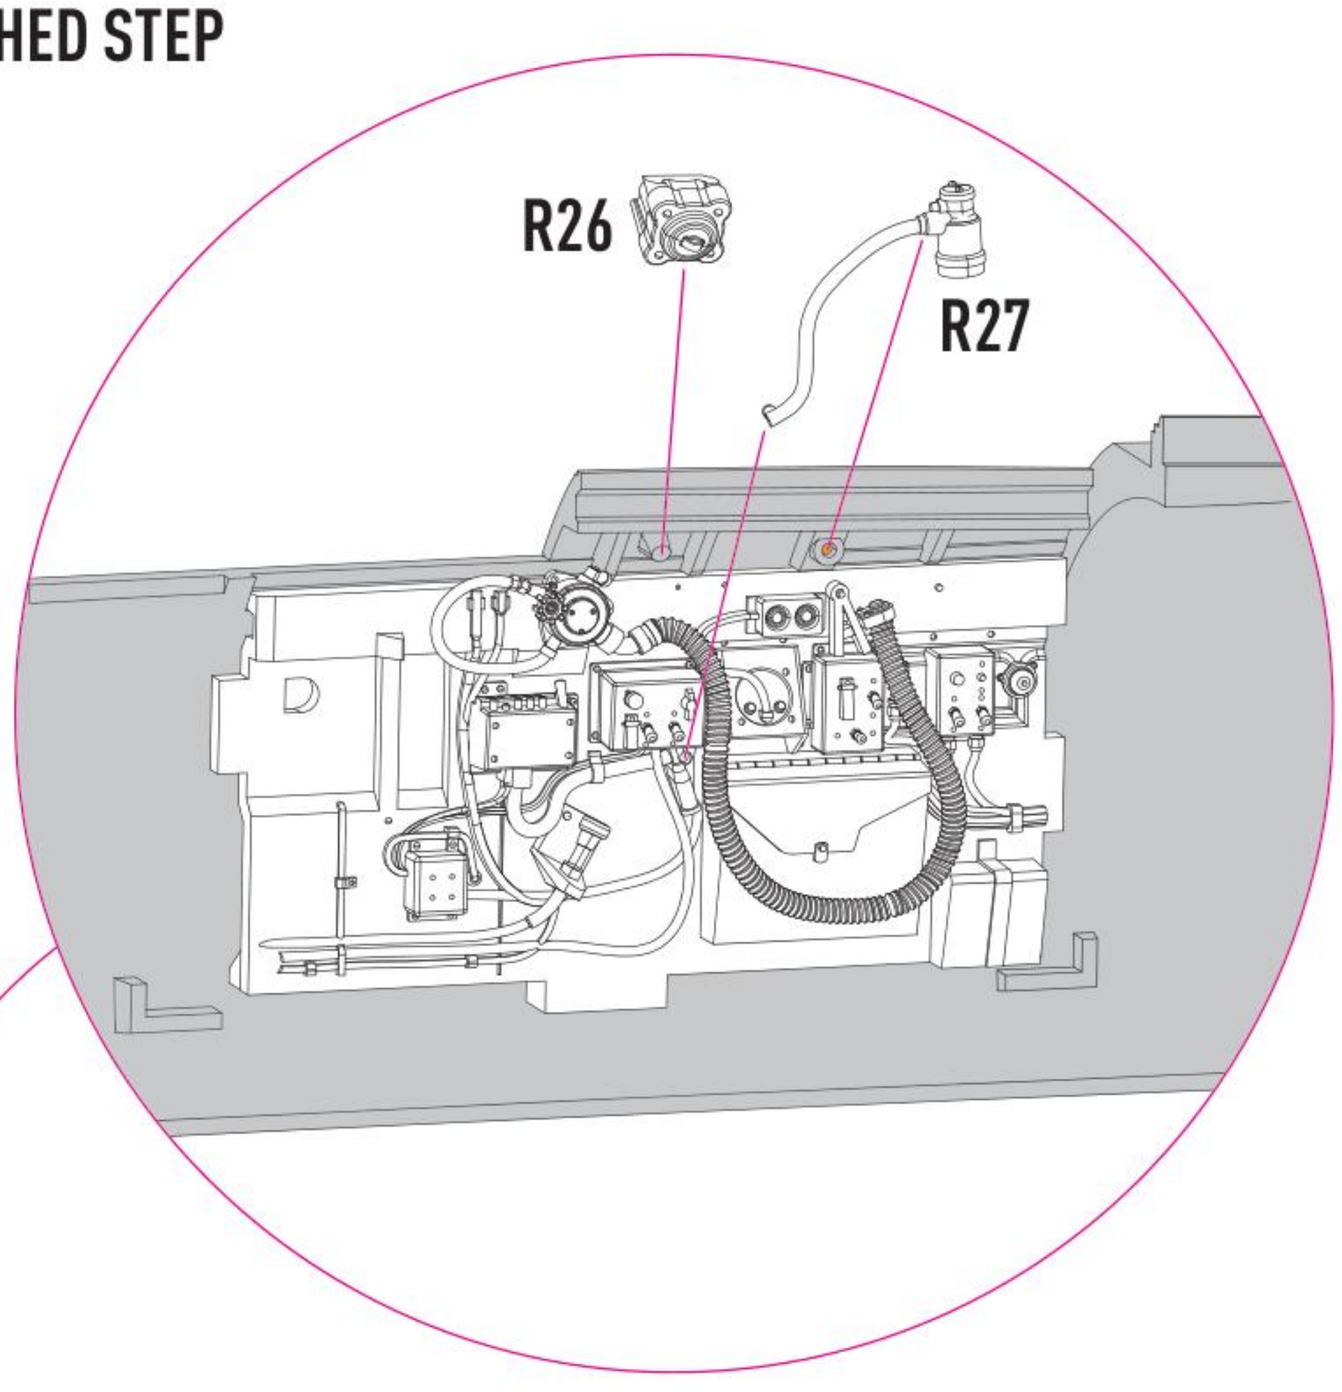

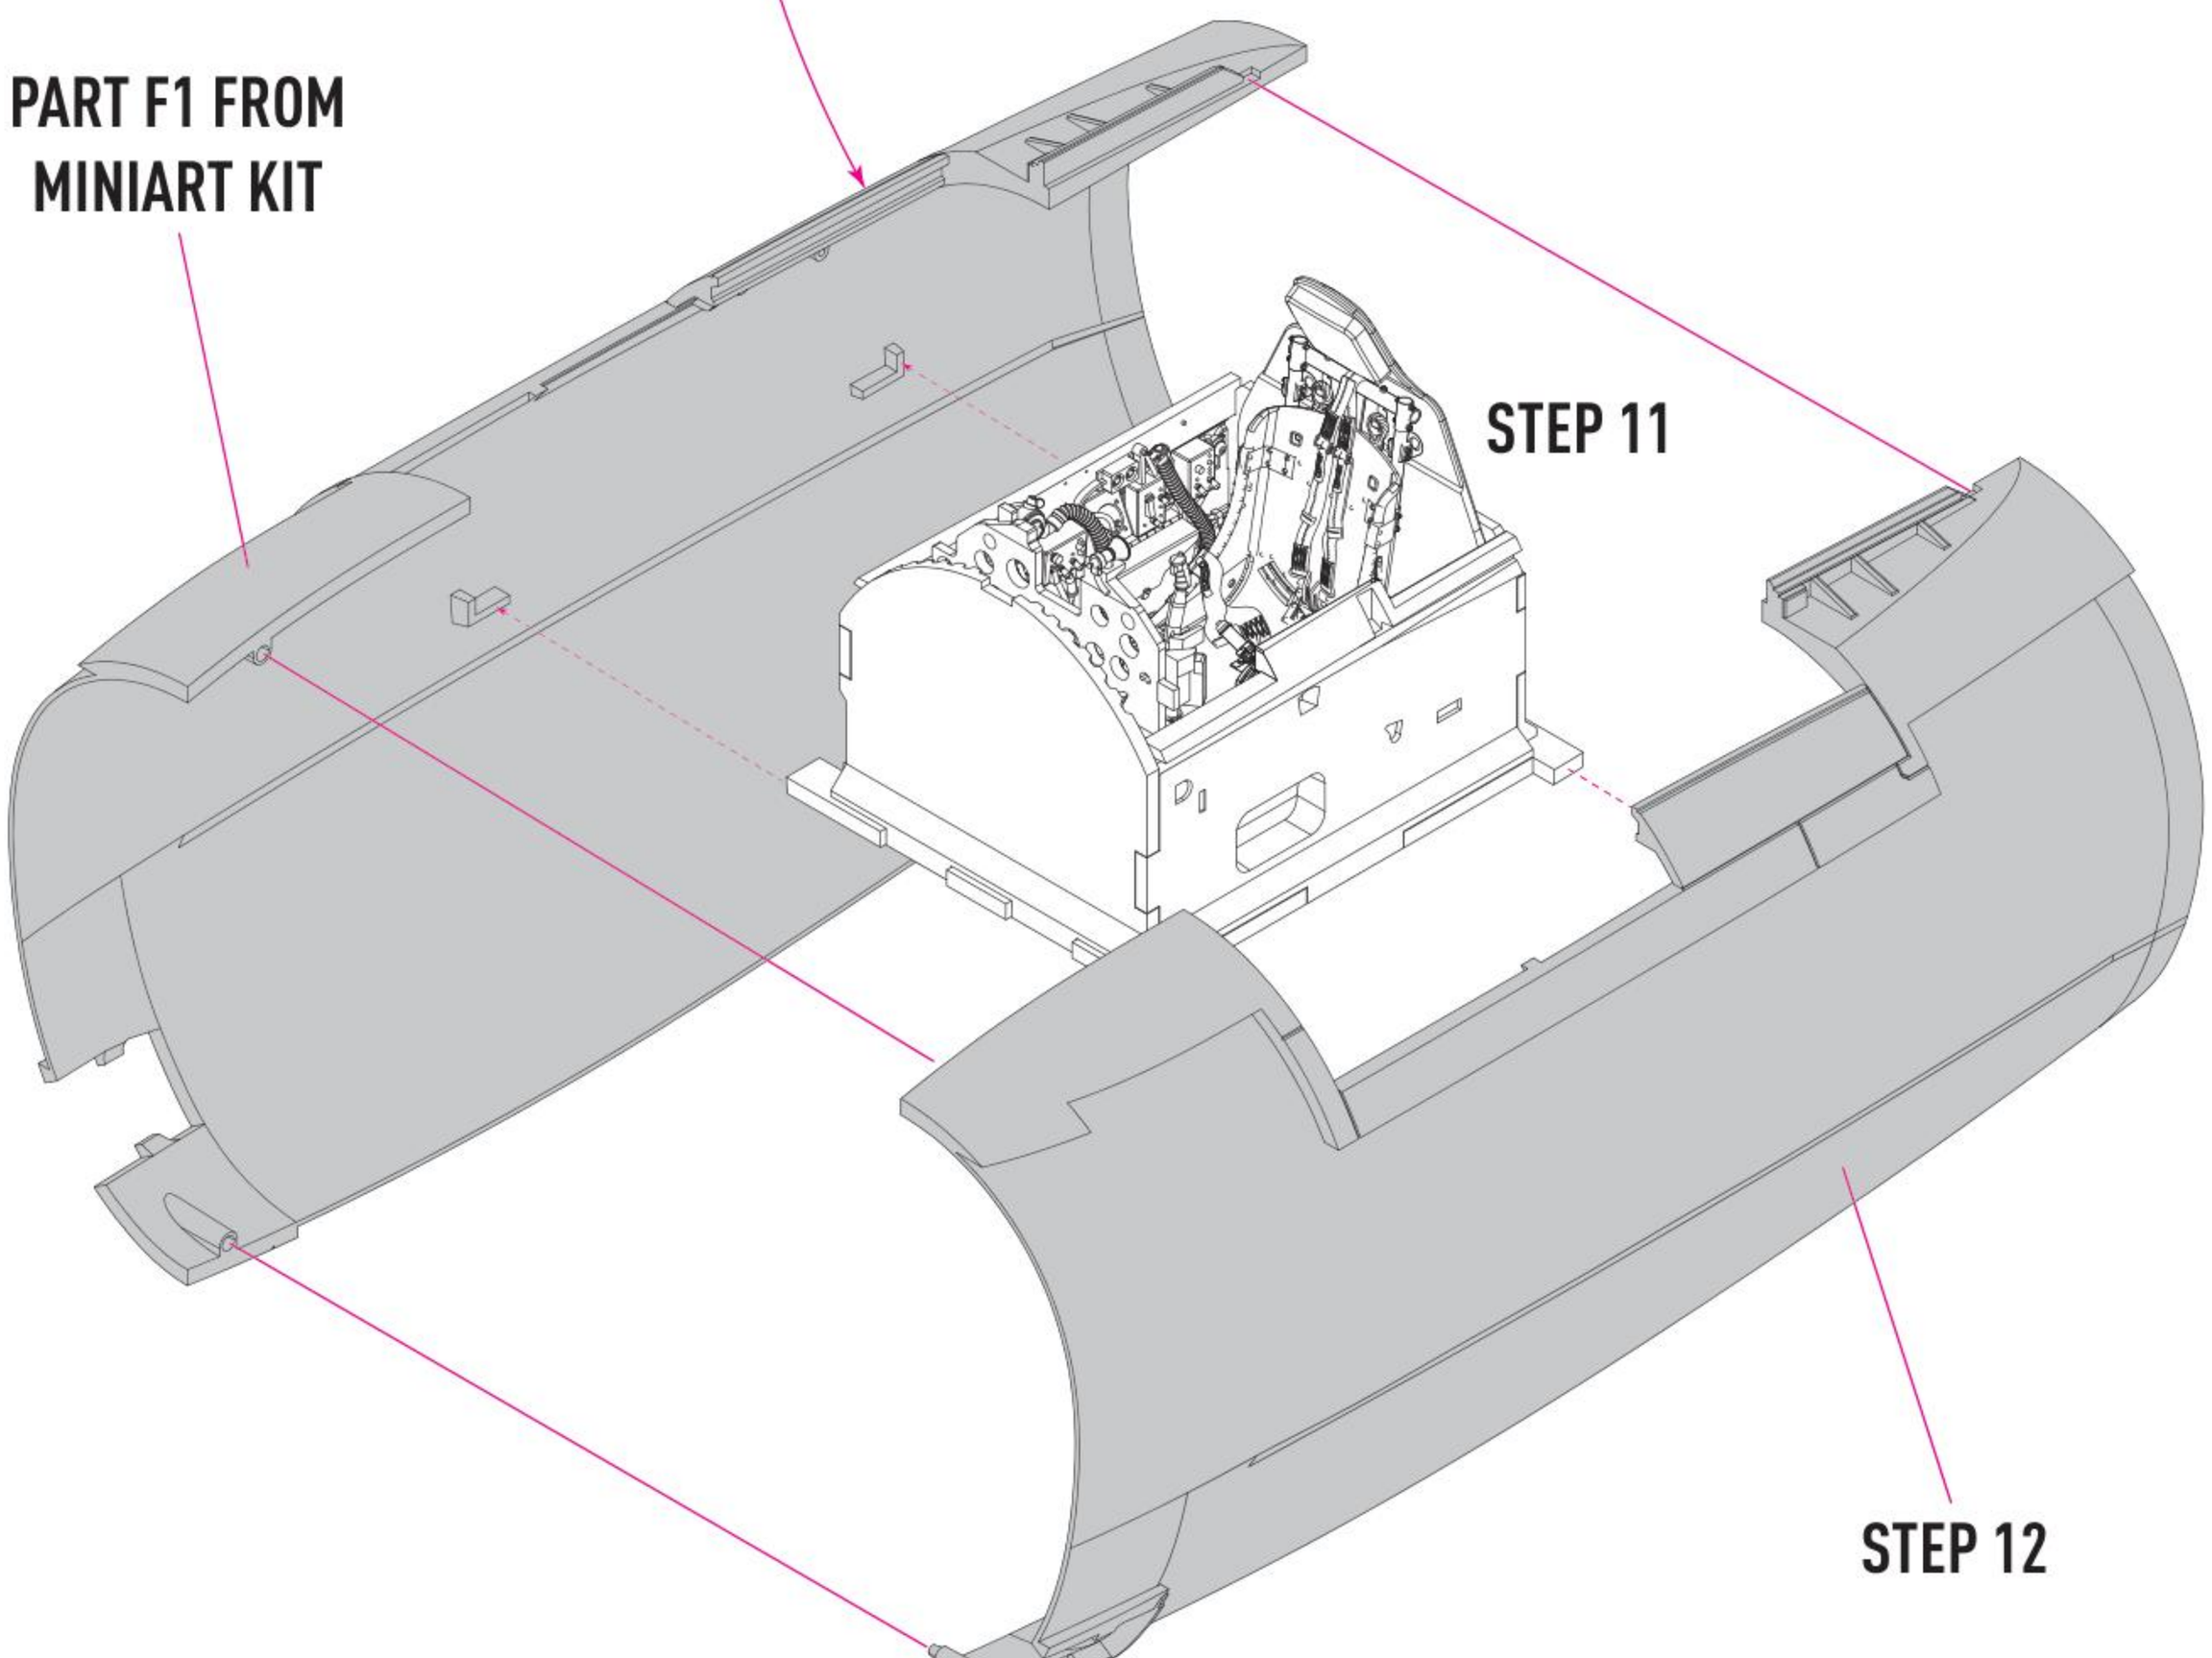

14

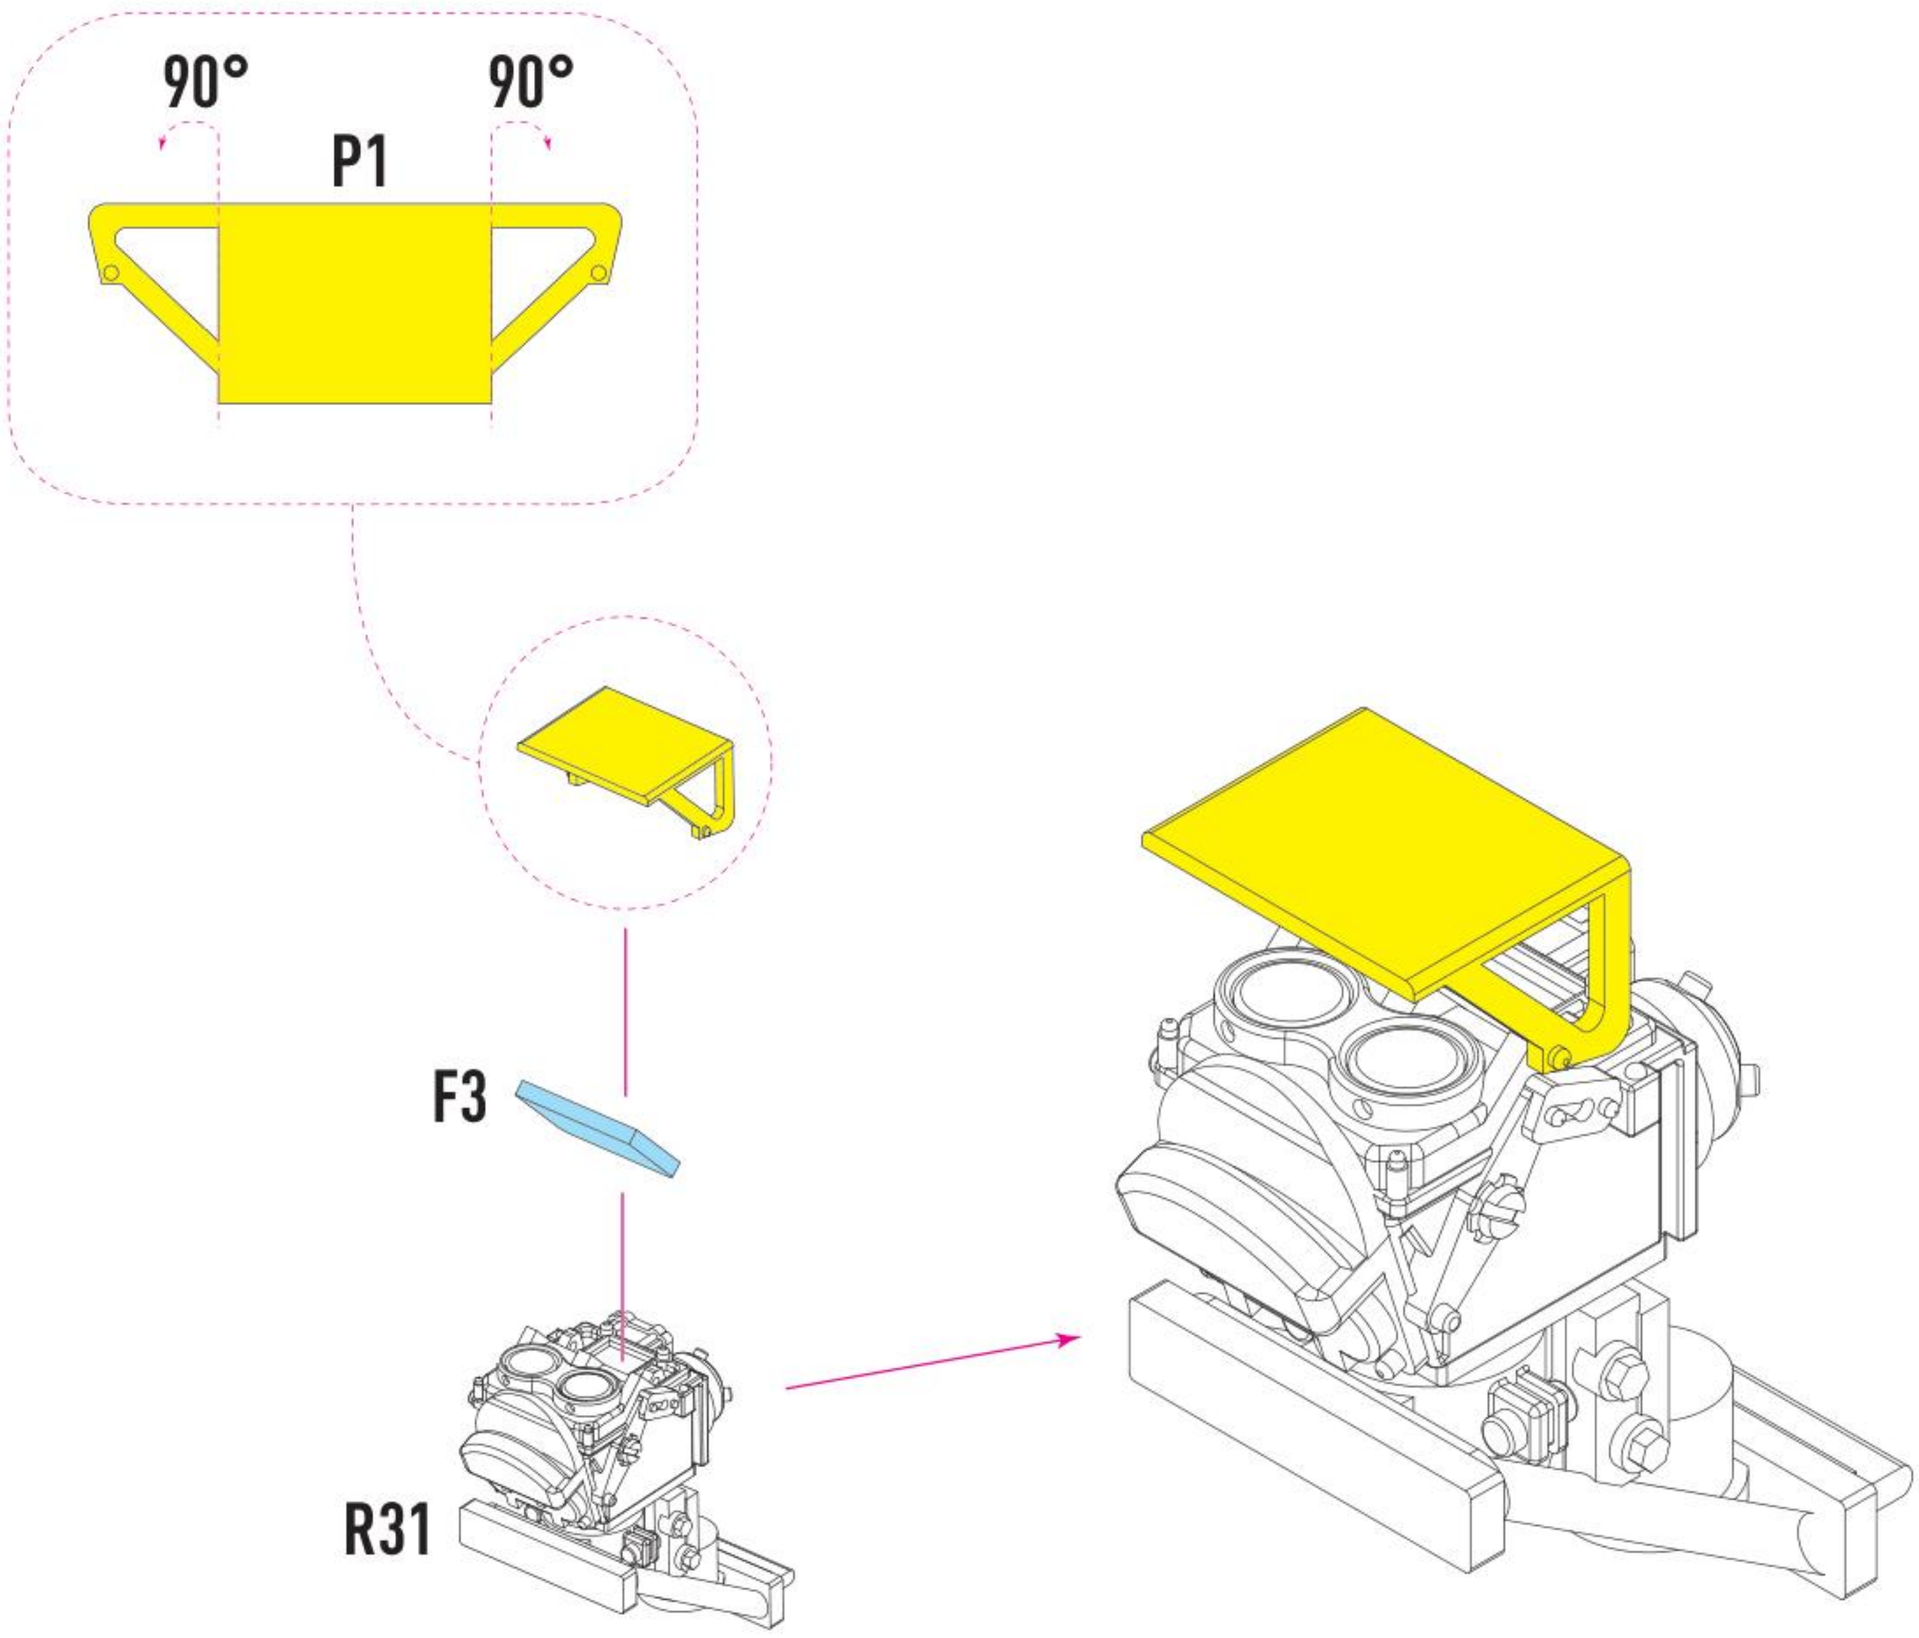

15

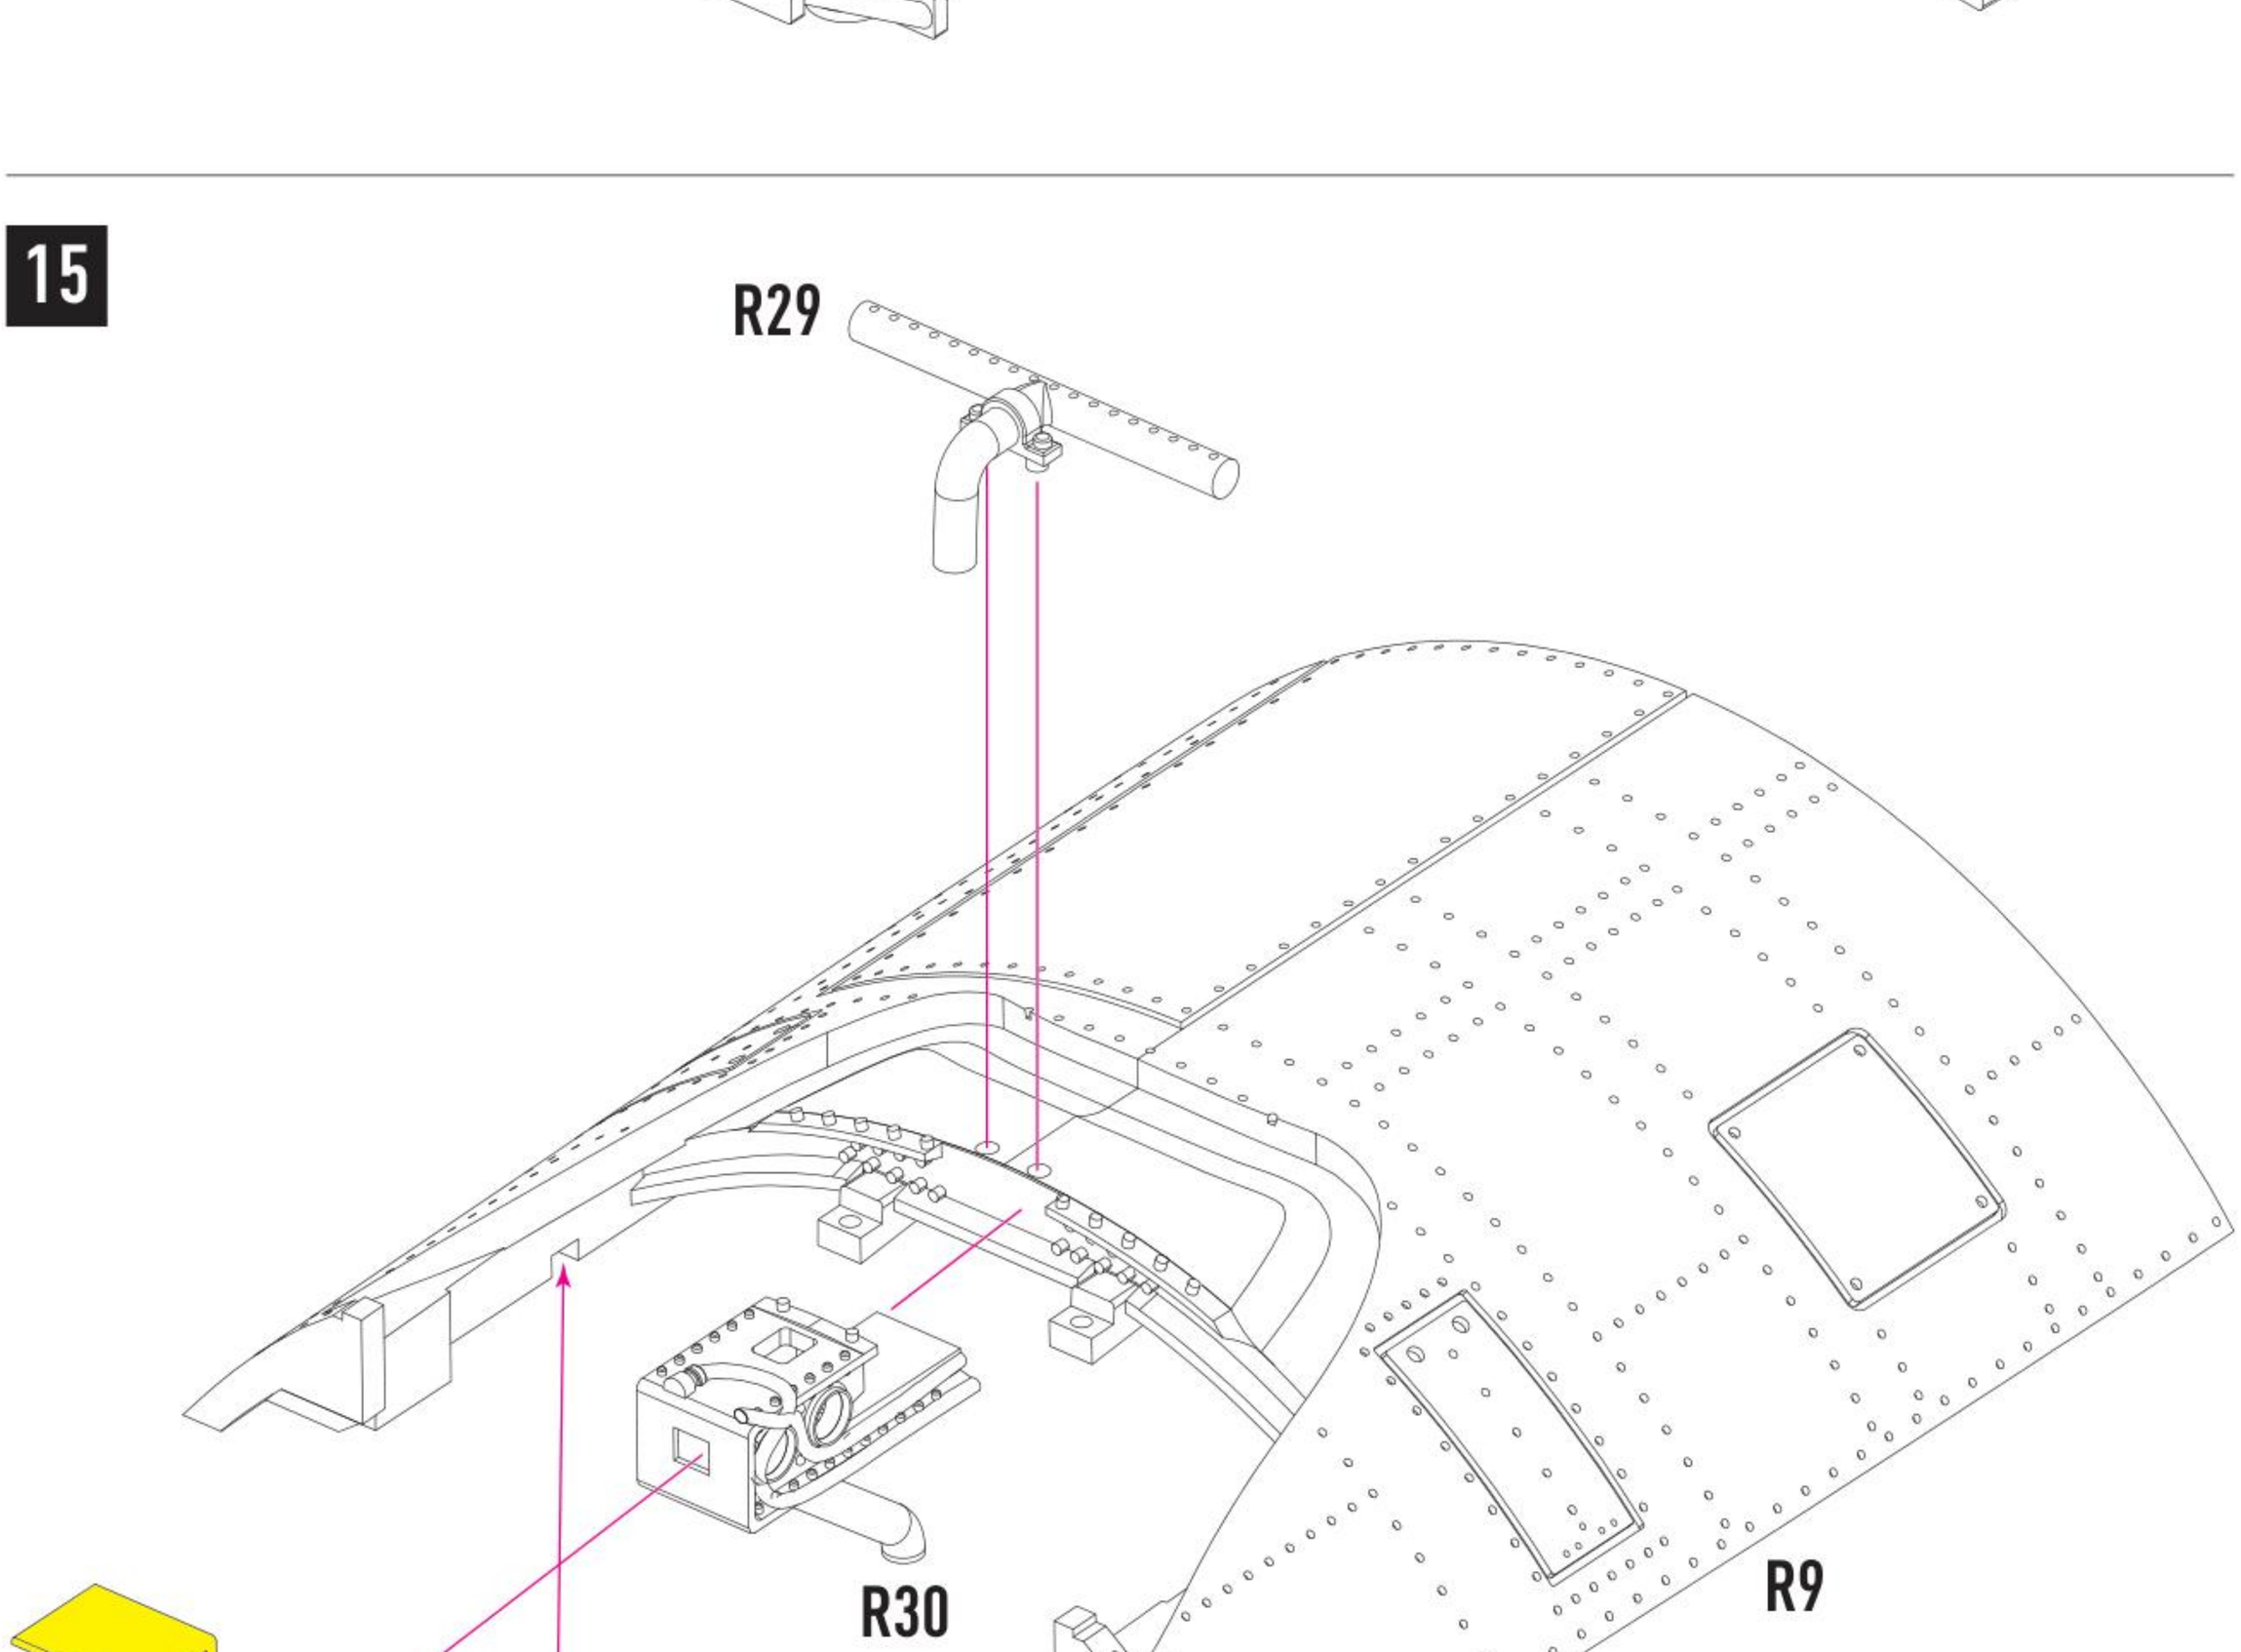

16

STEP 15

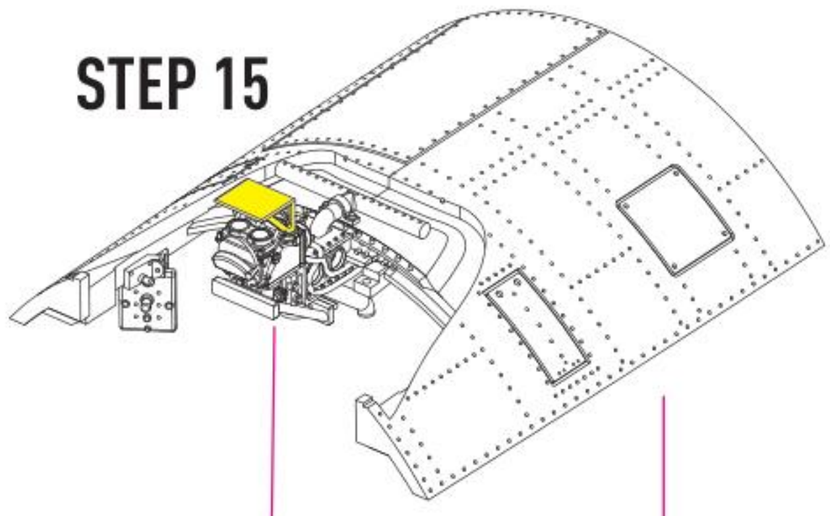

STEP 13

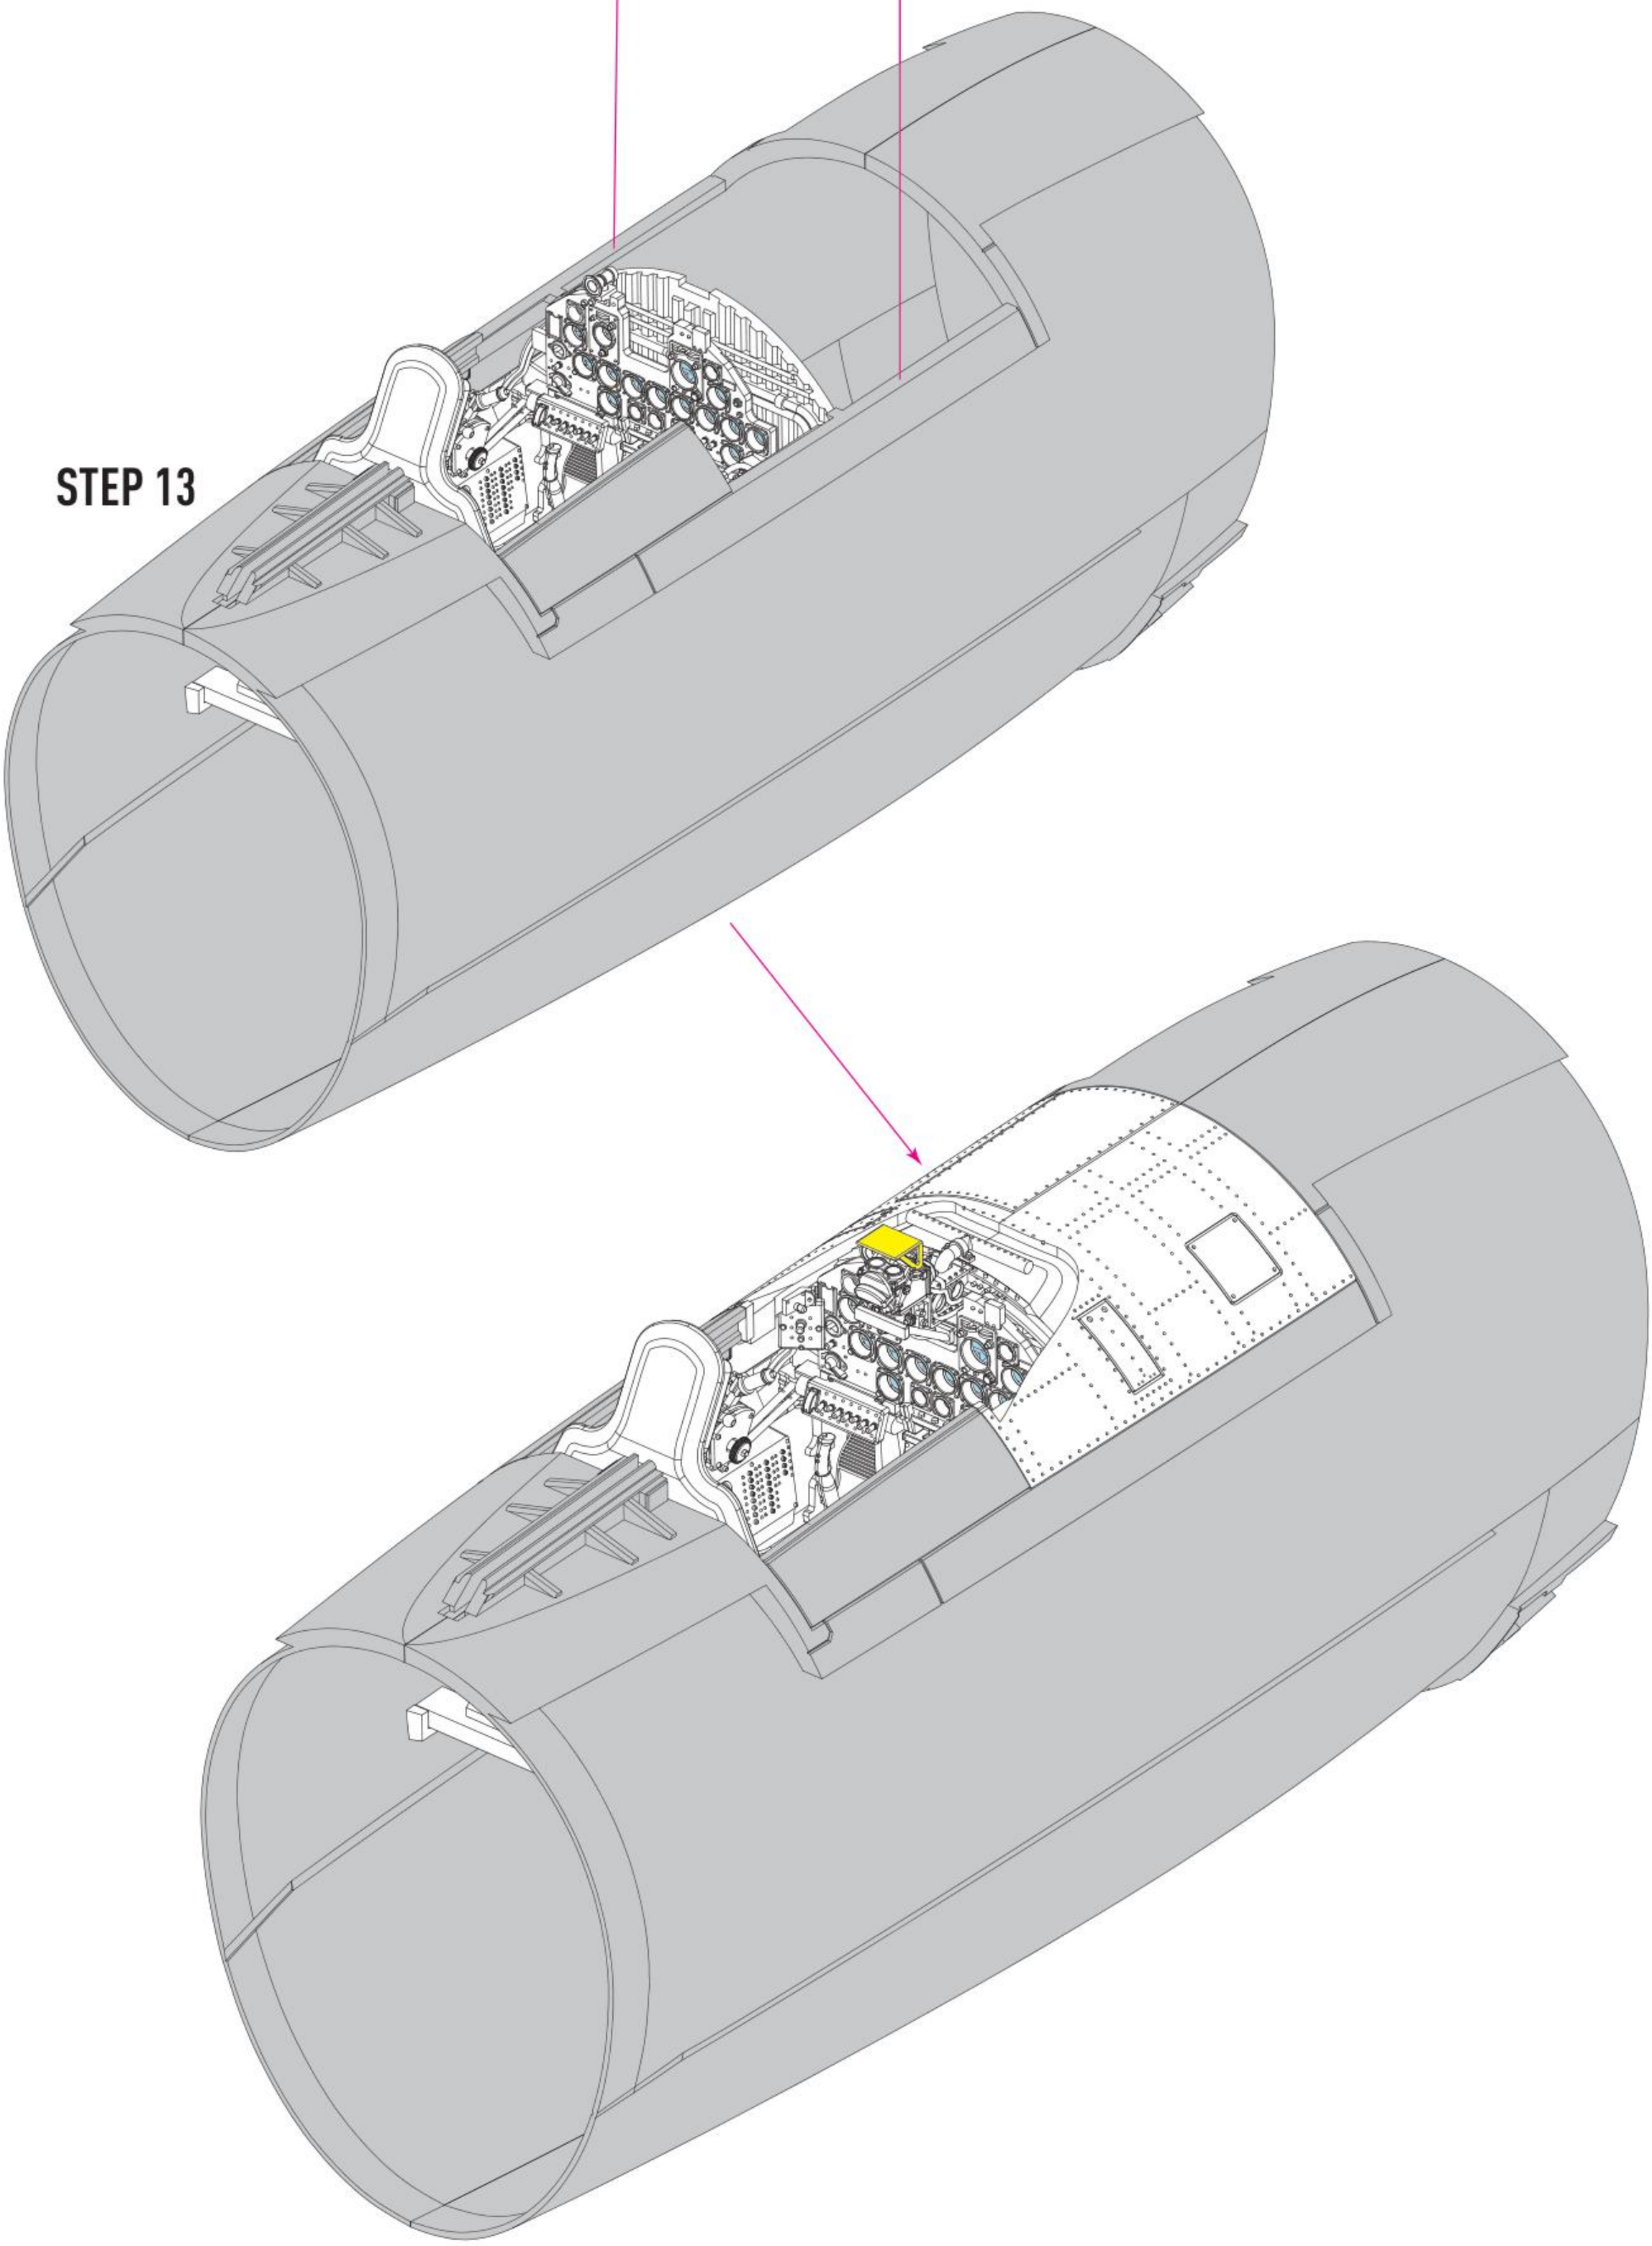

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua